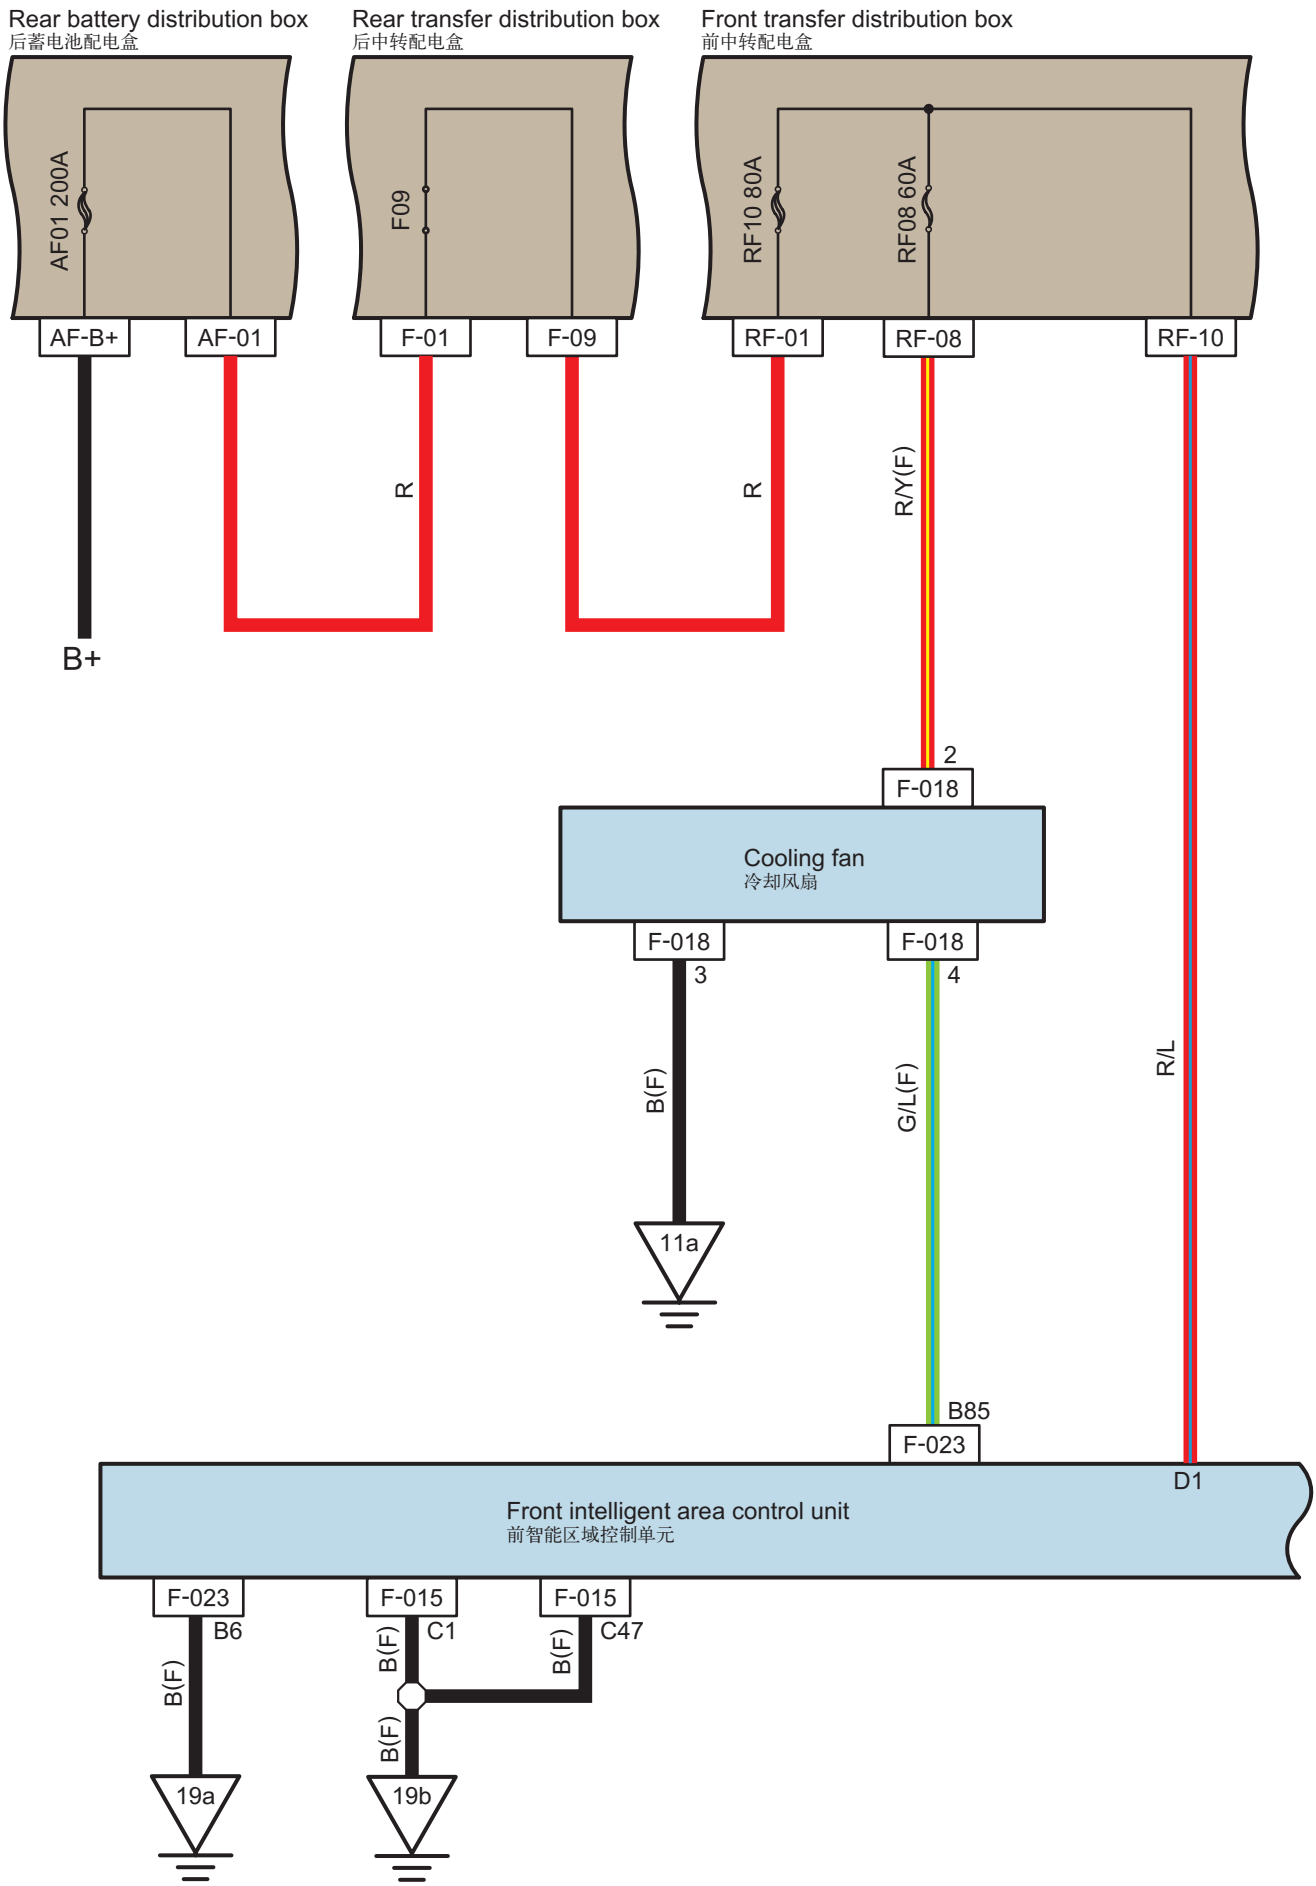
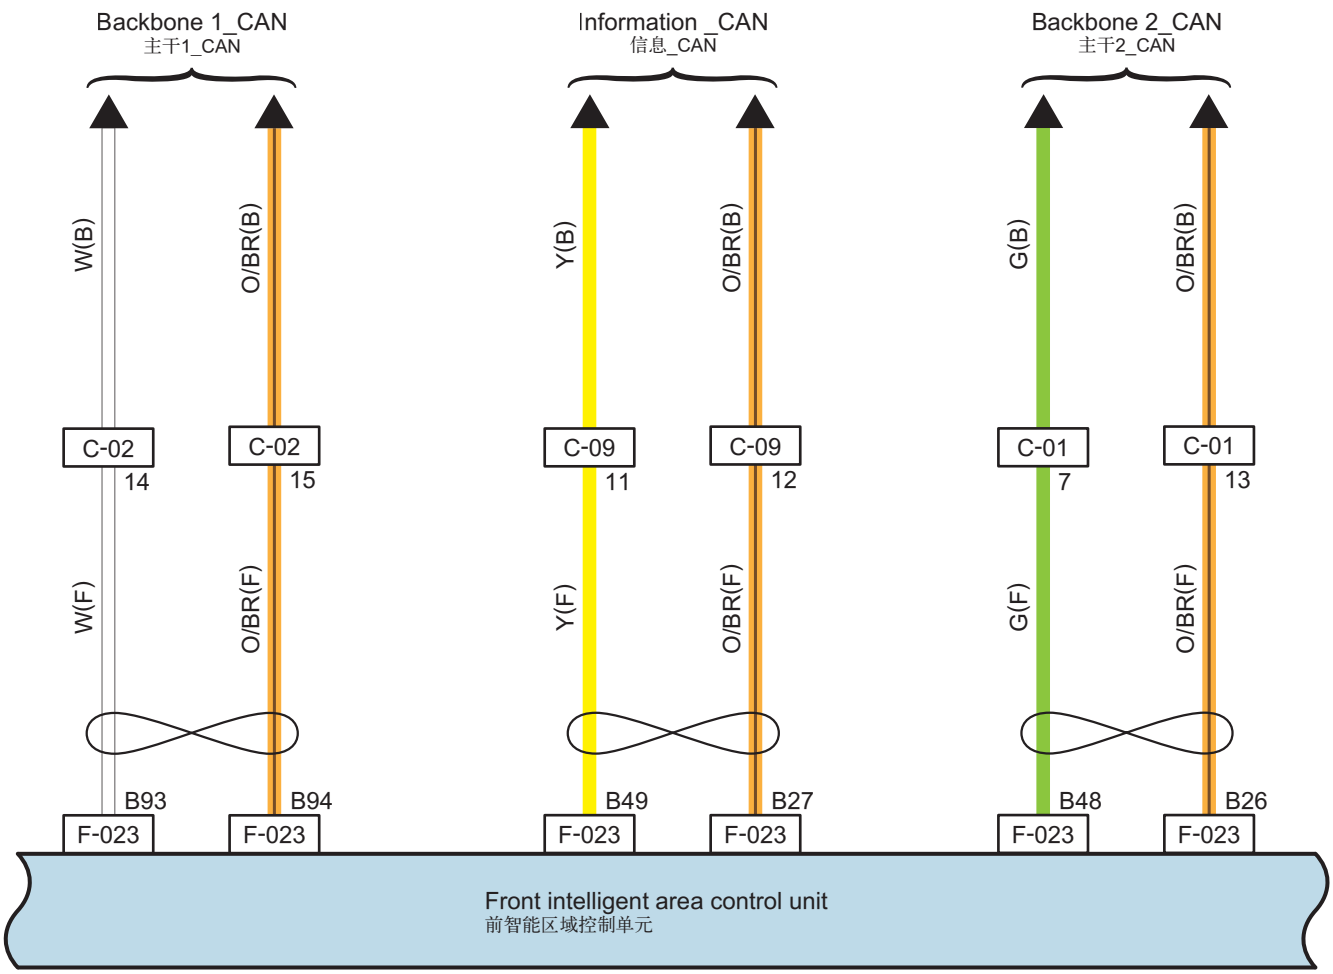
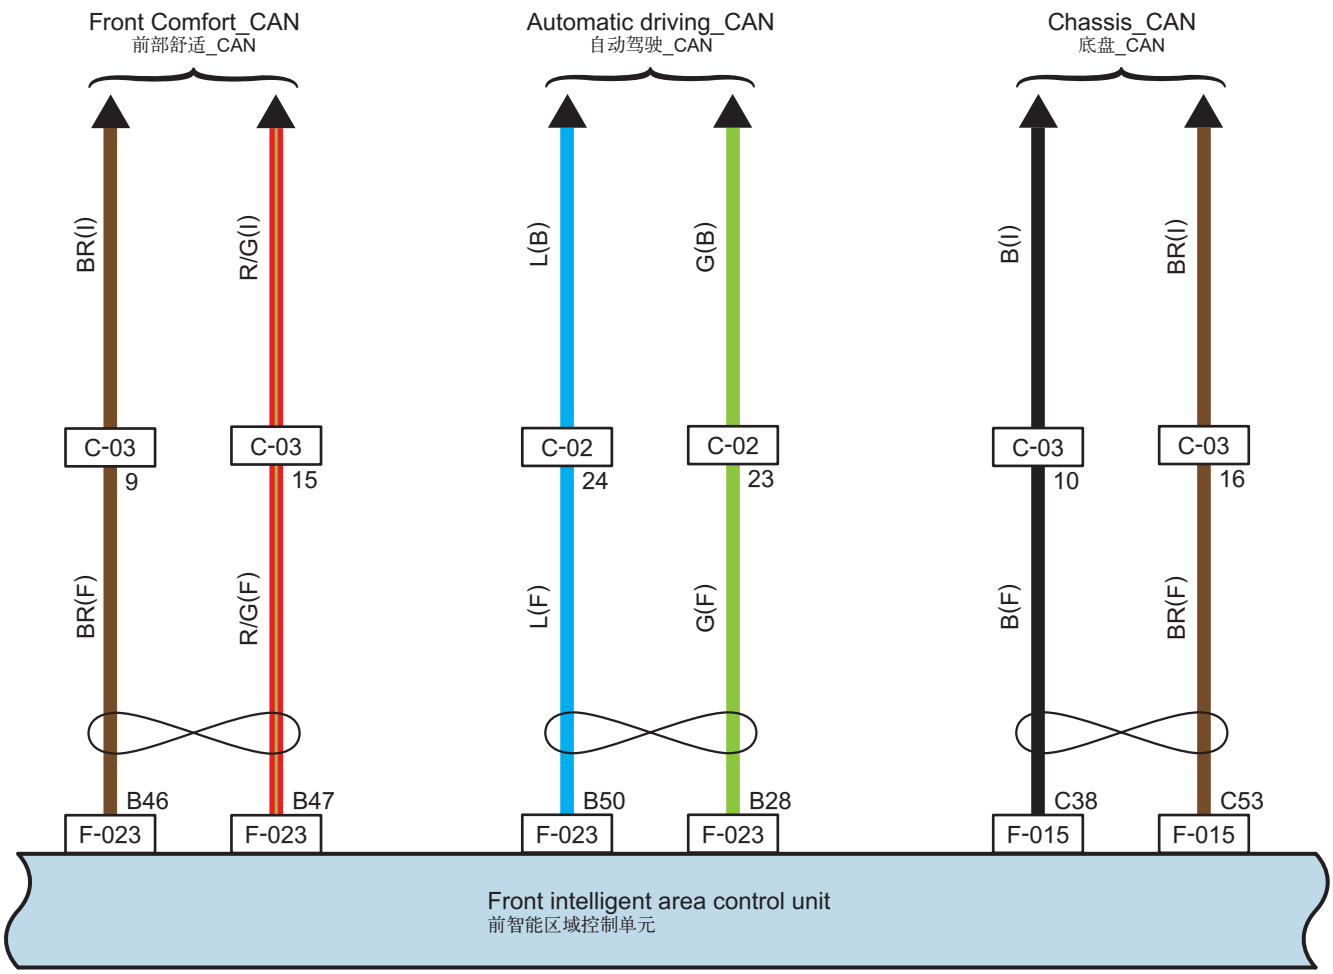
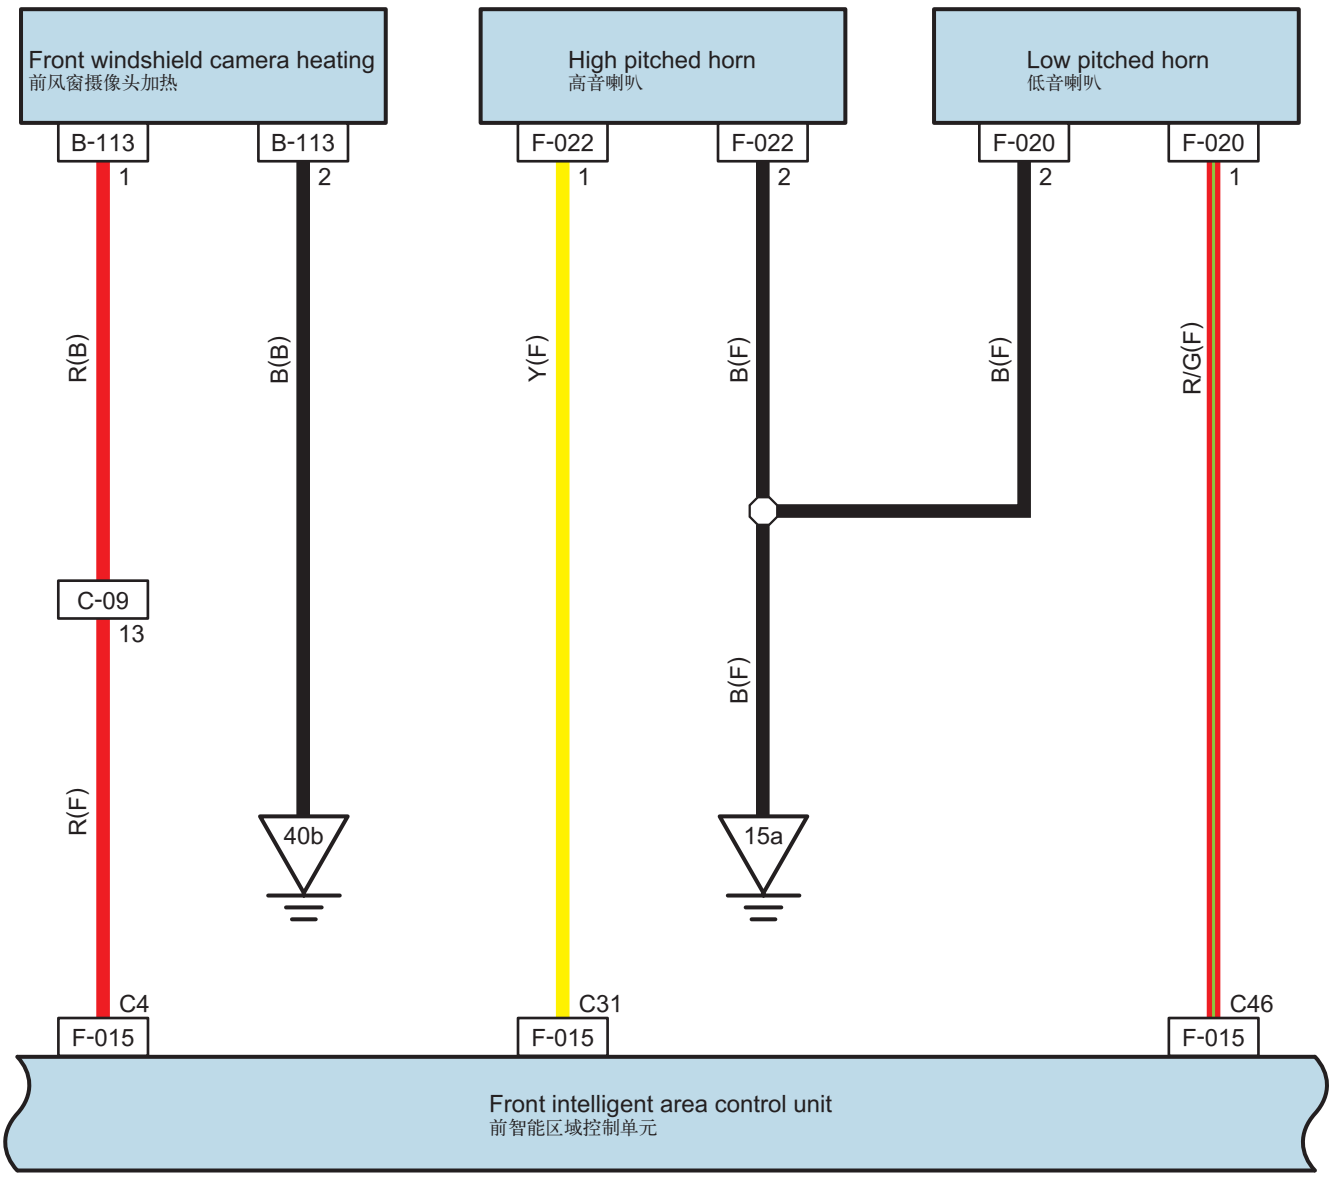
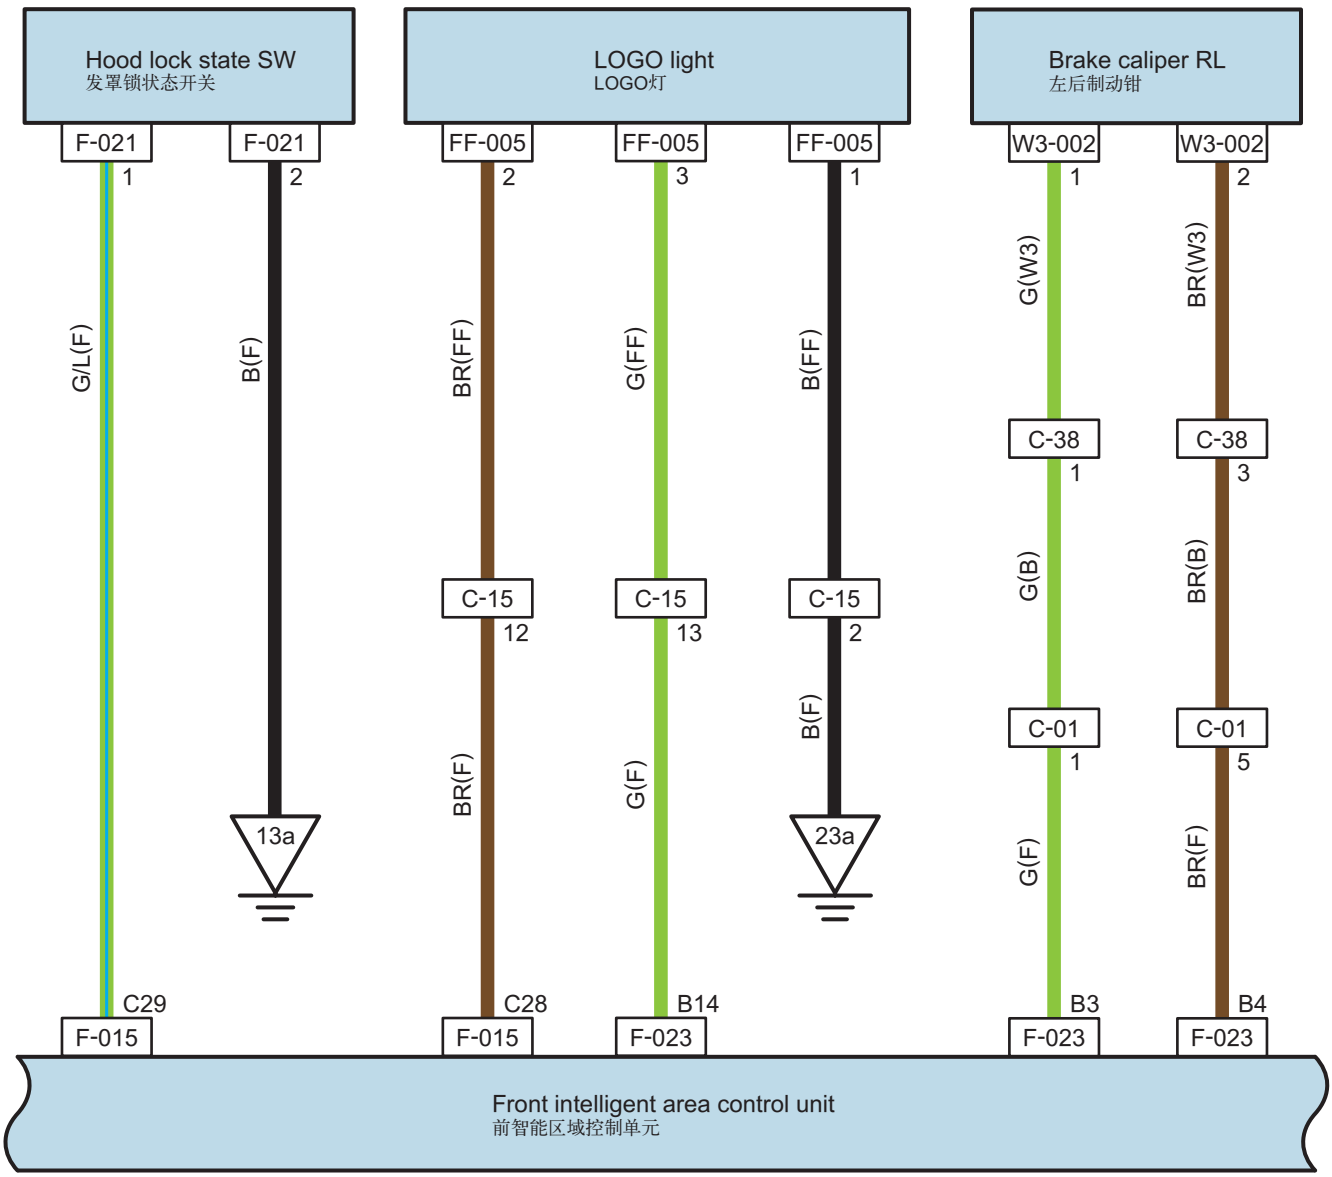
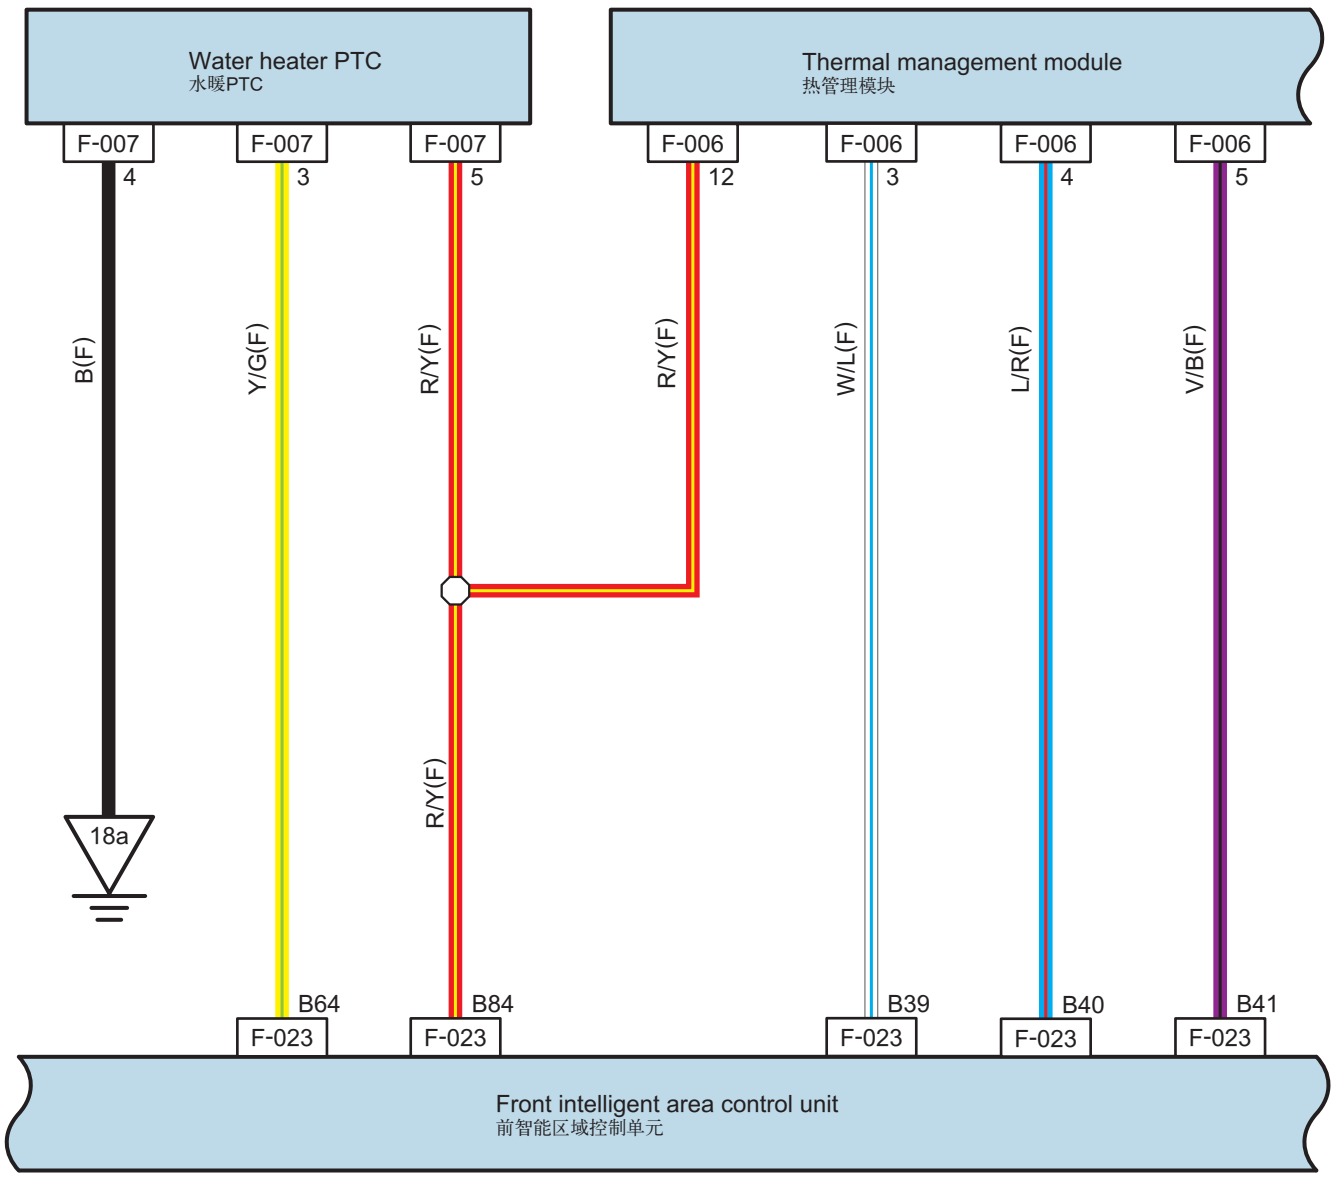

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
AF01 200A
F09
RF10 80A
RF08 60A
AF-B+
AF-01
F-01
F-09
RF-01
RF-08
RF-10
B+
R
R
R/Y(F)
2
F-018
Cooling fan
冷却风扇
F-018
3
F-018
4
B(F)
G/L(F)
R/L
11a
B85
F-023
D1
Front intelligent area control unit
前智能区域控制单元
F-023
B6
F-015
C1
F-015
C47
B(F)
B(F)
B(F)
19a
19b

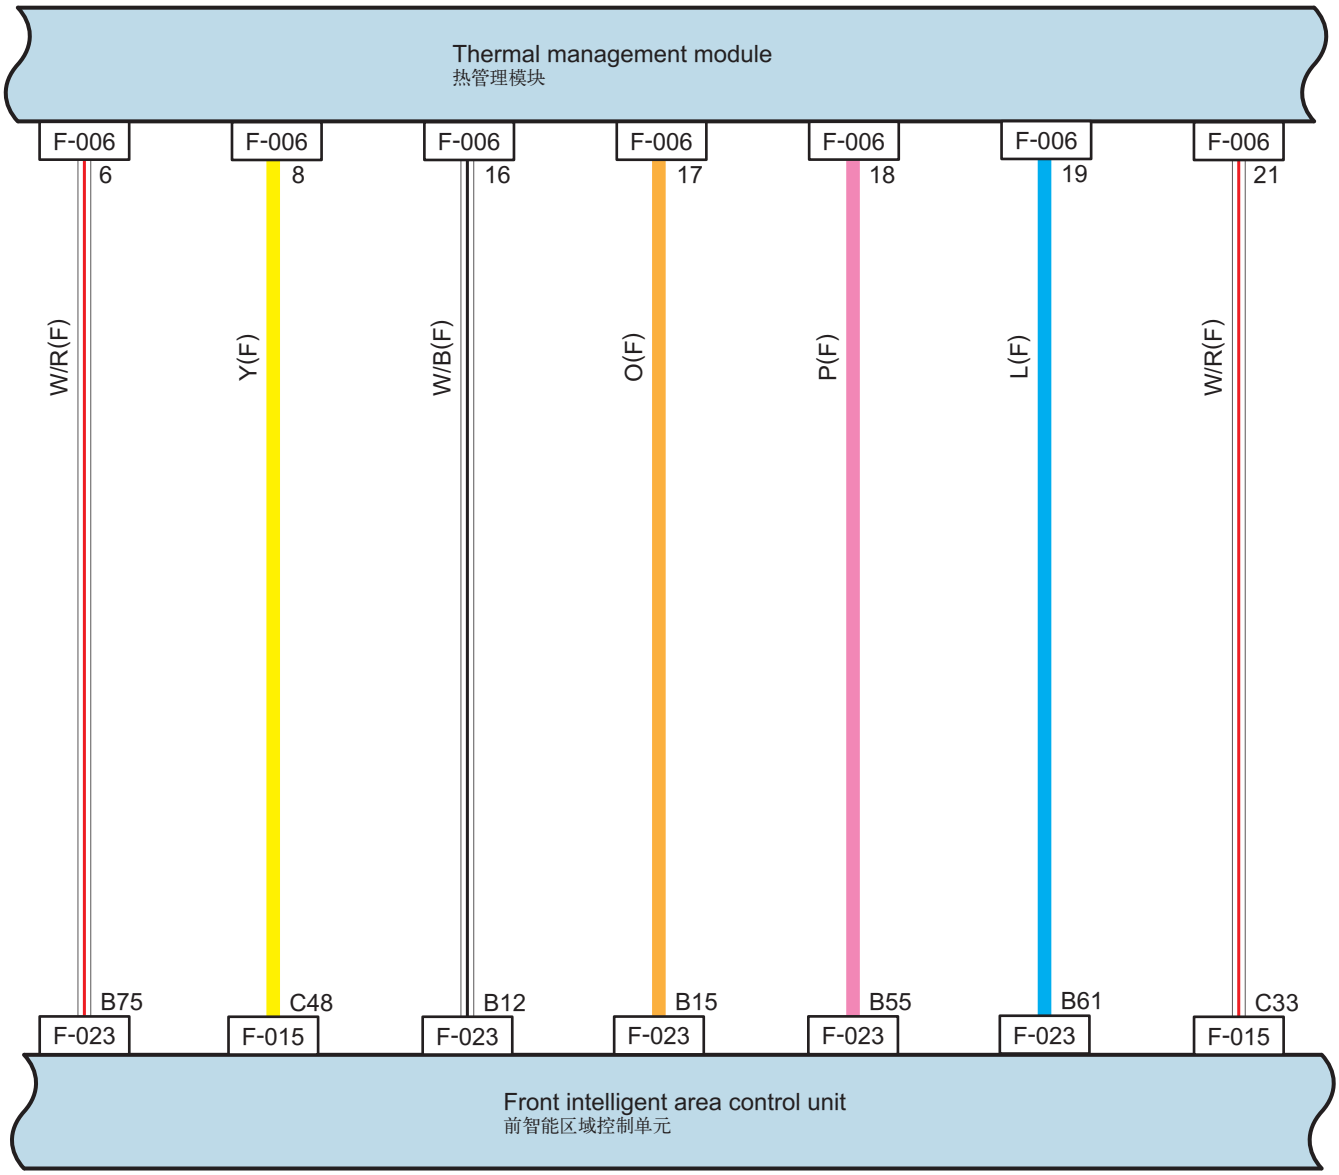

Backbone 1_CAN
主干1_CAN
Information _CAN
信息_CAN
Backbone 2_CAN
主干2_CAN
W(B)
O/BR(B)
Y(B)
O/BR(B)
G(B)
O/BR(B)
C-02
14
C-02
15
C-09
11
C-09
12
C-01
7
C-01
13
W(F)
O/BR(F)
Y(F)
O/BR(F)
G(F)
O/BR(F)
B93
B94
B49
B27
B48
B26
F-023
F-023
F-023
F-023
F-023
F-023
Front intelligent area control unit
前智能区域控制单元

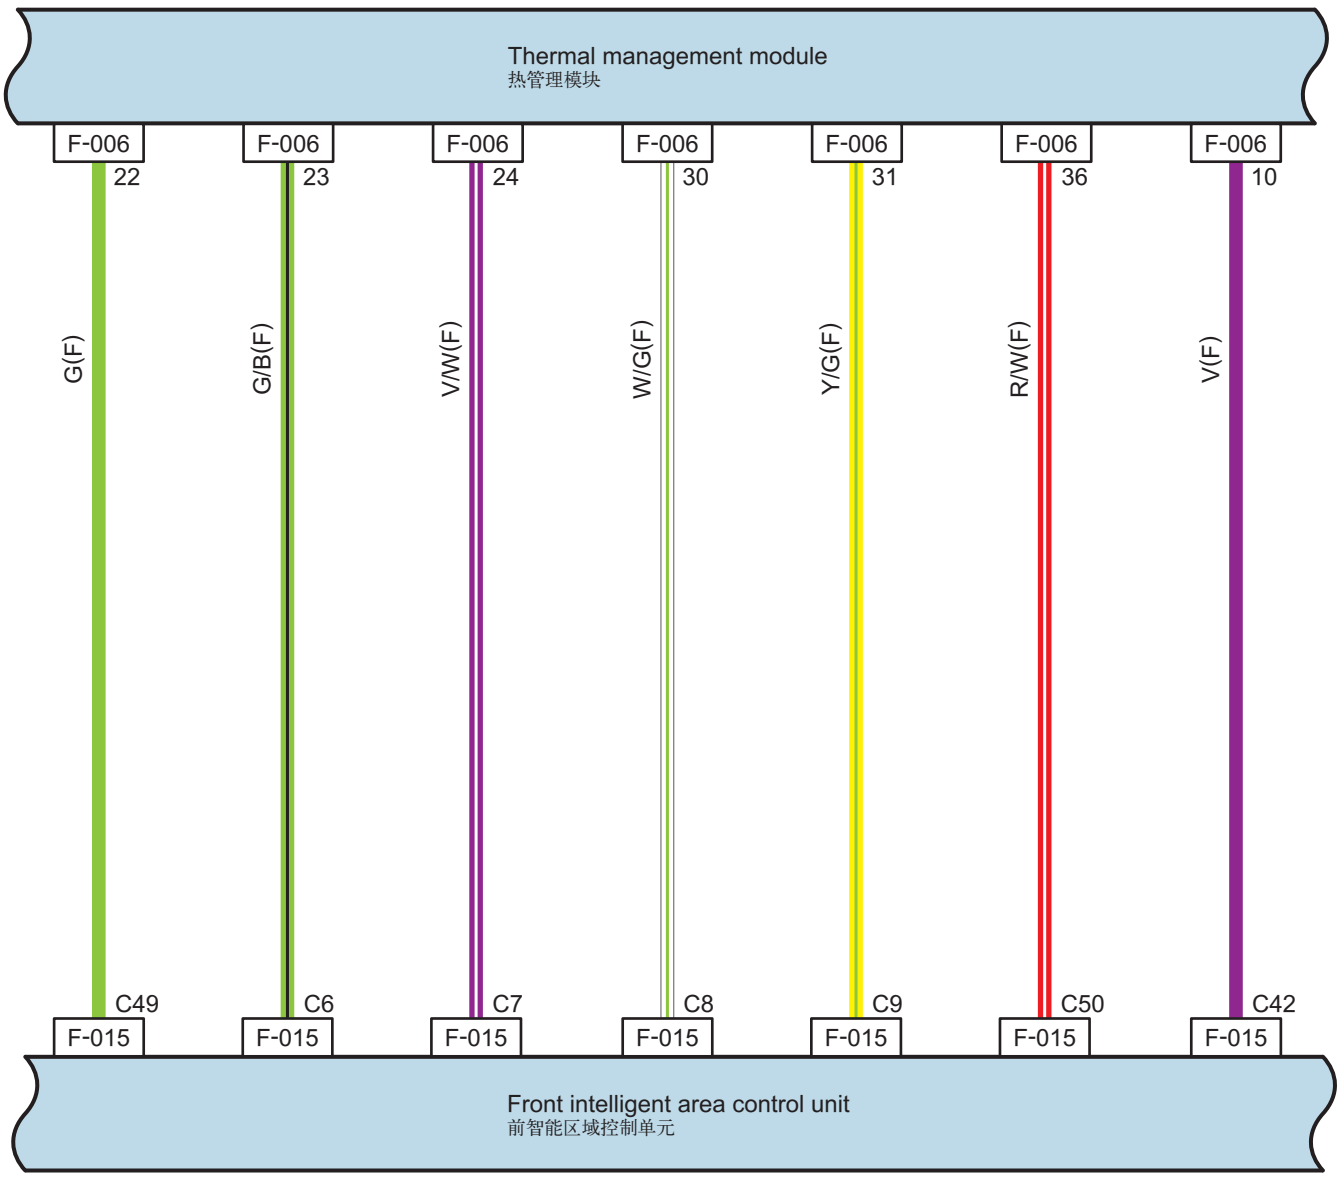

Front Comfort_CAN
前部舒适_CAN
Automatic driving_CAN
自动驾驶_CAN
Chassis_CAN
底盘_CAN
BR(I)
R/G(I)
L(B)
G(B)
B(I)
BR(I)
C-03
9
C-03
15
C-02
24
C-02
23
C-03
10
C-03
16
BR(F)
R/G(F)
L(F)
G(F)
B(F)
BR(F)
B46
B47
B50
B28
C38
C53
F-023
F-023
F-023
F-023
F-015
F-015
Front intelligent area control unit
前智能区域控制单元

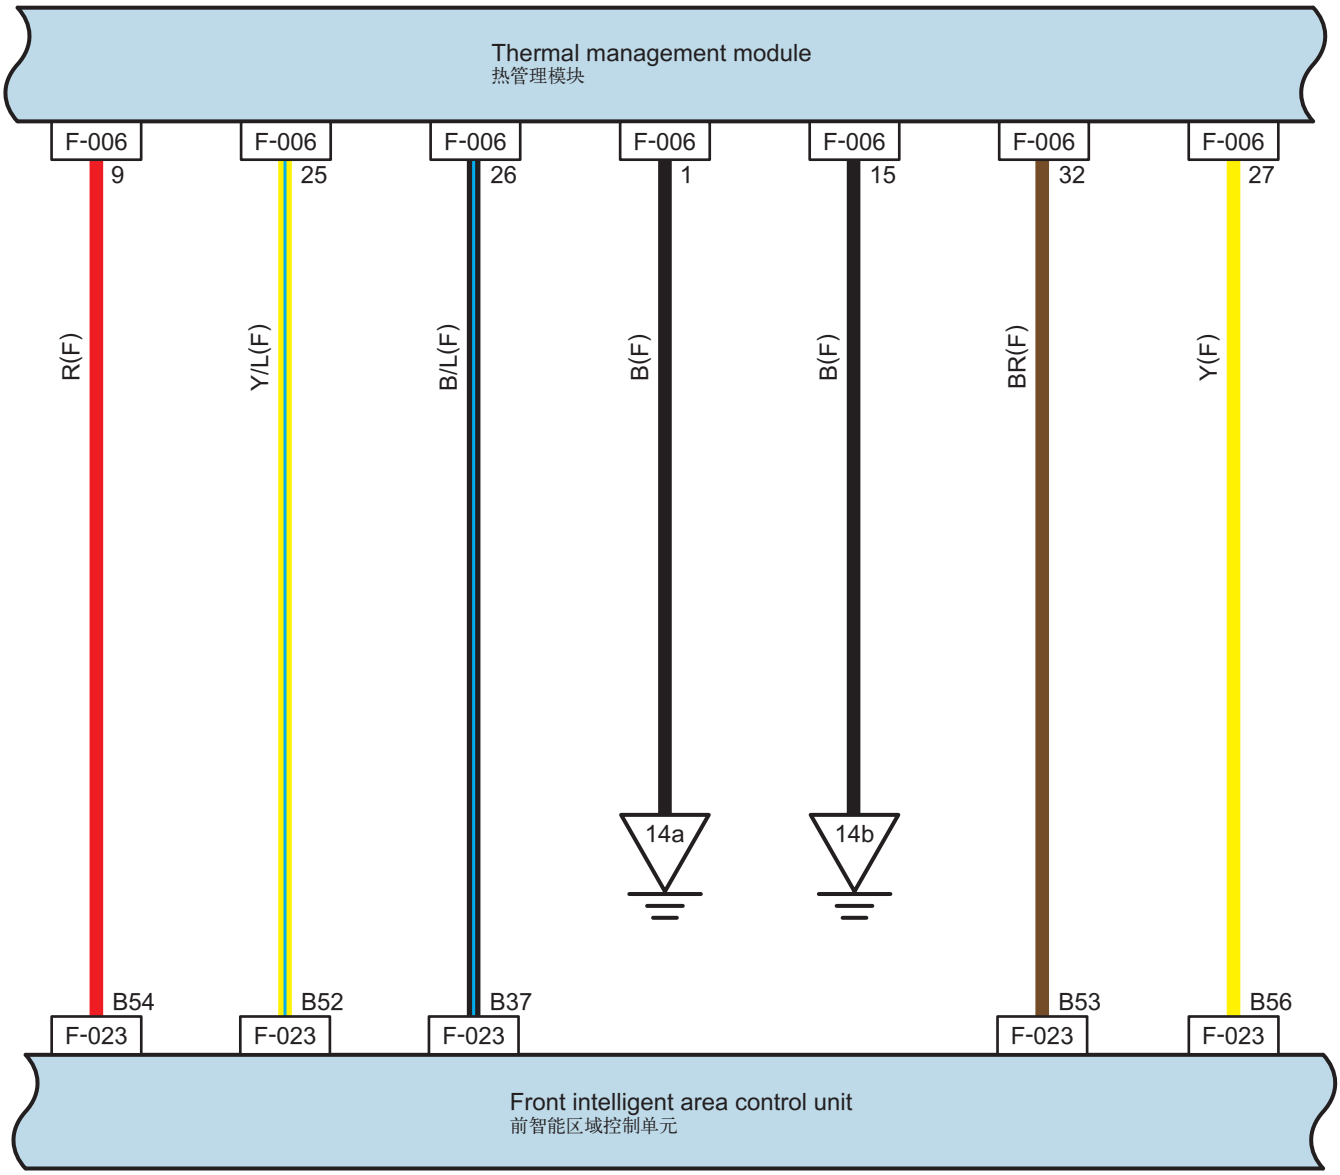

Front windshield camera heating
前风窗摄像头加热
B-113
1
B-113
2
R(B)
B(B)
C-09
13
R(F)
40b
C4
F-015
High pitched horn
高音喇叭
F-022
1
F-022
2
Y(F)
B(F)
B(F)
15a
C31
F-015
Low pitched horn
低音喇叭
F-020
2
F-020
1
B(F)
R/G(F)
C46
F-015
Front intelligent area control unit
前智能区域控制单元

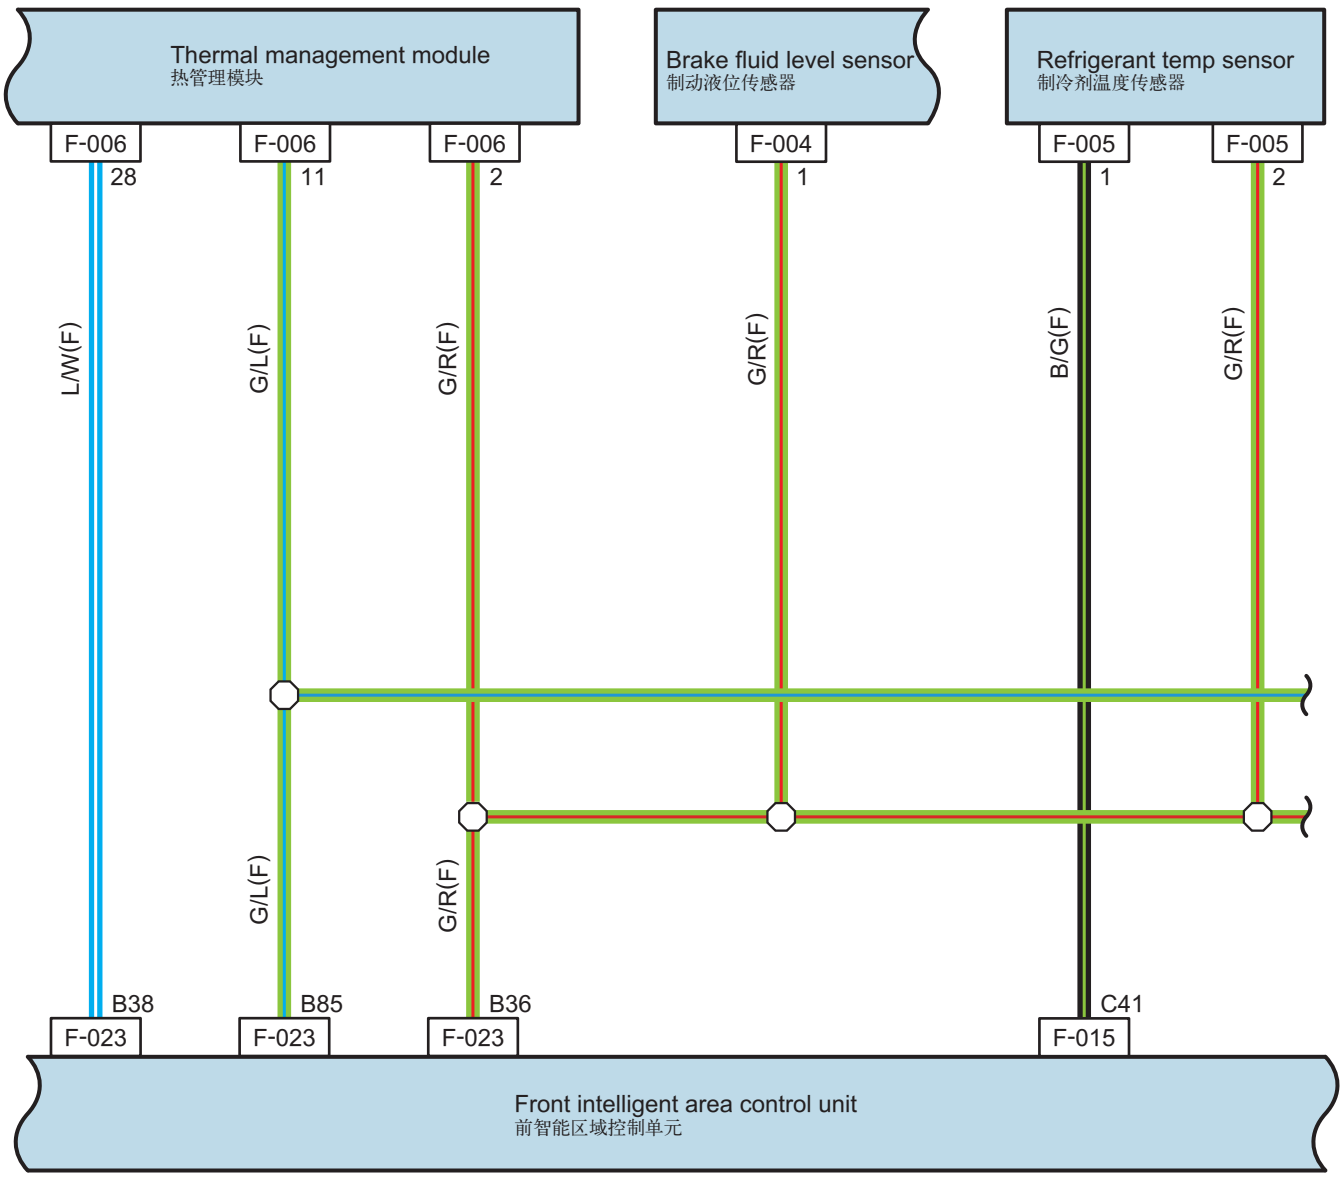

Hood lock state SW
发罩锁状态开关
LOGO light
LOGO灯
Brake caliper RL
左后制动钳
F-021
1
F-021
2
FF-005
2
FF-005
3
FF-005
1
W3-002
1
W3-002
2
G/L(F)
B(F)
BR(FF)
G(FF)
B(FF)
G(W3)
BR(W3)
C-38
1
C-38
3
C-15
12
C-15
13
C-15
2
G(B)
BR(B)
B(F)
C-01
1
C-01
5
13a
23a
BR(F)
G(F)
G(F)
BR(F)
C29
C28
B14
B3
B4
F-015
F-015
F-023
F-023
F-023
Front intelligent area control unit
前智能区域控制单元

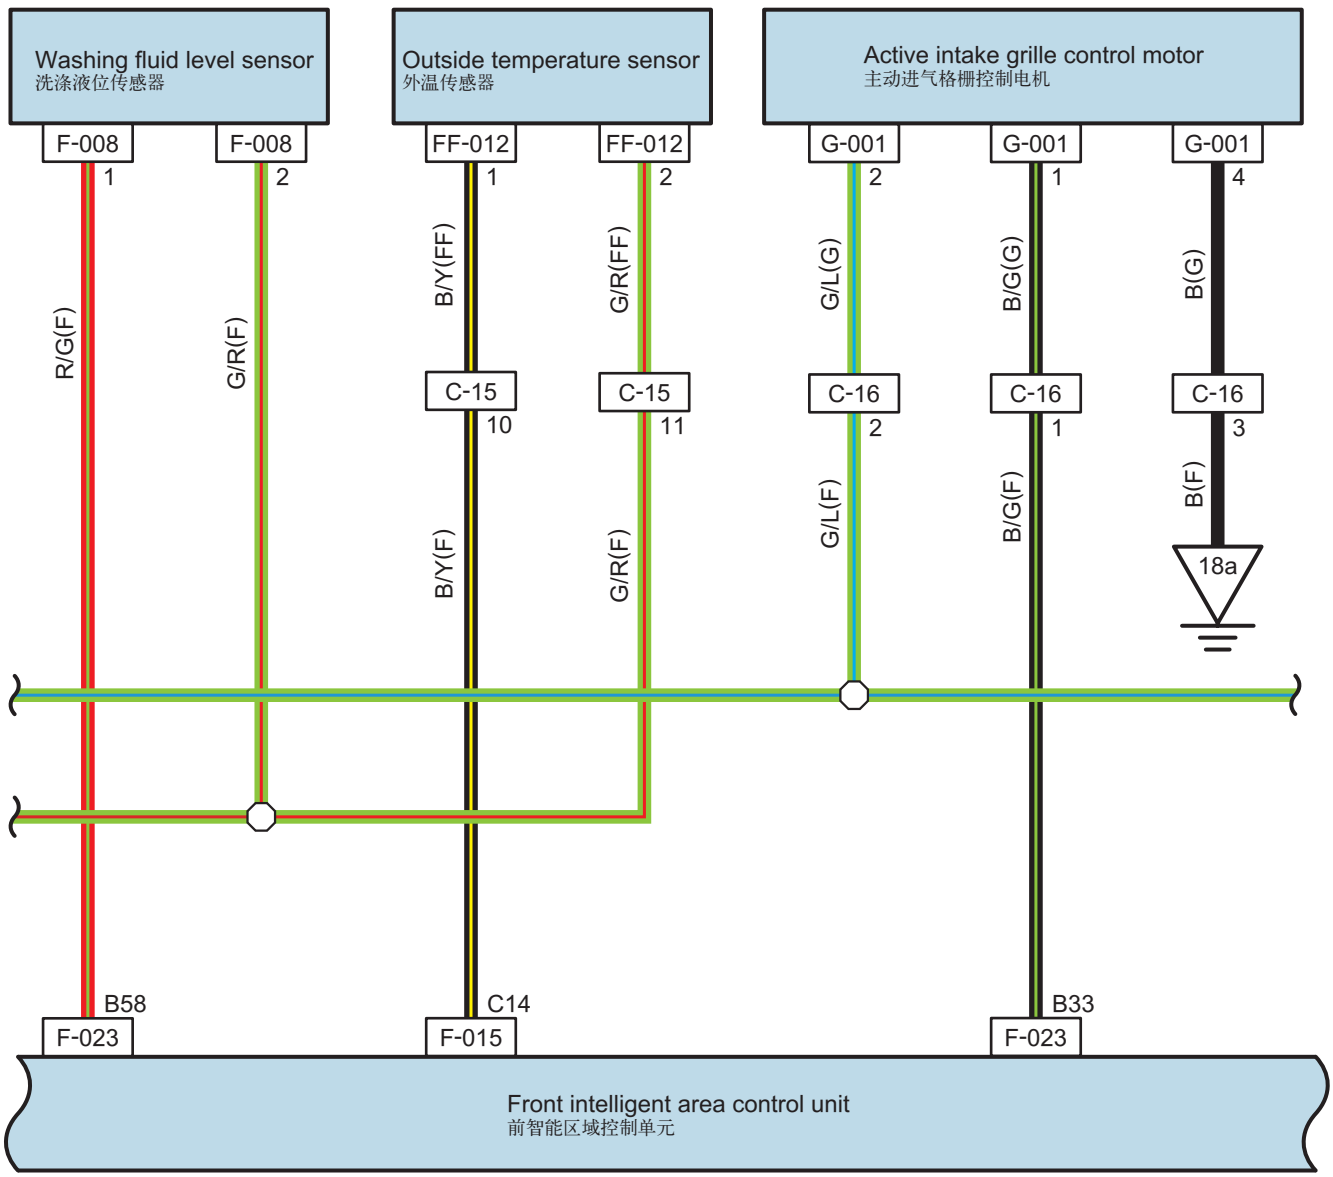

Water heater PTC
水暖PTC
Thermal management module
热管理模块
F-007
4
F-007
3
F-007
5
F-006
12
F-006
3
F-006
4
F-006
5
B(F)
Y/G(F)
R/Y(F)
R/Y(F)
W/L(F)
L/R(F)
V/B(F)
R/Y(F)
18a
B64
B84
B39
B40
B41
F-023
F-023
F-023
F-023
F-023
Front intelligent area control unit
前智能区域控制单元

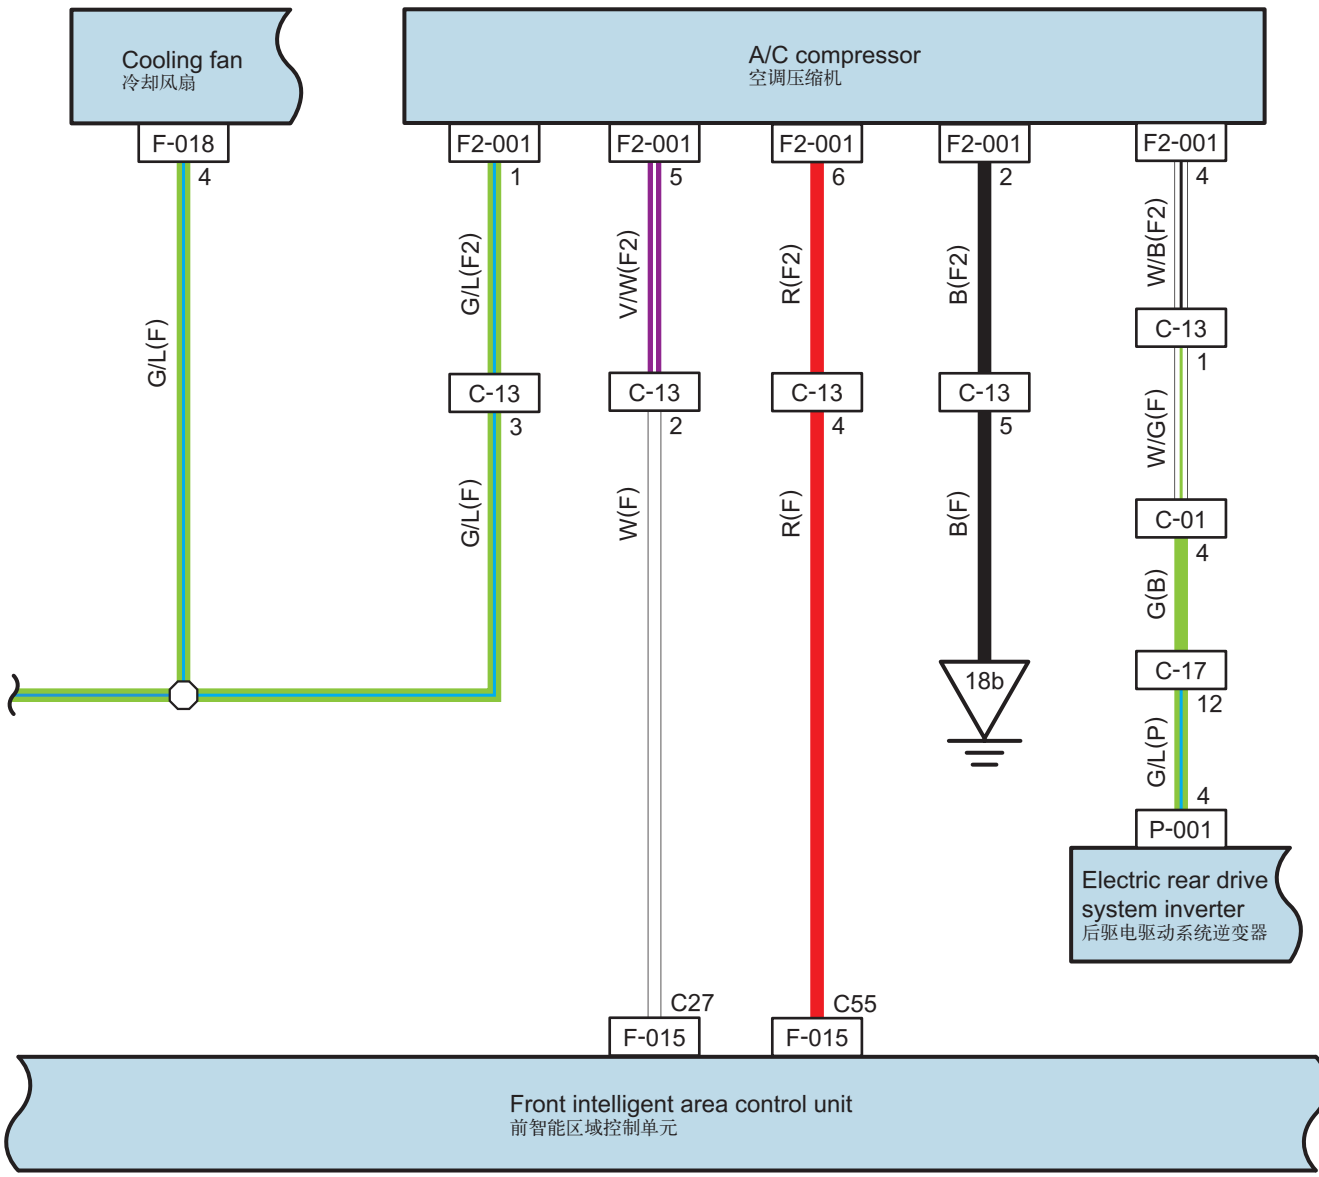

Thermal management module
热管理模块
F-006
6
W/R(F)
B75
F-023
F-006
8
Y(F)
C48
F-015
F-006
16
W/B(F)
B12
F-023
F-006
17
O(F)
B15
F-023
F-006
18
P(F)
B55
F-023
F-006
19
L(F)
B61
F-023
F-006
21
W/R(F)
C33
F-015
Front intelligent area control unit
前智能区域控制单元

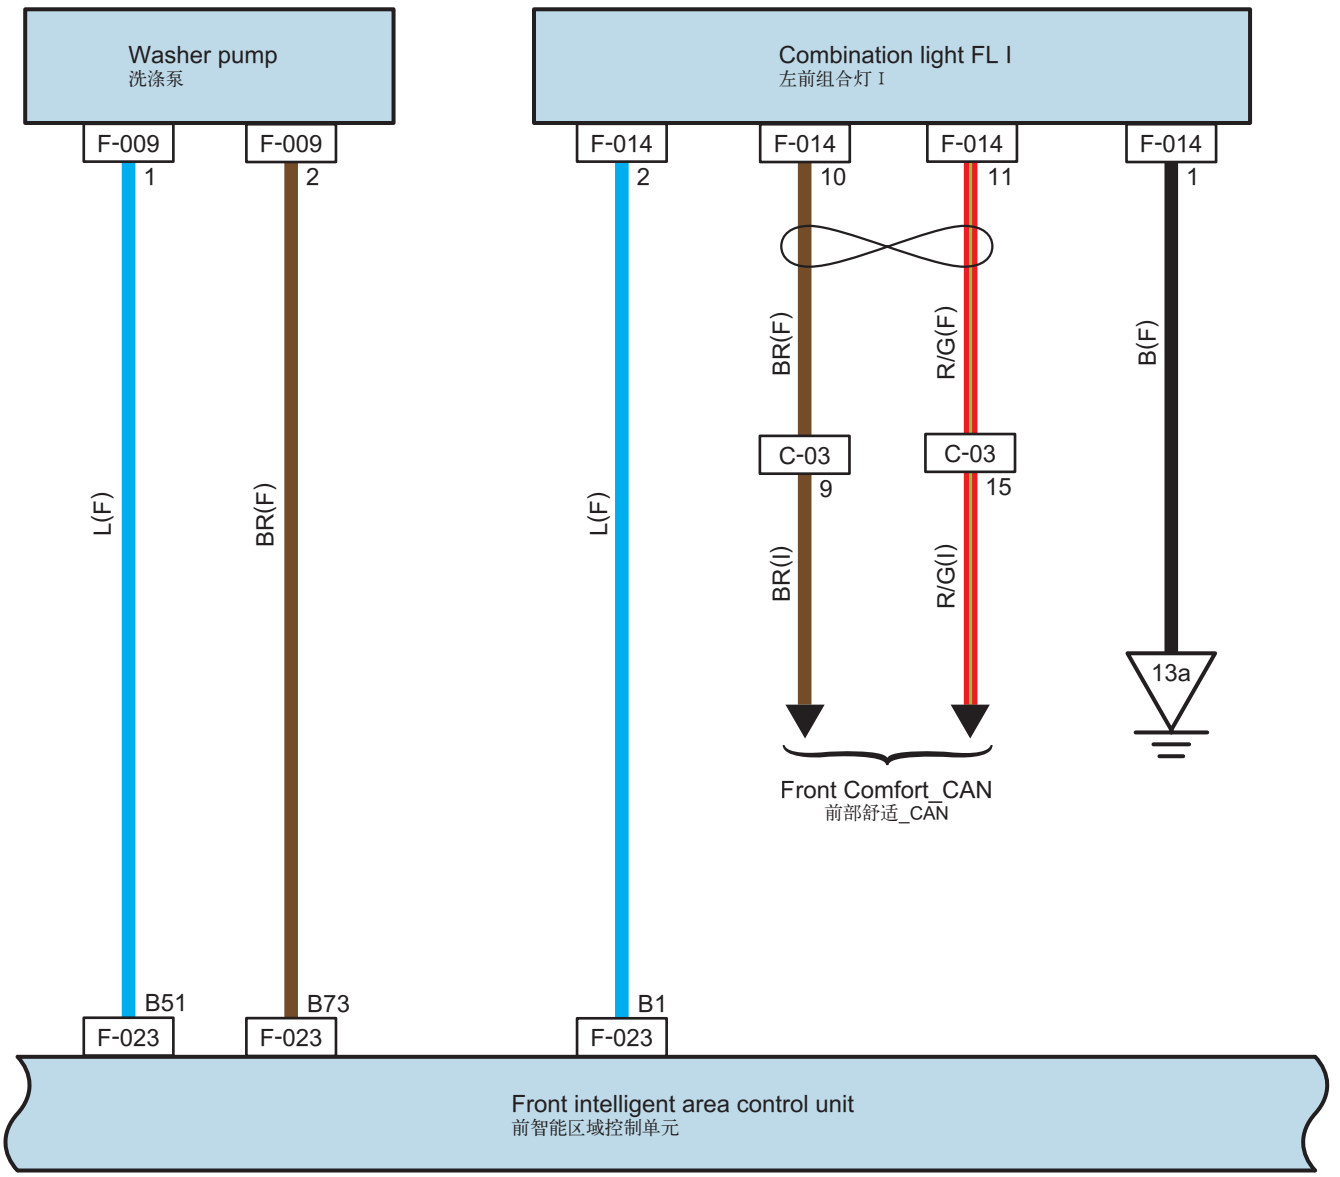

Thermal management module
热管理模块
F-006
22
G(F)
C49
F-015
F-006
23
G/B(F)
C6
F-015
F-006
24
V/W(F)
C7
F-015
F-006
30
W/G(F)
C8
F-015
F-006
31
Y/G(F)
C9
F-015
F-006
36
R/W(F)
C50
F-015
F-006
10
V(F)
C42
F-015
Front intelligent area control unit
前智能区域控制单元

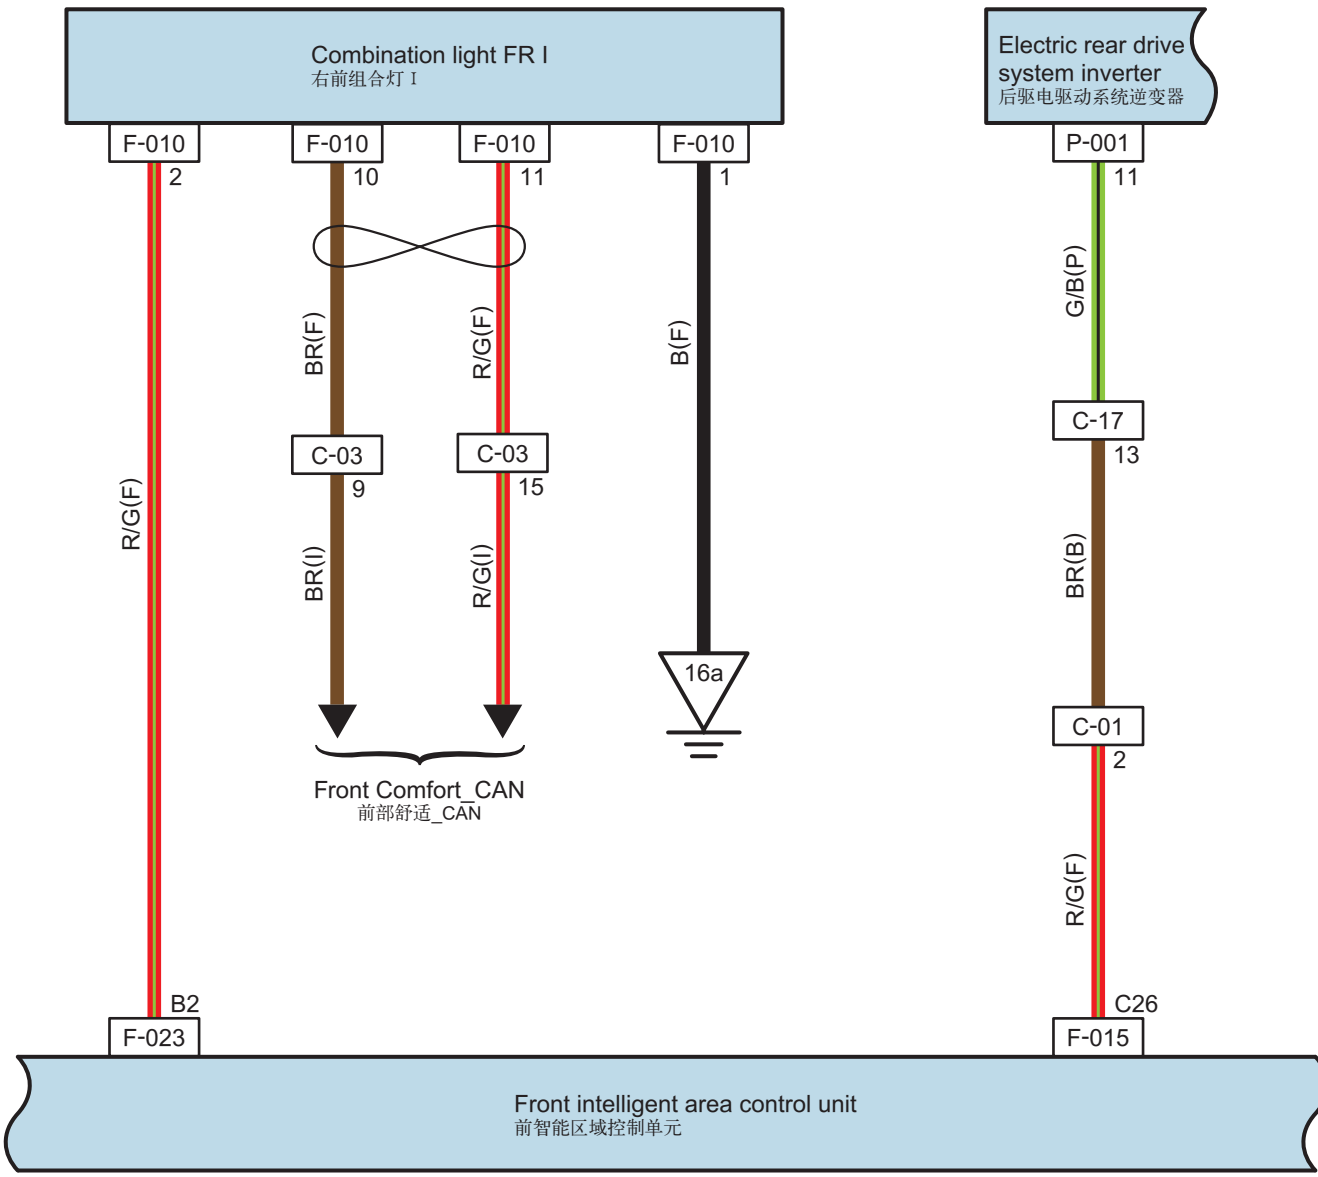

Thermal management module
热管理模块
F-006
9
R(F)
F-006
25
Y/L(F)
F-006
26
B/L(F)
F-006
1
B(F)
F-006
15
B(F)
F-006
32
BR(F)
F-006
27
Y(F)
14a
14b
B54
F-023
B52
F-023
B37
F-023
B53
F-023
B56
F-023
Front intelligent area control unit
前智能区域控制单元

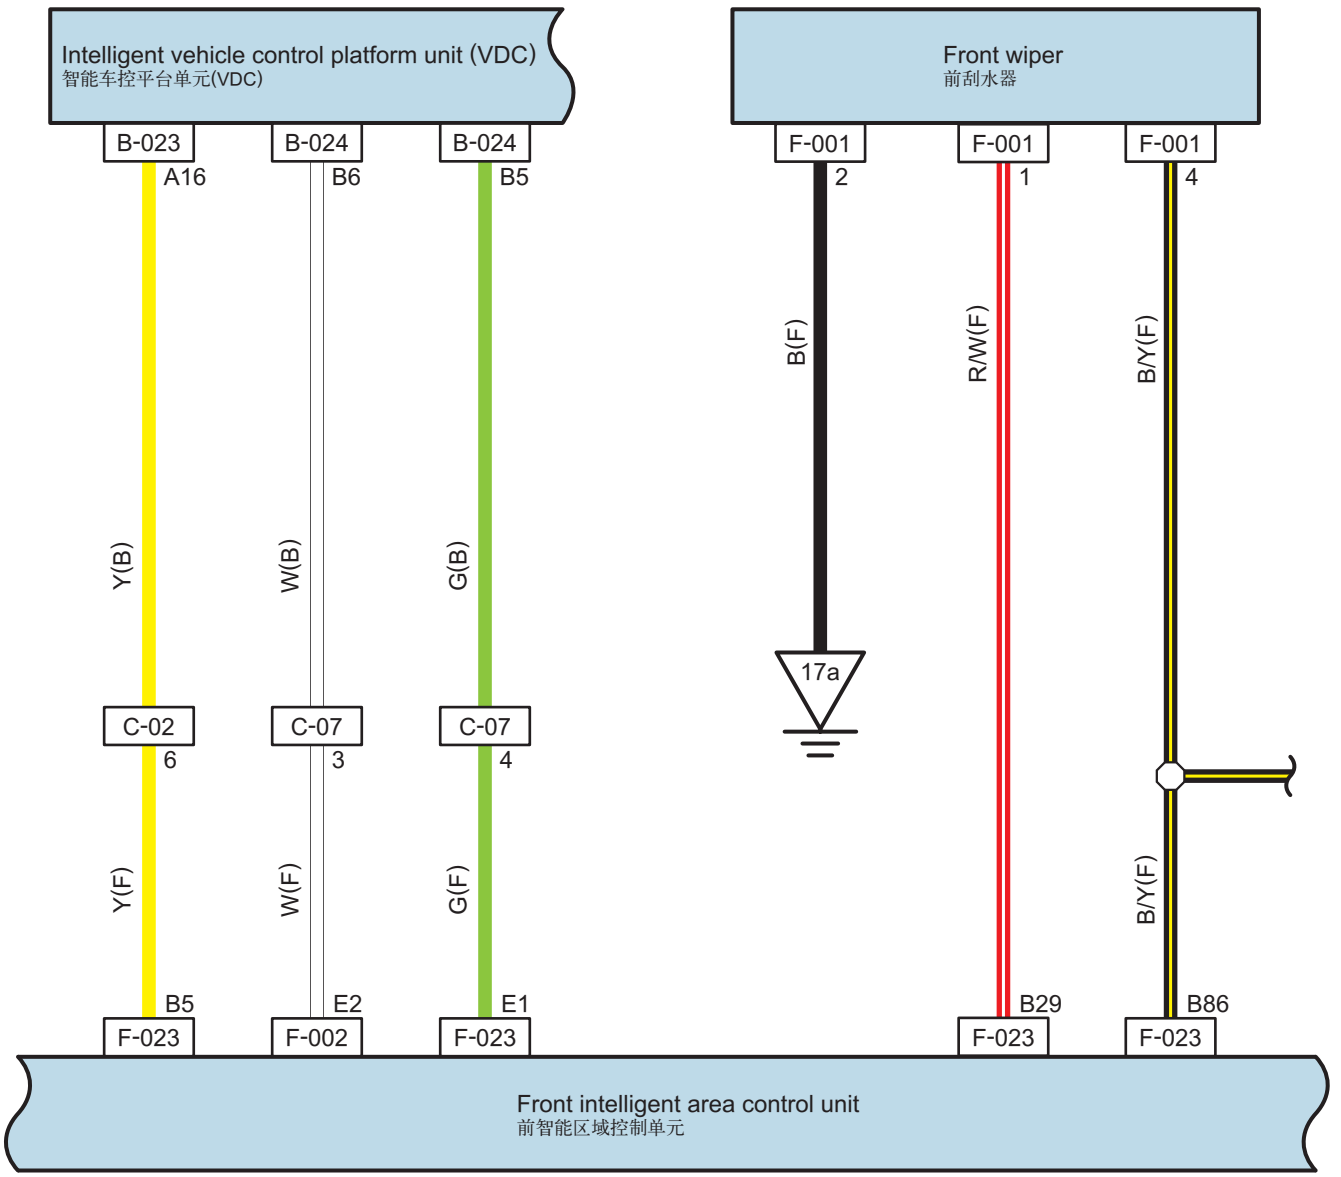

Thermal management module
热管理模块
Brake fluid level sensor
制动液位传感器
Refrigerant temp sensor
制冷剂温度传感器
F-006
28
F-006
11
F-006
2
F-004
1
F-005
1
F-005
2
L/W(F)
G/L(F)
G/R(F)
G/R(F)
B/G(F)
G/R(F)
G/L(F)
G/R(F)
B38
B85
B36
C41
F-023
F-023
F-023
F-015
Front intelligent area control unit
前智能区域控制单元

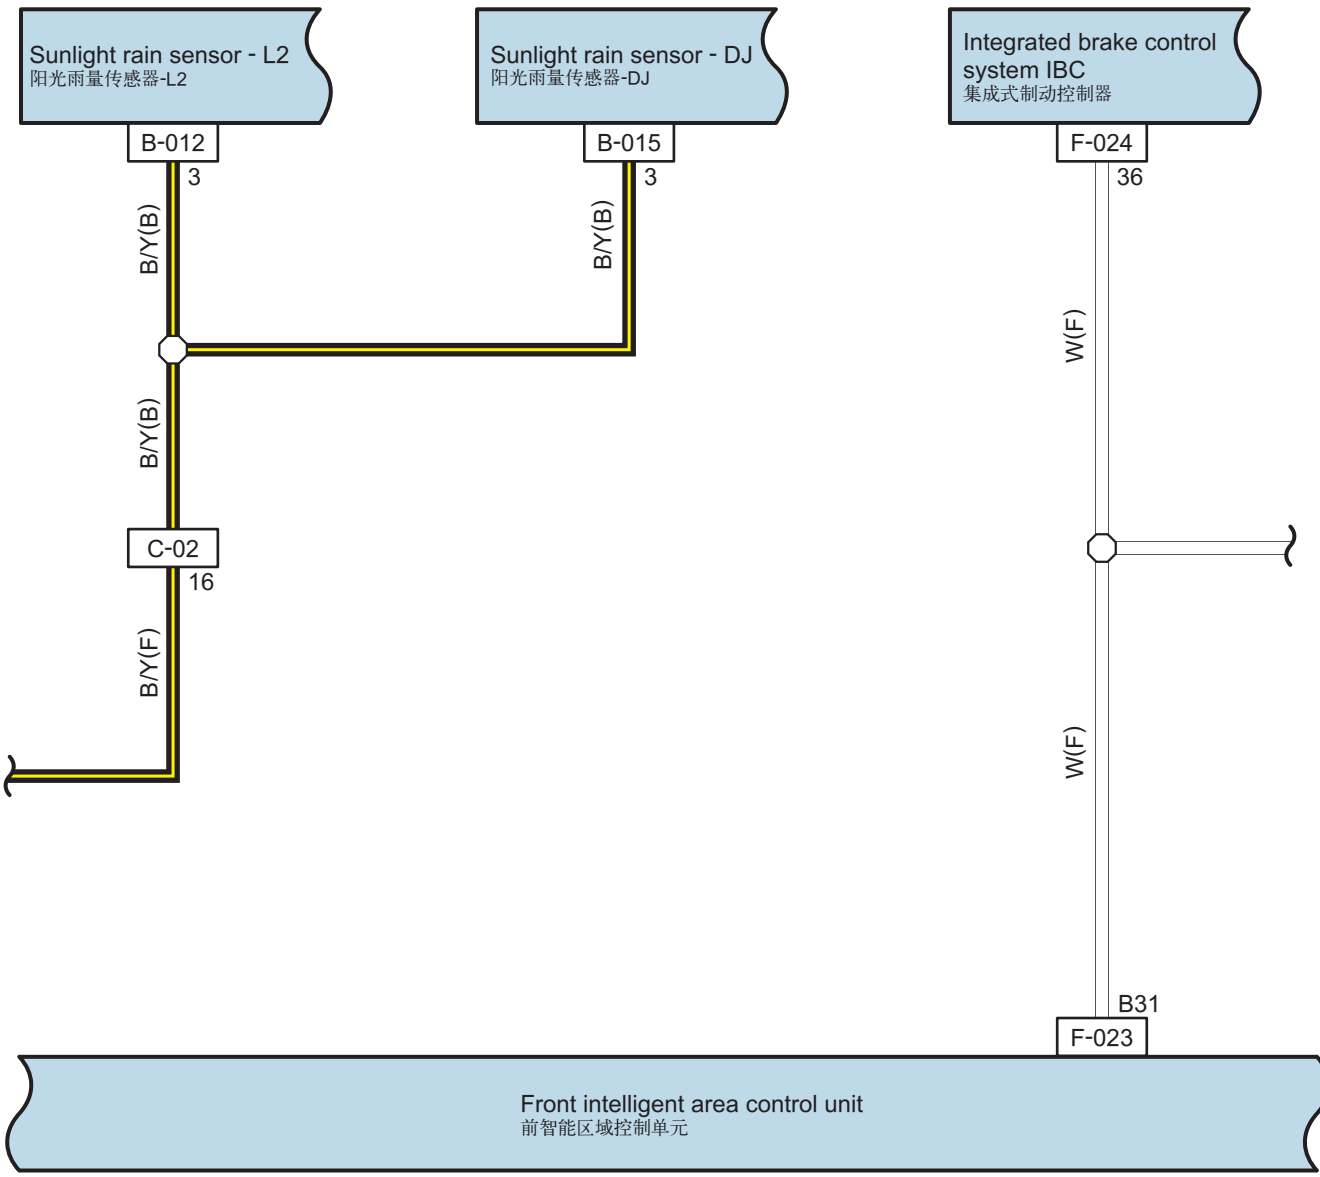

Washing fluid level sensor
洗涤液位传感器
Outside temperature sensor
外温传感器
Active intake grille control motor
主动进气格栅控制电机
F-008
1
F-008
2
FF-012
1
FF-012
2
G-001
2
G-001
1
G-001
4
R/G(F)
G/R(F)
B/Y(FF)
G/R(FF)
G/L(G)
B/G(G)
B(G)
C-15
10
C-15
11
C-16
2
C-16
1
C-16
3
B/Y(F)
G/R(F)
G/L(F)
B/G(F)
B(F)
18a
B58
C14
B33
F-023
F-015
F-023
Front intelligent area control unit
前智能区域控制单元

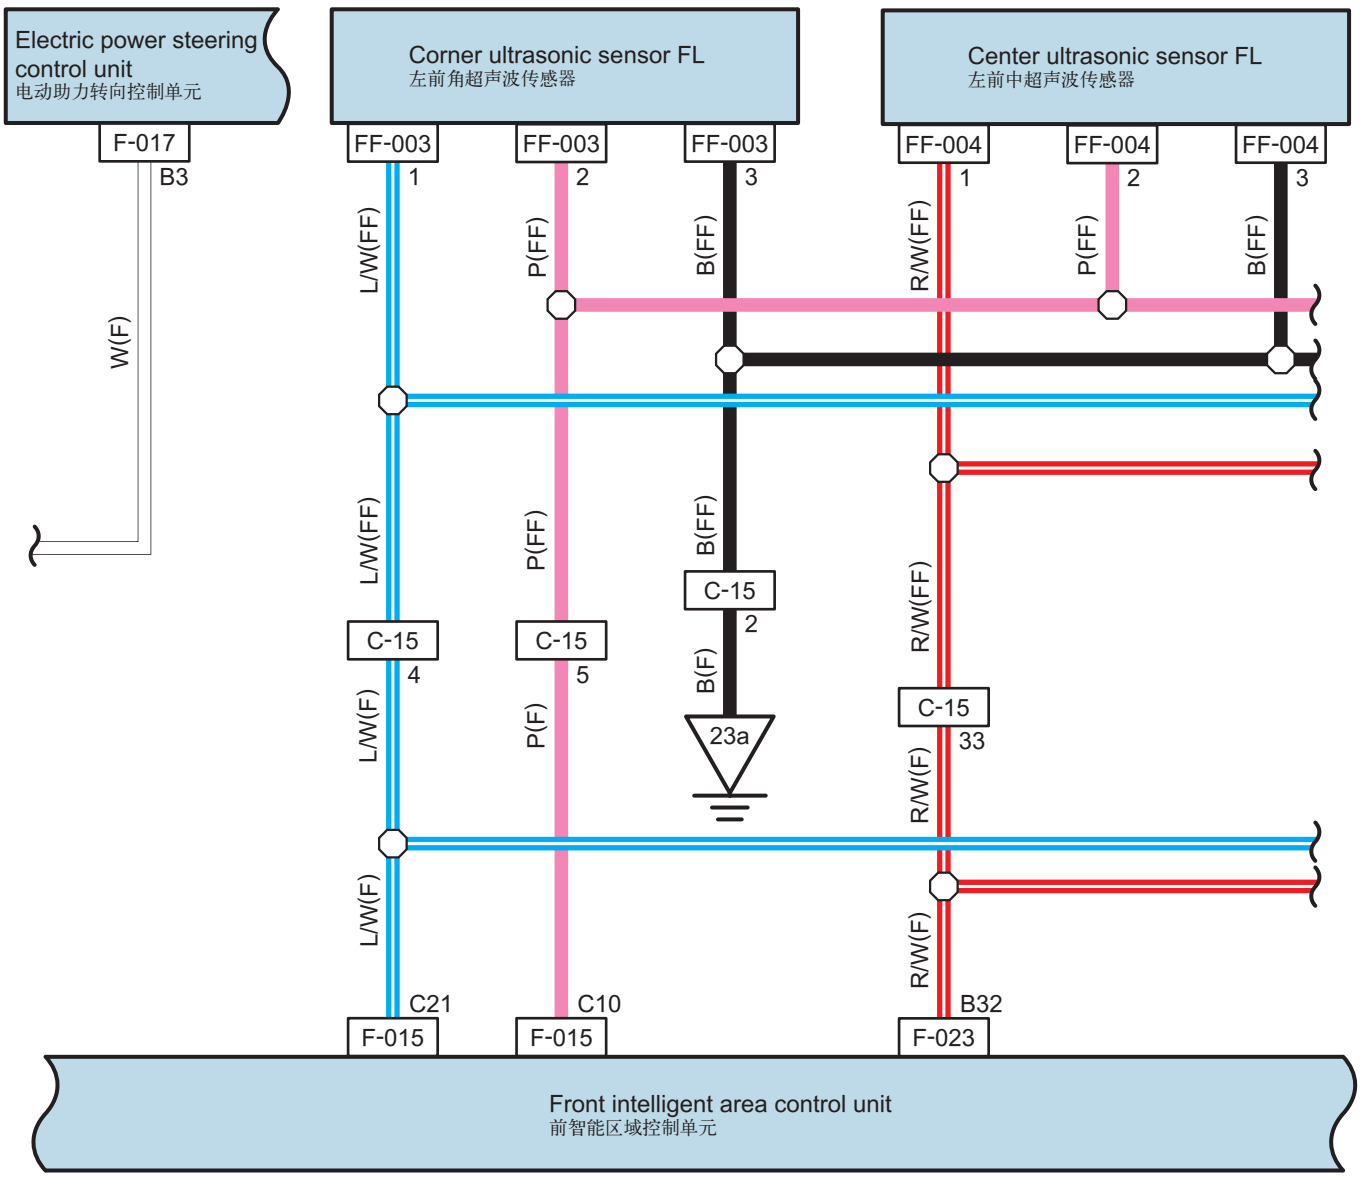

Cooling fan
冷却风扇
A/C compressor
空调压缩机
F-018
4
G/L(F)
F2-001
1
G/L(F2)
C-13
3
G/L(F)
F2-001
5
V/W(F2)
C-13
2
W(F)
C27
F-015
F2-001
6
R(F2)
C-13
4
R(F)
C55
F-015
F2-001
2
B(F2)
C-13
5
B(F)
18b
F2-001
4
W/B(F2)
C-13
1
W/G(F)
C-01
4
G(B)
C-17
12
G/L(P)
4
P-001
Electric rear drive system inverter
后驱电驱动系统逆变器
Front intelligent area control unit
前智能区域控制单元

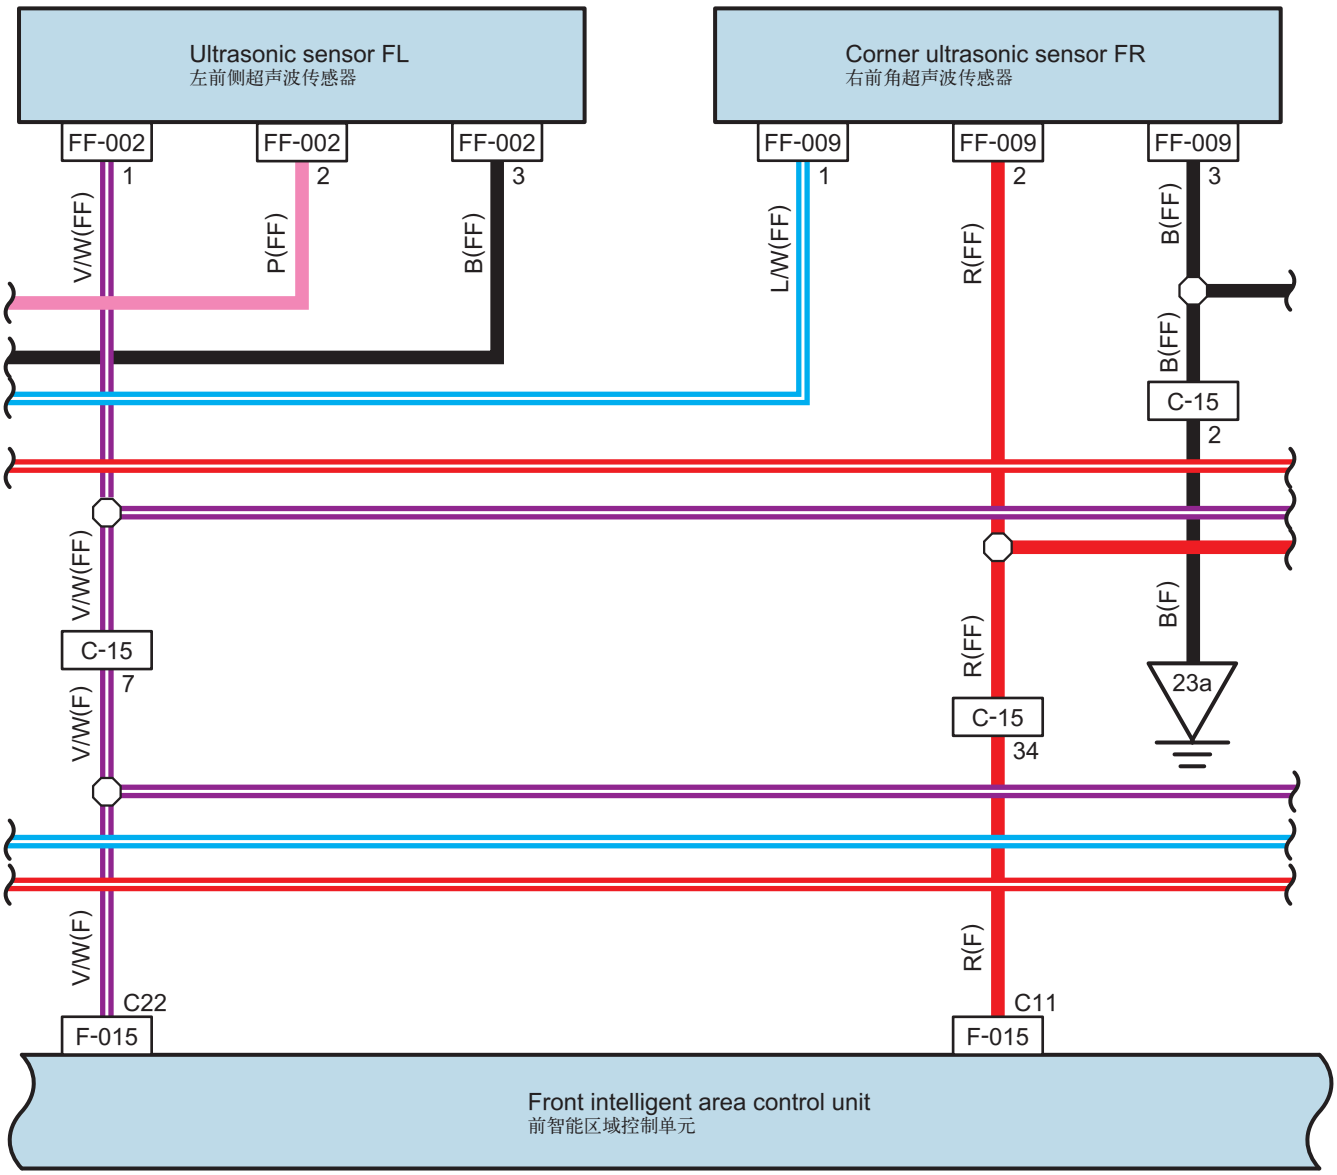

Washer pump
洗涤泵
F-009
1
F-009
2
L(F)
BR(F)
B51
B73
F-023
F-023
Combination light FL I
左前组合灯 I
F-014
2
F-014
10
F-014
11
F-014
1
BR(F)
R/G(F)
B(F)
C-03
9
C-03
15
BR(I)
R/G(I)
13a
L(F)
B1
F-023
Front Comfort_CAN
前部舒适_CAN
Front intelligent area control unit
前智能区域控制单元

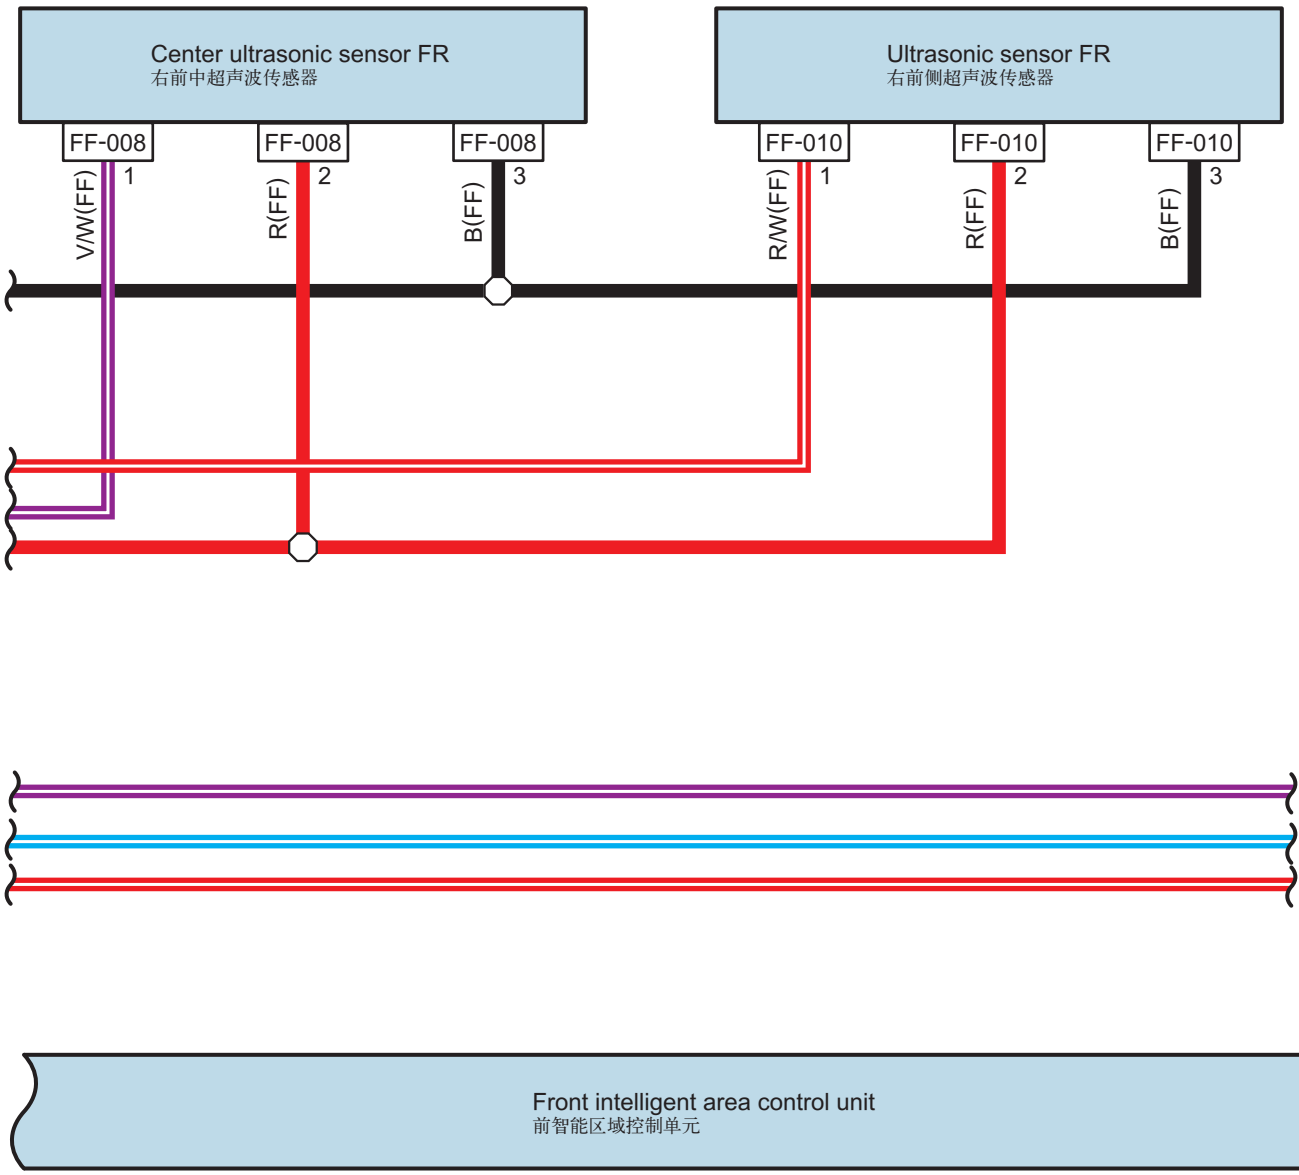

Combination light FR I
右前组合灯 I
F-010
2
F-010
10
F-010
11
F-010
1
BR(F)
R/G(F)
B(F)
C-03
9
C-03
15
BR(I)
R/G(I)
16a
Front Comfort_CAN
前部舒适_CAN
R/G(F)
B2
F-023
Electric rear drive system inverter
后驱电驱动系统逆变器
P-001
11
G/B(P)
C-17
13
BR(B)
C-01
2
R/G(F)
C26
F-015
Front intelligent area control unit
前智能区域控制单元

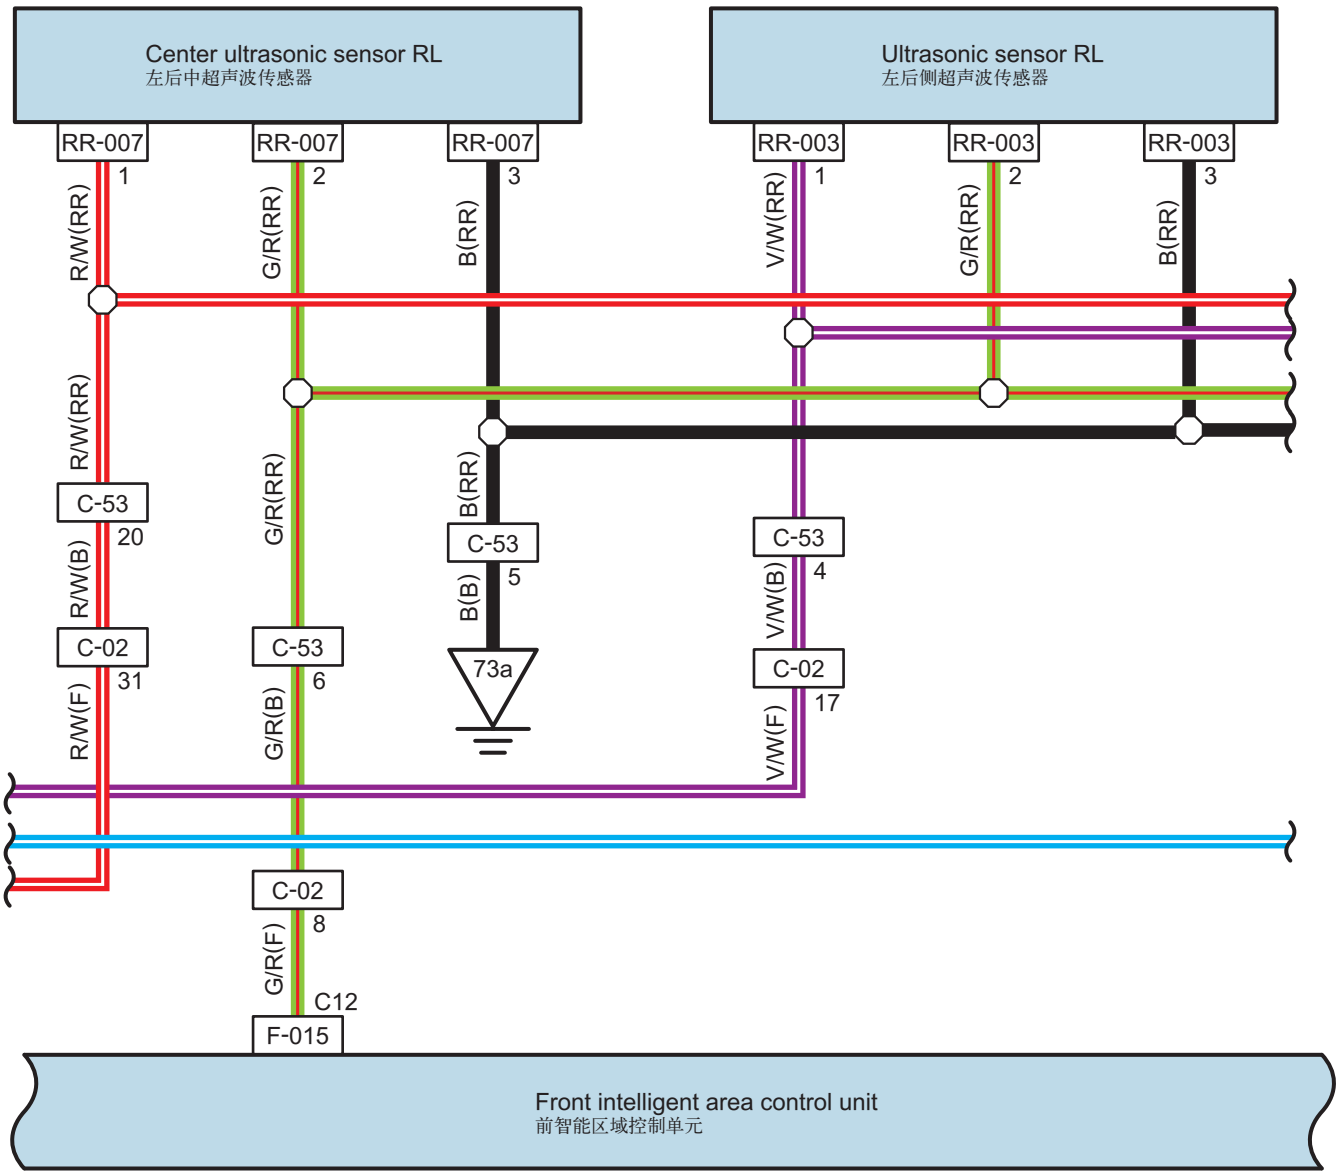

Intelligent vehicle control platform unit (VDC)
智能车控平台单元(VDC)
B-023
A16
B-024
B6
B-024
B5
Y(B)
W(B)
G(B)
C-02
6
C-07
3
C-07
4
Y(F)
W(F)
G(F)
B5
E2
E1
F-023
F-002
F-023
Front wiper
前刮水器
F-001
2
F-001
1
F-001
4
B(F)
R/W(F)
B/Y(F)
17a
B/Y(F)
B29
B86
F-023
F-023
Front intelligent area control unit
前智能区域控制单元

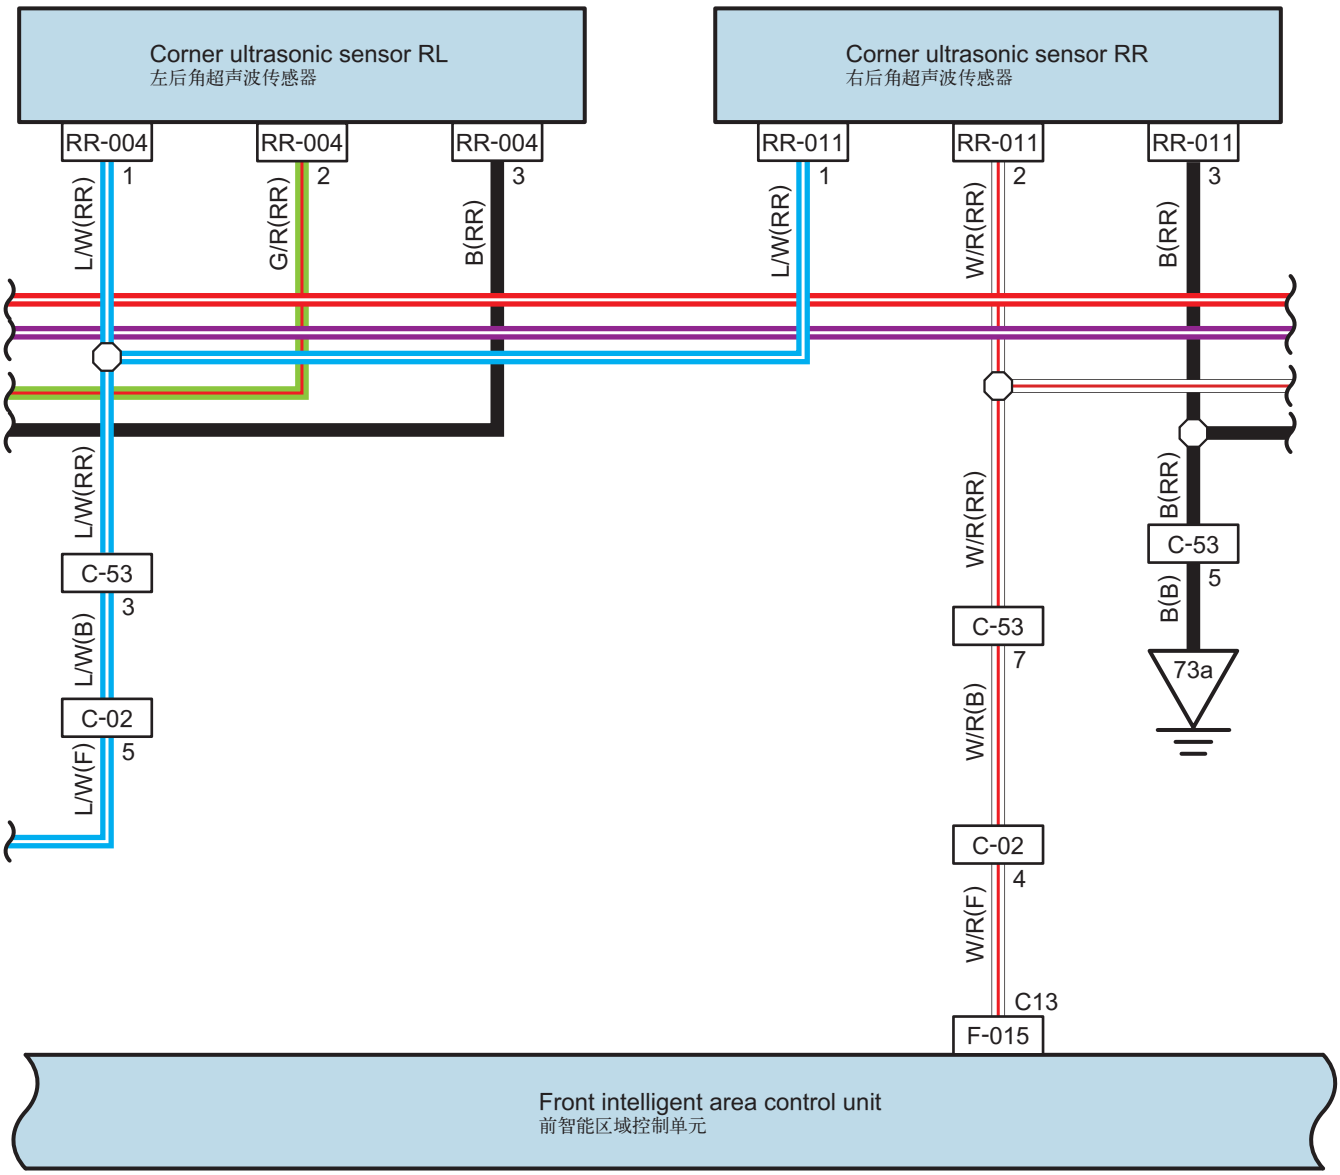

Sunlight rain sensor - L2
阳光雨量传感器-L2
Sunlight rain sensor - DJ
阳光雨量传感器-DJ
Integrated brake control system IBC
集成式制动控制器
B-012
3
B-015
3
F-024
36
B/Y(B)
B/Y(B)
W(F)
B/Y(B)
C-02
16
B/Y(F)
W(F)
B31
F-023
Front intelligent area control unit
前智能区域控制单元

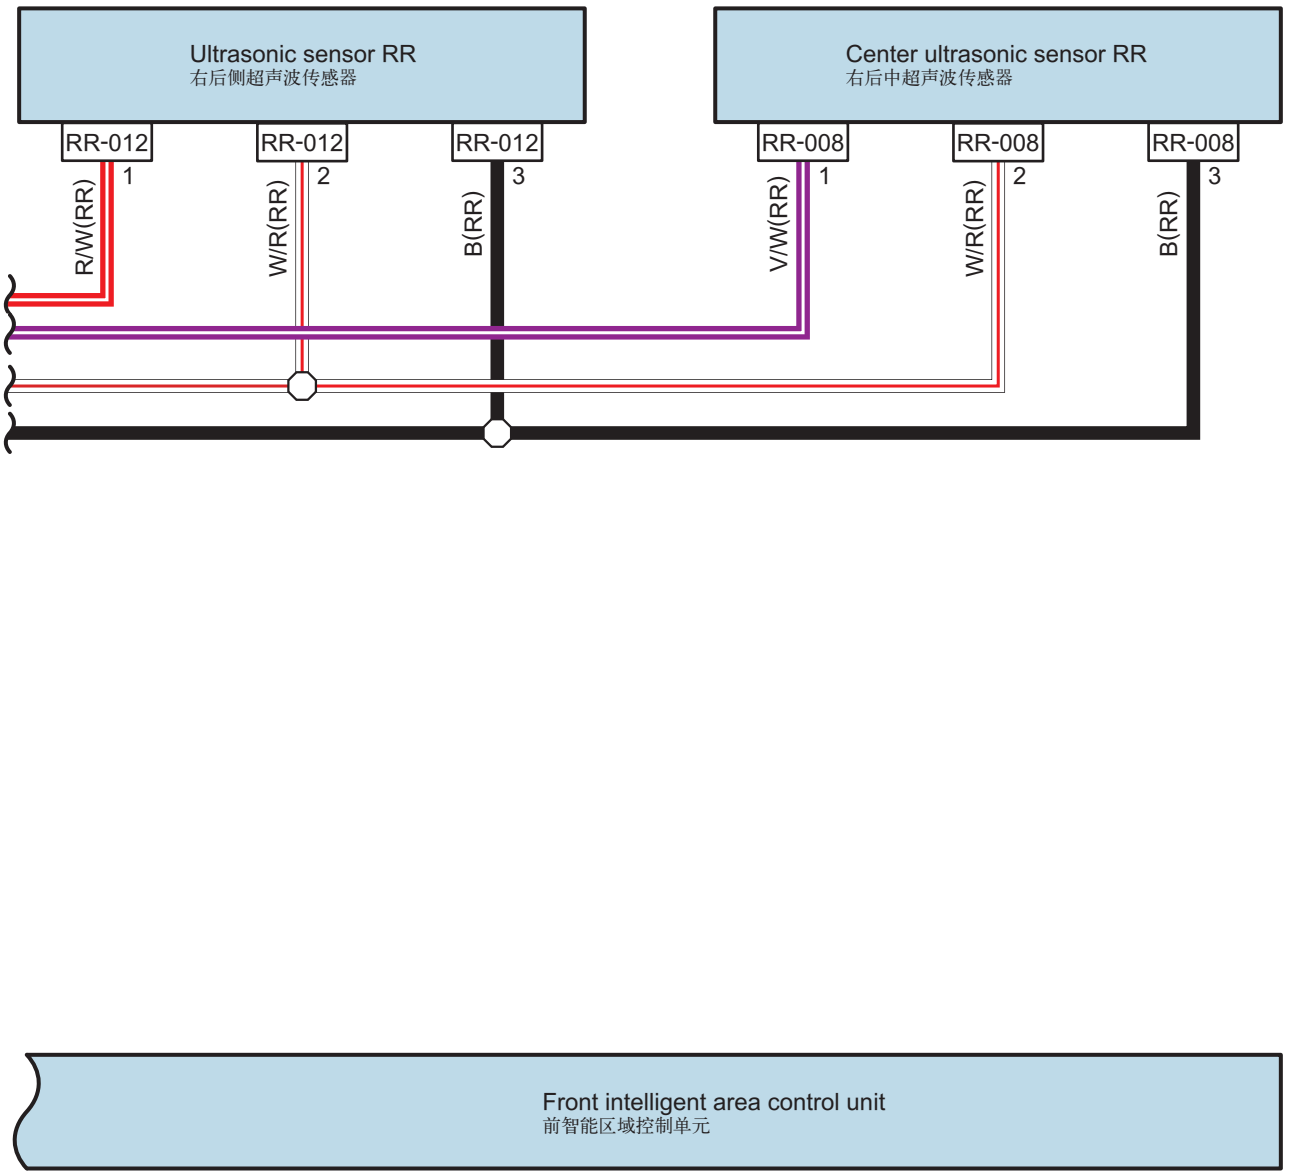

Electric power steering control unit
电动助力转向控制单元
F-017
B3
W(F)
Corner ultrasonic sensor FL
左前角超声波传感器
FF-003
1
2
3
L/W(FF)
P(FF)
B(FF)
C-15
4
5
2
L/W(F)
P(F)
B(F)
23a
C21
C10
F-015
F-015
Center ultrasonic sensor FL
左前中超声波传感器
FF-004
1
2
3
R/W(FF)
P(FF)
B(FF)
C-15
33
R/W(F)
B32
F-023
Front intelligent area control unit
前智能区域控制单元

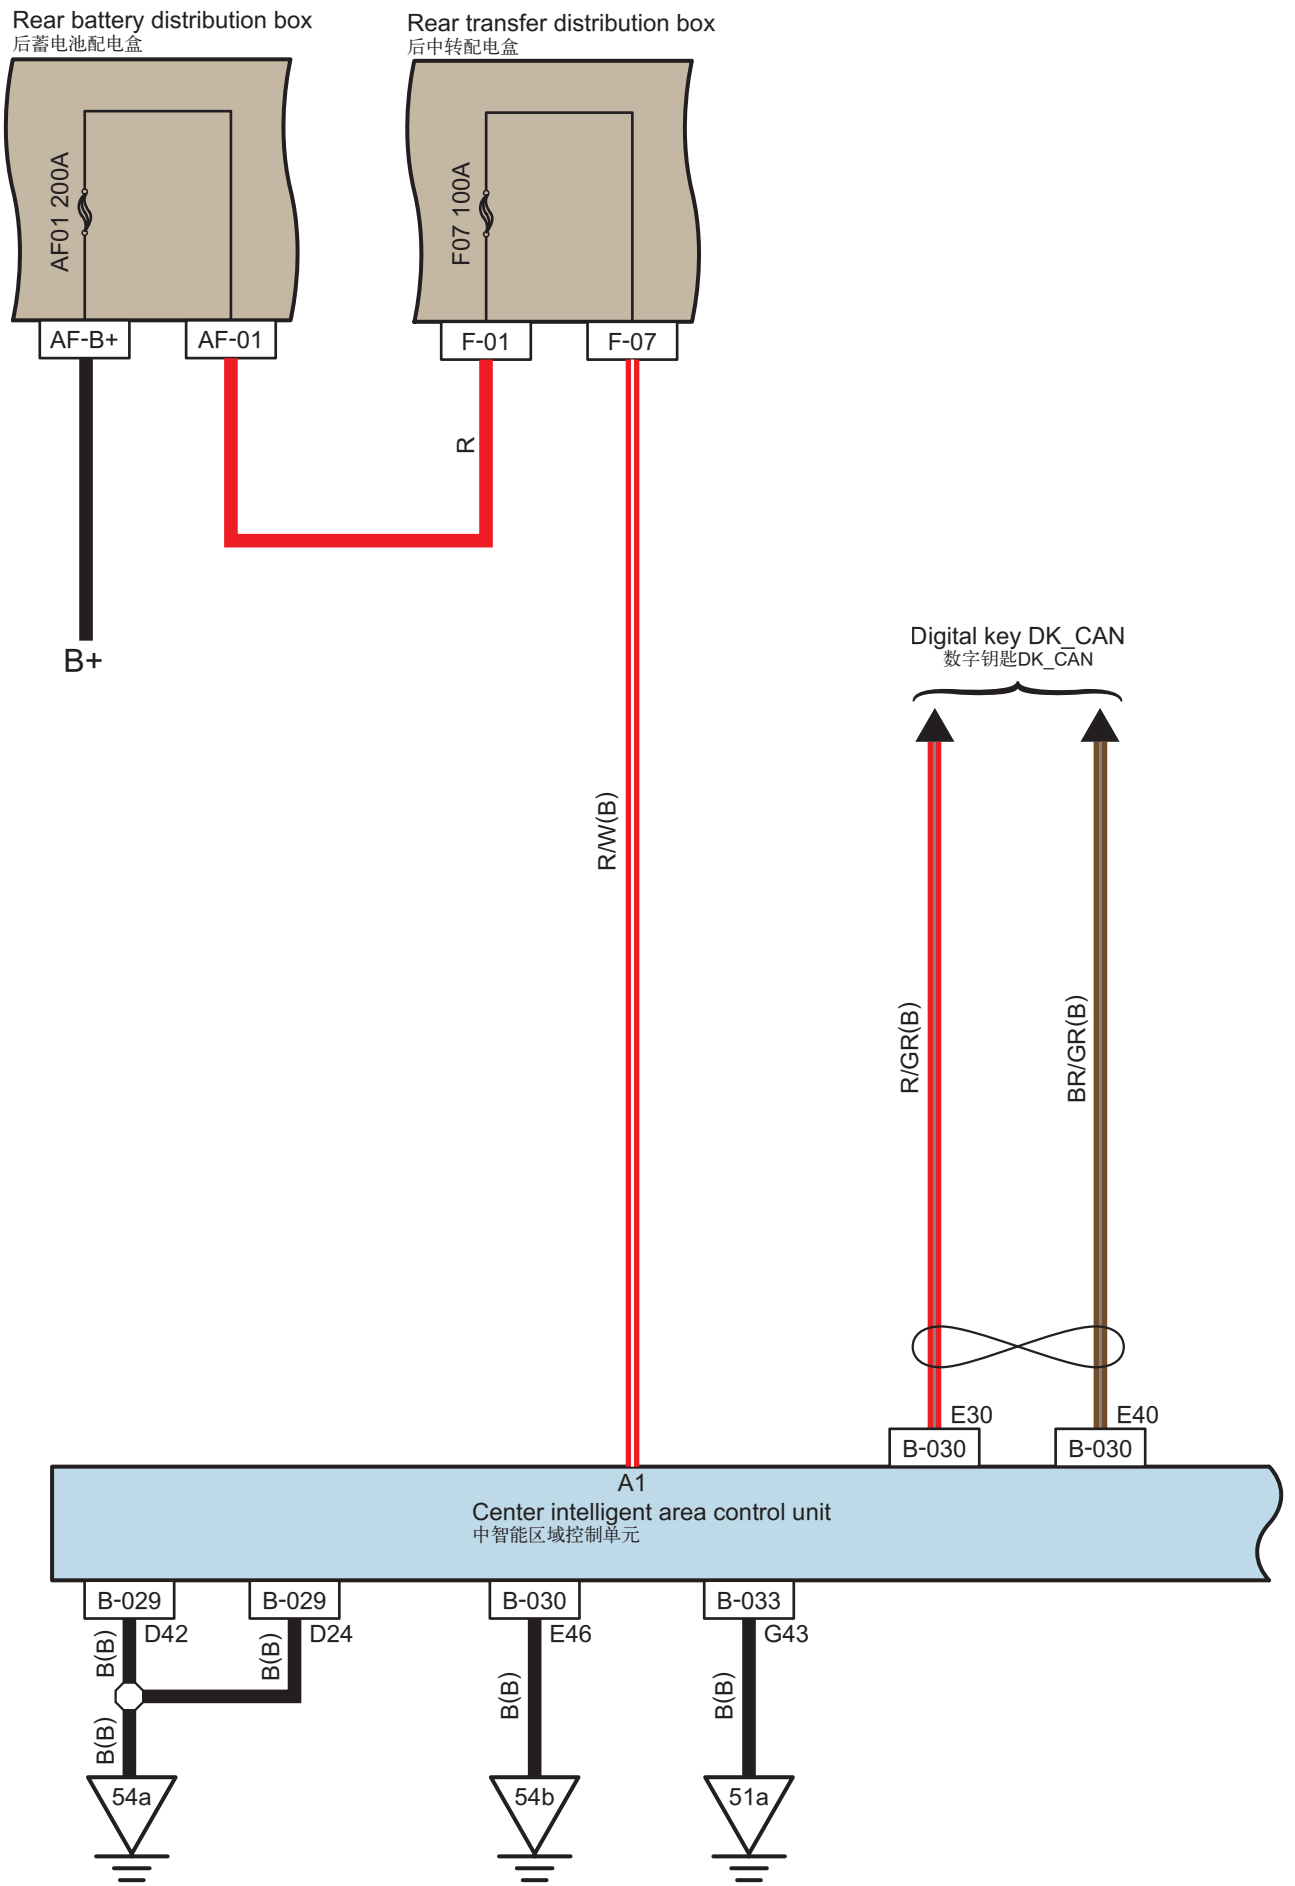

Ultrasonic sensor FL
左前侧超声波传感器
Corner ultrasonic sensor FR
右前角超声波传感器
FF-002
1
FF-002
2
FF-002
3
FF-009
1
FF-009
2
FF-009
3
V/W(FF)
P(FF)
B(FF)
L/W(FF)
R(FF)
B(FF)
B(FF)
C-15
2
V/W(FF)
C-15
7
V/W(F)
R(FF)
C-15
34
B(F)
23a
V/W(F)
C22
F-015
R(F)
C11
F-015
Front intelligent area control unit
前智能区域控制单元

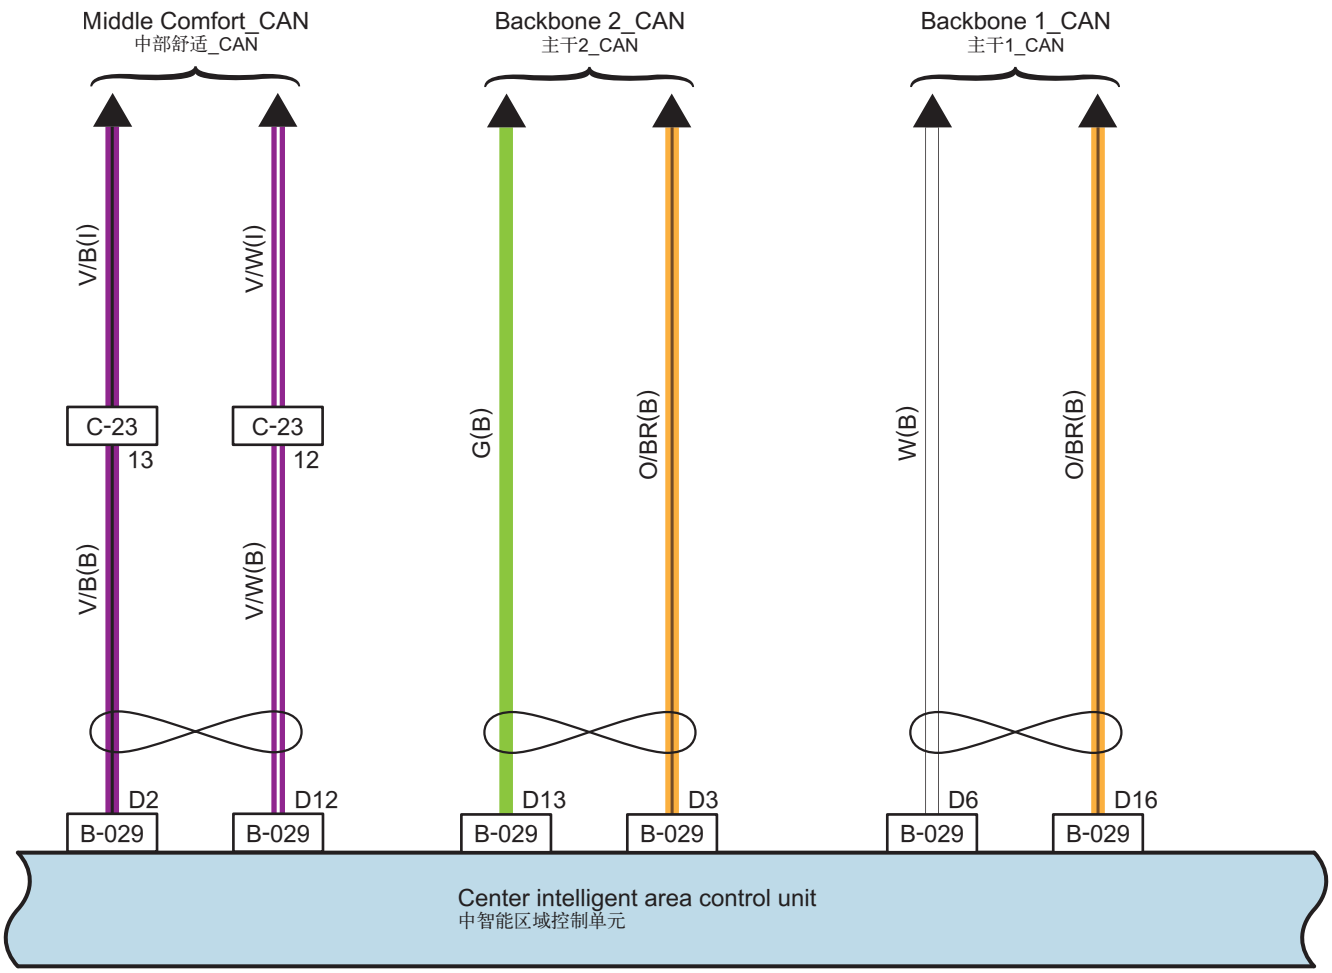

Center ultrasonic sensor FR
右前中超声波传感器
Ultrasonic sensor FR
右前侧超声波传感器
FF-008
1
FF-008
2
FF-008
3
FF-010
1
FF-010
2
FF-010
3
V/W(FF)
R(FF)
B(FF)
R/W(FF)
R(FF)
B(FF)
Front intelligent area control unit
前智能区域控制单元

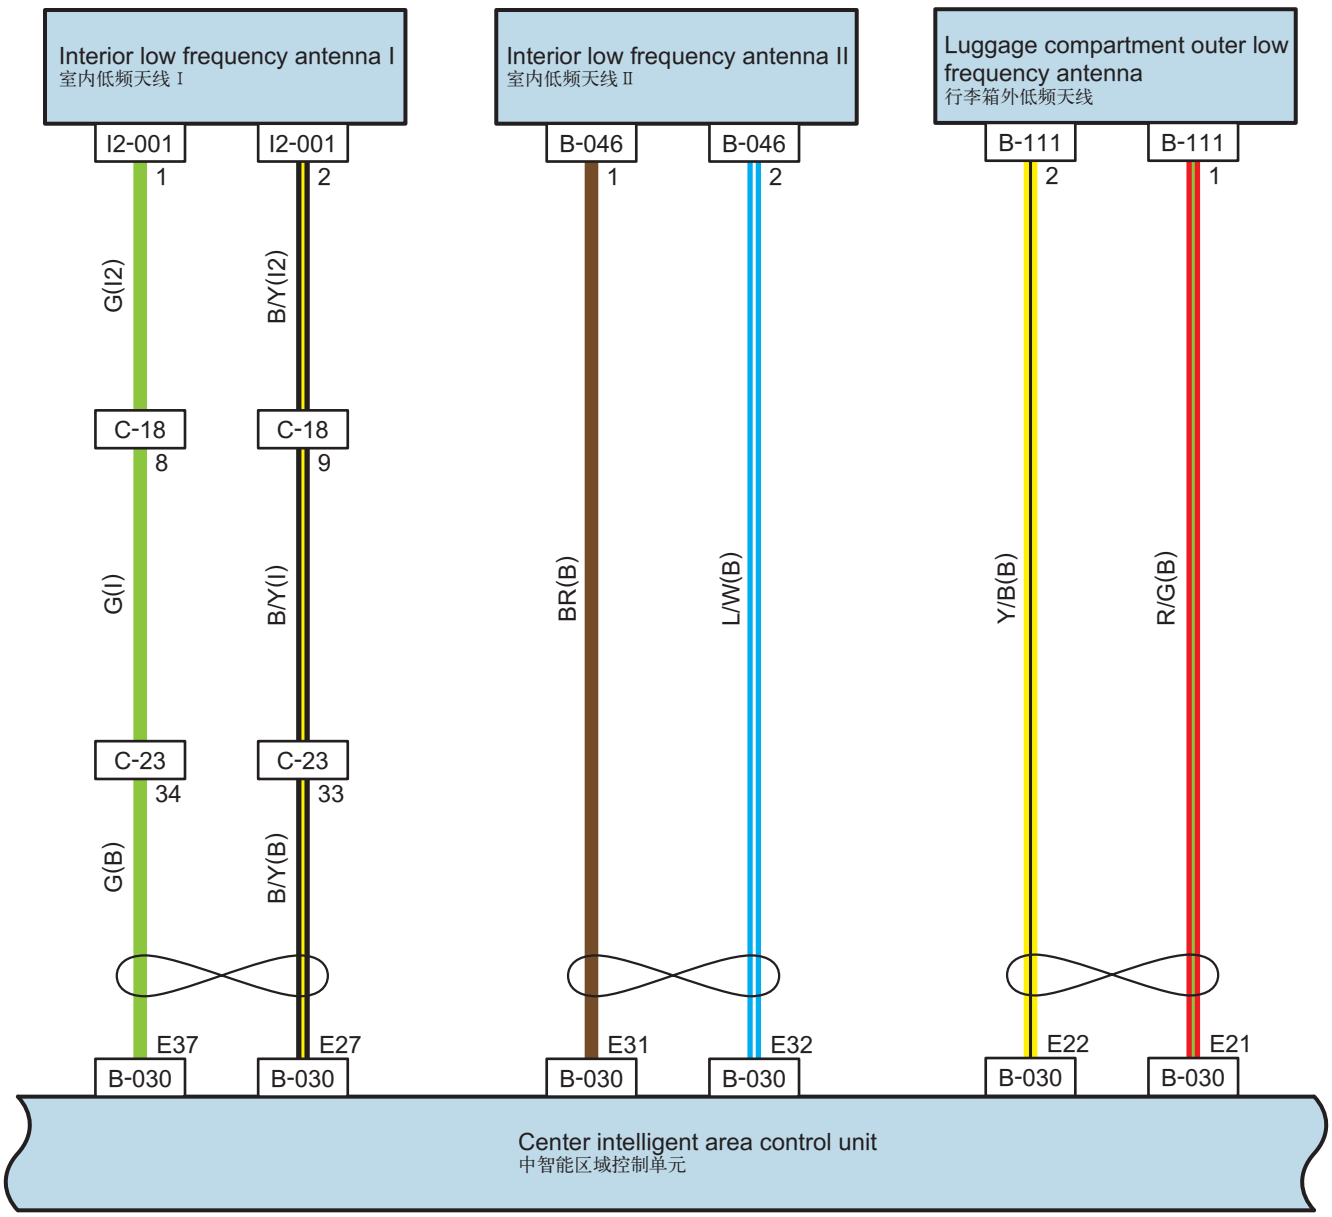

Center ultrasonic sensor RL
左后中超声波传感器
Ultrasonic sensor RL
左后侧超声波传感器
RR-007
1
RR-007
2
RR-007
3
RR-003
1
RR-003
2
RR-003
3
R/W(RR)
G/R(RR)
B(RR)
V/W(RR)
G/R(RR)
B(RR)
C-53
20
R/W(B)
C-02
31
R/W(F)
G/R(RR)
C-53
6
G/R(B)
B(RR)
C-53
5
B(B)
73a
C-53
4
V/W(B)
C-02
17
V/W(F)
C-02
8
G/R(F)
C12
F-015
Front intelligent area control unit
前智能区域控制单元

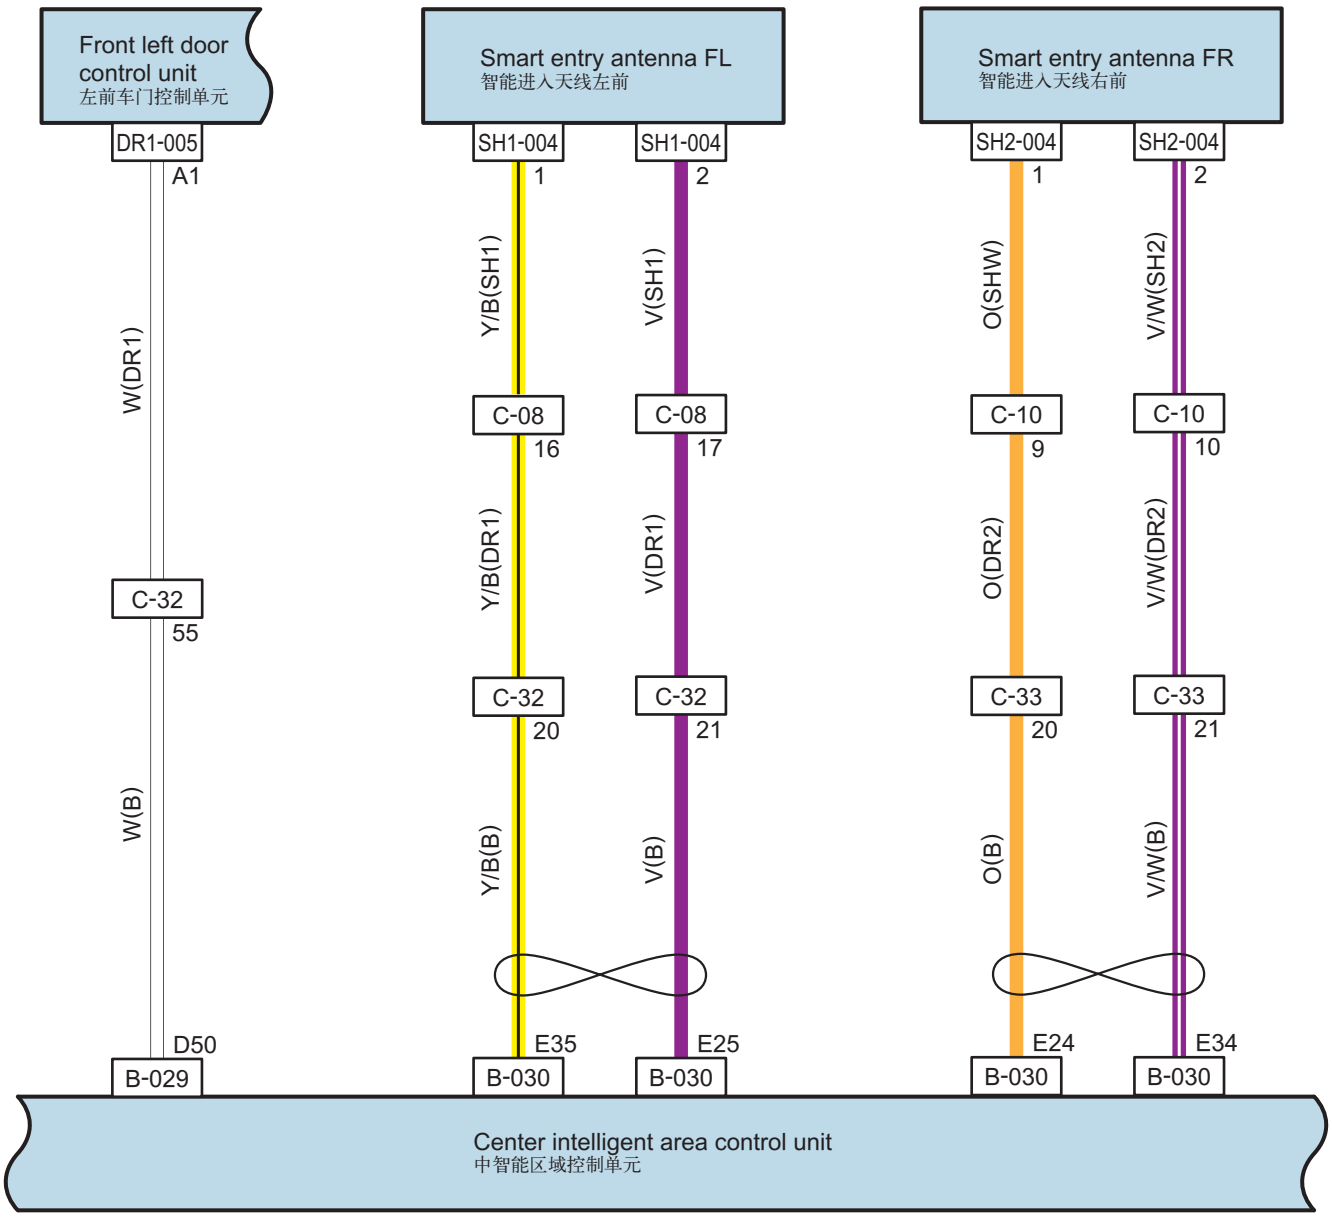

Corner ultrasonic sensor RL
左后角超声波传感器
Corner ultrasonic sensor RR
右后角超声波传感器
RR-004
1
RR-004
2
RR-004
3
RR-011
1
RR-011
2
RR-011
3
L/W(RR)
G/R(RR)
B(RR)
L/W(RR)
W/R(RR)
B(RR)
L/W(RR)
C-53
3
L/W(B)
C-02
5
L/W(F)
W/R(RR)
C-53
7
W/R(B)
C-02
4
W/R(F)
C13
F-015
B(RR)
C-53
5
B(B)
73a
Front intelligent area control unit
前智能区域控制单元

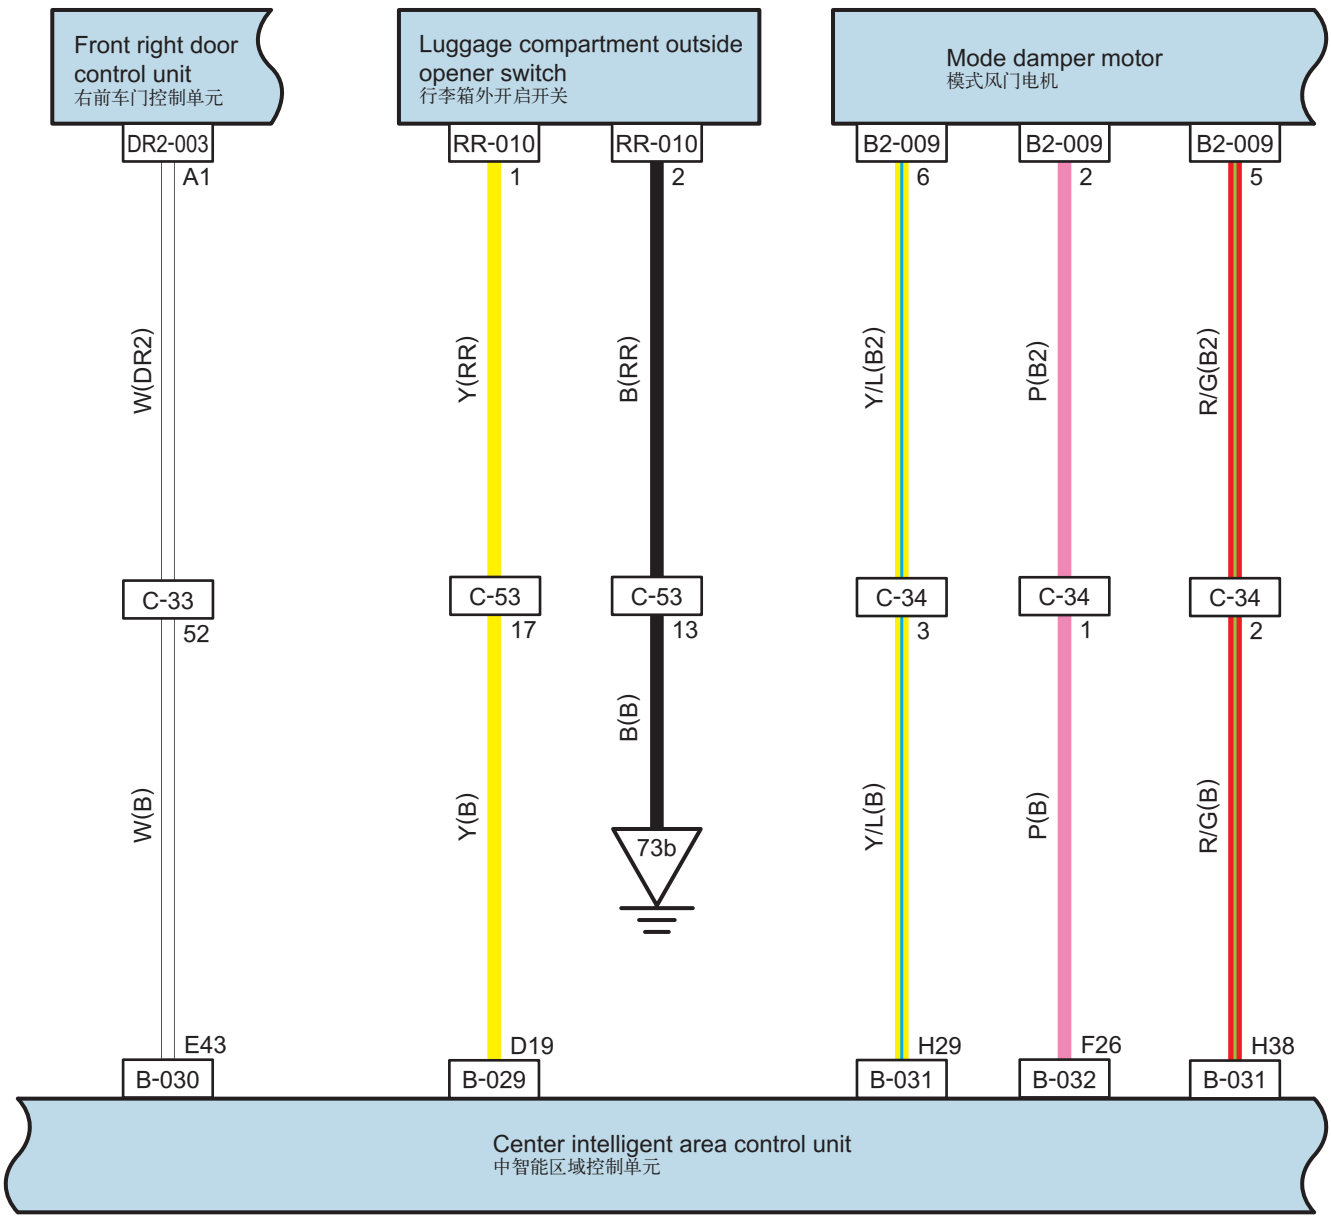

Ultrasonic sensor RR
右后侧超声波传感器
Center ultrasonic sensor RR
右后中超声波传感器
RR-012
1
RR-012
2
RR-012
3
RR-008
1
RR-008
2
RR-008
3
R/W(RR)
W/R(RR)
B(RR)
V/W(RR)
W/R(RR)
B(RR)
Front intelligent area control unit
前智能区域控制单元

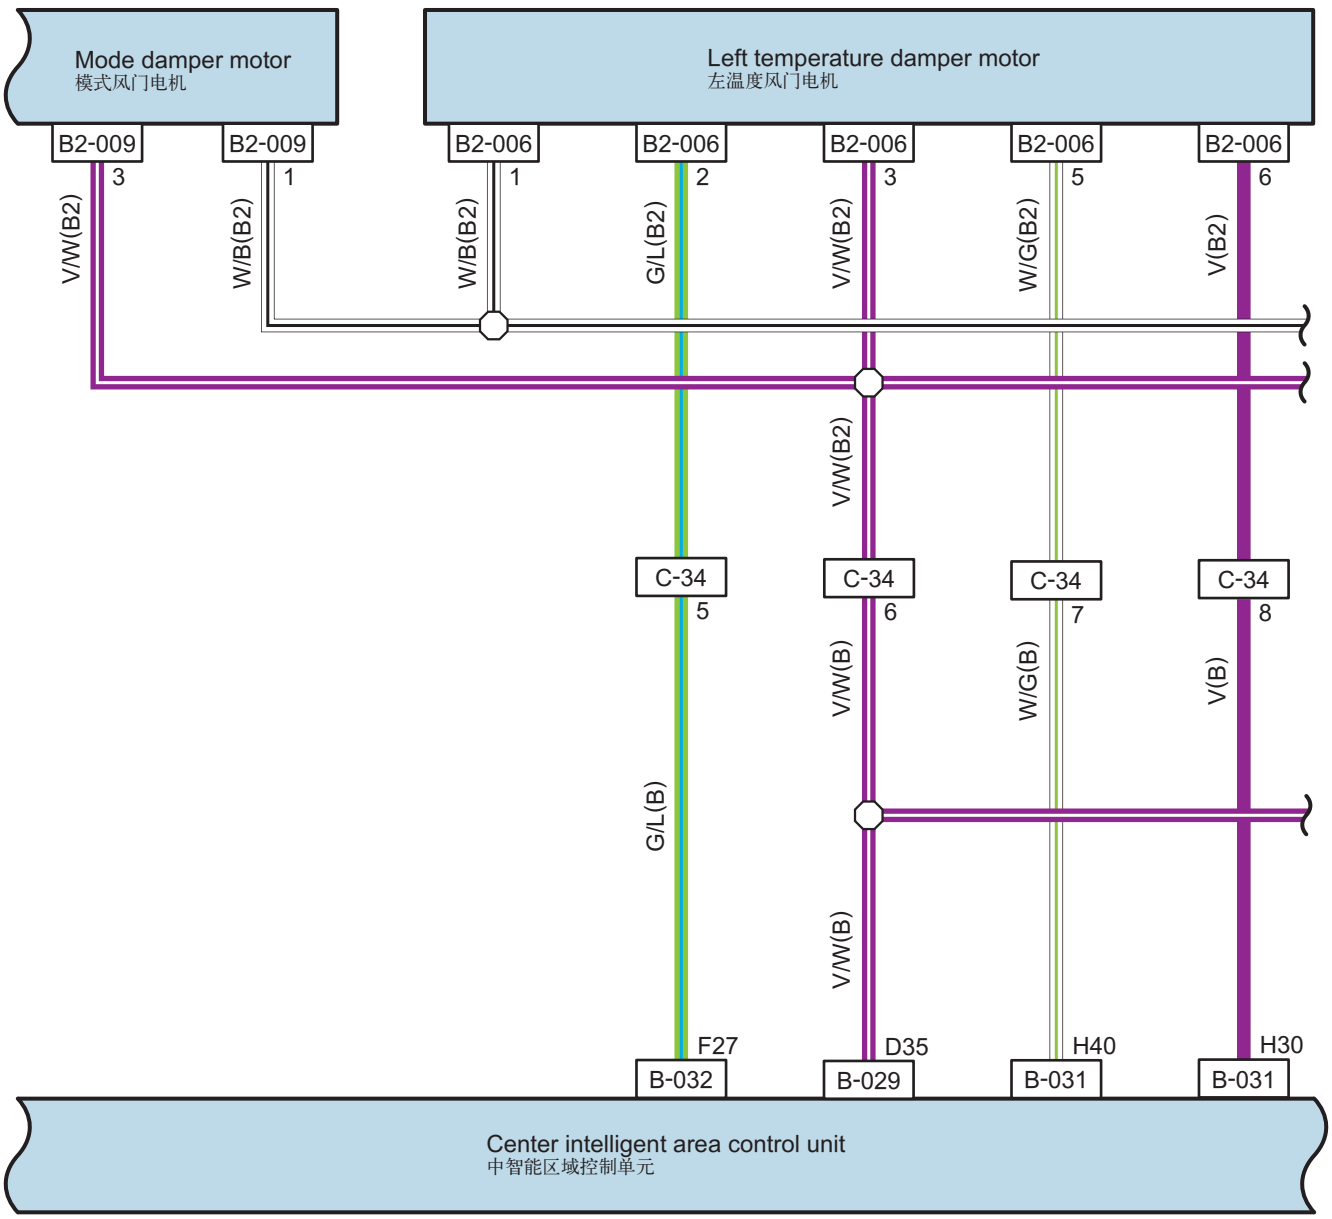

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
R
Rear transfer distribution box
后中转配电盒
F07 100A
F-01
F-07
R/W(B)
Digital key DK_CAN
数字钥匙DK_CAN
R/GR(B)
BR/GR(B)
E30
E40
B-030
B-030
A1
Center intelligent area control unit
中智能区域控制单元
B-029
B-029
B-030
B-033
D42
D24
E46
G43
B(B)
B(B)
B(B)
B(B)
B(B)
54a
54b
51a

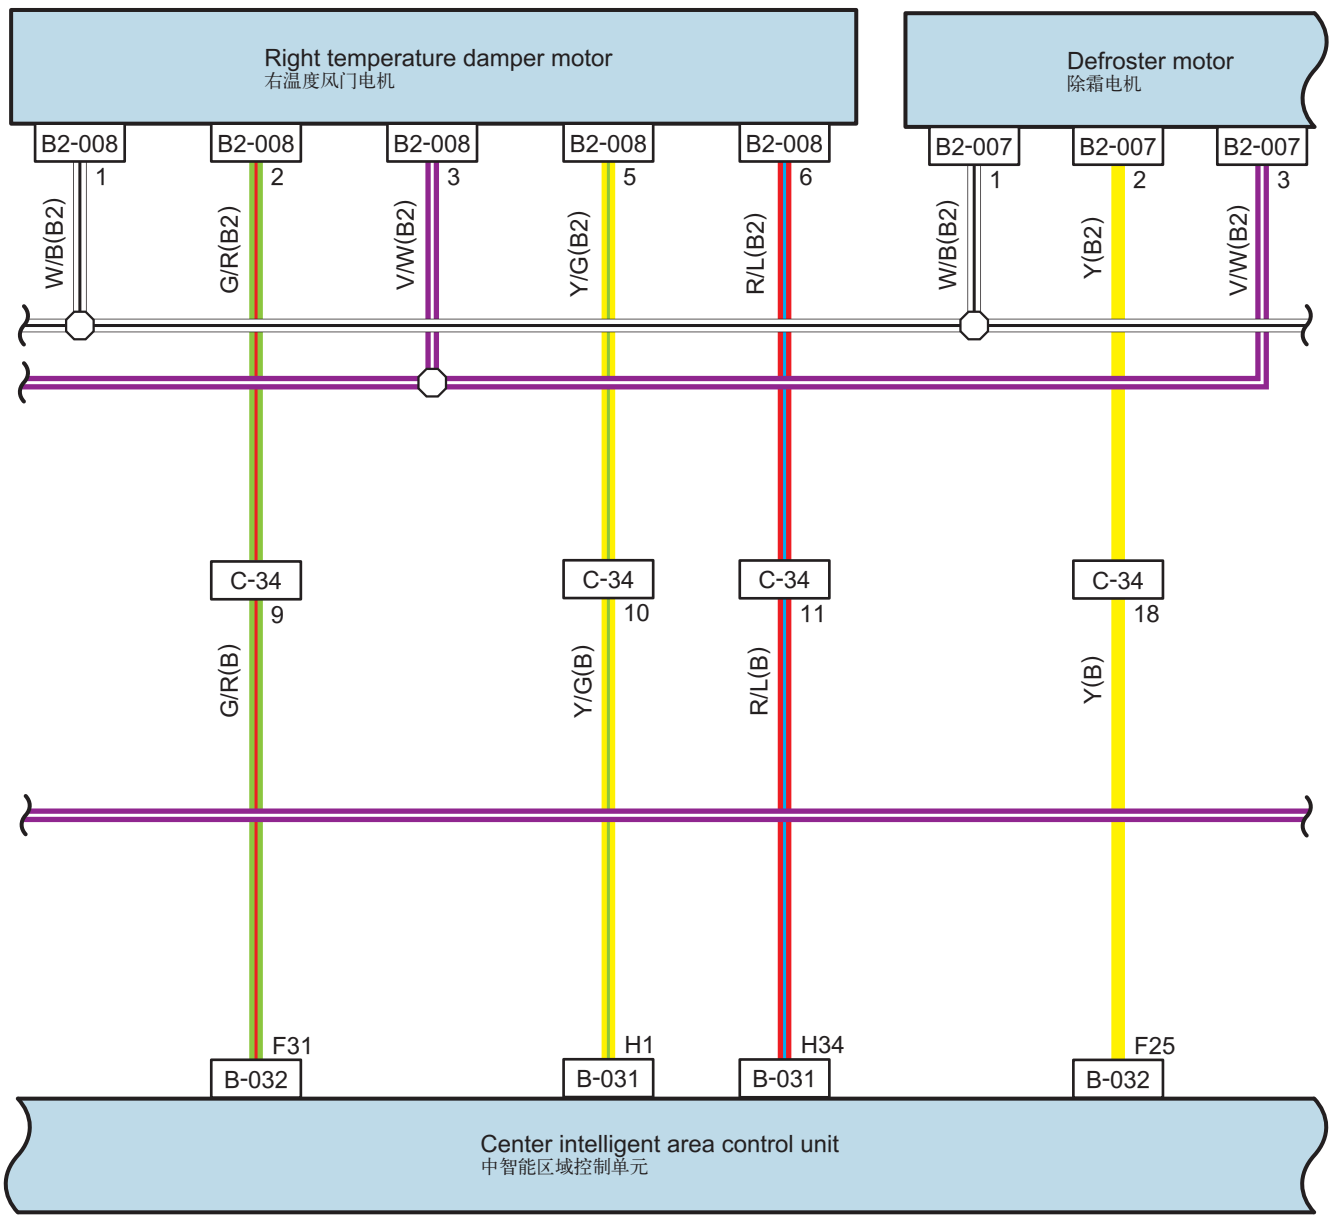

Middle Comfort_CAN
中部舒适_CAN
Backbone 2_CAN
主干2_CAN
Backbone 1_CAN
主干1_CAN
V/B(I)
V/W(I)
G(B)
O/BR(B)
W(B)
O/BR(B)
C-23
13
C-23
12
V/B(B)
V/W(B)
D2
D12
D13
D3
D6
D16
B-029
B-029
B-029
B-029
B-029
B-029
Center intelligent area control unit
中智能区域控制单元

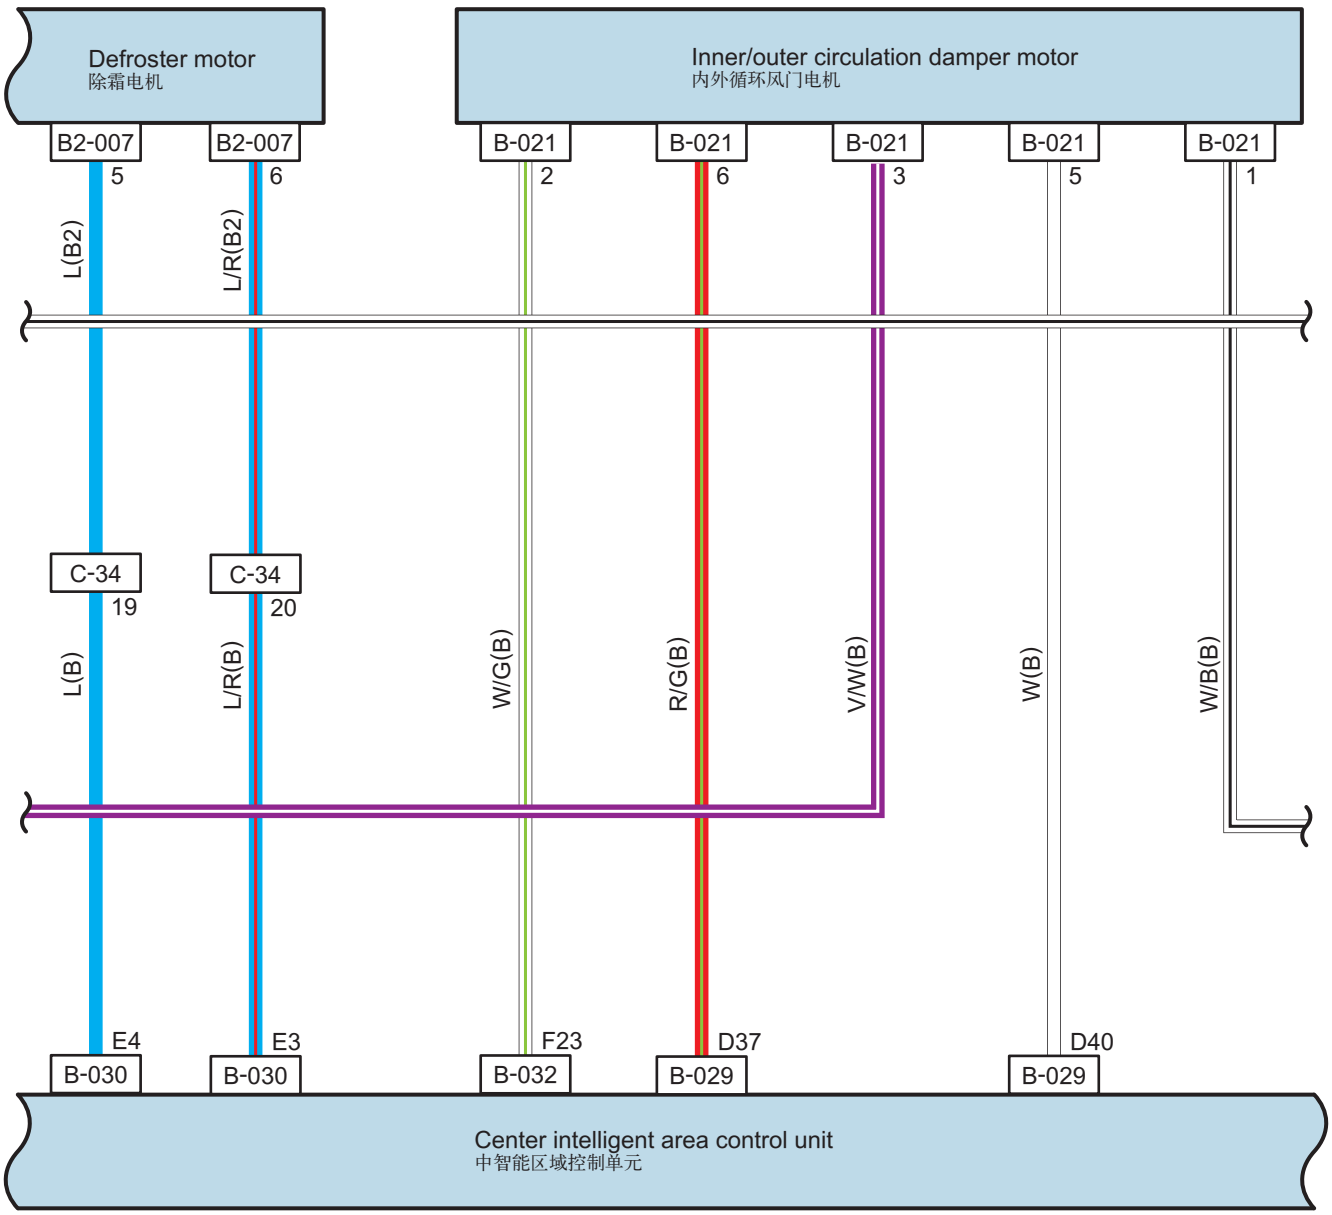

Interior low frequency antenna I
室内低频天线 I
Interior low frequency antenna II
室内低频天线 II
Luggage compartment outer low frequency antenna
行李箱外低频天线
I2-001
1
I2-001
2
B-046
1
B-046
2
B-111
2
B-111
1
G(I2)
B/Y(I2)
BR(B)
L/W(B)
Y/B(B)
R/G(B)
C-18
8
C-18
9
G(I)
B/Y(I)
C-23
34
C-23
33
G(B)
B/Y(B)
E37
E27
E31
E32
E22
E21
B-030
B-030
B-030
B-030
B-030
B-030
Center intelligent area control unit
中智能区域控制单元

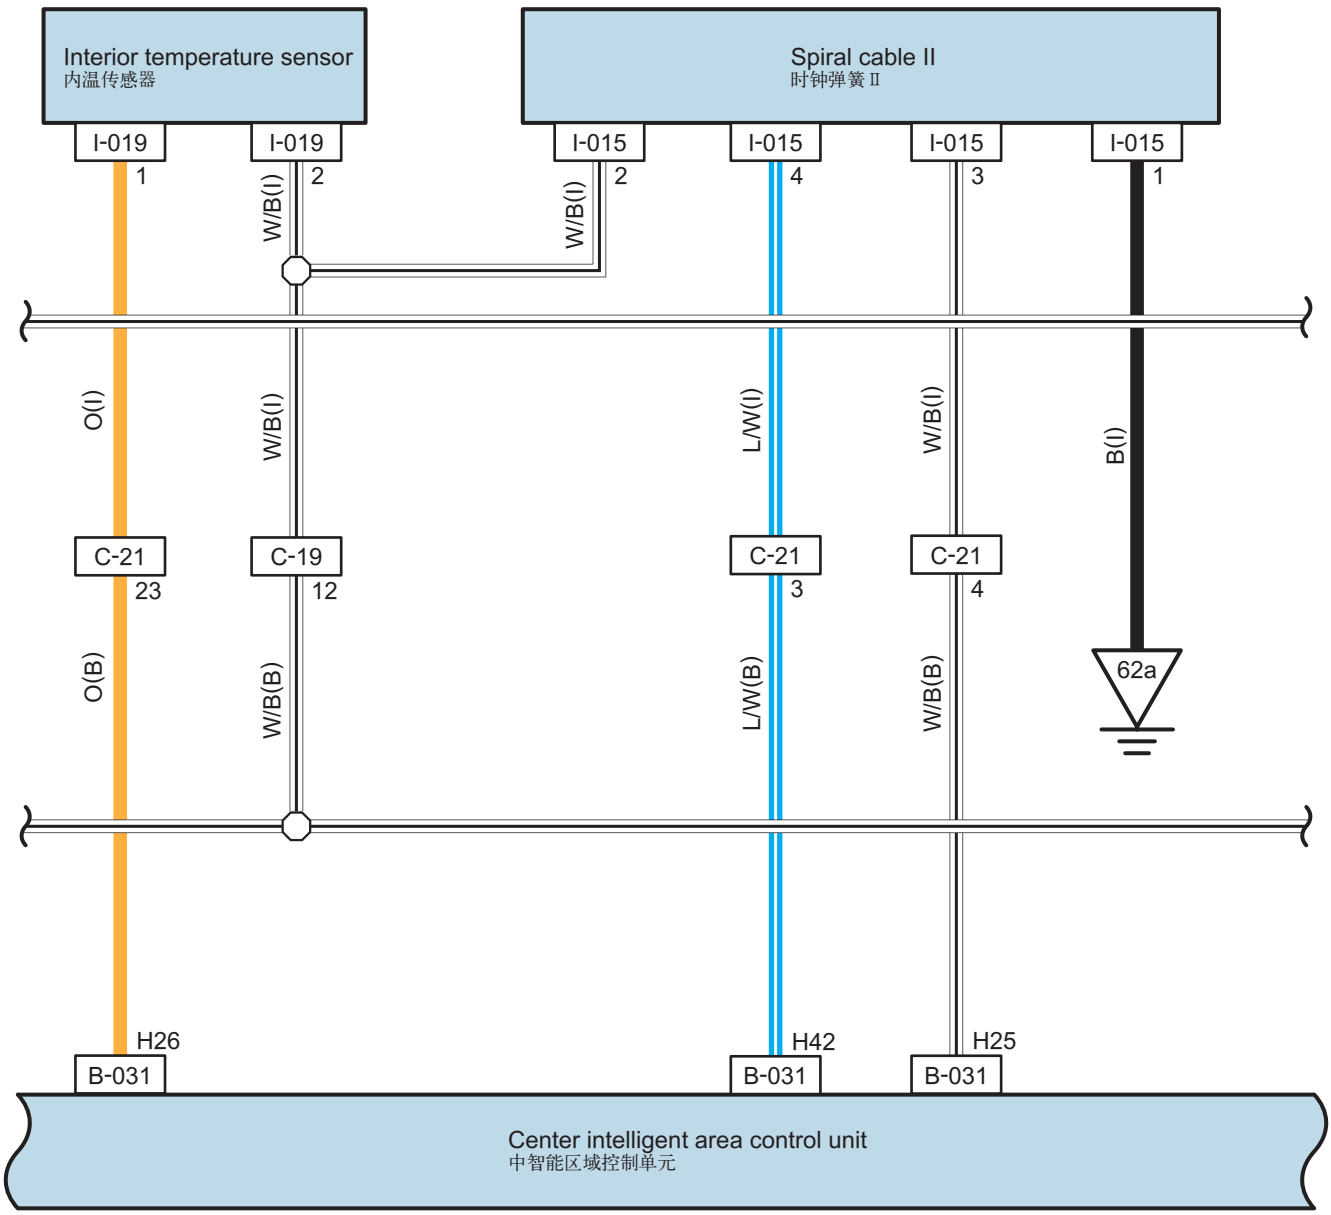

Front left door control unit
左前车门控制单元
DR1-005
A1
W(DR1)
C-32
55
W(B)
D50
B-029
Smart entry antenna FL
智能进入天线左前
SH1-004
1
SH1-004
2
Y/B(SH1)
V(SH1)
C-08
16
C-08
17
Y/B(DR1)
V(DR1)
C-32
20
C-32
21
Y/B(B)
V(B)
E35
E25
B-030
B-030
Smart entry antenna FR
智能进入天线右前
SH2-004
1
SH2-004
2
O(SHW)
V/W(SH2)
C-10
9
C-10
10
O(DR2)
V/W(DR2)
C-33
20
C-33
21
O(B)
V/W(B)
E24
E34
B-030
B-030
Center intelligent area control unit
中智能区域控制单元

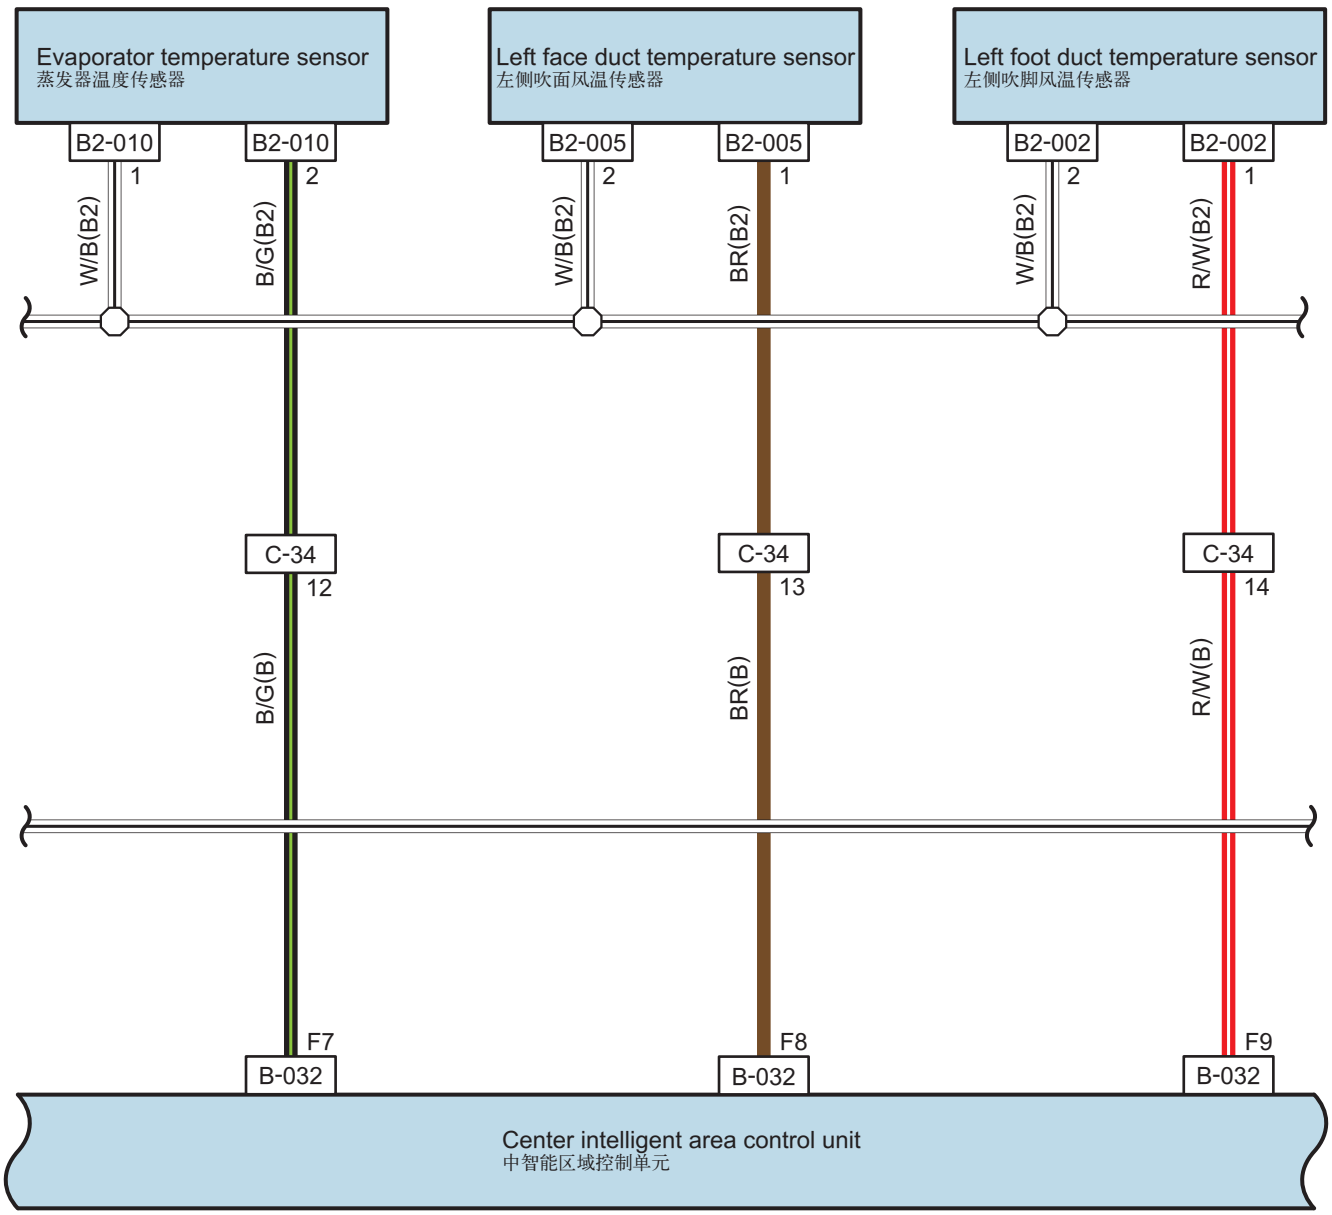

Front right door control unit
右前车门控制单元
DR2-003
A1
W(DR2)
C-33
52
W(B)
E43
B-030
Luggage compartment outside opener switch
行李箱外开启开关
RR-010
1
Y(RR)
C-53
17
Y(B)
D19
B-029
RR-010
2
B(RR)
C-53
13
B(B)
73b
Mode damper motor
模式风门电机
B2-009
6
Y/L(B2)
C-34
3
Y/L(B)
H29
B-031
B2-009
2
P(B2)
C-34
1
P(B)
F26
B-032
B2-009
5
R/G(B2)
C-34
2
R/G(B)
H38
B-031
Center intelligent area control unit
中智能区域控制单元

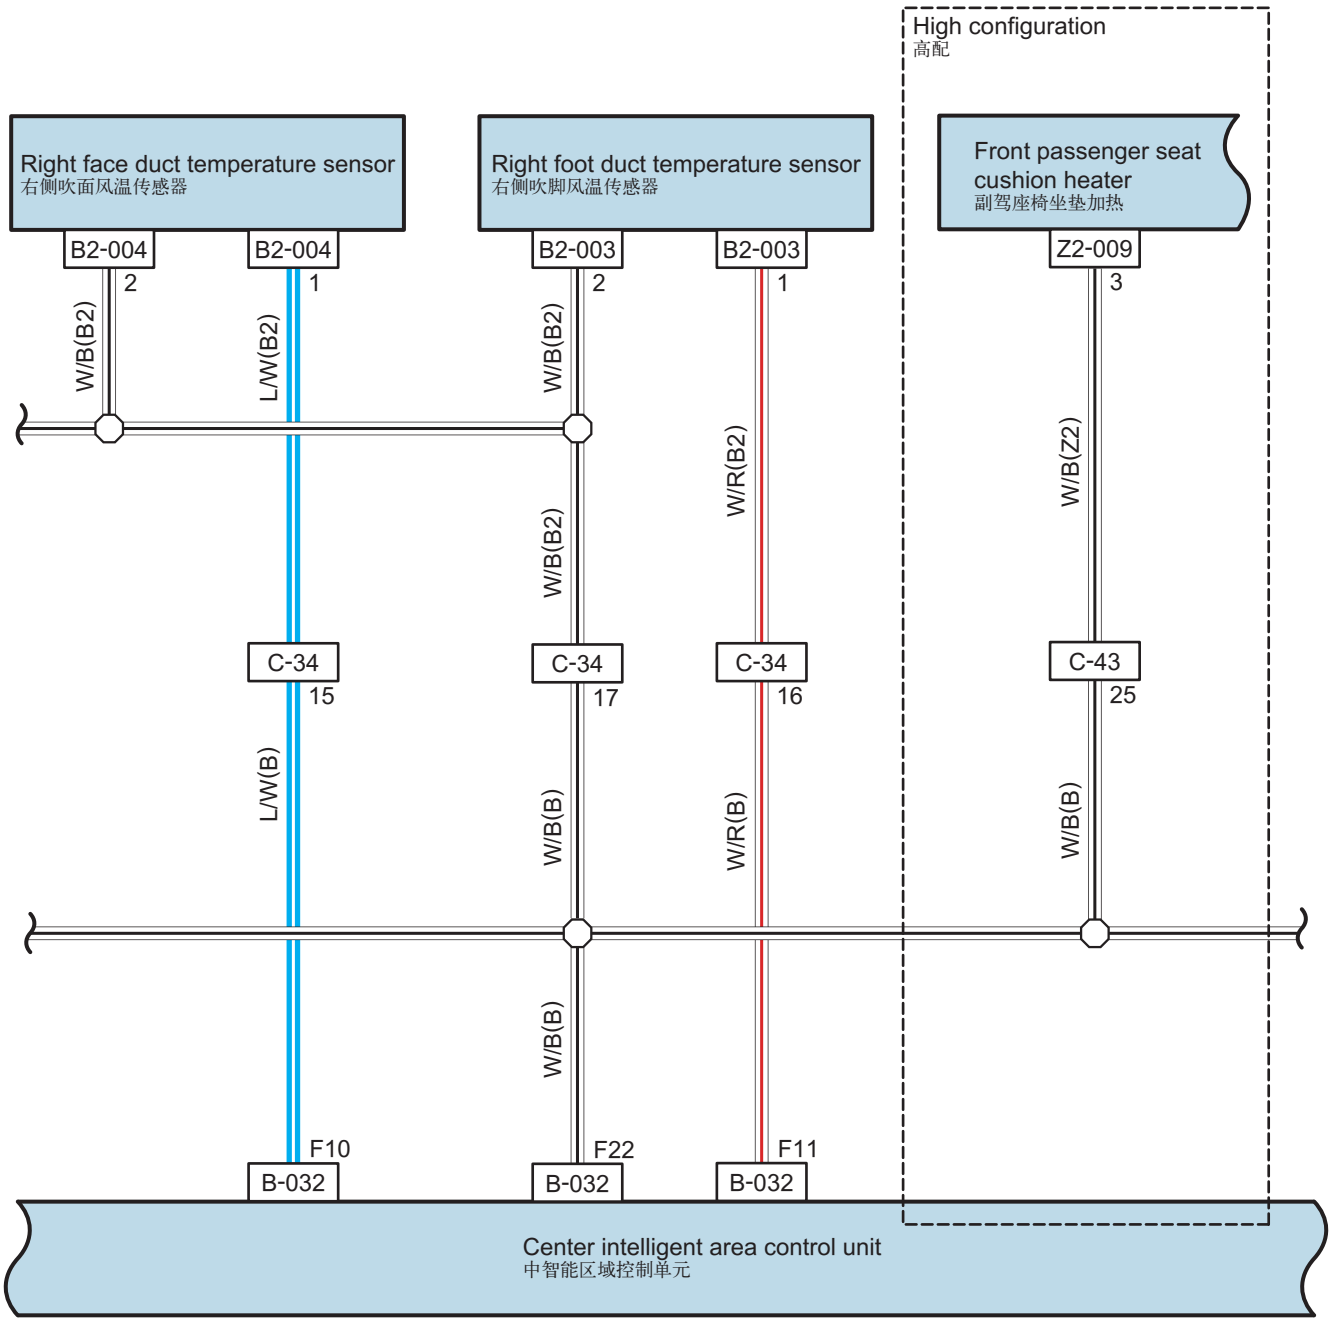

Mode damper motor
模式风门电机
Left temperature damper motor
左温度风门电机
B2-009
3
B2-009
1
B2-006
1
B2-006
2
B2-006
3
B2-006
5
B2-006
6
V/W(B2)
W/B(B2)
W/B(B2)
G/L(B2)
V/W(B2)
W/G(B2)
V(B2)
V/W(B2)
C-34
5
C-34
6
C-34
7
C-34
8
V/W(B)
W/G(B)
V(B)
G/L(B)
V/W(B)
F27
D35
H40
H30
B-032
B-029
B-031
B-031
Center intelligent area control unit
中智能区域控制单元

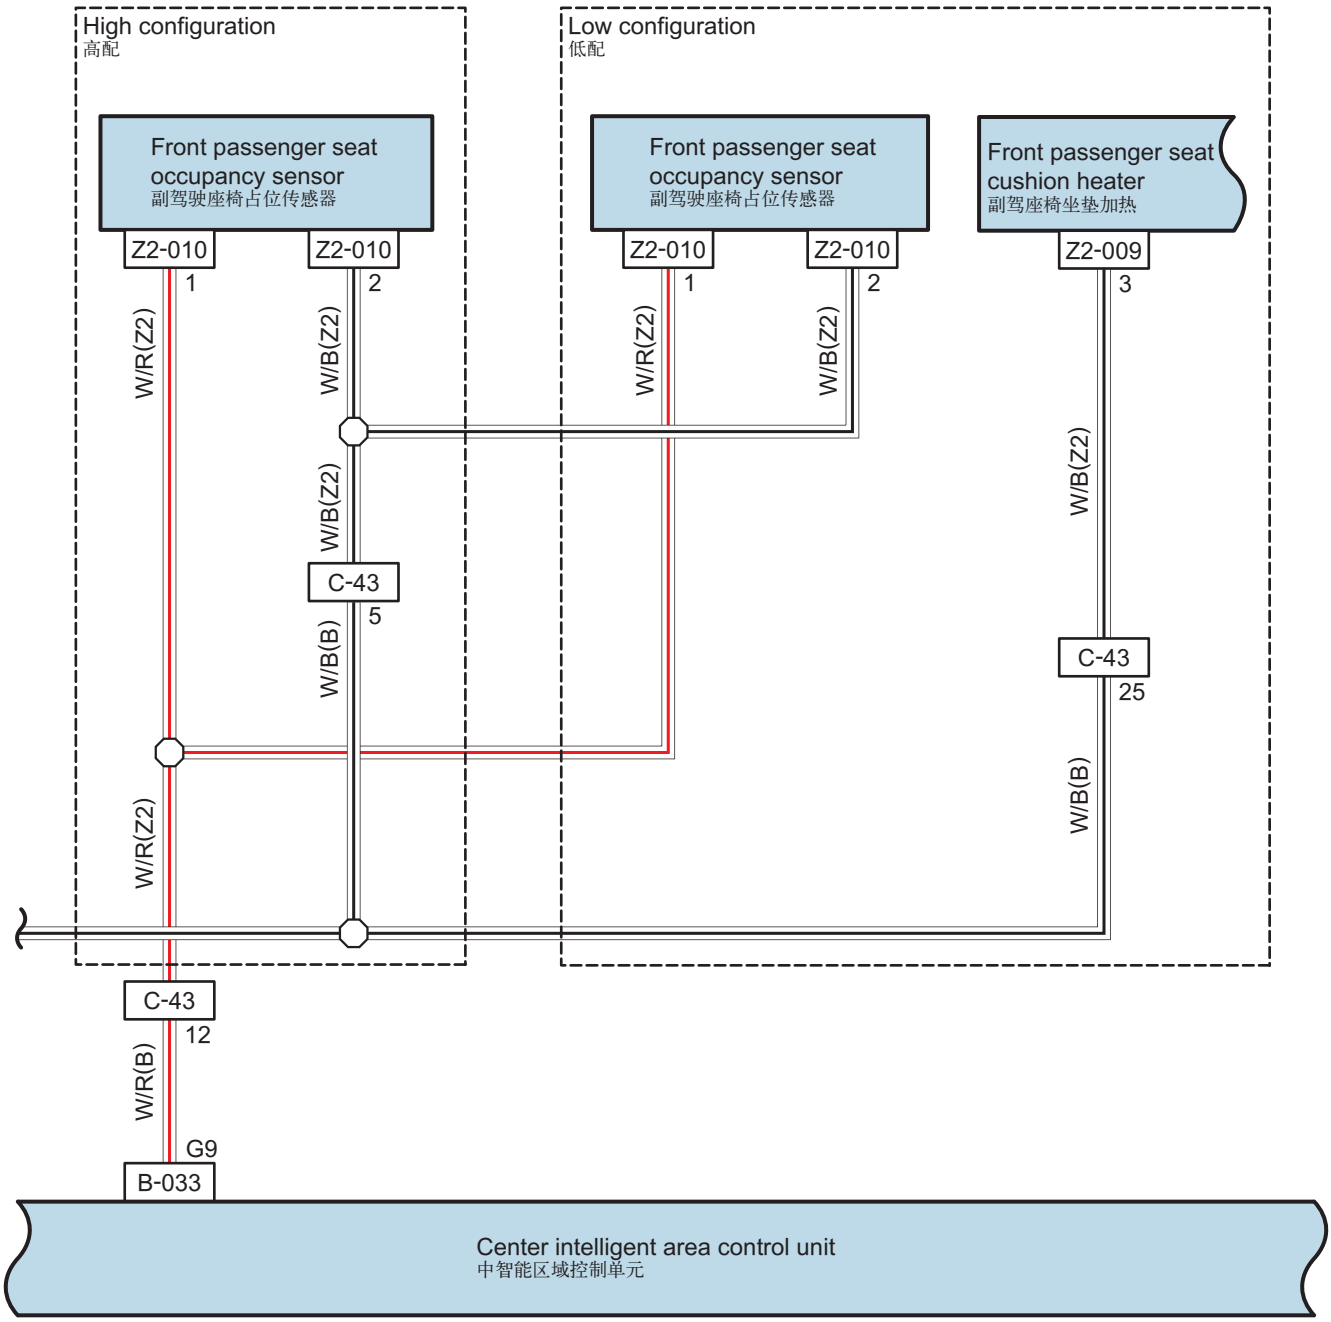

Right temperature damper motor
右温度风门电机
Defroster motor
除霜电机
B2-008
1
B2-008
2
B2-008
3
B2-008
5
B2-008
6
B2-007
1
B2-007
2
B2-007
3
W/B(B2)
G/R(B2)
V/W(B2)
Y/G(B2)
R/L(B2)
W/B(B2)
Y(B2)
V/W(B2)
C-34
9
C-34
10
C-34
11
C-34
18
G/R(B)
Y/G(B)
R/L(B)
Y(B)
F31
H1
H34
F25
B-032
B-031
B-031
B-032
Center intelligent area control unit
中智能区域控制单元

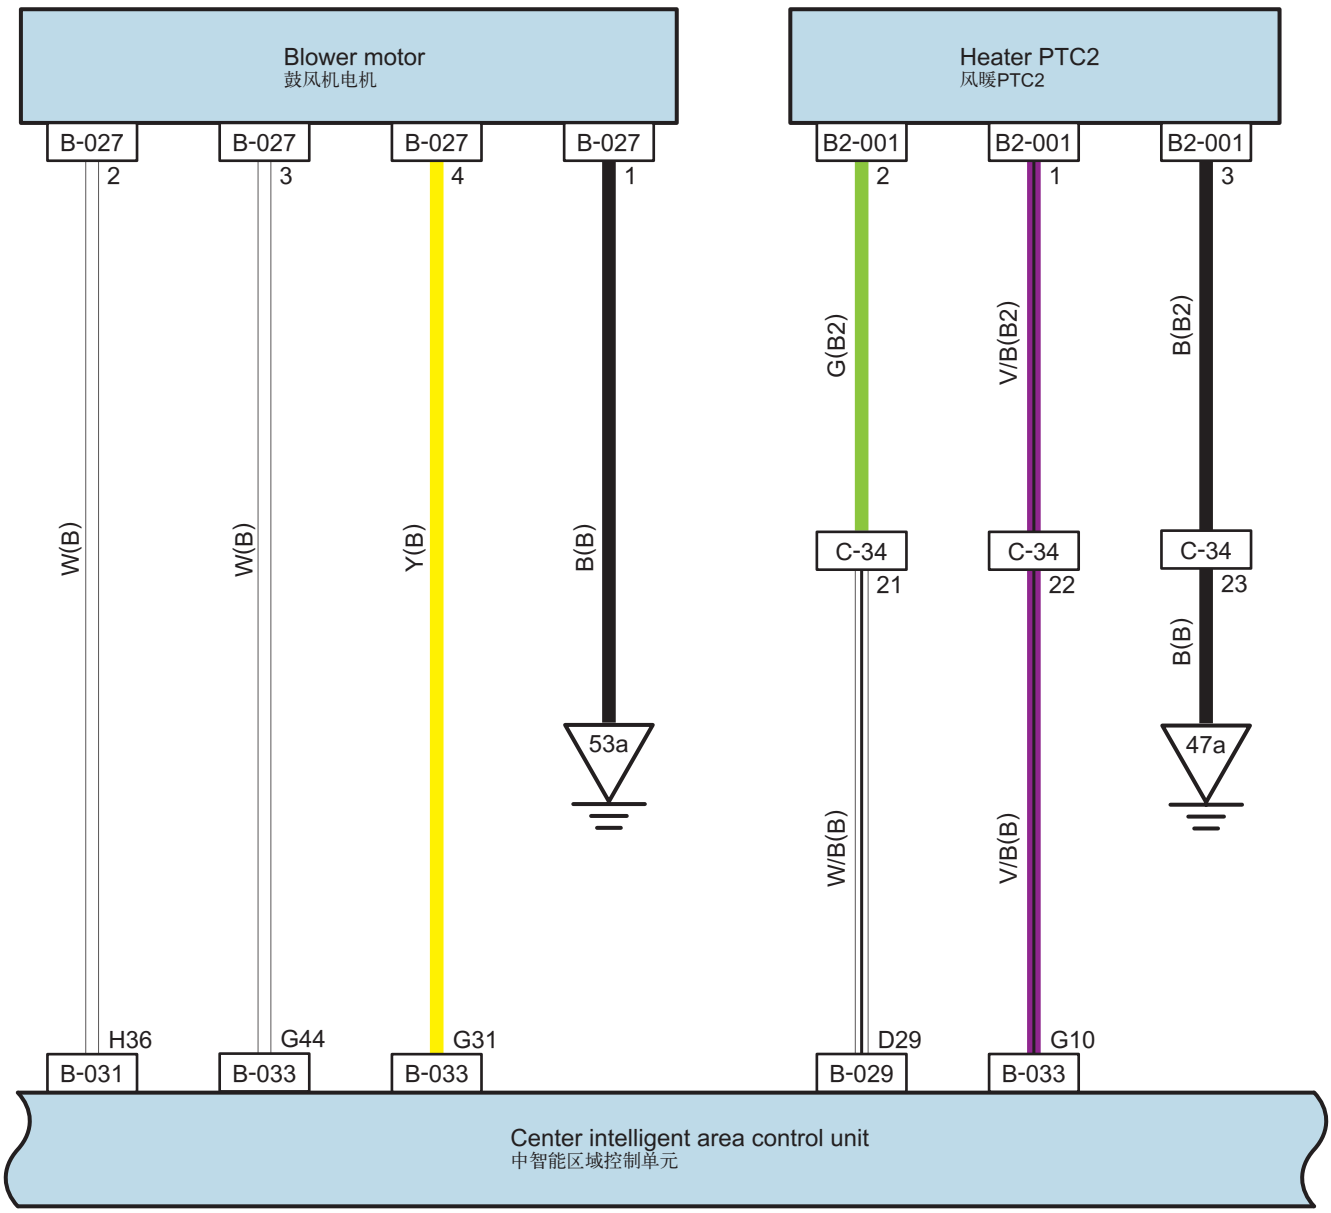

Defroster motor
除霜电机
Inner/outer circulation damper motor
内外循环风门电机
B2-007
5
B2-007
6
B-021
2
B-021
6
B-021
3
B-021
5
B-021
1
L(B2)
L/R(B2)
C-34
19
C-34
20
L(B)
L/R(B)
W/G(B)
R/G(B)
V/W(B)
W(B)
W/B(B)
E4
E3
F23
D37
D40
B-030
B-030
B-032
B-029
B-029
Center intelligent area control unit
中智能区域控制单元

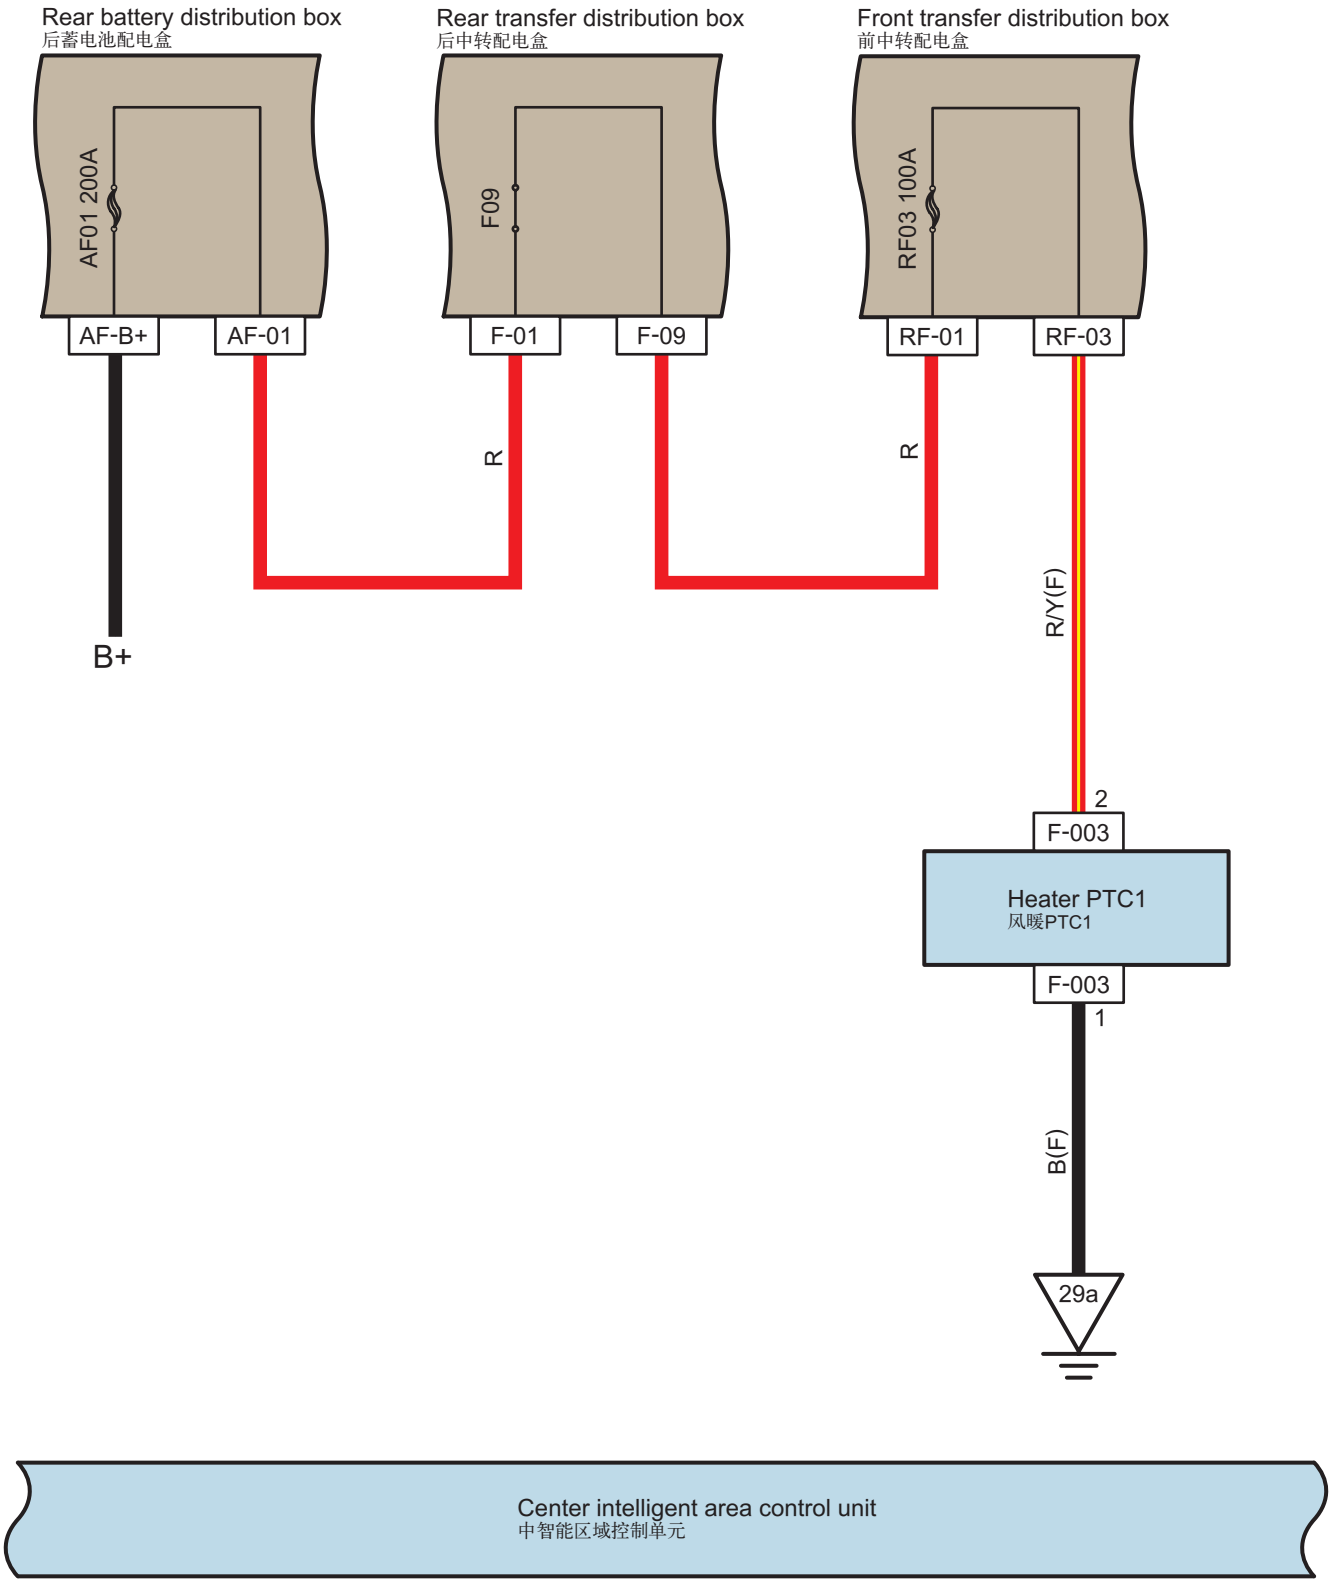

Interior temperature sensor
内温传感器
Spiral cable II
时钟弹簧 II
I-019
1
I-019
2
I-015
2
I-015
4
I-015
3
I-015
1
W/B(I)
W/B(I)
O(I)
W/B(I)
L/W(I)
W/B(I)
B(I)
C-21
23
C-19
12
C-21
3
C-21
4
62a
O(B)
W/B(B)
L/W(B)
W/B(B)
H26
H42
H25
B-031
B-031
B-031
Center intelligent area control unit
中智能区域控制单元

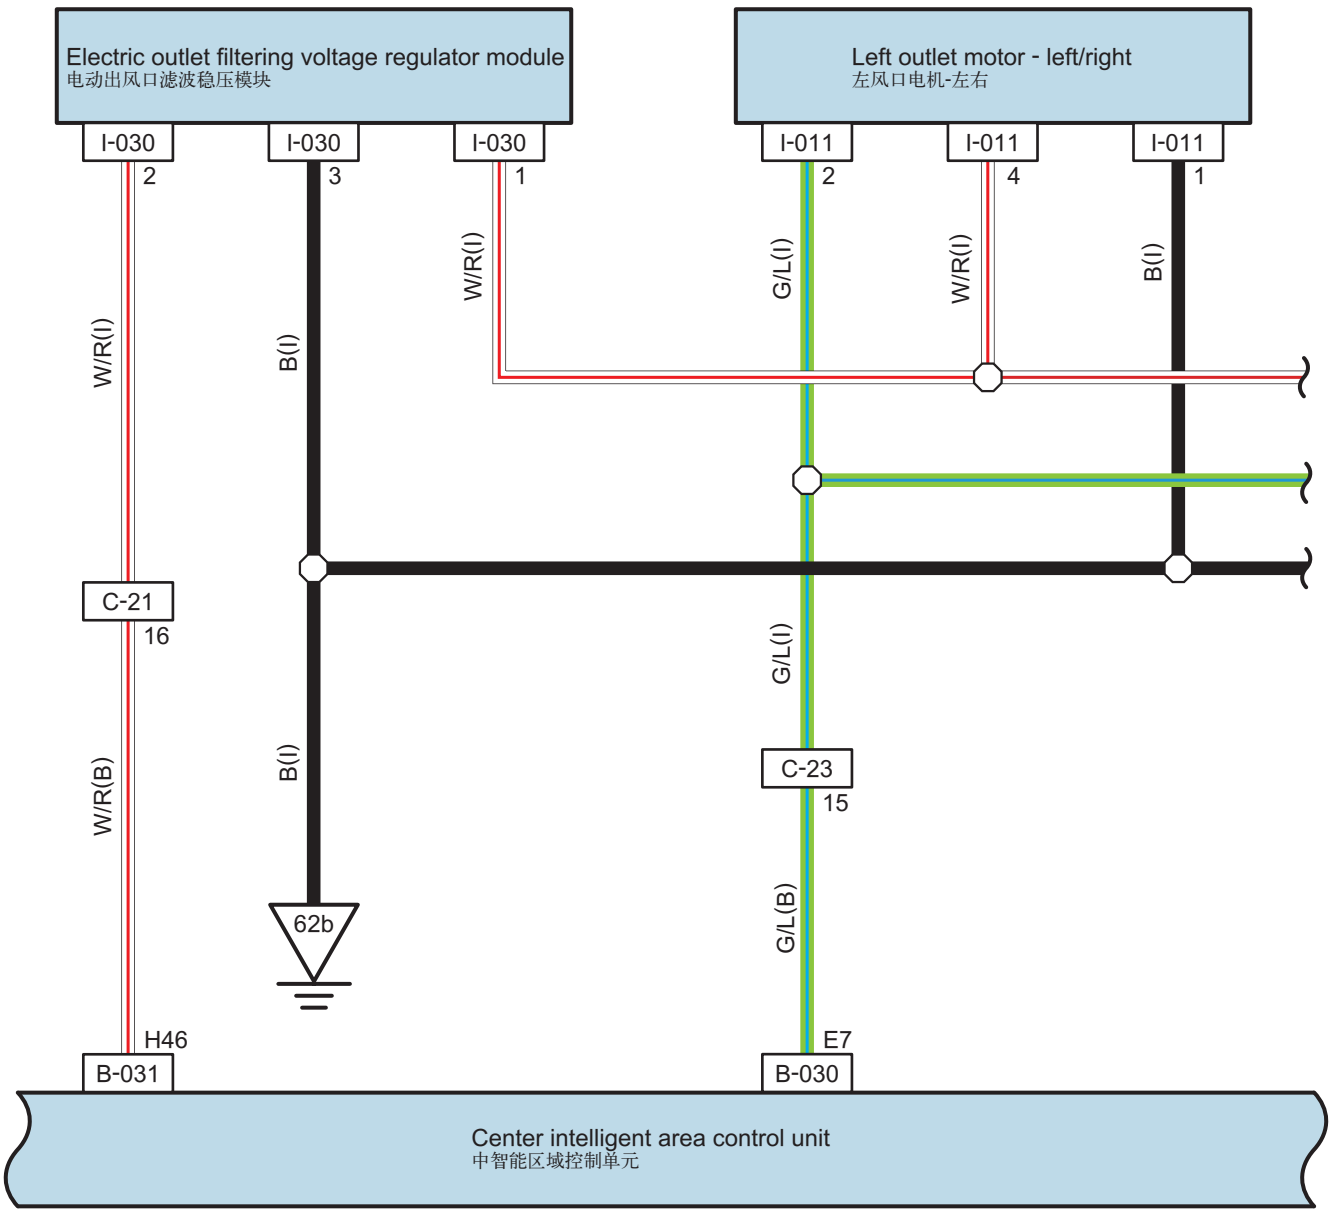

Evaporator temperature sensor
蒸发器温度传感器
Left face duct temperature sensor
左侧吹面风温传感器
Left foot duct temperature sensor
左侧吹脚风温传感器
B2-010
1
W/B(B2)
B2-010
2
B/G(B2)
B2-005
2
W/B(B2)
B2-005
1
BR(B2)
B2-002
2
W/B(B2)
B2-002
1
R/W(B2)
C-34
12
B/G(B)
C-34
13
BR(B)
C-34
14
R/W(B)
F7
B-032
F8
B-032
F9
B-032
Center intelligent area control unit
中智能区域控制单元

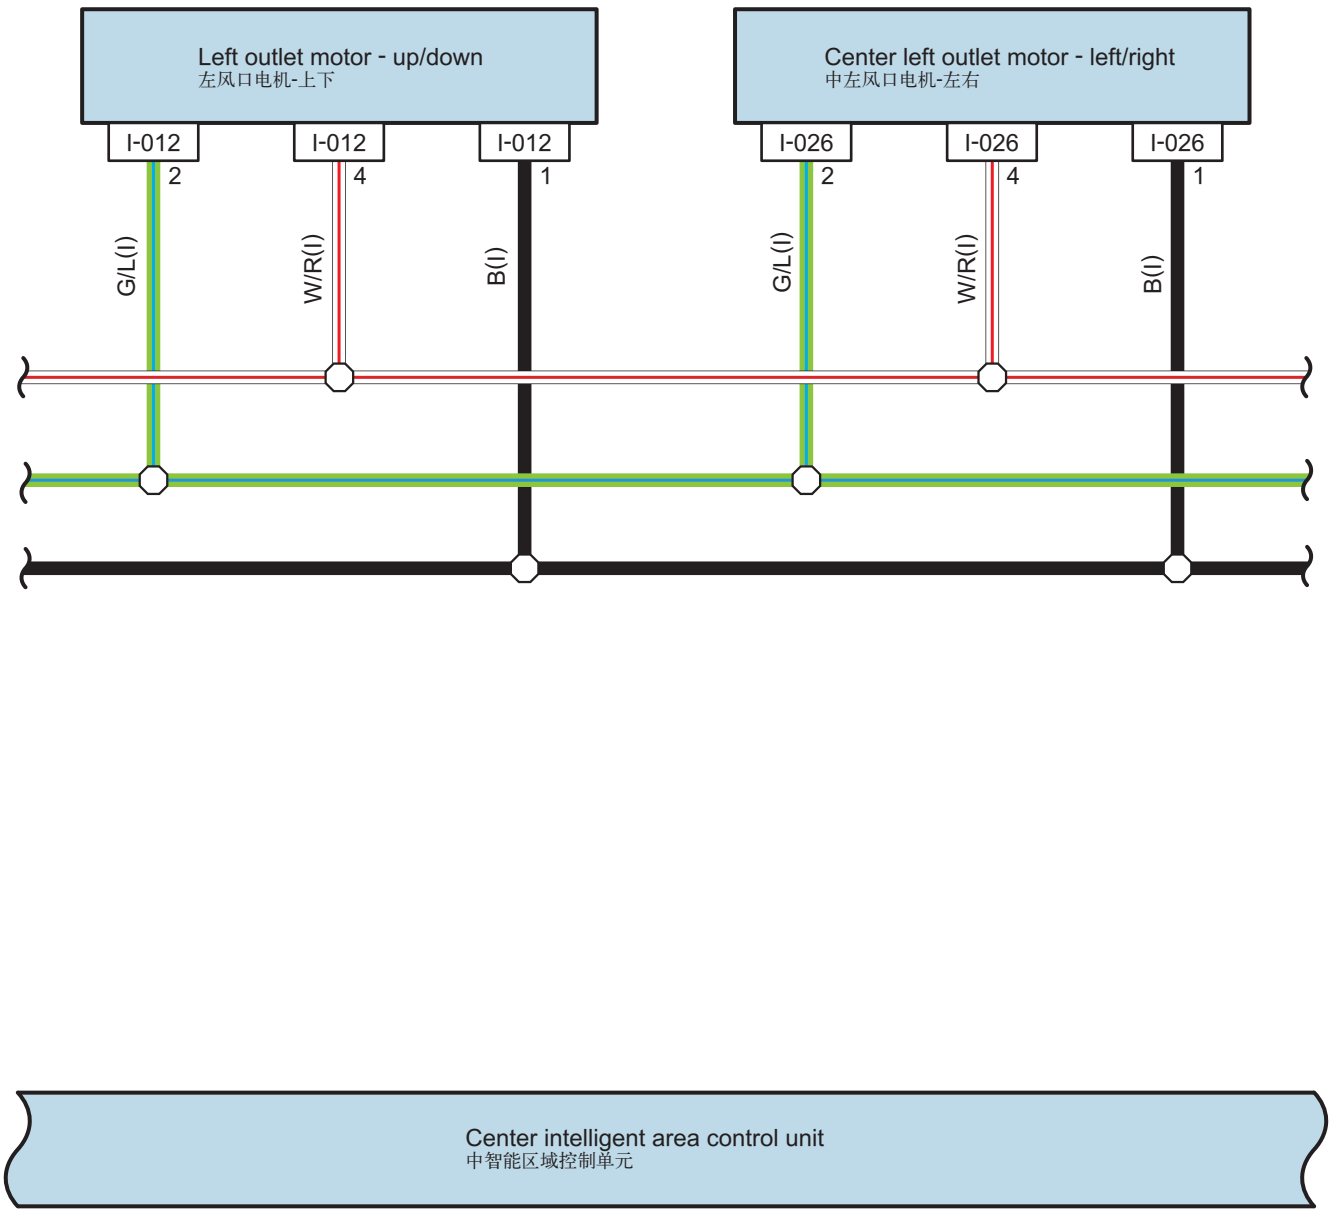

High configuration
高配
Right face duct temperature sensor
右侧吹面风温传感器
Right foot duct temperature sensor
右侧吹脚风温传感器
Front passenger seat cushion heater
副驾座椅坐垫加热
B2-004
2
B2-004
1
B2-003
2
B2-003
1
Z2-009
3
W/B(B2)
L/W(B2)
W/B(B2)
W/R(B2)
W/B(Z2)
W/B(B2)
C-34
15
C-34
17
C-34
16
C-43
25
L/W(B)
W/B(B)
W/R(B)
W/B(B)
W/B(B)
F10
F22
F11
B-032
B-032
B-032
Center intelligent area control unit
中智能区域控制单元

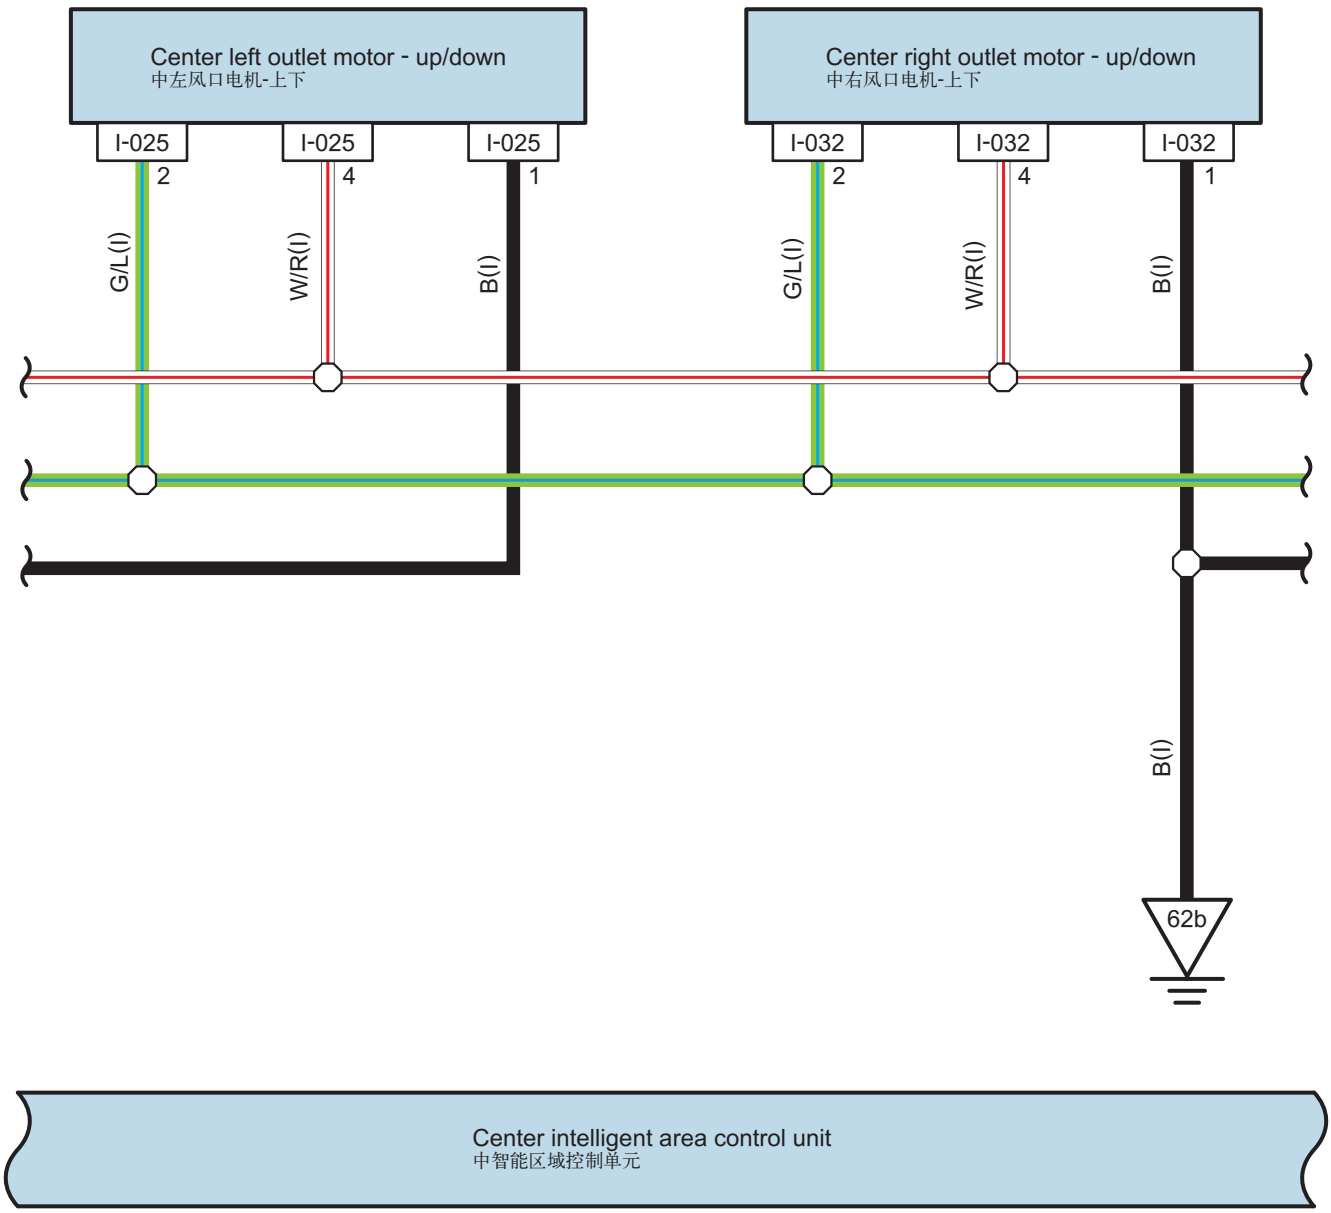

High configuration
高配
Low configuration
低配
Front passenger seat occupancy sensor
副驾驶座椅占位传感器
Front passenger seat occupancy sensor
副驾驶座椅占位传感器
Front passenger seat cushion heater
副驾座椅坐垫加热
Z2-010
1
Z2-010
2
Z2-010
1
Z2-010
2
Z2-009
3
W/R(Z2)
W/B(Z2)
W/R(Z2)
W/B(Z2)
W/B(Z2)
W/B(Z2)
C-43
5
C-43
25
W/B(B)
W/B(B)
W/R(Z2)
C-43
12
W/R(B)
G9
B-033
Center intelligent area control unit
中智能区域控制单元

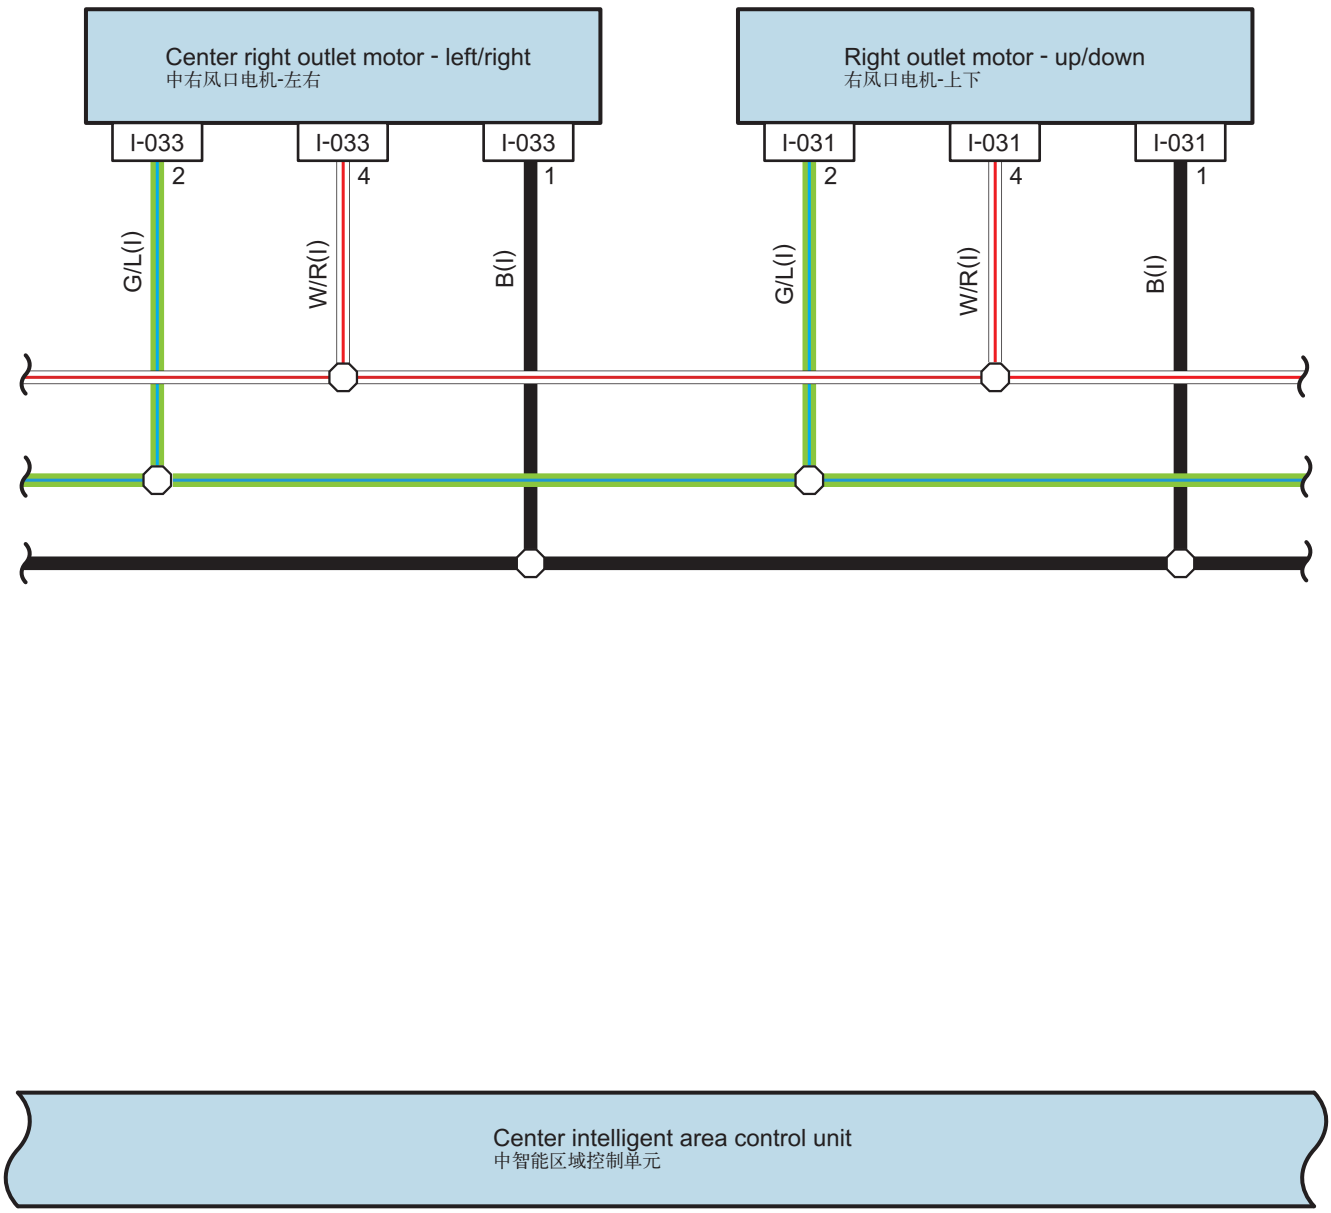

Blower motor
鼓风机电机
B-027
2
B-027
3
B-027
4
B-027
1
W(B)
W(B)
Y(B)
B(B)
53a
H36
G44
G31
B-031
B-033
B-033
Heater PTC2
风暖PTC2
B2-001
2
B2-001
1
B2-001
3
G(B2)
V/B(B2)
B(B2)
C-34
21
C-34
22
C-34
23
B(B)
47a
W/B(B)
V/B(B)
D29
G10
B-029
B-033
Center intelligent area control unit
中智能区域控制单元

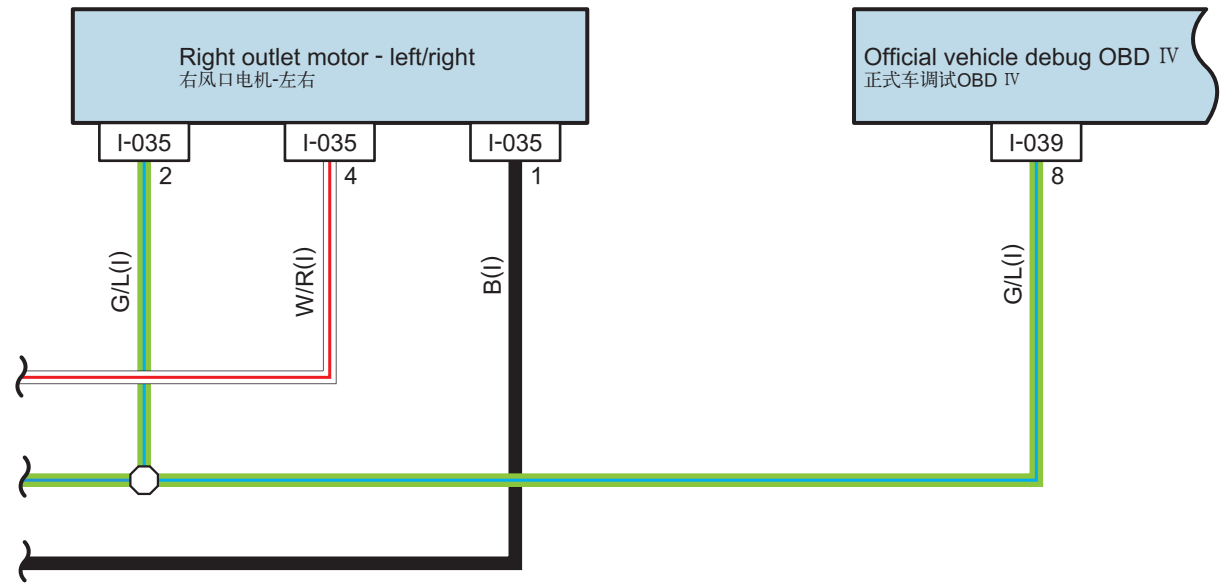

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
Rear transfer distribution box
后中转配电盒
F09
F-01
F-09
R
Front transfer distribution box
前中转配电盒
RF03 100A
RF-01
RF-03
R
R/Y(F)
2
F-003
Heater PTC1
风暖PTC1
F-003
1
B(F)
29a
Center intelligent area control unit
中智能区域控制单元


Electric outlet filtering voltage regulator module
电动出风口滤波稳压模块
Left outlet motor - left/right
左风口电机-左右
I-030
2
I-030
3
I-030
1
I-011
2
I-011
4
I-011
1
W/R(I)
B(I)
W/R(I)
G/L(I)
W/R(I)
B(I)
C-21
16
G/L(I)
W/R(B)
B(I)
C-23
15
62b
G/L(B)
H46
E7
B-031
B-030
Center intelligent area control unit
中智能区域控制单元

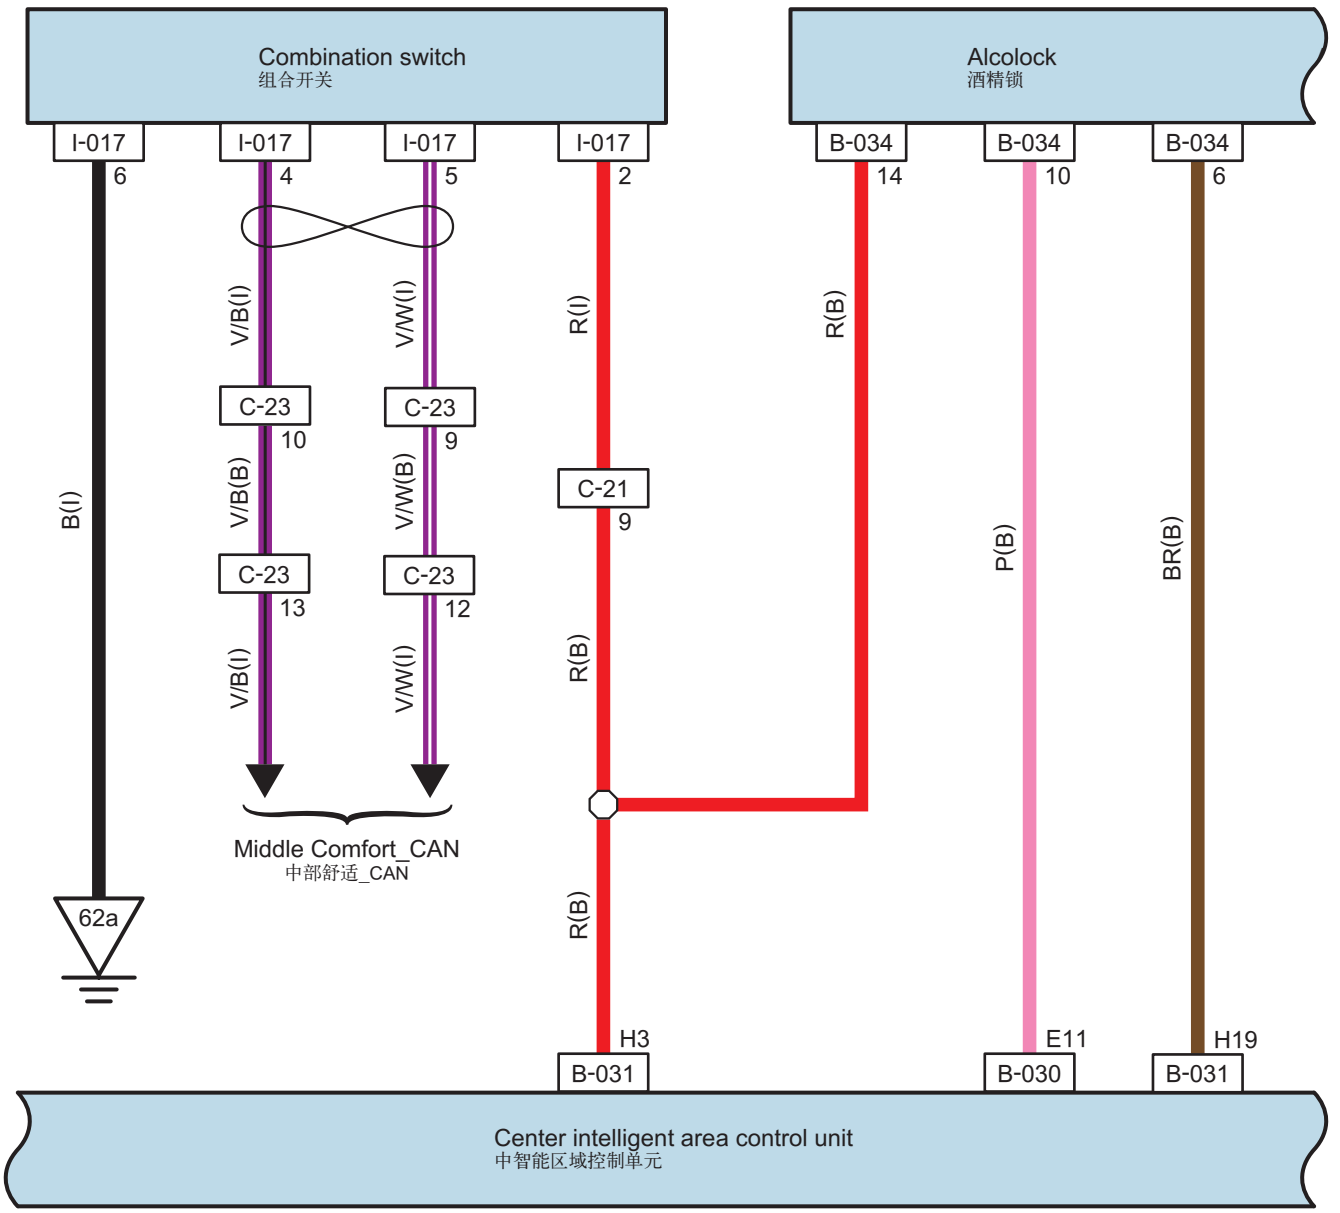

Left outlet motor - up/down
左风口电机-上下
I-012
2
I-012
4
I-012
1
G/L(I)
W/R(I)
B(I)
Center left outlet motor - left/right
中左风口电机-左右
I-026
2
I-026
4
I-026
1
G/L(I)
W/R(I)
B(I)
Center intelligent area control unit
中智能区域控制单元

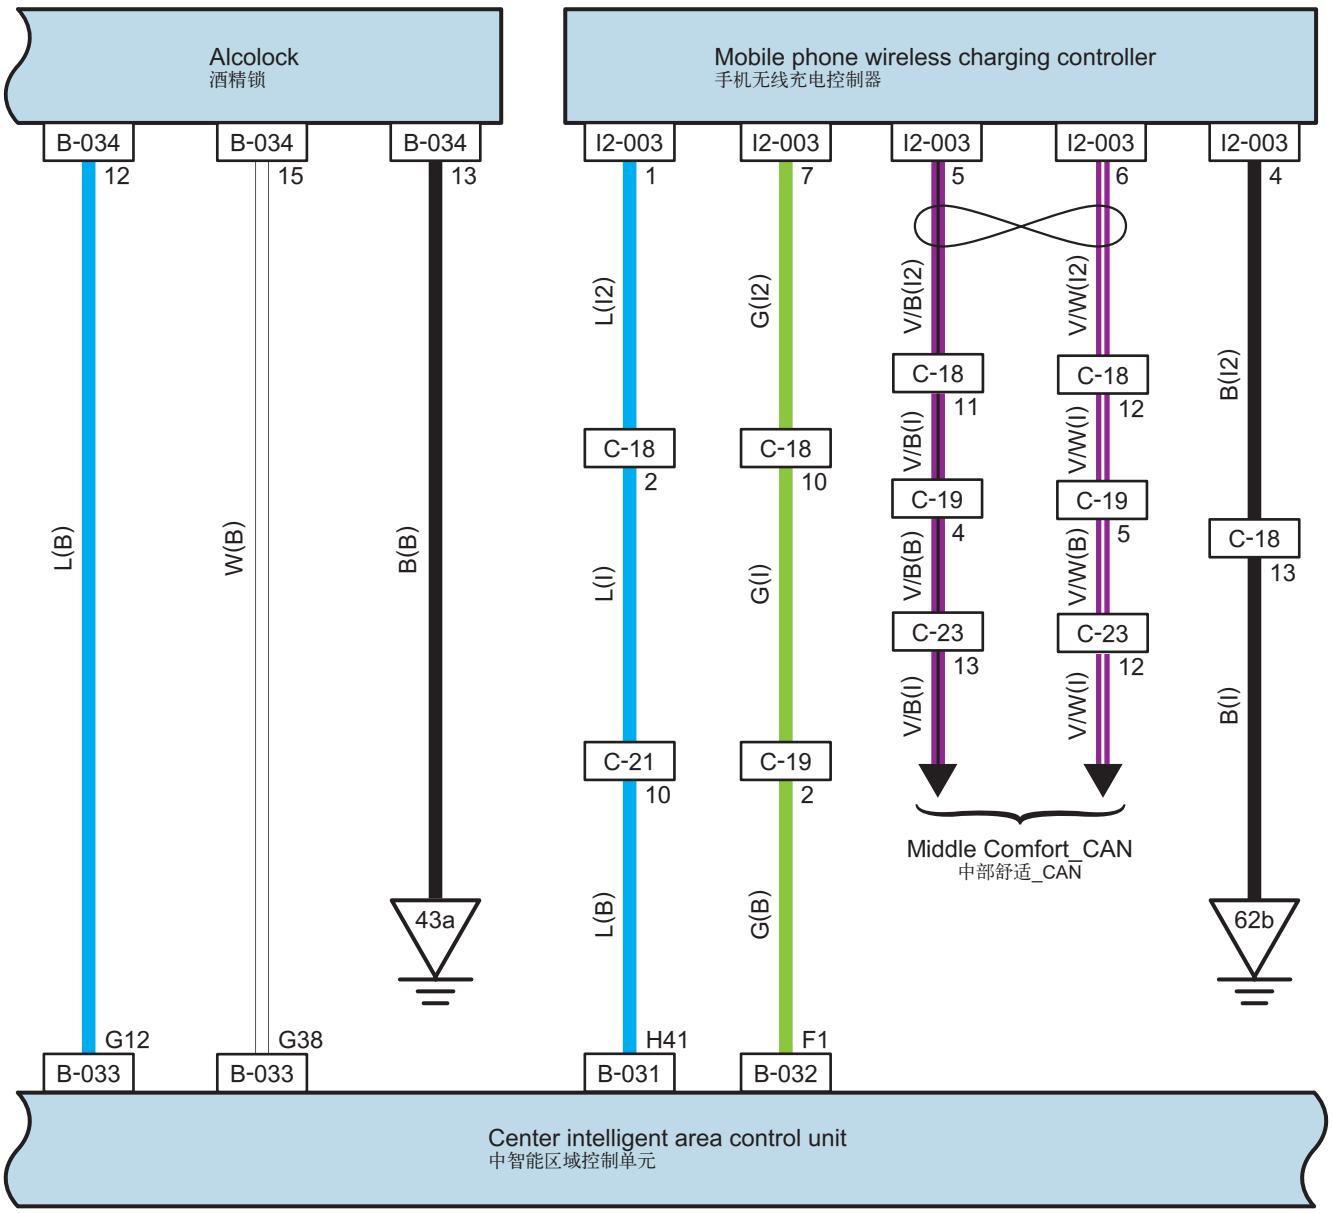

Center left outlet motor - up/down
中左风口电机-上下
Center right outlet motor - up/down
中右风口电机-上下
I-025
2
I-025
4
I-025
1
I-032
2
I-032
4
I-032
1
G/L(I)
W/R(I)
B(I)
G/L(I)
W/R(I)
B(I)
B(I)
62b
Center intelligent area control unit
中智能区域控制单元

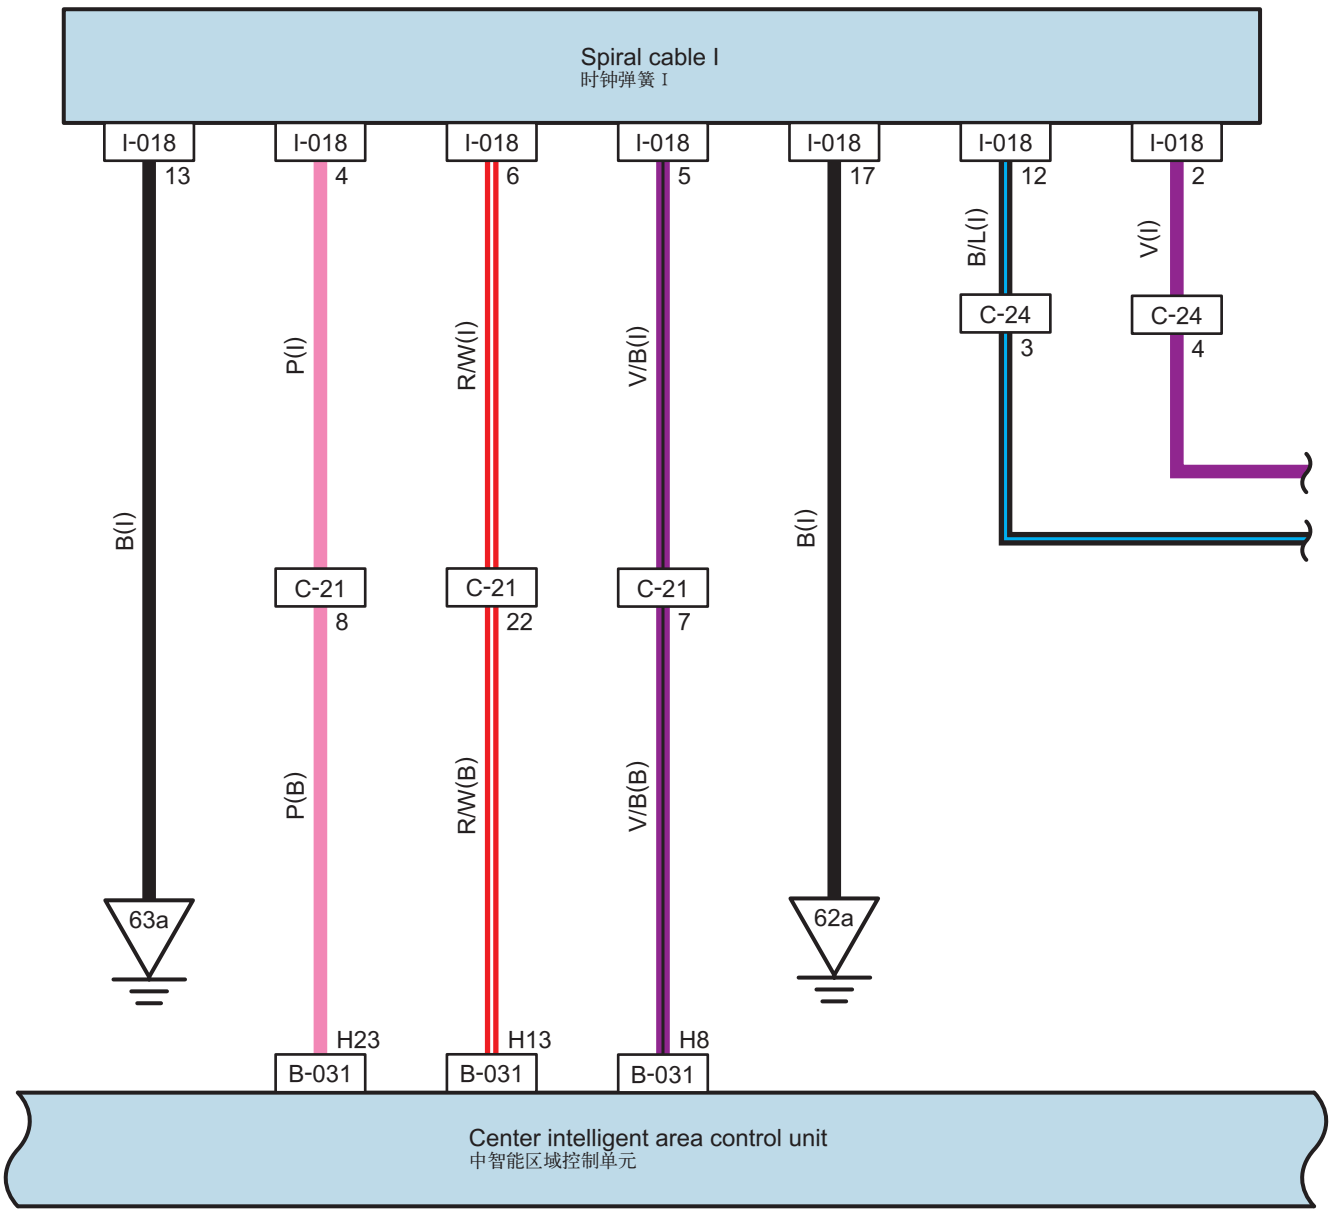

Center right outlet motor - left/right
中右风口电机-左右
I-033
2
I-033
4
I-033
1
G/L(I)
W/R(I)
B(I)
Right outlet motor - up/down
右风口电机-上下
I-031
2
I-031
4
I-031
1
G/L(I)
W/R(I)
B(I)
Center intelligent area control unit
中智能区域控制单元

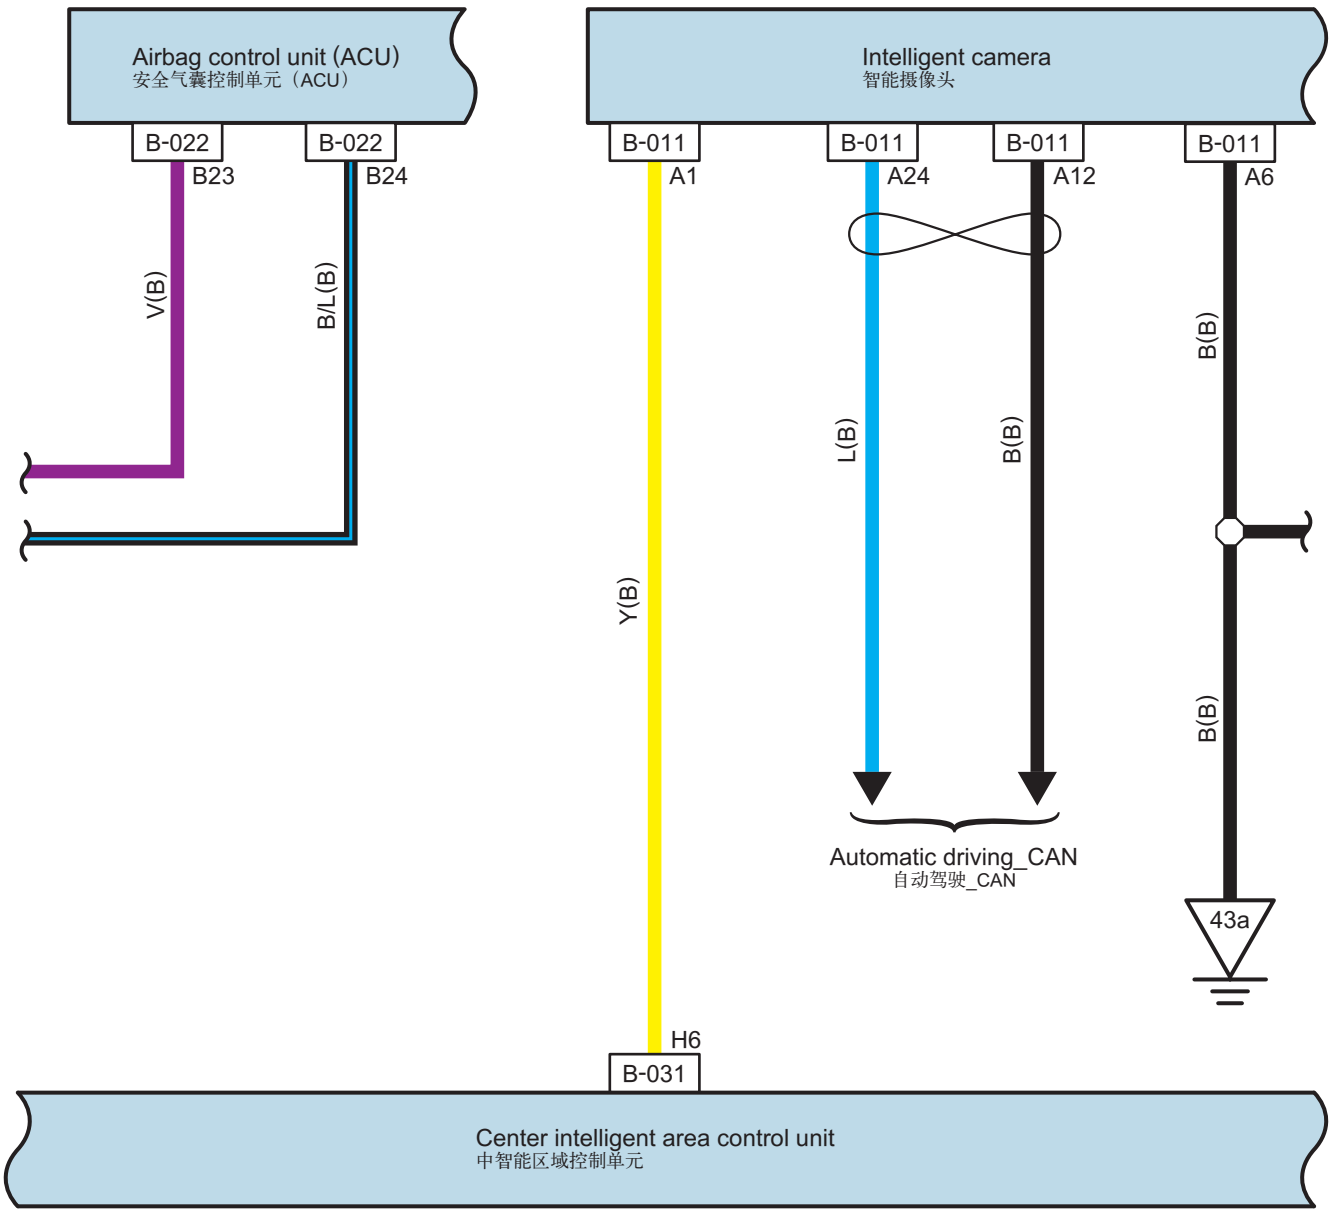


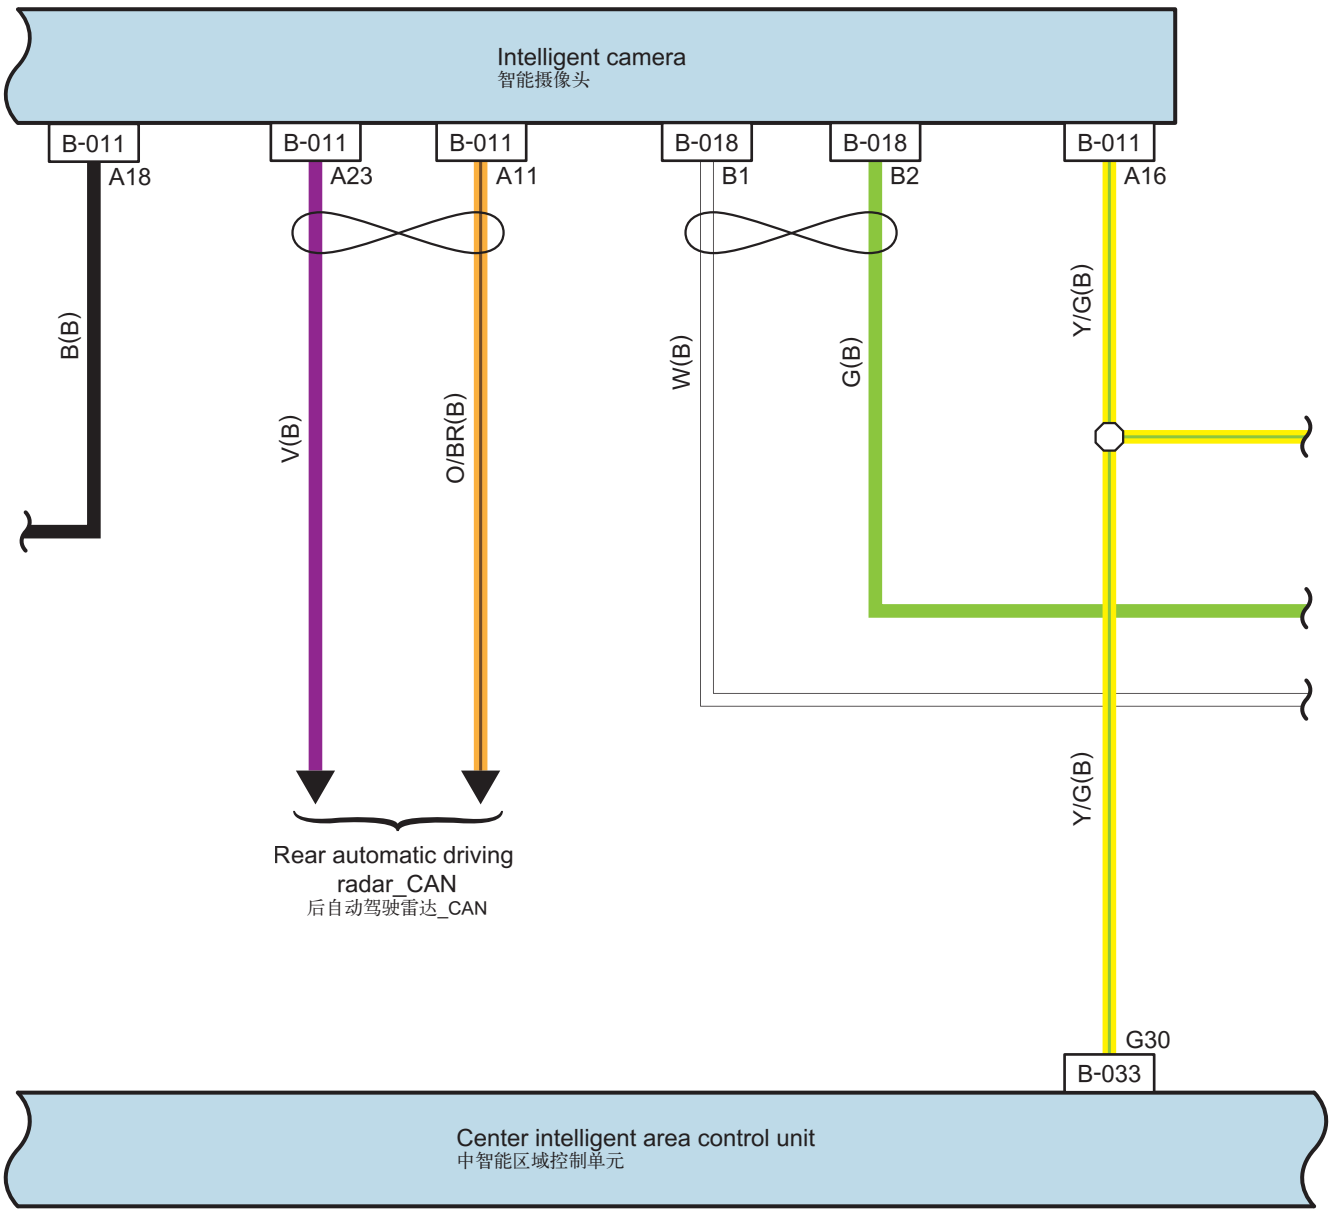
Center intelligent area control unit
中智能区域控制单元

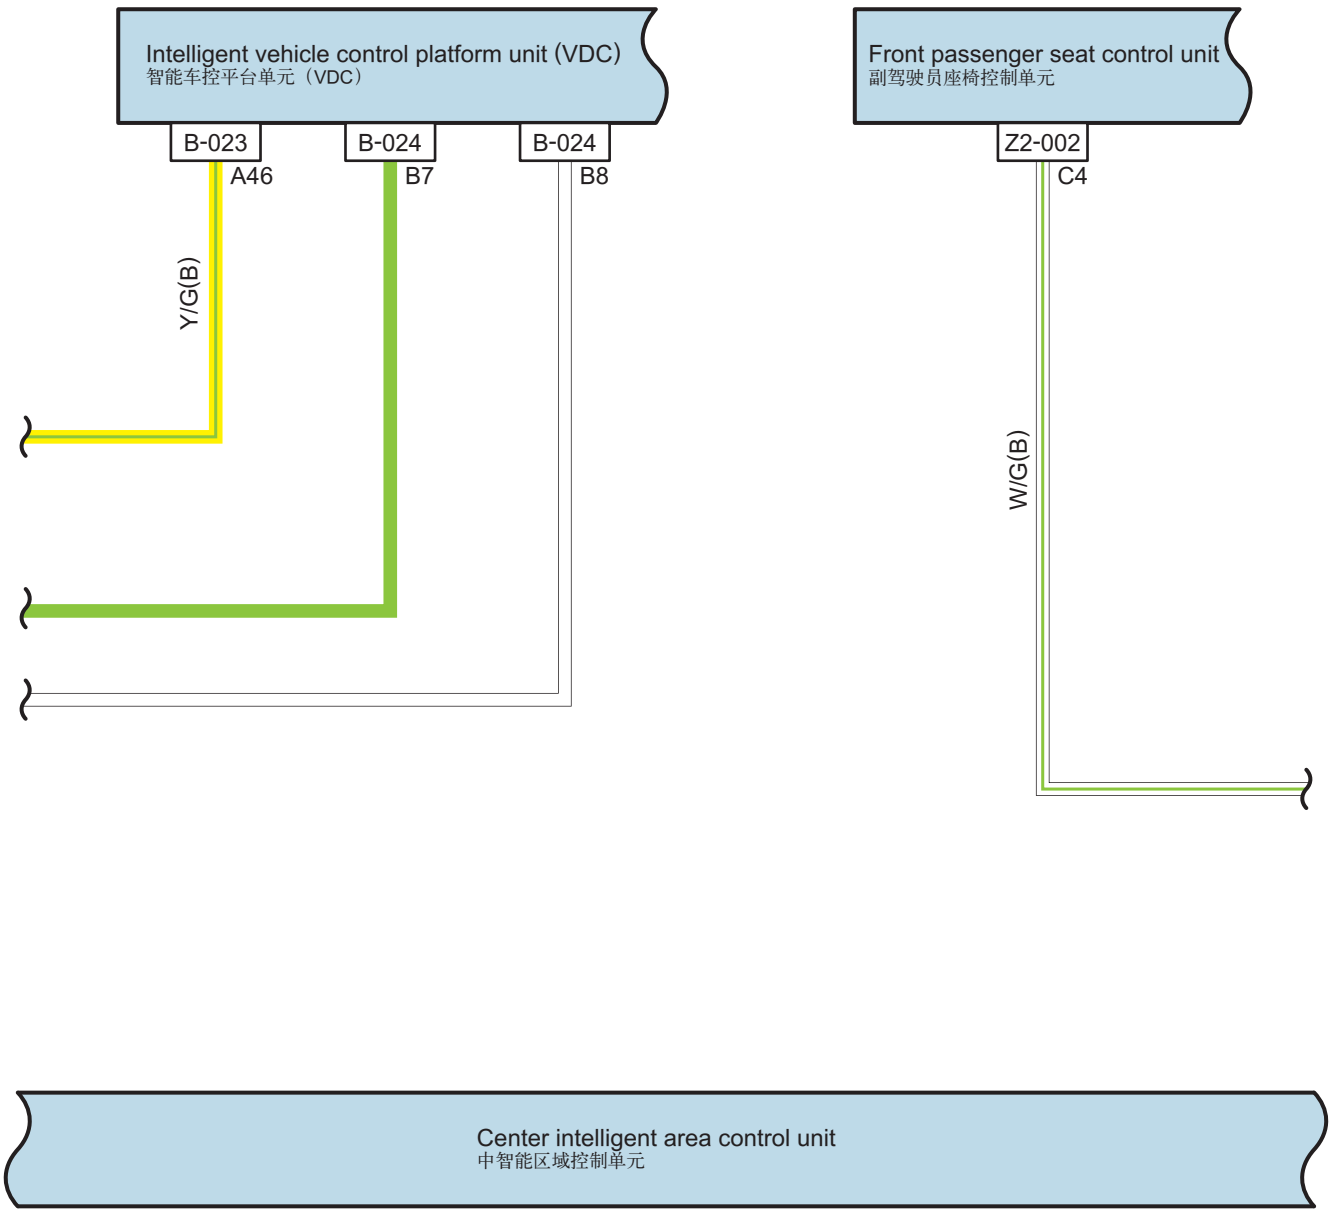

Combination switch
组合开关
Alcolock
酒精锁
I-017
6
I-017
4
I-017
5
I-017
2
B-034
14
B-034
10
B-034
6
B(I)
V/B(I)
V/W(I)
R(I)
R(B)
P(B)
BR(B)
C-23
10
C-23
9
C-21
9
V/B(B)
V/W(B)
C-23
13
C-23
12
V/B(I)
V/W(I)
R(B)
Middle Comfort_CAN
中部舒适_CAN
62a
H3
E11
H19
B-031
B-030
B-031
Center intelligent area control unit
中智能区域控制单元

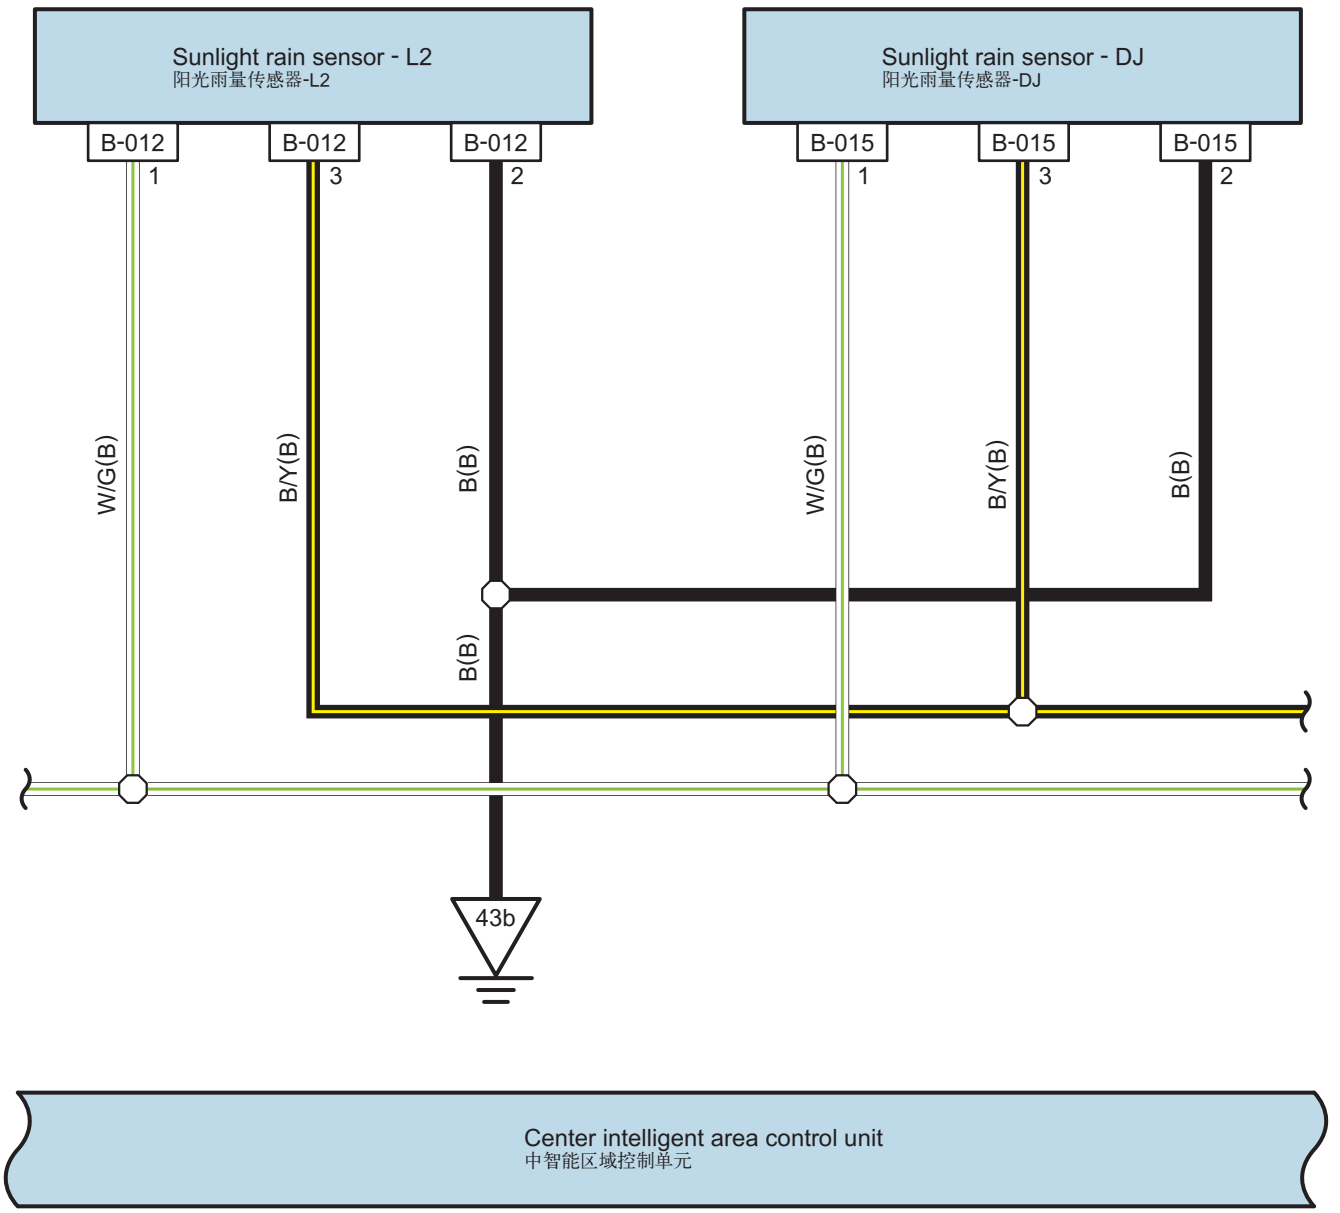

Alcolock
酒精锁
Mobile phone wireless charging controller
手机无线充电控制器
B-034
12
B-034
15
B-034
13
I2-003
1
I2-003
7
I2-003
5
I2-003
6
I2-003
4
L(B)
W(B)
B(B)
L(I2)
G(I2)
V/B(I2)
V/W(I2)
B(I2)
C-18
2
C-18
10
C-18
11
C-18
12
C-18
13
L(I)
G(I)
V/B(I)
V/W(I)
B(I)
C-19
4
C-19
5
C-19
2
V/B(B)
V/W(B)
C-23
13
C-23
12
C-21
10
V/B(I)
V/W(I)
L(B)
G(B)
43a
62b
G12
G38
H41
F1
B-033
B-033
B-031
B-032
Middle Comfort_CAN
中部舒适_CAN
Center intelligent area control unit
中智能区域控制单元

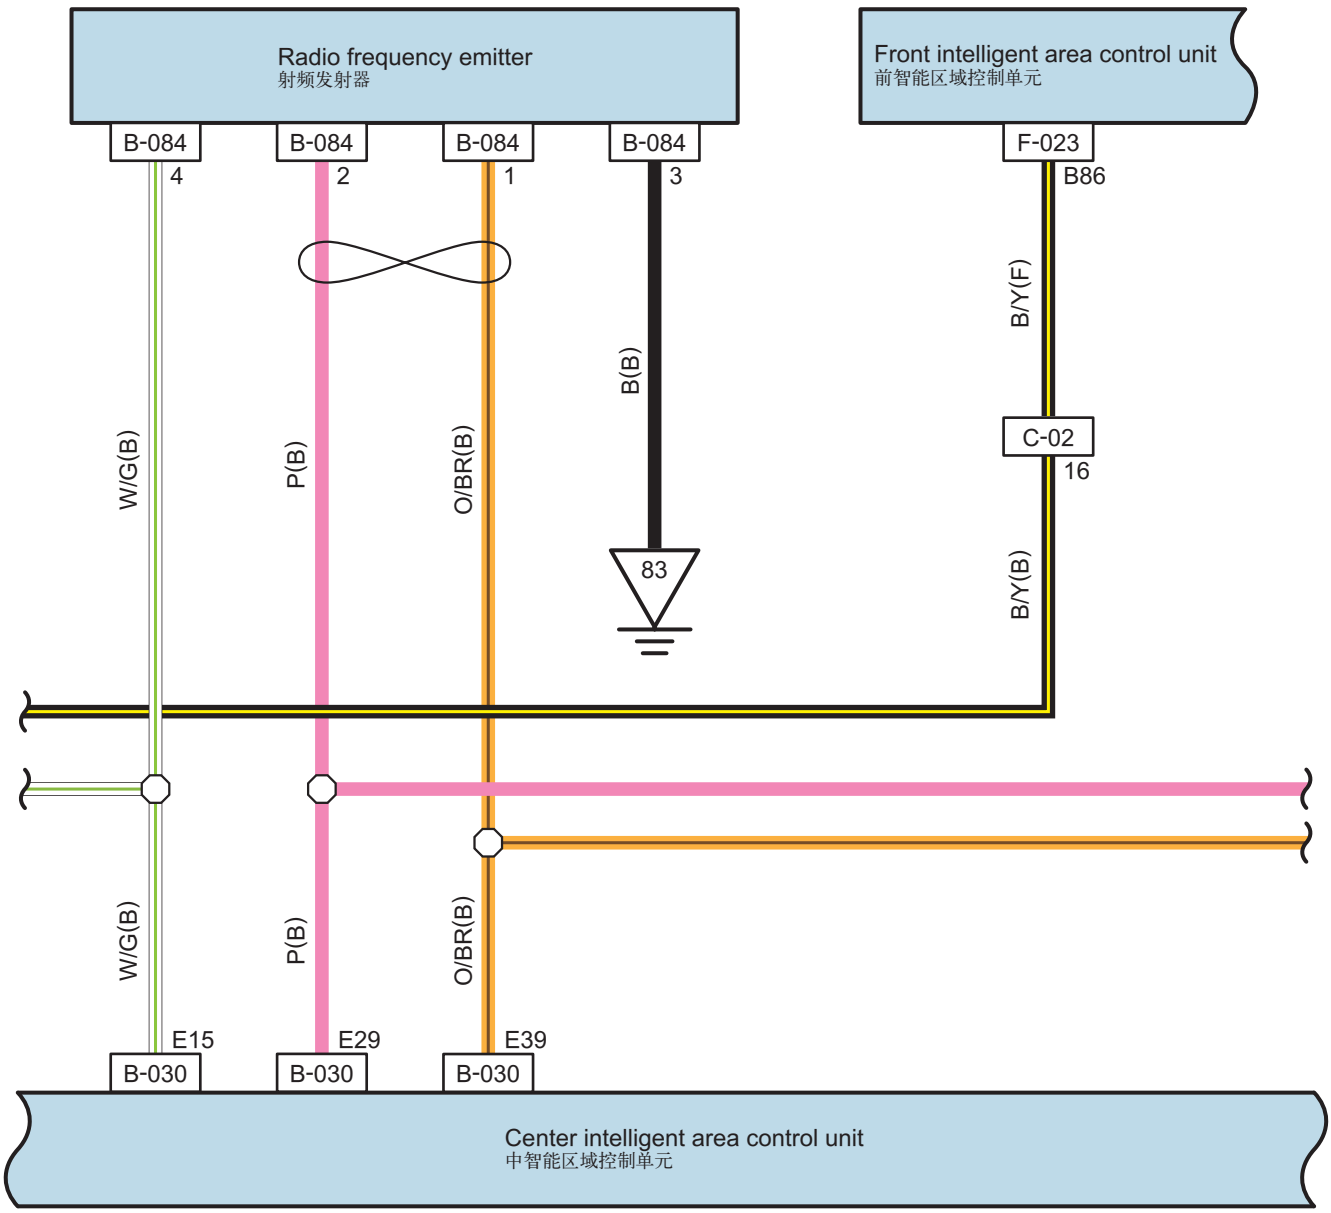

Spiral cable I
时钟弹簧 I
I-018
13
I-018
4
I-018
6
I-018
5
I-018
17
I-018
12
I-018
2
B/L(I)
V(I)
C-24
3
C-24
4
B(I)
P(I)
R/W(I)
V/B(I)
B(I)
C-21
8
C-21
22
C-21
7
P(B)
R/W(B)
V/B(B)
63a
62a
H23
H13
H8
B-031
B-031
B-031
Center intelligent area control unit
中智能区域控制单元

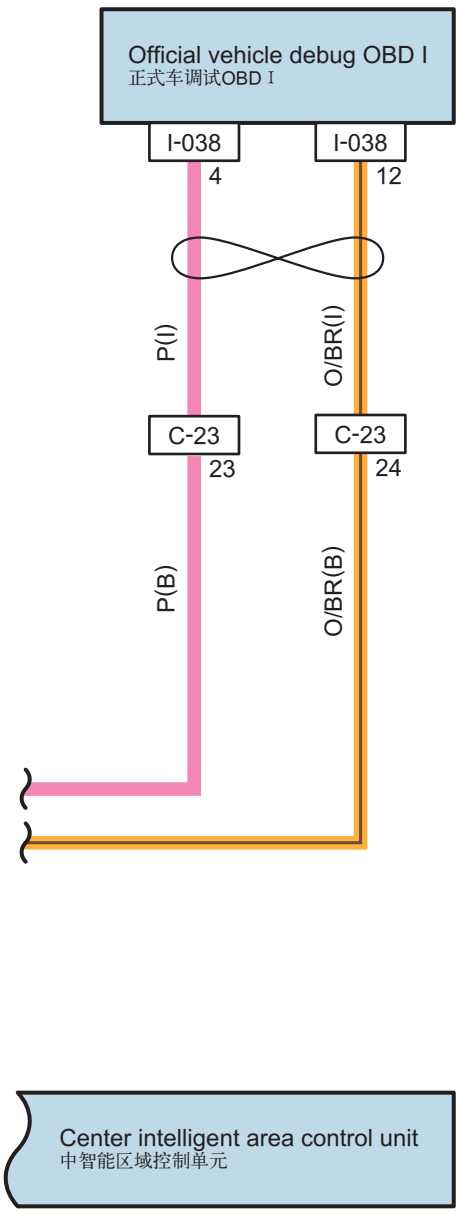

Airbag control unit (ACU)
安全气囊控制单元（ACU）
B-022
B23
B-022
B24
V(B)
B/L(B)
Intelligent camera
智能摄像头
B-011
A1
B-011
A24
B-011
A12
B-011
A6
L(B)
B(B)
B(B)
B(B)
Automatic driving_CAN
自动驾驶_CAN
43a
Y(B)
H6
B-031
Center intelligent area control unit
中智能区域控制单元

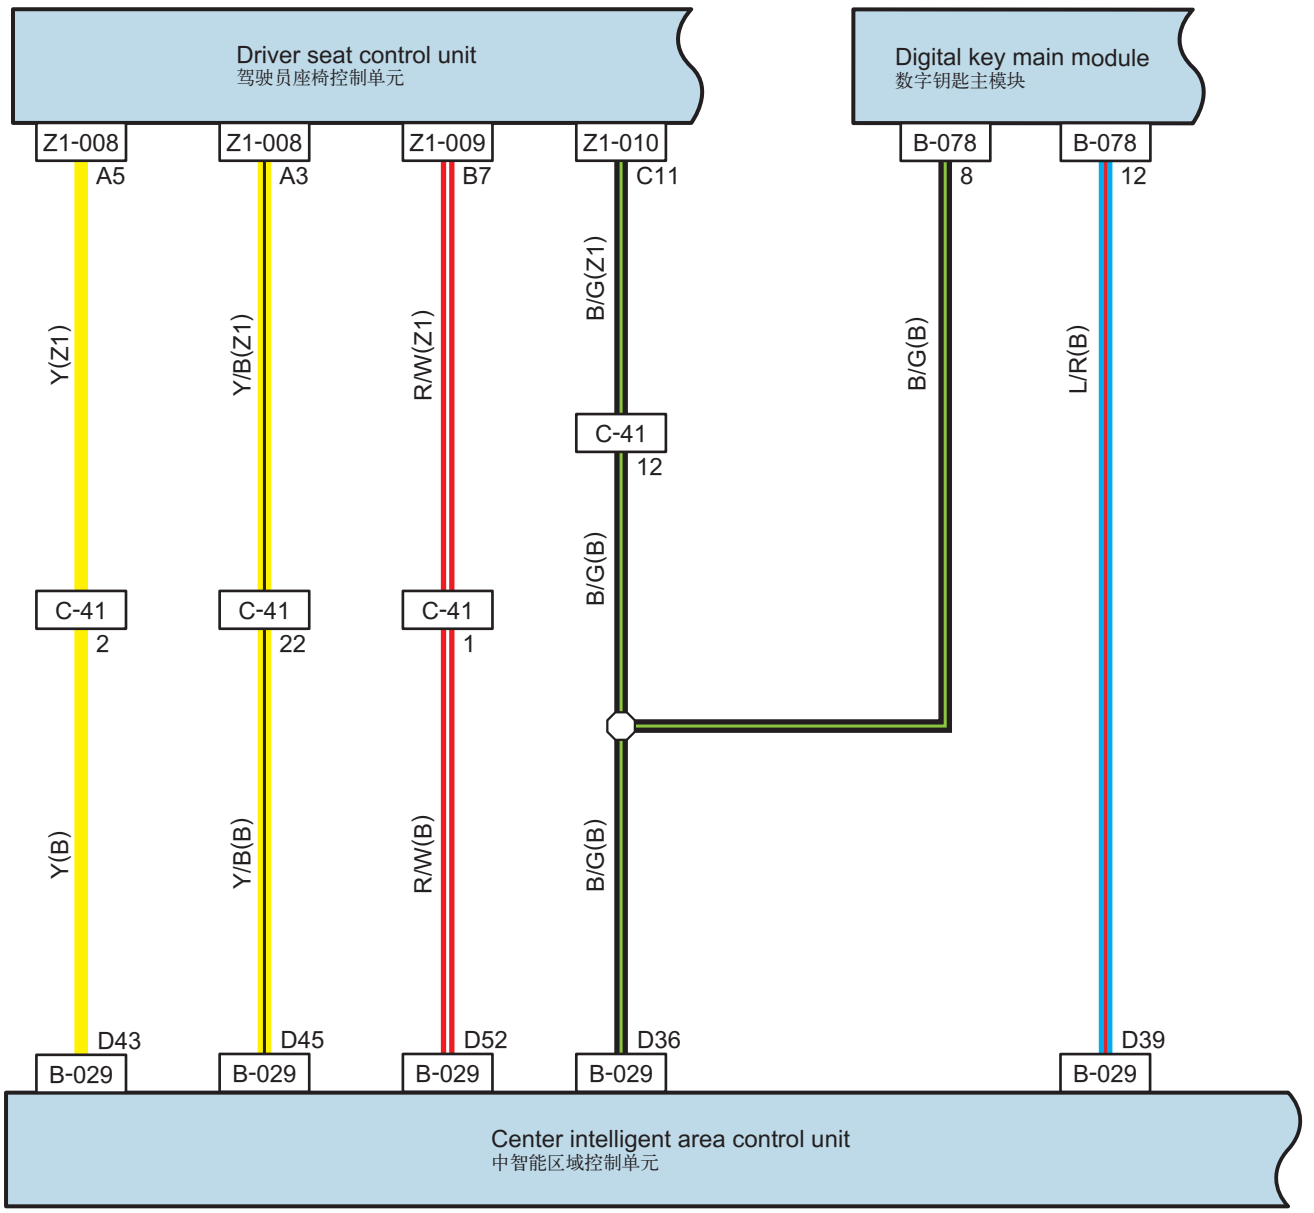

Intelligent camera
智能摄像头
B-011
A18
B-011
A23
B-011
A11
B-018
B1
B-018
B2
B-011
A16
B(B)
V(B)
O/BR(B)
W(B)
G(B)
Y/G(B)
Y/G(B)
Rear automatic driving radar_CAN
后自动驾驶雷达_CAN
G30
B-033
Center intelligent area control unit
中智能区域控制单元

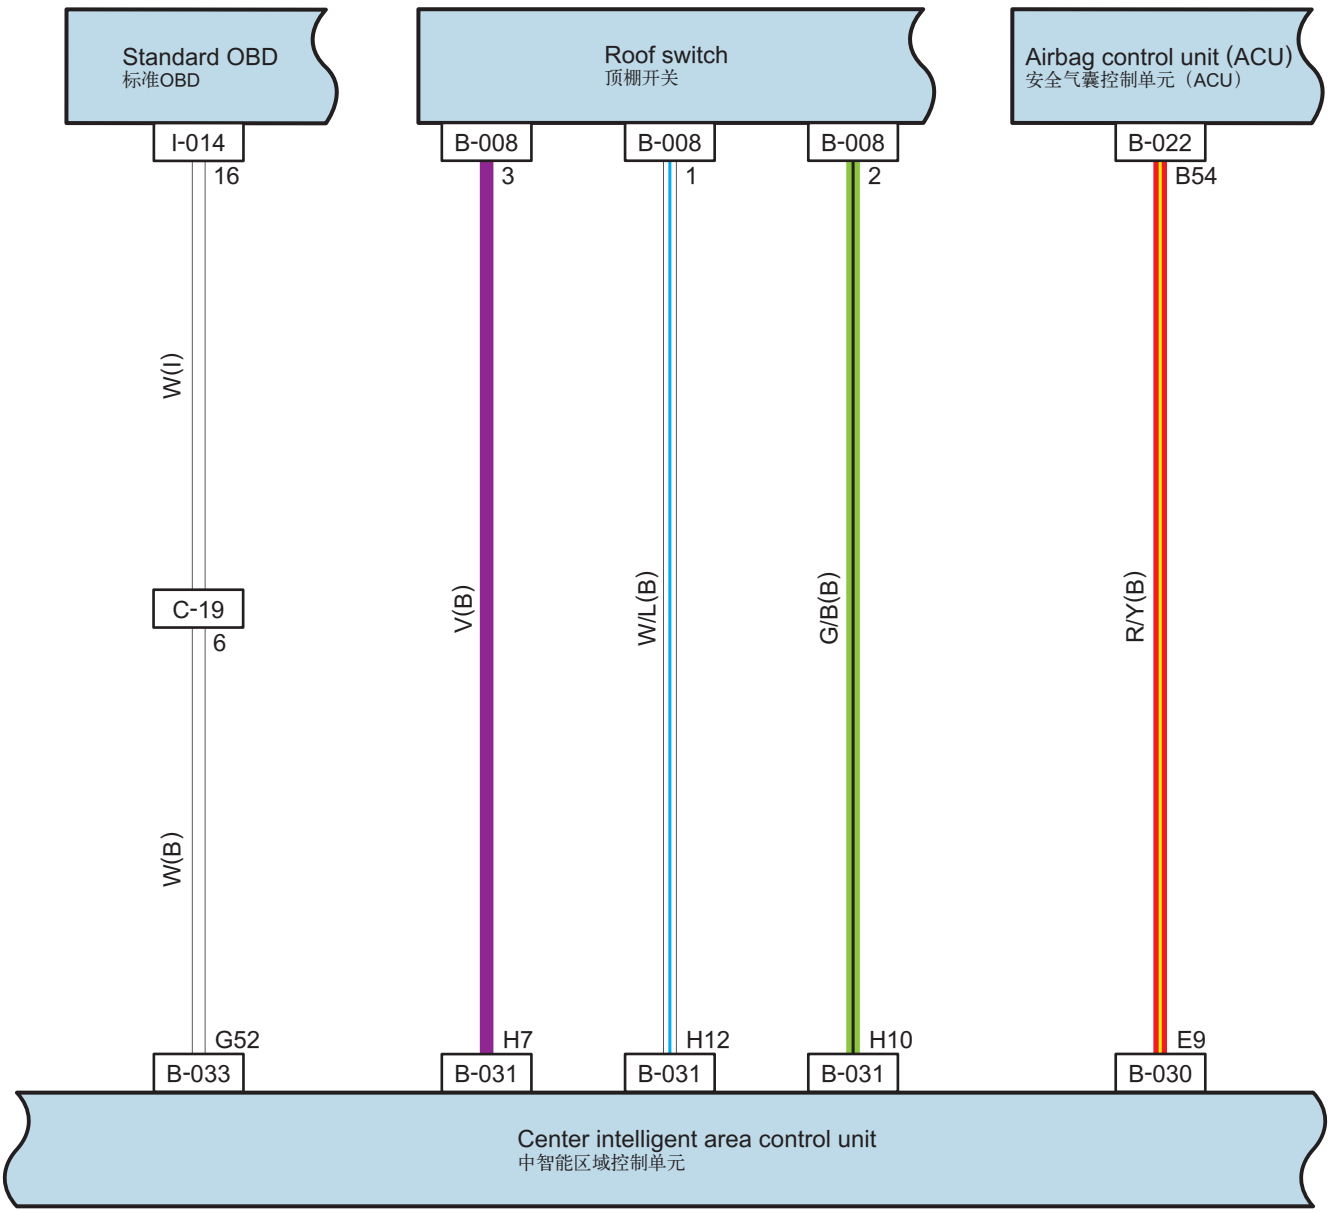

Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
B-023
A46
B-024
B7
B-024
B8
Y/G(B)
Front passenger seat control unit
副驾驶员座椅控制单元
Z2-002
C4
W/G(B)
Center intelligent area control unit
中智能区域控制单元

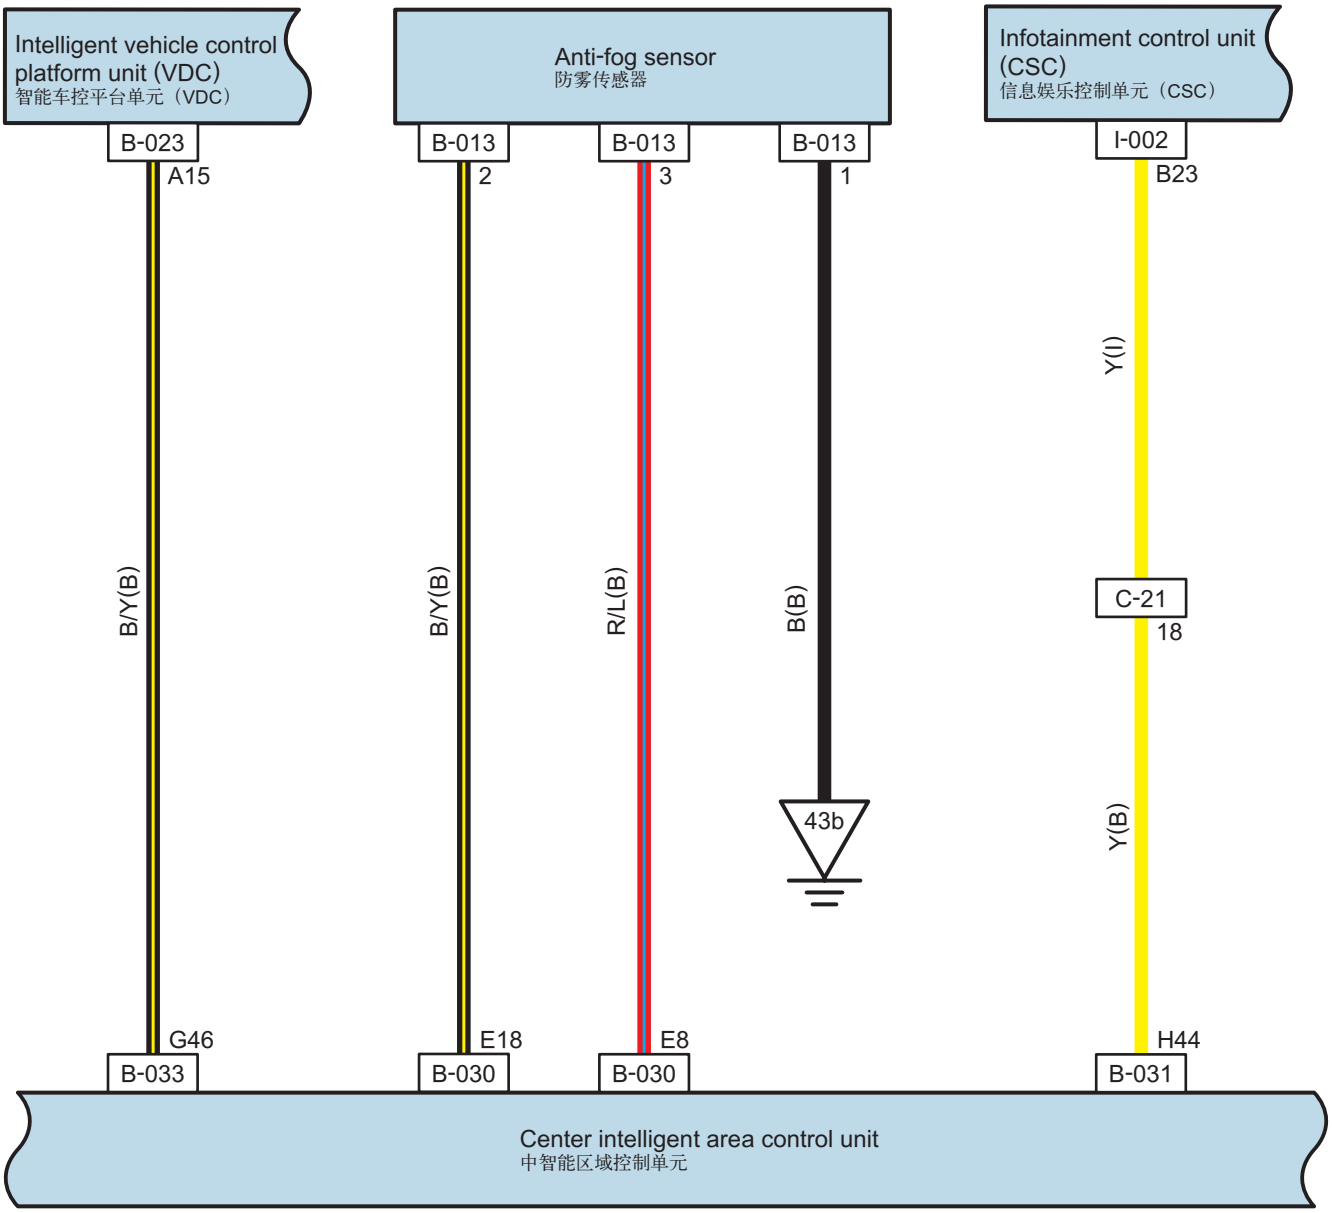

Sunlight rain sensor - L2
阳光雨量传感器-L2
B-012
1
B-012
3
B-012
2
W/G(B)
B/Y(B)
B(B)
B(B)
Sunlight rain sensor - DJ
阳光雨量传感器-DJ
B-015
1
B-015
3
B-015
2
W/G(B)
B/Y(B)
B(B)
43b
Center intelligent area control unit
中智能区域控制单元

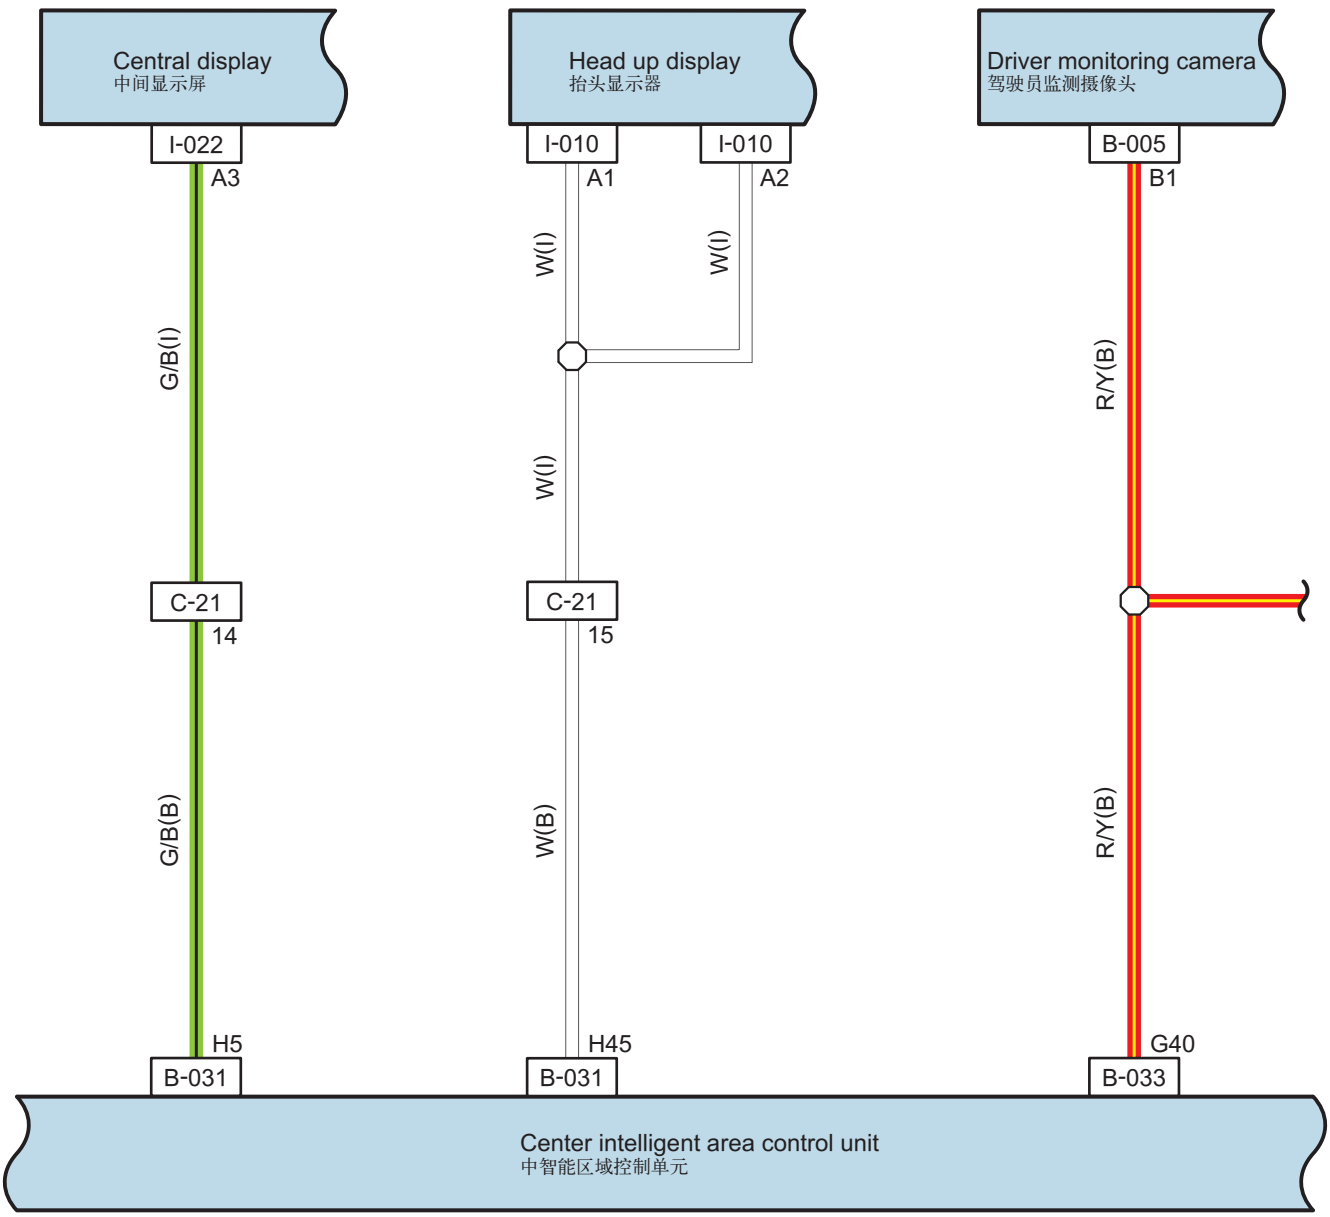

Radio frequency emitter
射频发射器
Front intelligent area control unit
前智能区域控制单元
B-084
4
B-084
2
B-084
1
B-084
3
F-023
B86
W/G(B)
P(B)
O/BR(B)
B(B)
B/Y(F)
C-02
16
83
B/Y(B)
W/G(B)
P(B)
O/BR(B)
E15
E29
E39
B-030
B-030
B-030
Center intelligent area control unit
中智能区域控制单元

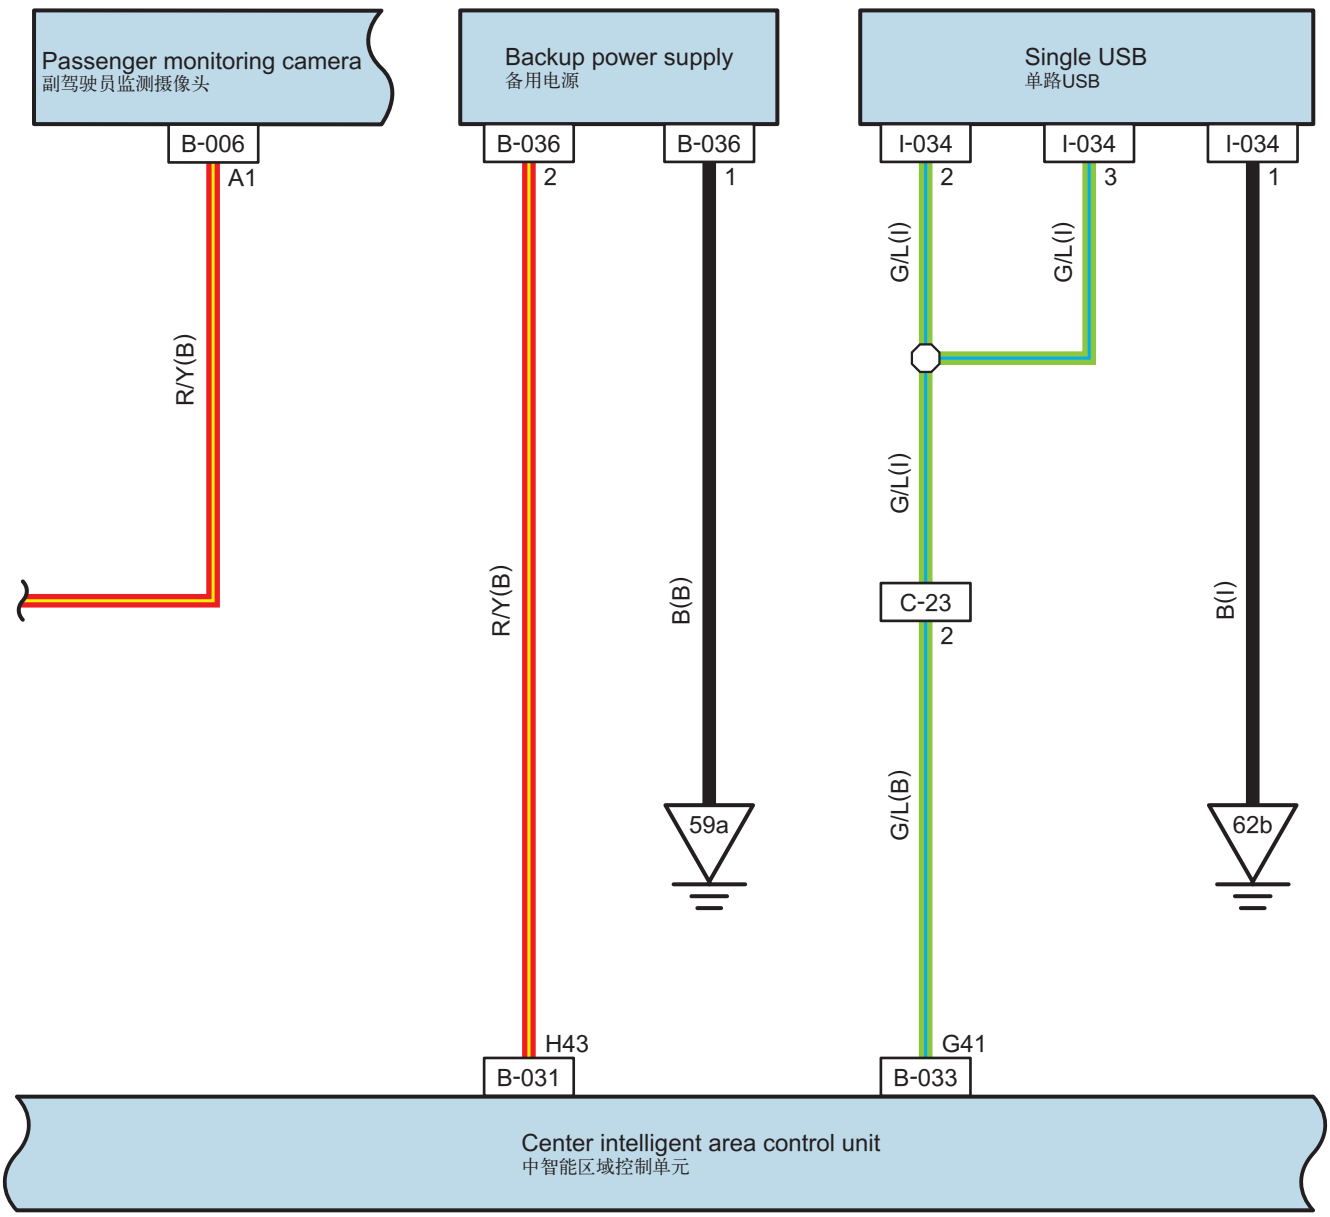

Official vehicle debug OBD I
正式车调试OBD I
I-038
4
I-038
12
P(I)
O/BR(I)
C-23
23
C-23
24
P(B)
O/BR(B)
Center intelligent area control unit
中智能区域控制单元

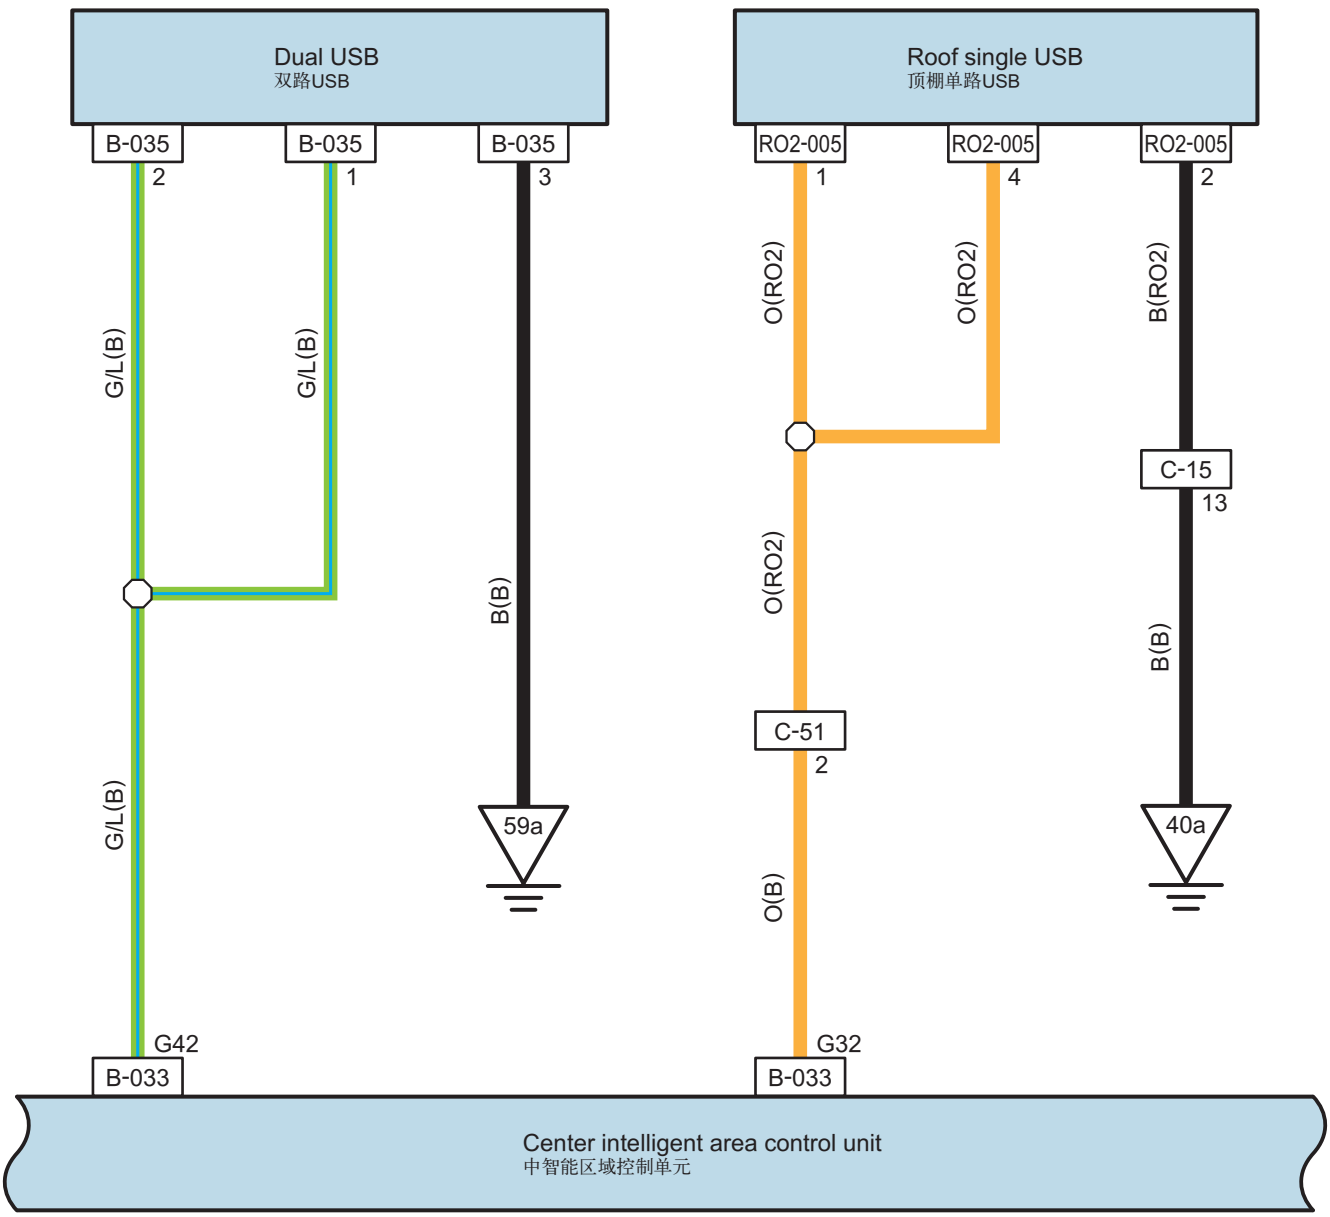

Driver seat control unit
驾驶员座椅控制单元
Digital key main module
数字钥匙主模块
Z1-008
A5
Z1-008
A3
Z1-009
B7
Z1-010
C11
B-078
8
B-078
12
Y(Z1)
Y/B(Z1)
R/W(Z1)
B/G(Z1)
B/G(B)
L/R(B)
C-41
12
C-41
2
C-41
22
C-41
1
B/G(B)
Y(B)
Y/B(B)
R/W(B)
B/G(B)
D43
D45
D52
D36
D39
B-029
B-029
B-029
B-029
B-029
Center intelligent area control unit
中智能区域控制单元

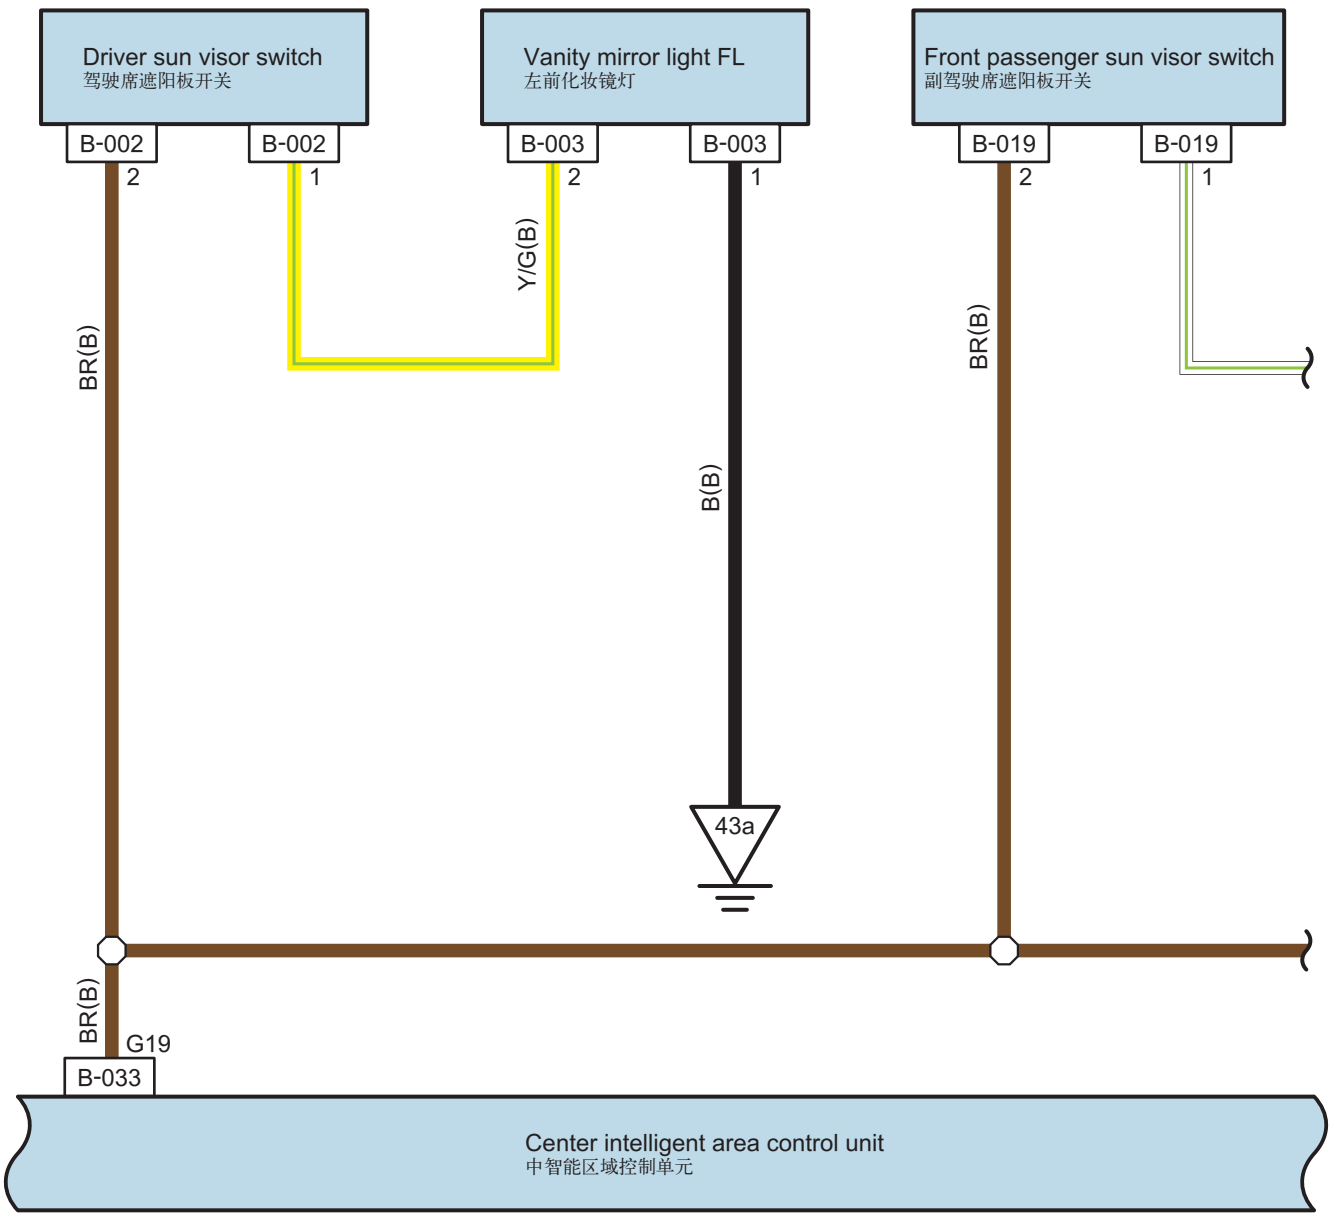

Standard OBD
标准OBD
Roof switch
顶棚开关
Airbag control unit (ACU)
安全气囊控制单元（ACU）
I-014
16
B-008
3
B-008
1
B-008
2
B-022
B54
W(I)
V(B)
W/L(B)
G/B(B)
R/Y(B)
C-19
6
W(B)
G52
H7
H12
H10
E9
B-033
B-031
B-031
B-031
B-030
Center intelligent area control unit
中智能区域控制单元

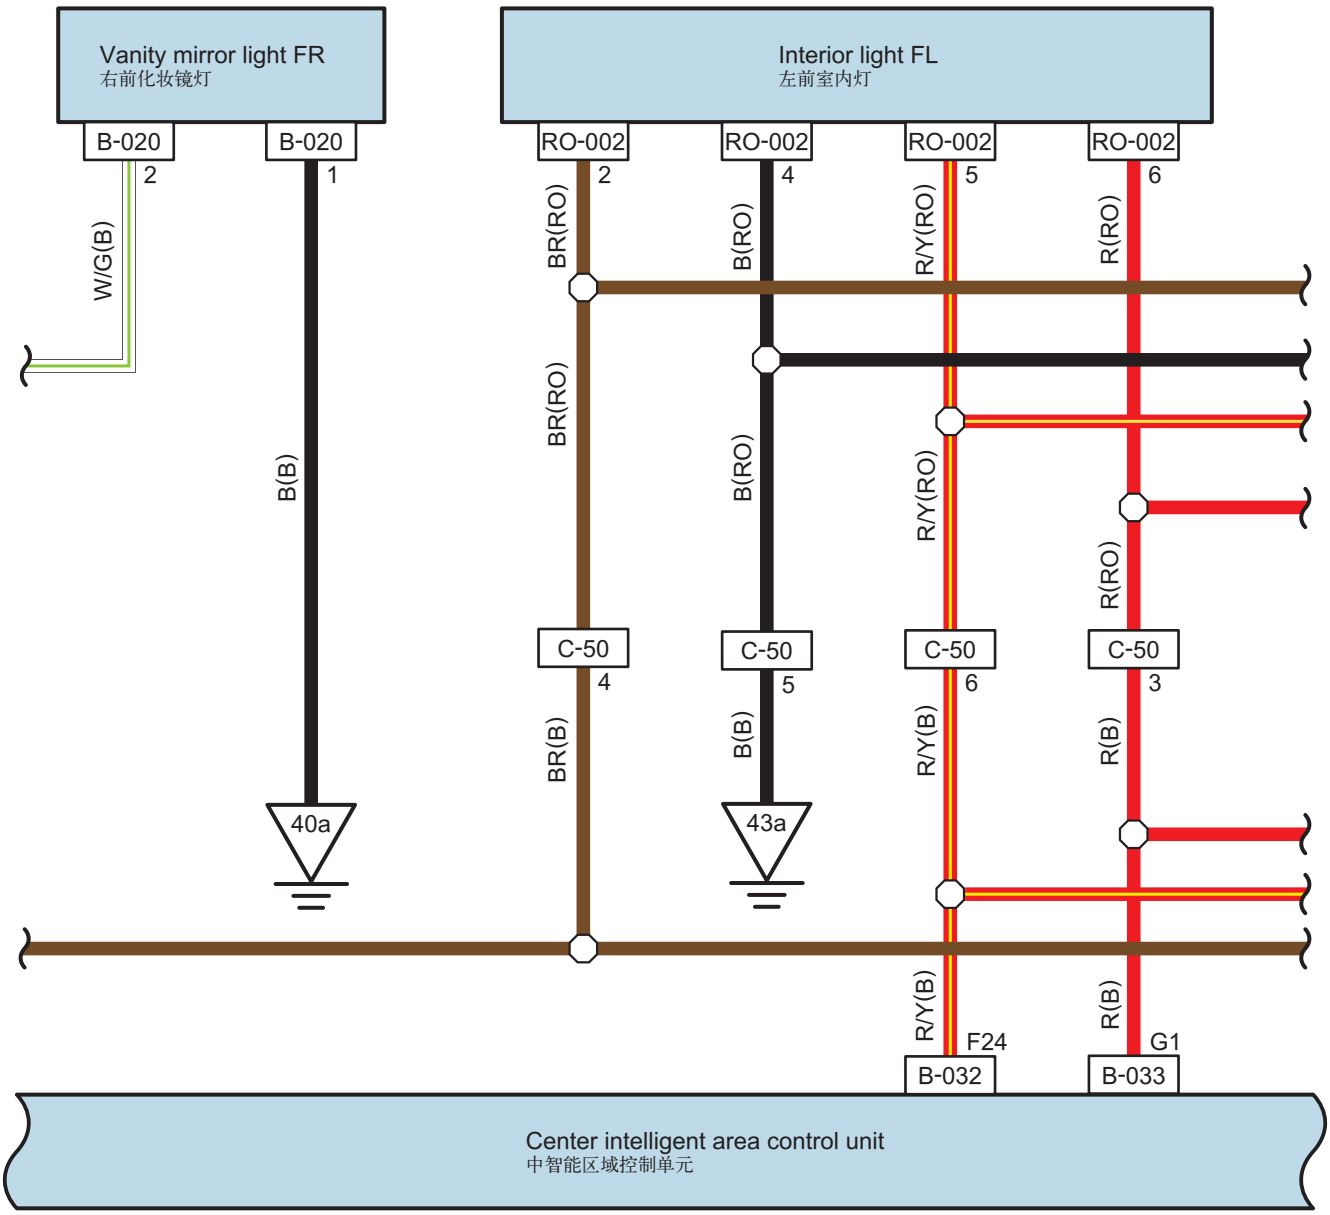

Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
Anti-fog sensor
防雾传感器
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）
B-023
A15
B-013
2
B-013
3
B-013
1
I-002
B23
B/Y(B)
B/Y(B)
R/L(B)
B(B)
Y(I)
C-21
18
Y(B)
43b
G46
E18
E8
H44
B-033
B-030
B-030
B-031
Center intelligent area control unit
中智能区域控制单元

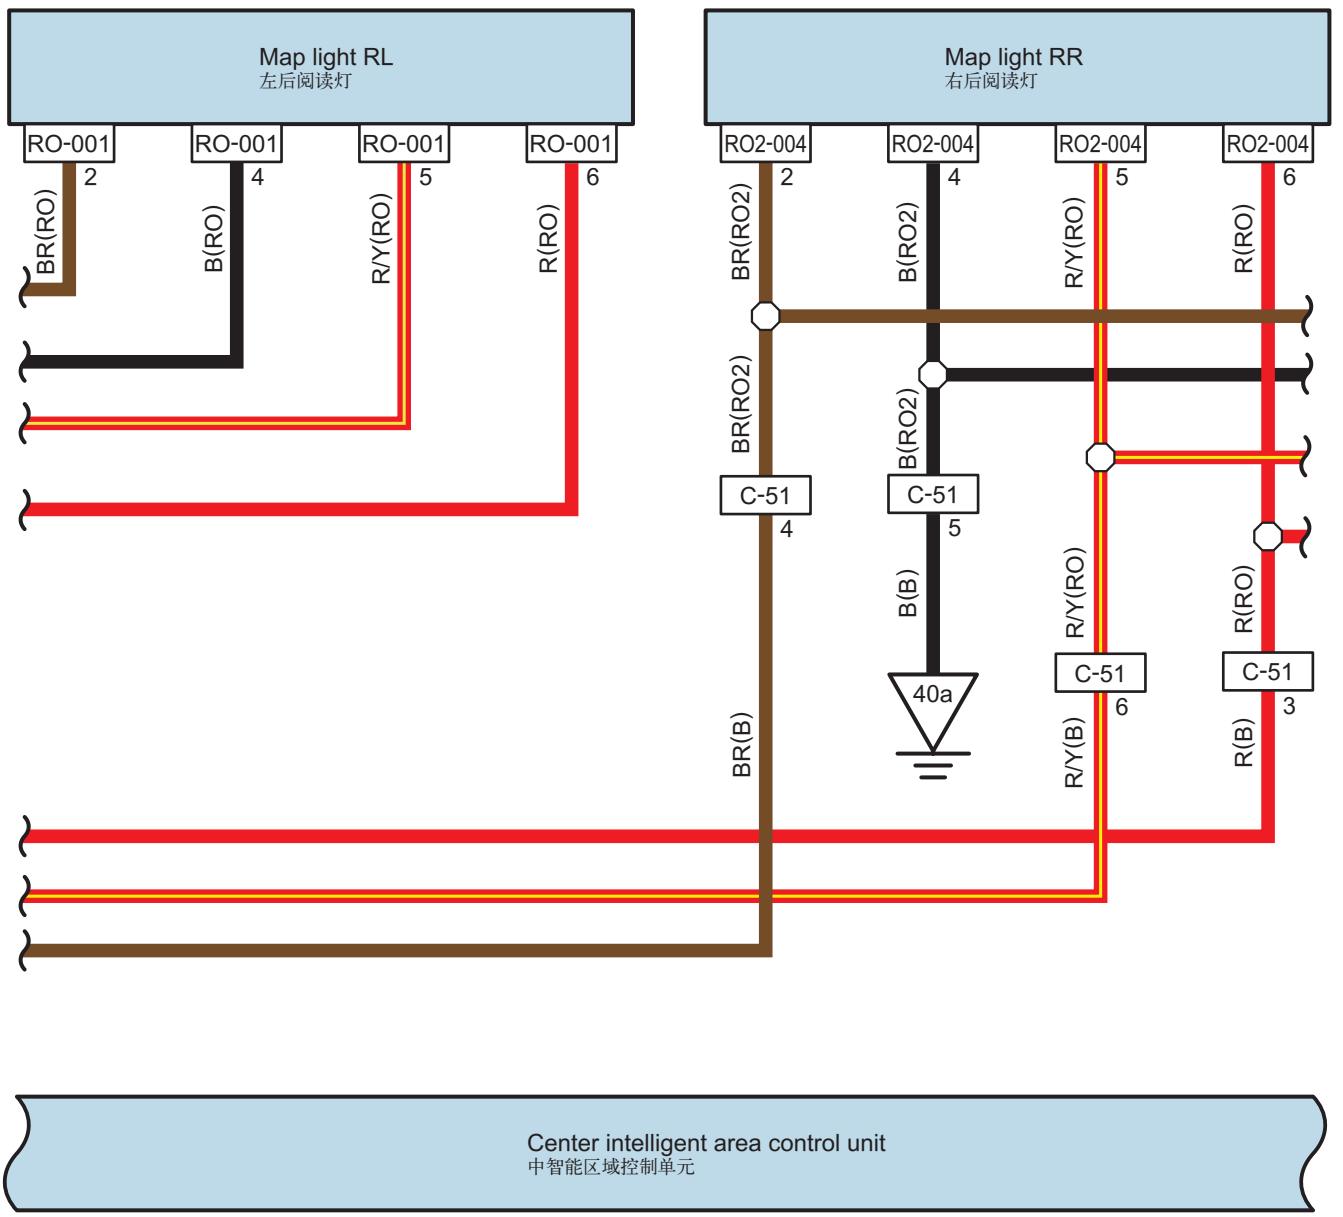

Central display
中间显示屏
I-022
A3
G/B(I)
C-21
14
G/B(B)
H5
B-031
Head up display
抬头显示器
I-010
A1
I-010
A2
W(I)
W(I)
W(I)
C-21
15
W(B)
H45
B-031
Driver monitoring camera
驾驶员监测摄像头
B-005
B1
R/Y(B)
R/Y(B)
G40
B-033
Center intelligent area control unit
中智能区域控制单元

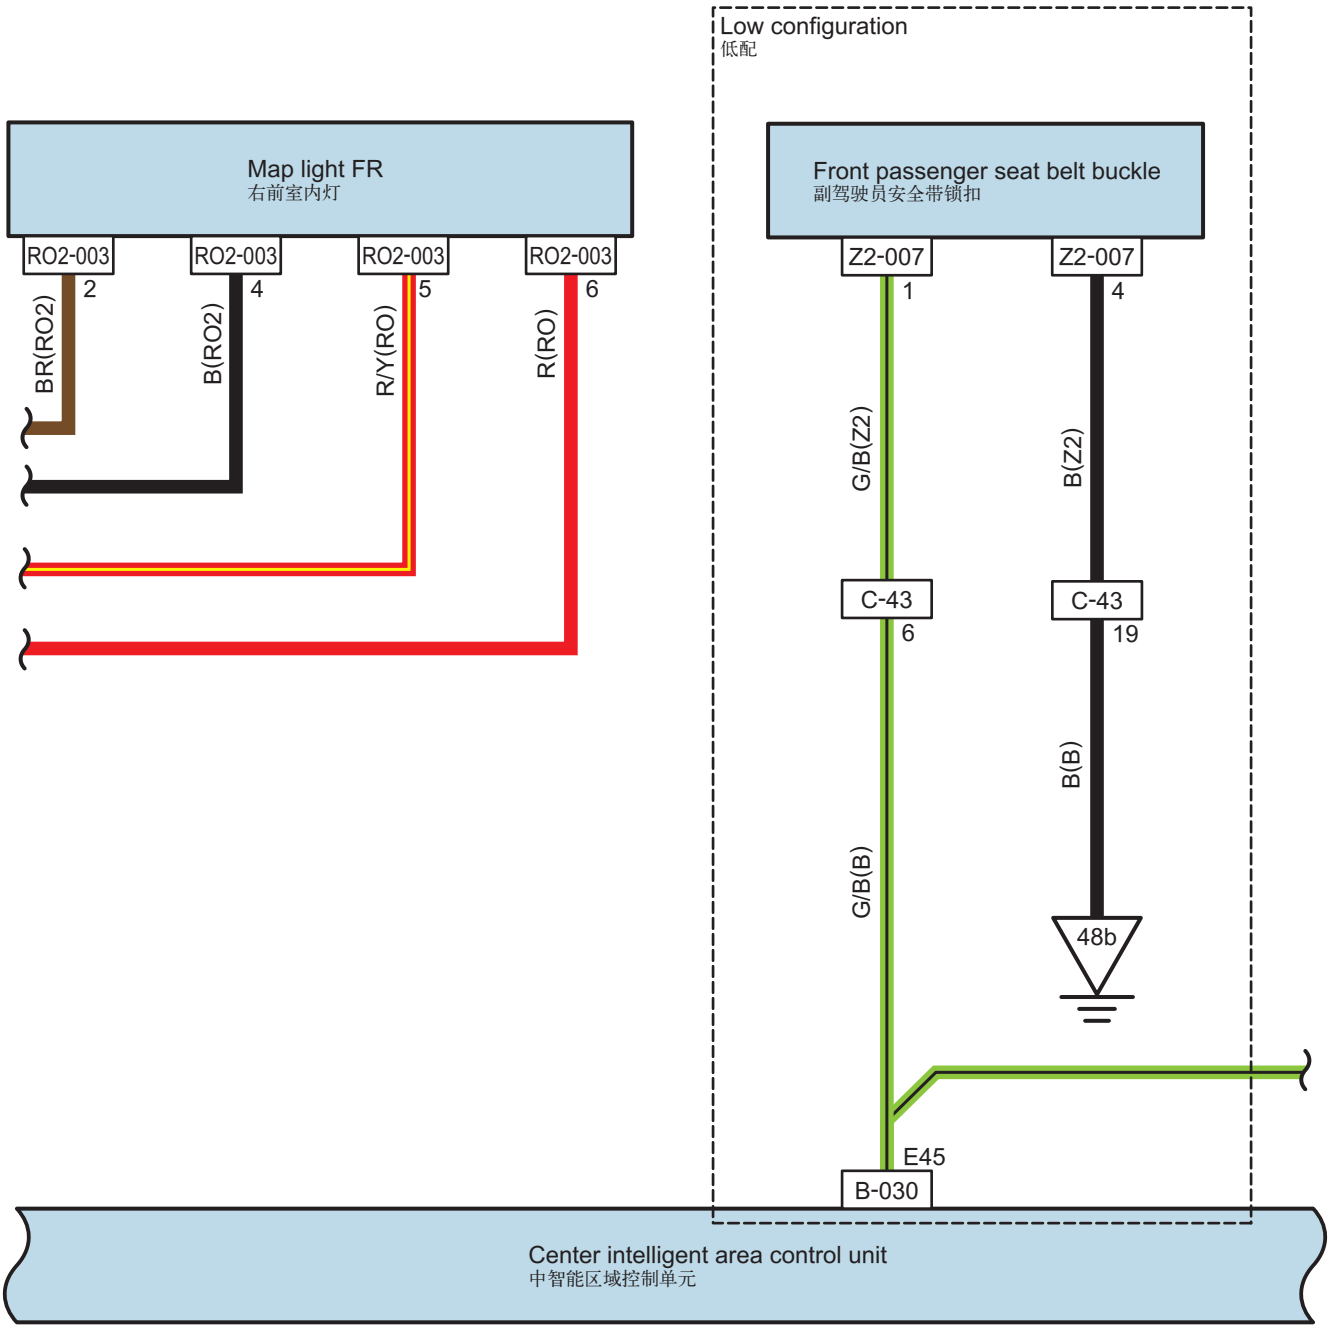

Passenger monitoring camera
副驾驶员监测摄像头
B-006
A1
R/Y(B)
Backup power supply
备用电源
B-036
2
B-036
1
R/Y(B)
B(B)
59a
H43
B-031
Single USB
单路USB
I-034
2
I-034
3
I-034
1
G/L(I)
G/L(I)
G/L(I)
C-23
2
G/L(B)
B(I)
62b
G41
B-033
Center intelligent area control unit
中智能区域控制单元

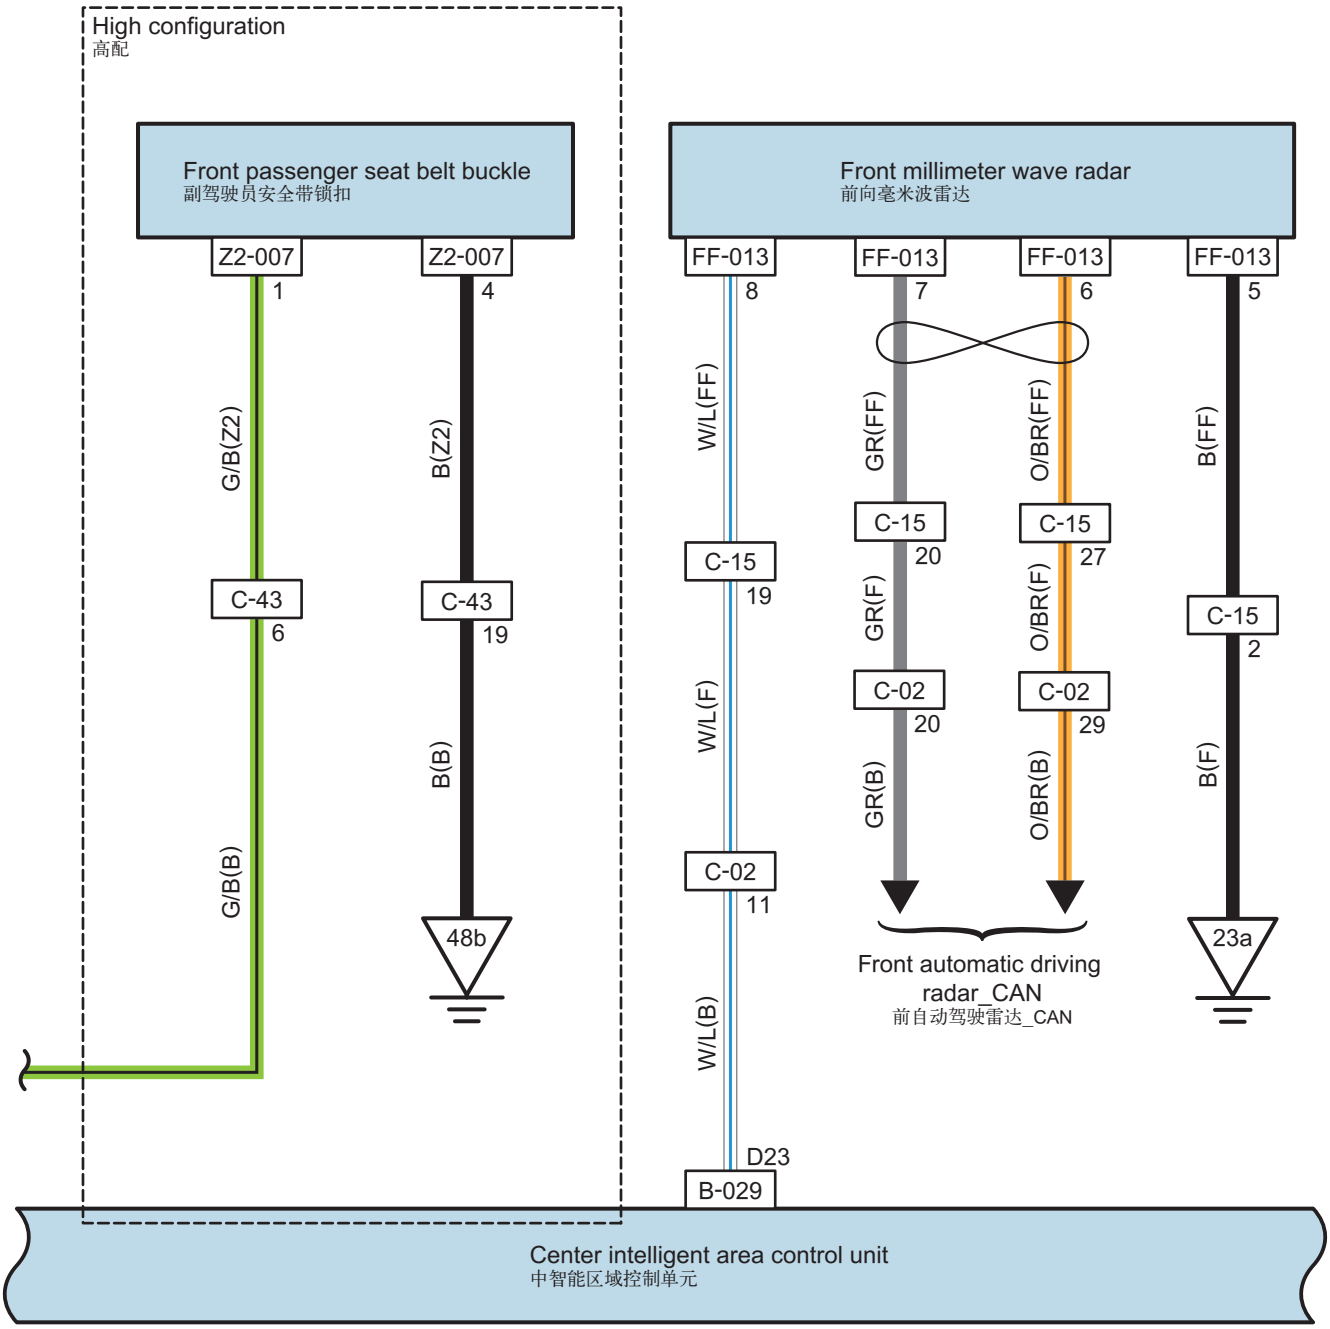

Dual USB
双路USB
B-035
2
B-035
1
B-035
3
G/L(B)
G/L(B)
B(B)
G/L(B)
59a
G42
B-033
Roof single USB
顶棚单路USB
RO2-005
1
RO2-005
4
RO2-005
2
O(RO2)
O(RO2)
B(RO2)
C-15
13
O(RO2)
B(B)
C-51
2
40a
O(B)
G32
B-033
Center intelligent area control unit
中智能区域控制单元

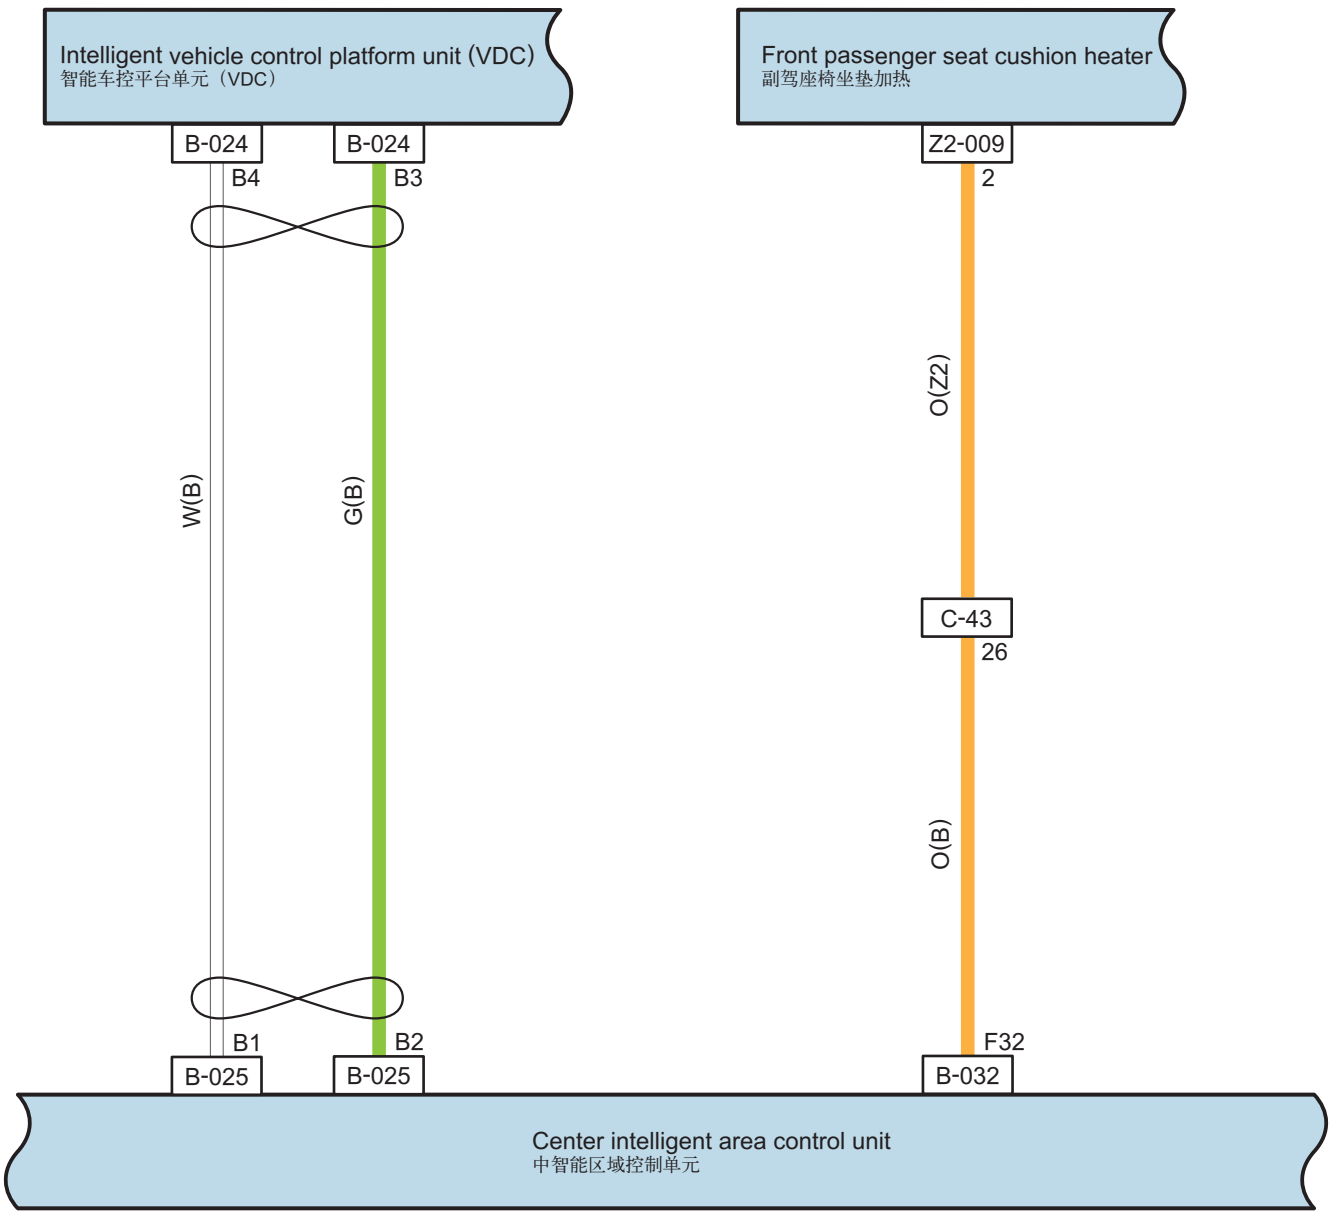

Driver sun visor switch
驾驶席遮阳板开关
B-002
2
B-002
1
Vanity mirror light FL
左前化妆镜灯
B-003
2
B-003
1
Front passenger sun visor switch
副驾驶席遮阳板开关
B-019
2
B-019
1
BR(B)
Y/G(B)
B(B)
BR(B)
43a
BR(B)
G19
B-033
Center intelligent area control unit
中智能区域控制单元

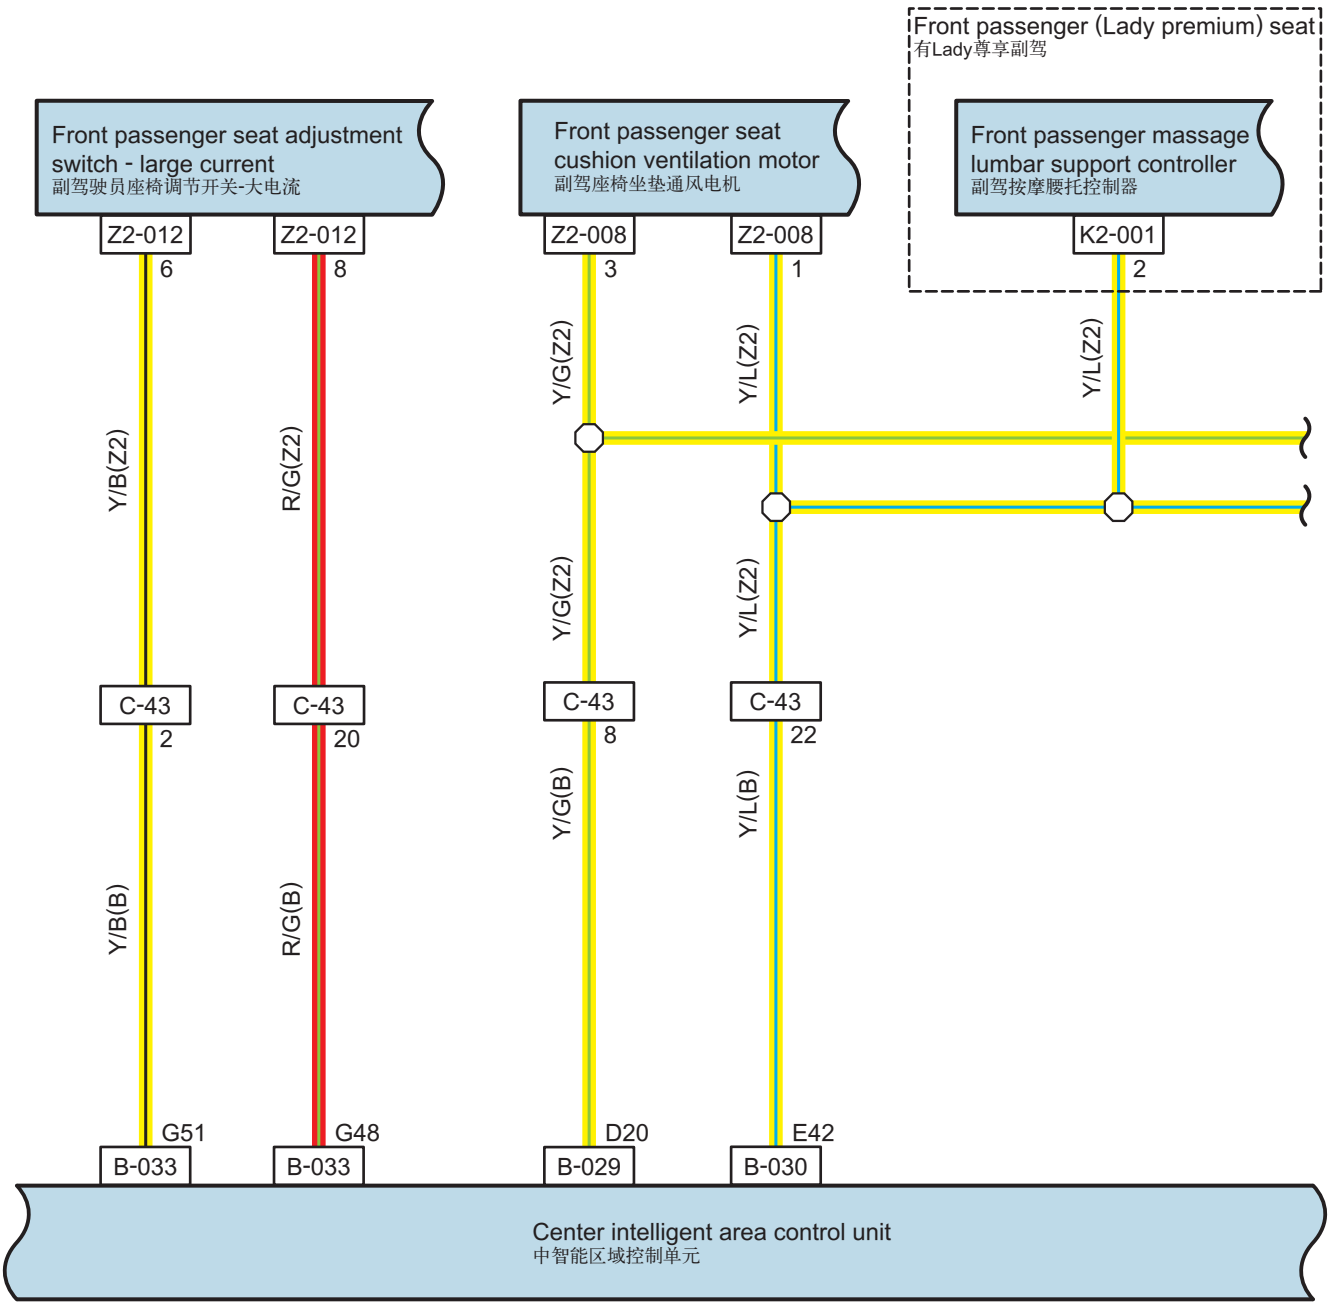

Vanity mirror light FR
右前化妆镜灯
Interior light FL
左前室内灯
B-020
2
B-020
1
RO-002
2
RO-002
4
RO-002
5
RO-002
6
W/G(B)
B(B)
BR(RO)
B(RO)
R/Y(RO)
R(RO)
BR(RO)
B(RO)
R/Y(RO)
R(RO)
C-50
4
C-50
5
C-50
6
C-50
3
BR(B)
B(B)
R/Y(B)
R(B)
40a
43a
R/Y(B)
R(B)
F24
G1
B-032
B-033
Center intelligent area control unit
中智能区域控制单元

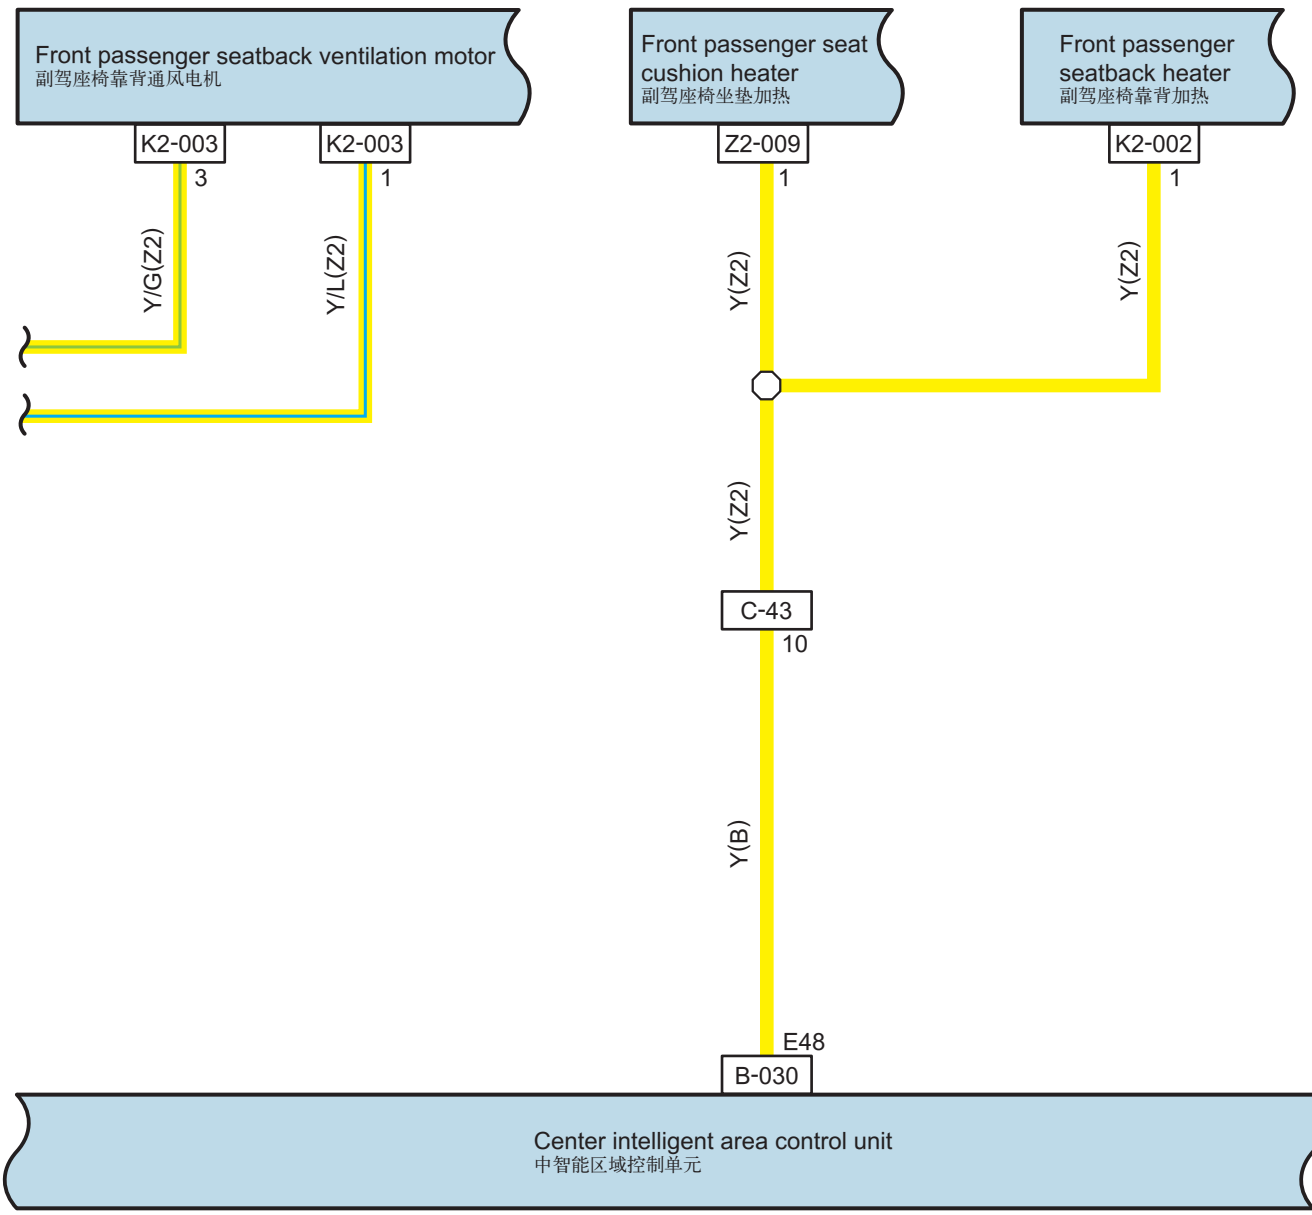

Map light RL
左后阅读灯
Map light RR
右后阅读灯
RO-001
2
RO-001
4
RO-001
5
RO-001
6
BR(RO)
B(RO)
R/Y(RO)
R(RO)
RO2-004
2
RO2-004
4
RO2-004
5
RO2-004
6
BR(RO2)
B(RO2)
R/Y(RO)
R(RO)
BR(RO2)
B(RO2)
C-51
4
C-51
5
B(B)
40a
R/Y(RO)
R(RO)
C-51
6
C-51
3
BR(B)
R/Y(B)
R(B)
Center intelligent area control unit
中智能区域控制单元

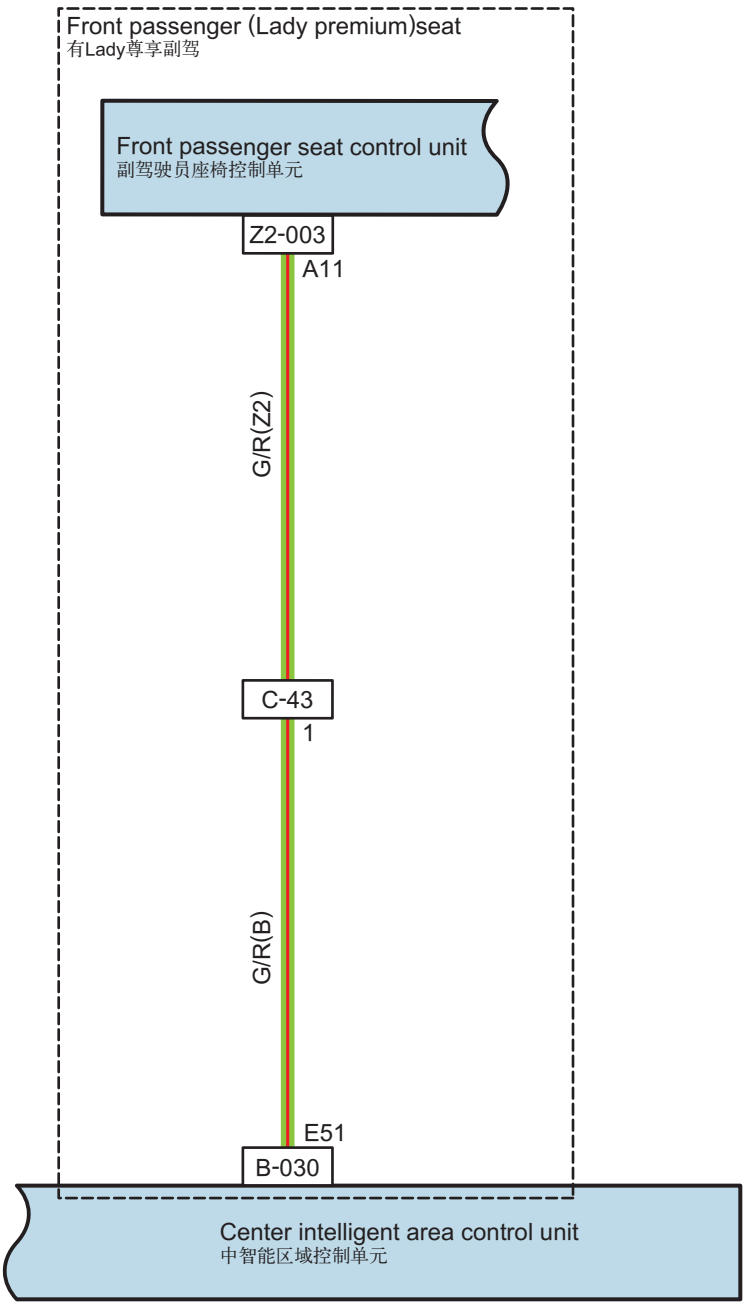

Low configuration
低配
Map light FR
右前室内灯
RO2-003
2
RO2-003
4
RO2-003
5
RO2-003
6
BR(RO2)
B(RO2)
R/Y(RO)
R(RO)
Front passenger seat belt buckle
副驾驶员安全带锁扣
Z2-007
1
Z2-007
4
G/B(Z2)
B(Z2)
C-43
6
C-43
19
B(B)
G/B(B)
48b
E45
B-030
Center intelligent area control unit
中智能区域控制单元

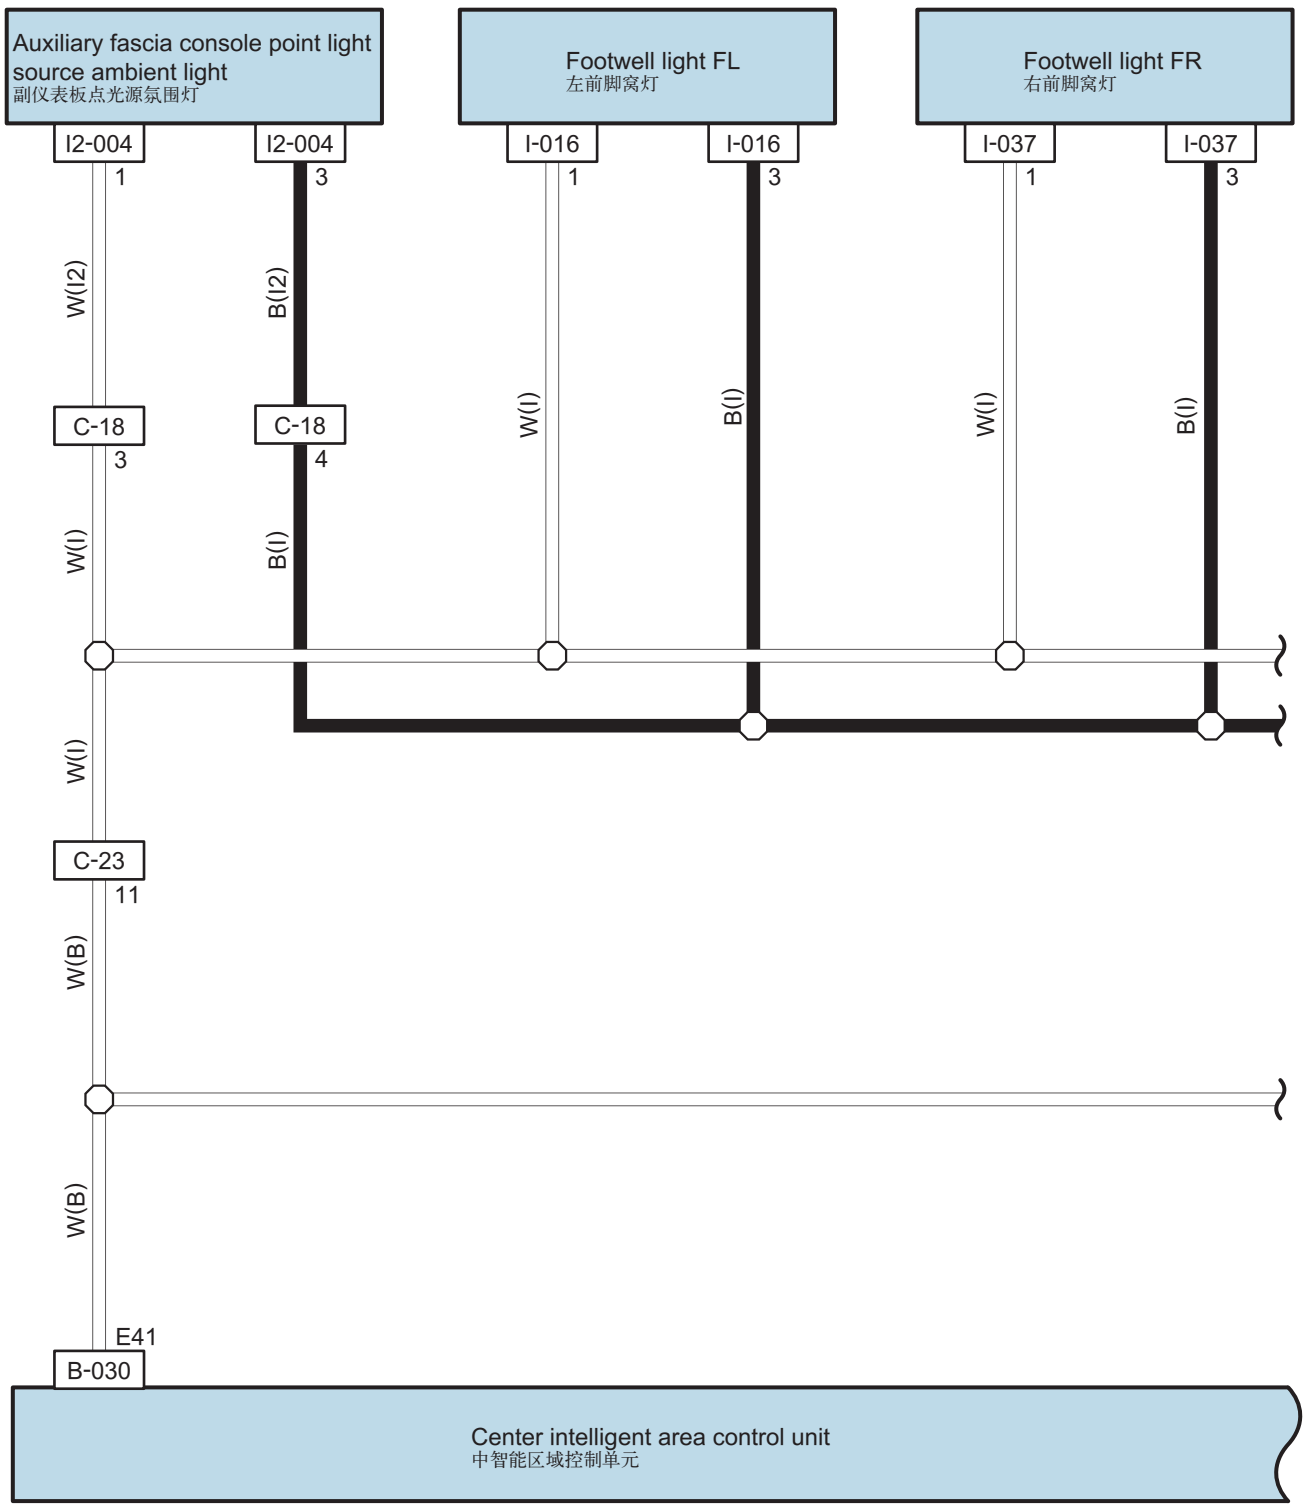

High configuration
高配
Front passenger seat belt buckle
副驾驶员安全带锁扣
Z2-007
1
Z2-007
4
G/B(Z2)
B(Z2)
C-43
6
C-43
19
G/B(B)
B(B)
48b
Front millimeter wave radar
前向毫米波雷达
FF-013
8
FF-013
7
FF-013
6
FF-013
5
W/L(FF)
GR(FF)
O/BR(FF)
B(FF)
C-15
19
C-15
20
C-15
27
C-15
2
W/L(F)
GR(F)
O/BR(F)
B(F)
C-02
20
C-02
29
C-02
11
GR(B)
O/BR(B)
W/L(B)
23a
Front automatic driving radar_CAN
前自动驾驶雷达_CAN
D23
B-029
Center intelligent area control unit
中智能区域控制单元

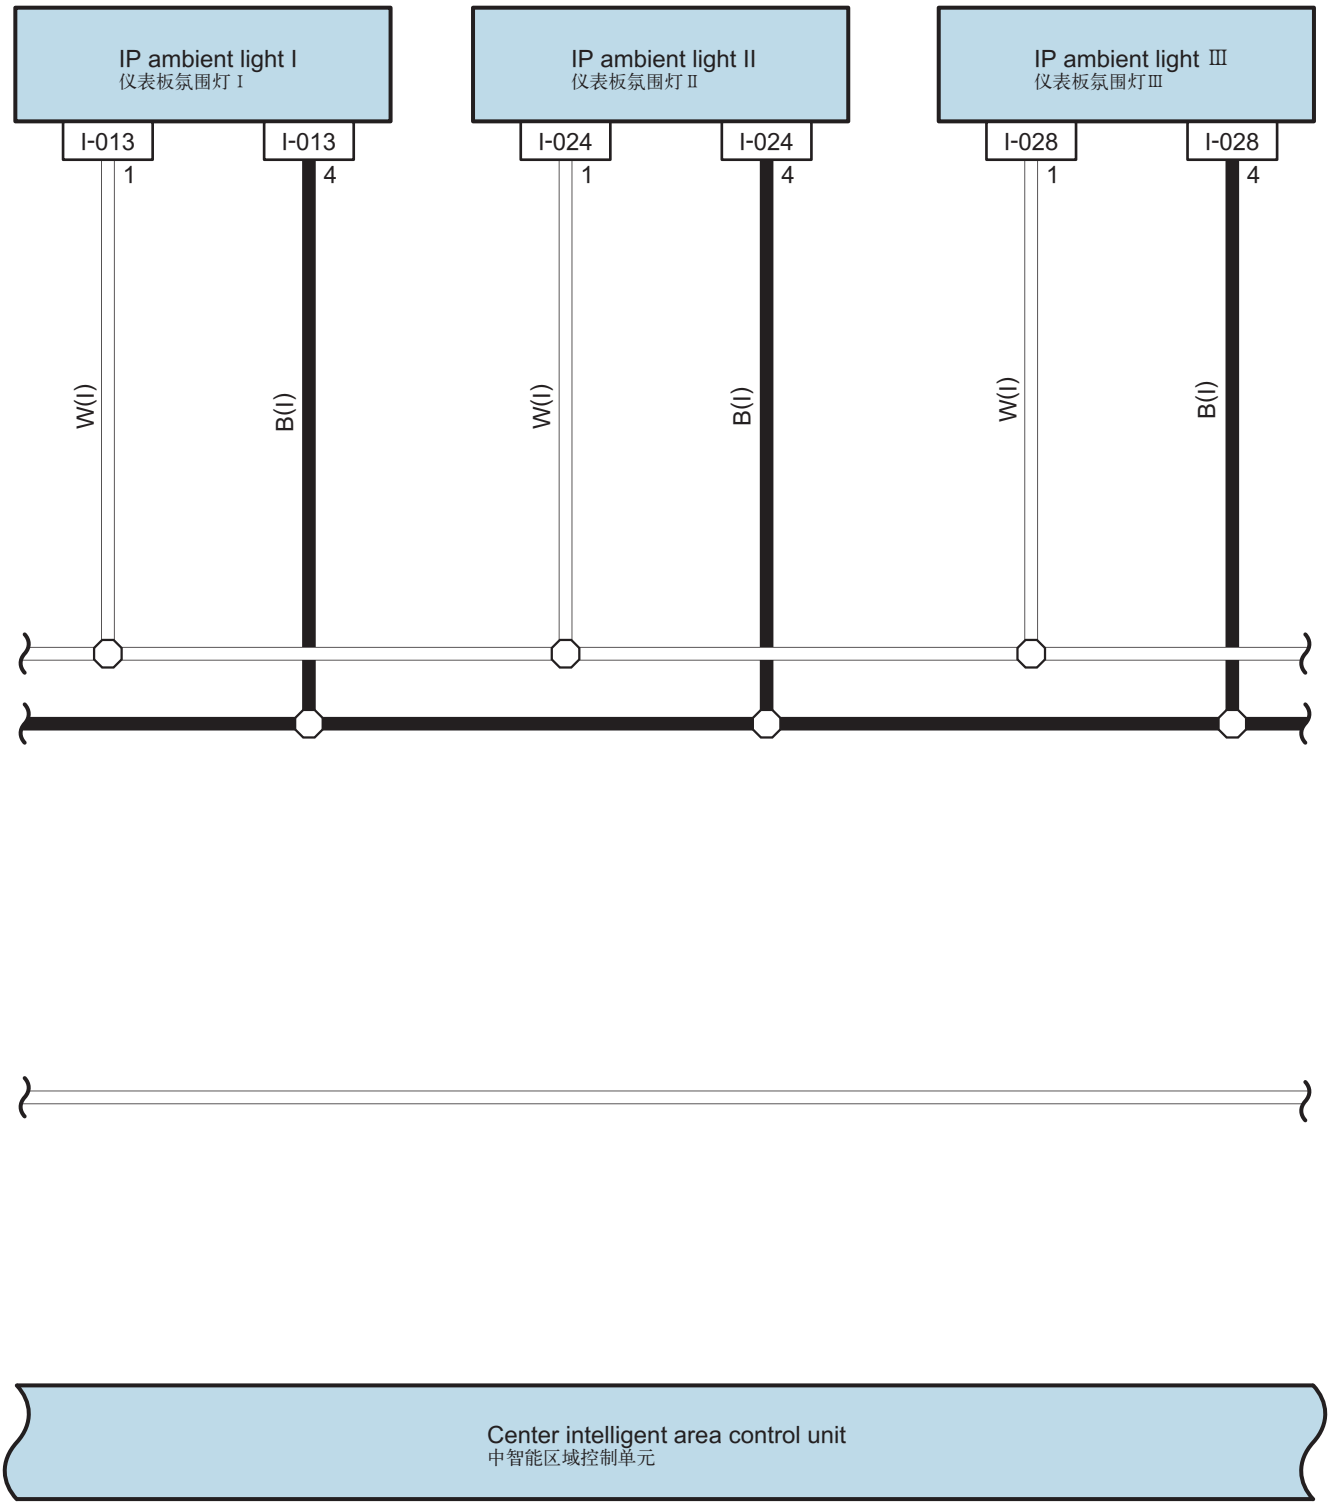

Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
B-024
B-024
B4
B3
W(B)
G(B)
B1
B2
B-025
B-025
Front passenger seat cushion heater
副驾座椅坐垫加热
Z2-009
2
O(Z2)
C-43
26
O(B)
F32
B-032
Center intelligent area control unit
中智能区域控制单元

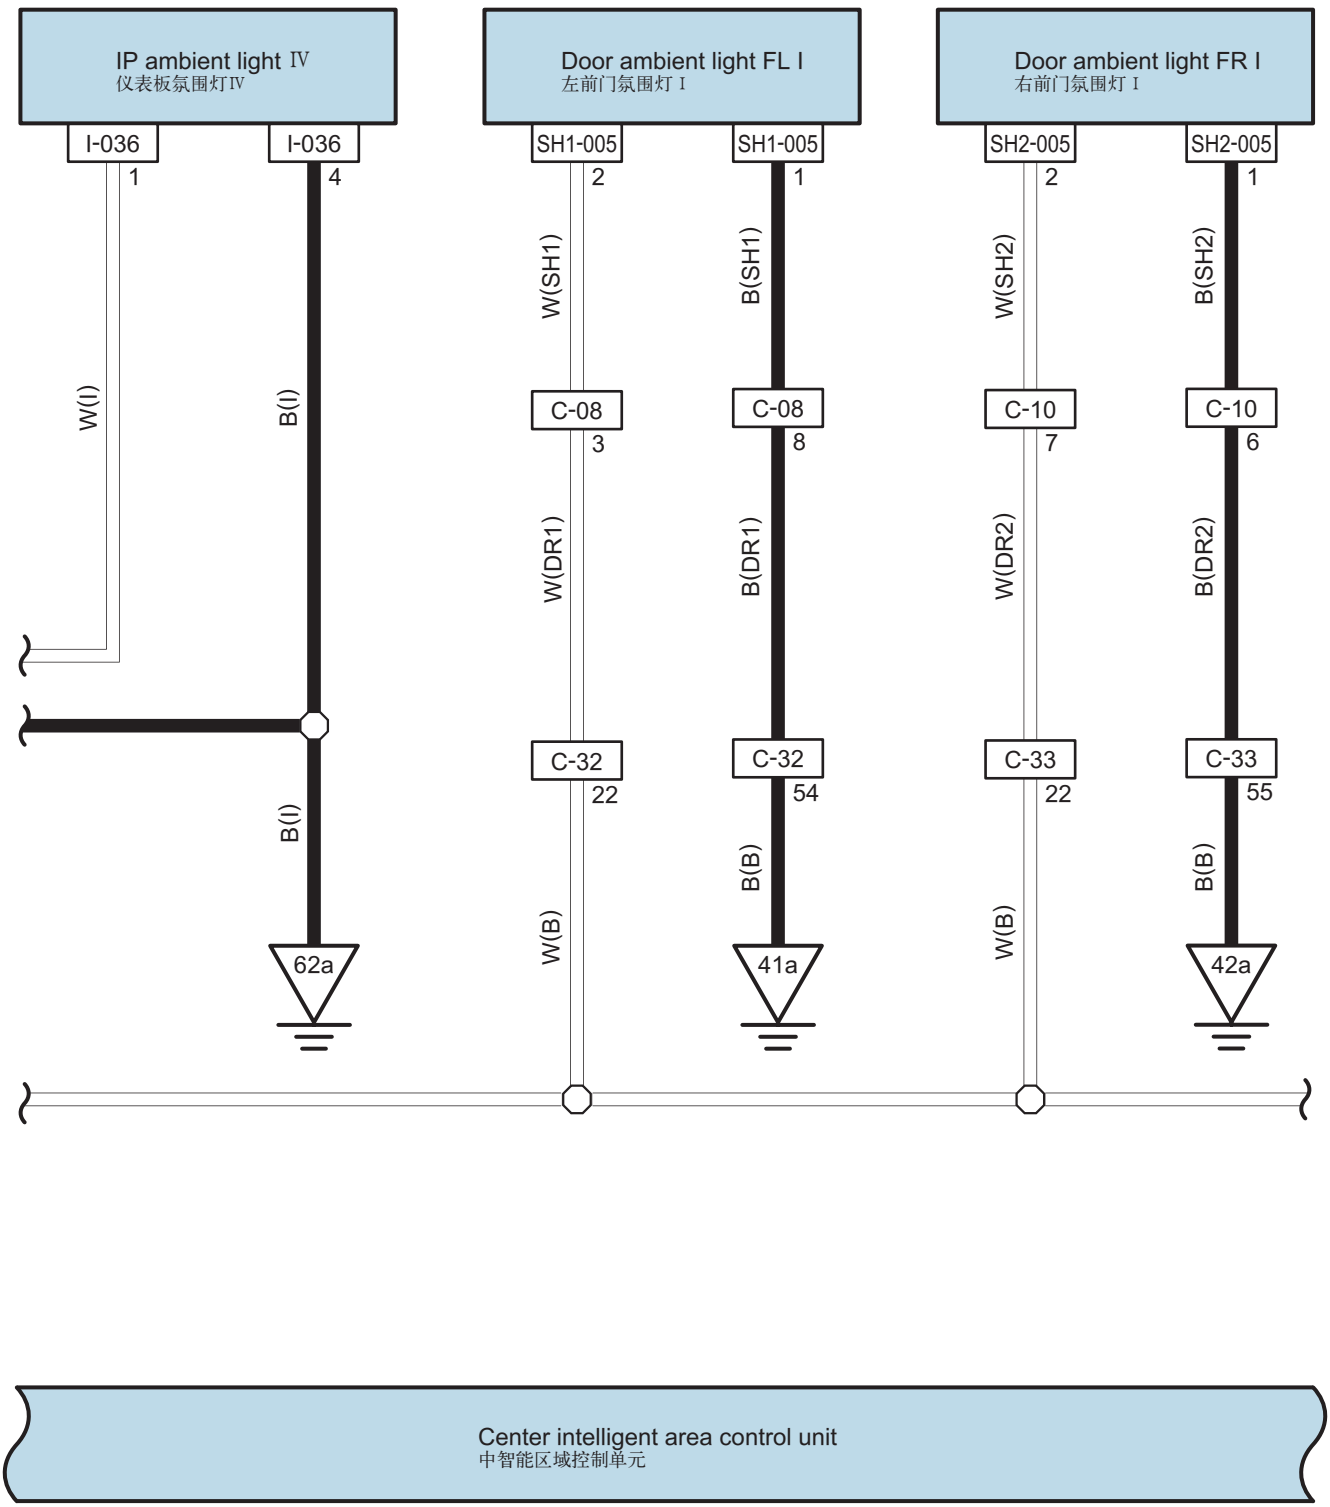

Front passenger (Lady premium) seat
有Lady尊享副驾
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流
Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Front passenger massage lumbar support controller
副驾按摩腰托控制器
Z2-012
6
Z2-012
8
Z2-008
3
Z2-008
1
K2-001
2
Y/B(Z2)
R/G(Z2)
Y/G(Z2)
Y/L(Z2)
Y/L(Z2)
Y/G(Z2)
Y/L(Z2)
C-43
2
C-43
20
C-43
8
C-43
22
Y/B(B)
R/G(B)
Y/G(B)
Y/L(B)
G51
G48
D20
E42
B-033
B-033
B-029
B-030
Center intelligent area control unit
中智能区域控制单元

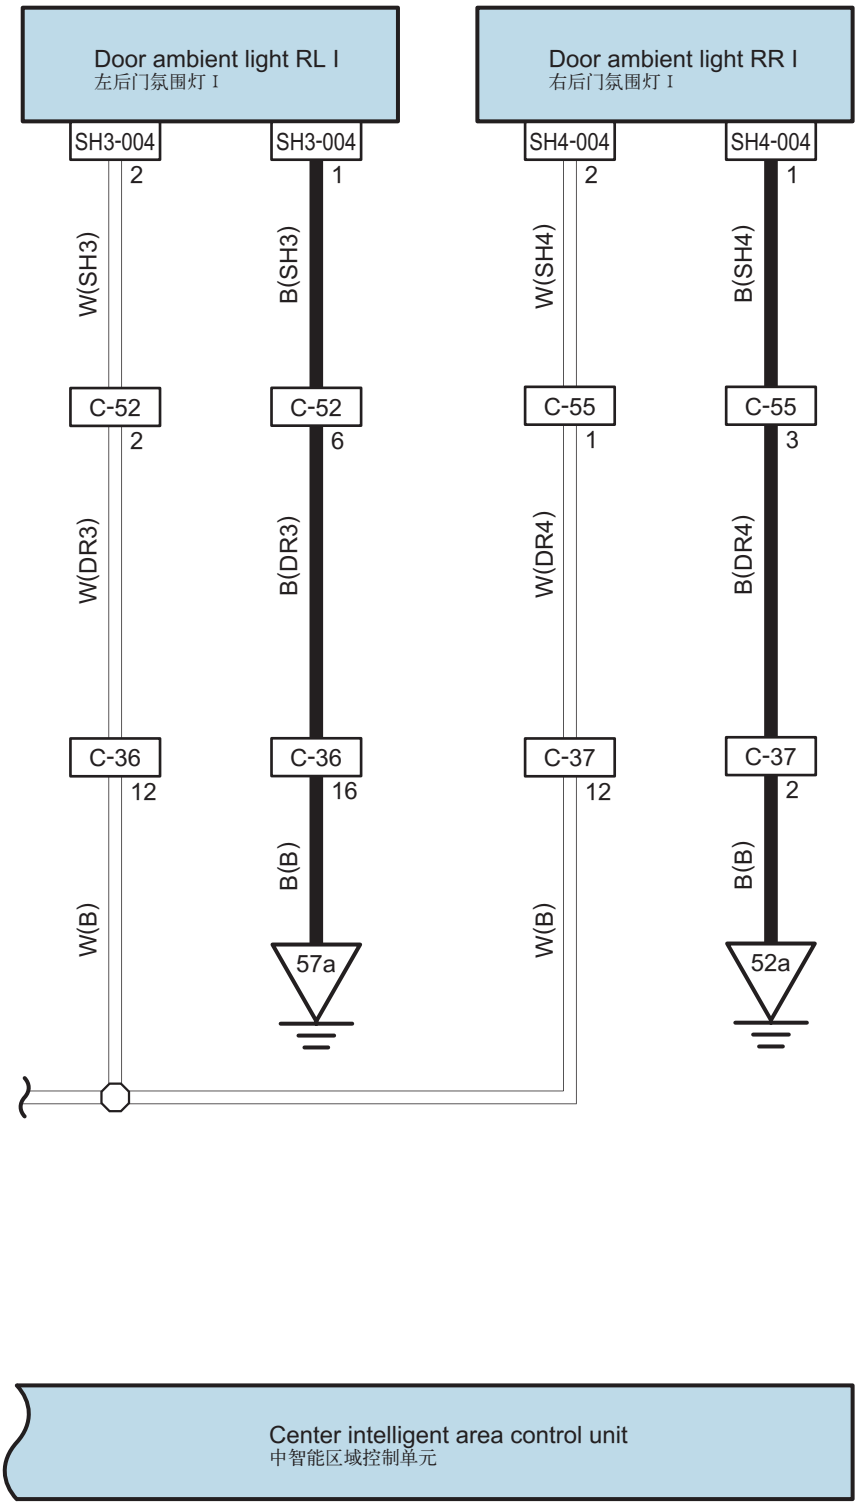

Front passenger seatback ventilation motor
副驾座椅靠背通风电机
K2-003
3
K2-003
1
Y/G(Z2)
Y/L(Z2)
Front passenger seat cushion heater
副驾座椅坐垫加热
Z2-009
1
Front passenger seatback heater
副驾座椅靠背加热
K2-002
1
Y(Z2)
Y(Z2)
Y(Z2)
C-43
10
Y(B)
E48
B-030
Center intelligent area control unit
中智能区域控制单元

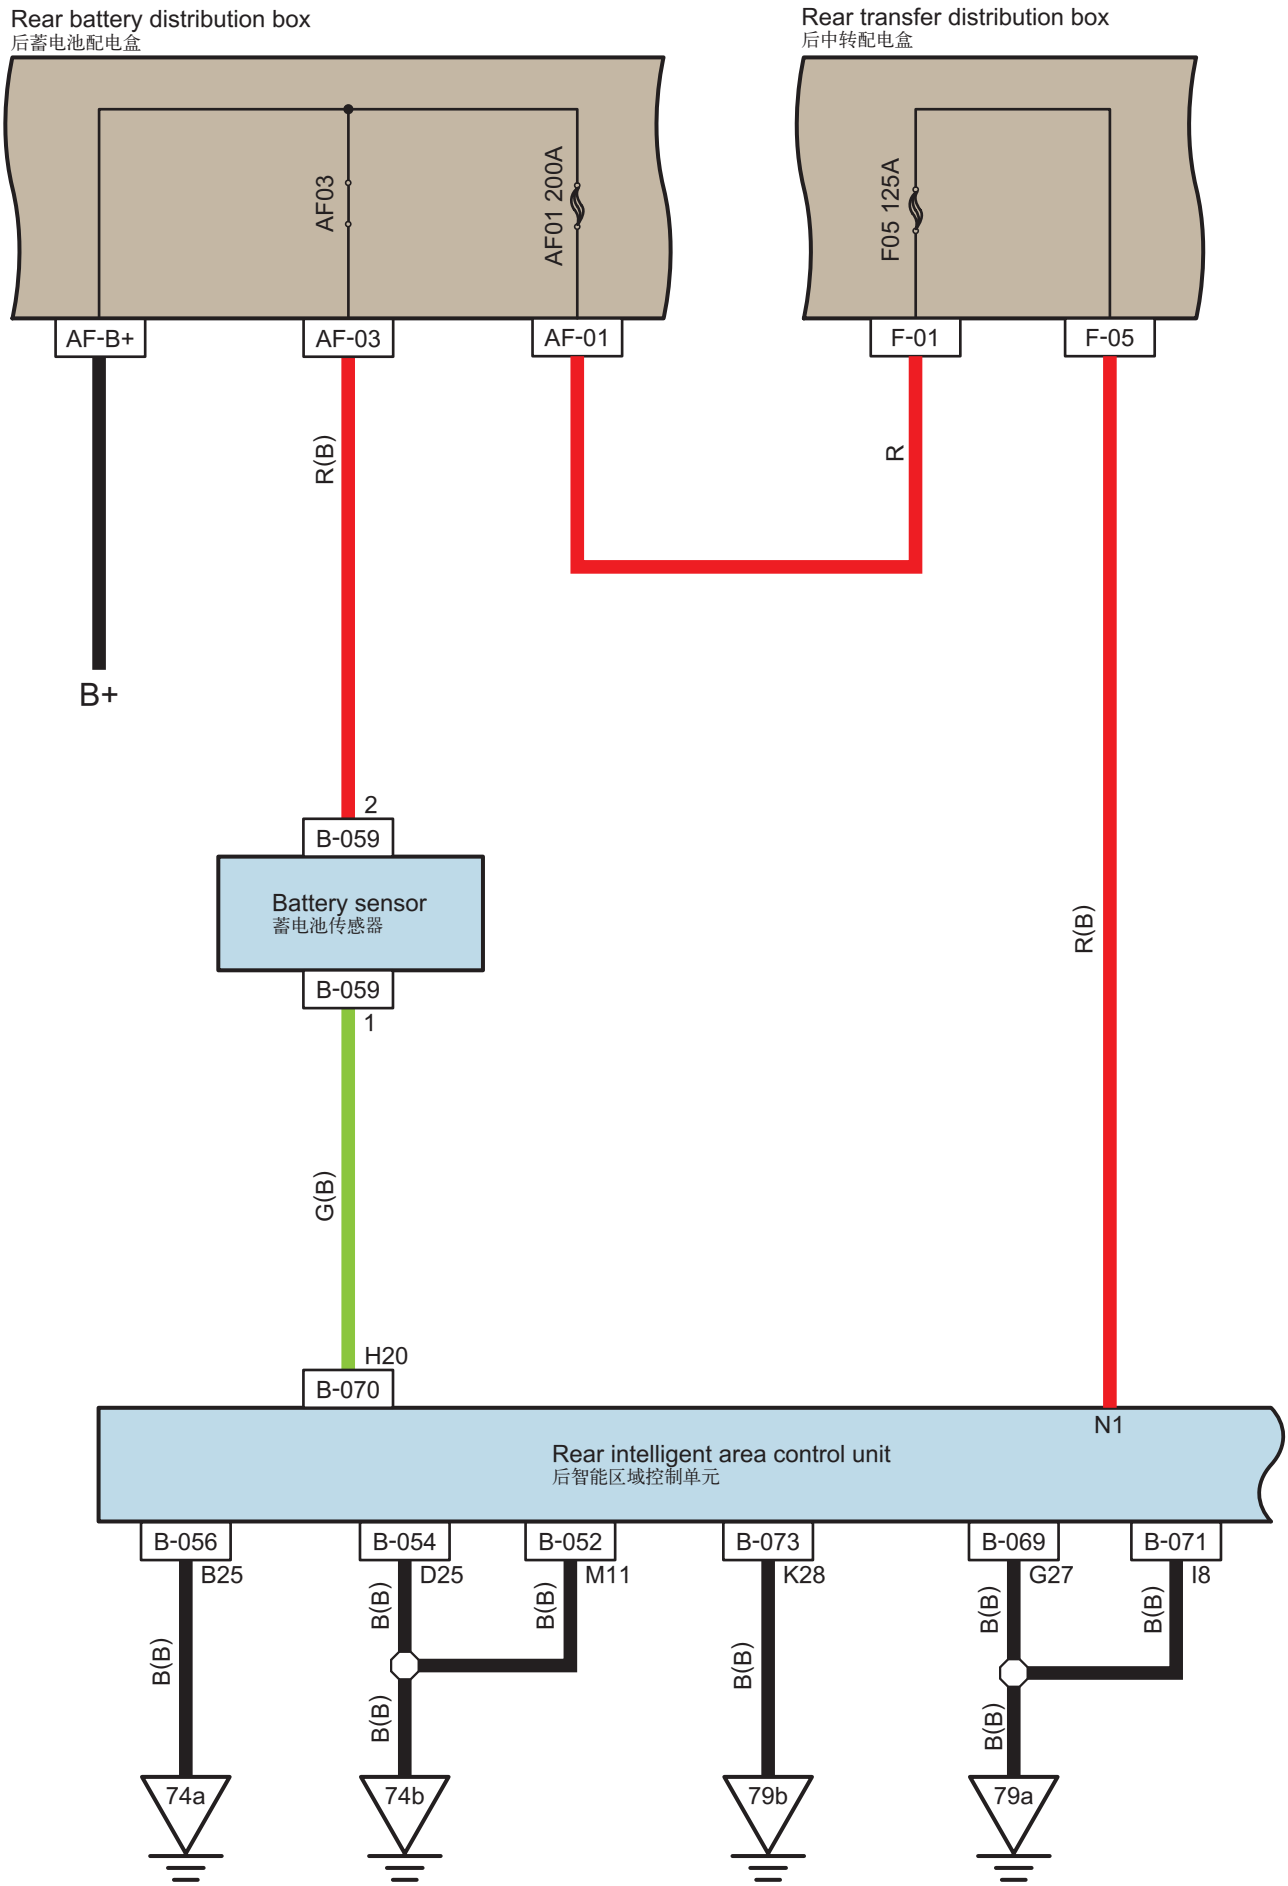

Front passenger (Lady premium)seat
有Lady尊享副驾
Front passenger seat control unit
副驾驶员座椅控制单元
Z2-003
A11
G/R(Z2)
C-43
1
G/R(B)
E51
B-030
Center intelligent area control unit
中智能区域控制单元

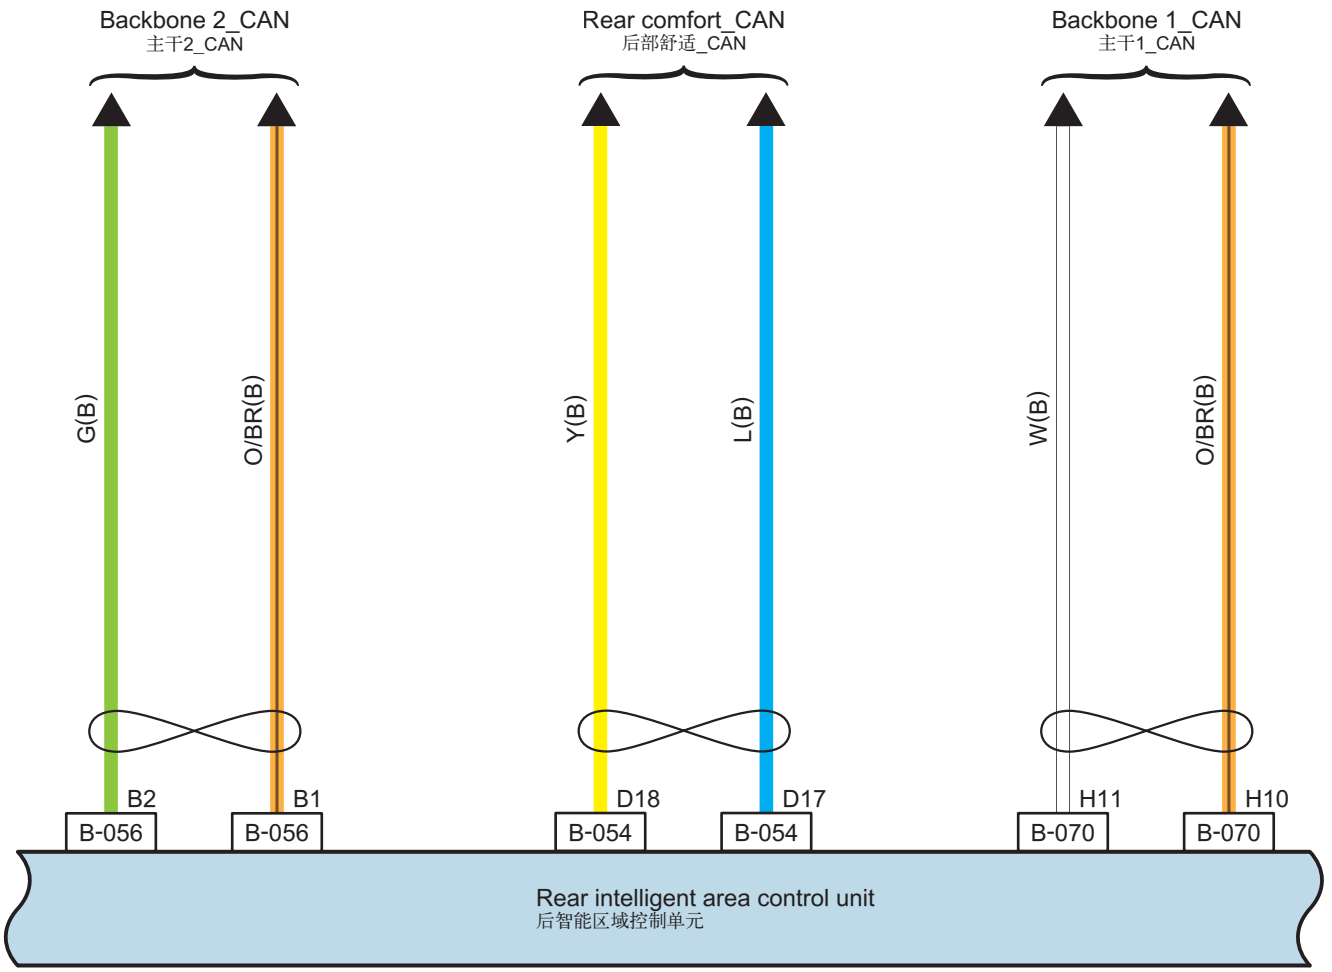

Auxiliary fascia console point light source ambient light
副仪表板点光源氛围灯
Footwell light FL
左前脚窝灯
Footwell light FR
右前脚窝灯
I2-004
1
I2-004
3
I-016
1
I-016
3
I-037
1
I-037
3
W(I2)
B(I2)
W(I)
B(I)
W(I)
B(I)
C-18
3
C-18
4
W(I)
B(I)
W(I)
C-23
11
W(B)
W(B)
E41
B-030
Center intelligent area control unit
中智能区域控制单元

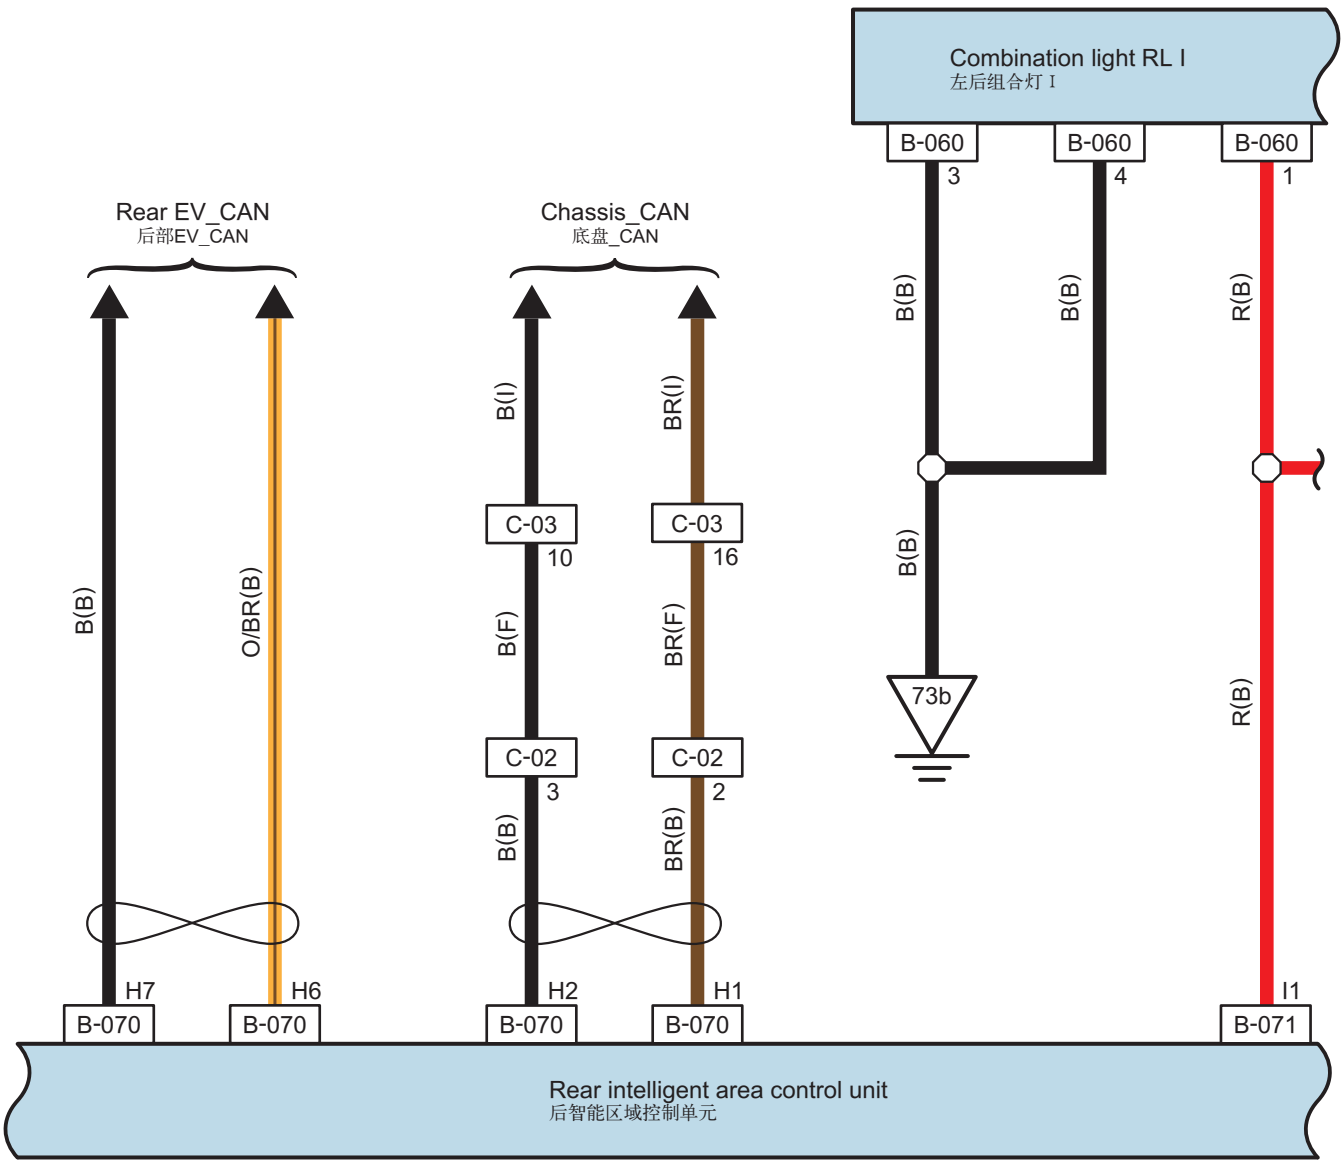

IP ambient light I
仪表板氛围灯 I
IP ambient light II
仪表板氛围灯 II
IP ambient light Ⅲ
仪表板氛围灯Ⅲ
I-013
1
I-013
4
I-024
1
I-024
4
I-028
1
I-028
4
W(I)
B(I)
W(I)
B(I)
W(I)
B(I)
Center intelligent area control unit
中智能区域控制单元

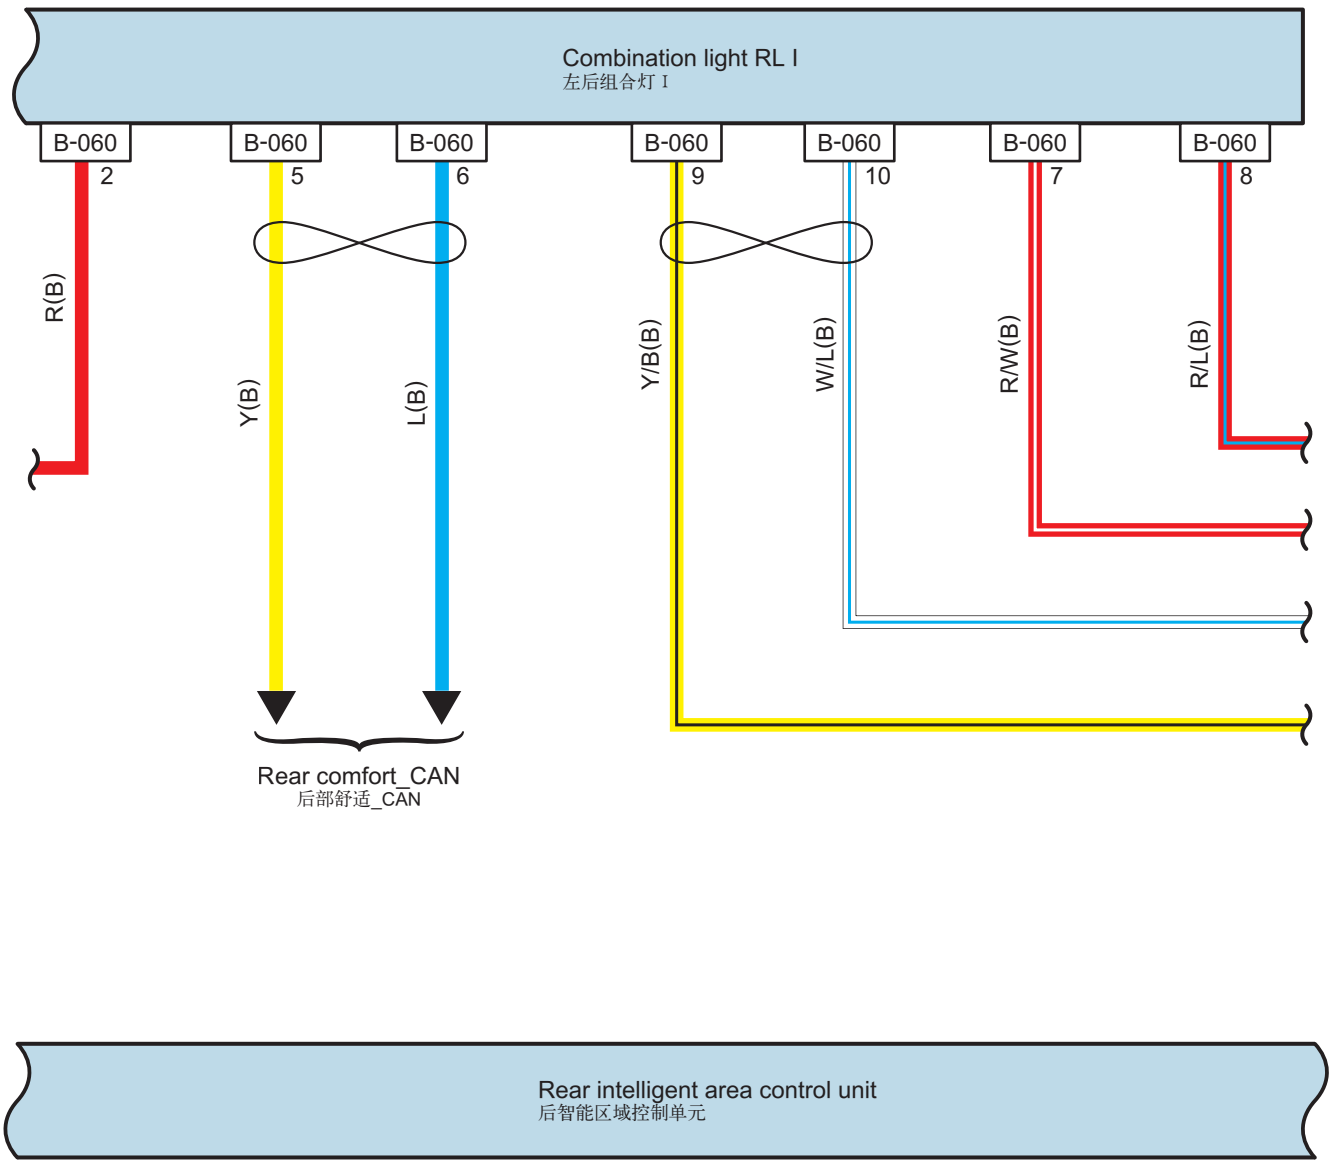

IP ambient light Ⅳ
仪表板氛围灯Ⅳ
I-036
1
I-036
4
W(I)
B(I)
B(I)
62a
Door ambient light FL I
左前门氛围灯 I
SH1-005
2
SH1-005
1
W(SH1)
B(SH1)
C-08
3
C-08
8
W(DR1)
B(DR1)
C-32
22
C-32
54
B(B)
W(B)
41a
Door ambient light FR I
右前门氛围灯 I
SH2-005
2
SH2-005
1
W(SH2)
B(SH2)
C-10
7
C-10
6
W(DR2)
B(DR2)
C-33
22
C-33
55
B(B)
W(B)
42a
Center intelligent area control unit
中智能区域控制单元

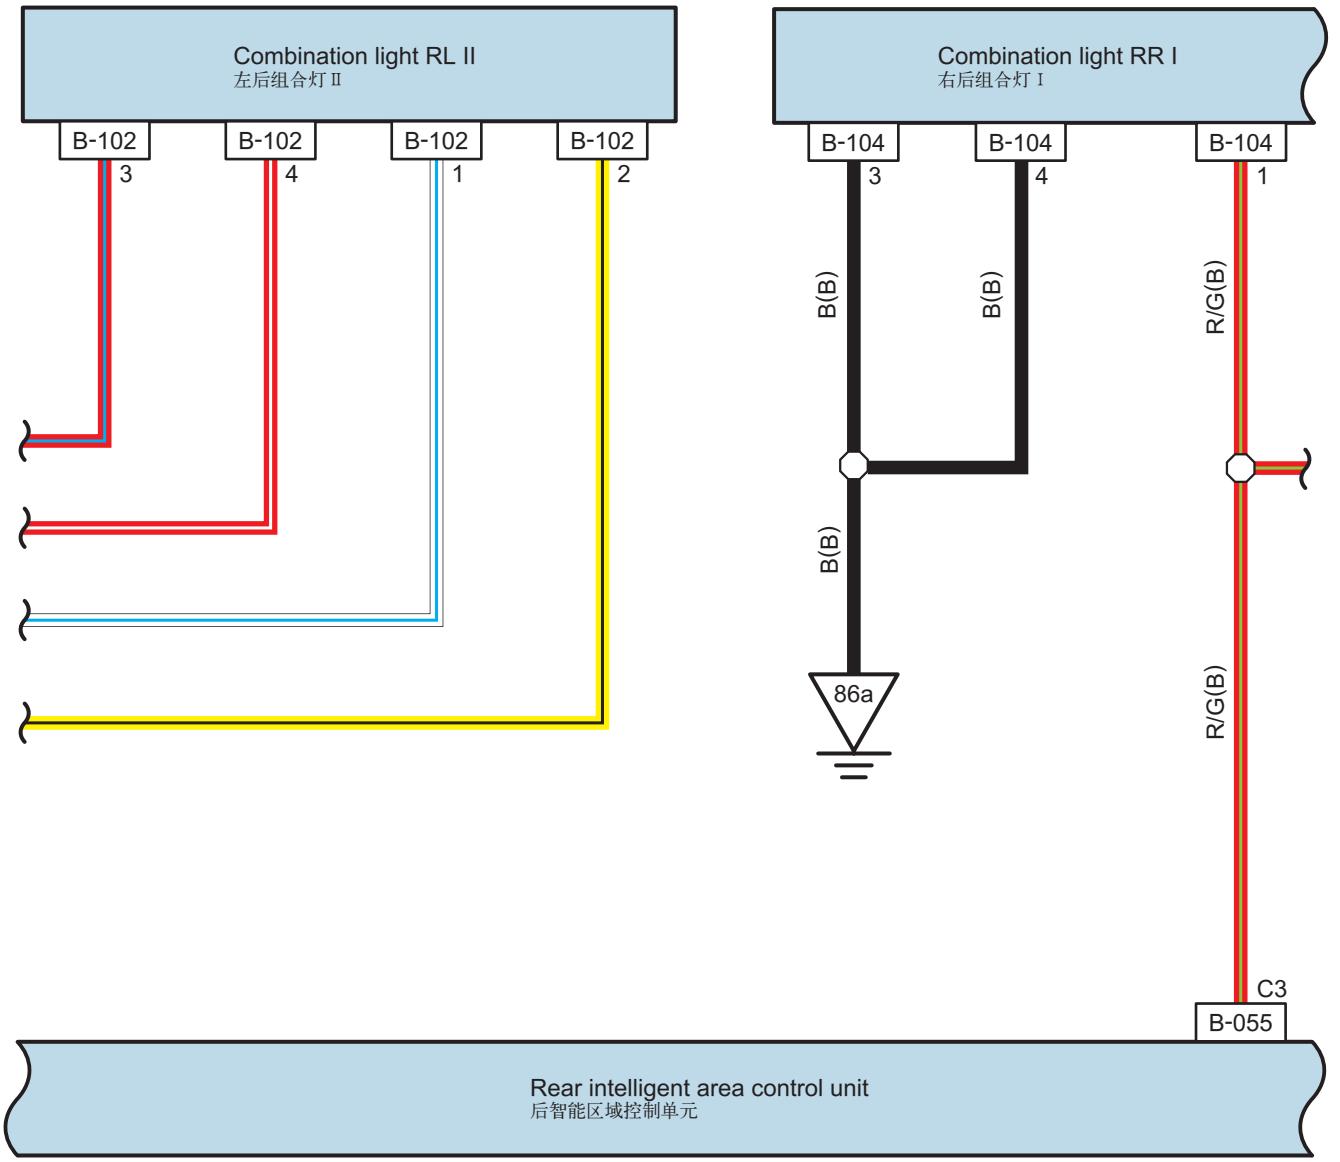

Door ambient light RL I
左后门氛围灯 I
Door ambient light RR I
右后门氛围灯 I
SH3-004
2
SH3-004
1
SH4-004
2
SH4-004
1
W(SH3)
B(SH3)
W(SH4)
B(SH4)
C-52
2
C-52
6
C-55
1
C-55
3
W(DR3)
B(DR3)
W(DR4)
B(DR4)
C-36
12
C-36
16
C-37
12
C-37
2
B(B)
W(B)
B(B)
W(B)
57a
52a
Center intelligent area control unit
中智能区域控制单元

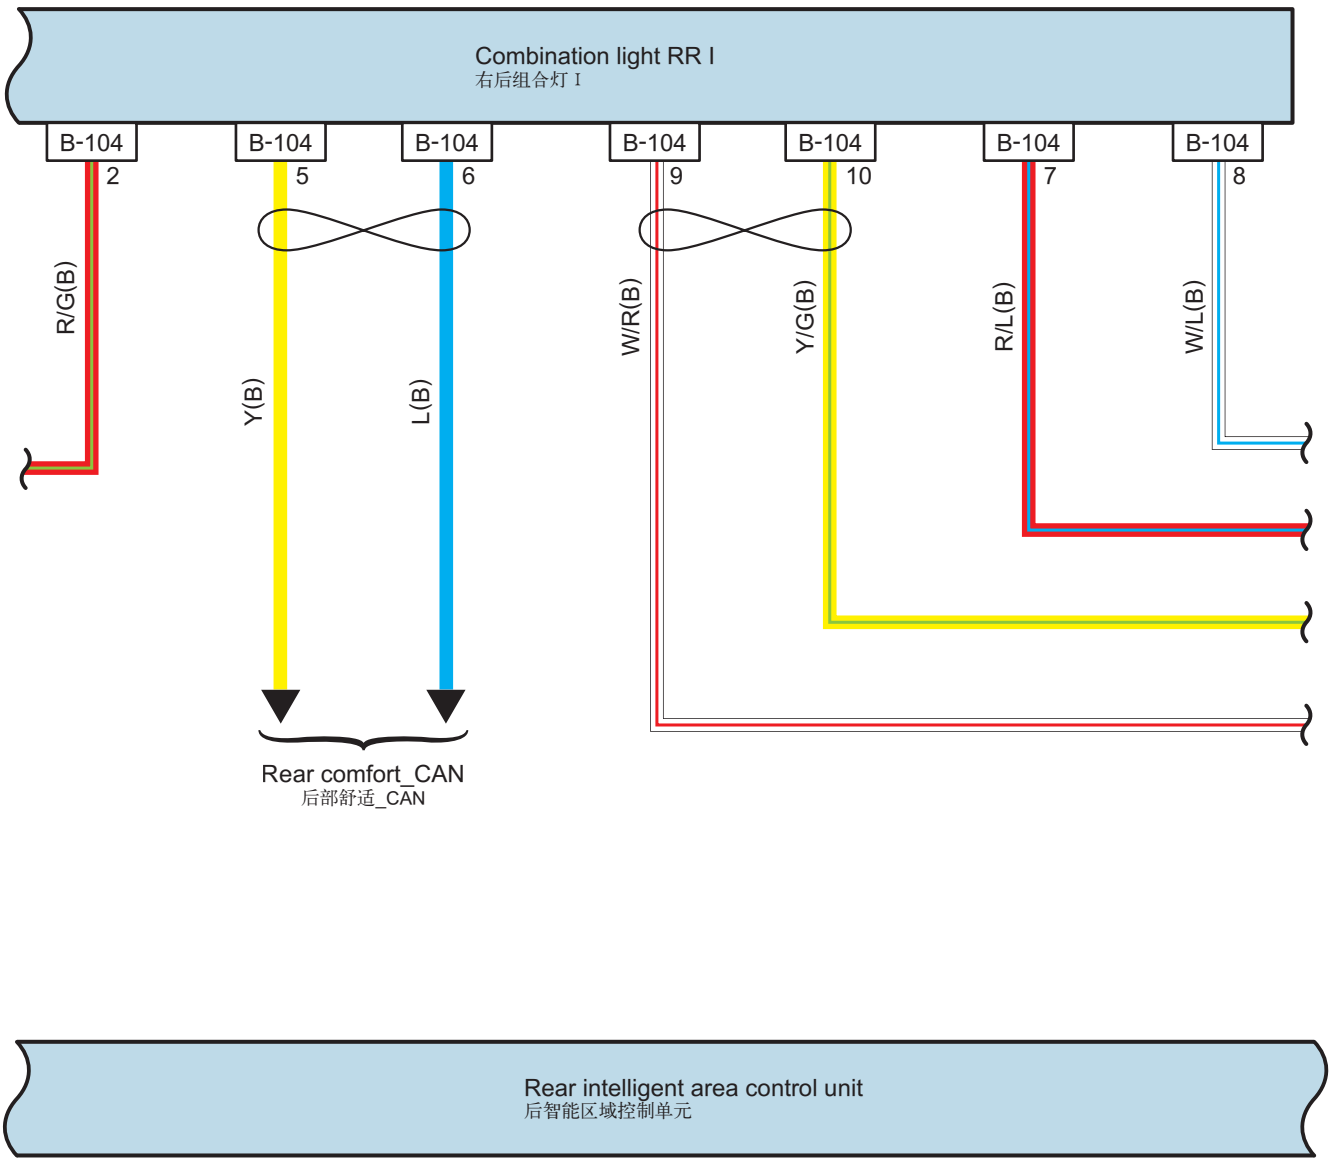

Rear battery distribution box
后蓄电池配电盒
AF03
AF01 200A
AF-B+
AF-03
AF-01
B+
R(B)
2
B-059
Battery sensor
蓄电池传感器
B-059
1
G(B)
H20
B-070
Rear transfer distribution box
后中转配电盒
F05 125A
F-01
F-05
R
R(B)
N1
Rear intelligent area control unit
后智能区域控制单元
B-056
B25
B-054
D25
B-052
M11
B-073
K28
B-069
G27
B-071
I8
B(B)
74a
74b
79b
79a

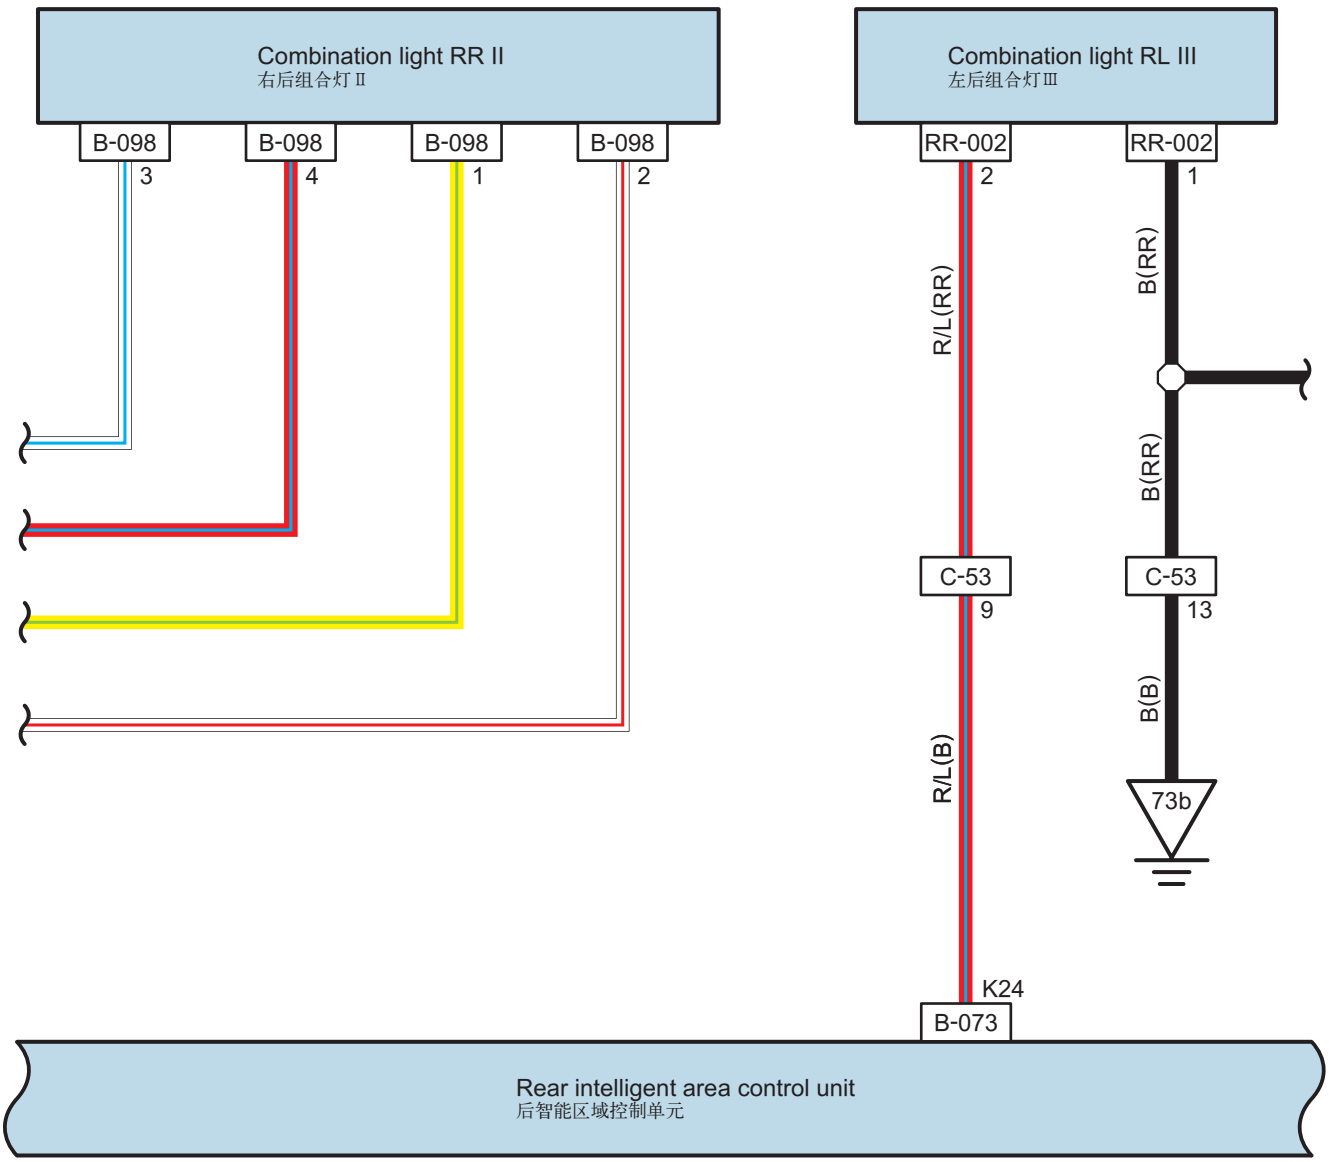

Backbone 2_CAN
主干2_CAN
Rear comfort_CAN
后部舒适_CAN
Backbone 1_CAN
主干1_CAN
G(B)
O/BR(B)
Y(B)
L(B)
W(B)
O/BR(B)
B2
B1
D18
D17
H11
H10
B-056
B-056
B-054
B-054
B-070
B-070
Rear intelligent area control unit
后智能区域控制单元

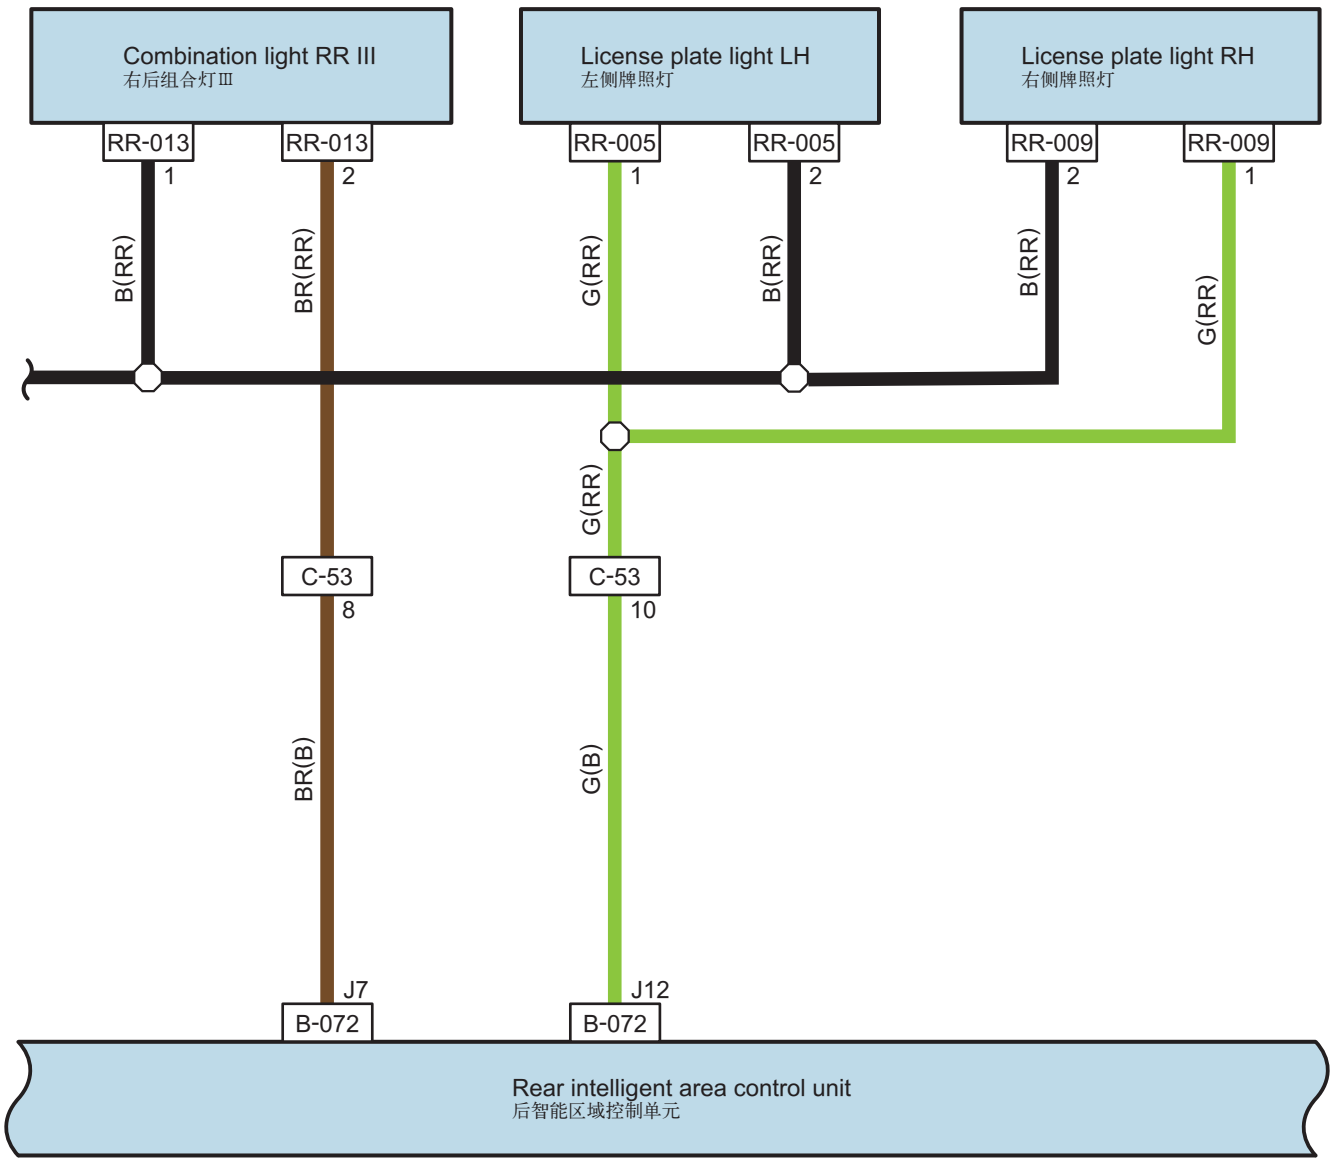

Combination light RL I
左后组合灯 I
B-060
3
B-060
4
B-060
1
B(B)
B(B)
R(B)
B(B)
73b
R(B)
Rear EV_CAN
后部EV_CAN
Chassis_CAN
底盘_CAN
B(I)
BR(I)
C-03
10
C-03
16
B(F)
BR(F)
C-02
3
C-02
2
B(B)
BR(B)
B(B)
O/BR(B)
H7
H6
H2
H1
I1
B-070
B-070
B-070
B-070
B-071
Rear intelligent area control unit
后智能区域控制单元

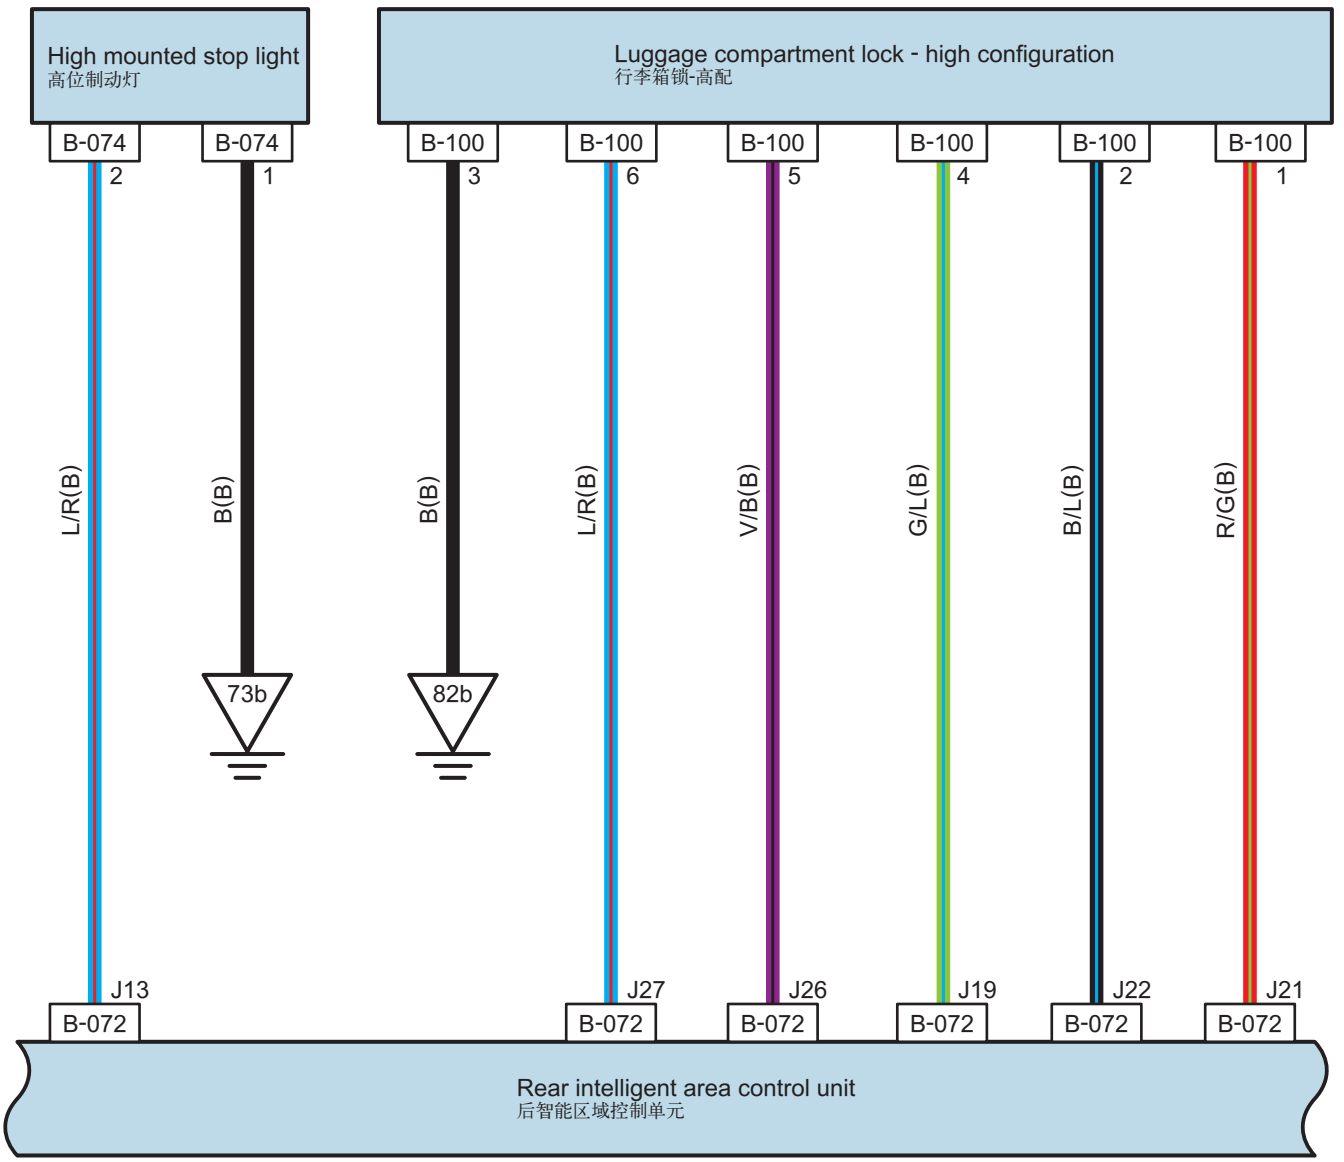

Combination light RL I
左后组合灯 I
B-060
2
B-060
5
B-060
6
B-060
9
B-060
10
B-060
7
B-060
8
R(B)
Y(B)
L(B)
Y/B(B)
W/L(B)
R/W(B)
R/L(B)
Rear comfort_CAN
后部舒适_CAN
Rear intelligent area control unit
后智能区域控制单元

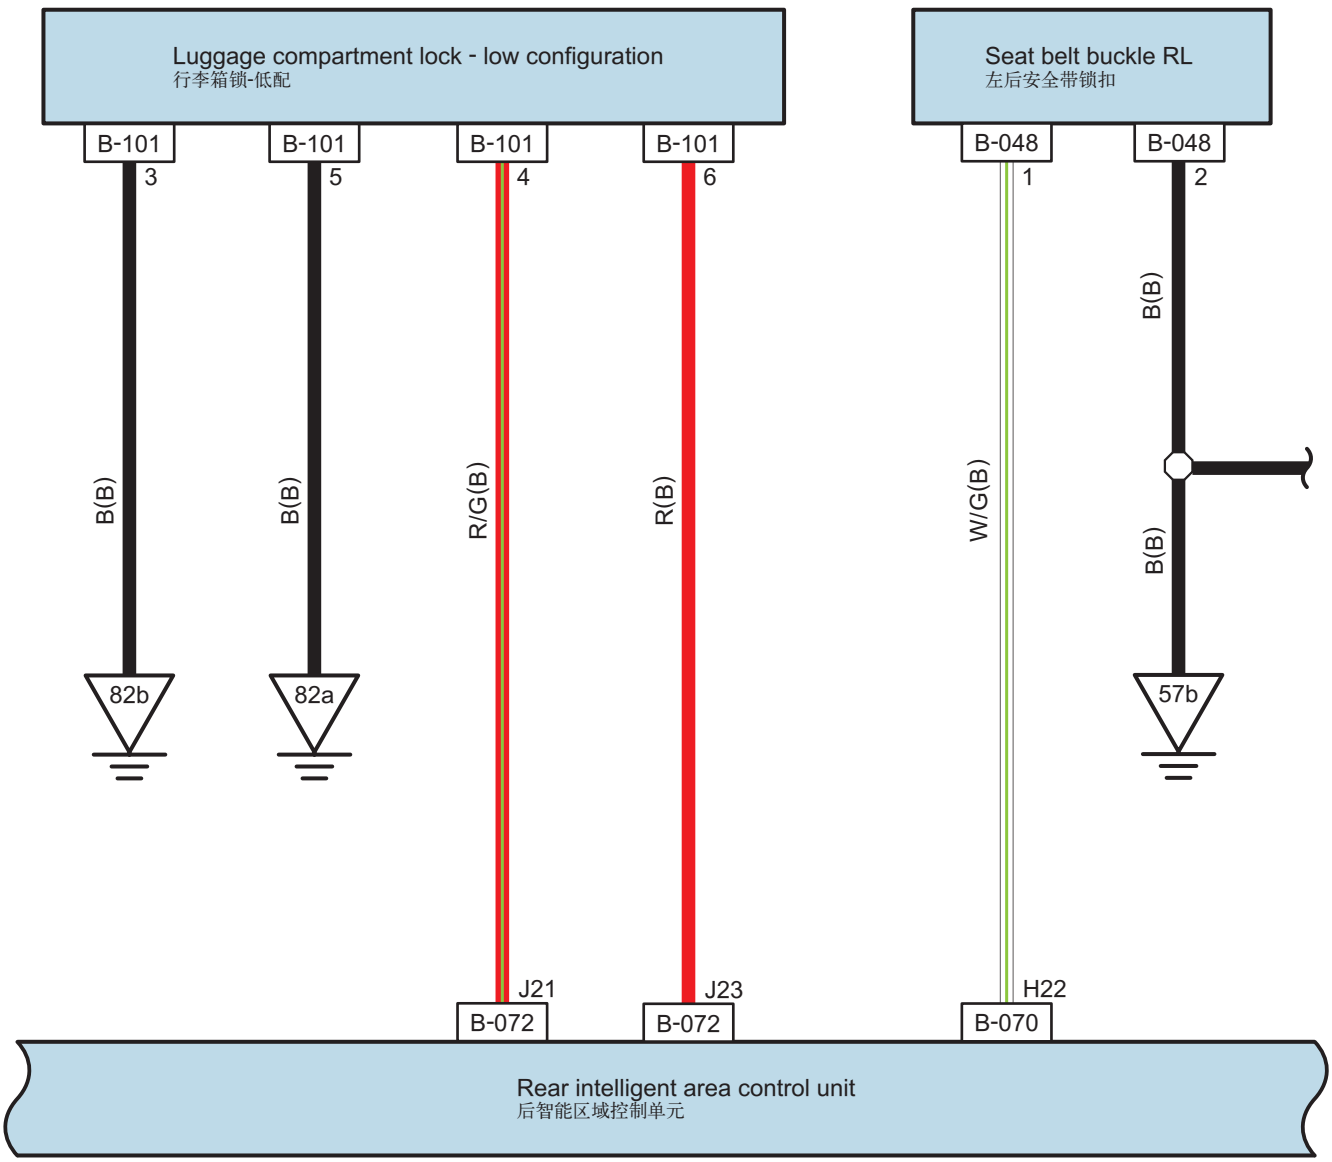

Combination light RL II
左后组合灯Ⅱ
B-102
3
B-102
4
B-102
1
B-102
2
Combination light RR I
右后组合灯Ⅰ
B-104
3
B-104
4
B-104
1
B(B)
B(B)
B(B)
R/G(B)
R/G(B)
86a
C3
B-055
Rear intelligent area control unit
后智能区域控制单元

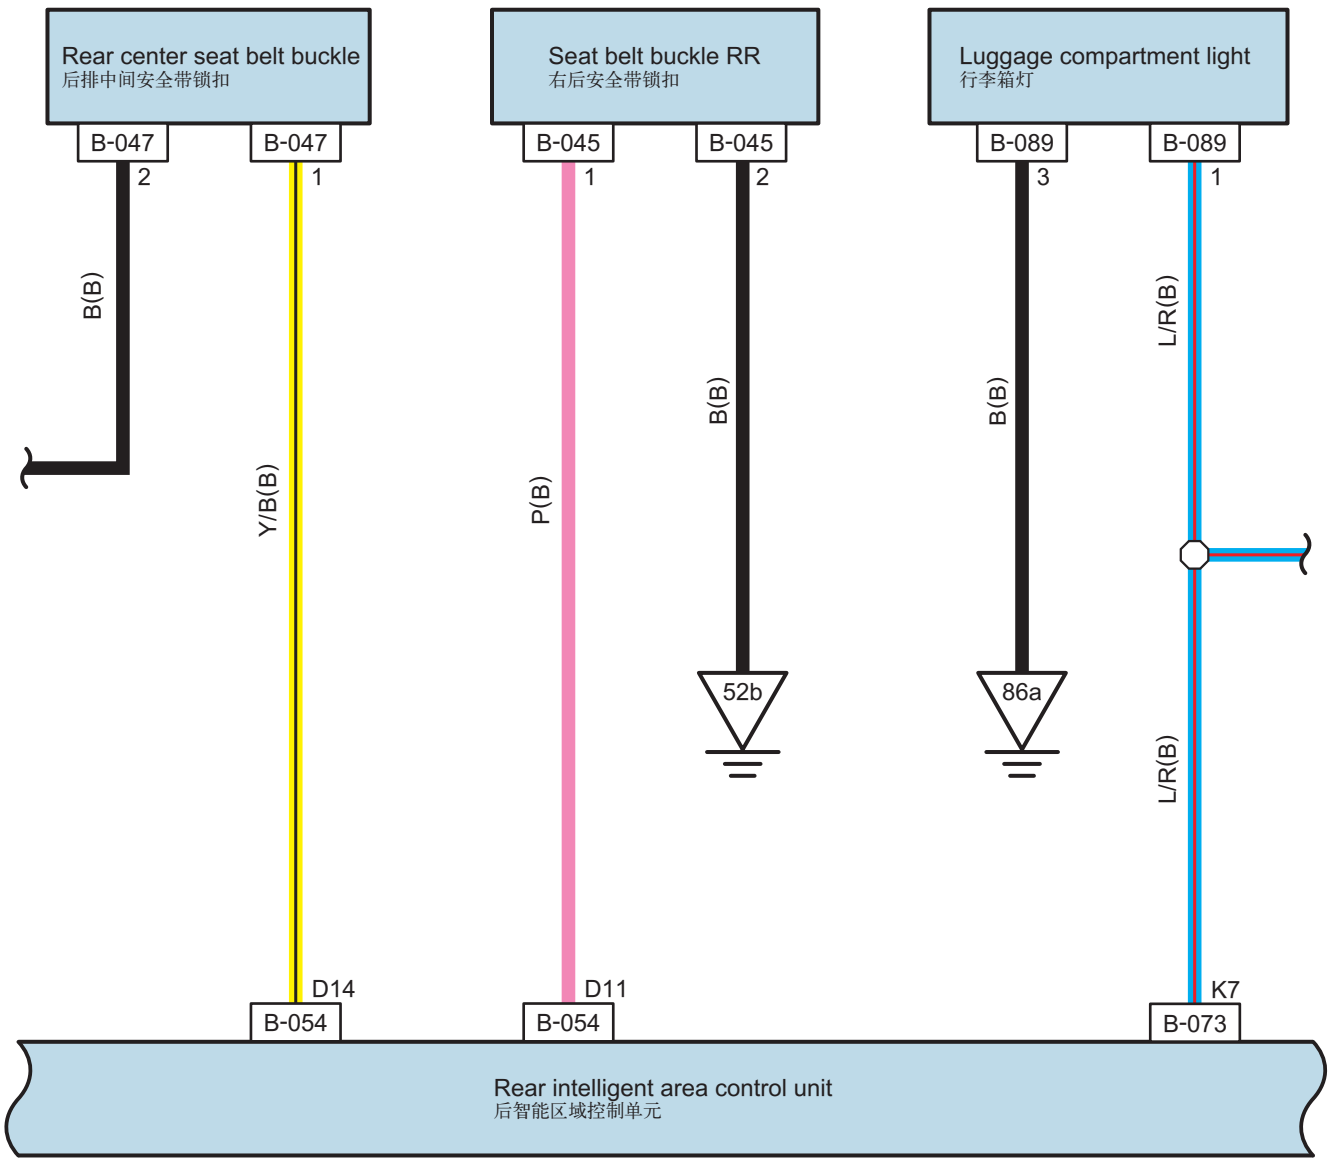

Combination light RR I
右后组合灯 I
B-104
2
R/G(B)
B-104
5
Y(B)
B-104
6
L(B)
B-104
9
W/R(B)
B-104
10
Y/G(B)
B-104
7
R/L(B)
B-104
8
W/L(B)
Rear comfort_CAN
后部舒适_CAN
Rear intelligent area control unit
后智能区域控制单元

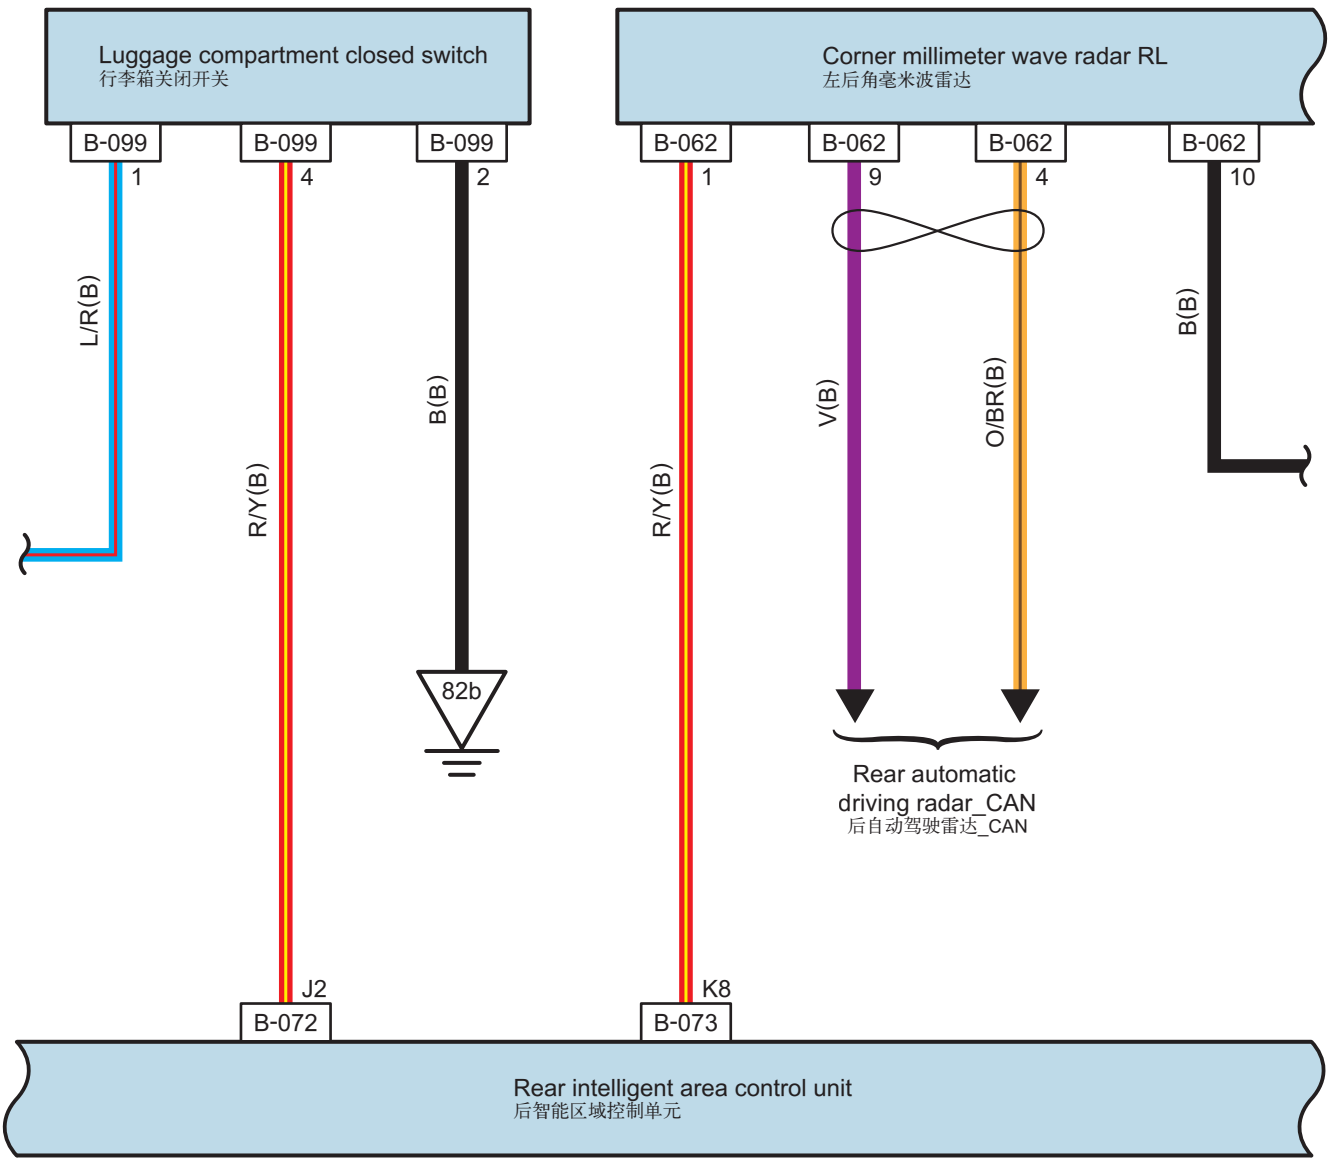

Combination light RR II
右后组合灯Ⅱ
B-098
3
B-098
4
B-098
1
B-098
2
Combination light RL III
左后组合灯Ⅲ
RR-002
2
RR-002
1
R/L(RR)
B(RR)
B(RR)
C-53
9
C-53
13
B(B)
R/L(B)
73b
K24
B-073
Rear intelligent area control unit
后智能区域控制单元

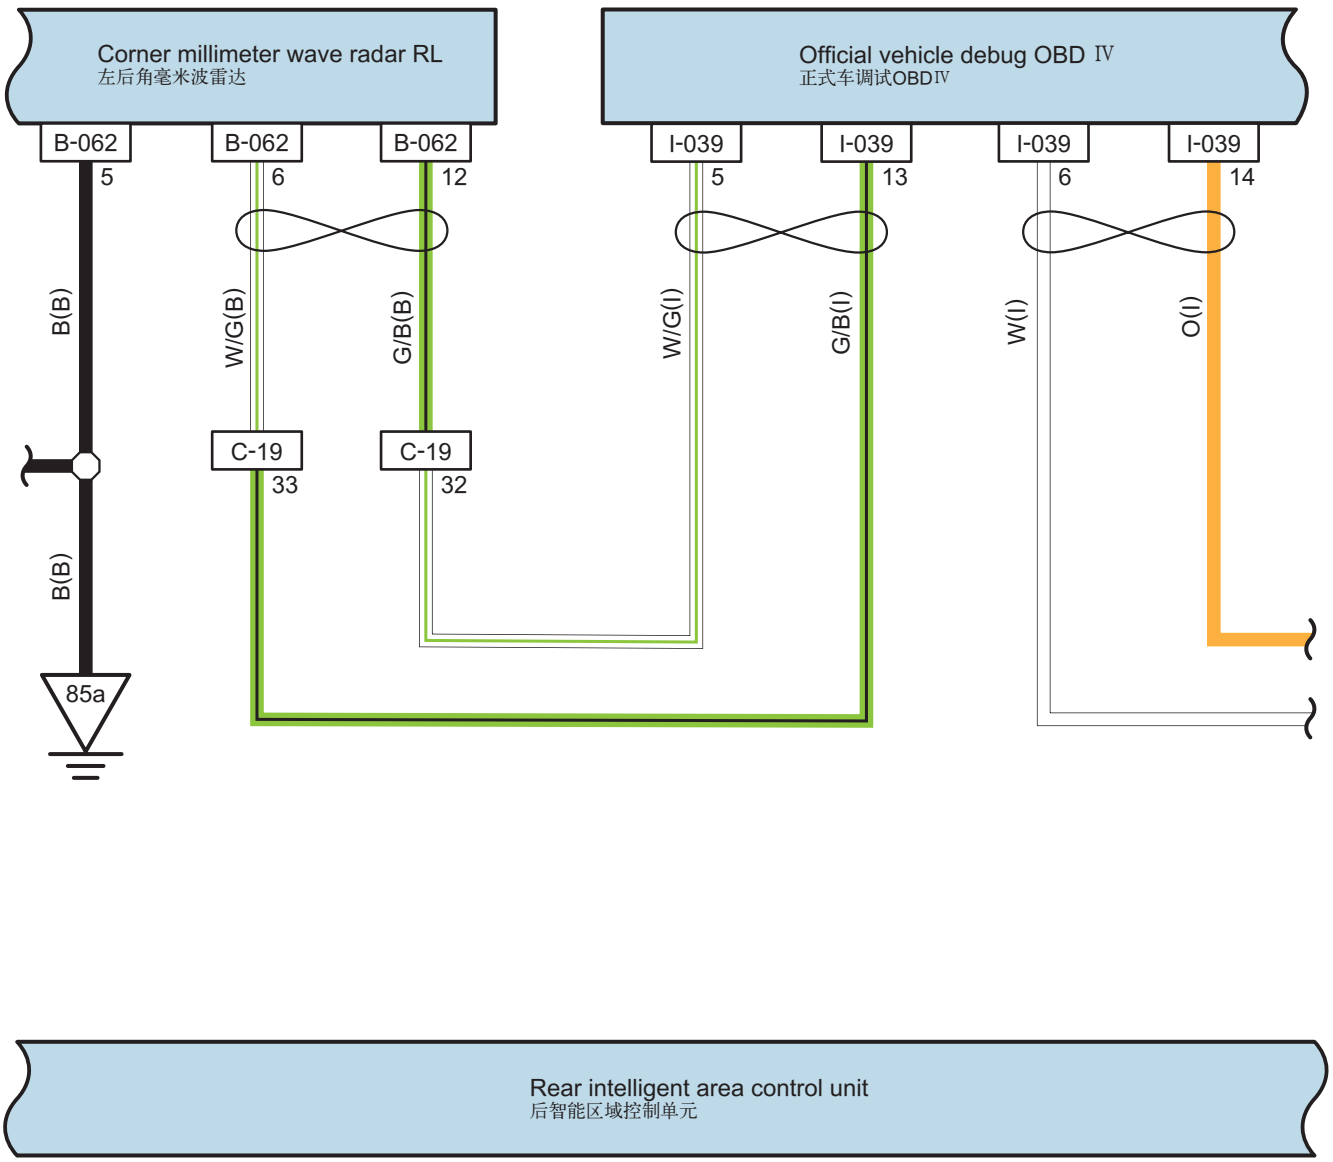

Combination light RR III
右后组合灯Ⅲ
License plate light LH
左侧牌照灯
License plate light RH
右侧牌照灯
RR-013
1
RR-013
2
RR-005
1
RR-005
2
RR-009
2
RR-009
1
B(RR)
BR(RR)
G(RR)
B(RR)
B(RR)
G(RR)
G(RR)
C-53
8
C-53
10
BR(B)
G(B)
J7
J12
B-072
B-072
Rear intelligent area control unit
后智能区域控制单元

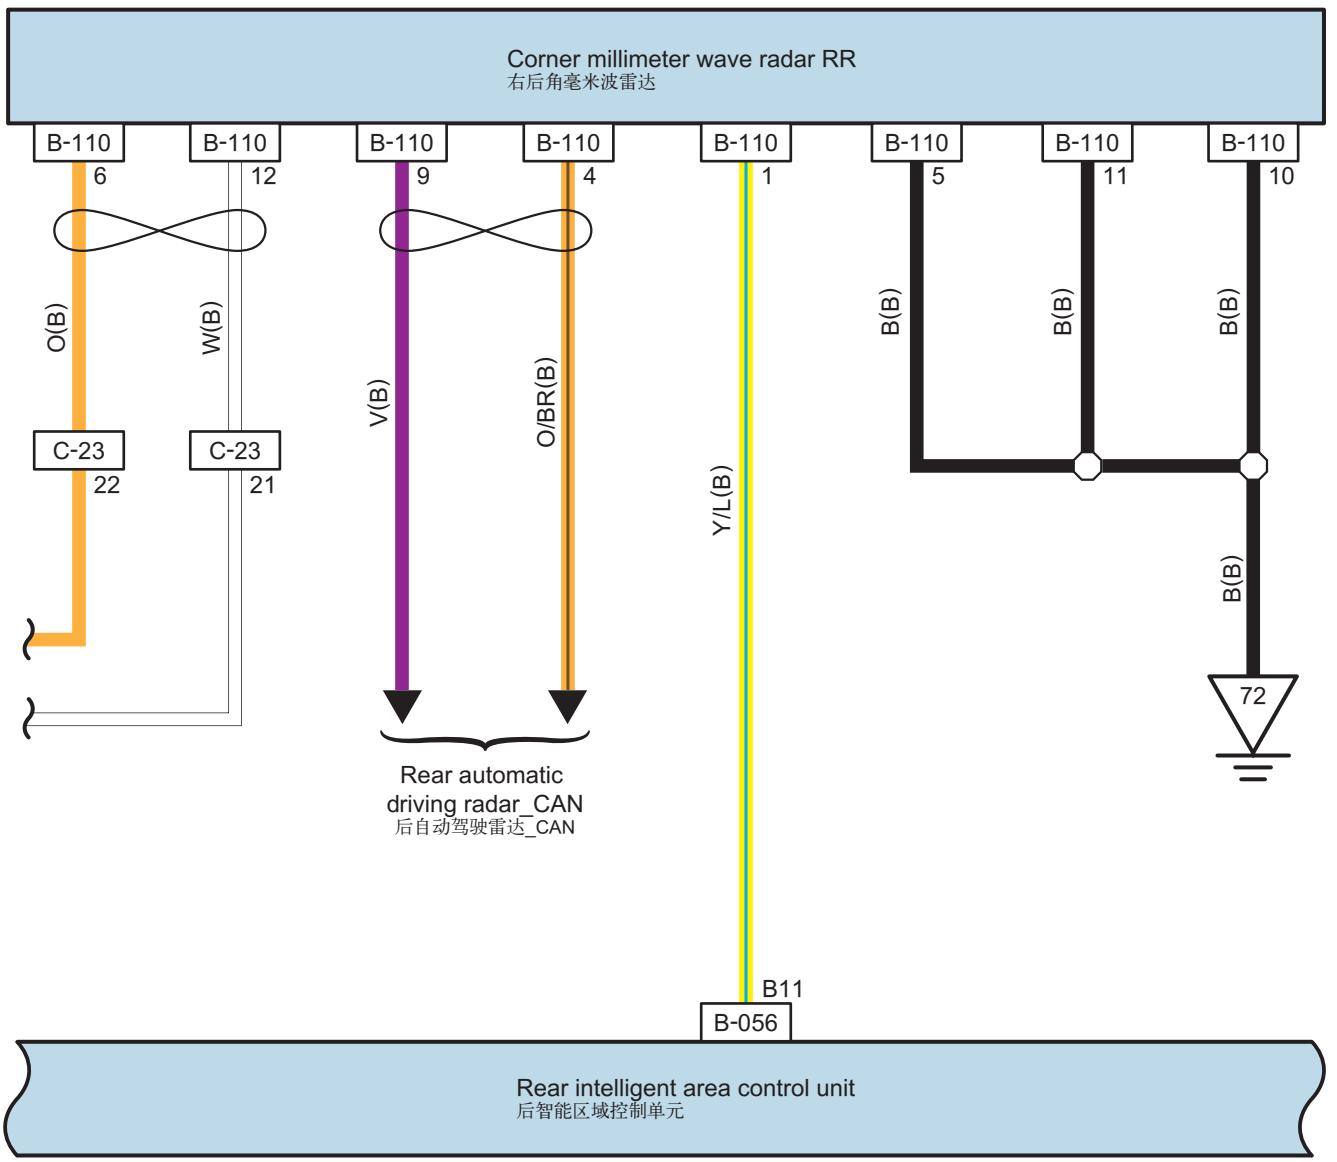

High mounted stop light
高位制动灯
Luggage compartment lock - high configuration
行李箱锁-高配
B-074
2
B-074
1
B-100
3
B-100
6
B-100
5
B-100
4
B-100
2
B-100
1
L/R(B)
B(B)
B(B)
L/R(B)
V/B(B)
G/L(B)
B/L(B)
R/G(B)
73b
82b
J13
J27
J26
J19
J22
J21
B-072
B-072
B-072
B-072
B-072
B-072
Rear intelligent area control unit
后智能区域控制单元

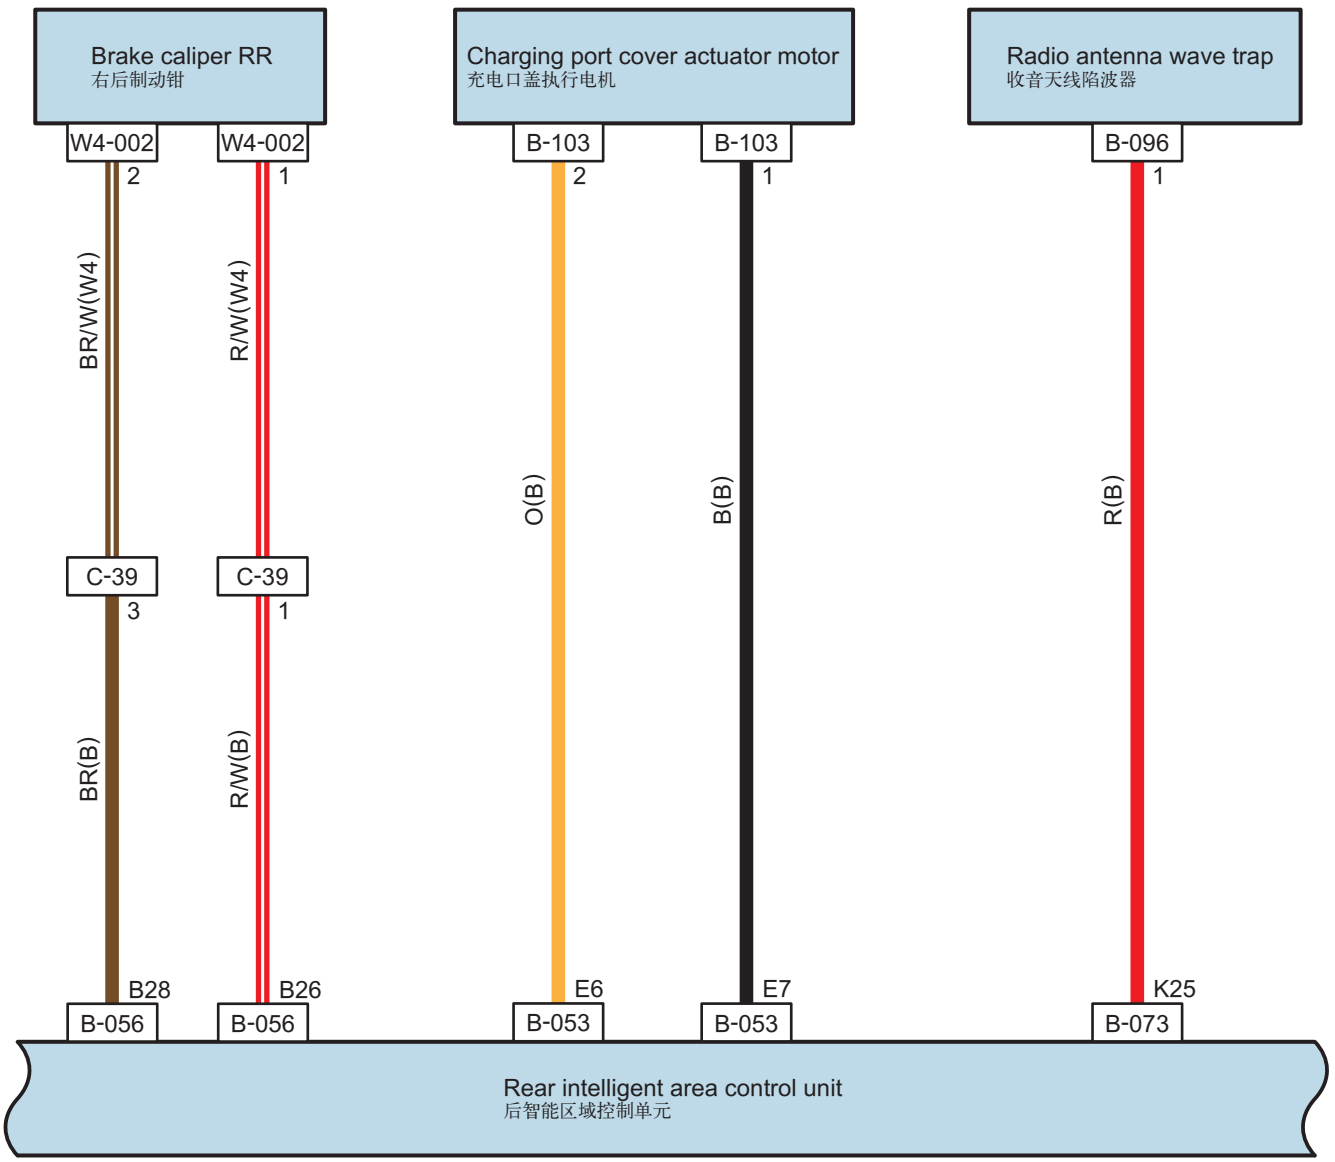

Luggage compartment lock - low configuration
行李箱锁-低配
Seat belt buckle RL
左后安全带锁扣
B-101
3
B-101
5
B-101
4
B-101
6
B-048
1
B-048
2
B(B)
B(B)
R/G(B)
R(B)
W/G(B)
B(B)
82b
82a
57b
J21
J23
H22
B-072
B-072
B-070
Rear intelligent area control unit
后智能区域控制单元

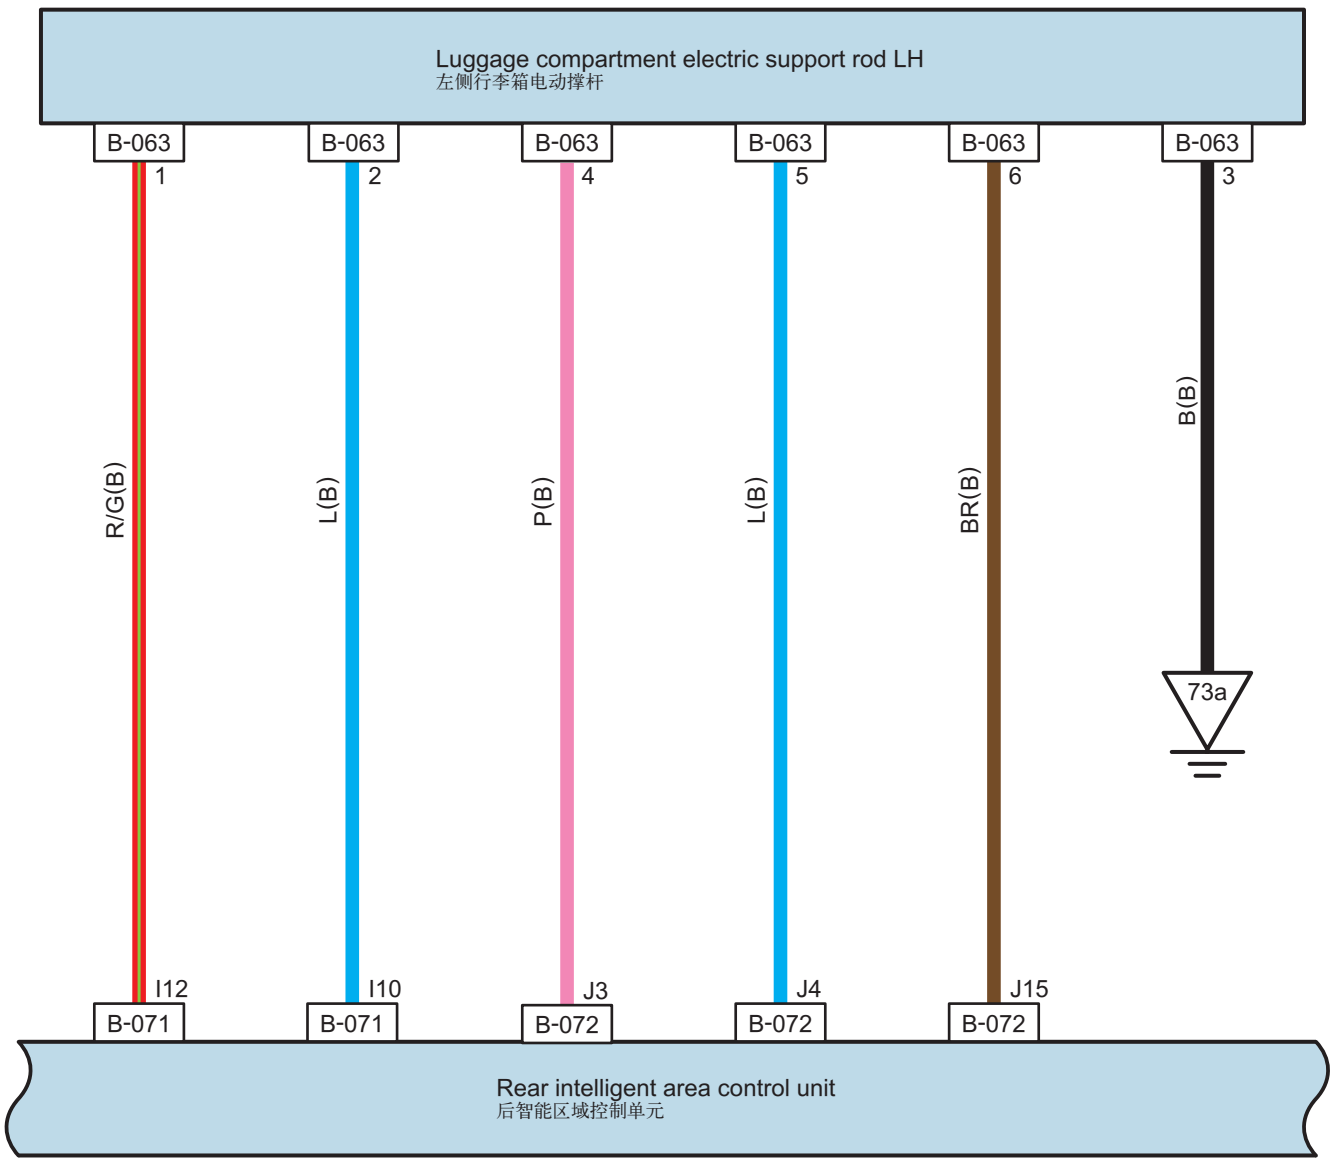

Rear center seat belt buckle
后排中间安全带锁扣
B-047
2
B-047
1
B(B)
Y/B(B)
Seat belt buckle RR
右后安全带锁扣
B-045
1
B-045
2
P(B)
B(B)
52b
Luggage compartment light
行李箱灯
B-089
3
B-089
1
B(B)
L/R(B)
86a
L/R(B)
D14
B-054
D11
B-054
K7
B-073
Rear intelligent area control unit
后智能区域控制单元

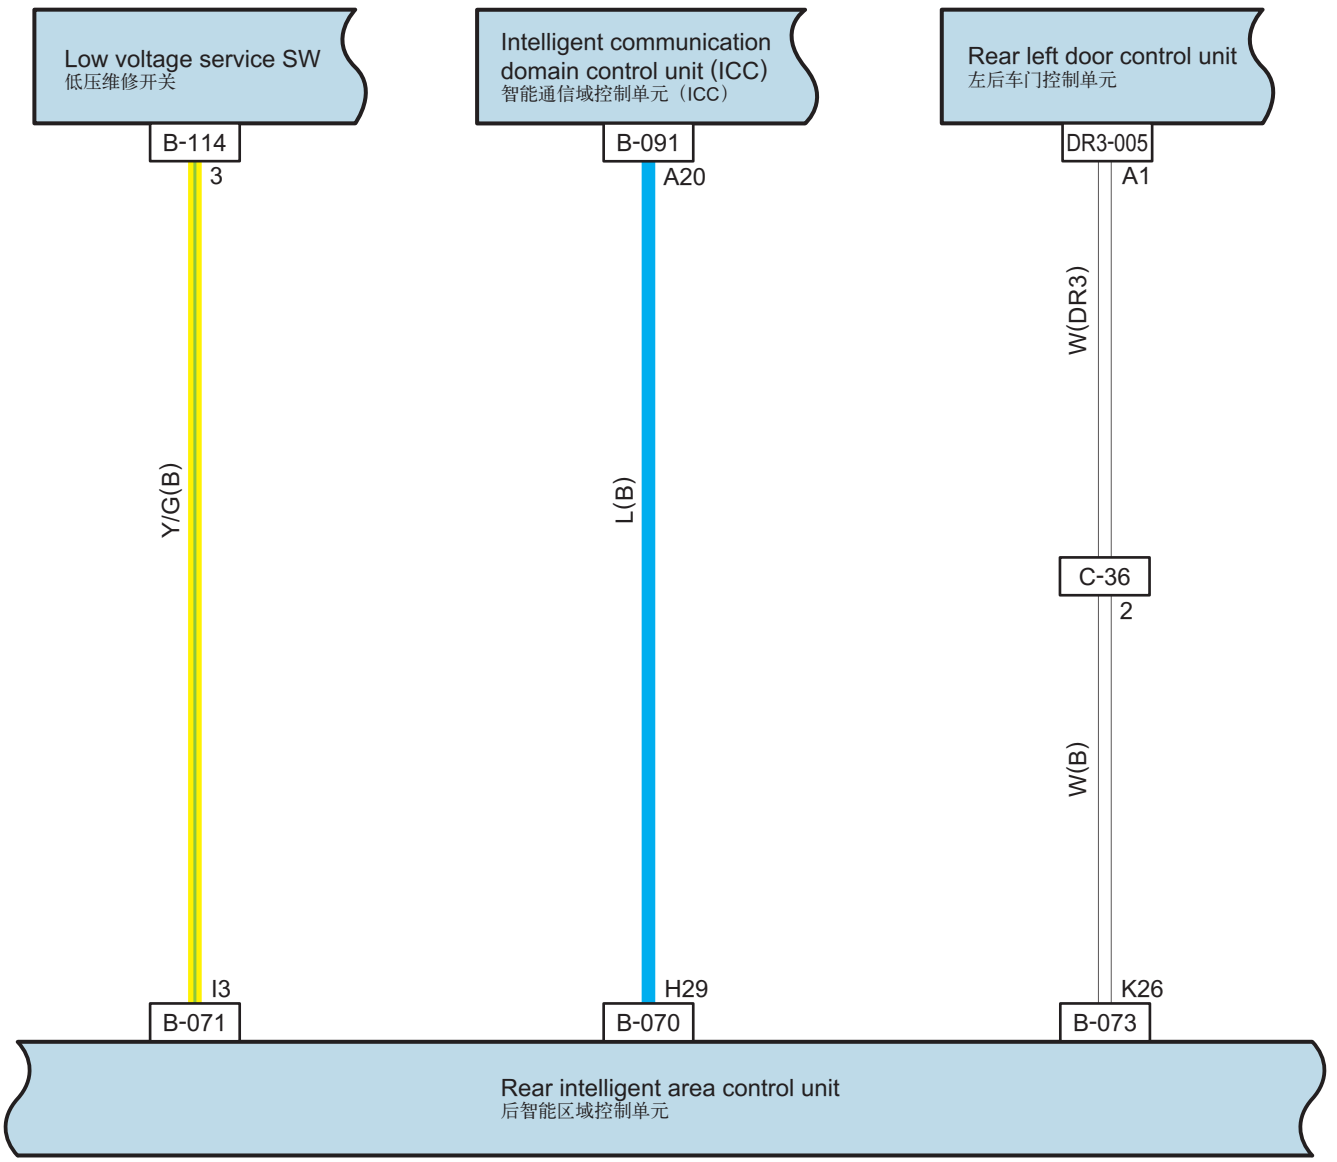

Luggage compartment closed switch
行李箱关闭开关
B-099
1
B-099
4
B-099
2
L/R(B)
R/Y(B)
B(B)
82b
Corner millimeter wave radar RL
左后角毫米波雷达
B-062
1
B-062
9
B-062
4
B-062
10
R/Y(B)
V(B)
O/BR(B)
B(B)
Rear automatic
driving radar_CAN
后自动驾驶雷达_CAN
J2
B-072
K8
B-073
Rear intelligent area control unit
后智能区域控制单元

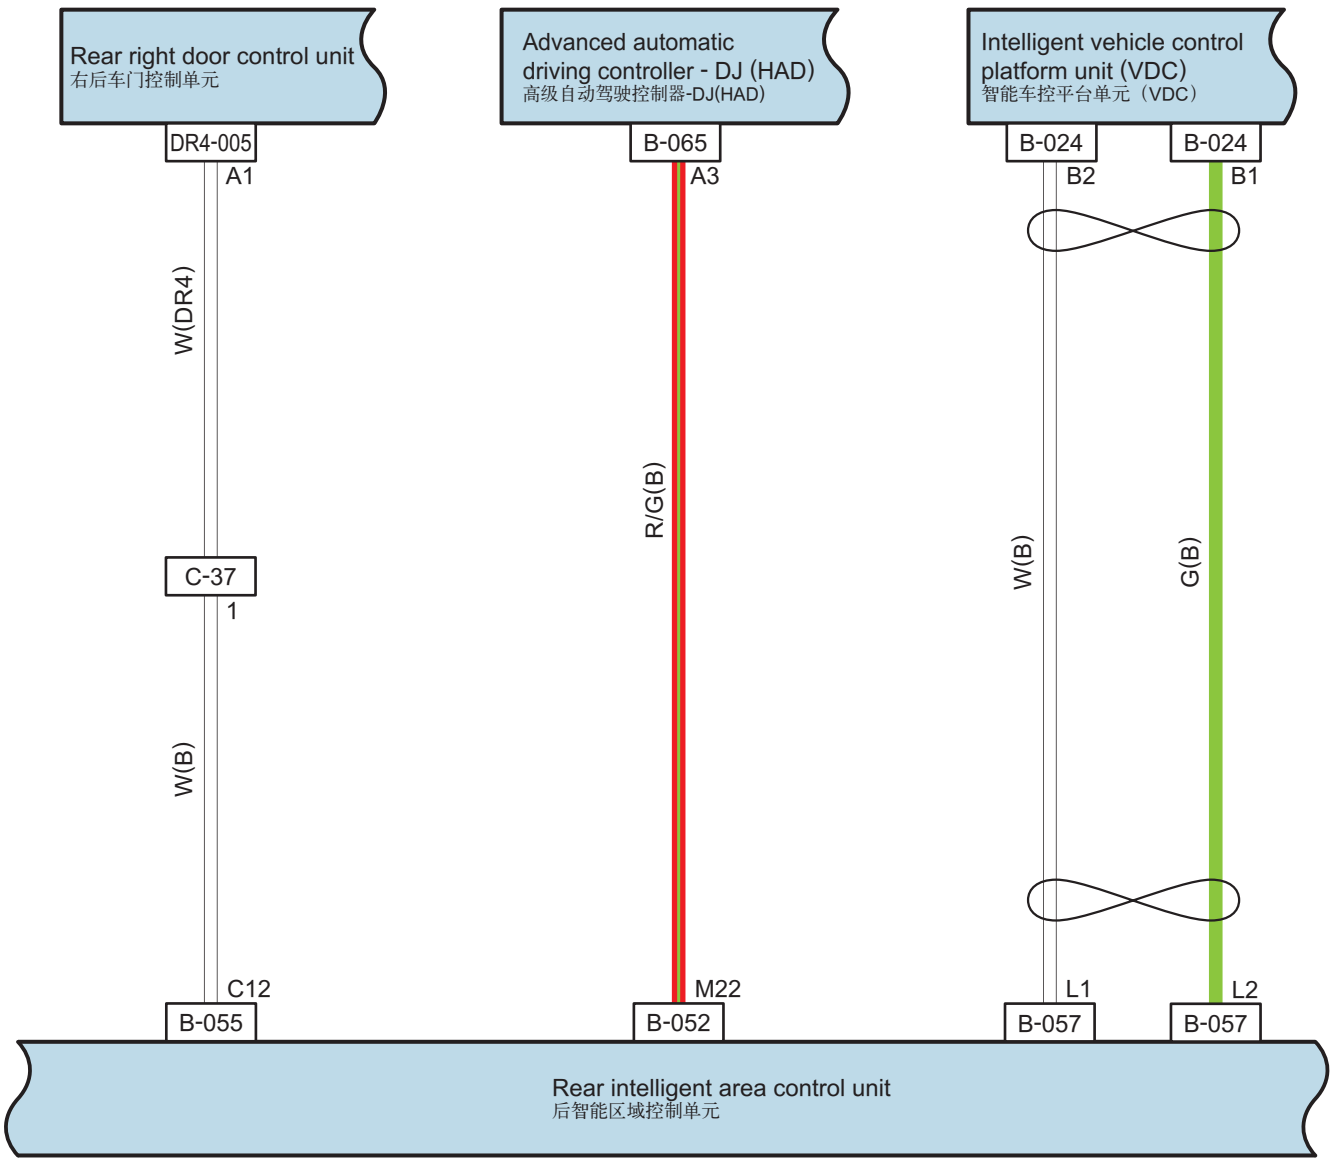

Corner millimeter wave radar RL
左后角毫米波雷达
Official vehicle debug OBD Ⅳ
正式车调试OBDⅣ
B-062
5
B-062
6
B-062
12
I-039
5
I-039
13
I-039
6
I-039
14
B(B)
W/G(B)
G/B(B)
W/G(I)
G/B(I)
W(I)
O(I)
C-19
33
C-19
32
B(B)
85a
Rear intelligent area control unit
后智能区域控制单元

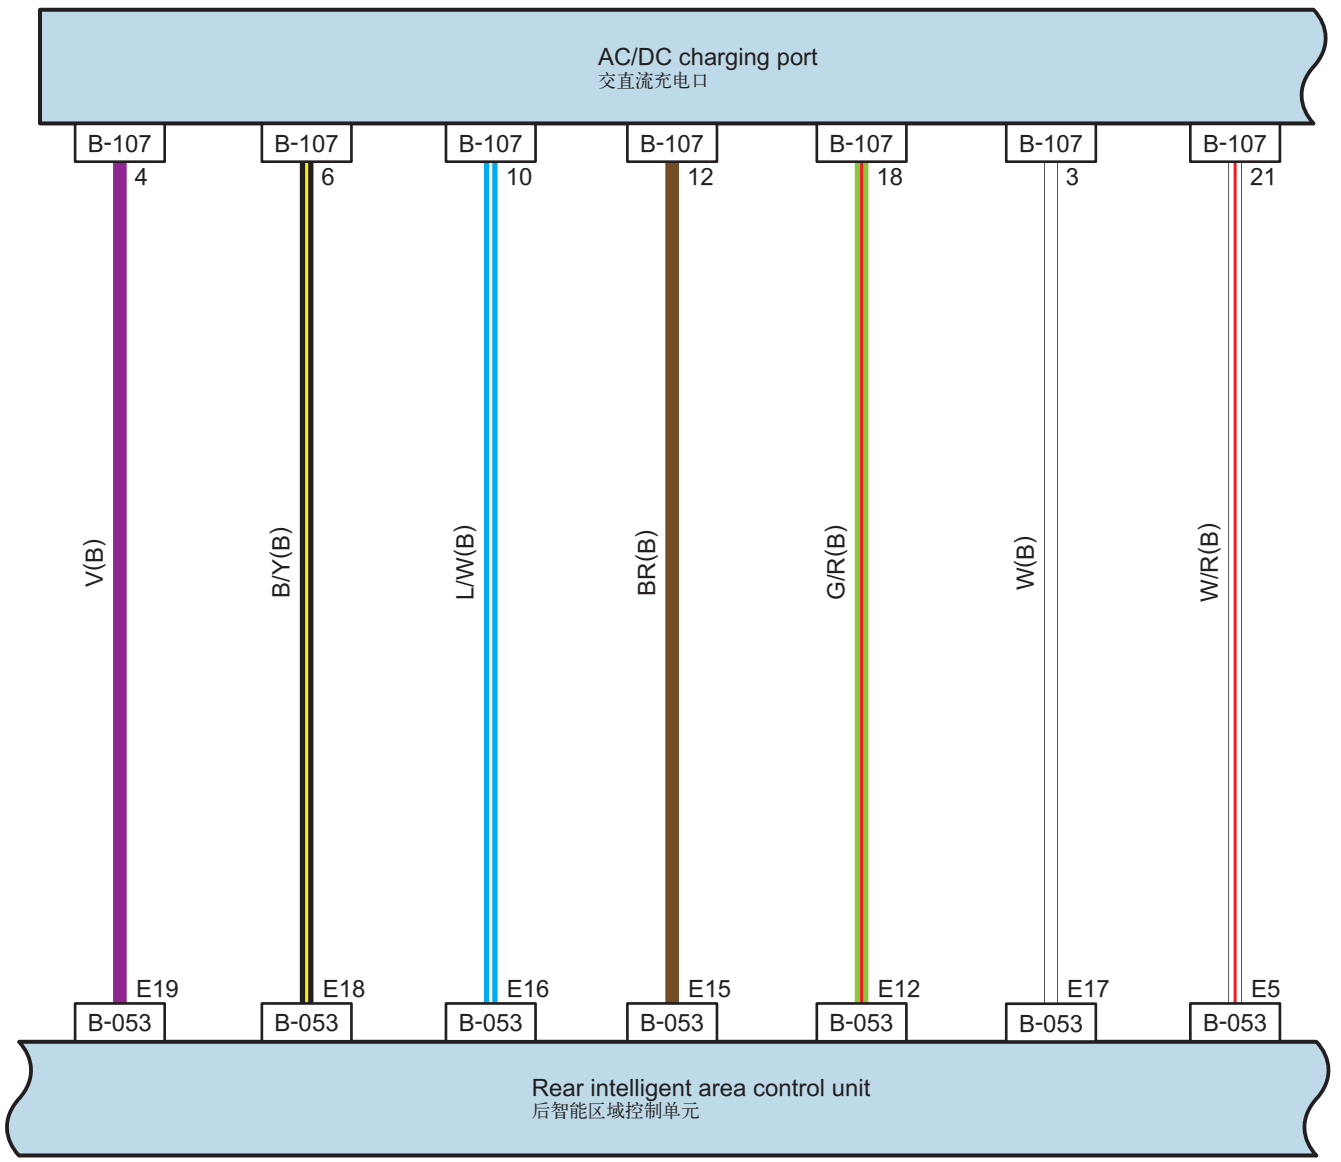

Corner millimeter wave radar RR
右后角毫米波雷达
B-110
6
B-110
12
B-110
9
B-110
4
B-110
1
B-110
5
B-110
11
B-110
10
O(B)
W(B)
V(B)
O/BR(B)
Y/L(B)
B(B)
B(B)
B(B)
B(B)
C-23
22
C-23
21
72
Rear automatic
driving radar_CAN
后自动驾驶雷达_CAN
B11
B-056
Rear intelligent area control unit
后智能区域控制单元

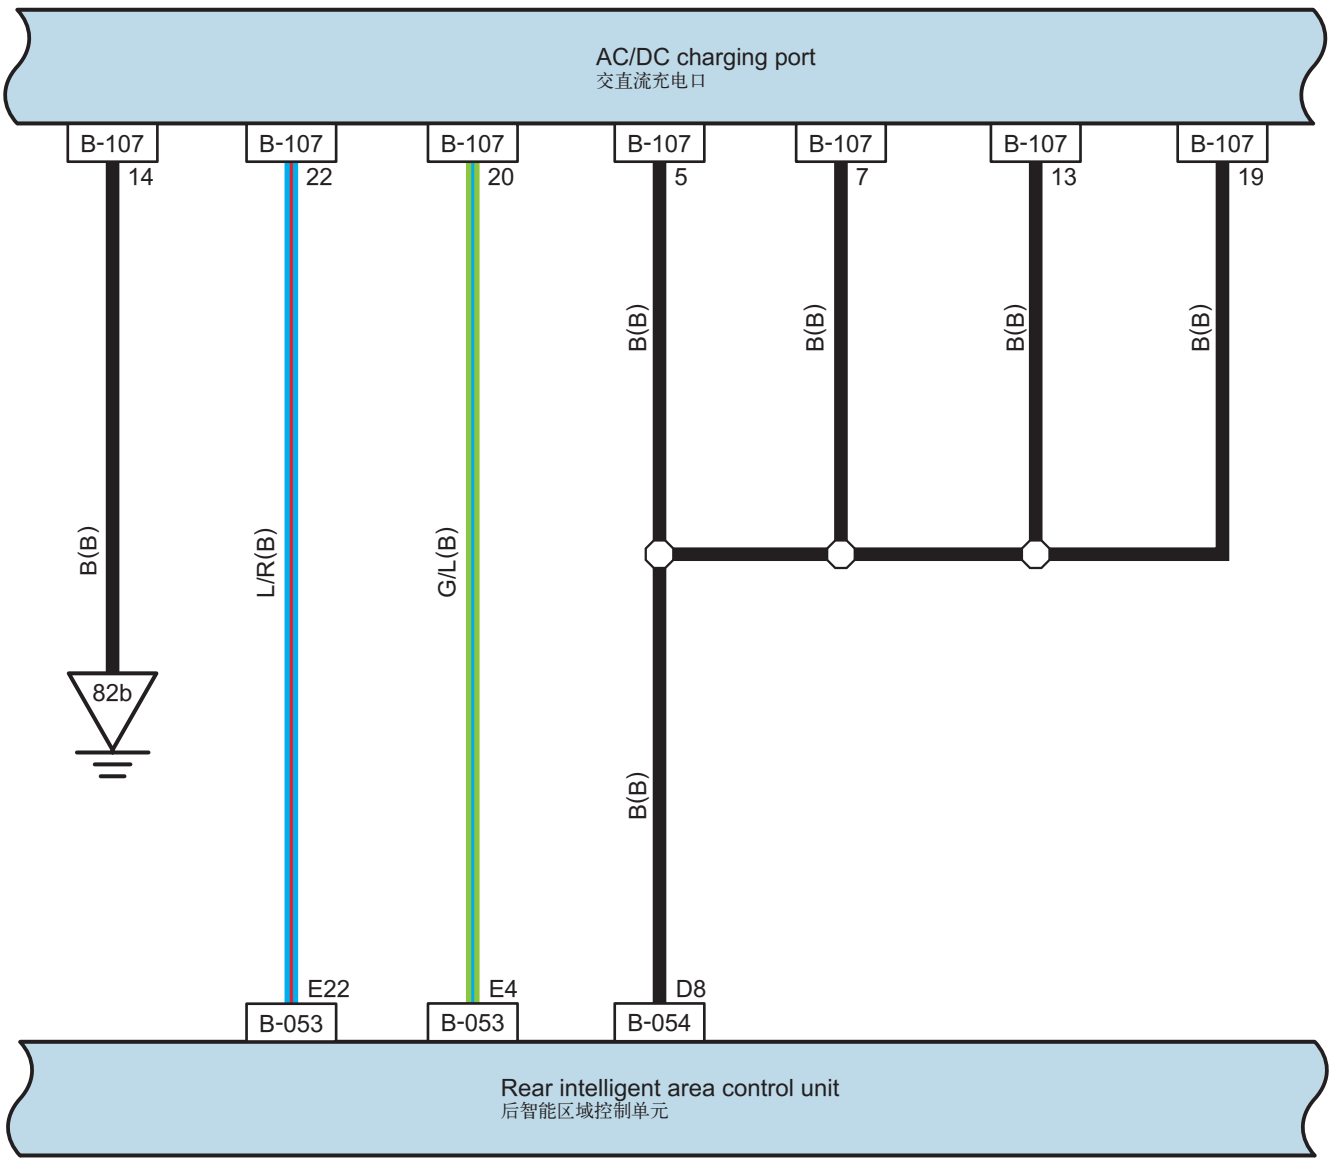

Brake caliper RR
右后制动钳
W4-002
2
W4-002
1
BR/W(W4)
R/W(W4)
C-39
3
C-39
1
BR(B)
R/W(B)
B28
B26
B-056
B-056
Charging port cover actuator motor
充电口盖执行电机
B-103
2
B-103
1
O(B)
B(B)
E6
E7
B-053
B-053
Radio antenna wave trap
收音天线陷波器
B-096
1
R(B)
K25
B-073
Rear intelligent area control unit
后智能区域控制单元

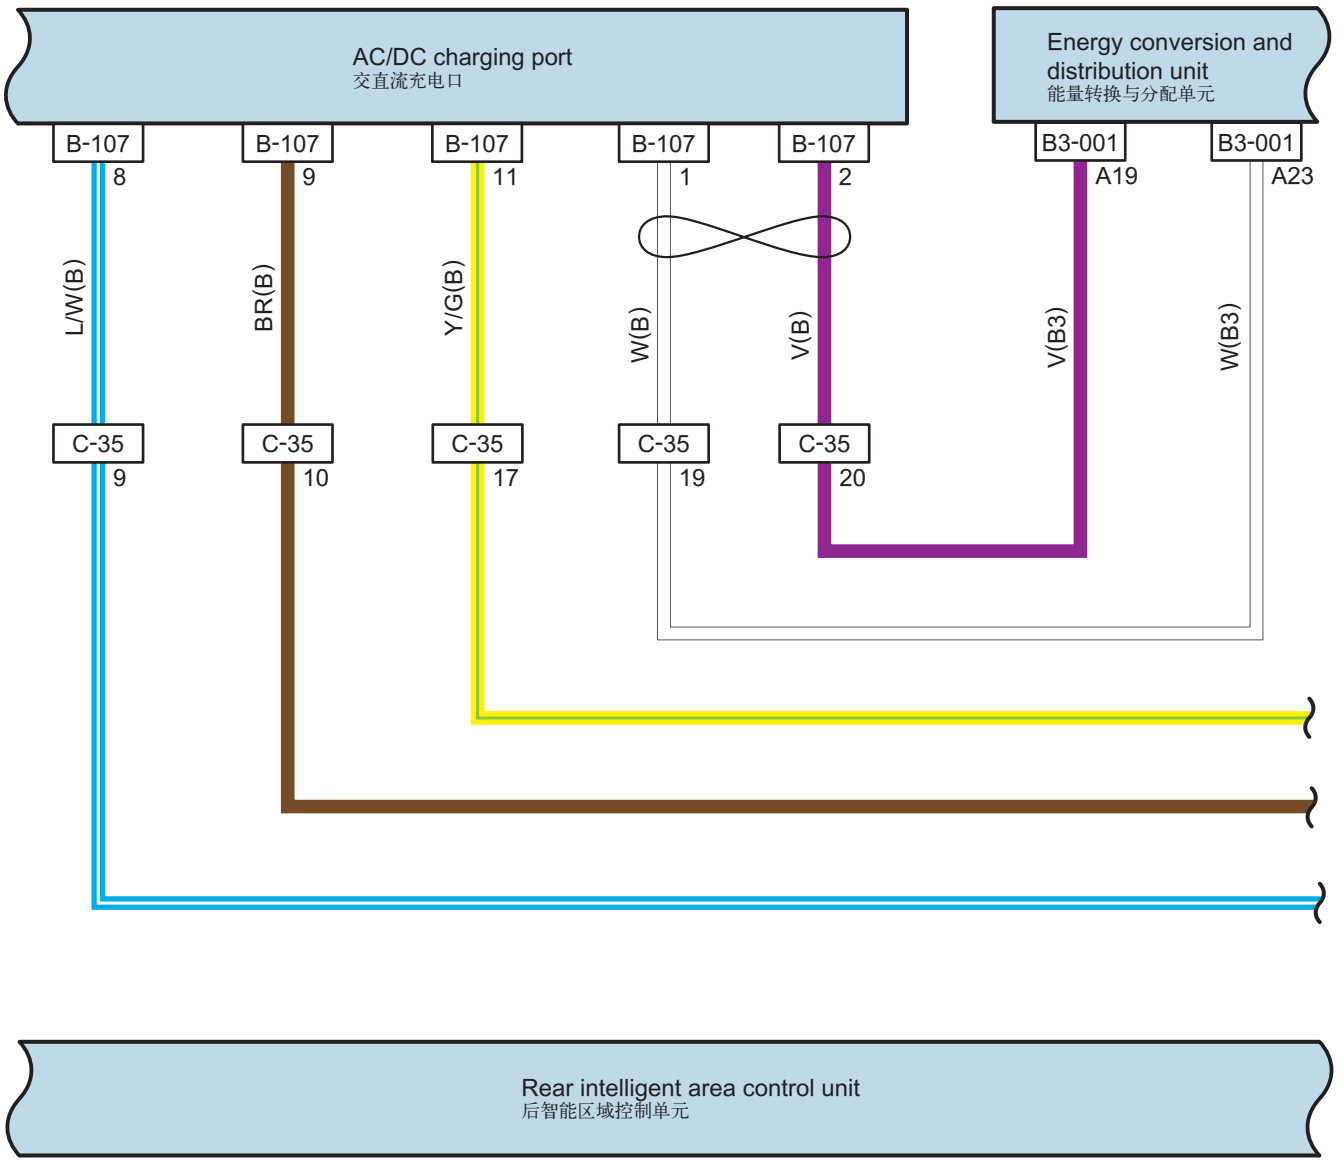

Luggage compartment electric support rod LH
左侧行李箱电动撑杆
B-063
1
B-063
2
B-063
4
B-063
5
B-063
6
B-063
3
R/G(B)
L(B)
P(B)
L(B)
BR(B)
B(B)
73a
I12
I10
J3
J4
J15
B-071
B-071
B-072
B-072
B-072
Rear intelligent area control unit
后智能区域控制单元

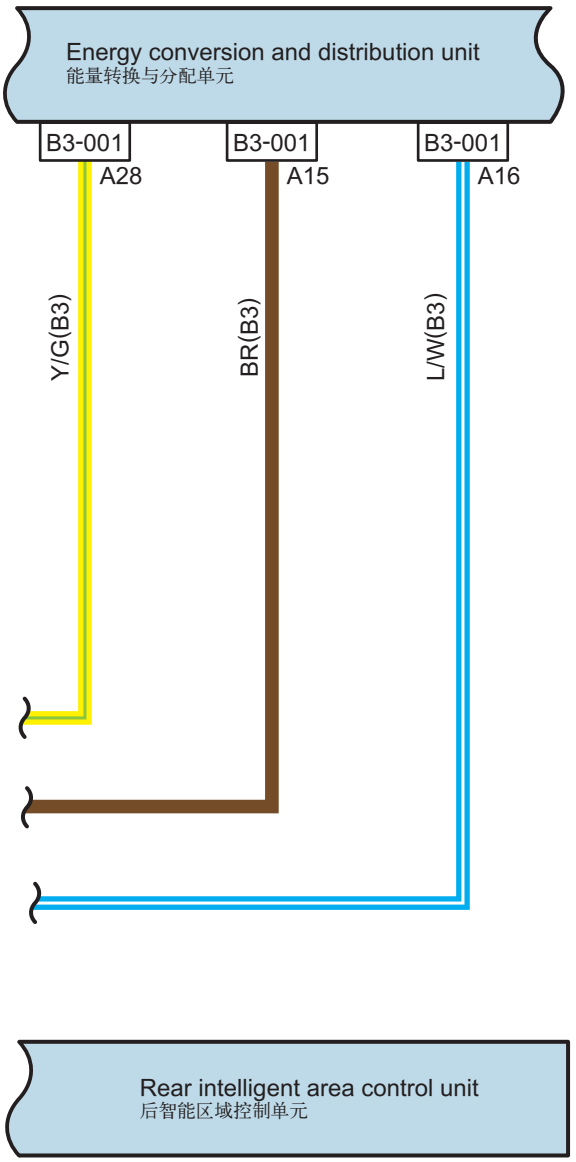

Low voltage service SW
低压维修开关
B-114
3
Y/G(B)
I3
B-071
Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）
B-091
A20
L(B)
H29
B-070
Rear left door control unit
左后车门控制单元
DR3-005
A1
W(DR3)
C-36
2
W(B)
K26
B-073
Rear intelligent area control unit
后智能区域控制单元

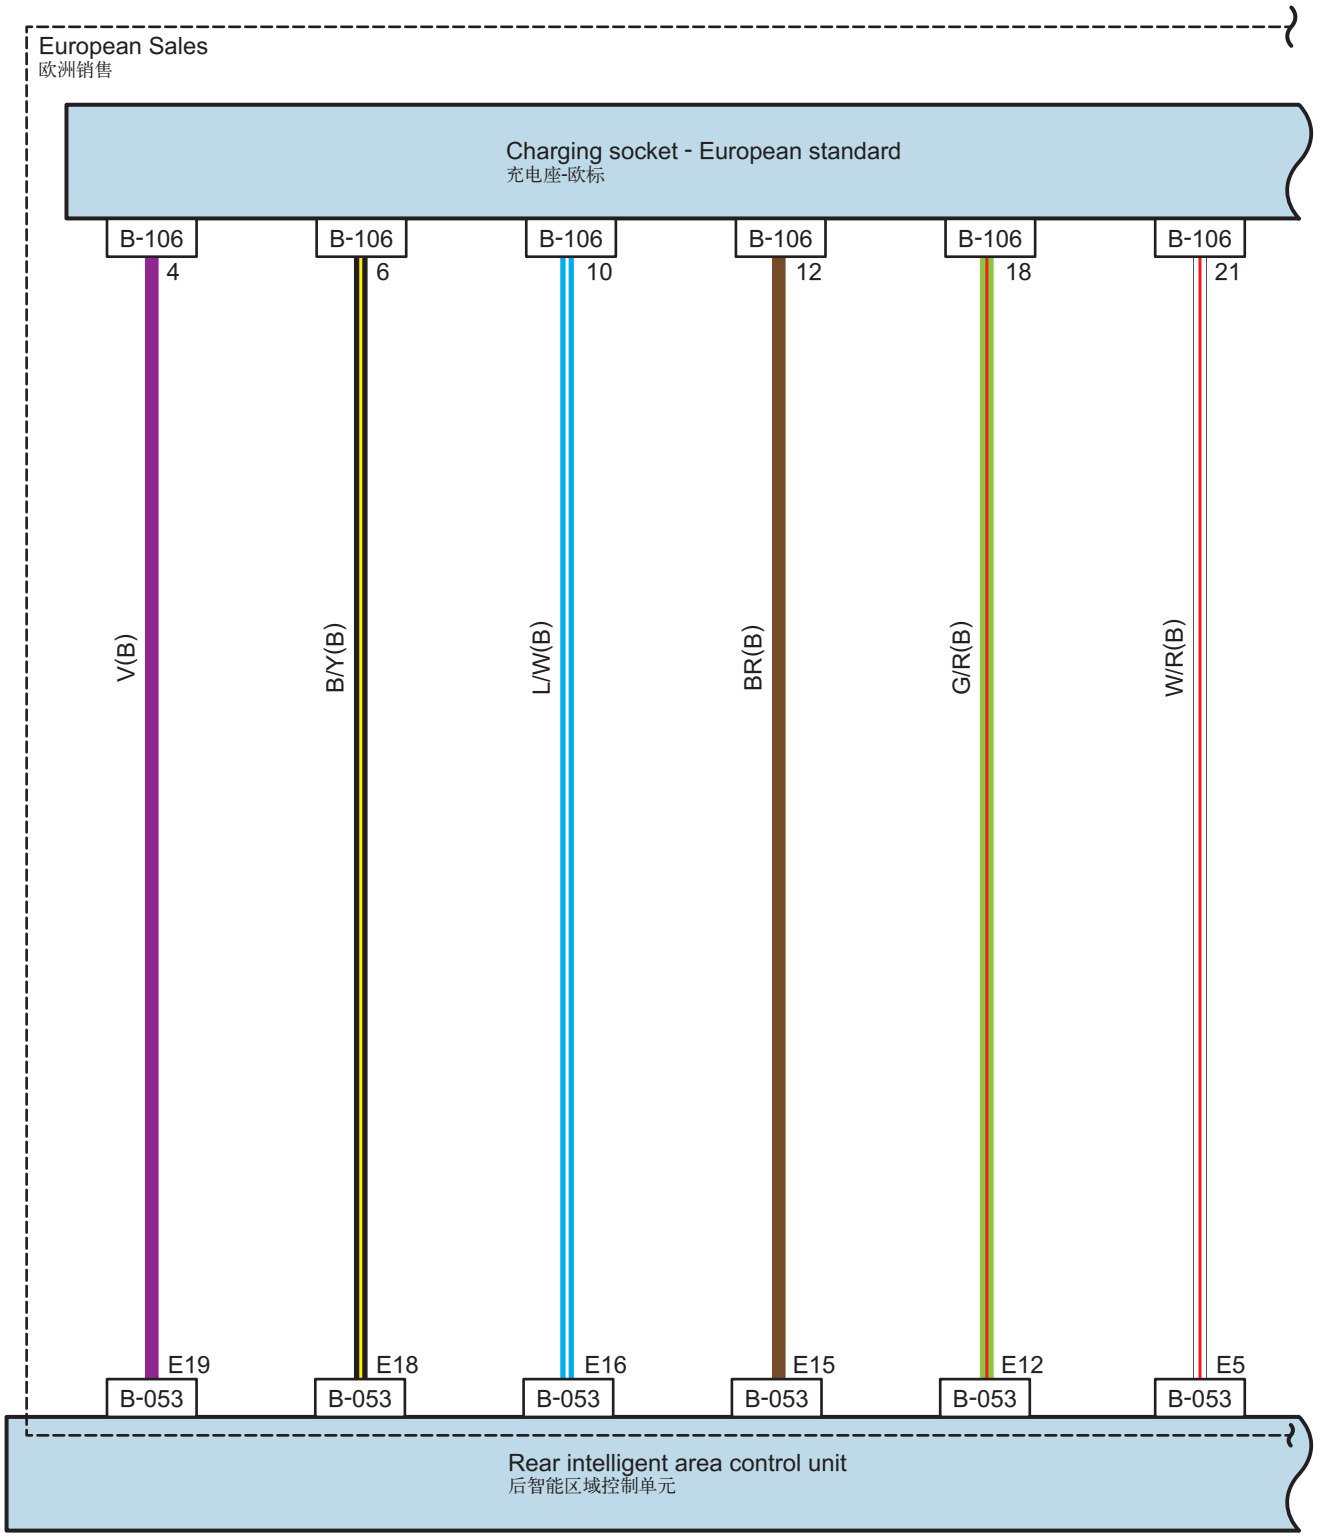

Rear right door control unit
右后车门控制单元
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-DJ(HAD)
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
DR4-005
A1
B-065
A3
B-024
B2
B-024
B1
W(DR4)
R/G(B)
W(B)
G(B)
C-37
1
W(B)
C12
M22
L1
L2
B-055
B-052
B-057
B-057
Rear intelligent area control unit
后智能区域控制单元

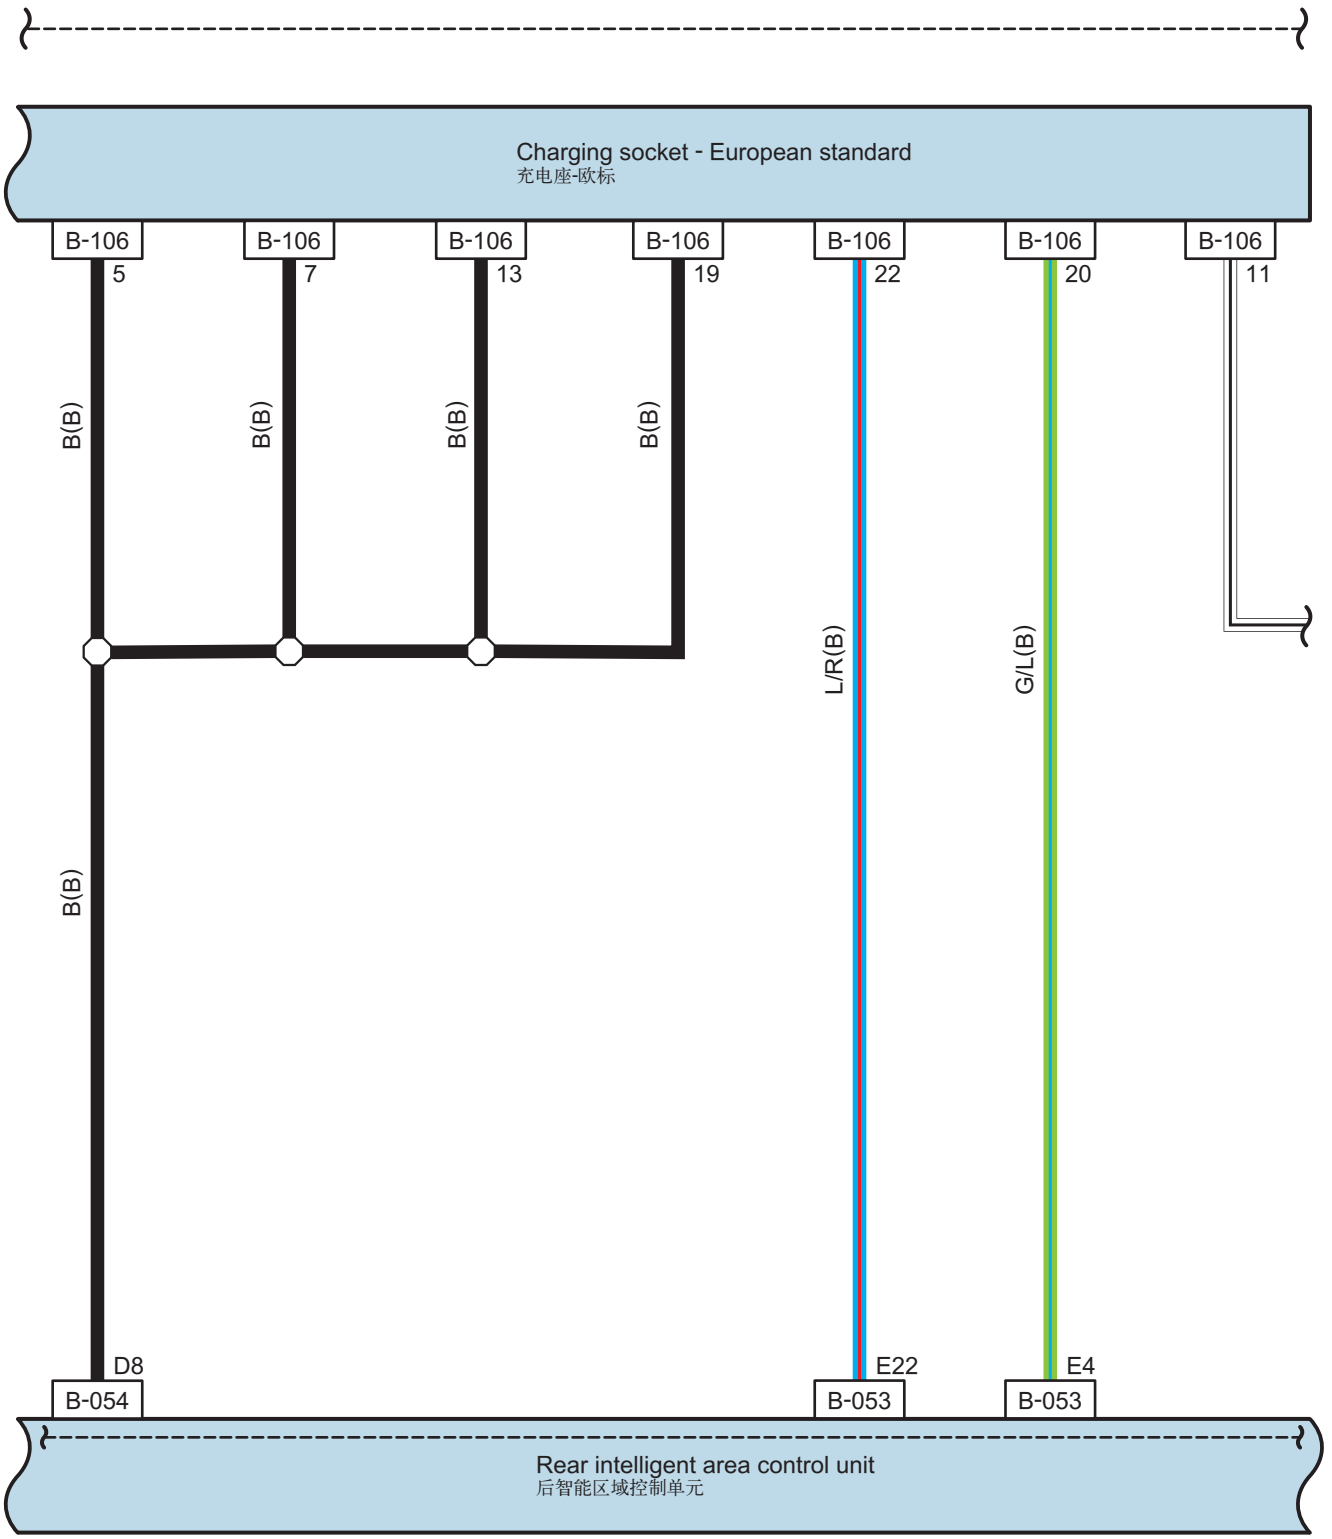

AC/DC charging port
交直流充电口
B-107
4
6
10
12
18
3
21
V(B)
B/Y(B)
L/W(B)
BR(B)
G/R(B)
W(B)
W/R(B)
E19
E18
E16
E15
E12
E17
E5
B-053
Rear intelligent area control unit
后智能区域控制单元

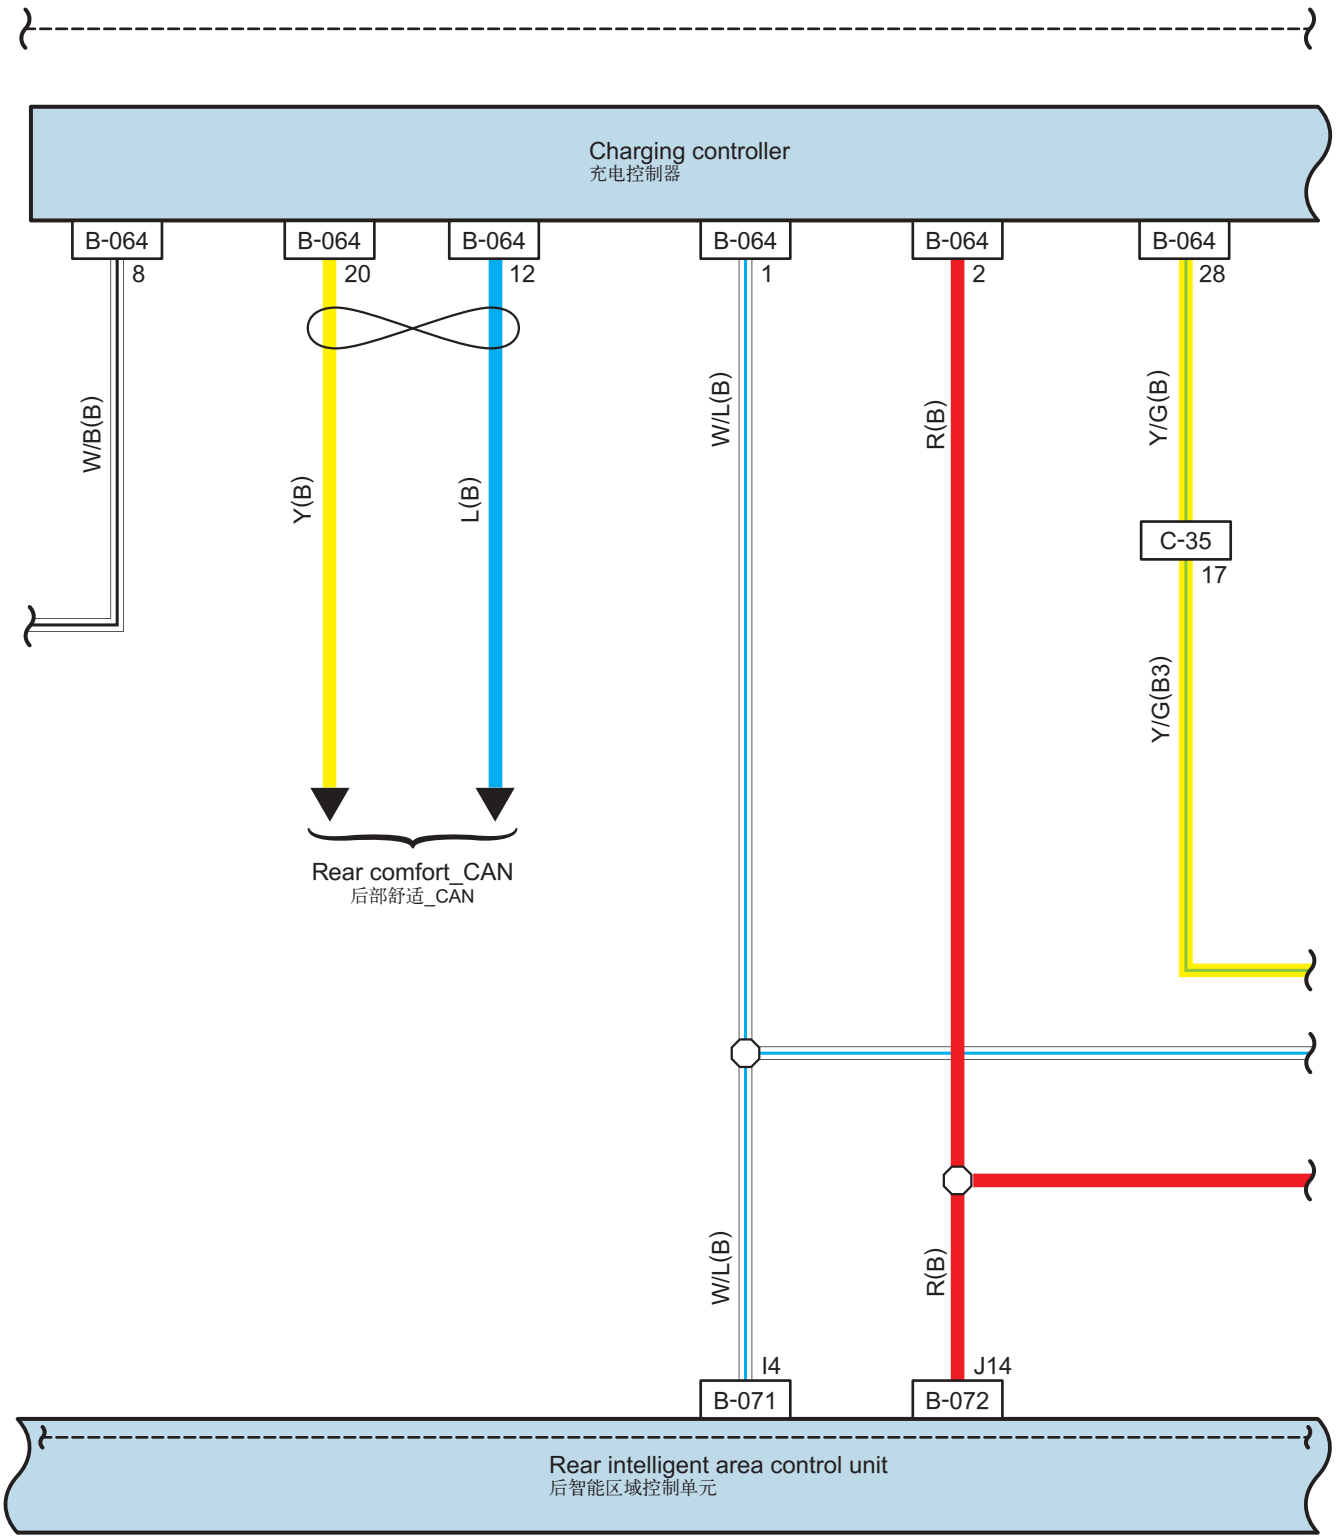

AC/DC charging port
交直流充电口
B-107
14
B-107
22
B-107
20
B-107
5
B-107
7
B-107
13
B-107
19
B(B)
L/R(B)
G/L(B)
B(B)
B(B)
B(B)
B(B)
B(B)
82b
E22
B-053
E4
B-053
D8
B-054
Rear intelligent area control unit
后智能区域控制单元

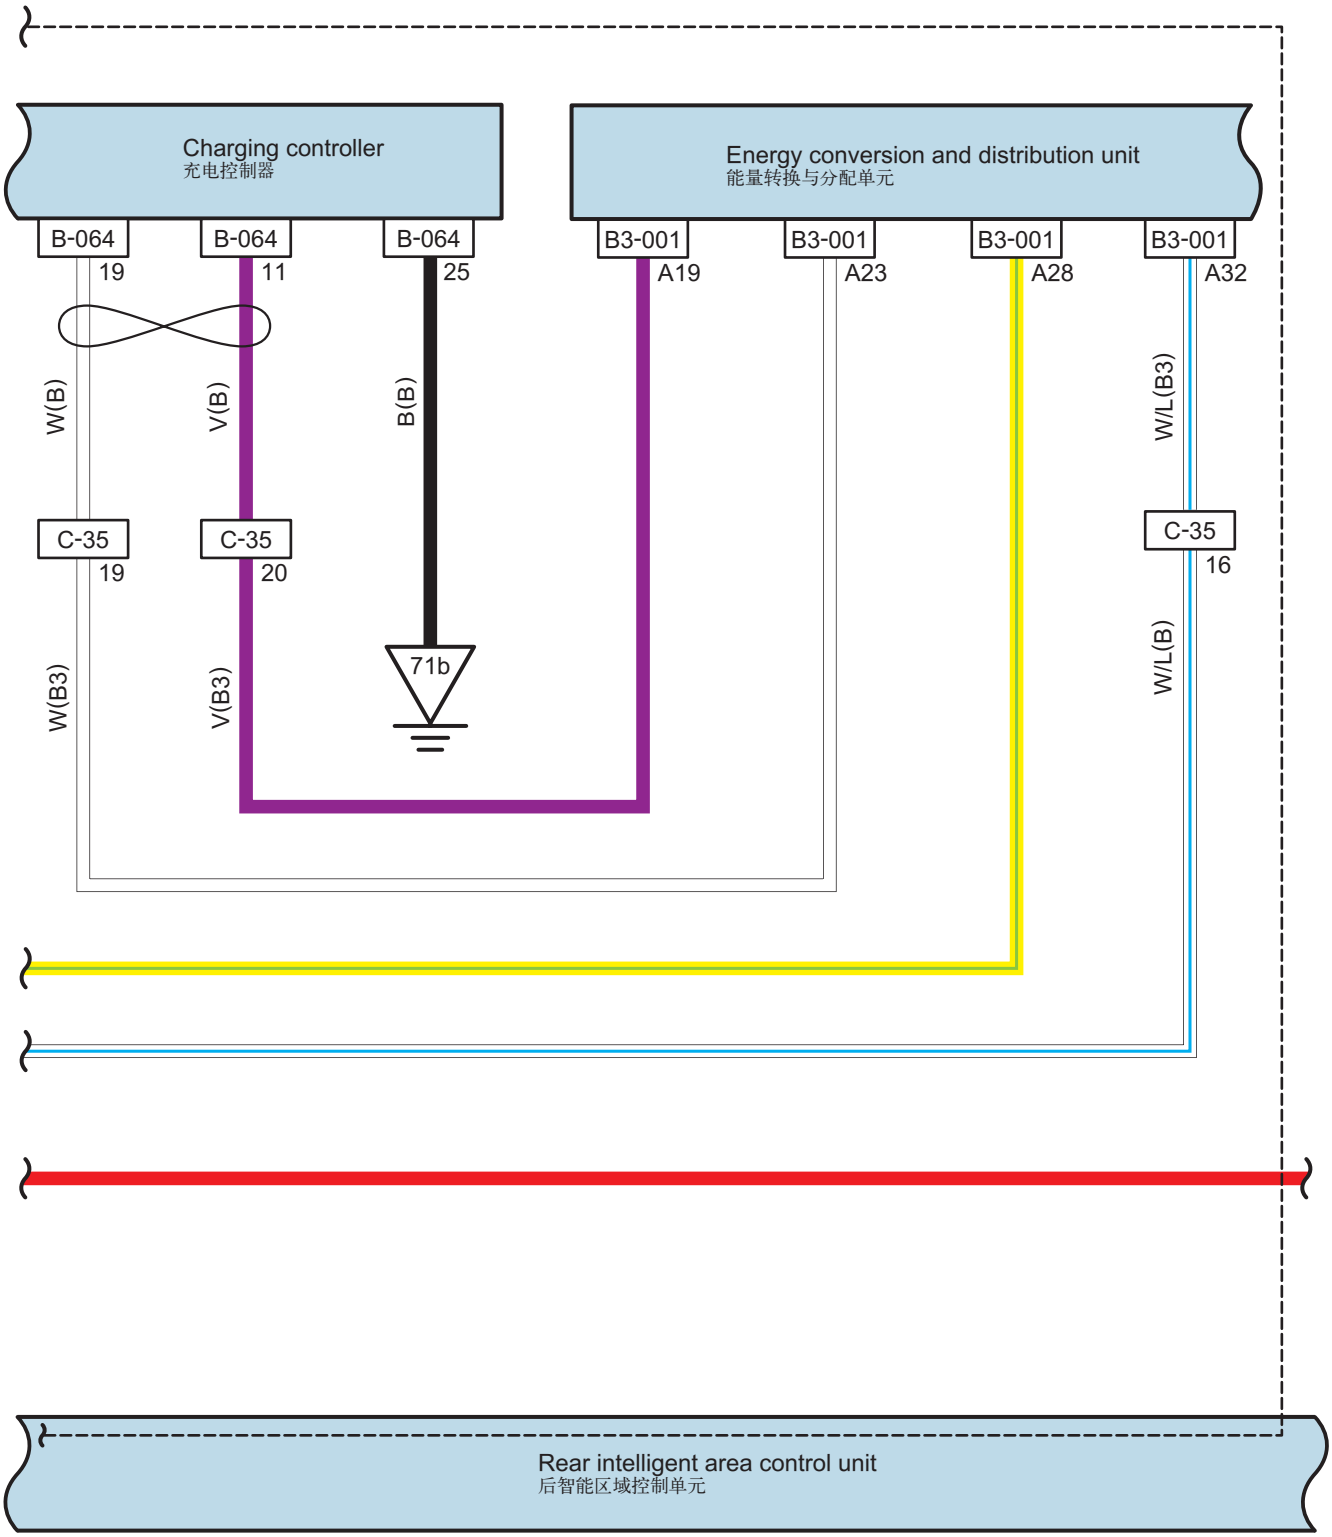

AC/DC charging port
交直流充电口
Energy conversion and distribution unit
能量转换与分配单元
B-107
8
B-107
9
B-107
11
B-107
1
B-107
2
B3-001
A19
B3-001
A23
L/W(B)
BR(B)
Y/G(B)
W(B)
V(B)
V(B3)
W(B3)
C-35
9
C-35
10
C-35
17
C-35
19
C-35
20
Rear intelligent area control unit
后智能区域控制单元

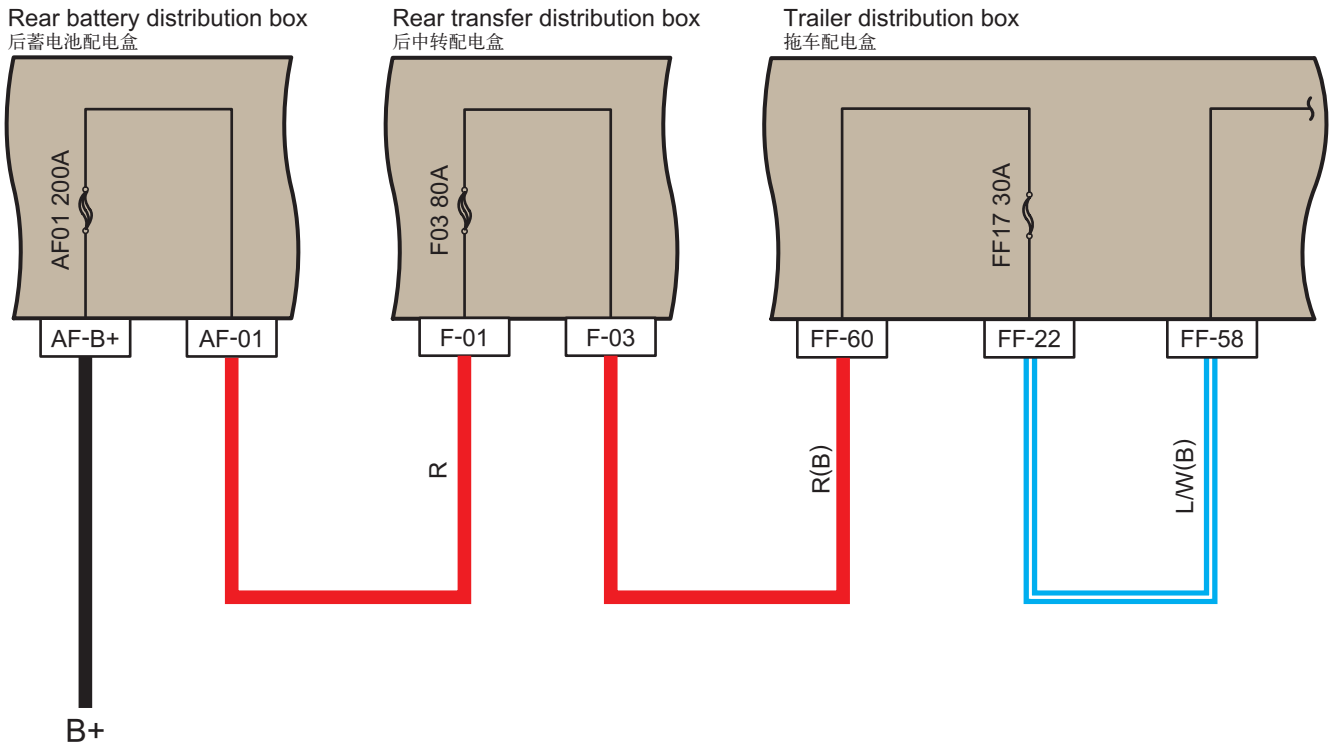

Energy conversion and distribution unit
能量转换与分配单元
B3-001
A28
B3-001
A15
B3-001
A16
Y/G(B3)
BR(B3)
L/W(B3)
Rear intelligent area control unit
后智能区域控制单元


European Sales
欧洲销售
Charging socket - European standard
充电座-欧标
B-106
4
B-106
6
B-106
10
B-106
12
B-106
18
B-106
21
V(B)
B/Y(B)
L/W(B)
BR(B)
G/R(B)
W/R(B)
E19
E18
E16
E15
E12
E5
B-053
B-053
B-053
B-053
B-053
B-053
Rear intelligent area control unit
后智能区域控制单元


Charging socket - European standard
充电座-欧标
B-106
5
B-106
7
B-106
13
B-106
19
B-106
22
B-106
20
B-106
11
B(B)
B(B)
B(B)
B(B)
B(B)
L/R(B)
G/L(B)
D8
B-054
E22
B-053
E4
B-053
Rear intelligent area control unit
后智能区域控制单元

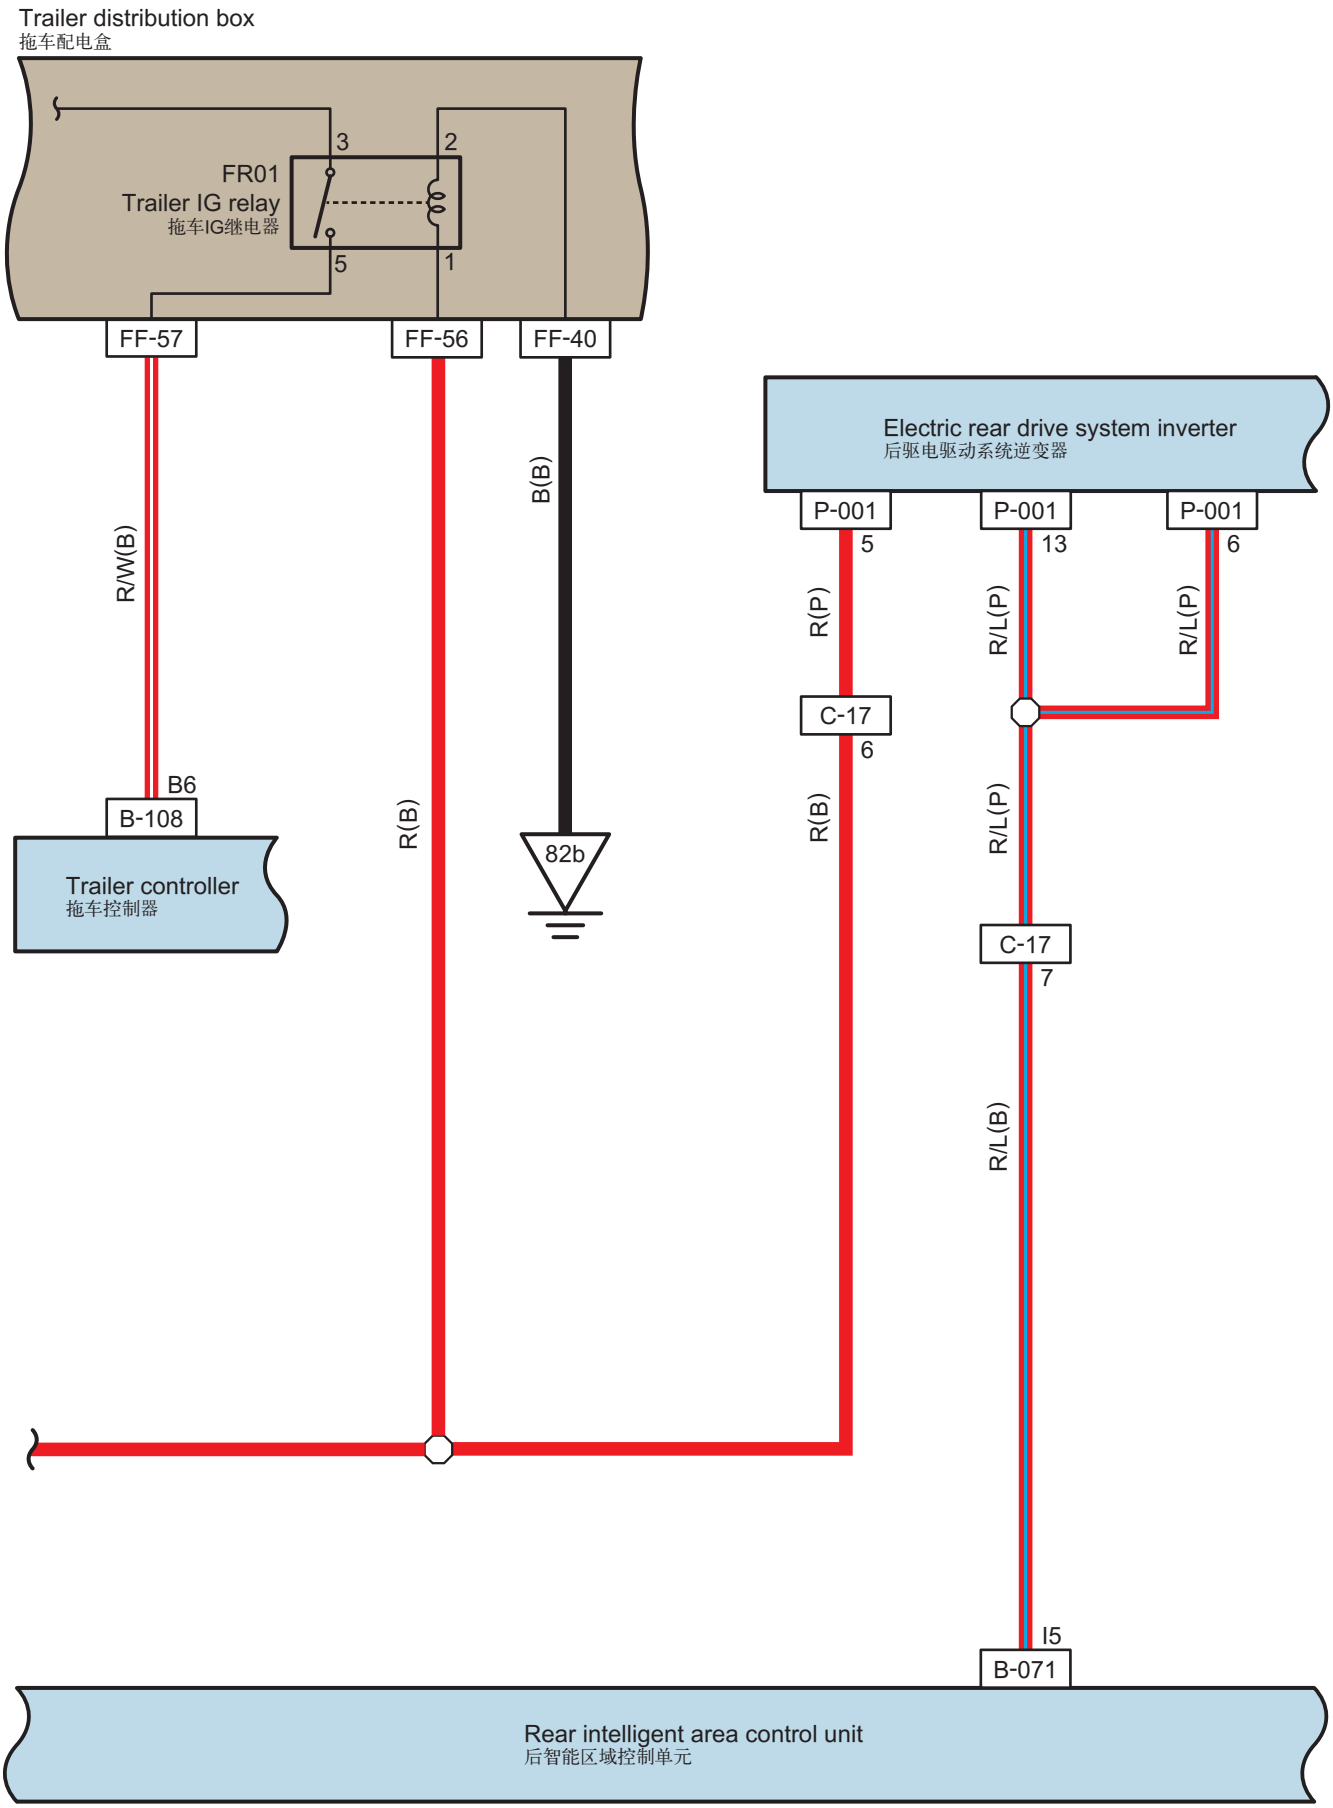

Charging controller
充电控制器
B-064
8
B-064
20
B-064
12
B-064
1
B-064
2
B-064
28
W/B(B)
Y(B)
L(B)
W/L(B)
R(B)
Y/G(B)
C-35
17
Y/G(B3)
Rear comfort_CAN
后部舒适_CAN
W/L(B)
R(B)
I4
J14
B-071
B-072
Rear intelligent area control unit
后智能区域控制单元

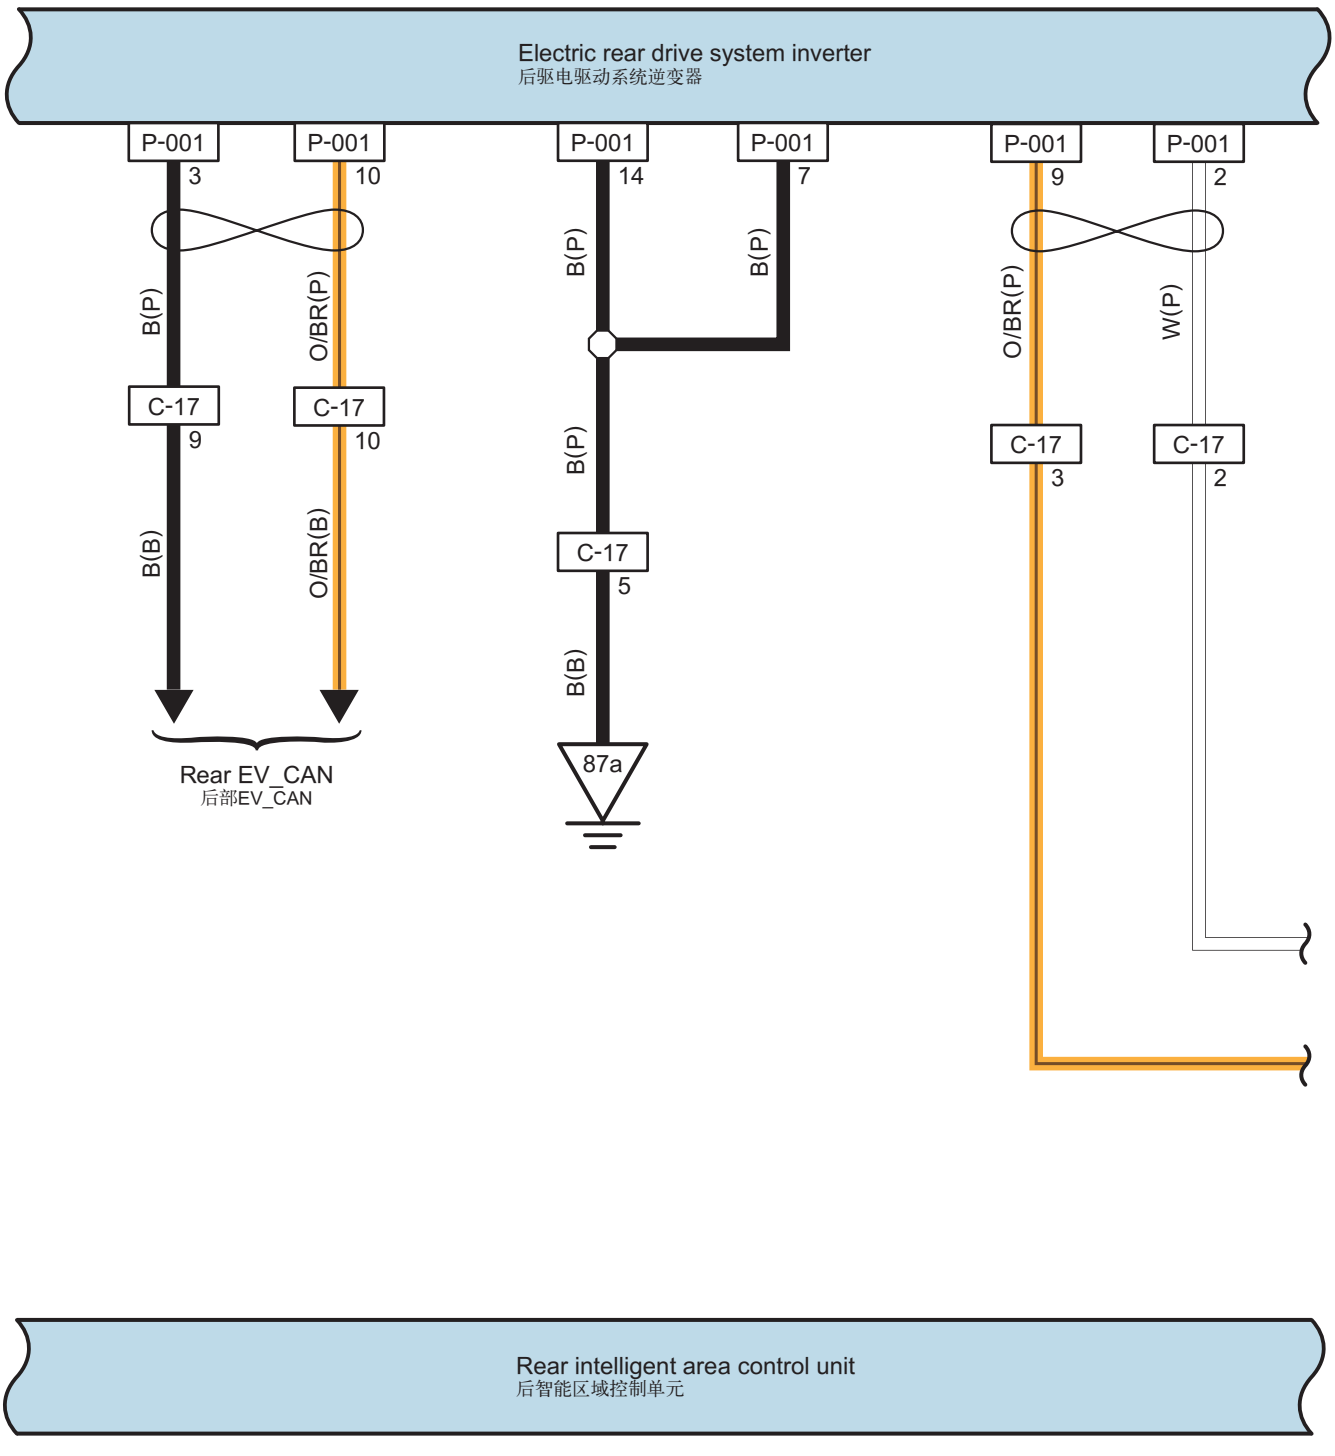

Charging controller
充电控制器
Energy conversion and distribution unit
能量转换与分配单元
B-064
19
B-064
11
B-064
25
B3-001
A19
B3-001
A23
B3-001
A28
B3-001
A32
W(B)
V(B)
B(B)
W/L(B3)
C-35
19
C-35
20
C-35
16
W(B3)
V(B3)
W/L(B)
71b
Rear intelligent area control unit
后智能区域控制单元

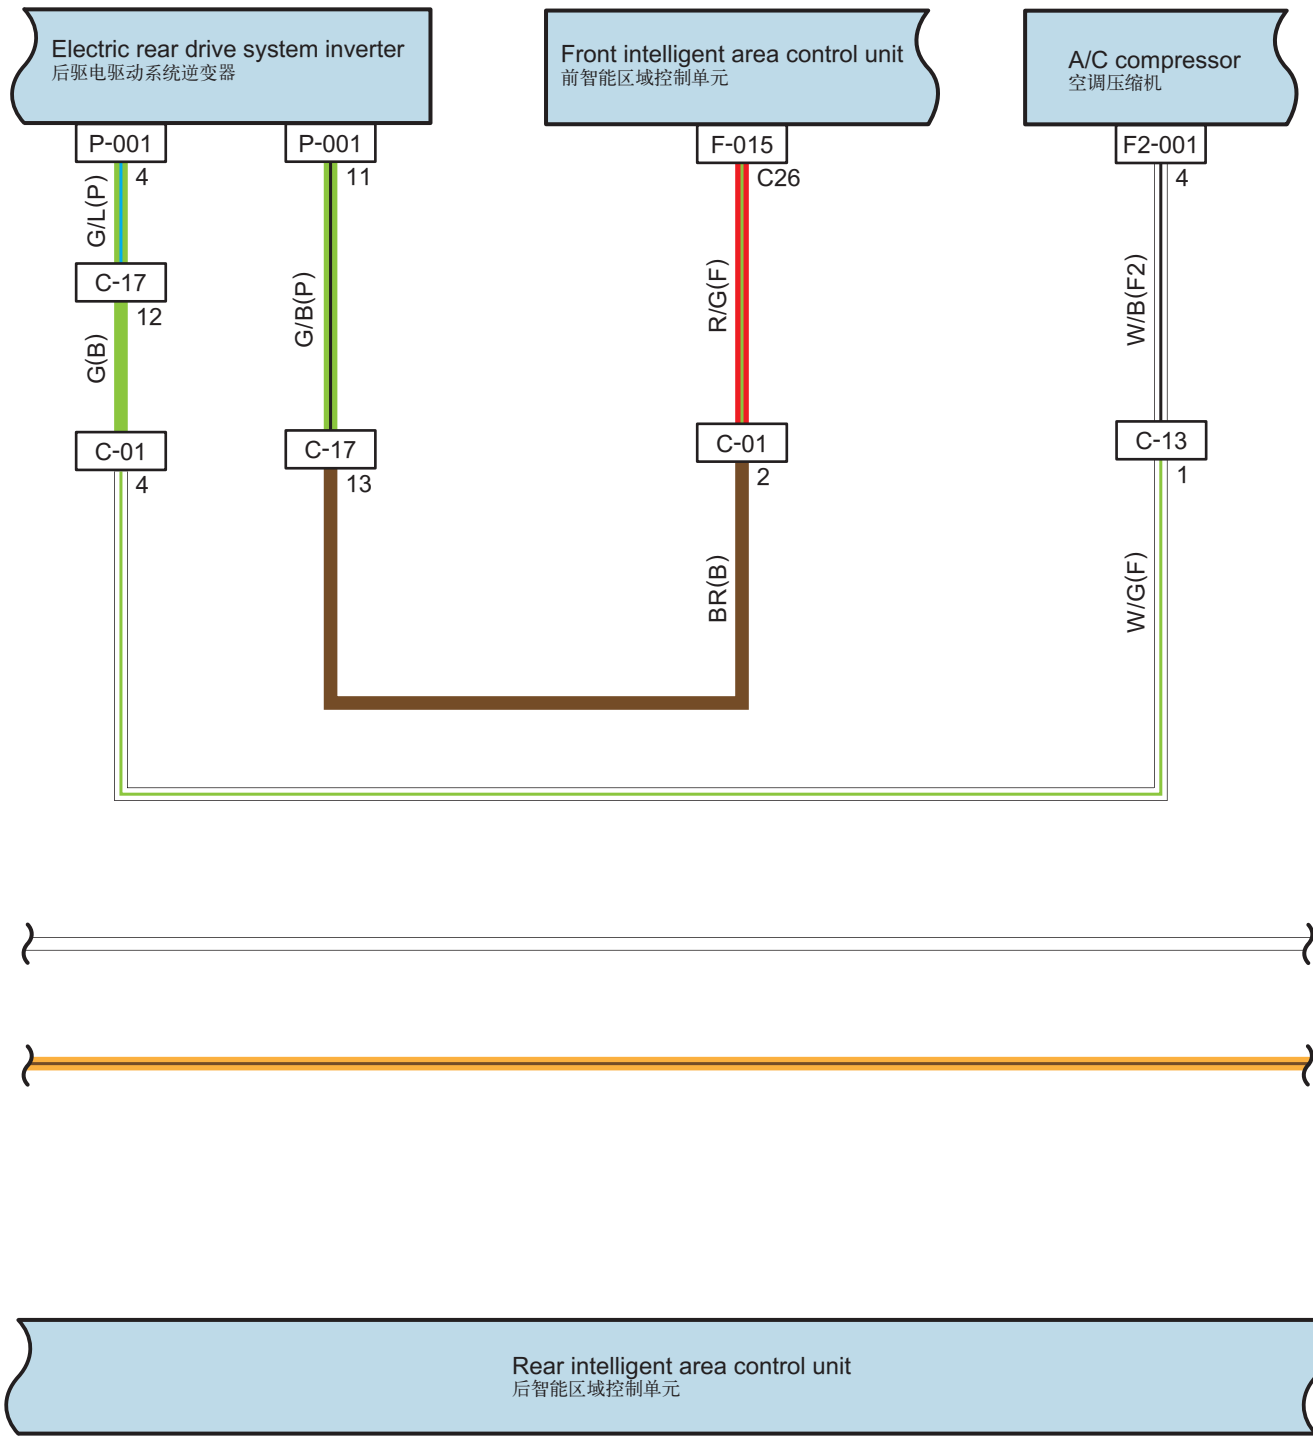

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Trailer distribution box
拖车配电盒
AF01 200A
F03 80A
FF17 30A
AF-B+
AF-01
F-01
F-03
FF-60
FF-22
FF-58
R
R(B)
L/W(B)
B+

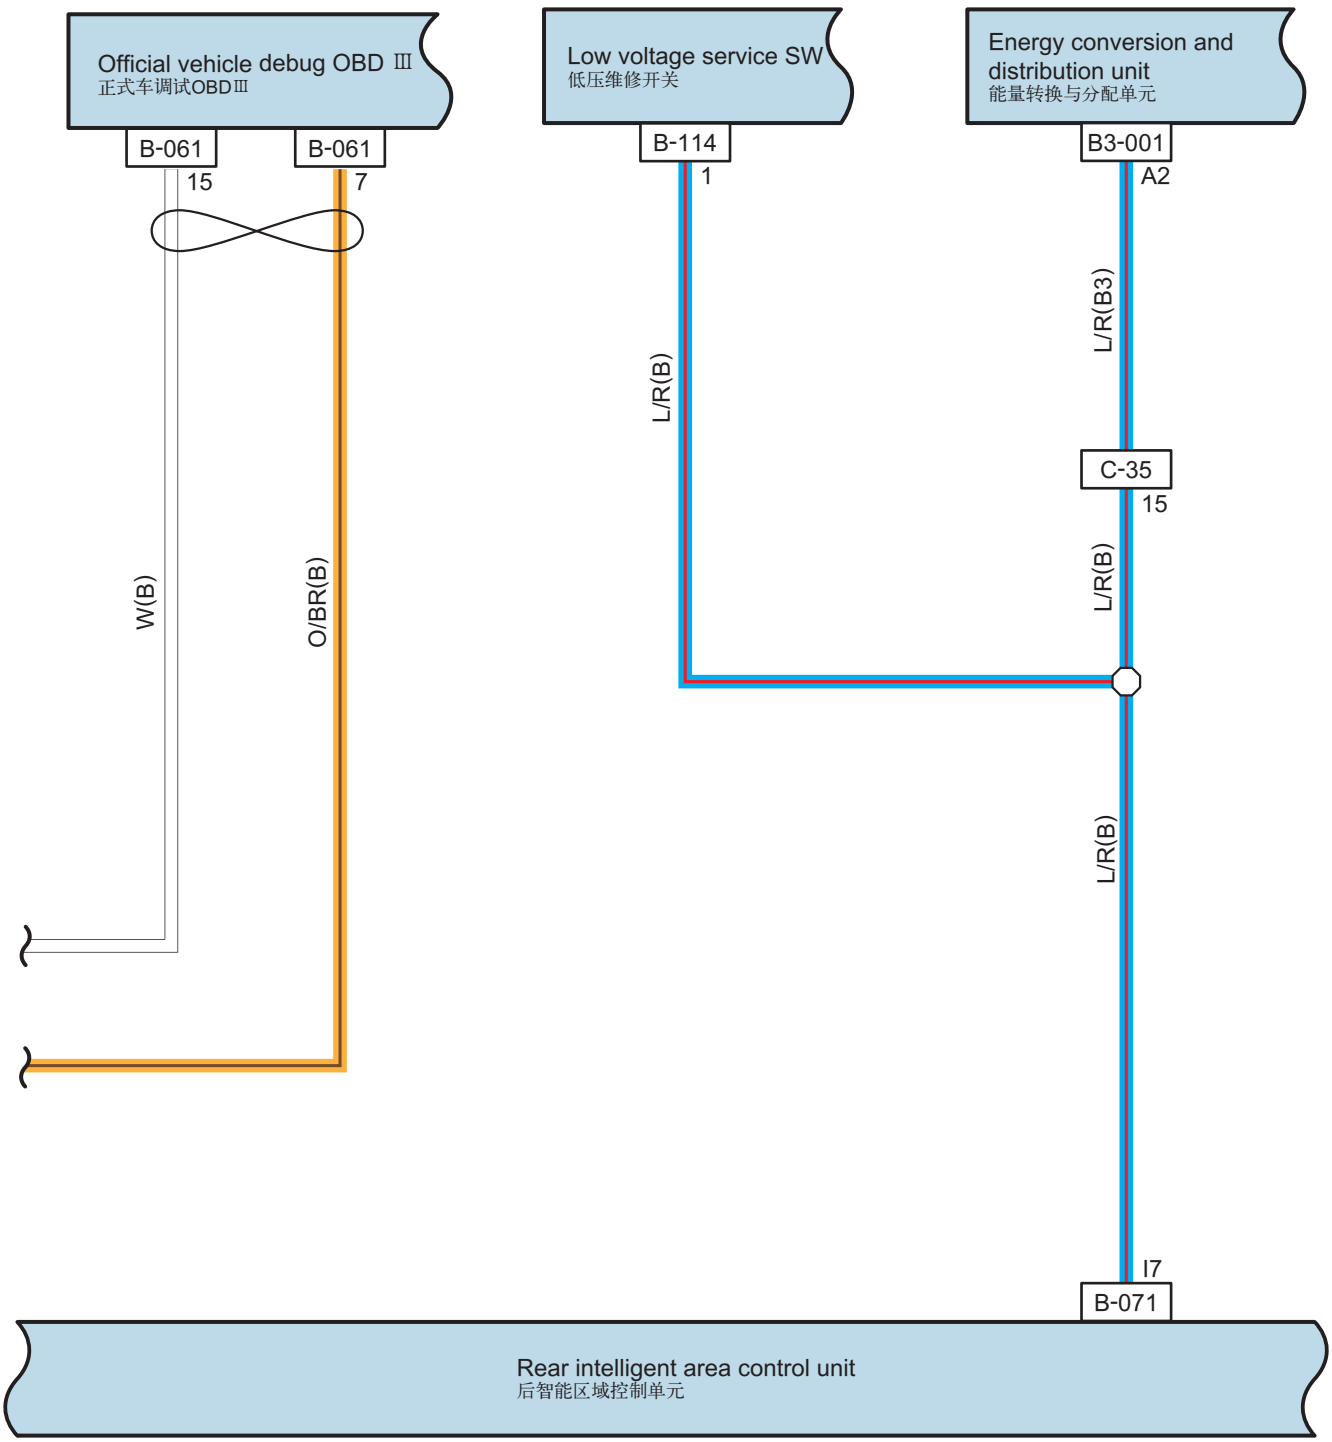


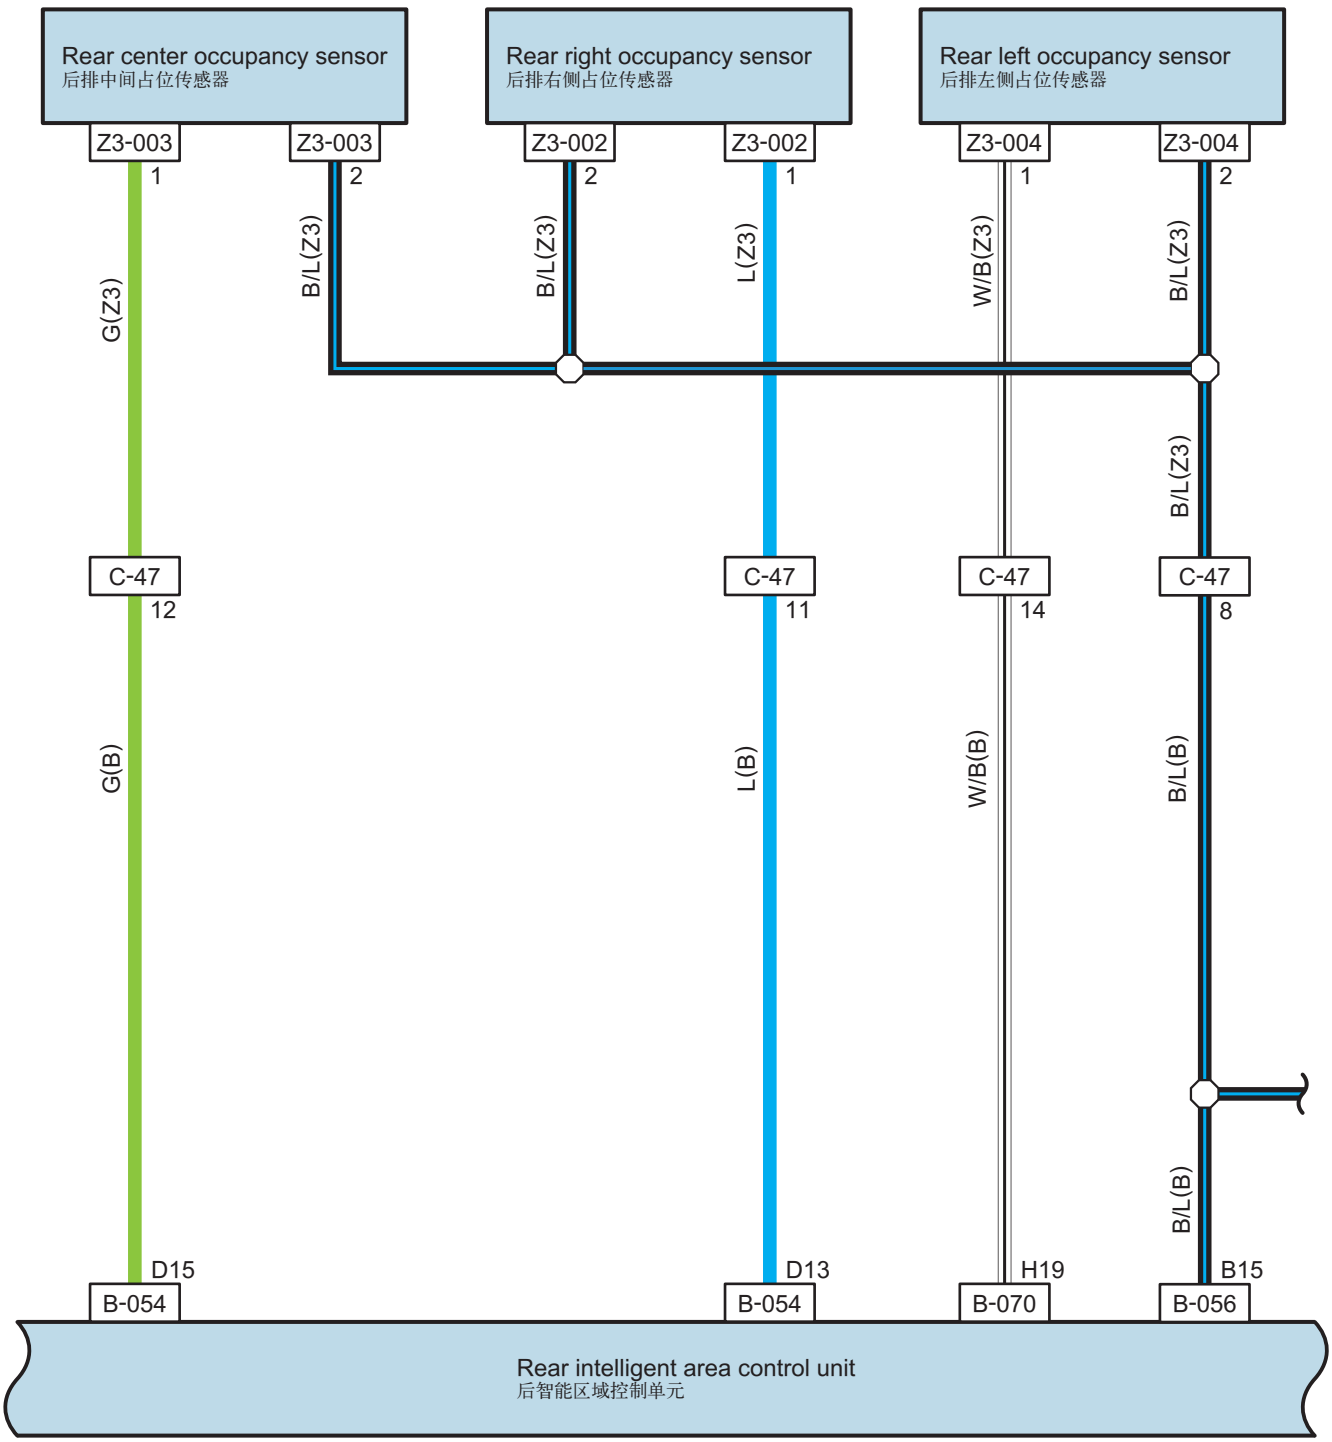

Rear intelligent area control unit
后智能区域控制单元

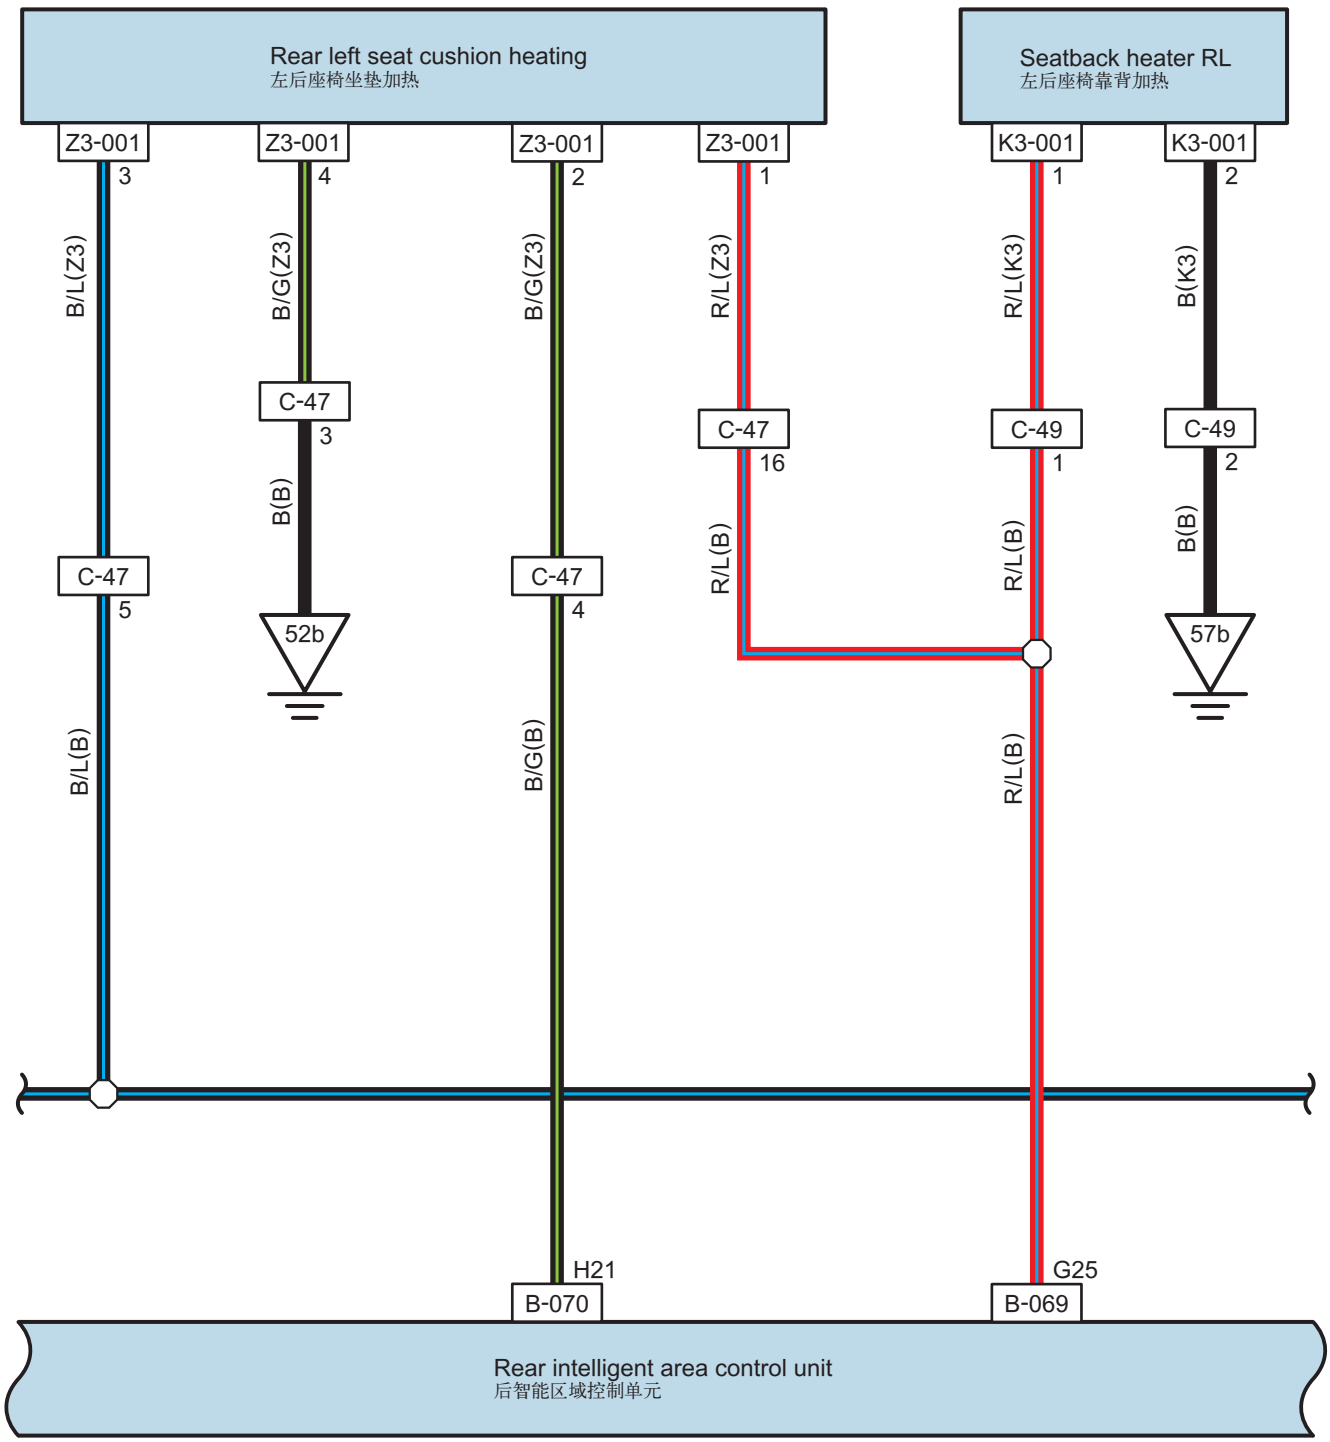

Trailer distribution box
拖车配电盒
FR01
Trailer IG relay
拖车IG继电器
3
2
5
1
FF-57
FF-56
FF-40
R/W(B)
B6
B-108
Trailer controller
拖车控制器
R(B)
B(B)
82b
Electric rear drive system inverter
后驱电驱动系统逆变器
P-001
5
P-001
13
P-001
6
R(P)
R/L(P)
R/L(P)
C-17
6
R(B)
R/L(P)
C-17
7
R/L(B)
I5
B-071
Rear intelligent area control unit
后智能区域控制单元

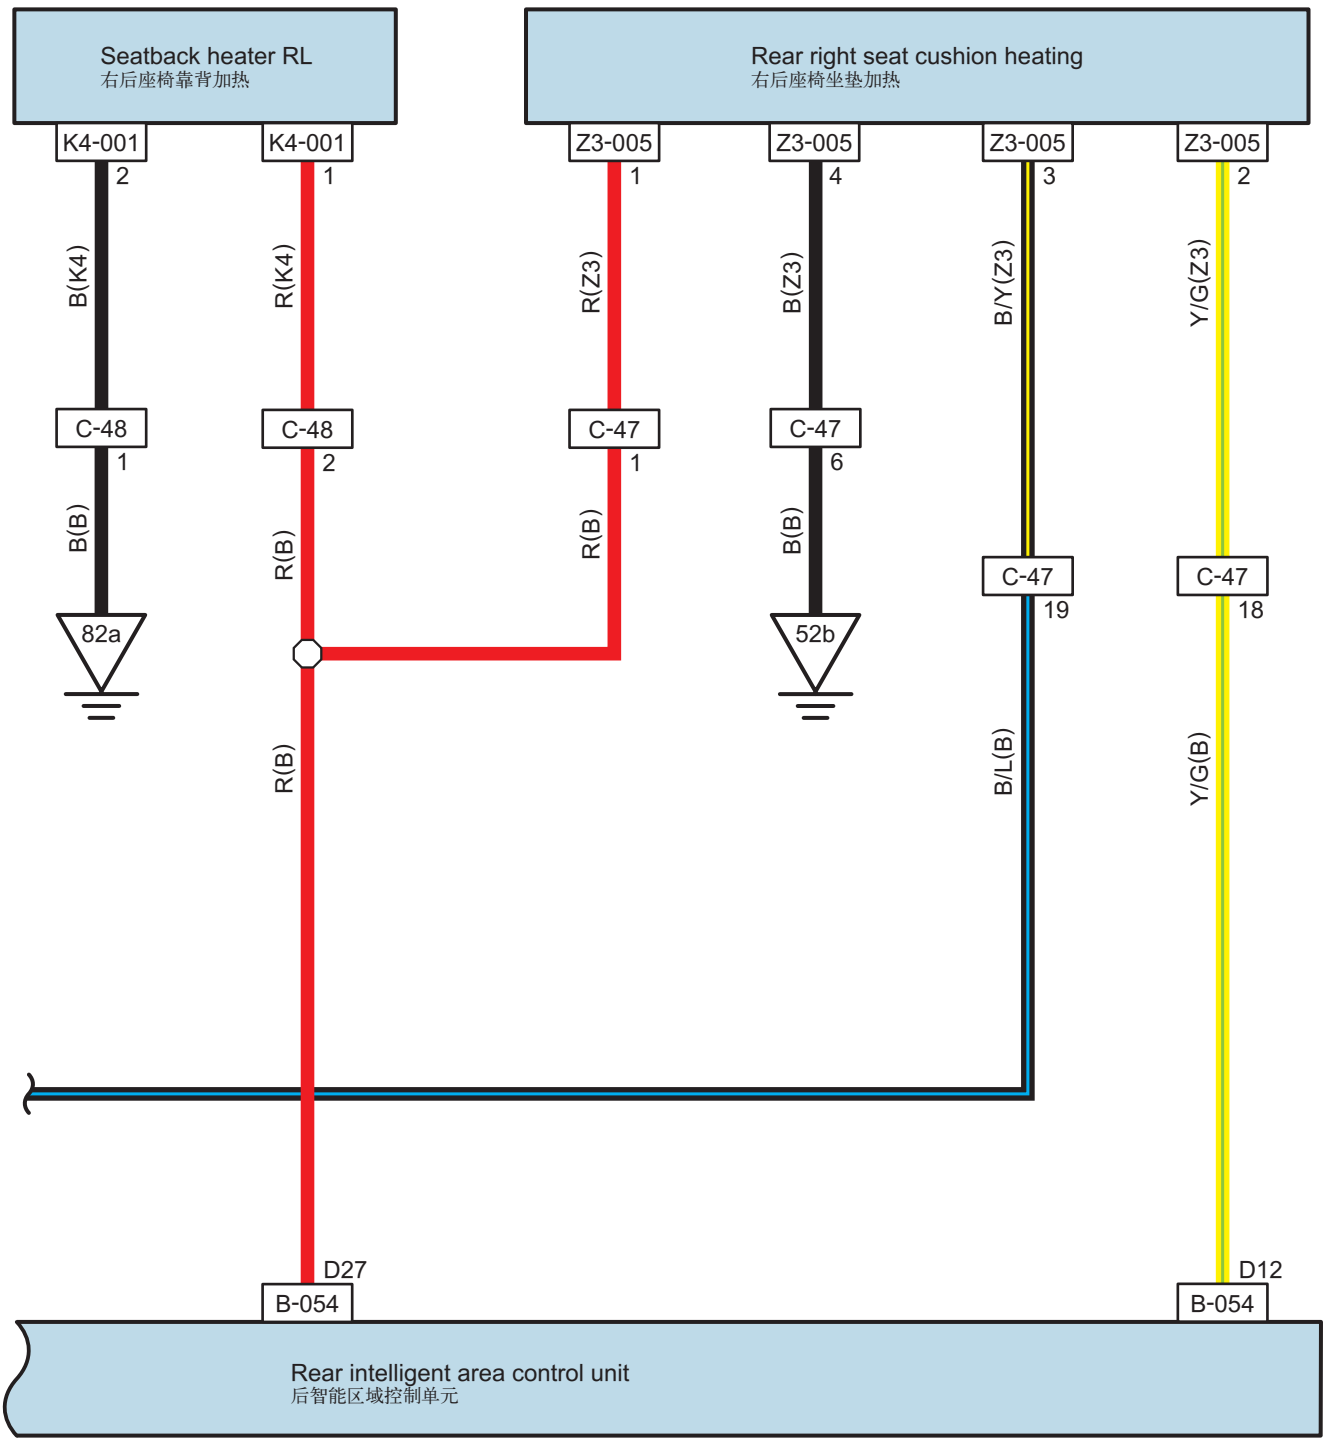

Electric rear drive system inverter
后驱电驱动系统逆变器
P-001
3
P-001
10
B(P)
O/BR(P)
C-17
9
C-17
10
B(B)
O/BR(B)
Rear EV_CAN
后部EV_CAN
P-001
14
P-001
7
B(P)
B(P)
B(P)
C-17
5
B(B)
87a
P-001
9
P-001
2
O/BR(P)
W(P)
C-17
3
C-17
2
Rear intelligent area control unit
后智能区域控制单元

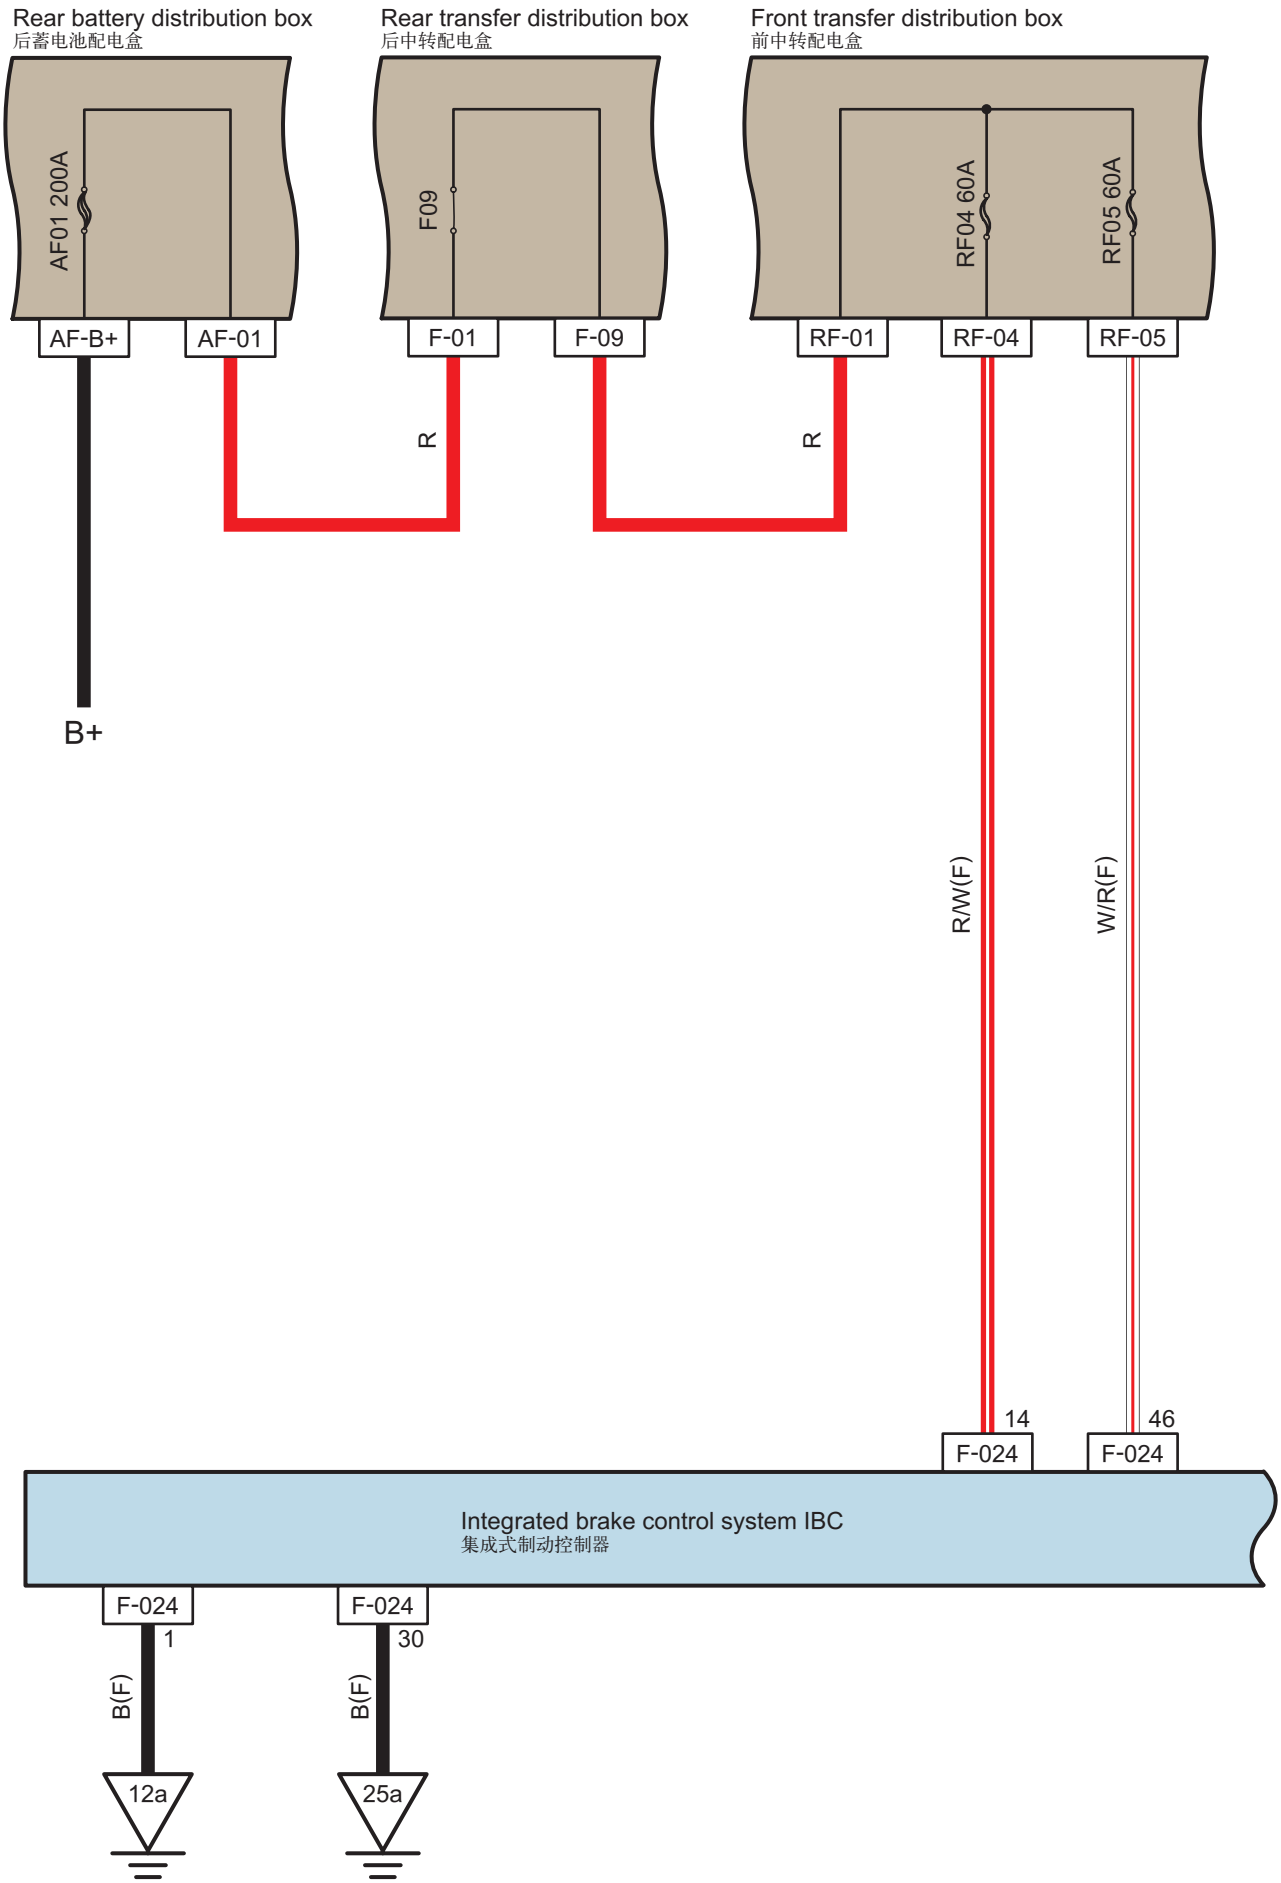

Electric rear drive system inverter
后驱电驱动系统逆变器
Front intelligent area control unit
前智能区域控制单元
A/C compressor
空调压缩机
P-001
4
G/L(P)
C-17
12
G(B)
C-01
4
P-001
11
G/B(P)
C-17
13
F-015
C26
R/G(F)
C-01
2
BR(B)
F2-001
4
W/B(F2)
C-13
1
W/G(F)
Rear intelligent area control unit
后智能区域控制单元

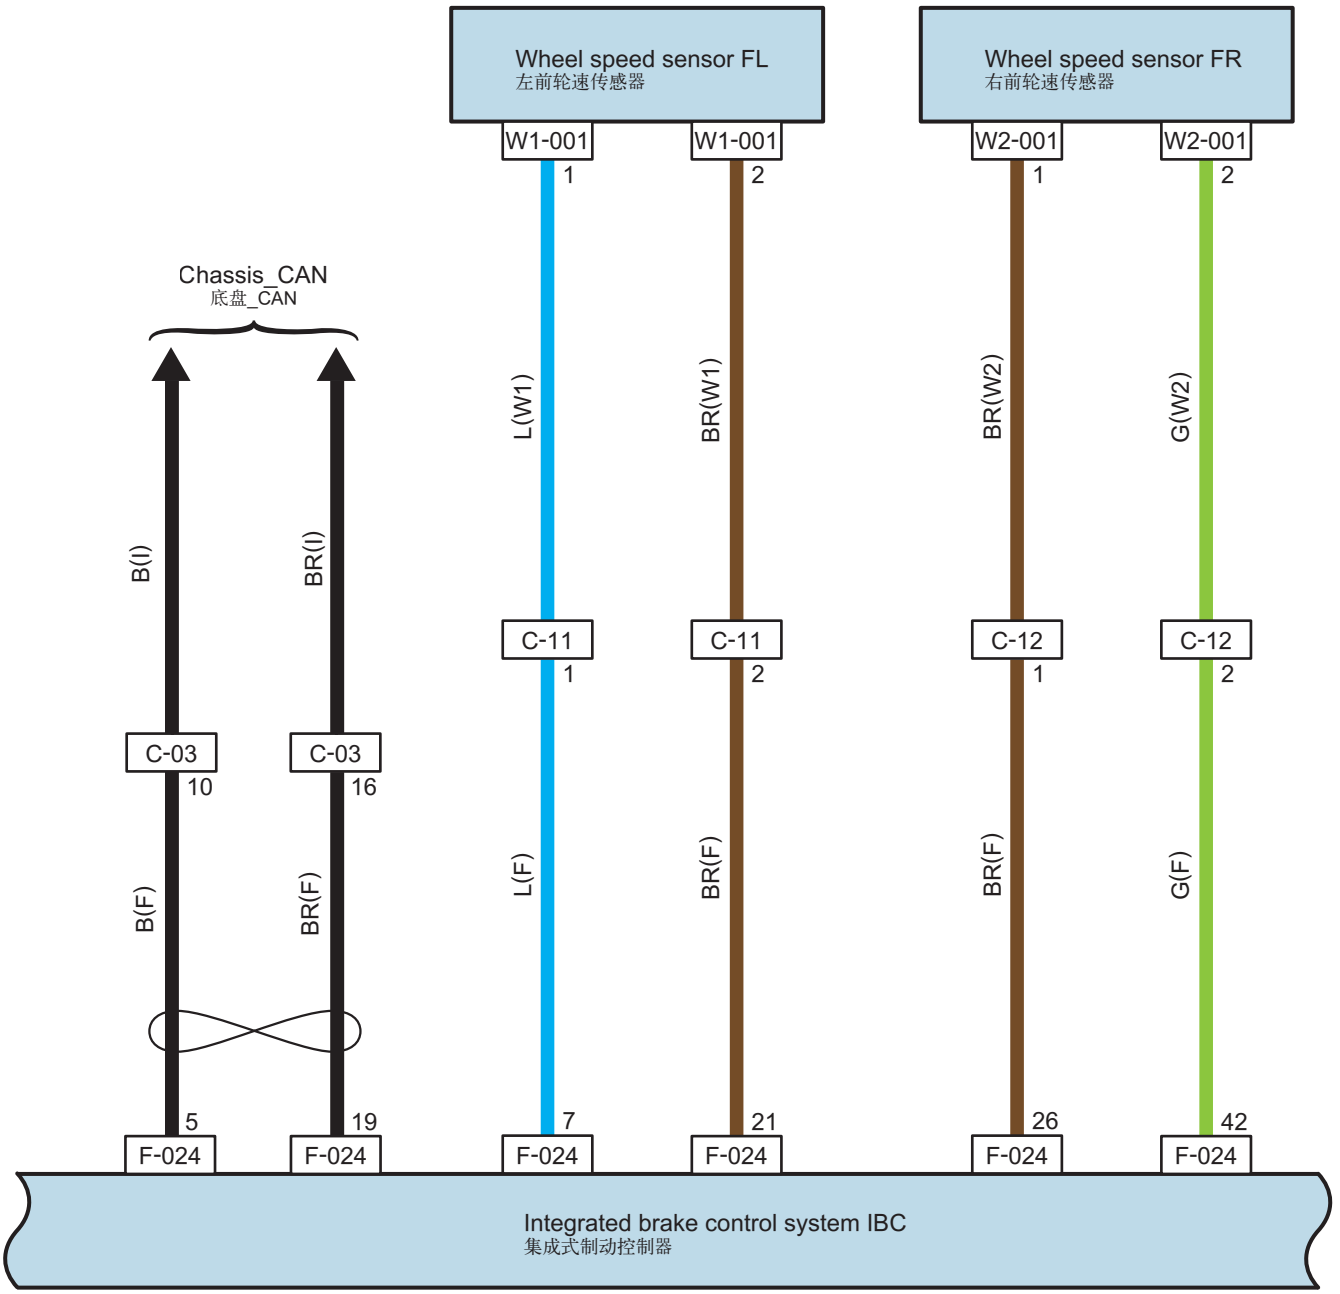

Official vehicle debug OBD Ⅲ
正式车调试OBDⅢ
B-061
15
B-061
7
W(B)
O/BR(B)
Low voltage service SW
低压维修开关
B-114
1
L/R(B)
Energy conversion and distribution unit
能量转换与分配单元
B3-001
A2
L/R(B3)
C-35
15
L/R(B)
L/R(B)
I7
B-071
Rear intelligent area control unit
后智能区域控制单元

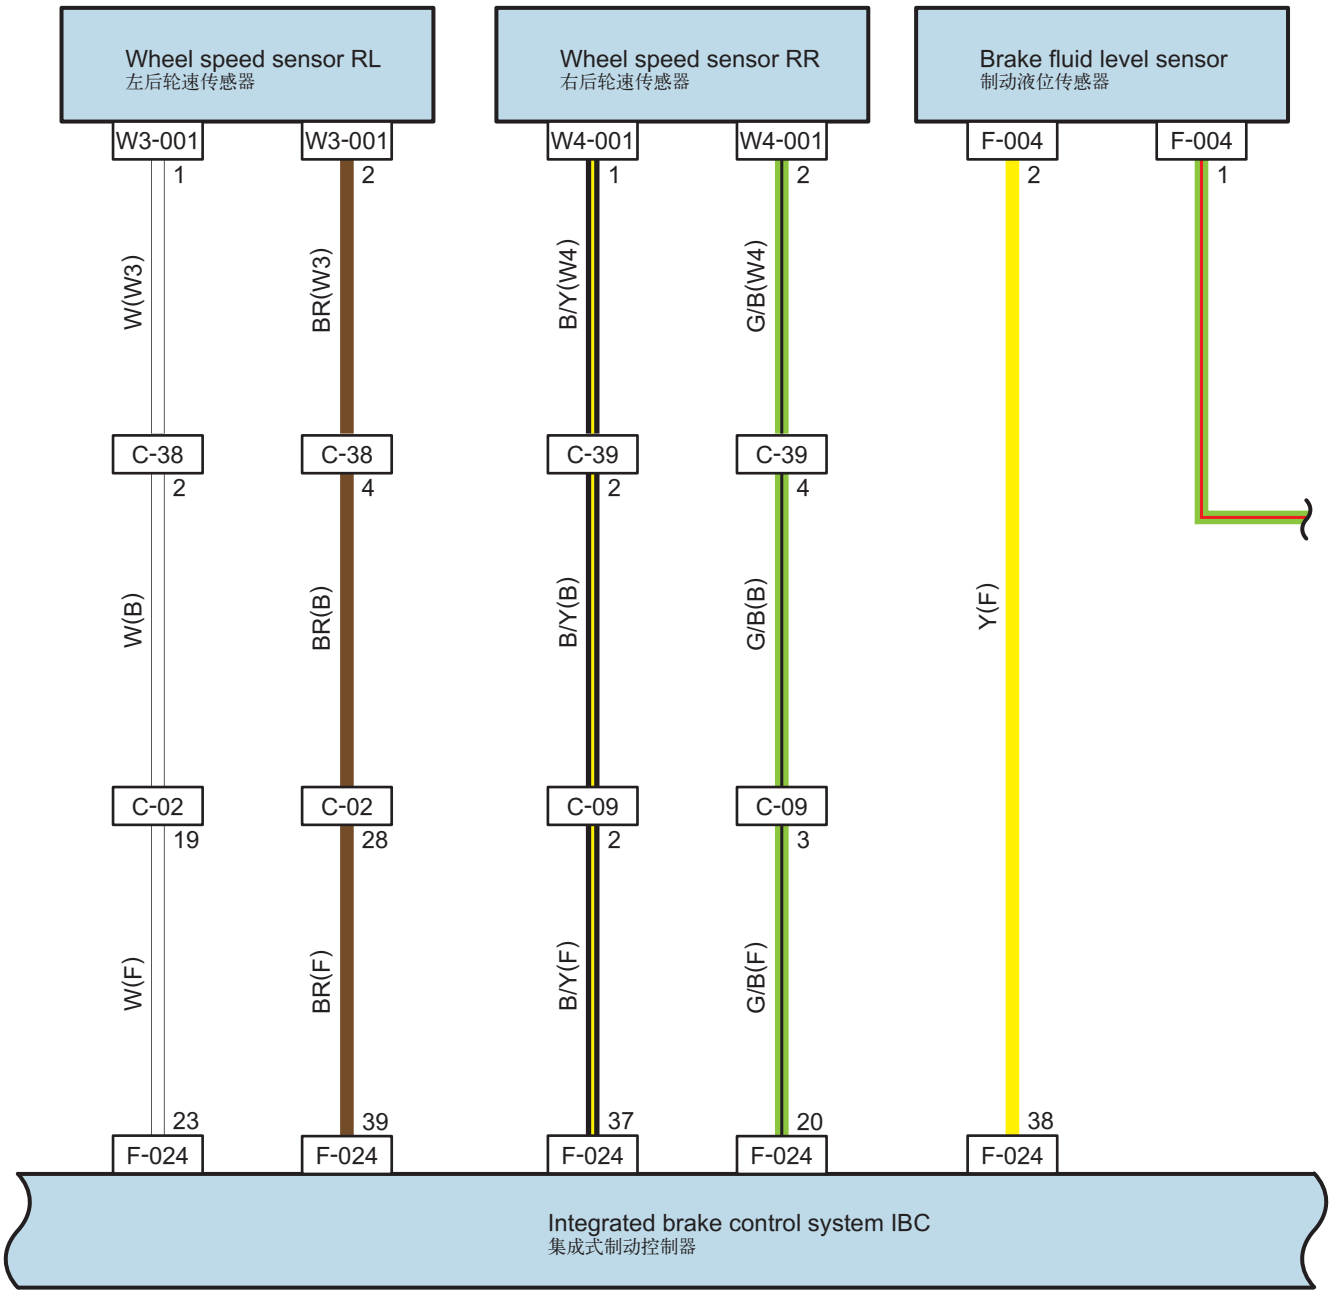

Rear center occupancy sensor
后排中间占位传感器
Rear right occupancy sensor
后排右侧占位传感器
Rear left occupancy sensor
后排左侧占位传感器
Z3-003
1
Z3-003
2
Z3-002
2
Z3-002
1
Z3-004
1
Z3-004
2
G(Z3)
B/L(Z3)
B/L(Z3)
L(Z3)
W/B(Z3)
B/L(Z3)
B/L(Z3)
C-47
12
C-47
11
C-47
14
C-47
8
G(B)
L(B)
W/B(B)
B/L(B)
B/L(B)
D15
B-054
D13
B-054
H19
B-070
B15
B-056
Rear intelligent area control unit
后智能区域控制单元

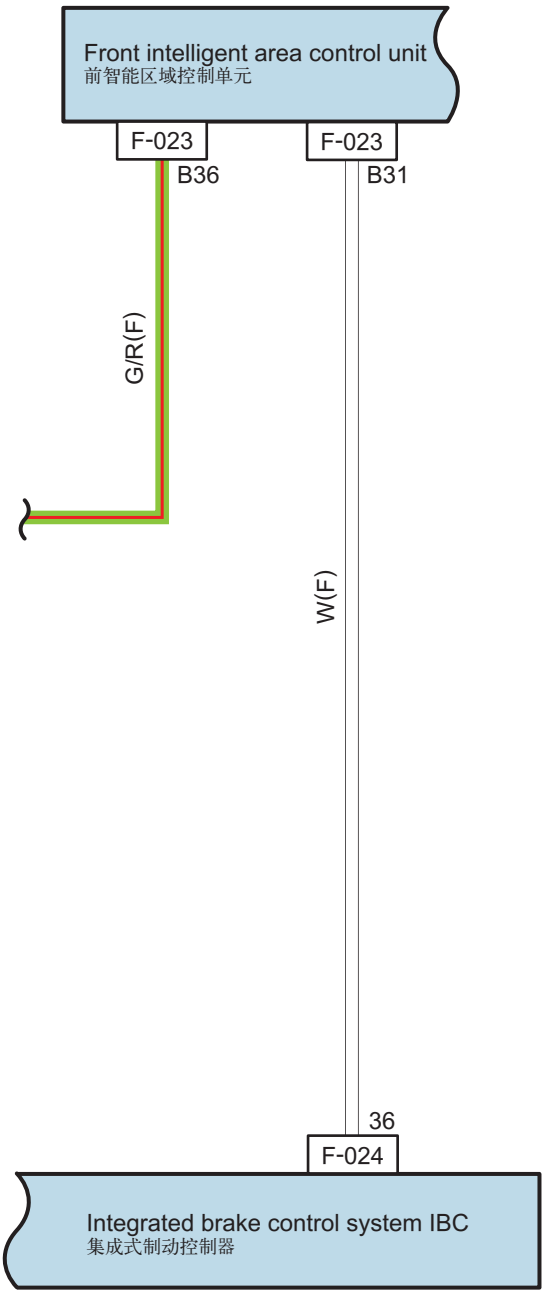

Rear left seat cushion heating
左后座椅坐垫加热
Seatback heater RL
左后座椅靠背加热
Z3-001
3
Z3-001
4
Z3-001
2
Z3-001
1
K3-001
1
K3-001
2
B/L(Z3)
B/G(Z3)
B/G(Z3)
R/L(Z3)
R/L(K3)
B(K3)
C-47
3
C-47
16
C-49
1
C-49
2
B(B)
R/L(B)
R/L(B)
B(B)
C-47
5
C-47
4
52b
57b
B/L(B)
B/G(B)
R/L(B)
H21
G25
B-070
B-069
Rear intelligent area control unit
后智能区域控制单元

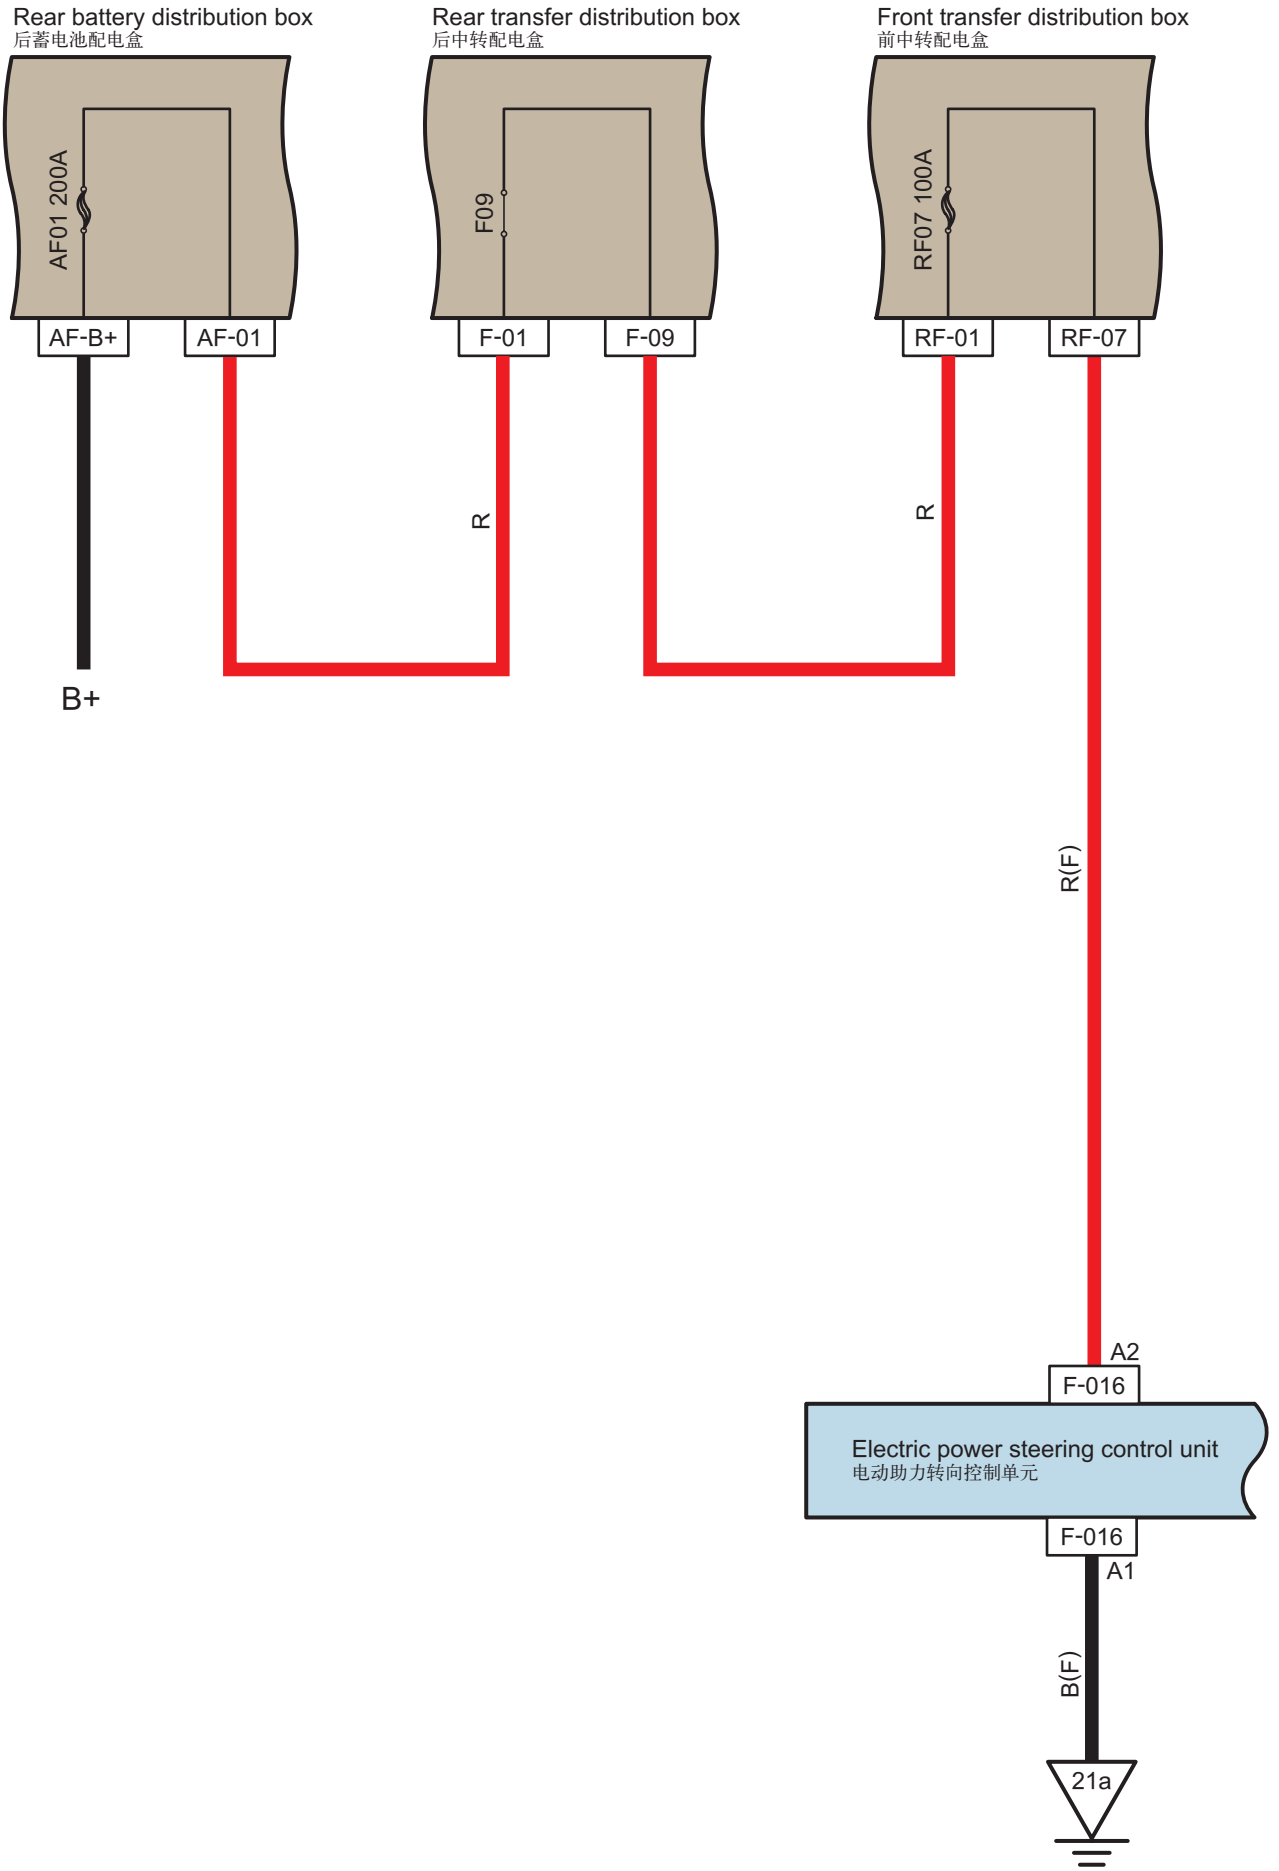

Seatback heater RL
右后座椅靠背加热
Rear right seat cushion heating
右后座椅坐垫加热
K4-001
2
K4-001
1
Z3-005
1
Z3-005
4
Z3-005
3
Z3-005
2
B(K4)
R(K4)
R(Z3)
B(Z3)
B/Y(Z3)
Y/G(Z3)
C-48
1
C-48
2
C-47
1
C-47
6
B(B)
R(B)
R(B)
B(B)
82a
52b
C-47
19
C-47
18
B/L(B)
Y/G(B)
R(B)
D27
B-054
D12
B-054
Rear intelligent area control unit
后智能区域控制单元

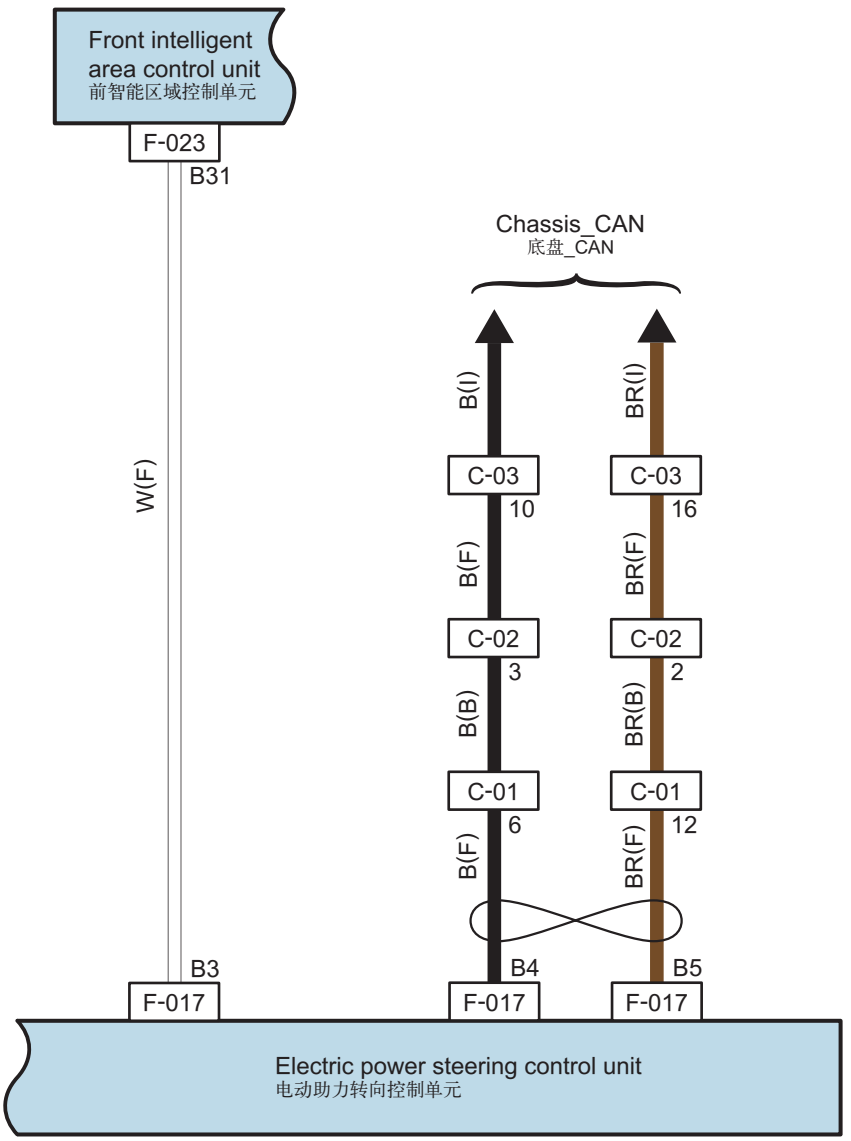

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
AF01 200A
F09
RF04 60A
RF05 60A
AF-B+
AF-01
F-01
F-09
RF-01
RF-04
RF-05
R
R
B+
R/W(F)
W/R(F)
14
46
F-024
F-024
Integrated brake control system IBC
集成式制动控制器
F-024
F-024
1
30
B(F)
B(F)
12a
25a

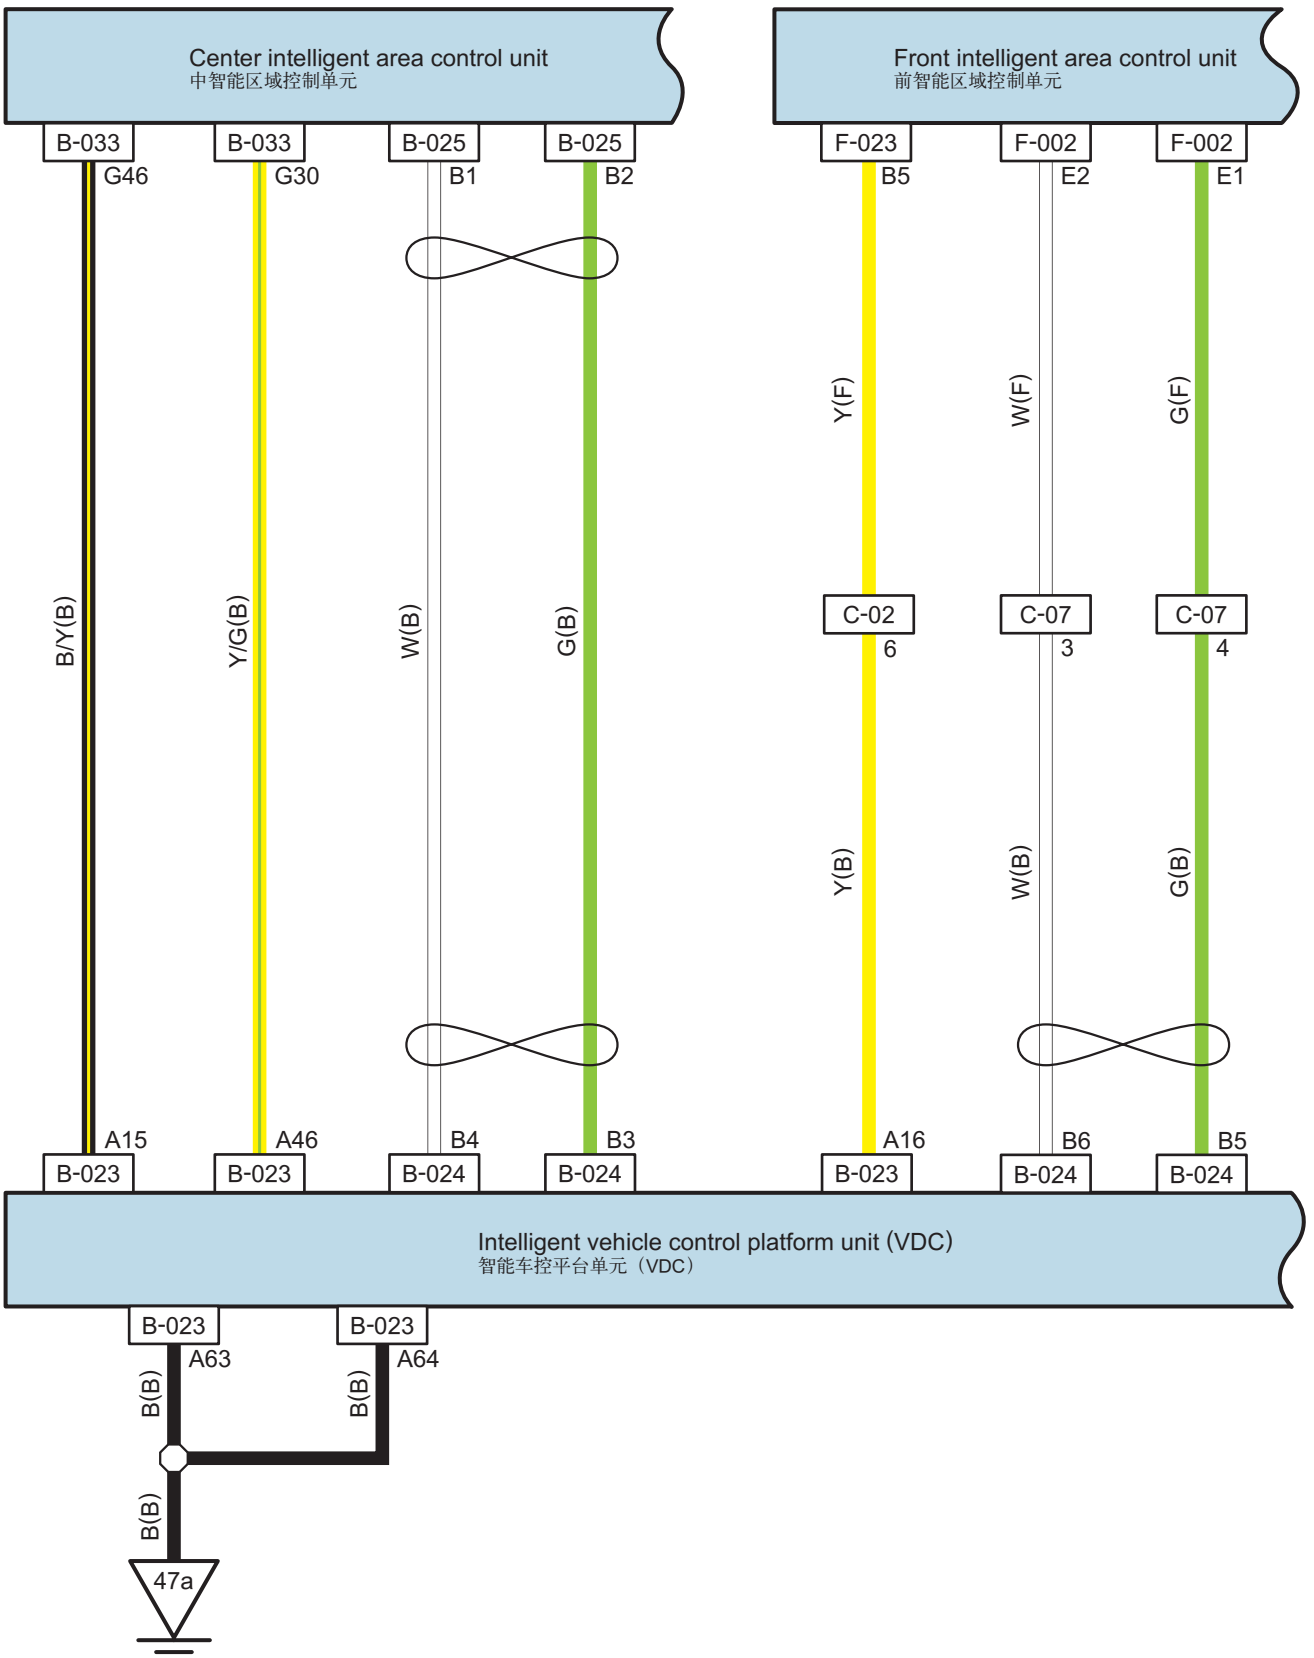

Wheel speed sensor FL
左前轮速传感器
Wheel speed sensor FR
右前轮速传感器
W1-001
1
W1-001
2
W2-001
1
W2-001
2
Chassis_CAN
底盘_CAN
L(W1)
BR(W1)
BR(W2)
G(W2)
B(I)
BR(I)
C-11
1
C-11
2
C-12
1
C-12
2
C-03
10
C-03
16
B(F)
BR(F)
L(F)
BR(F)
BR(F)
G(F)
5
19
7
21
26
42
F-024
F-024
F-024
F-024
F-024
F-024
Integrated brake control system IBC
集成式制动控制器

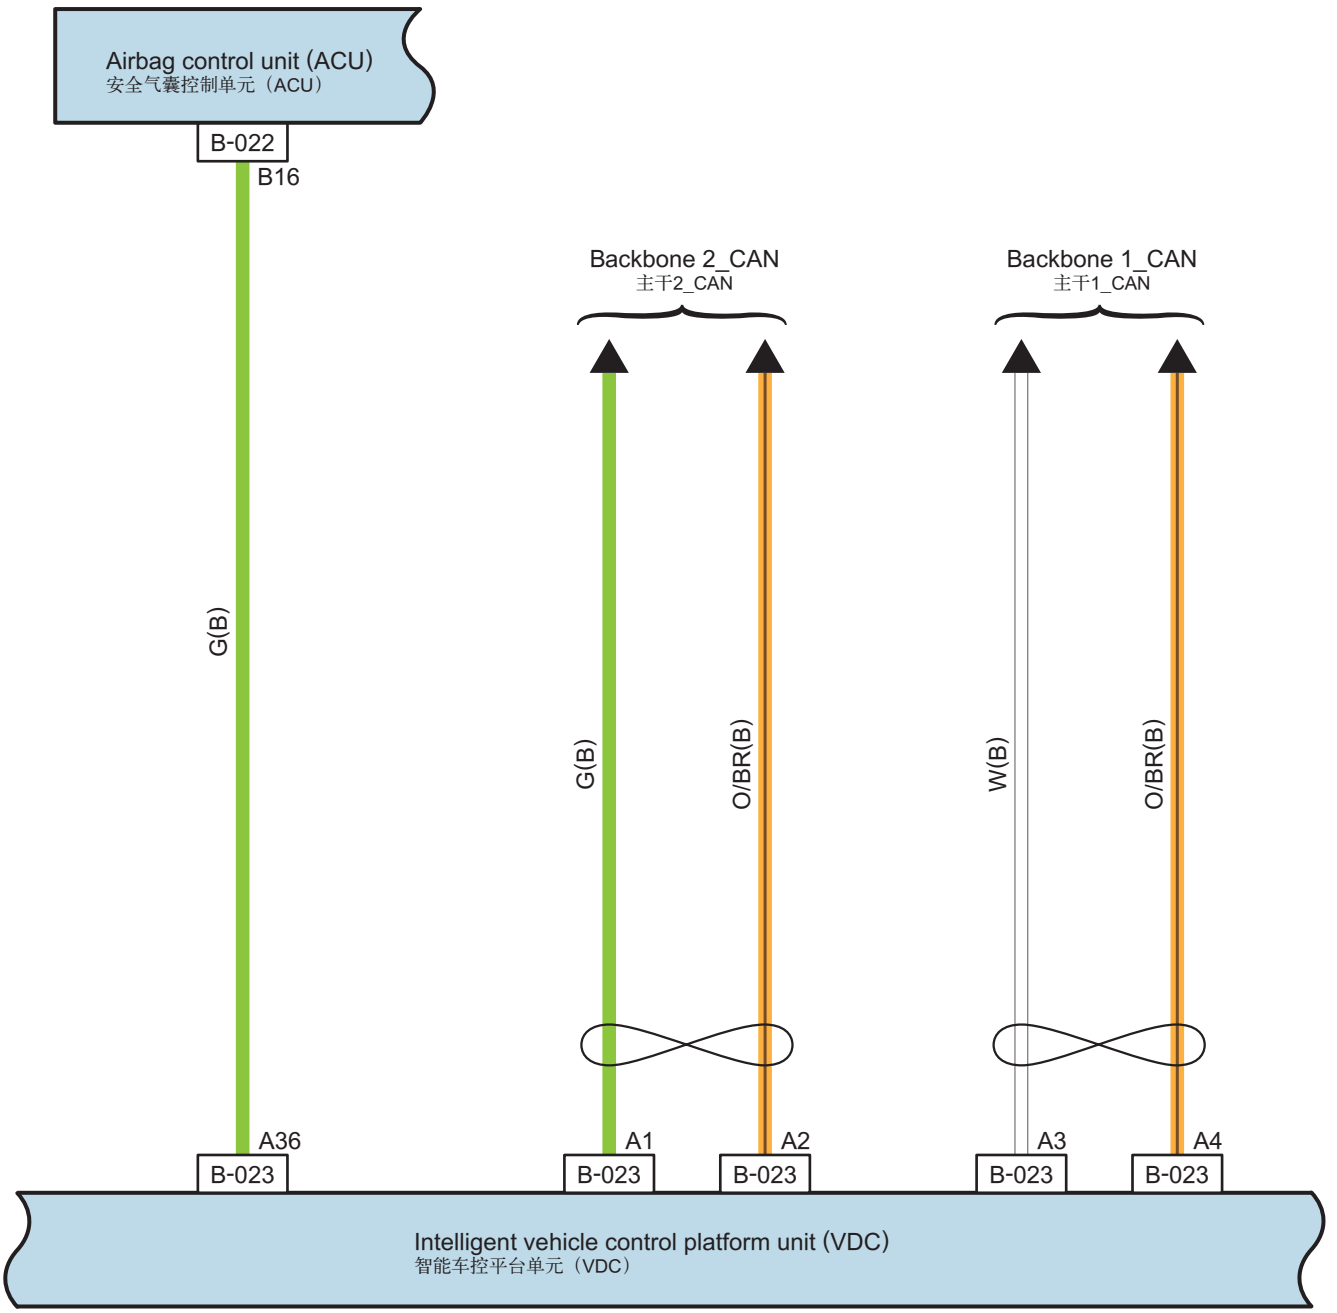

Wheel speed sensor RL
左后轮速传感器
Wheel speed sensor RR
右后轮速传感器
Brake fluid level sensor
制动液位传感器
W3-001
1
W3-001
2
W4-001
1
W4-001
2
F-004
2
F-004
1
W(W3)
BR(W3)
B/Y(W4)
G/B(W4)
Y(F)
C-38
2
C-38
4
C-39
2
C-39
4
W(B)
BR(B)
B/Y(B)
G/B(B)
C-02
19
C-02
28
C-09
2
C-09
3
W(F)
BR(F)
B/Y(F)
G/B(F)
23
39
37
20
38
F-024
F-024
F-024
F-024
F-024
Integrated brake control system IBC
集成式制动控制器

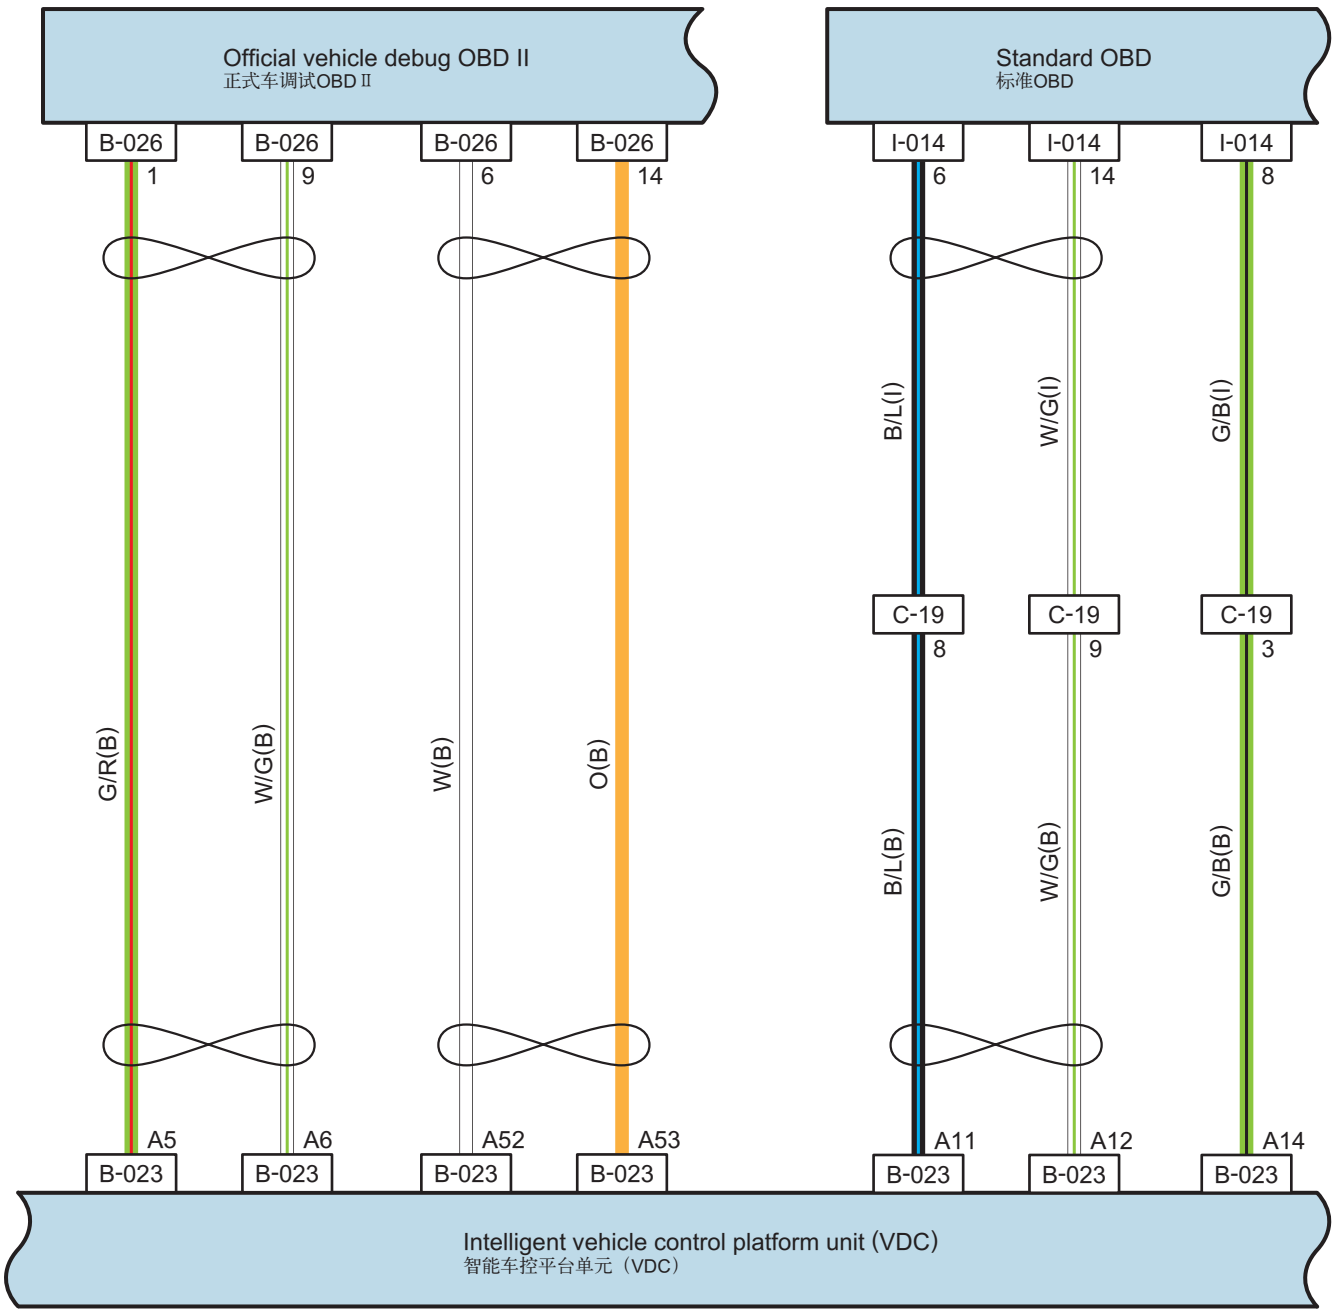

Front intelligent area control unit
前智能区域控制单元
F-023
B36
F-023
B31
G/R(F)
W(F)
36
F-024
Integrated brake control system IBC
集成式制动控制器

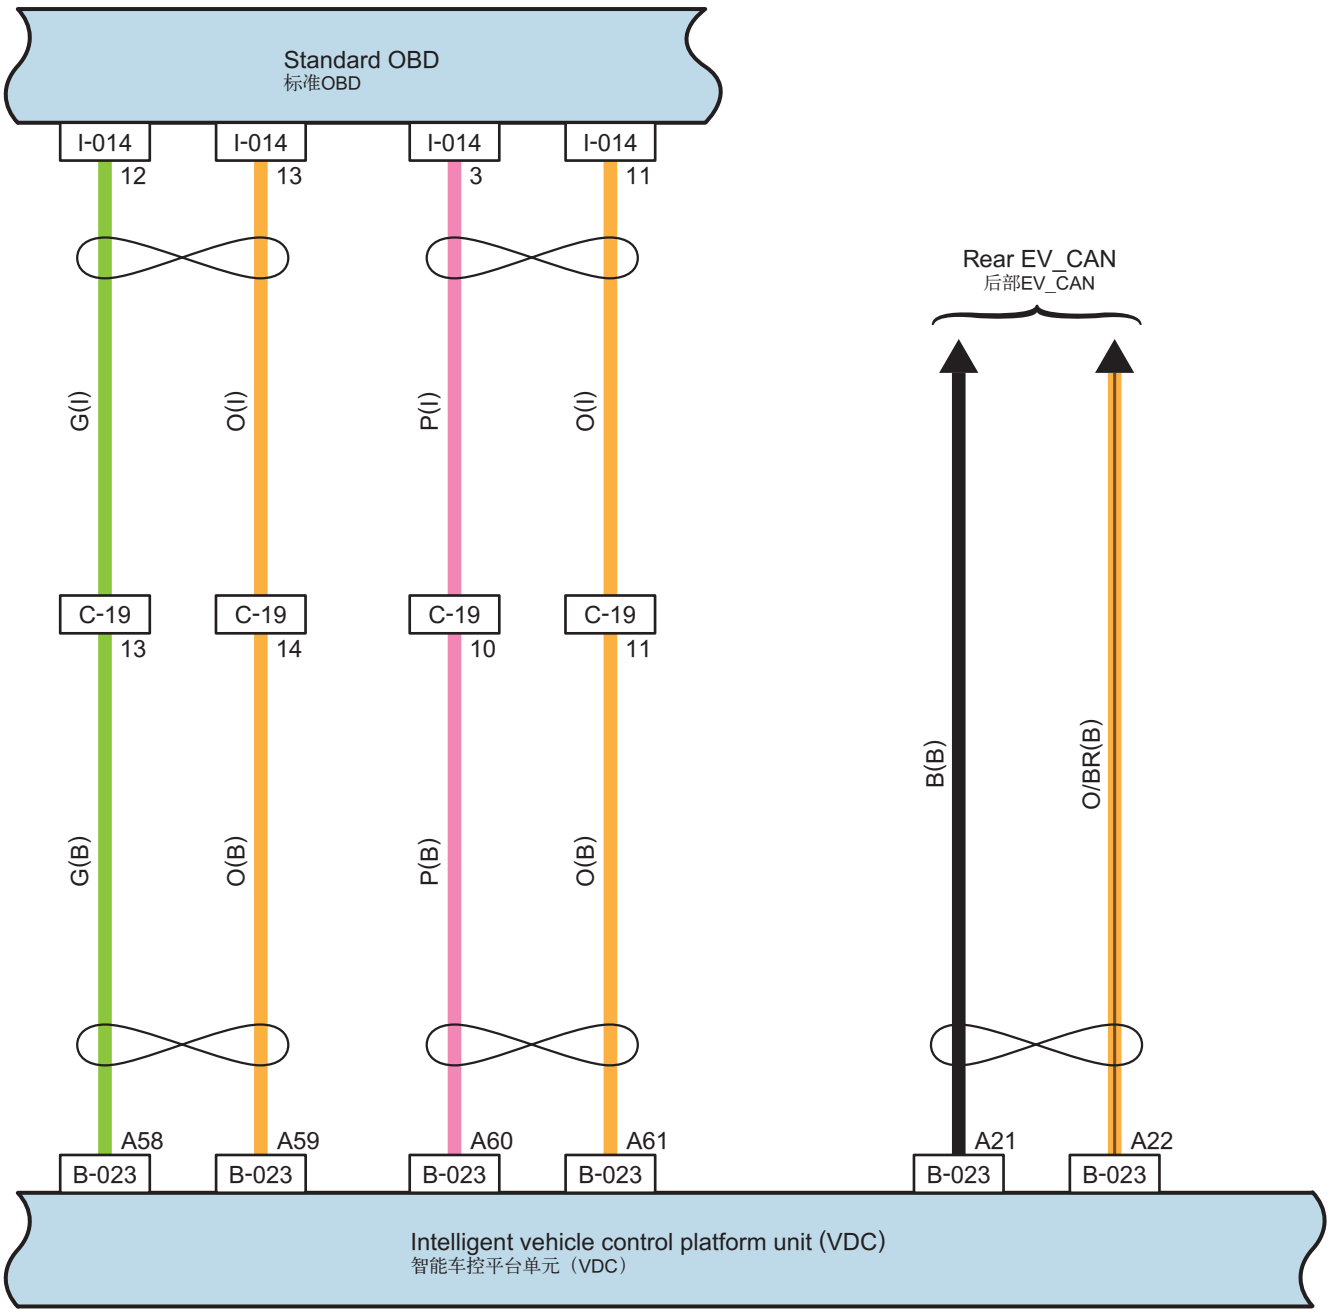

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
R
Rear transfer distribution box
后中转配电盒
F09
F-01
F-09
R
Front transfer distribution box
前中转配电盒
RF07 100A
RF-01
RF-07
R(F)
A2
F-016
Electric power steering control unit
电动助力转向控制单元
F-016
A1
B(F)
21a

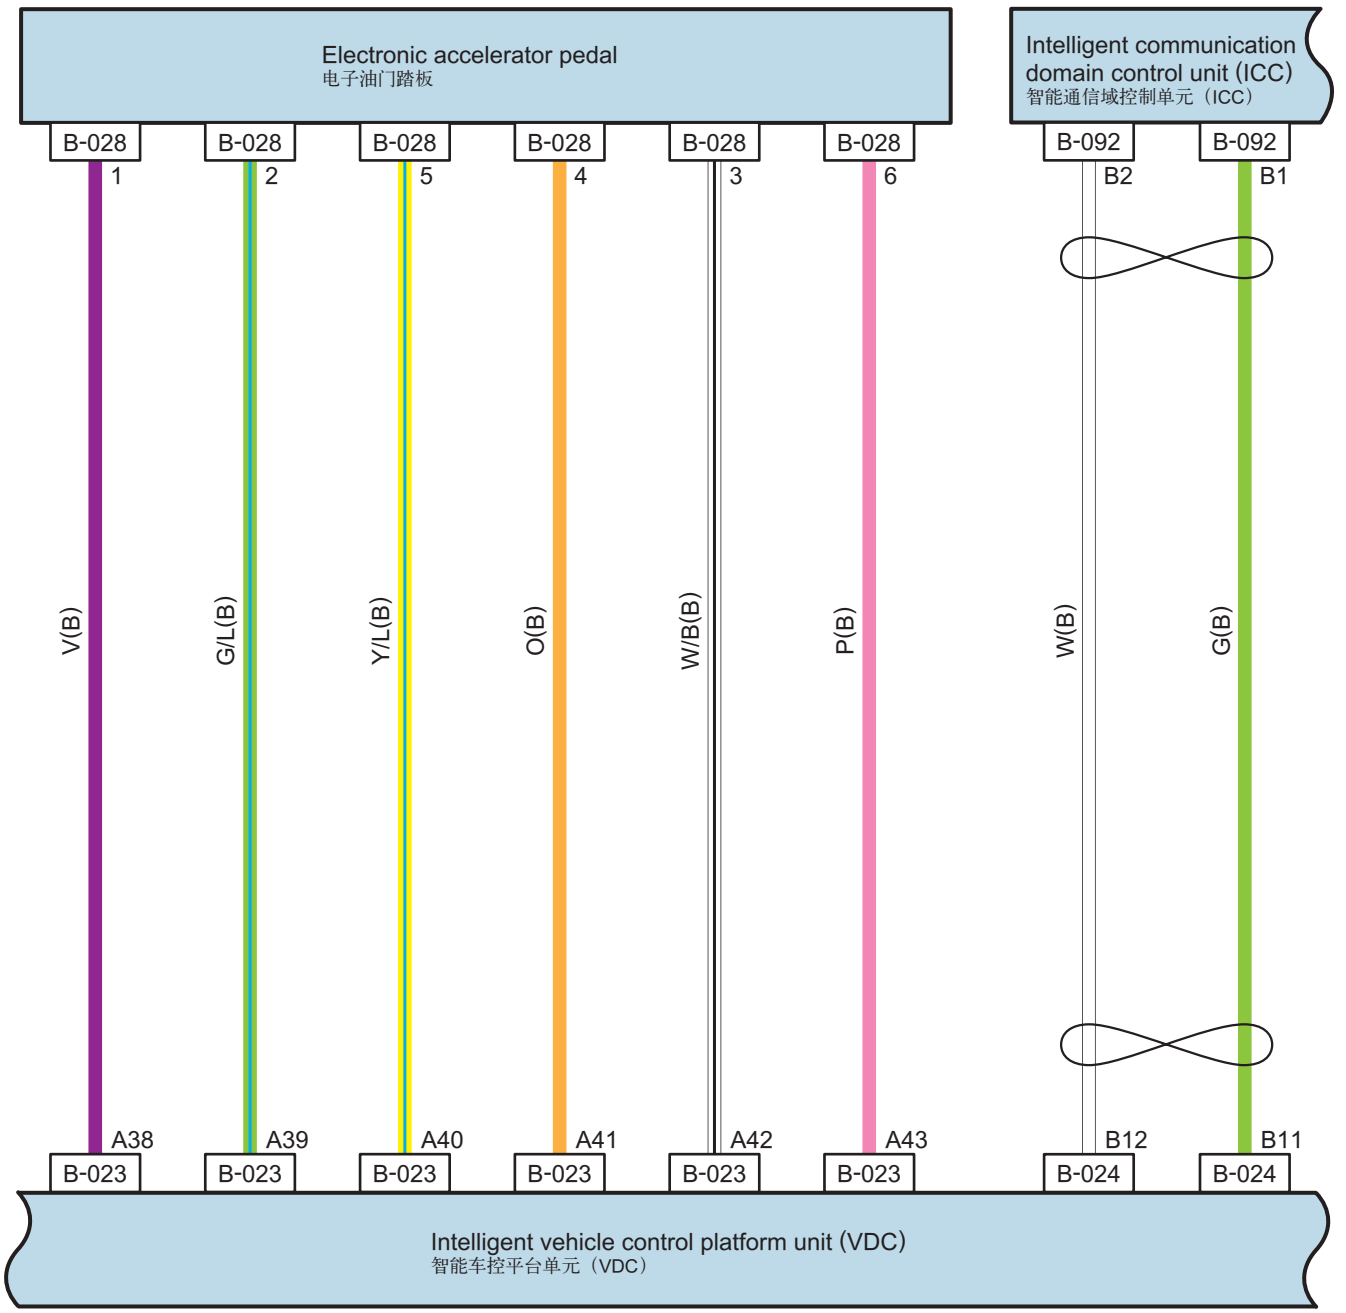

Front intelligent area control unit
前智能区域控制单元
F-023
B31
W(F)
Chassis_CAN
底盘_CAN
B(I)
BR(I)
C-03
10
C-03
16
B(F)
BR(F)
C-02
3
C-02
2
B(B)
BR(B)
C-01
6
C-01
12
B(F)
BR(F)
B3
B4
B5
F-017
F-017
F-017
Electric power steering control unit
电动助力转向控制单元

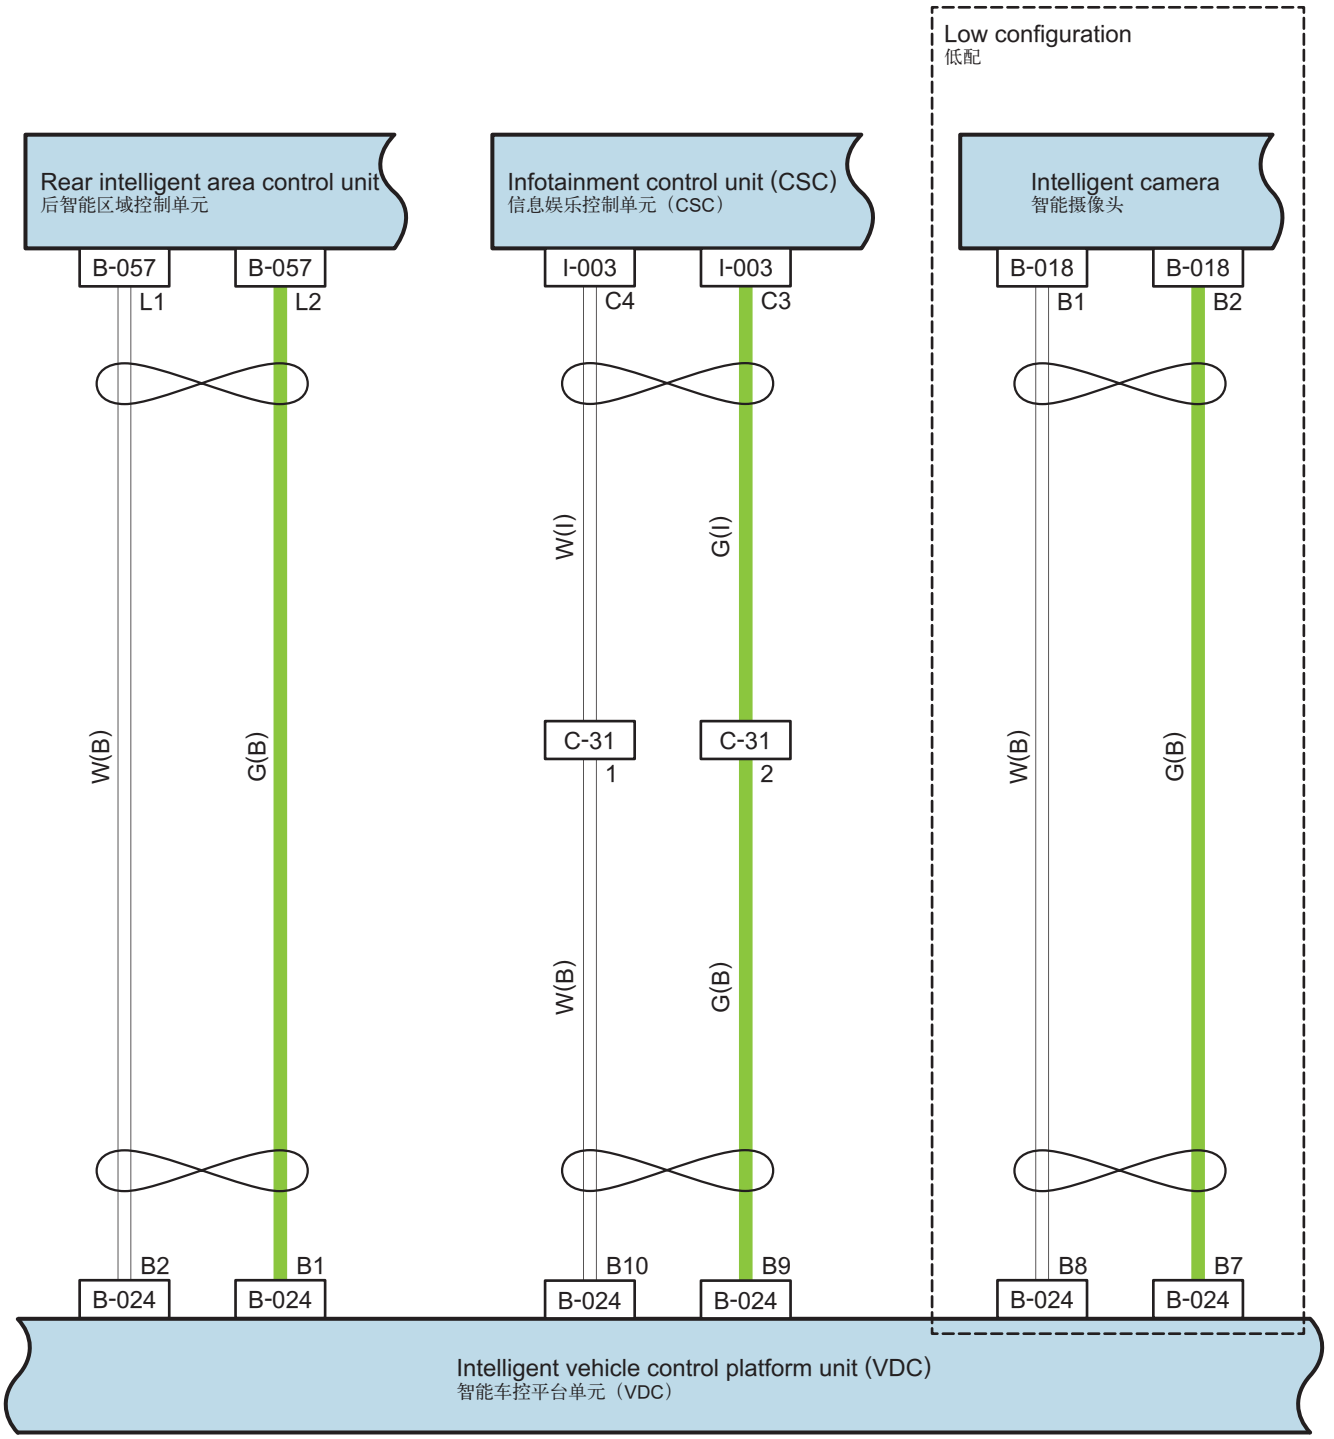

Center intelligent area control unit
中智能区域控制单元
Front intelligent area control unit
前智能区域控制单元
B-033
G46
B-033
G30
B-025
B1
B-025
B2
F-023
B5
F-002
E2
F-002
E1
B/Y(B)
Y/G(B)
W(B)
G(B)
Y(F)
W(F)
G(F)
C-02
6
C-07
3
C-07
4
Y(B)
W(B)
G(B)
A15
A46
B4
B3
A16
B6
B5
B-023
B-023
B-024
B-024
B-023
B-024
B-024
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
B-023
A63
B-023
A64
B(B)
B(B)
B(B)
47a

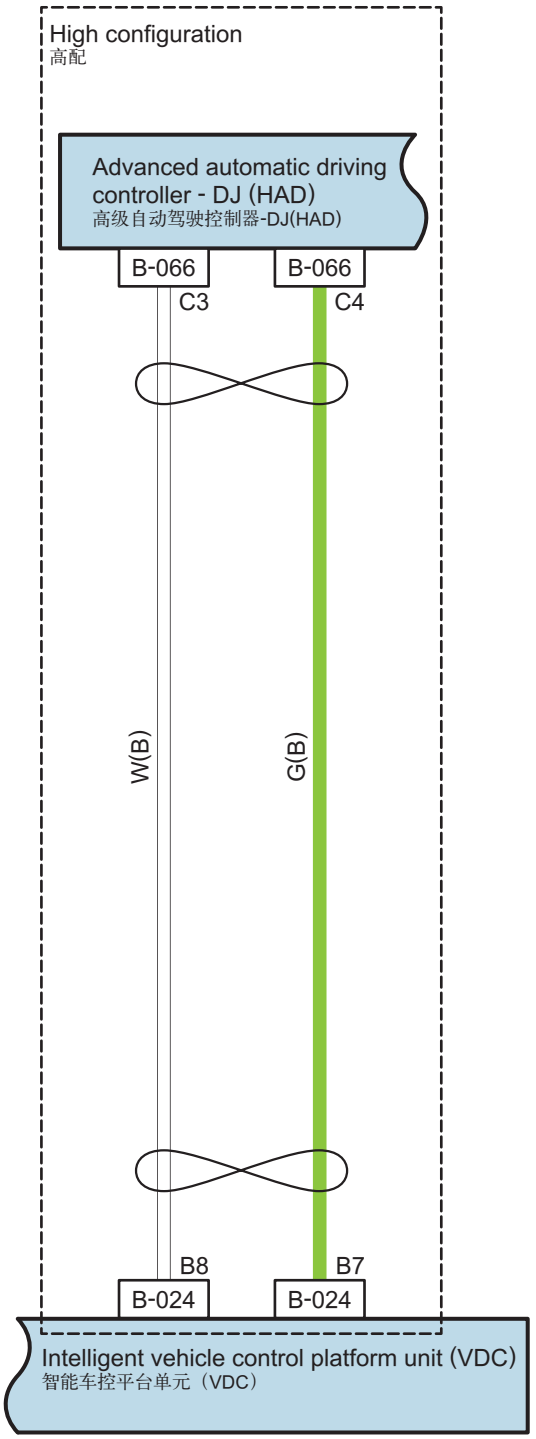

Airbag control unit (ACU)
安全气囊控制单元（ACU）
B-022
B16
G(B)
Backbone 2_CAN
主干2_CAN
Backbone 1_CAN
主干1_CAN
G(B)
O/BR(B)
W(B)
O/BR(B)
A36
A1
A2
A3
A4
B-023
B-023
B-023
B-023
B-023
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）

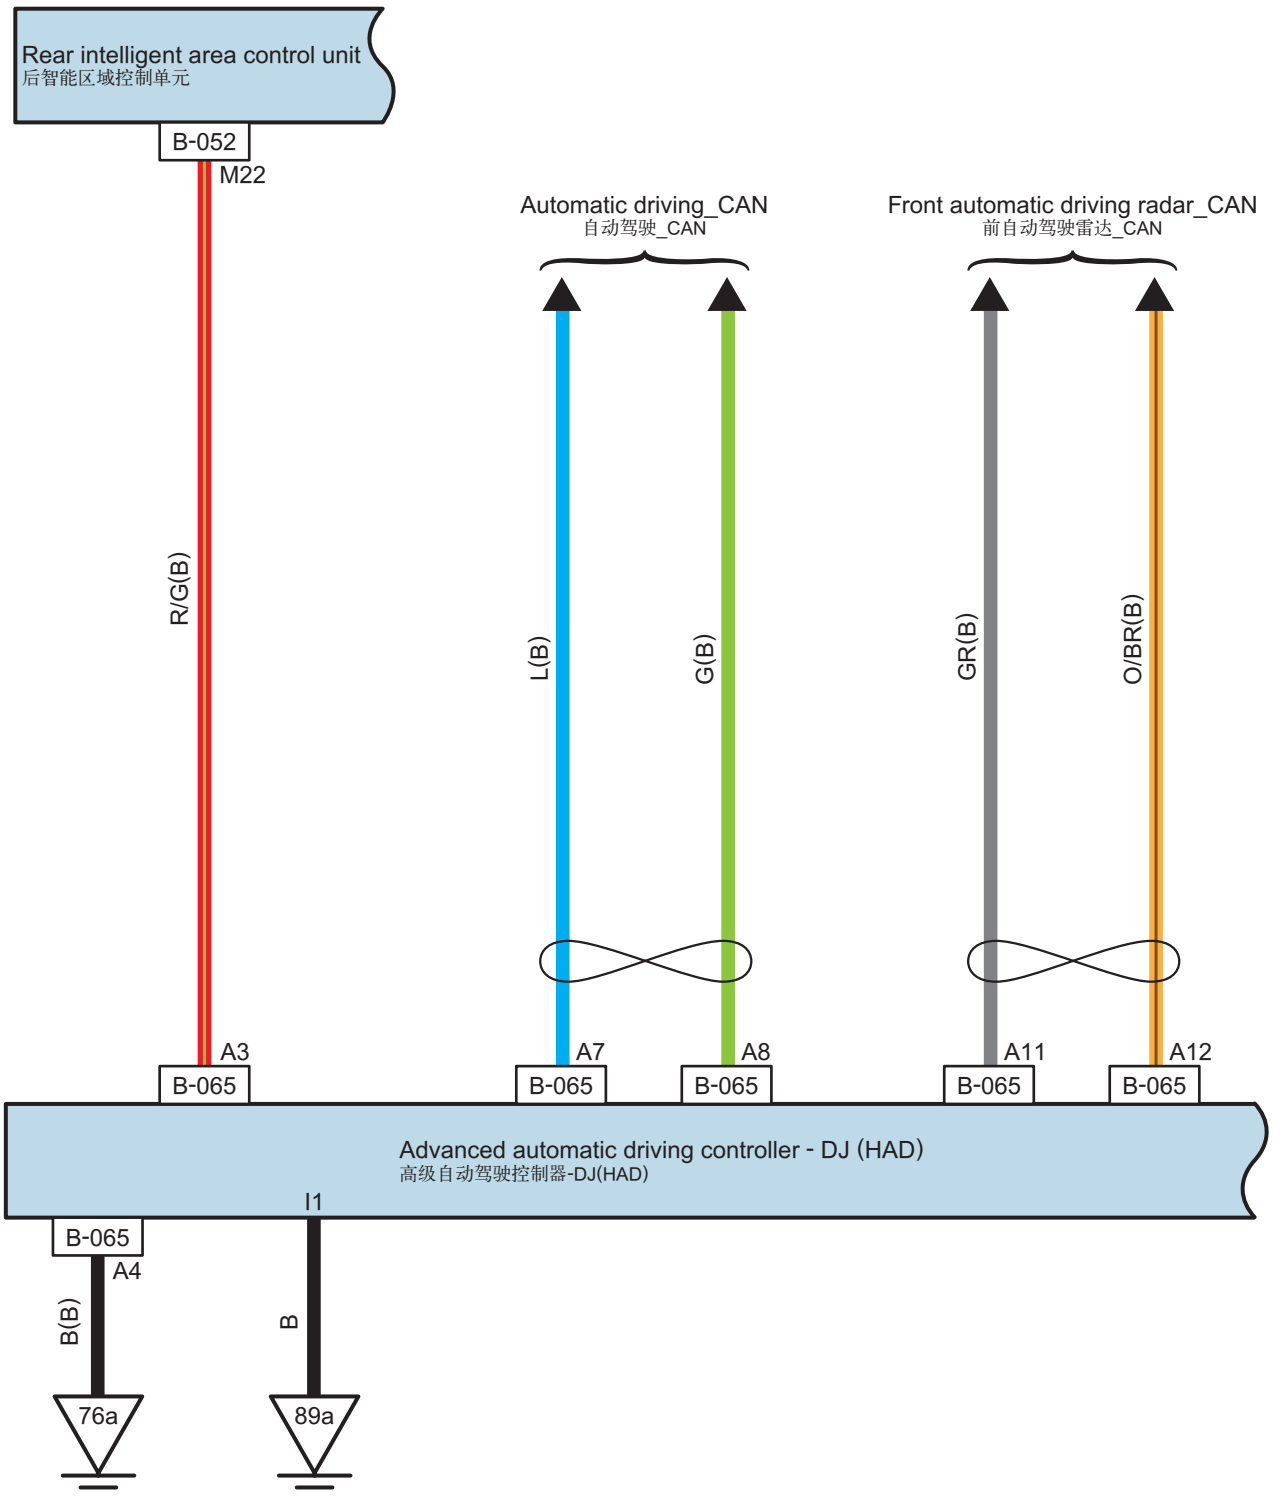

Official vehicle debug OBD II
正式车调试OBD Ⅱ
Standard OBD
标准OBD
B-026
1
B-026
9
B-026
6
B-026
14
I-014
6
I-014
14
I-014
8
B/L(I)
W/G(I)
G/B(I)
C-19
8
C-19
9
C-19
3
G/R(B)
W/G(B)
W(B)
O(B)
B/L(B)
W/G(B)
G/B(B)
A5
A6
A52
A53
A11
A12
A14
B-023
B-023
B-023
B-023
B-023
B-023
B-023
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）

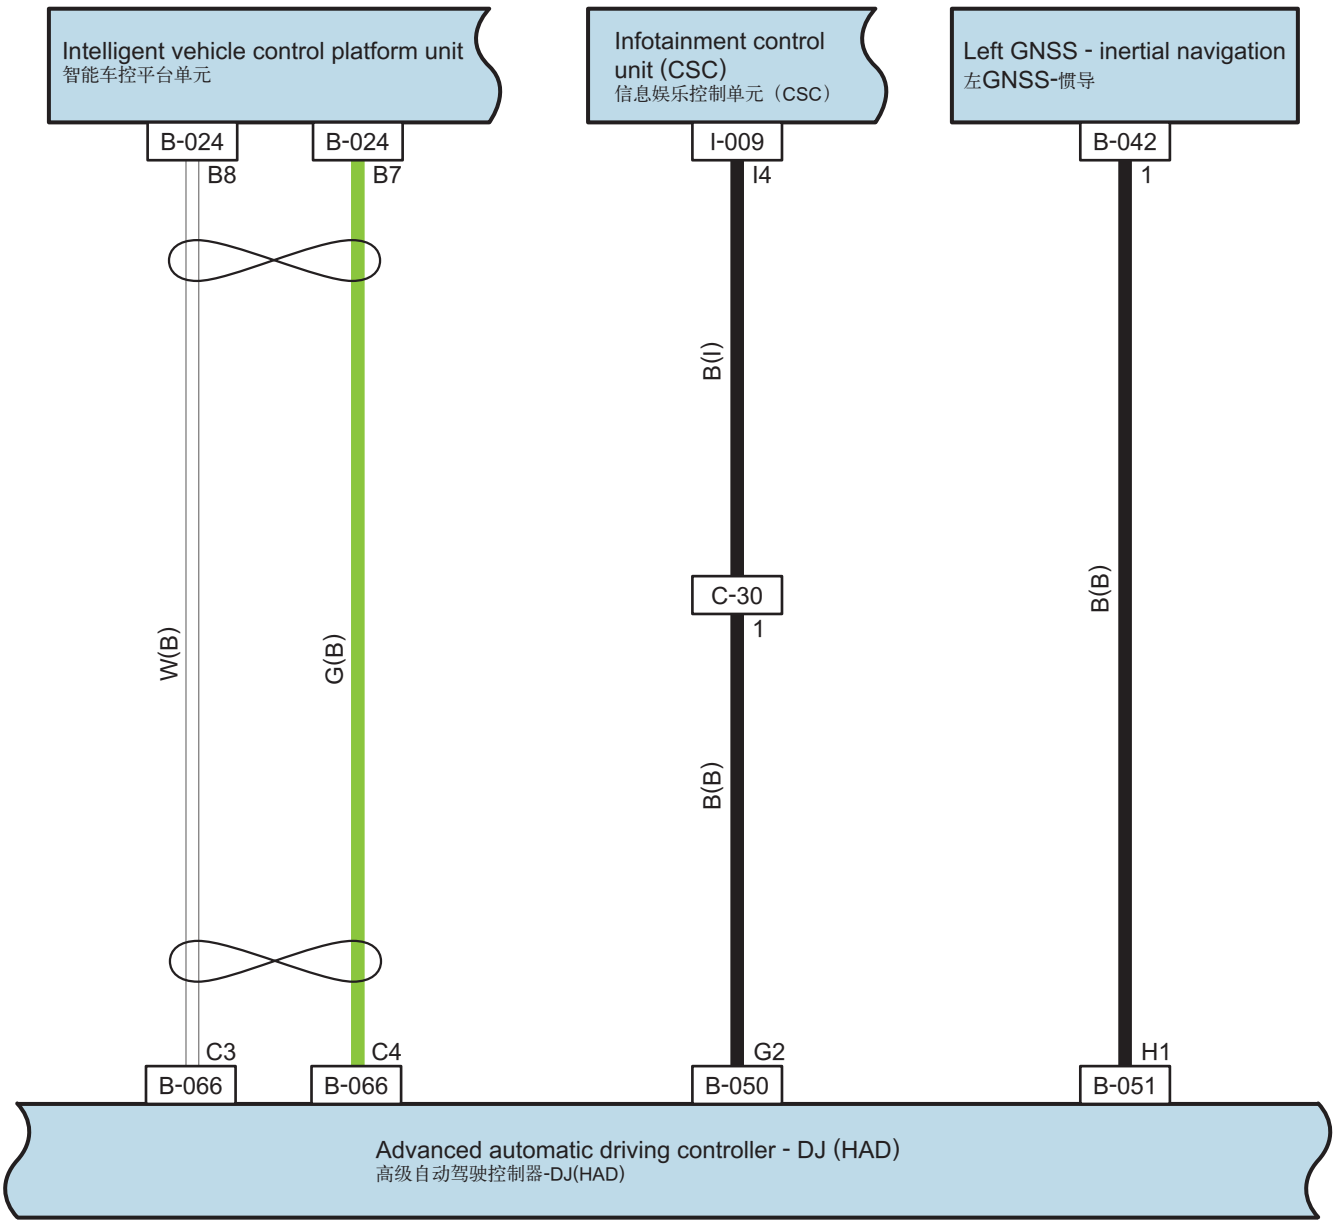

Standard OBD
标准OBD
I-014
12
I-014
13
I-014
3
I-014
11
G(I)
O(I)
P(I)
O(I)
C-19
13
C-19
14
C-19
10
C-19
11
G(B)
O(B)
P(B)
O(B)
A58
A59
A60
A61
B-023
B-023
B-023
B-023
Rear EV_CAN
后部EV_CAN
B(B)
O/BR(B)
A21
A22
B-023
B-023
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）

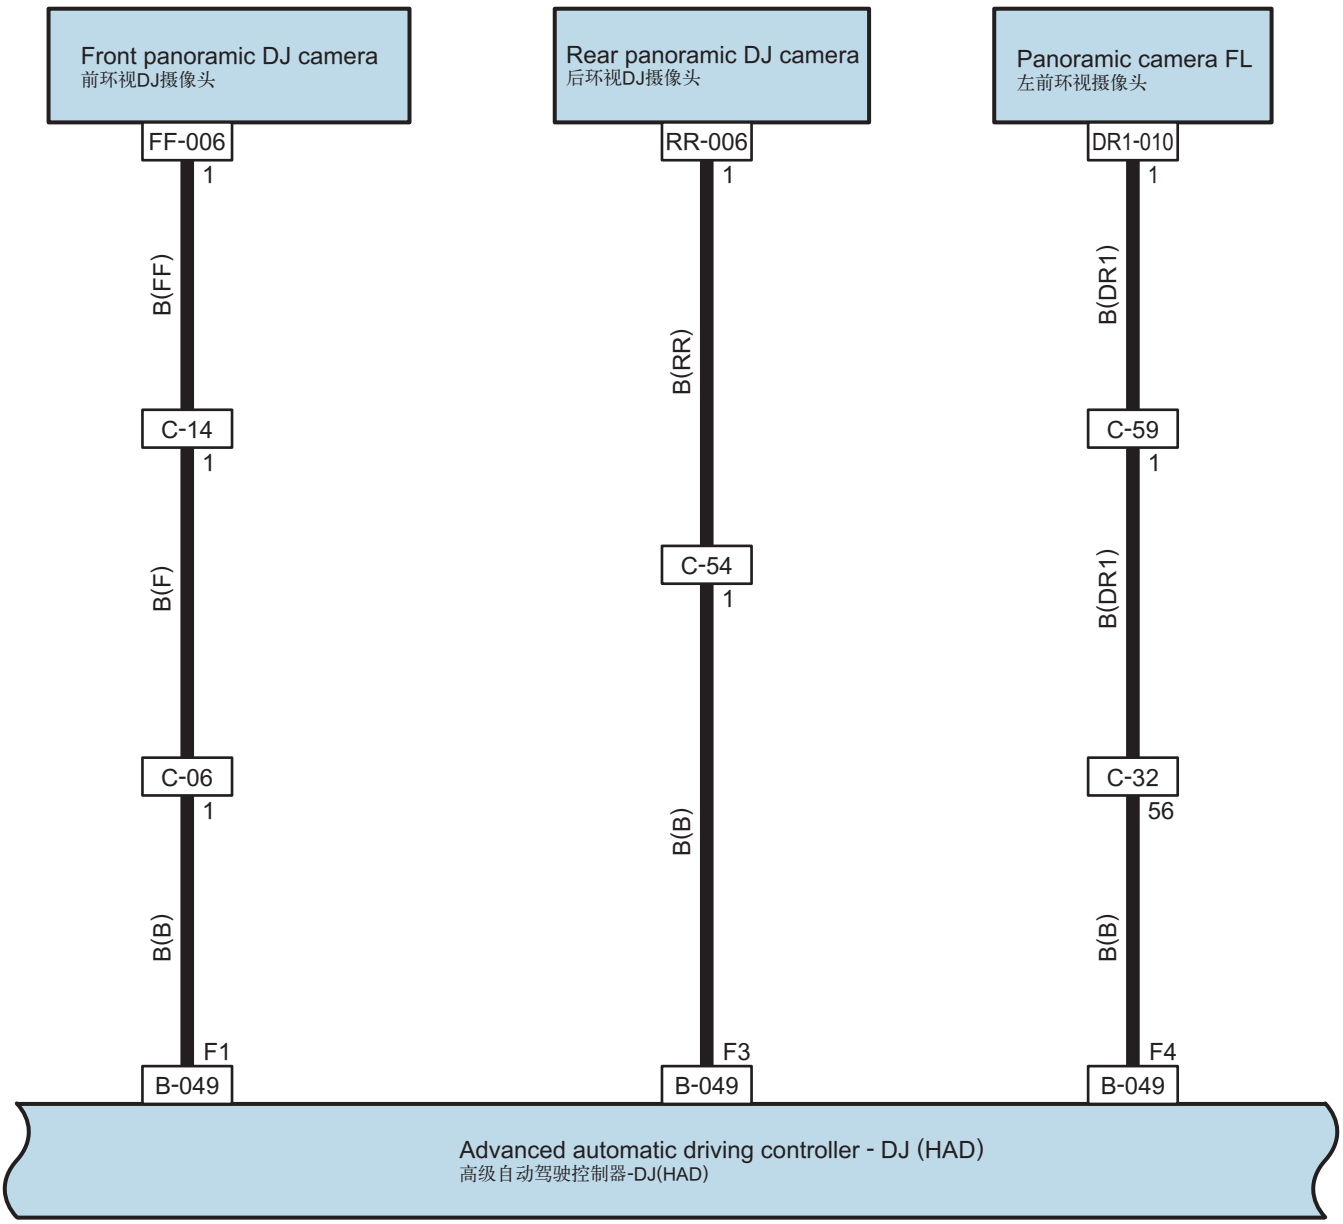

Electronic accelerator pedal
电子油门踏板
Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）
B-028
1
2
5
4
3
6
B-092
B2
B1
V(B)
G/L(B)
Y/L(B)
O(B)
W/B(B)
P(B)
W(B)
G(B)
A38
A39
A40
A41
A42
A43
B12
B11
B-023
B-024
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）

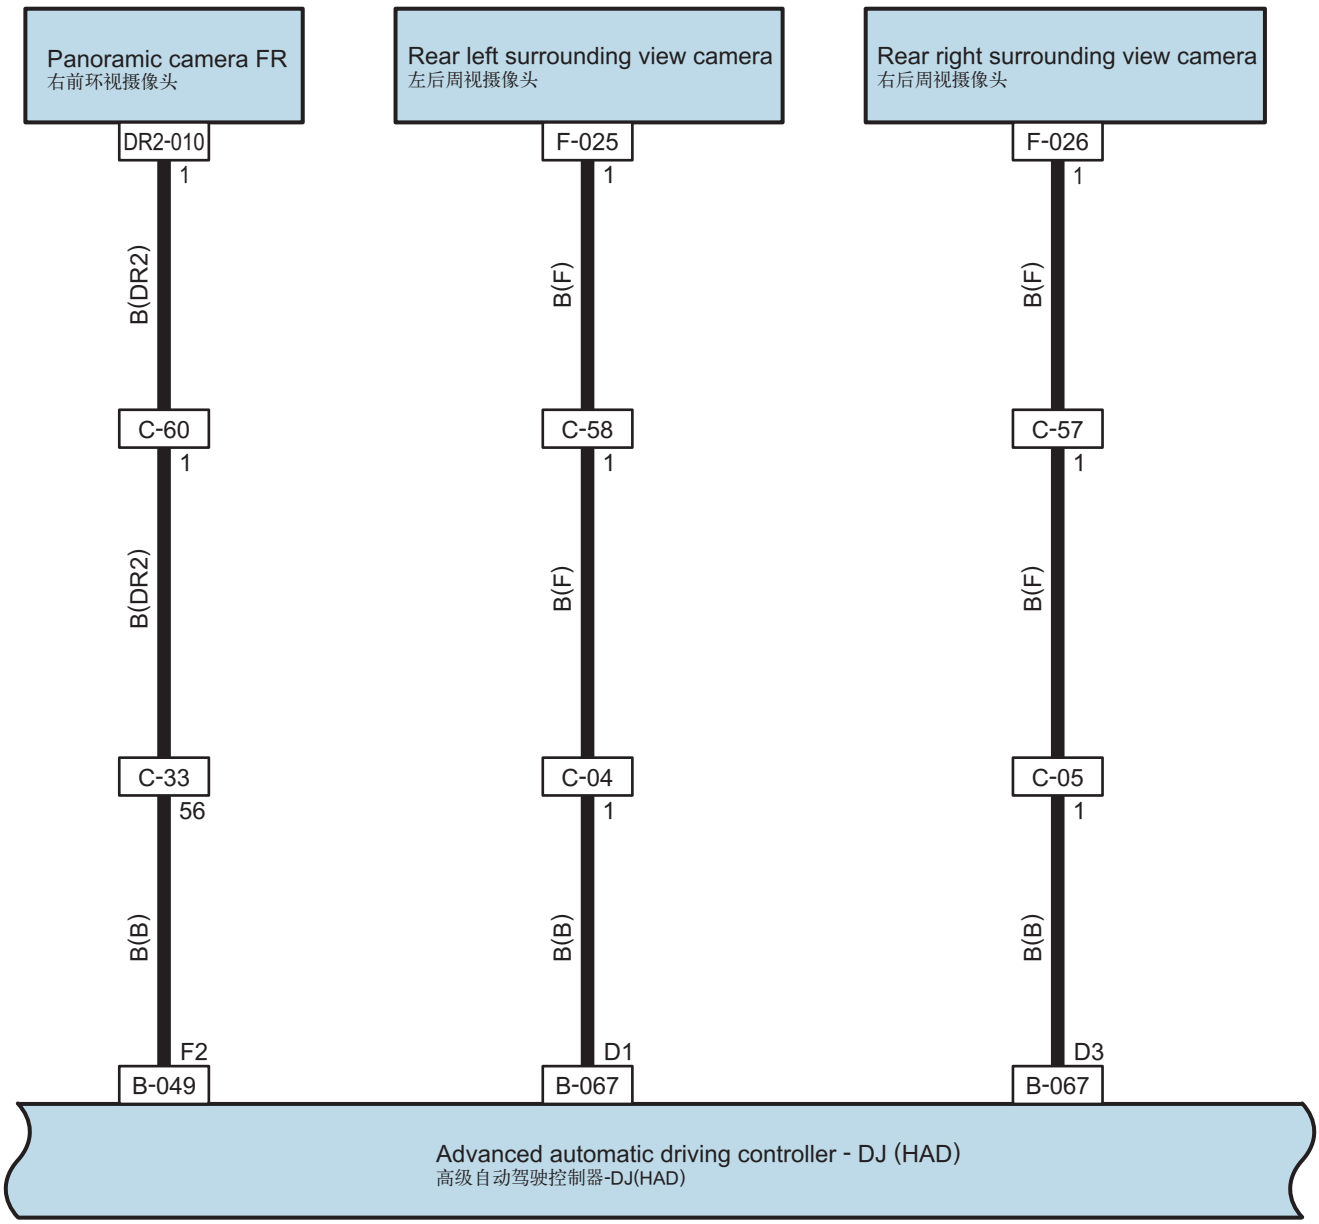

Low configuration
低配
Rear intelligent area control unit
后智能区域控制单元
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）
Intelligent camera
智能摄像头
B-057
B-057
L1
L2
I-003
I-003
C4
C3
B-018
B-018
B1
B2
W(I)
G(I)
W(B)
G(B)
C-31
C-31
1
2
W(B)
G(B)
W(B)
G(B)
B2
B1
B10
B9
B8
B7
B-024
B-024
B-024
B-024
B-024
B-024
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）

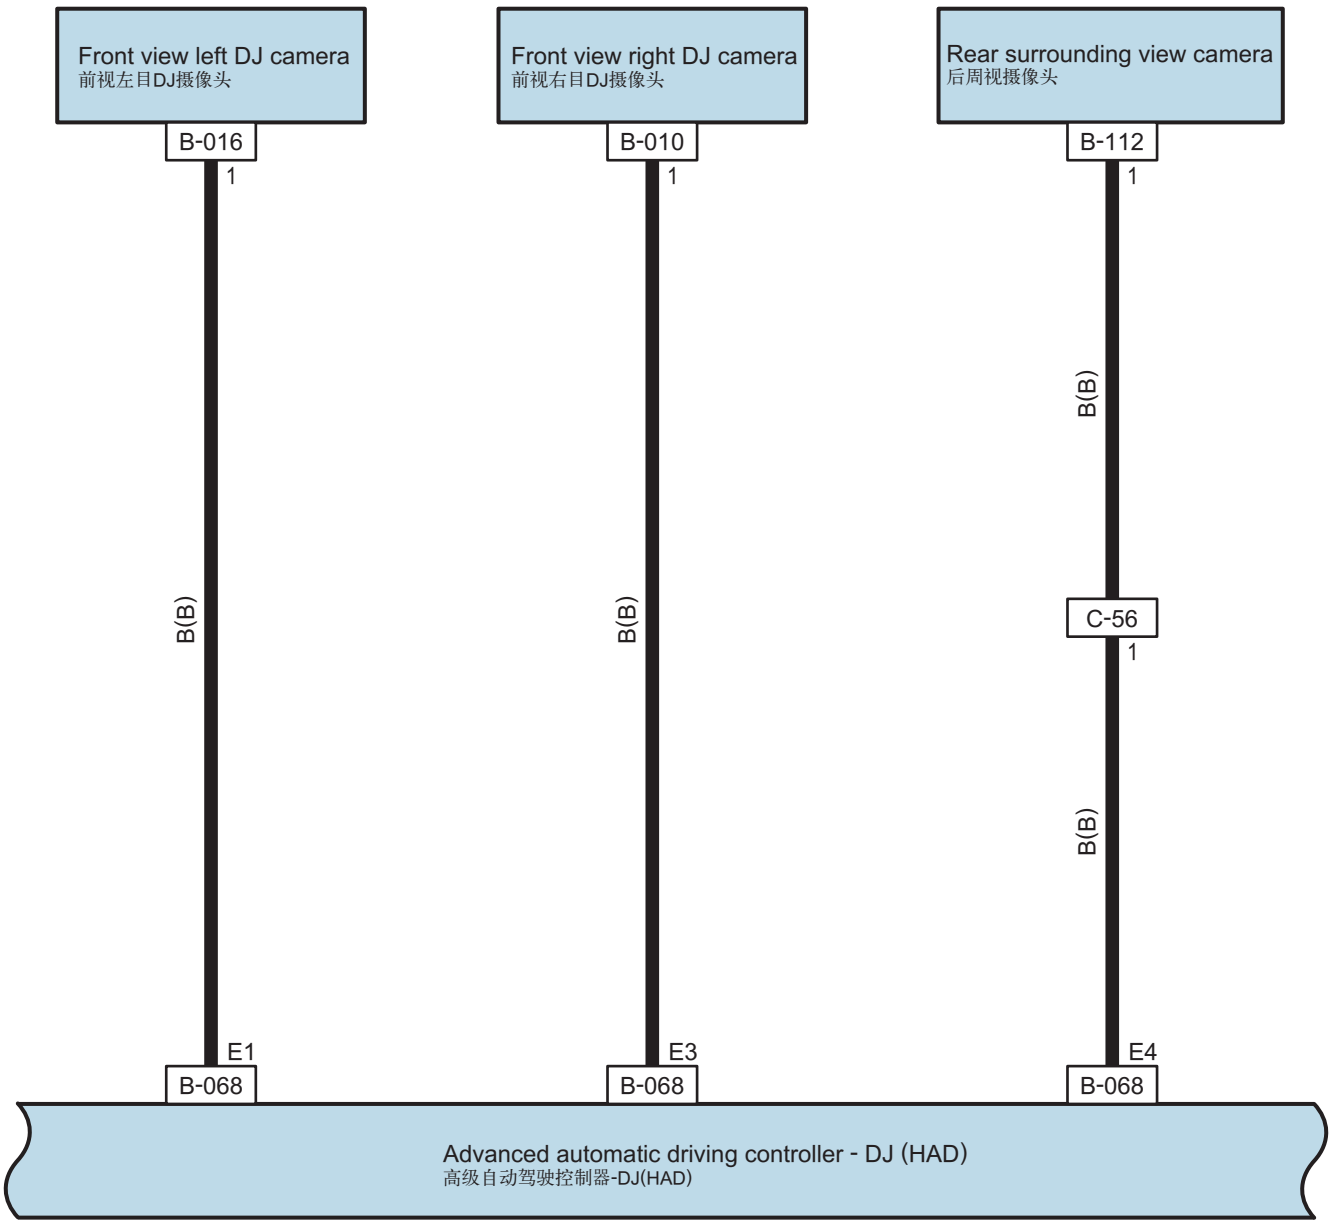

High configuration
高配
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-DJ(HAD)
B-066
B-066
C3
C4
W(B)
G(B)
B8
B7
B-024
B-024
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）

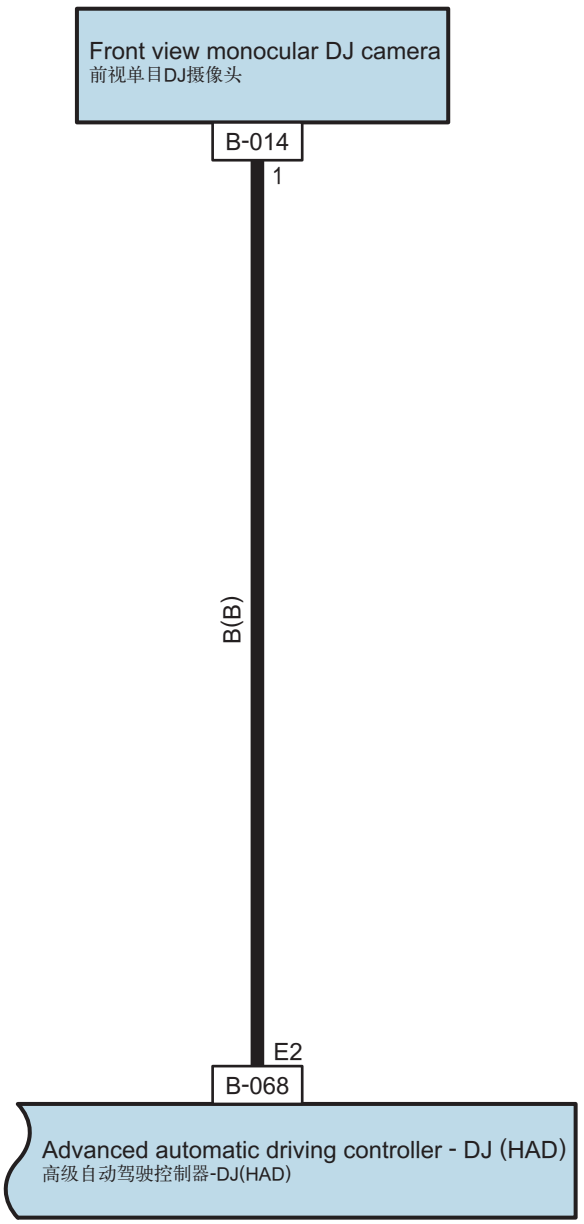

Rear intelligent area control unit
后智能区域控制单元
B-052
M22
R/G(B)
Automatic driving_CAN
自动驾驶_CAN
L(B)
G(B)
Front automatic driving radar_CAN
前自动驾驶雷达_CAN
GR(B)
O/BR(B)
A3
B-065
A7
B-065
A8
B-065
A11
B-065
A12
B-065
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-DJ(HAD)
I1
B-065
A4
B(B)
B
76a
89a

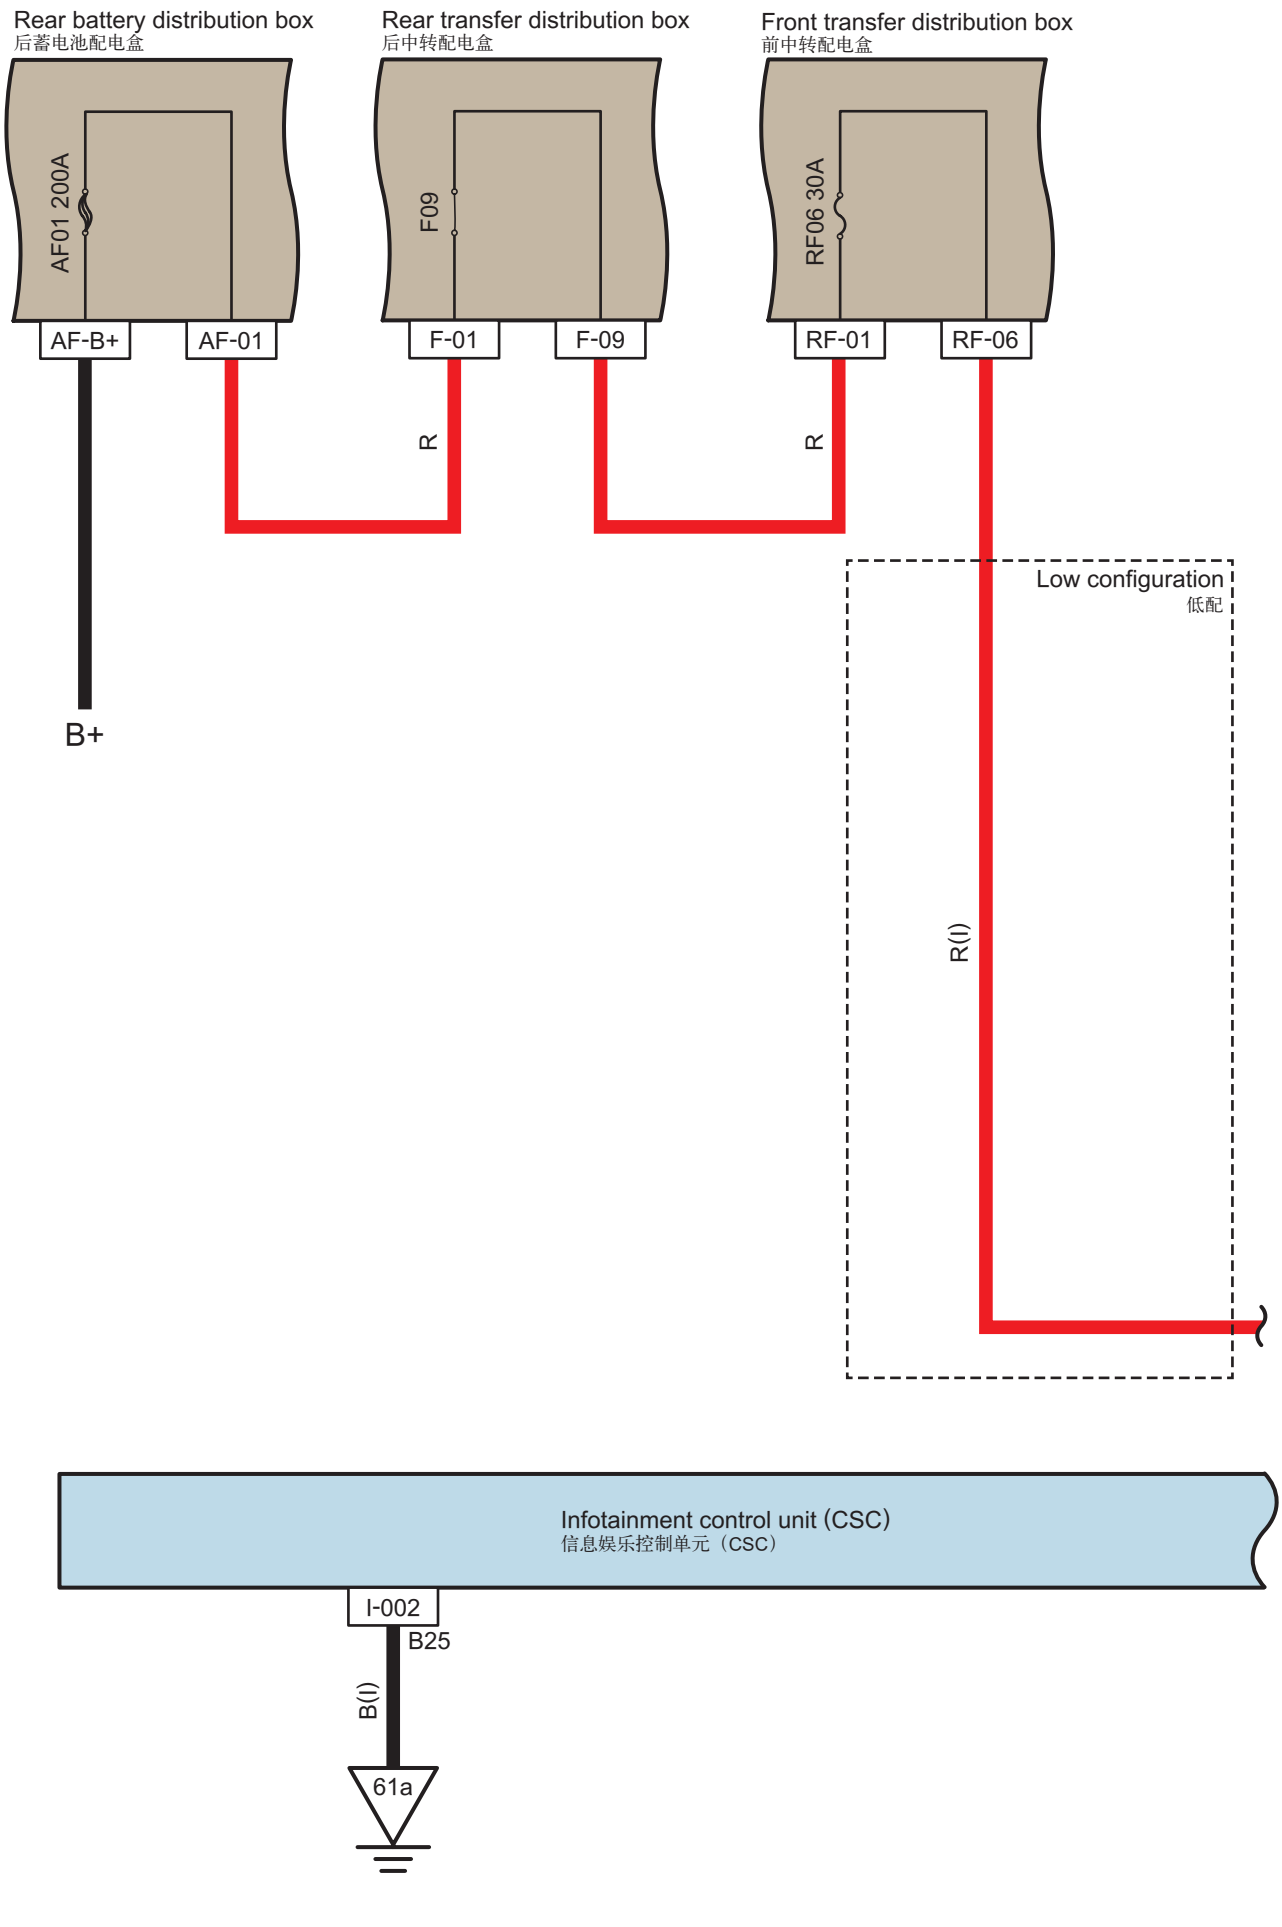

Intelligent vehicle control platform unit
智能车控平台单元
B-024
B8
B-024
B7
W(B)
G(B)
C3
B-066
C4
B-066
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）
I-009
I4
B(I)
C-30
1
B(B)
G2
B-050
Left GNSS - inertial navigation
左GNSS-惯导
B-042
1
B(B)
H1
B-051
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-DJ(HAD)

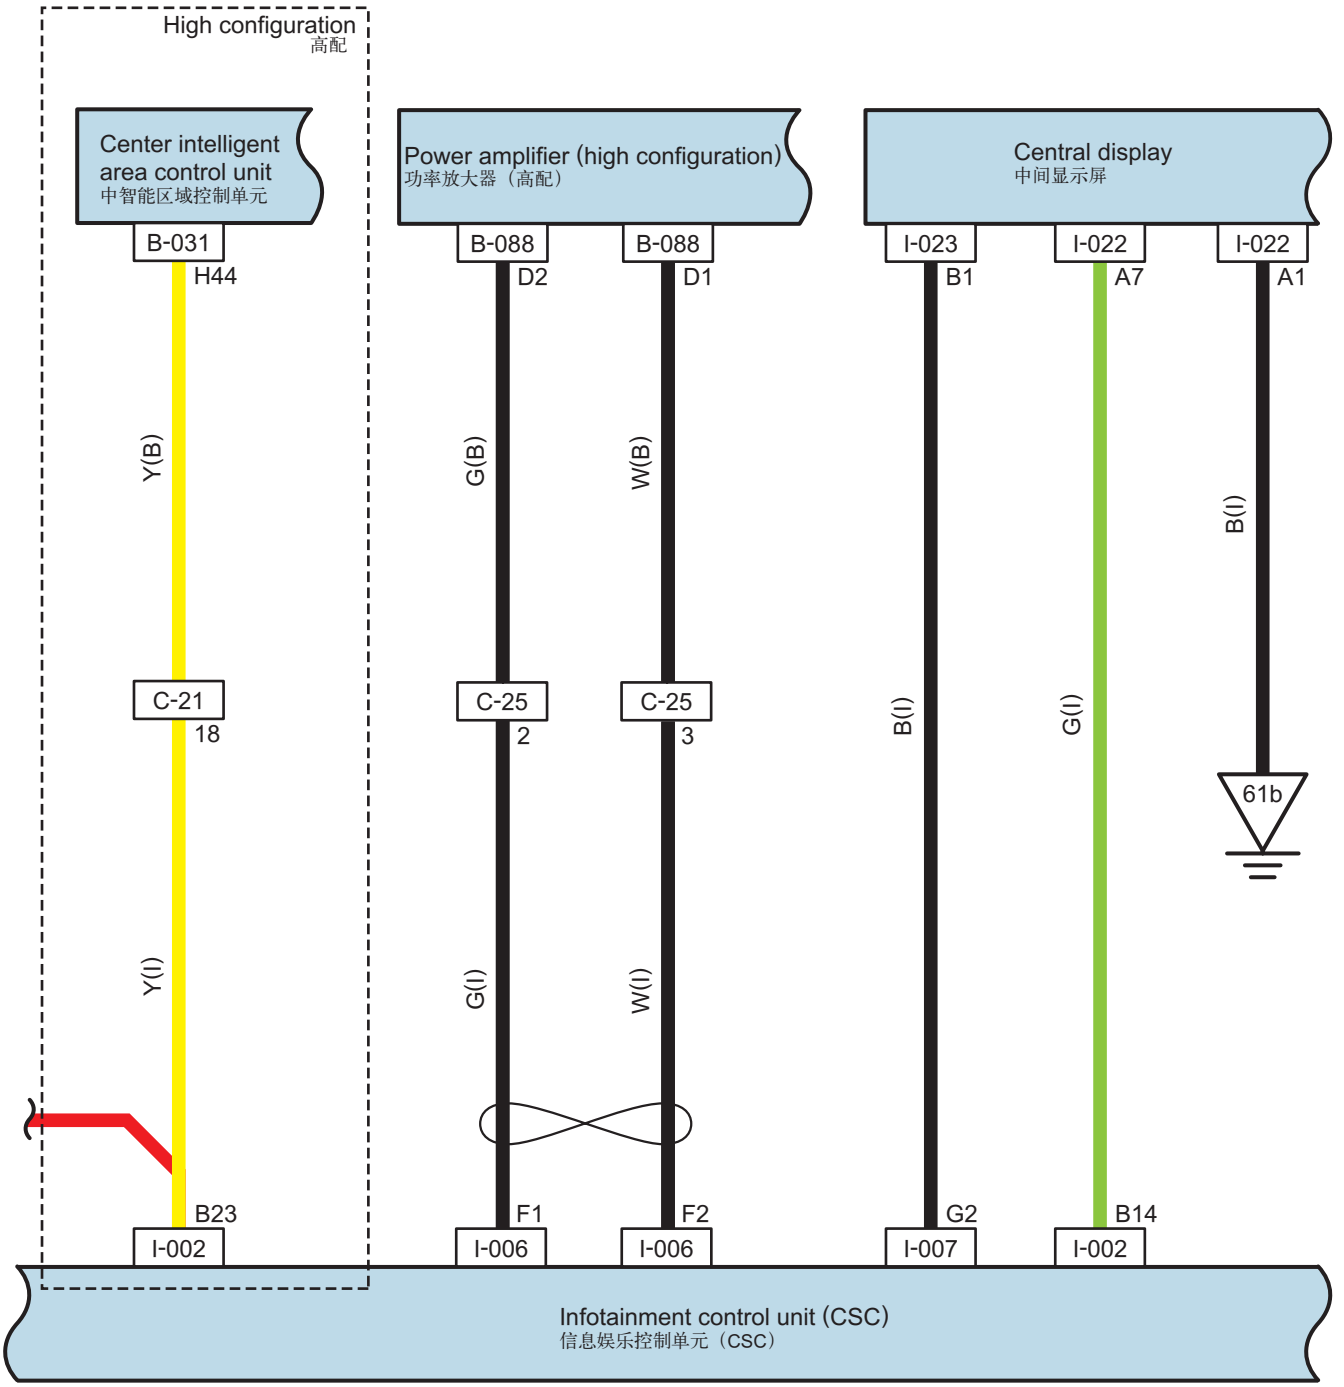

Front panoramic DJ camera
前环视DJ摄像头
FF-006
1
B(FF)
C-14
1
B(F)
C-06
1
B(B)
F1
B-049
Rear panoramic DJ camera
后环视DJ摄像头
RR-006
1
B(RR)
C-54
1
B(B)
F3
B-049
Panoramic camera FL
左前环视摄像头
DR1-010
1
B(DR1)
C-59
1
B(DR1)
C-32
56
B(B)
F4
B-049
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-DJ(HAD)

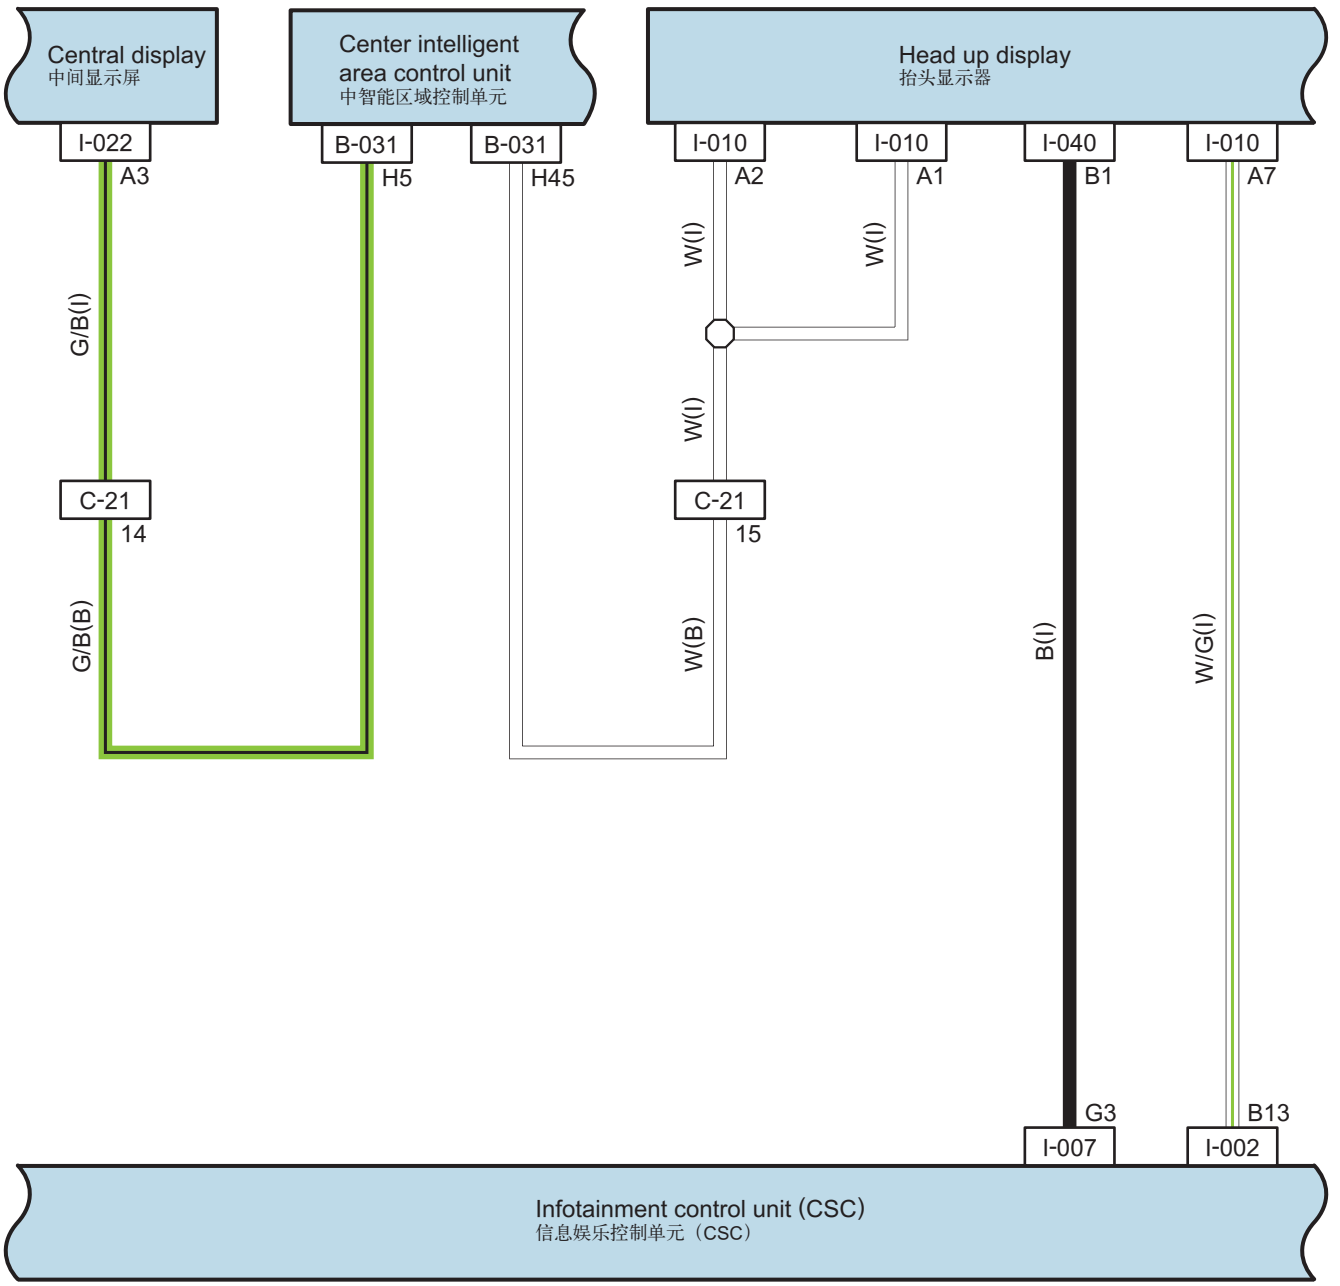

Panoramic camera FR
右前环视摄像头
Rear left surrounding view camera
左后周视摄像头
Rear right surrounding view camera
右后周视摄像头
DR2-010
1
F-025
1
F-026
1
B(DR2)
B(F)
B(F)
C-60
1
C-58
1
C-57
1
B(DR2)
B(F)
B(F)
C-33
56
C-04
1
C-05
1
B(B)
B(B)
B(B)
F2
D1
D3
B-049
B-067
B-067
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-DJ(HAD)

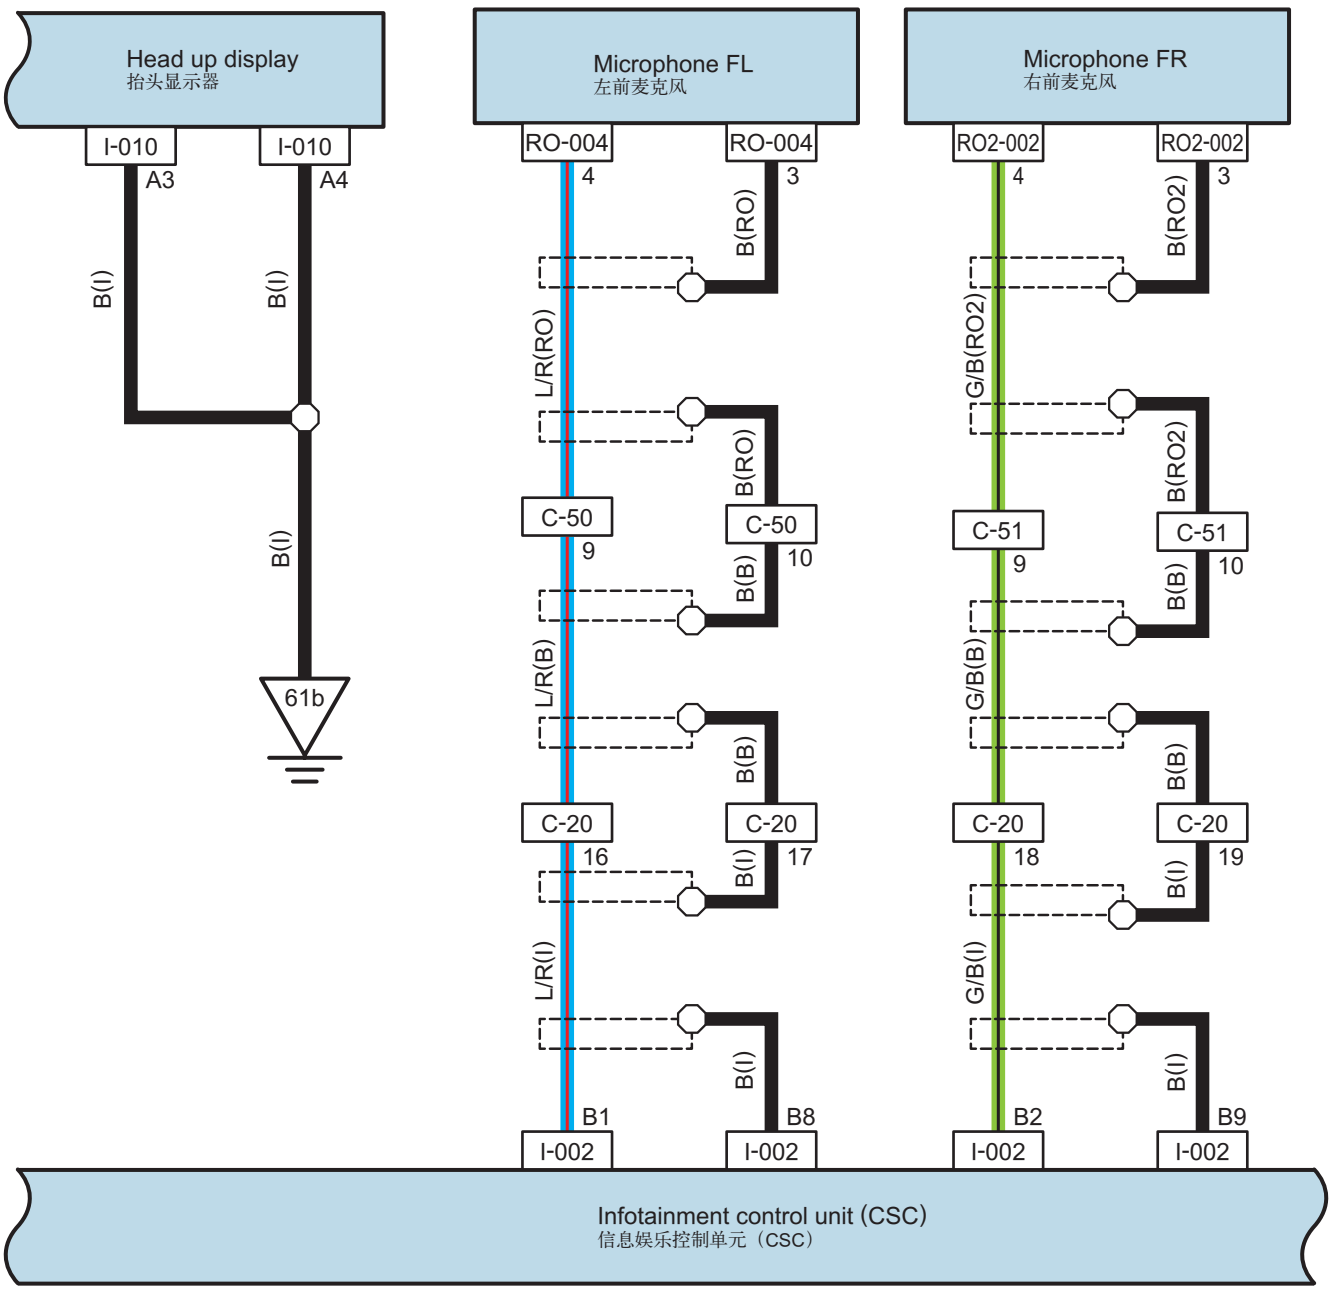

Front view left DJ camera
前视左目DJ摄像头
B-016
1
B(B)
E1
B-068
Front view right DJ camera
前视右目DJ摄像头
B-010
1
B(B)
E3
B-068
Rear surrounding view camera
后周视摄像头
B-112
1
B(B)
C-56
1
B(B)
E4
B-068
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-DJ(HAD)

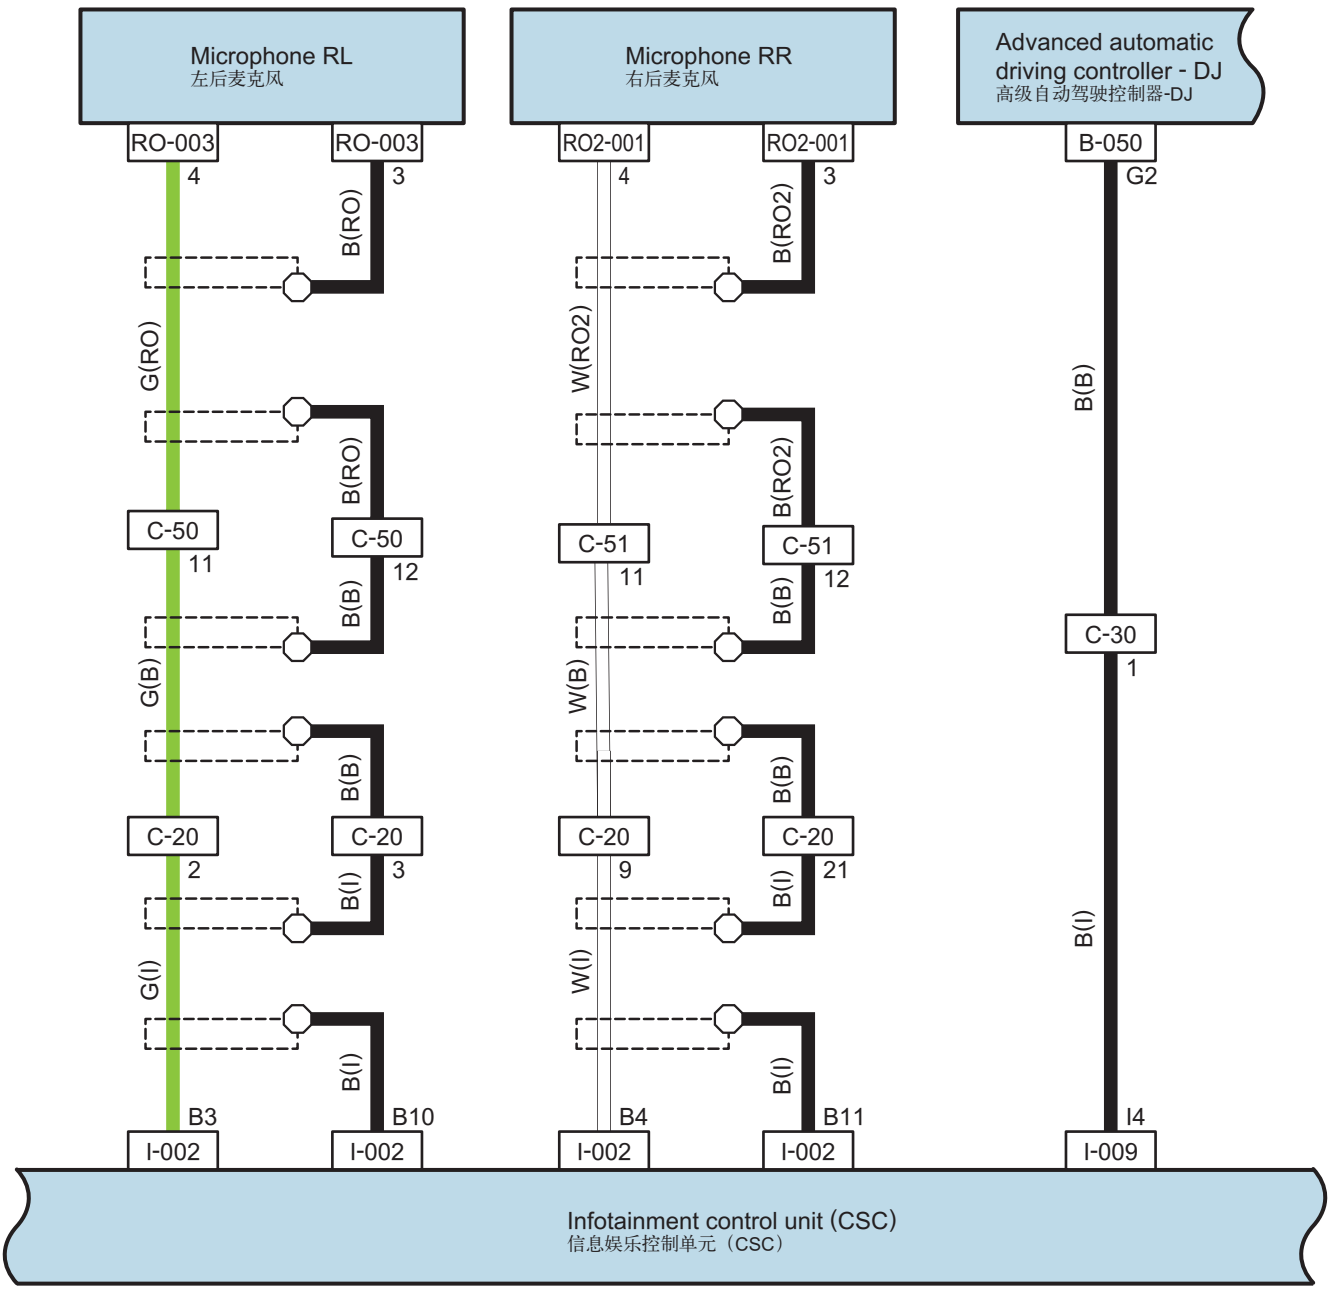

Front view monocular DJ camera
前视单目DJ摄像头
B-014
1
B(B)
E2
B-068
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-DJ(HAD)

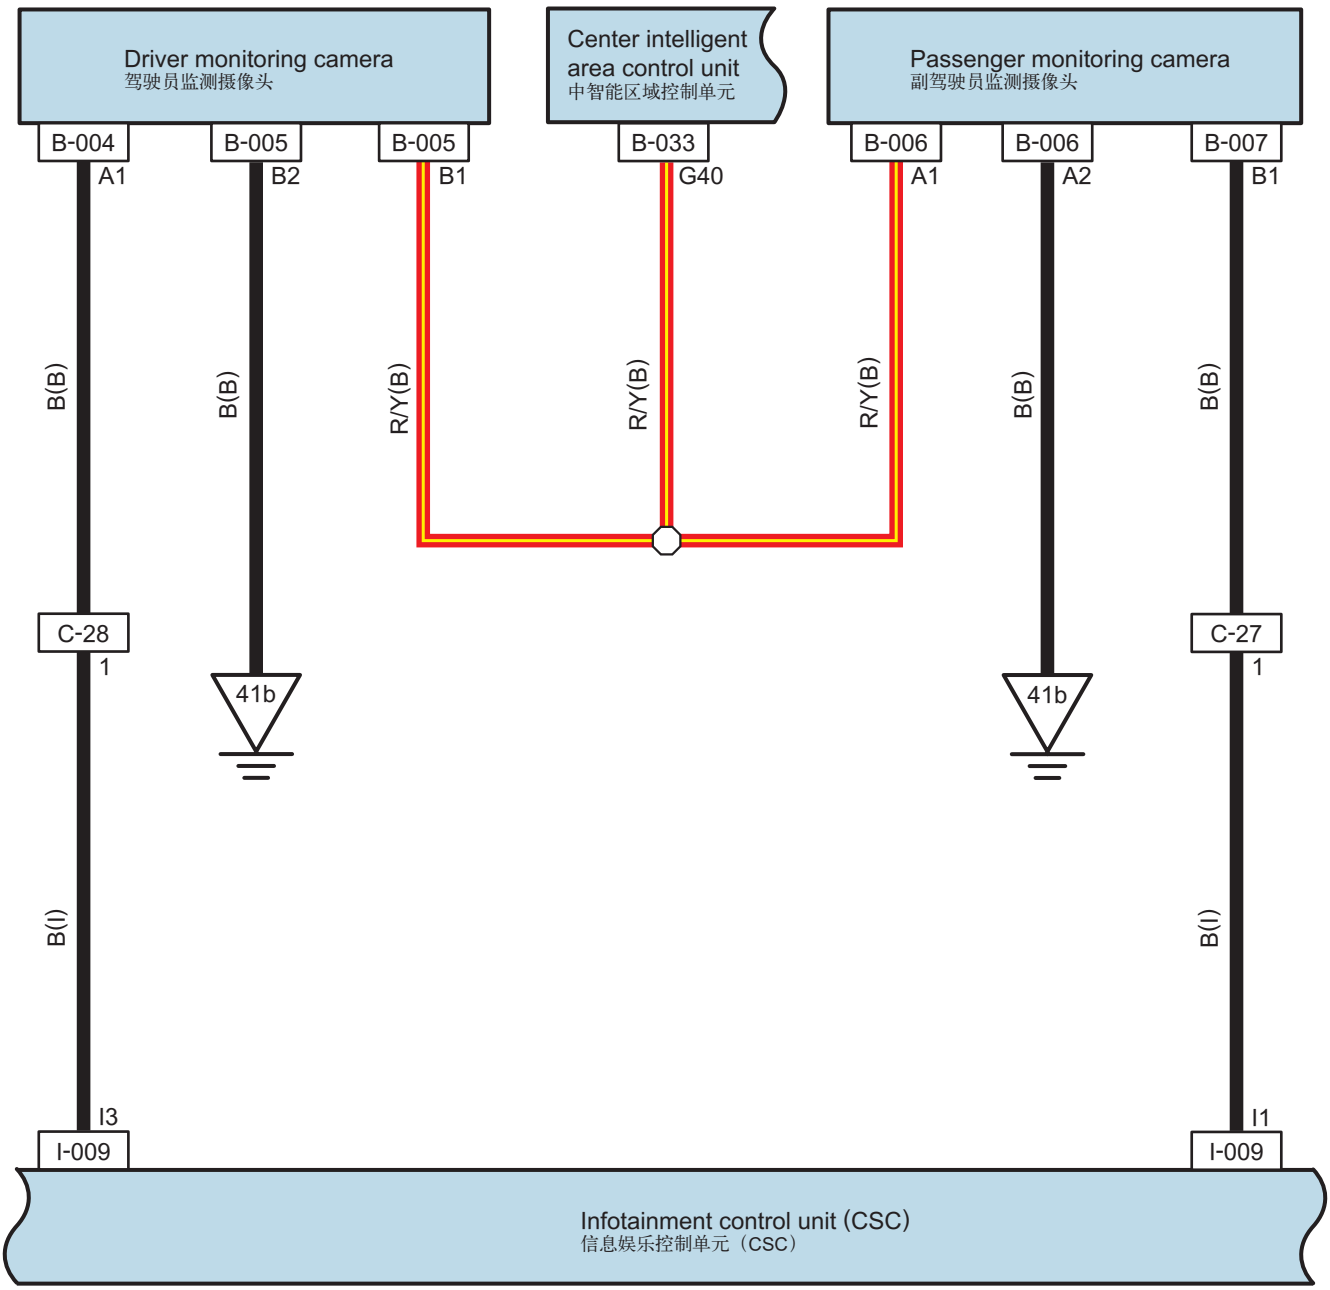

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
Rear transfer distribution box
后中转配电盒
F09
F-01
F-09
Front transfer distribution box
前中转配电盒
RF06 30A
RF-01
RF-06
R
R
B+
Low configuration
低配
R(I)
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）
I-002
B25
B(I)
61a

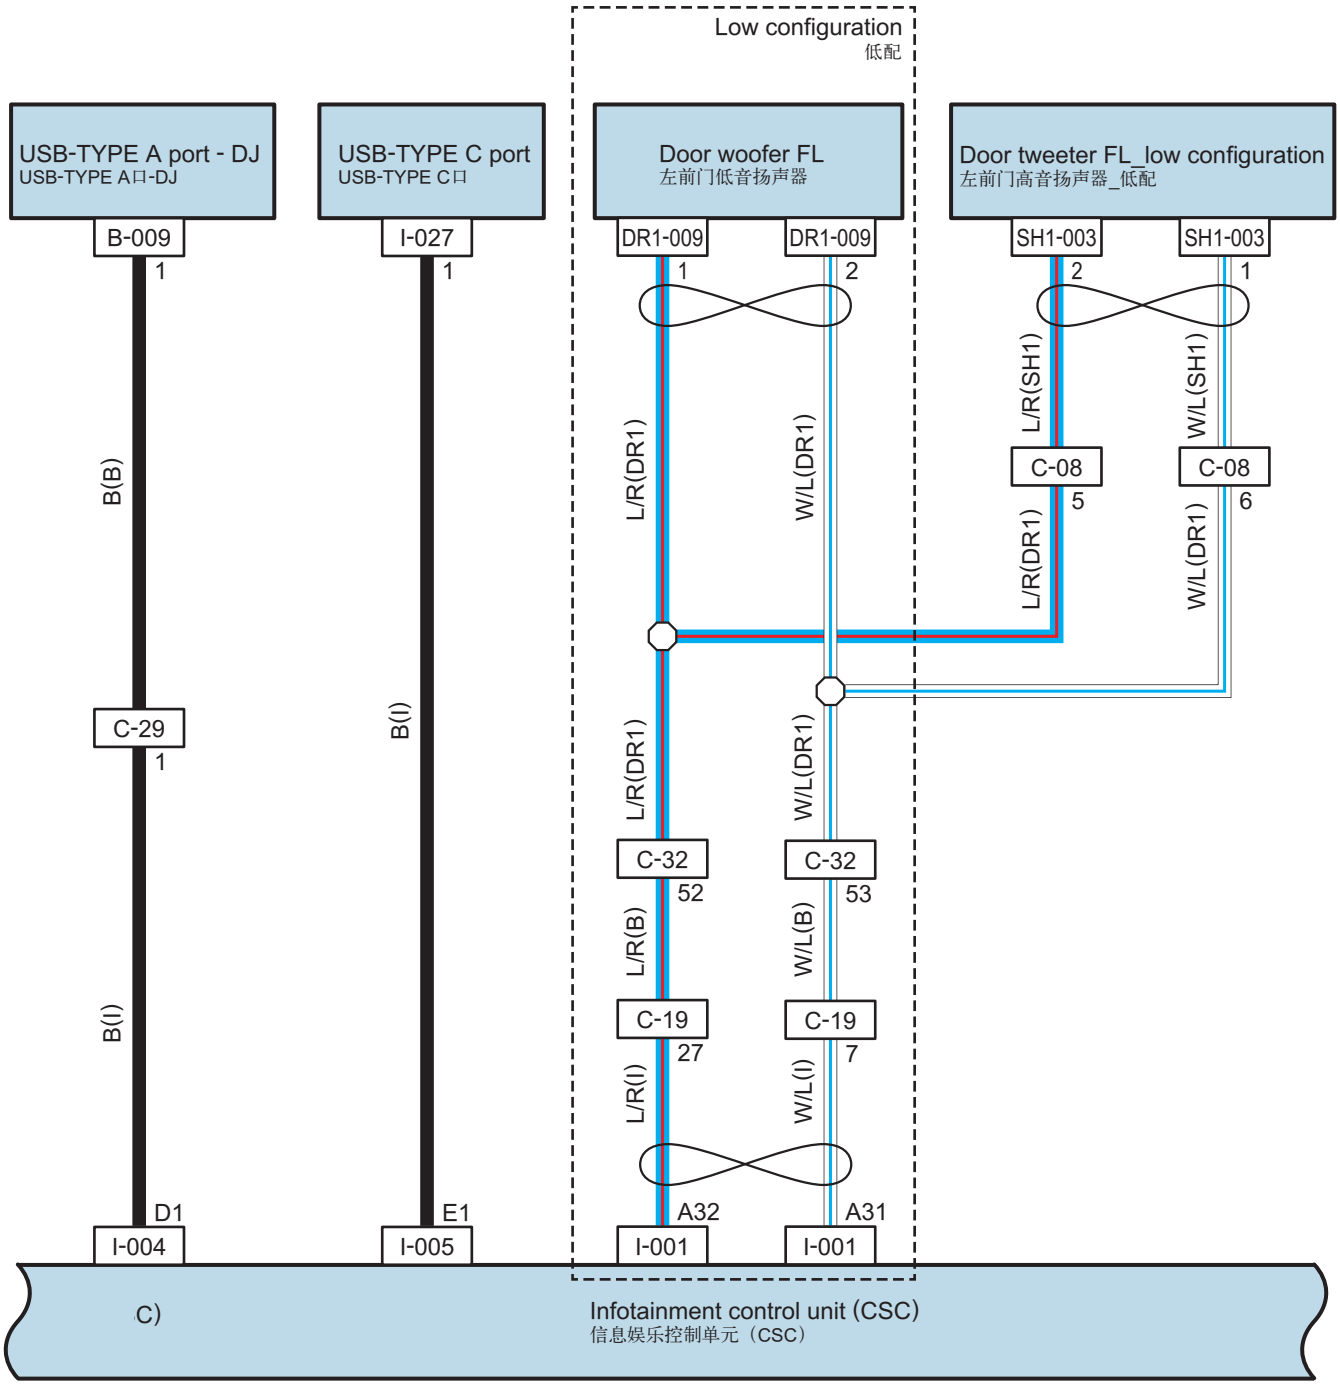

High configuration
高配
Center intelligent area control unit
中智能区域控制单元
B-031
H44
Y(B)
C-21
18
Y(I)
B23
I-002
Power amplifier (high configuration)
功率放大器（高配）
B-088
D2
G(B)
C-25
2
G(I)
F1
I-006
B-088
D1
W(B)
C-25
3
W(I)
F2
I-006
Central display
中间显示屏
I-023
B1
B(I)
G2
I-007
I-022
A7
G(I)
B14
I-002
I-022
A1
B(I)
61b
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

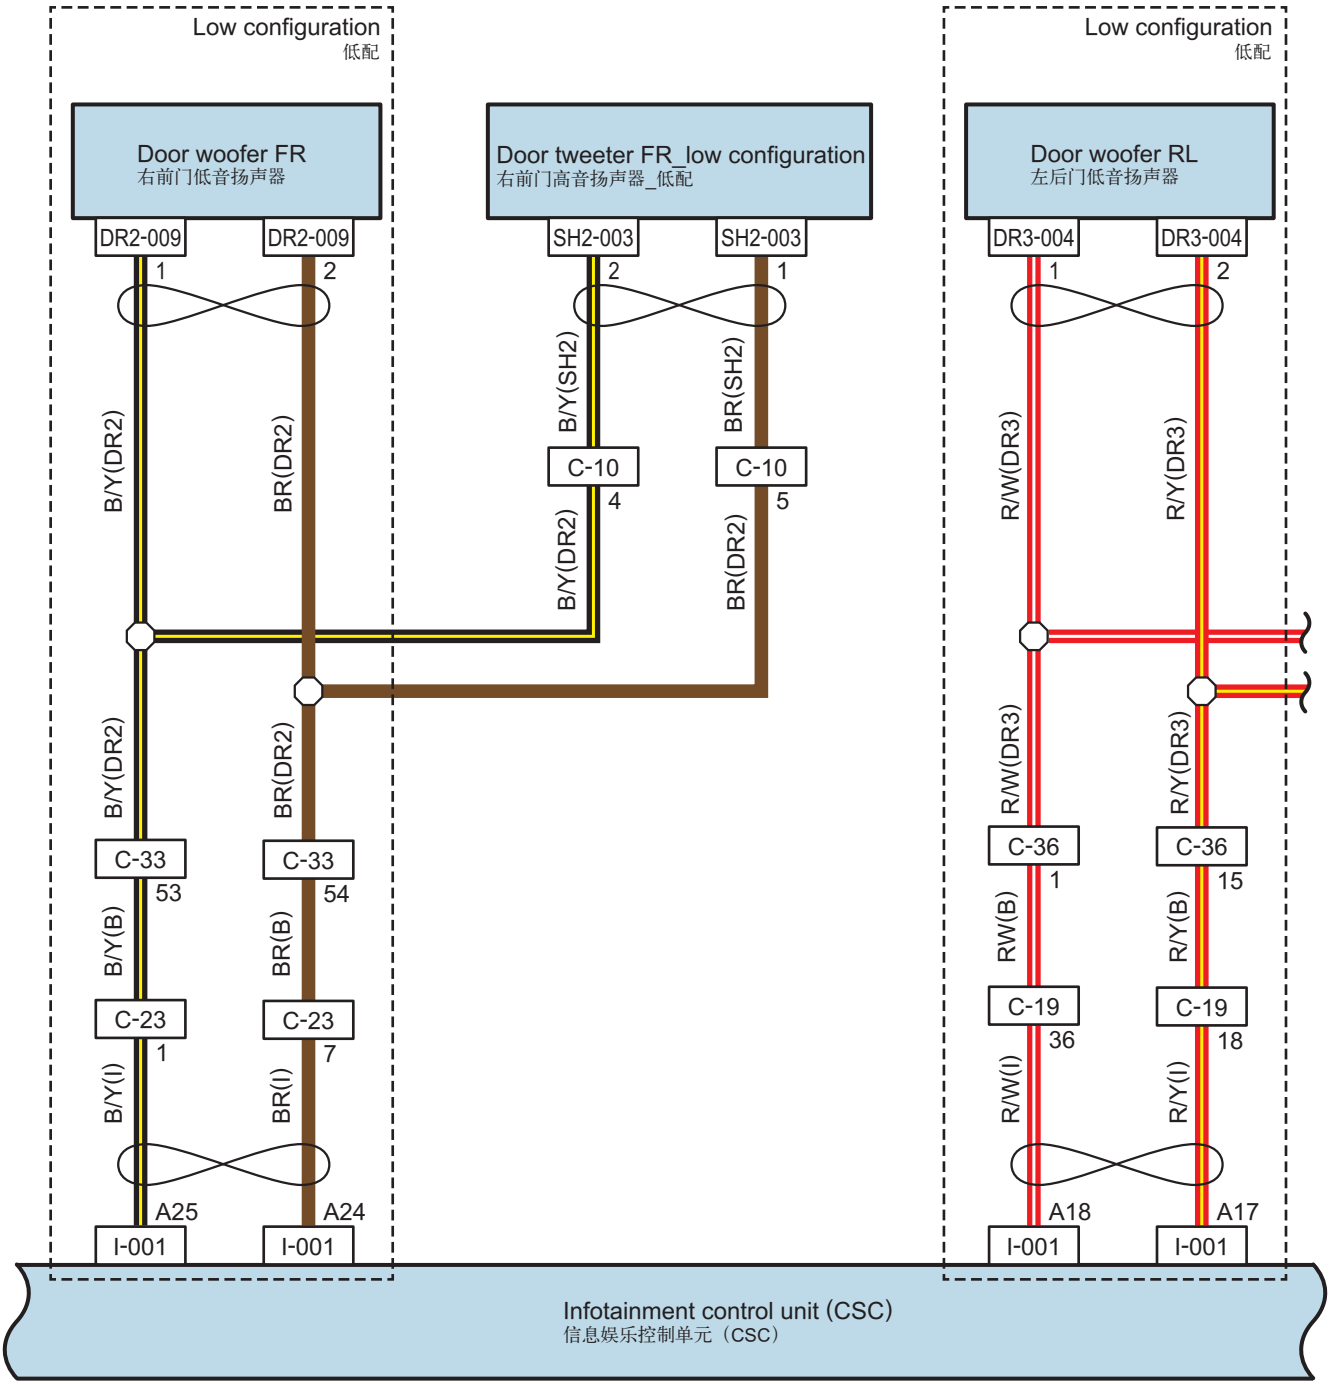

Central display
中间显示屏
Center intelligent area control unit
中智能区域控制单元
Head up display
抬头显示器
I-022
A3
B-031
H5
B-031
H45
I-010
A2
I-010
A1
I-040
B1
I-010
A7
G/B(I)
C-21
14
G/B(B)
W(I)
W(I)
W(I)
C-21
15
W(B)
B(I)
W/G(I)
G3
B13
I-007
I-002
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

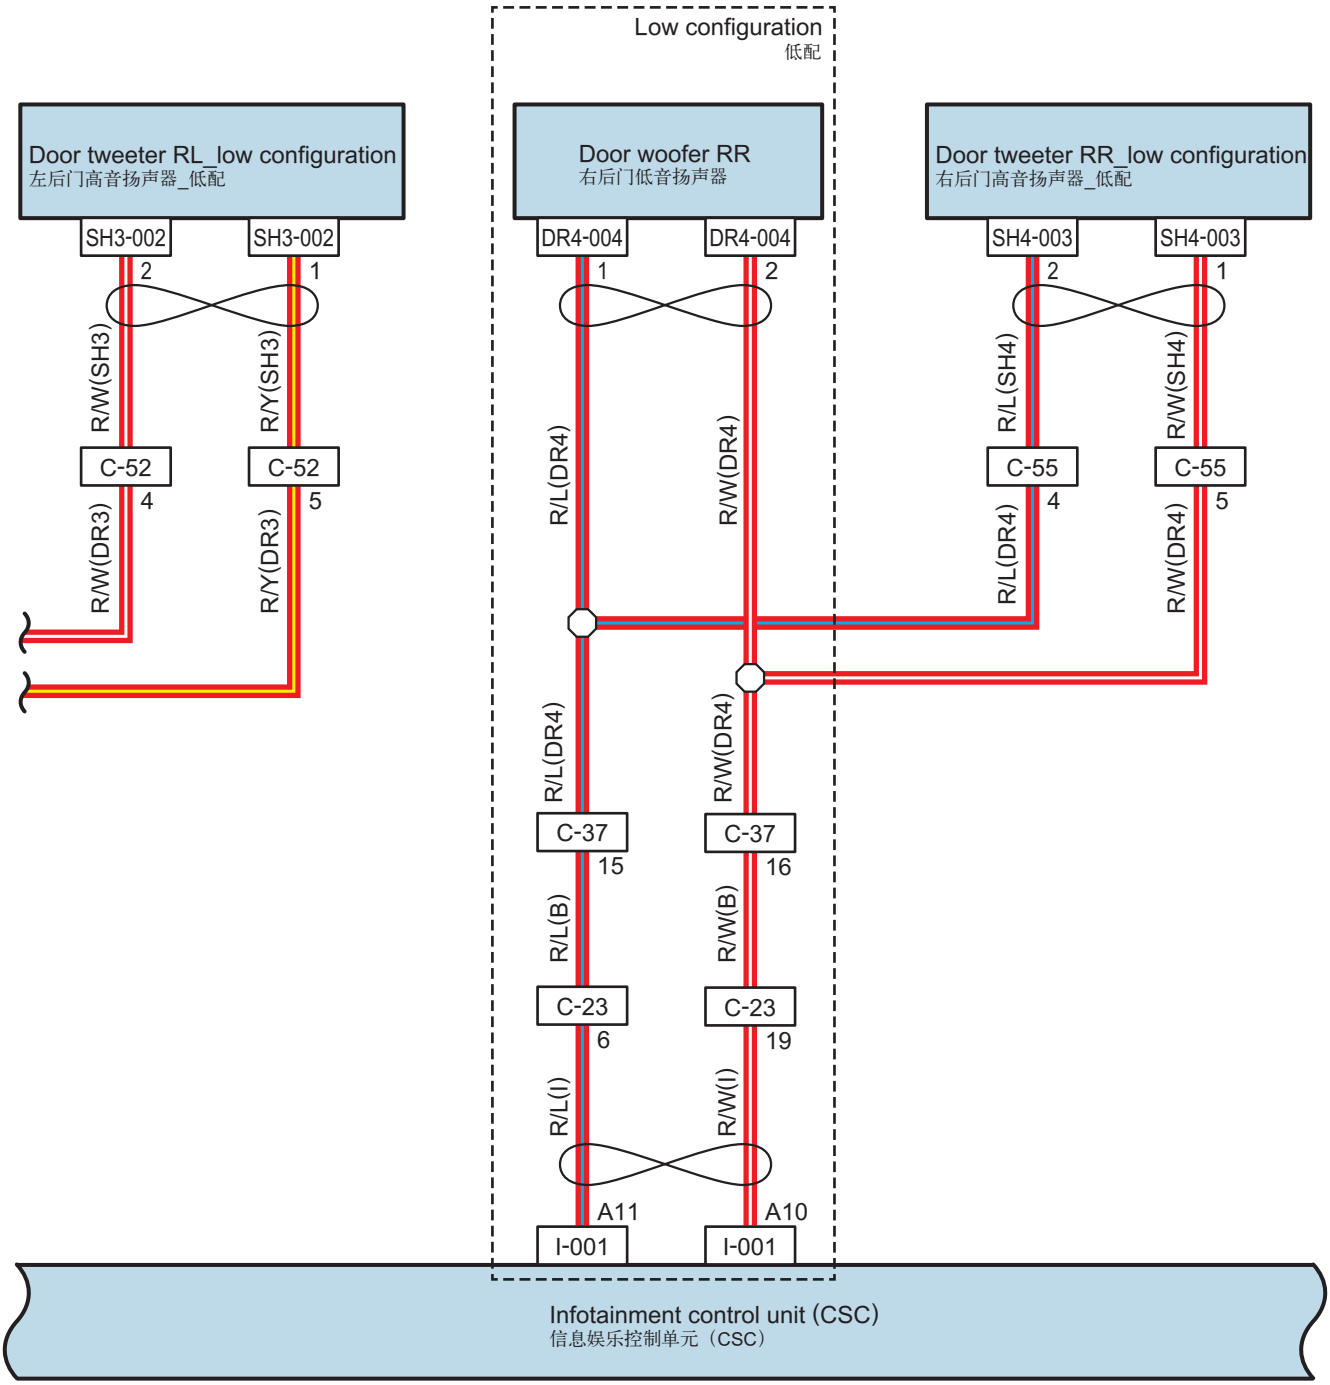

Head up display
抬头显示器
I-010
A3
I-010
A4
B(I)
B(I)
B(I)
61b
Microphone FL
左前麦克风
RO-004
4
RO-004
3
B(RO)
L/R(RO)
B(RO)
C-50
9
C-50
10
B(B)
L/R(B)
B(B)
C-20
16
C-20
17
B(I)
L/R(I)
B(I)
B1
B8
I-002
I-002
Microphone FR
右前麦克风
RO2-002
4
RO2-002
3
B(RO2)
G/B(RO2)
B(RO2)
C-51
9
C-51
10
B(B)
G/B(B)
B(B)
C-20
18
C-20
19
B(I)
G/B(I)
B(I)
B2
B9
I-002
I-002
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

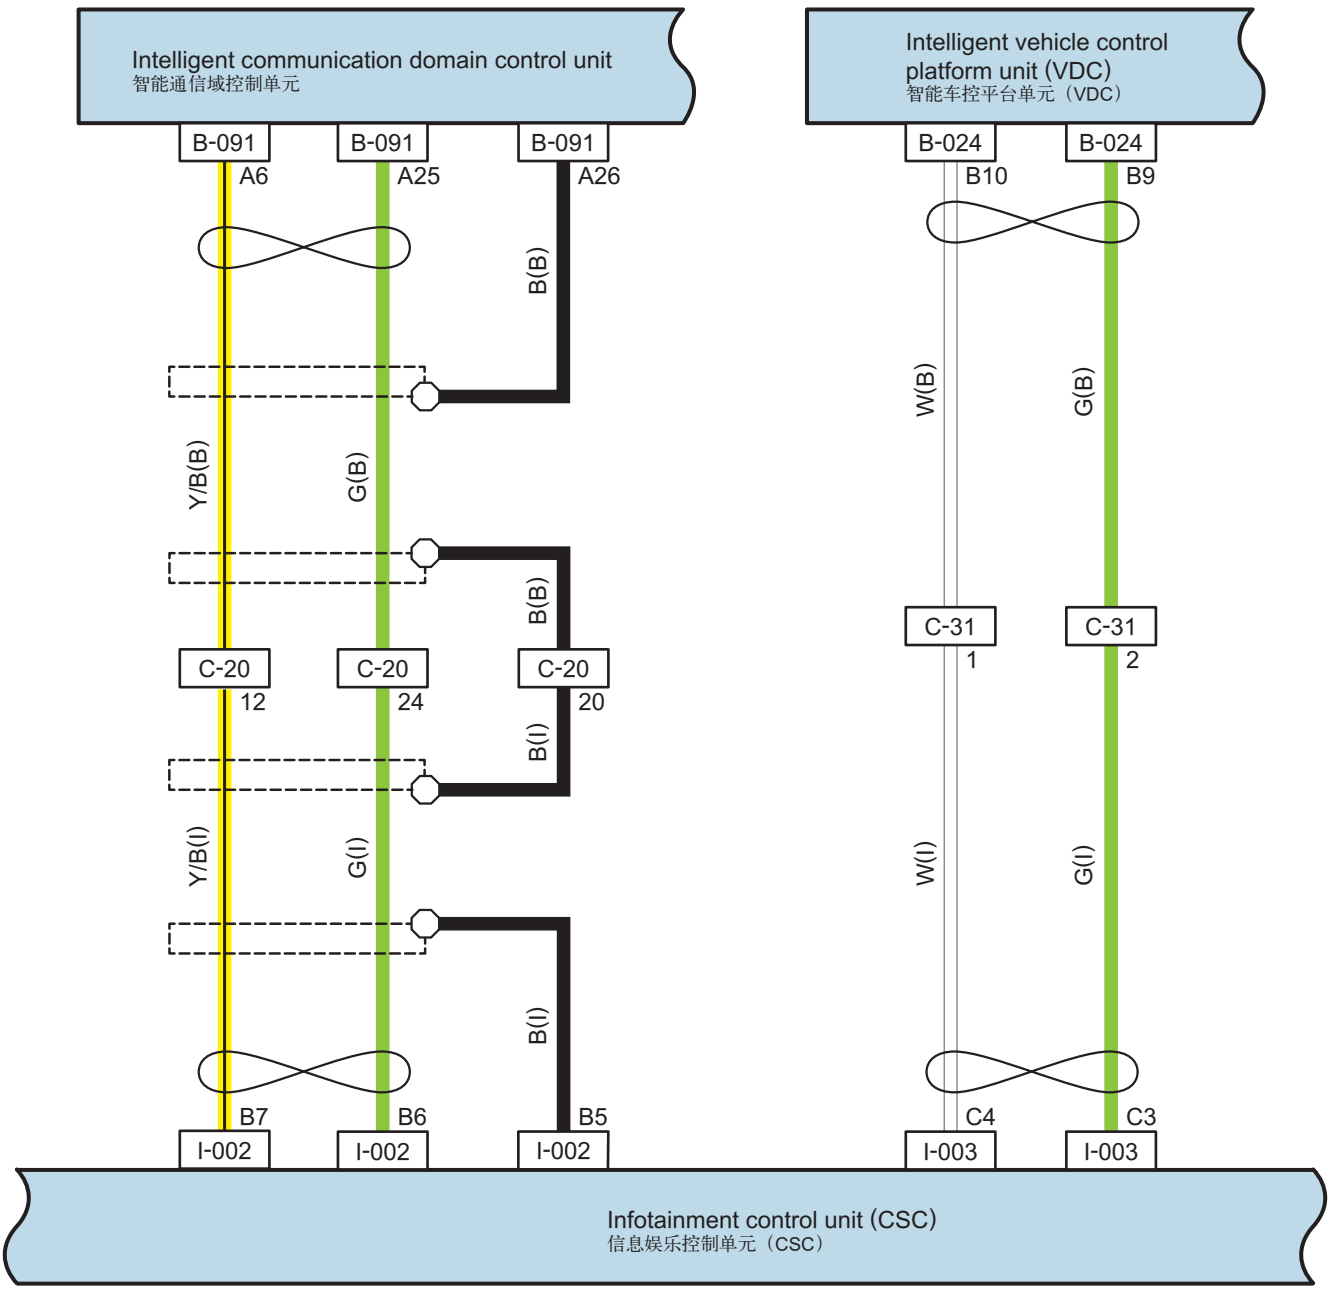

Microphone RL
左后麦克风
Microphone RR
右后麦克风
Advanced automatic driving controller - DJ
高级自动驾驶控制器-DJ
RO-003
4
RO-003
3
B(RO)
G(RO)
B(RO)
C-50
11
C-50
12
B(B)
G(B)
B(B)
C-20
2
C-20
3
B(I)
G(I)
B(I)
B3
B10
I-002
I-002
RO2-001
4
RO2-001
3
B(RO2)
W(RO2)
B(RO2)
C-51
11
C-51
12
B(B)
W(B)
B(B)
C-20
9
C-20
21
B(I)
W(I)
B(I)
B4
B11
I-002
I-002
B-050
G2
B(B)
C-30
1
B(I)
I4
I-009
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

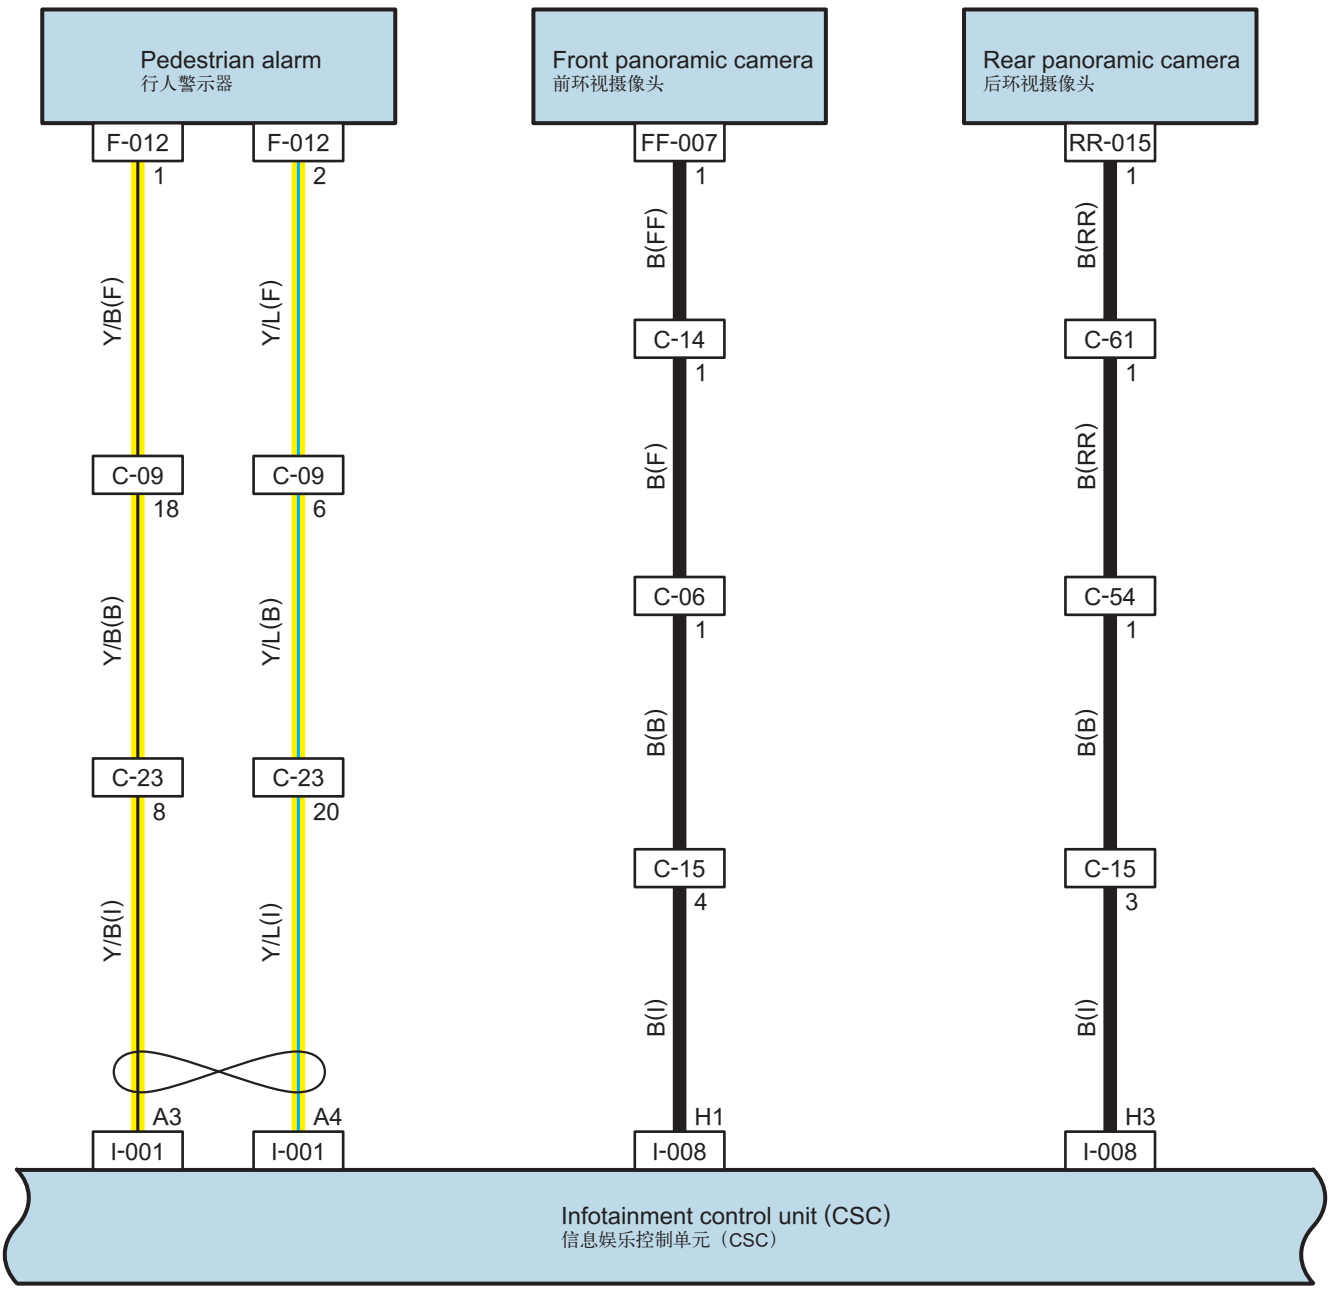

Driver monitoring camera
驾驶员监测摄像头
Center intelligent area control unit
中智能区域控制单元
Passenger monitoring camera
副驾驶员监测摄像头
B-004
A1
B-005
B2
B-005
B1
B-033
G40
B-006
A1
B-006
A2
B-007
B1
B(B)
B(B)
R/Y(B)
R/Y(B)
R/Y(B)
B(B)
B(B)
C-28
1
C-27
1
41b
41b
B(I)
B(I)
I3
I1
I-009
I-009
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

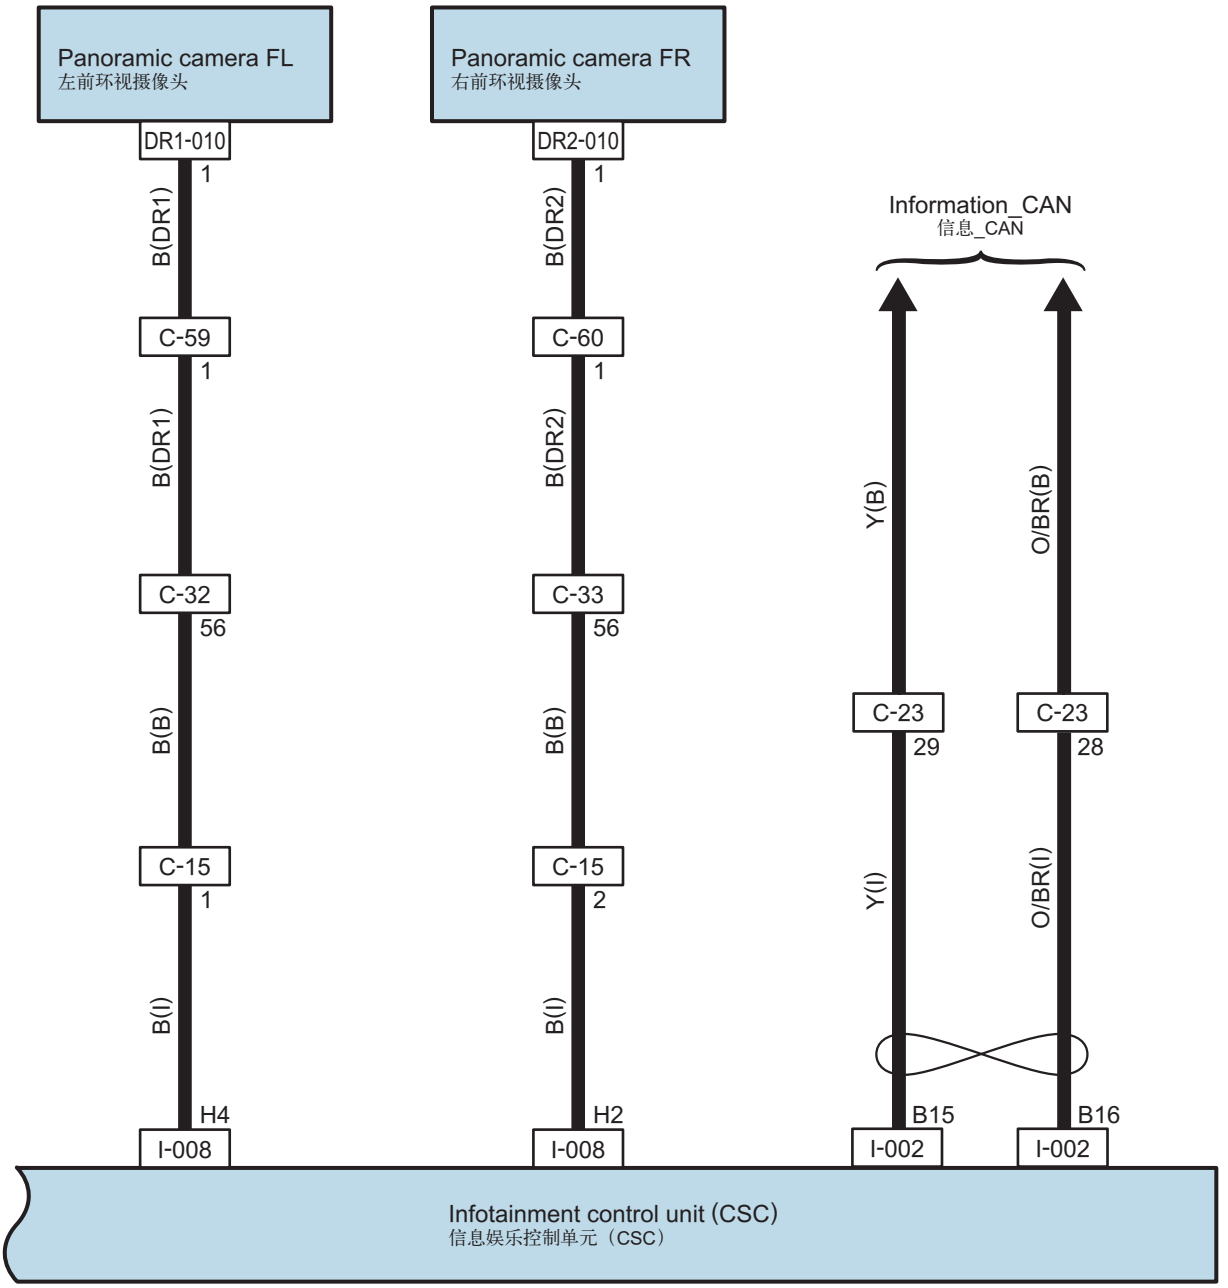

Low configuration
低配
USB-TYPE A port - DJ
USB-TYPE A口-DJ
USB-TYPE C port
USB-TYPE C口
Door woofer FL
左前门低音扬声器
Door tweeter FL_low configuration
左前门高音扬声器_低配
B-009
1
I-027
1
DR1-009
1
DR1-009
2
SH1-003
2
SH1-003
1
B(B)
B(I)
L/R(DR1)
W/L(DR1)
L/R(SH1)
W/L(SH1)
C-08
5
C-08
6
L/R(DR1)
W/L(DR1)
C-29
1
B(I)
L/R(DR1)
W/L(DR1)
C-32
52
C-32
53
L/R(B)
W/L(B)
C-19
27
C-19
7
L/R(I)
W/L(I)
D1
E1
A32
A31
I-004
I-005
I-001
I-001
C)
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

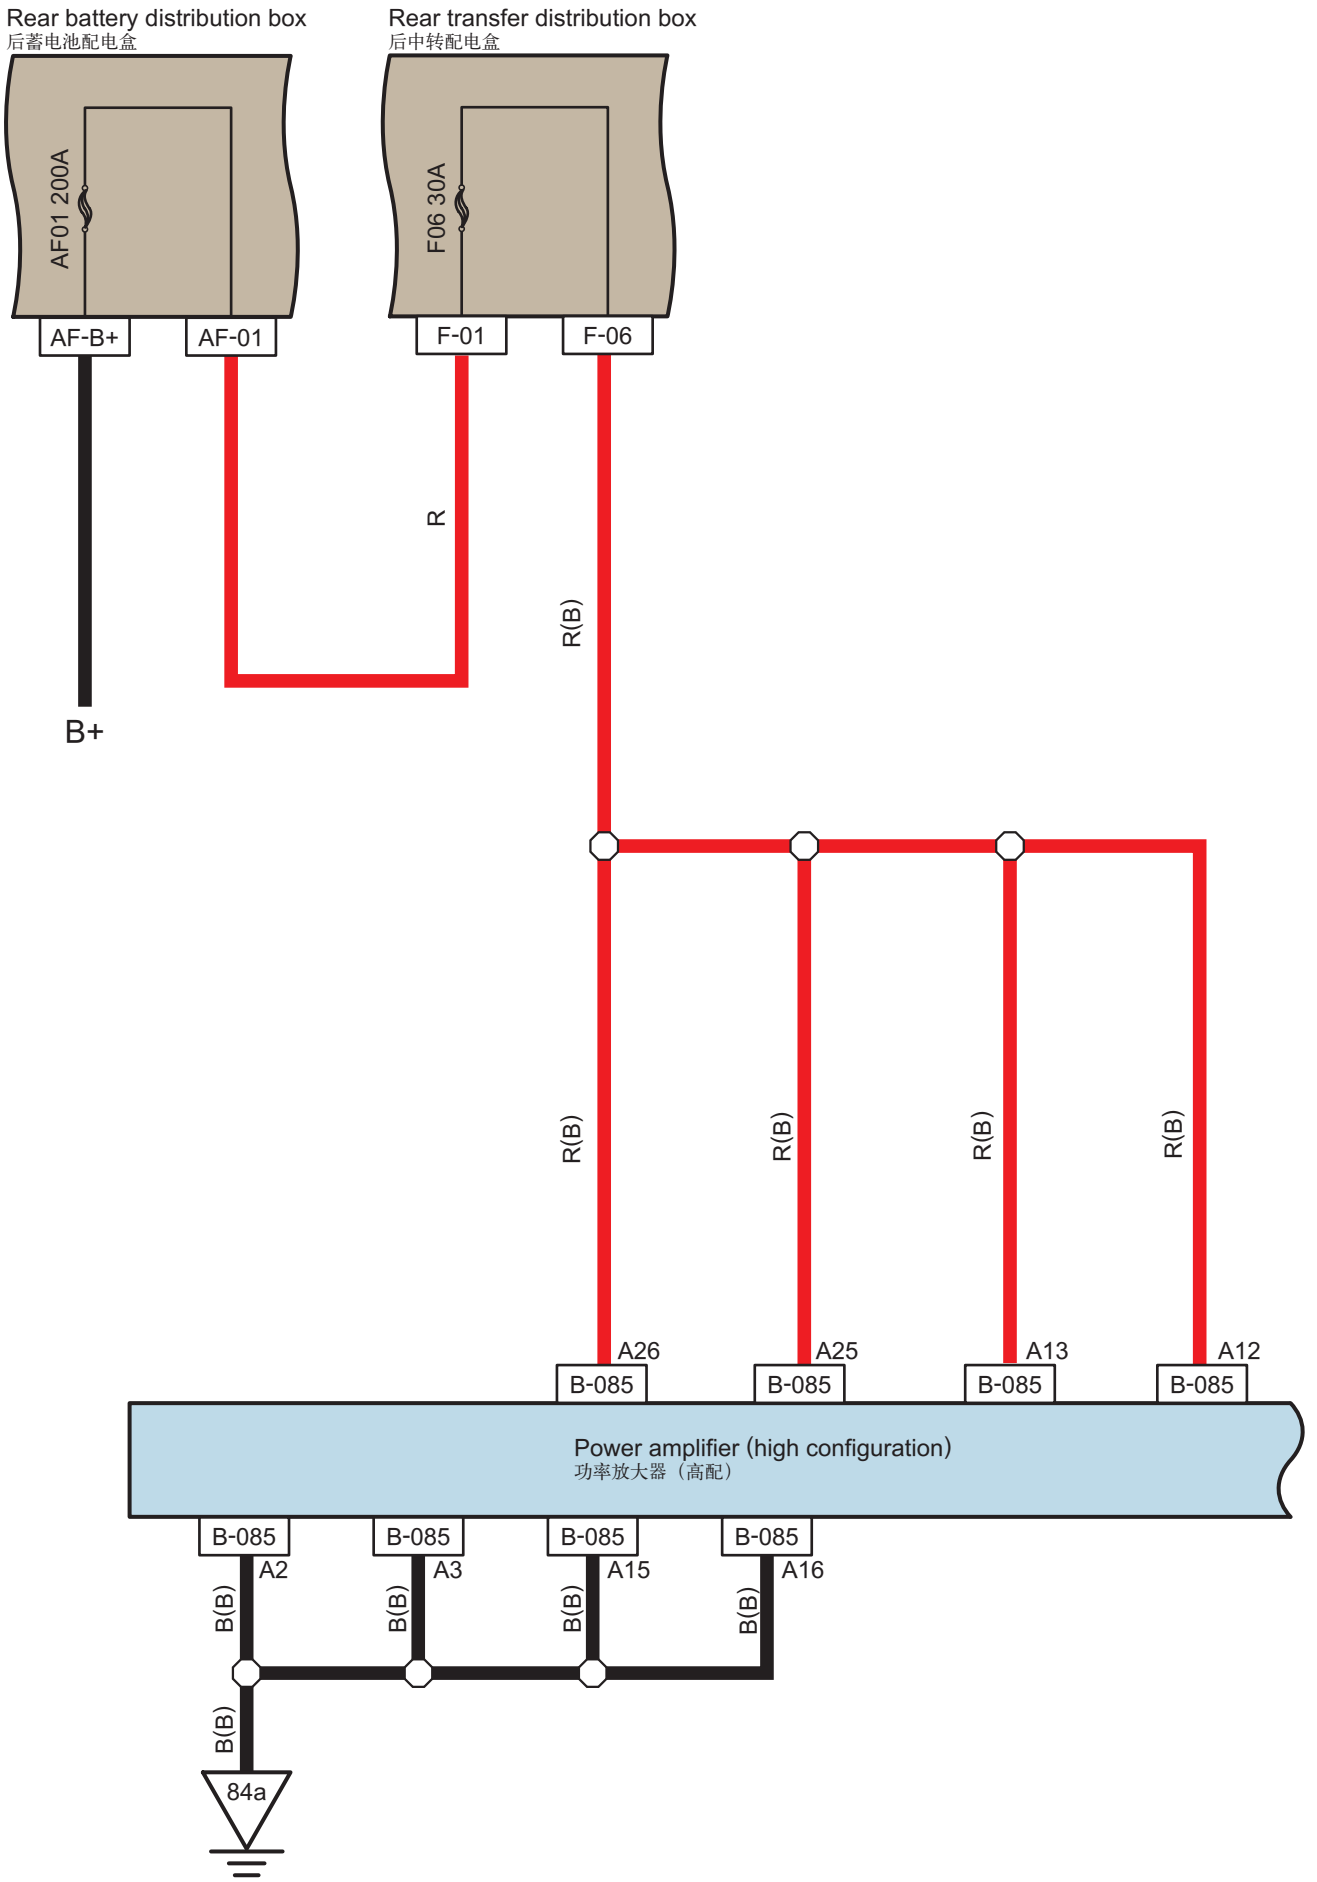

Low configuration
低配
Door woofer FR
右前门低音扬声器
DR2-009
1
DR2-009
2
B/Y(DR2)
BR(DR2)
C-33
53
C-33
54
B/Y(B)
BR(B)
C-23
1
C-23
7
B/Y(I)
BR(I)
A25
A24
I-001
I-001
Door tweeter FR_low configuration
右前门高音扬声器_低配
SH2-003
2
SH2-003
1
B/Y(SH2)
BR(SH2)
C-10
4
C-10
5
B/Y(DR2)
BR(DR2)
Low configuration
低配
Door woofer RL
左后门低音扬声器
DR3-004
1
DR3-004
2
R/W(DR3)
R/Y(DR3)
C-36
1
C-36
15
RW(B)
R/Y(B)
C-19
36
C-19
18
R/W(I)
R/Y(I)
A18
A17
I-001
I-001
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

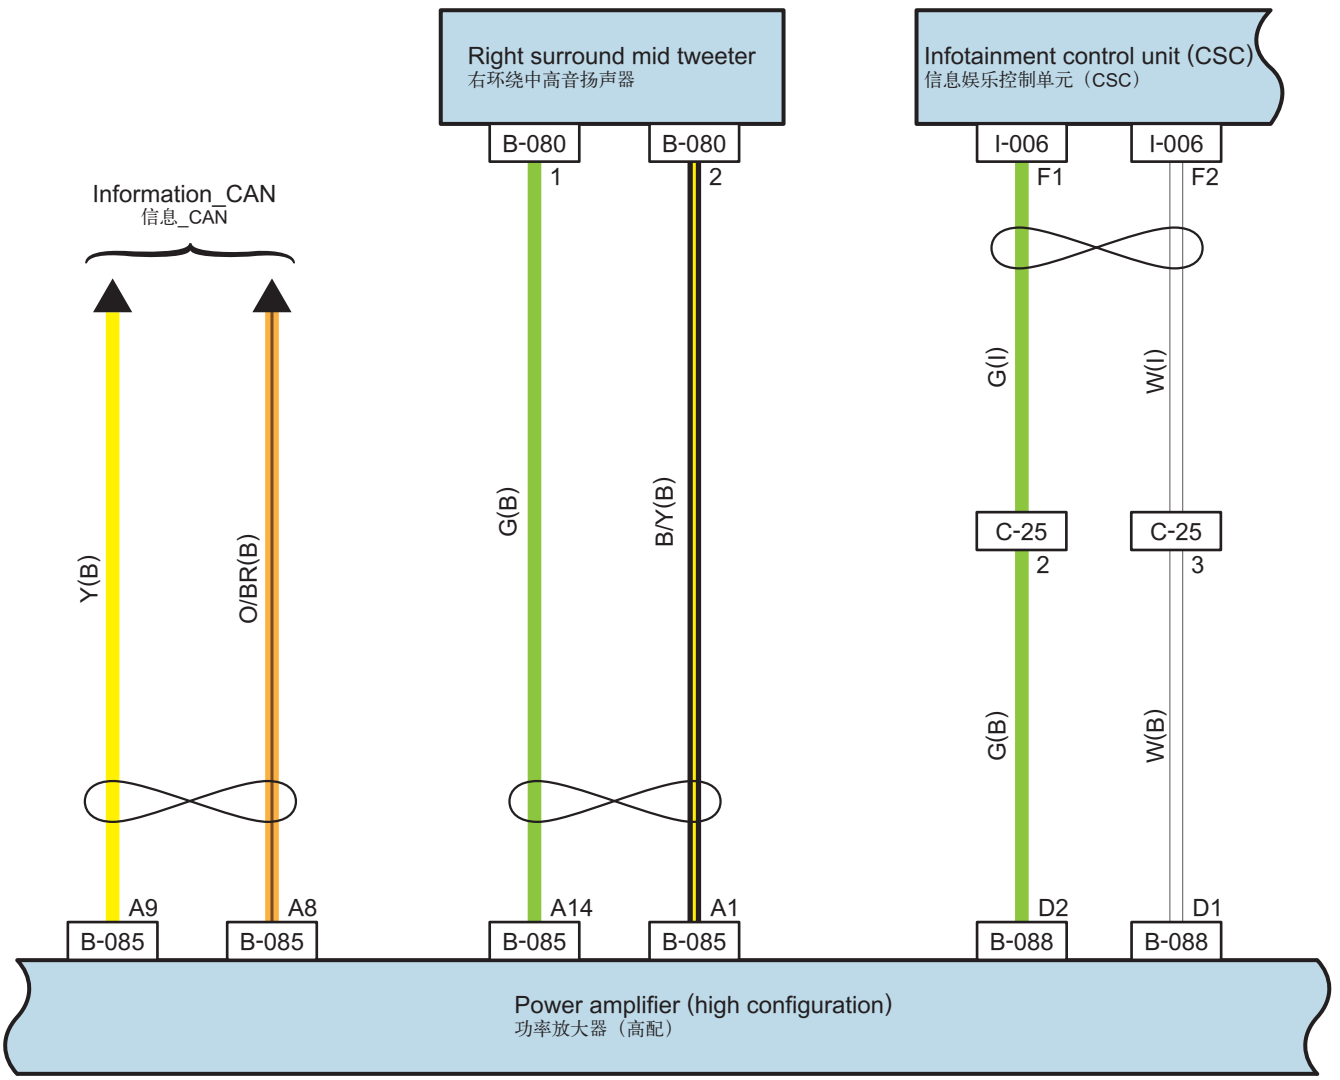

Low configuration
低配
Door tweeter RL_low configuration
左后门高音扬声器_低配
Door woofer RR
右后门低音扬声器
Door tweeter RR_low configuration
右后门高音扬声器_低配
SH3-002
SH3-002
DR4-004
DR4-004
SH4-003
SH4-003
2
1
1
2
2
1
R/W(SH3)
R/Y(SH3)
R/L(DR4)
R/W(DR4)
R/L(SH4)
R/W(SH4)
C-52
C-52
C-55
C-55
4
5
4
5
R/W(DR3)
R/Y(DR3)
R/L(DR4)
R/W(DR4)
R/L(DR4)
R/W(DR4)
C-37
C-37
15
16
R/L(B)
R/W(B)
C-23
C-23
6
19
R/L(I)
R/W(I)
A11
A10
I-001
I-001
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

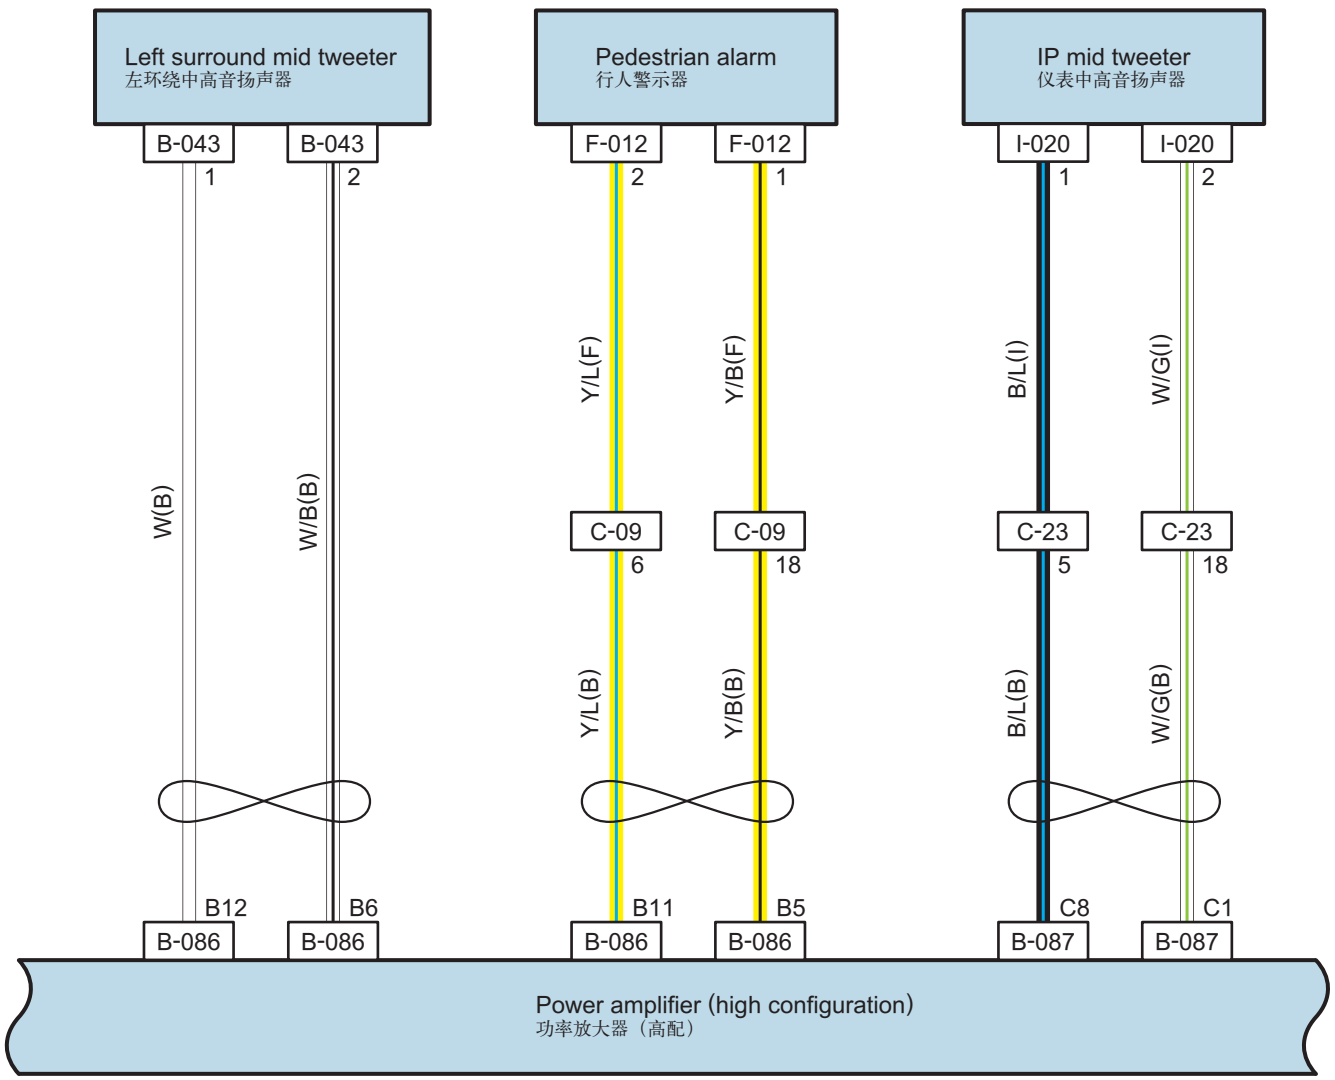

Intelligent communication domain control unit
智能通信域控制单元
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
B-091
A6
B-091
A25
B-091
A26
B-024
B10
B-024
B9
B(B)
W(B)
G(B)
Y/B(B)
G(B)
B(B)
C-20
12
C-20
24
C-20
20
C-31
1
C-31
2
B(I)
Y/B(I)
G(I)
W(I)
G(I)
B(I)
B7
B6
B5
C4
C3
I-002
I-002
I-002
I-003
I-003
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

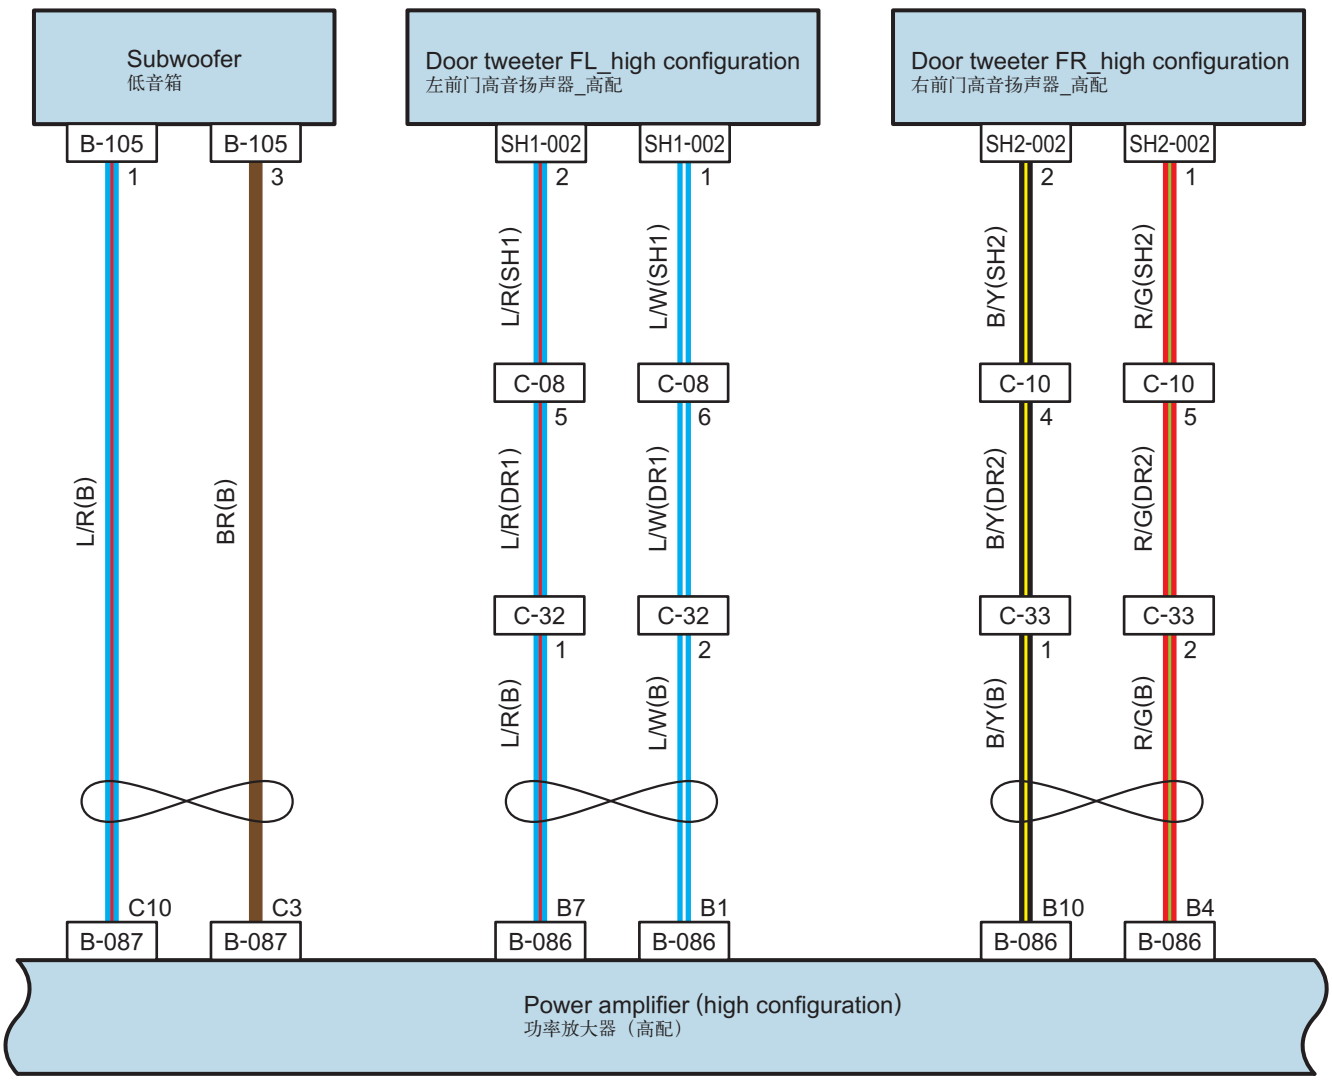

Pedestrian alarm
行人警示器
F-012
1
F-012
2
Y/B(F)
Y/L(F)
C-09
18
C-09
6
Y/B(B)
Y/L(B)
C-23
8
C-23
20
Y/B(I)
Y/L(I)
A3
A4
I-001
I-001
Front panoramic camera
前环视摄像头
FF-007
1
B(FF)
C-14
1
B(F)
C-06
1
B(B)
C-15
4
B(I)
H1
I-008
Rear panoramic camera
后环视摄像头
RR-015
1
B(RR)
C-61
1
B(RR)
C-54
1
B(B)
C-15
3
B(I)
H3
I-008
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

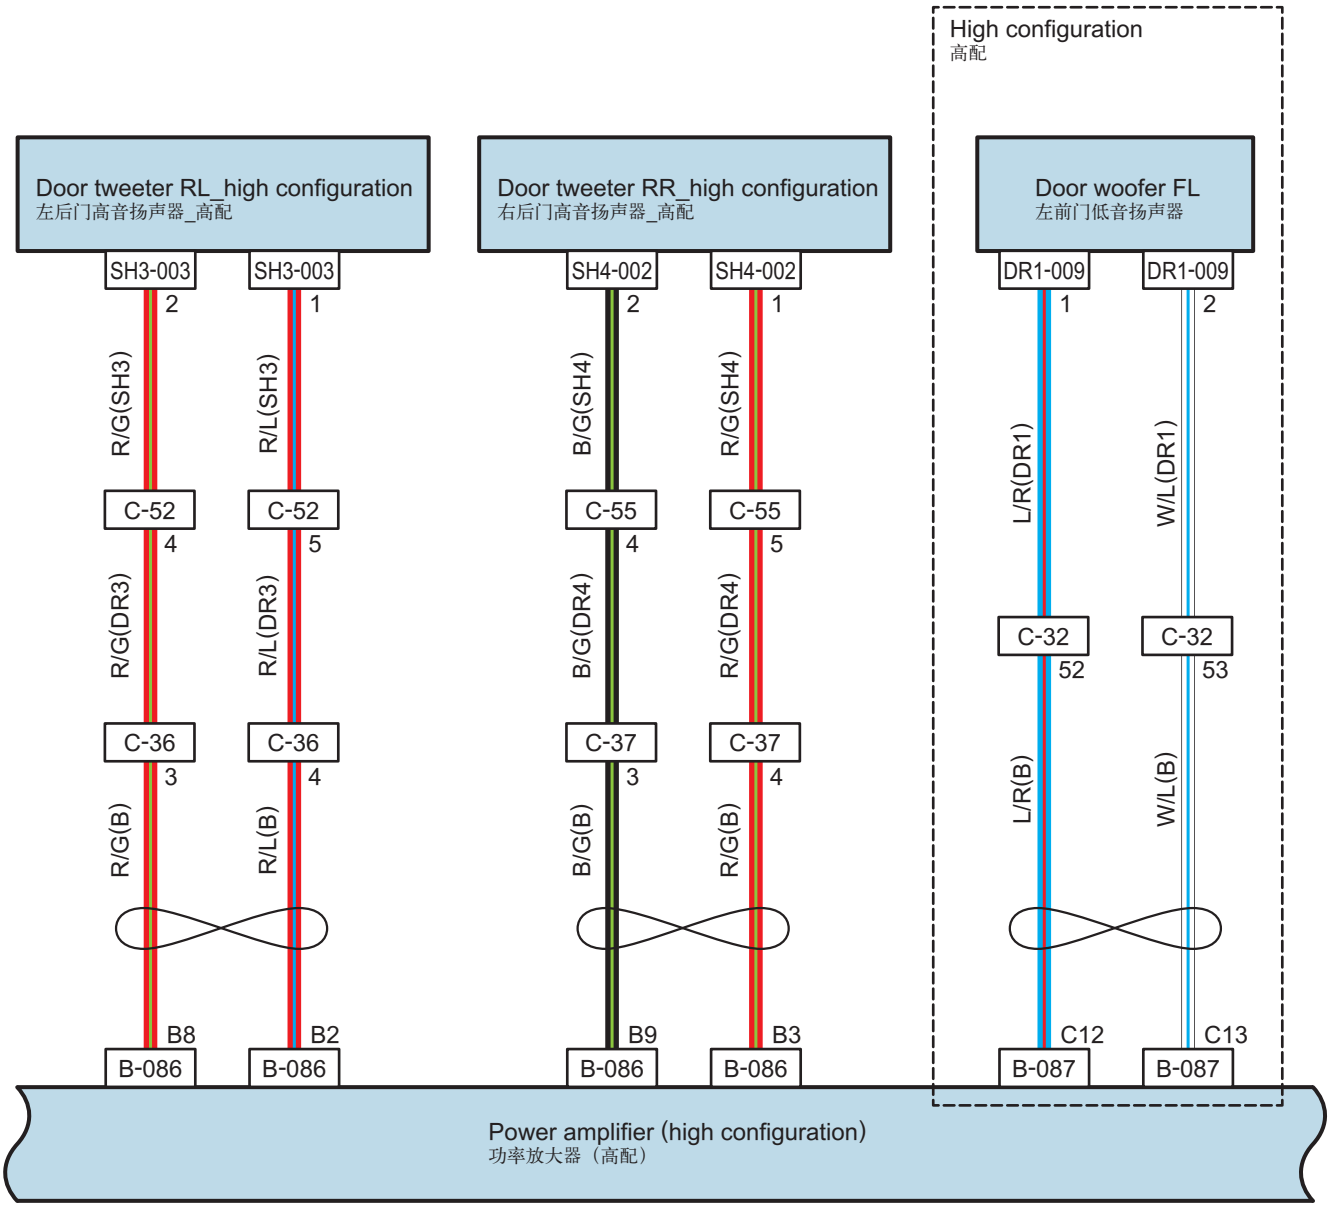

Panoramic camera FL
左前环视摄像头
DR1-010
1
B(DR1)
C-59
1
B(DR1)
C-32
56
B(B)
C-15
1
B(I)
H4
I-008
Panoramic camera FR
右前环视摄像头
DR2-010
1
B(DR2)
C-60
1
B(DR2)
C-33
56
B(B)
C-15
2
B(I)
H2
I-008
Information_CAN
信息_CAN
Y(B)
O/BR(B)
C-23
29
C-23
28
Y(I)
O/BR(I)
B15
B16
I-002
I-002
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）

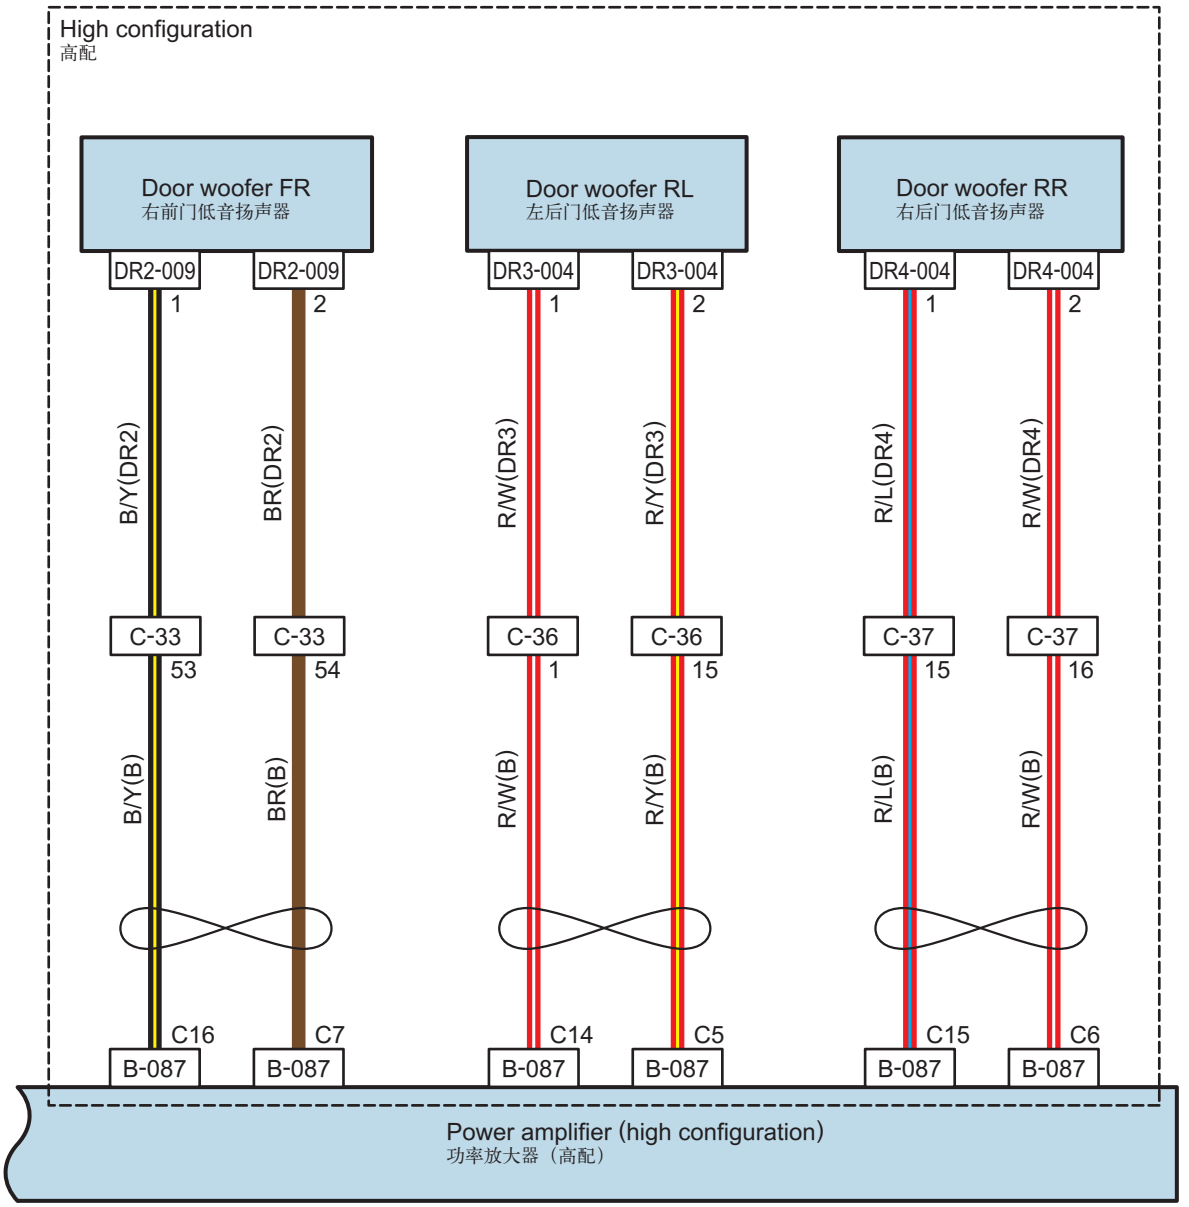

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
AF01 200A
F06 30A
AF-B+
AF-01
F-01
F-06
B+
R
R(B)
R(B)
R(B)
R(B)
R(B)
A26
A25
A13
A12
B-085
B-085
B-085
B-085
Power amplifier (high configuration)
功率放大器（高配）
B-085
B-085
B-085
B-085
A2
A3
A15
A16
B(B)
B(B)
B(B)
B(B)
B(B)
84a

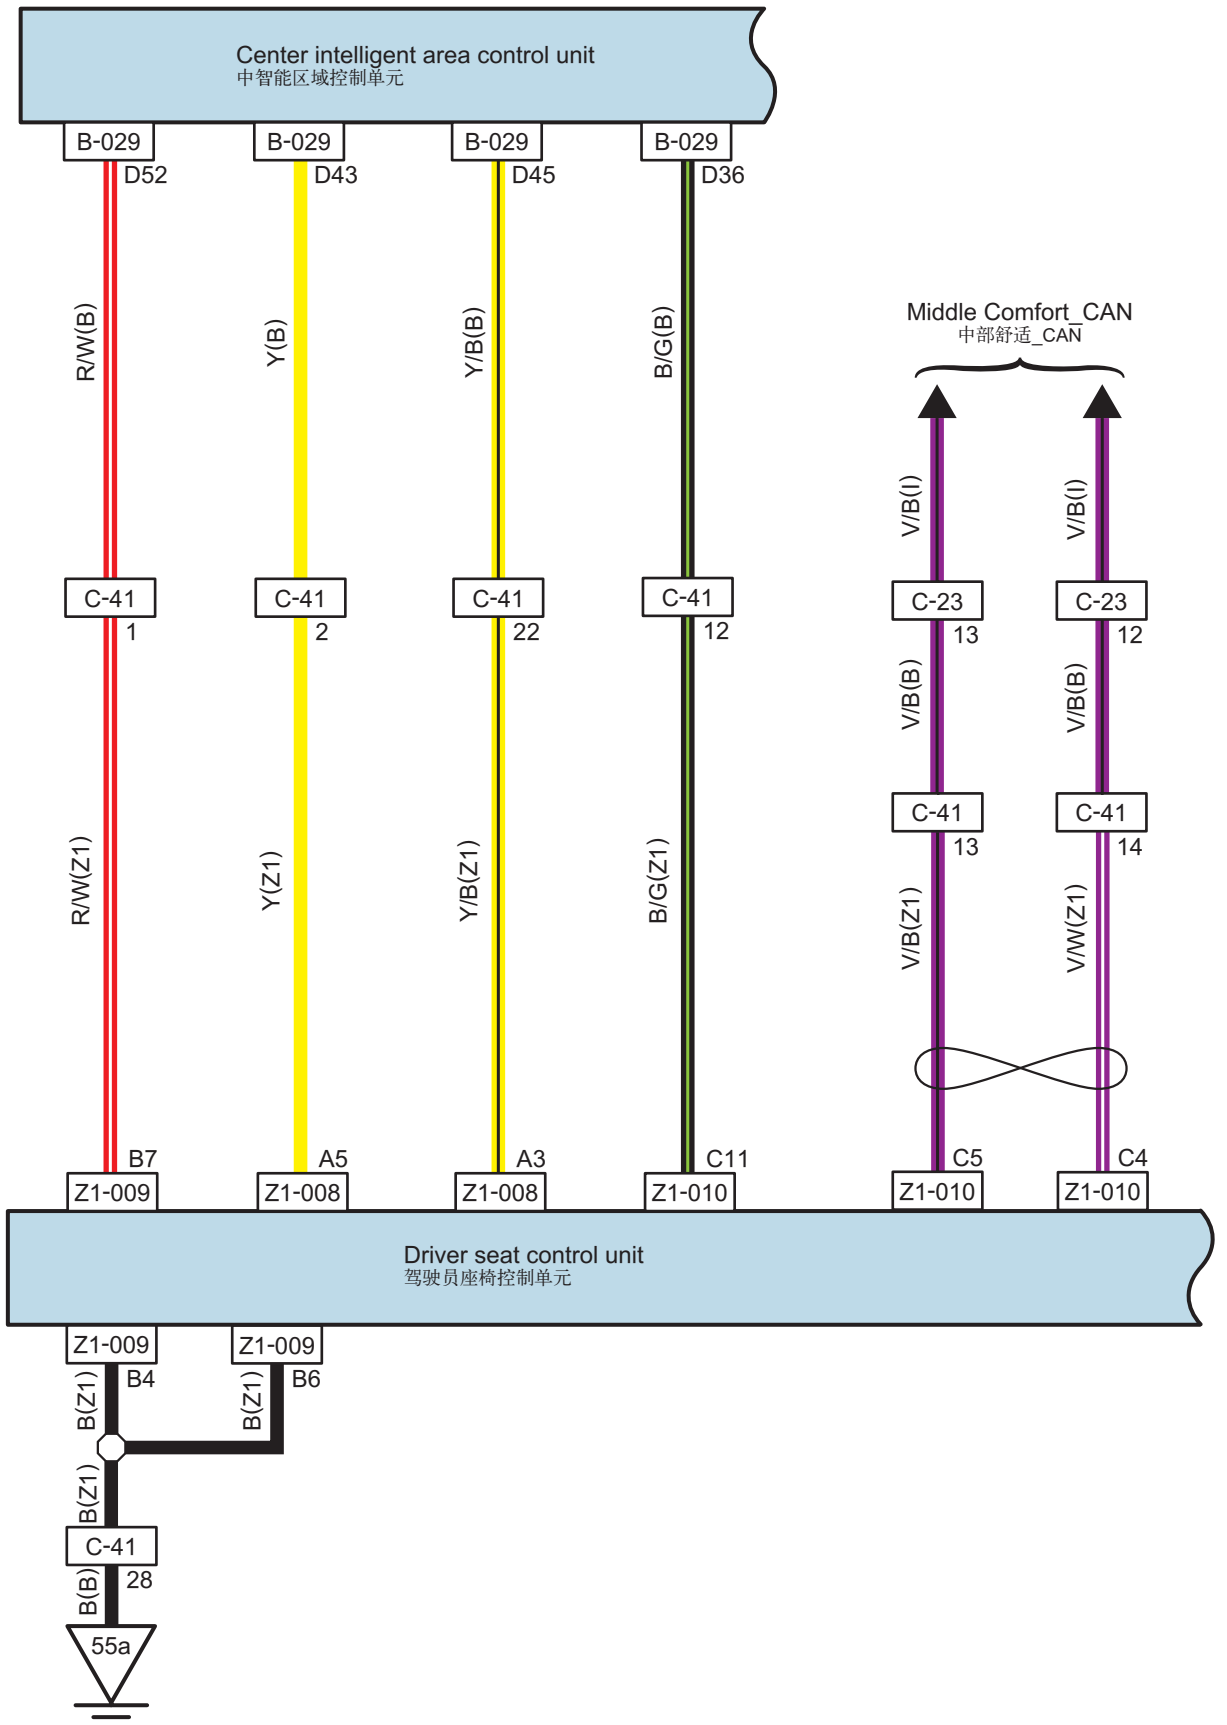

Right surround mid tweeter
右环绕中高音扬声器
B-080
1
B-080
2
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）
I-006
F1
I-006
F2
Information_CAN
信息_CAN
G(I)
W(I)
C-25
2
C-25
3
Y(B)
O/BR(B)
G(B)
B/Y(B)
G(B)
W(B)
A9
B-085
A8
B-085
A14
B-085
A1
B-085
D2
B-088
D1
B-088
Power amplifier (high configuration)
功率放大器（高配）

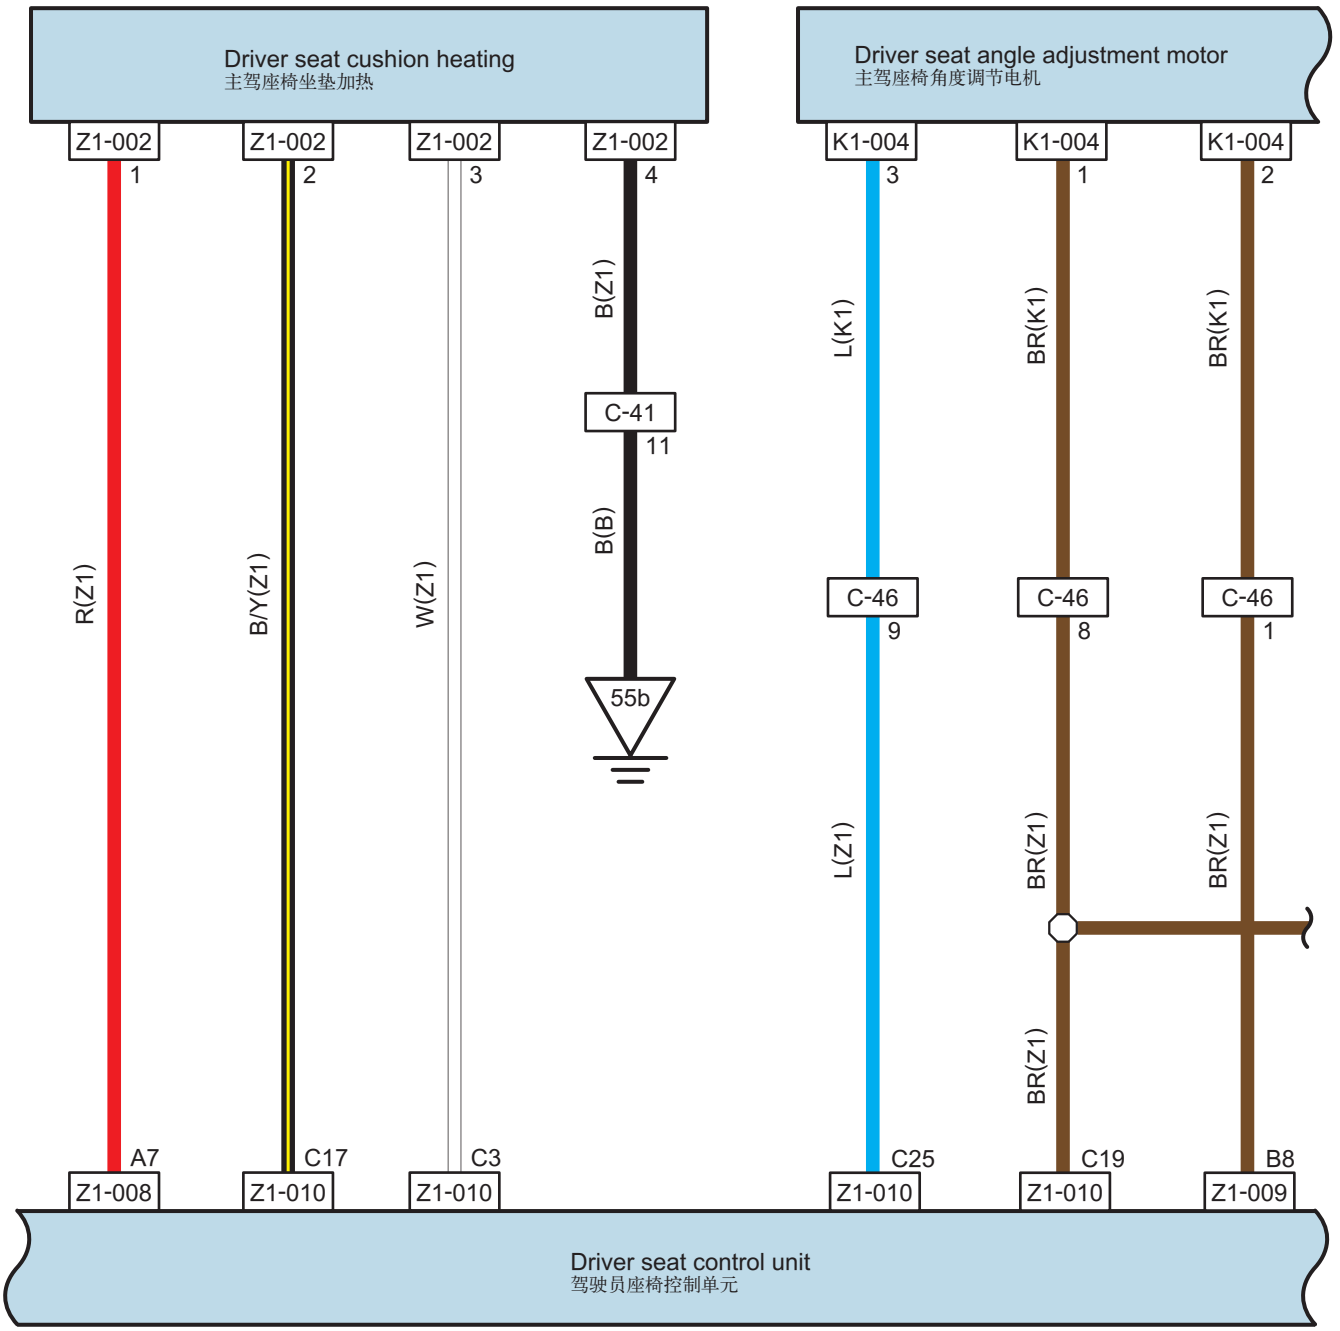

Left surround mid tweeter
左环绕中高音扬声器
B-043
1
B-043
2
W(B)
W/B(B)
B12
B6
B-086
B-086
Pedestrian alarm
行人警示器
F-012
2
F-012
1
Y/L(F)
Y/B(F)
C-09
6
C-09
18
Y/L(B)
Y/B(B)
B11
B5
B-086
B-086
IP mid tweeter
仪表中高音扬声器
I-020
1
I-020
2
B/L(I)
W/G(I)
C-23
5
C-23
18
B/L(B)
W/G(B)
C8
C1
B-087
B-087
Power amplifier (high configuration)
功率放大器（高配）

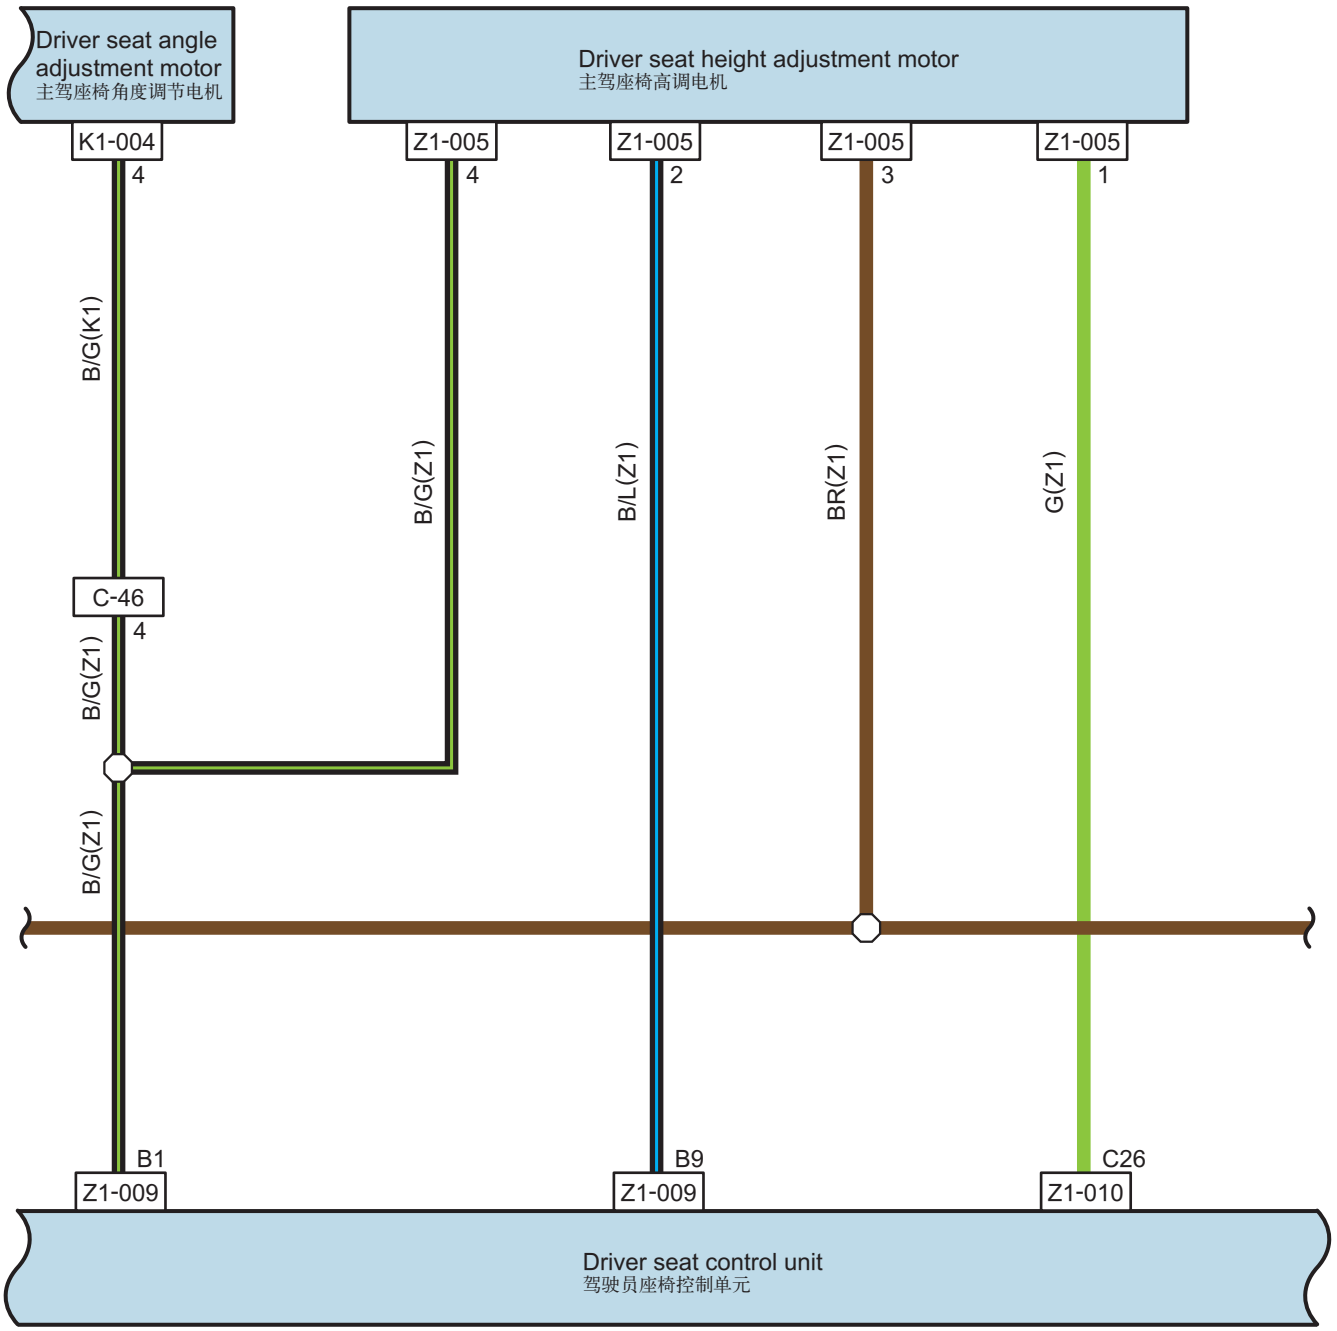

Subwoofer
低音箱
B-105
1
B-105
3
L/R(B)
BR(B)
C10
C3
B-087
B-087
Door tweeter FL_high configuration
左前门高音扬声器_高配
SH1-002
2
SH1-002
1
L/R(SH1)
L/W(SH1)
C-08
5
C-08
6
L/R(DR1)
L/W(DR1)
C-32
1
C-32
2
L/R(B)
L/W(B)
B7
B1
B-086
B-086
Door tweeter FR_high configuration
右前门高音扬声器_高配
SH2-002
2
SH2-002
1
B/Y(SH2)
R/G(SH2)
C-10
4
C-10
5
B/Y(DR2)
R/G(DR2)
C-33
1
C-33
2
B/Y(B)
R/G(B)
B10
B4
B-086
B-086
Power amplifier (high configuration)
功率放大器（高配）

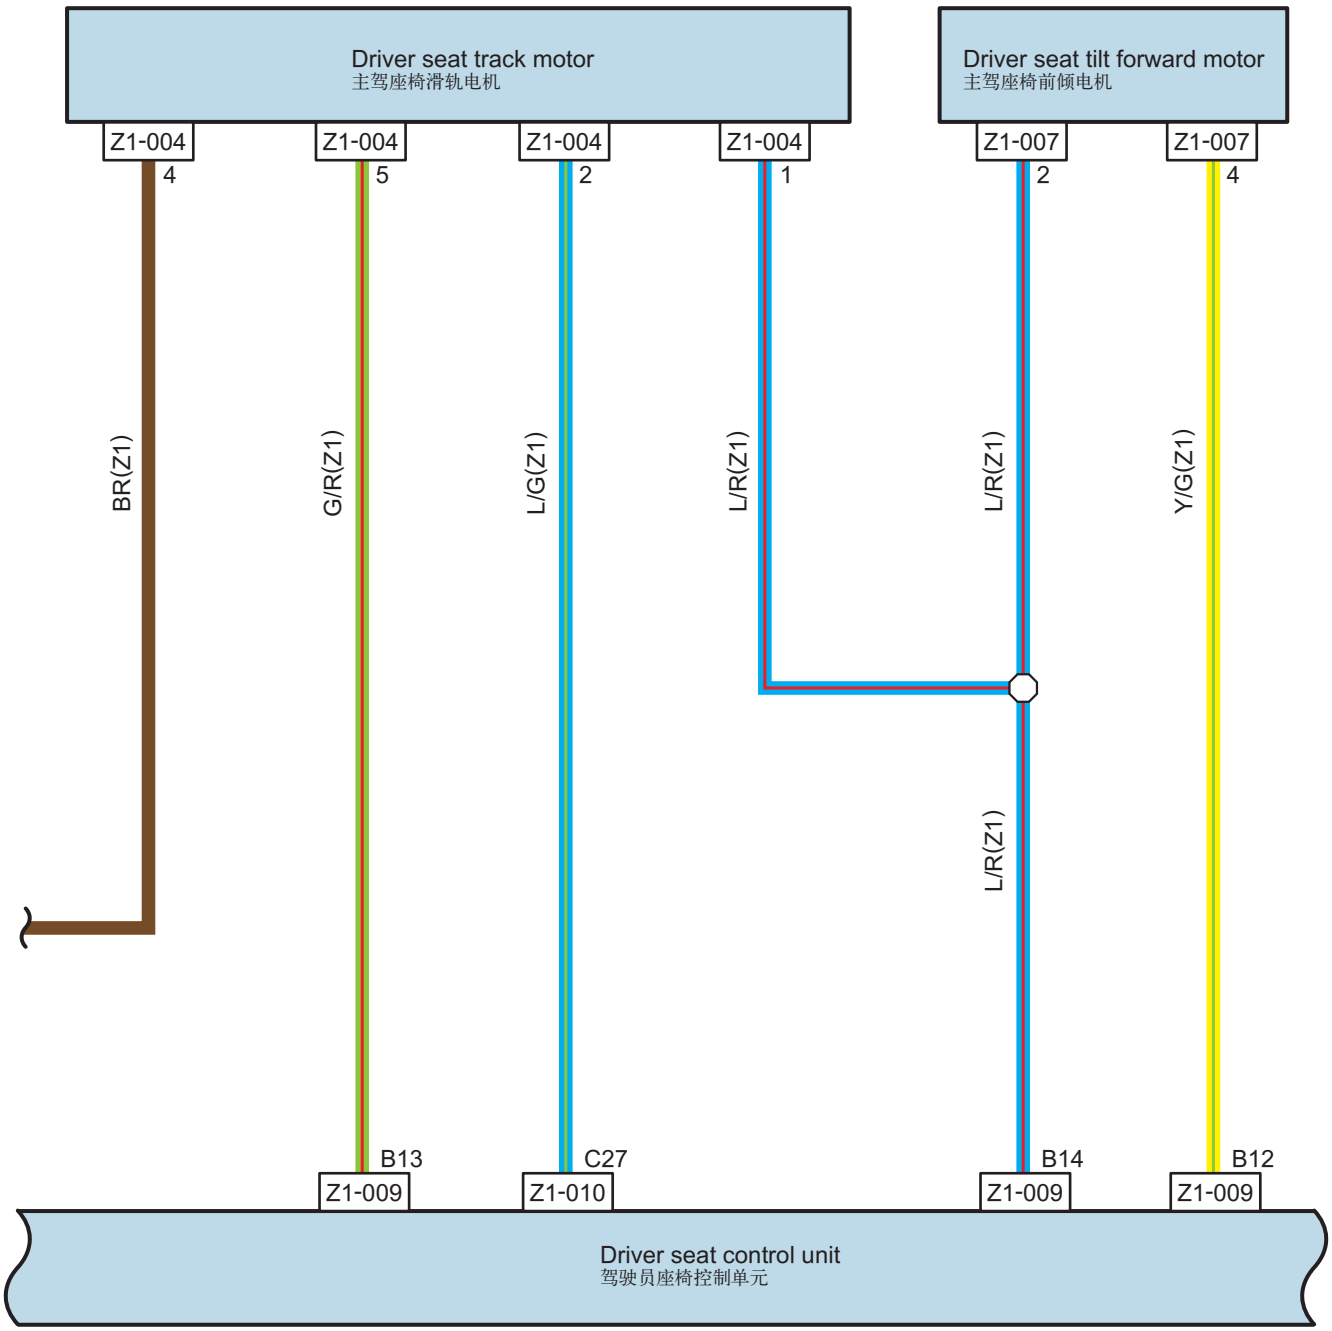

High configuration
高配
Door tweeter RL_high configuration
左后门高音扬声器_高配
Door tweeter RR_high configuration
右后门高音扬声器_高配
Door woofer FL
左前门低音扬声器
SH3-003
2
SH3-003
1
SH4-002
2
SH4-002
1
DR1-009
1
DR1-009
2
R/G(SH3)
R/L(SH3)
B/G(SH4)
R/G(SH4)
L/R(DR1)
W/L(DR1)
C-52
4
C-52
5
C-55
4
C-55
5
C-32
52
C-32
53
R/G(DR3)
R/L(DR3)
B/G(DR4)
R/G(DR4)
C-36
3
C-36
4
C-37
3
C-37
4
R/G(B)
R/L(B)
B/G(B)
R/G(B)
L/R(B)
W/L(B)
B8
B2
B9
B3
C12
C13
B-086
B-086
B-086
B-086
B-087
B-087
Power amplifier (high configuration)
功率放大器（高配）

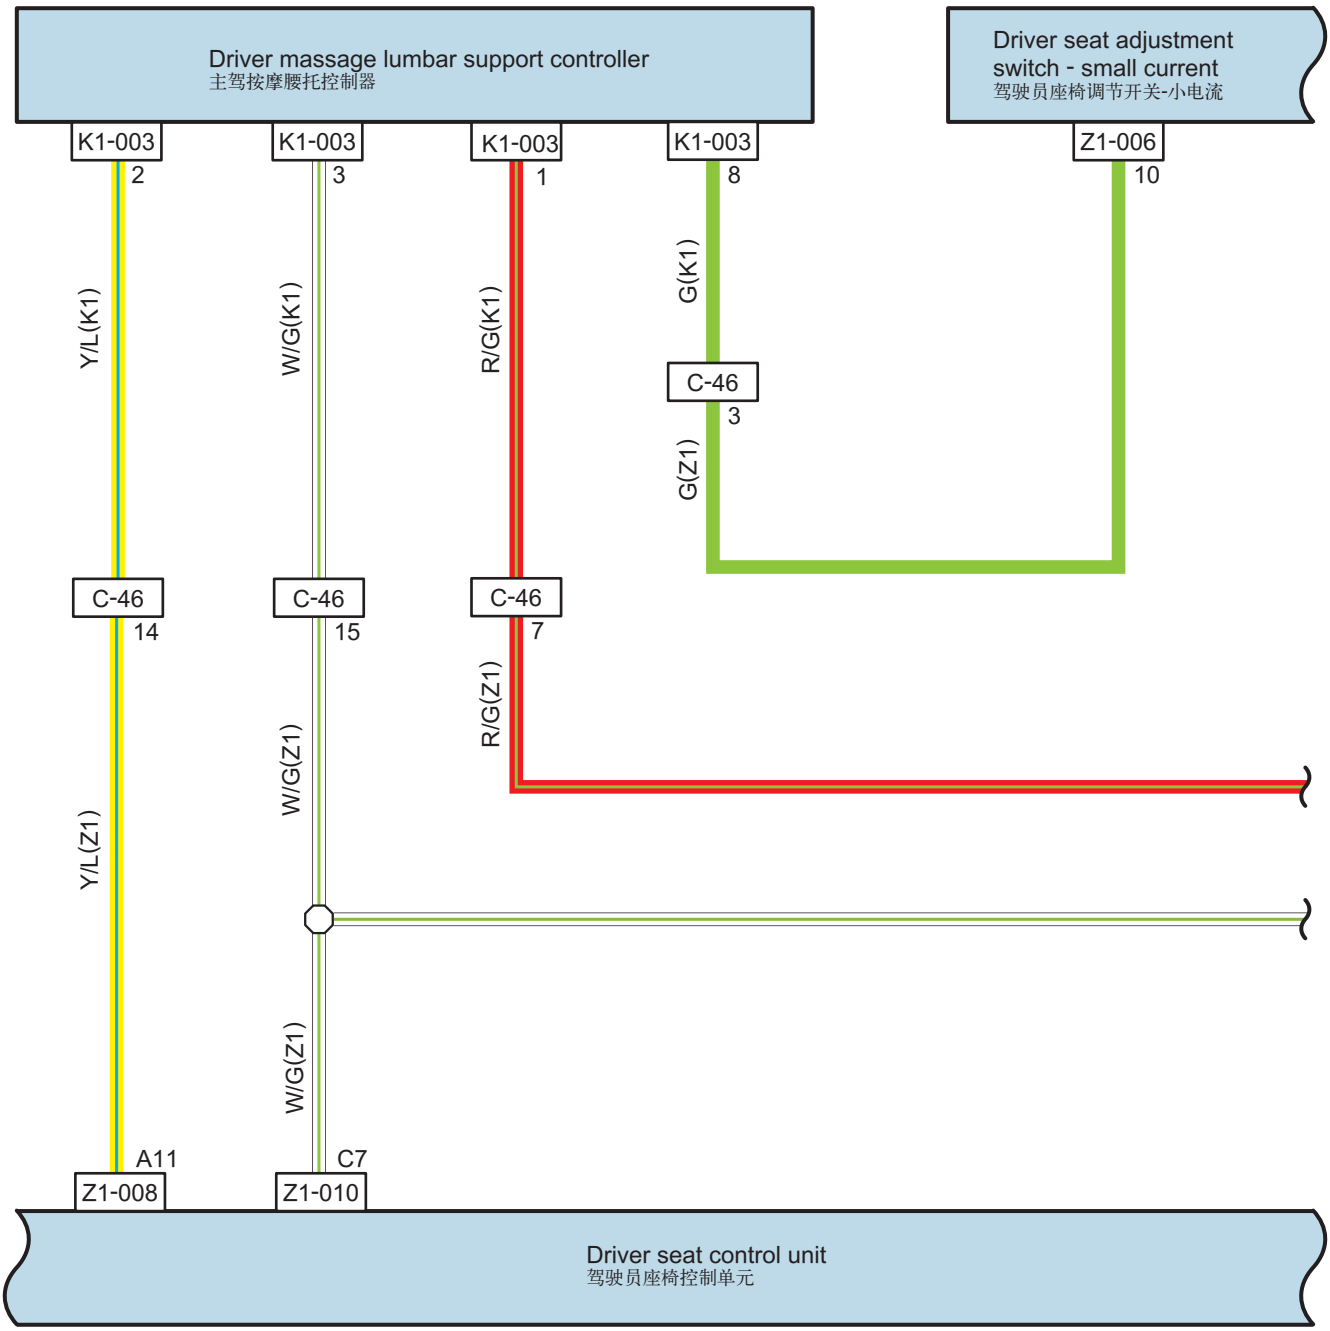

High configuration
高配
Door woofer FR
右前门低音扬声器
Door woofer RL
左后门低音扬声器
Door woofer RR
右后门低音扬声器
DR2-009
1
DR2-009
2
DR3-004
1
DR3-004
2
DR4-004
1
DR4-004
2
B/Y(DR2)
BR(DR2)
R/W(DR3)
R/Y(DR3)
R/L(DR4)
R/W(DR4)
C-33
53
C-33
54
C-36
1
C-36
15
C-37
15
C-37
16
B/Y(B)
BR(B)
R/W(B)
R/Y(B)
R/L(B)
R/W(B)
C16
C7
C14
C5
C15
C6
B-087
B-087
B-087
B-087
B-087
B-087
Power amplifier (high configuration)
功率放大器（高配）

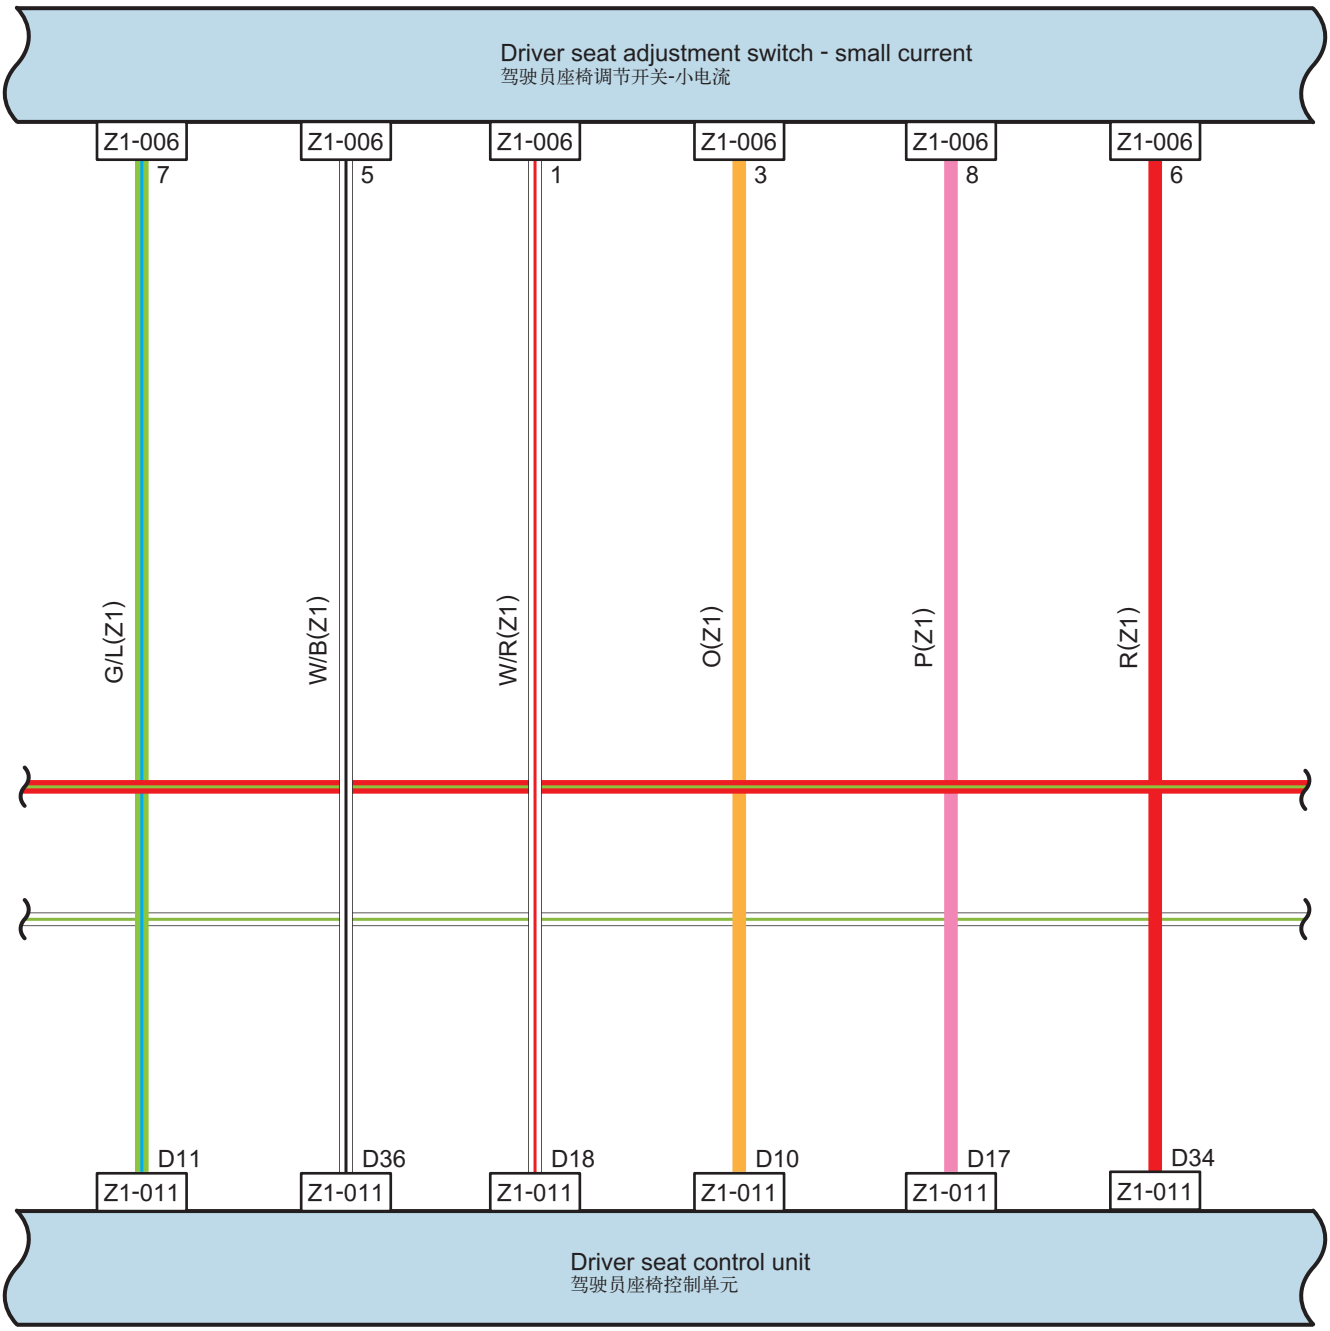

Center intelligent area control unit
中智能区域控制单元
B-029
D52
B-029
D43
B-029
D45
B-029
D36
R/W(B)
Y(B)
Y/B(B)
B/G(B)
Middle Comfort_CAN
中部舒适_CAN
V/B(I)
V/B(I)
C-41
1
C-41
2
C-41
22
C-41
12
C-23
13
C-23
12
V/B(B)
V/B(B)
C-41
13
C-41
14
R/W(Z1)
Y(Z1)
Y/B(Z1)
B/G(Z1)
V/B(Z1)
V/W(Z1)
B7
A5
A3
C11
C5
C4
Z1-009
Z1-008
Z1-008
Z1-010
Z1-010
Z1-010
Driver seat control unit
驾驶员座椅控制单元
Z1-009
B4
Z1-009
B6
B(Z1)
B(Z1)
B(Z1)
C-41
28
B(B)
55a

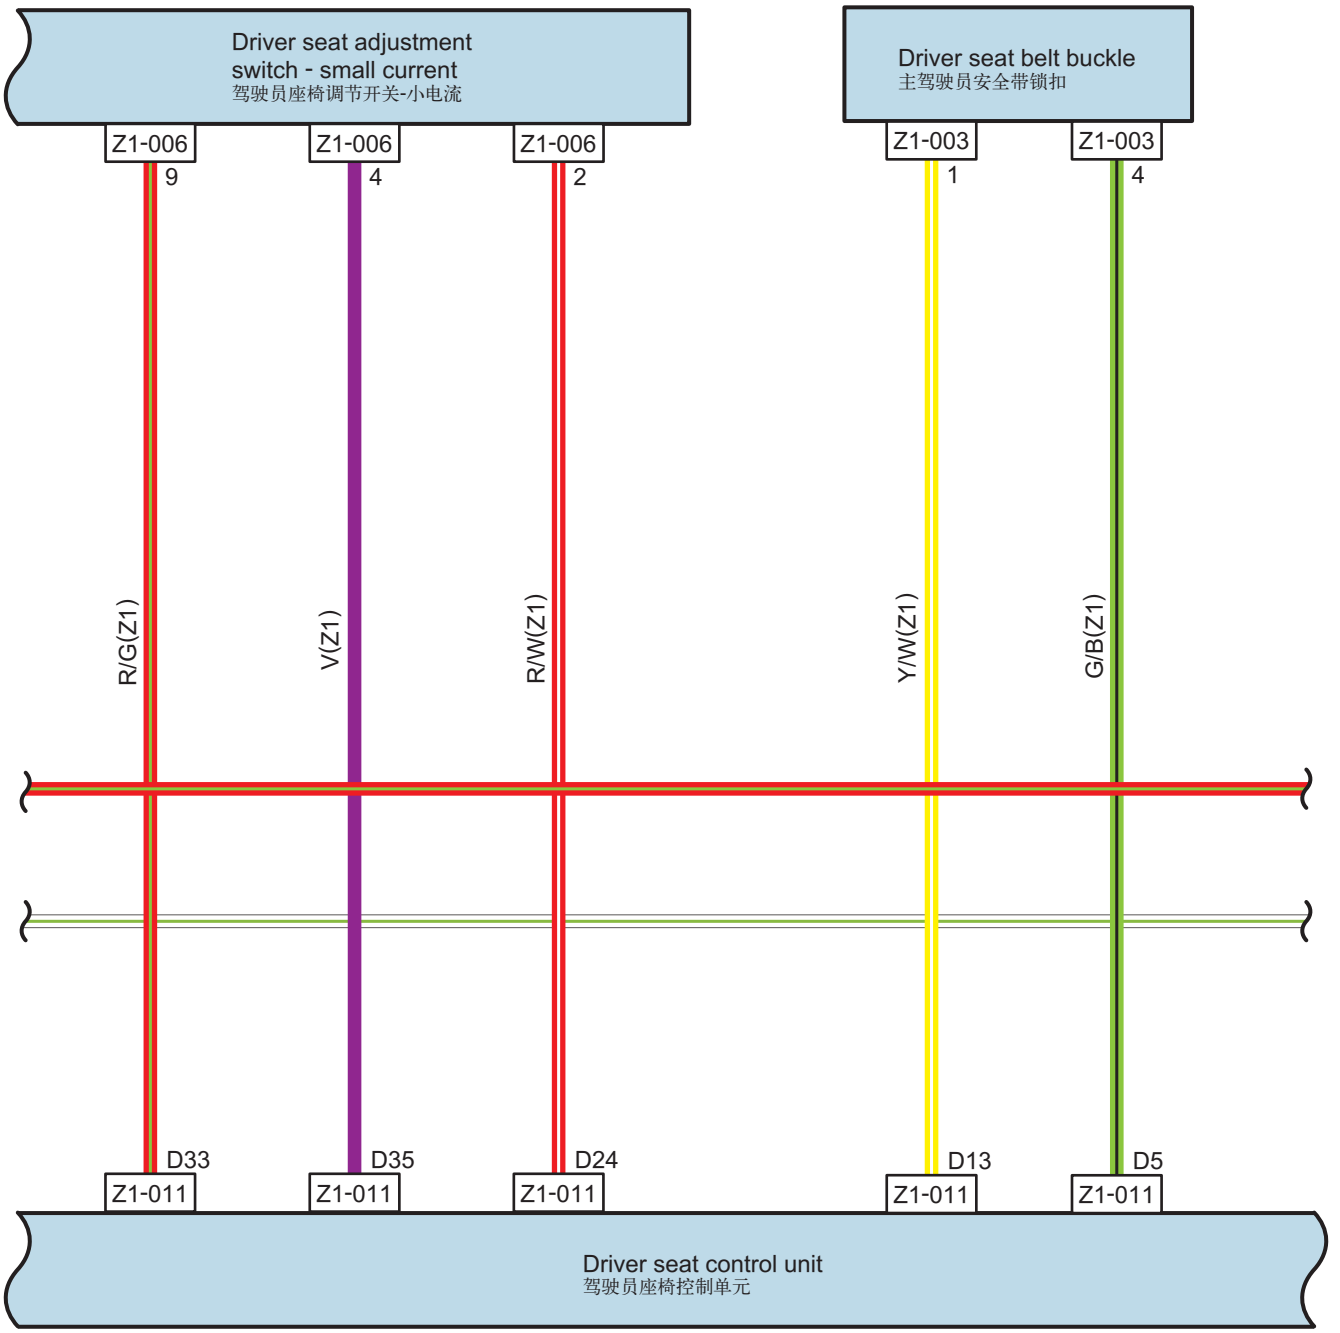

Driver seat cushion heating
主驾座椅坐垫加热
Driver seat angle adjustment motor
主驾座椅角度调节电机
Z1-002
1
Z1-002
2
Z1-002
3
Z1-002
4
K1-004
3
K1-004
1
K1-004
2
R(Z1)
B/Y(Z1)
W(Z1)
B(Z1)
C-41
11
B(B)
55b
L(K1)
BR(K1)
BR(K1)
C-46
9
C-46
8
C-46
1
L(Z1)
BR(Z1)
BR(Z1)
BR(Z1)
A7
Z1-008
C17
Z1-010
C3
Z1-010
C25
Z1-010
C19
Z1-010
B8
Z1-009
Driver seat control unit
驾驶员座椅控制单元

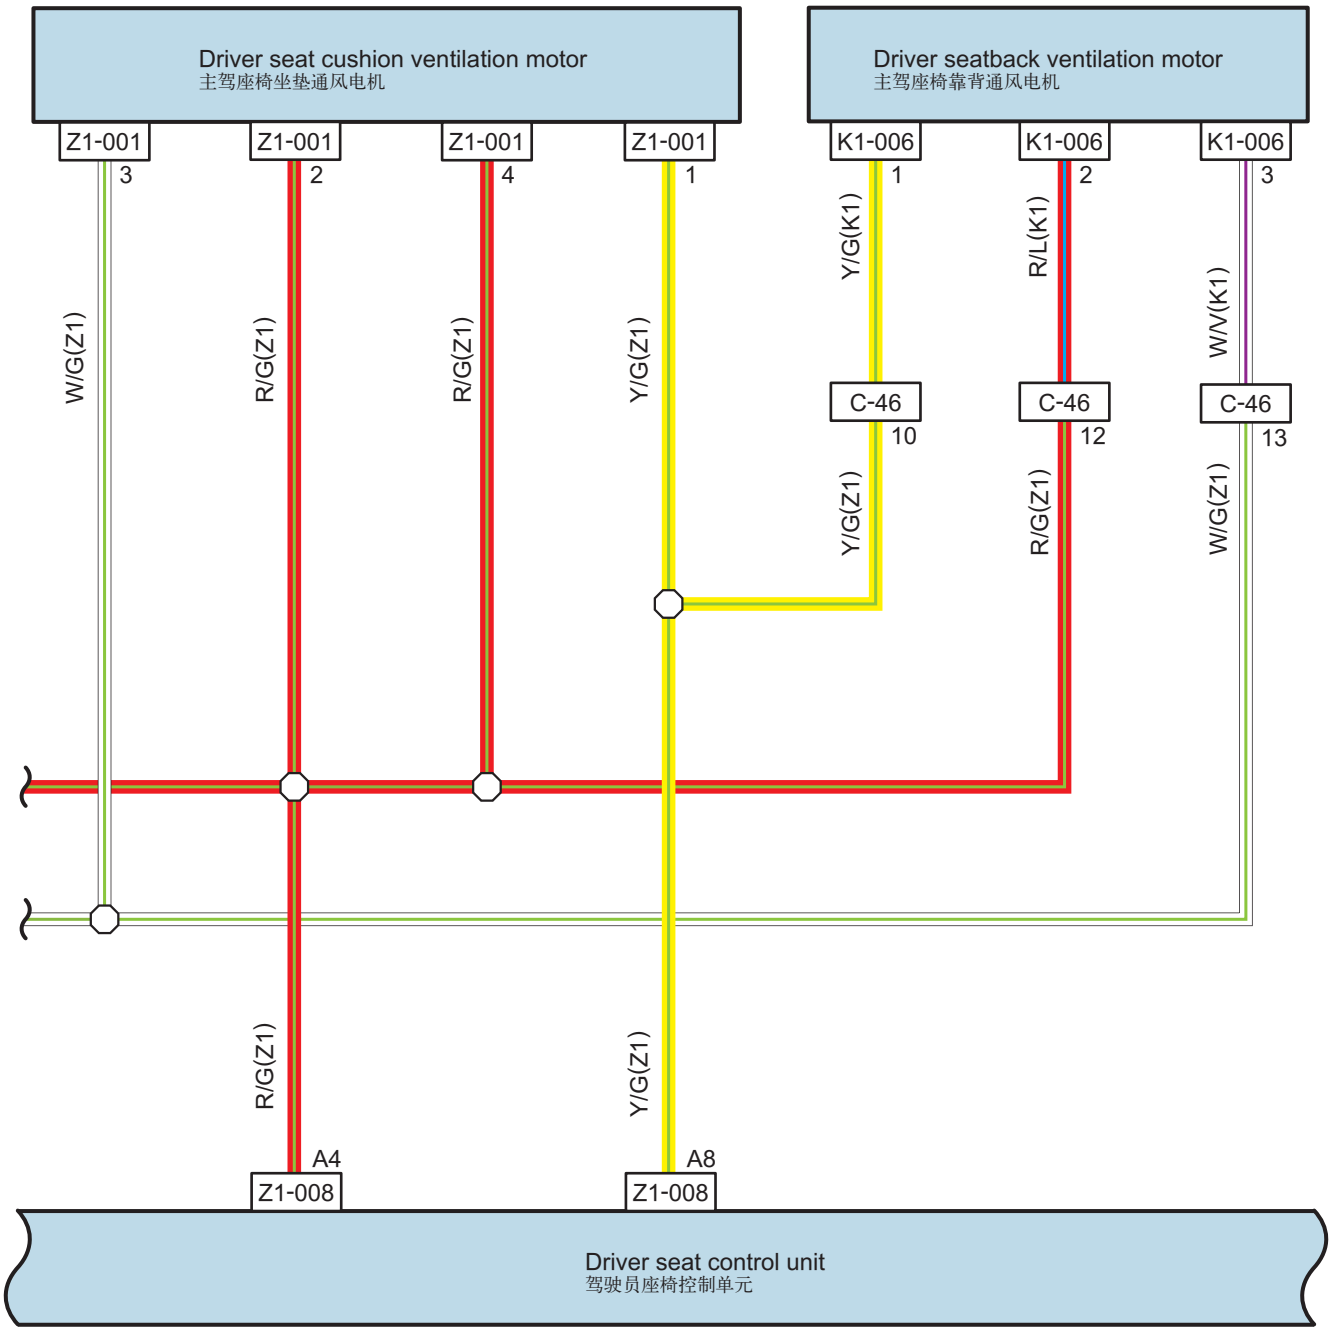

Driver seat angle adjustment motor
主驾座椅角度调节电机
K1-004
4
B/G(K1)
C-46
4
B/G(Z1)
B/G(Z1)
B1
Z1-009
Driver seat height adjustment motor
主驾座椅高调电机
Z1-005
4
B/G(Z1)
Z1-005
2
B/L(Z1)
B9
Z1-009
Z1-005
3
BR(Z1)
Z1-005
1
G(Z1)
C26
Z1-010
Driver seat control unit
驾驶员座椅控制单元

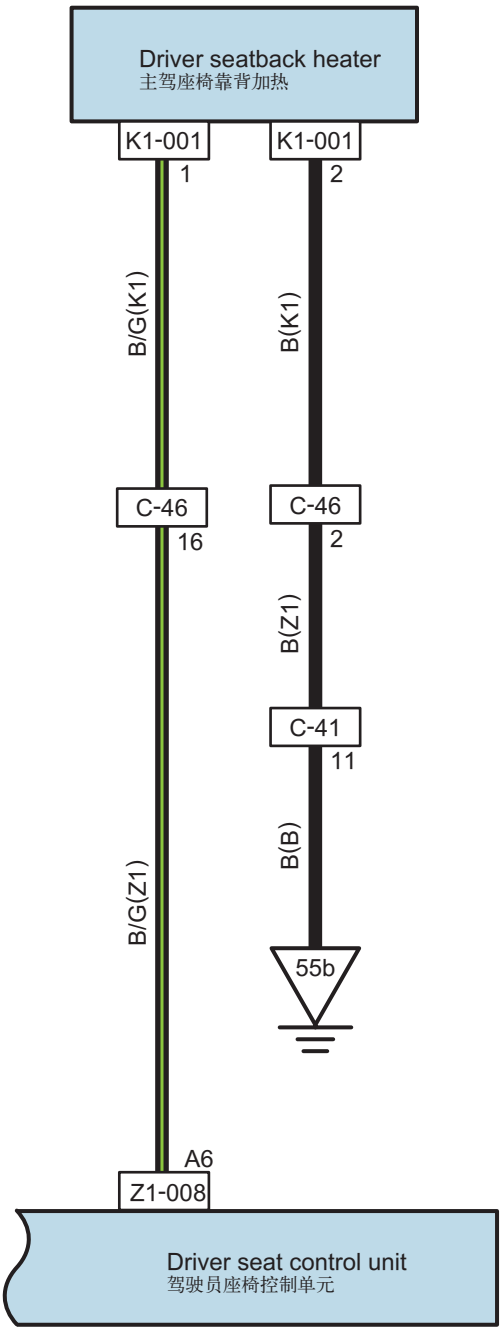

Driver seat track motor
主驾座椅滑轨电机
Driver seat tilt forward motor
主驾座椅前倾电机
Z1-004
4
Z1-004
5
Z1-004
2
Z1-004
1
Z1-007
2
Z1-007
4
BR(Z1)
G/R(Z1)
L/G(Z1)
L/R(Z1)
L/R(Z1)
L/R(Z1)
Y/G(Z1)
B13
Z1-009
C27
Z1-010
B14
Z1-009
B12
Z1-009
Driver seat control unit
驾驶员座椅控制单元

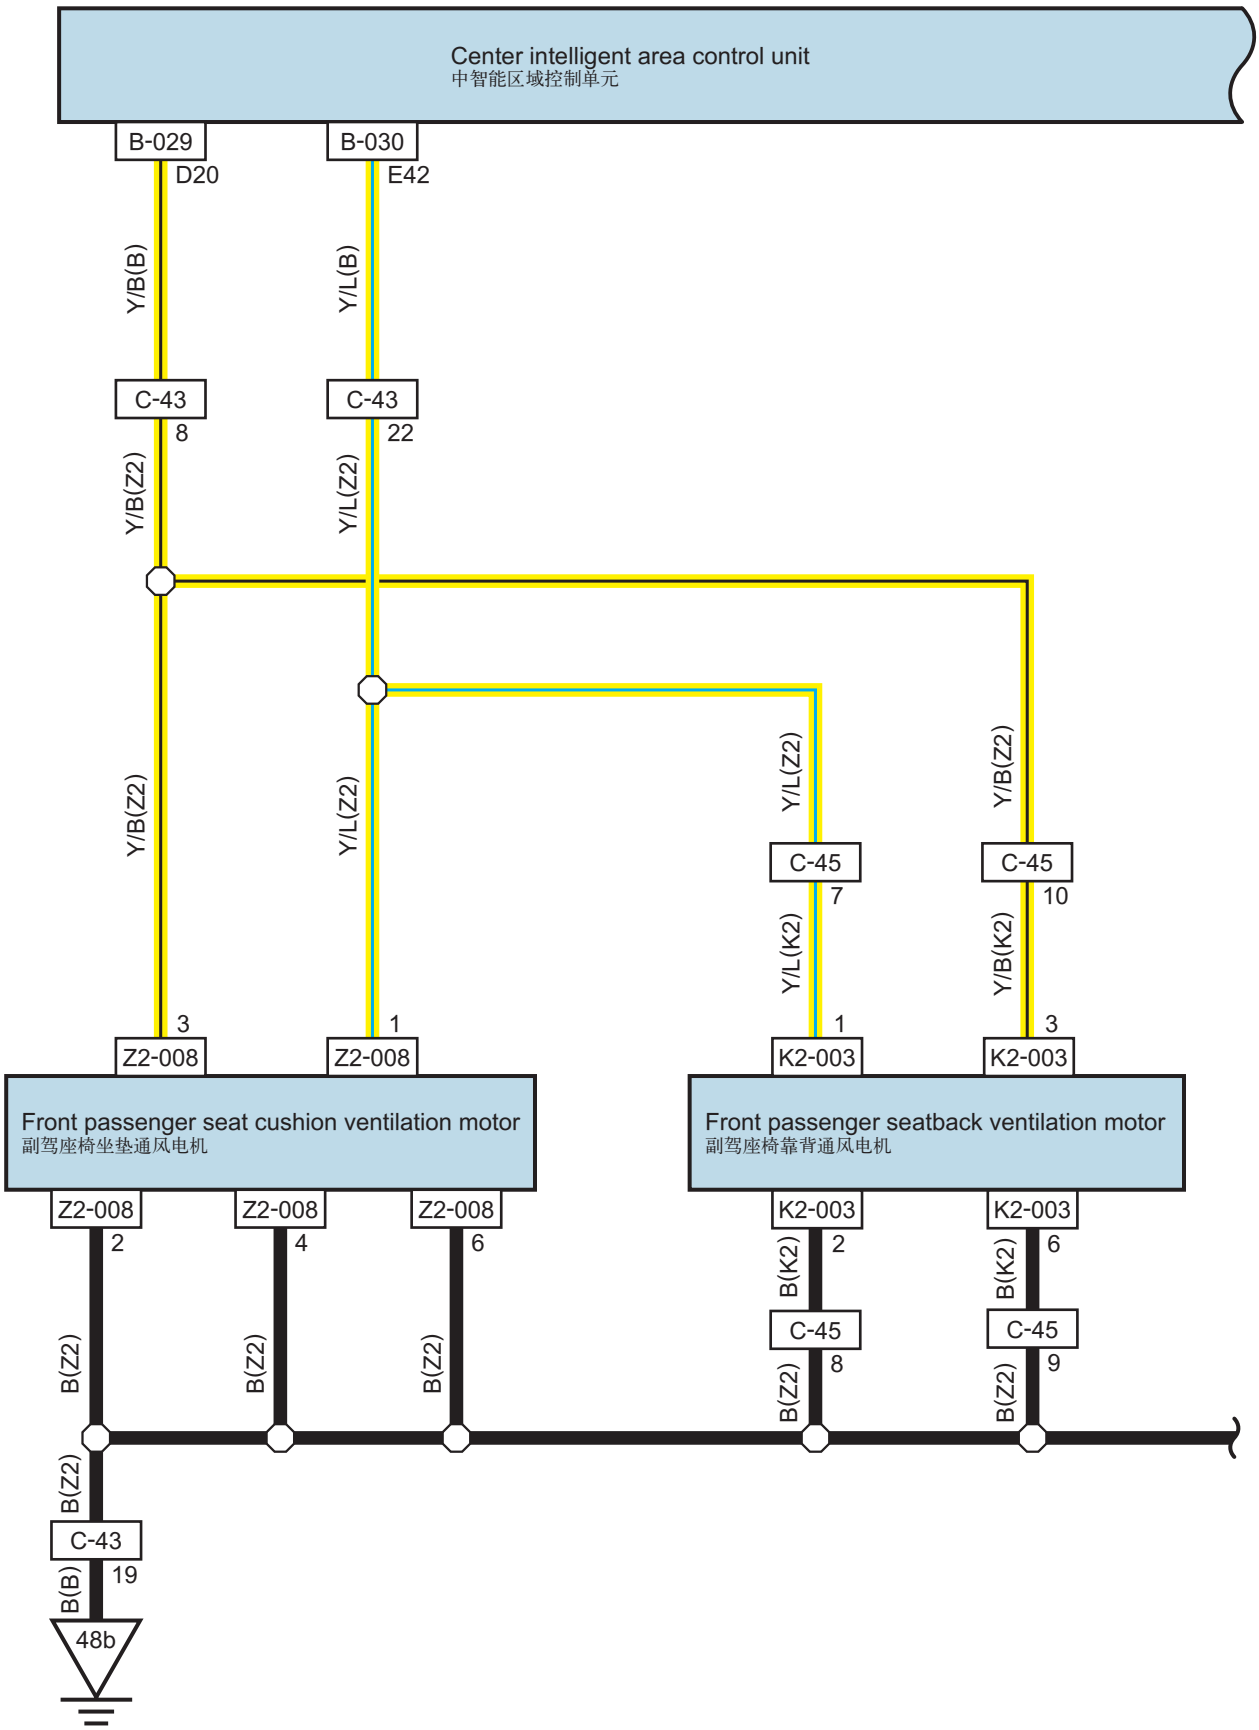

Driver massage lumbar support controller
主驾按摩腰托控制器
Driver seat adjustment switch - small current
驾驶员座椅调节开关-小电流
K1-003
2
K1-003
3
K1-003
1
K1-003
8
Z1-006
10
Y/L(K1)
W/G(K1)
R/G(K1)
G(K1)
C-46
3
G(Z1)
C-46
14
C-46
15
C-46
7
R/G(Z1)
W/G(Z1)
Y/L(Z1)
W/G(Z1)
A11
C7
Z1-008
Z1-010
Driver seat control unit
驾驶员座椅控制单元

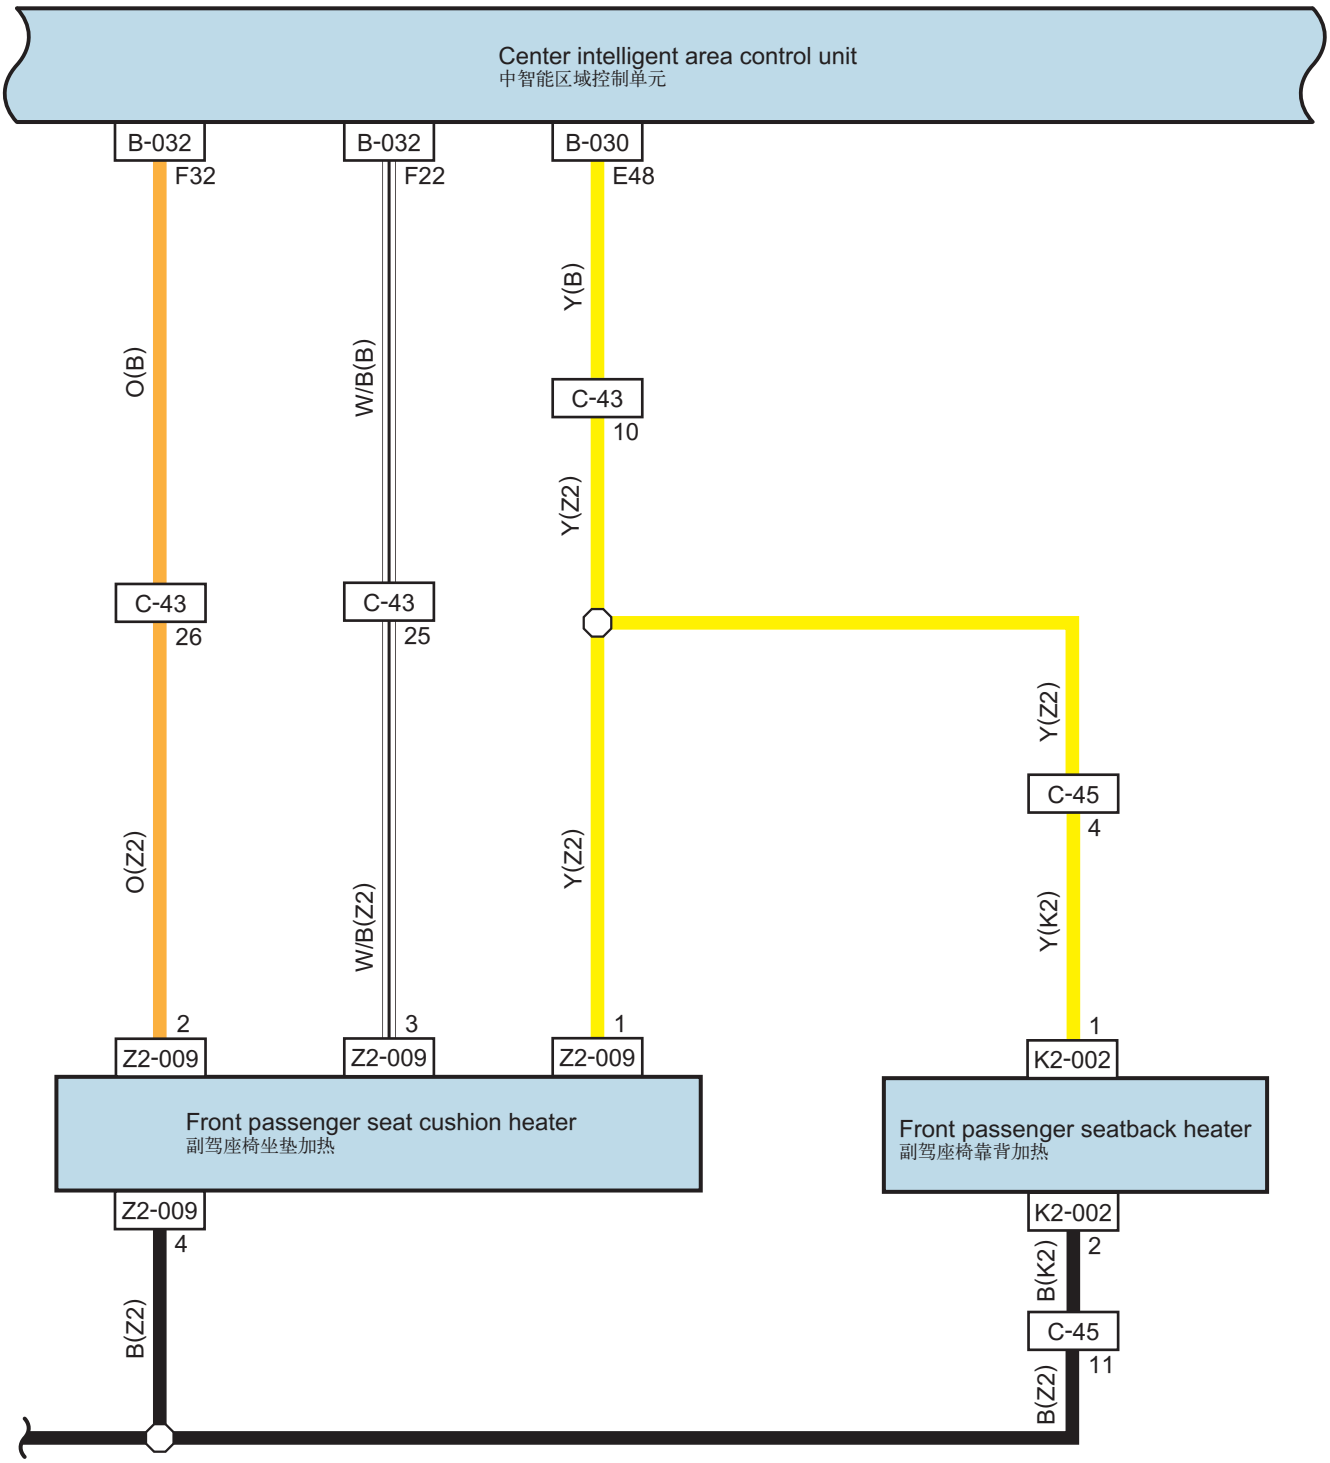

Driver seat adjustment switch - small current
驾驶员座椅调节开关-小电流
Z1-006
7
5
1
3
8
6
G/L(Z1)
W/B(Z1)
W/R(Z1)
O(Z1)
P(Z1)
R(Z1)
D11
D36
D18
D10
D17
D34
Z1-011
Driver seat control unit
驾驶员座椅控制单元

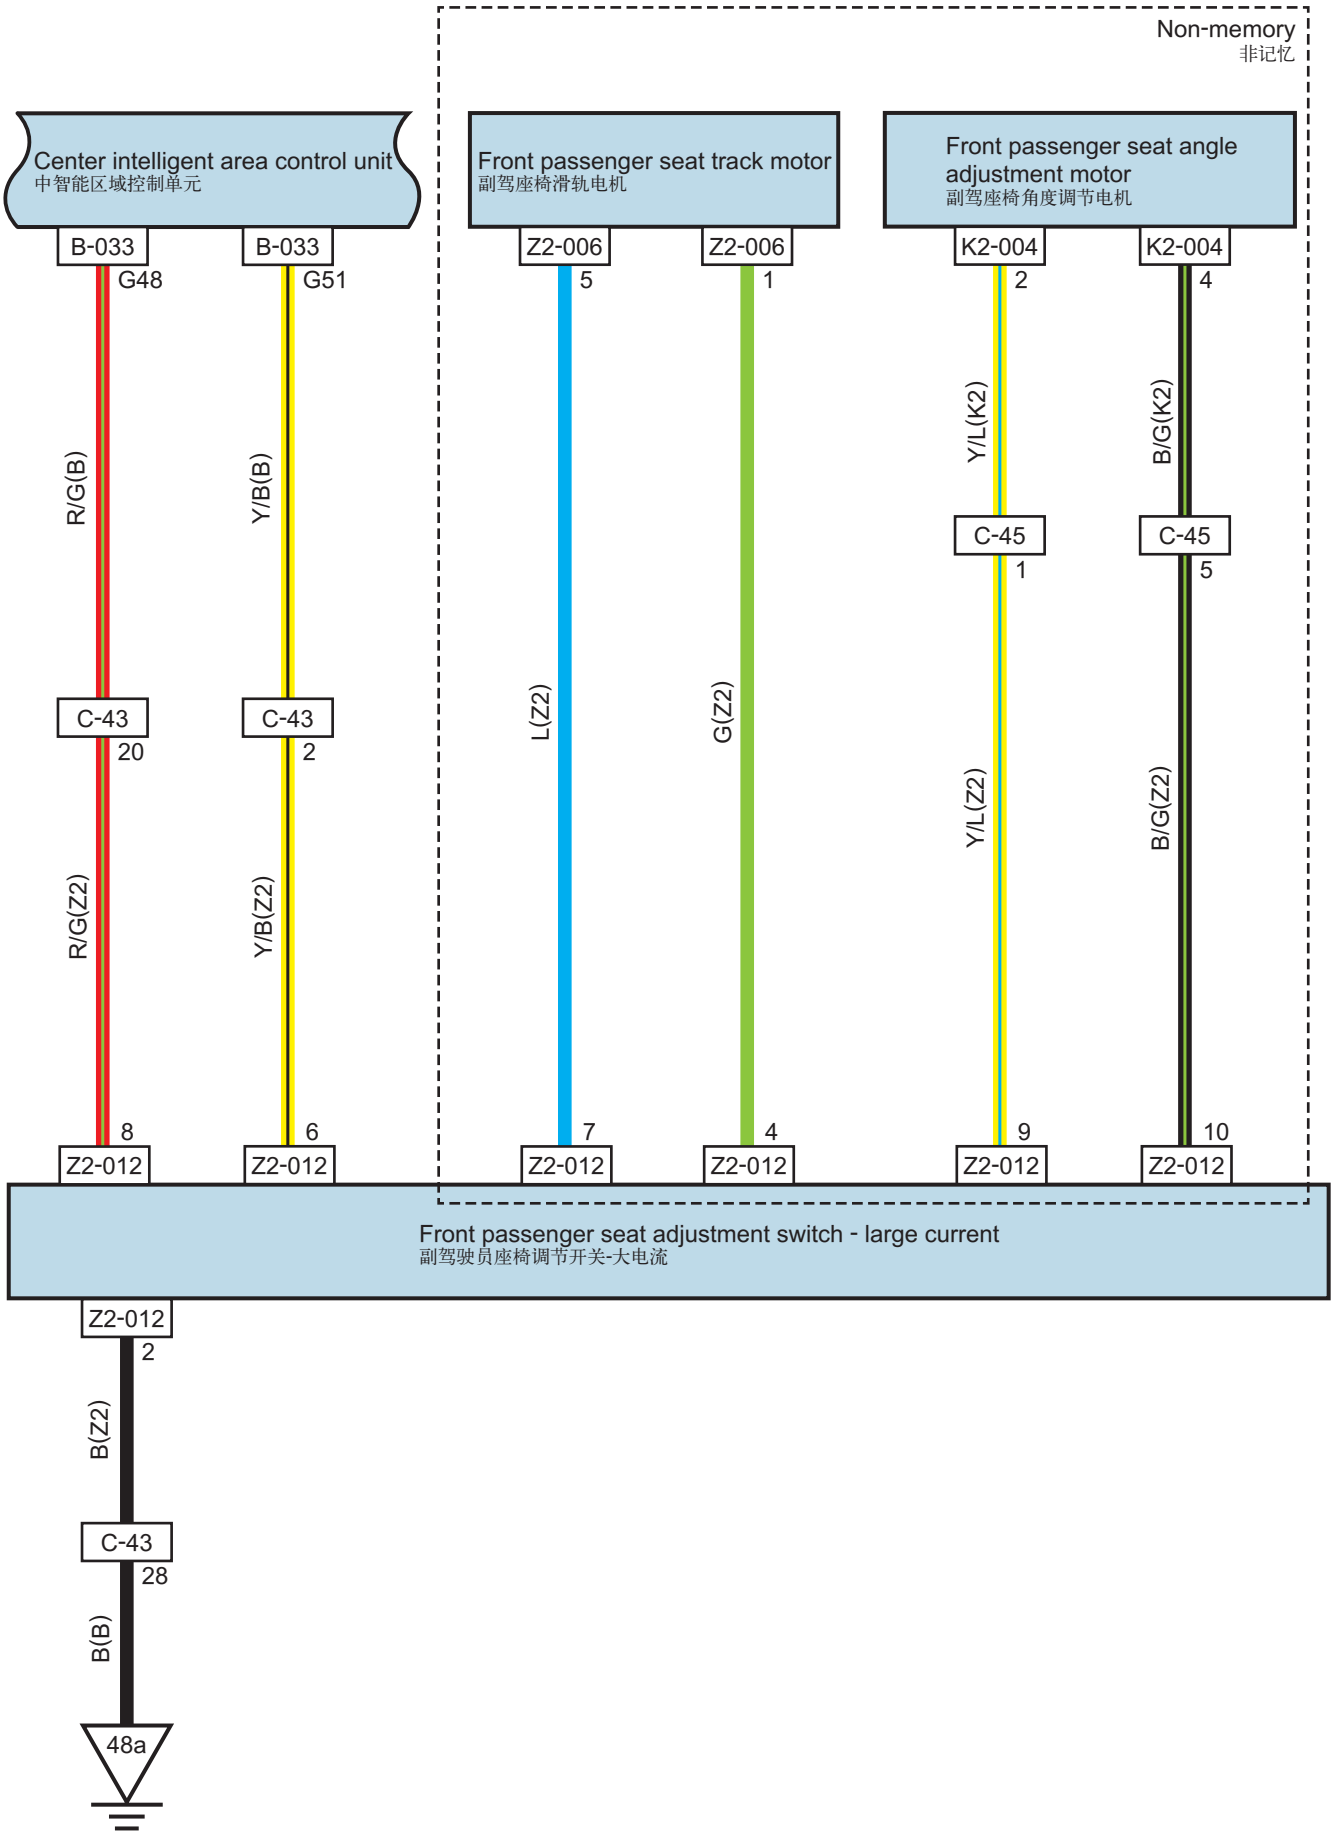

Driver seat adjustment switch - small current
驾驶员座椅调节开关-小电流
Driver seat belt buckle
主驾驶员安全带锁扣
Z1-006
9
Z1-006
4
Z1-006
2
Z1-003
1
Z1-003
4
R/G(Z1)
V(Z1)
R/W(Z1)
Y/W(Z1)
G/B(Z1)
D33
Z1-011
D35
Z1-011
D24
Z1-011
D13
Z1-011
D5
Z1-011
Driver seat control unit
驾驶员座椅控制单元

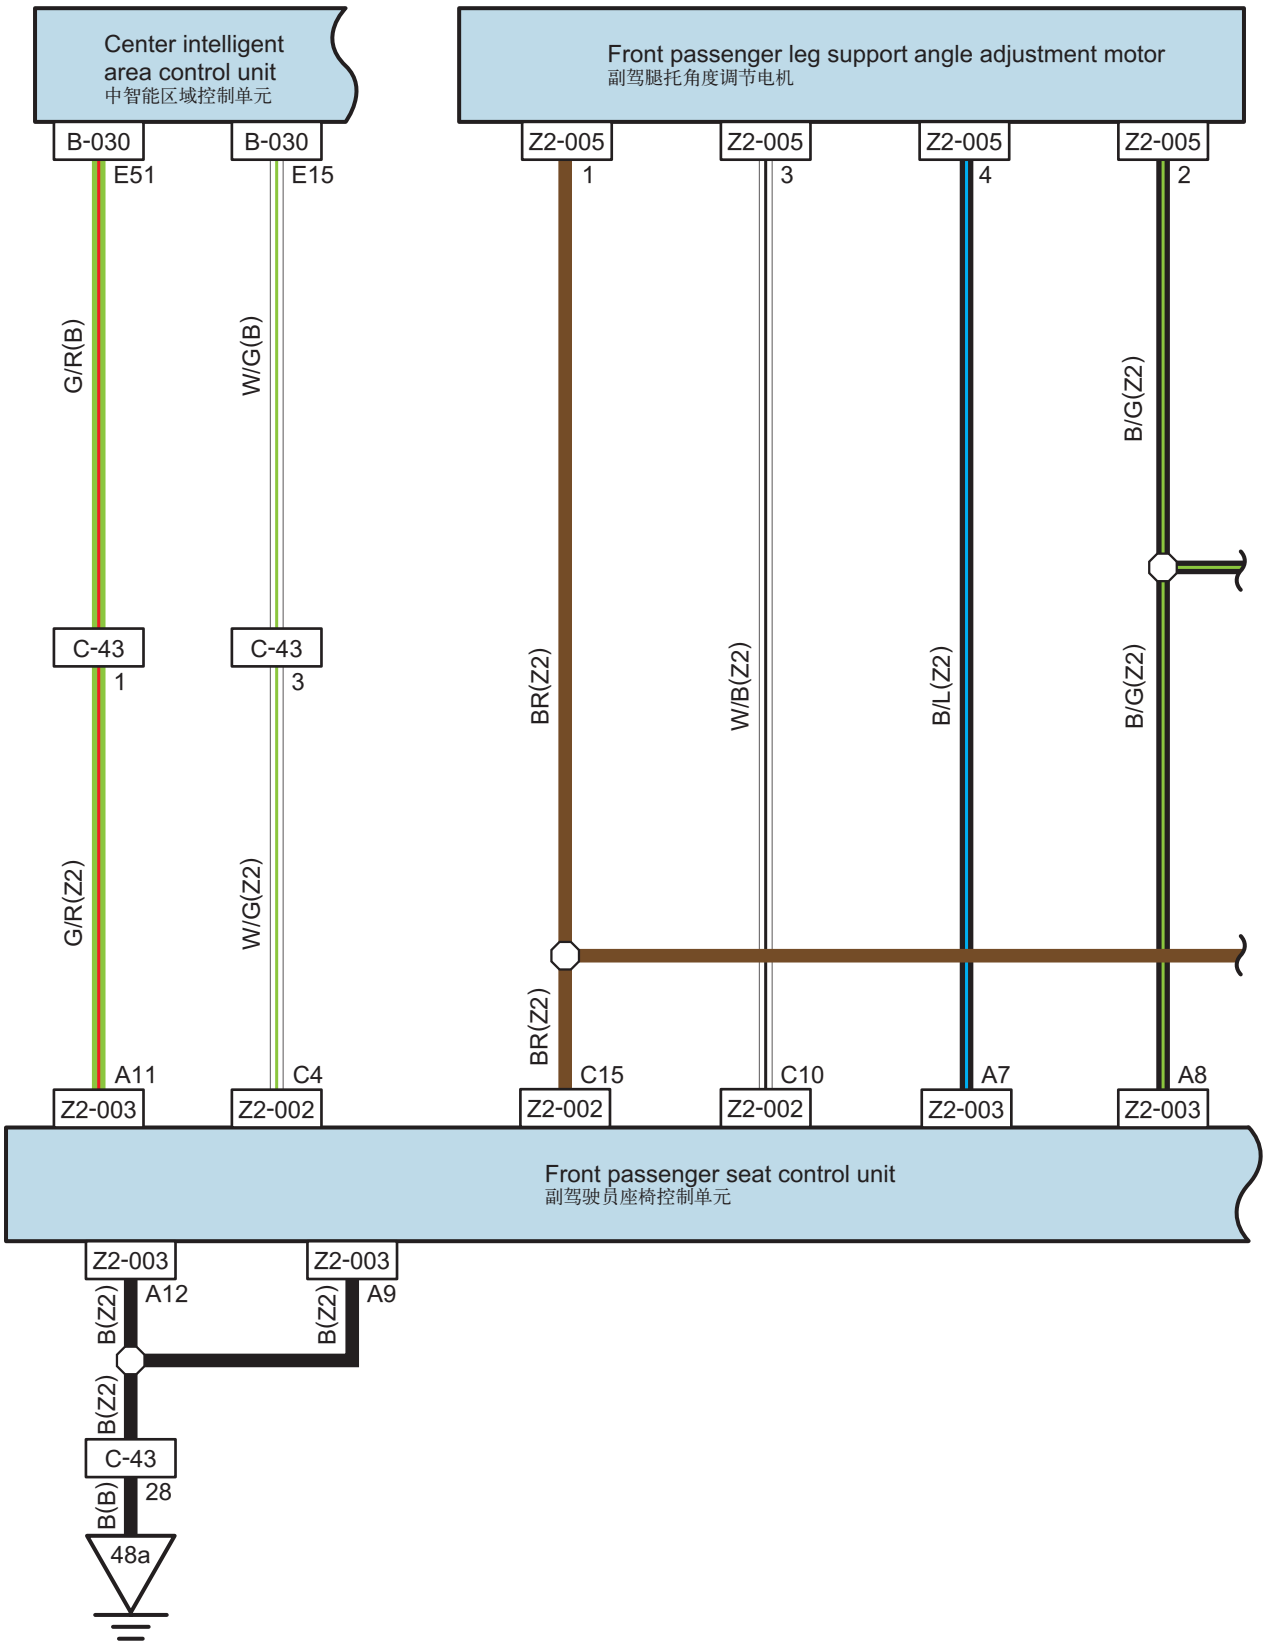

Driver seat cushion ventilation motor
主驾座椅坐垫通风电机
Driver seatback ventilation motor
主驾座椅靠背通风电机
Z1-001
3
Z1-001
2
Z1-001
4
Z1-001
1
K1-006
1
K1-006
2
K1-006
3
W/G(Z1)
R/G(Z1)
R/G(Z1)
Y/G(Z1)
Y/G(K1)
R/L(K1)
W/V(K1)
C-46
10
C-46
12
C-46
13
Y/G(Z1)
R/G(Z1)
W/G(Z1)
R/G(Z1)
Y/G(Z1)
A4
A8
Z1-008
Z1-008
Driver seat control unit
驾驶员座椅控制单元

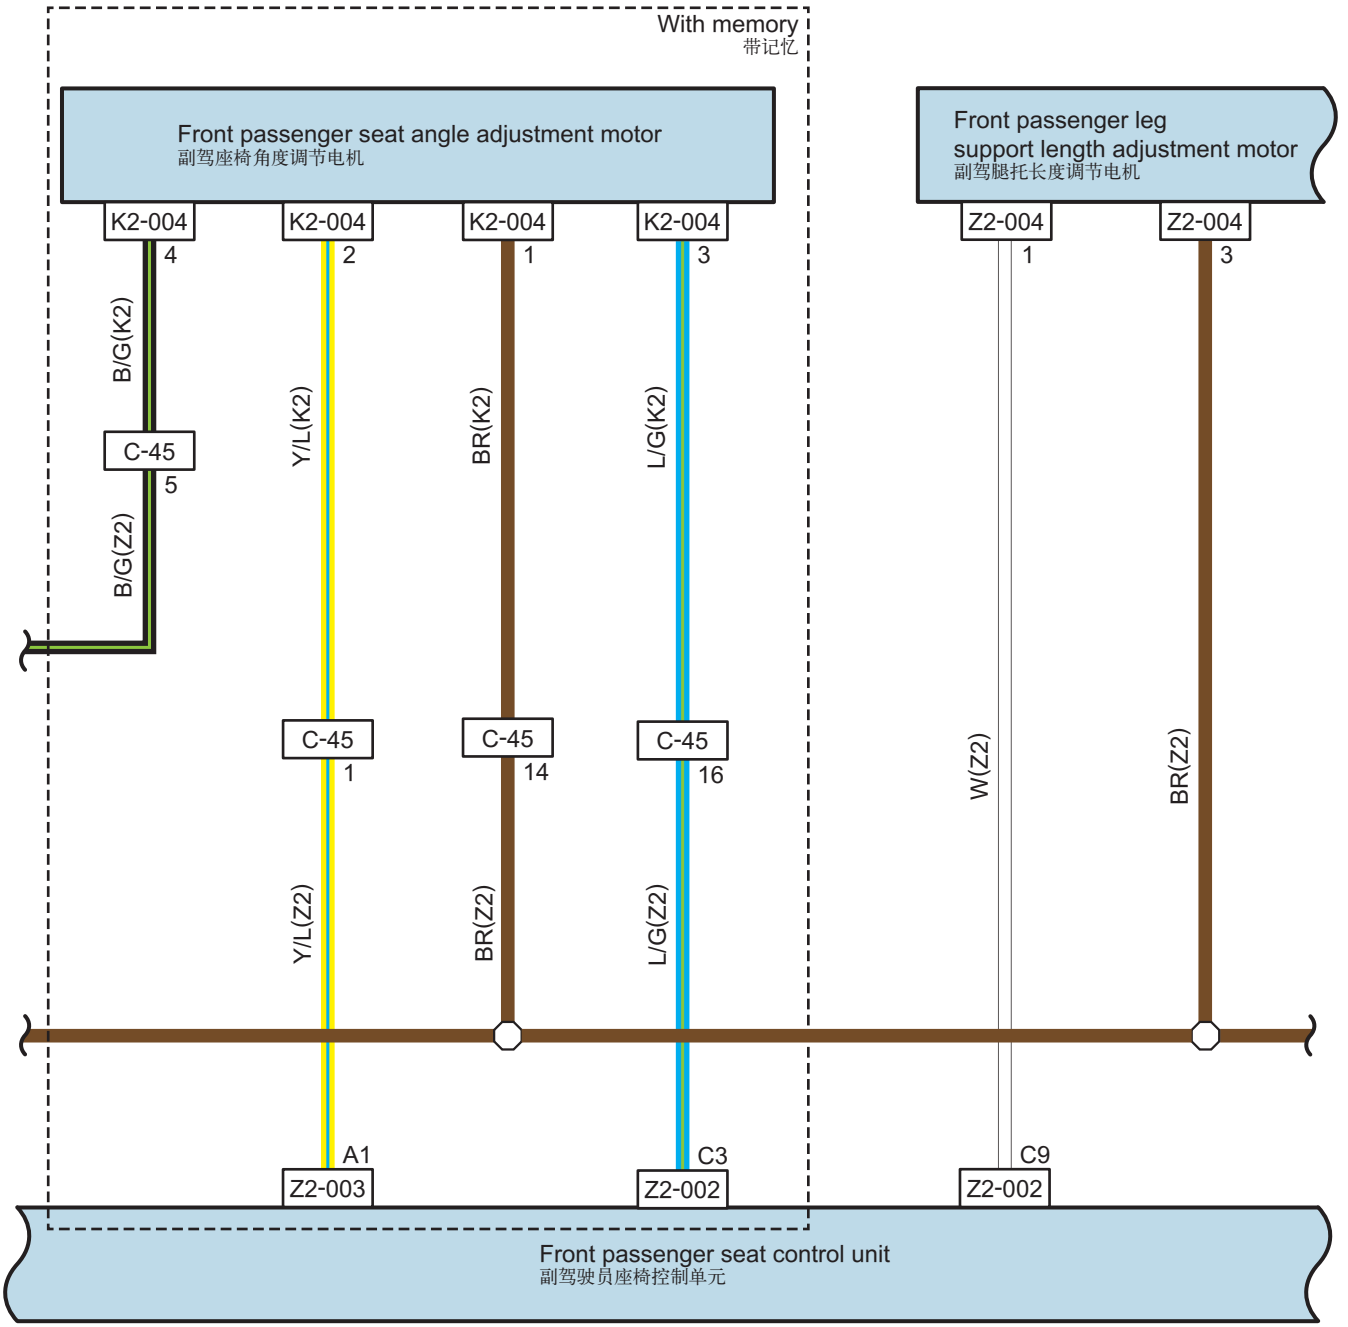

Driver seatback heater
主驾座椅靠背加热
K1-001
1
K1-001
2
B/G(K1)
B(K1)
C-46
16
C-46
2
B(Z1)
C-41
11
B(B)
55b
B/G(Z1)
A6
Z1-008
Driver seat control unit
驾驶员座椅控制单元

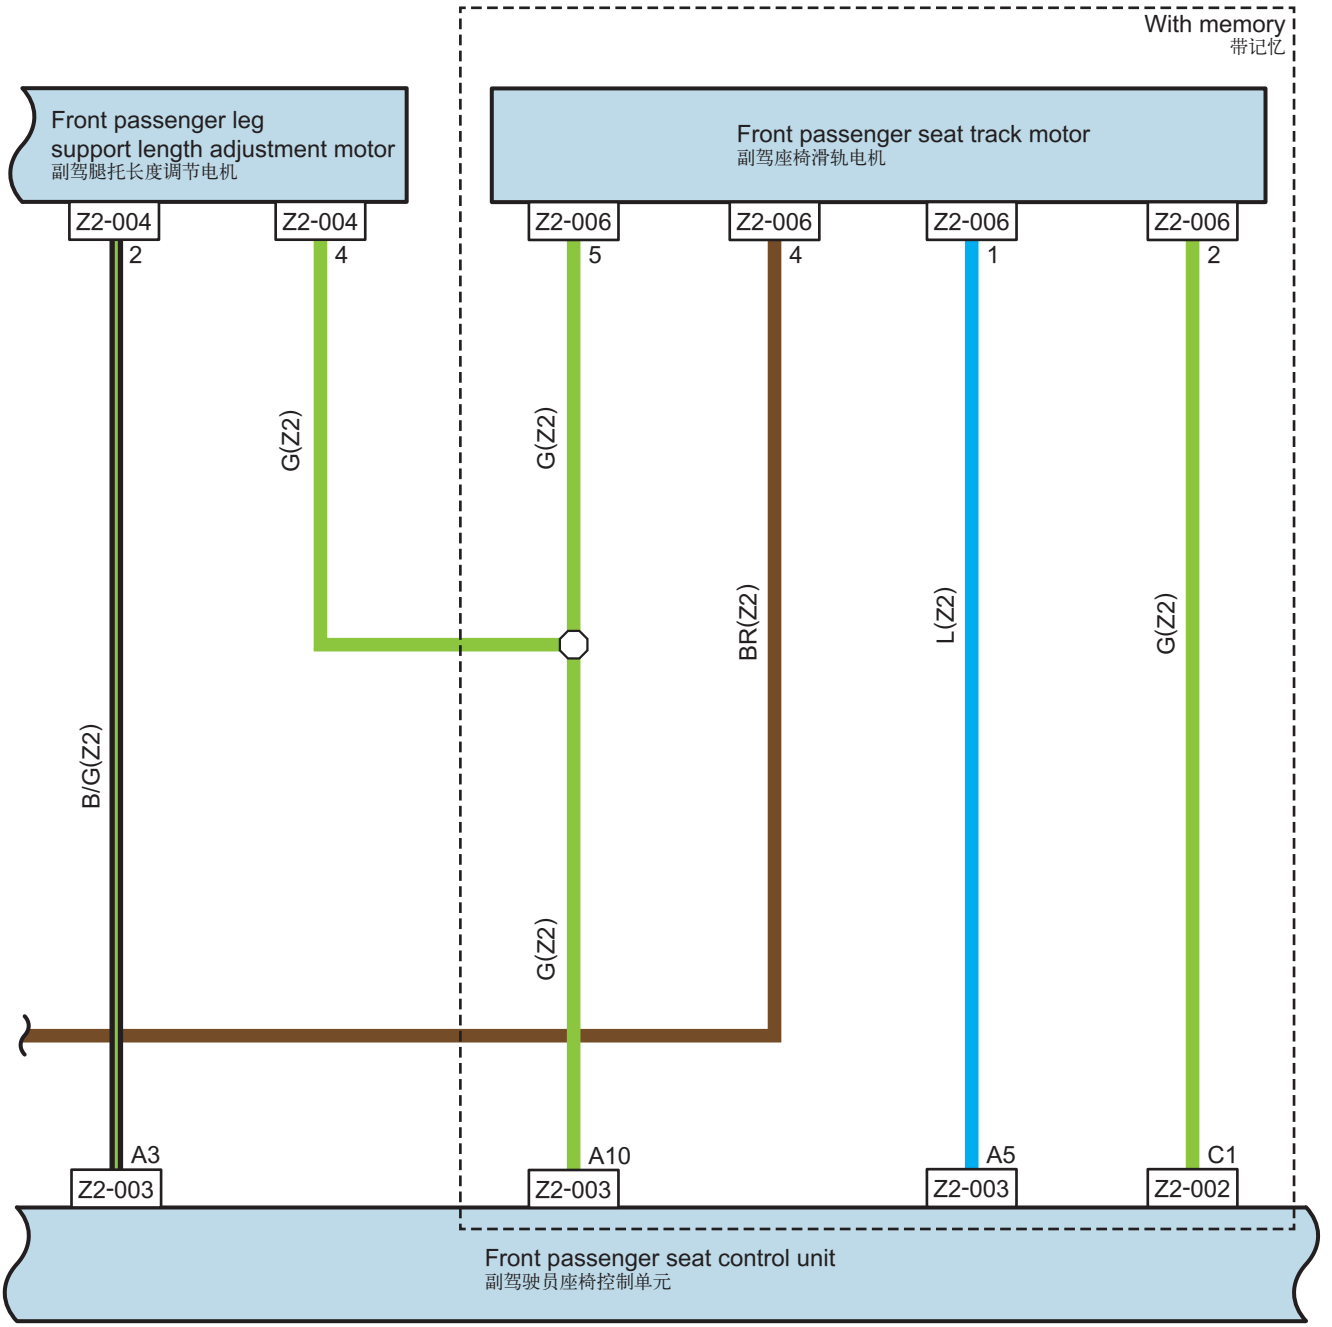

Center intelligent area control unit
中智能区域控制单元
B-029
D20
B-030
E42
Y/B(B)
Y/L(B)
C-43
8
C-43
22
Y/B(Z2)
Y/L(Z2)
Y/B(Z2)
Y/L(Z2)
Y/L(Z2)
Y/B(Z2)
C-45
7
C-45
10
Y/L(K2)
Y/B(K2)
3
1
1
3
Z2-008
Z2-008
K2-003
K2-003
Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Z2-008
2
Z2-008
4
Z2-008
6
K2-003
2
K2-003
6
B(Z2)
B(Z2)
B(Z2)
B(K2)
B(K2)
C-45
8
C-45
9
B(Z2)
B(Z2)
B(Z2)
C-43
19
B(B)
48b

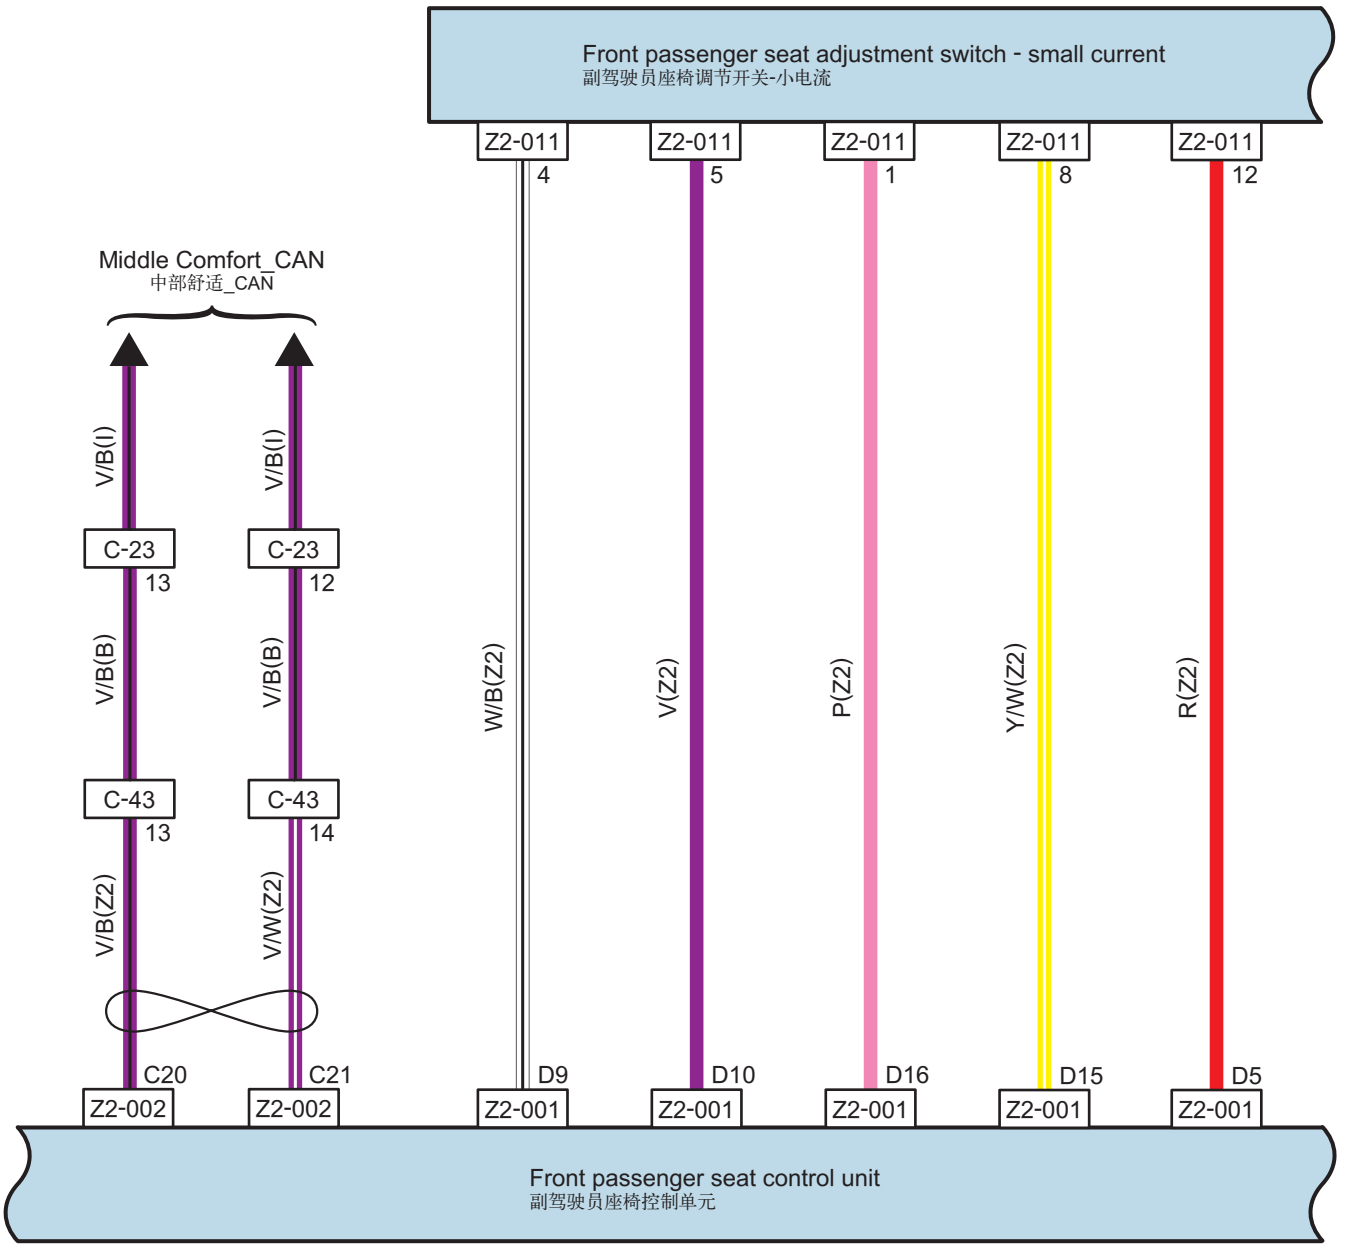

Center intelligent area control unit
中智能区域控制单元
B-032
F32
B-032
F22
B-030
E48
O(B)
W/B(B)
Y(B)
C-43
10
Y(Z2)
C-43
26
C-43
25
O(Z2)
W/B(Z2)
Y(Z2)
Y(Z2)
C-45
4
Y(K2)
2
3
1
1
Z2-009
Z2-009
Z2-009
K2-002
Front passenger seat cushion heater
副驾座椅坐垫加热
Front passenger seatback heater
副驾座椅靠背加热
Z2-009
4
K2-002
2
B(K2)
C-45
11
B(Z2)
B(Z2)

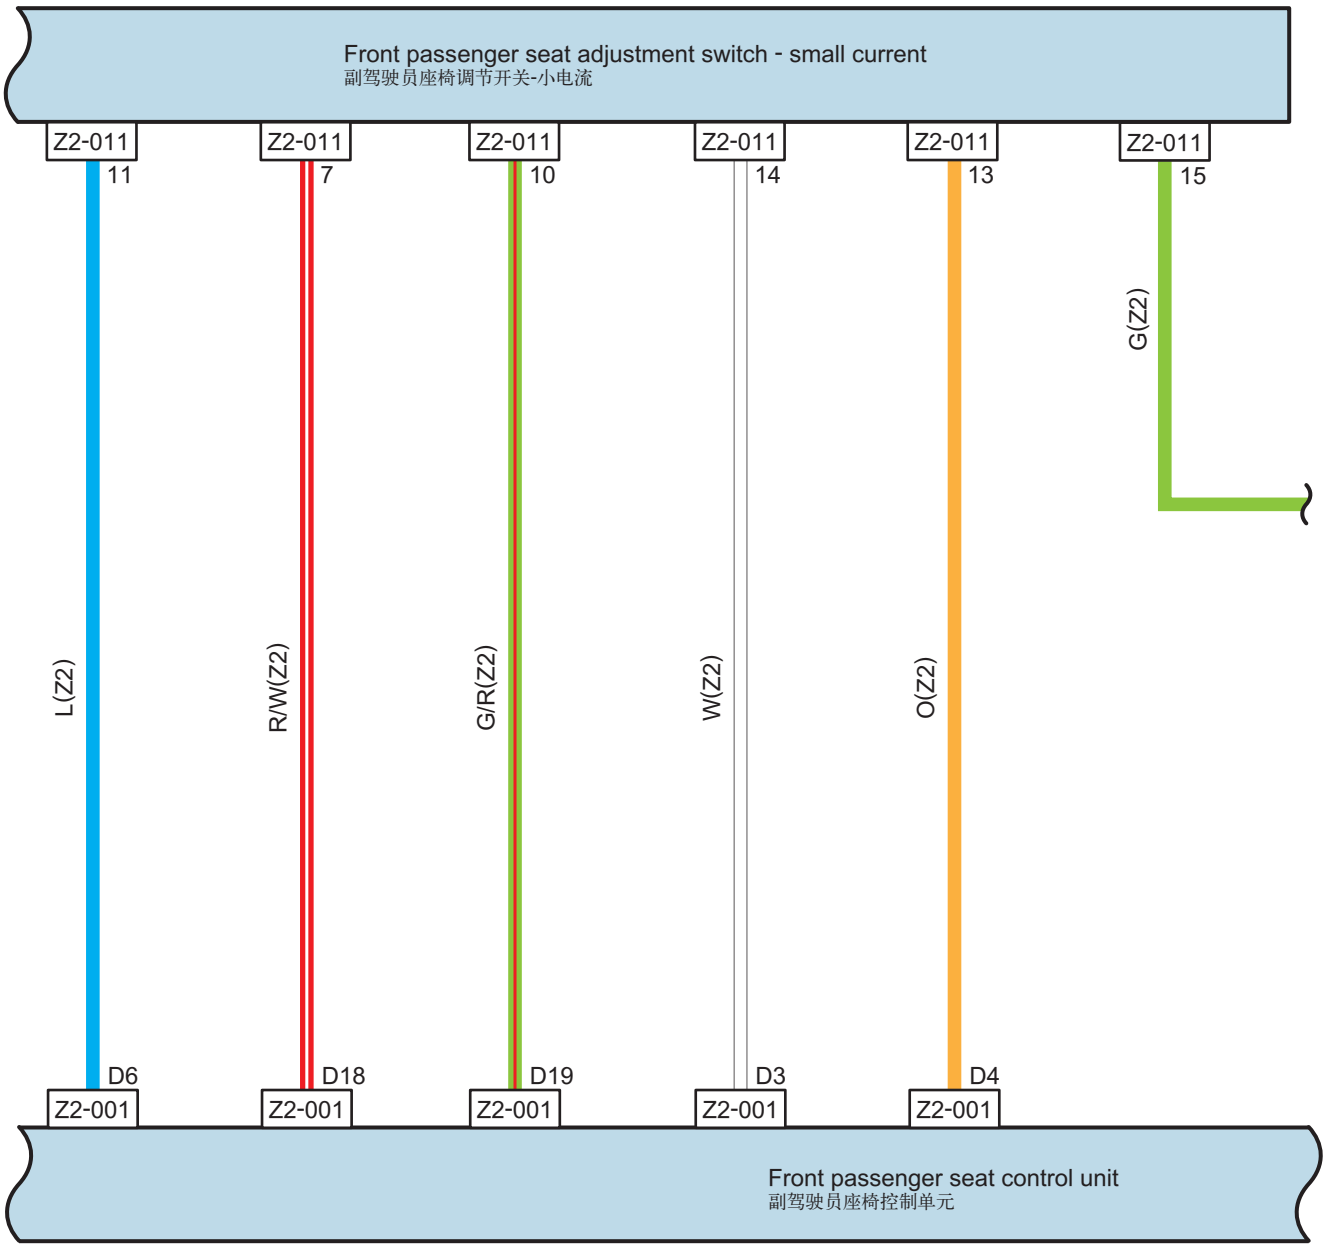

Non-memory
非记忆
Center intelligent area control unit
中智能区域控制单元
Front passenger seat track motor
副驾座椅滑轨电机
Front passenger seat angle adjustment motor
副驾座椅角度调节电机
B-033
G48
B-033
G51
Z2-006
5
Z2-006
1
K2-004
2
K2-004
4
R/G(B)
Y/B(B)
L(Z2)
G(Z2)
Y/L(K2)
B/G(K2)
C-45
1
C-45
5
C-43
20
C-43
2
R/G(Z2)
Y/B(Z2)
Y/L(Z2)
B/G(Z2)
8
6
7
4
9
10
Z2-012
Z2-012
Z2-012
Z2-012
Z2-012
Z2-012
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流
Z2-012
2
B(Z2)
C-43
28
B(B)
48a

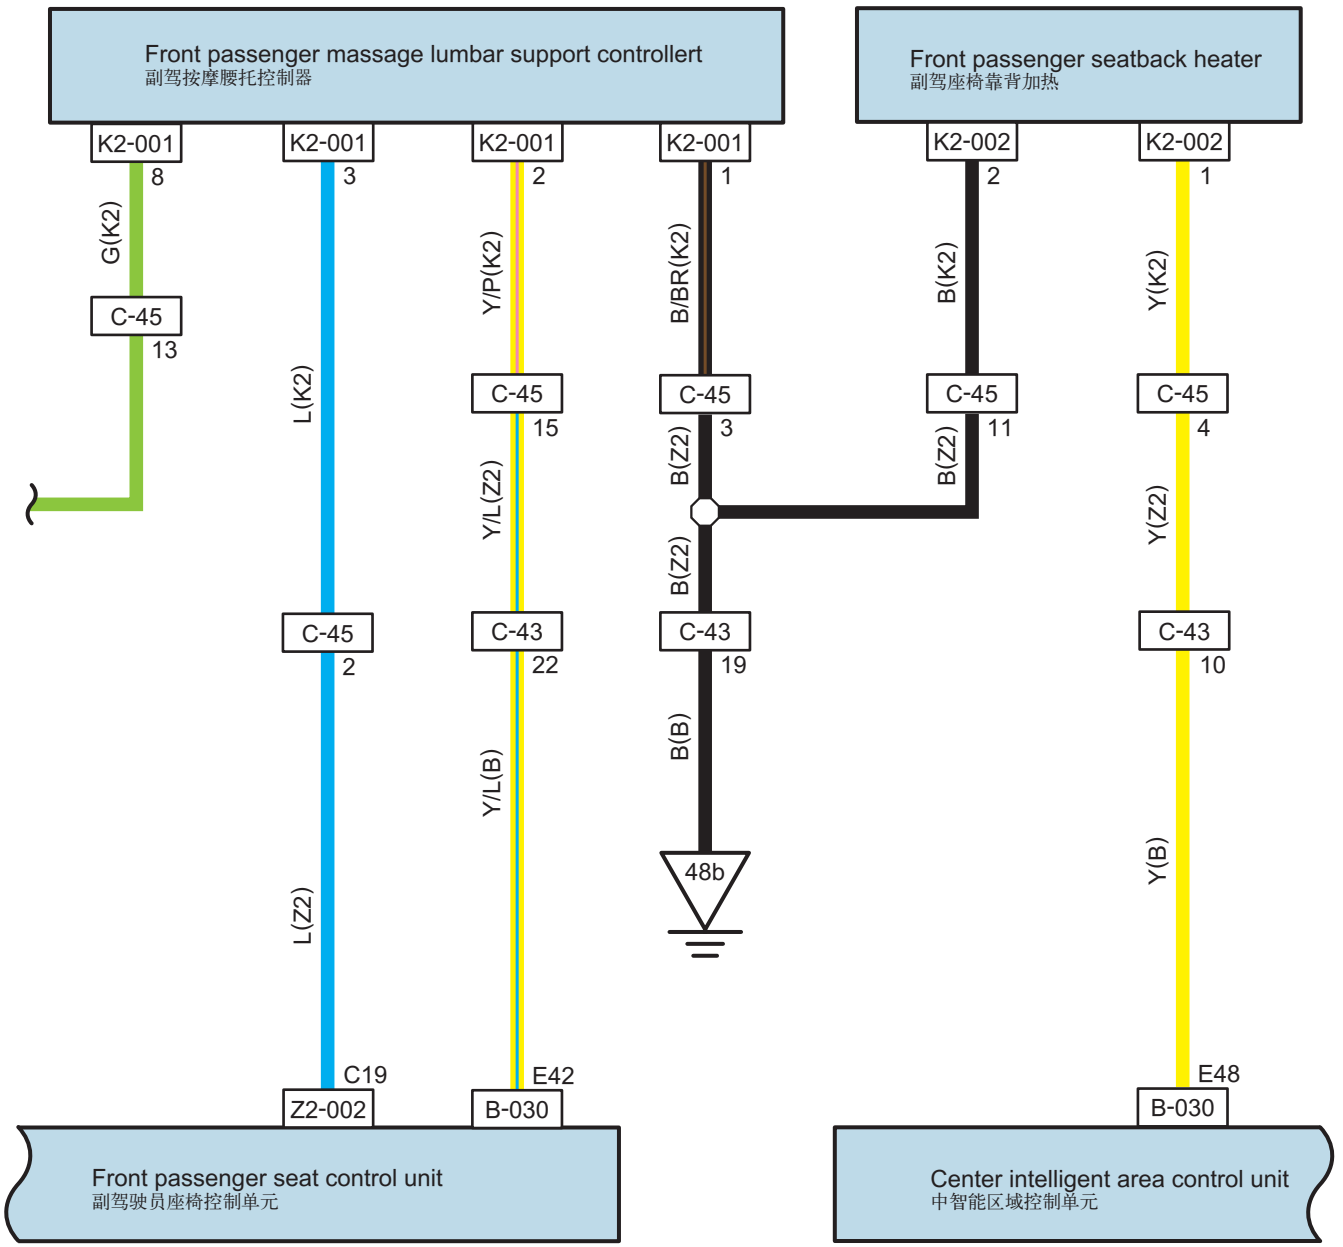

Center intelligent area control unit
中智能区域控制单元
Front passenger leg support angle adjustment motor
副驾腿托角度调节电机
B-030
E51
B-030
E15
Z2-005
1
Z2-005
3
Z2-005
4
Z2-005
2
G/R(B)
W/G(B)
B/G(Z2)
C-43
1
C-43
3
BR(Z2)
W/B(Z2)
B/L(Z2)
B/G(Z2)
G/R(Z2)
W/G(Z2)
BR(Z2)
A11
C4
C15
C10
A7
A8
Z2-003
Z2-002
Z2-002
Z2-002
Z2-003
Z2-003
Front passenger seat control unit
副驾驶员座椅控制单元
Z2-003
A12
Z2-003
A9
B(Z2)
B(Z2)
B(Z2)
C-43
28
B(B)
48a

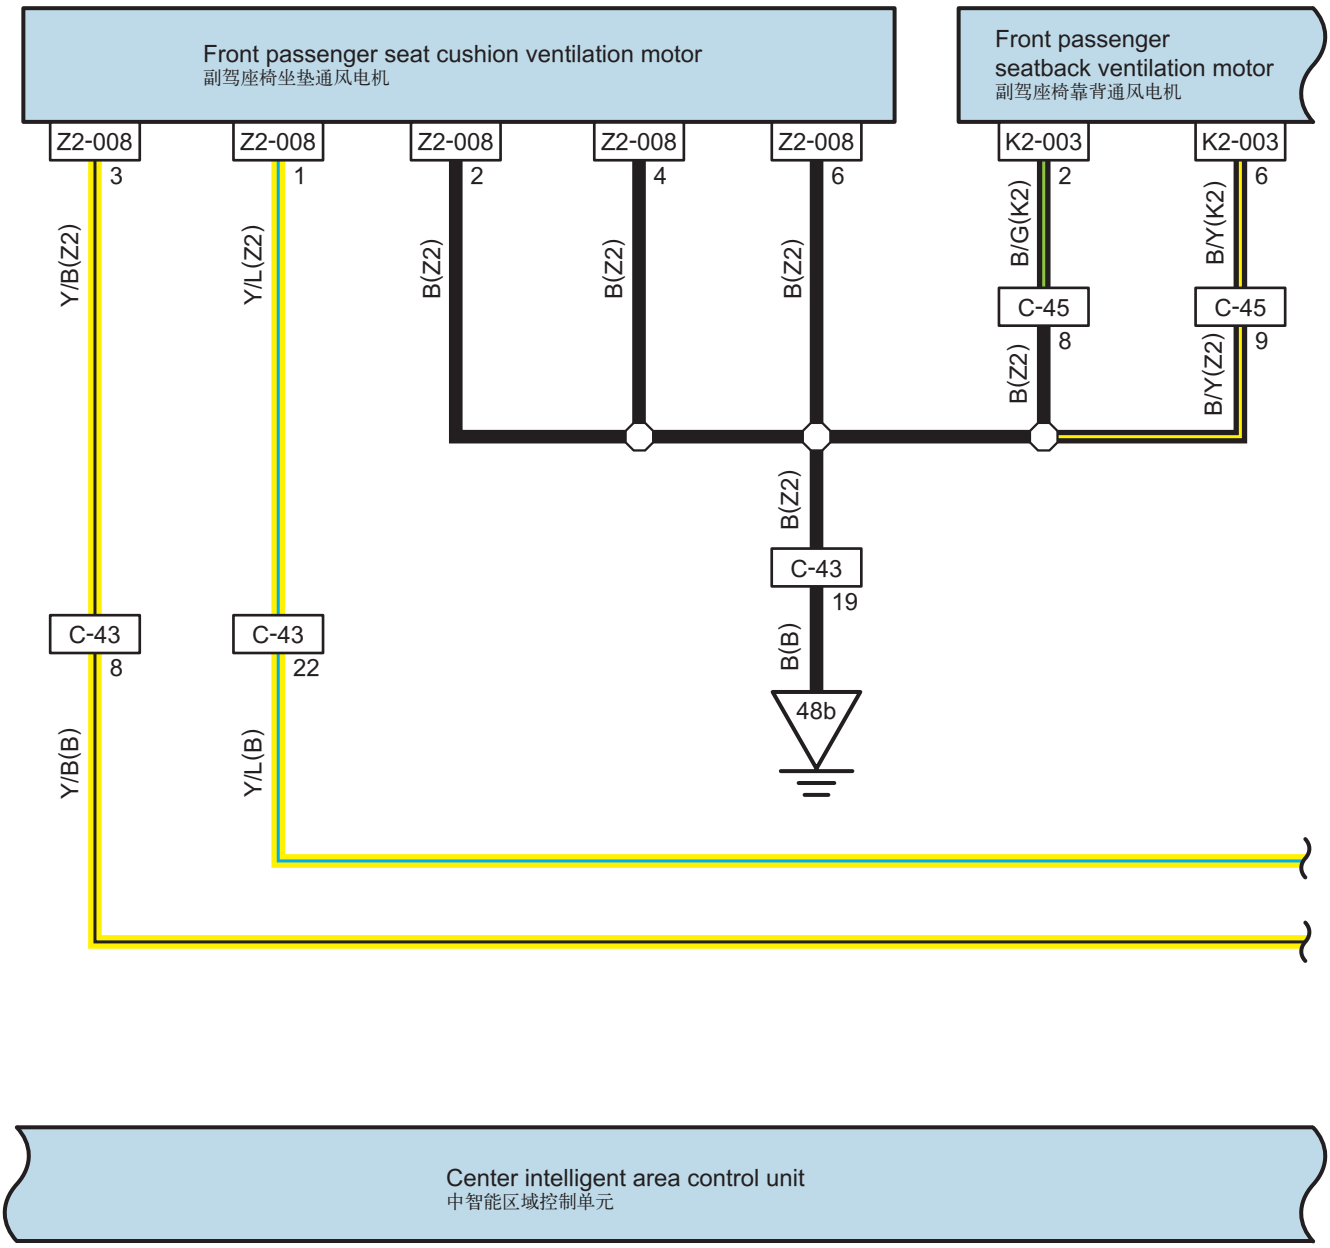

With memory
带记忆
Front passenger seat angle adjustment motor
副驾座椅角度调节电机
Front passenger leg support length adjustment motor
副驾腿托长度调节电机
K2-004
4
K2-004
2
K2-004
1
K2-004
3
Z2-004
1
Z2-004
3
B/G(K2)
Y/L(K2)
BR(K2)
L/G(K2)
C-45
5
B/G(Z2)
C-45
1
C-45
14
C-45
16
W(Z2)
BR(Z2)
Y/L(Z2)
BR(Z2)
L/G(Z2)
A1
Z2-003
C3
Z2-002
C9
Z2-002
Front passenger seat control unit
副驾驶员座椅控制单元

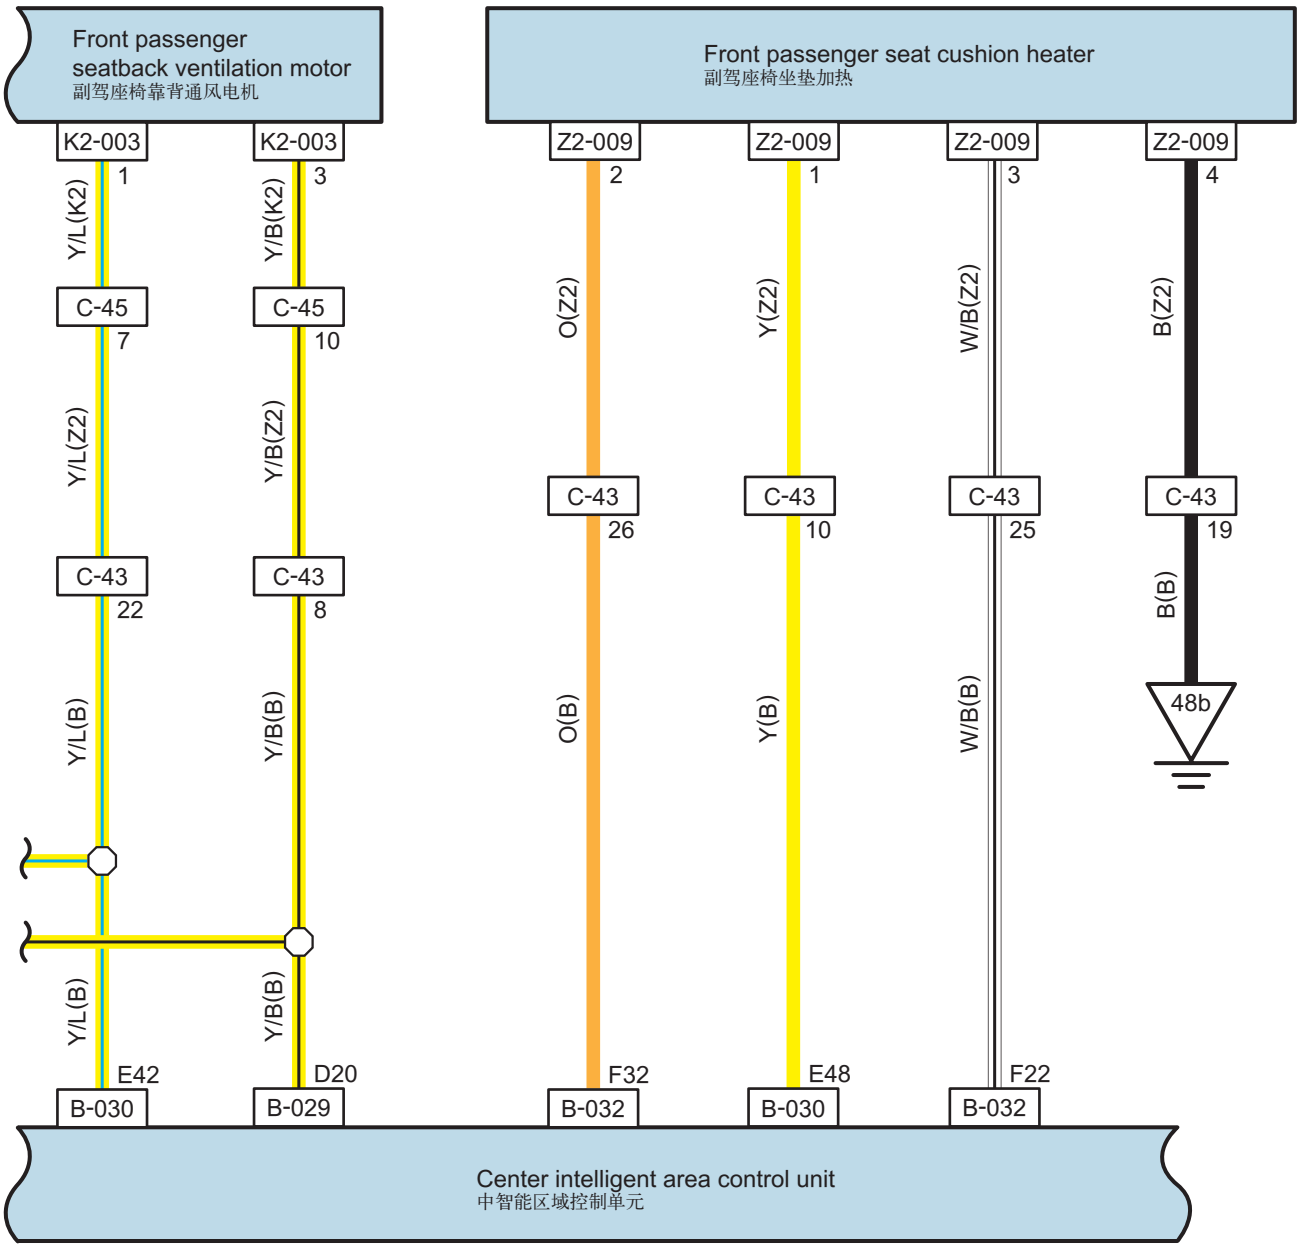

With memory
带记忆
Front passenger leg support length adjustment motor
副驾腿托长度调节电机
Front passenger seat track motor
副驾座椅滑轨电机
Z2-004
2
Z2-004
4
Z2-006
5
Z2-006
4
Z2-006
1
Z2-006
2
B/G(Z2)
G(Z2)
G(Z2)
G(Z2)
BR(Z2)
L(Z2)
G(Z2)
A3
Z2-003
A10
Z2-003
A5
Z2-003
C1
Z2-002
Front passenger seat control unit
副驾驶员座椅控制单元

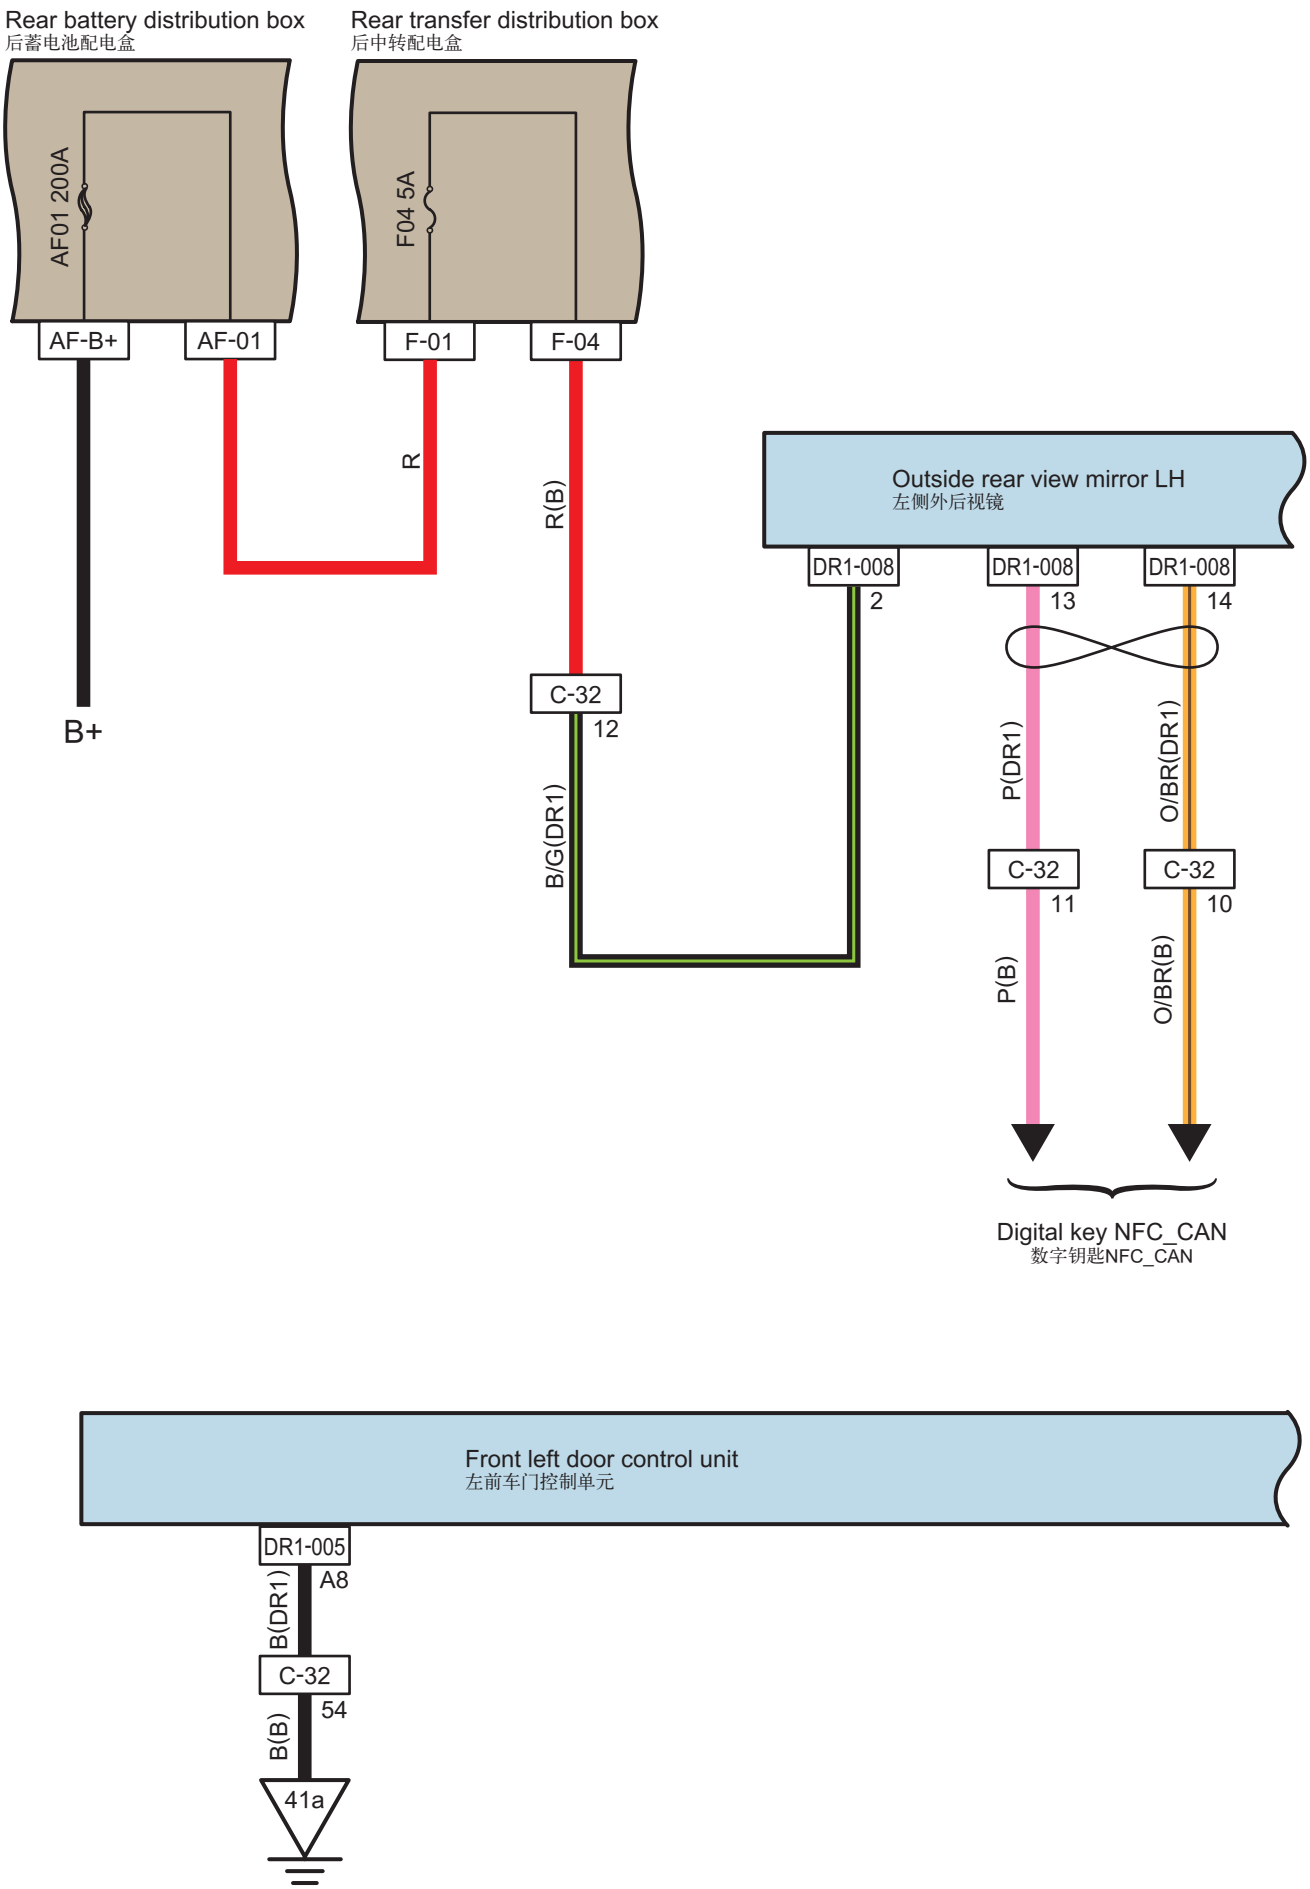

Front passenger seat adjustment switch - small current
副驾驶员座椅调节开关-小电流
Z2-011
4
Z2-011
5
Z2-011
1
Z2-011
8
Z2-011
12
Middle Comfort_CAN
中部舒适_CAN
V/B(I)
V/B(I)
C-23
13
C-23
12
V/B(B)
V/B(B)
C-43
13
C-43
14
V/B(Z2)
V/W(Z2)
C20
C21
Z2-002
Z2-002
W/B(Z2)
V(Z2)
P(Z2)
Y/W(Z2)
R(Z2)
D9
D10
D16
D15
D5
Z2-001
Z2-001
Z2-001
Z2-001
Z2-001
Front passenger seat control unit
副驾驶员座椅控制单元

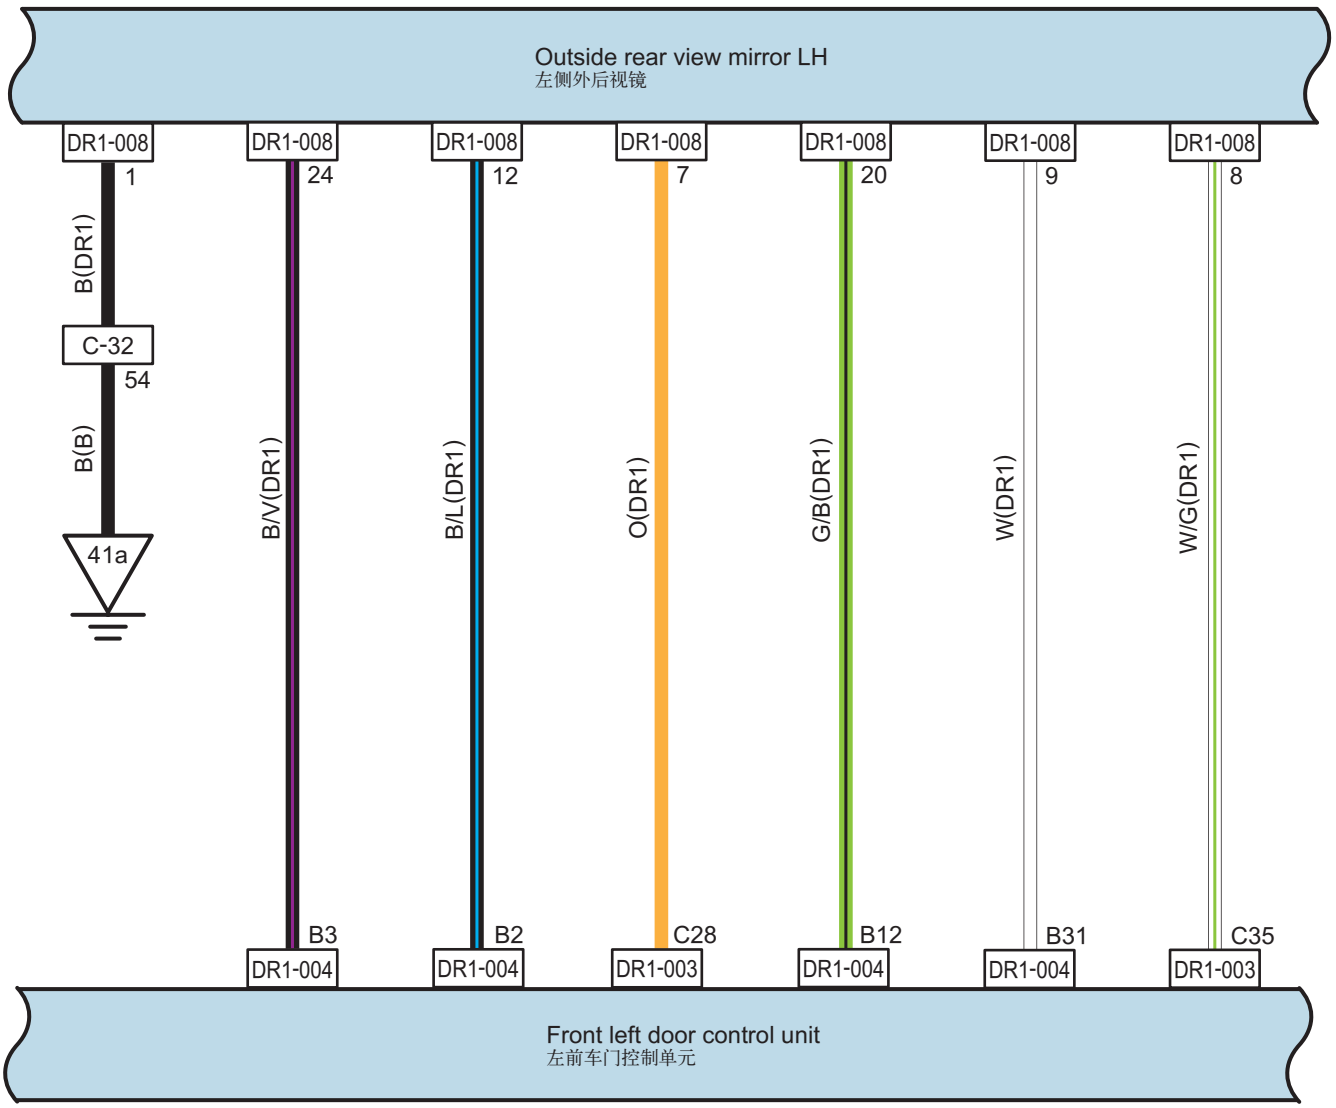

Front passenger seat adjustment switch - small current
副驾驶员座椅调节开关-小电流
Z2-011
11
Z2-011
7
Z2-011
10
Z2-011
14
Z2-011
13
Z2-011
15
G(Z2)
L(Z2)
R/W(Z2)
G/R(Z2)
W(Z2)
O(Z2)
D6
D18
D19
D3
D4
Z2-001
Z2-001
Z2-001
Z2-001
Z2-001
Front passenger seat control unit
副驾驶员座椅控制单元

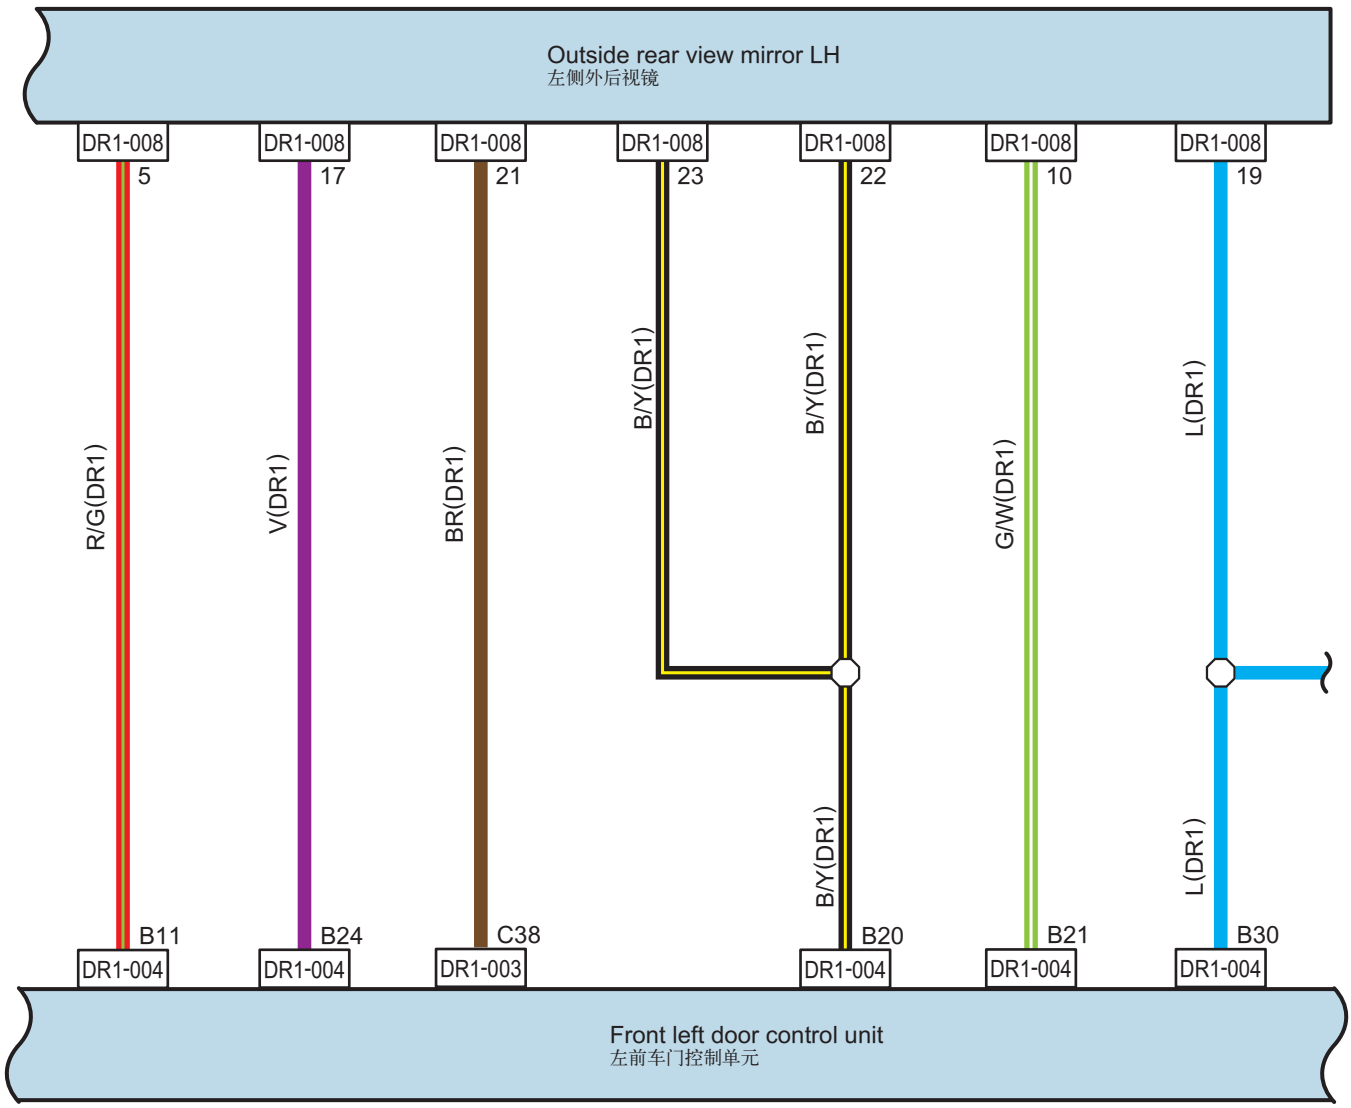

Front passenger massage lumbar support controllert
副驾按摩腰托控制器
Front passenger seatback heater
副驾座椅靠背加热
K2-001
8
G(K2)
C-45
13
K2-001
3
L(K2)
C-45
2
L(Z2)
C19
Z2-002
K2-001
2
Y/P(K2)
C-45
15
Y/L(Z2)
C-43
22
Y/L(B)
E42
B-030
K2-001
1
B/BR(K2)
C-45
3
B(Z2)
B(Z2)
C-43
19
B(B)
48b
K2-002
2
B(K2)
C-45
11
B(Z2)
K2-002
1
Y(K2)
C-45
4
Y(Z2)
C-43
10
Y(B)
E48
B-030
Front passenger seat control unit
副驾驶员座椅控制单元
Center intelligent area control unit
中智能区域控制单元

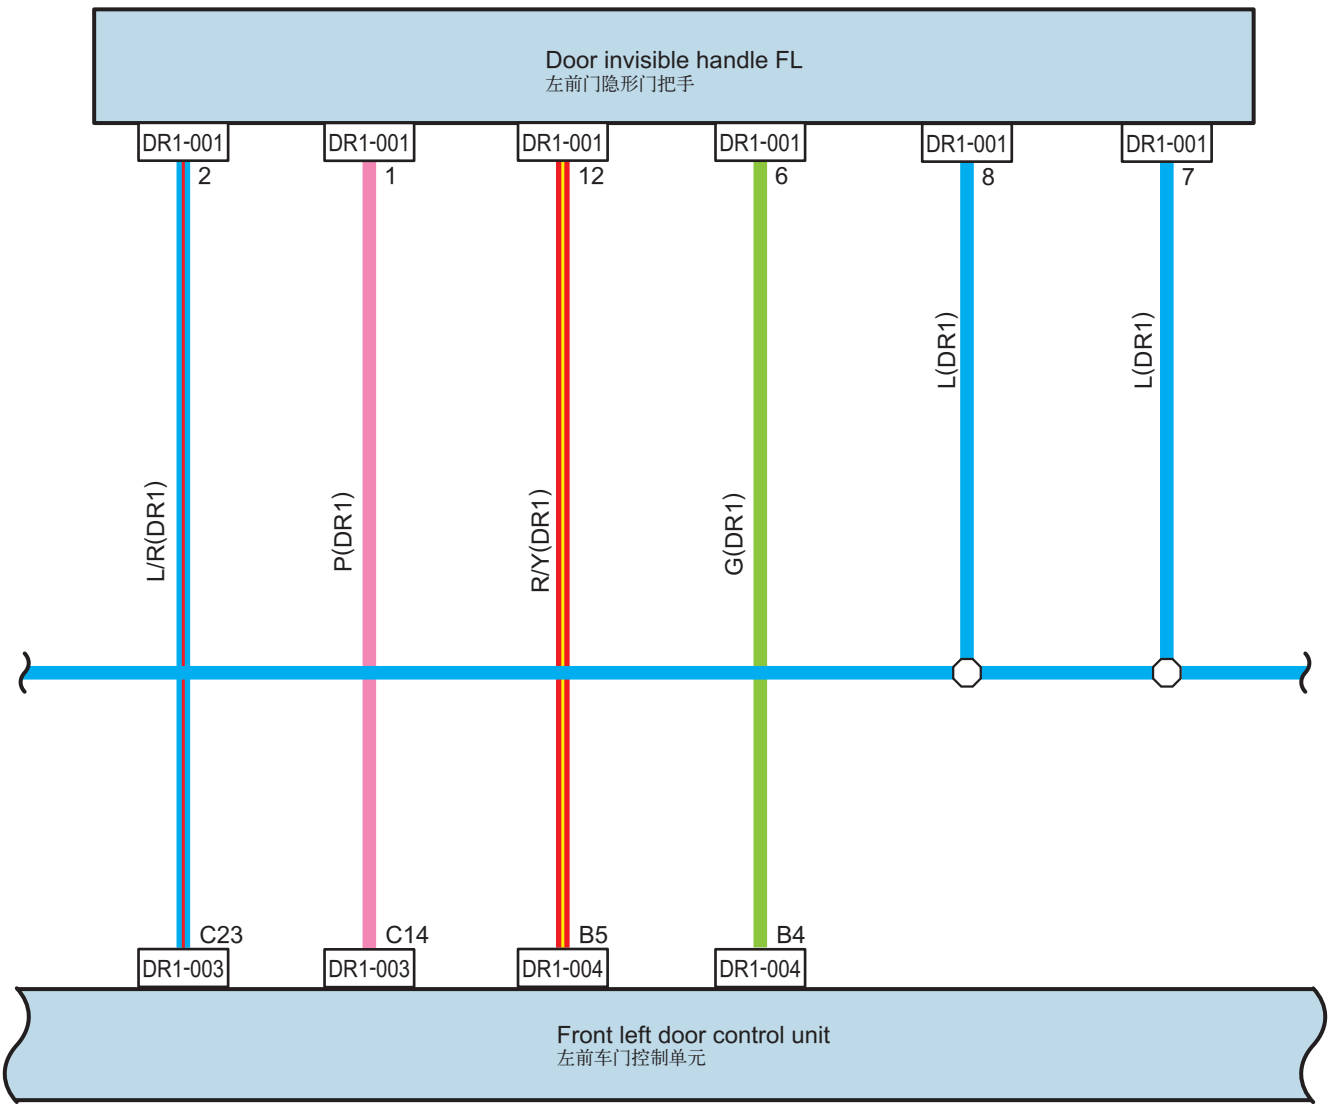

Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Z2-008
3
Z2-008
1
Z2-008
2
Z2-008
4
Z2-008
6
K2-003
2
K2-003
6
Y/B(Z2)
Y/L(Z2)
B(Z2)
B(Z2)
B(Z2)
B/G(K2)
B/Y(K2)
C-45
8
C-45
9
B(Z2)
B/Y(Z2)
B(Z2)
C-43
19
C-43
8
C-43
22
B(B)
48b
Y/B(B)
Y/L(B)
Center intelligent area control unit
中智能区域控制单元

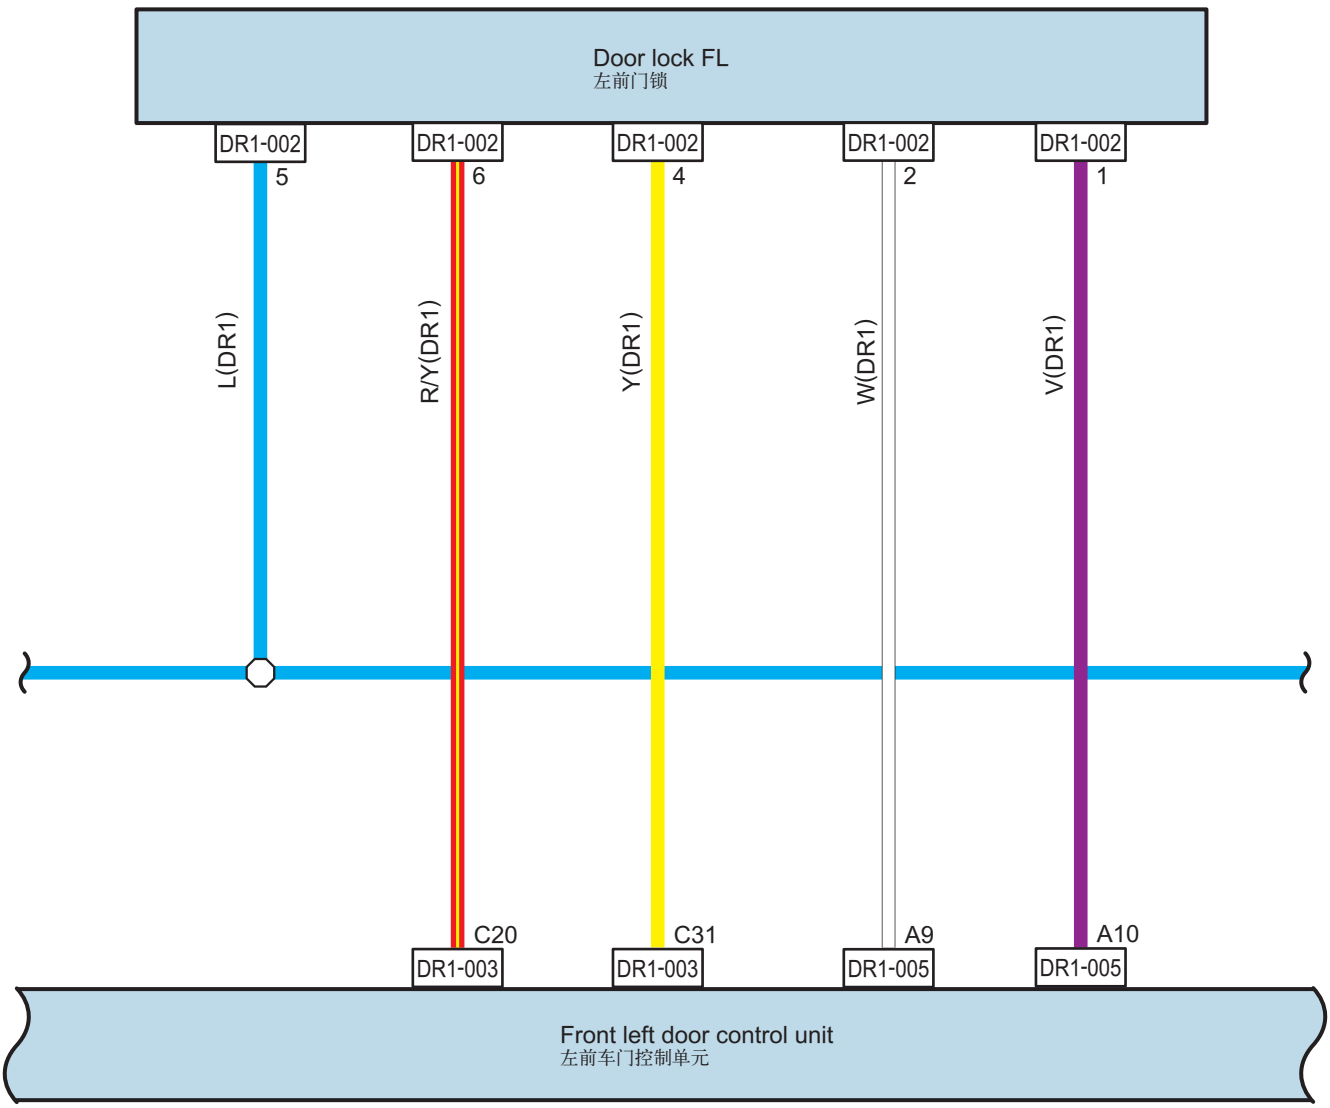

Front passenger
seatback ventilation motor
副驾座椅靠背通风电机
Front passenger seat cushion heater
副驾座椅坐垫加热
K2-003
1
K2-003
3
Z2-009
2
Z2-009
1
Z2-009
3
Z2-009
4
Y/L(K2)
Y/B(K2)
O(Z2)
Y(Z2)
W/B(Z2)
B(Z2)
C-45
7
C-45
10
C-43
26
C-43
10
C-43
25
C-43
19
Y/L(Z2)
Y/B(Z2)
B(B)
C-43
22
C-43
8
48b
Y/L(B)
Y/B(B)
O(B)
Y(B)
W/B(B)
Y/L(B)
Y/B(B)
E42
D20
F32
E48
F22
B-030
B-029
B-032
B-030
B-032
Center intelligent area control unit
中智能区域控制单元

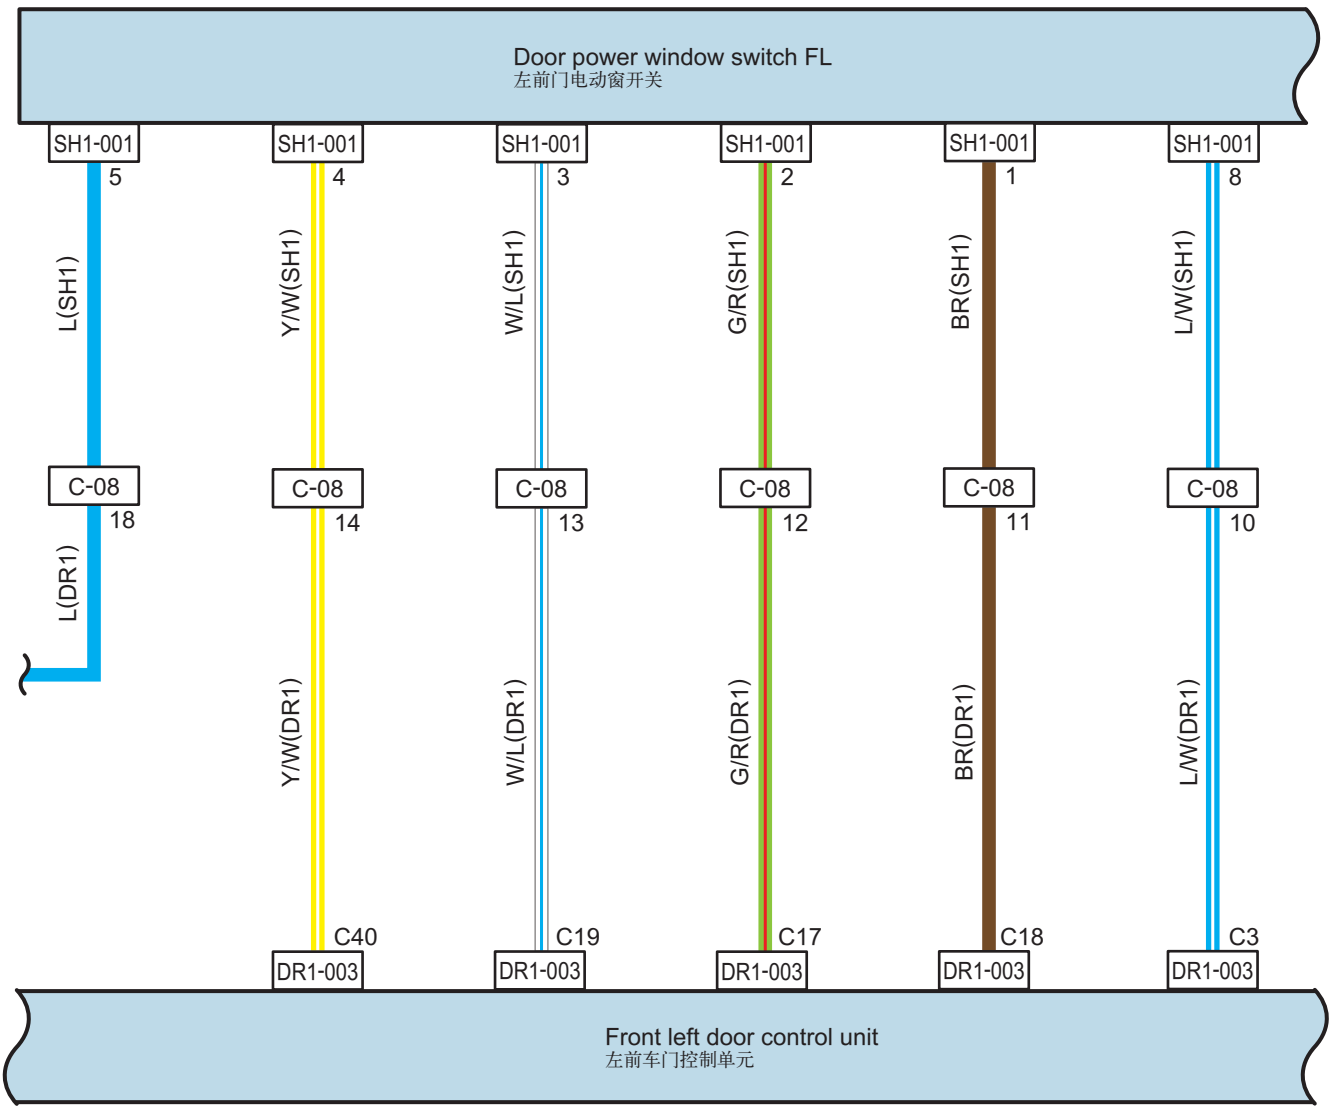

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
AF01 200A
F04 5A
AF-B+
AF-01
F-01
F-04
R
R(B)
B+
C-32
12
B/G(DR1)
Outside rear view mirror LH
左侧外后视镜
DR1-008
2
DR1-008
13
DR1-008
14
P(DR1)
O/BR(DR1)
C-32
11
C-32
10
P(B)
O/BR(B)
Digital key NFC_CAN
数字钥匙NFC_CAN
Front left door control unit
左前车门控制单元
DR1-005
A8
B(DR1)
C-32
54
B(B)
41a

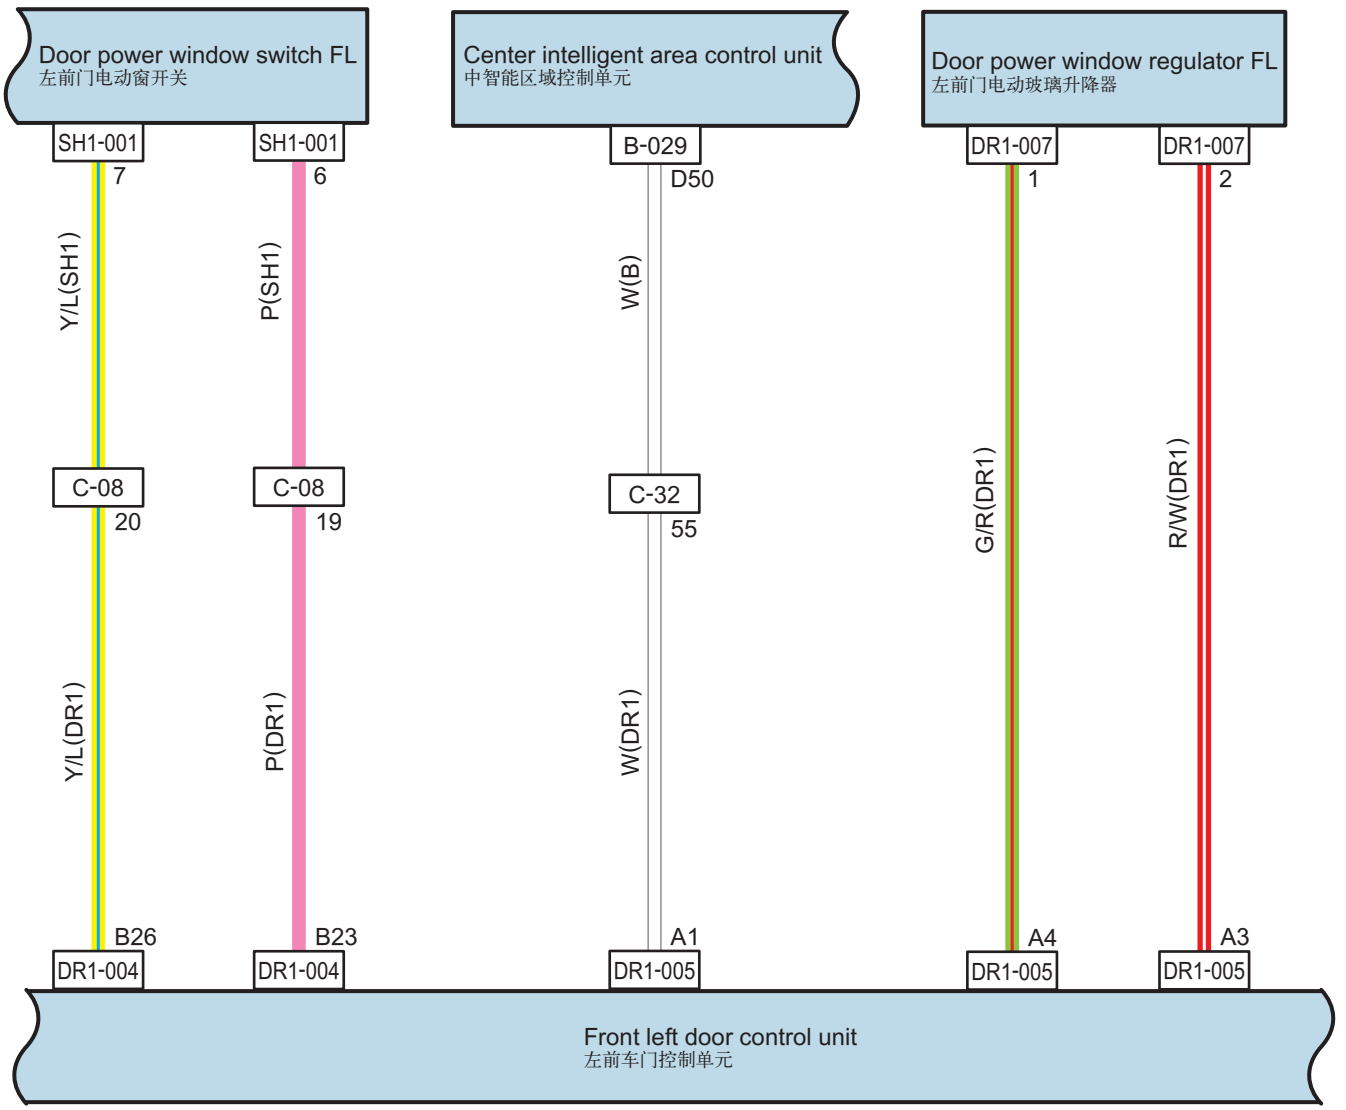

Outside rear view mirror LH
左侧外后视镜
DR1-008
1
B(DR1)
C-32
54
B(B)
41a
DR1-008
24
B/V(DR1)
B3
DR1-004
DR1-008
12
B/L(DR1)
B2
DR1-004
DR1-008
7
O(DR1)
C28
DR1-003
DR1-008
20
G/B(DR1)
B12
DR1-004
DR1-008
9
W(DR1)
B31
DR1-004
DR1-008
8
W/G(DR1)
C35
DR1-003
Front left door control unit
左前车门控制单元

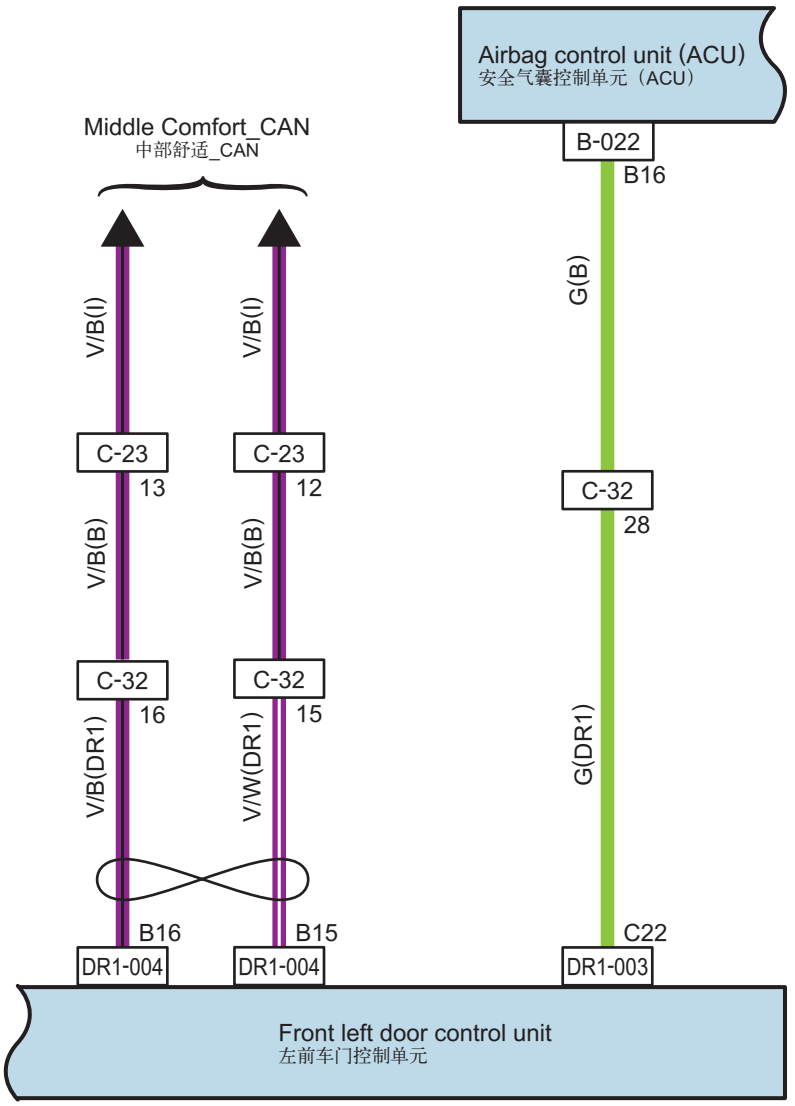

Outside rear view mirror LH
左侧外后视镜
DR1-008
5
17
21
23
22
10
19
R/G(DR1)
V(DR1)
BR(DR1)
B/Y(DR1)
B/Y(DR1)
G/W(DR1)
L(DR1)
L(DR1)
B/Y(DR1)
B11
B24
C38
B20
B21
B30
DR1-004
DR1-004
DR1-003
DR1-004
DR1-004
DR1-004
Front left door control unit
左前车门控制单元

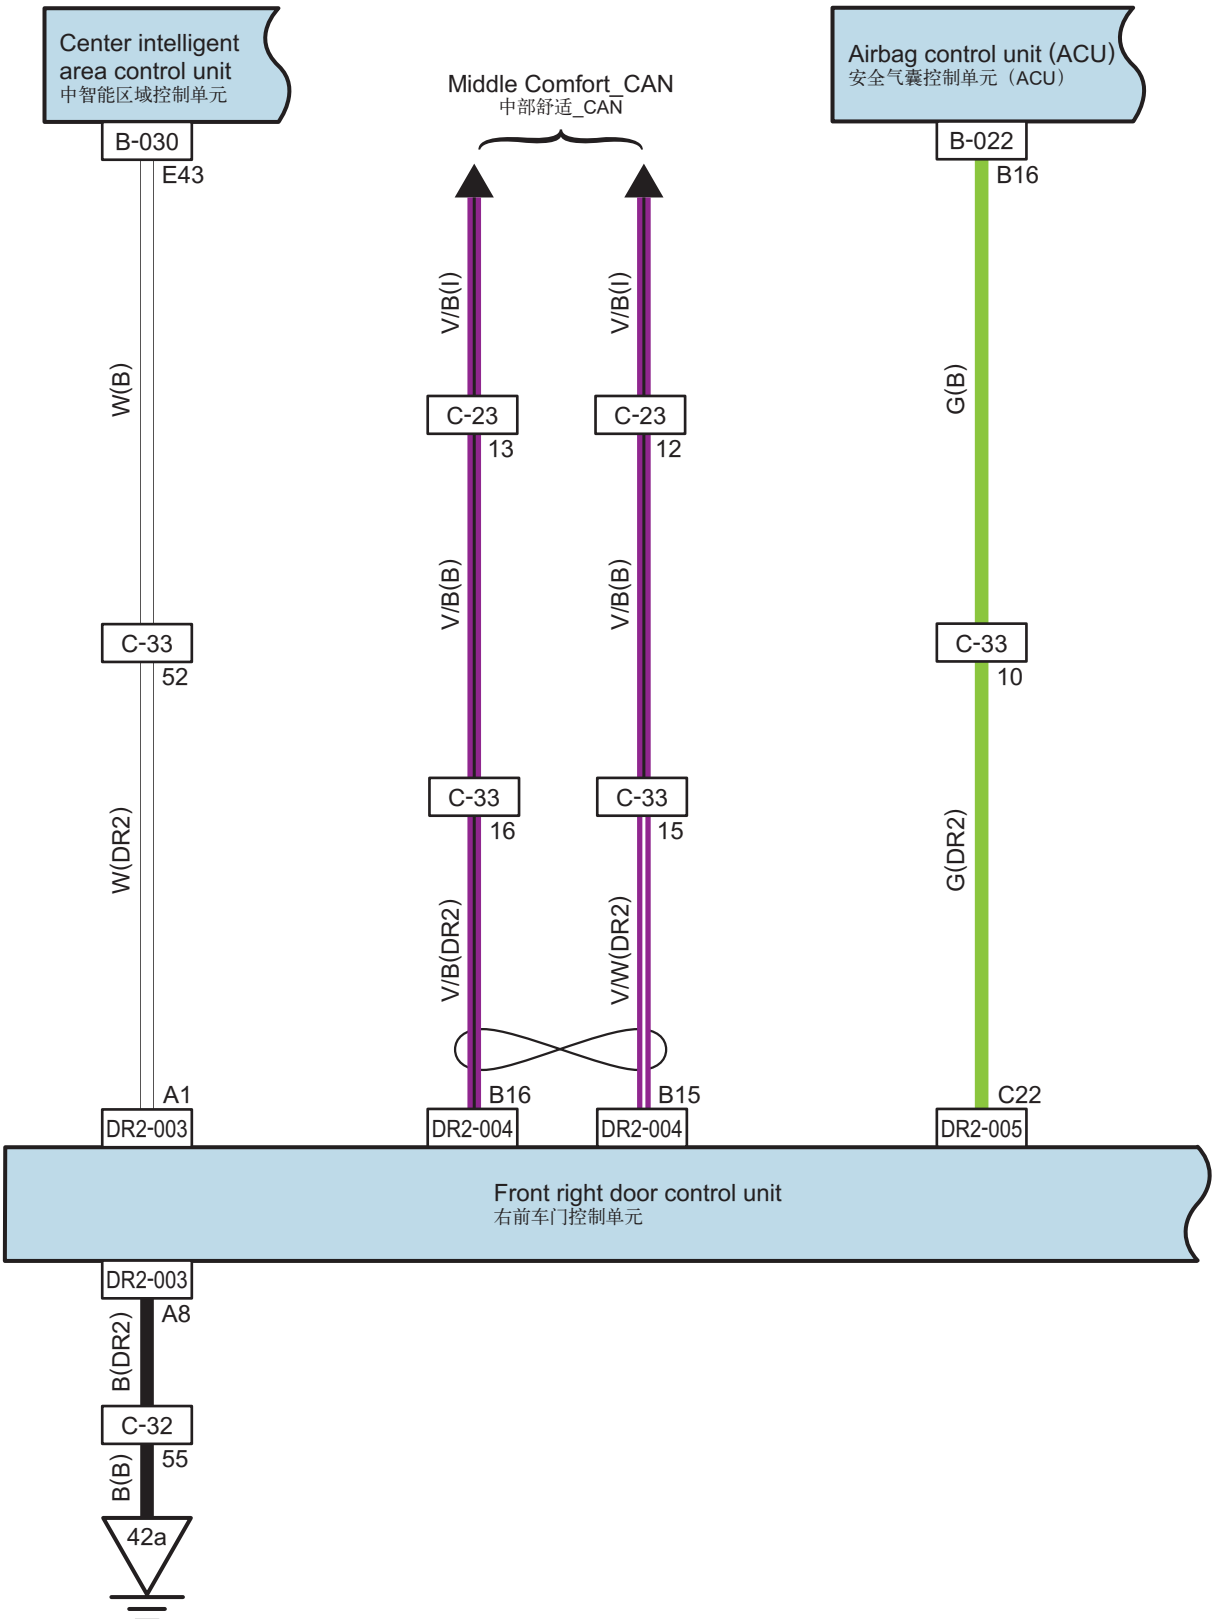

Door invisible handle FL
左前门隐形门把手
DR1-001
2
DR1-001
1
DR1-001
12
DR1-001
6
DR1-001
8
DR1-001
7
L/R(DR1)
P(DR1)
R/Y(DR1)
G(DR1)
L(DR1)
L(DR1)
C23
DR1-003
C14
DR1-003
B5
DR1-004
B4
DR1-004
Front left door control unit
左前车门控制单元

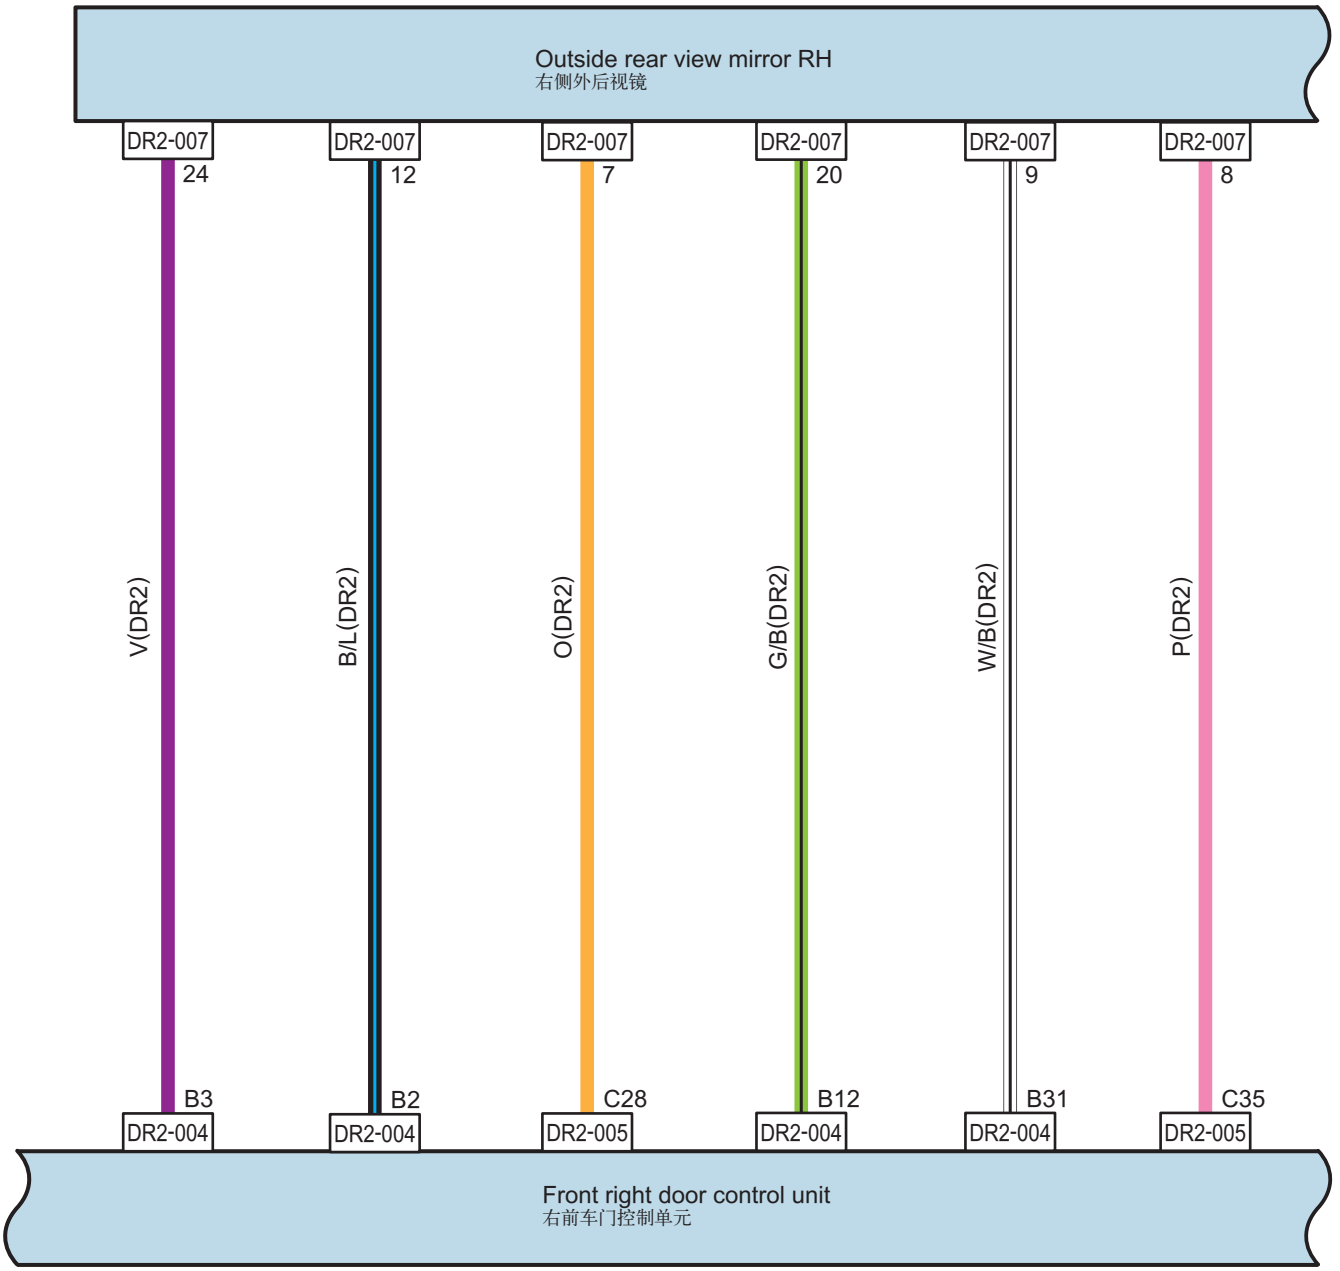

Door lock FL
左前门锁
DR1-002
5
DR1-002
6
DR1-002
4
DR1-002
2
DR1-002
1
L(DR1)
R/Y(DR1)
Y(DR1)
W(DR1)
V(DR1)
C20
DR1-003
C31
DR1-003
A9
DR1-005
A10
DR1-005
Front left door control unit
左前车门控制单元

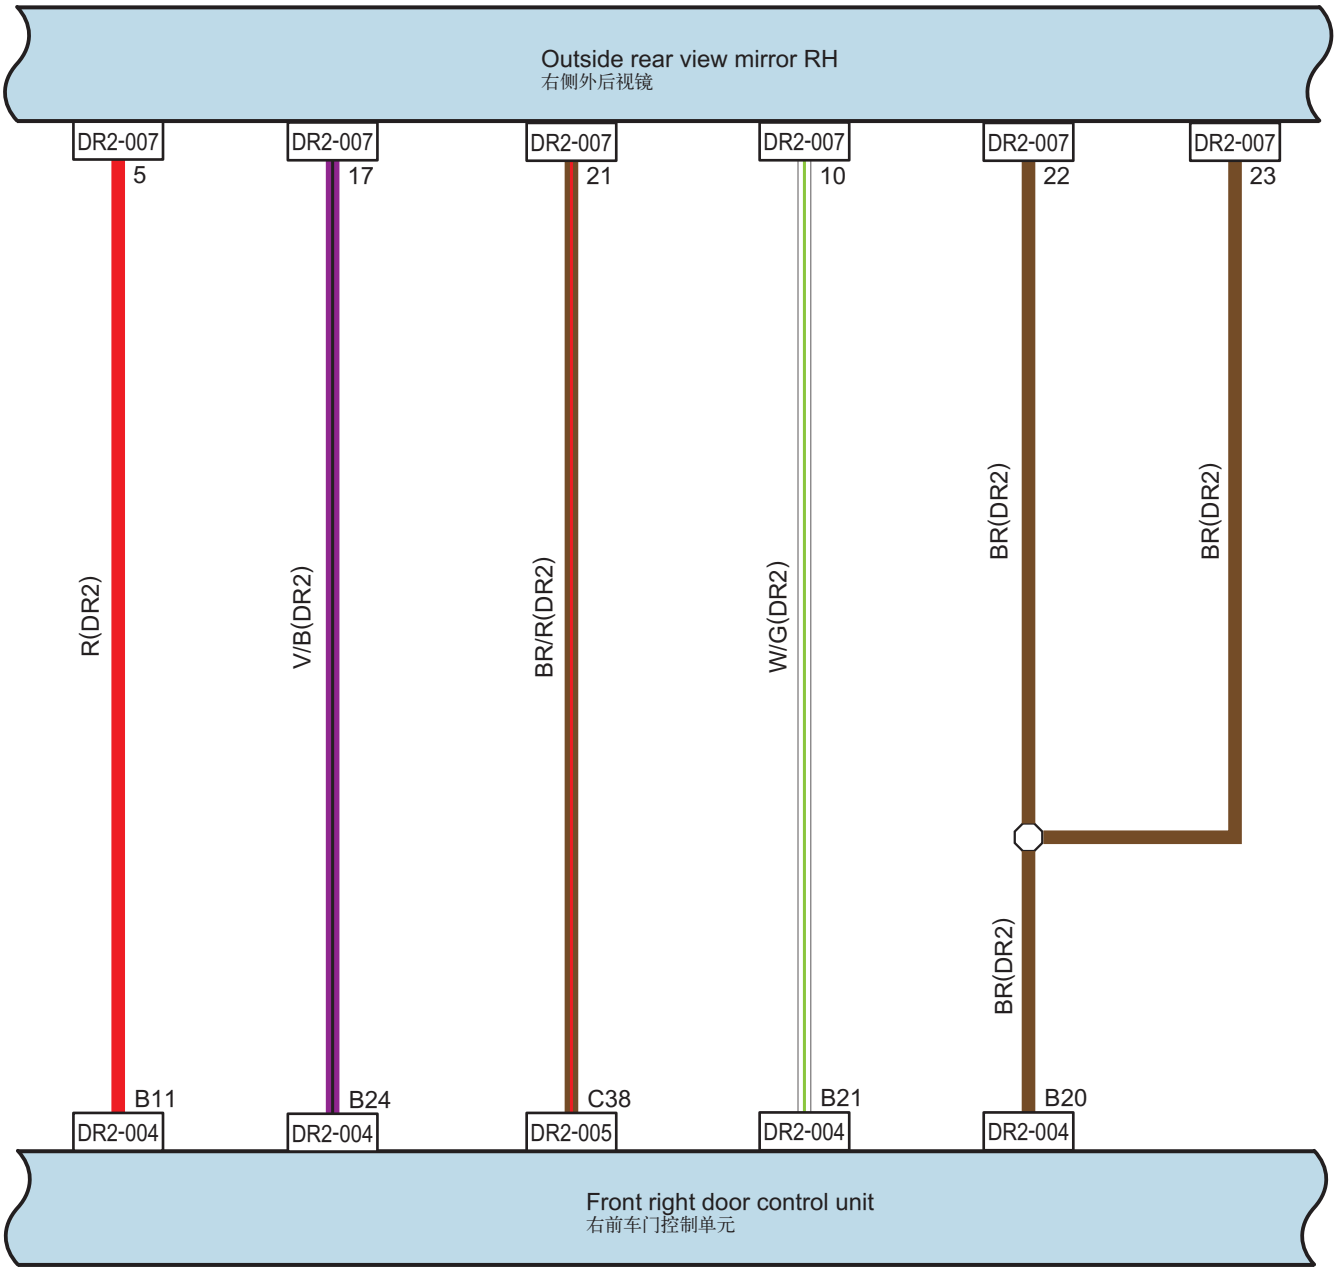

Door power window switch FL
左前门电动窗开关
SH1-001
5
L(SH1)
C-08
18
L(DR1)
SH1-001
4
Y/W(SH1)
C-08
14
Y/W(DR1)
C40
DR1-003
SH1-001
3
W/L(SH1)
C-08
13
W/L(DR1)
C19
DR1-003
SH1-001
2
G/R(SH1)
C-08
12
G/R(DR1)
C17
DR1-003
SH1-001
1
BR(SH1)
C-08
11
BR(DR1)
C18
DR1-003
SH1-001
8
L/W(SH1)
C-08
10
L/W(DR1)
C3
DR1-003
Front left door control unit
左前车门控制单元

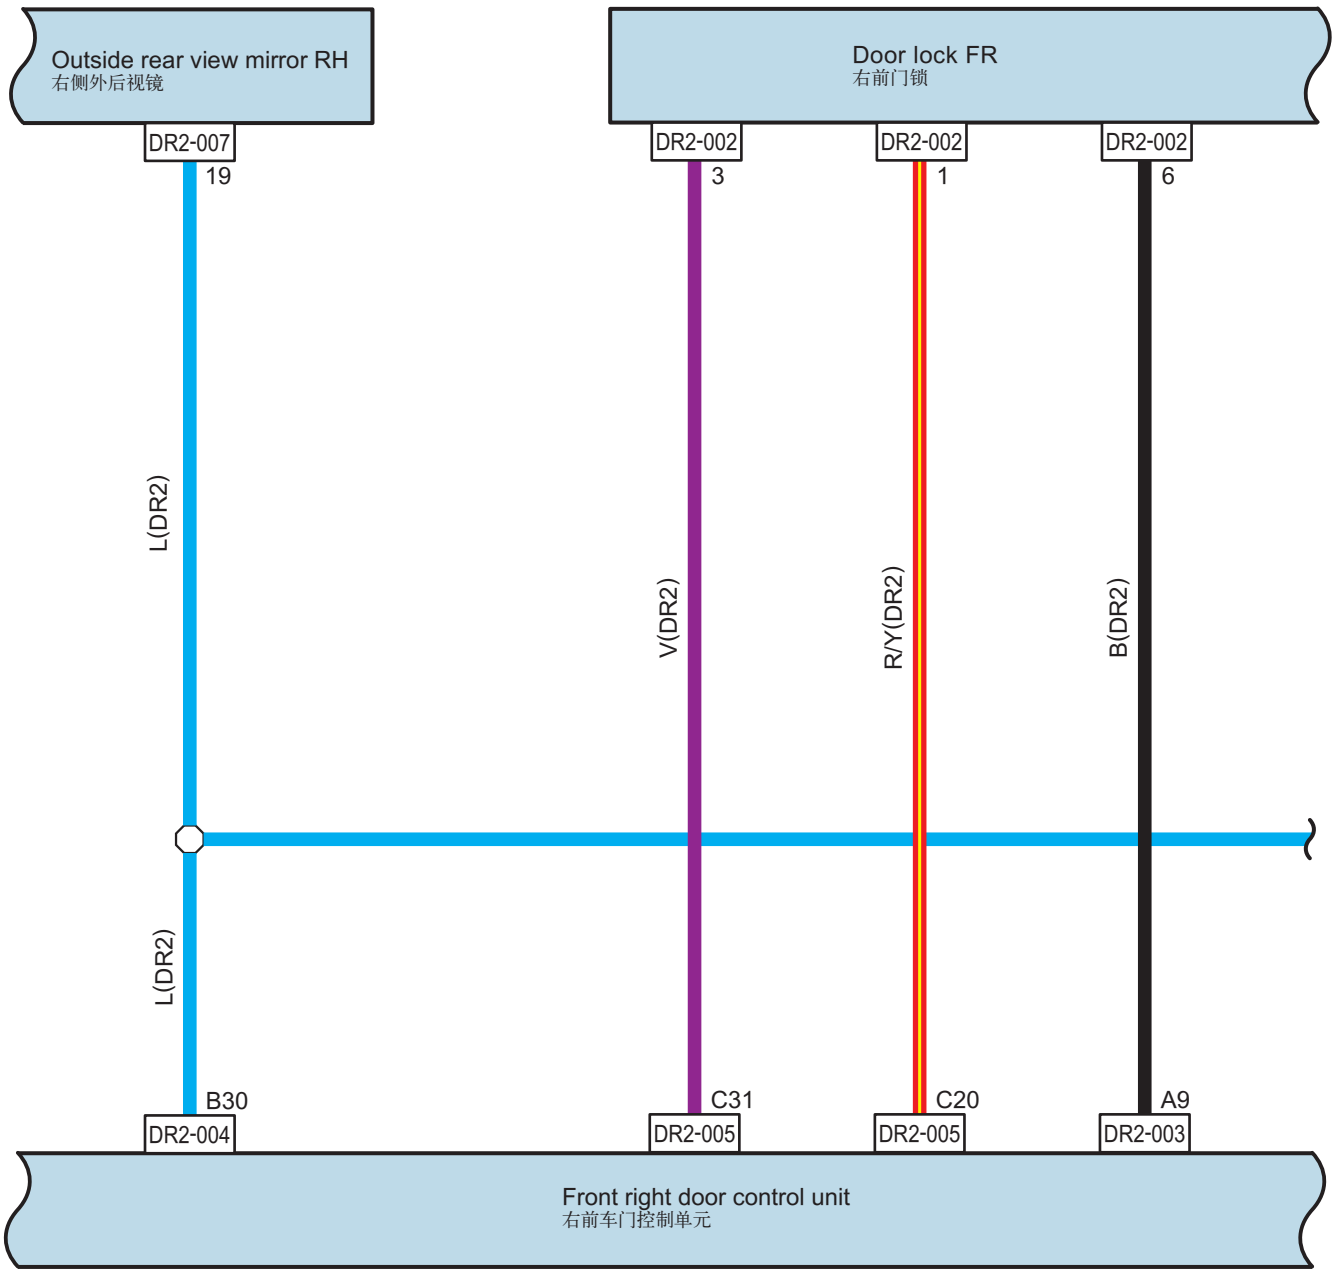

Door power window switch FL
左前门电动窗开关
Center intelligent area control unit
中智能区域控制单元
Door power window regulator FL
左前门电动玻璃升降器
SH1-001
7
SH1-001
6
B-029
D50
DR1-007
1
DR1-007
2
Y/L(SH1)
P(SH1)
W(B)
G/R(DR1)
R/W(DR1)
C-08
20
C-08
19
C-32
55
Y/L(DR1)
P(DR1)
W(DR1)
B26
B23
A1
A4
A3
DR1-004
DR1-004
DR1-005
DR1-005
DR1-005
Front left door control unit
左前车门控制单元

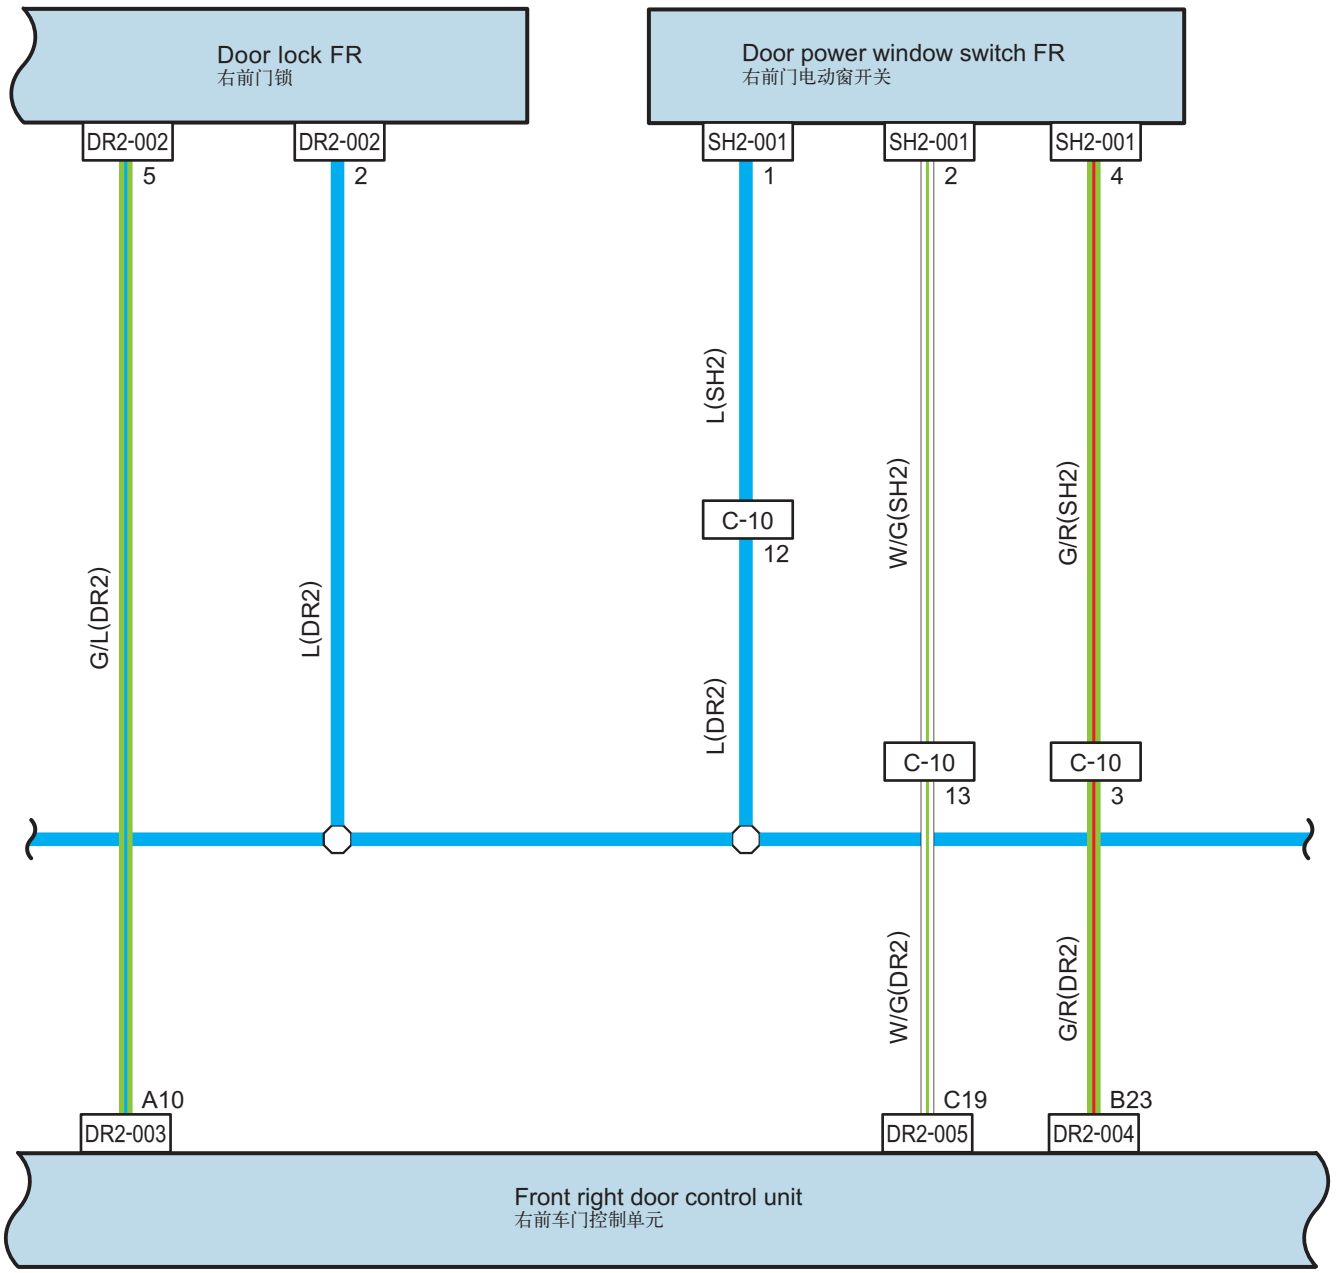

Airbag control unit (ACU)
安全气囊控制单元（ACU）
B-022
B16
G(B)
C-32
28
G(DR1)
C22
DR1-003
Middle Comfort_CAN
中部舒适_CAN
V/B(I)
V/B(I)
C-23
13
C-23
12
V/B(B)
V/B(B)
C-32
16
C-32
15
V/B(DR1)
V/W(DR1)
B16
B15
DR1-004
DR1-004
Front left door control unit
左前车门控制单元

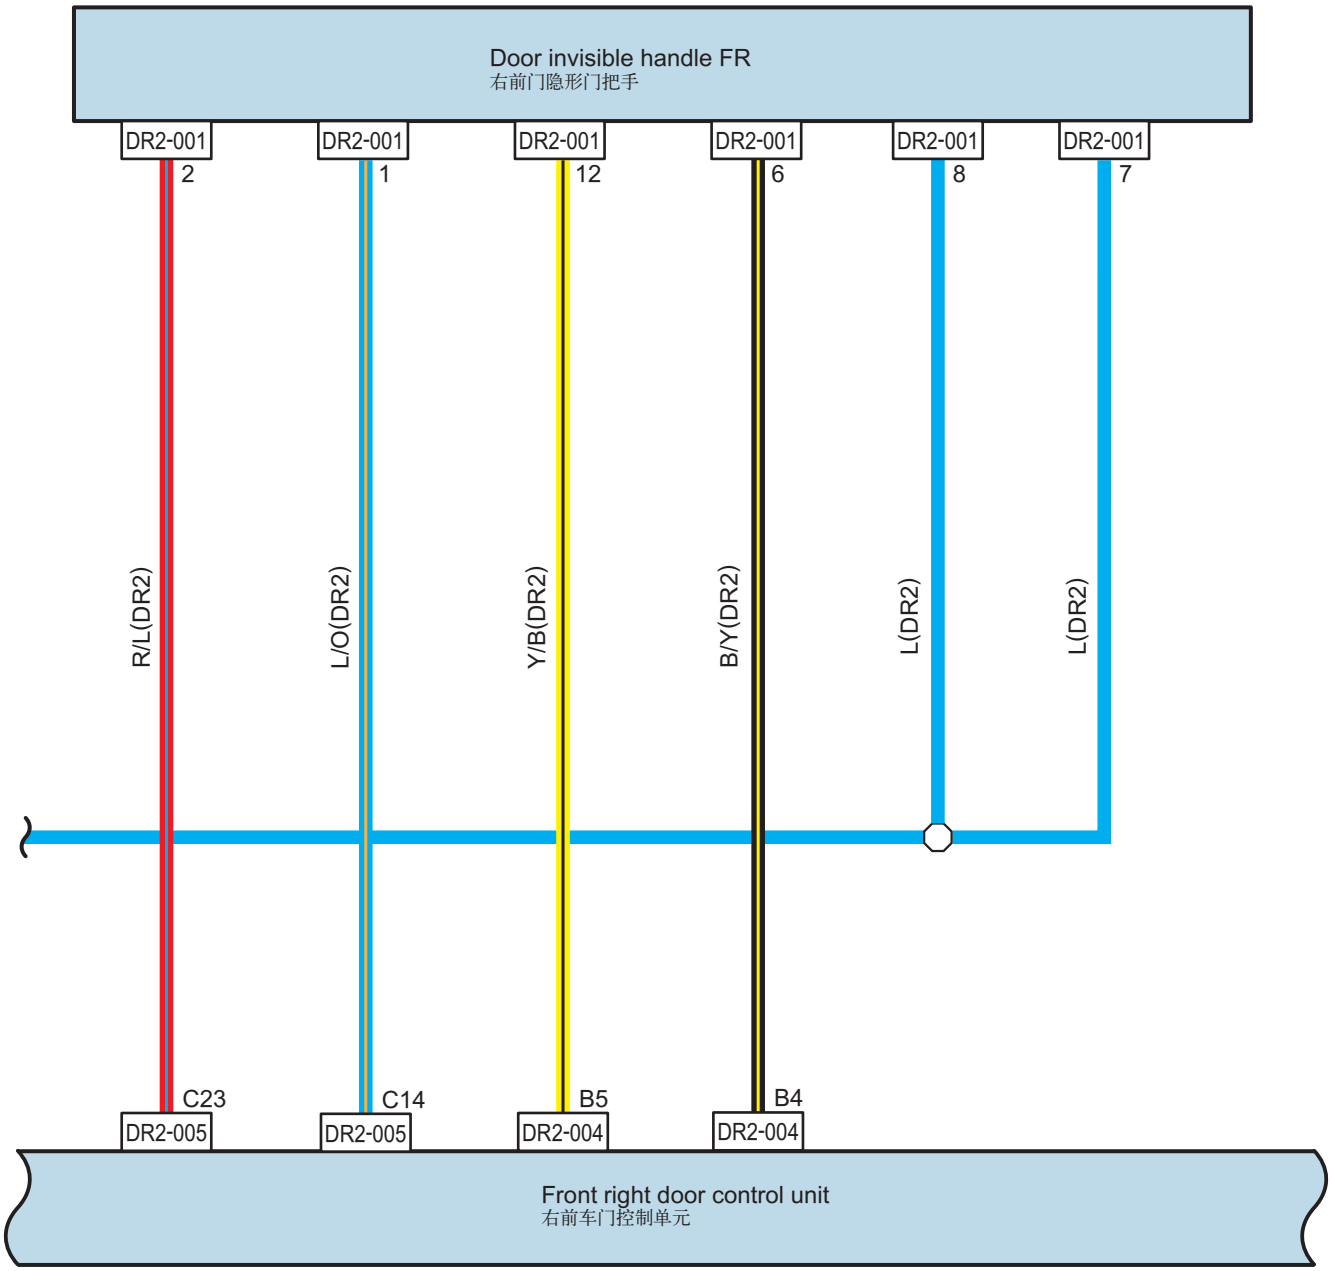

Center intelligent area control unit
中智能区域控制单元
B-030
E43
W(B)
C-33
52
W(DR2)
A1
DR2-003
Middle Comfort_CAN
中部舒适_CAN
V/B(I)
C-23
13
V/B(B)
C-33
16
V/B(DR2)
B16
DR2-004
V/B(I)
C-23
12
V/B(B)
C-33
15
V/W(DR2)
B15
DR2-004
Airbag control unit (ACU)
安全气囊控制单元（ACU）
B-022
B16
G(B)
C-33
10
G(DR2)
C22
DR2-005
Front right door control unit
右前车门控制单元
DR2-003
A8
B(DR2)
C-32
55
B(B)
42a

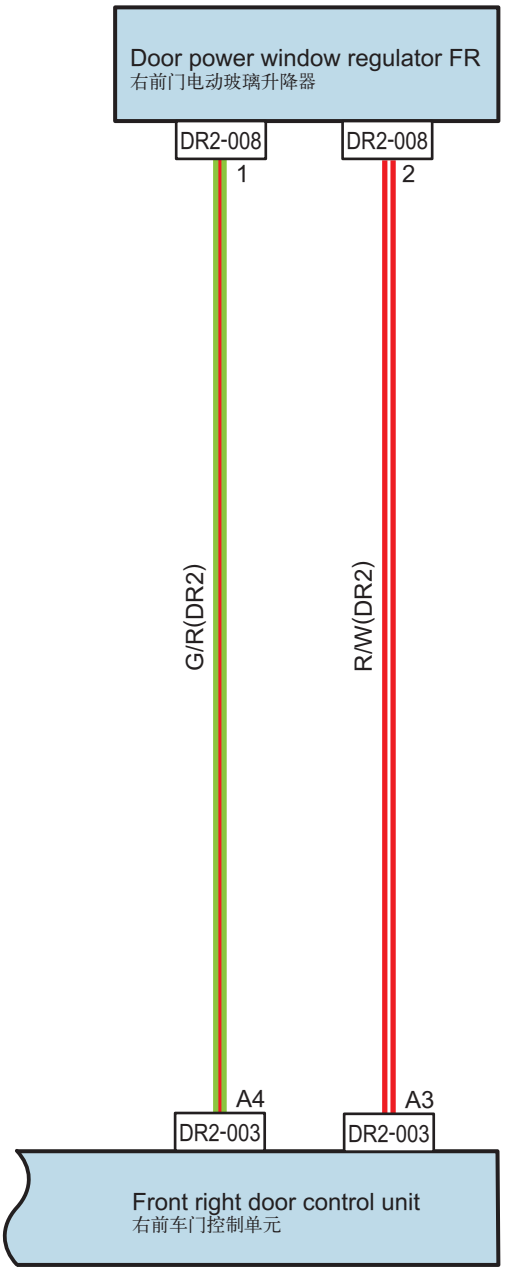

Outside rear view mirror RH
右侧外后视镜
DR2-007
24
DR2-007
12
DR2-007
7
DR2-007
20
DR2-007
9
DR2-007
8
V(DR2)
B/L(DR2)
O(DR2)
G/B(DR2)
W/B(DR2)
P(DR2)
B3
DR2-004
B2
DR2-004
C28
DR2-005
B12
DR2-004
B31
DR2-004
C35
DR2-005
Front right door control unit
右前车门控制单元

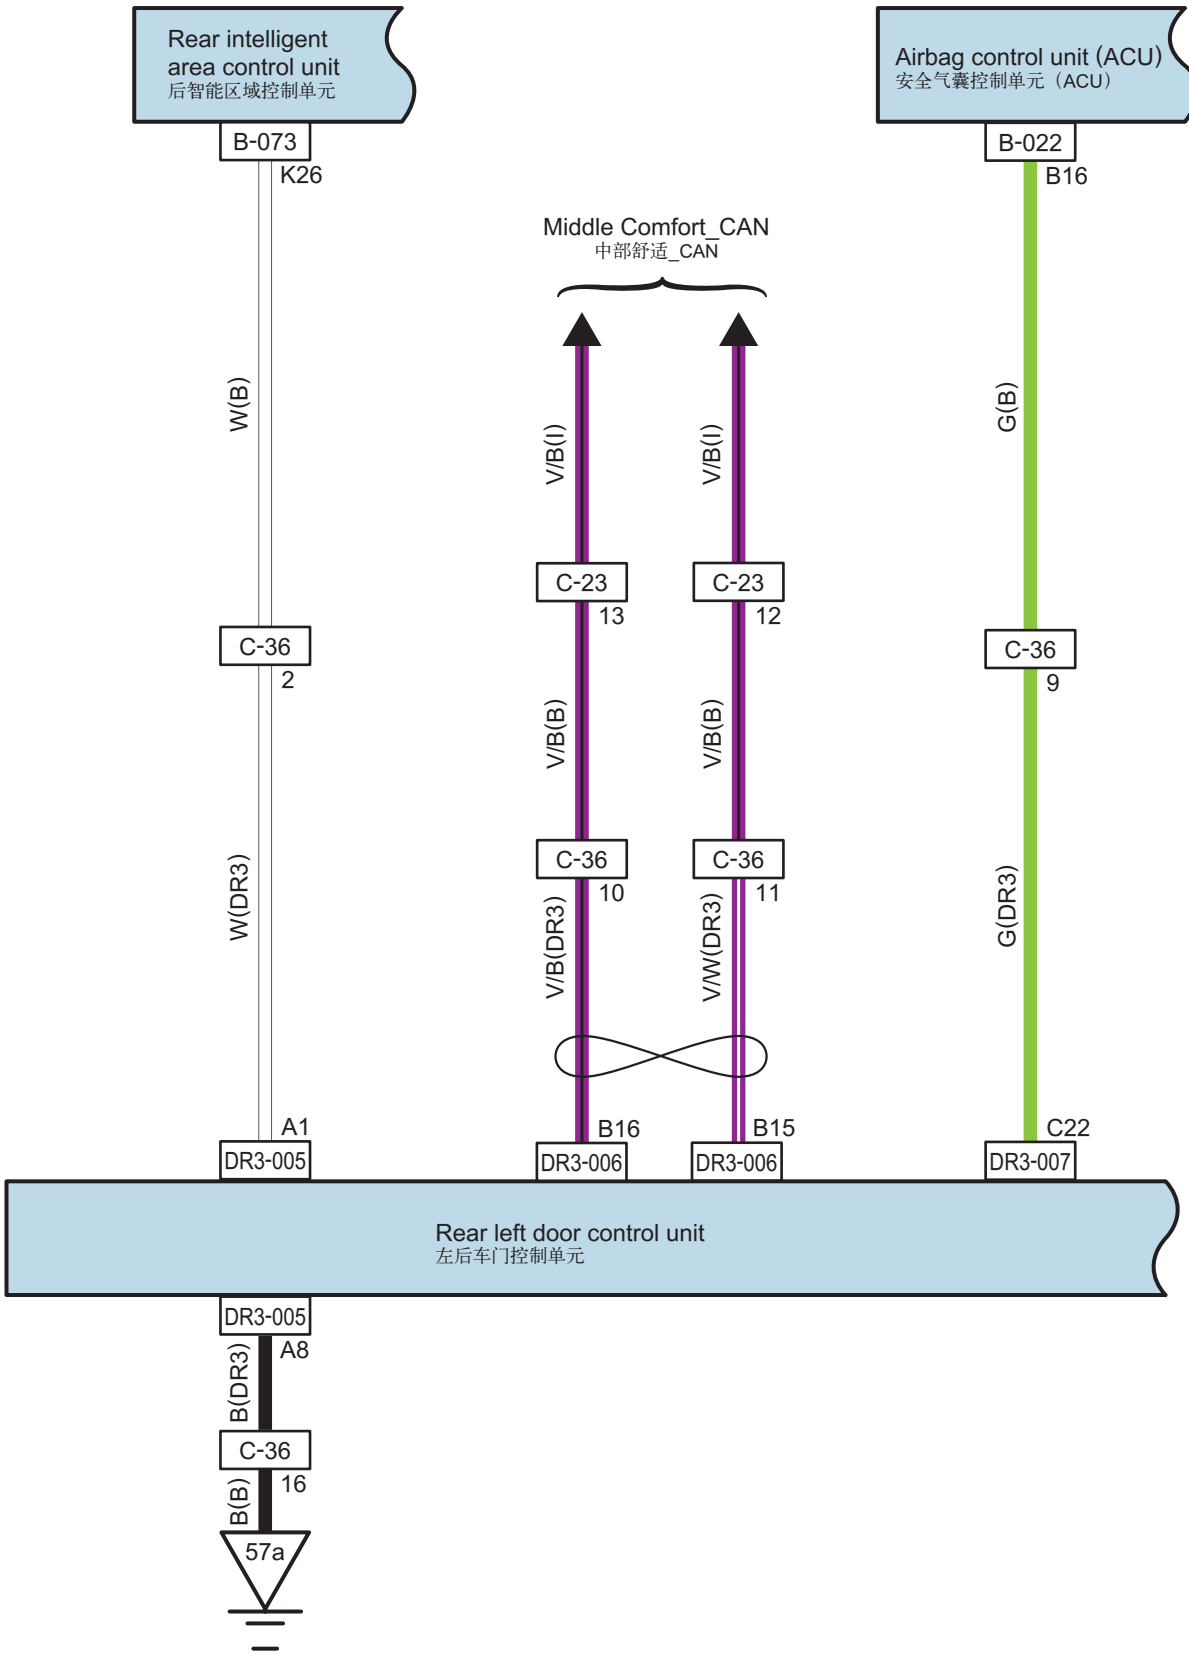

Outside rear view mirror RH
右侧外后视镜
DR2-007
5
DR2-007
17
DR2-007
21
DR2-007
10
DR2-007
22
DR2-007
23
R(DR2)
V/B(DR2)
BR/R(DR2)
W/G(DR2)
BR(DR2)
BR(DR2)
BR(DR2)
B11
B24
C38
B21
B20
DR2-004
DR2-004
DR2-005
DR2-004
DR2-004
Front right door control unit
右前车门控制单元

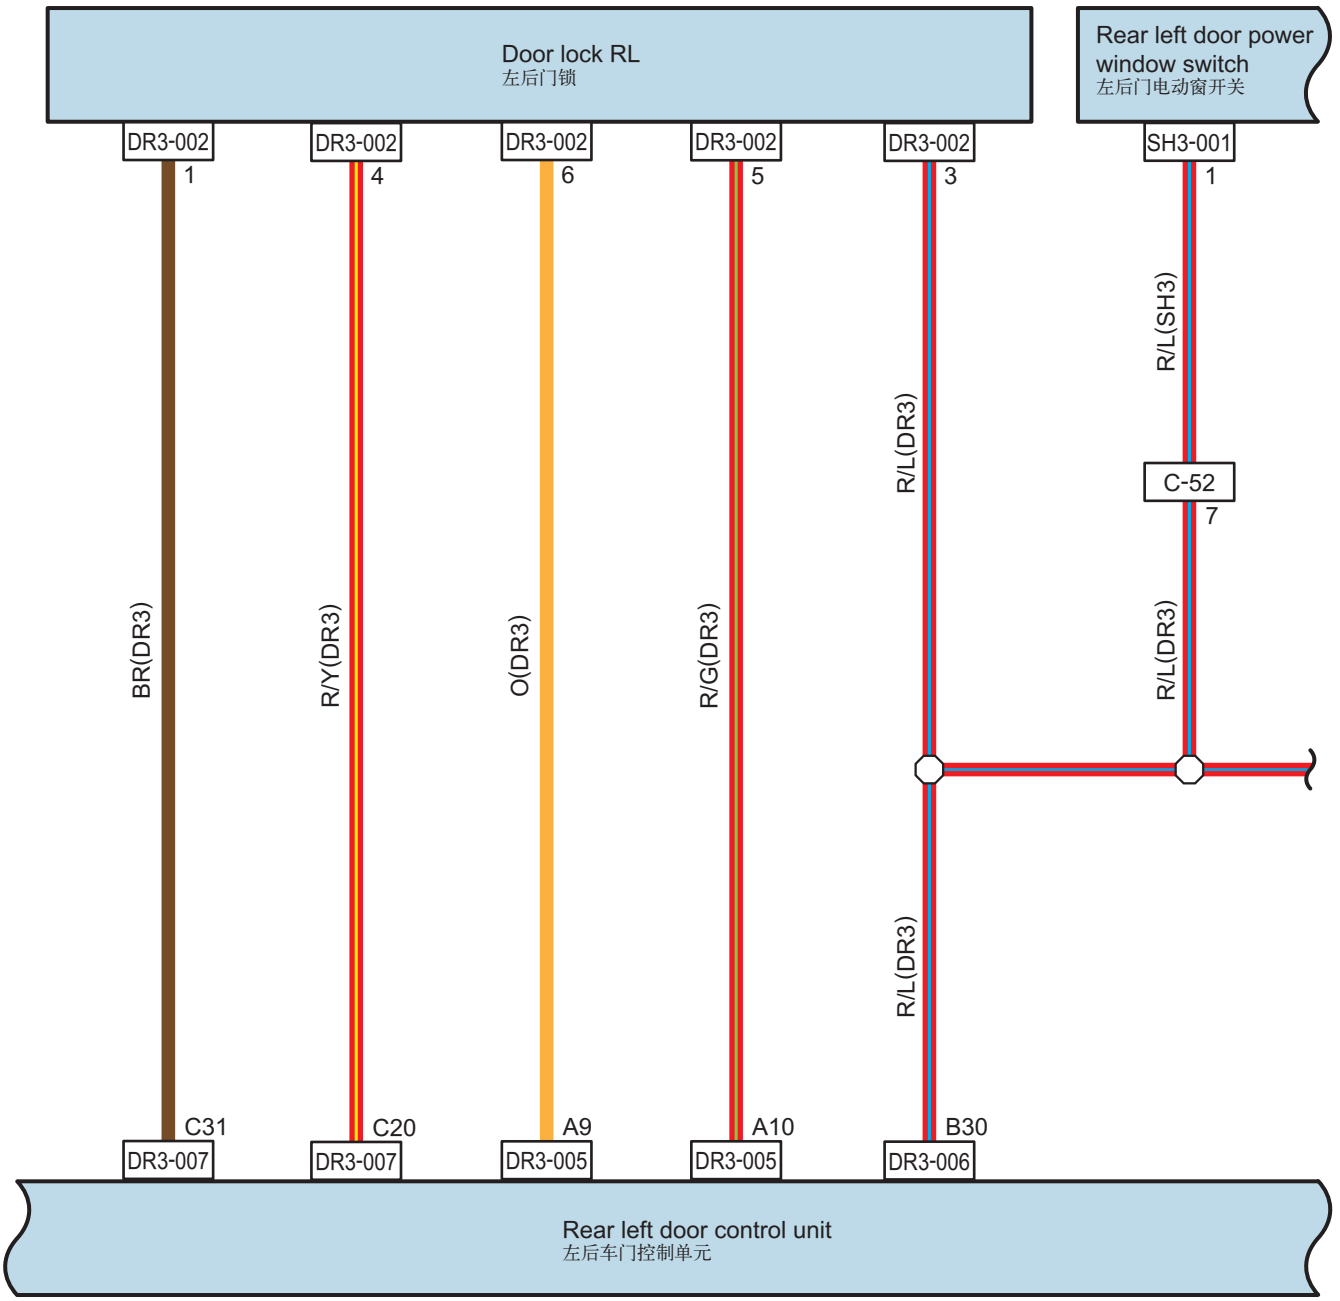

Outside rear view mirror RH
右侧外后视镜
Door lock FR
右前门锁
DR2-007
19
DR2-002
3
DR2-002
1
DR2-002
6
L(DR2)
V(DR2)
R/Y(DR2)
B(DR2)
L(DR2)
B30
DR2-004
C31
DR2-005
C20
DR2-005
A9
DR2-003
Front right door control unit
右前车门控制单元

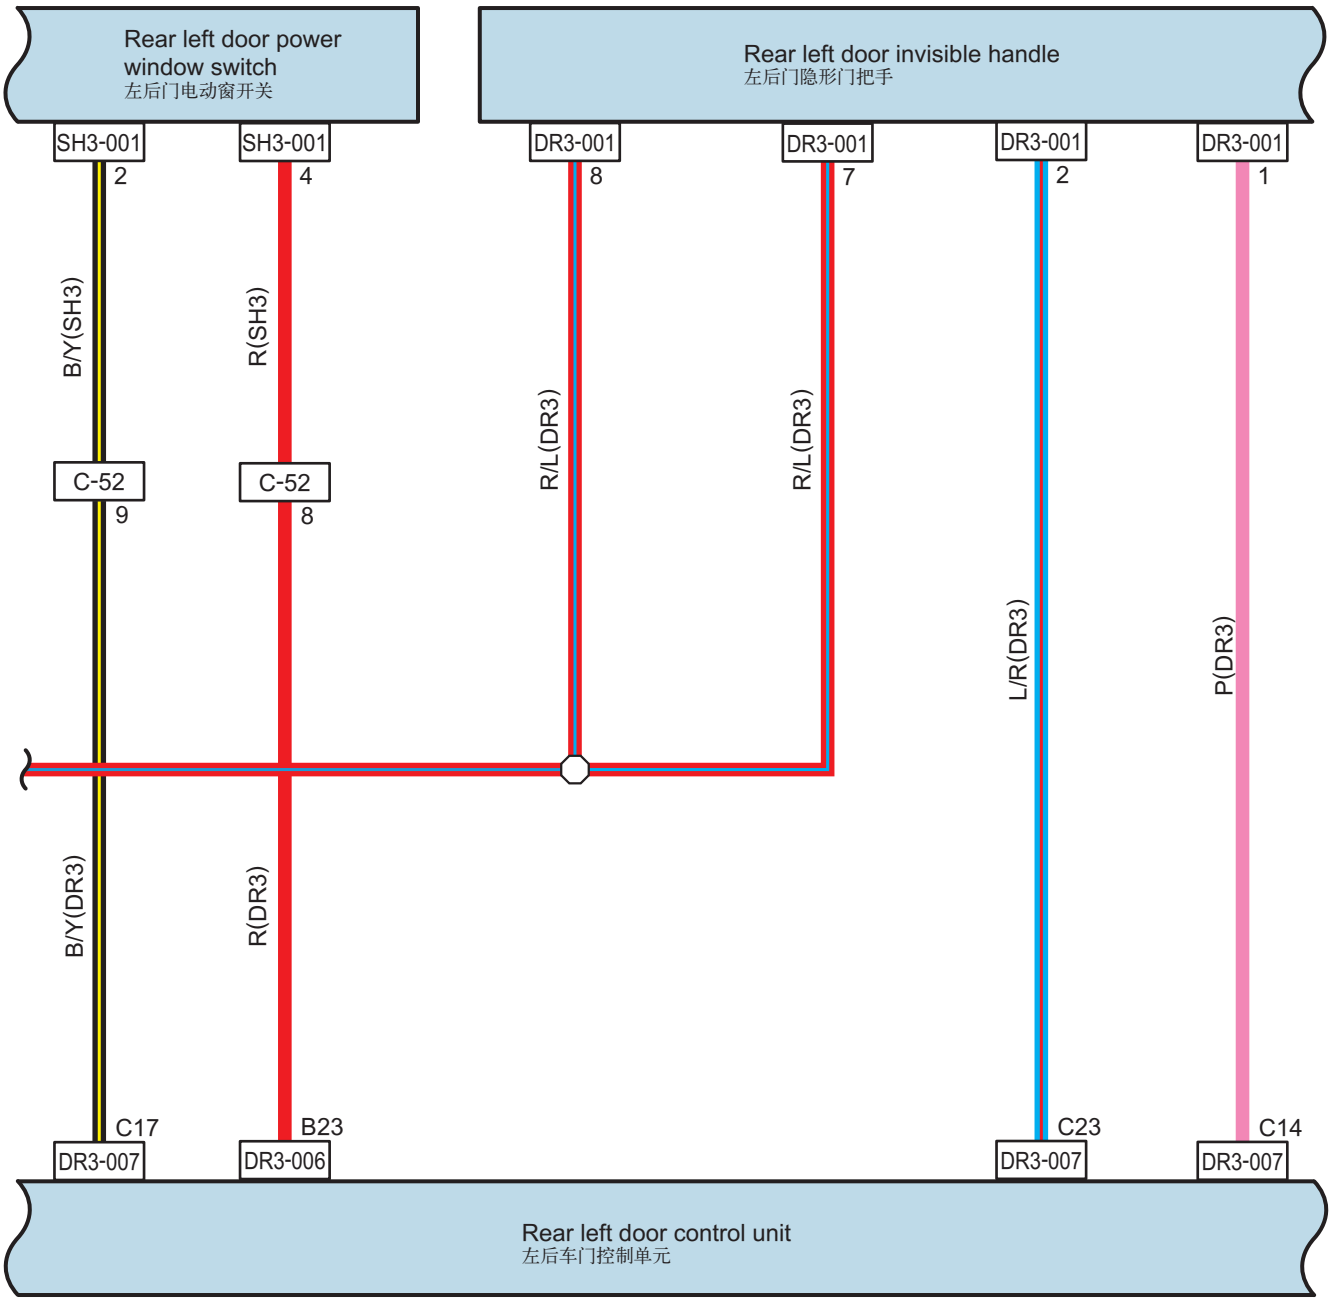

Door lock FR
右前门锁
Door power window switch FR
右前门电动窗开关
DR2-002
5
DR2-002
2
SH2-001
1
SH2-001
2
SH2-001
4
G/L(DR2)
L(DR2)
L(SH2)
C-10
12
L(DR2)
W/G(SH2)
G/R(SH2)
C-10
13
C-10
3
W/G(DR2)
G/R(DR2)
A10
DR2-003
C19
DR2-005
B23
DR2-004
Front right door control unit
右前车门控制单元

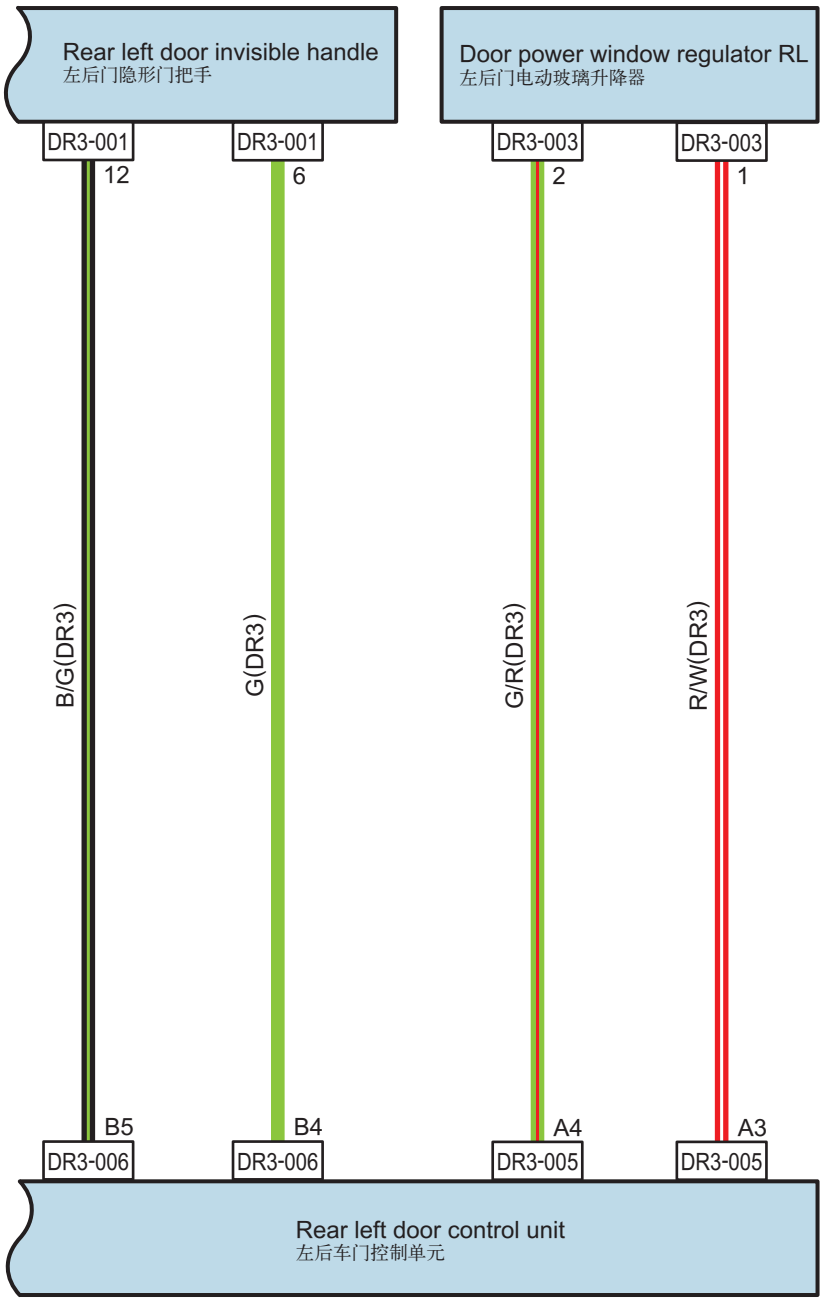

Door invisible handle FR
右前门隐形门把手
DR2-001
2
DR2-001
1
DR2-001
12
DR2-001
6
DR2-001
8
DR2-001
7
R/L(DR2)
L/O(DR2)
Y/B(DR2)
B/Y(DR2)
L(DR2)
L(DR2)
C23
DR2-005
C14
DR2-005
B5
DR2-004
B4
DR2-004
Front right door control unit
右前车门控制单元

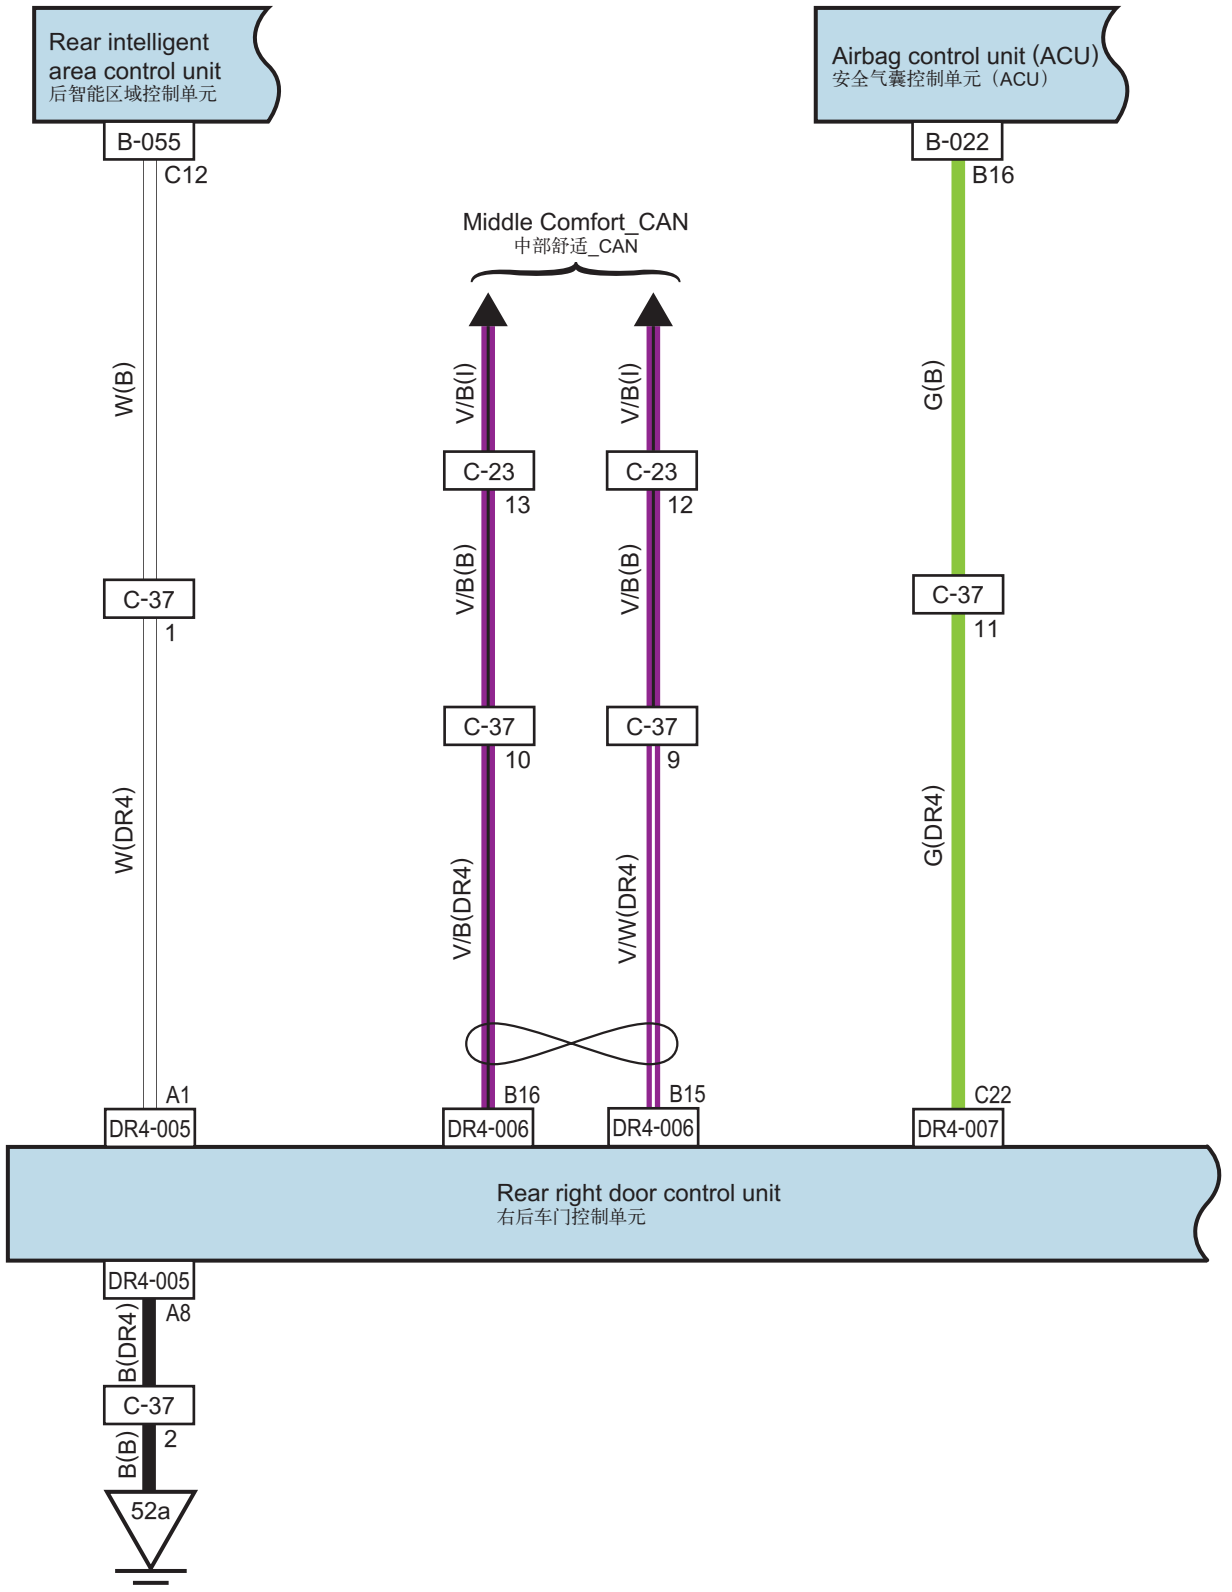

Door power window regulator FR
右前门电动玻璃升降器
DR2-008
1
DR2-008
2
G/R(DR2)
R/W(DR2)
A4
DR2-003
A3
DR2-003
Front right door control unit
右前车门控制单元

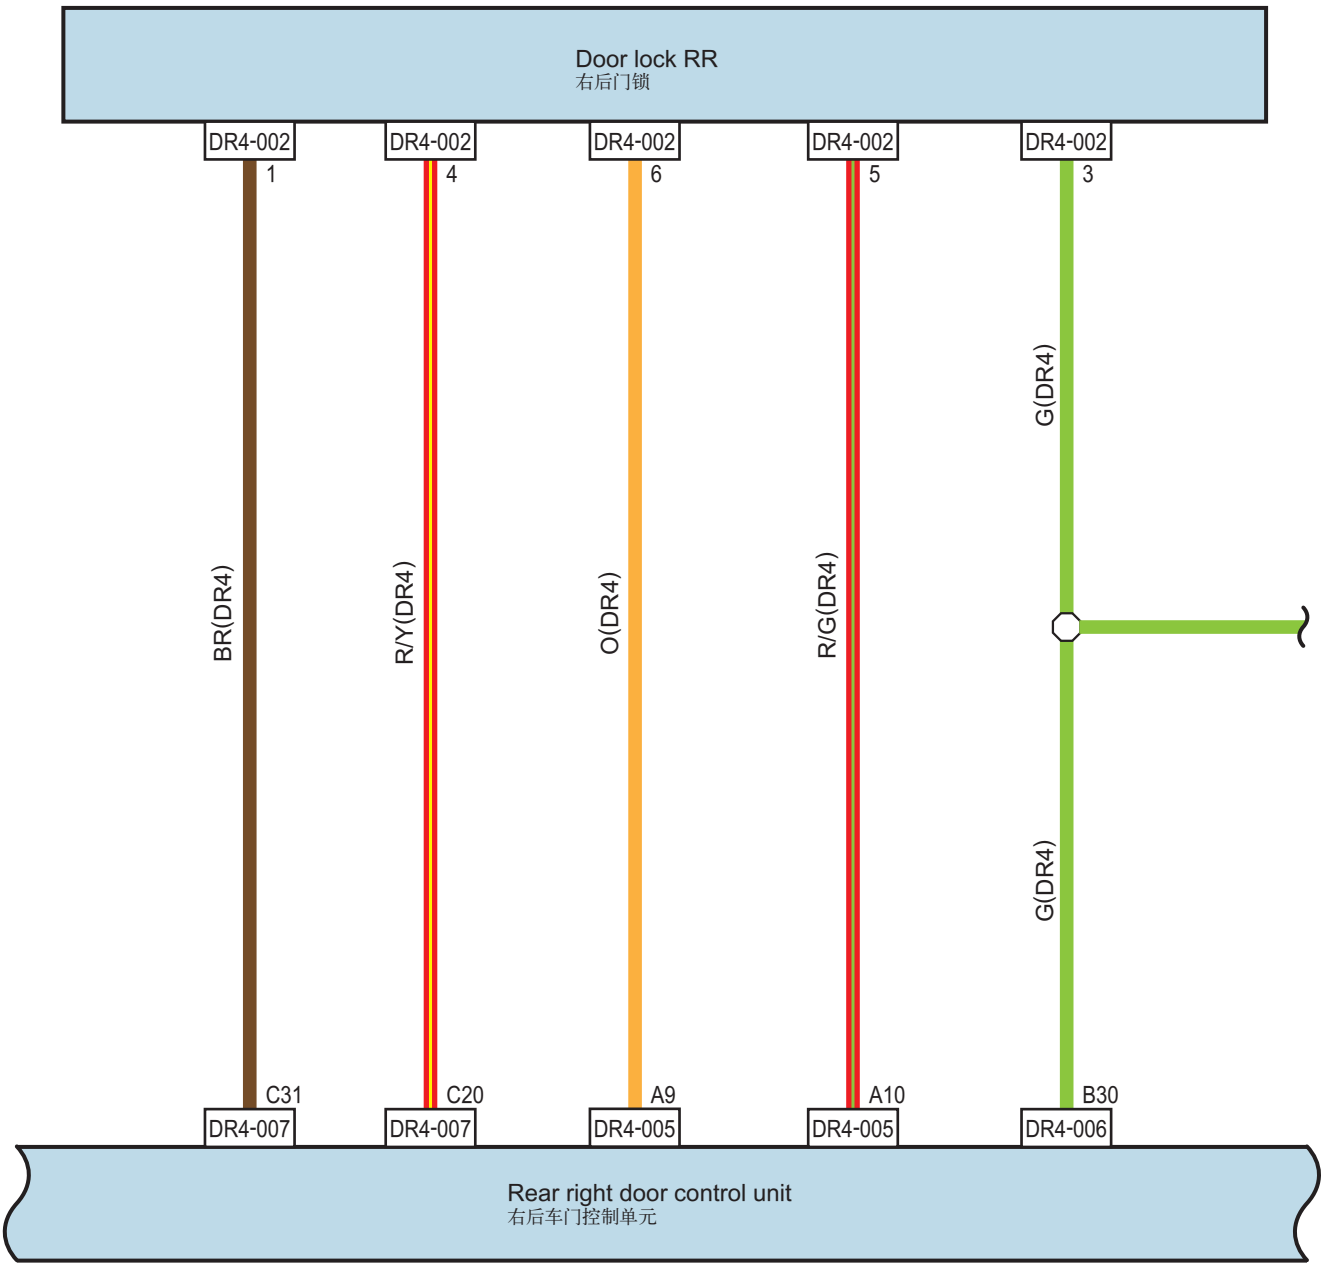

Rear intelligent area control unit
后智能区域控制单元
B-073
K26
W(B)
C-36
2
W(DR3)
A1
DR3-005
Middle Comfort_CAN
中部舒适_CAN
V/B(I)
C-23
13
V/B(B)
C-36
10
V/B(DR3)
B16
DR3-006
V/B(I)
C-23
12
V/B(B)
C-36
11
V/W(DR3)
B15
DR3-006
Airbag control unit (ACU)
安全气囊控制单元（ACU）
B-022
B16
G(B)
C-36
9
G(DR3)
C22
DR3-007
Rear left door control unit
左后车门控制单元
DR3-005
A8
B(DR3)
C-36
16
B(B)
57a

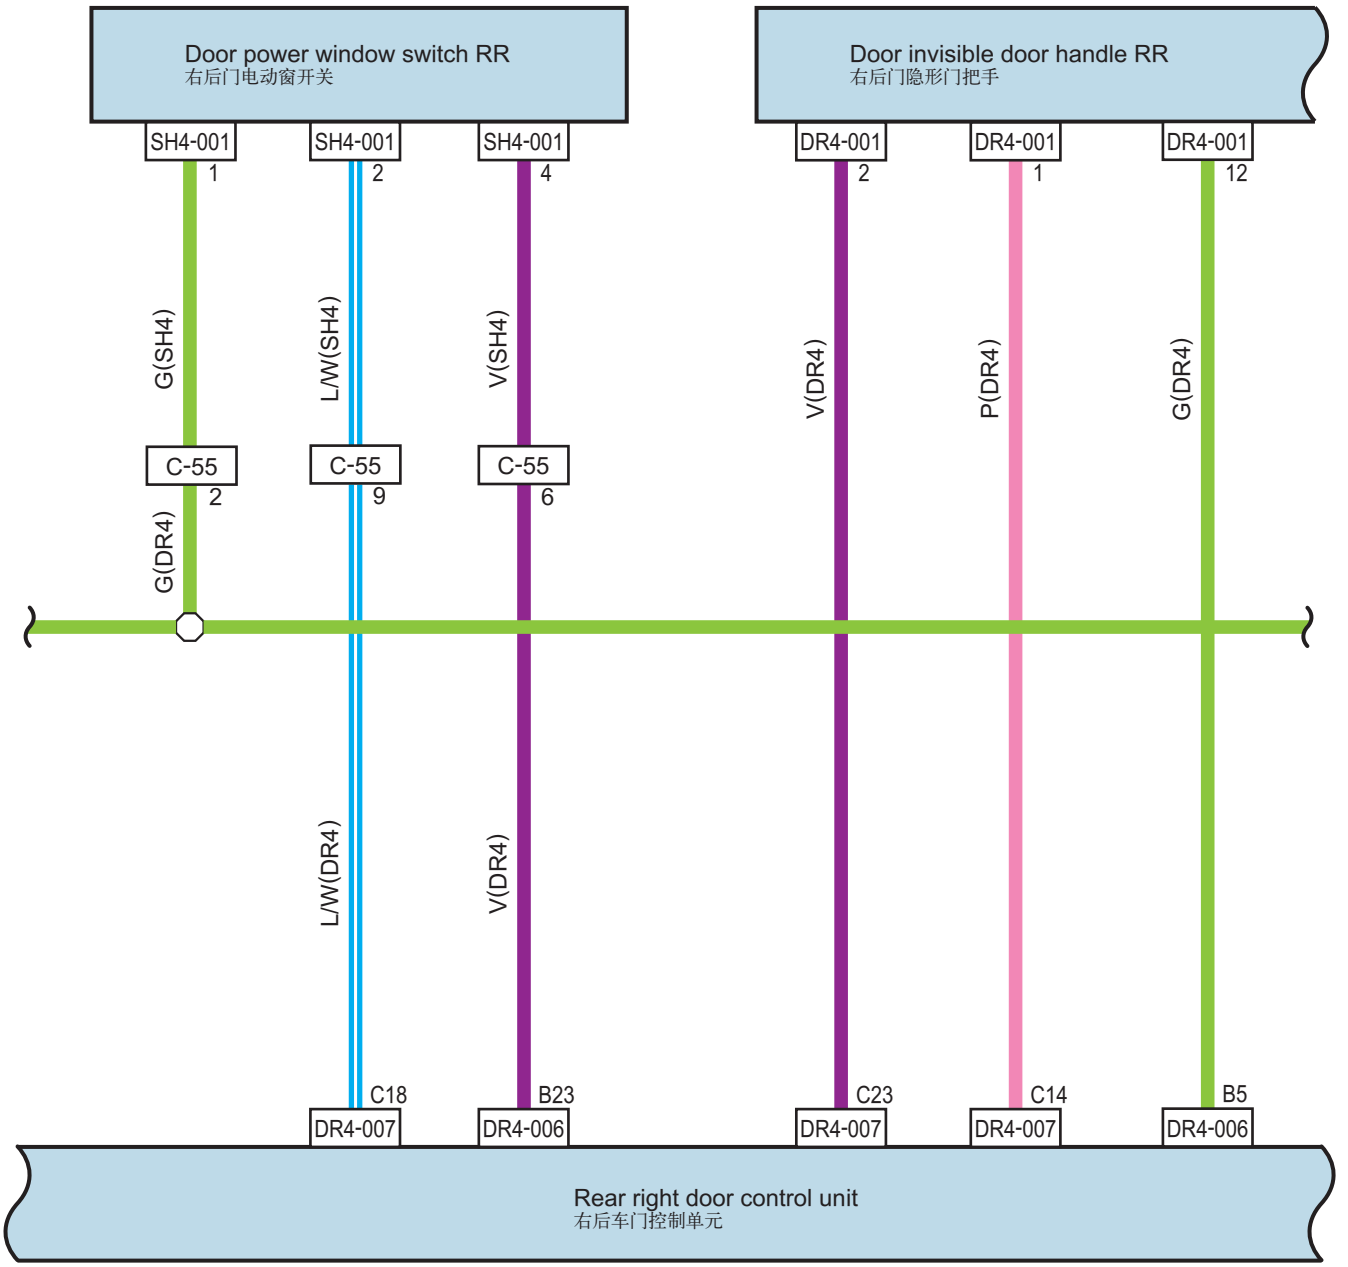

Door lock RL
左后门锁
Rear left door power window switch
左后门电动窗开关
DR3-002
1
DR3-002
4
DR3-002
6
DR3-002
5
DR3-002
3
SH3-001
1
R/L(SH3)
C-52
7
BR(DR3)
R/Y(DR3)
O(DR3)
R/G(DR3)
R/L(DR3)
R/L(DR3)
R/L(DR3)
C31
C20
A9
A10
B30
DR3-007
DR3-007
DR3-005
DR3-005
DR3-006
Rear left door control unit
左后车门控制单元

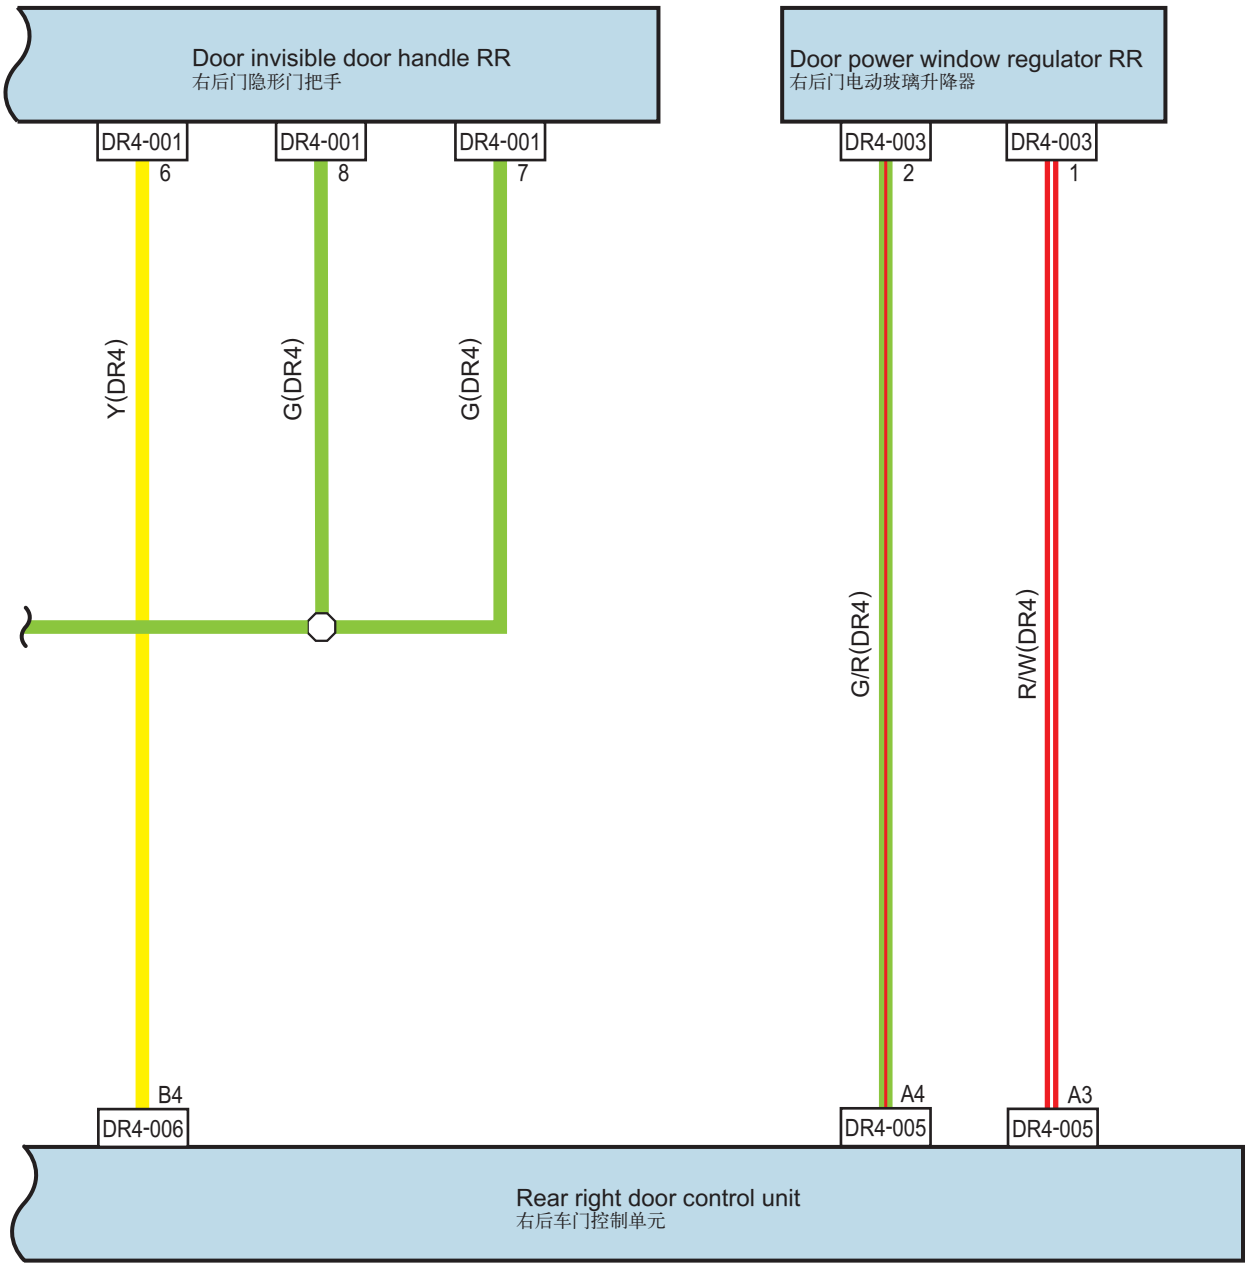

Rear left door power window switch
左后门电动窗开关
Rear left door invisible handle
左后门隐形门把手
SH3-001
2
SH3-001
4
DR3-001
8
DR3-001
7
DR3-001
2
DR3-001
1
B/Y(SH3)
R(SH3)
R/L(DR3)
R/L(DR3)
L/R(DR3)
P(DR3)
C-52
9
C-52
8
B/Y(DR3)
R(DR3)
C17
B23
C23
C14
DR3-007
DR3-006
DR3-007
DR3-007
Rear left door control unit
左后车门控制单元

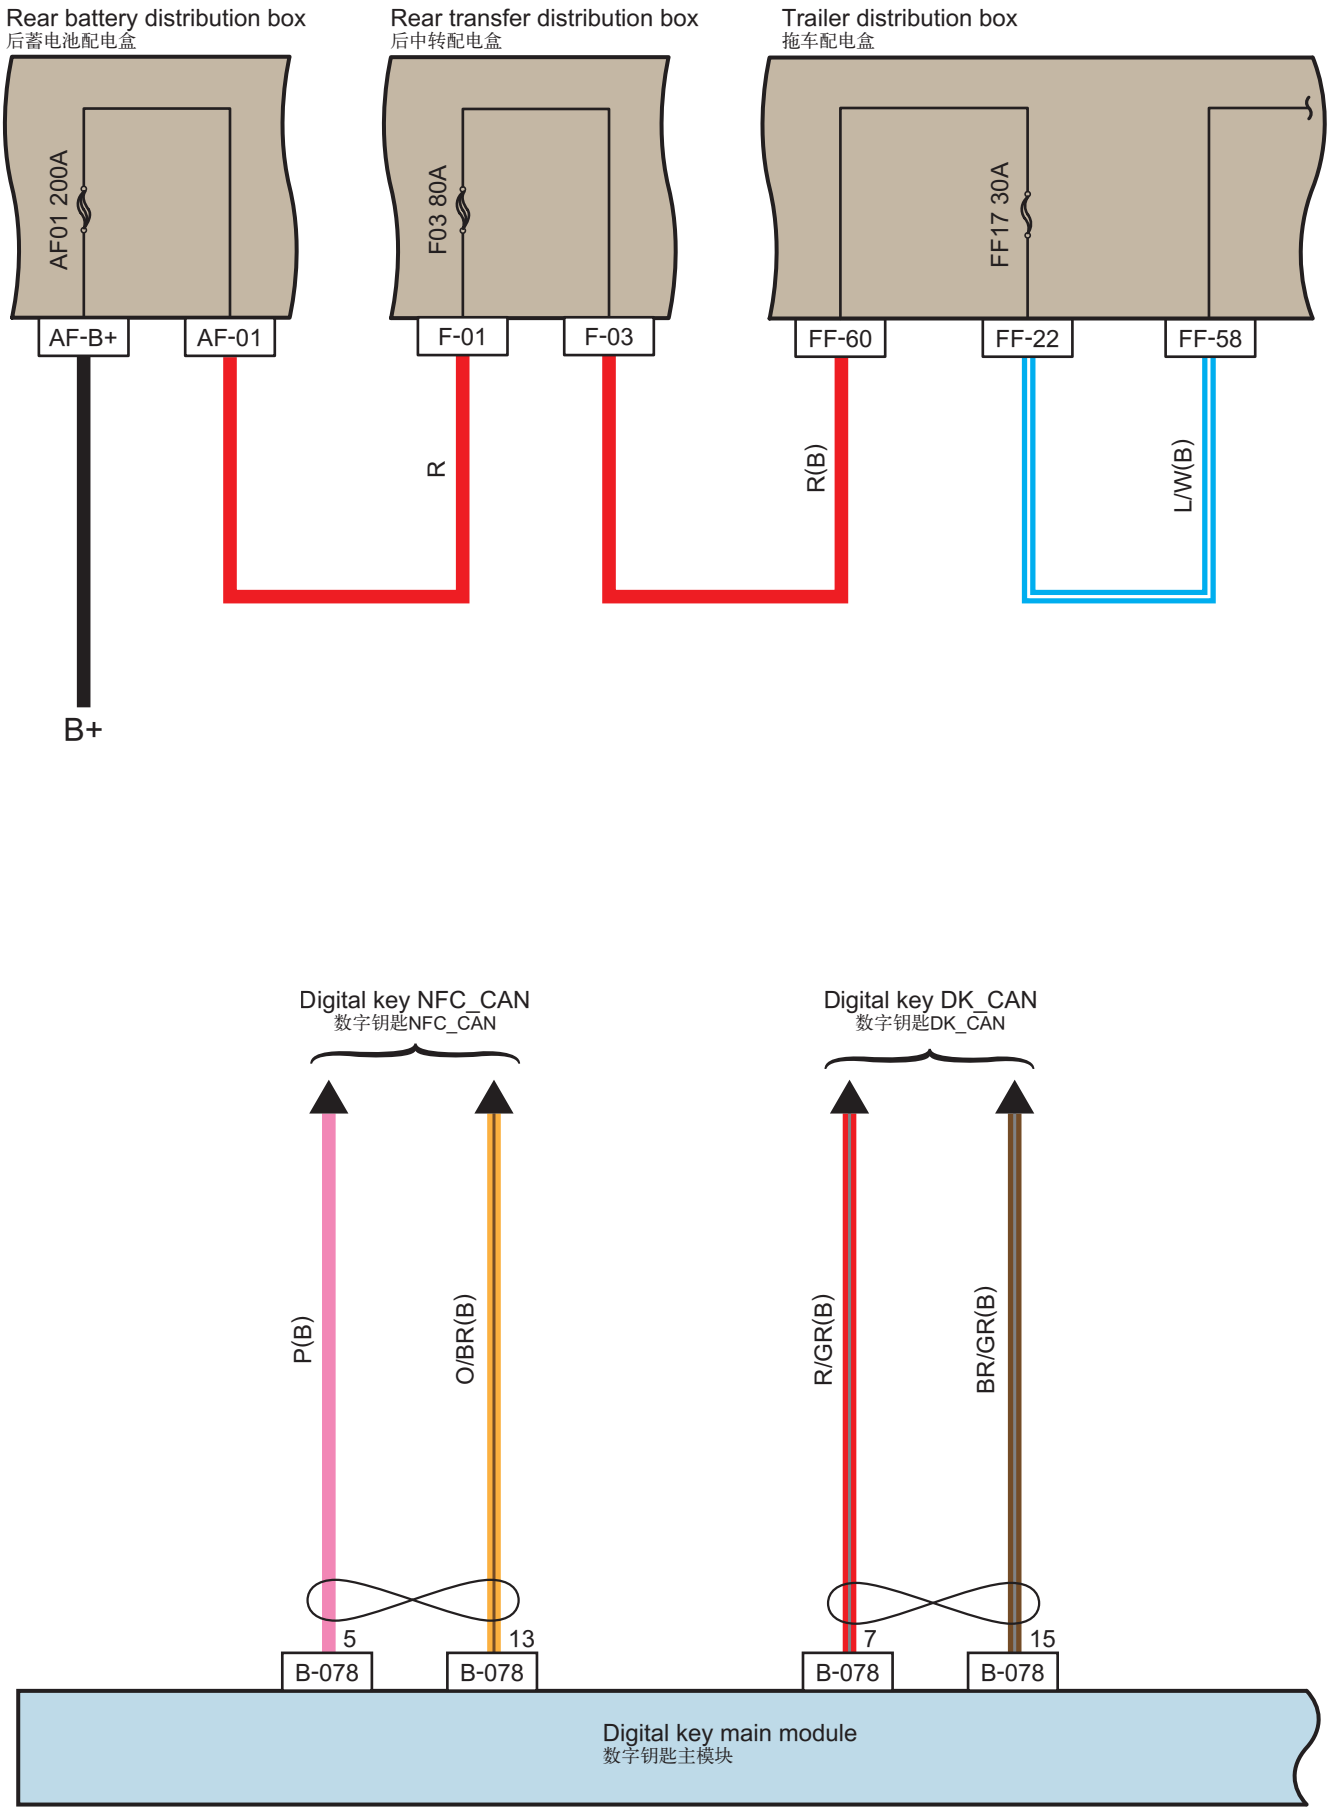

Rear left door invisible handle
左后门隐形门把手
Door power window regulator RL
左后门电动玻璃升降器
DR3-001
12
DR3-001
6
DR3-003
2
DR3-003
1
B/G(DR3)
G(DR3)
G/R(DR3)
R/W(DR3)
B5
DR3-006
B4
DR3-006
A4
DR3-005
A3
DR3-005
Rear left door control unit
左后车门控制单元

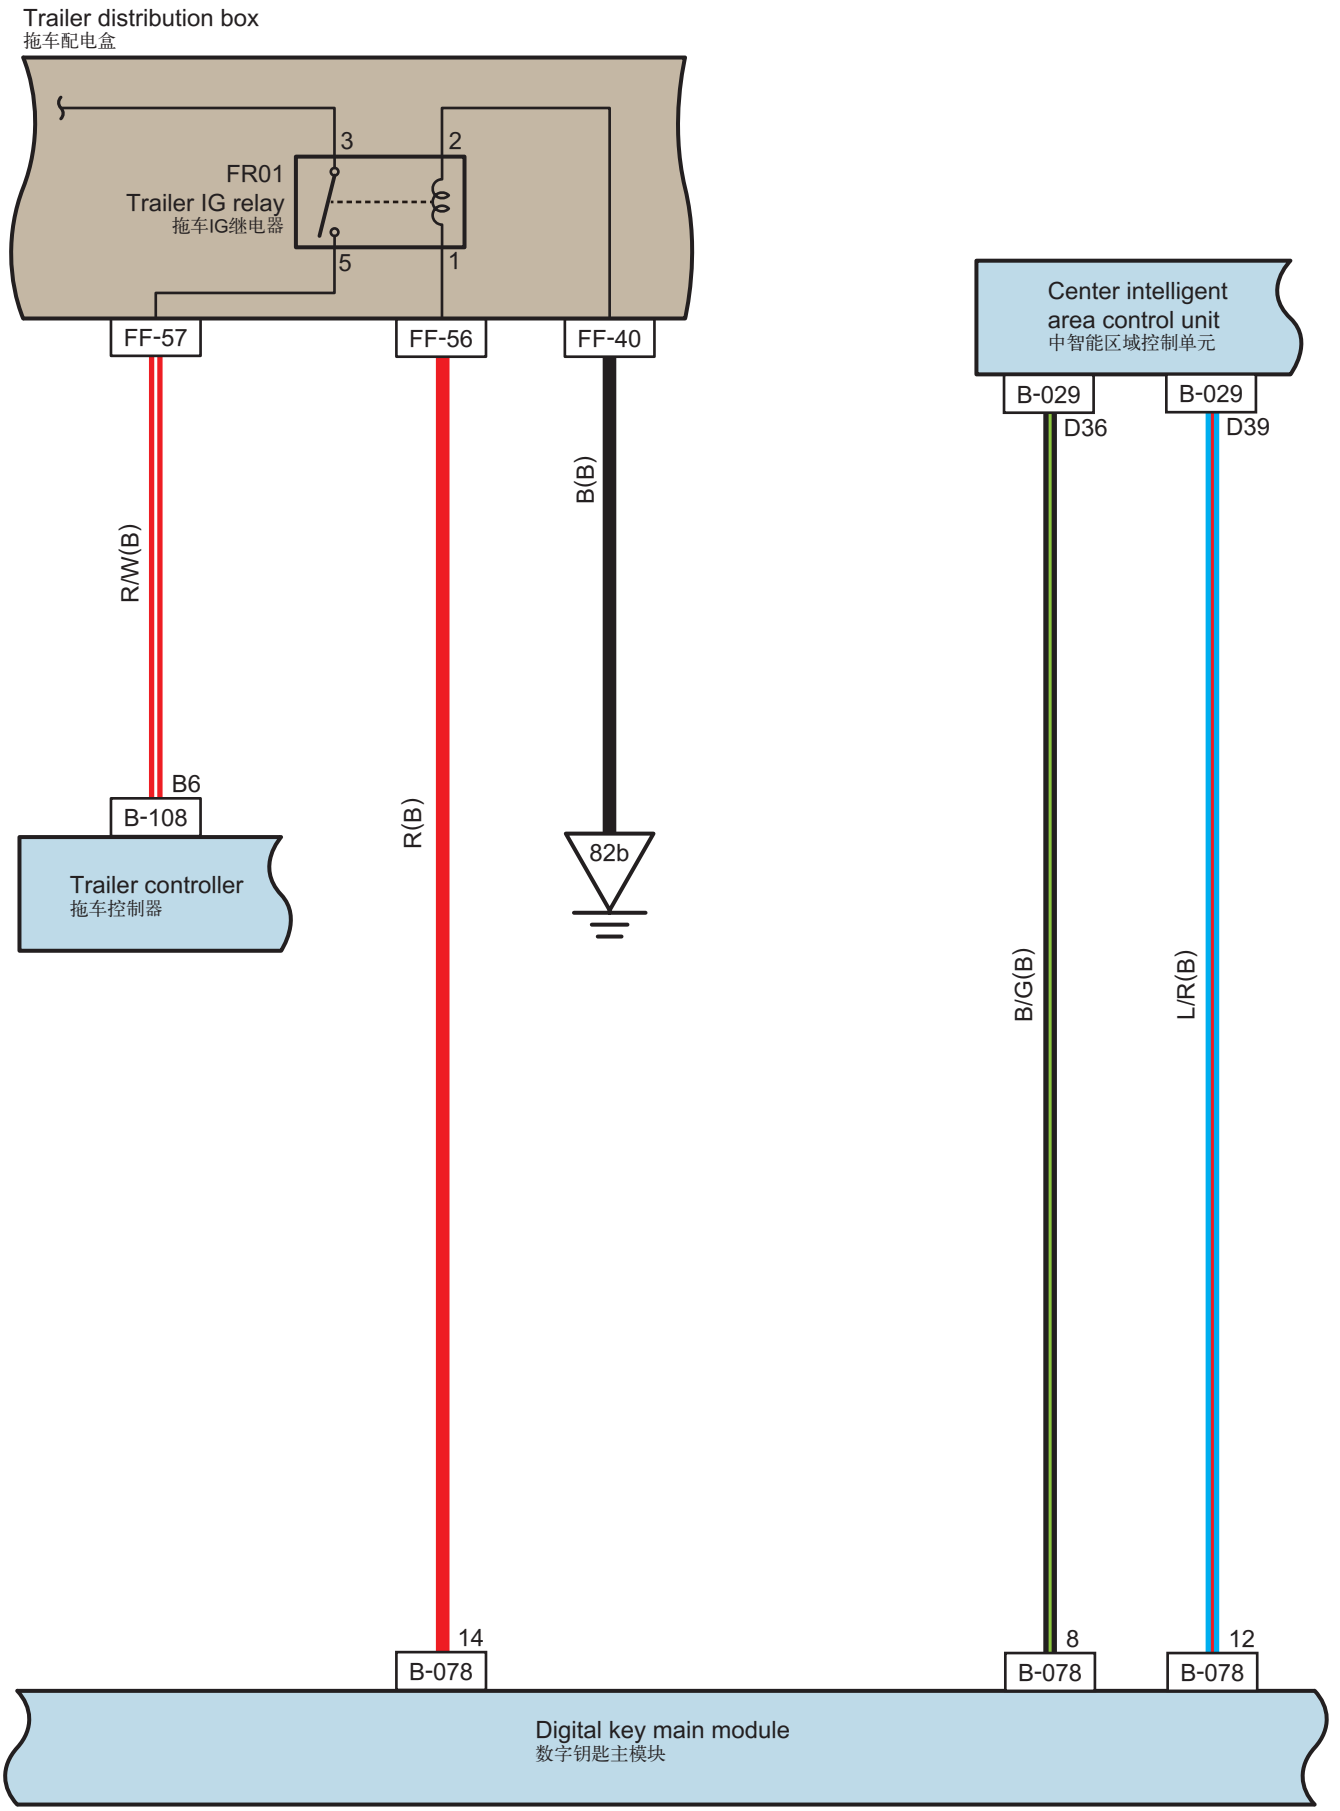

Rear intelligent area control unit
后智能区域控制单元
B-055
C12
W(B)
C-37
1
W(DR4)
A1
DR4-005
Middle Comfort_CAN
中部舒适_CAN
V/B(I)
C-23
13
V/B(B)
C-37
10
V/B(DR4)
B16
DR4-006
V/B(I)
C-23
12
V/B(B)
C-37
9
V/W(DR4)
B15
DR4-006
Airbag control unit (ACU)
安全气囊控制单元（ACU）
B-022
B16
G(B)
C-37
11
G(DR4)
C22
DR4-007
Rear right door control unit
右后车门控制单元
DR4-005
A8
B(DR4)
C-37
2
B(B)
52a

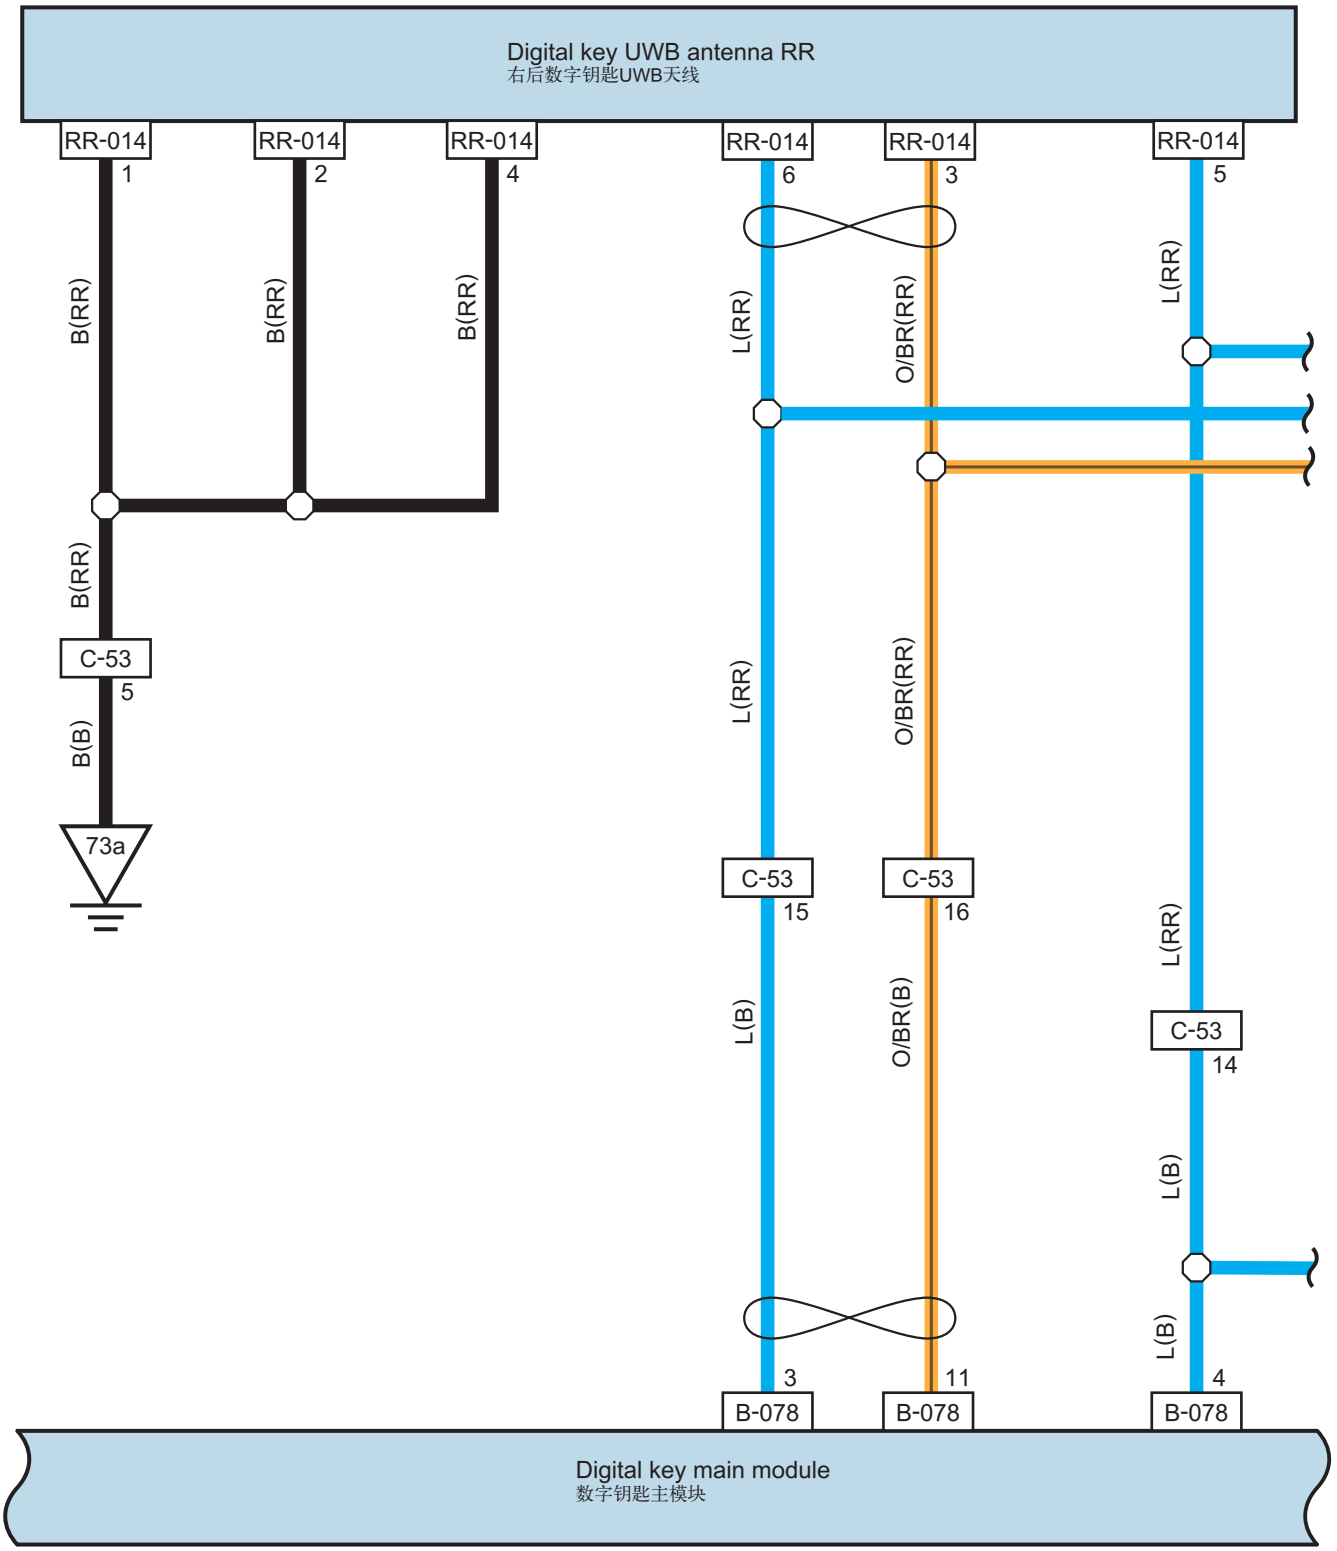

Door lock RR
右后门锁
DR4-002
1
DR4-002
4
DR4-002
6
DR4-002
5
DR4-002
3
BR(DR4)
R/Y(DR4)
O(DR4)
R/G(DR4)
G(DR4)
G(DR4)
C31
DR4-007
C20
DR4-007
A9
DR4-005
A10
DR4-005
B30
DR4-006
Rear right door control unit
右后车门控制单元

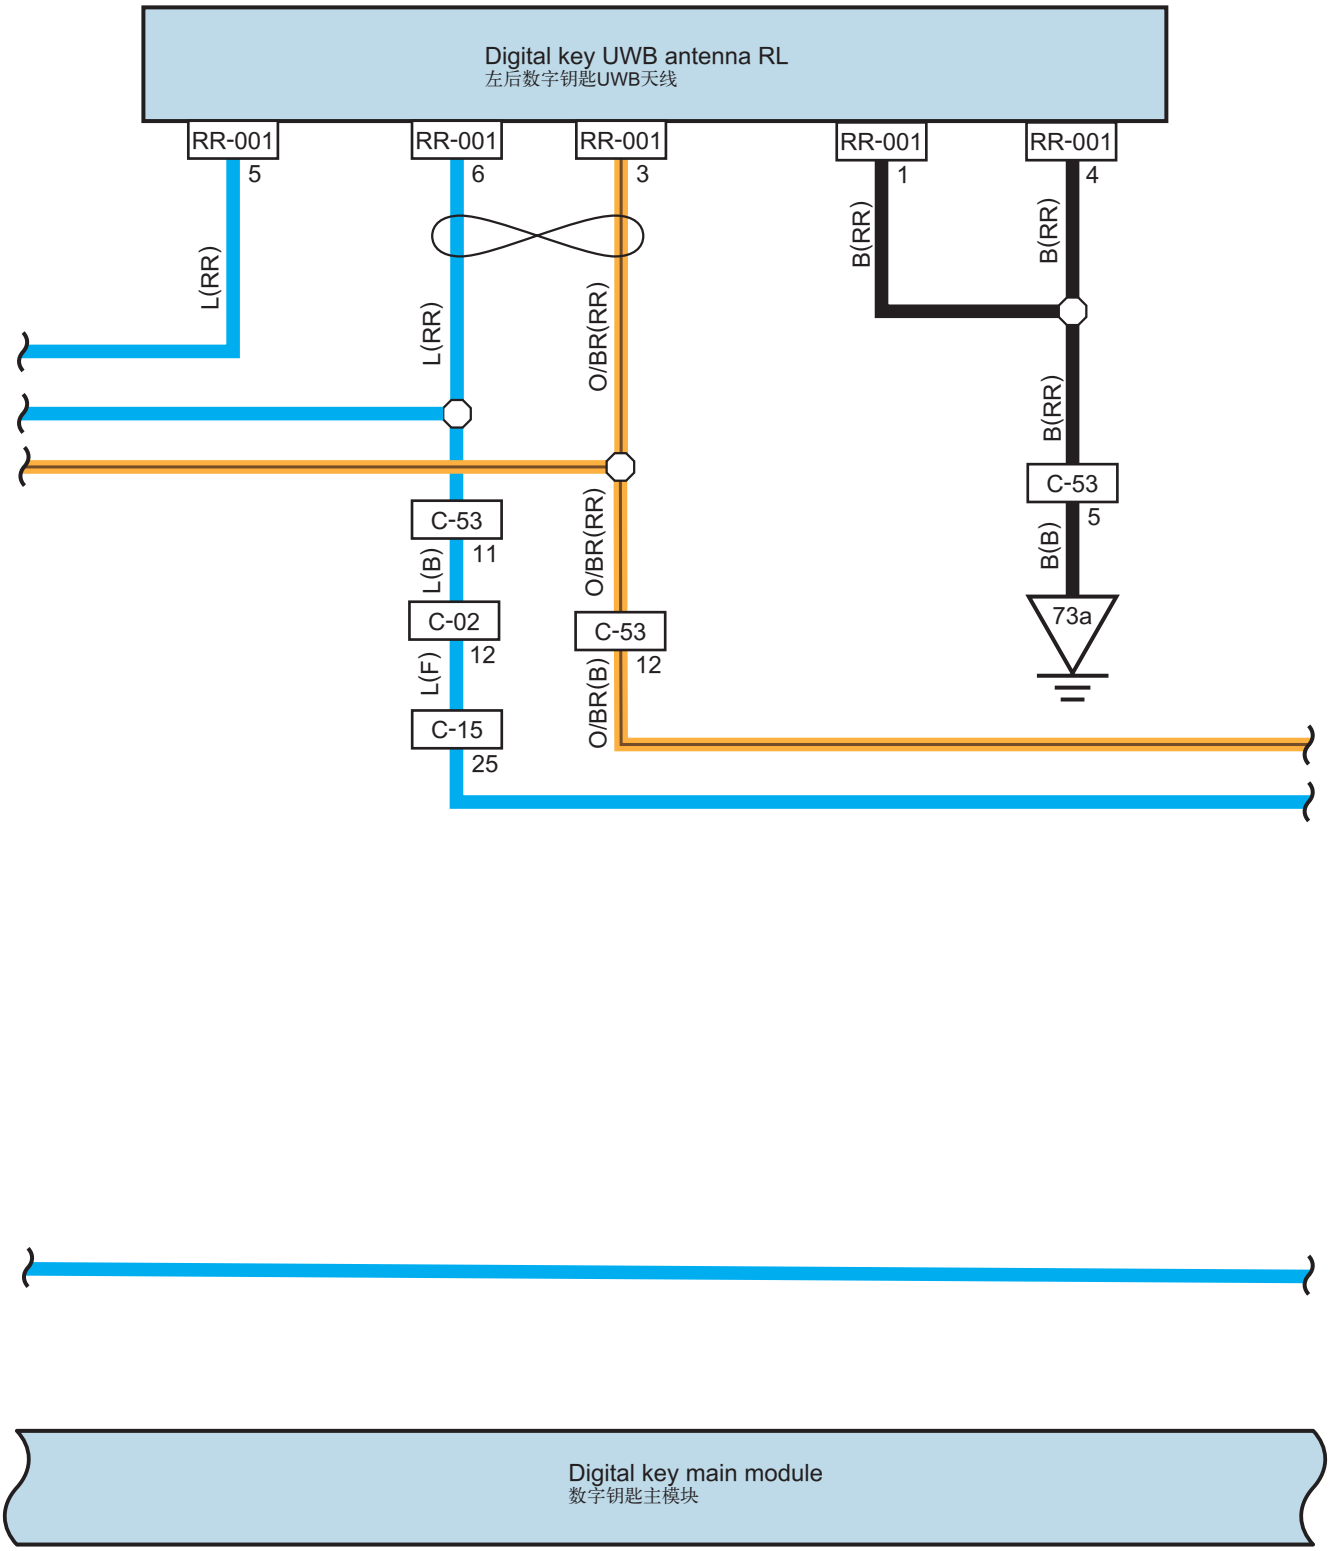

Door power window switch RR
右后门电动窗开关
Door invisible door handle RR
右后门隐形门把手
SH4-001
1
SH4-001
2
SH4-001
4
DR4-001
2
DR4-001
1
DR4-001
12
G(SH4)
L/W(SH4)
V(SH4)
V(DR4)
P(DR4)
G(DR4)
C-55
2
C-55
9
C-55
6
G(DR4)
L/W(DR4)
V(DR4)
C18
B23
C23
C14
B5
DR4-007
DR4-006
DR4-007
DR4-007
DR4-006
Rear right door control unit
右后车门控制单元

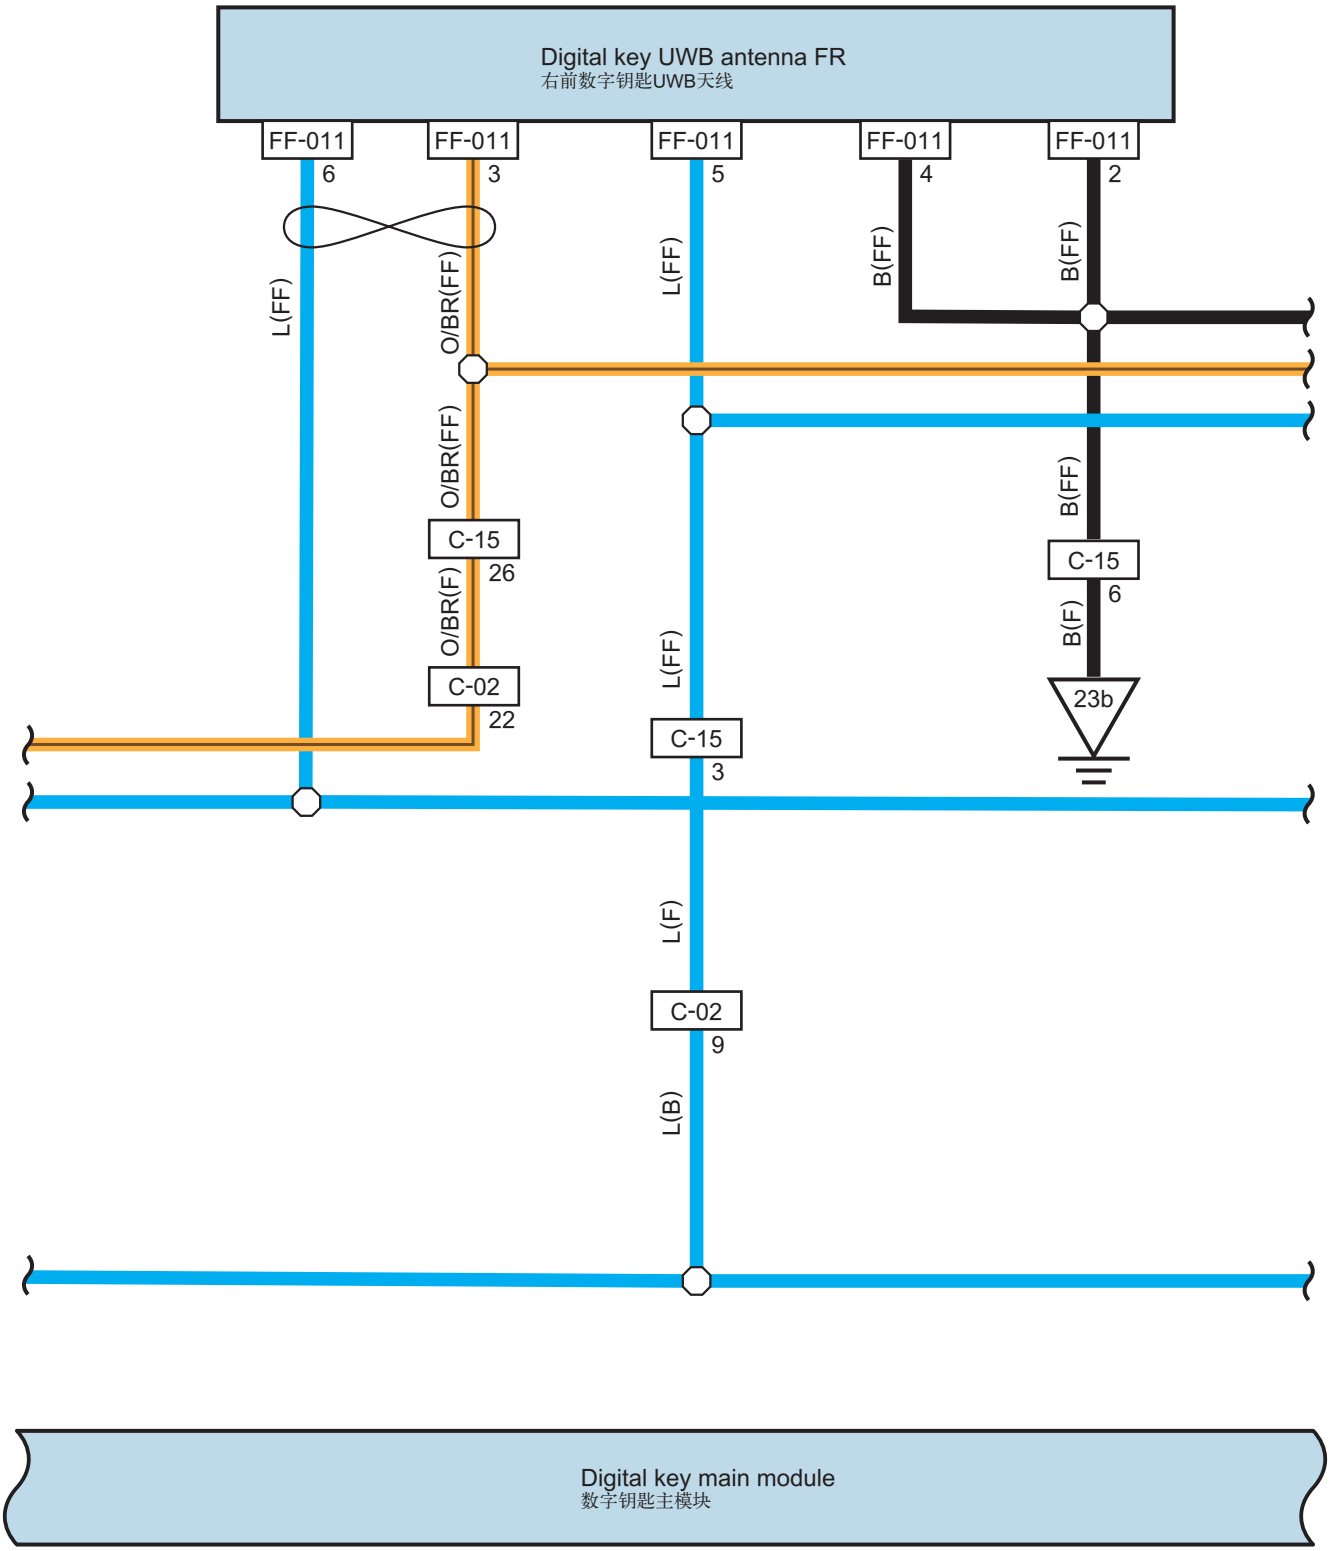

Door invisible door handle RR
右后门隐形门把手
DR4-001
6
DR4-001
8
DR4-001
7
Y(DR4)
G(DR4)
G(DR4)
Door power window regulator RR
右后门电动玻璃升降器
DR4-003
2
DR4-003
1
G/R(DR4)
R/W(DR4)
B4
DR4-006
A4
DR4-005
A3
DR4-005
Rear right door control unit
右后车门控制单元

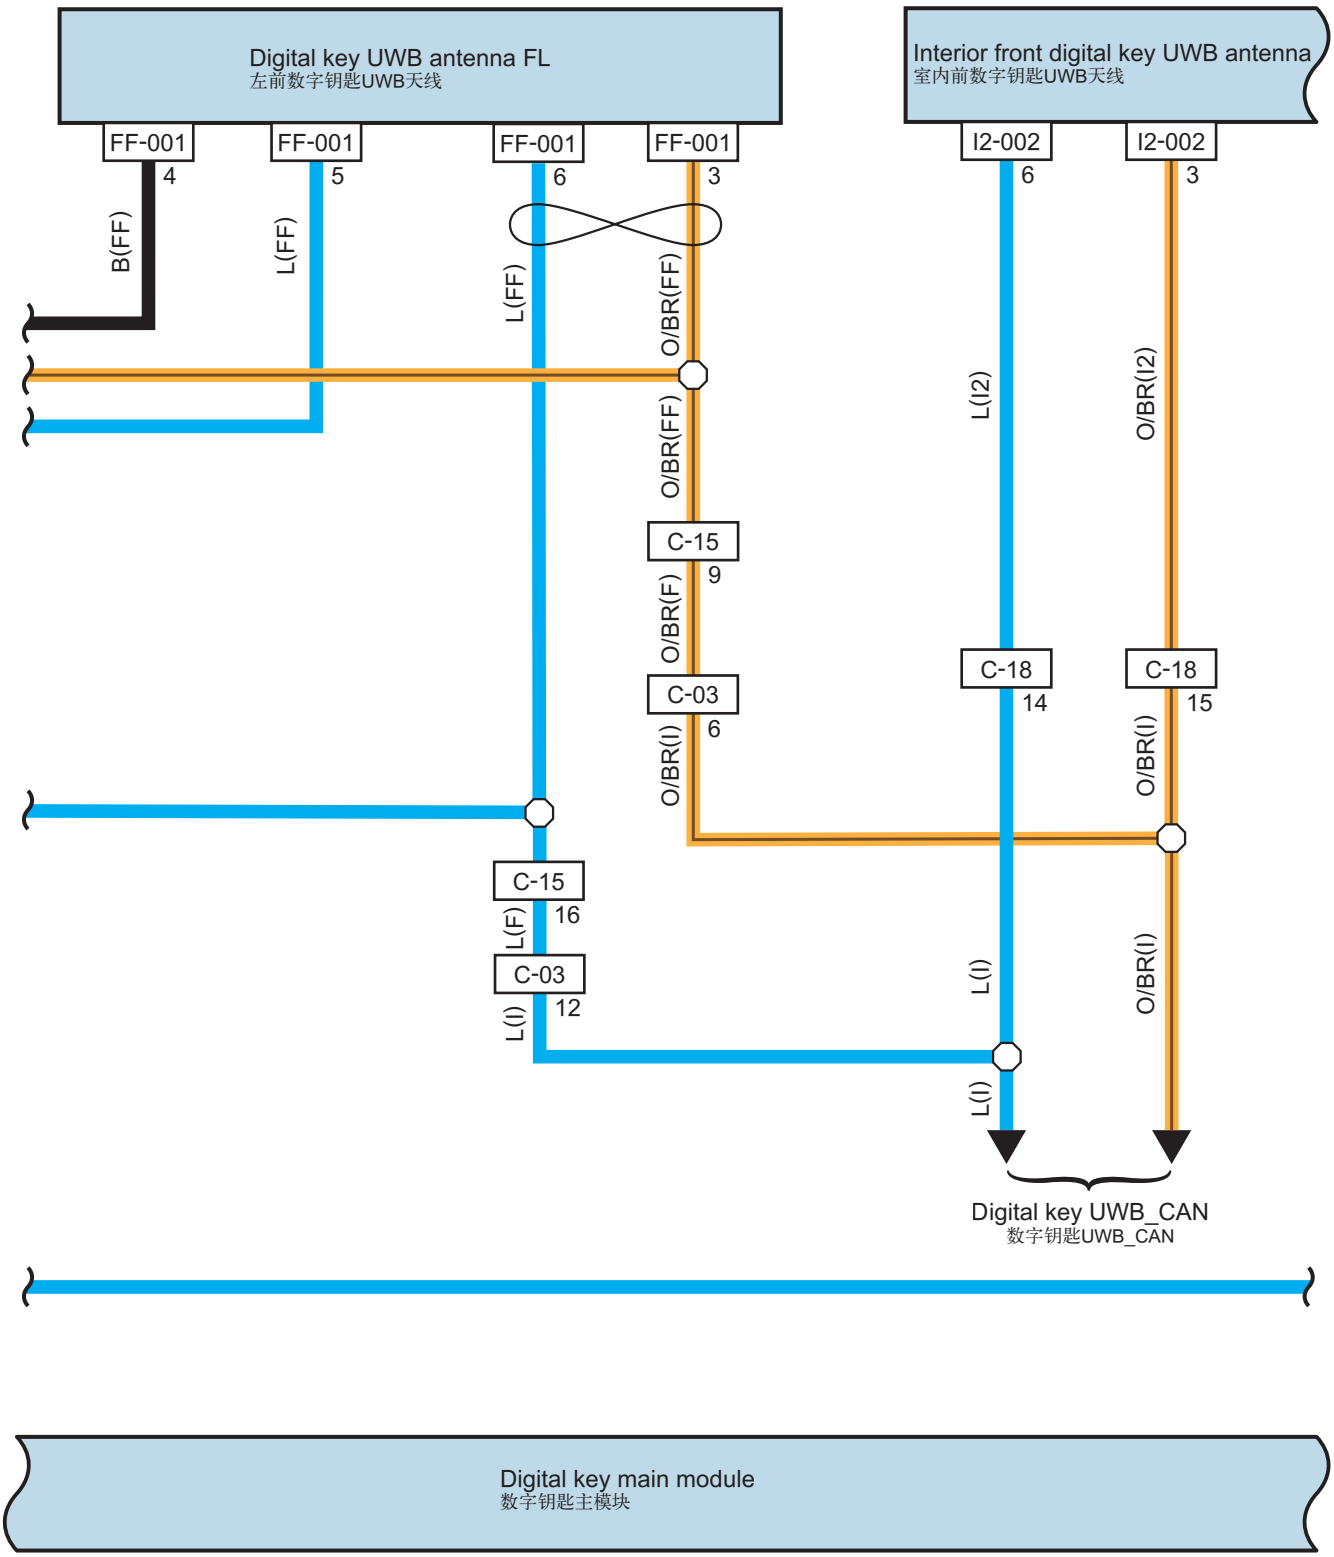

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
Rear transfer distribution box
后中转配电盒
F03 80A
F-01
F-03
R
Trailer distribution box
拖车配电盒
FF17 30A
FF-60
FF-22
FF-58
R(B)
L/W(B)
Digital key NFC_CAN
数字钥匙NFC_CAN
P(B)
O/BR(B)
5
13
B-078
B-078
Digital key DK_CAN
数字钥匙DK_CAN
R/GR(B)
BR/GR(B)
7
15
B-078
B-078
Digital key main module
数字钥匙主模块

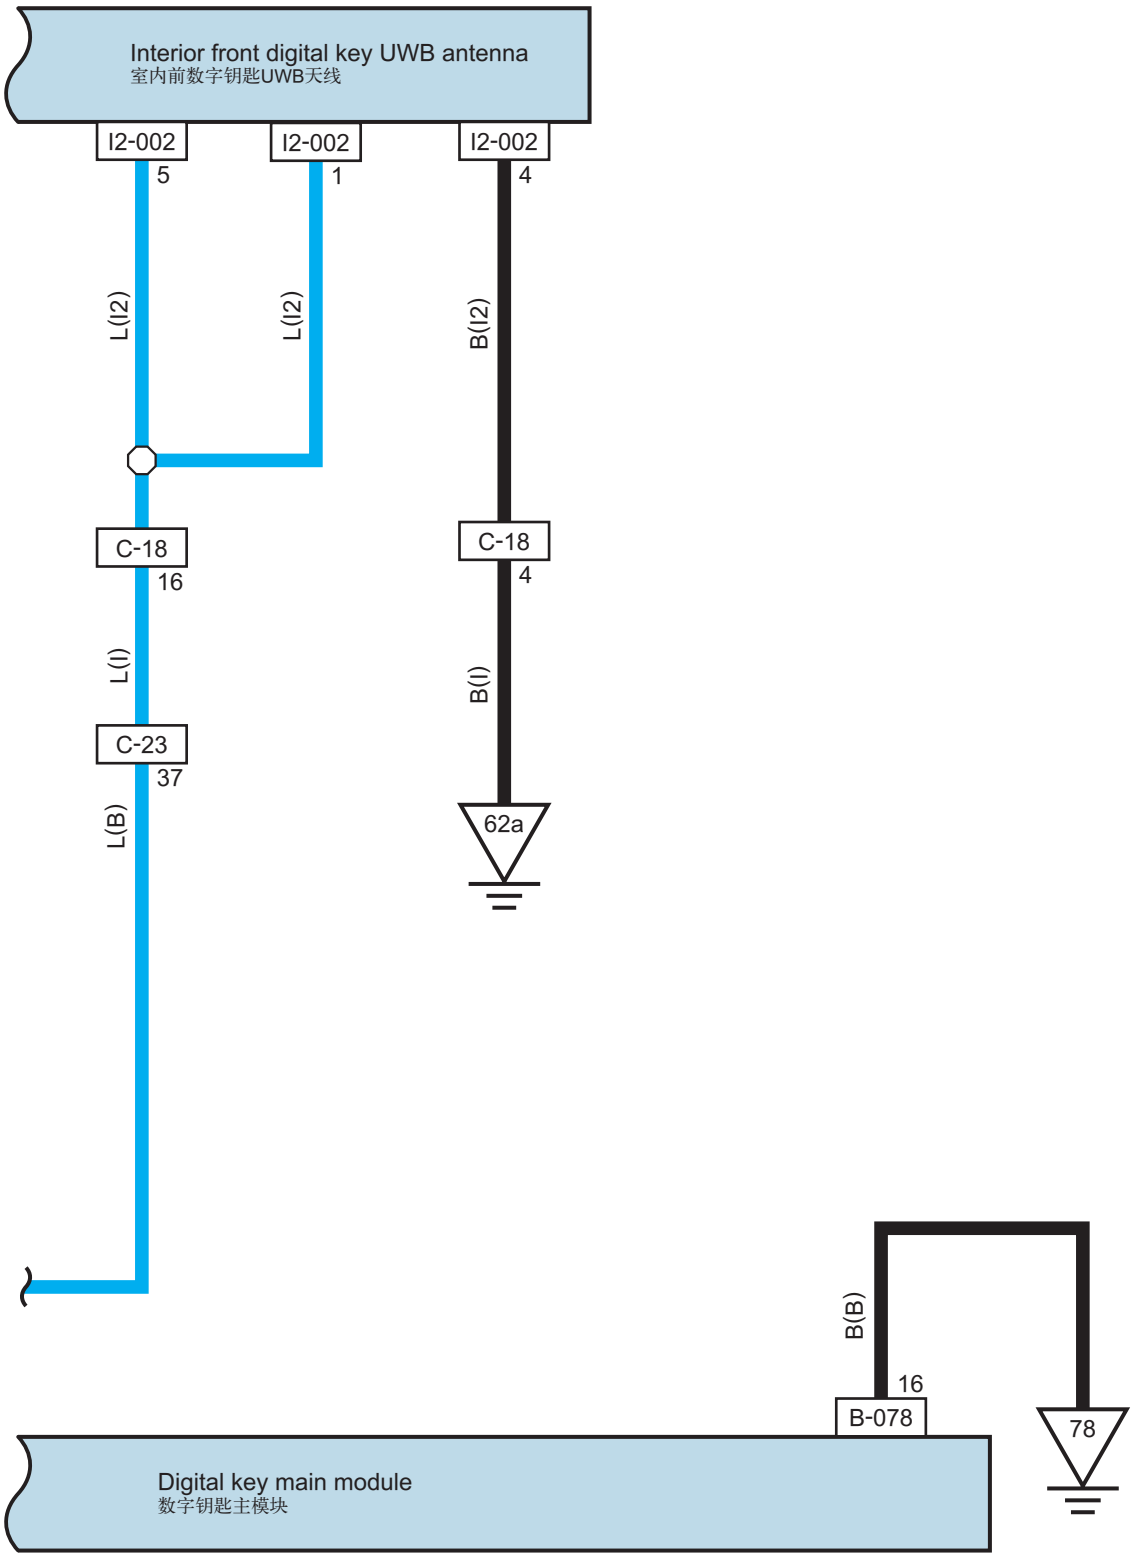

Trailer distribution box
拖车配电盒
3
2
FR01
Trailer IG relay
拖车IG继电器
5
1
FF-57
FF-56
FF-40
R/W(B)
B6
B-108
Trailer controller
拖车控制器
R(B)
B(B)
82b
Center intelligent area control unit
中智能区域控制单元
B-029
D36
B-029
D39
B/G(B)
L/R(B)
14
B-078
8
B-078
12
B-078
Digital key main module
数字钥匙主模块

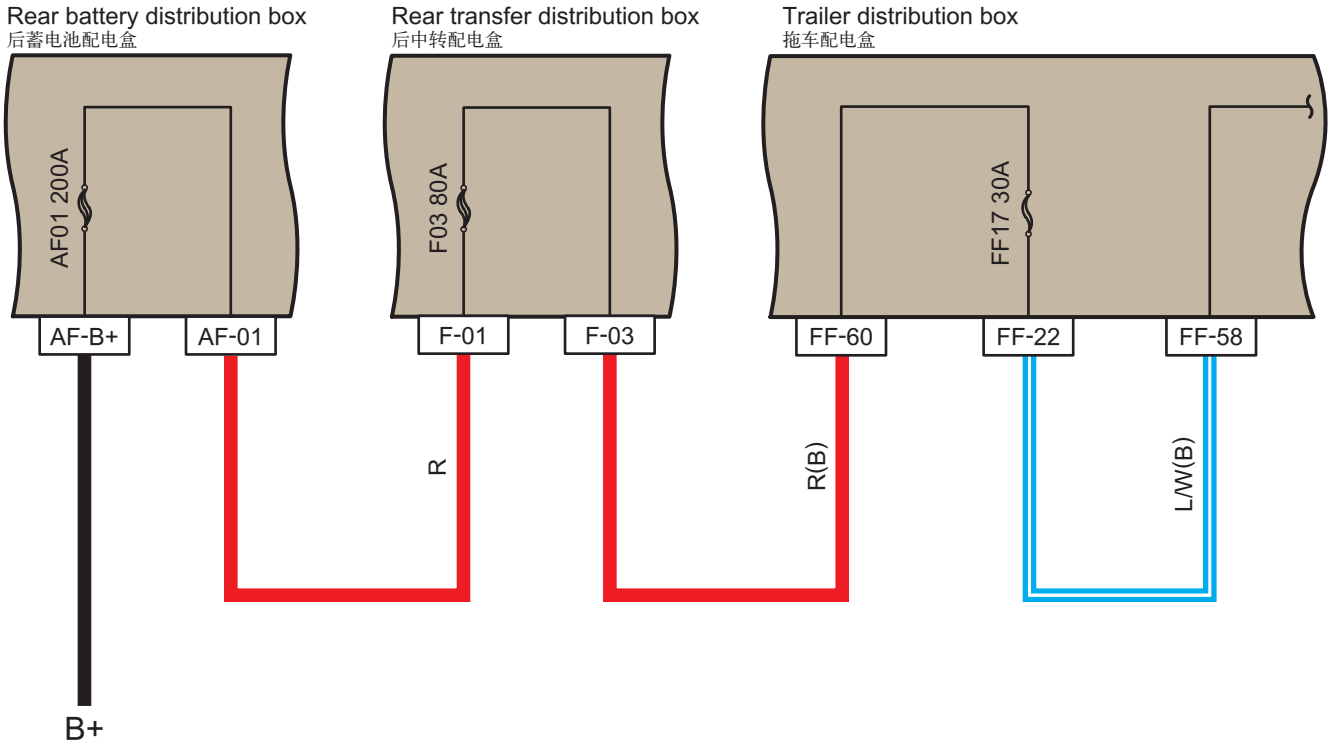

Digital key UWB antenna RR
右后数字钥匙UWB天线
RR-014
1
RR-014
2
RR-014
4
RR-014
6
RR-014
3
RR-014
5
B(RR)
B(RR)
B(RR)
B(RR)
C-53
5
B(B)
73a
L(RR)
O/BR(RR)
L(RR)
L(RR)
O/BR(RR)
C-53
15
C-53
16
L(B)
O/BR(B)
L(RR)
C-53
14
L(B)
L(B)
3
11
4
B-078
B-078
B-078
Digital key main module
数字钥匙主模块


Digital key UWB antenna RL
左后数字钥匙UWB天线
RR-001
5
L(RR)
RR-001
6
L(RR)
C-53
11
L(B)
C-02
12
L(F)
C-15
25
RR-001
3
O/BR(RR)
O/BR(RR)
C-53
12
O/BR(B)
RR-001
1
B(RR)
RR-001
4
B(RR)
B(RR)
C-53
5
B(B)
73a
Digital key main module
数字钥匙主模块

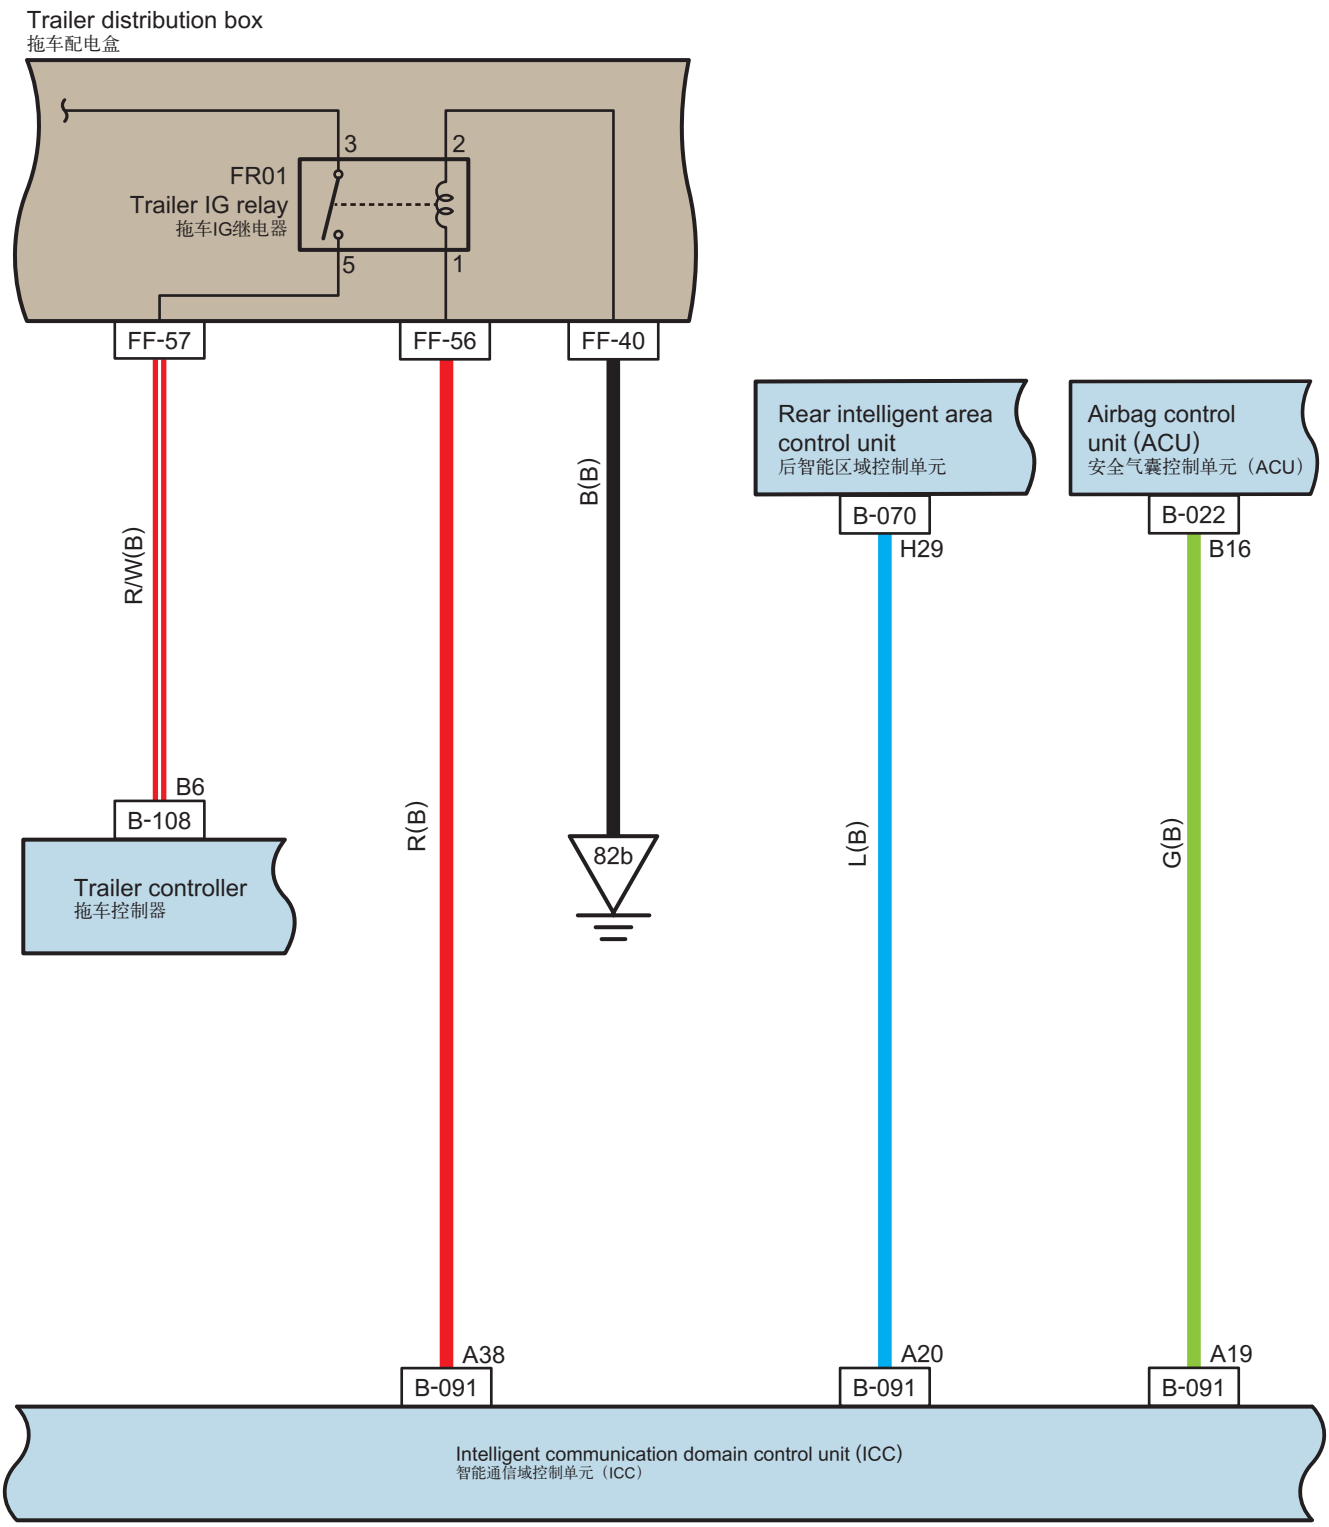

Digital key UWB antenna FR
右前数字钥匙UWB天线
FF-011
6
FF-011
3
FF-011
5
FF-011
4
FF-011
2
L(FF)
O/BR(FF)
L(FF)
B(FF)
B(FF)
O/BR(FF)
B(FF)
C-15
26
C-15
6
O/BR(F)
B(F)
C-02
22
23b
L(FF)
C-15
3
L(F)
C-02
9
L(B)
Digital key main module
数字钥匙主模块

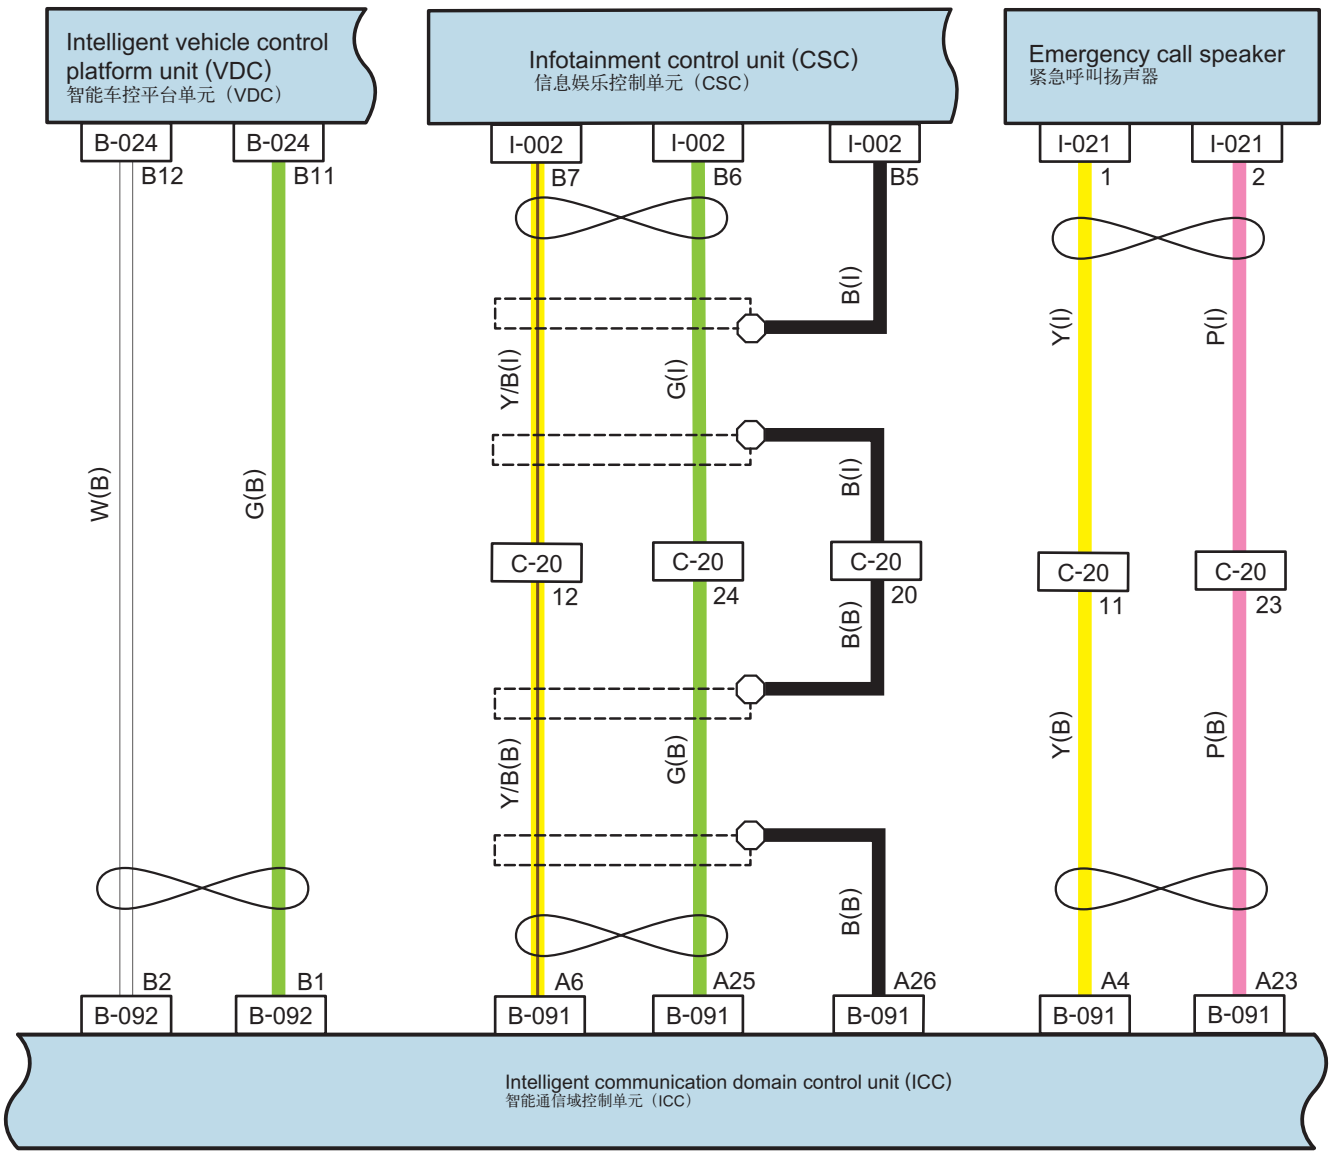

Digital key UWB antenna FL
左前数字钥匙UWB天线
FF-001
4
FF-001
5
FF-001
6
FF-001
3
B(FF)
L(FF)
L(FF)
O/BR(FF)
O/BR(FF)
C-15
9
O/BR(F)
C-03
6
O/BR(I)
C-15
16
L(F)
C-03
12
L(I)
Interior front digital key UWB antenna
室内前数字钥匙UWB天线
I2-002
6
I2-002
3
L(I2)
O/BR(I2)
C-18
14
C-18
15
O/BR(I)
L(I)
O/BR(I)
L(I)
Digital key UWB_CAN
数字钥匙UWB_CAN
Digital key main module
数字钥匙主模块

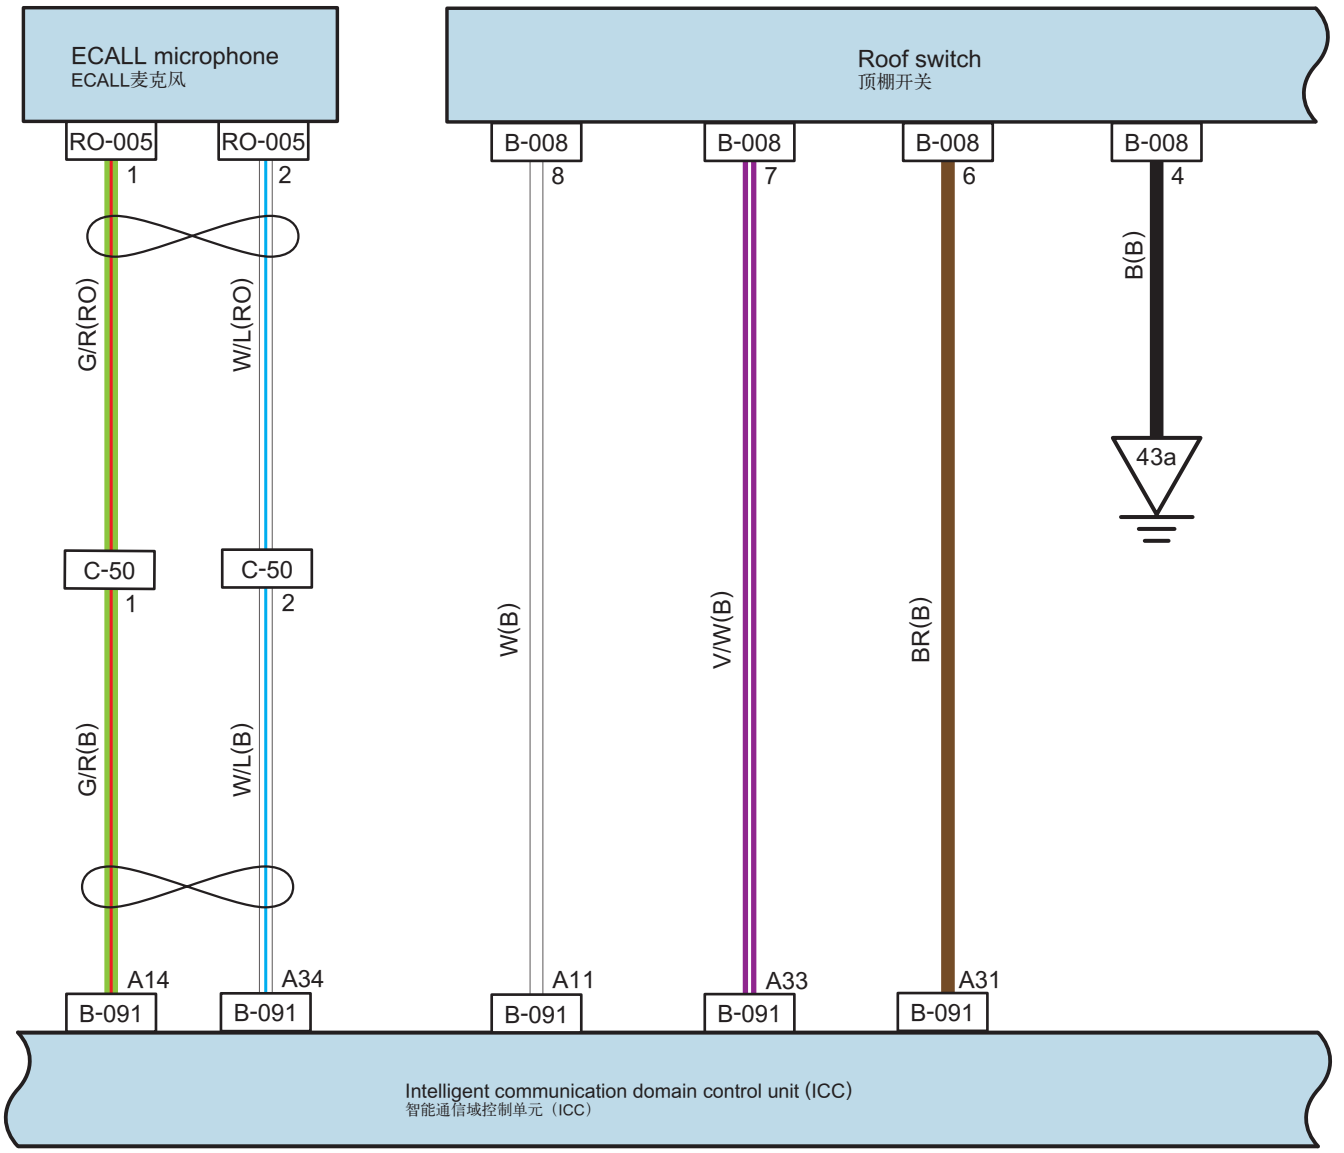

Interior front digital key UWB antenna
室内前数字钥匙UWB天线
I2-002
5
I2-002
1
I2-002
4
L(I2)
L(I2)
B(I2)
C-18
16
C-18
4
L(I)
B(I)
C-23
37
L(B)
62a
B(B)
16
B-078
78
Digital key main module
数字钥匙主模块

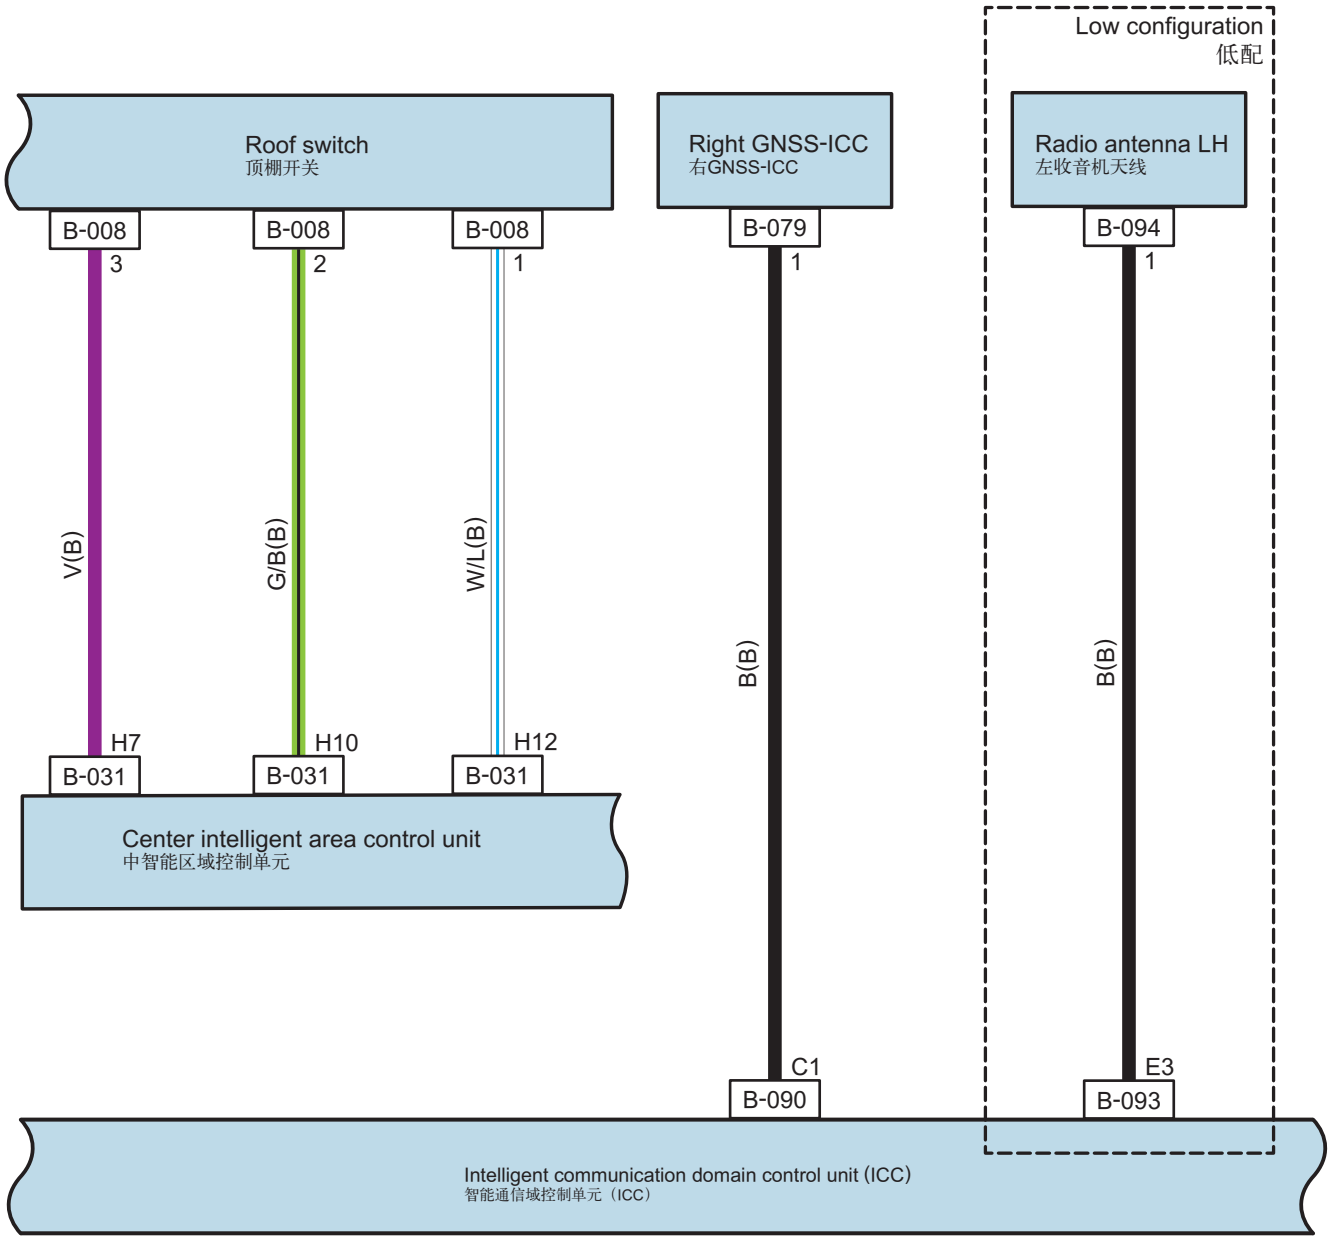

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Trailer distribution box
拖车配电盒
AF01 200A
F03 80A
FF17 30A
AF-B+
AF-01
F-01
F-03
FF-60
FF-22
FF-58
R
R(B)
L/W(B)
B+

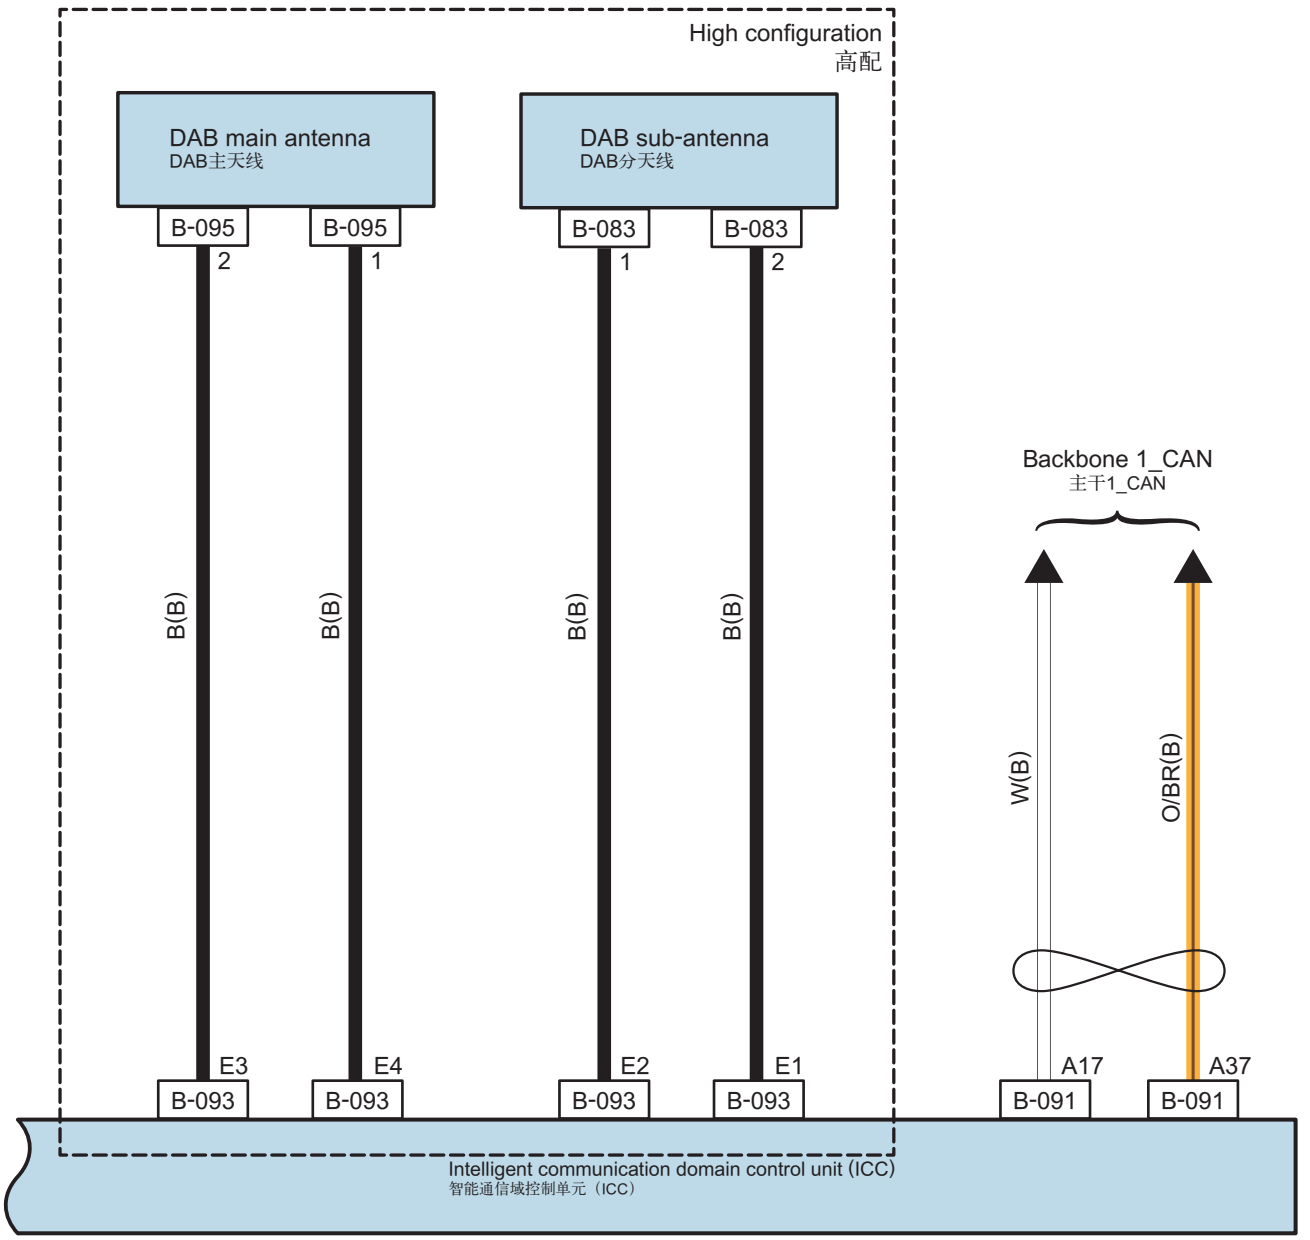

Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）
B-091
A40
B(B)
75a

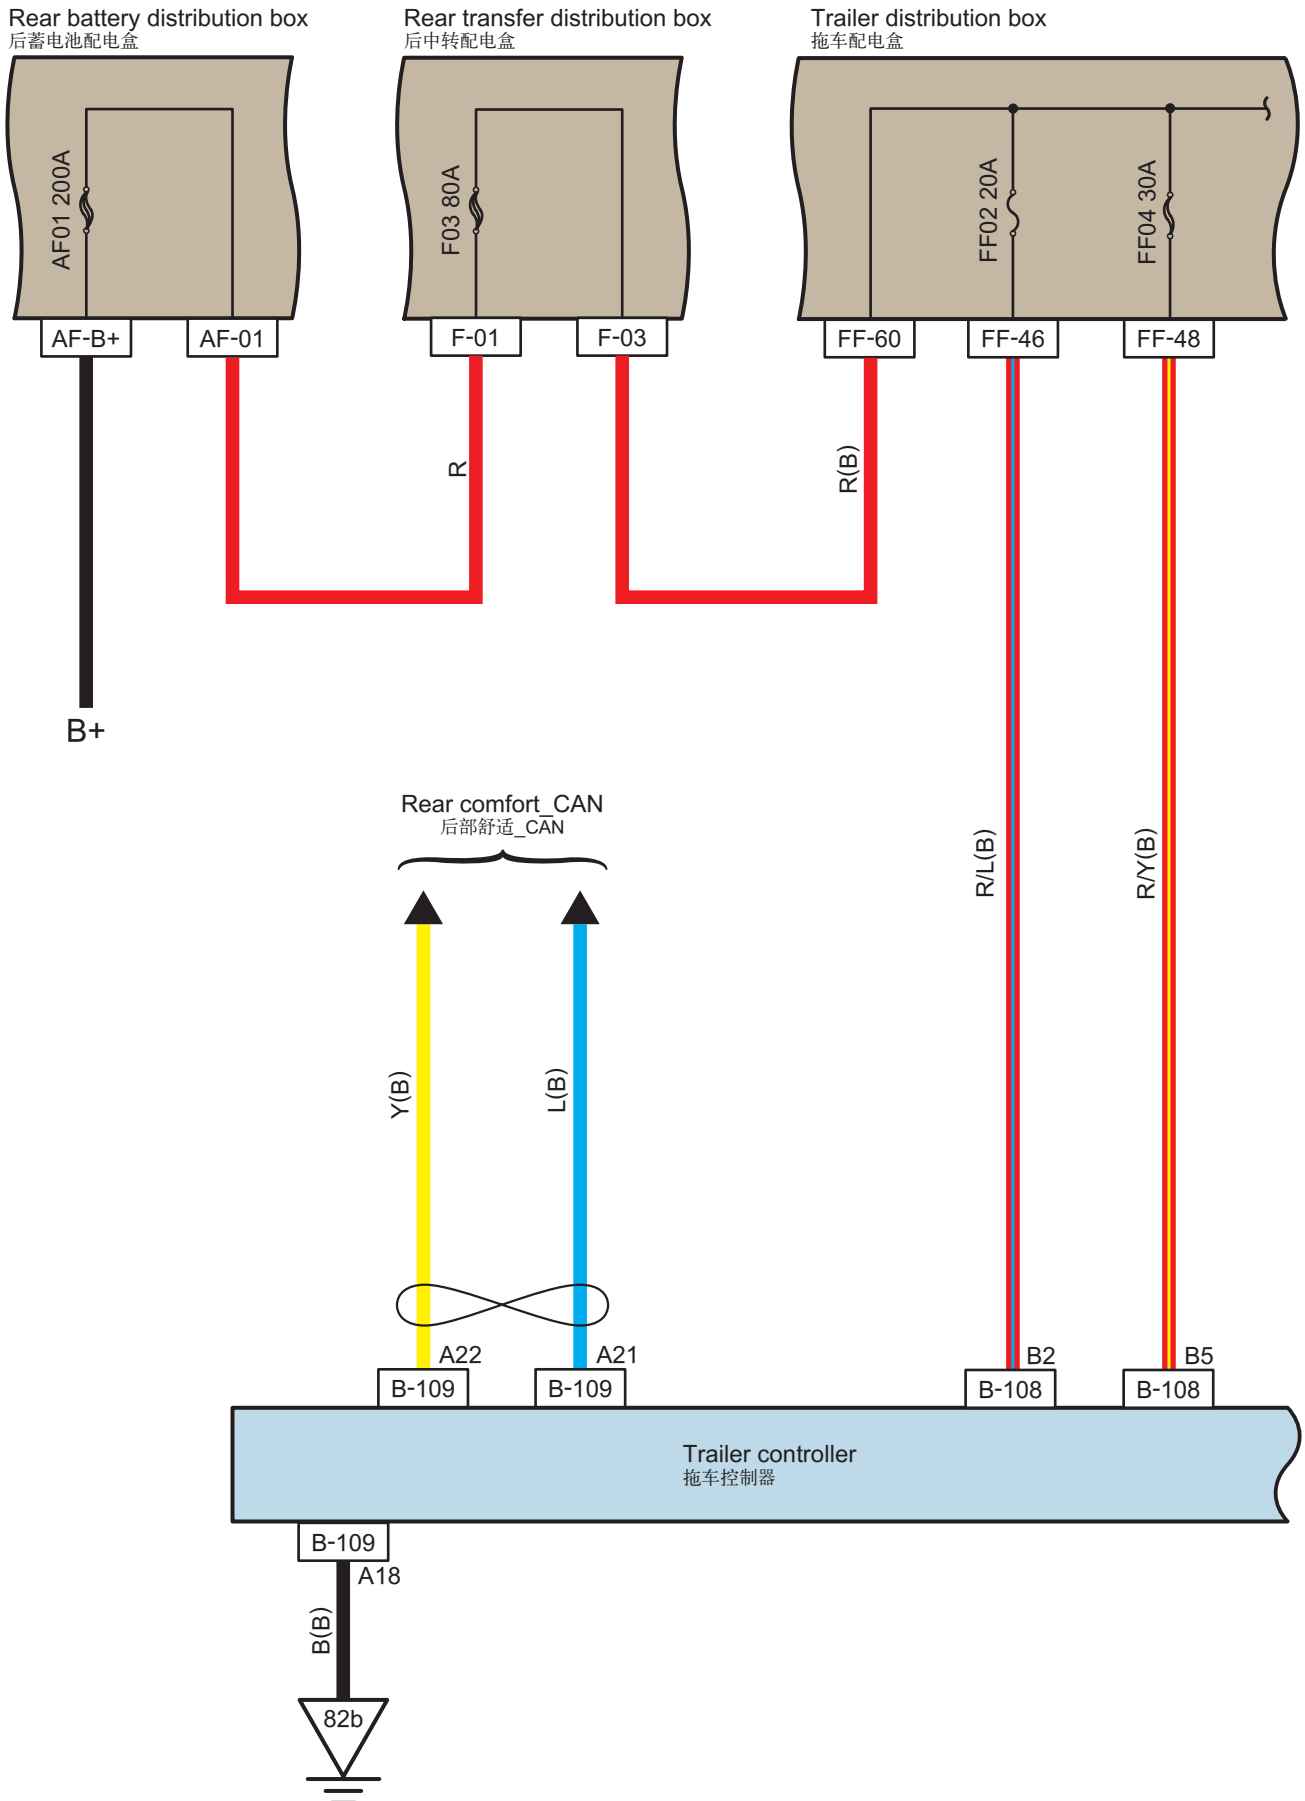

Trailer distribution box
拖车配电盒
3
2
FR01
Trailer IG relay
拖车IG继电器
5
1
FF-57
FF-56
FF-40
R/W(B)
B6
B-108
Trailer controller
拖车控制器
R(B)
B(B)
82b
Rear intelligent area control unit
后智能区域控制单元
B-070
H29
L(B)
Airbag control unit (ACU)
安全气囊控制单元（ACU）
B-022
B16
G(B)
A38
B-091
A20
B-091
A19
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）

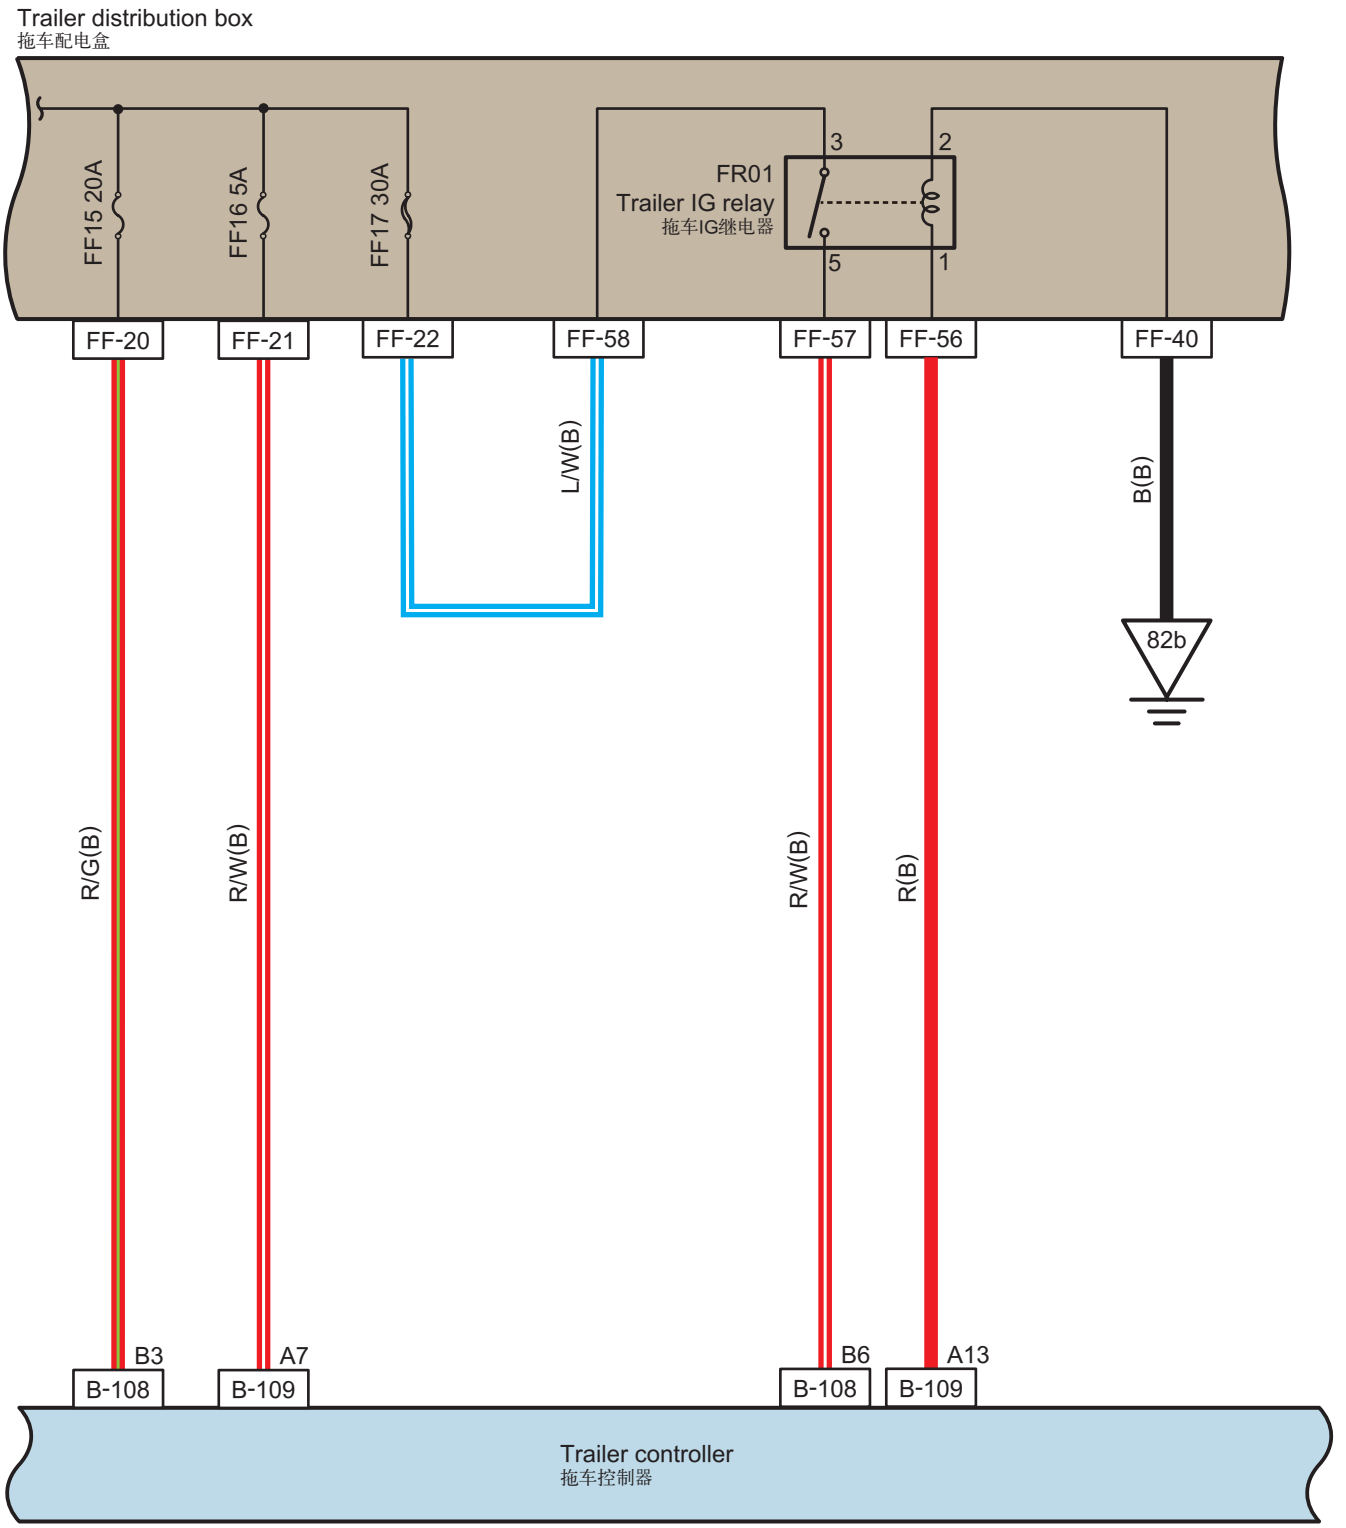

Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
Infotainment control unit (CSC)
信息娱乐控制单元（CSC）
Emergency call speaker
紧急呼叫扬声器
B-024
B12
B-024
B11
I-002
B7
I-002
B6
I-002
B5
I-021
1
I-021
2
W(B)
G(B)
Y/B(I)
G(I)
B(I)
B(I)
Y(I)
P(I)
C-20
12
C-20
24
C-20
20
C-20
11
C-20
23
B(B)
Y/B(B)
G(B)
B(B)
Y(B)
P(B)
B2
B1
A6
A25
A26
A4
A23
B-092
B-092
B-091
B-091
B-091
B-091
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）

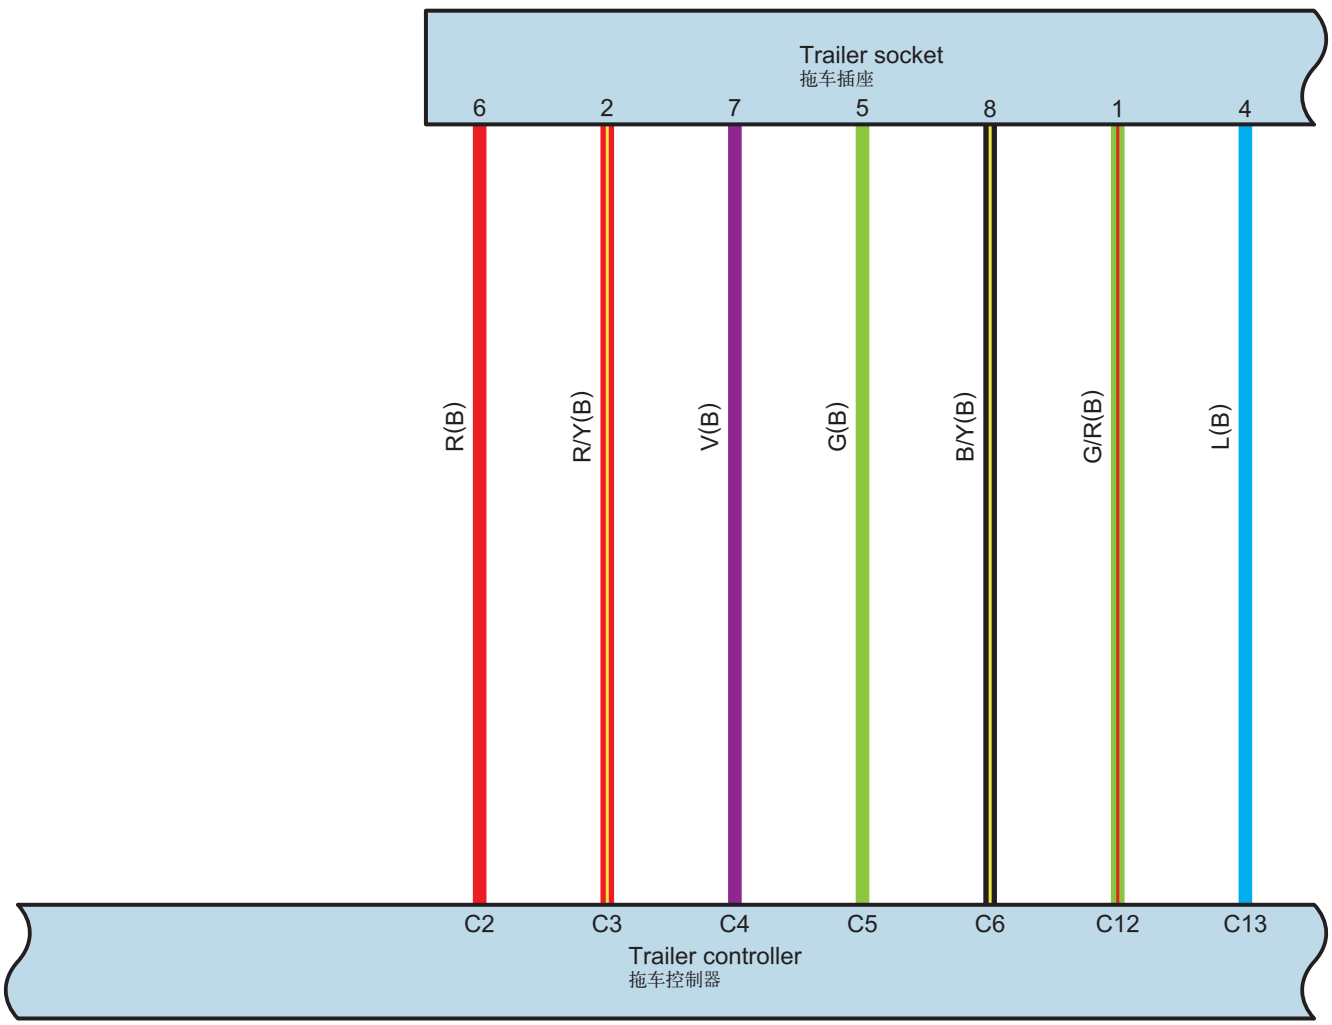

ECALL microphone
ECALL麦克风
RO-005
1
RO-005
2
G/R(RO)
W/L(RO)
C-50
1
C-50
2
G/R(B)
W/L(B)
A14
A34
B-091
B-091
Roof switch
顶棚开关
B-008
8
B-008
7
B-008
6
B-008
4
W(B)
V/W(B)
BR(B)
B(B)
43a
A11
A33
A31
B-091
B-091
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）

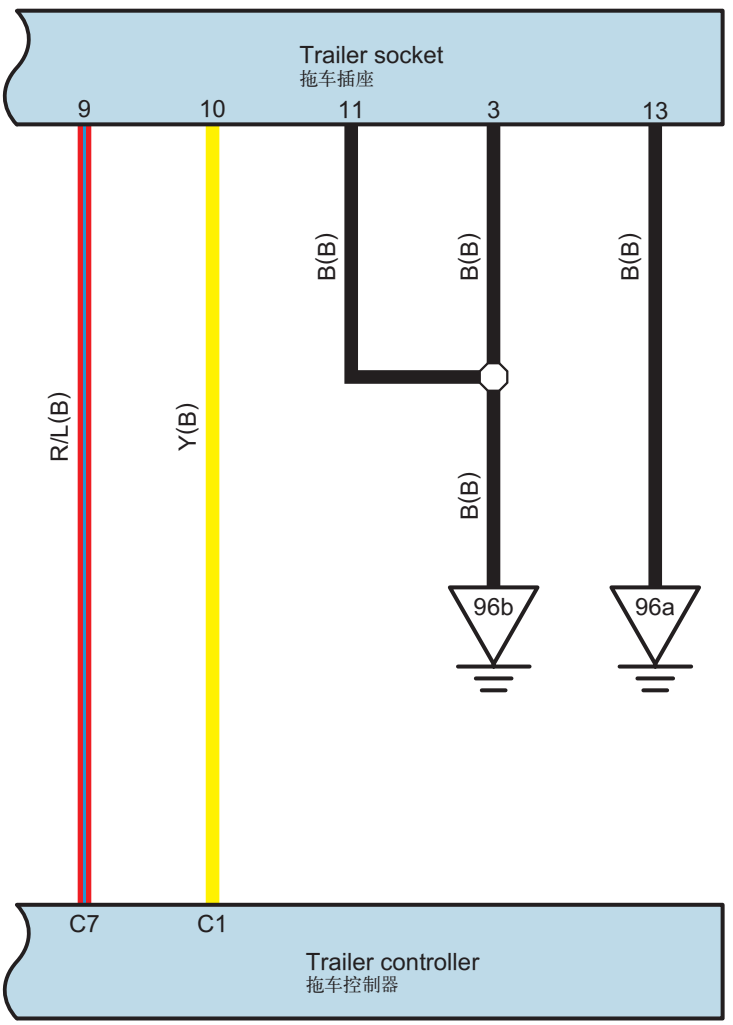

Low configuration
低配
Roof switch
顶棚开关
Right GNSS-ICC
右GNSS-ICC
Radio antenna LH
左收音机天线
B-008
3
B-008
2
B-008
1
B-079
1
B-094
1
V(B)
G/B(B)
W/L(B)
B(B)
B(B)
H7
H10
H12
B-031
B-031
B-031
Center intelligent area control unit
中智能区域控制单元
C1
E3
B-090
B-093
Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）

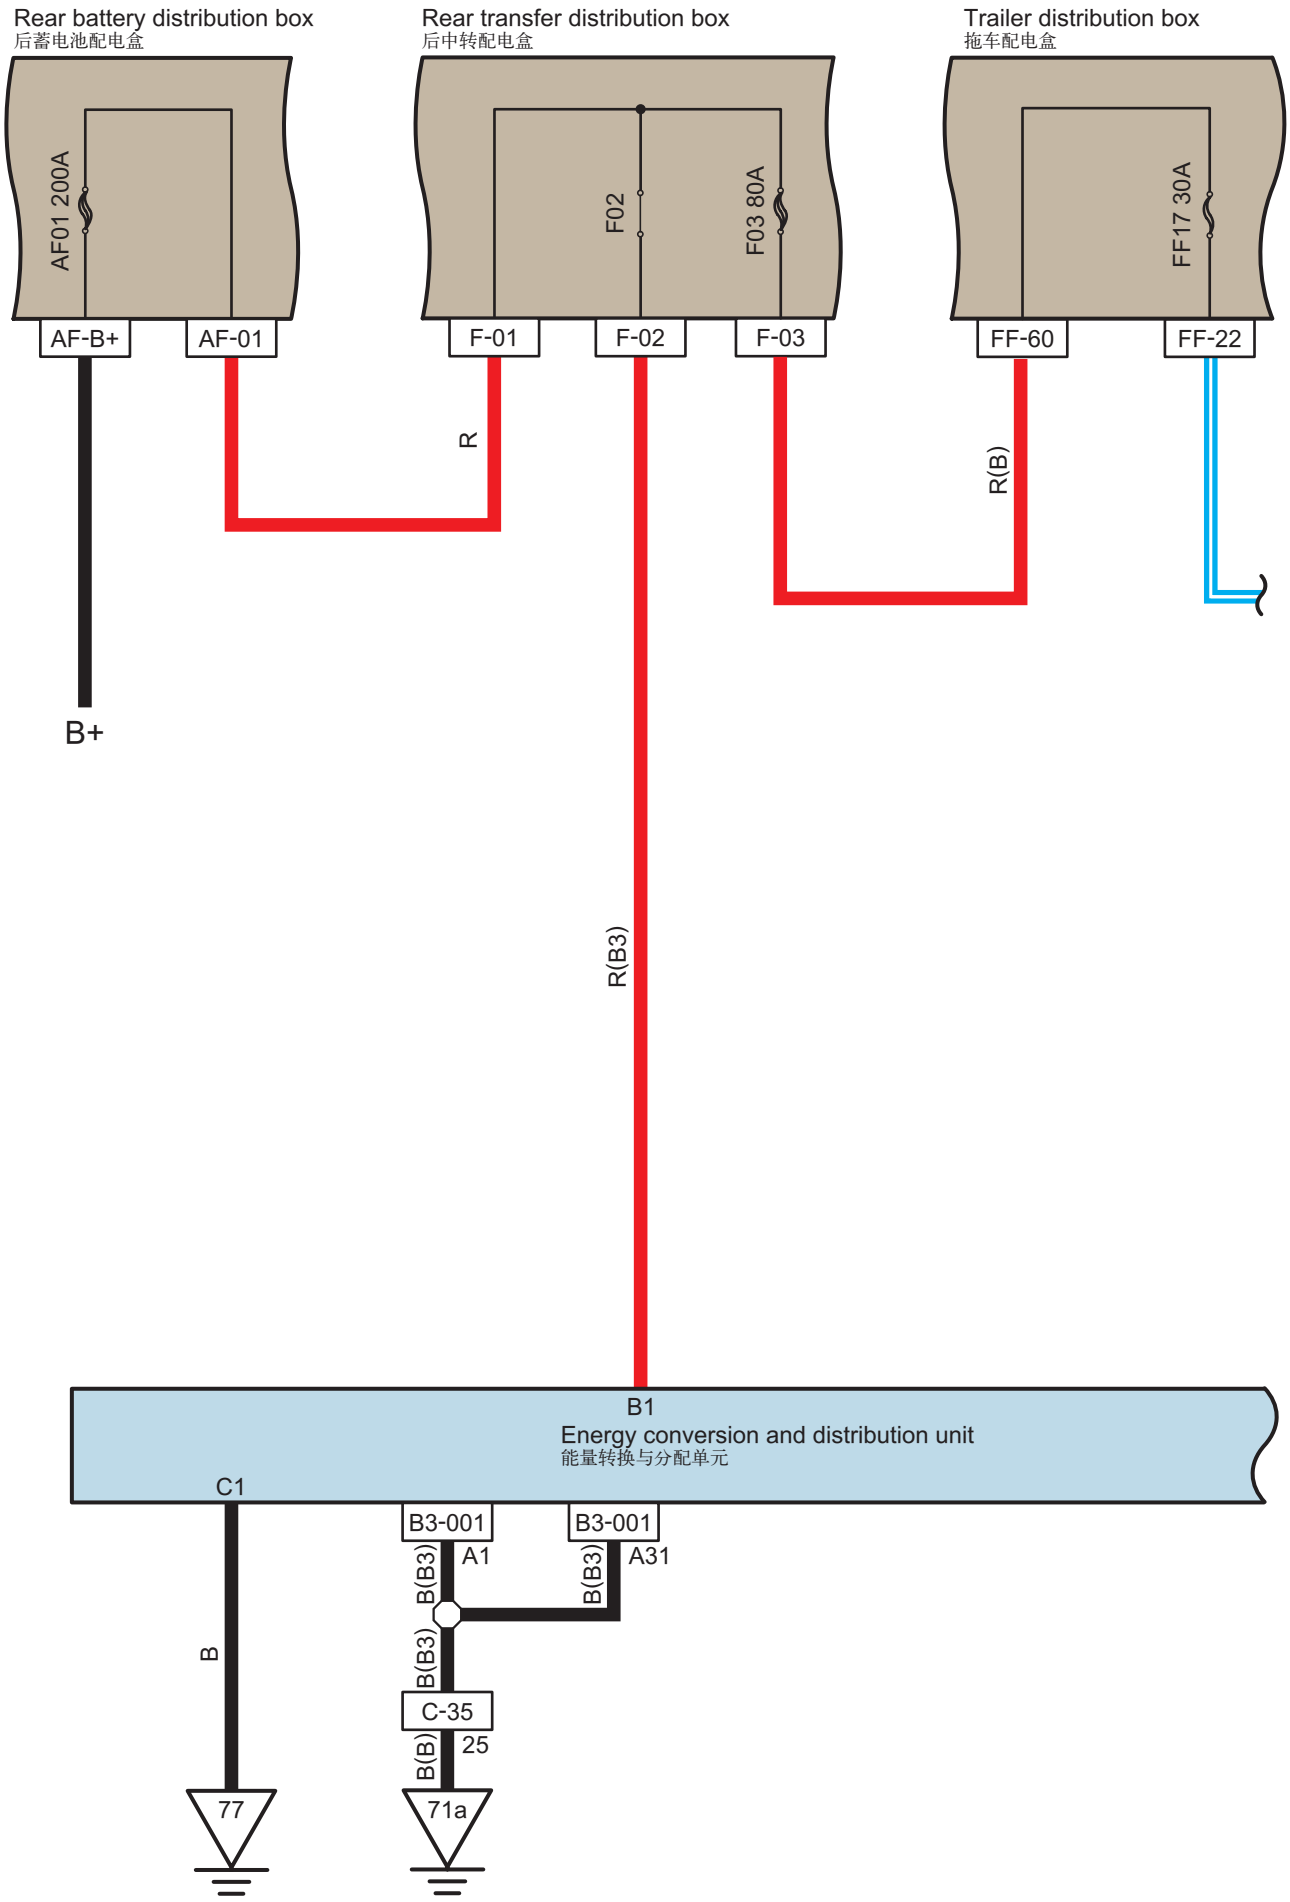

High configuration
高配
DAB main antenna
DAB主天线
DAB sub-antenna
DAB分天线
B-095
B-095
B-083
B-083
2
1
1
2
B(B)
B(B)
B(B)
B(B)
E3
E4
E2
E1
B-093
B-093
B-093
B-093
Backbone 1_CAN
主干1_CAN
W(B)
O/BR(B)
A17
A37
B-091
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）

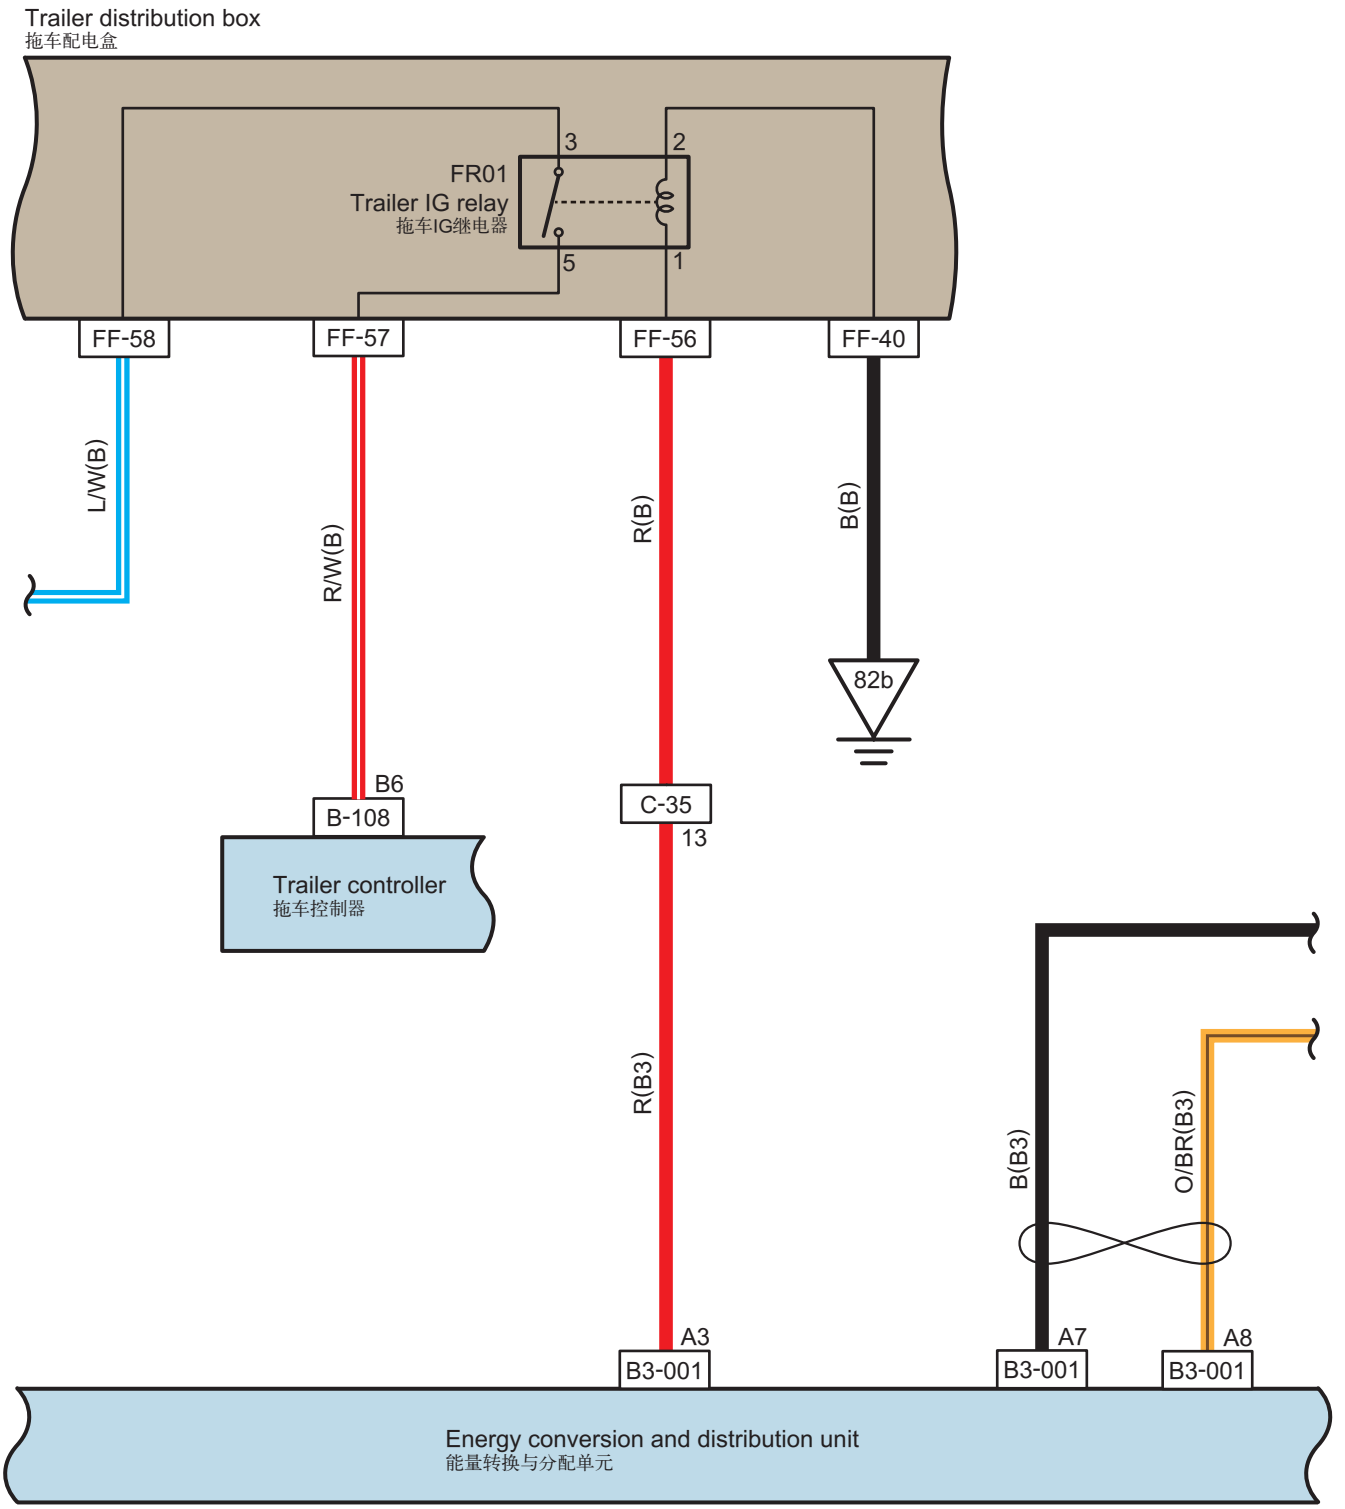

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
Rear transfer distribution box
后中转配电盒
F03 80A
F-01
F-03
R
Trailer distribution box
拖车配电盒
FF02 20A
FF04 30A
FF-60
FF-46
FF-48
R(B)
R/L(B)
R/Y(B)
Rear comfort_CAN
后部舒适_CAN
Y(B)
L(B)
A22
A21
B-109
B-109
B2
B5
B-108
B-108
Trailer controller
拖车控制器
B-109
A18
B(B)
82b

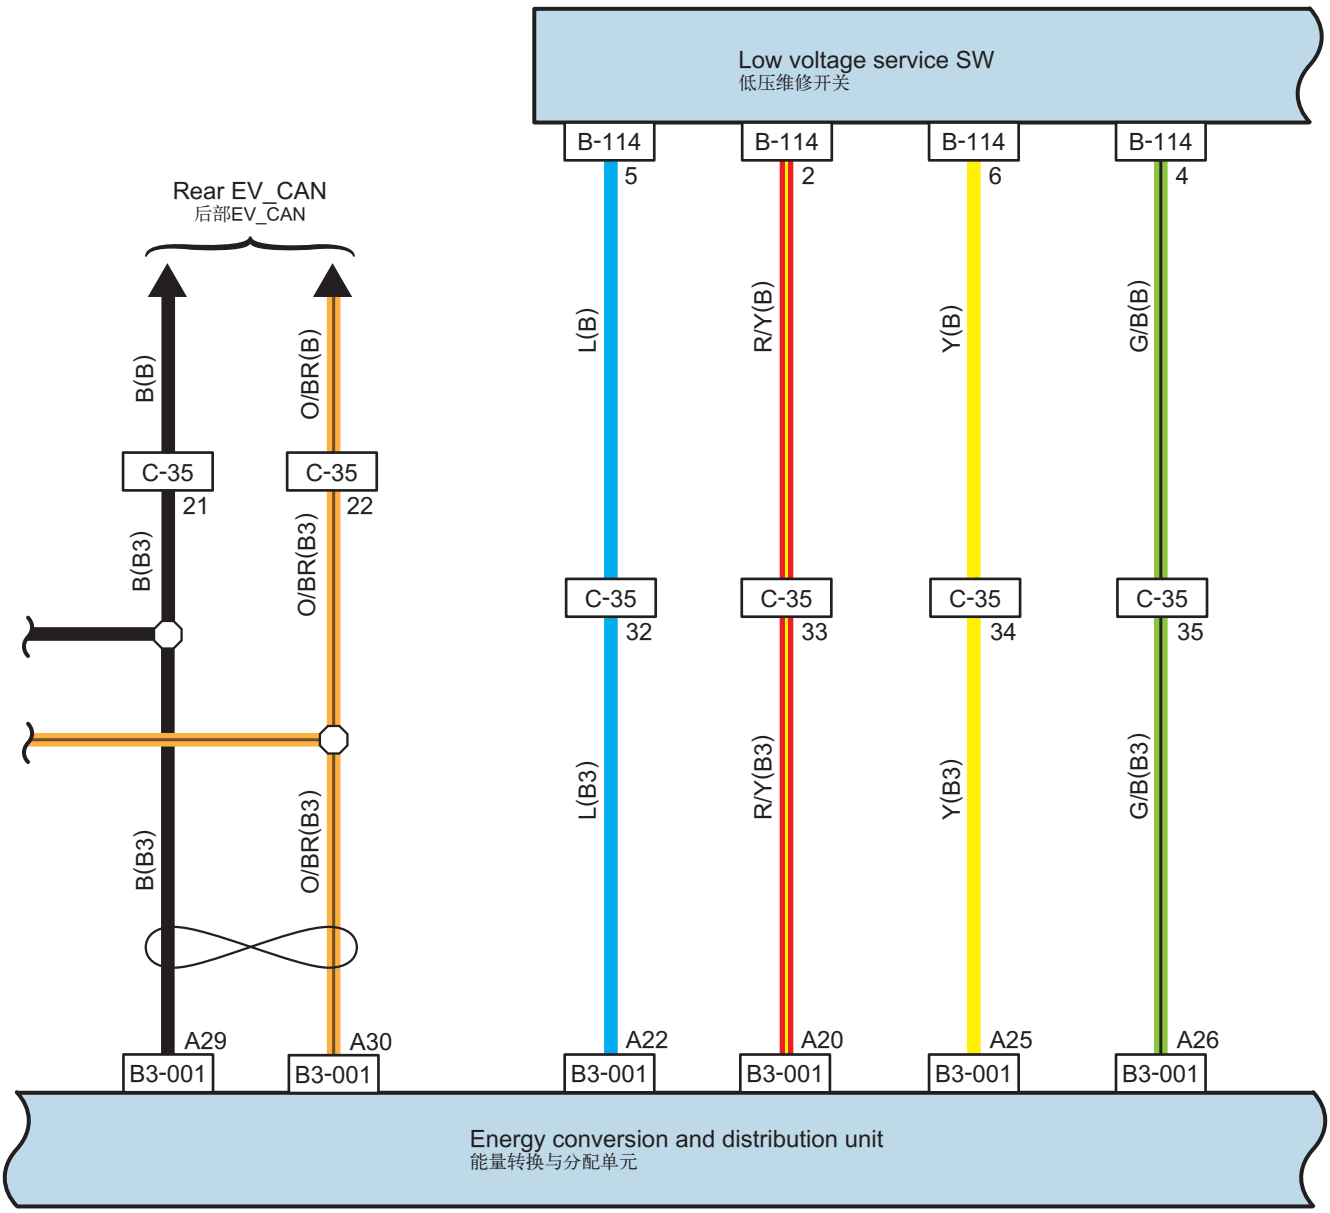

Trailer distribution box
拖车配电盒
FF15 20A
FF16 5A
FF17 30A
FR01
Trailer IG relay
拖车IG继电器
3
2
5
1
FF-20
FF-21
FF-22
FF-58
FF-57
FF-56
FF-40
L/W(B)
B(B)
82b
R/G(B)
R/W(B)
R/W(B)
R(B)
B3
A7
B6
A13
B-108
B-109
B-108
B-109
Trailer controller
拖车控制器

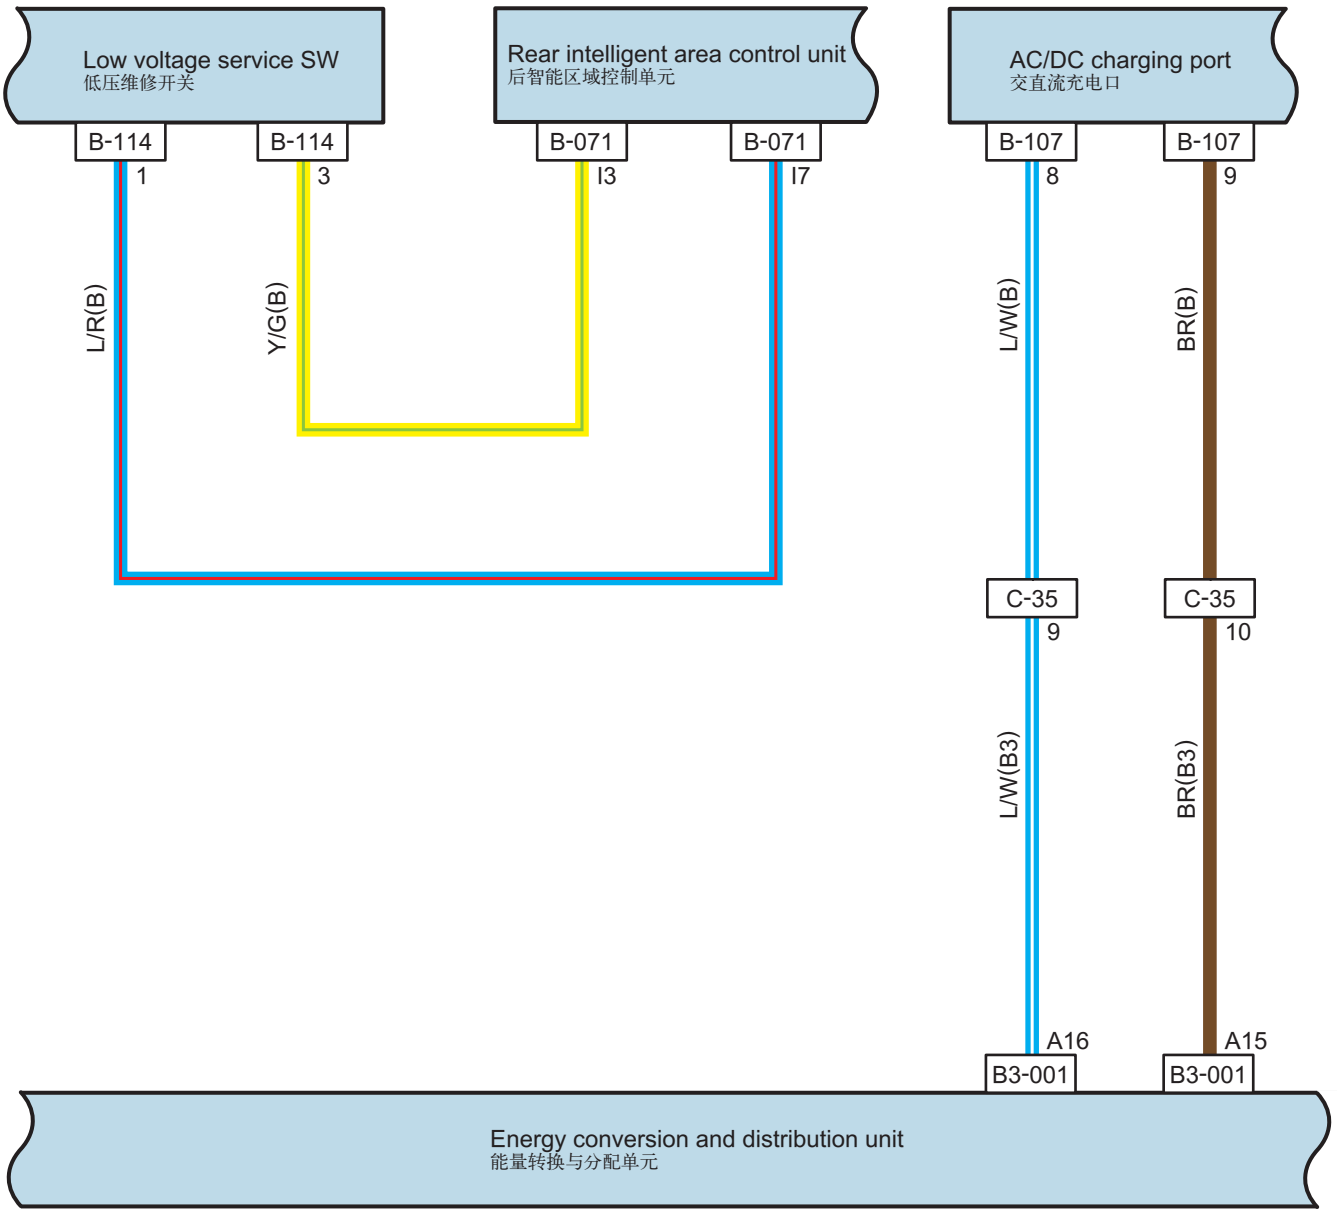

Trailer socket
拖车插座
6
2
7
5
8
1
4
R(B)
R/Y(B)
V(B)
G(B)
B/Y(B)
G/R(B)
L(B)
C2
C3
C4
C5
C6
C12
C13
Trailer controller
拖车控制器

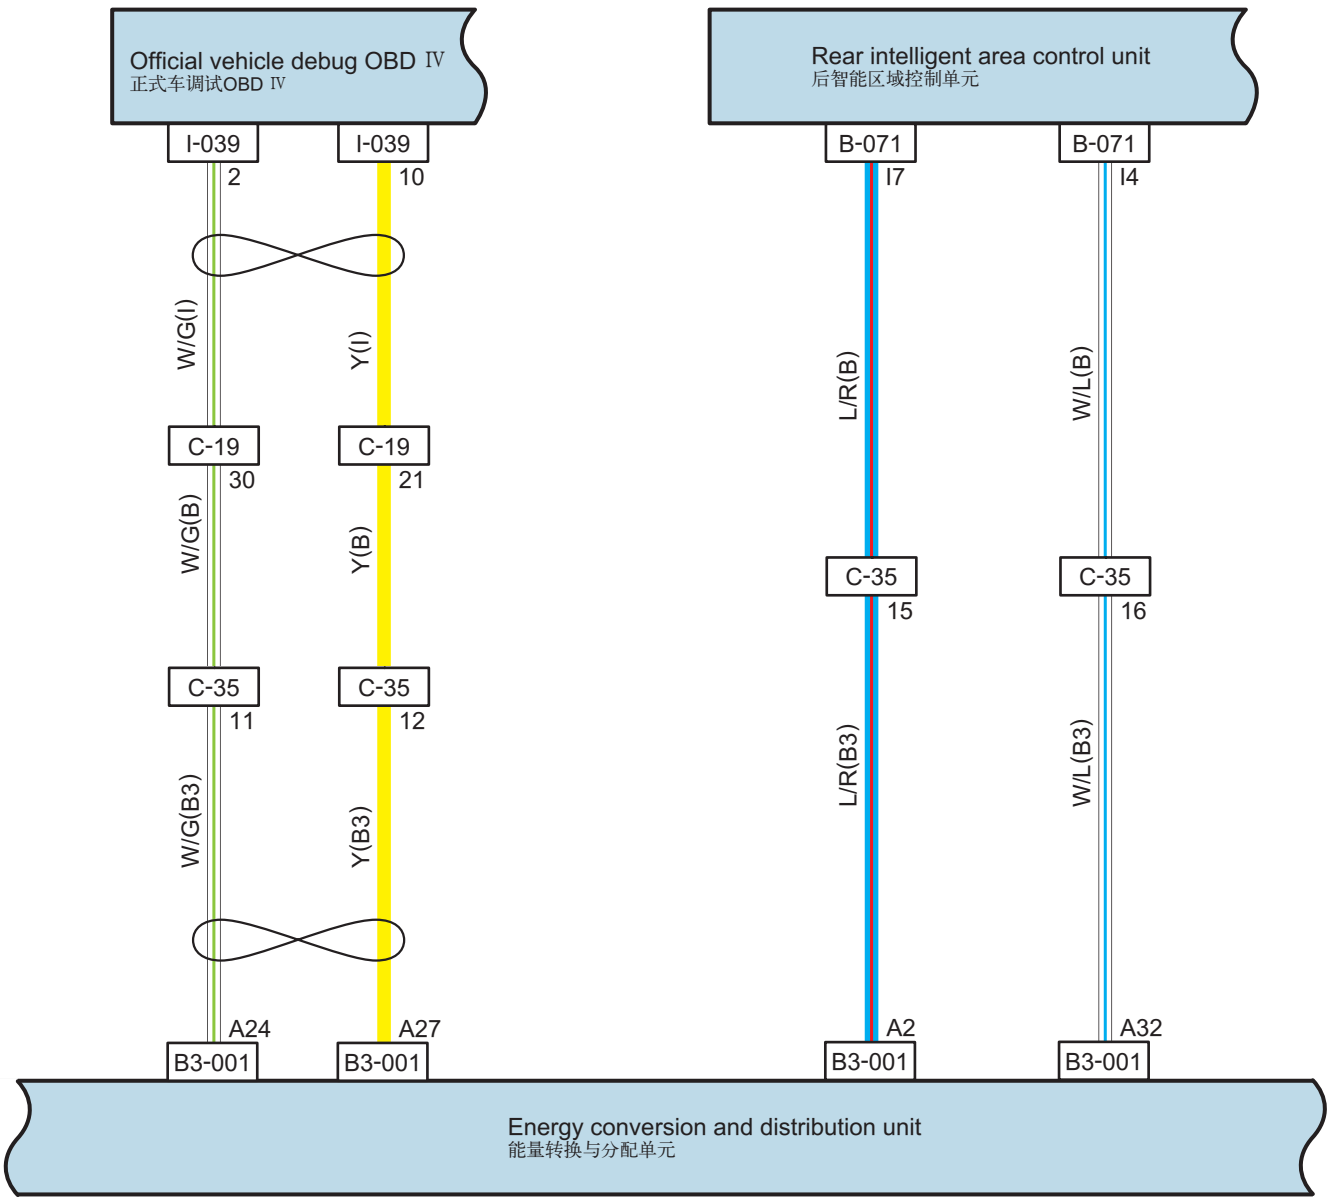

Trailer socket
拖车插座
9
10
11
3
13
B(B)
B(B)
B(B)
R/L(B)
Y(B)
B(B)
96b
96a
C7
C1
Trailer controller
拖车控制器

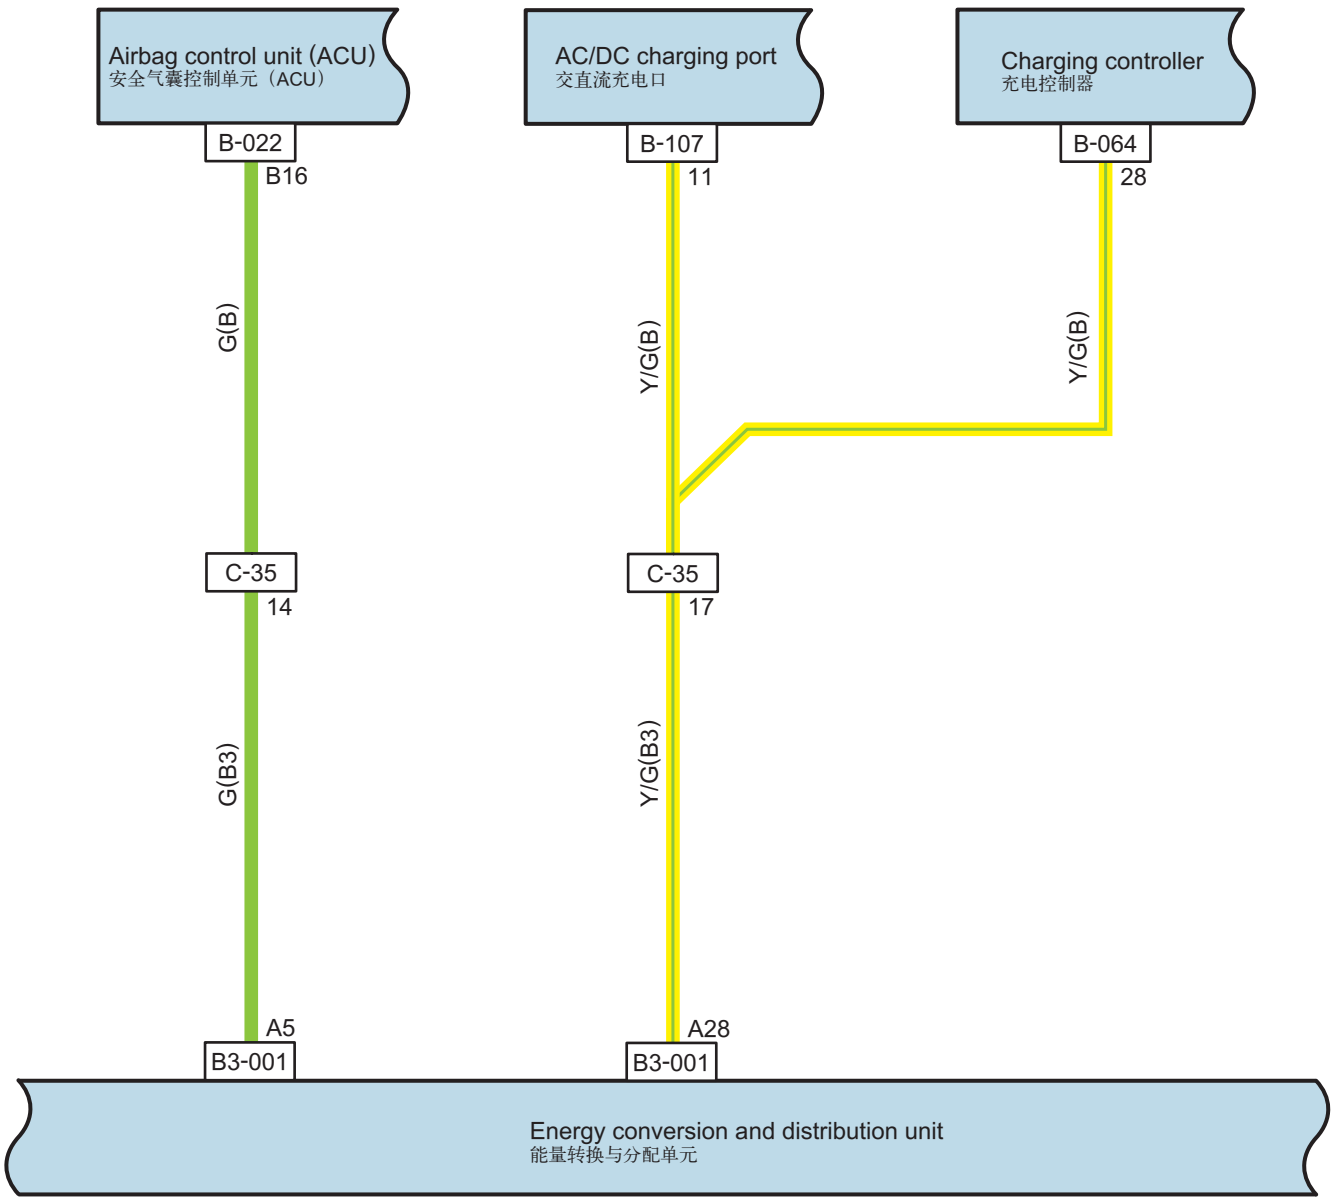

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Trailer distribution box
拖车配电盒
AF01 200A
F02
F03 80A
FF17 30A
AF-B+
AF-01
F-01
F-02
F-03
FF-60
FF-22
R
R(B)
B+
R(B3)
B1
Energy conversion and distribution unit
能量转换与分配单元
C1
B3-001
A1
B3-001
A31
B(B3)
B(B3)
B(B3)
B
C-35
B(B)
25
77
71a

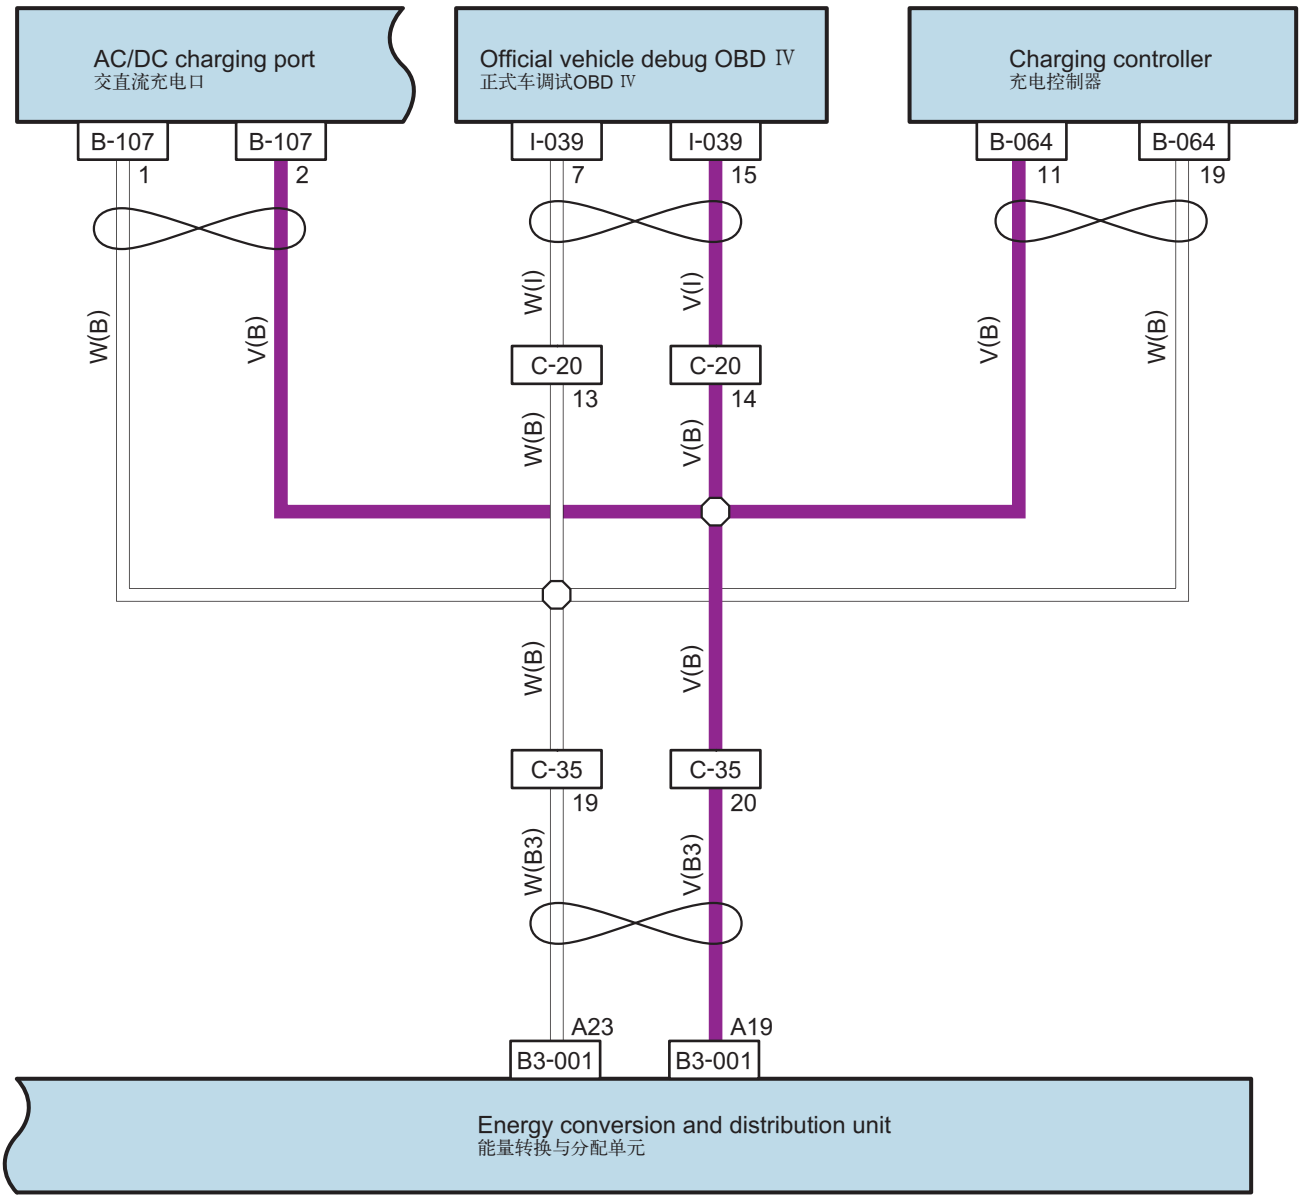

Trailer distribution box
拖车配电盒
FR01
Trailer IG relay
拖车IG继电器
3
2
5
1
FF-58
FF-57
FF-56
FF-40
L/W(B)
R/W(B)
R(B)
B(B)
82b
B6
B-108
Trailer controller
拖车控制器
C-35
13
R(B3)
B(B3)
O/BR(B3)
A3
A7
A8
B3-001
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

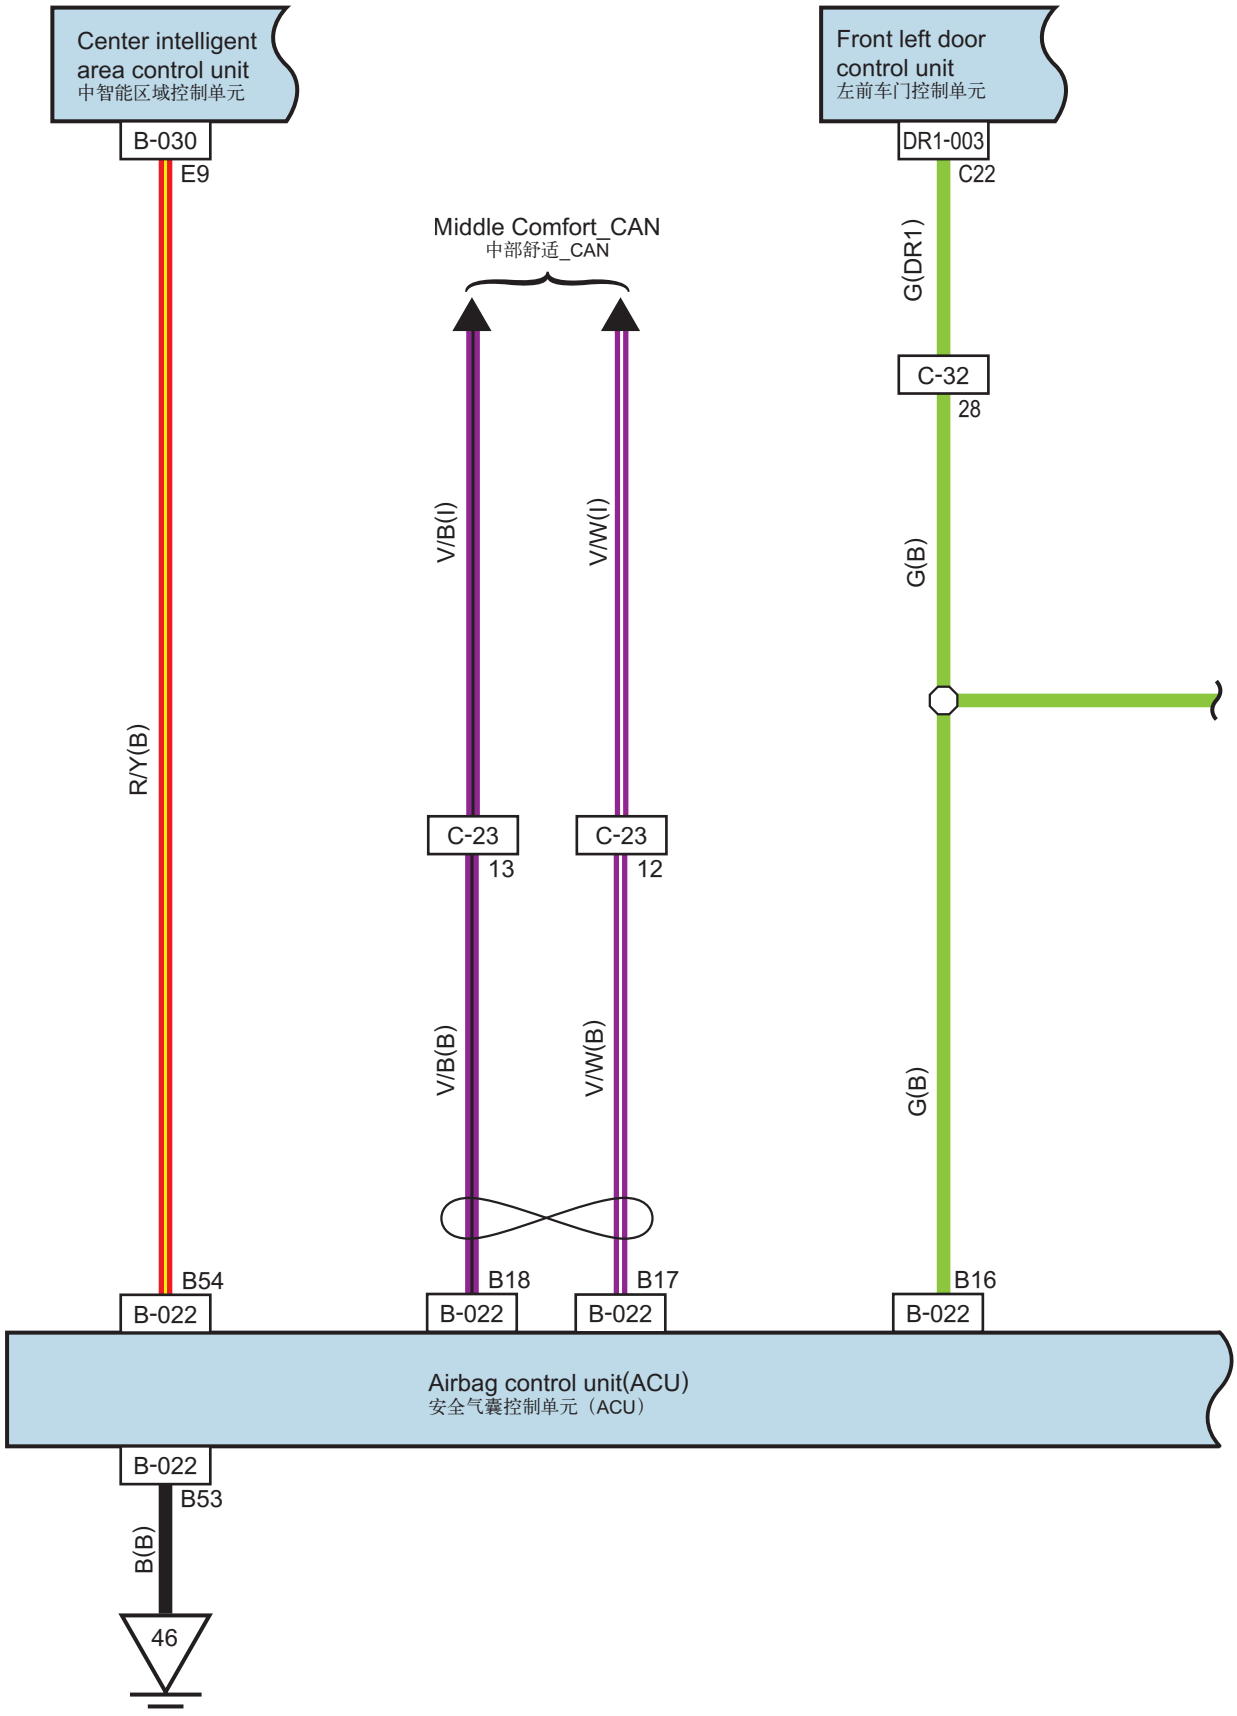

Low voltage service SW
低压维修开关
B-114
5
B-114
2
B-114
6
B-114
4
L(B)
R/Y(B)
Y(B)
G/B(B)
Rear EV_CAN
后部EV_CAN
B(B)
O/BR(B)
C-35
21
C-35
22
B(B3)
O/BR(B3)
C-35
32
C-35
33
C-35
34
C-35
35
L(B3)
R/Y(B3)
Y(B3)
G/B(B3)
B(B3)
O/BR(B3)
A29
A30
A22
A20
A25
A26
B3-001
B3-001
B3-001
B3-001
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

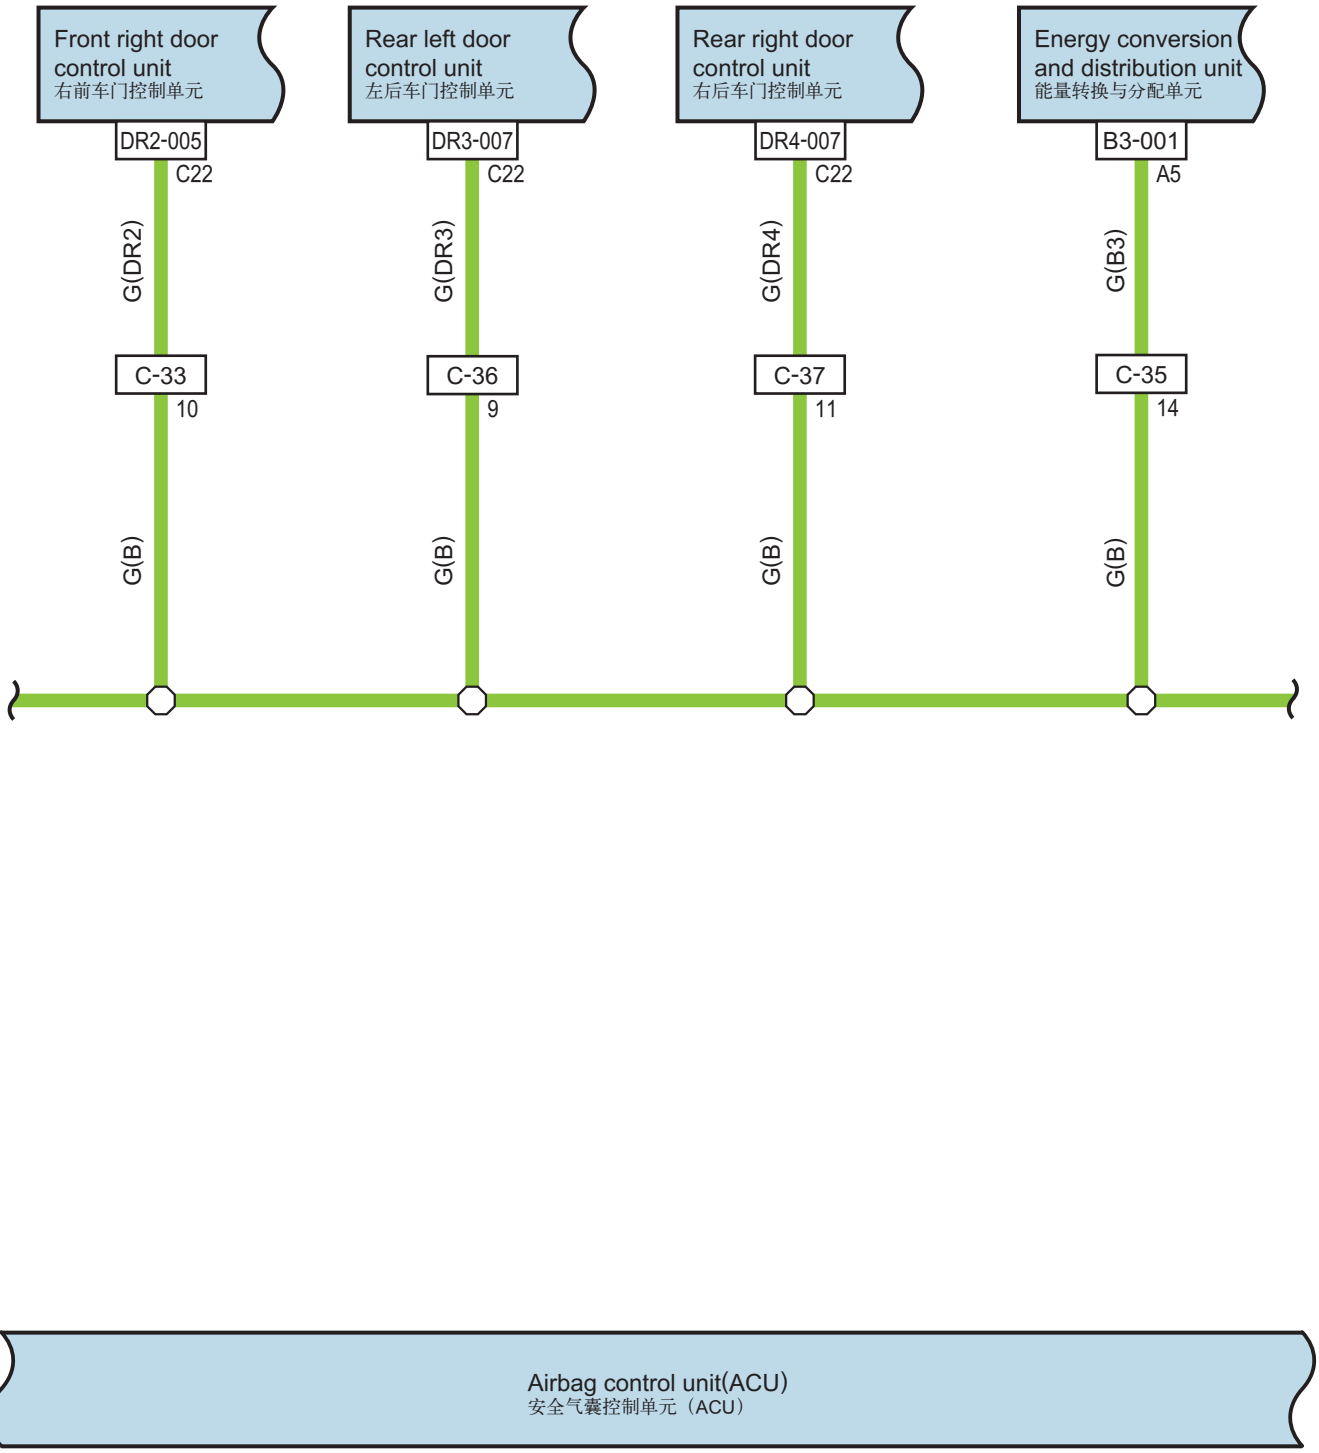

Low voltage service SW
低压维修开关
B-114
1
B-114
3
Rear intelligent area control unit
后智能区域控制单元
B-071
I3
B-071
I7
AC/DC charging port
交直流充电口
B-107
8
B-107
9
L/R(B)
Y/G(B)
L/W(B)
BR(B)
C-35
9
C-35
10
L/W(B3)
BR(B3)
A16
A15
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

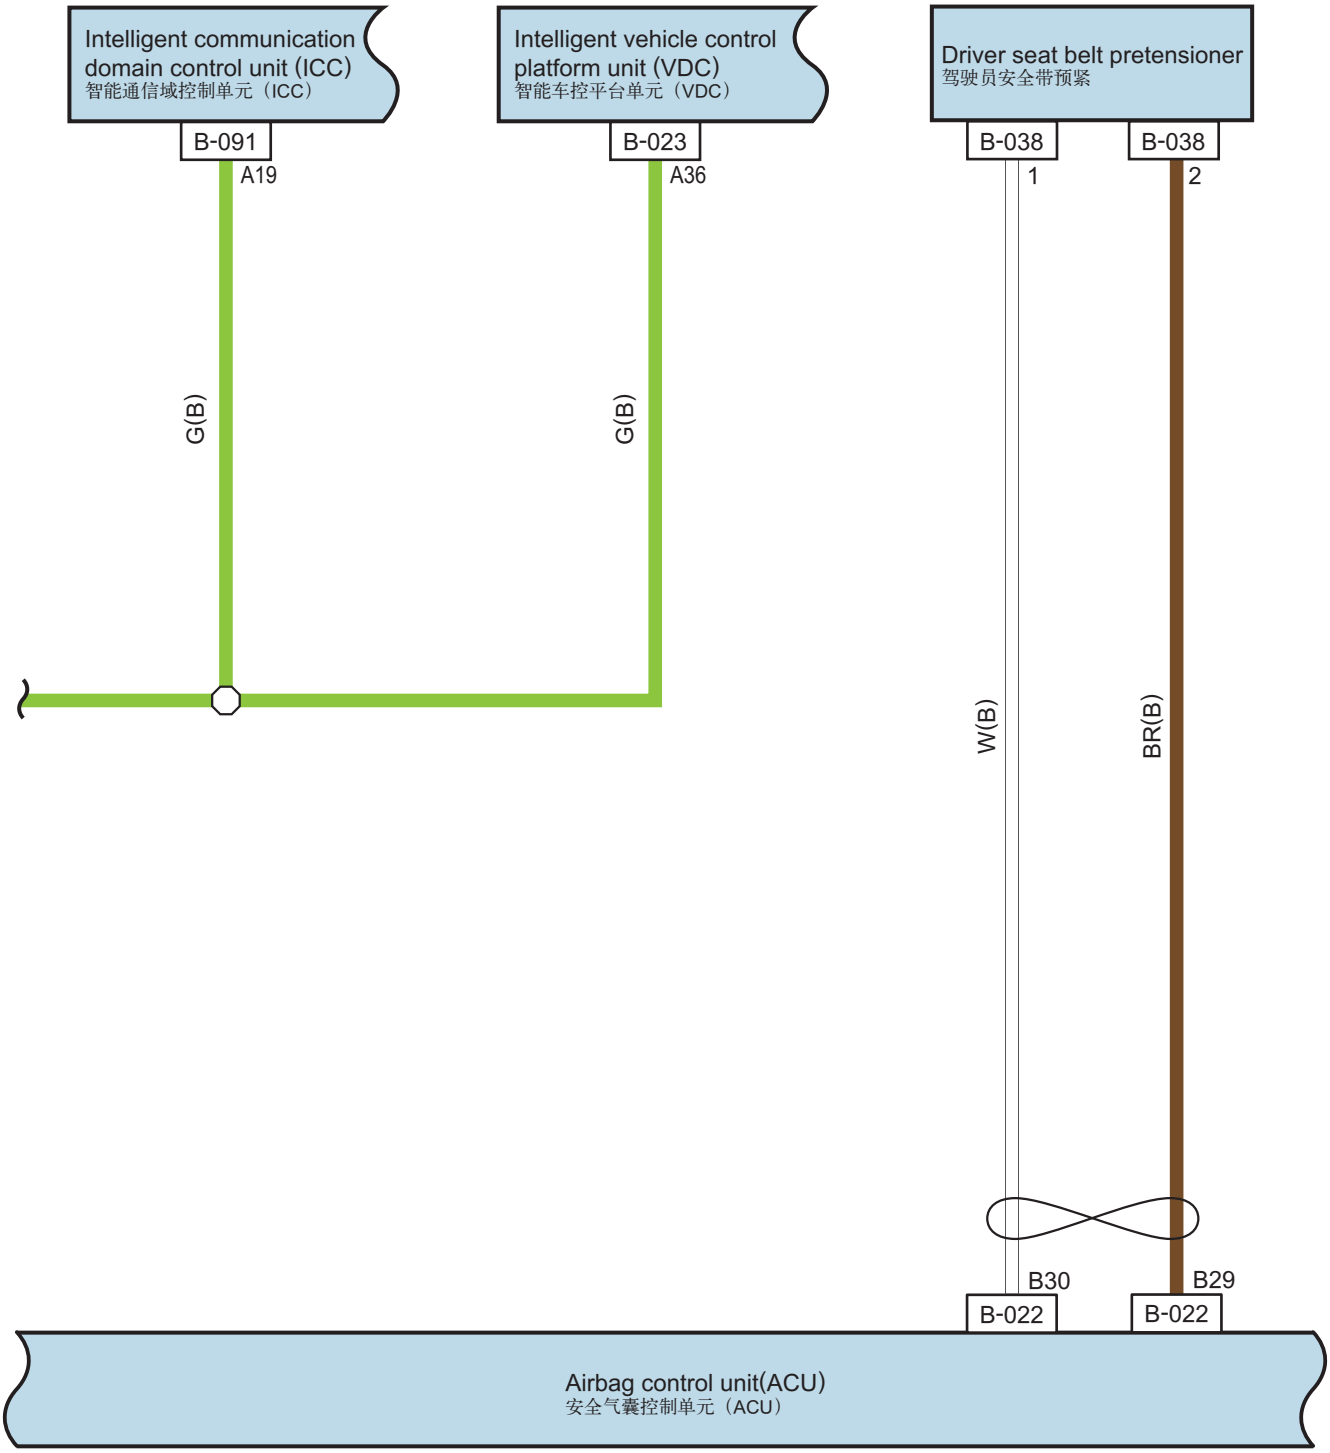

Official vehicle debug OBD Ⅳ
正式车调试OBD Ⅳ
Rear intelligent area control unit
后智能区域控制单元
I-039
2
I-039
10
B-071
I7
B-071
I4
W/G(I)
Y(I)
L/R(B)
W/L(B)
C-19
30
C-19
21
C-35
15
C-35
16
W/G(B)
Y(B)
C-35
11
C-35
12
L/R(B3)
W/L(B3)
W/G(B3)
Y(B3)
A24
A27
A2
A32
B3-001
B3-001
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

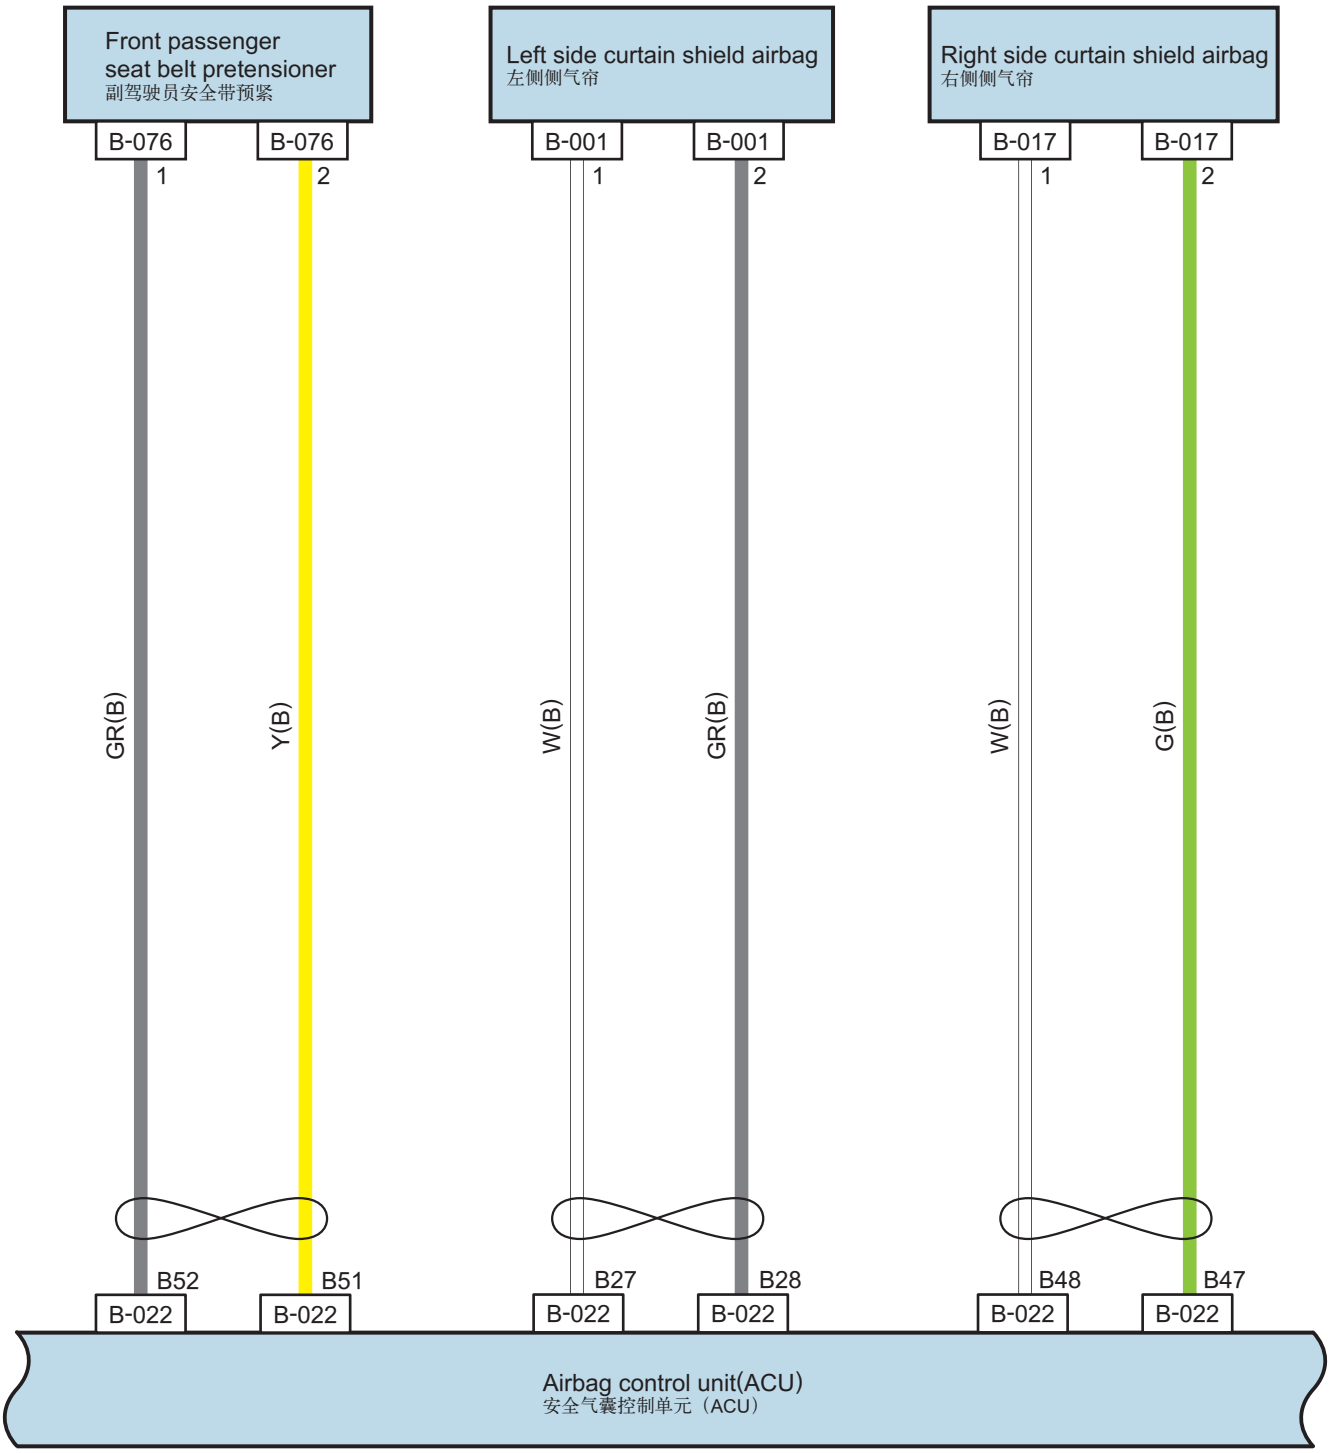

Airbag control unit (ACU)
安全气囊控制单元（ACU）
B-022
B16
G(B)
C-35
14
G(B3)
A5
B3-001
AC/DC charging port
交直流充电口
B-107
11
Y/G(B)
C-35
17
Y/G(B3)
A28
B3-001
Charging controller
充电控制器
B-064
28
Y/G(B)
Energy conversion and distribution unit
能量转换与分配单元

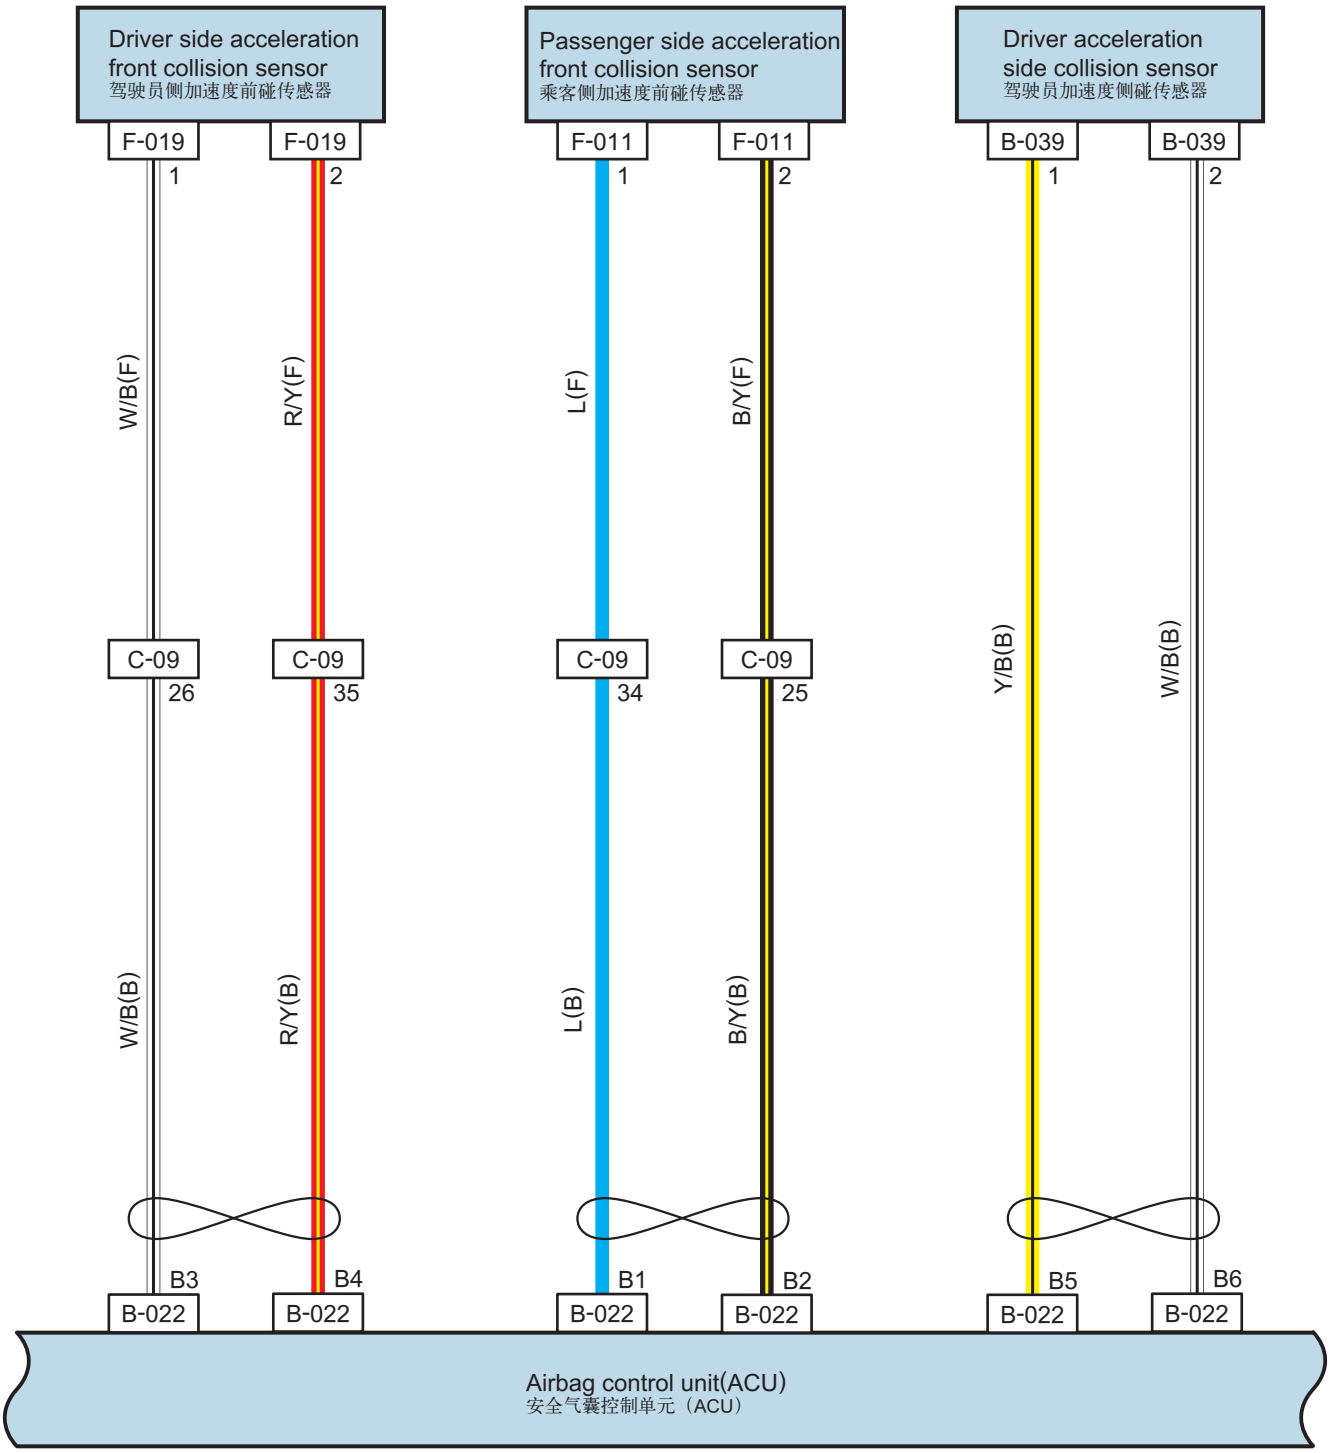

AC/DC charging port
交直流充电口
Official vehicle debug OBD Ⅳ
正式车调试OBD Ⅳ
Charging controller
充电控制器
B-107
1
B-107
2
I-039
7
I-039
15
B-064
11
B-064
19
W(B)
V(B)
W(I)
V(I)
V(B)
W(B)
C-20
13
C-20
14
W(B)
V(B)
W(B)
V(B)
C-35
19
C-35
20
W(B3)
V(B3)
A23
A19
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

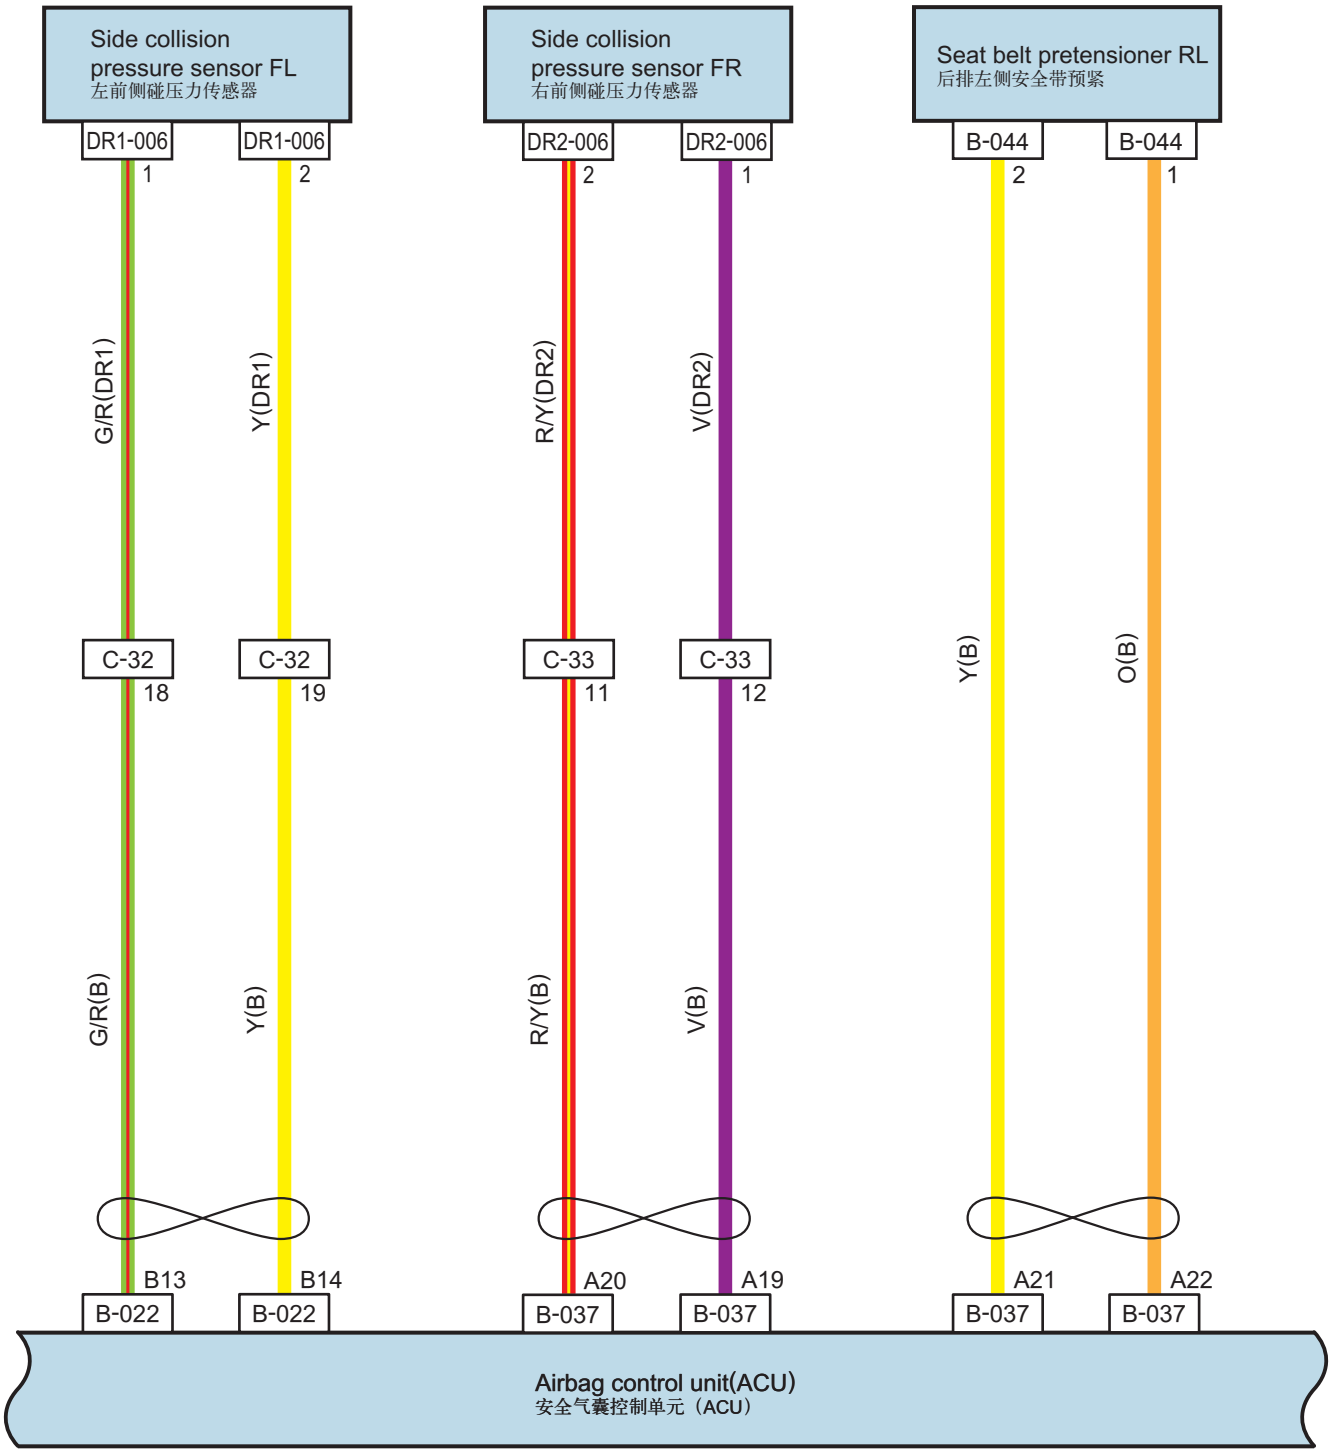

Center intelligent area control unit
中智能区域控制单元
B-030
E9
R/Y(B)
Middle Comfort_CAN
中部舒适_CAN
V/B(I)
V/W(I)
C-23
13
C-23
12
V/B(B)
V/W(B)
B54
B-022
B18
B-022
B17
B-022
Front left door control unit
左前车门控制单元
DR1-003
C22
G(DR1)
C-32
28
G(B)
G(B)
B16
B-022
Airbag control unit(ACU)
安全气囊控制单元（ACU）
B-022
B53
B(B)
46

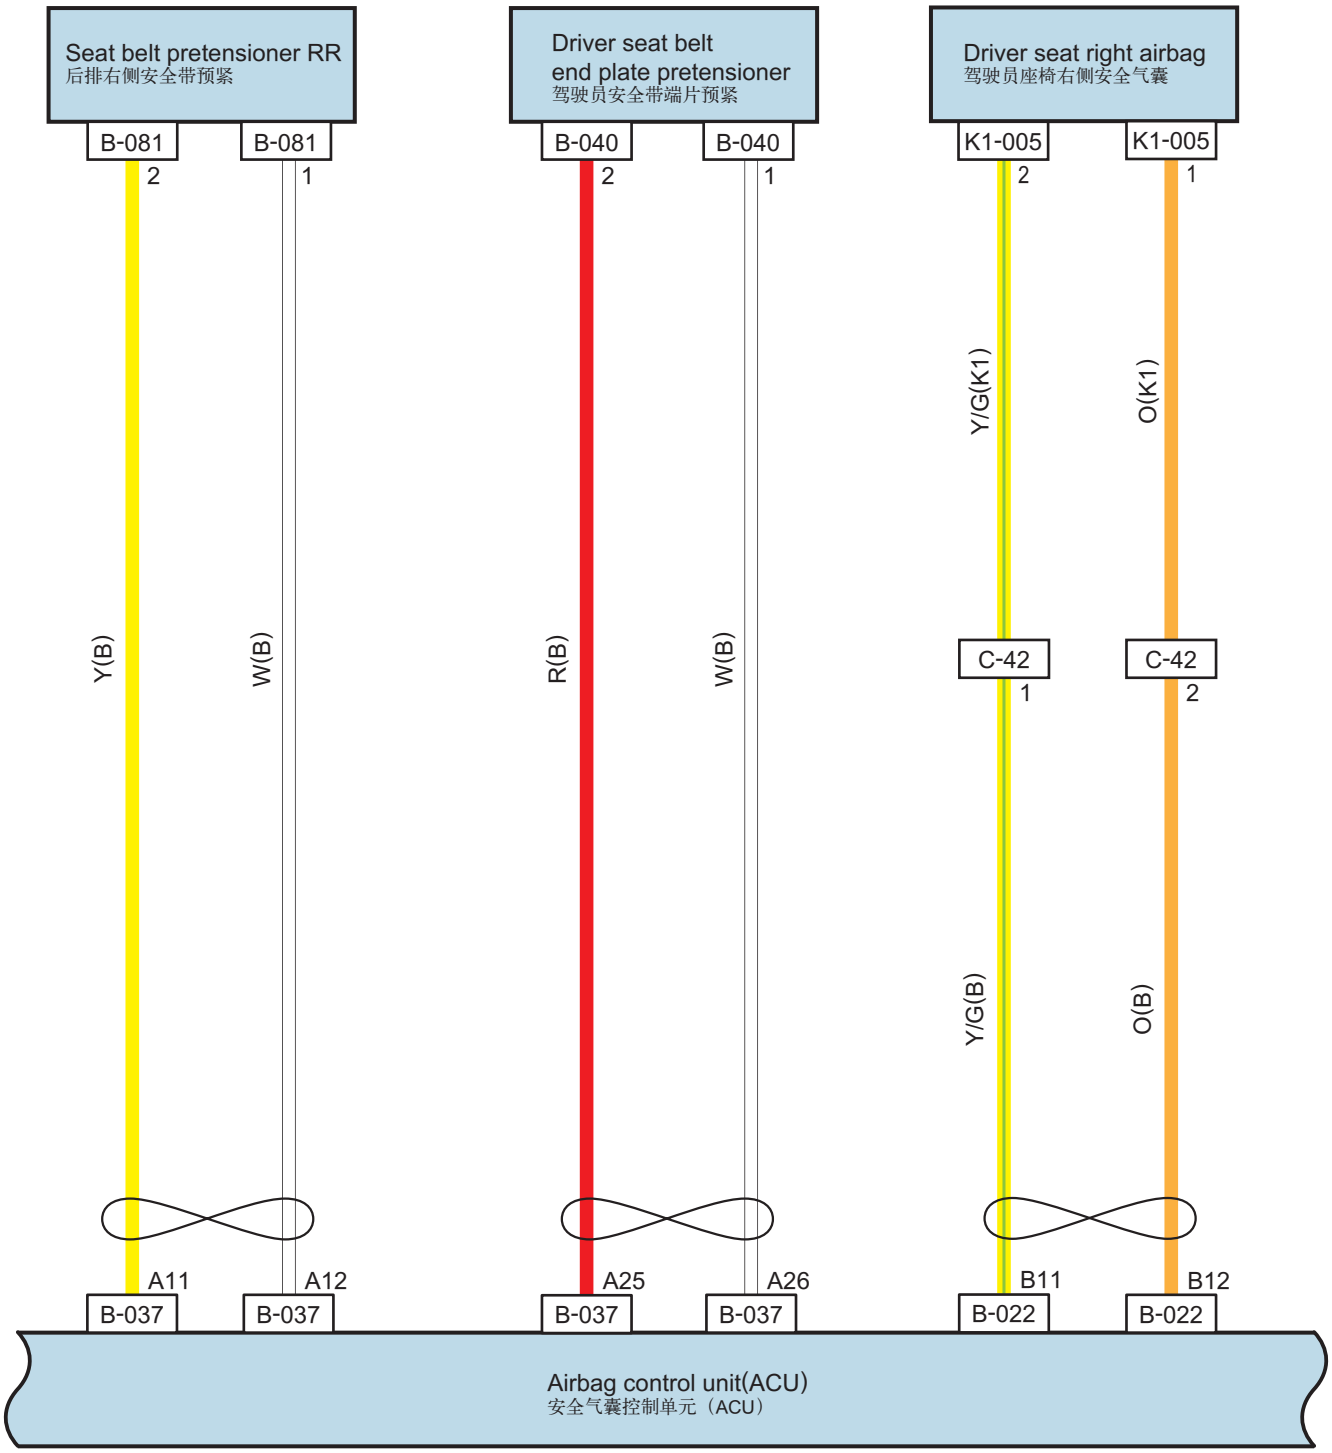

Front right door control unit
右前车门控制单元
DR2-005
C22
G(DR2)
C-33
10
G(B)
Rear left door control unit
左后车门控制单元
DR3-007
C22
G(DR3)
C-36
9
G(B)
Rear right door control unit
右后车门控制单元
DR4-007
C22
G(DR4)
C-37
11
G(B)
Energy conversion and distribution unit
能量转换与分配单元
B3-001
A5
G(B3)
C-35
14
G(B)
Airbag control unit(ACU)
安全气囊控制单元（ACU）

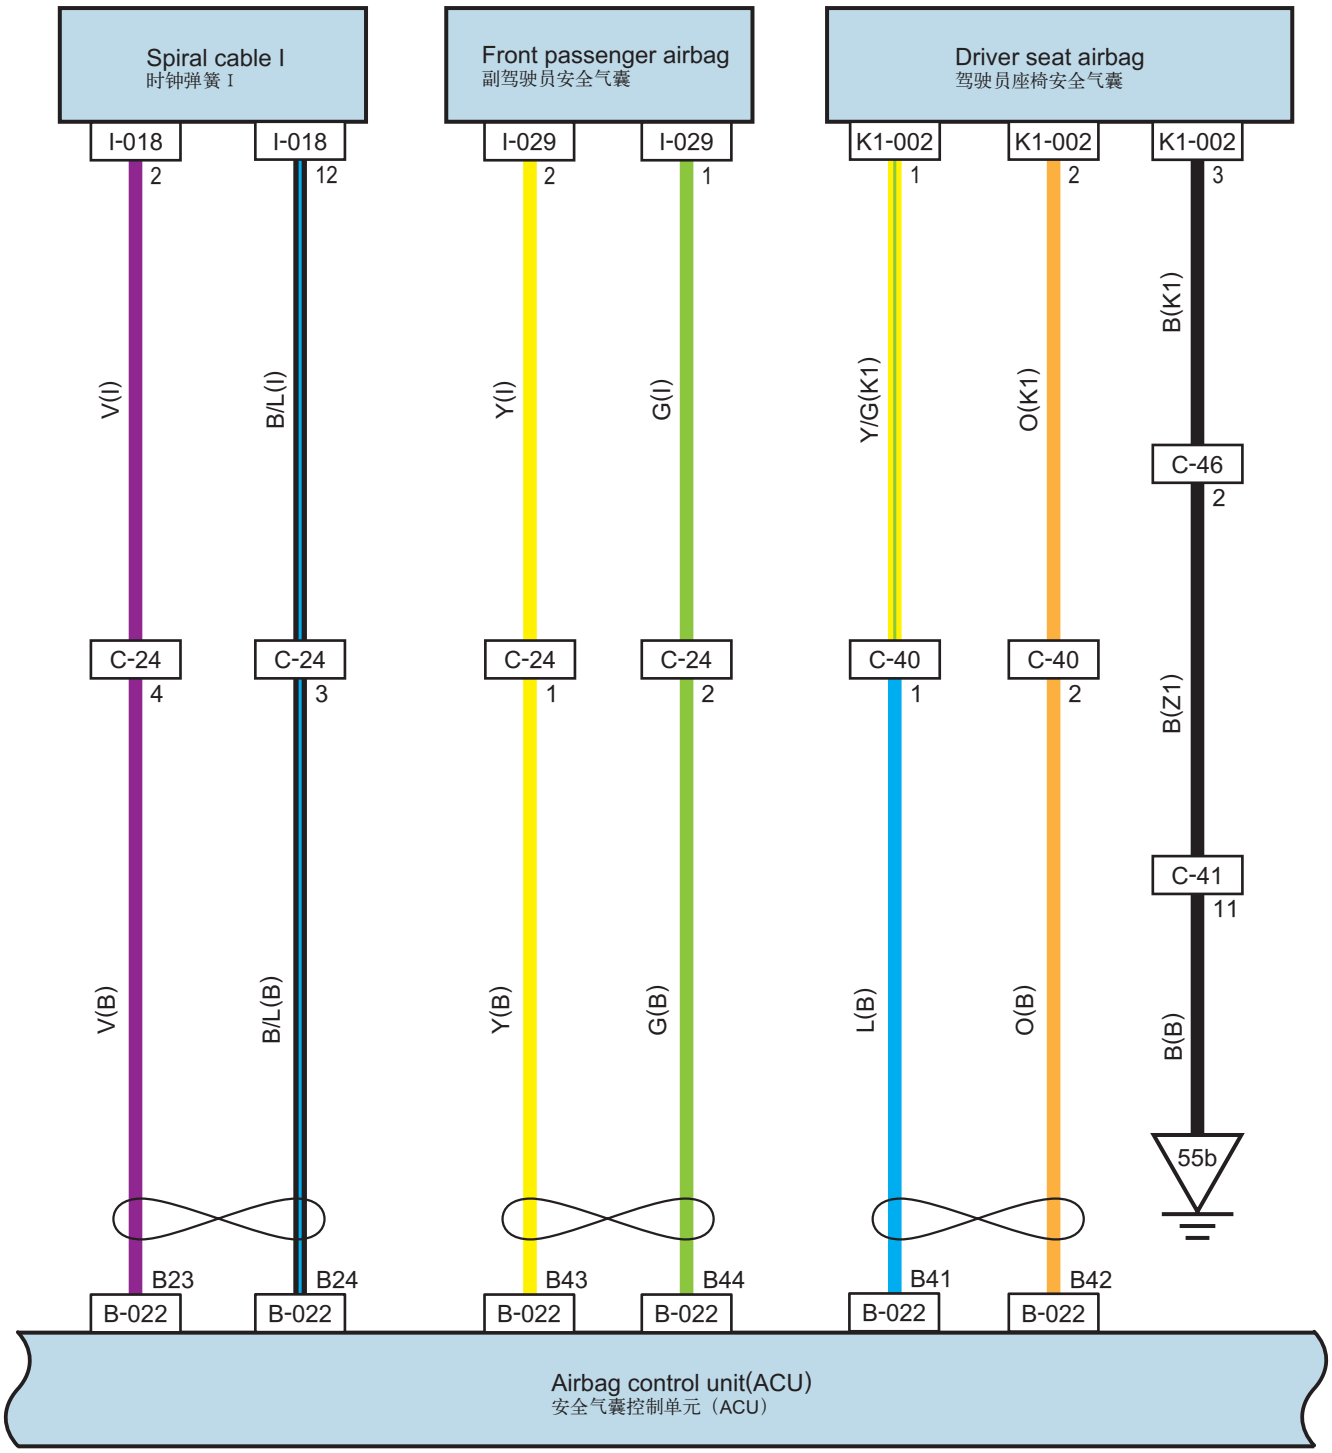

Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）
B-091
A19
G(B)
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
B-023
A36
G(B)
Driver seat belt pretensioner
驾驶员安全带预紧
B-038
1
W(B)
B-038
2
BR(B)
B30
B-022
B29
B-022
Airbag control unit(ACU)
安全气囊控制单元（ACU）

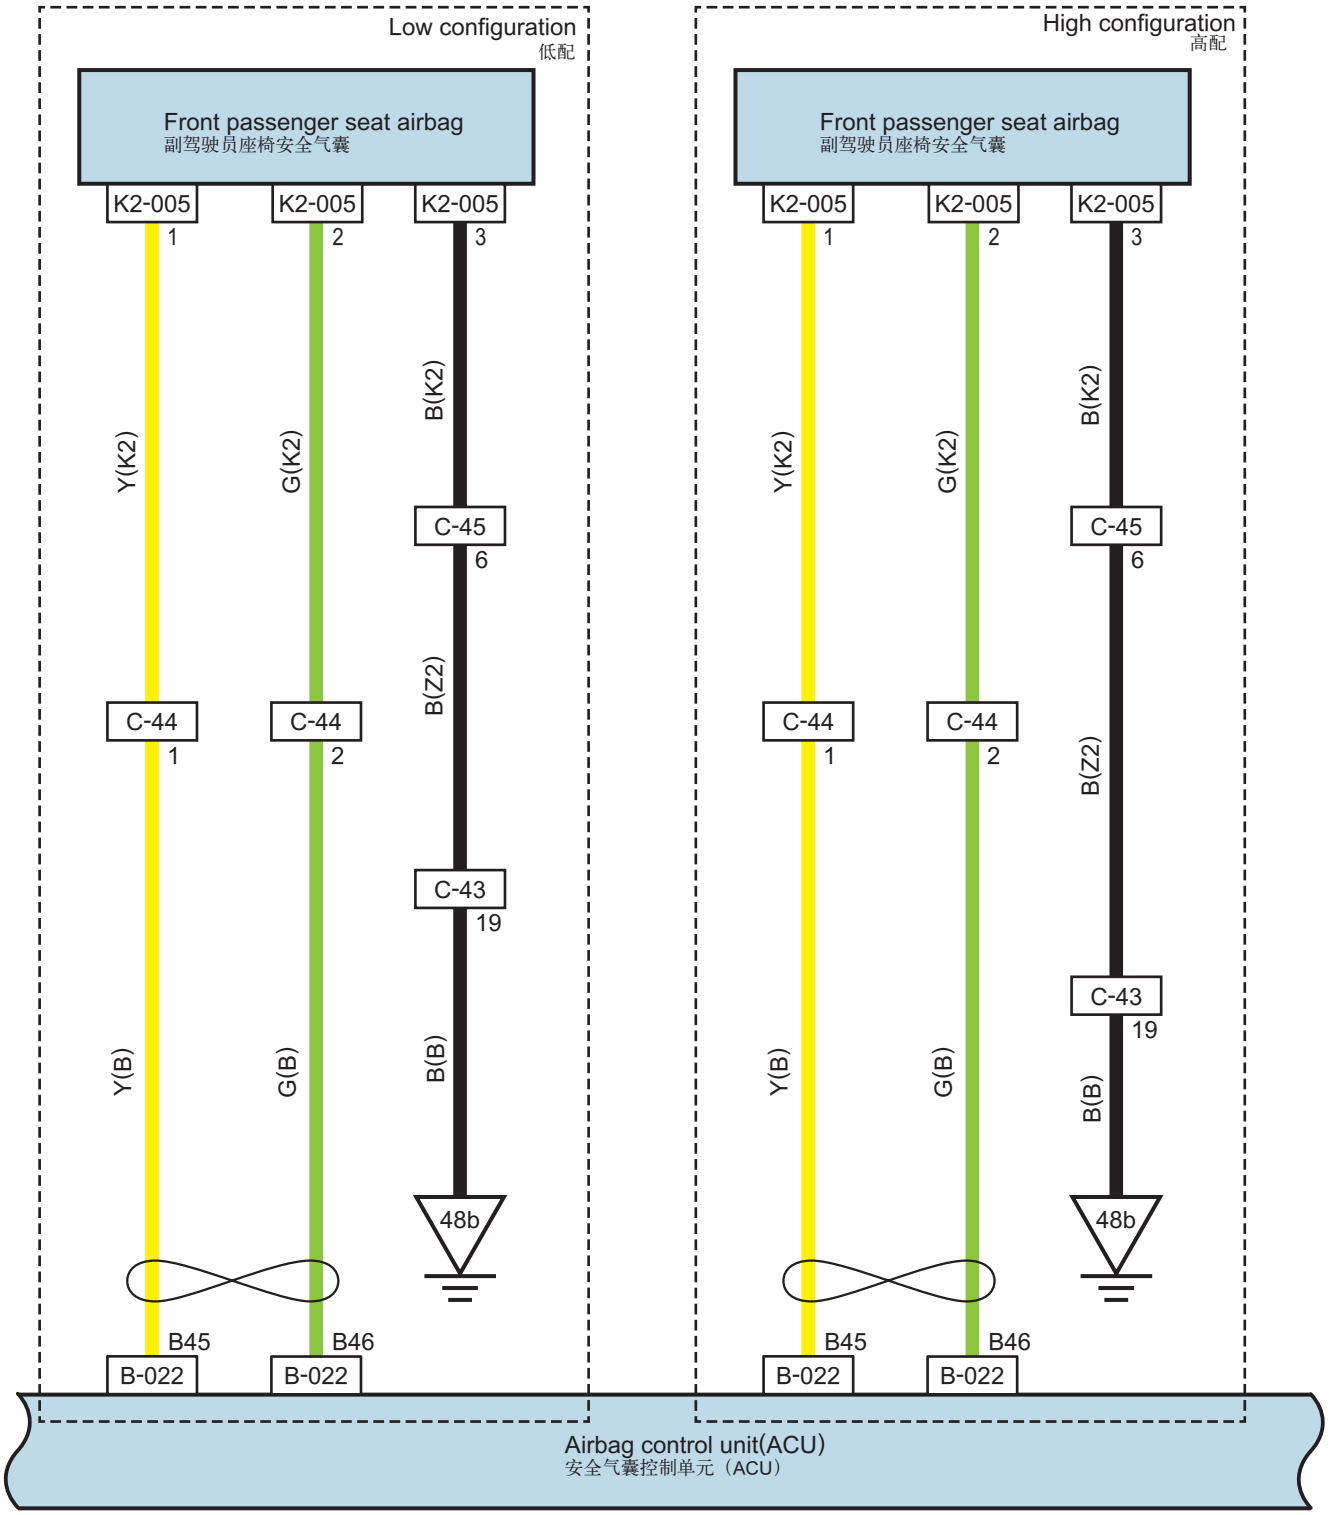

Front passenger
seat belt pretensioner
副驾驶员安全带预紧
B-076
B-076
1
2
GR(B)
Y(B)
Left side curtain shield airbag
左侧侧气帘
B-001
B-001
1
2
W(B)
GR(B)
Right side curtain shield airbag
右侧侧气帘
B-017
B-017
1
2
W(B)
G(B)
B52
B51
B-022
B-022
B27
B28
B-022
B-022
B48
B47
B-022
B-022
Airbag control unit(ACU)
安全气囊控制单元（ACU）

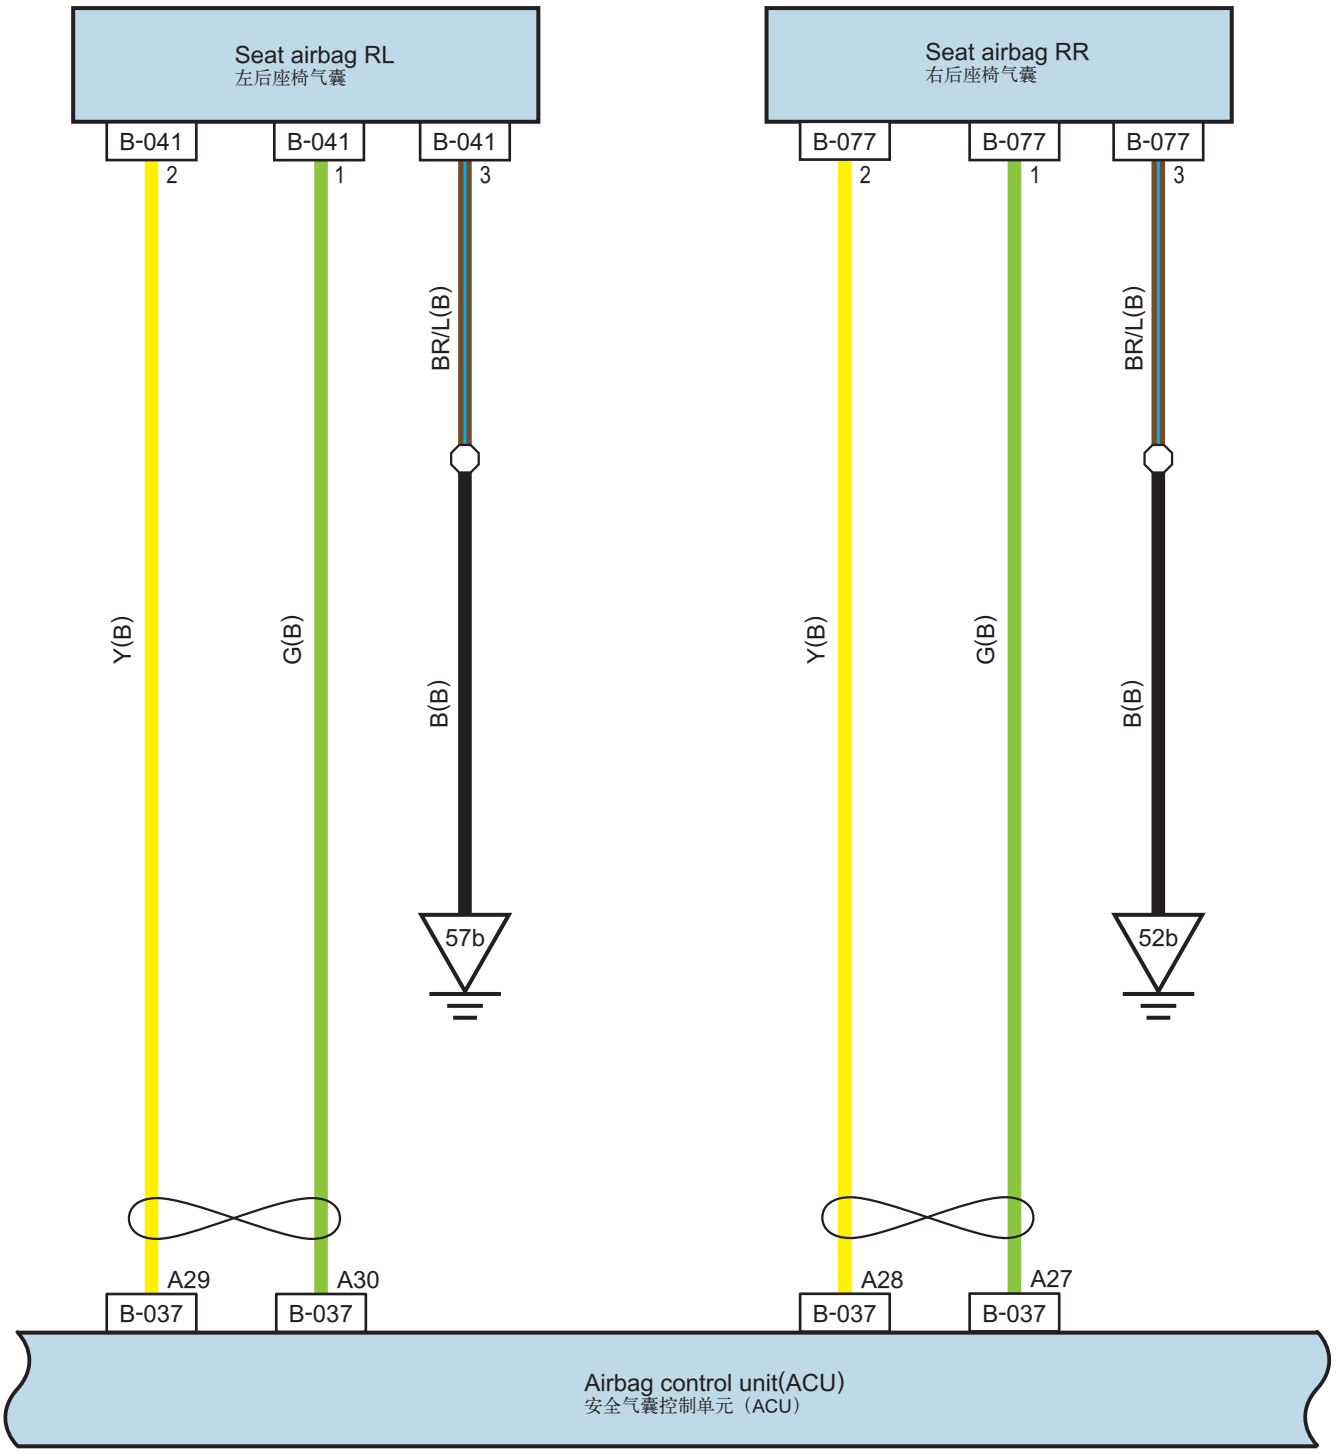

Driver side acceleration front collision sensor
驾驶员侧加速度前碰传感器
F-019
1
F-019
2
W/B(F)
R/Y(F)
C-09
26
C-09
35
W/B(B)
R/Y(B)
B3
B4
B-022
B-022
Passenger side acceleration front collision sensor
乘客侧加速度前碰传感器
F-011
1
F-011
2
L(F)
B/Y(F)
C-09
34
C-09
25
L(B)
B/Y(B)
B1
B2
B-022
B-022
Driver acceleration side collision sensor
驾驶员加速度侧碰传感器
B-039
1
B-039
2
Y/B(B)
W/B(B)
B5
B6
B-022
B-022
Airbag control unit(ACU)
安全气囊控制单元（ACU）

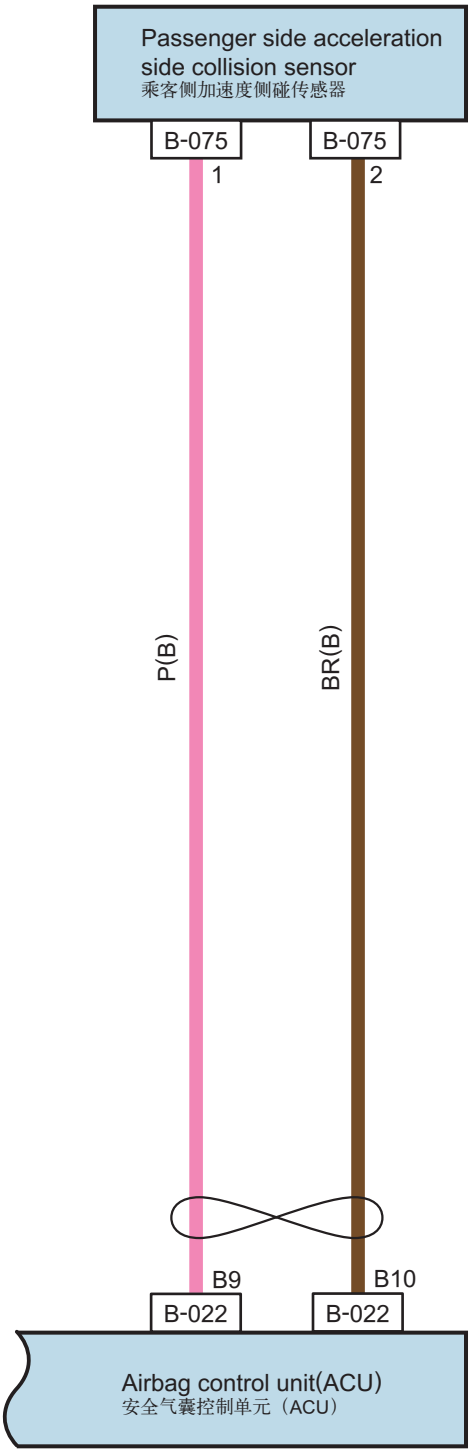

Side collision pressure sensor FL
左前侧碰压力传感器
DR1-006
1
DR1-006
2
G/R(DR1)
Y(DR1)
C-32
18
C-32
19
G/R(B)
Y(B)
B13
B14
B-022
B-022
Side collision pressure sensor FR
右前侧碰压力传感器
DR2-006
2
DR2-006
1
R/Y(DR2)
V(DR2)
C-33
11
C-33
12
R/Y(B)
V(B)
A20
A19
B-037
B-037
Seat belt pretensioner RL
后排左侧安全带预紧
B-044
2
B-044
1
Y(B)
O(B)
A21
A22
B-037
B-037
Airbag control unit(ACU)
安全气囊控制单元（ACU）

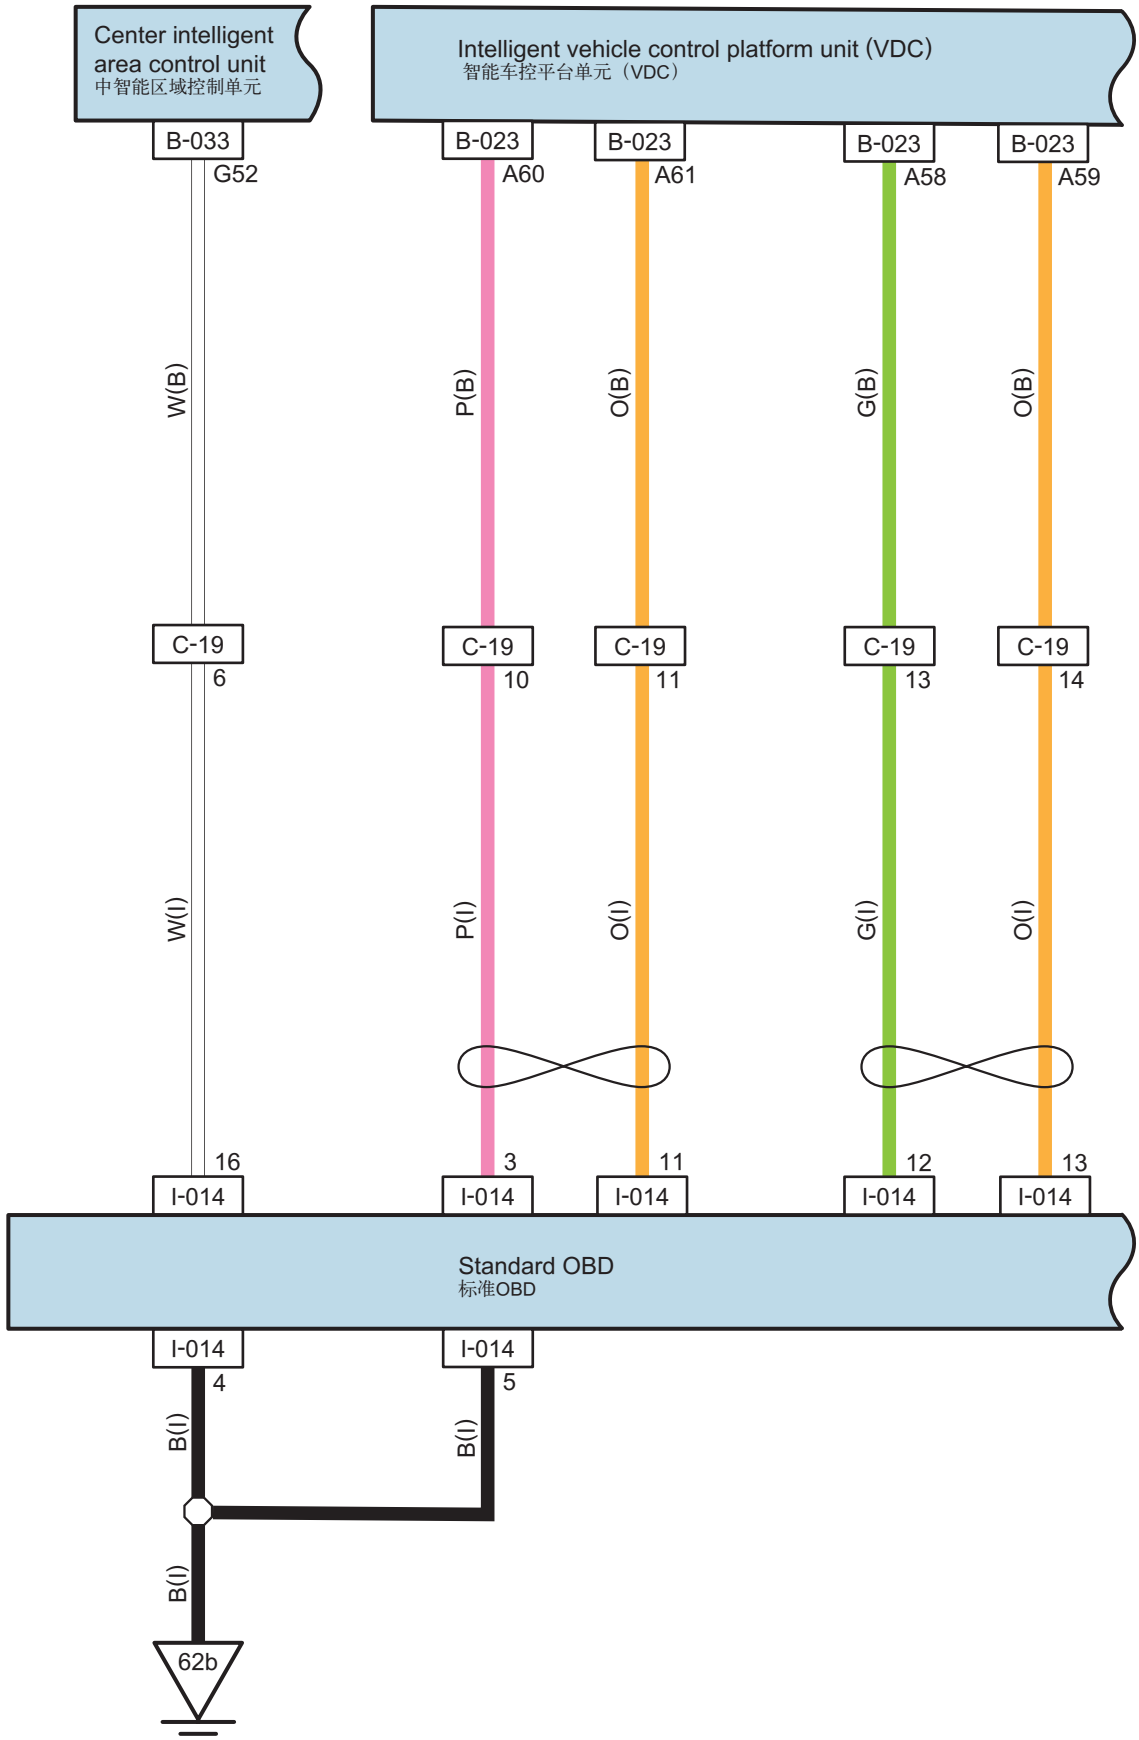

Seat belt pretensioner RR
后排右侧安全带预紧
B-081
2
B-081
1
Y(B)
W(B)
A11
A12
B-037
B-037
Driver seat belt
end plate pretensioner
驾驶员安全带端片预紧
B-040
2
B-040
1
R(B)
W(B)
A25
A26
B-037
B-037
Driver seat right airbag
驾驶员座椅右侧安全气囊
K1-005
2
K1-005
1
Y/G(K1)
O(K1)
C-42
1
C-42
2
Y/G(B)
O(B)
B11
B12
B-022
B-022
Airbag control unit(ACU)
安全气囊控制单元（ACU）

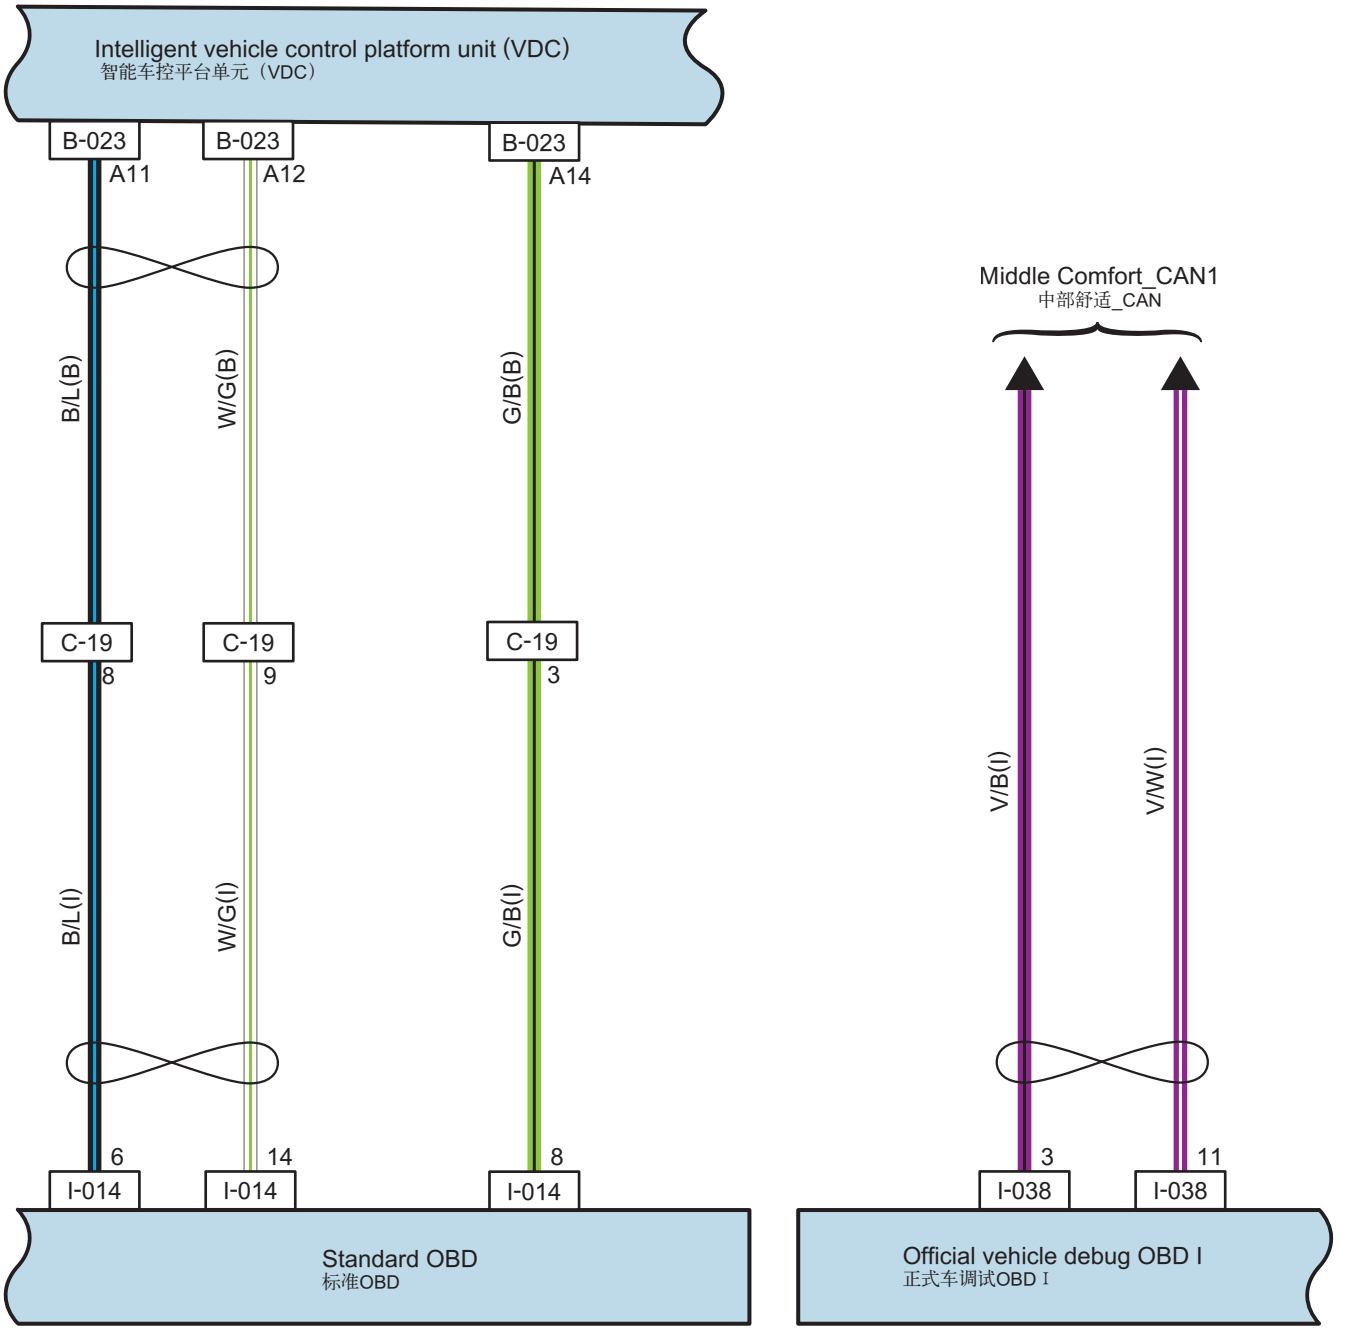

Spiral cable I
时钟弹簧 I
Front passenger airbag
副驾驶员安全气囊
Driver seat airbag
驾驶员座椅安全气囊
I-018
2
I-018
12
I-029
2
I-029
1
K1-002
1
K1-002
2
K1-002
3
V(I)
B/L(I)
Y(I)
G(I)
Y/G(K1)
O(K1)
B(K1)
C-46
2
C-24
4
C-24
3
C-24
1
C-24
2
C-40
1
C-40
2
B(Z1)
C-41
11
V(B)
B/L(B)
Y(B)
G(B)
L(B)
O(B)
B(B)
55b
B23
B24
B43
B44
B41
B42
B-022
B-022
B-022
B-022
B-022
B-022
Airbag control unit(ACU)
安全气囊控制单元（ACU）

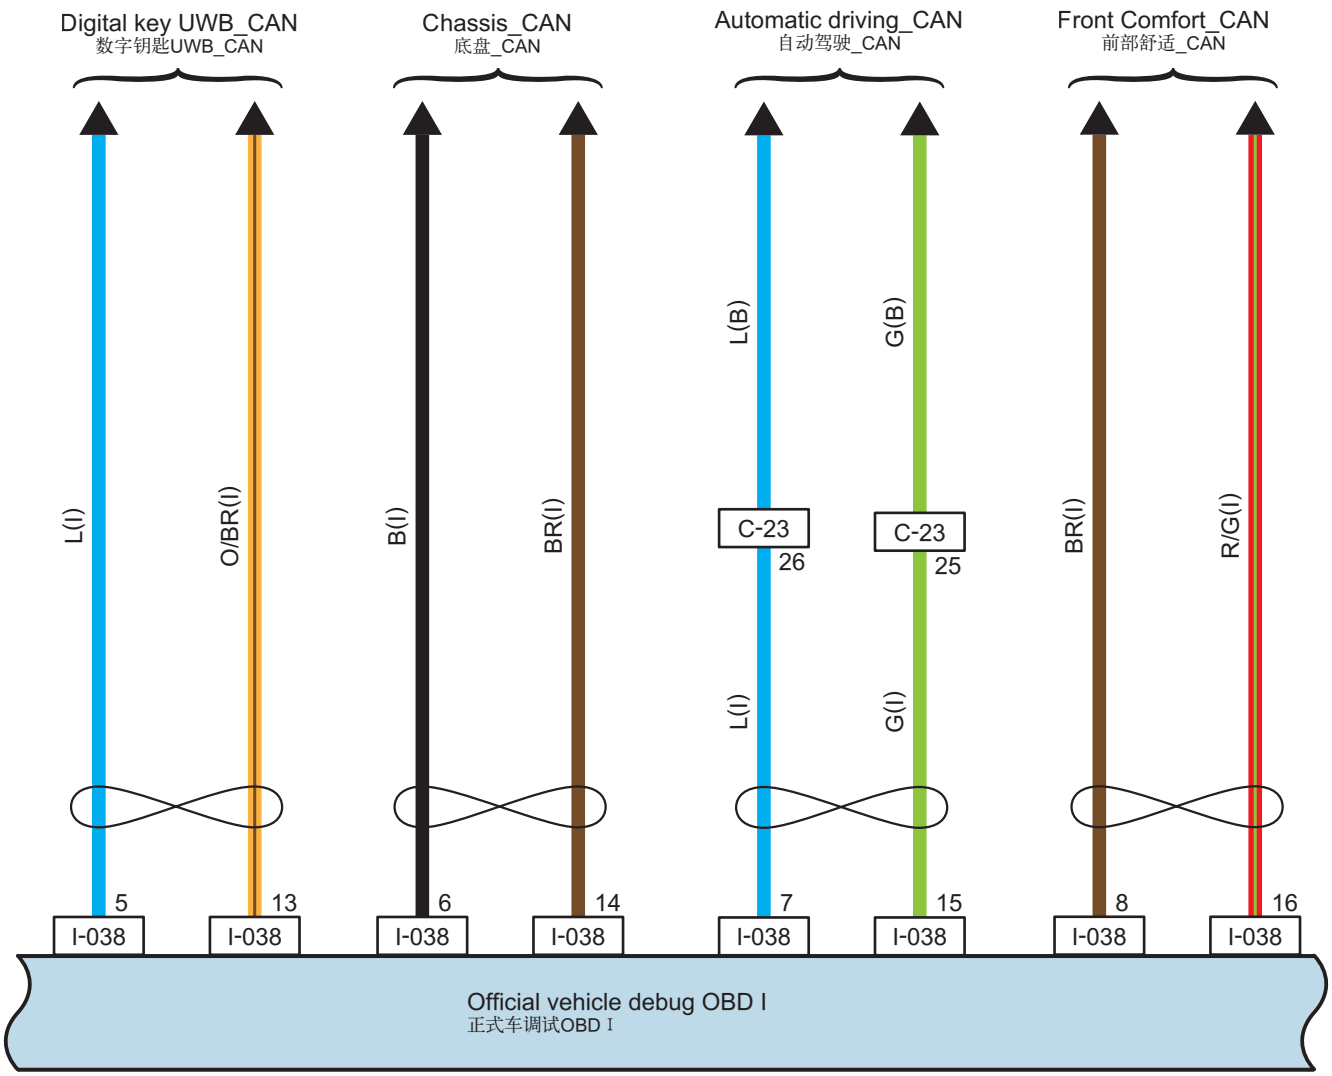

Low configuration
低配
Front passenger seat airbag
副驾驶员座椅安全气囊
K2-005
1
K2-005
2
K2-005
3
Y(K2)
G(K2)
B(K2)
C-45
6
B(Z2)
C-44
1
C-44
2
C-43
19
Y(B)
G(B)
B(B)
48b
B45
B46
B-022
B-022
High configuration
高配
Front passenger seat airbag
副驾驶员座椅安全气囊
K2-005
1
K2-005
2
K2-005
3
Y(K2)
G(K2)
B(K2)
C-45
6
B(Z2)
C-44
1
C-44
2
C-43
19
Y(B)
G(B)
B(B)
48b
B45
B46
B-022
B-022
Airbag control unit(ACU)
安全气囊控制单元（ACU）

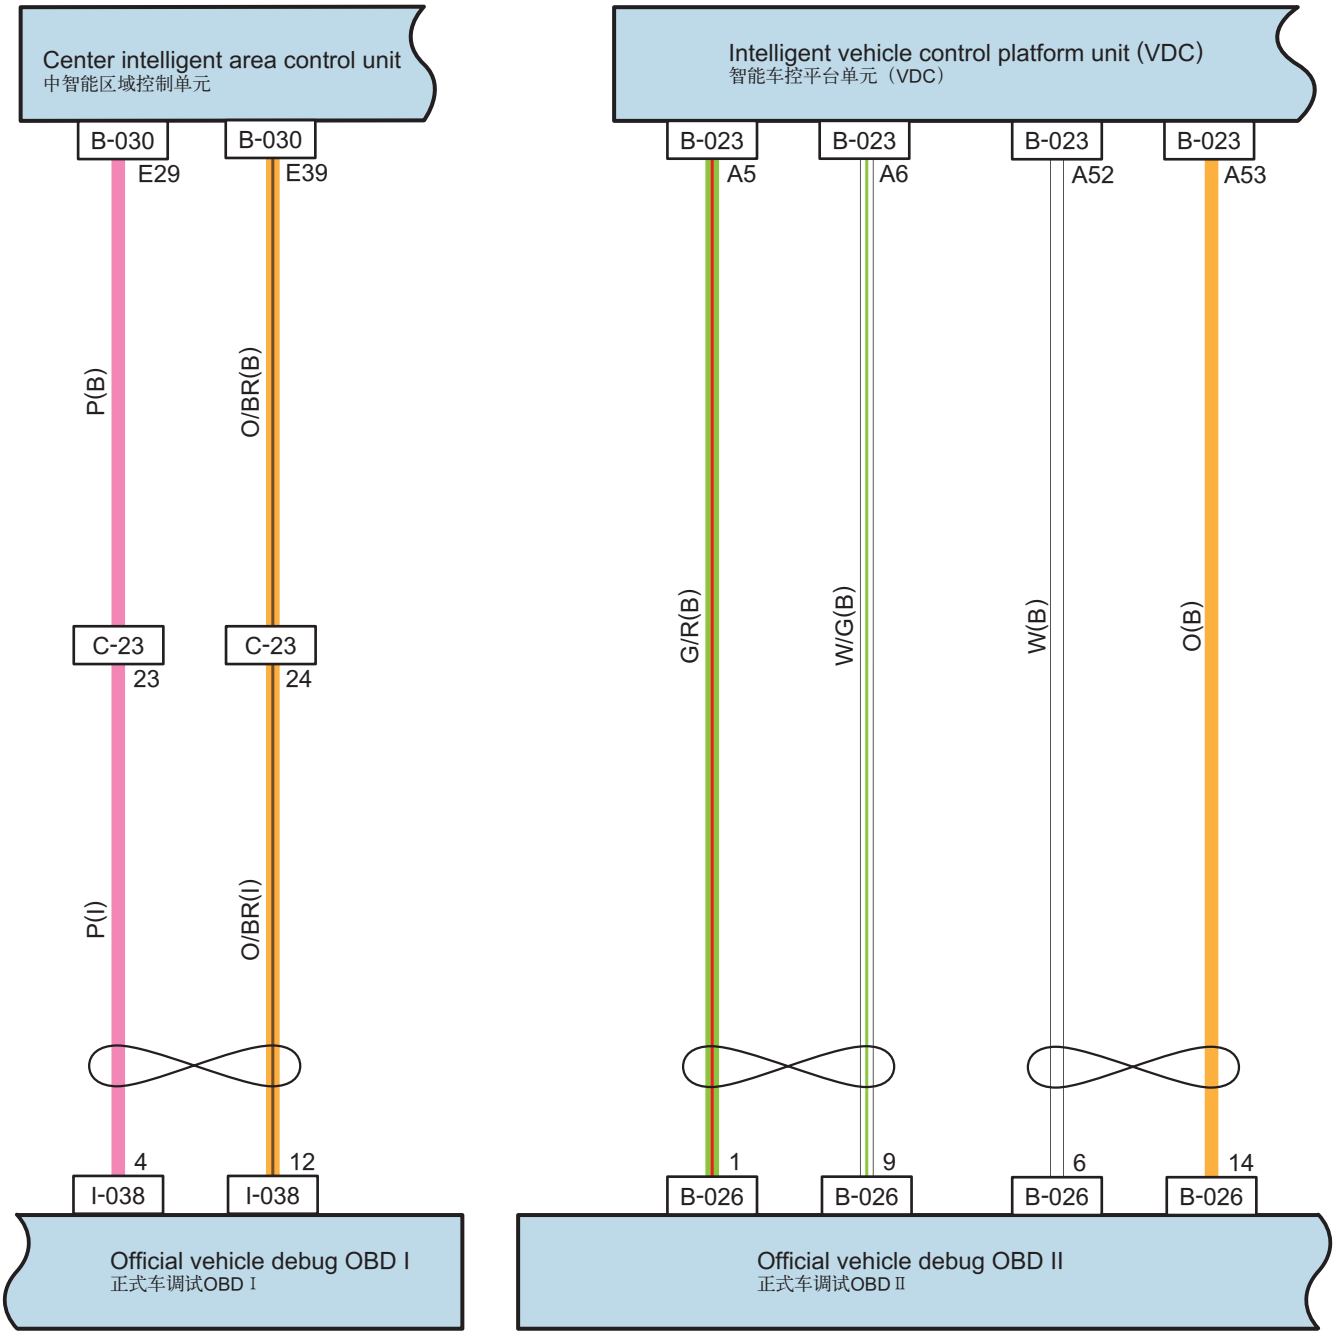

Seat airbag RL
左后座椅气囊
B-041
2
B-041
1
B-041
3
BR/L(B)
Y(B)
G(B)
B(B)
57b
Seat airbag RR
右后座椅气囊
B-077
2
B-077
1
B-077
3
BR/L(B)
Y(B)
G(B)
B(B)
52b
A29
B-037
A30
B-037
A28
B-037
A27
B-037
Airbag control unit(ACU)
安全气囊控制单元（ACU）

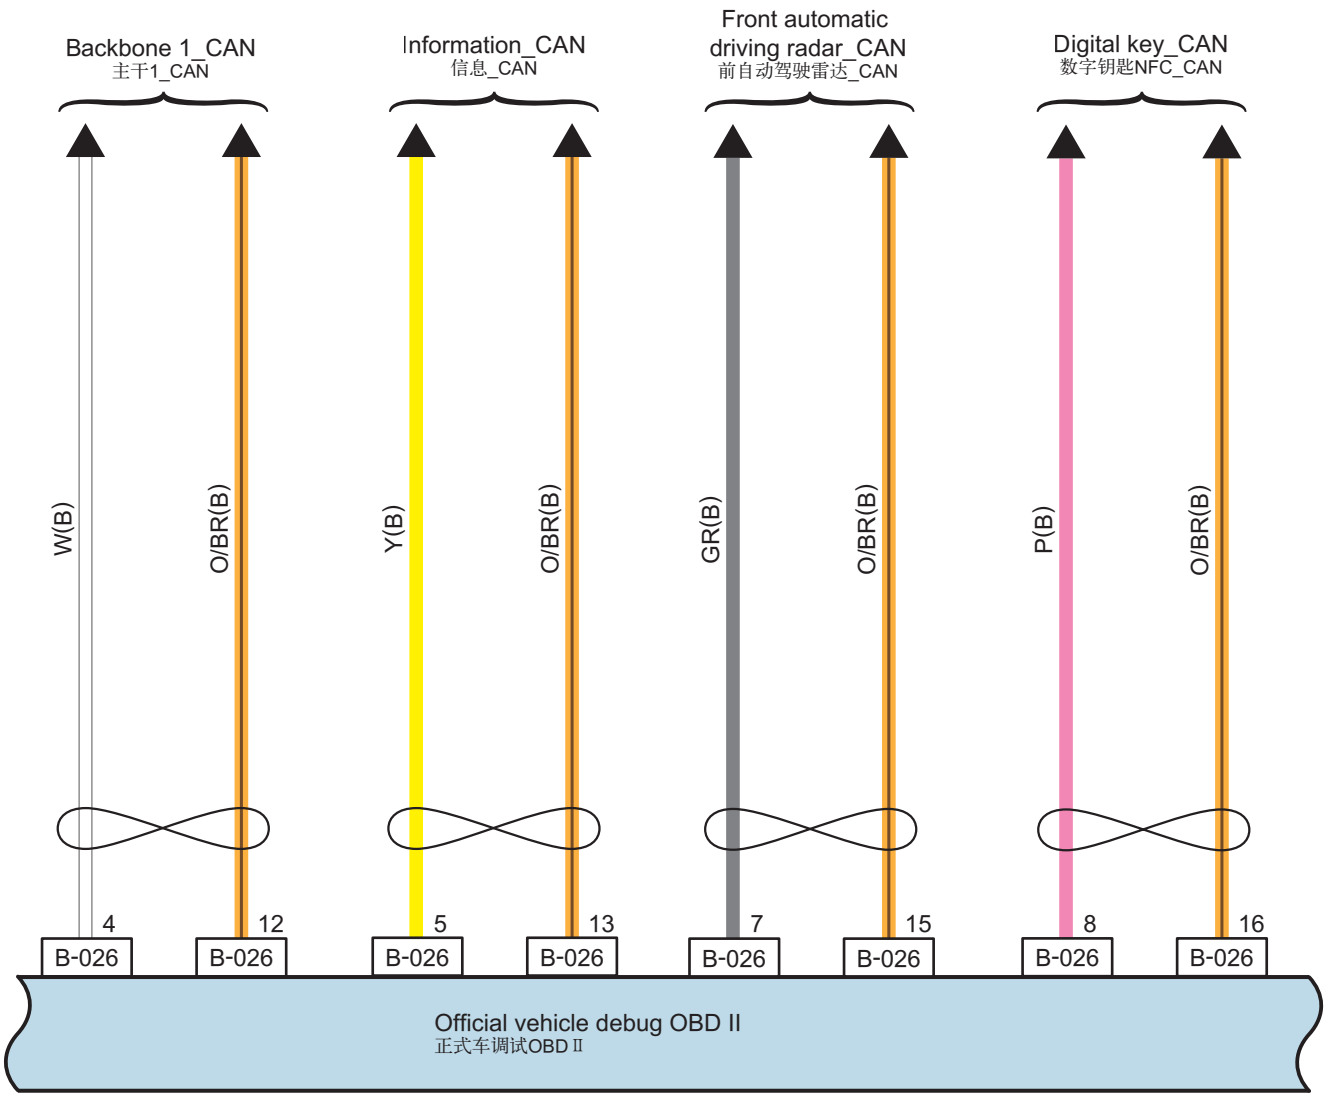

Passenger side acceleration side collision sensor
乘客侧加速度侧碰传感器
B-075
1
B-075
2
P(B)
BR(B)
B9
B10
B-022
B-022
Airbag control unit(ACU)
安全气囊控制单元（ACU）

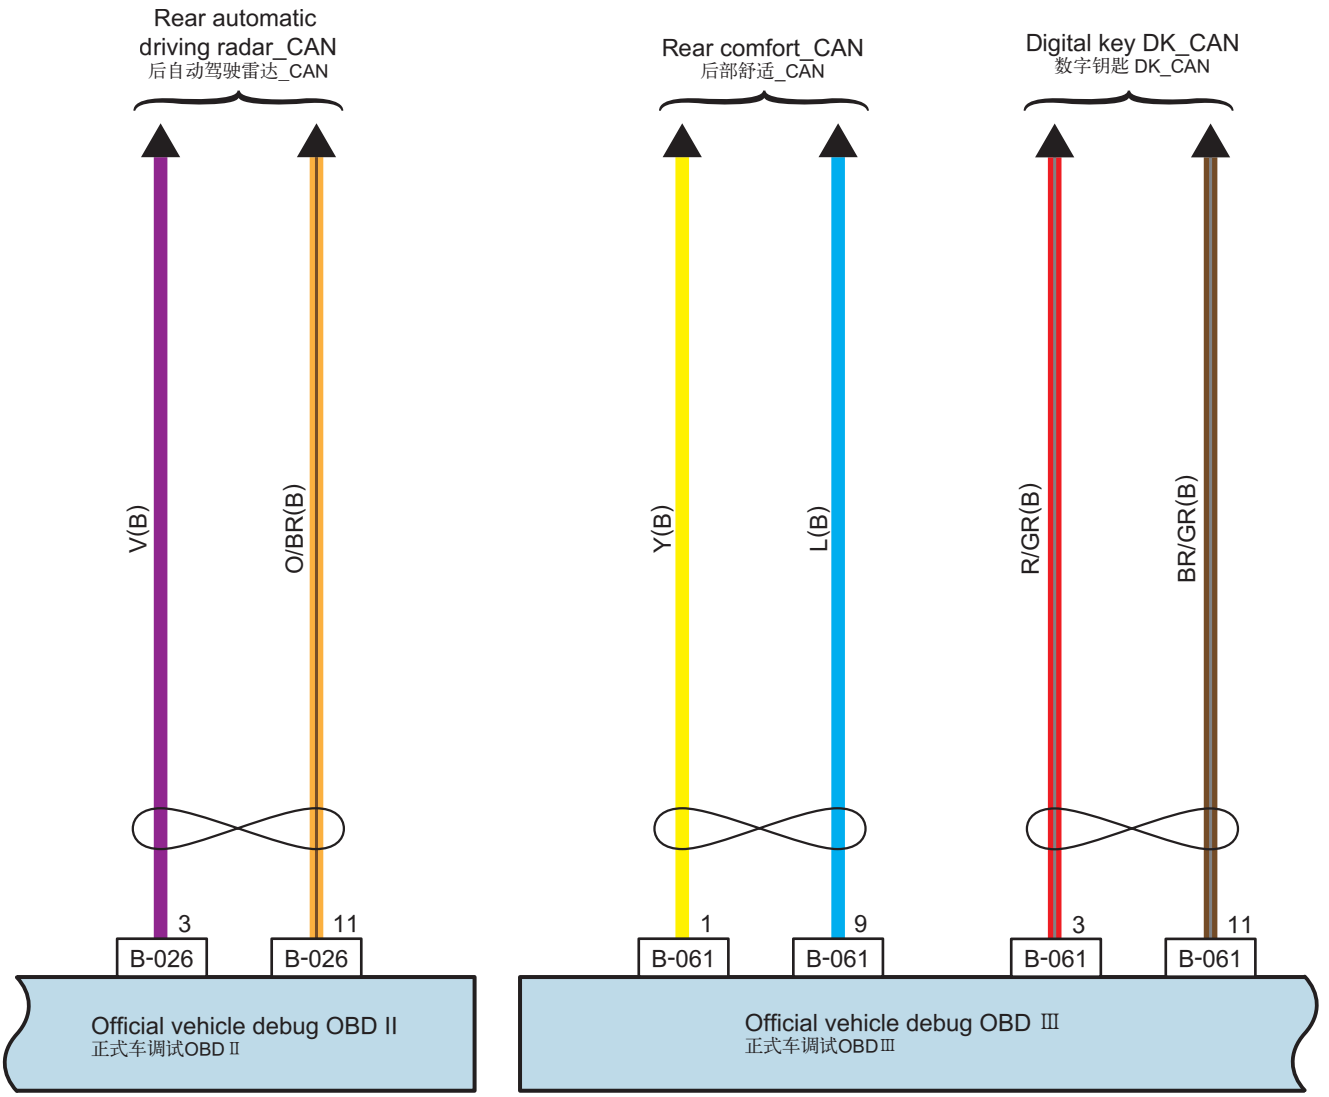

Center intelligent area control unit
中智能区域控制单元
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
B-033
G52
B-023
A60
B-023
A61
B-023
A58
B-023
A59
W(B)
P(B)
O(B)
G(B)
O(B)
C-19
6
C-19
10
C-19
11
C-19
13
C-19
14
W(I)
P(I)
O(I)
G(I)
O(I)
16
3
11
12
13
I-014
I-014
I-014
I-014
I-014
Standard OBD
标准OBD
I-014
4
I-014
5
B(I)
B(I)
B(I)
62b

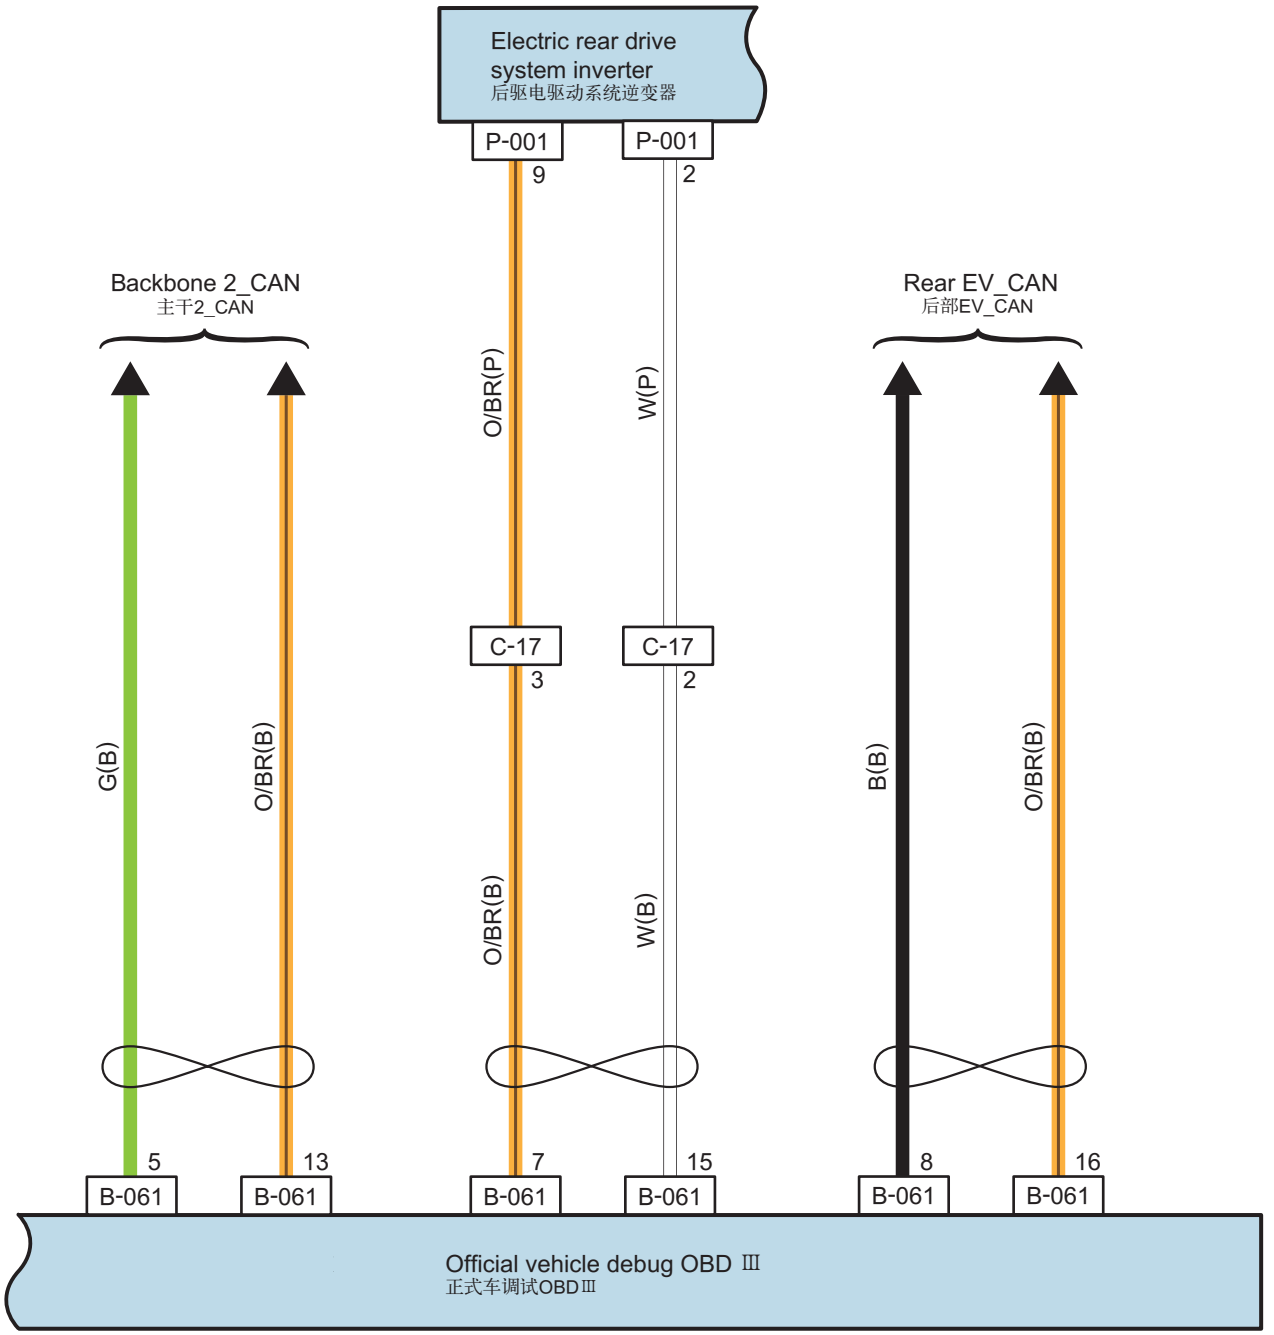

Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
B-023
A11
B-023
A12
B-023
A14
B/L(B)
W/G(B)
G/B(B)
C-19
8
C-19
9
C-19
3
B/L(I)
W/G(I)
G/B(I)
6
14
8
I-014
I-014
I-014
Standard OBD
标准OBD
Middle Comfort_CAN1
中部舒适_CAN
V/B(I)
V/W(I)
3
11
I-038
I-038
Official vehicle debug OBD I
正式车调试OBD Ⅰ

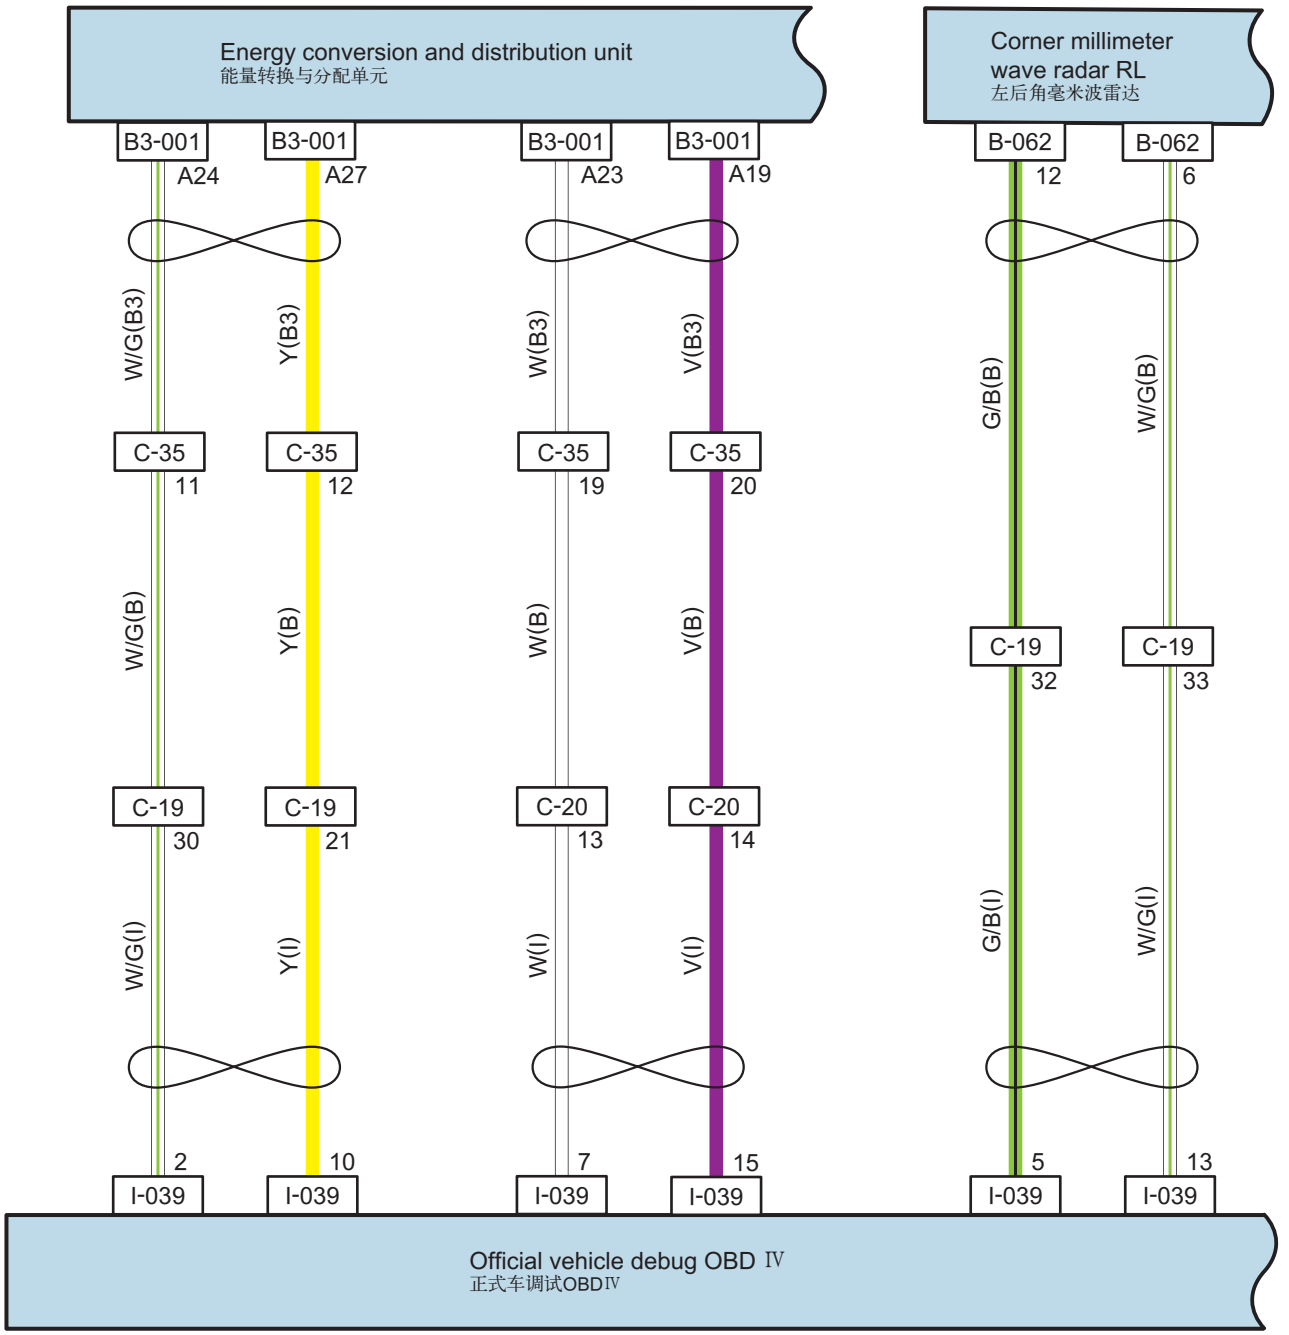

Digital key UWB_CAN
数字钥匙UWB_CAN
Chassis_CAN
底盘_CAN
Automatic driving_CAN
自动驾驶_CAN
Front Comfort_CAN
前部舒适_CAN
L(I)
O/BR(I)
B(I)
BR(I)
L(B)
G(B)
C-23
26
C-23
25
L(I)
G(I)
BR(I)
R/G(I)
5
13
6
14
7
15
8
16
I-038
I-038
I-038
I-038
I-038
I-038
I-038
I-038
Official vehicle debug OBD I
正式车调试OBD I

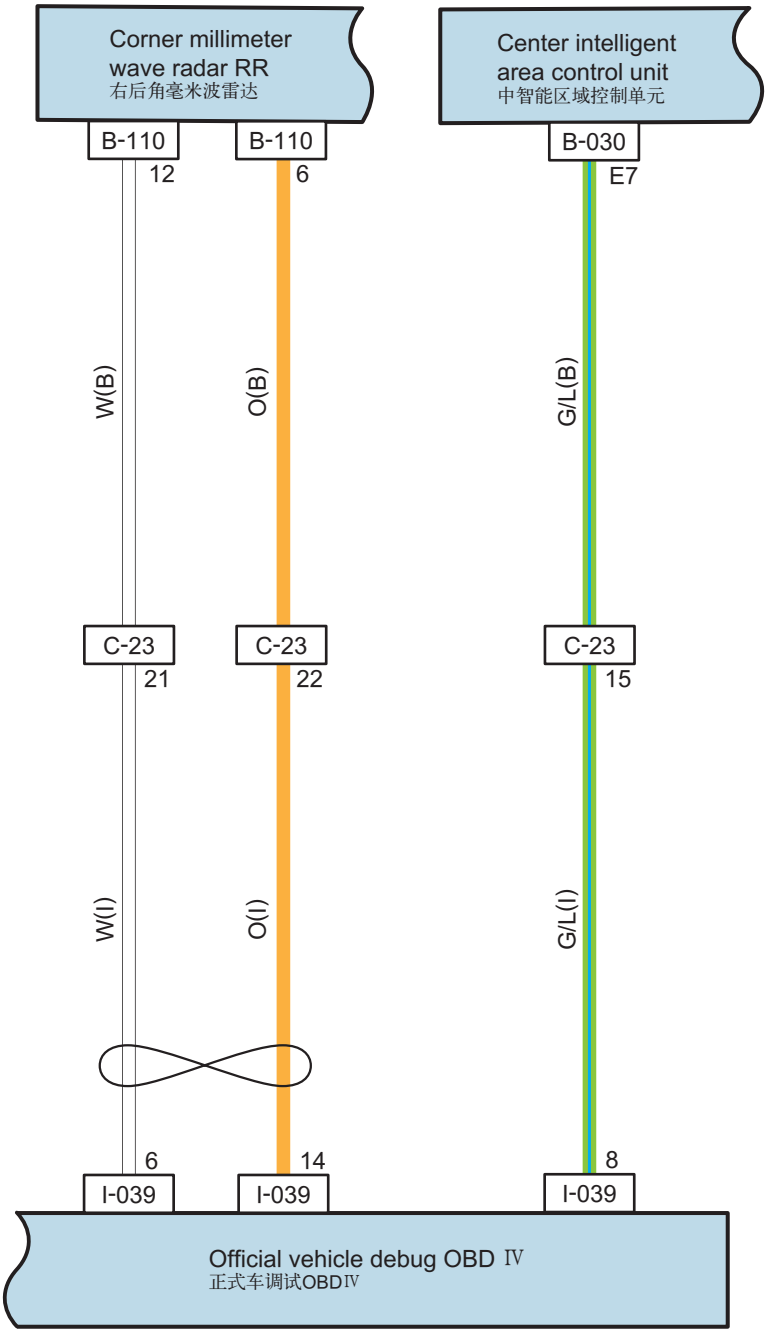

Center intelligent area control unit
中智能区域控制单元
B-030
E29
B-030
E39
P(B)
O/BR(B)
C-23
23
C-23
24
P(I)
O/BR(I)
4
12
I-038
I-038
Official vehicle debug OBD I
正式车调试OBD Ⅰ
Intelligent vehicle control platform unit (VDC)
智能车控平台单元（VDC）
B-023
A5
B-023
A6
B-023
A52
B-023
A53
G/R(B)
W/G(B)
W(B)
O(B)
1
9
6
14
B-026
B-026
B-026
B-026
Official vehicle debug OBD II
正式车调试OBD Ⅱ


Backbone 1_CAN
主干1_CAN
Information_CAN
信息_CAN
Front automatic driving radar_CAN
前自动驾驶雷达_CAN
Digital key_CAN
数字钥匙NFC_CAN
W(B)
O/BR(B)
Y(B)
O/BR(B)
GR(B)
O/BR(B)
P(B)
O/BR(B)
4
12
5
13
7
15
8
16
B-026
B-026
B-026
B-026
B-026
B-026
B-026
B-026
Official vehicle debug OBD II
正式车调试OBD Ⅱ

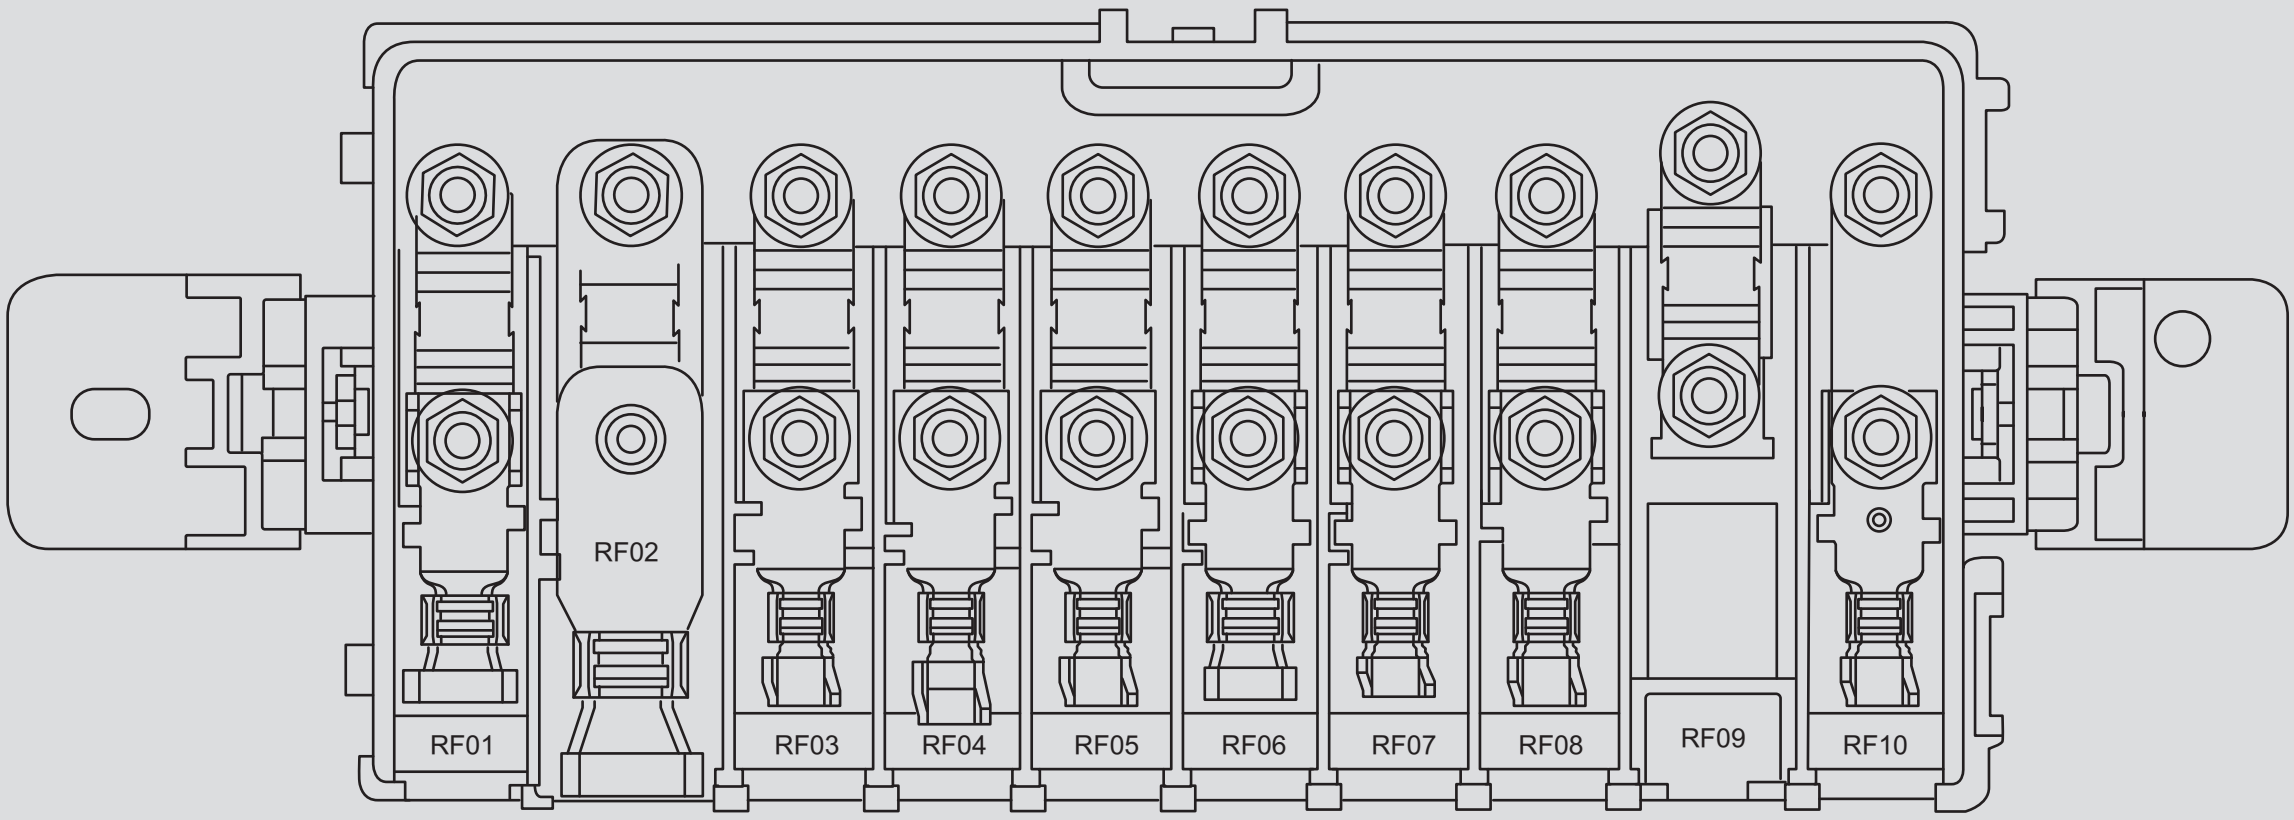

Rear automatic
driving radar_CAN
后自动驾驶雷达_CAN
V(B)
O/BR(B)
3
11
B-026
B-026
Official vehicle debug OBD II
正式车调试OBD II
Rear comfort_CAN
后部舒适_CAN
Y(B)
L(B)
1
9
B-061
B-061
Digital key DK_CAN
数字钥匙 DK_CAN
R/GR(B)
BR/GR(B)
3
11
B-061
B-061
Official vehicle debug OBD III
正式车调试OBD III


Electric rear drive system inverter
后驱电驱动系统逆变器
P-001
9
P-001
2
Backbone 2_CAN
主干2_CAN
Rear EV_CAN
后部EV_CAN
O/BR(P)
W(P)
C-17
3
C-17
2
G(B)
O/BR(B)
O/BR(B)
W(B)
B(B)
O/BR(B)
5
13
7
15
8
16
B-061
B-061
B-061
B-061
B-061
B-061
Official vehicle debug OBD Ⅲ
正式车调试OBDⅢ


Energy conversion and distribution unit
能量转换与分配单元
Corner millimeter wave radar RL
左后角毫米波雷达
B3-001
A24
B3-001
A27
B3-001
A23
B3-001
A19
B-062
12
B-062
6
W/G(B3)
Y(B3)
W(B3)
V(B3)
G/B(B)
W/G(B)
C-35
11
C-35
12
C-35
19
C-35
20
W/G(B)
Y(B)
W(B)
V(B)
C-19
32
C-19
33
C-19
30
C-19
21
C-20
13
C-20
14
W/G(I)
Y(I)
W(I)
V(I)
G/B(I)
W/G(I)
2
10
7
15
5
13
I-039
I-039
I-039
I-039
I-039
I-039
Official vehicle debug OBD Ⅳ
正式车调试OBDⅣ


Corner millimeter wave radar RR
右后角毫米波雷达
B-110
12
B-110
6
Center intelligent area control unit
中智能区域控制单元
B-030
E7
W(B)
O(B)
G/L(B)
C-23
21
C-23
22
C-23
15
W(I)
O(I)
G/L(I)
6
14
8
I-039
I-039
I-039
Official vehicle debug OBD Ⅳ
正式车调试OBDⅣ

RF Front transfer distribution box
RF 前中转配电盒

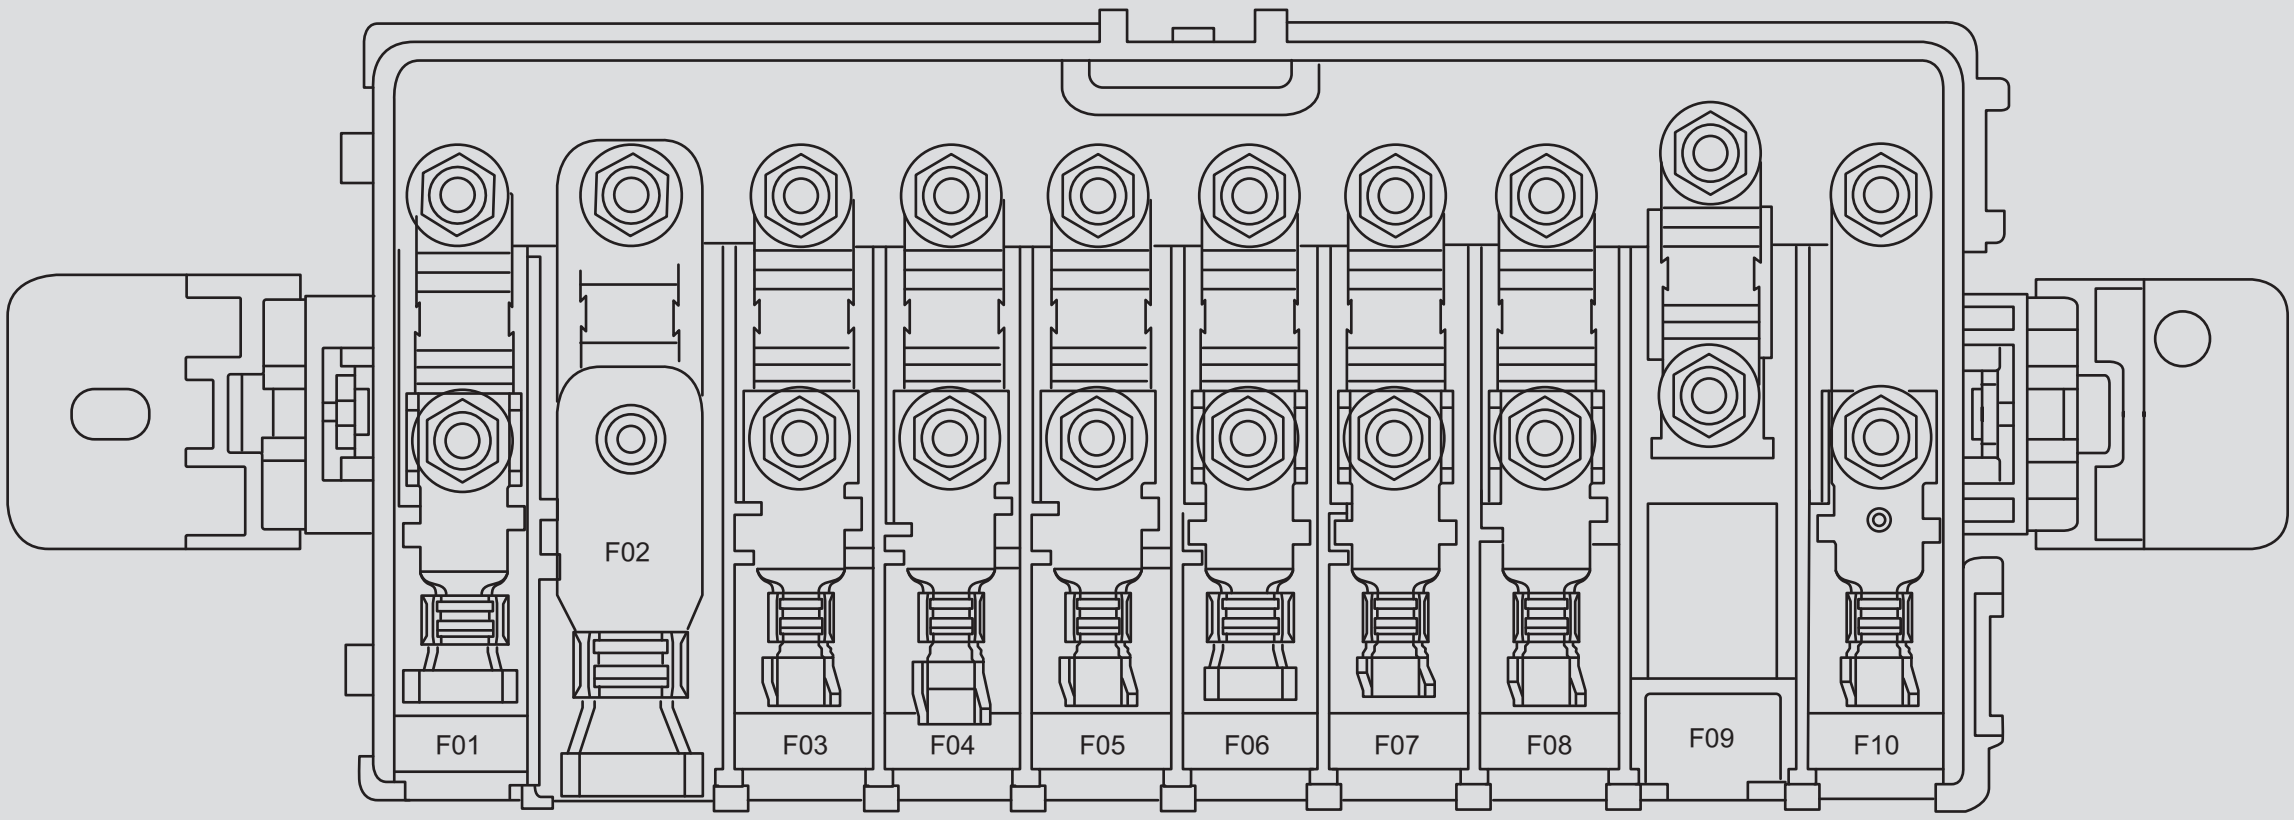


RF front transfer distribution box RF 前中转配电盒		
Number 编号	Name 名称	Ampere 安
RF01	Rear transfer distribution box 后中转配电盒	—
RF02	Reserve 预留	—
RF03	Heater PTC1 风暖PTC1	100A
RF04	Integrated brake control system IBC 集成式制动控制器	60A
RF05	Integrated brake control system IBC 集成式制动控制器	60A
RF06	Infotainment control unit(CSC)-low configuration 信息娱乐控制单元(CSC)-低配	30A
RF07	Electric power steering control unit 电动助力转向控制单元	100A
RF08	Cooling fan 冷却风扇	60A
RF09	Reserve 预留	—
RF10	Front intelligent area control unit 前智能区域控制单元	80A

Power supply and ground information
电源及接地信息

Front transfer distribution box power supply layout
前中转配电盒电源分布

F Rear transfer distribution box
F 后中转配电盒

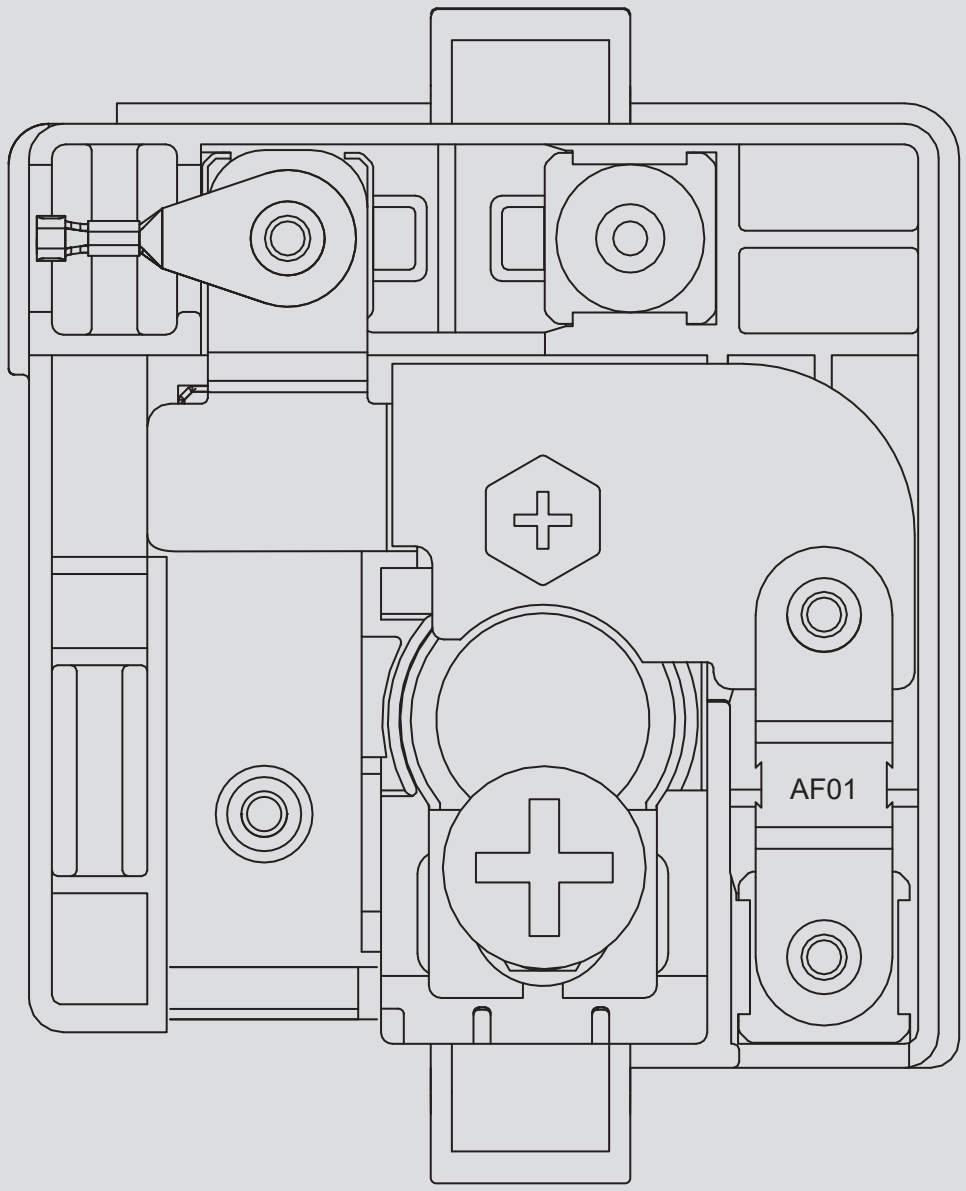


F rear transfer distribution box F 后中转配电盒		
Number 编号	Name 名称	Ampere 安
F01	Rear battery distribution box 后蓄电池配电盒	—
F02	Energy conversion and distribution unit 能量转换与分配单元	—
F03	Trailer distribution box 拖车配电盒	80A
F04	Outside rear view mirror LH 左侧外后视镜	5A
F05	Rear intelligent area control unit 后智能区域控制单元	125A
F06	Power amplifier(high configuration) 功率放大器(高配)	30A
F07	Center intelligent area control unit 中智能区域控制单元	100A
F08	Reserve 预留	—
F09	Front transfer distribution box 前中转配电盒	—
F10	Reserve 预留	—

Power supply and ground information
电源及接地信息

Rear transfer distribution box power supply layout
后中转配电盒电源分布

AF Rear battery distribution box
AF 后蓄电池配电盒

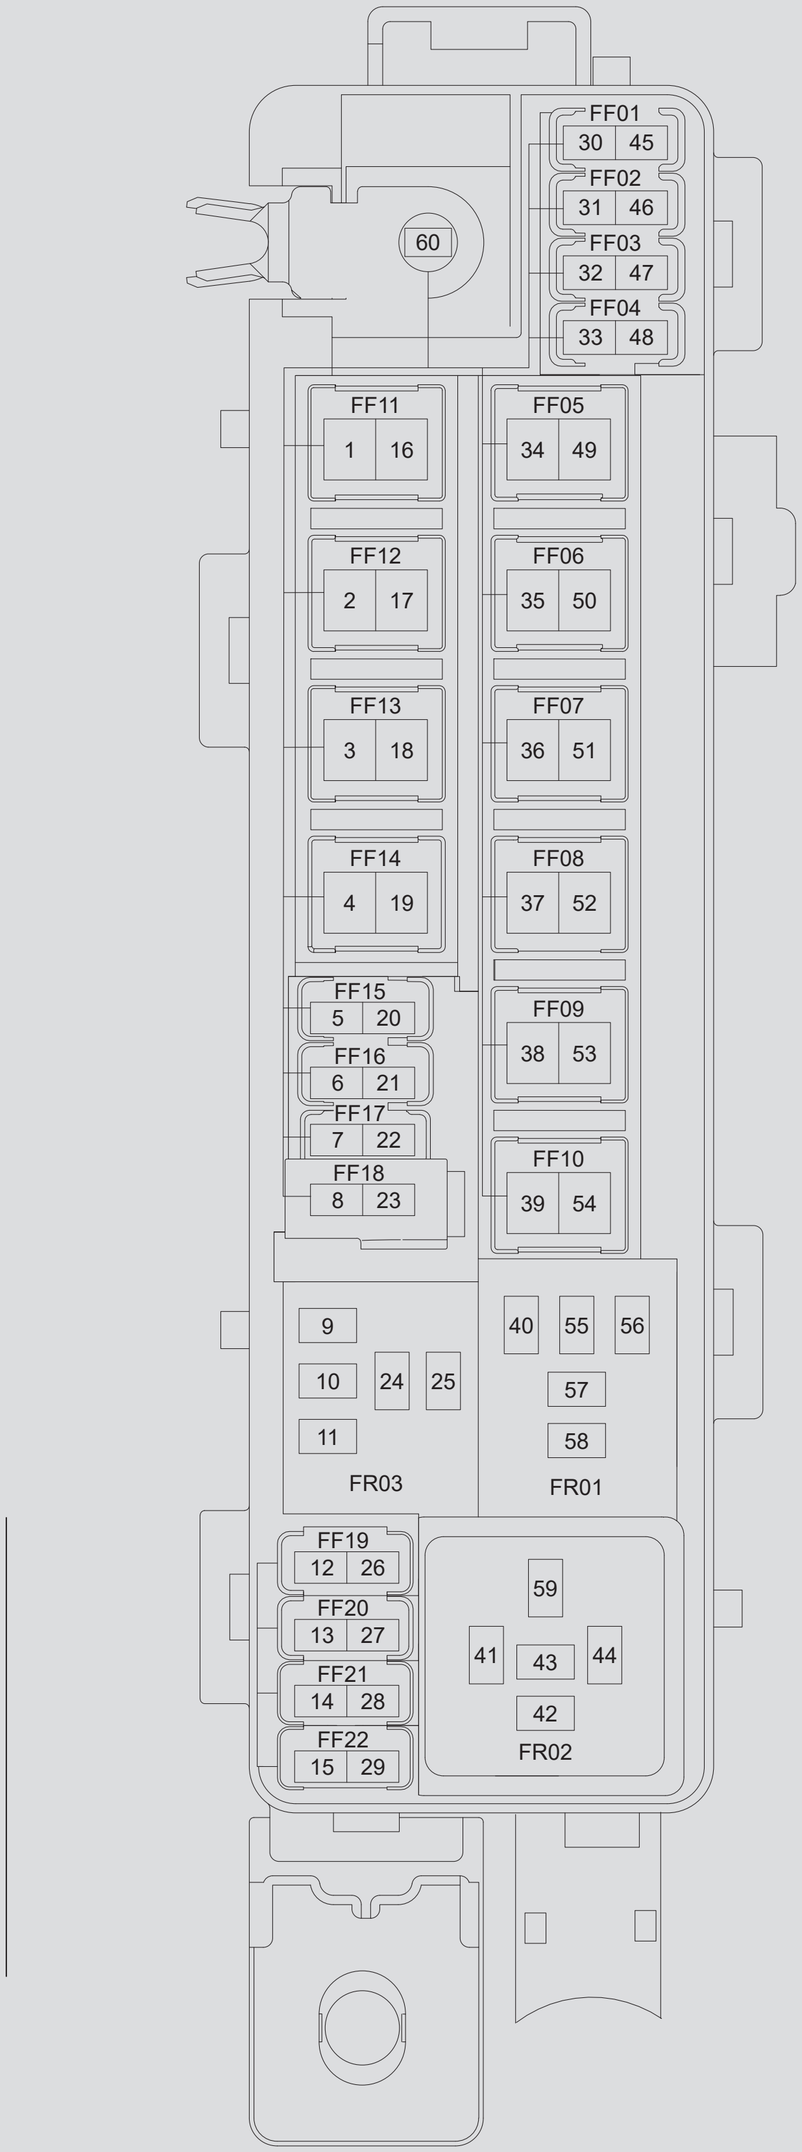


AF rear battery distribution box AF 后蓄电池配电盒		
Number 编号	Name 名称	Ampere 安
AF01	Rear transfer distribution box 后中转配电盒	200A

Power supply and ground information
电源及接地信息

Rear battery distribution box power supply layout
后蓄电池配电盒电源分布

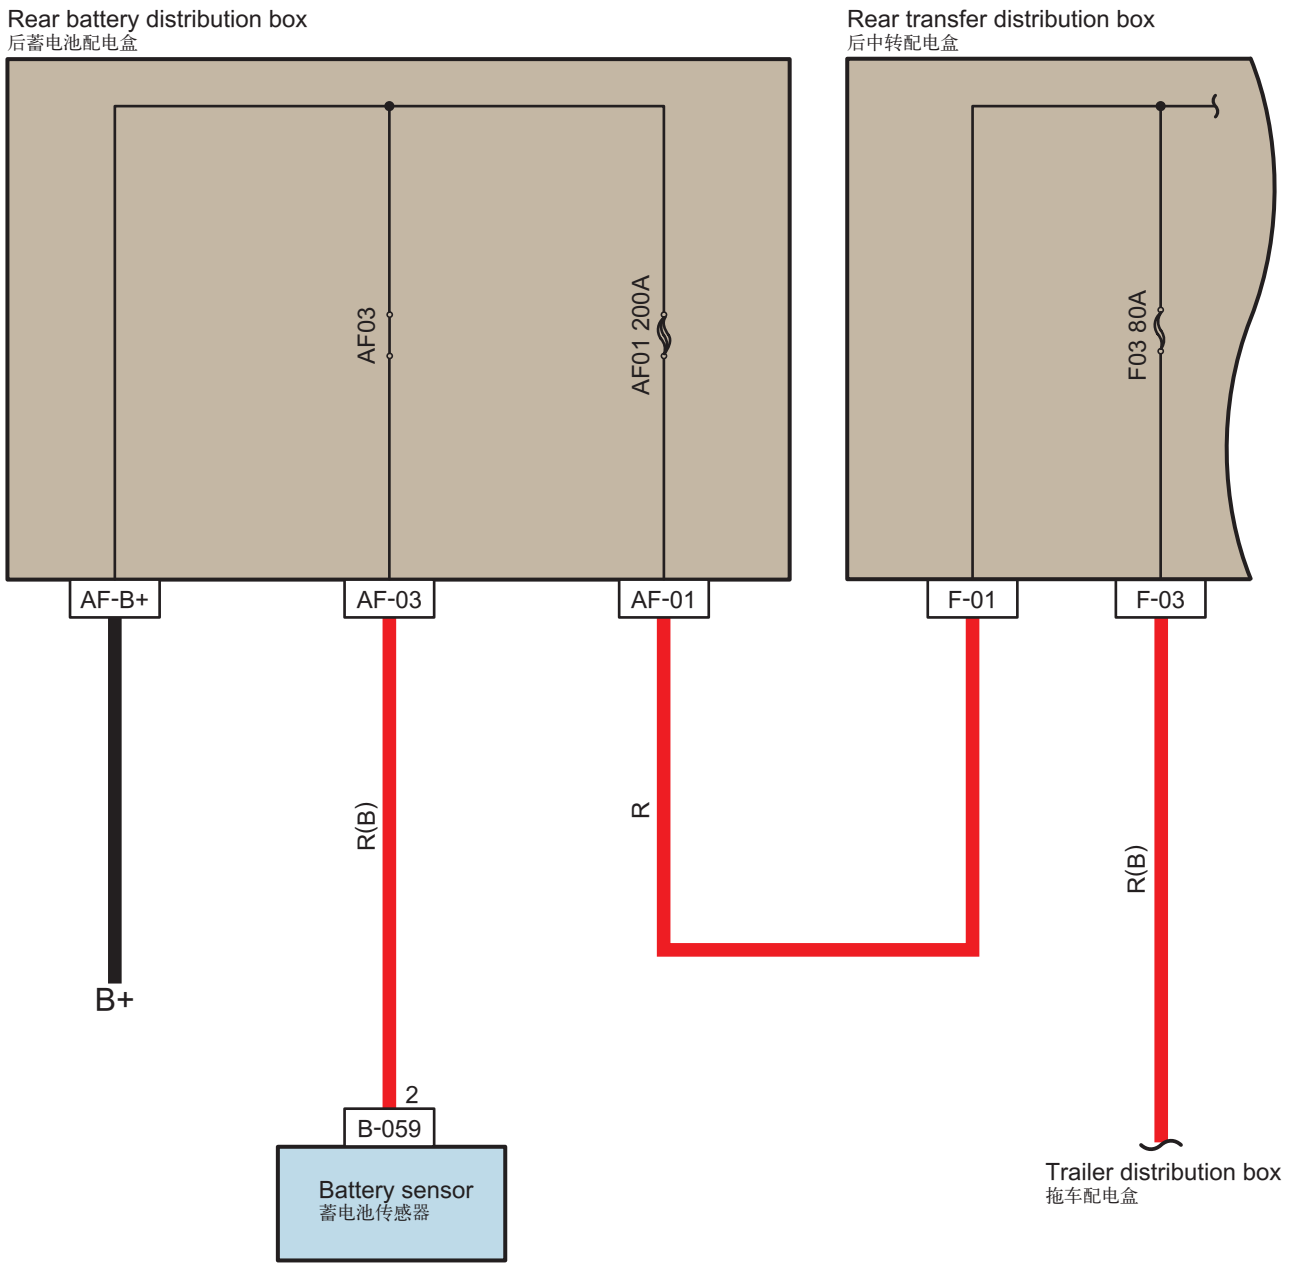
FF Trailer distribution box
FF 拖车配电盒

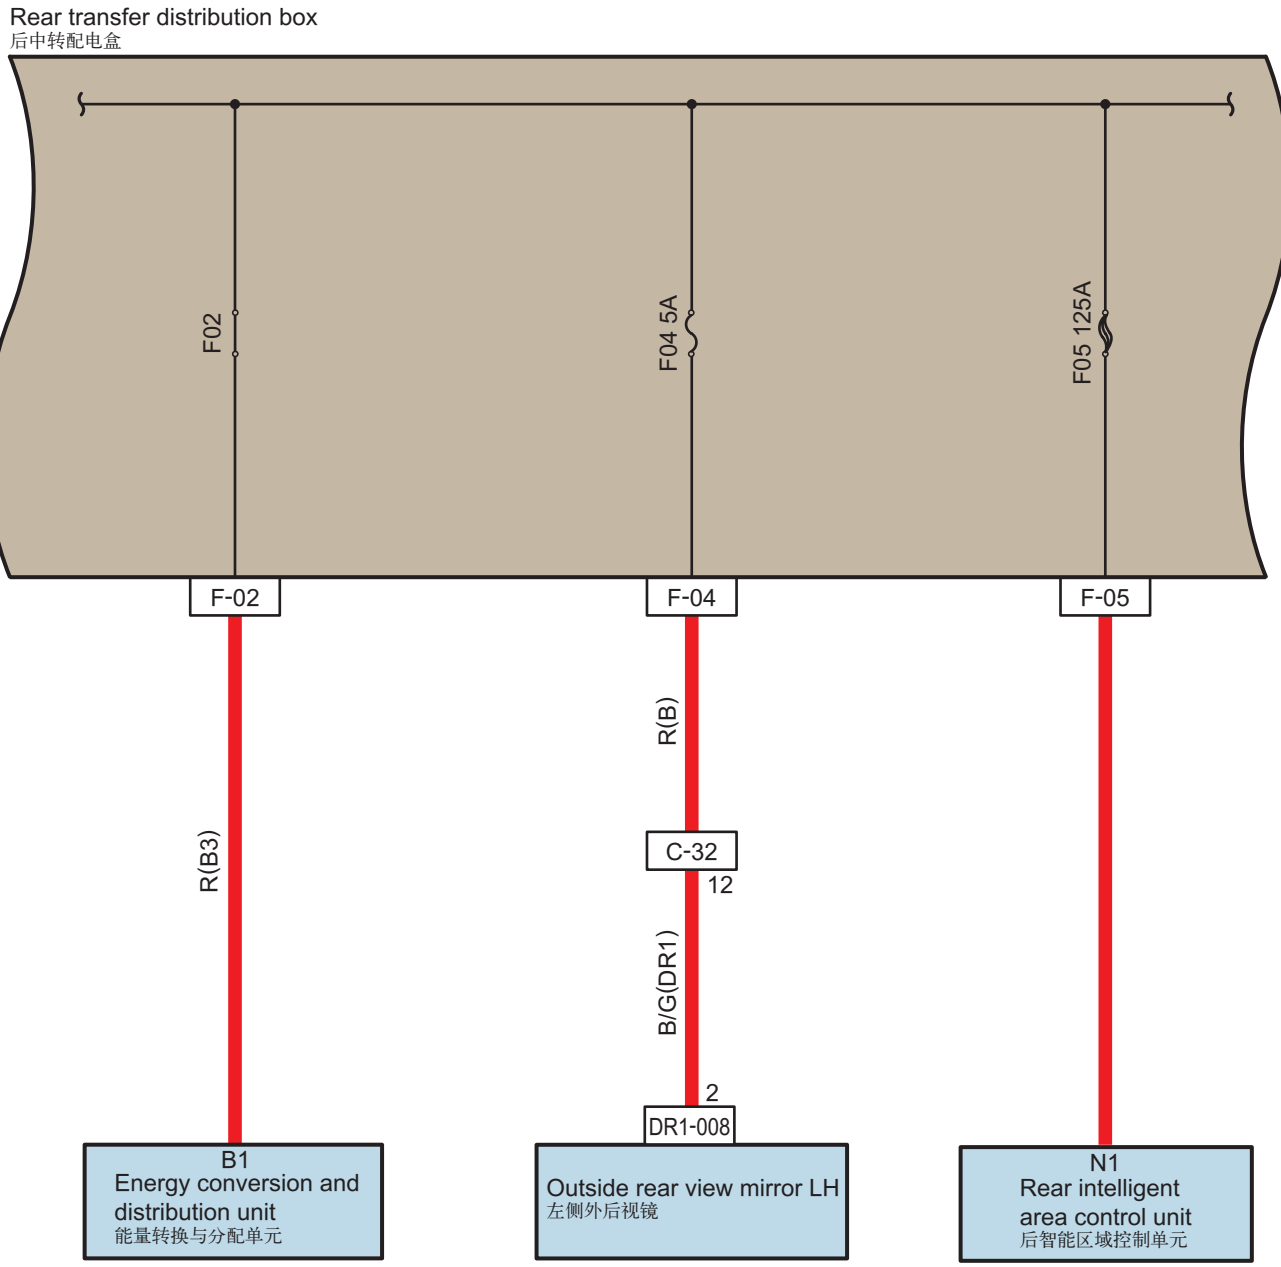


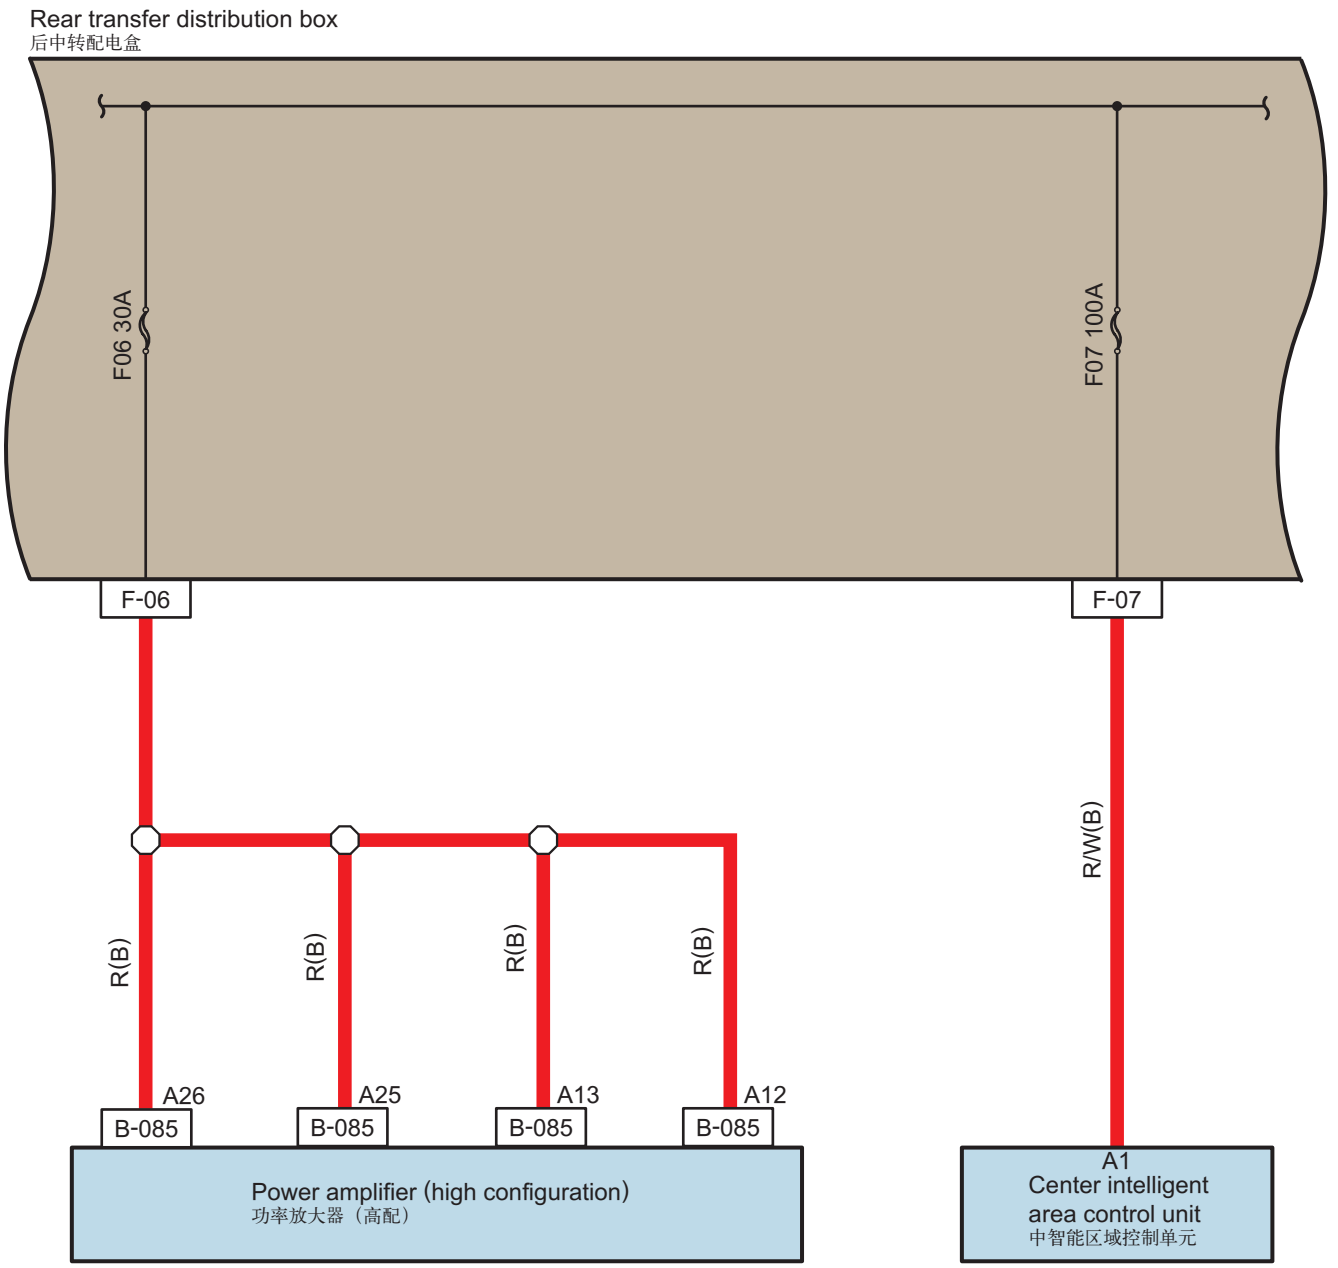
FF trailer distribution box FF 拖车配电盒		
Number 编号	Name 名称	Ampere 安
FF01	Reserve 预留	—
FF02	Light power supply input 2 灯具电源输入2	20A
FF03	Reserve 预留	—
FF04	Trailer B+ 拖车B+	30A
FF05	Reserve 预留	—
FF06	Reserve 预留	—
FF07	Reserve 预留	—
FF08	Reserve 预留	—
FF09	Reserve 预留	—
FF10	Reserve 预留	—
FF11	Reserve 预留	—
FF12	Reserve 预留	—
FF13	Reserve 预留	—
FF14	Reserve 预留	—
FF15	Light power supply input 2 灯具电源输入2	20A
FF16	Trailer controller B+ 拖车控制器B+	5A
FF17	Trailer IG 拖车IG	30A
FF18	Reserve 预留	—
FF19	Reserve 预留	—
FF20	Reserve 预留	—
FF21	Reserve 预留	—
FF22	Reserve 预留	—
FR01	Trailer IG relay 拖车IG继电器	—
FR02	Reserve 预留	—
FR03	Reserve 预留	—

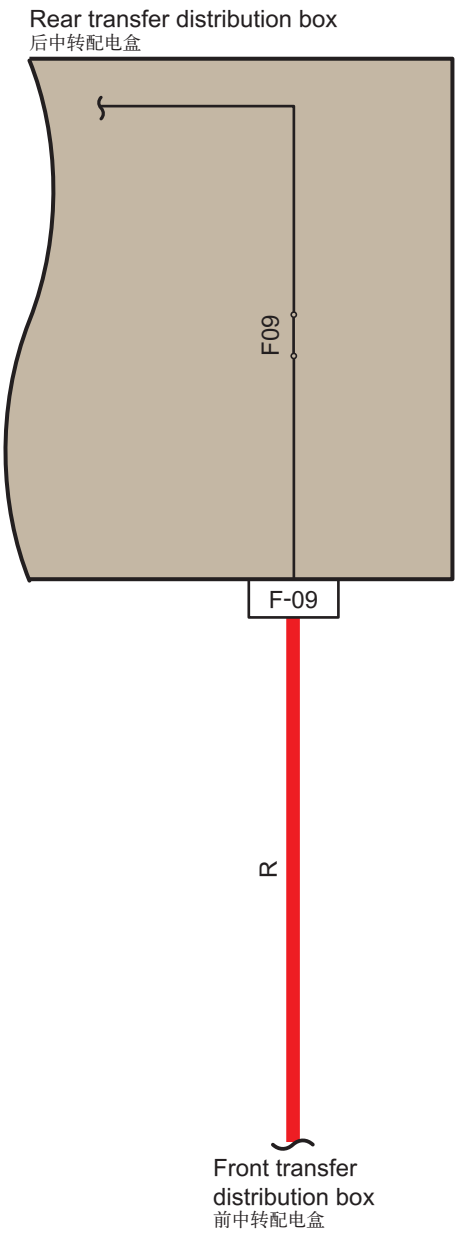
Power supply and ground information
电源及接地信息

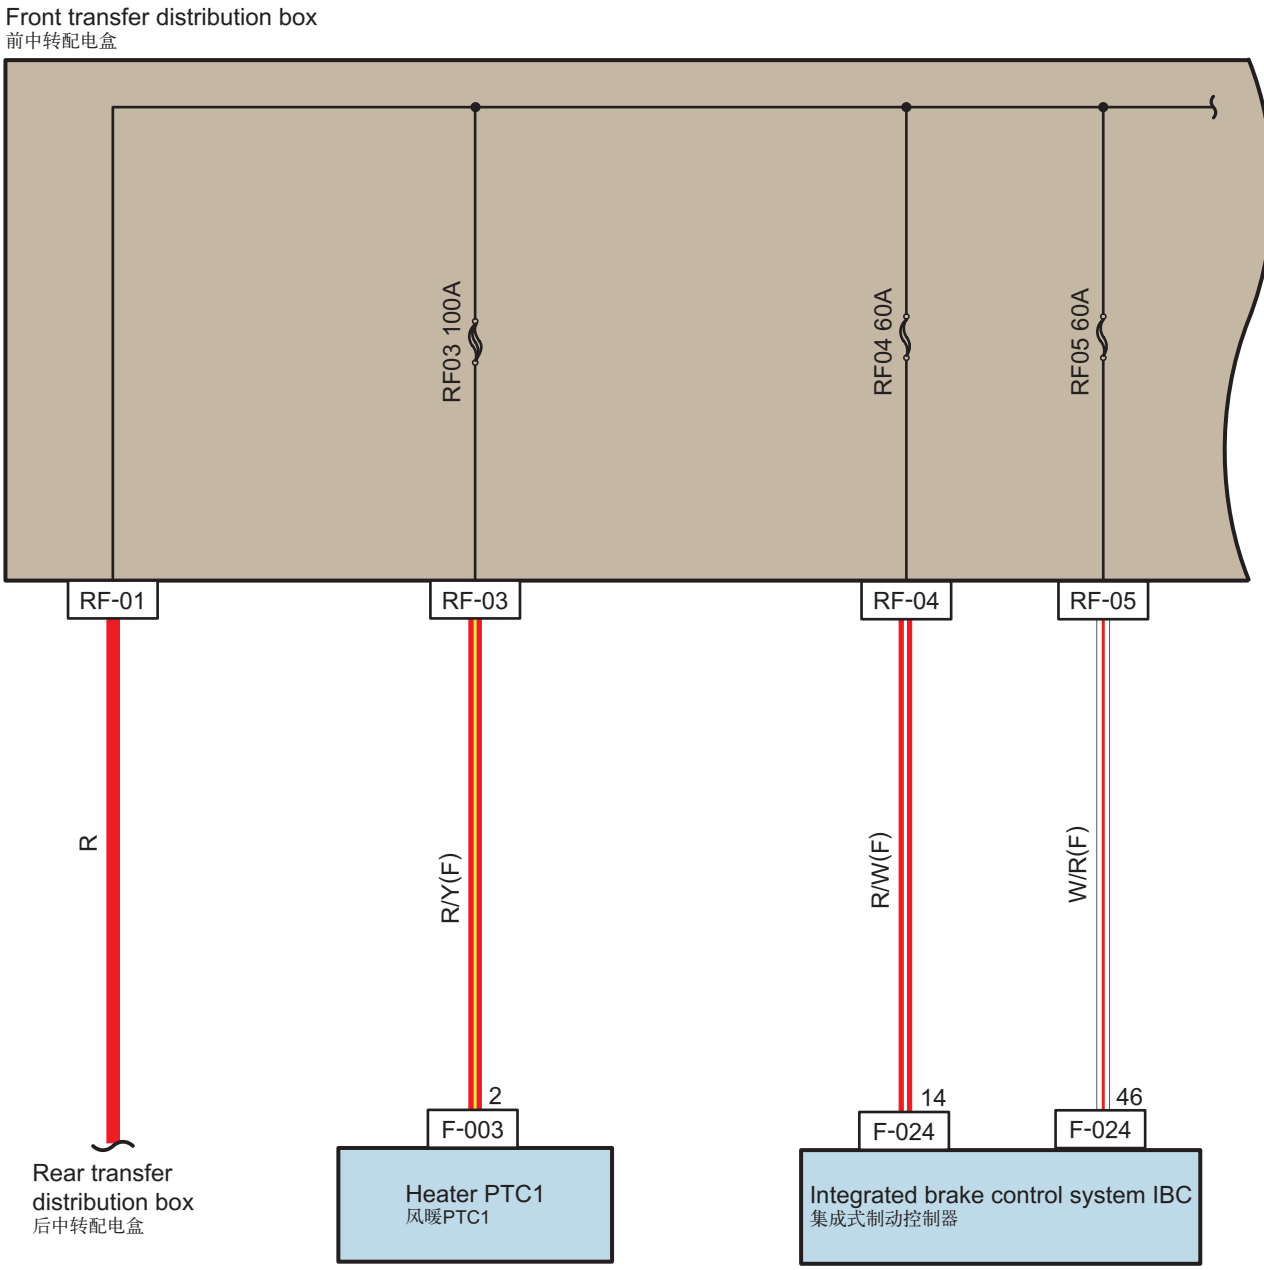
Trailer distribution box power supply layout
拖车配电盒电源分布

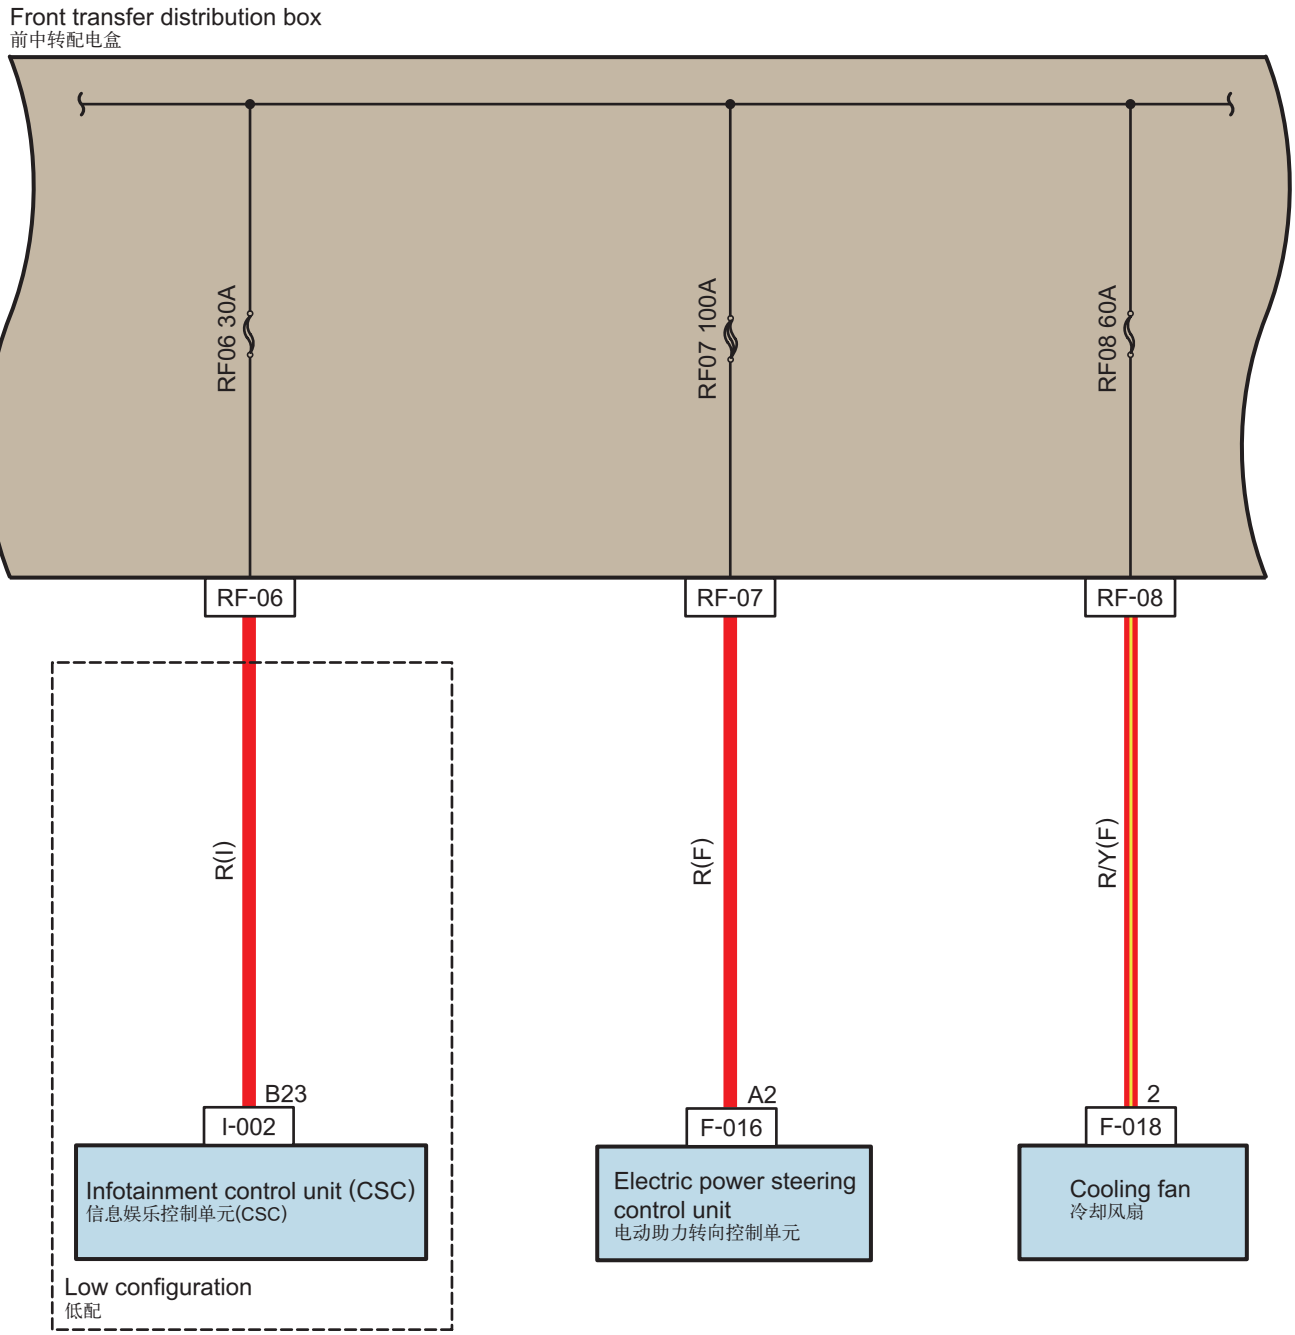

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
AF03
AF01 200A
F03 80A
AF-B+
AF-03
AF-01
F-01
F-03
R(B)
R
R(B)
B+
2
B-059
Battery sensor
蓄电池传感器
Trailer distribution box
拖车配电盒

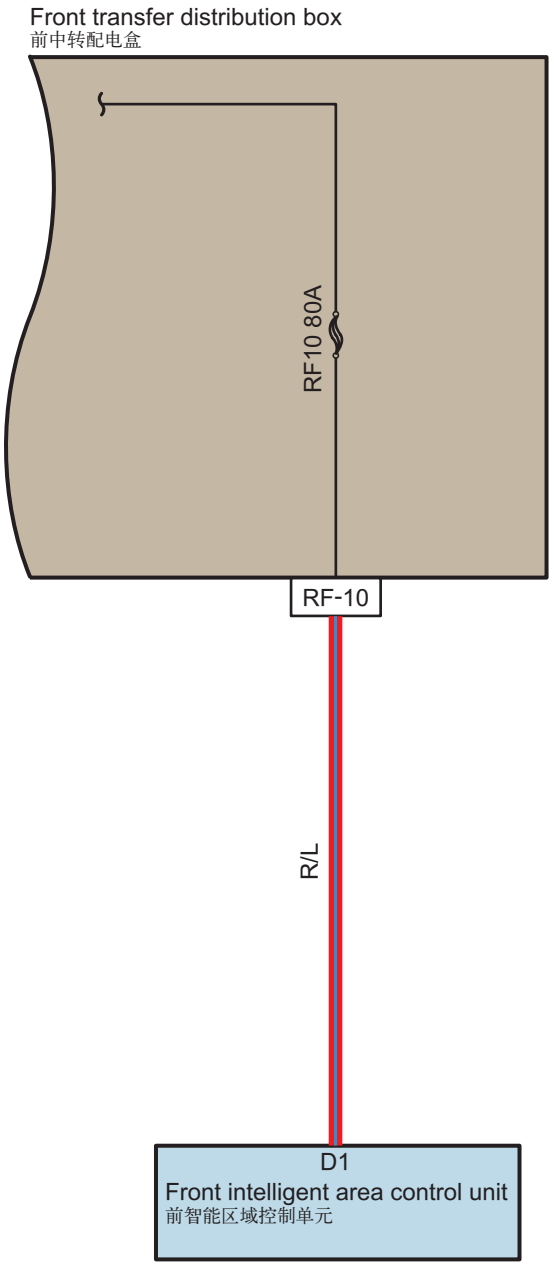

Rear transfer distribution box
后中转配电盒
F02
F04 5A
F05 125A
F-02
F-04
F-05
R(B3)
R(B)
C-32
12
B/G(DR1)
2
DR1-008
B1
Energy conversion and distribution unit
能量转换与分配单元
Outside rear view mirror LH
左侧外后视镜
N1
Rear intelligent area control unit
后智能区域控制单元

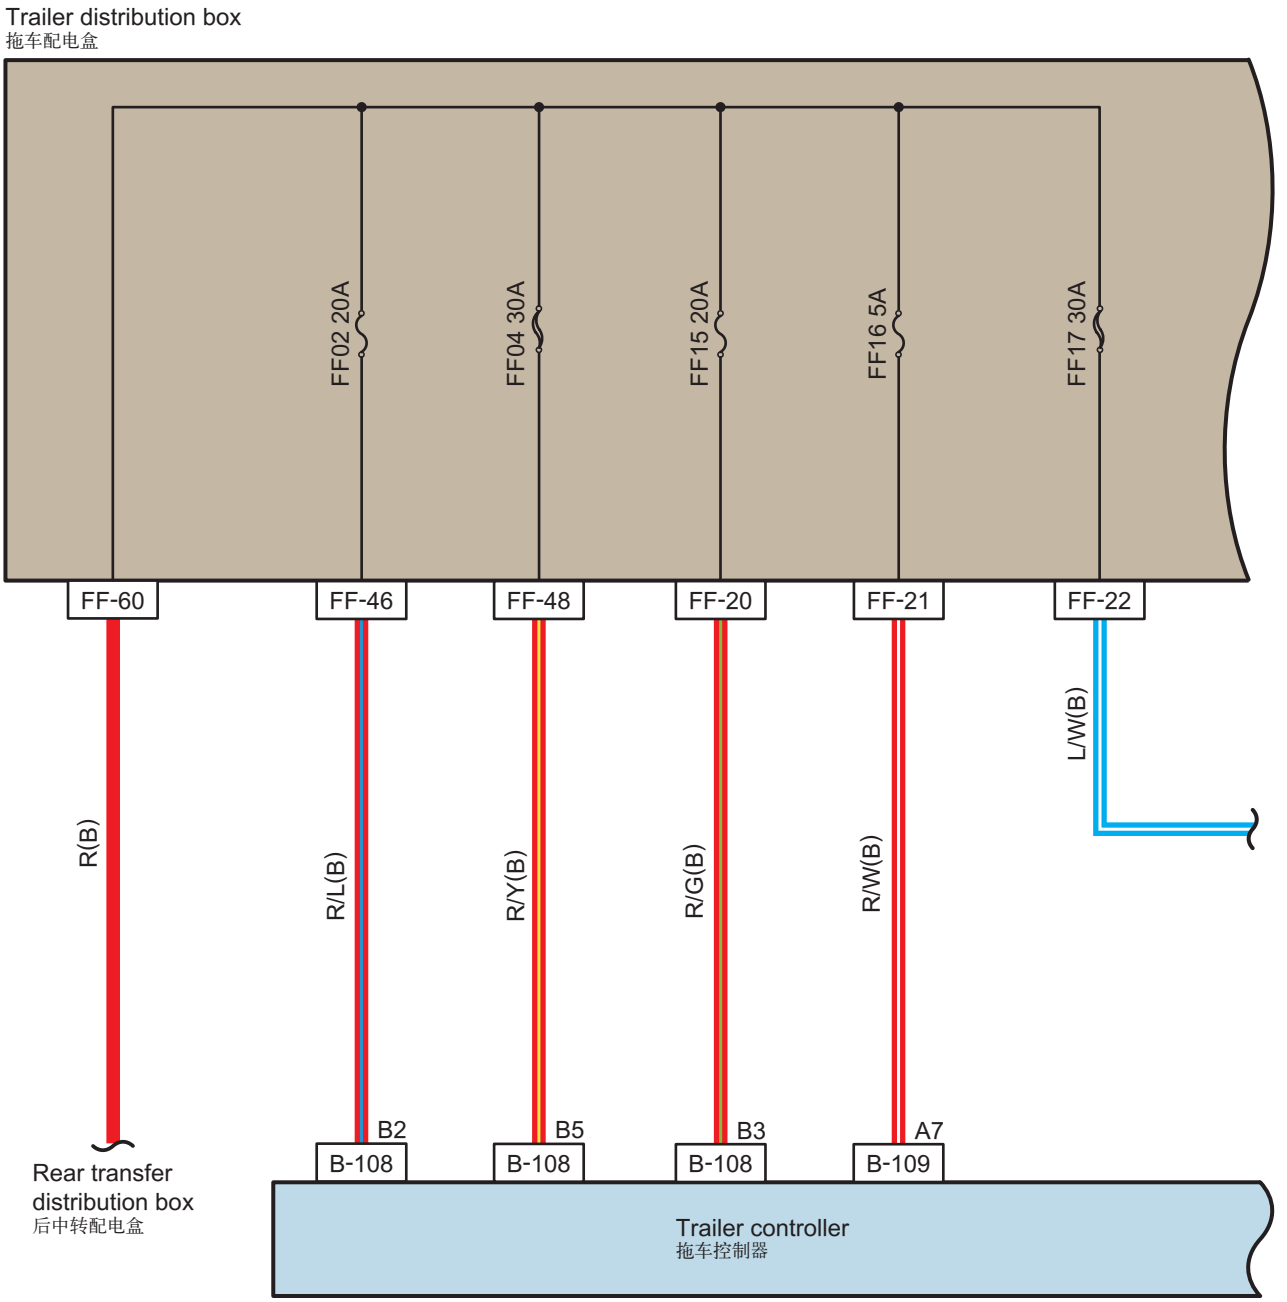

Rear transfer distribution box
后中转配电盒
F06 30A
F07 100A
F-06
F-07
R(B)
R(B)
R(B)
R(B)
R/W(B)
A26
A25
A13
A12
B-085
B-085
B-085
B-085
Power amplifier (high configuration)
功率放大器（高配）
A1
Center intelligent area control unit
中智能区域控制单元

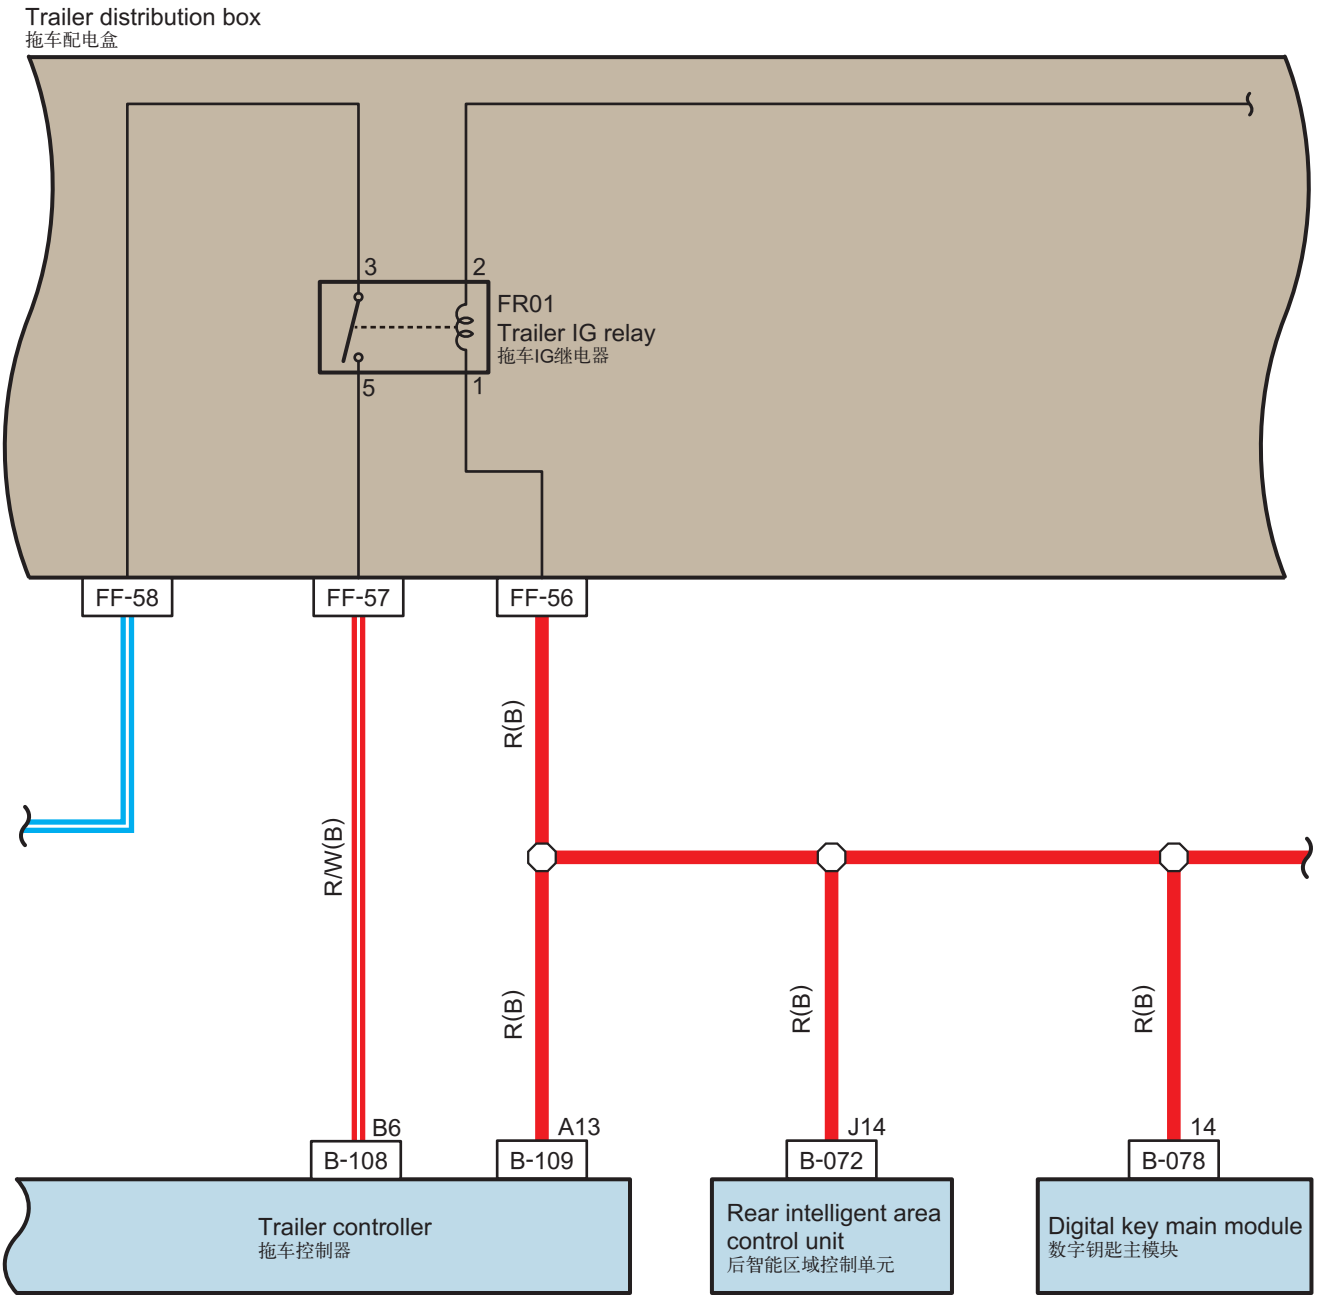

Rear transfer distribution box
后中转配电盒
F09
F-09
R
Front transfer
distribution box
前中转配电盒

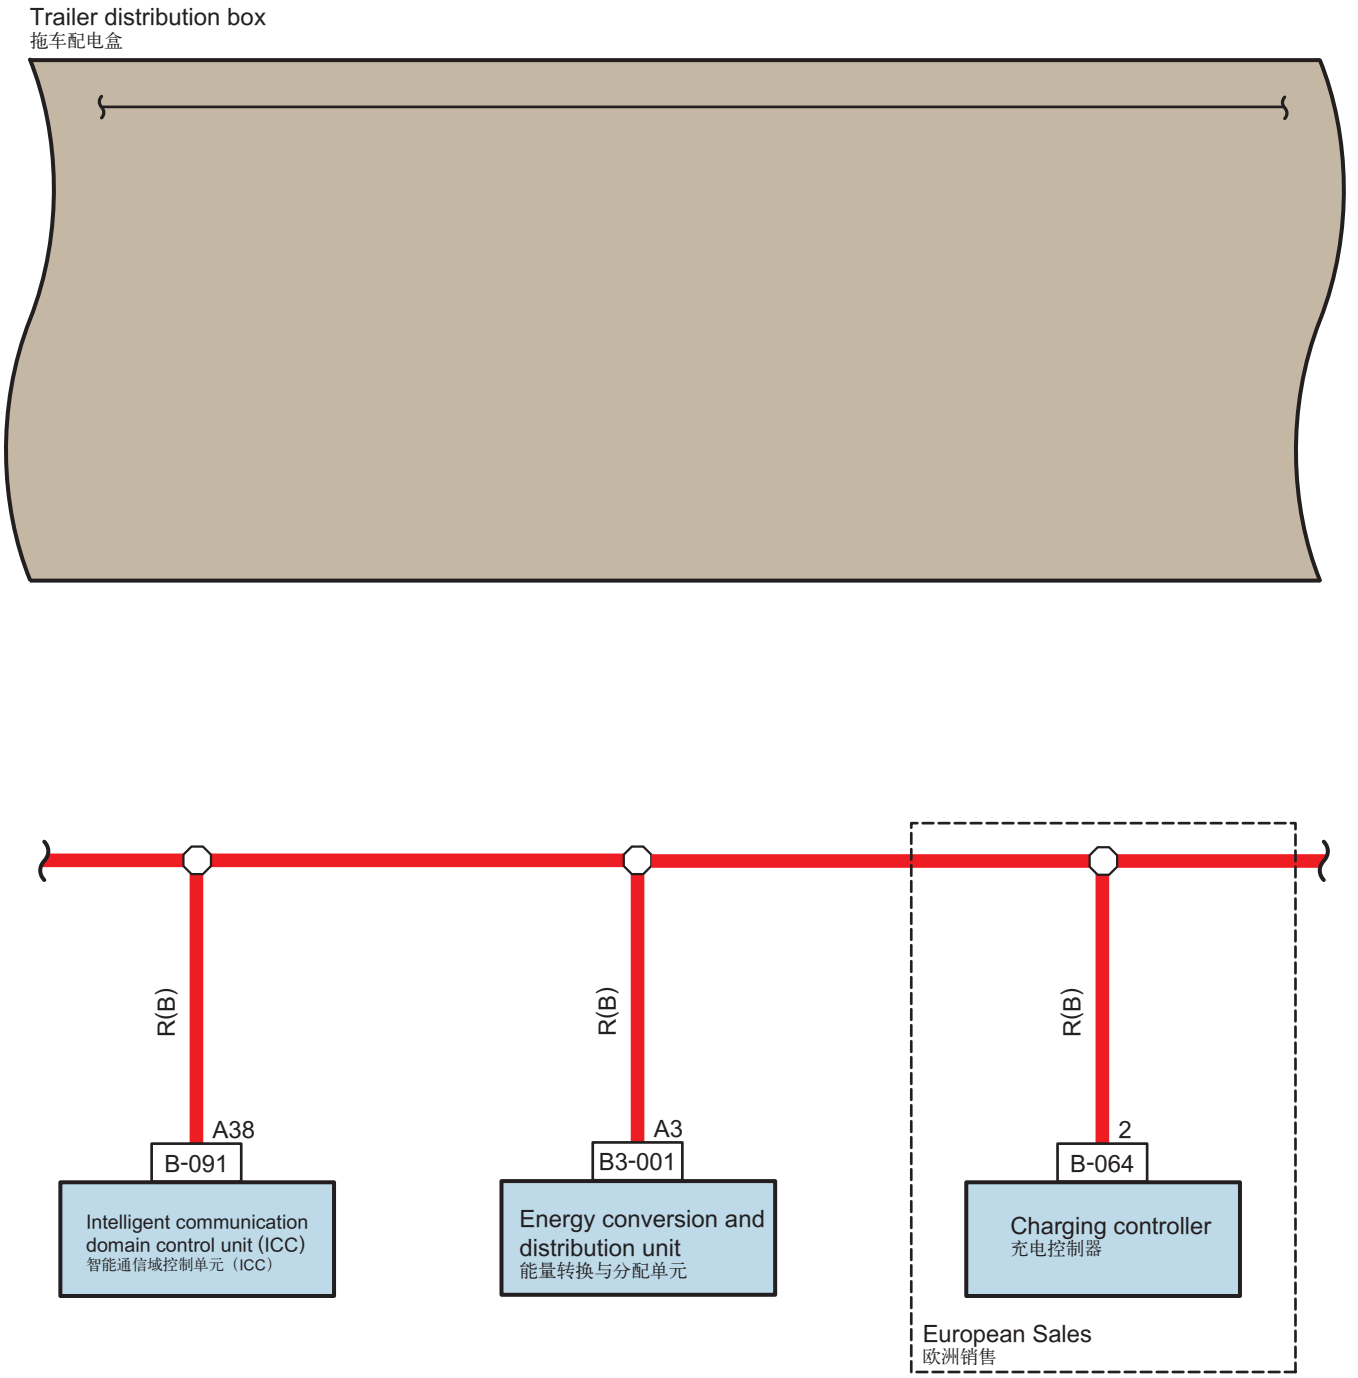

Front transfer distribution box
前中转配电盒
RF03 100A
RF04 60A
RF05 60A
RF-01
RF-03
RF-04
RF-05
R
R/Y(F)
R/W(F)
W/R(F)
2
14
46
F-003
F-024
F-024
Rear transfer distribution box
后中转配电盒
Heater PTC1
风暖PTC1
Integrated brake control system IBC
集成式制动控制器

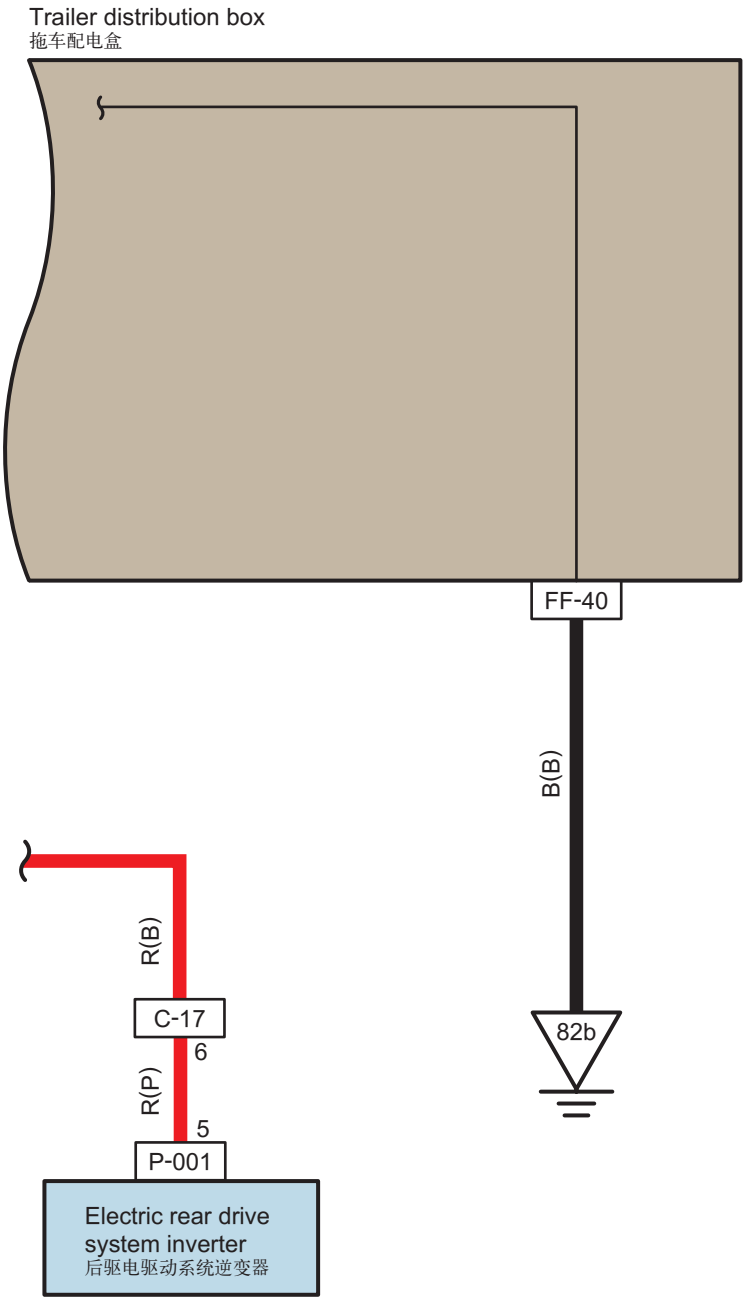

Front transfer distribution box
前中转配电盒
RF06 30A
RF07 100A
RF08 60A
RF-06
RF-07
RF-08
R(I)
R(F)
R/Y(F)
B23
I-002
A2
F-016
2
F-018
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
Electric power steering control unit
电动助力转向控制单元
Cooling fan
冷却风扇
Low configuration
低配

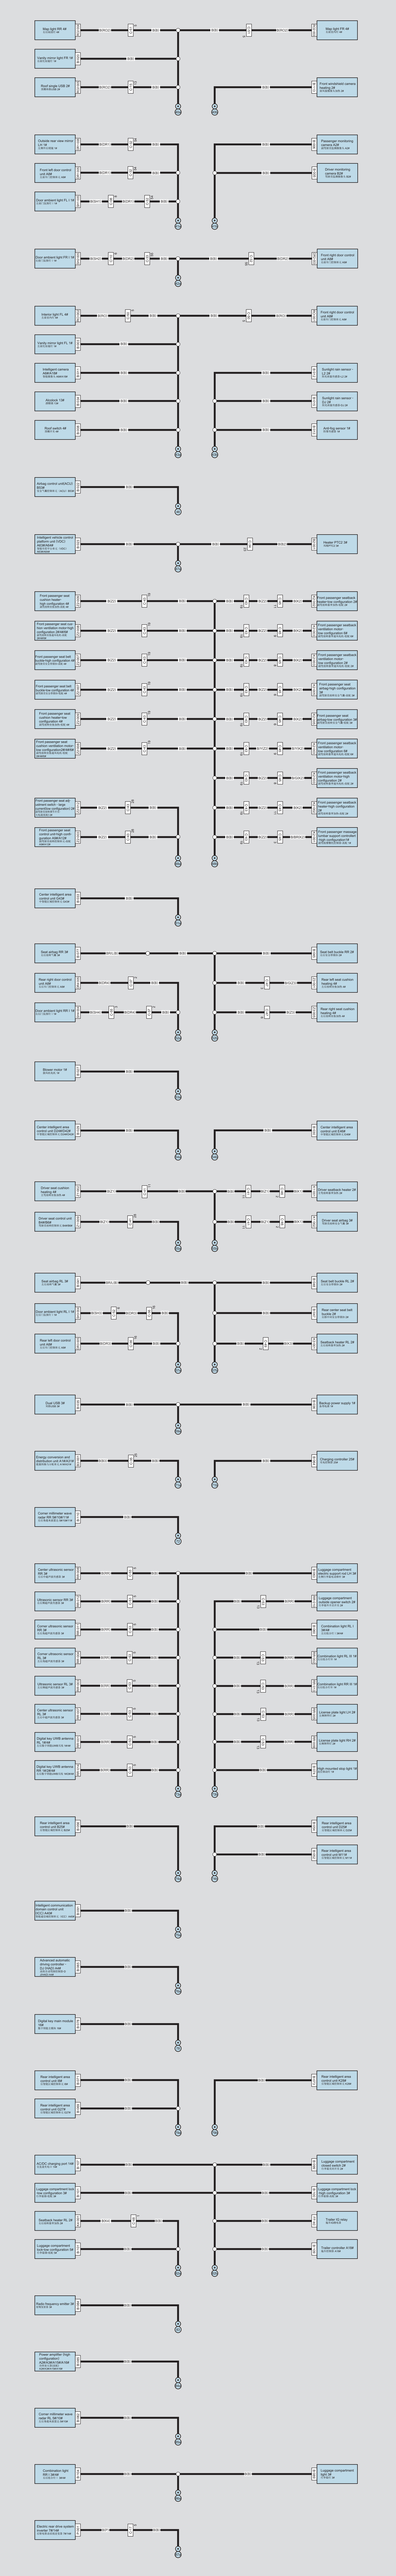

Front transfer distribution box
前中转配电盒
RF10 80A
RF-10
R/L
D1
Front intelligent area control unit
前智能区域控制单元

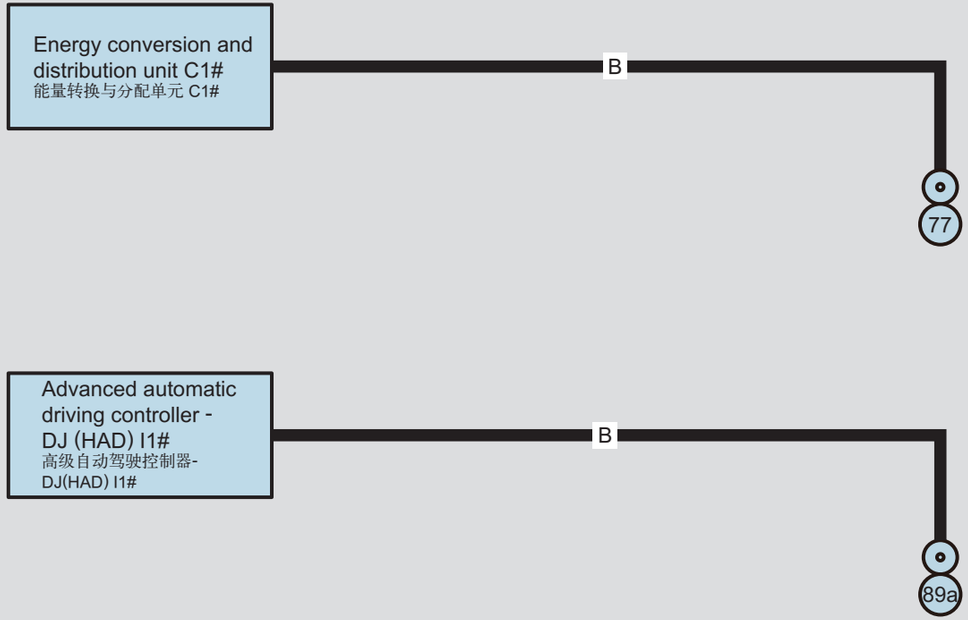

Trailer distribution box
拖车配电盒
FF02 20A
FF04 30A
FF15 20A
FF16 5A
FF17 30A
FF-60
FF-46
FF-48
FF-20
FF-21
FF-22
L/W(B)
R(B)
R/L(B)
R/Y(B)
R/G(B)
R/W(B)
B2
B5
B3
A7
B-108
B-108
B-108
B-109
Rear transfer distribution box
后中转配电盒
Trailer controller
拖车控制器

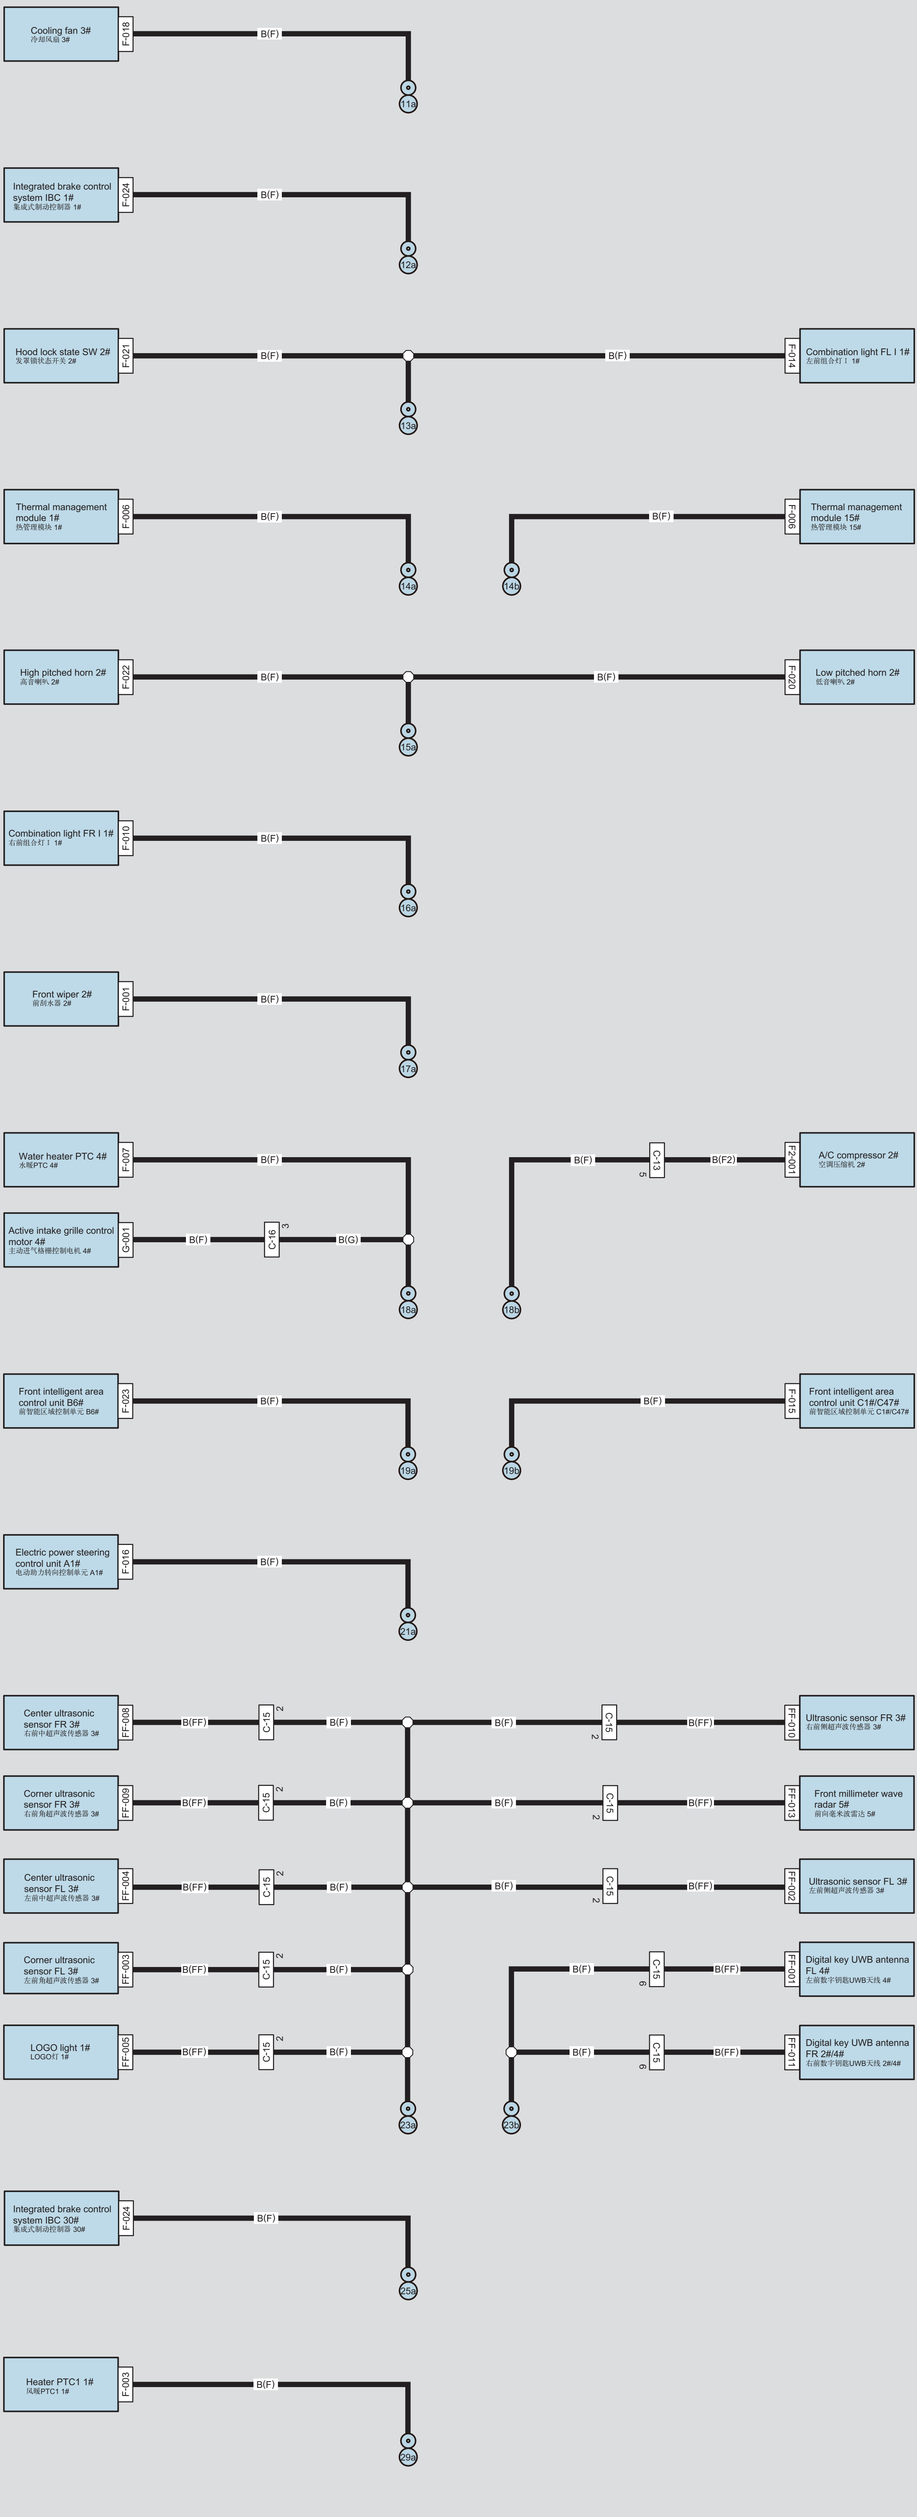

Trailer distribution box
拖车配电盒
3
2
FR01
Trailer IG relay
拖车IG继电器
5
1
FF-58
FF-57
FF-56
R(B)
R/W(B)
R(B)
R(B)
R(B)
B6
A13
J14
14
B-108
B-109
B-072
B-078
Trailer controller
拖车控制器
Rear intelligent area control unit
后智能区域控制单元
Digital key main module
数字钥匙主模块

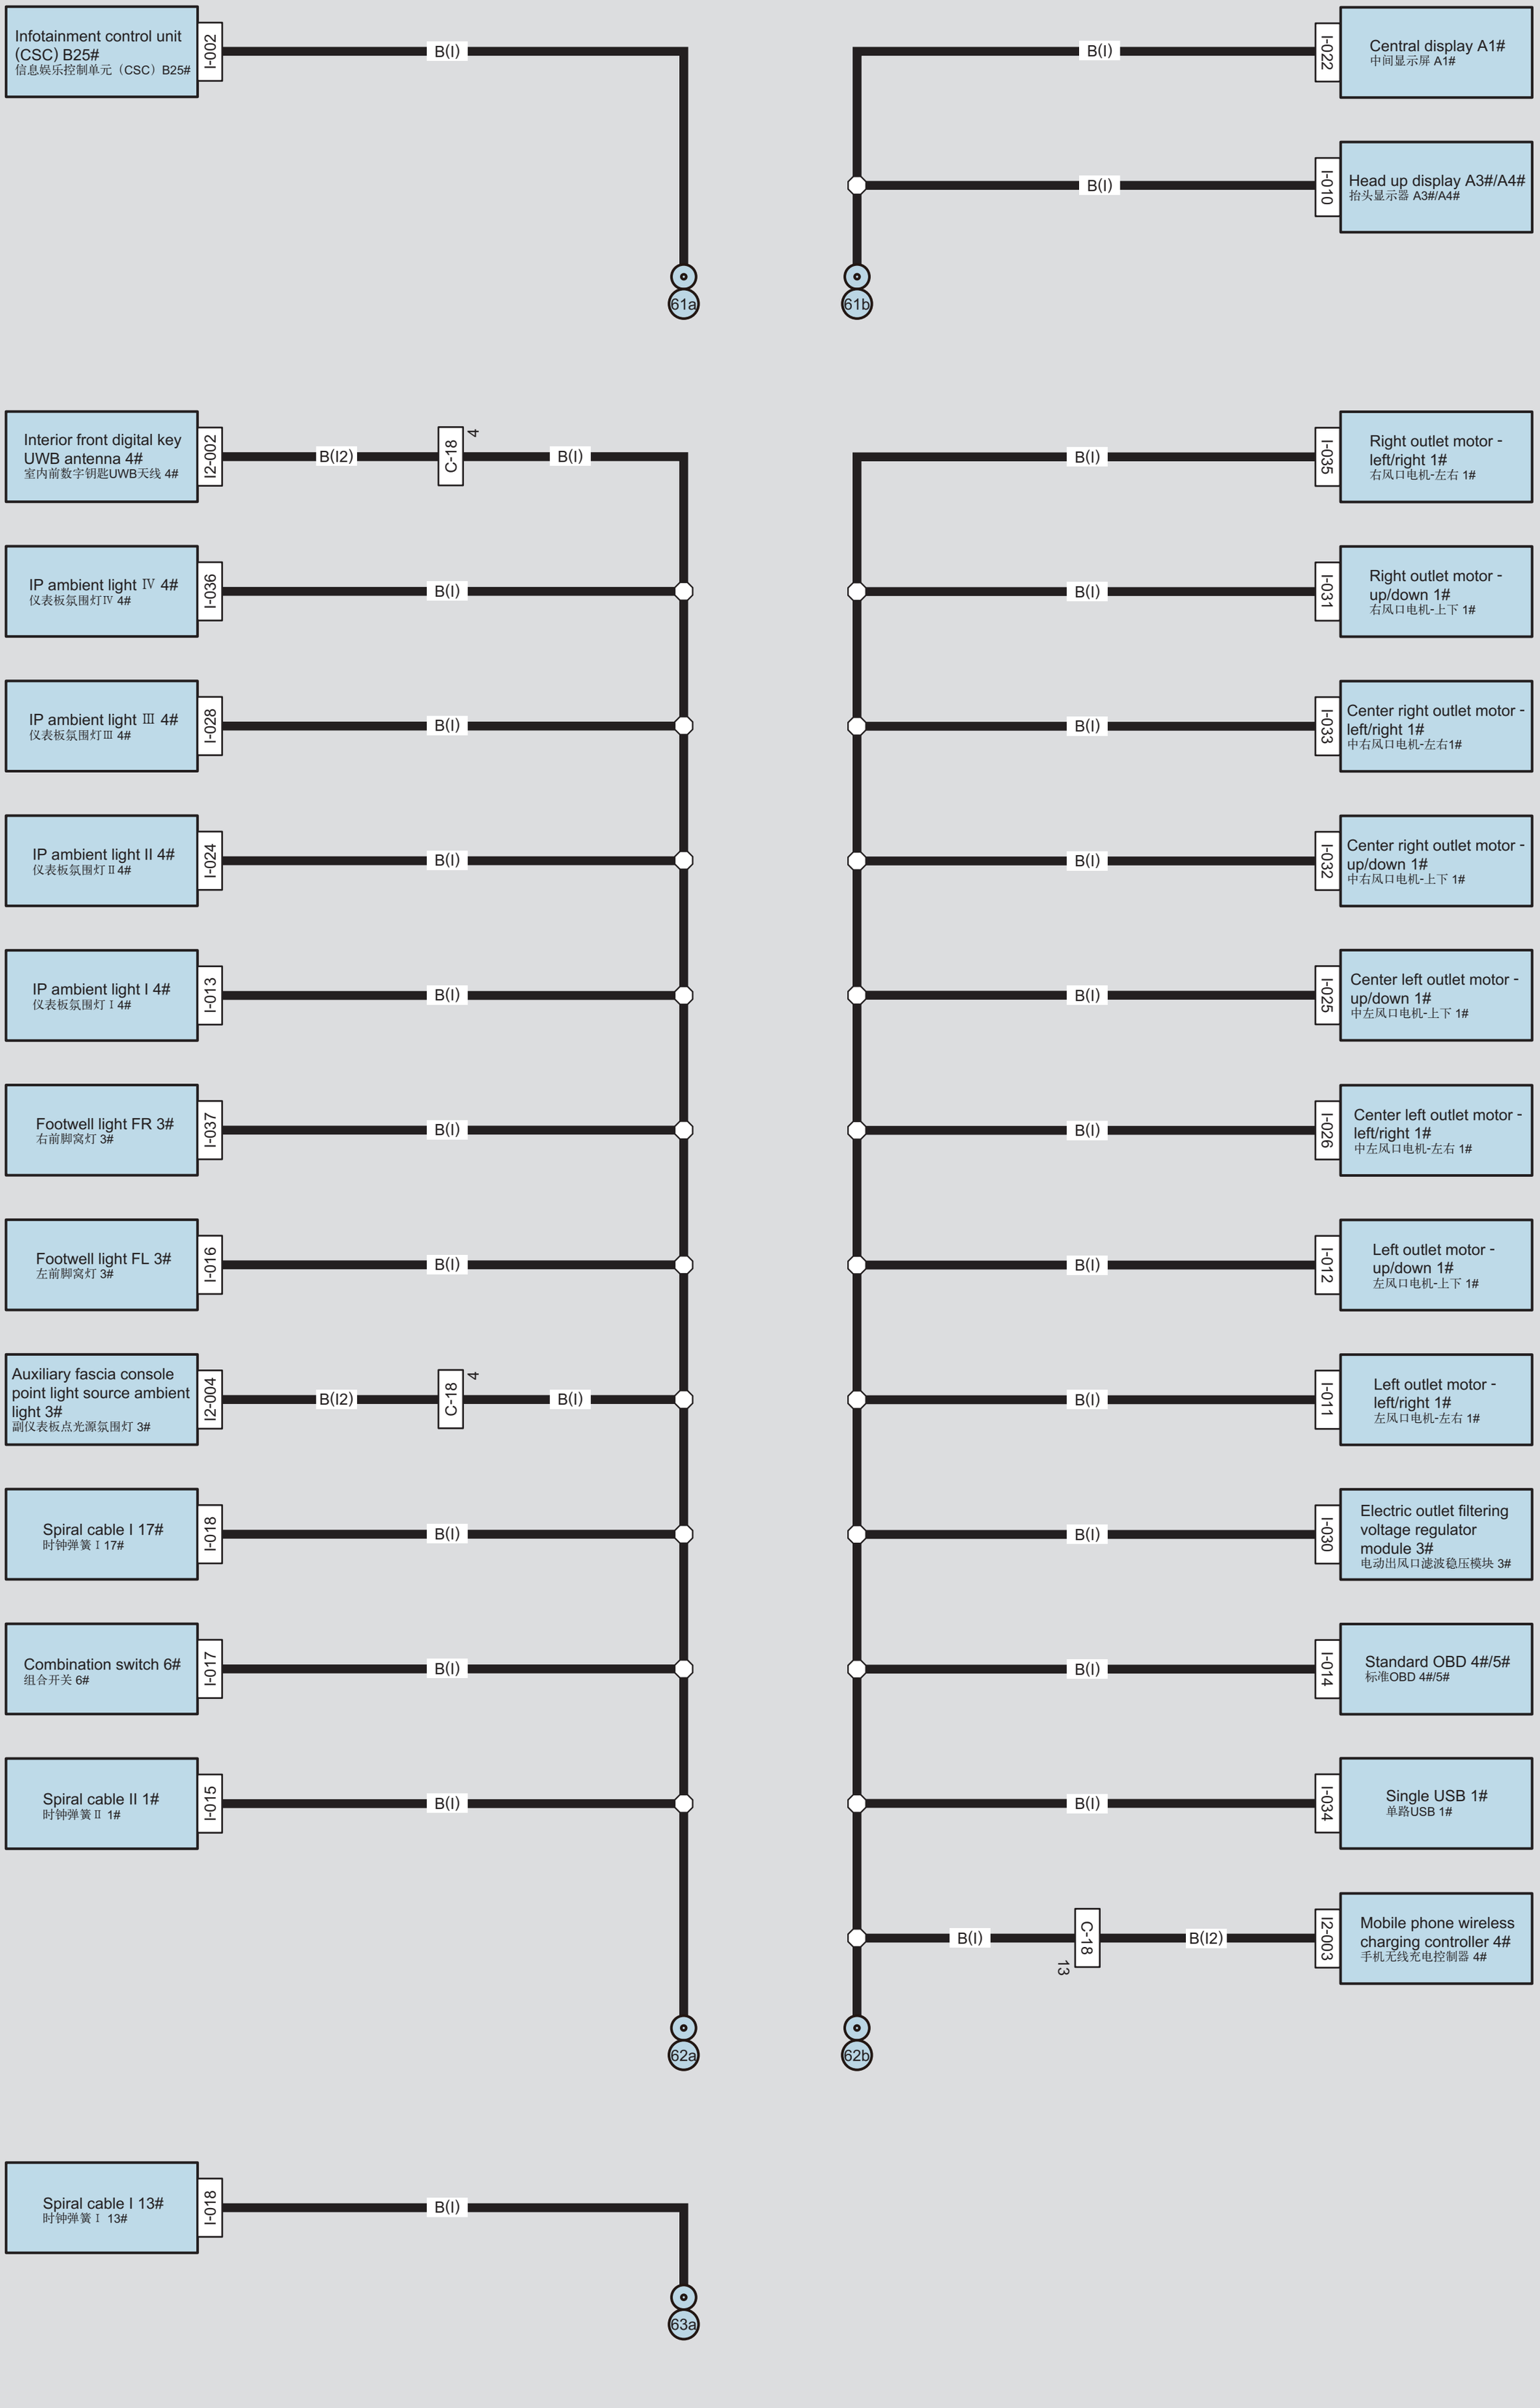

Trailer distribution box
拖车配电盒
R(B)
A38
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元（ICC）
R(B)
A3
B3-001
Energy conversion and distribution unit
能量转换与分配单元
R(B)
2
B-064
Charging controller
充电控制器
European Sales
欧洲销售

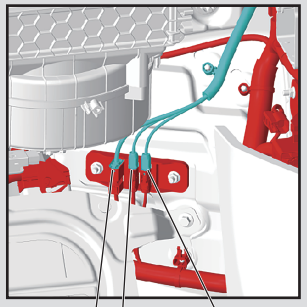

Trailer distribution box
拖车配电盒
FF-40
B(B)
82b
R(B)
C-17
6
R(P)
5
P-001
Electric rear drive system inverter
后驱电驱动系统逆变器


Rear light FR 4A
1J0 945 096 A
Trailer reverse light FR 1W
1J0 945 105 A
Roof antenna USB 3A
5Q0 035 530 AF
Front windshield camera heating 2A
5J0 980 605 C 019 JA
Outside rear view mirror heating 2A
5J0 858 532 A
Passenger monitoring control unit 2A
5F0 953 549 AA
Front left door control unit 2A
5J0 959 793 A
Driver monitoring control unit 2A
5F0 953 549 A
Door ambient light FL 1.5W
5J0 947 411
Door ambient light FR 1.5W
5J0 947 412
Front right door control unit 2A
5J0 959 794 A
Interior light RL 4A
5J0 947 135 B
Front right door control unit 2A
5J0 959 794 A
Trailer reverse light FL 1W
5J0 945 105 A
Intelligent camera control module 2A
5J0 907 441 AA
Sunlight rain sensor 0.1A
5J0 907 544 A 01J JA
Absolute 13W
2W0 E 13W
Sunlight rain sensor 0.1A
5J0 907 544 A 01J JA
Roof switch 4A
1M0 919
Anti-fog sensor 1W
5J0 035
Airbag control unit(ACU) 4.5W
5J0 909 605 C 1KU/ 4KW
Intelligent vehicle control platform unit (VCU) 4.5W
5J0 915 515 C 1MU/ 4.5W
Heater PTC2 3A
1K0 963 235 F
Front passenger seat control heater 6A
5J0 963 560 A
Front passenger seat high configuration 4A
5J0 963 402 A 4PA JA
Front passenger seatback high configuration 4A
5J0 963 402 A 4PA JA
Front passenger seat rear fore ventilation high configuration deleted 4.5W
5J0 963 560 A 4PA JA
Front passenger seatback ventilation motor high configuration 4A
5J0 963 402 A 4PA JA
Front passenger seat lumbar high configuration 4A
5J0 963 560 A 4PA JA
Front passenger seatback ventilation motor high configuration 4A
5J0 963 402 A 4PA JA
Front passenger seat airbag high configuration 4A
5J0 963 560 A 4PA JA
Front passenger seatback airbag high configuration 4A
5J0 963 402 A 4PA JA
Front passenger seat cushion heater/fan 6A
5J0 963 560 A 4PA JA
Front passenger seat cushion ventilation motor high configuration 4A
5J0 963 560 A 4PA JA
Front passenger seatback heater high configuration 4A
5J0 963 402 A 4PA JA
Front passenger seat rear cushion ventilation motor high configuration 4A
5J0 963 560 A 4PA JA
Front passenger seatback massage motor high configuration 4A
5J0 963 402 A 4PA JA
Front passenger seat adjustment motor high configuration 4A
5J0 963 560 A 4PA JA
Front passenger seatback adjustment motor high configuration 4A
5J0 963 402 A 4PA JA
Front passenger seat position control motor high configuration 4A
5J0 963 560 A 4PA JA
Front passenger seatback position control motor high configuration 4A
5J0 963 402 A 4PA JA
Center intelligent area control unit (CAM intelligent) 2.5AW
Seat entry RR 3A
5J0 963 402 B
Seat entry RR 3A
5J0 963 402 B
Rear light door control unit ASR
5J0 959 795 A
Rear lift seat control heating 3A
5J0 963 560 A
Door ambient light RR 1.5W
5J0 947 414
Rear right seat control unit 2A
5J0 959 795 A
Blower motor 1A
5J0 820 021 B
Center intelligent area control unit (CAM intelligent) 2.5AW
5J0 907 441 AA
Center intelligent area control unit (CAM intelligent) 2.5AW
Driver seat cushion heating 3A
5J0 963 560 A
Driver seat control unit heating 3A
5J0 963 560 A 4PA JA
Front cushion heater 3A
5J0 963 560 A
Driver seat airbag 3A
5J0 963 560 A
Seat airbag RL 3A
5J0 963 560 A
Seat belt buckle RL 2A
5J0 963 560 A
Door ambient light RL 1.5W
5J0 947 411
Rear center seat belt buckle 2A
5J0 963 560 A
Rear lift door control unit ASR
5J0 959 795 A
Headrest heater RL 3A
5J0 963 560 A
Dual USB 3A
1M0 969
Backup power supply 1A
5J0 907 44
Energy conversion and charging controller 2.5W
5J0 915 105 A 4UMU/2
Charging controller 2.5W
5J0 915 105 A
Center millimeter wave radar RL 3A
5J0 907 566 A 0EM JA
Center millimeter wave radar RL 3A
5J0 907 566 A 0EM JA
Center ultrasonic sensor 0.1A
5J0 907 475 A 041 JA
Luggage compartment ultrasonic sensor 0.1A
5J0 907 475 A 041 JA
Ultrasonic sensor RR 3A
5J0 907 475 A 041 JA
Luggage compartment ultrasonic sensor 0.1A
5J0 907 475 A 041 JA
Center ultrasonic sensor 0.1A
5J0 907 475 A 041 JA
Combination light RL 1.5W
5J0 945 075 A
Center ultrasonic sensor 0.1A
5J0 907 475 A 041 JA
Combination light RL 1.5W
5J0 945 075 A
Ultrasonic sensor RL 3A
5J0 907 475 A 041 JA
Combination light RR 1.5W
5J0 945 076 A
Center ultrasonic sensor 0.1A
5J0 907 475 A 041 JA
License plate light LH 2A
5J0 943 021 A
Digital key UWB antenna 0.5A
5J0 035 530 AA 019 JA
License plate light RH 2A
5J0 943 022 A
Digital key UWB antenna 0.5A
5J0 035 530 AA 019 JA
Roof mounted stop light 1A
5J0 945 095 A
Rear intelligent area control unit(CAM intelligent) 2.5AW
5J0 907 441 AA
Rear intelligent area control unit(CAM intelligent) 2.5AW
5J0 907 441 AA
Rear intelligent area control unit(CAM intelligent) 2.5AW
5J0 907 441 AA
Intelligent communication control unit 4.5W
5J0 915 608 B 1KU/ 4KW
Advanced automatic driving controller 4.5W
5J0 915 608 B
Digital key main module 1A
5J0 963 550 AA
Rear intelligent area control unit(CAM intelligent) 2.5AW
5J0 907 441 AA
Rear intelligent area control unit(CAM intelligent) 2.5AW
5J0 907 441 AA
ACDC charging port 1.5A
5J0 915 105 A
Luggage compartment rear heating 3A
5J0 963 560 A
Luggage compartment rear fore configuration 4A
5J0 963 402 A
Luggage compartment rear fore configuration 4A
5J0 963 402 A
Seatback heater RL 3A
5J0 963 560 A
Trailer ECU relay
5J0 945 475
Luggage compartment rear fore configuration 4A
5J0 963 402 A
Trailer controller A 5W
5J0 945 476 AM
Radio frequency emitter 4A
5J0 915 9
Power amplifier (high configuration)
5J0 915 601 C 2UH/1UM
5J0 915 601 C 2UH/1UM
Center millimeter wave radar RL 3A
5J0 907 566 A 0EM JA
Combination light 1.5W
5J0 945 075 A
Luggage compartment light 2A
5J0 947 41
Electric rear drive system interior 3A+2A
5J0 963 560 A 4PA JA


Energy conversion and distribution unit C1#
能量转换与分配单元 C1#
B
77
Advanced automatic driving controller - DJ (HAD) I1#
高级自动驾驶控制器-DJ(HAD) I1#
B
89a


Cooling fan 3#
冷却风扇 3#
F-018
B(F)
11a
Integrated brake control system IBC 1#
集成式制动控制器 1#
F-024
B(F)
12a
Hood lock state SW 2#
发罩锁状态开关 2#
F-021
B(F)
B(F)
F-014
Combination light FL I 1#
左前组合灯 I 1#
13a
Thermal management module 1#
热管理模块 1#
F-006
B(F)
14a
B(F)
F-006
Thermal management module 15#
热管理模块 15#
14b
High pitched horn 2#
高音喇叭 2#
F-022
B(F)
B(F)
F-020
Low pitched horn 2#
低音喇叭 2#
15a
Combination light FR I 1#
右前组合灯 I 1#
F-010
B(F)
16a
Front wiper 2#
前刮水器 2#
F-001
B(F)
17a
Water heater PTC 4#
水暖PTC 4#
F-007
B(F)
Active intake grille control motor 4#
主动进气格栅控制电机 4#
G-001
B(F)
C-16
3
B(G)
18a
B(F)
C-13
5
B(F2)
F2-001
A/C compressor 2#
空调压缩机 2#
18b
Front intelligent area control unit B6#
前智能区域控制单元 B6#
F-023
B(F)
19a
B(F)
F-015
Front intelligent area control unit C1#/C47#
前智能区域控制单元 C1#/C47#
19b
Electric power steering control unit A1#
电动助力转向控制单元 A1#
F-016
B(F)
21a
Center ultrasonic sensor FR 3#
右前中超声波传感器 3#
FF-008
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-010
Ultrasonic sensor FR 3#
右前侧超声波传感器 3#
Corner ultrasonic sensor FR 3#
右前角超声波传感器 3#
FF-009
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-013
Front millimeter wave radar 5#
前向毫米波雷达 5#
Center ultrasonic sensor FL 3#
左前中超声波传感器 3#
FF-004
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-002
Ultrasonic sensor FL 3#
左前侧超声波传感器 3#
Corner ultrasonic sensor FL 3#
左前角超声波传感器 3#
FF-003
B(FF)
C-15
2
B(F)
B(F)
C-15
6
B(FF)
FF-001
Digital key UWB antenna FL 4#
左前数字钥匙UWB天线 4#
LOGO light 1#
LOGO灯 1#
FF-005
B(FF)
C-15
2
B(F)
B(F)
C-15
6
B(FF)
FF-011
Digital key UWB antenna FR 2#/4#
右前数字钥匙UWB天线 2#/4#
23a
23b
Integrated brake control system IBC 30#
集成式制动控制器 30#
F-024
B(F)
25a
Heater PTC1 1#
风暖PTC1 1#
F-003
B(F)
29a

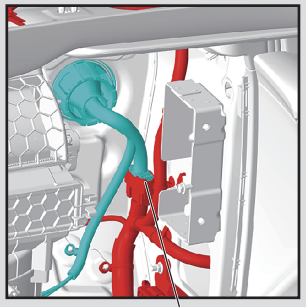

Infotainment control unit (CSC) B25#
信息娱乐控制单元（CSC）B25#
I-002
B(I)
61a
B(I)
I-022
Central display A1#
中间显示屏 A1#
B(I)
I-010
Head up display A3#/A4#
抬头显示器 A3#/A4#
61b
Interior front digital key UWB antenna 4#
室内前数字钥匙UWB天线 4#
I2-002
B(I2)
C-18
4
B(I)
IP ambient light Ⅳ 4#
仪表板氛围灯Ⅳ 4#
I-036
B(I)
IP ambient light Ⅲ 4#
仪表板氛围灯Ⅲ 4#
I-028
B(I)
IP ambient light II 4#
仪表板氛围灯Ⅱ4#
I-024
B(I)
IP ambient light I 4#
仪表板氛围灯Ⅰ4#
I-013
B(I)
Footwell light FR 3#
右前脚窝灯 3#
I-037
B(I)
Footwell light FL 3#
左前脚窝灯 3#
I-016
B(I)
Auxiliary fascia console point light source ambient light 3#
副仪表板点光源氛围灯 3#
I2-004
B(I2)
C-18
4
B(I)
Spiral cable I 17#
时钟弹簧Ⅰ17#
I-018
B(I)
Combination switch 6#
组合开关 6#
I-017
B(I)
Spiral cable II 1#
时钟弹簧Ⅱ 1#
I-015
B(I)
62a
B(I)
I-035
Right outlet motor - left/right 1#
右风口电机-左右 1#
B(I)
I-031
Right outlet motor - up/down 1#
右风口电机-上下 1#
B(I)
I-033
Center right outlet motor - left/right 1#
中右风口电机-左右1#
B(I)
I-032
Center right outlet motor - up/down 1#
中右风口电机-上下 1#
B(I)
I-025
Center left outlet motor - up/down 1#
中左风口电机-上下 1#
B(I)
I-026
Center left outlet motor - left/right 1#
中左风口电机-左右 1#
B(I)
I-012
Left outlet motor - up/down 1#
左风口电机-上下 1#
B(I)
I-011
Left outlet motor - left/right 1#
左风口电机-左右 1#
B(I)
I-030
Electric outlet filtering voltage regulator module 3#
电动出风口滤波稳压模块 3#
B(I)
I-014
Standard OBD 4#/5#
标准OBD 4#/5#
B(I)
I-034
Single USB 1#
单路USB 1#
B(I)
C-18
13
B(I2)
I2-003
Mobile phone wireless charging controller 4#
手机无线充电控制器 4#
62b
Spiral cable I 13#
时钟弹簧Ⅰ 13#
I-018
B(I)
63a



C-07

C-06

C-05



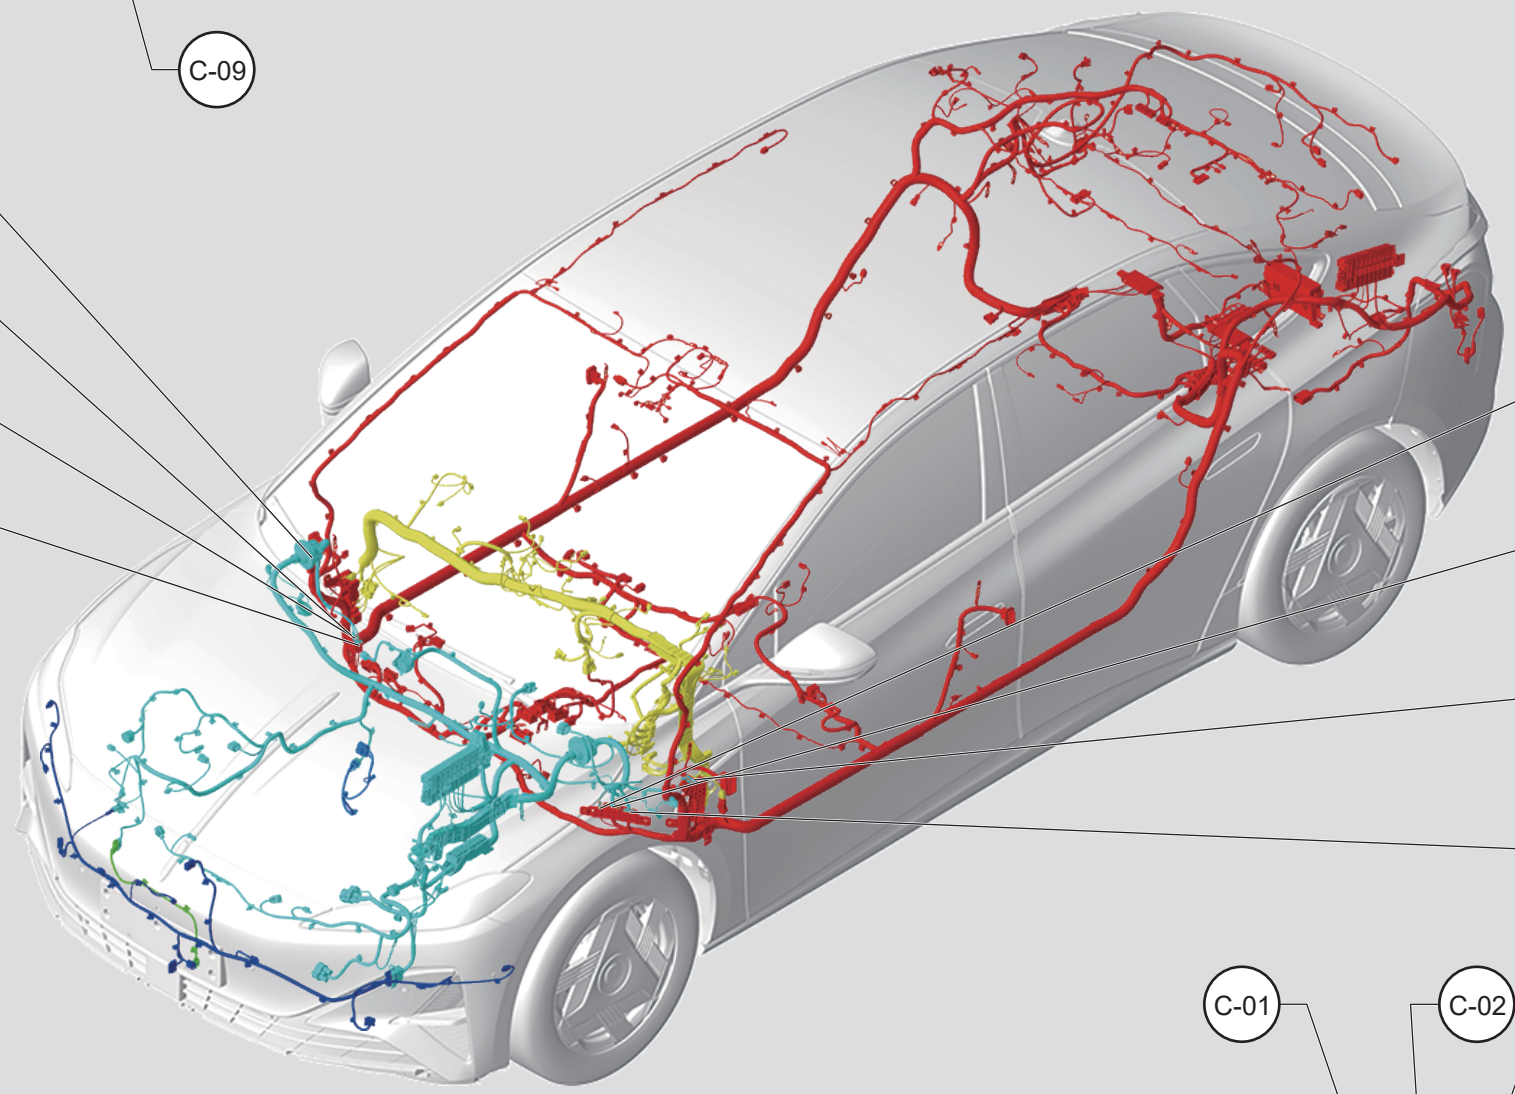
C-09

C-09

C-05

C-06

C-07



C-04

C-02

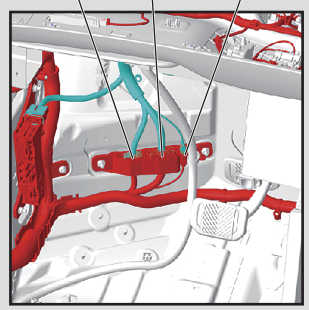
C-03

C-01

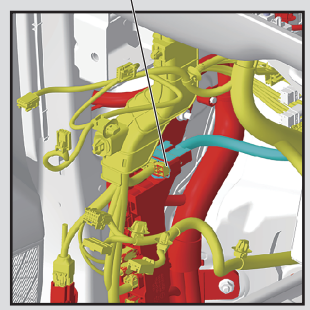
C-01

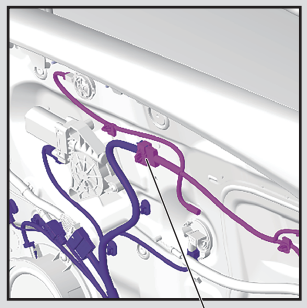
C-02

C-04

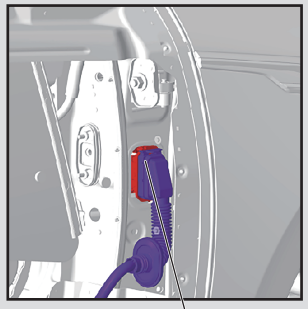


C-03





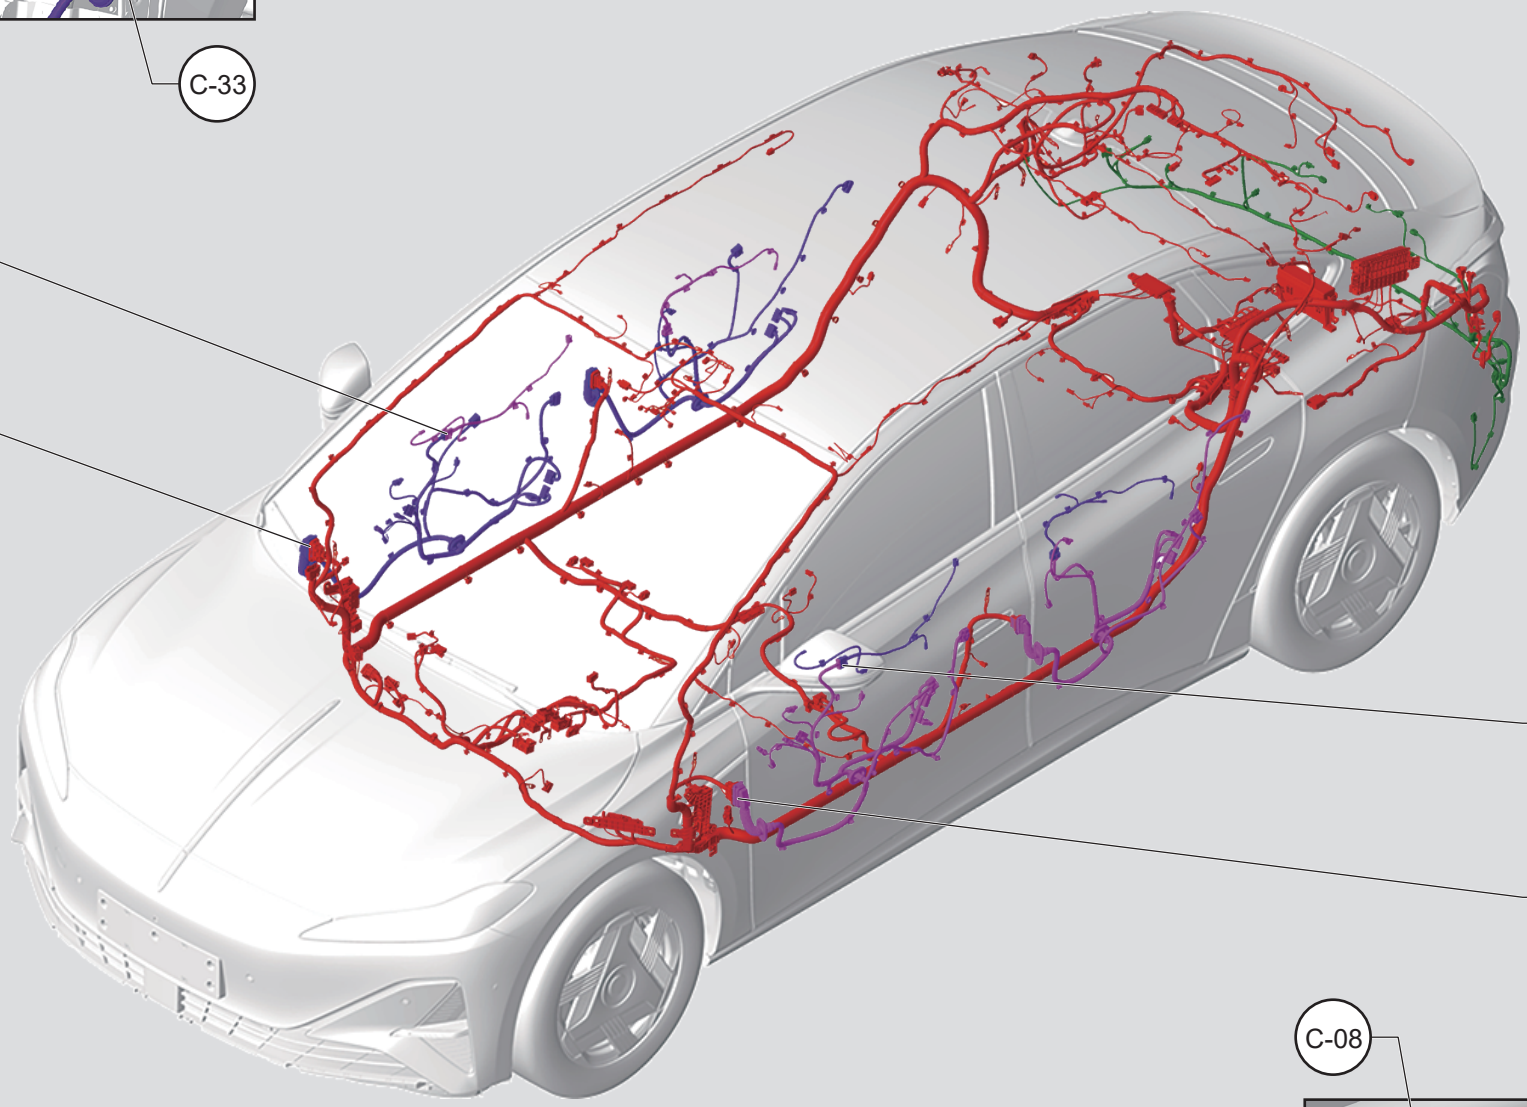
C-10



C-33

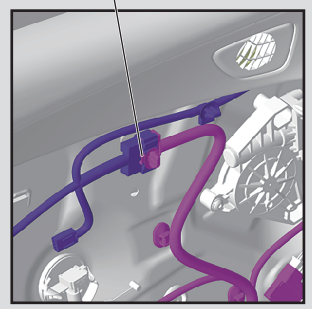
C-10

C-33

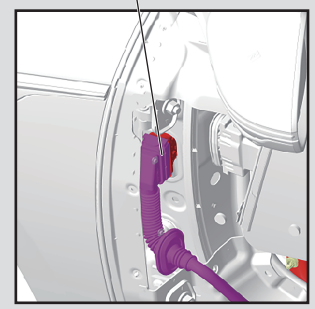


C-08

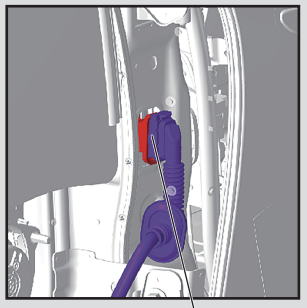
C-32



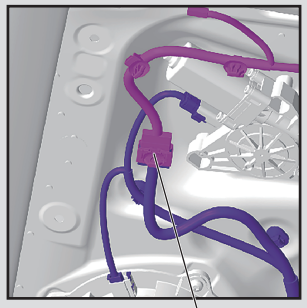
C-08



C-32



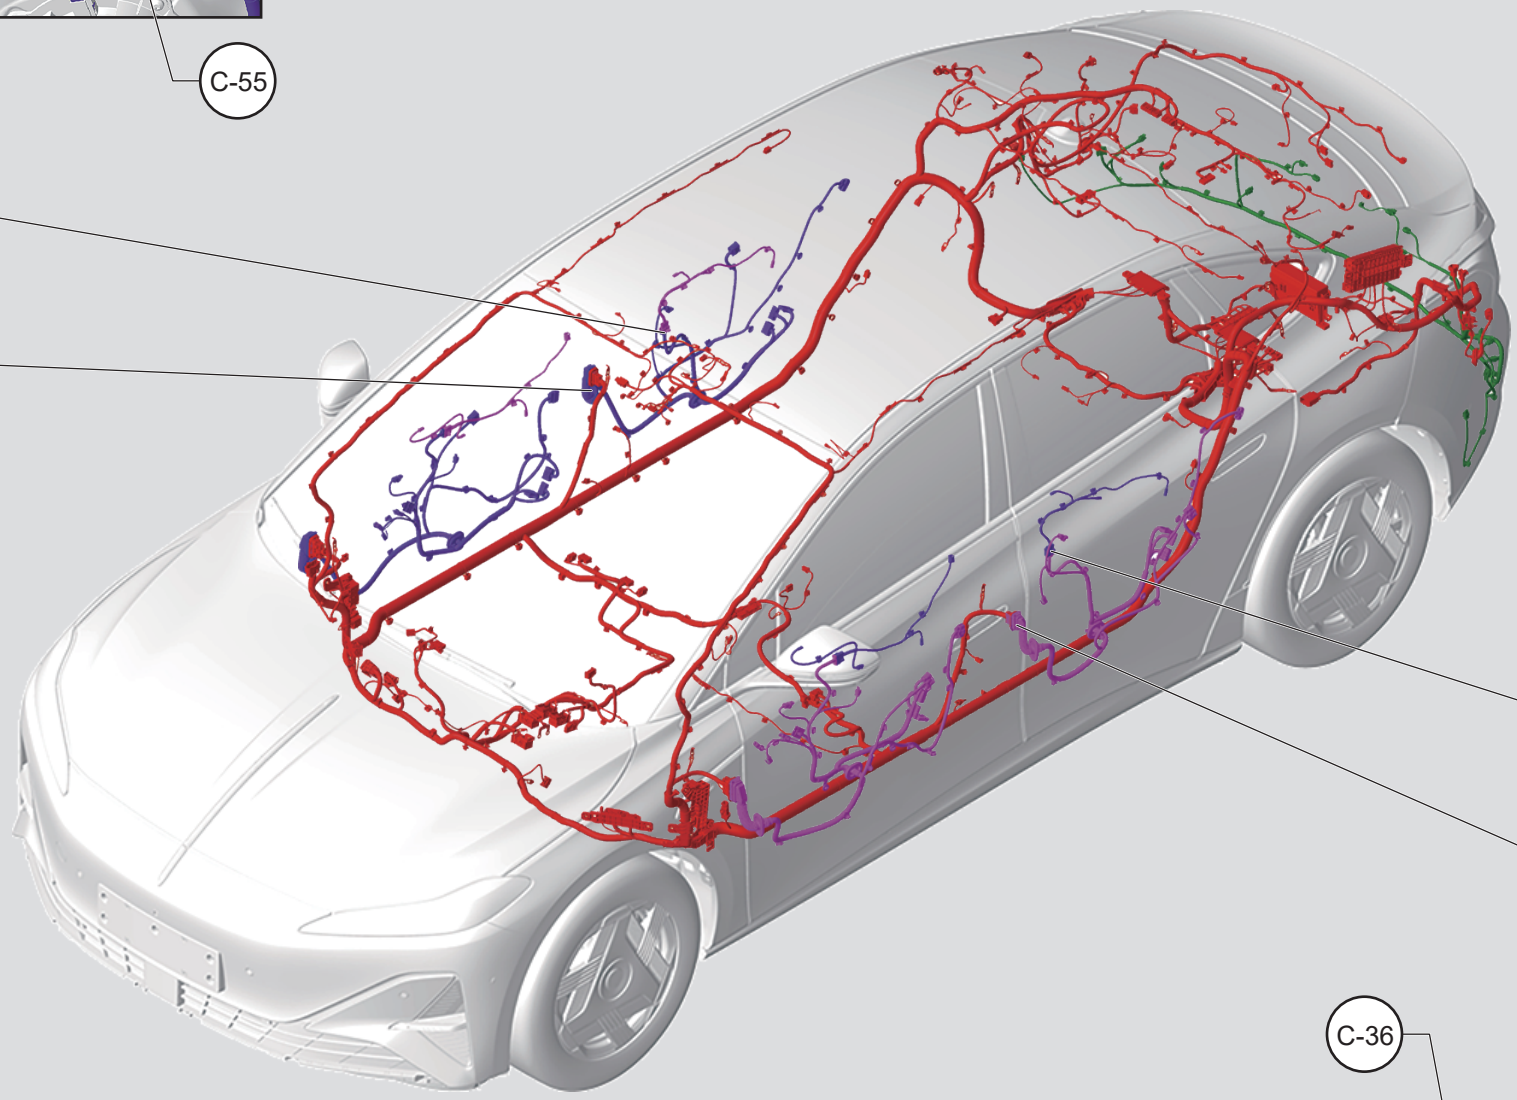
C-37



C-55

C-55

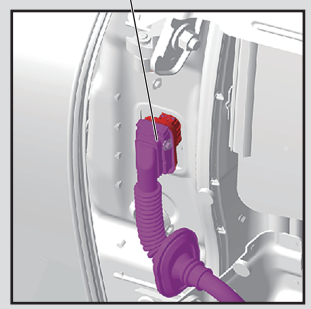
C-37



C-52

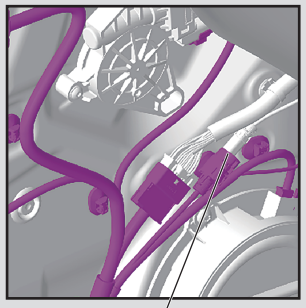
C-36

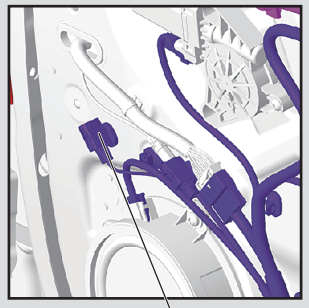
C-36

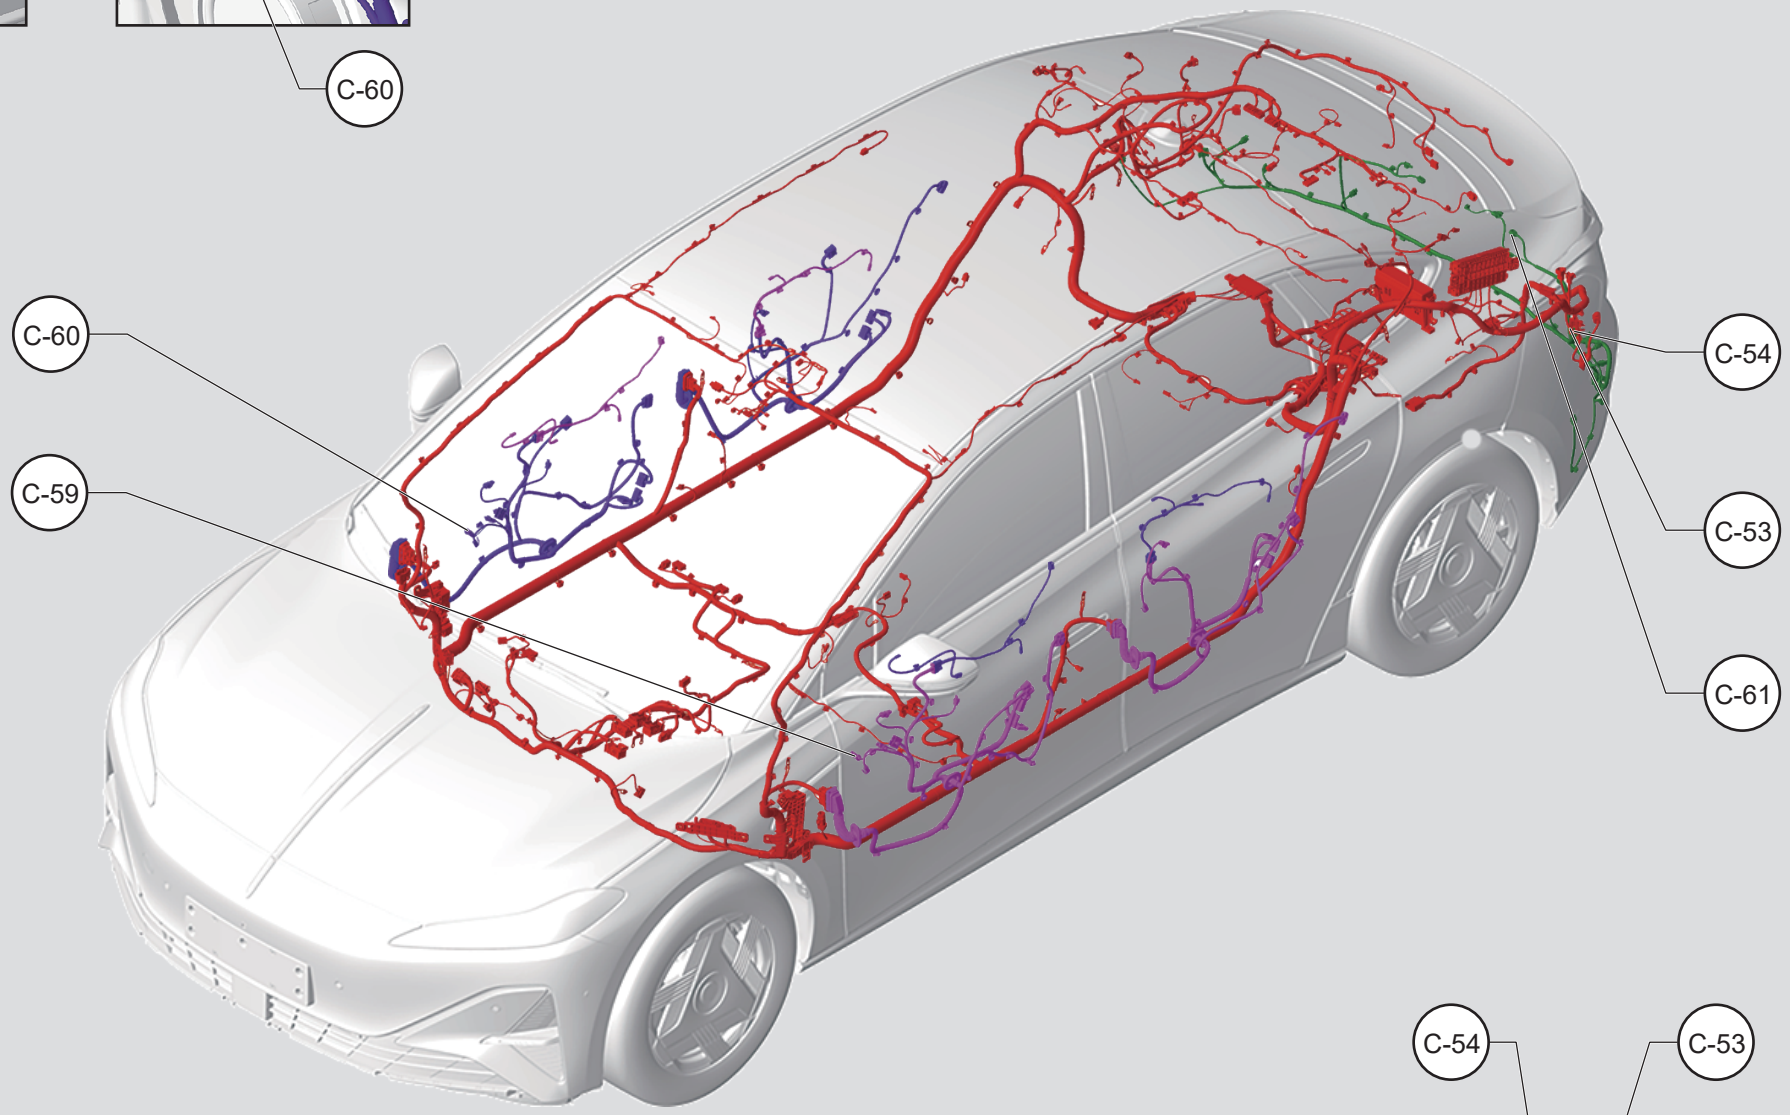


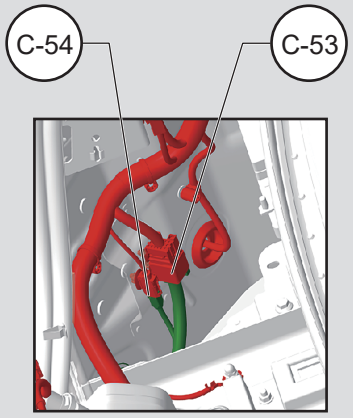
C-52

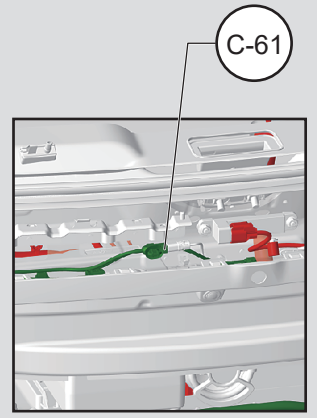


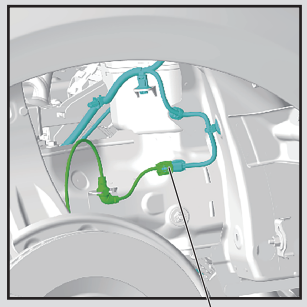

C-59


C-60

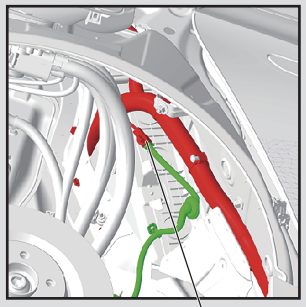

C-60
C-59
C-54
C-53
C-61


C-54
C-53


C-61



C-12



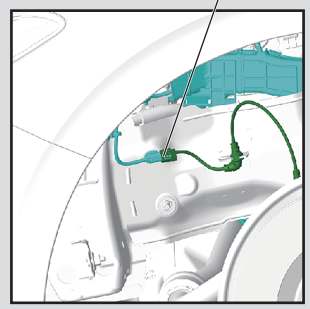
C-39

C-11

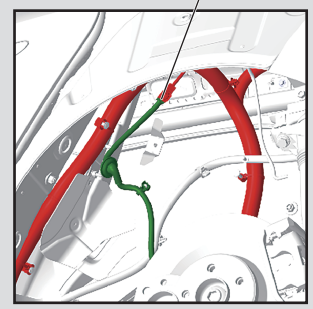
C-12

C-38

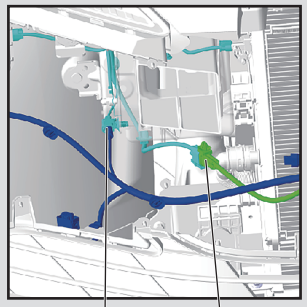
C-39



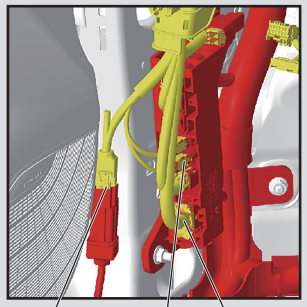
C-11



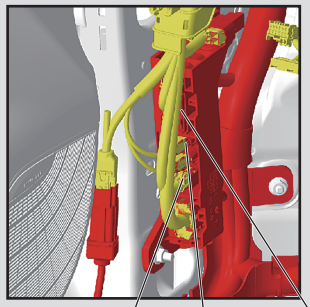
C-38



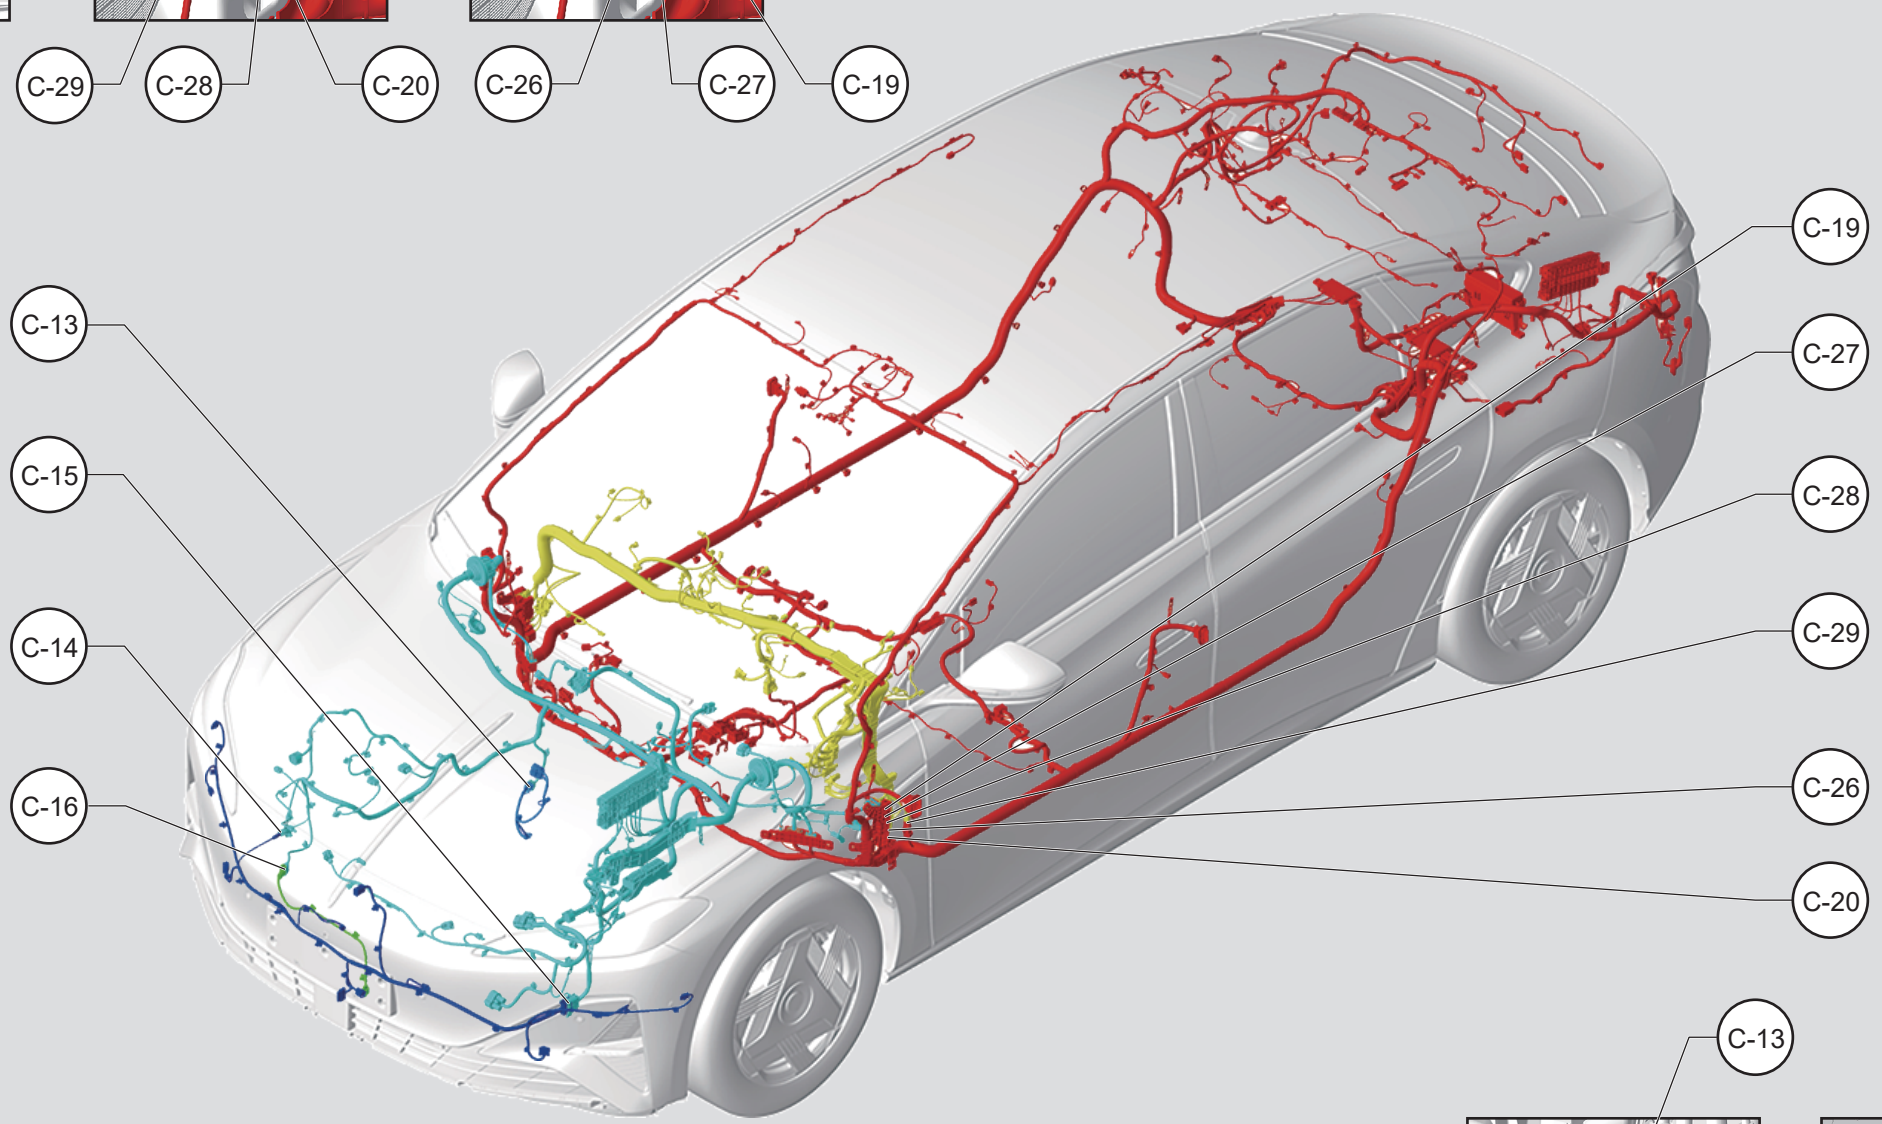
C-14 C-16

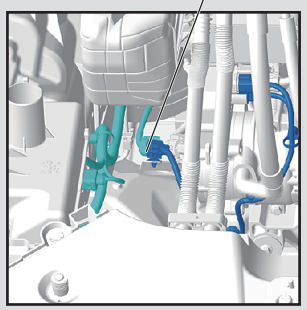


C-29 C-28 C-20

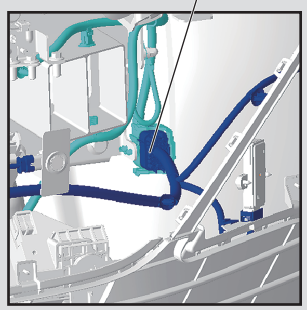


C-26 C-27 C-19

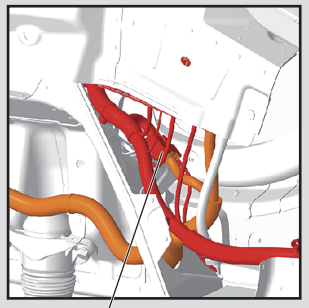




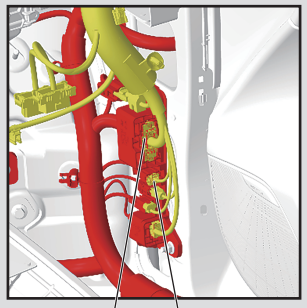
C-13



C-15

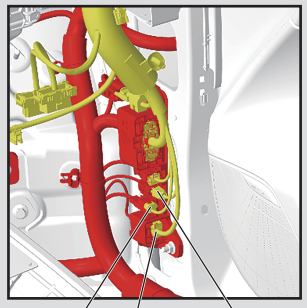


C-35



C-23

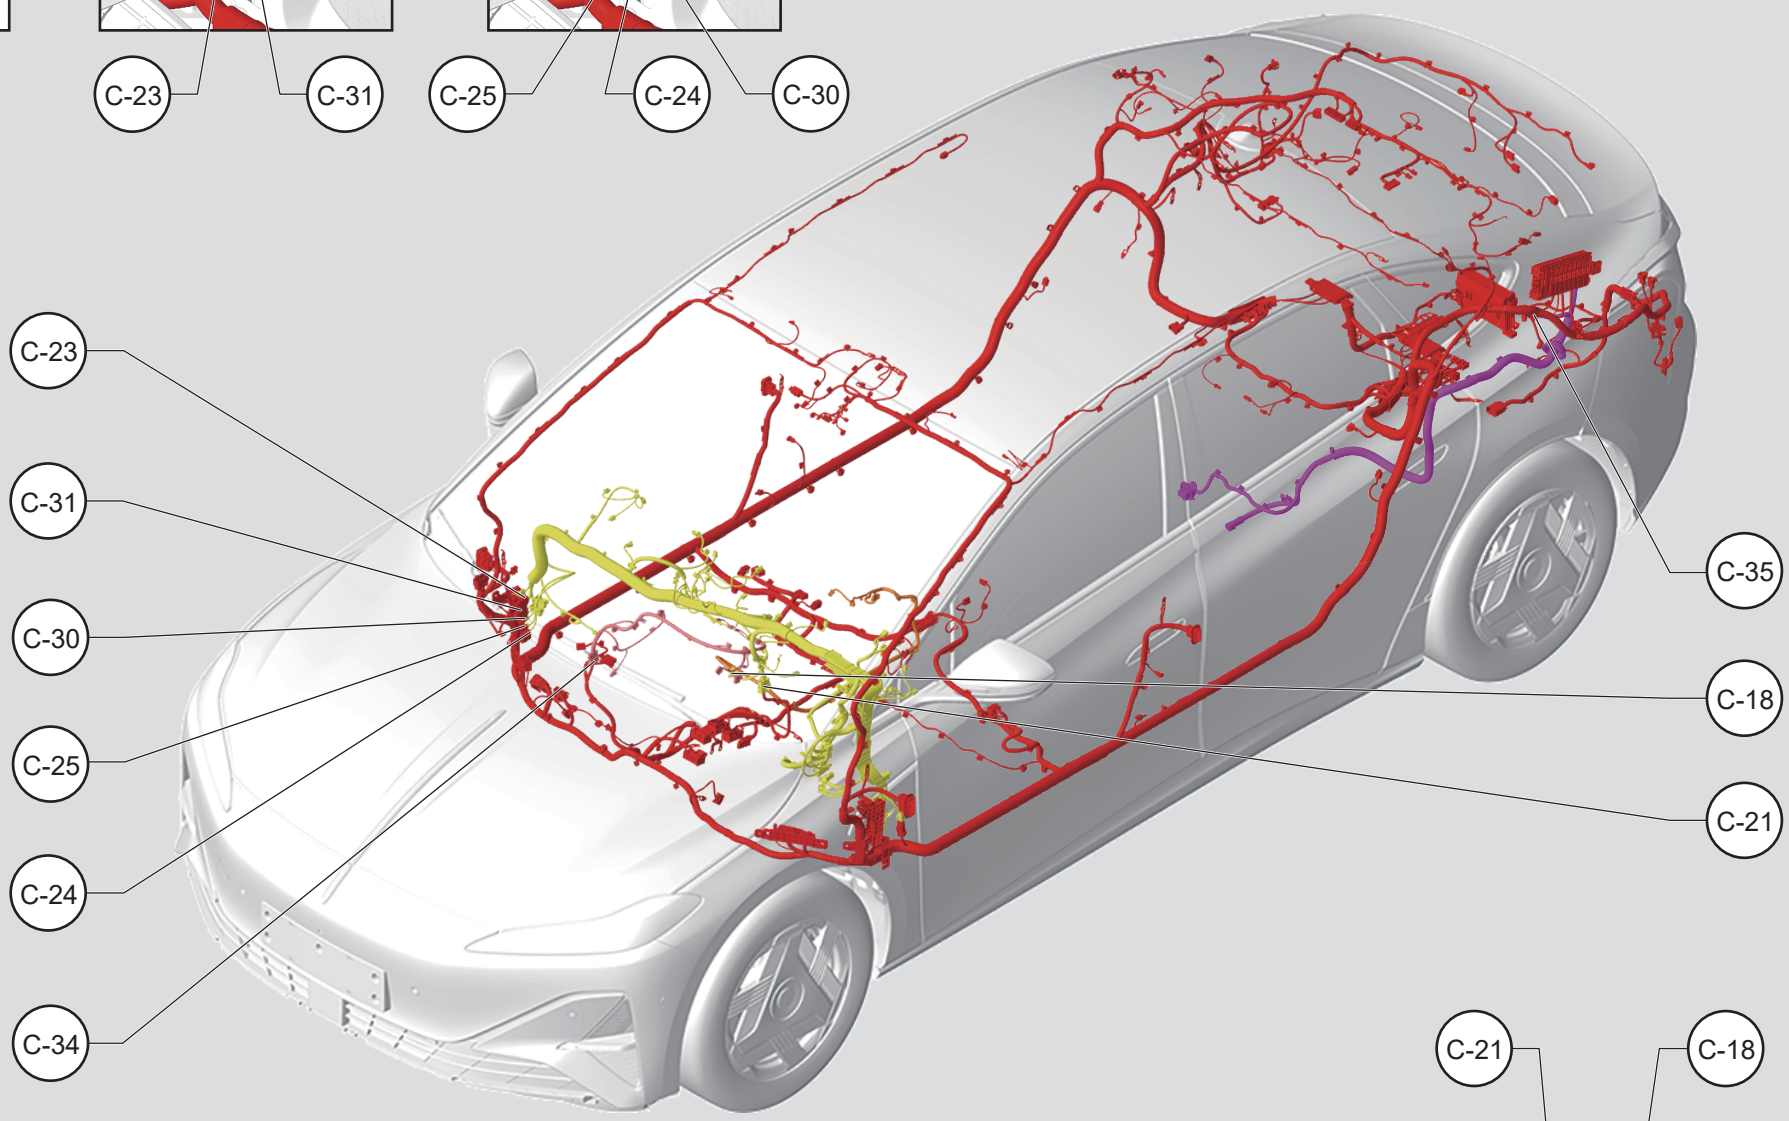
C-31



C-25

C-24

C-30



C-23

C-31

C-30

C-25

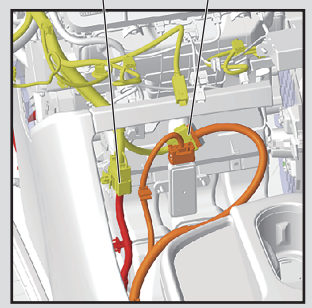
C-24

C-34

C-35

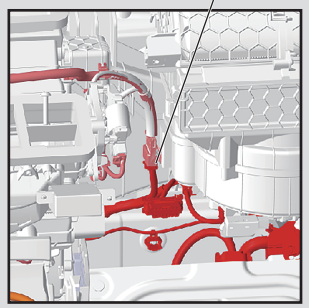
C-18

C-21

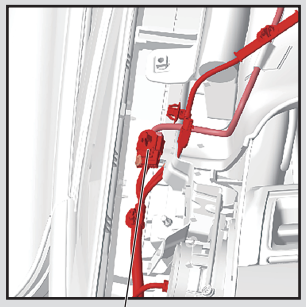


C-21

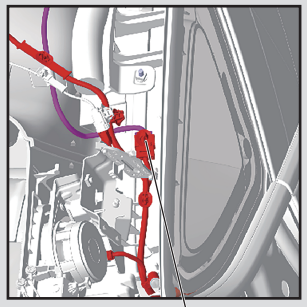
C-18



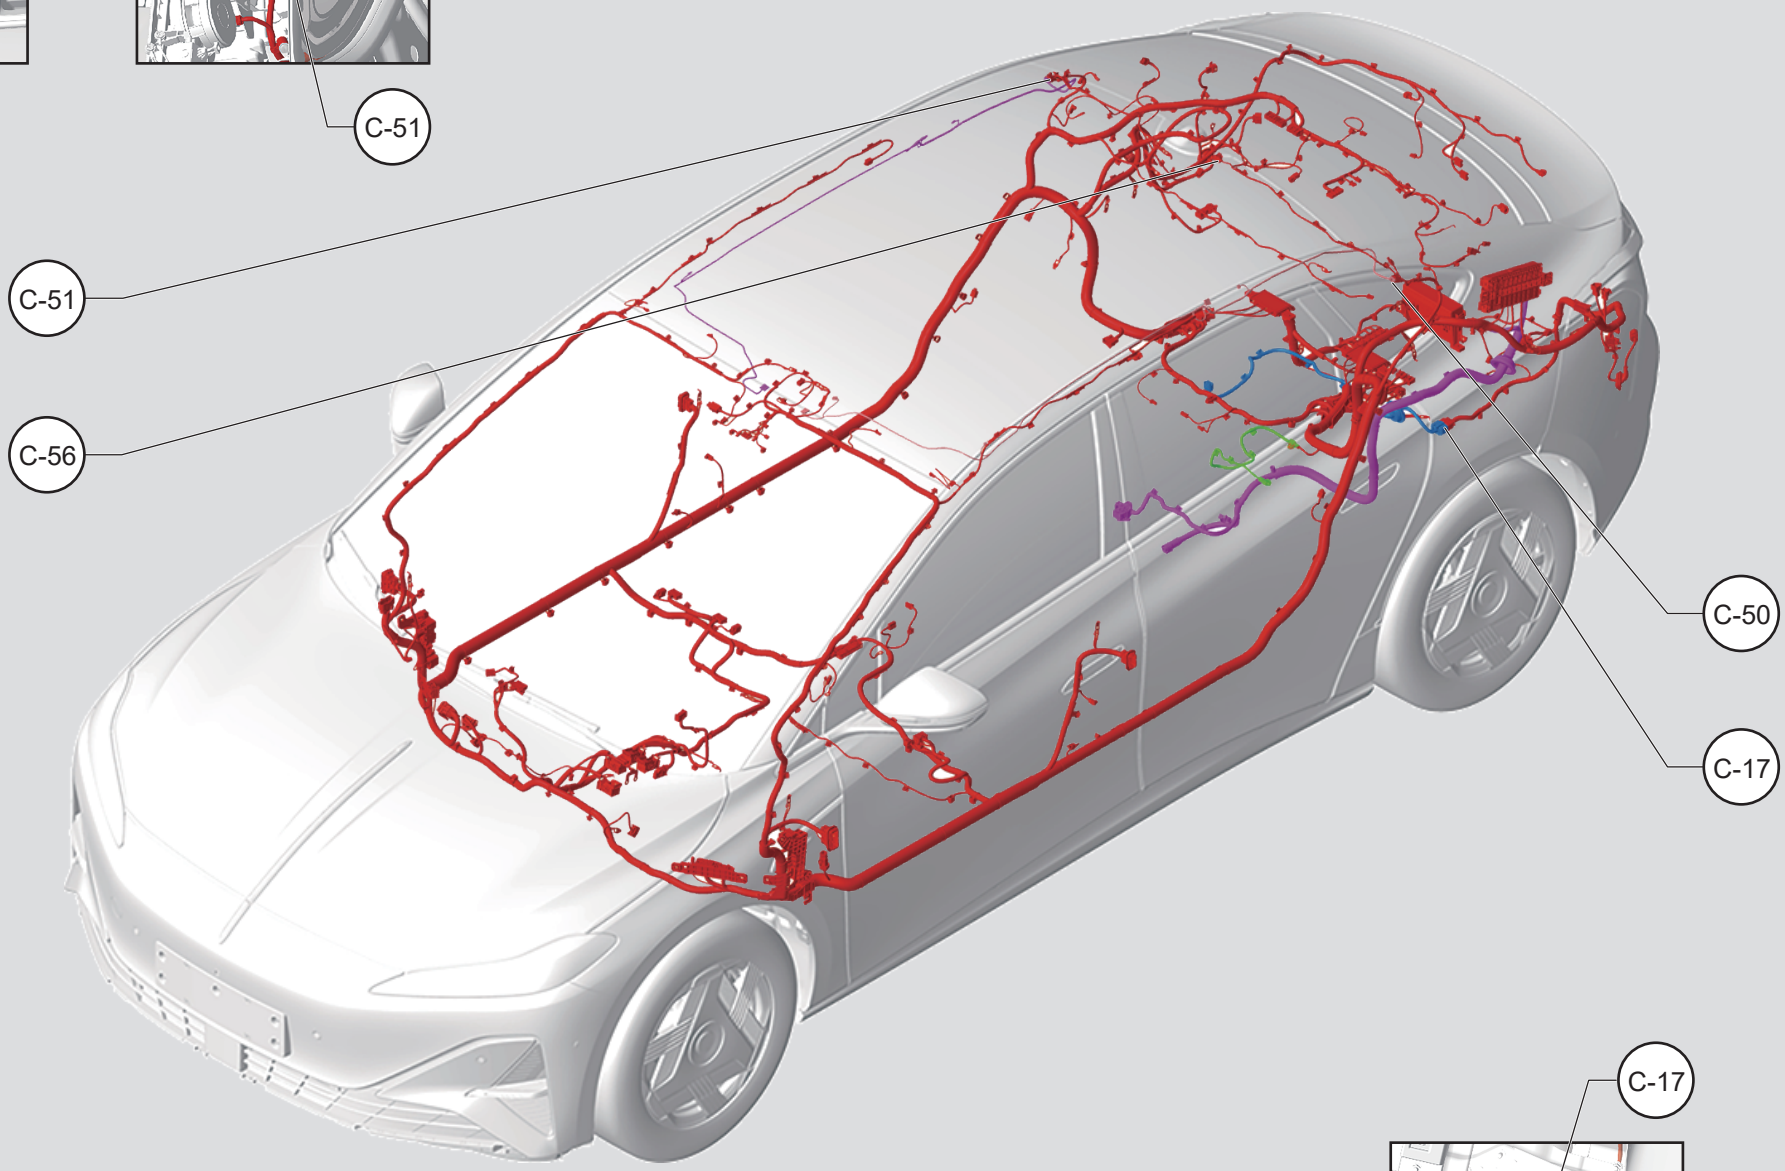
C-34



C-50

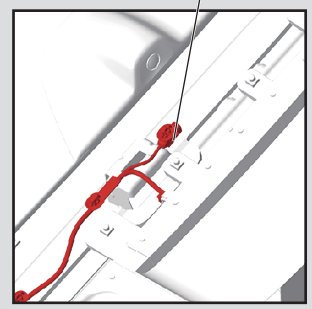


C-51

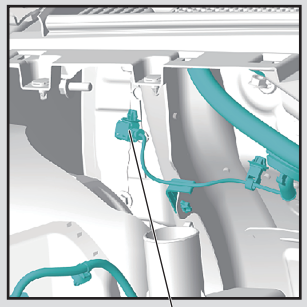




C-17



C-56

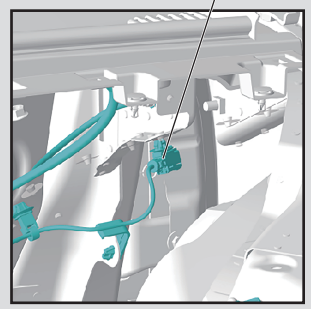


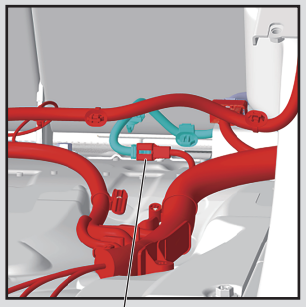
C-57

C-57

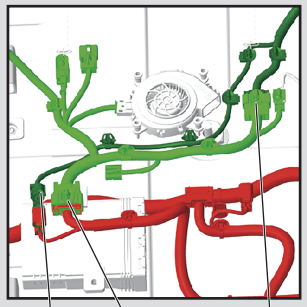
C-58

C-58





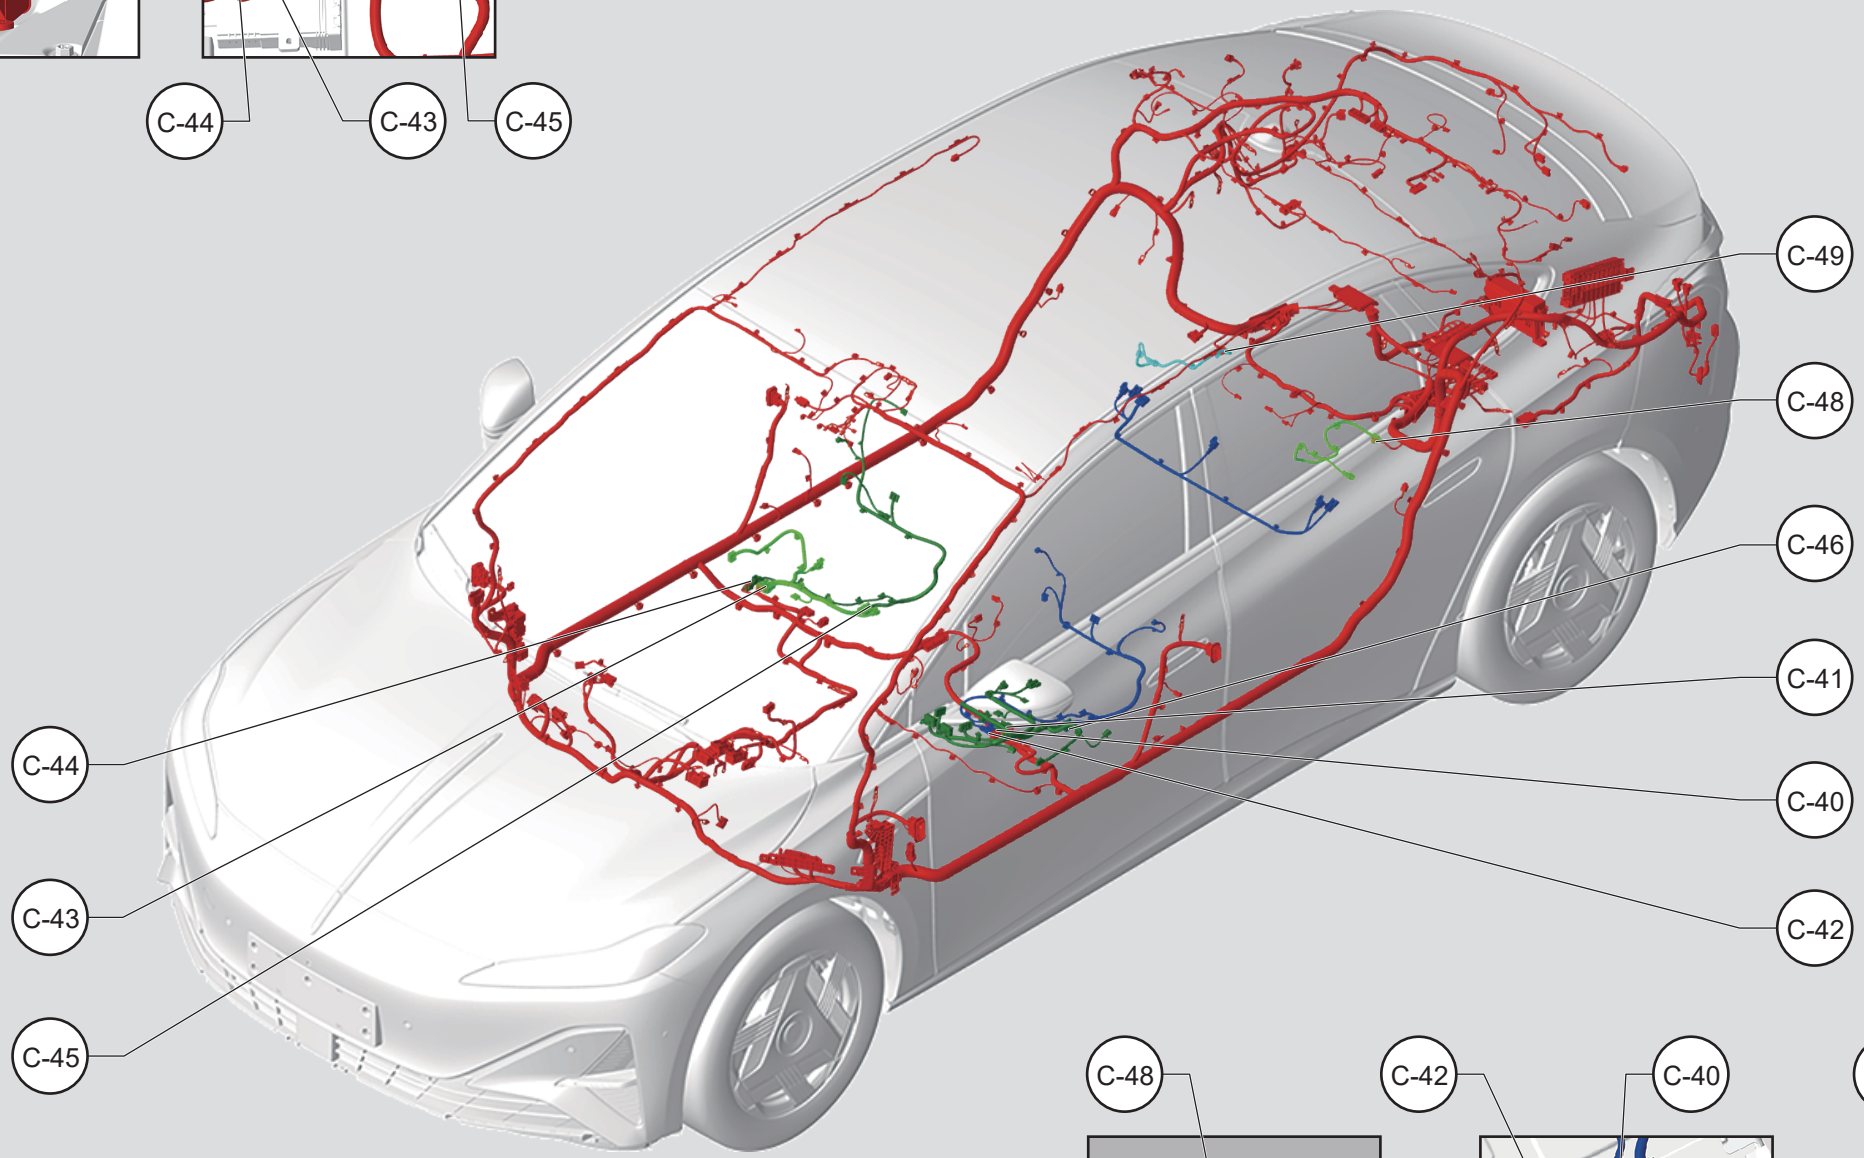
C-49



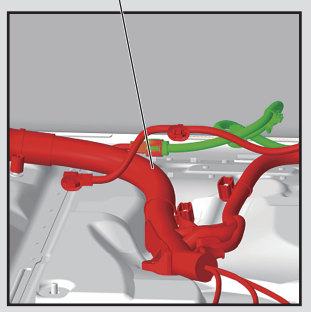
C-44

C-43

C-45

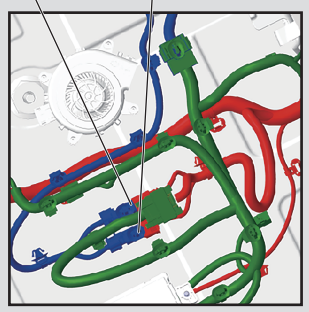


C-48



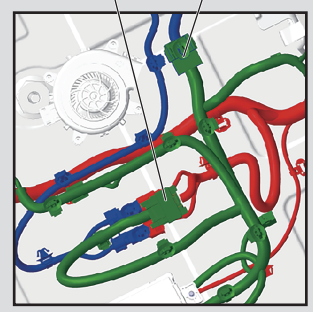
C-42

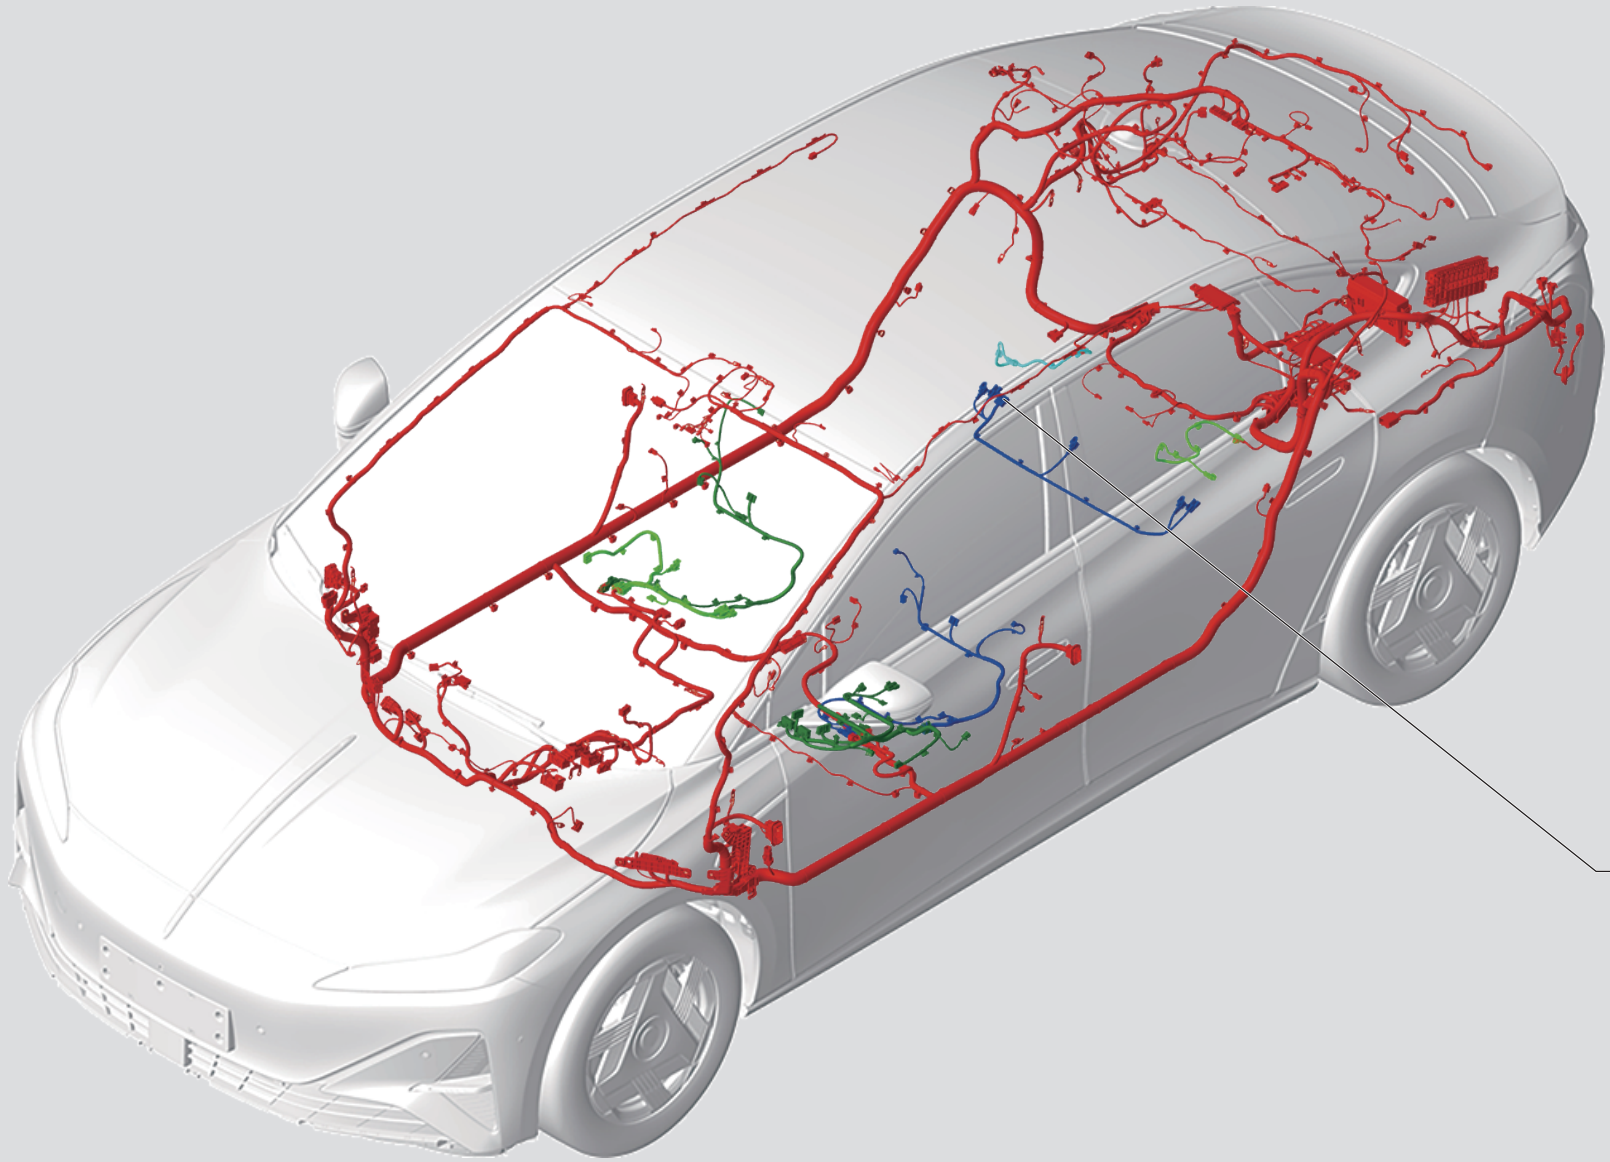
C-40

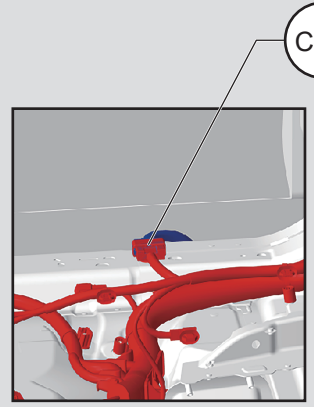


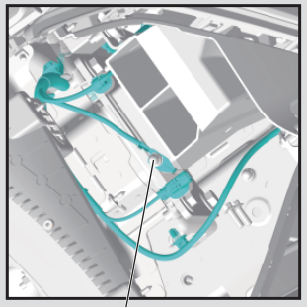
C-41

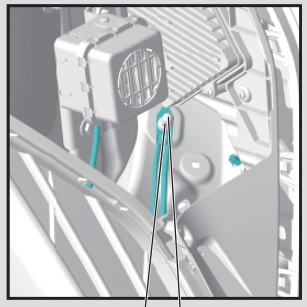
C-46

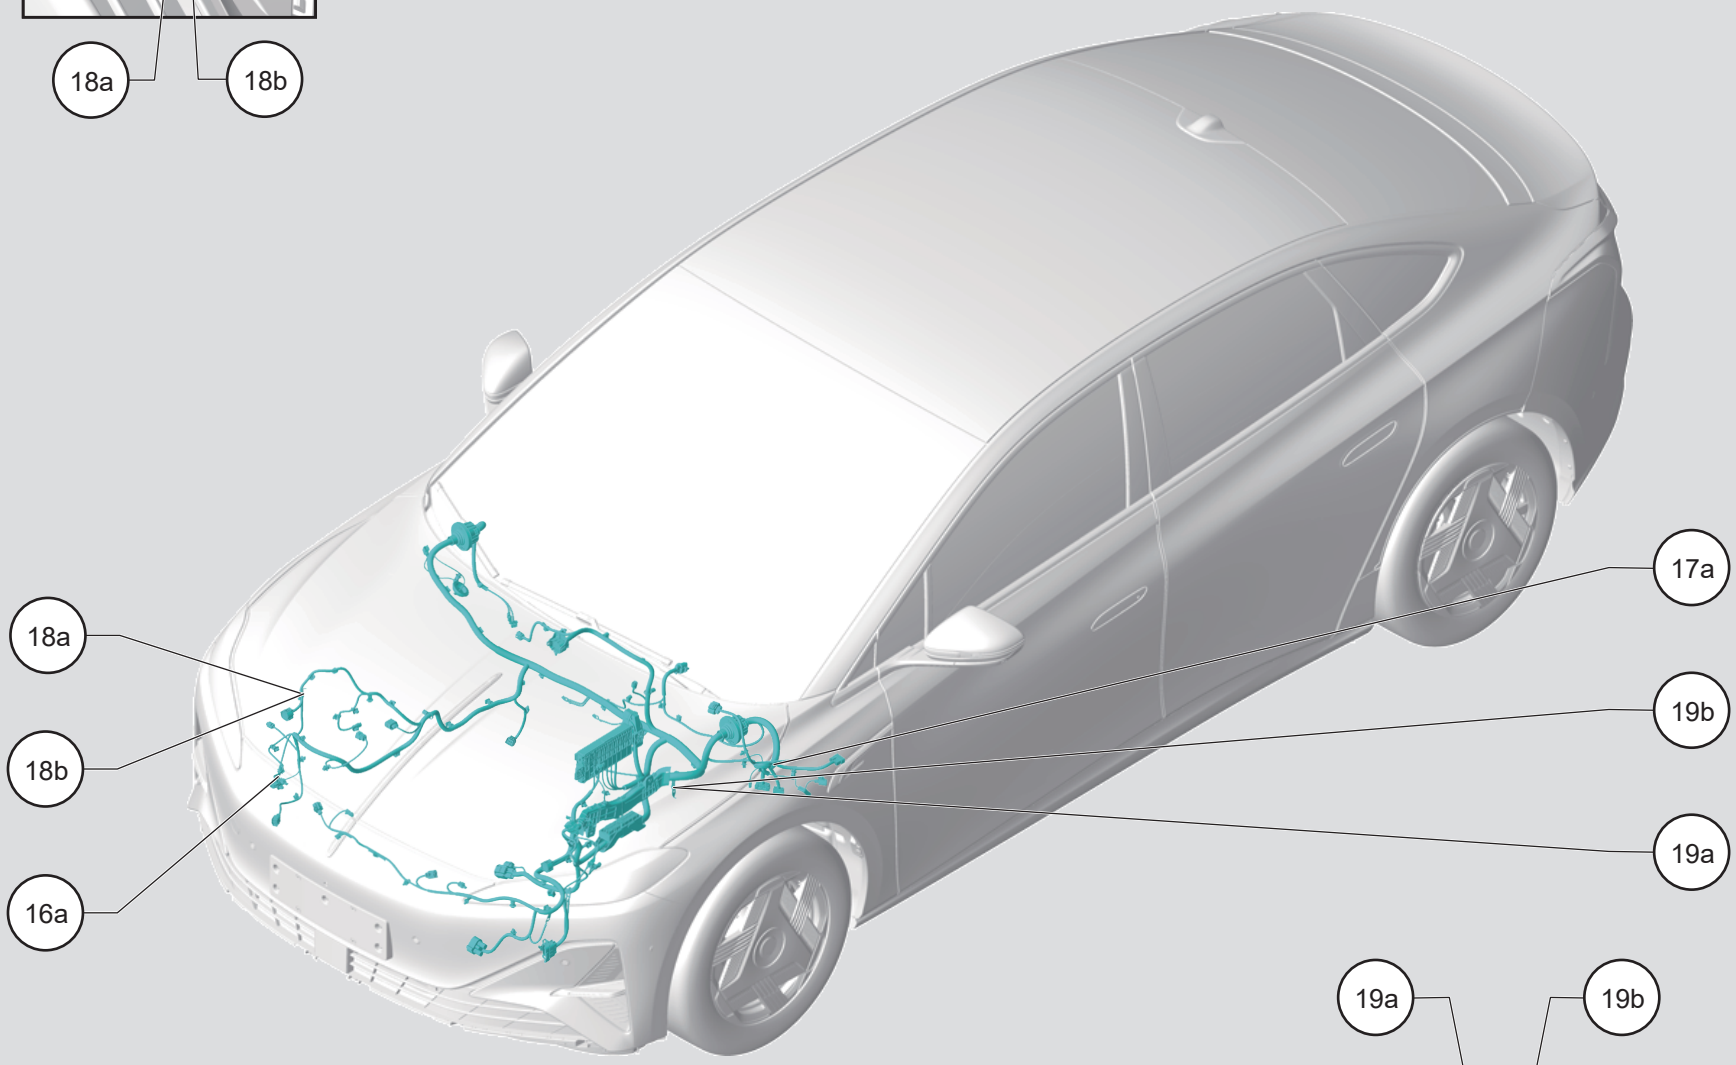


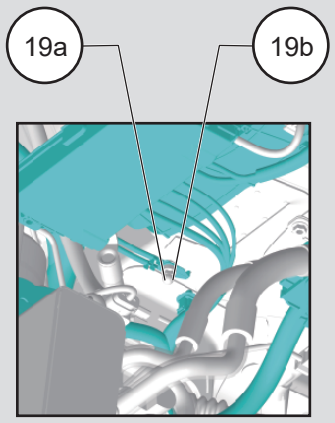

C-47

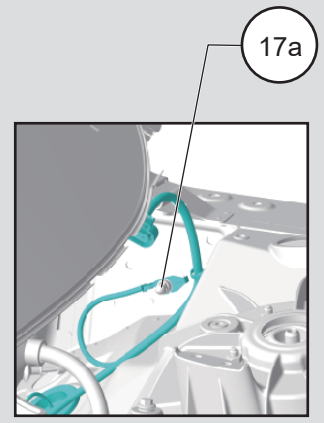

C-47

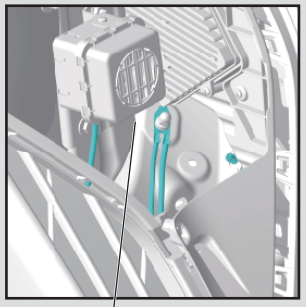

16a


18a
18b

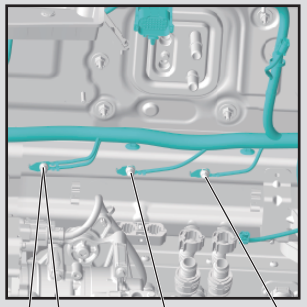

18a
18b
16a
17a
19b
19a


19a
19b

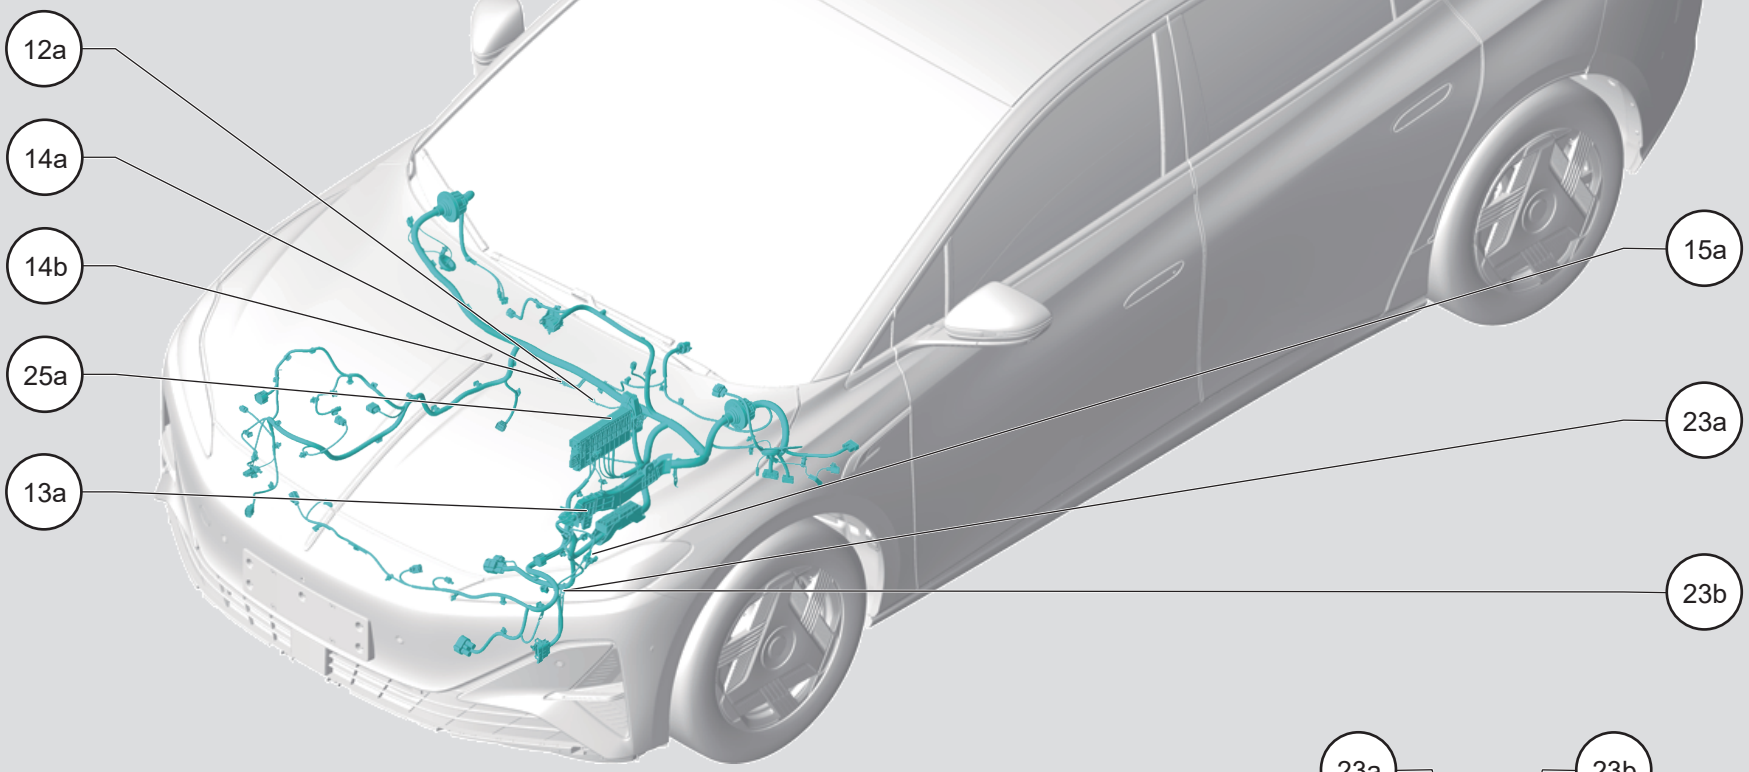

17a

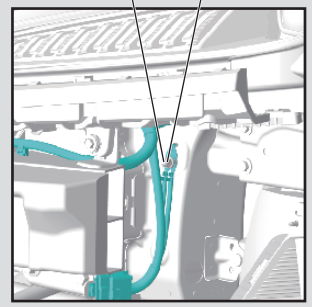


13a

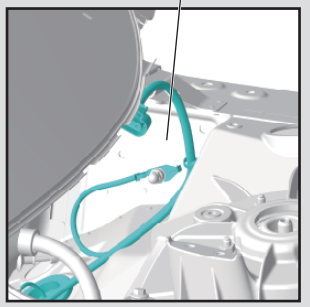


14a 14b 12a 25a

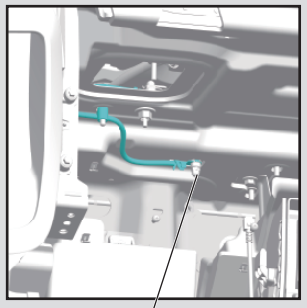




23a 23b



15a

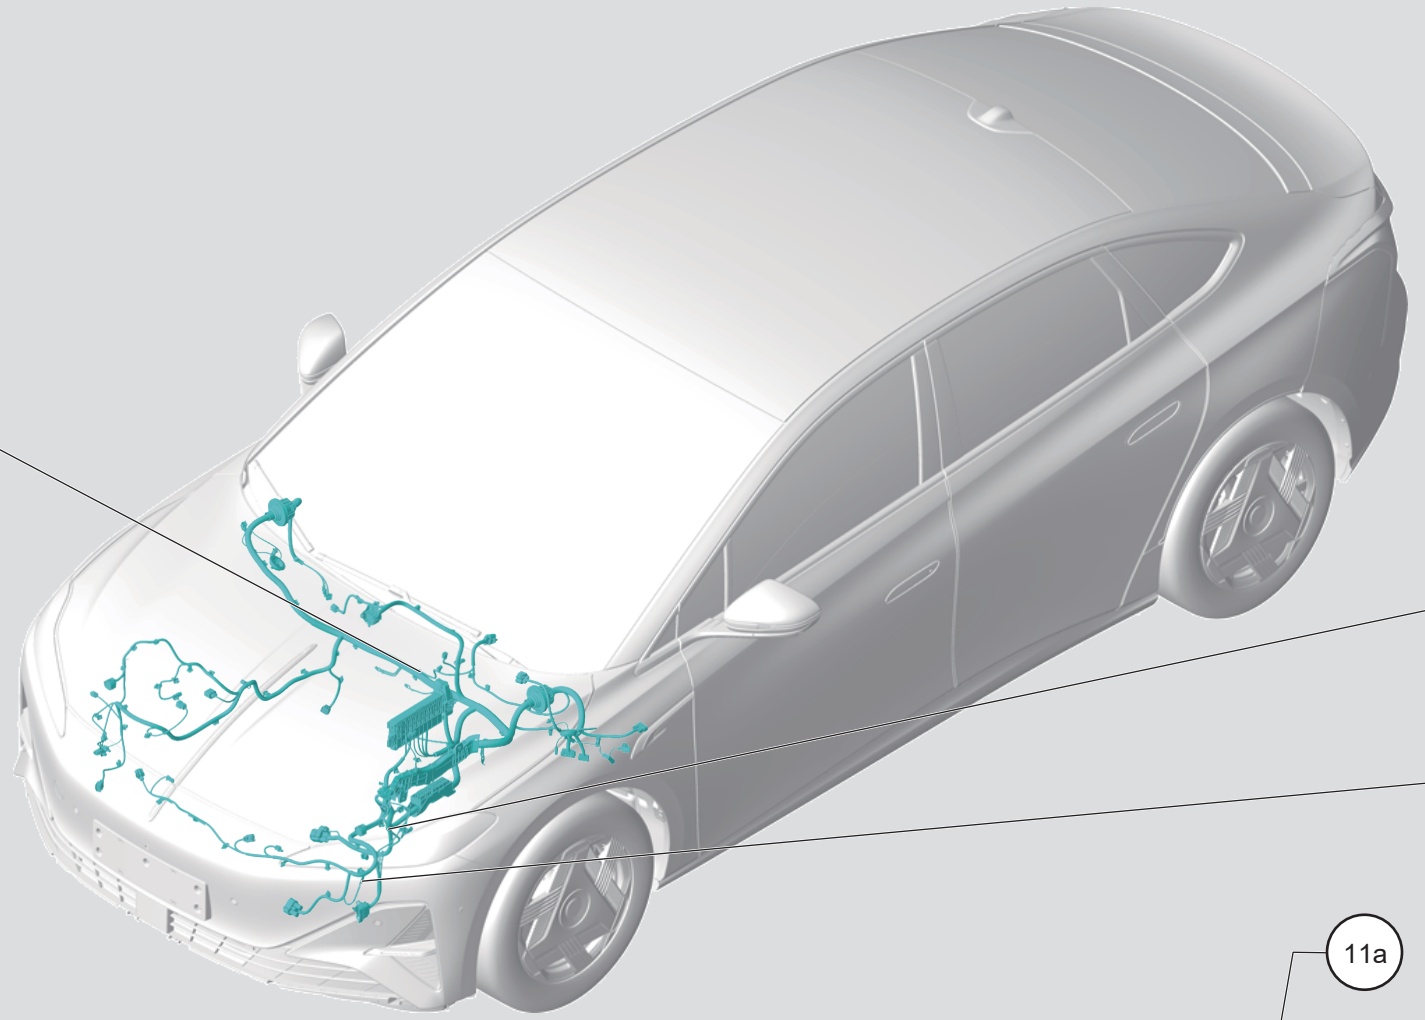


29a

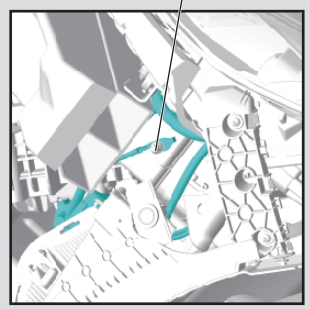
29a

21a

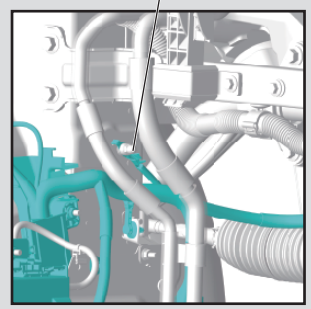
11a

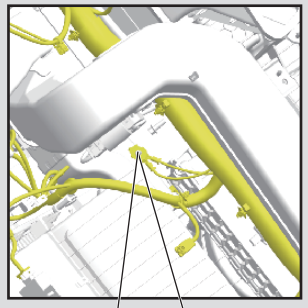


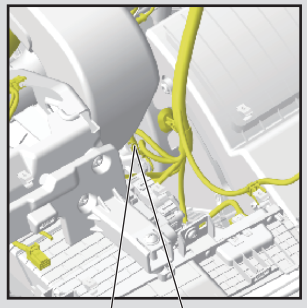
11a

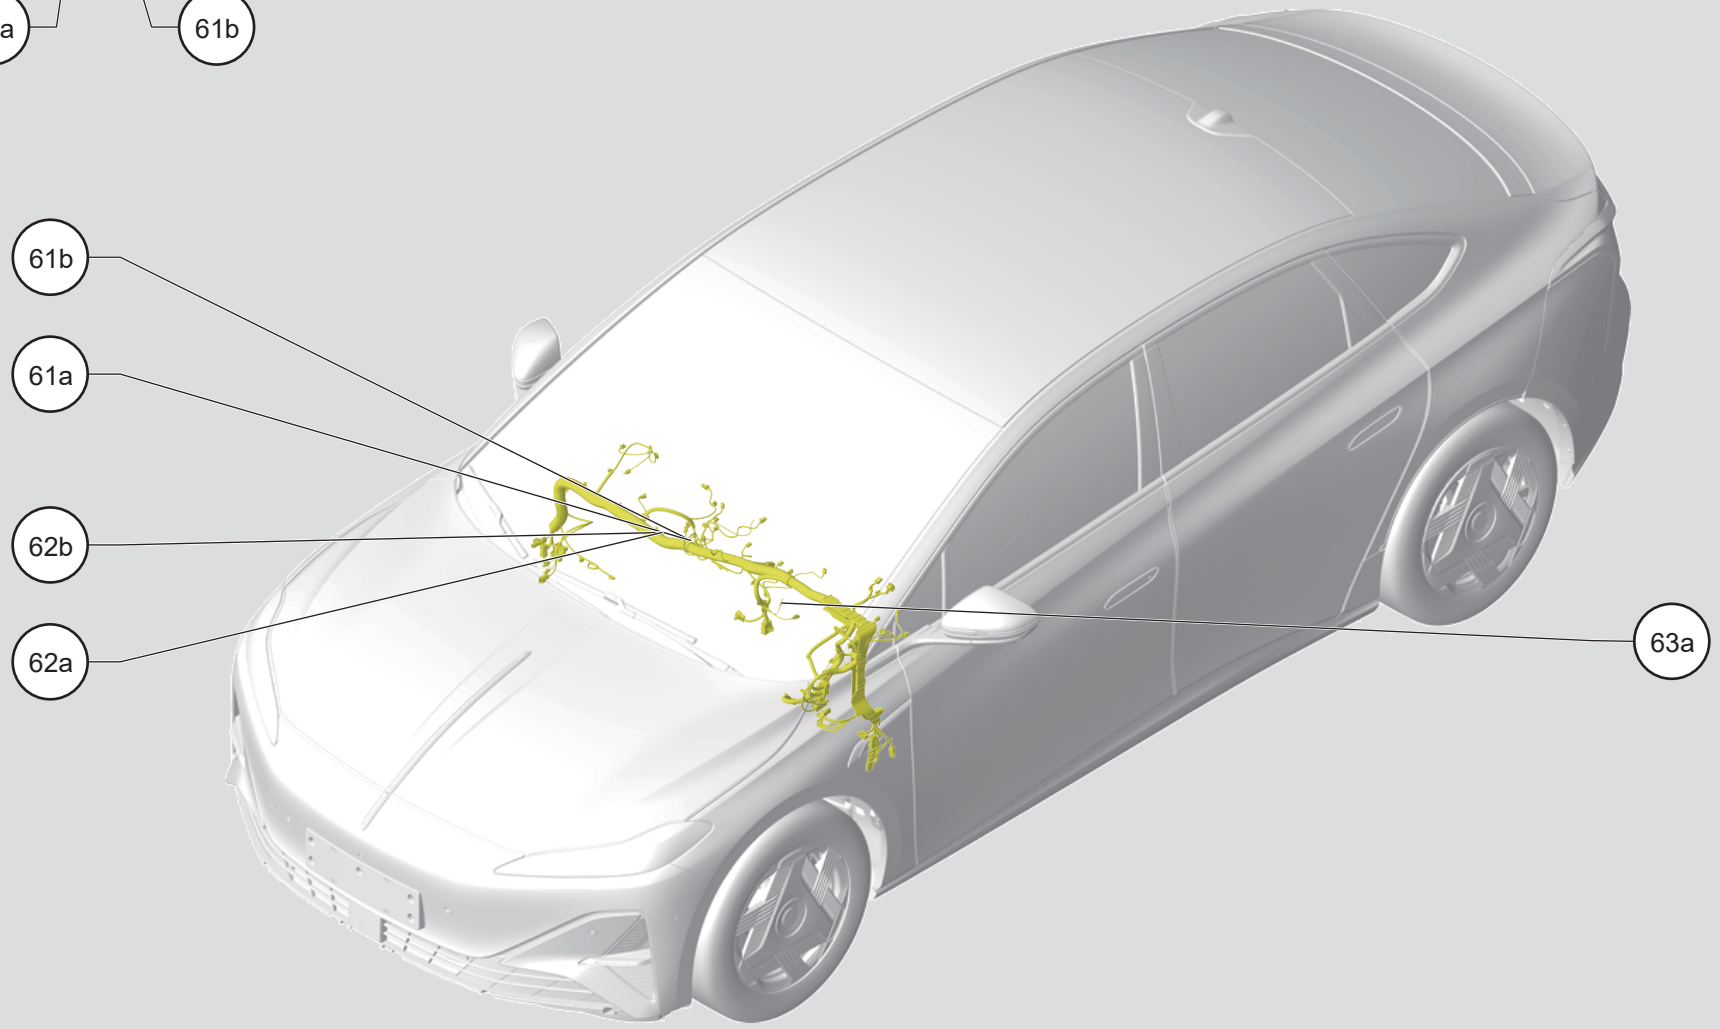


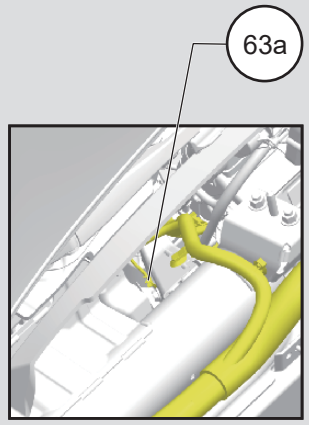
21a

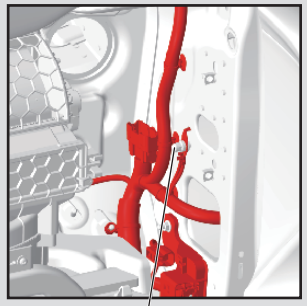


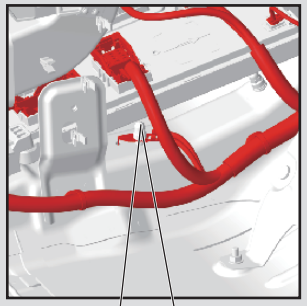

62a
62b

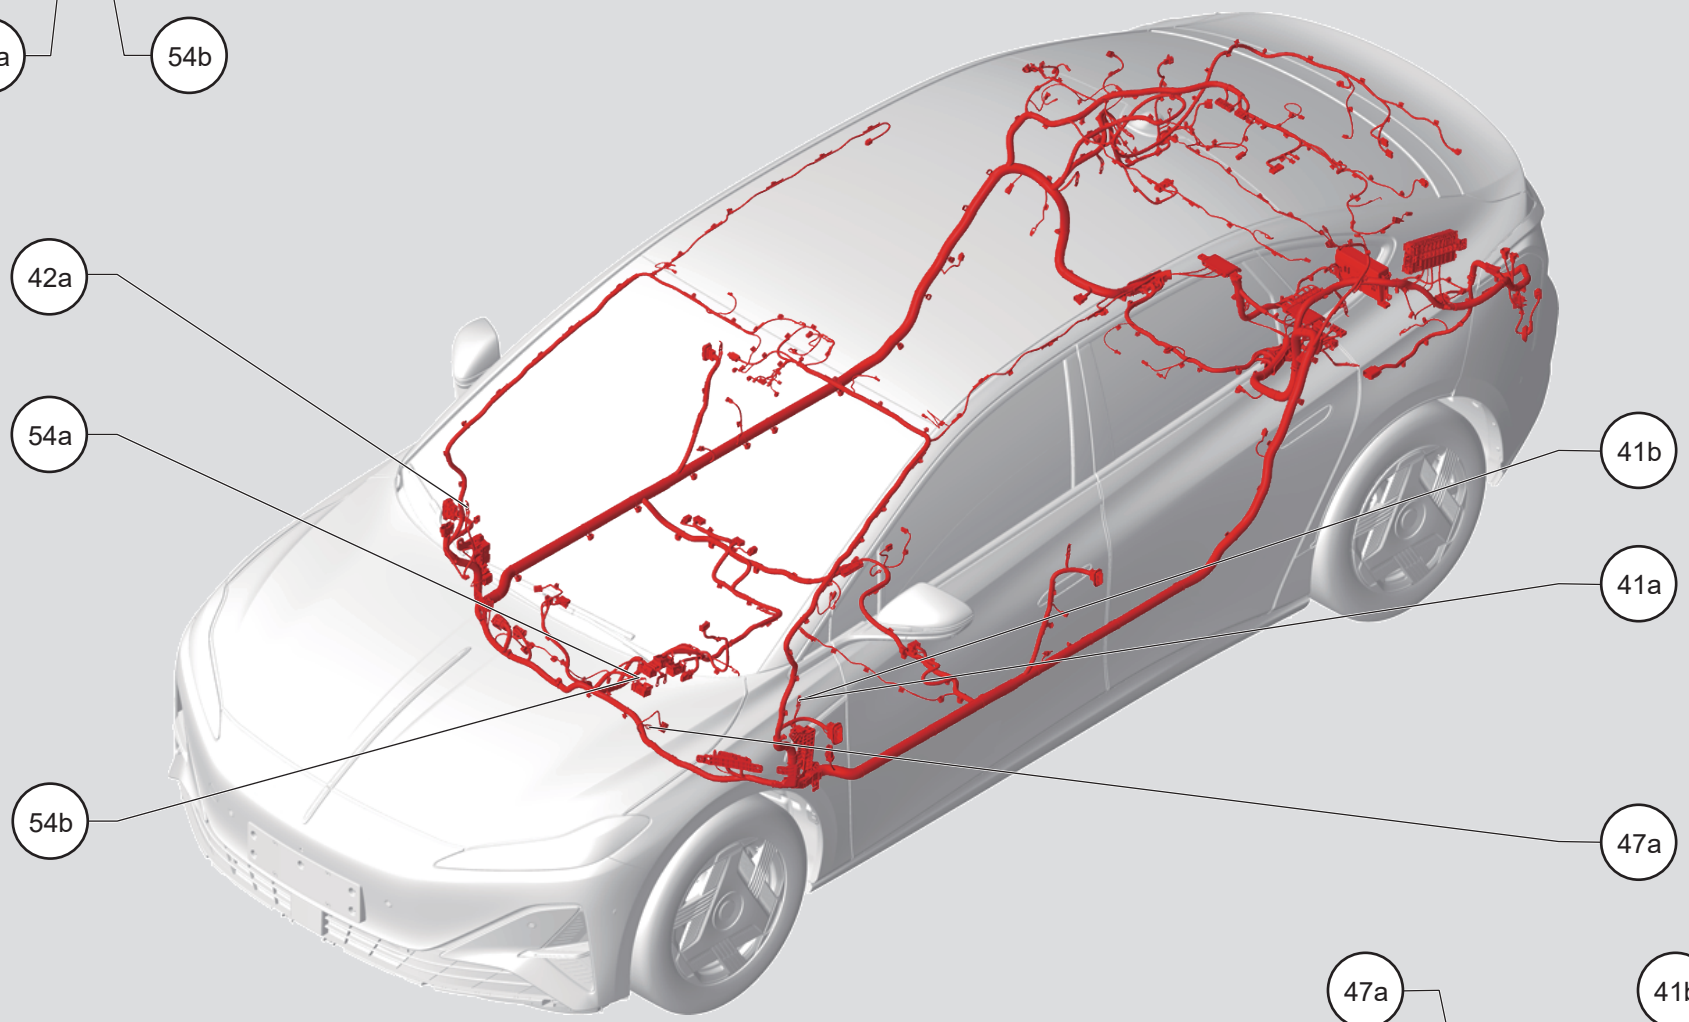

61a
61b

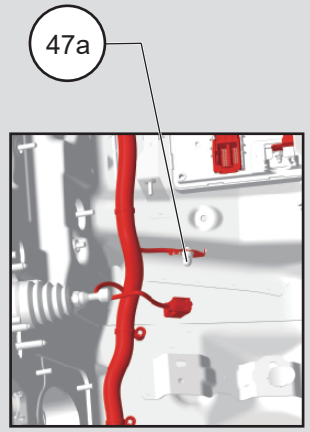

61b
61a
62b
62a
63a

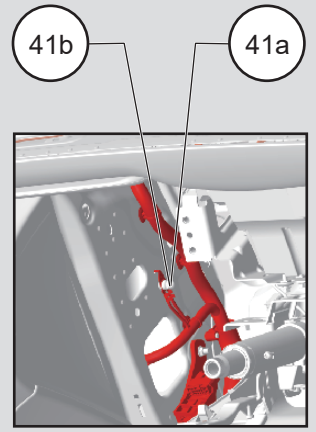

63a

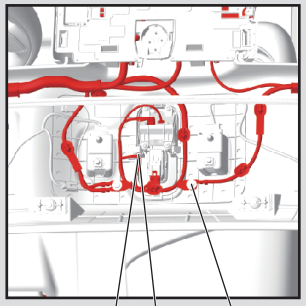

42a

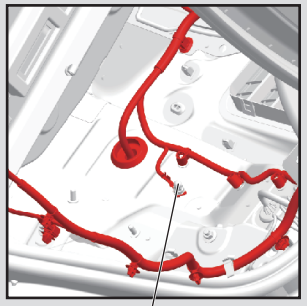

54a
54b

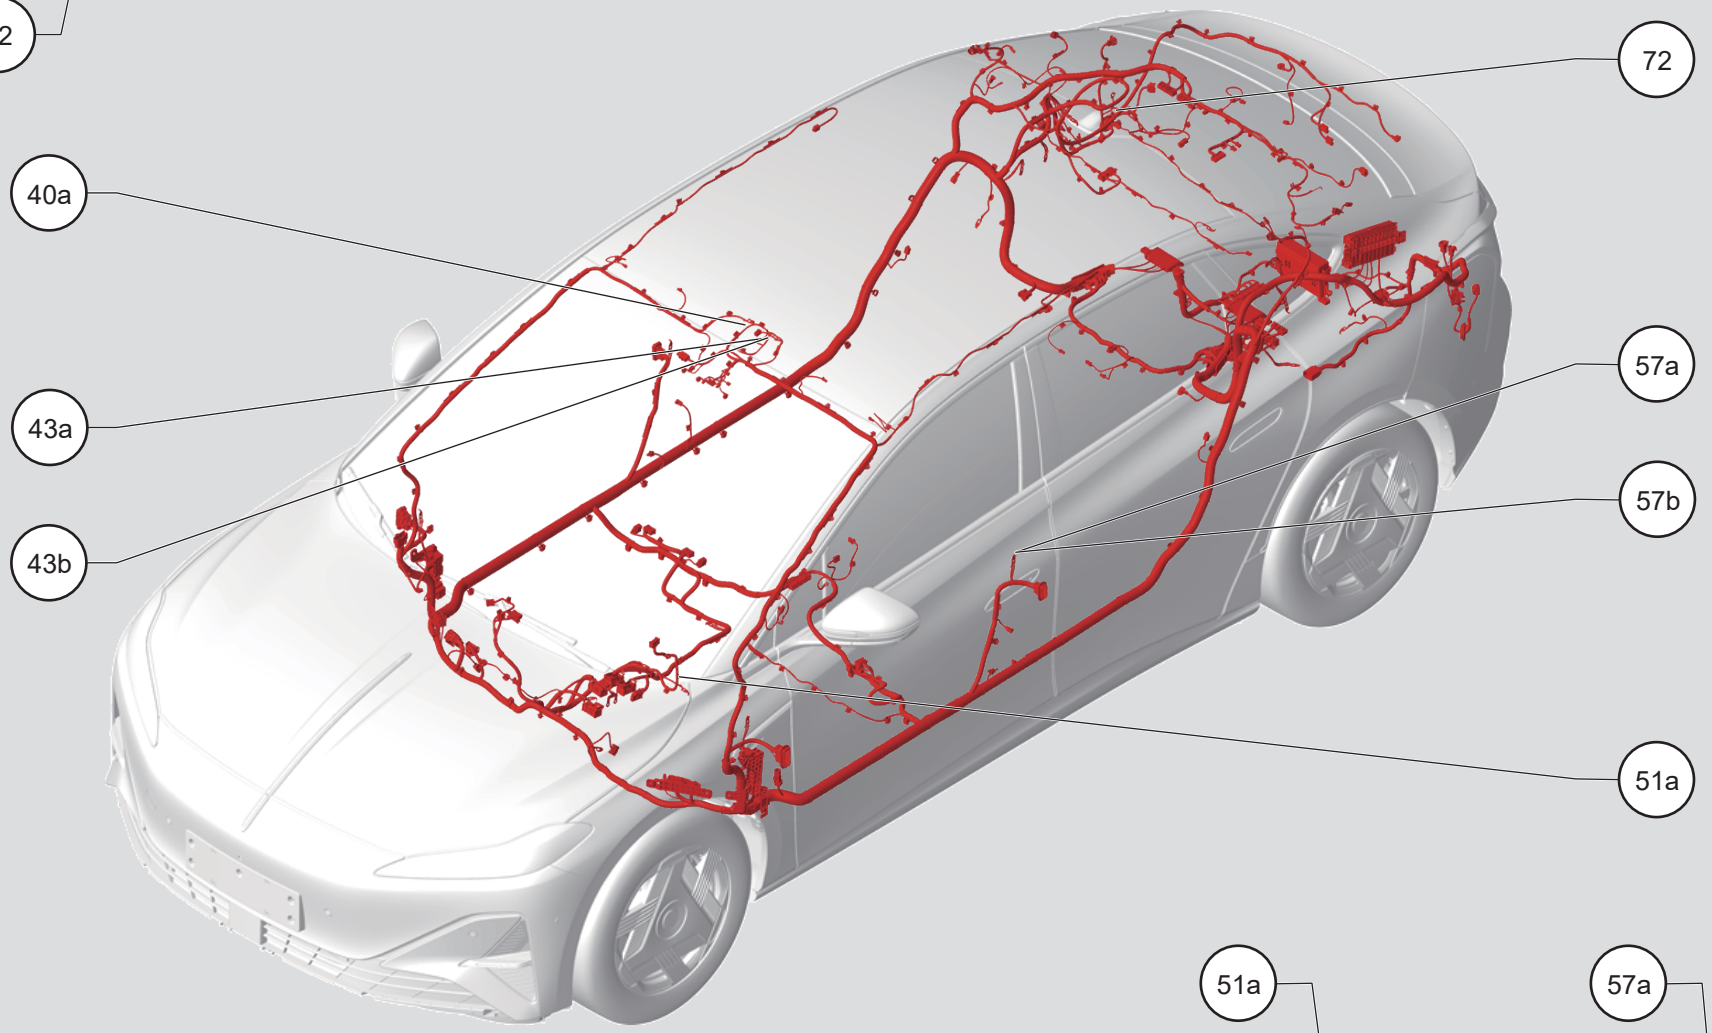

42a
54a
54b
41b
41a
47a

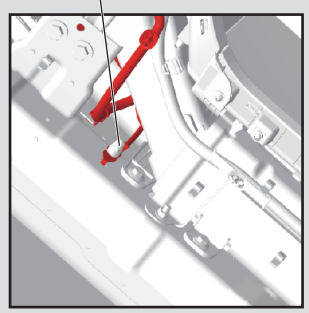

47a

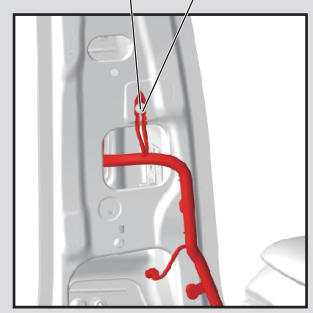

41b
41a

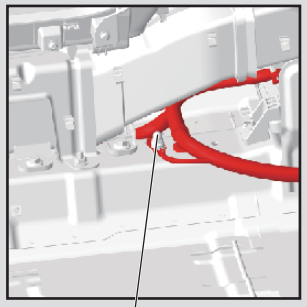

43a
43b
40a

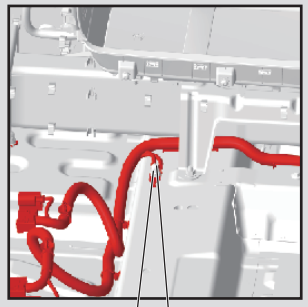

72

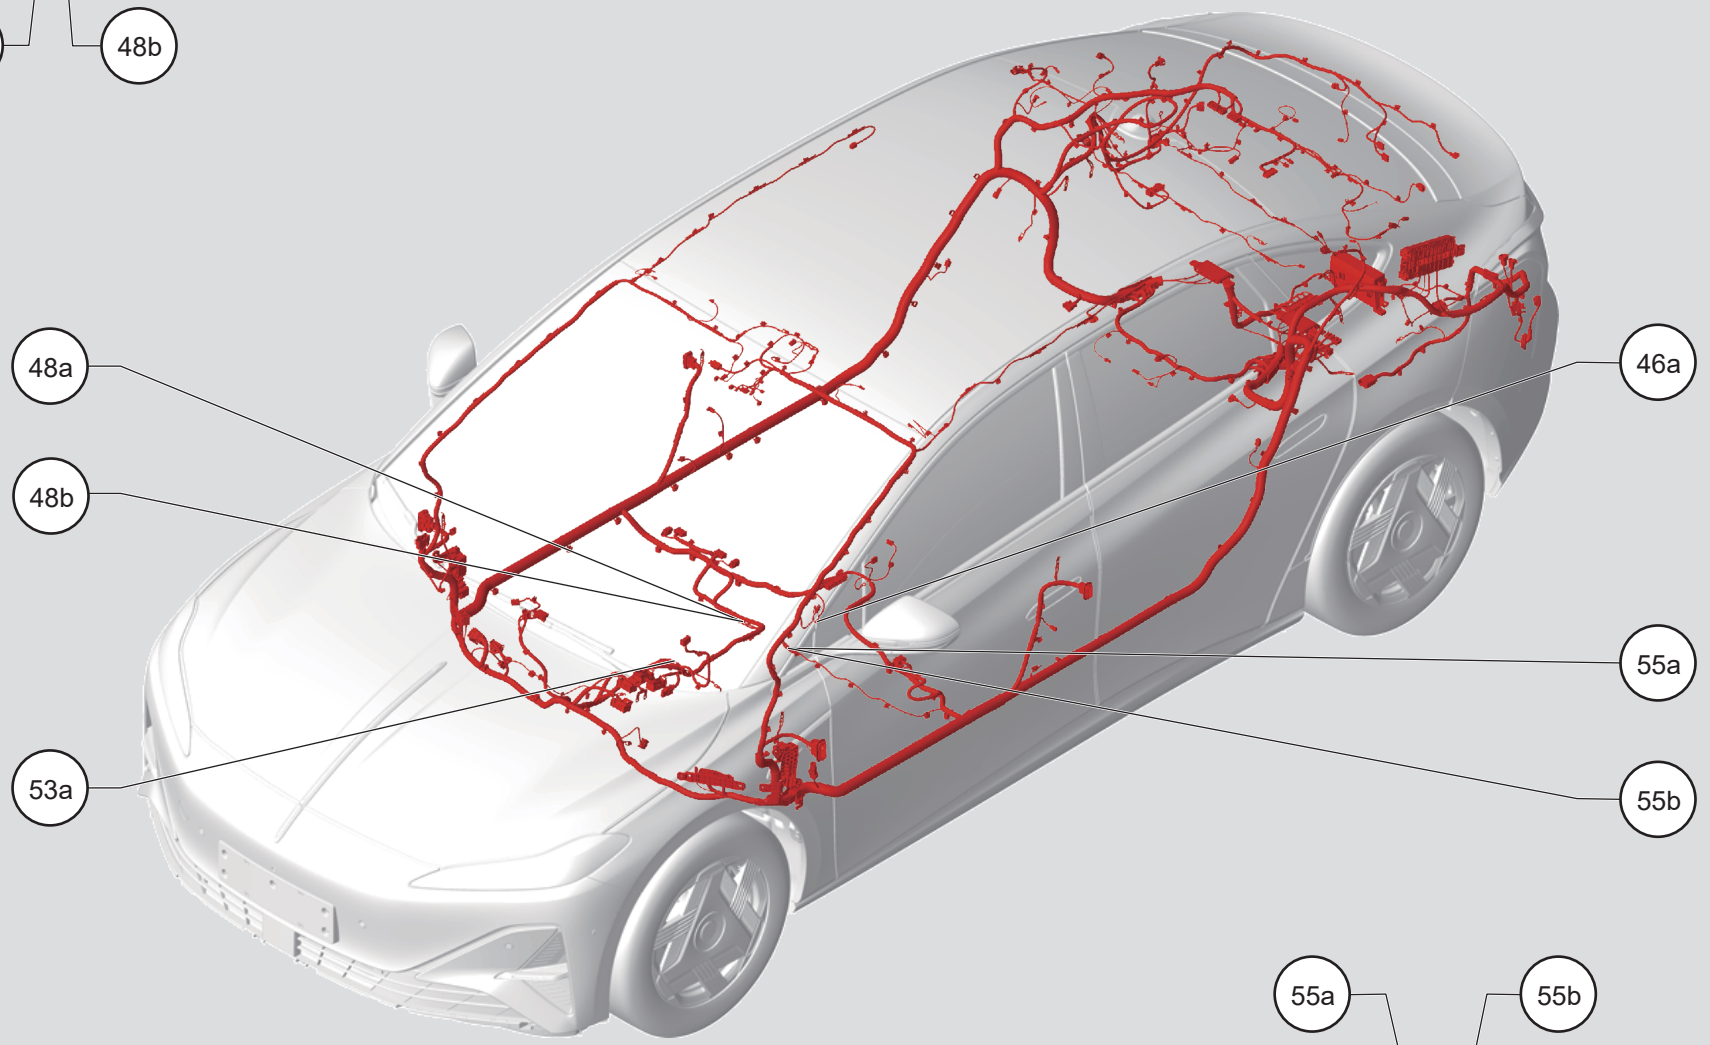

40a
43a
43b
72
57a
57b
51a

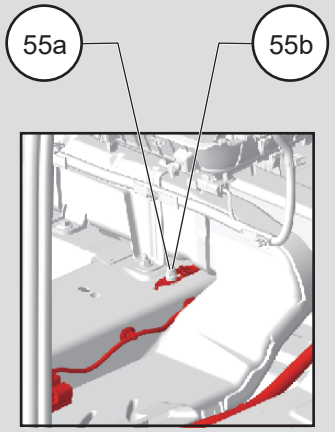

51a

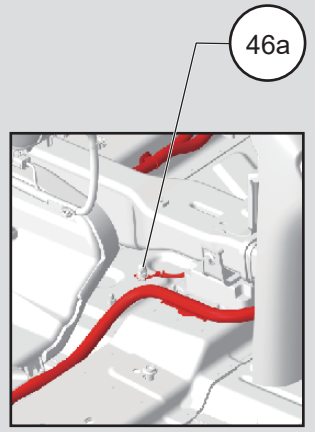

57a
57b

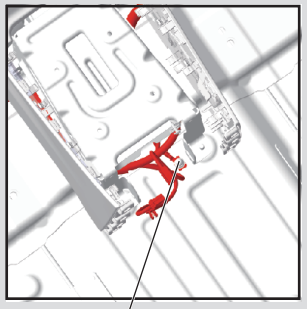

53a

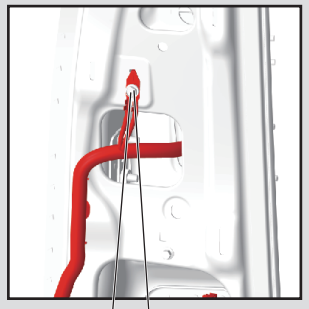

48a
48b

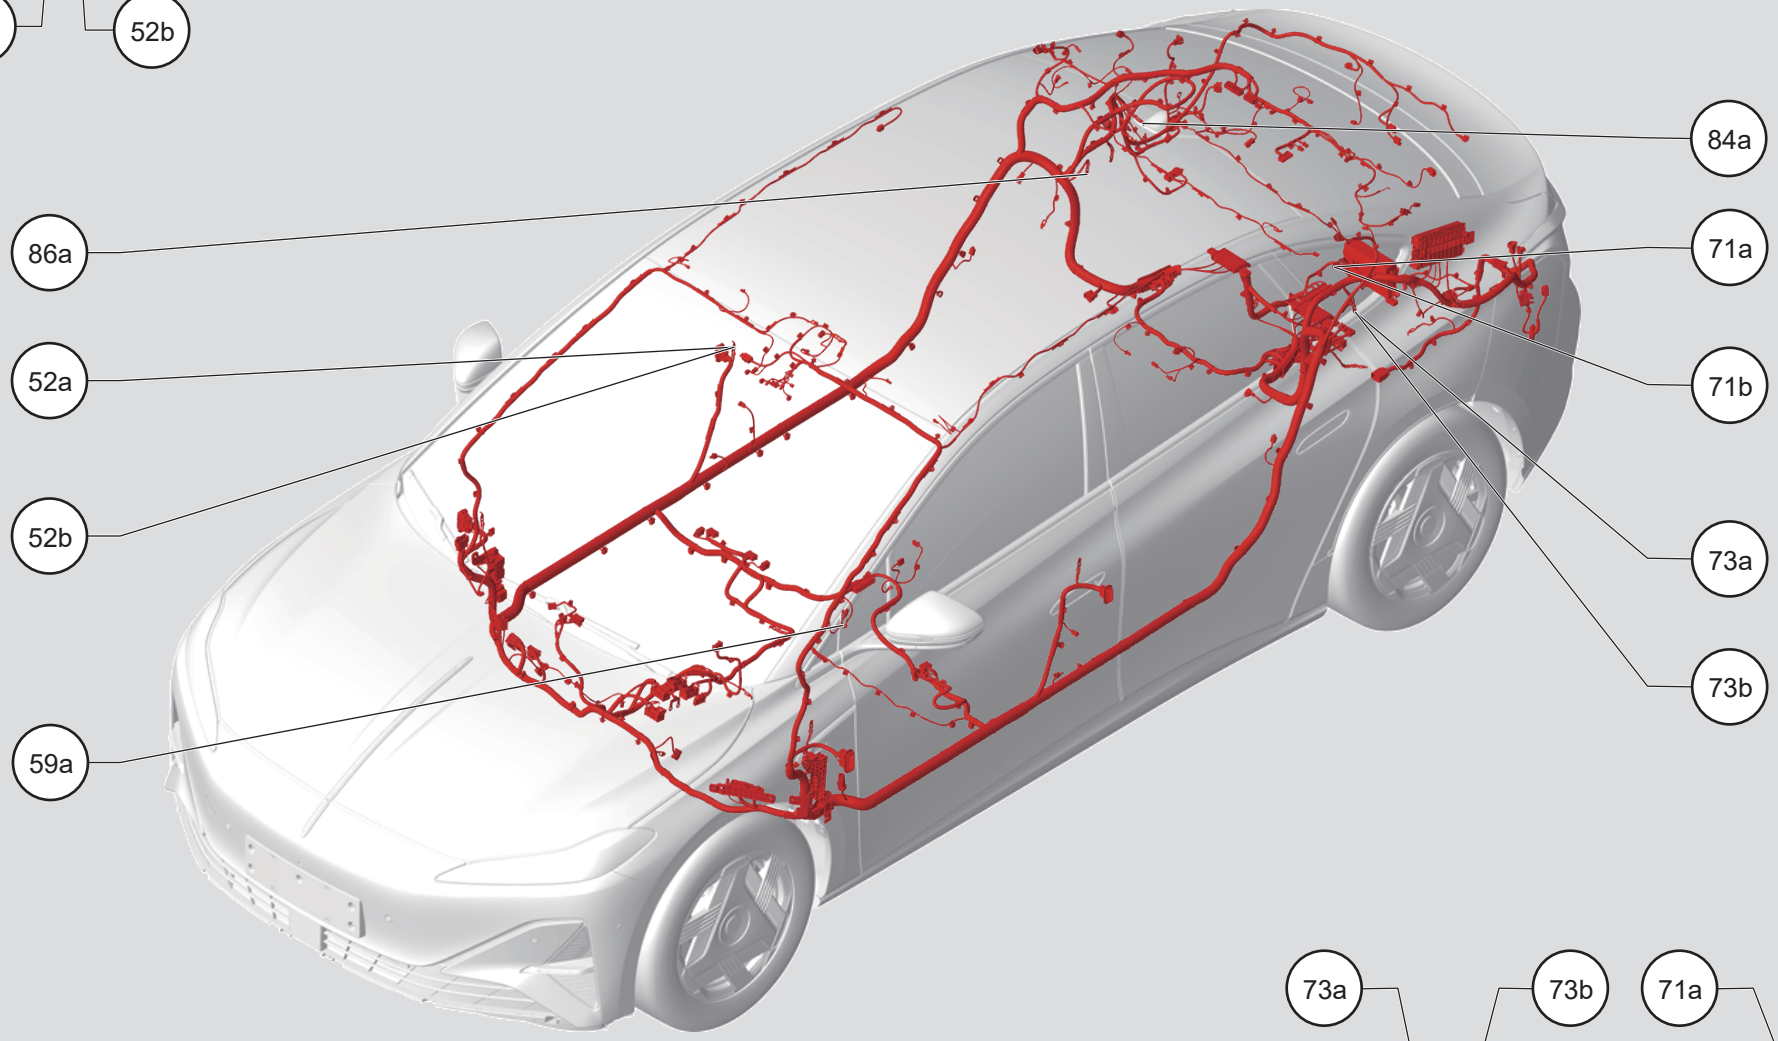

48a
48b
53a
46a
55a
55b

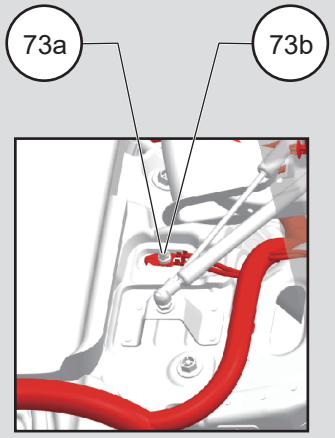

55a
55b

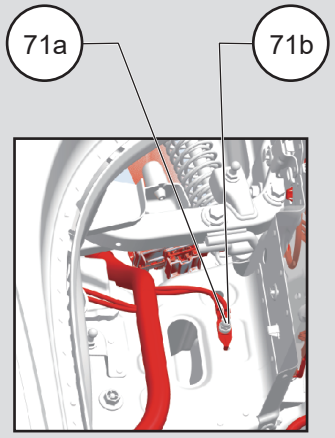

46a

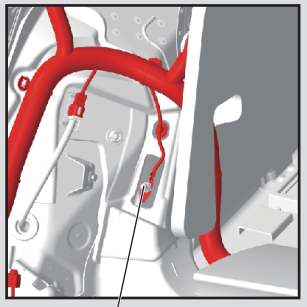

59a


52a
52b

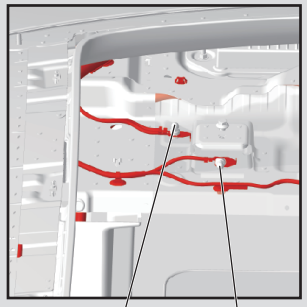

86a
52a
52b
59a
84a
71a
71b
73a
73b


73a
73b


71a
71b

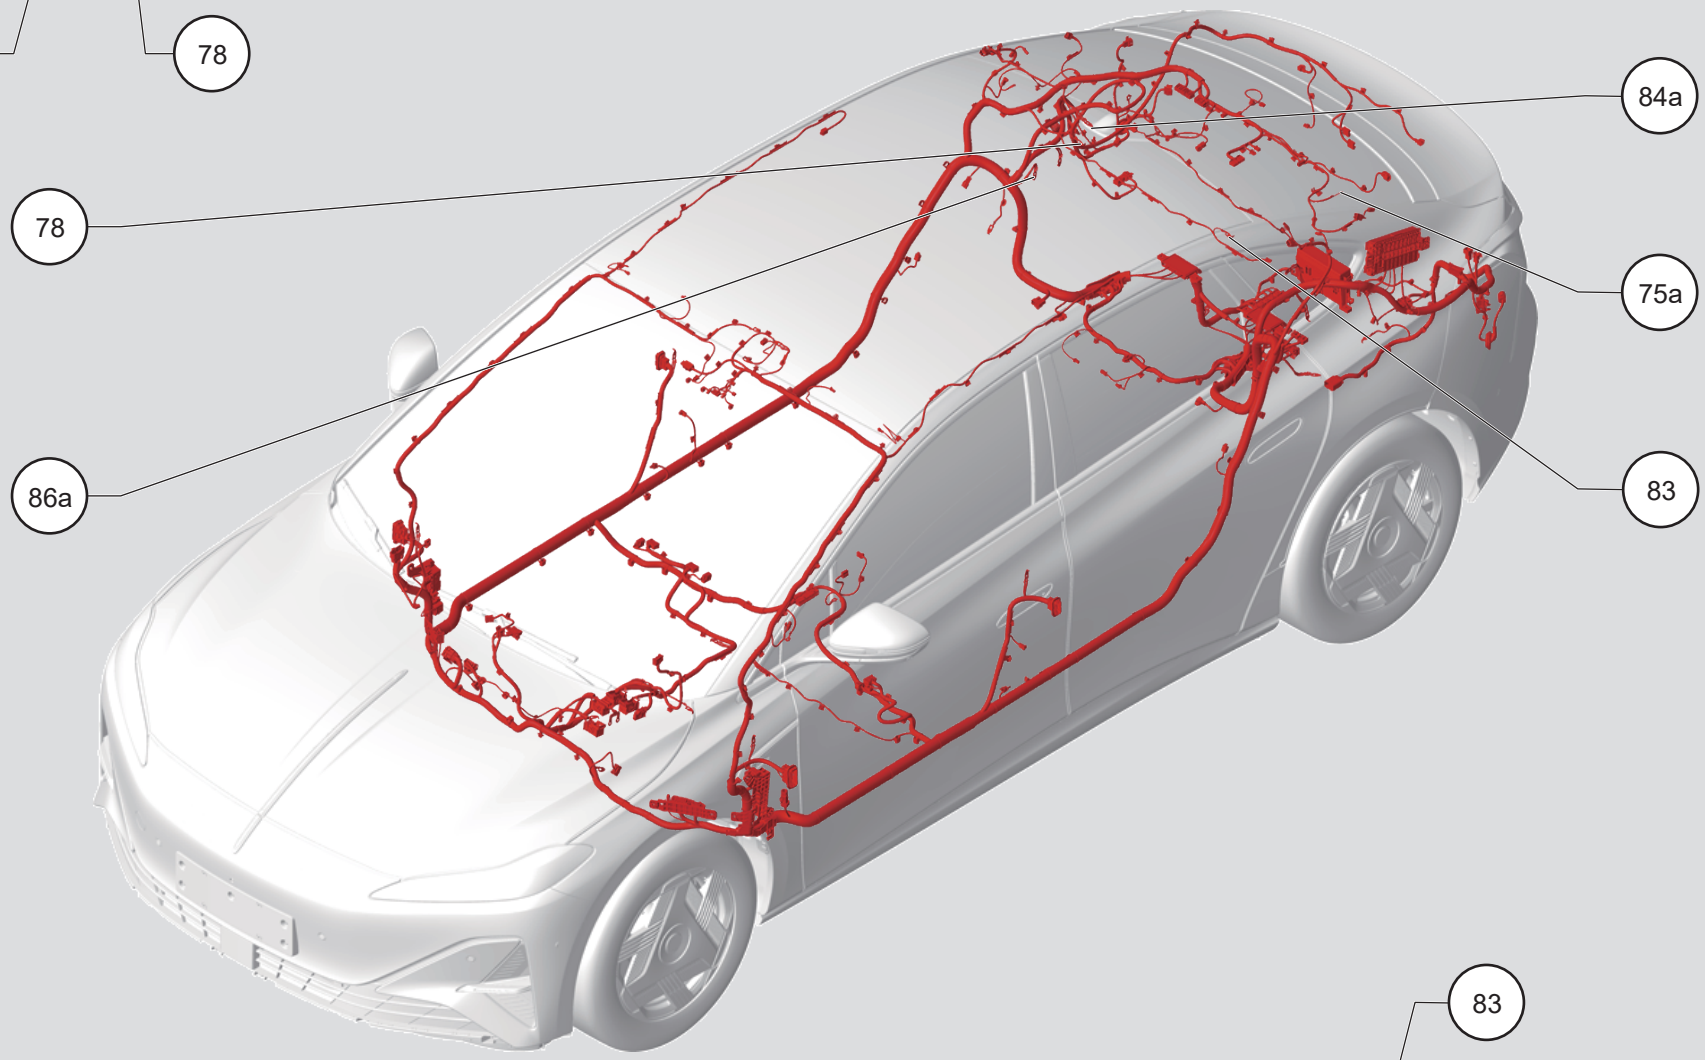


86a



84a

78



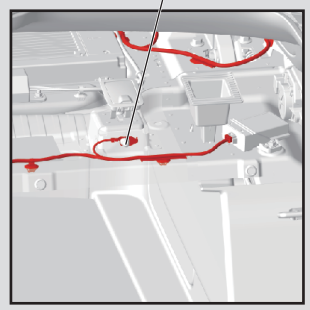
78

86a

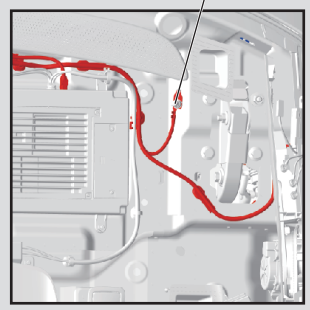
84a

75a

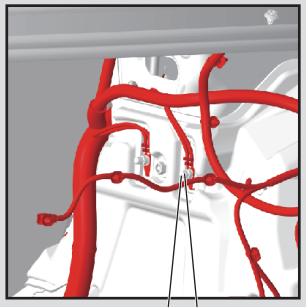
83

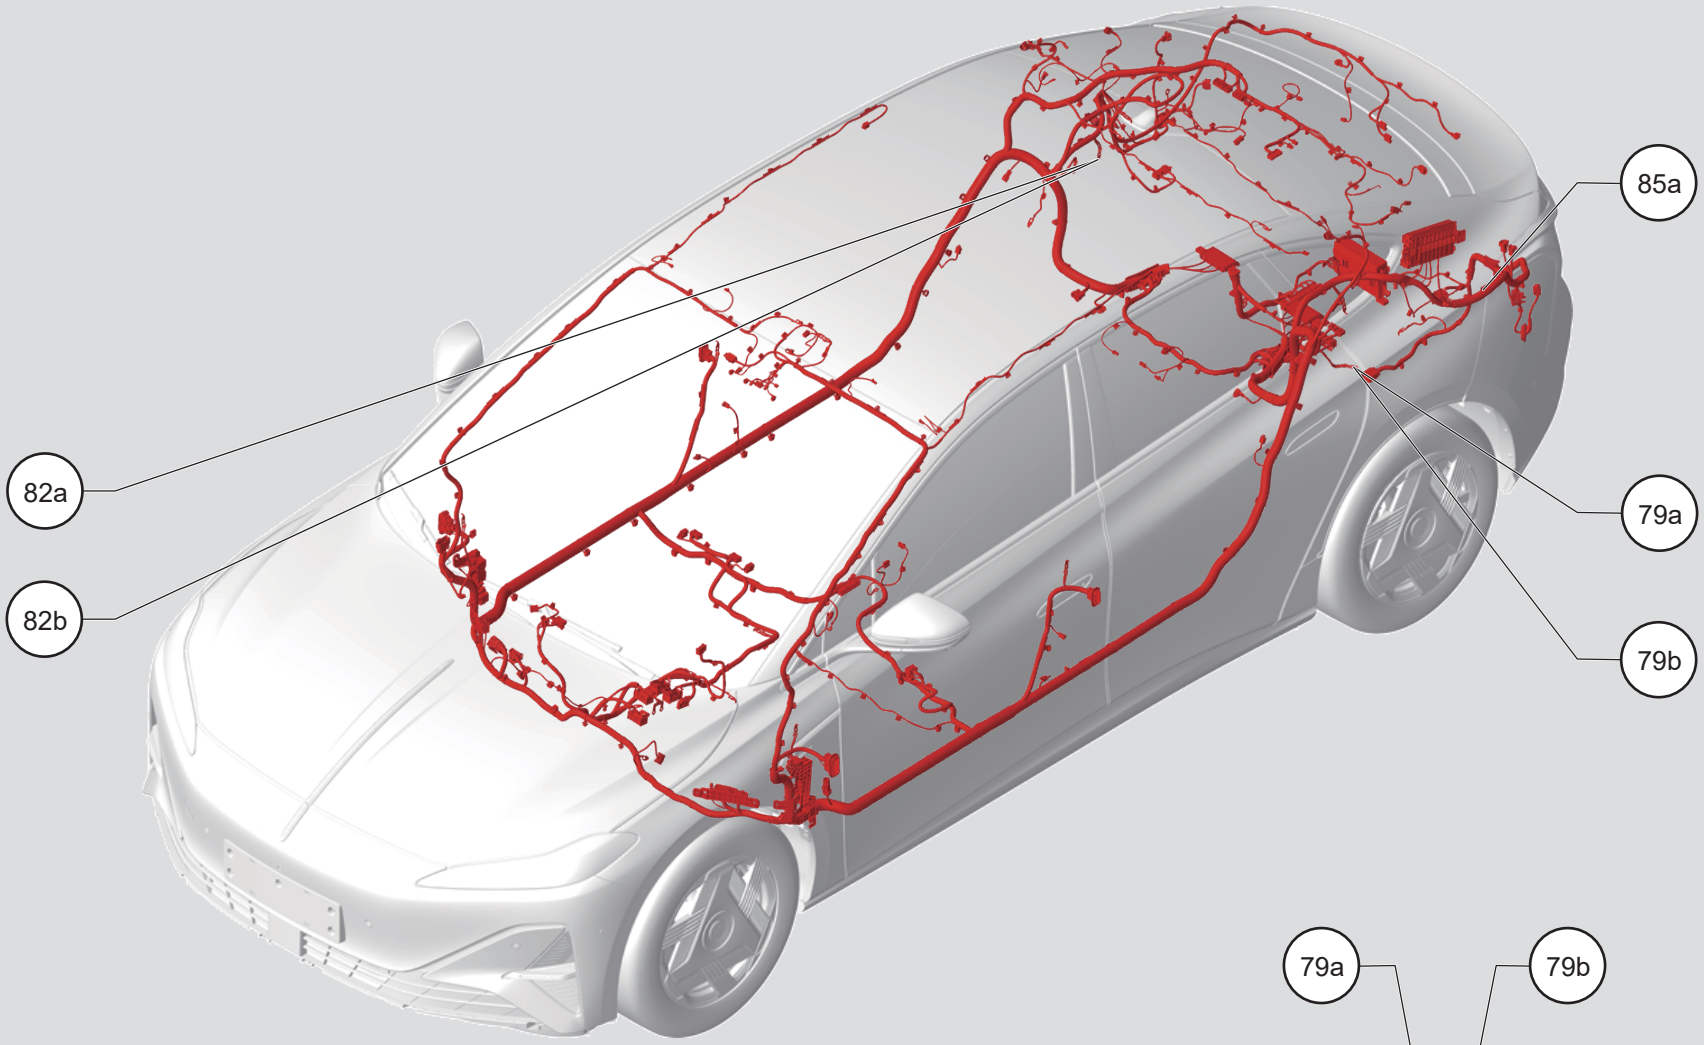


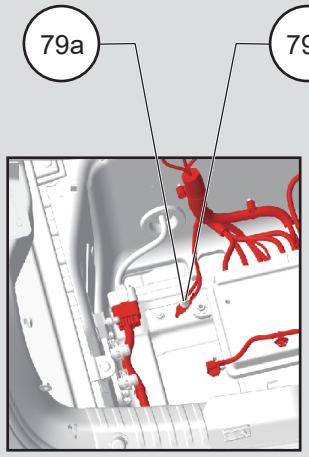
83

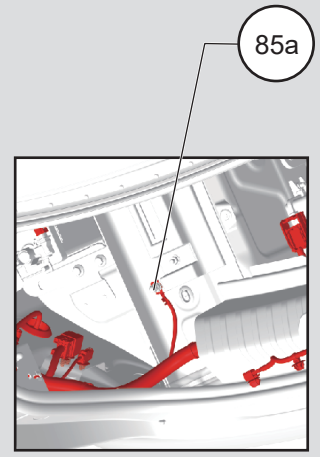


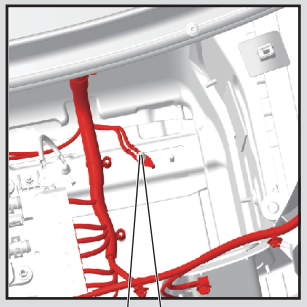
75a

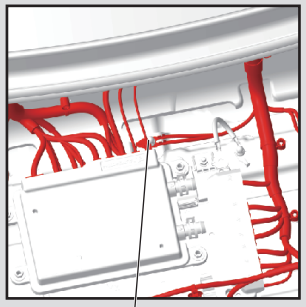

82a
82b

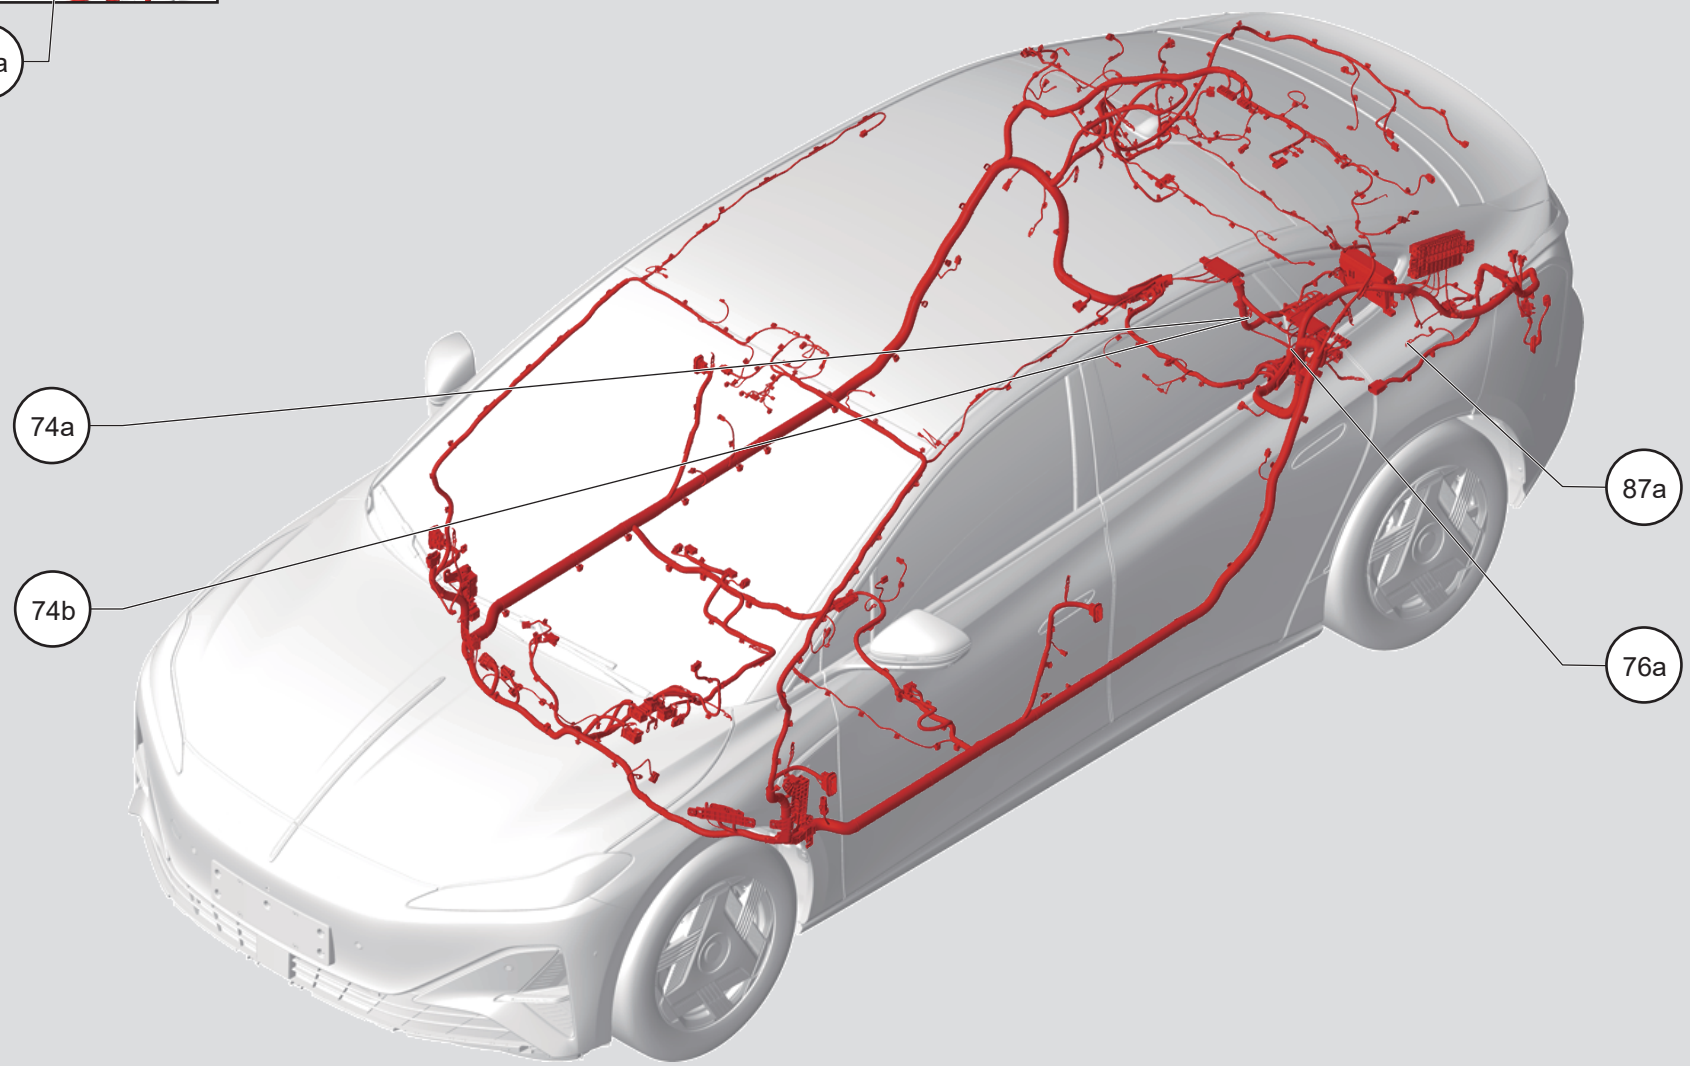

82a
82b
85a
79a
79b

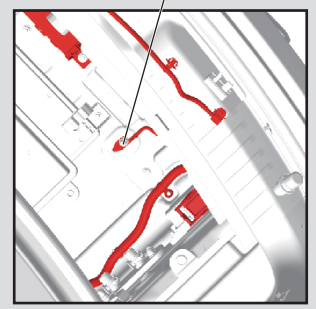

79a
79b

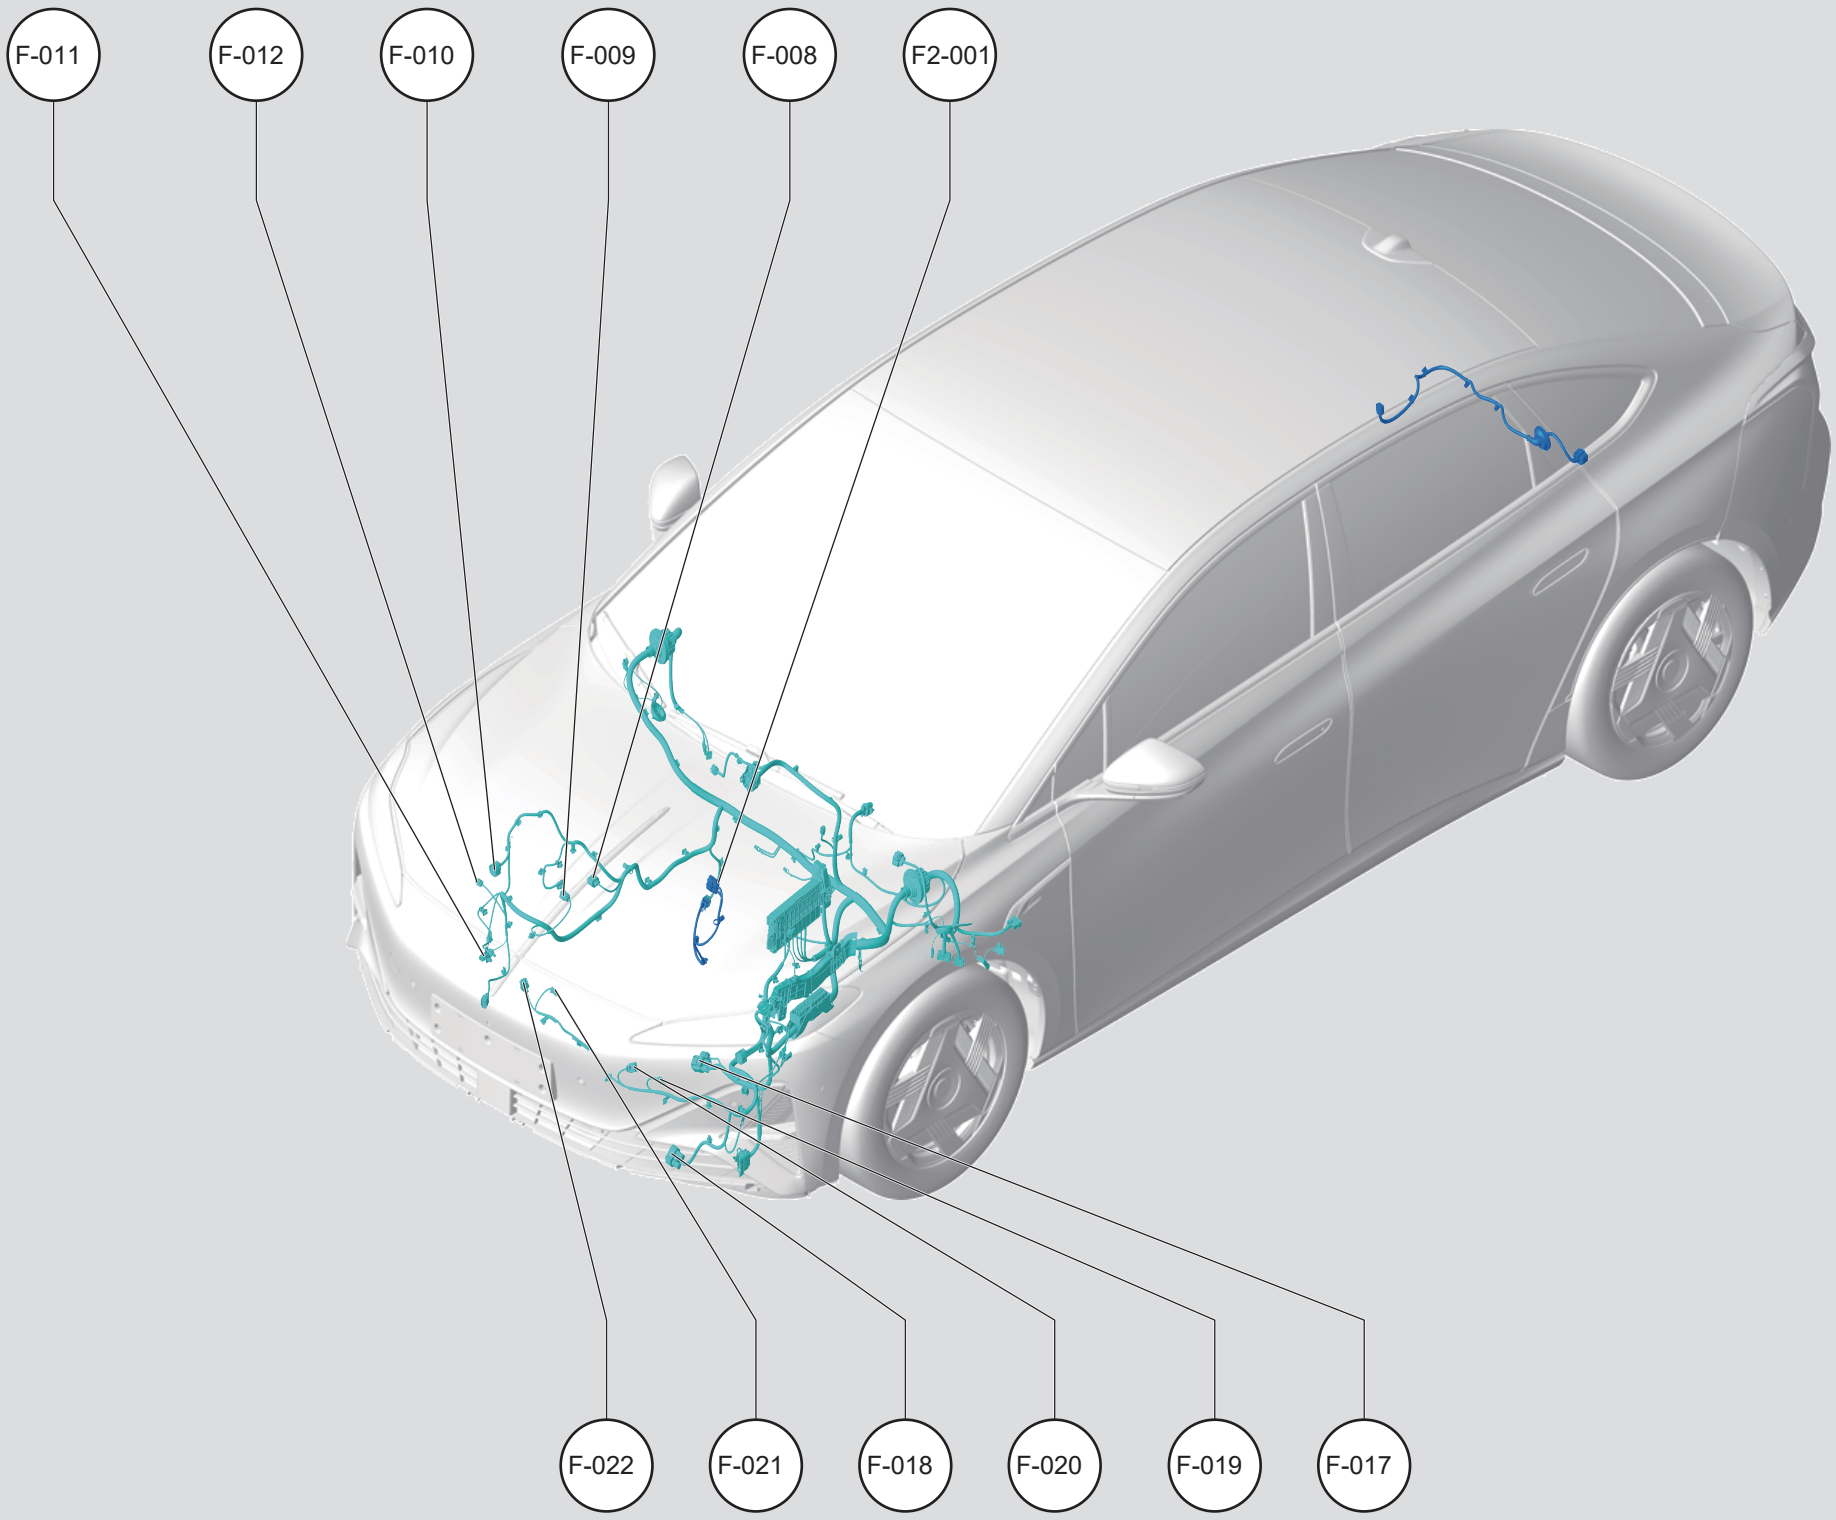

85a


74a
74b


76a


74a
74b
87a
76a


87a



F-008 Washing fluid level sensor
洗涤液位传感器

F-009 Washer pump
洗涤泵

F-010 Combination light FR I
右前组合灯 I

F-011 Passenger side acceleration front collision sensor
乘客侧加速度前碰传感器

F-012 Pedestrian alarm
行人警示器

F-017 Electric power steering control unit B
电动助力转向控制单元B

F-018 Cooling fan
冷却风扇

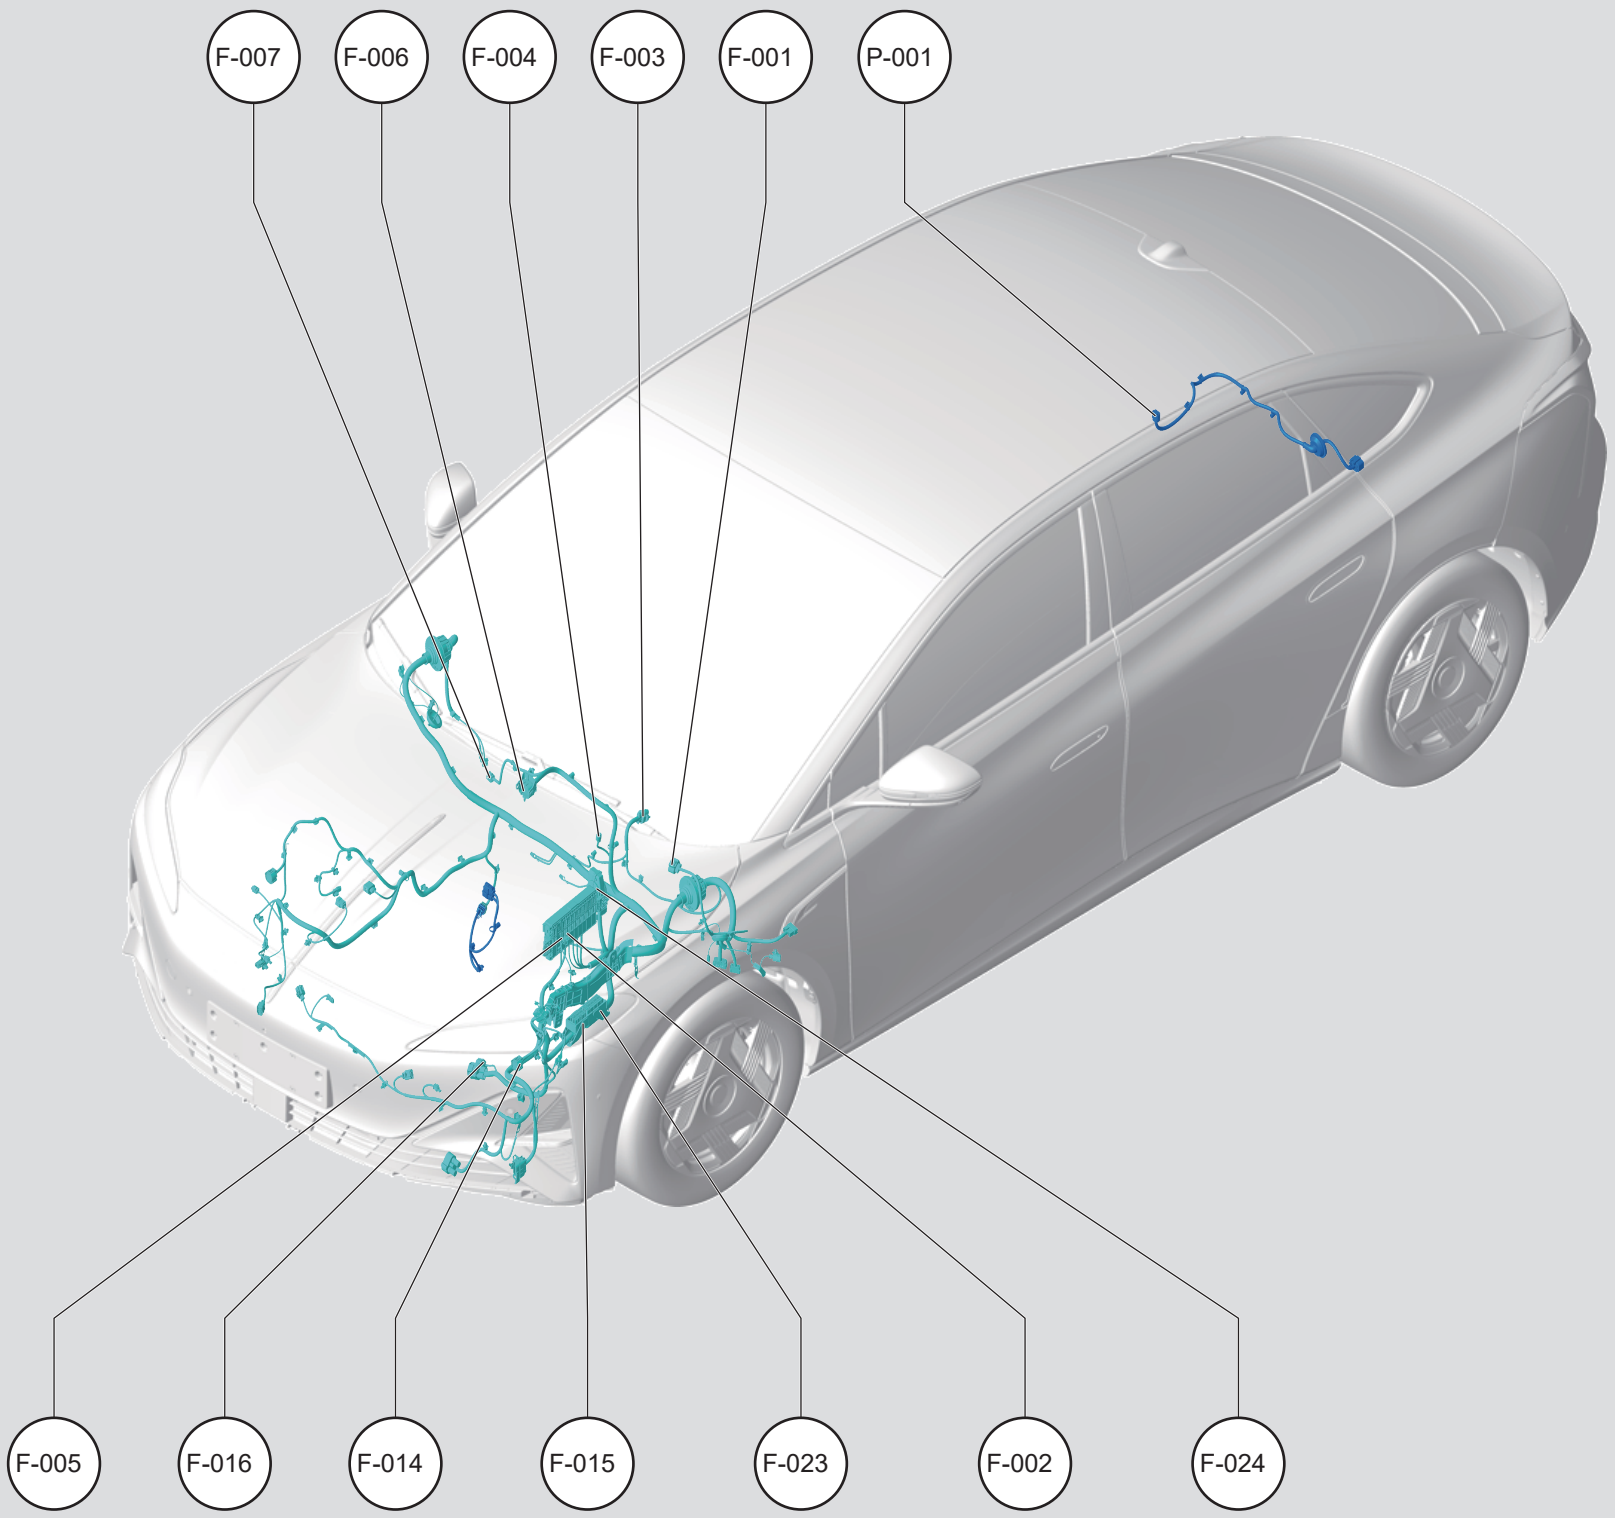
F-019 Driver side acceleration front collision sensor
驾驶员侧加速度前碰传感器

F-020 Low pitched horn
低音喇叭

F-021 Hood lock state SW
发罩锁状态开关

F-022 High pitched horn
高音喇叭

F2-001 A/C compressor
空调压缩机



F-001 Front wiper
前刮水器

F-002 Front intelligent area control unit E
前智能区域控制单元E

F-003 Heater PTC1
风暖PTC1

F-004 Brake fluid level sensor
制动液位传感器

F-005 Refrigerant temp sensor
制冷剂温度传感器

F-006 Thermal management module
热管理模块

F-007 Water heater PTC
水暖PTC

F-014 Combination light FL I
左前组合灯 I

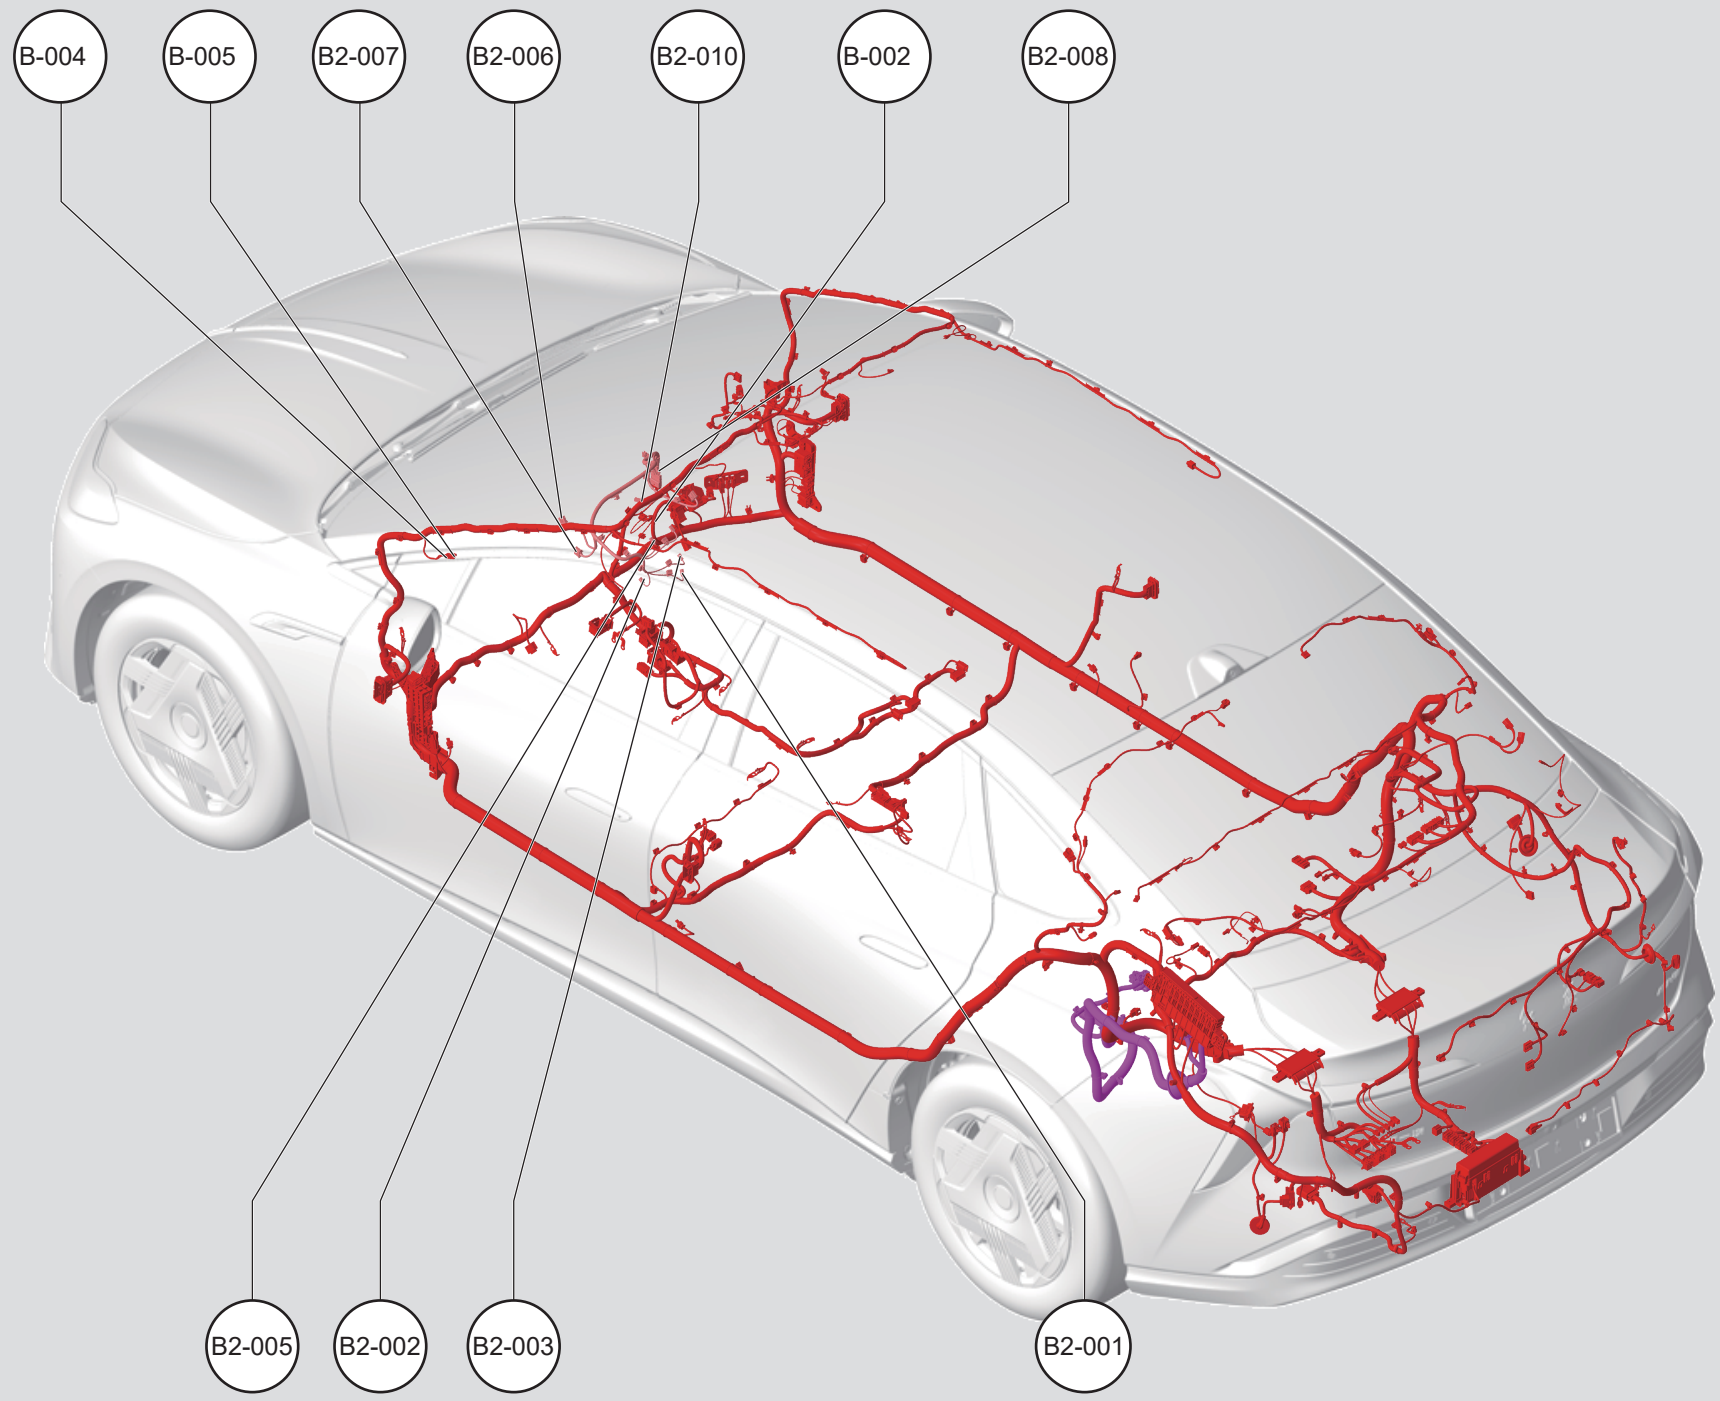
F-015 Front intelligent area control unit C
前智能区域控制单元C

F-016 Electric power steering control unit A
电动助力转向控制单元A

F-023 Front intelligent area control unit B
前智能区域控制单元B

F-024 Integrated brake control system IBC
集成式制动控制器

P-001 Electric rear drive system inverter
后驱电驱动系统逆变器



B-002 Driver sun visor switch
驾驶席遮阳板开关

B-004 Driver monitoring camera A
驾驶员监测摄像头A

B-005 Driver monitoring camera B
驾驶员监测摄像头B

B2-001 Heater PTC2
风暖PTC2

B2-002 Left foot duct temperature sensor
左侧吹脚风温传感器

B2-003 Right foot duct temperature sensor
右侧吹脚风温传感器

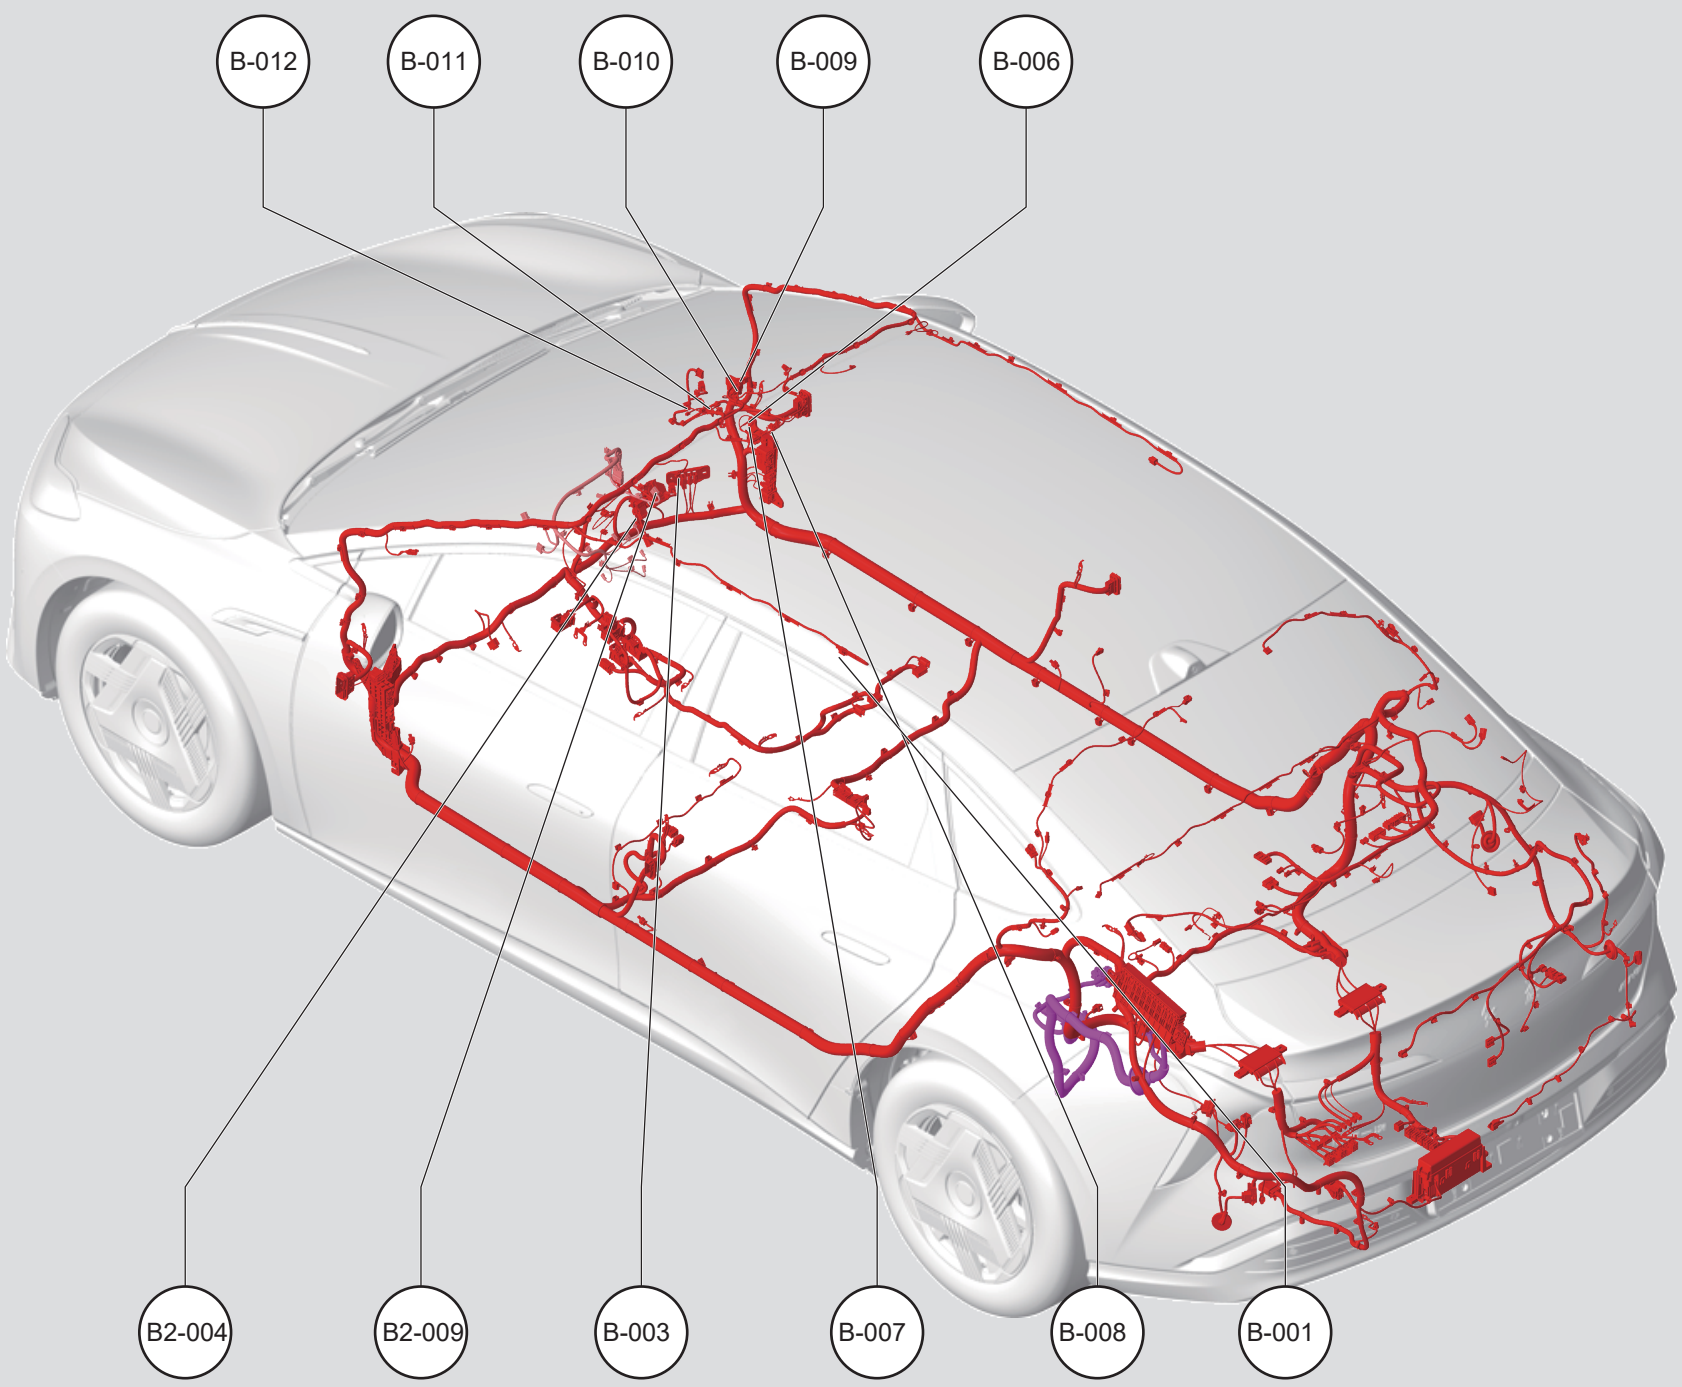
B2-005 Left face duct temperature sensor
左侧吹面风温传感器

B2-006 Left temperature damper motor
左温度风门电机

B2-007 Defroster motor
除霜电机

B2-008 Right temperature damper motor
右温度风门电机

B2-010 Evaporator temperature sensor
蒸发器温度传感器



B-001 Left side curtain shield airbag
左侧侧气帘

B-003 Vanity mirror light FL
左前化妆镜灯

B-006 Passenger monitoring camera A
副驾驶员监测摄像头A

B-007 Passenger monitoring camera B
副驾驶员监测摄像头B

B-008 Roof switch
顶棚开关

B-009 USB-TYPE A port - DJ
USB-TYPE A口-DJ

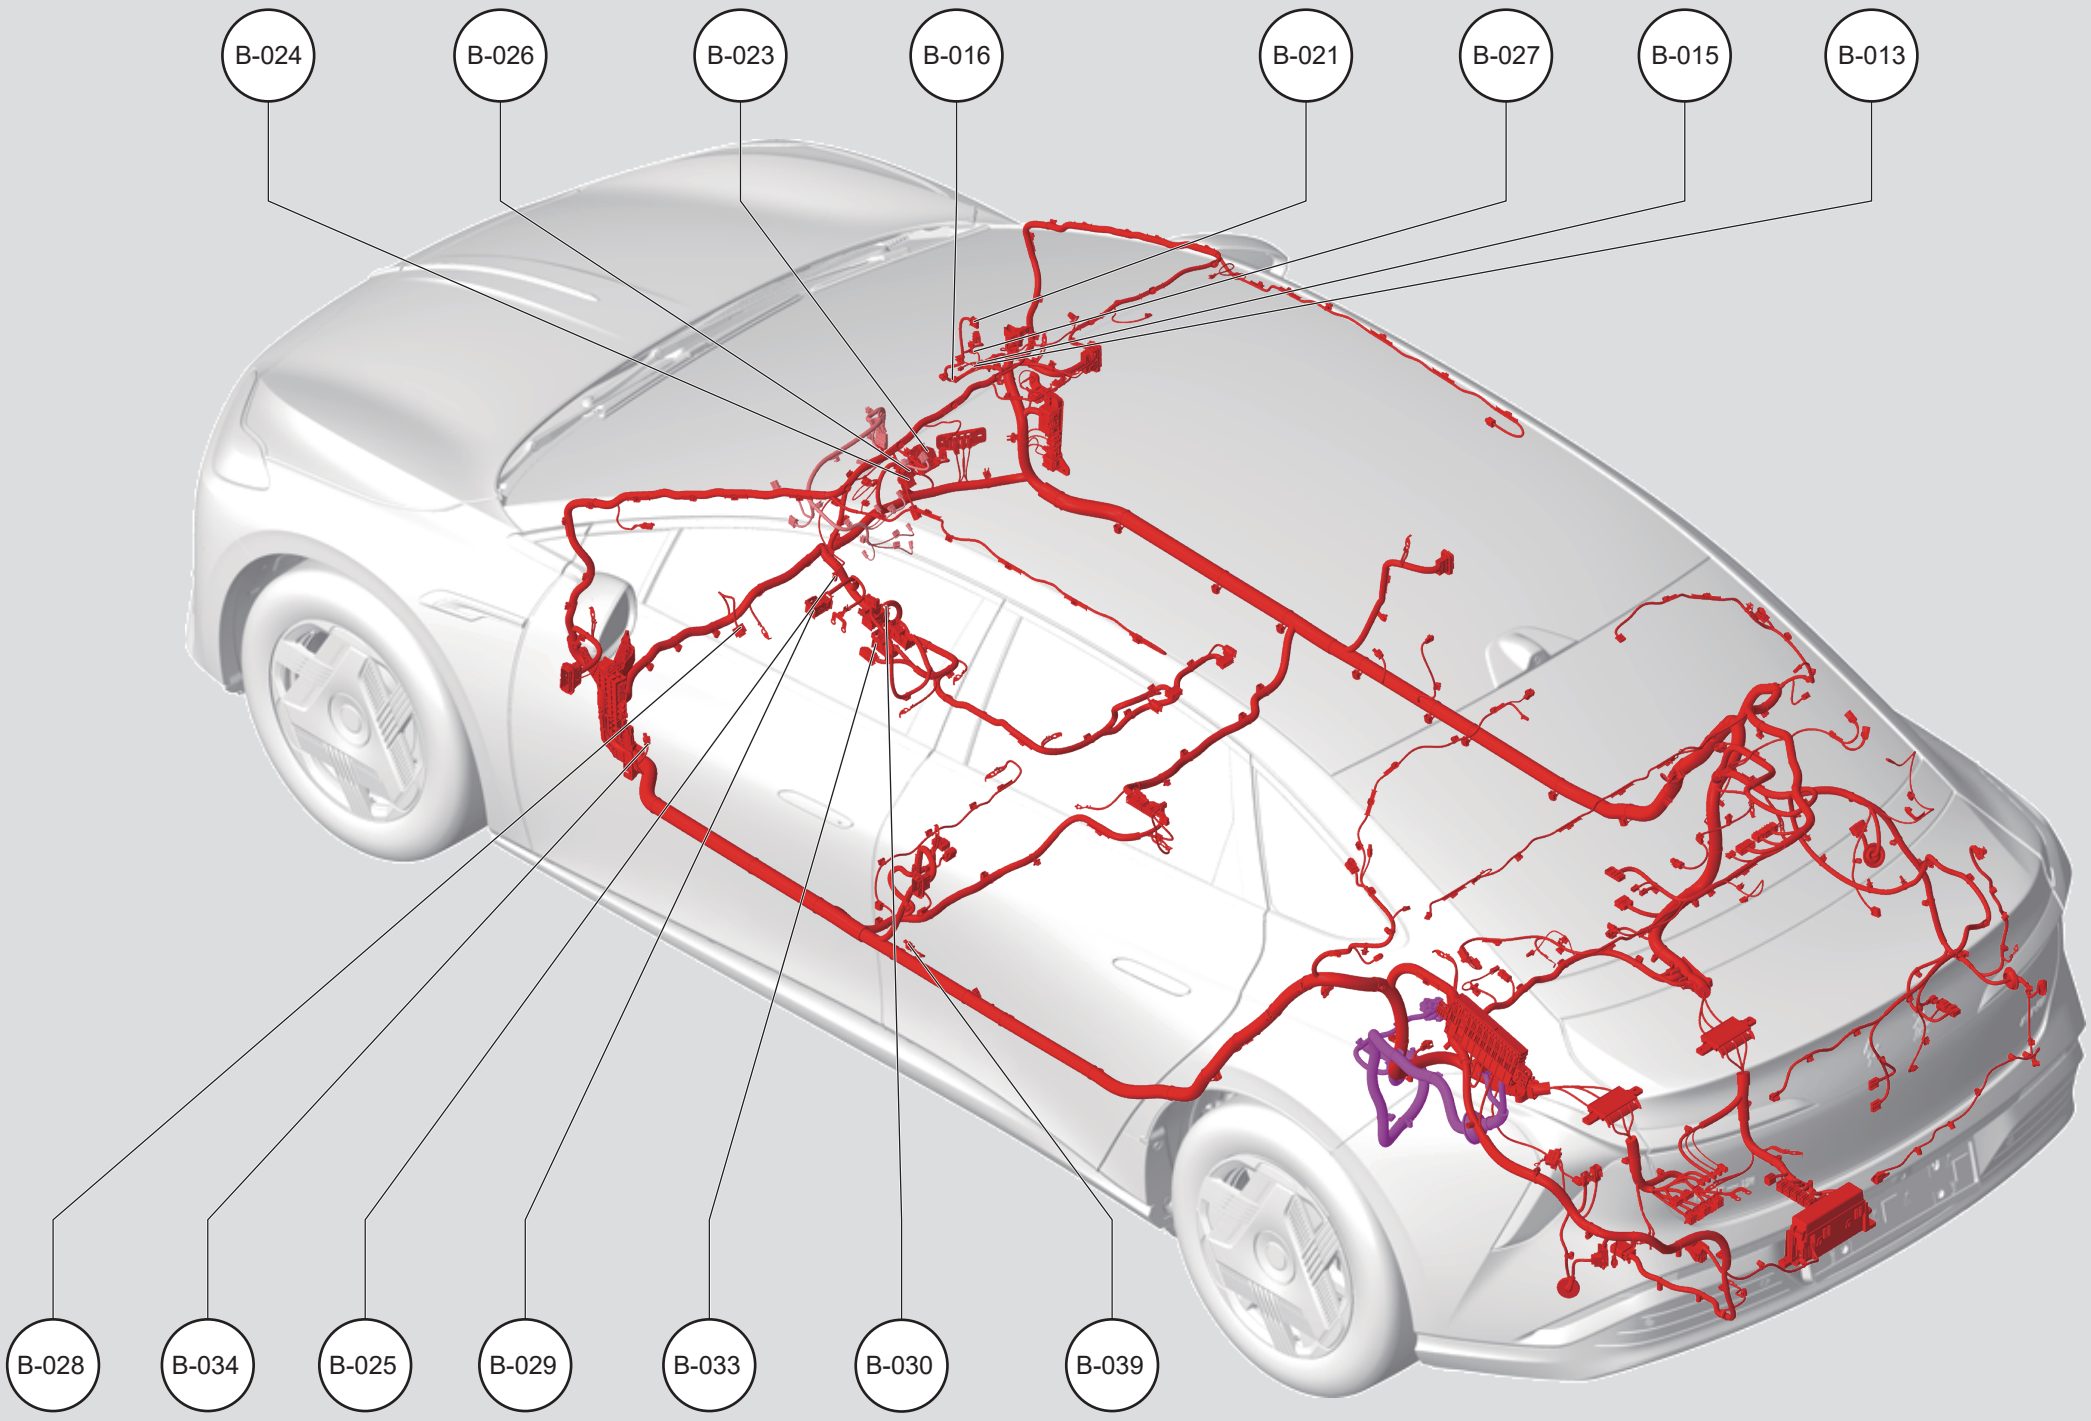
B-010 Front view right DJ camera
前视右目DJ摄像头

B-011 Intelligent camera A
智能摄像头A

B-012 Sunlight rain sensor - L2
阳光雨量传感器-L2

B2-004 Right face duct temperature sensor
右侧吹面风温传感器

B2-009 Mode damper motor
模式风门电机



B-013 Anti-fog sensor
防雾传感器

B-015 Sunlight rain sensor - DJ
阳光雨量传感器-DJ

B-016 Front view left DJ camera
前视左目DJ摄像头

B-021 Inner/outer circulation damper motor
内外循环风门电机

B-023 Intelligent vehicle control platform unit (VDC) A
智能车控平台单元（VDC）A

B-024 Intelligent vehicle control platform unit (VDC) B
智能车控平台单元（VDC）B

B-025 Center intelligent area control unit B
中智能区域控制单元B

B-026 Official vehicle debug OBD II
正式车调试OBD Ⅱ

B-027 Blower motor
鼓风机电机

B-028 Electronic accelerator pedal
电子油门踏板

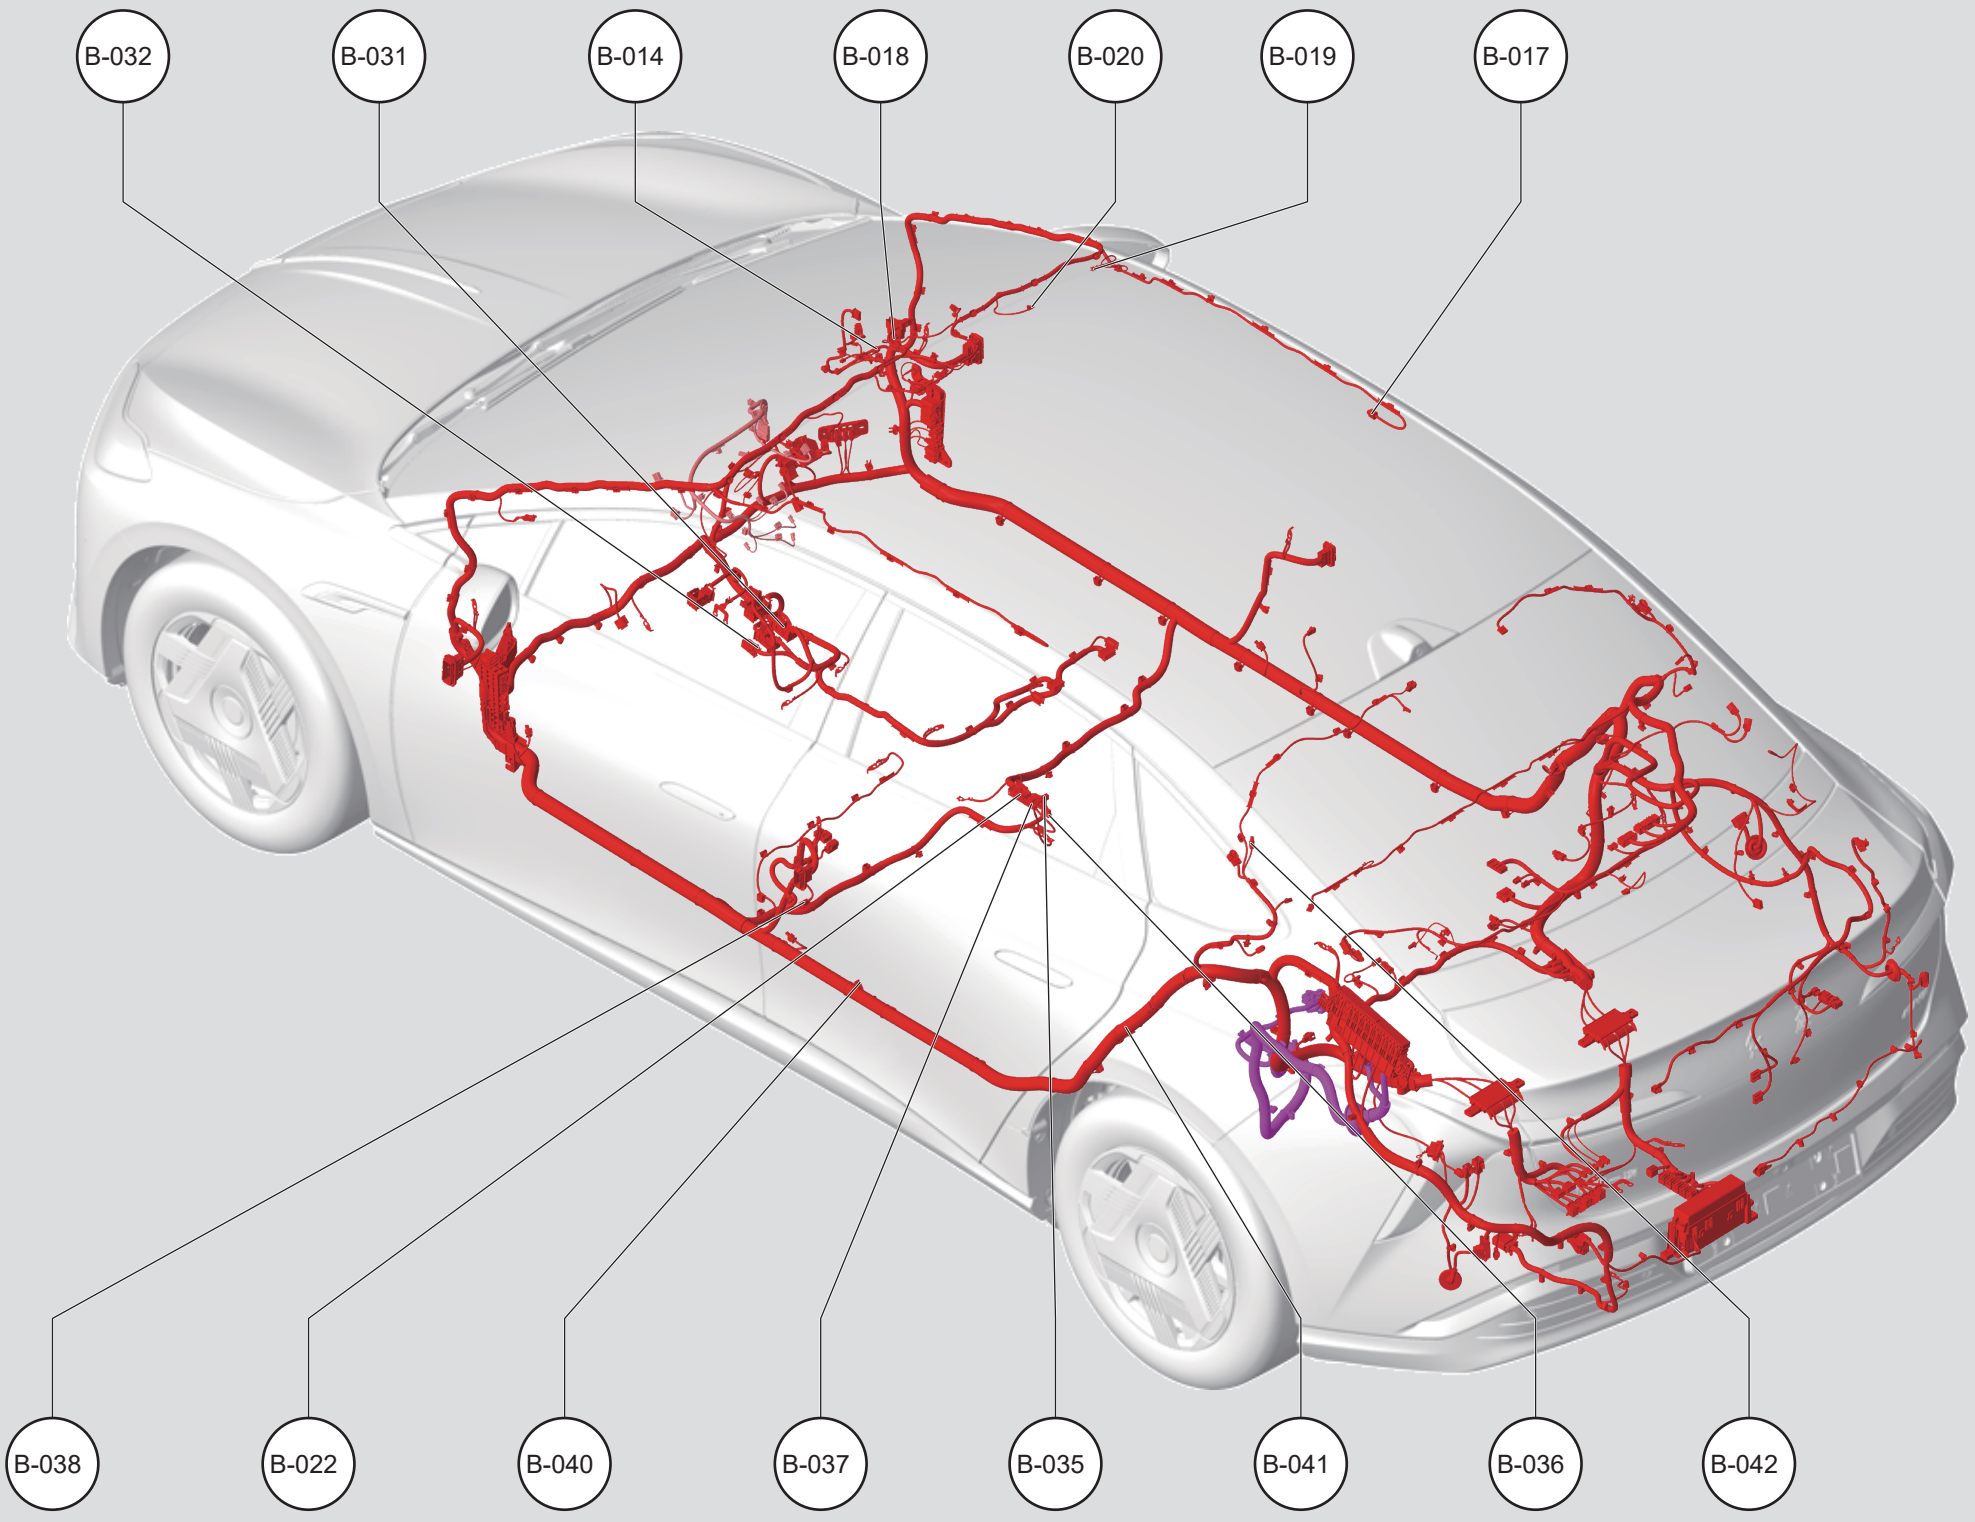
B-029 Center intelligent area control unit D
中智能区域控制单元D

B-030 Center intelligent area control unit E
中智能区域控制单元E

B-033 Center intelligent area control unit G
中智能区域控制单元G

B-034 Alcolock
酒精锁

B-039 Driver acceleration side collision sensor
驾驶员加速度侧碰传感器



B-014 Front view monocular DJ camera
前视单目DJ摄像头

B-017 Right side curtain shield airbag
右侧侧气帘

B-018 Intelligent camera B
智能摄像头B

B-019 Front passenger sun visor switch
副驾驶席遮阳板开关

B-020 Vanity mirror light FR
右前化妆镜灯

B-022 Airbag control unit (ACU) B
安全气囊控制单元（ACU）B

B-031 Center intelligent area control unit H
中智能区域控制单元H

B-032 Center intelligent area control unit F
中智能区域控制单元F

B-035 Dual USB
双路USB

B-036 Backup power supply
备用电源

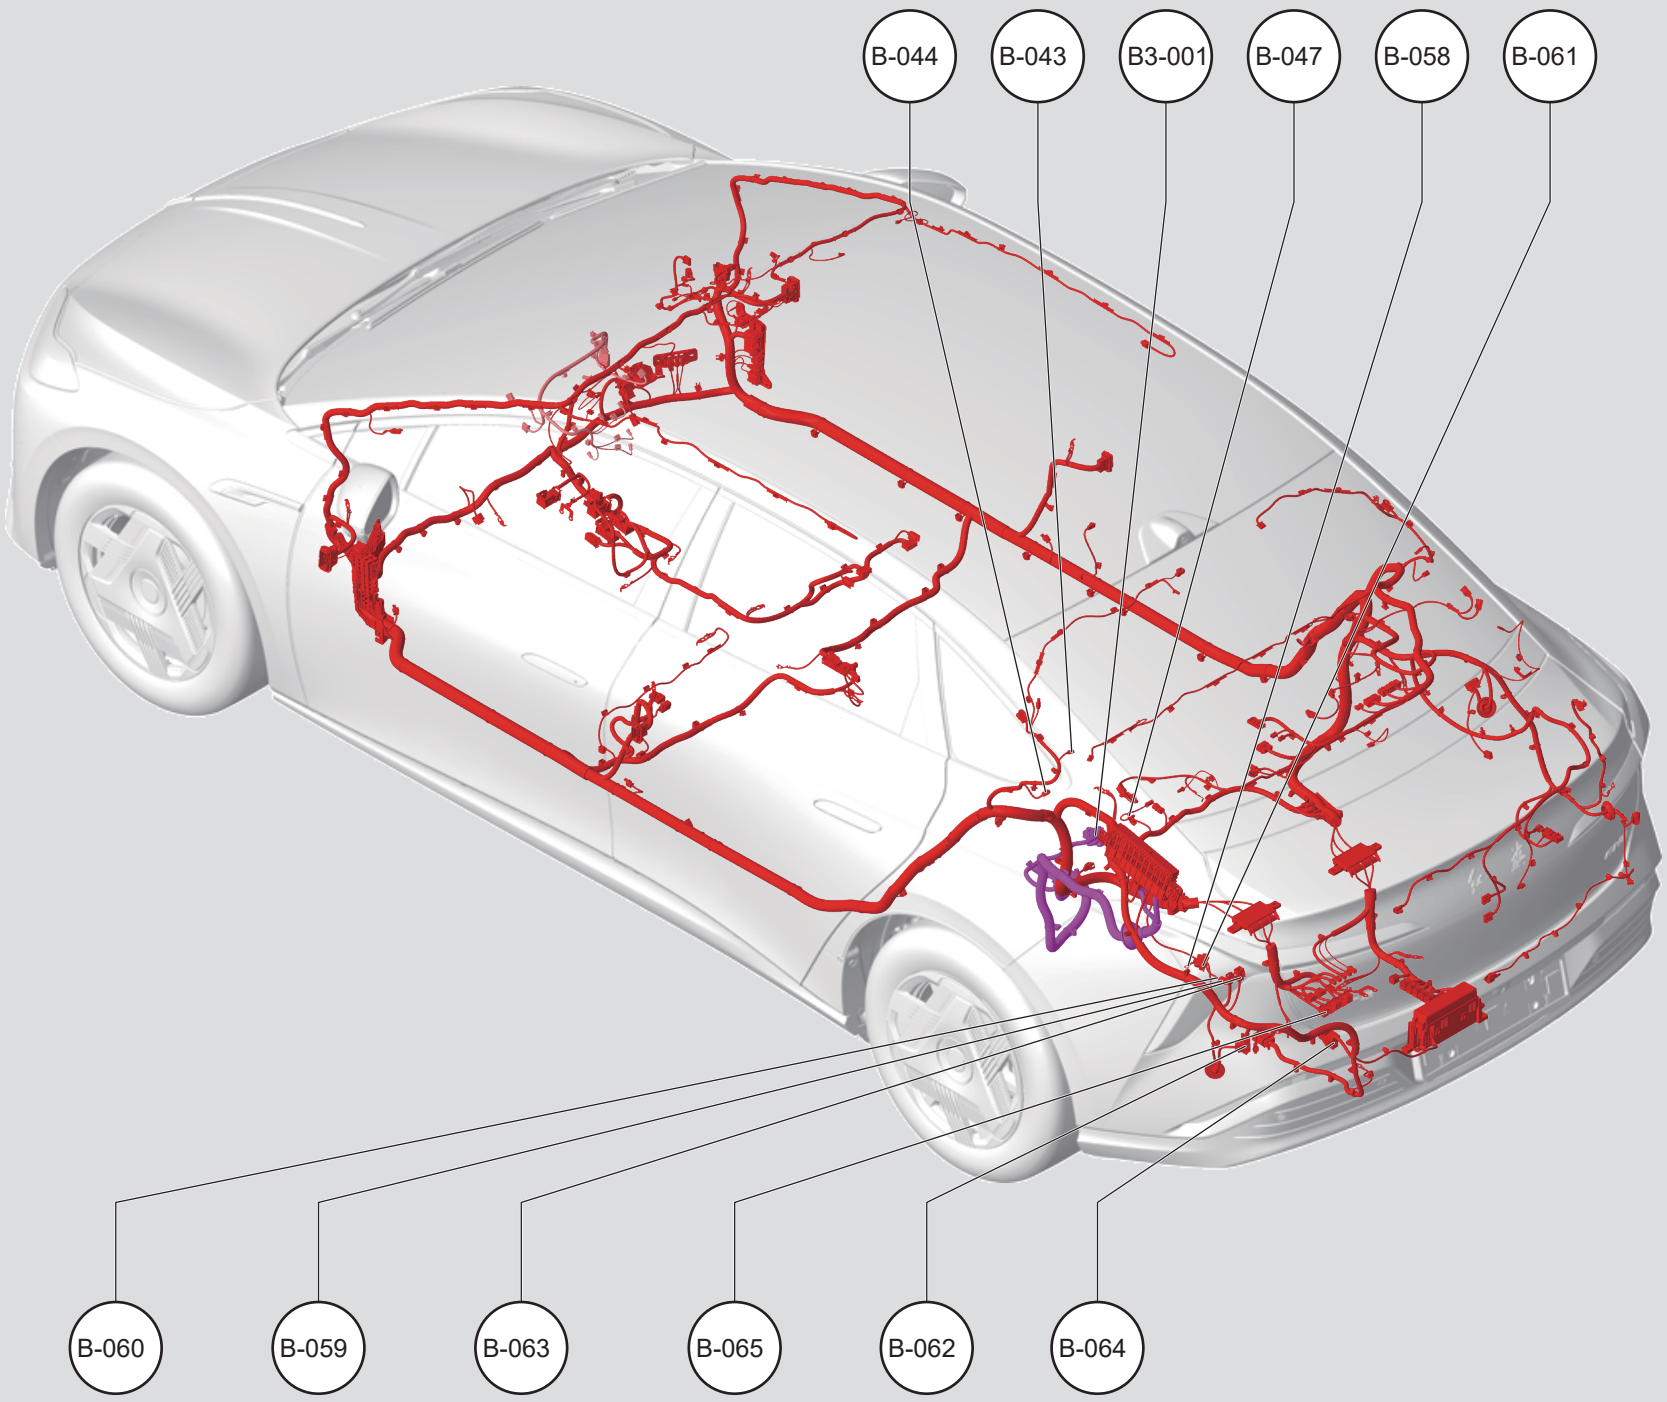
B-037 Airbag control unit (ACU) A
安全气囊控制单元（ACU）A

B-038 Driver seat belt pretensioner
驾驶员安全带预紧

B-040 Driver seat belt end plate pretensioner
驾驶员安全带端片预紧

B-041 Seat airbag RL
左后座椅气囊

B-042 Left GNSS - inertial navigation
左GNSS-惯导



B-043 Left surround mid tweeter
左环绕中高音扬声器

B-044 Seat belt pretensioner RL
后排左侧安全带预紧

B-047 Rear center seat belt buckle
后排中间安全带锁扣

B-058 Battery distribution box to battery sensor
蓄电池配电盒接蓄电池传感器

B-059 Battery sensor
蓄电池传感器

B-060 Combination light RL I
左后组合灯 I

B-061 Official vehicle debug OBD Ⅲ
正式车调试OBDⅢ

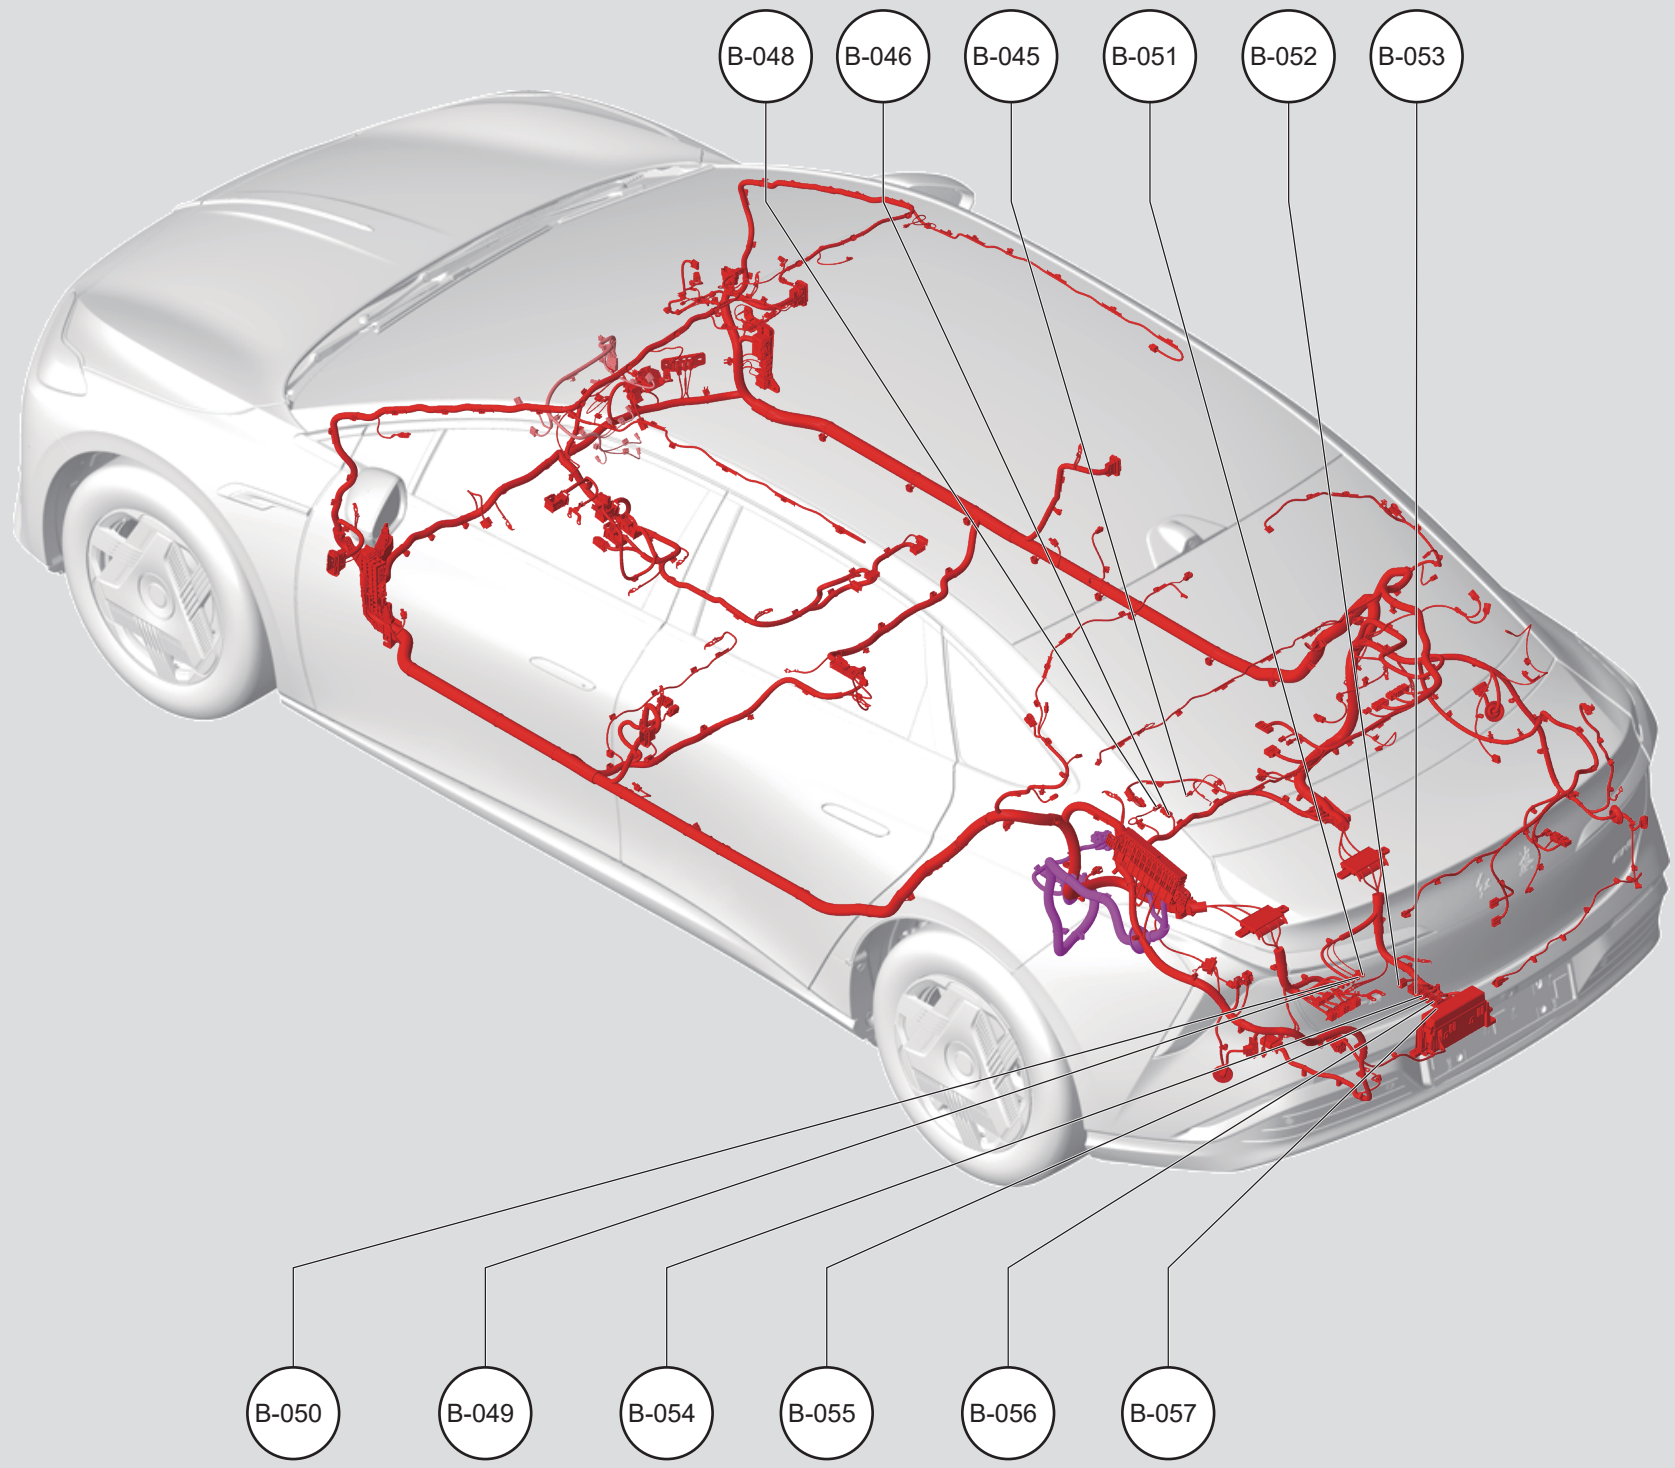
B-062 Corner millimeter wave radar RL
左后角毫米波雷达

B-063 Luggage compartment electric support rod LH
左侧行李箱电动撑杆

B-064 Charging controller
充电控制器

B-065 Advanced automatic driving controller - DJ (HAD) A
高级自动驾驶控制器-DJ(HAD)A

B3-001 Energy conversion and distribution unit A
能量转换与分配单元A



B-045 Seat belt buckle RR
右后安全带锁扣

B-046 Interior low frequency antenna II
室内低频天线Ⅱ

B-048 Seat belt buckle RL
左后安全带锁扣

B-049 Advanced automatic driving controller - DJ (HAD) F
高级自动驾驶控制器-DJ(HAD)F

B-050 Advanced automatic driving controller - DJ (HAD) G
高级自动驾驶控制器-DJ(HAD)G

B-051 Advanced automatic driving controller - DJ (HAD) H
高级自动驾驶控制器-DJ(HAD)H

B-052 Rear intelligent area control unit M
后智能区域控制单元M

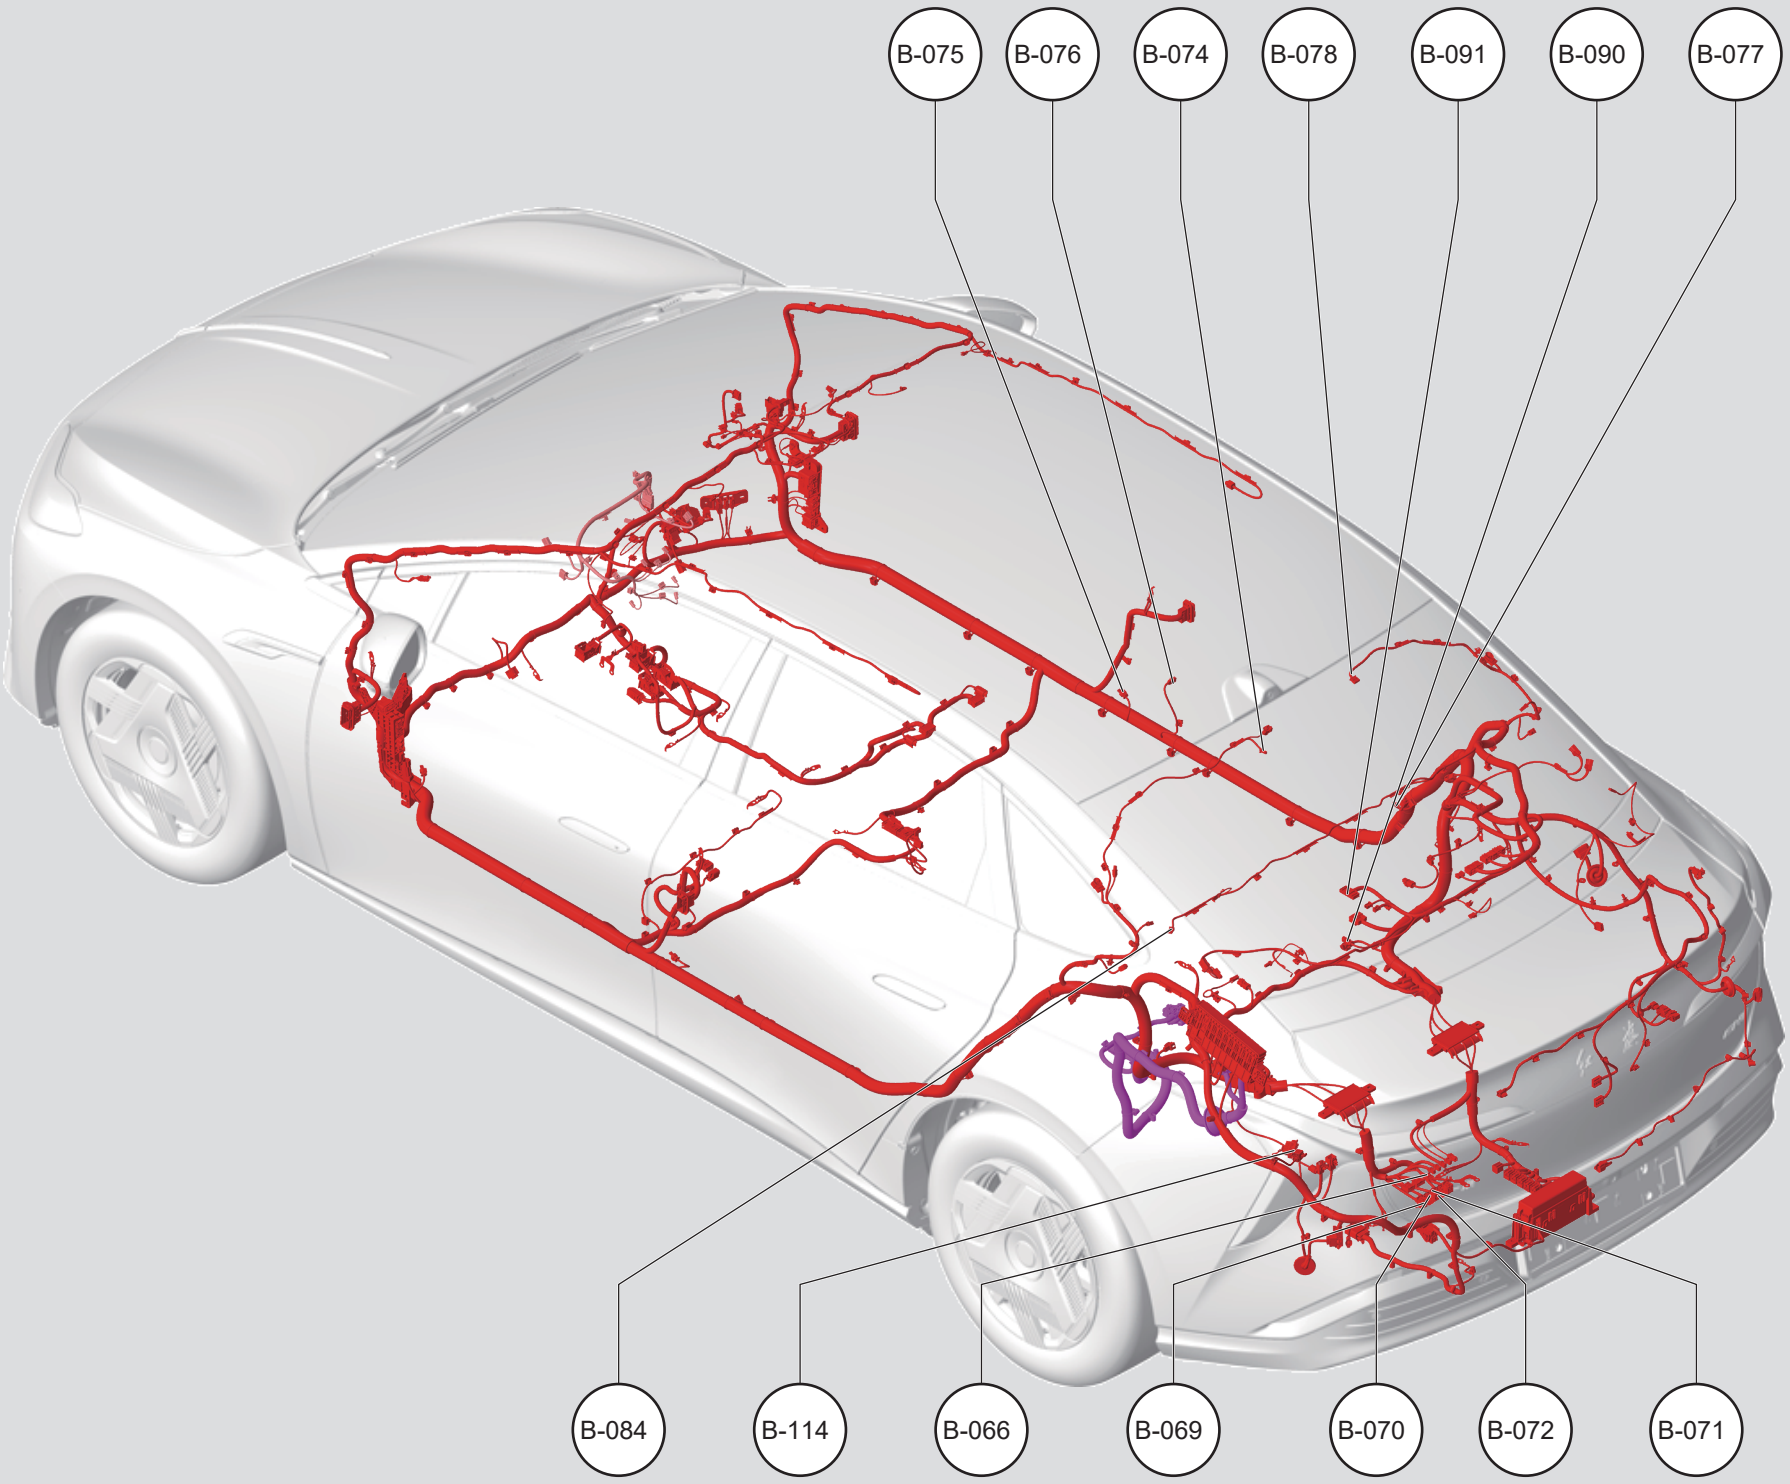
B-053 Rear intelligent area control unit E
后智能区域控制单元E

B-054 Rear intelligent area control unit D
后智能区域控制单元D

B-055 Rear intelligent area control unit C
后智能区域控制单元C

B-056 Rear intelligent area control unit B
后智能区域控制单元B

B-057 Rear intelligent area control unit L
后智能区域控制单元L



B-066 Advanced automatic driving controller - DJ (HAD) C
高级自动驾驶控制器-DJ(HAD)C

B-069 Rear intelligent area control unit G
后智能区域控制单元G

B-070 Rear intelligent area control unit H
后智能区域控制单元H

B-071 Rear intelligent area control unit I
后智能区域控制单元I

B-072 Rear intelligent area control unit J
后智能区域控制单元J

B-074 High mounted stop light
高位制动灯

B-075 Passenger side acceleration side collision sensor
乘客侧加速度侧碰传感器

B-076 Front passenger seat belt pretensioner
副驾驶员安全带预紧

B-077 Seat airbag RR
右后座椅气囊

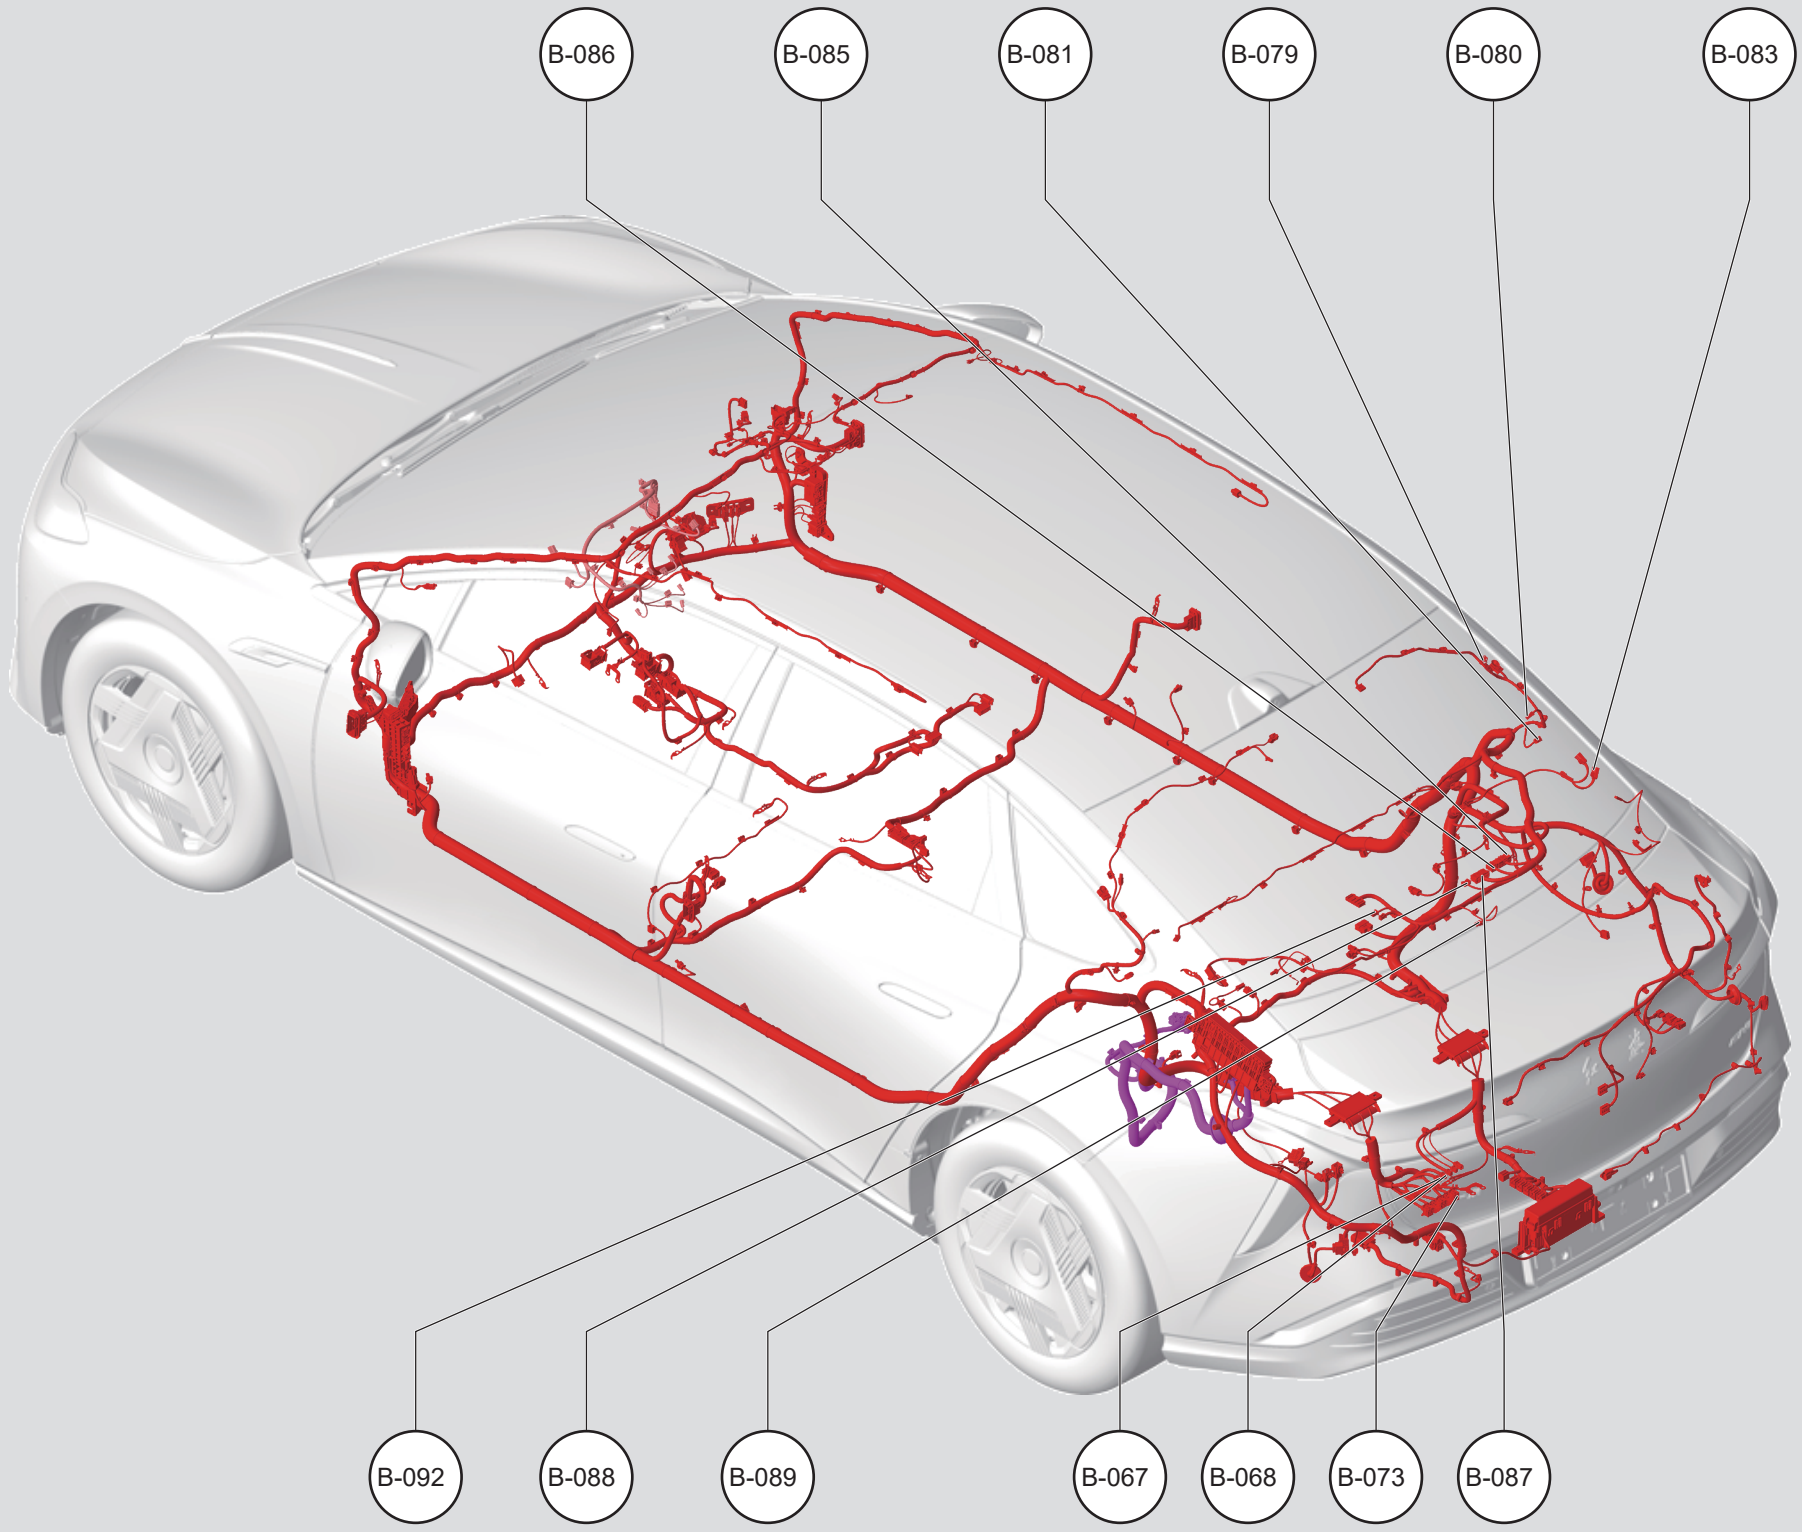
B-078 Digital key main module
数字钥匙主模块

B-084 Radio frequency emitter
射频发射器

B-090 Intelligent communication domain control unit (ICC) C
智能通信域控制单元（ICC）C

B-091 Intelligent communication domain control unit (ICC) A
智能通信域控制单元（ICC）A

B-114 Low voltage service SW
低压维修开关



B-067 Advanced automatic driving controller - DJ (HAD) D
高级自动驾驶控制器-DJ(HAD)D

B-068 Advanced automatic driving controller - DJ (HAD) E
高级自动驾驶控制器-DJ(HAD)E

B-073 Rear intelligent area control unit K
后智能区域控制单元K

B-079 Right GNSS-ICC
右GNSS-ICC

B-080 Right surround mid tweeter
右环绕中高音扬声器

B-081 Seat belt pretensioner RR
后排右侧安全带预紧

B-083 DAB sub-antenna
DAB分天线

B-085 Power amplifier (high configuration) A
功率放大器（高配）A

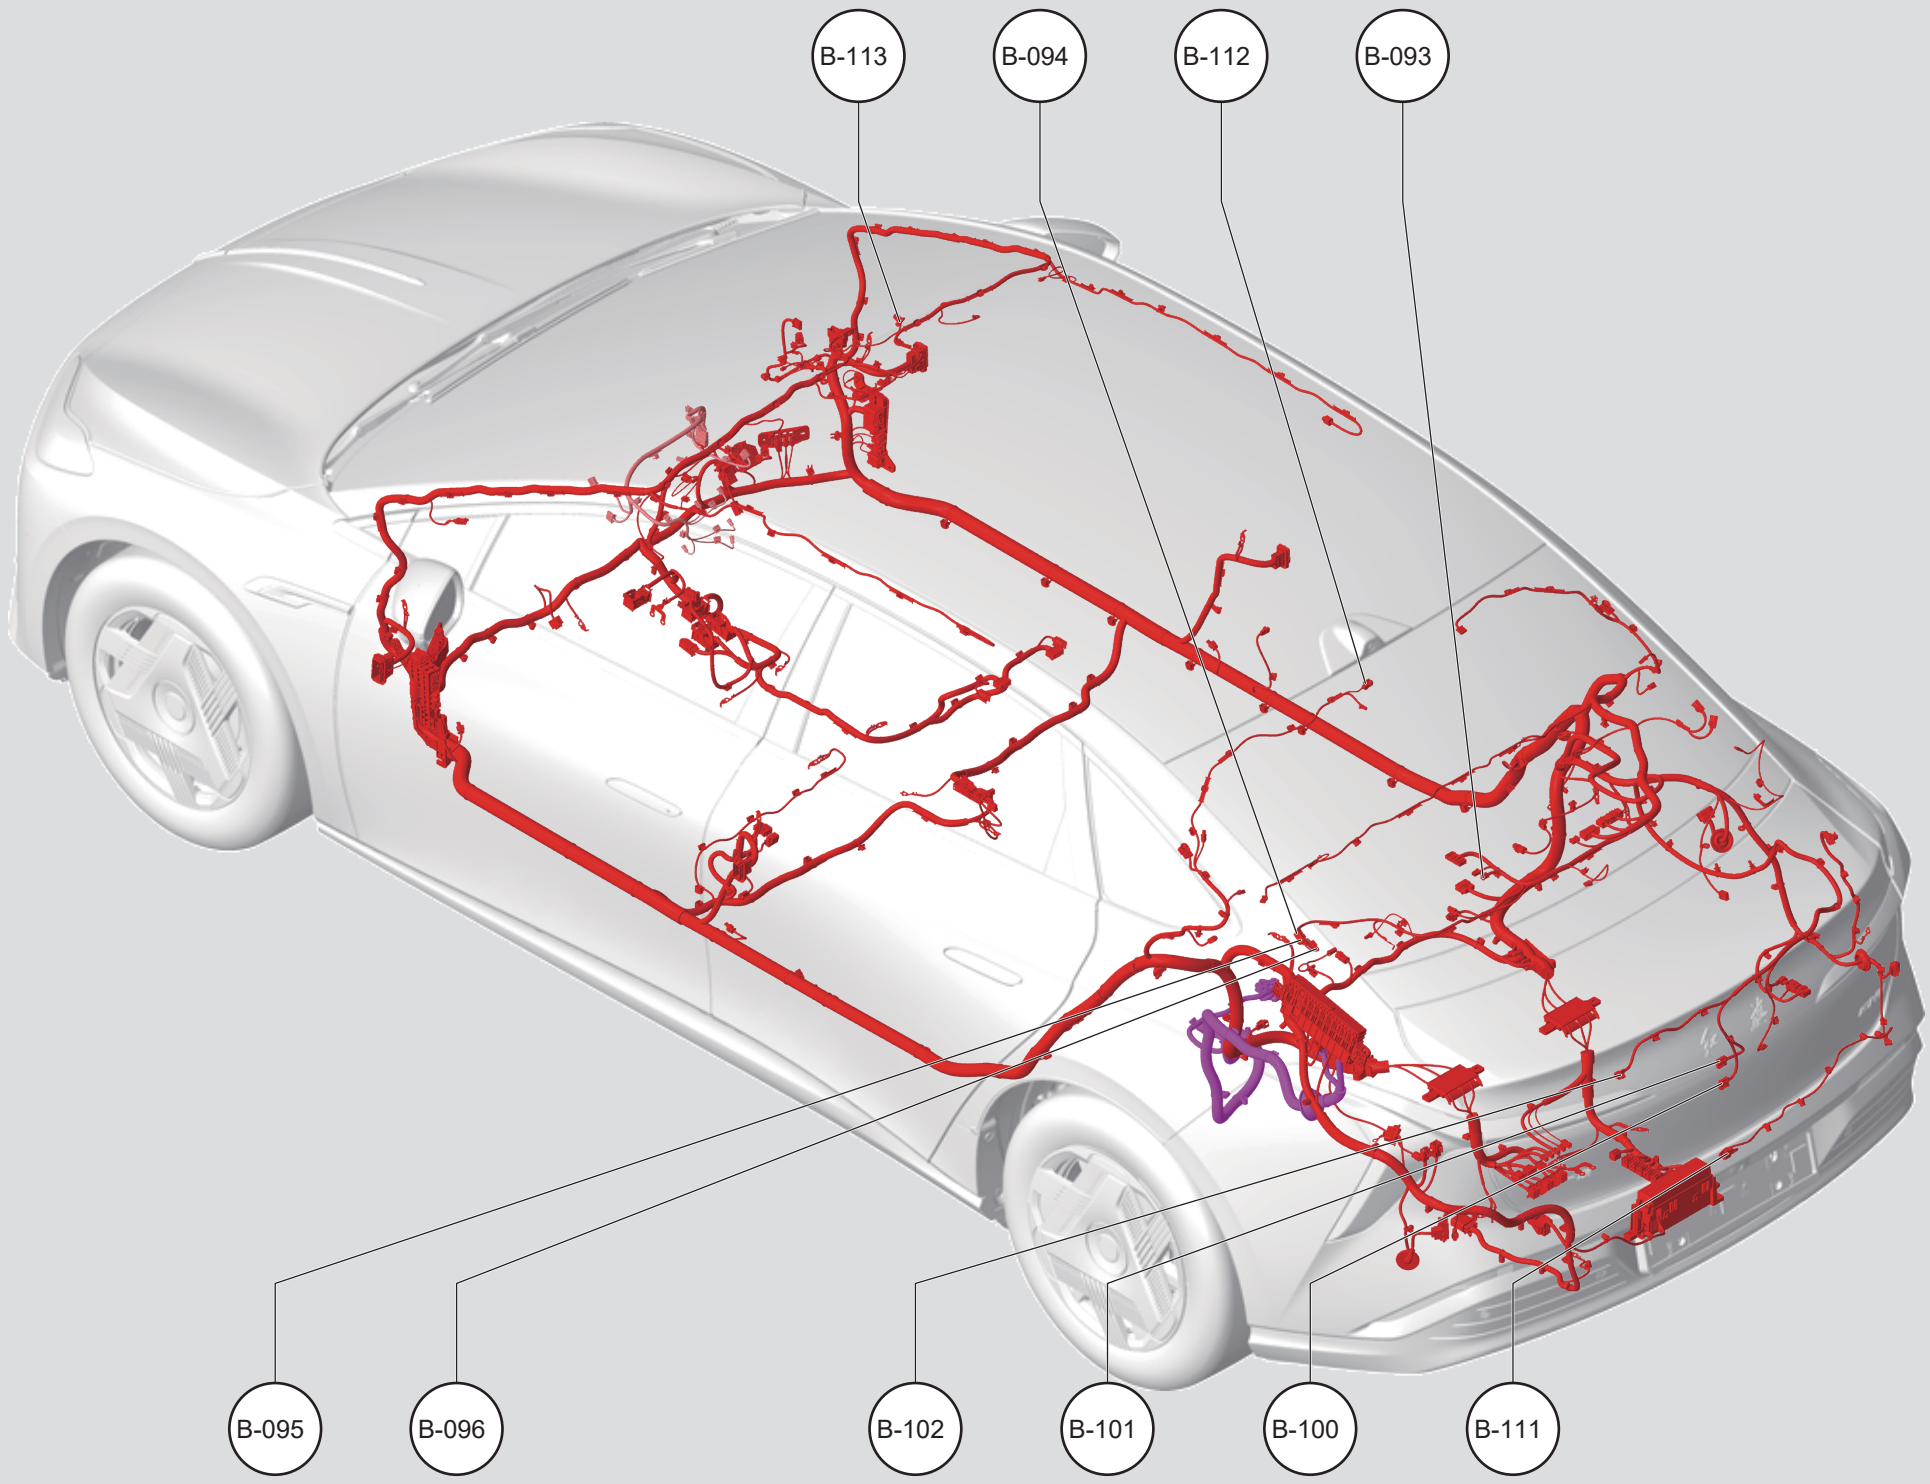
B-086 Power amplifier (high configuration) B
功率放大器（高配）B

B-087 Power amplifier (high configuration) C
功率放大器（高配）C

B-088 Power amplifier (high configuration) D
功率放大器（高配）D

B-089 Luggage compartment light
行李箱灯

B-092 Intelligent communication domain control unit (ICC) B
智能通信域控制单元（ICC）B



B-093 Intelligent communication domain control unit (ICC) E
智能通信域控制单元（ICC）E

B-094 Radio antenna LH
左收音机天线

B-095 DAB main antenna
DAB主天线

B-096 Radio antenna wave trap
收音天线陷波器

B-100 Luggage compartment lock - high configuration
行李箱锁-高配

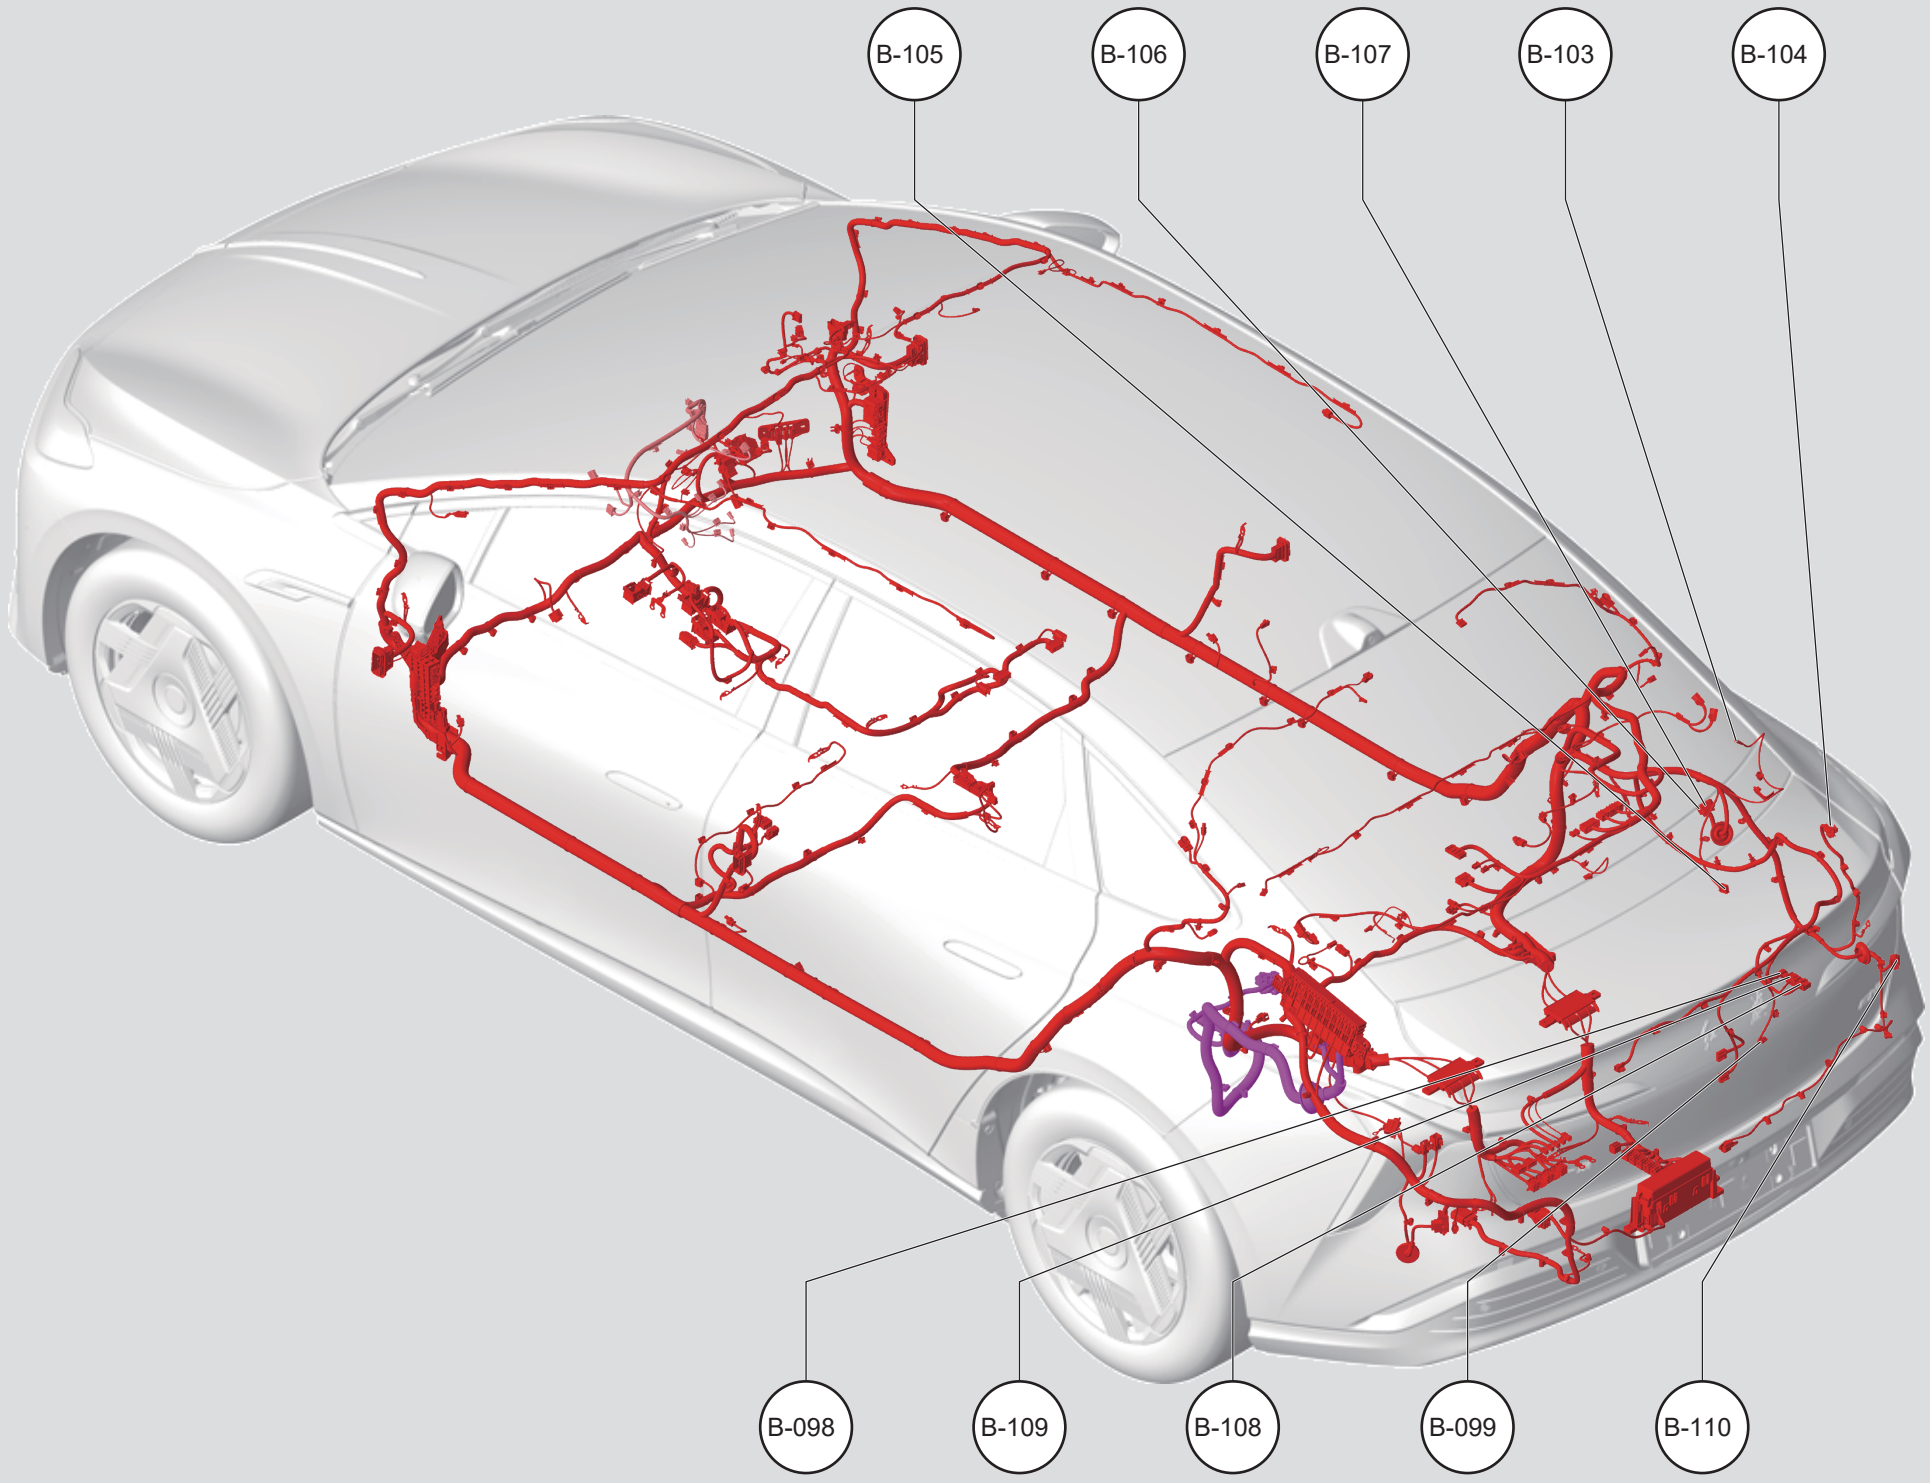
B-101 Luggage compartment lock - low configuration
行李箱锁-低配

B-102 Combination light RL II
左后组合灯Ⅱ

B-111 Luggage compartment outer low frequency antenna
行李箱外低频天线

B-112 Rear surrounding view camera
后周视摄像头

B-113 Front windshield camera heating
前风窗摄像头加热



B-098 Combination light RR II
右后组合灯Ⅱ

B-099 Luggage compartment closed switch
行李箱关闭开关

B-103 Charging port cover actuator motor
充电口盖执行电机

B-104 Combination light RR I
右后组合灯Ⅰ

B-105 Subwoofer
低音箱

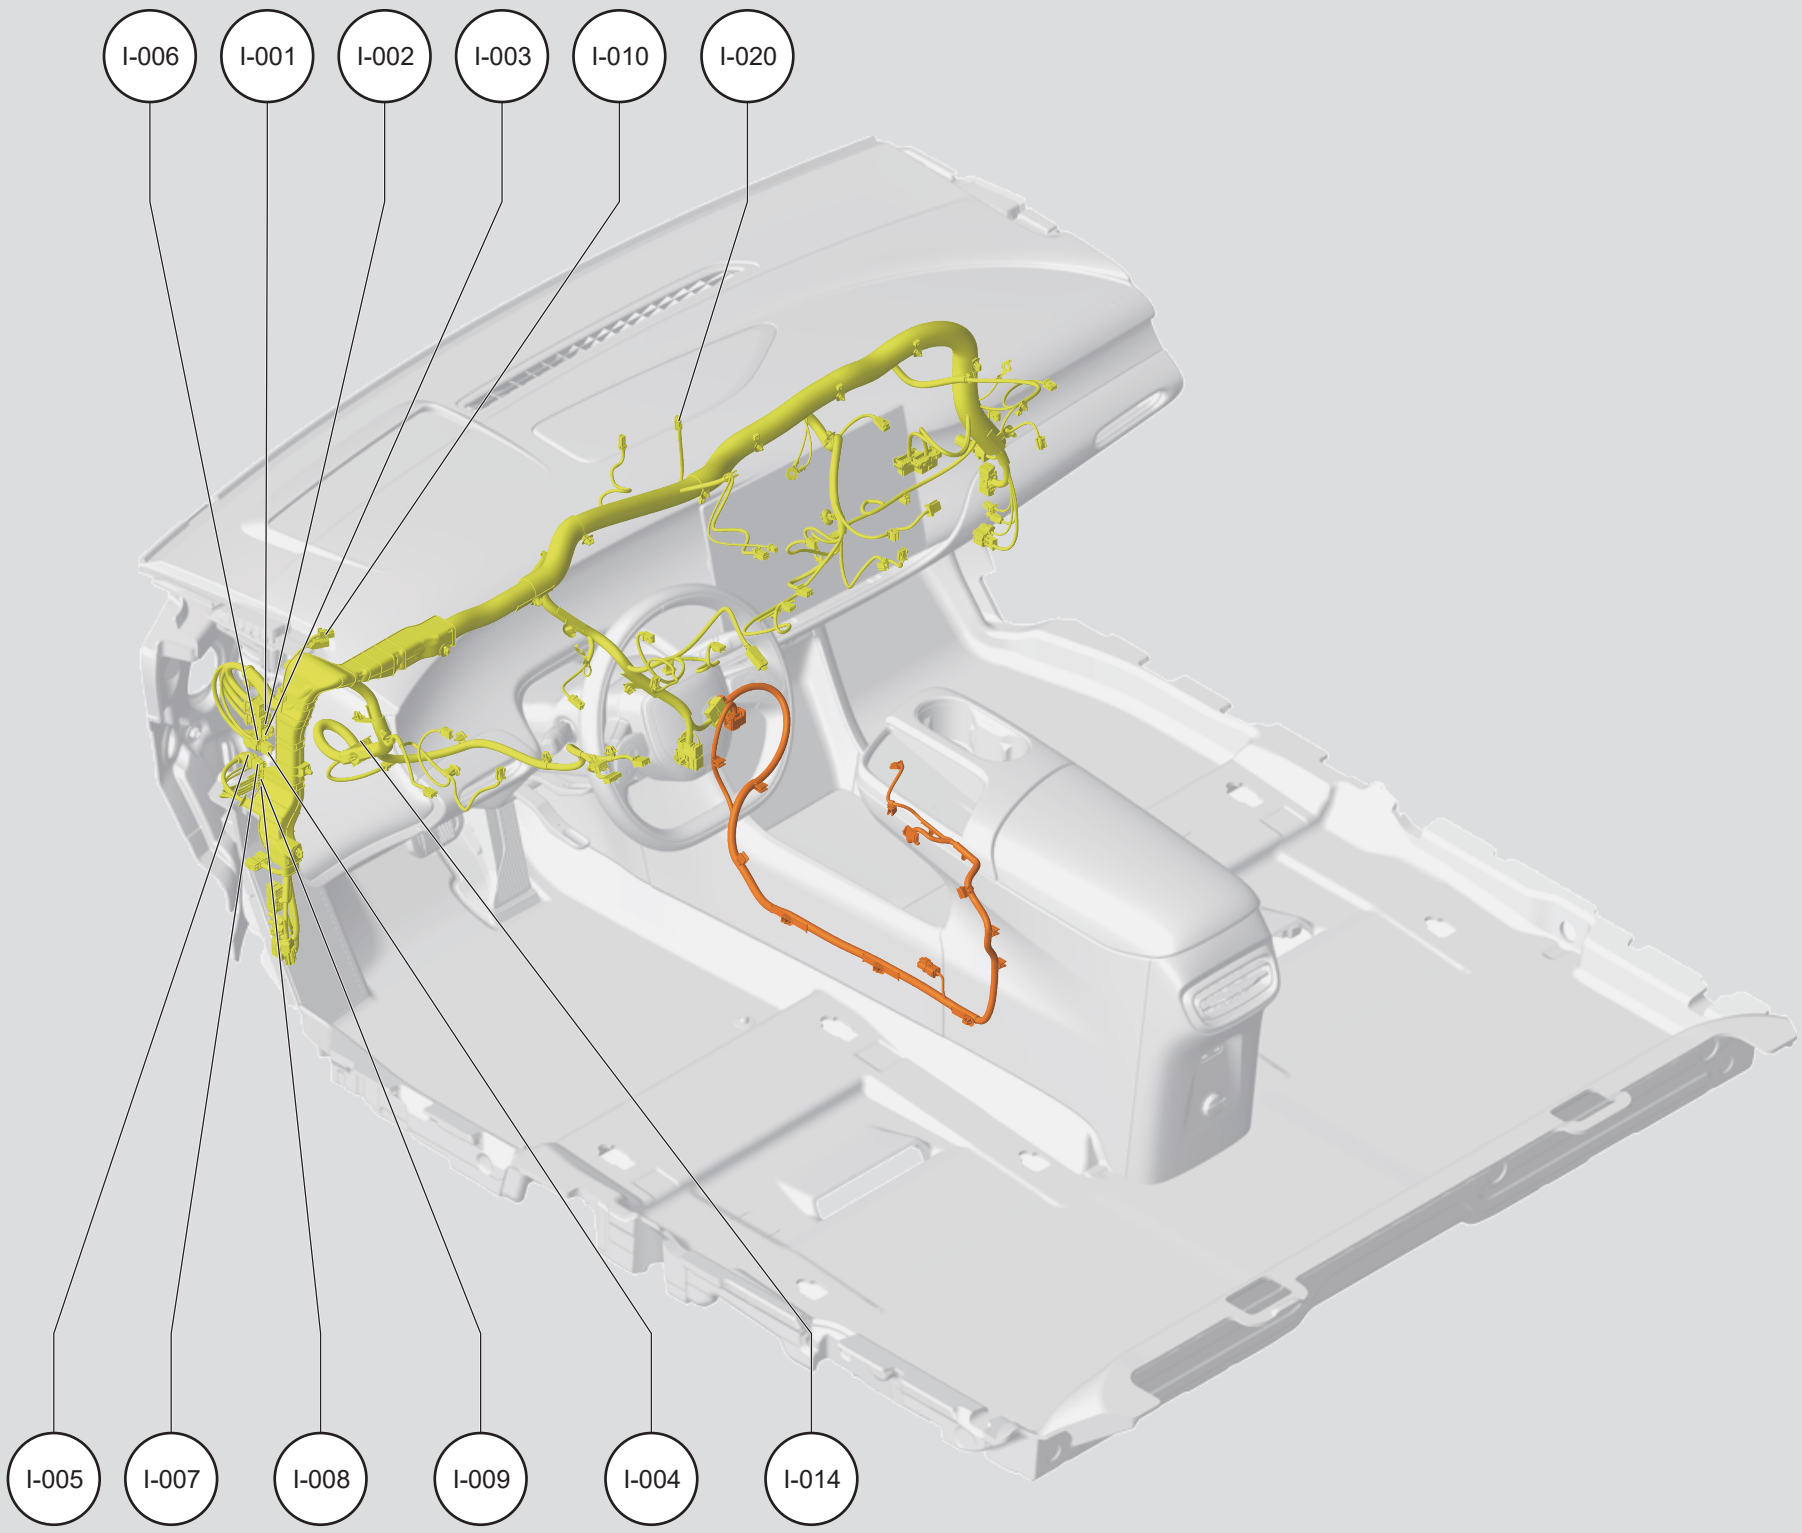
B-106 Charging socket - European standard
充电座-欧标

B-107 AC/DC charging port
交直流充电口

B-108 Trailer controller B
拖车控制器B

B-109 Trailer controller A
拖车控制器A

B-110 Corner millimeter wave radar RR
右后角毫米波雷达



I-001 Infotainment control unit (CSC) A
信息娱乐控制单元（CSC）A

I-002 Infotainment control unit (CSC) B
信息娱乐控制单元（CSC）B

I-003 Infotainment control unit (CSC) C
信息娱乐控制单元（CSC）C

I-004 Infotainment control unit (CSC) D
信息娱乐控制单元（CSC）D

I-005 Infotainment control unit (CSC) E
信息娱乐控制单元（CSC）E

I-006 Infotainment control unit (CSC) F
信息娱乐控制单元（CSC）F

I-007 Infotainment control unit (CSC) G
信息娱乐控制单元（CSC）G

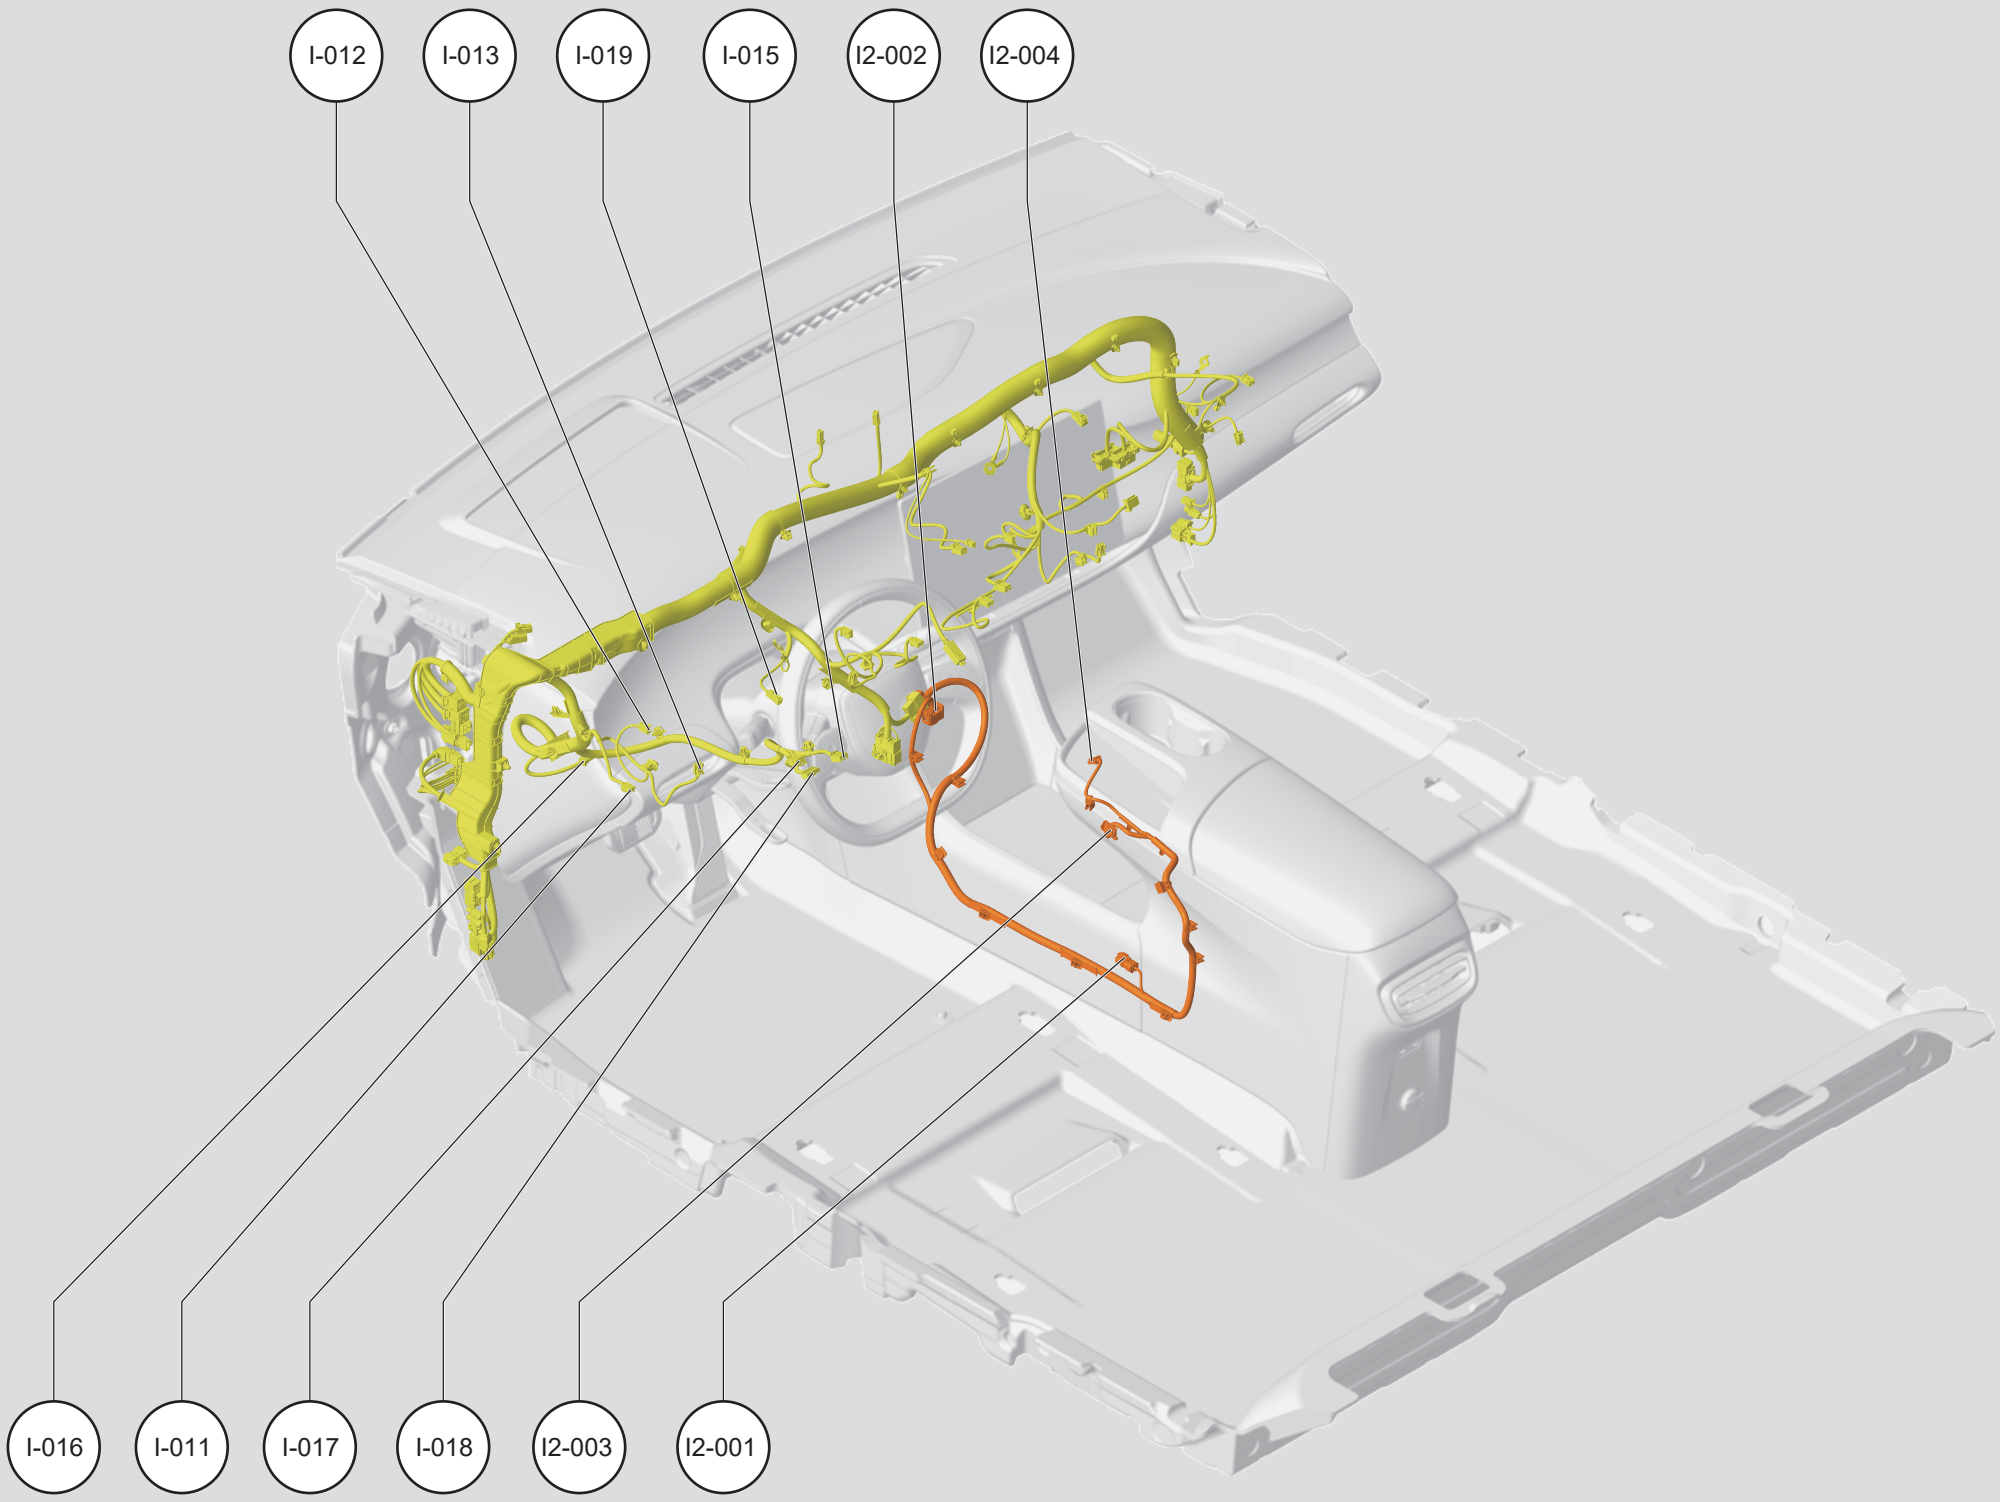
I-008 Infotainment control unit (CSC) H
信息娱乐控制单元（CSC）H

I-009 Infotainment control unit (CSC) I
信息娱乐控制单元（CSC）I

I-010 Head up display A
抬头显示器A

I-014 Standard OBD
标准OBD

I-020 IP mid tweeter
仪表中高音扬声器



I-011 Left outlet motor - left/right
左风口电机-左右

I-012 Left outlet motor - up/down
左风口电机-上下

I-013 IP ambient light I
仪表板氛围灯 I

I-015 Spiral cable II
时钟弹簧 II

I-016 Footwell light FL
左前脚窝灯

I-017 Combination switch
组合开关

I-018 Spiral cable I
时钟弹簧 I

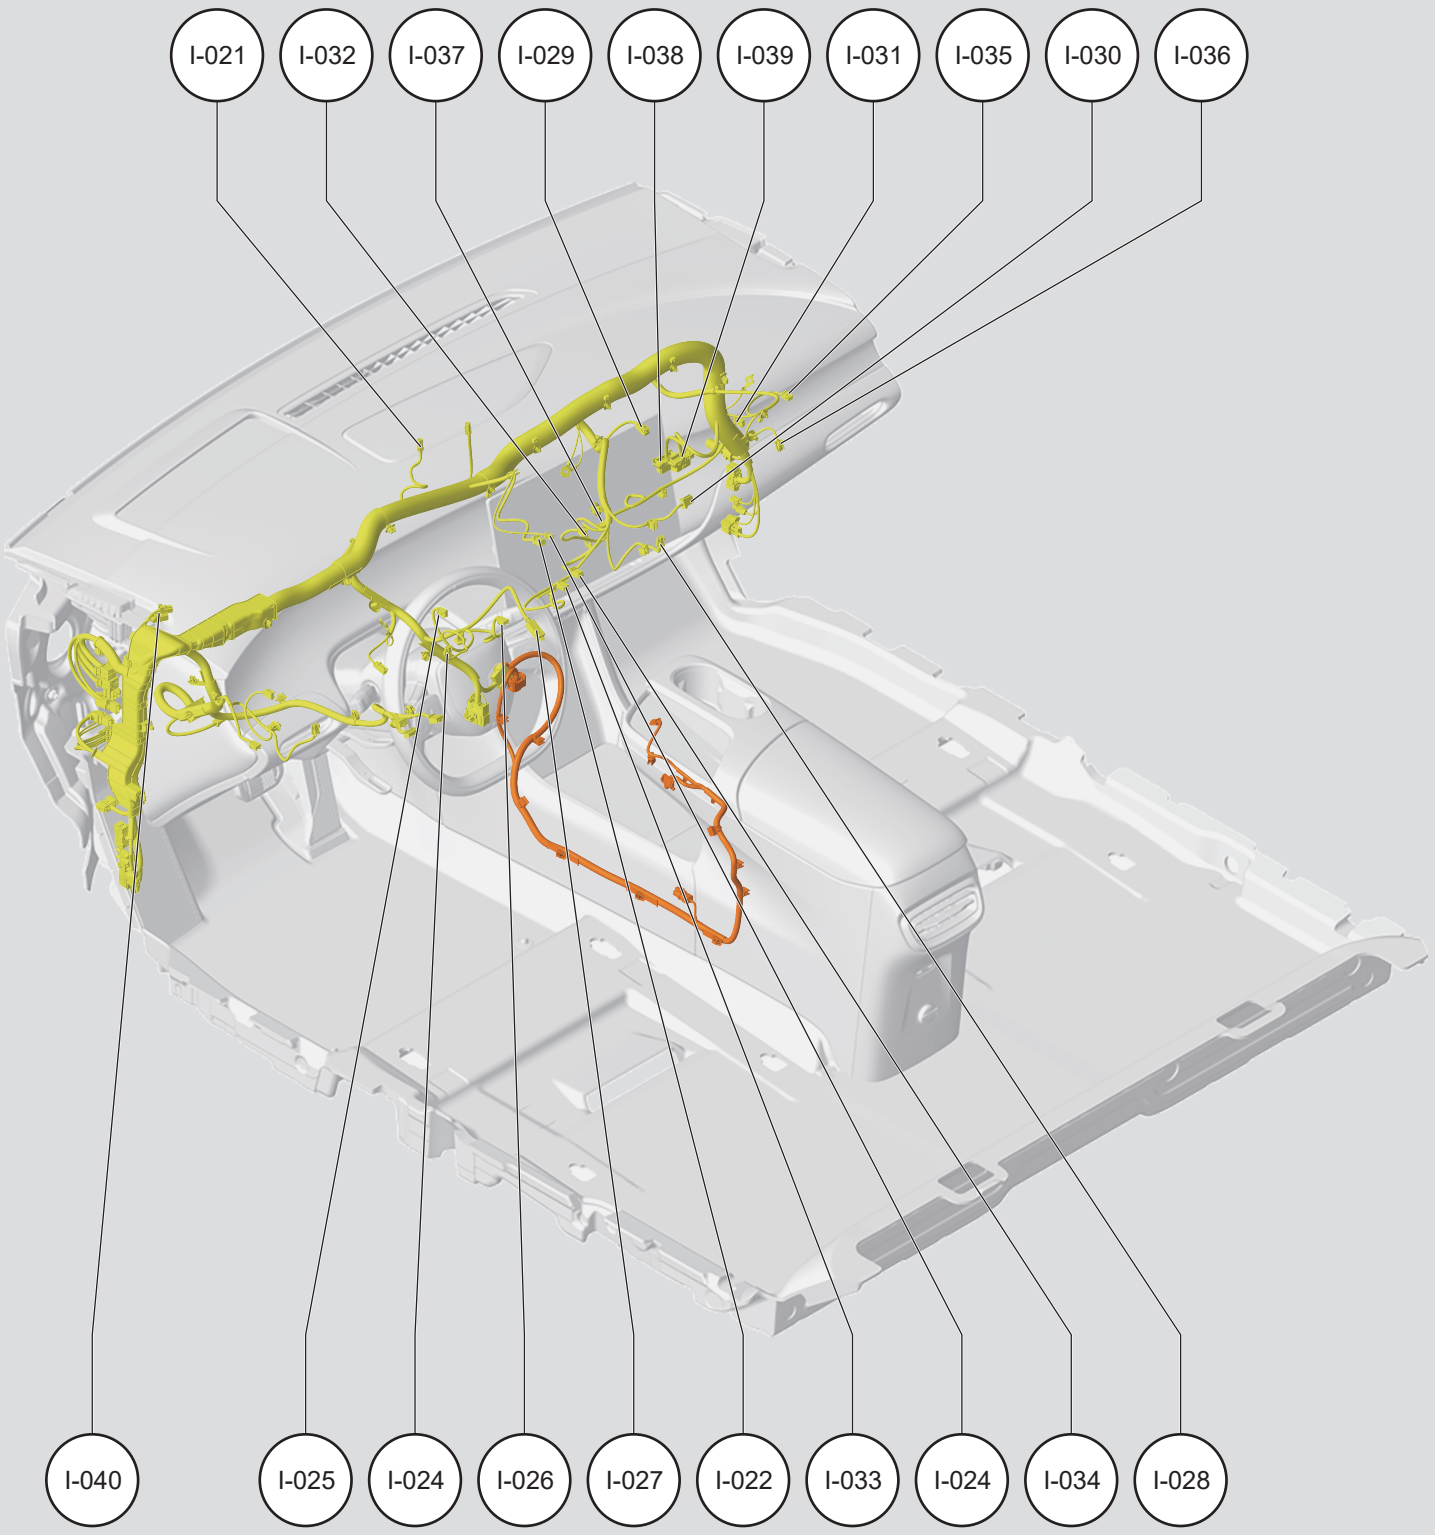
I-019 Interior temperature sensor
内温传感器

I2-001 Interior low frequency antenna I
室内低频天线 I

I2-002 Interior front digital key UWB antenna
室内前数字钥匙UWB天线

I2-003 Mobile phone wireless charging controller
手机无线充电控制器

I2-004 Auxiliary fascia console point light source ambient light
副仪表板点光源氛围灯



I-021 Emergency call speaker
紧急呼叫扬声器

I-022 Central display A
中间显示屏A

I-024 IP ambient light II
仪表板氛围灯Ⅱ

I-024 IP ambient light II
仪表板氛围灯Ⅱ

I-025 Center left outlet motor - up/down
中左风口电机-上下

I-026 Center left outlet motor - left/right
中左风口电机-左右

I-027 USB-TYPE C port
USB-TYPE C口

I-028 IP ambient light Ⅲ
仪表板氛围灯Ⅲ

I-029 Front passenger airbag
副驾驶员安全气囊

I-030 Electric outlet filtering voltage regulator module
电动出风口滤波稳压模块

I-031 Right outlet motor - up/down
右风口电机-上下

I-032 Center right outlet motor - up/down
中右风口电机-上下

I-033 Center right outlet motor - left/right
中右风口电机-左右

I-034 Single USB
单路USB

I-035 Right outlet motor - left/right
右风口电机-左右

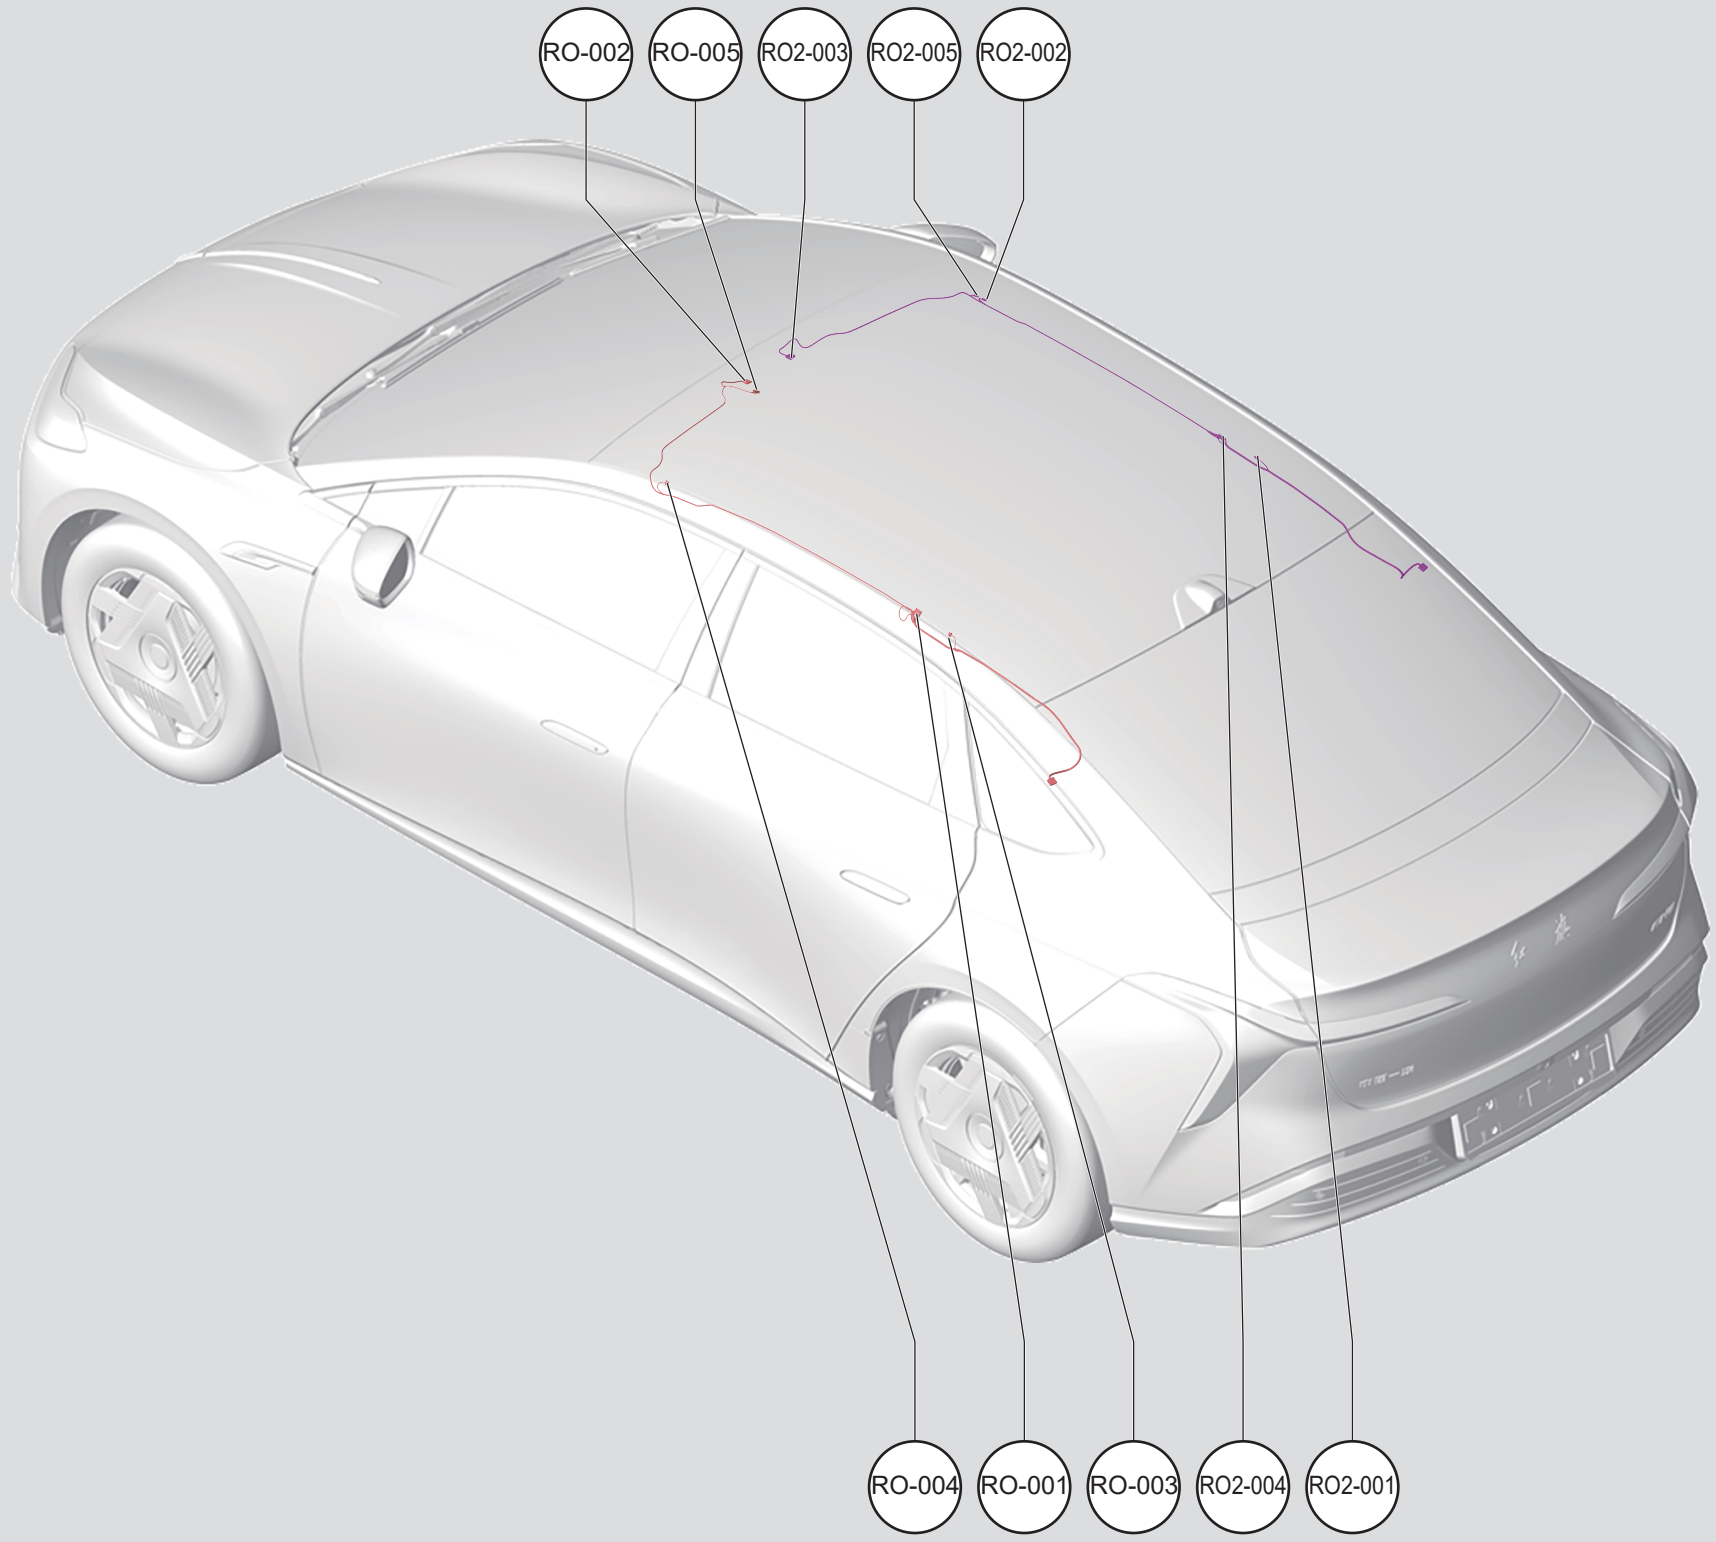
I-036 IP ambient light Ⅳ
仪表板氛围灯Ⅳ

I-037 Footwell light FR
右前脚窝灯

I-038 Official vehicle debug OBD I
正式车调试OBD Ⅰ

I-039 Official vehicle debug OBD Ⅳ
正式车调试OBDⅣ

I-040 Head up display B
抬头显示器B



RO-001 Map light RL
左后阅读灯

RO-002 Interior light FL
左前室内灯

RO-003 Microphone RL
左后麦克风

RO-004 Microphone FL
左前麦克风

RO-005 ECALL microphone
ECALL麦克风

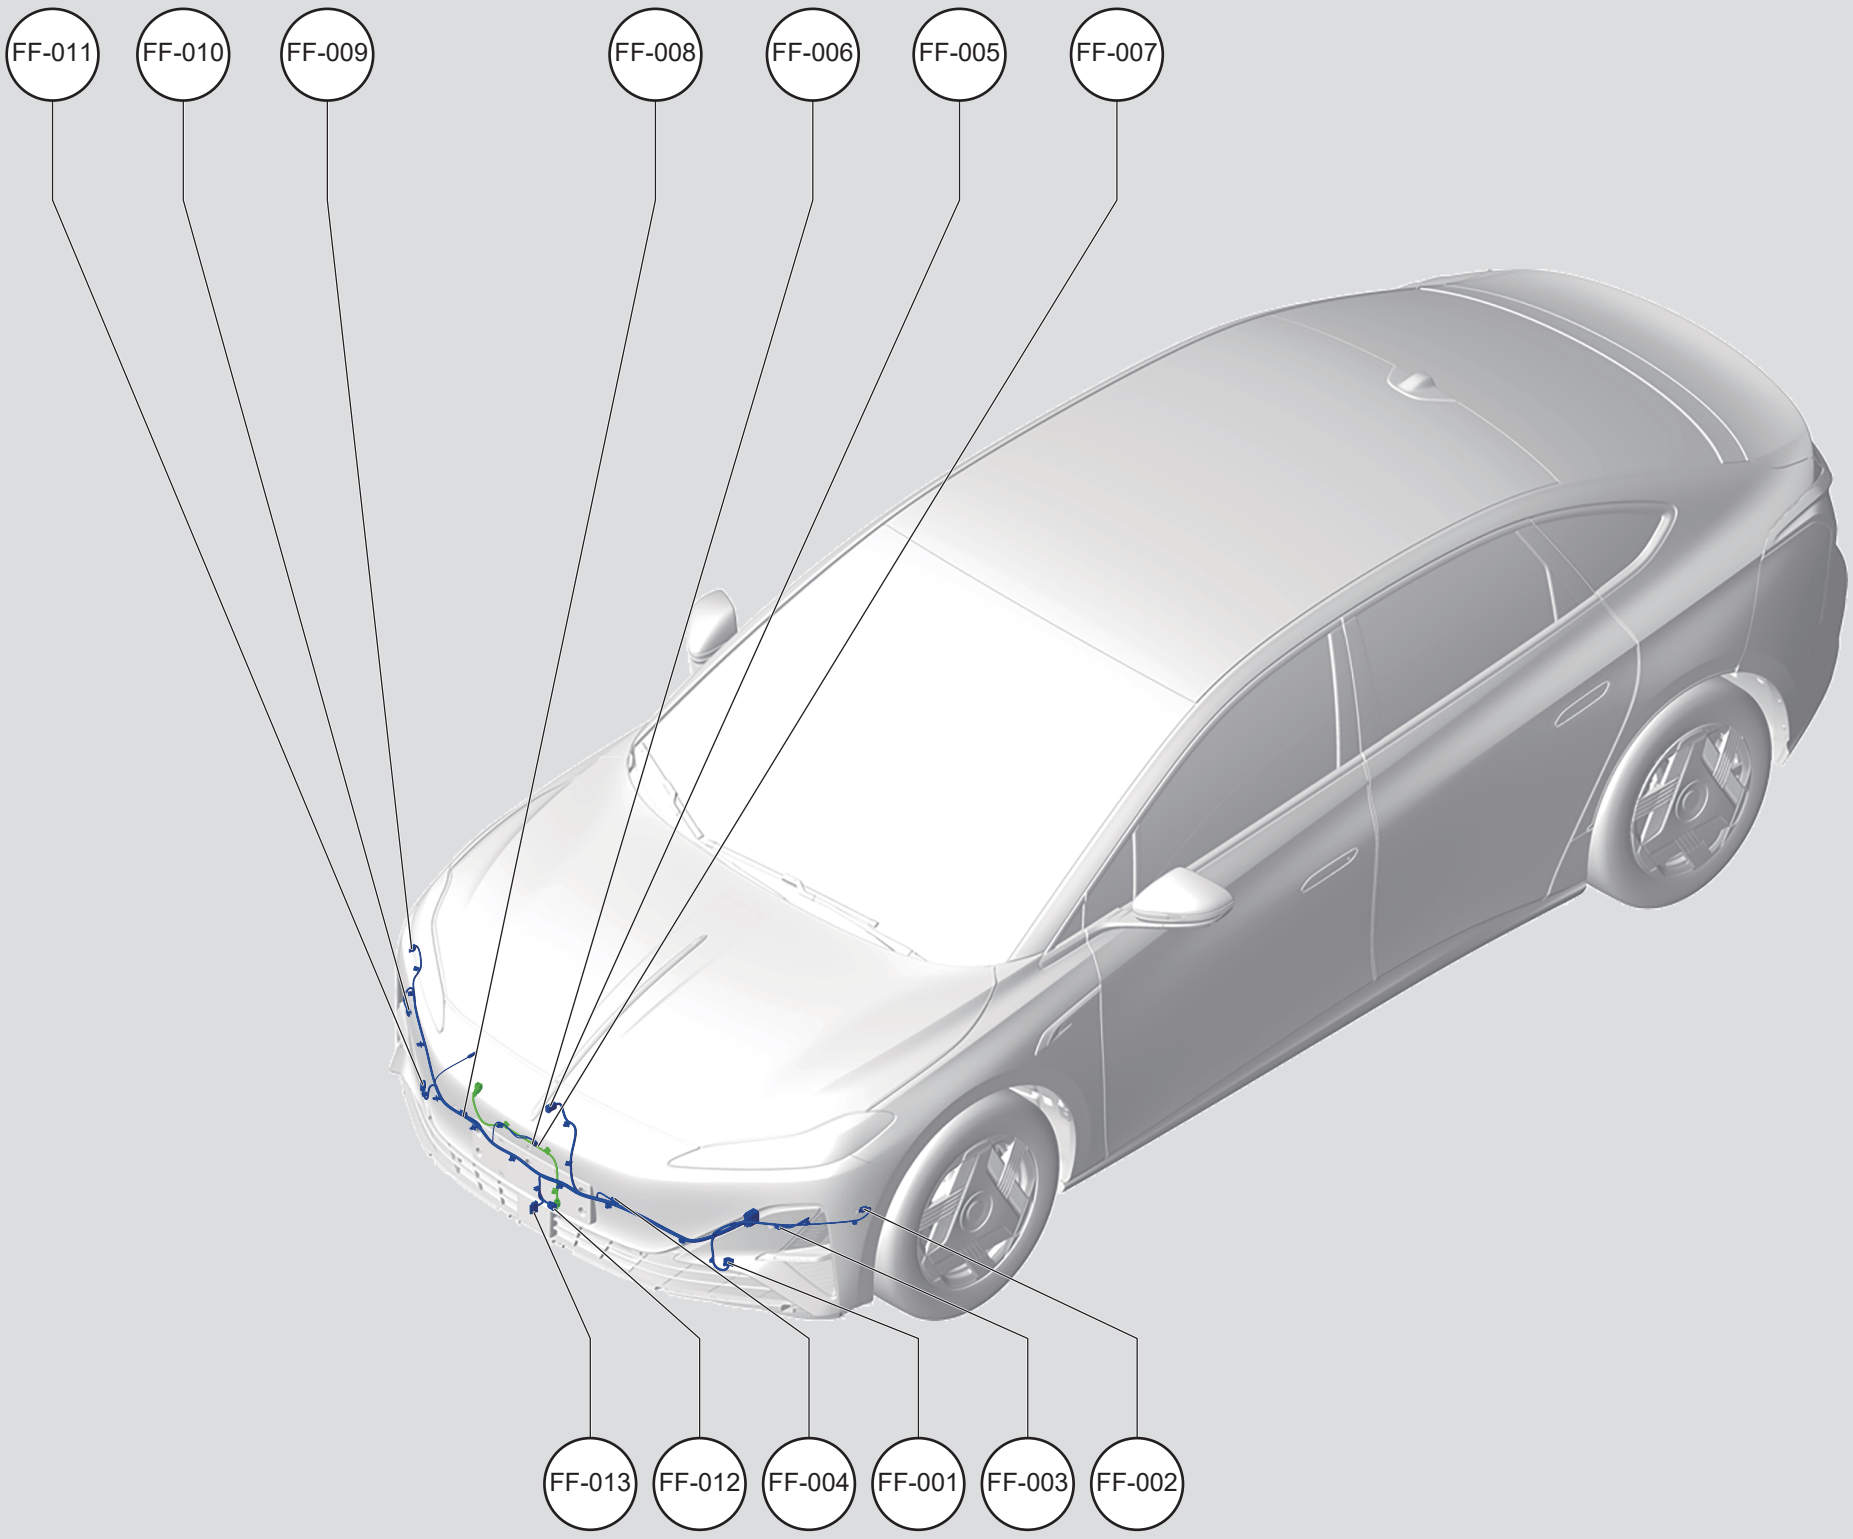
RO2-001 Microphone RR
右后麦克风

RO2-002 Microphone FR
右前麦克风

RO2-003 Map light FR
右前室内灯

RO2-004 Map light RR
右后阅读灯

RO2-005 Roof single USB
顶棚单路USB



FF-001 Digital key UWB antenna FL
左前数字钥匙UWB天线

FF-002 Ultrasonic sensor FL
左前侧超声波传感器

FF-003 Corner ultrasonic sensor FL
左前角超声波传感器

FF-004 Center ultrasonic sensor FL
左前中超声波传感器

FF-005 LOGO light
LOGO灯

FF-006 Front panoramic DJ camera
前环视DJ摄像头

FF-007 Front panoramic camera
前环视摄像头

FF-008 Center ultrasonic sensor FR
右前中超声波传感器

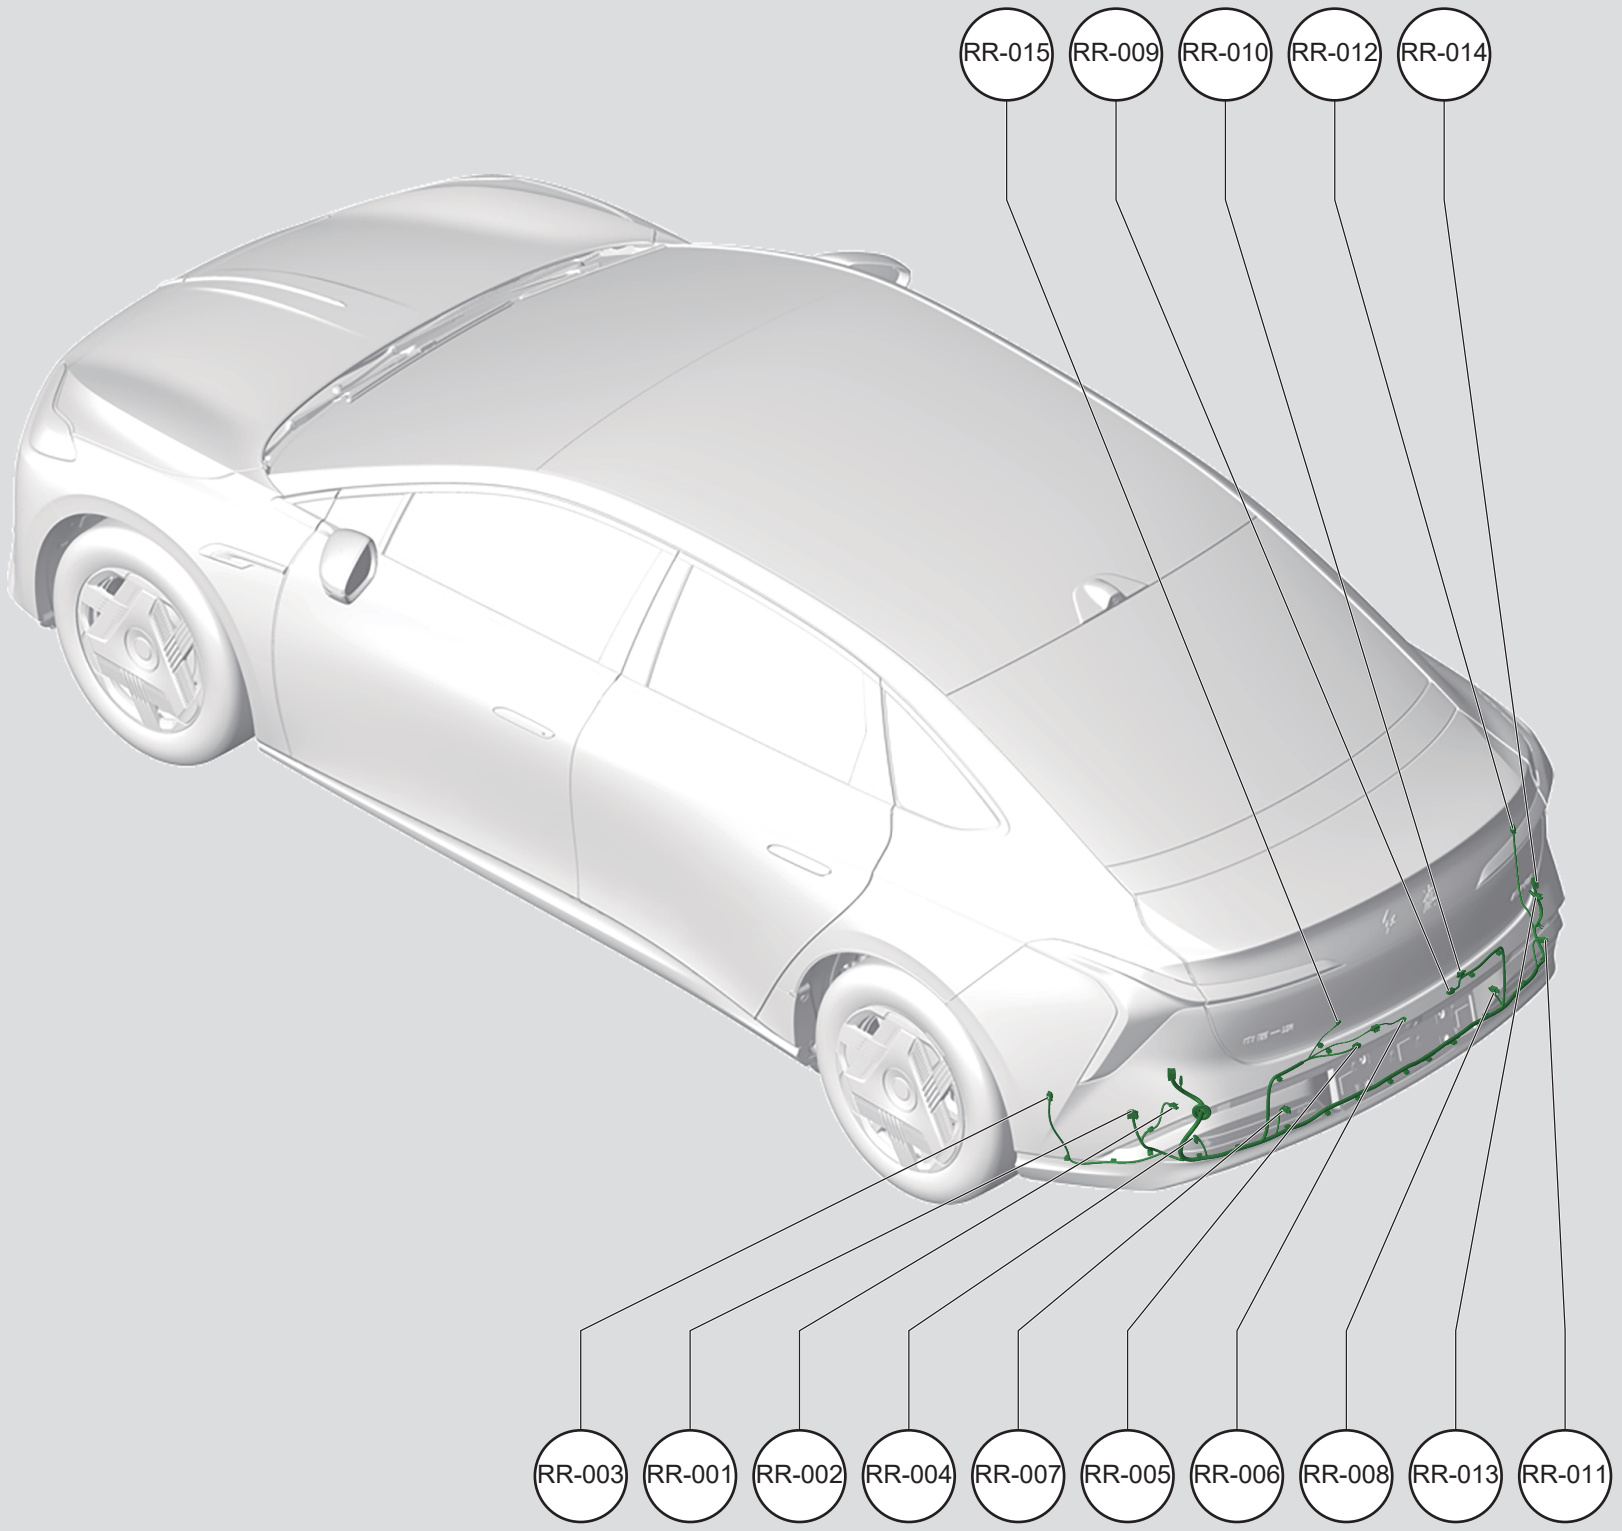
FF-009 Corner ultrasonic sensor FR
右前角超声波传感器

FF-010 Ultrasonic sensor FR
右前侧超声波传感器

FF-011 Digital key UWB antenna FR
右前数字钥匙UWB天线

FF-012 Outside temperature sensor
外温传感器

FF-013 Front millimeter wave radar
前向毫米波雷达



RR-001 Digital key UWB antenna RL
左后数字钥匙UWB天线

RR-002 Combination light RL III
左后组合灯Ⅲ

RR-003 Ultrasonic sensor RL
左后侧超声波传感器

RR-004 Corner ultrasonic sensor RL
左后角超声波传感器

RR-005 License plate light LH
左侧牌照灯

RR-006 Rear panoramic DJ camera
后环视DJ摄像头

RR-007 Center ultrasonic sensor RL
左后中超声波传感器

RR-008 Center ultrasonic sensor RR
右后中超声波传感器

RR-009 License plate light RH
右侧牌照灯

RR-010 Luggage compartment outside opener switch
行李箱外开启开关

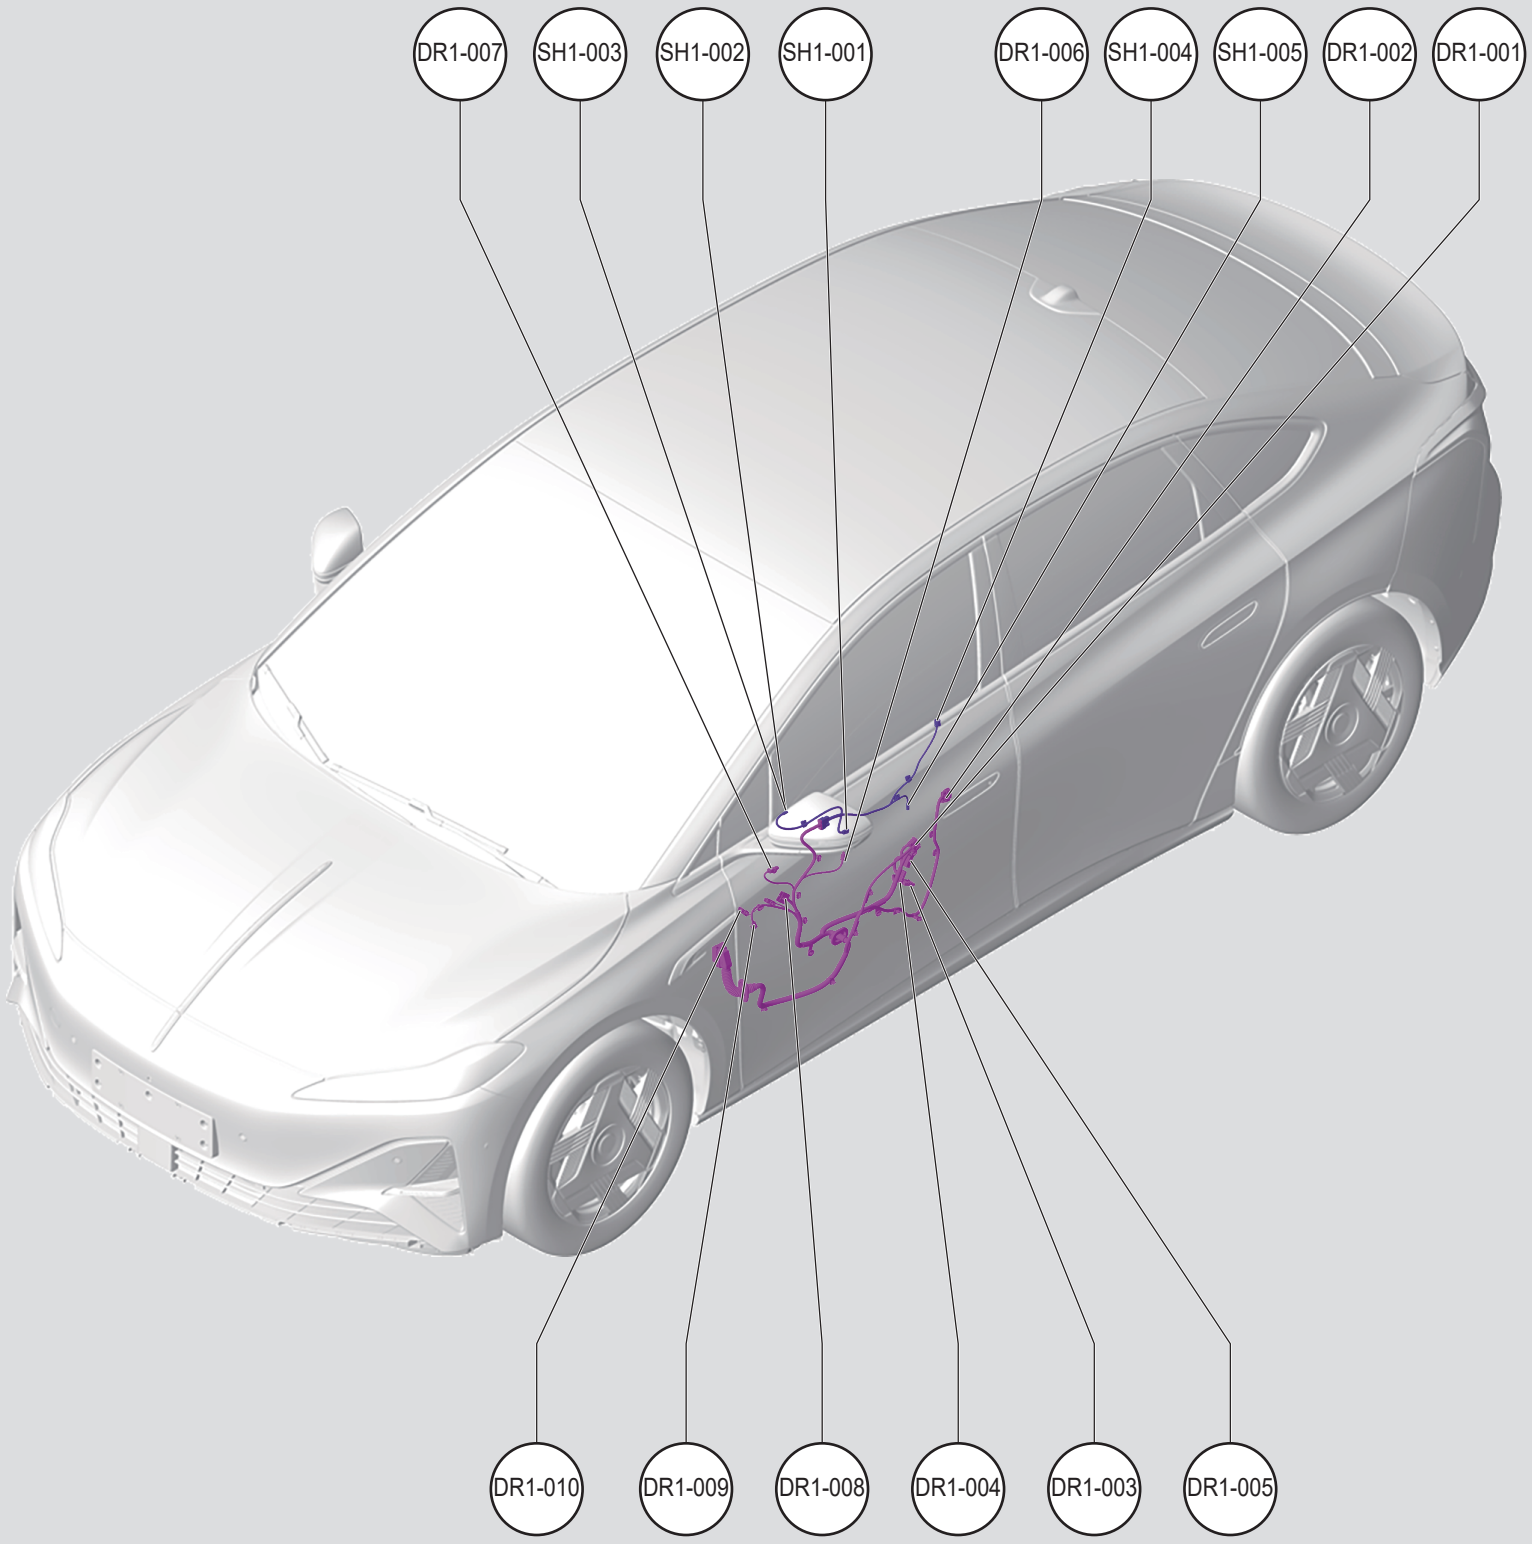
RR-011 Corner ultrasonic sensor RR
右后角超声波传感器

RR-012 Ultrasonic sensor RR
右后侧超声波传感器

RR-013 Combination light RR III
右后组合灯Ⅲ

RR-014 Digital key UWB antenna RR
右后数字钥匙UWB天线

RR-015 Rear panoramic camera
后环视摄像头



DR1-001 Door invisible handle FL
左前门隐形门把手

DR1-002 Door lock FL
左前门锁

DR1-003 Front left door control unit C
左前车门控制单元C

DR1-004 Front left door control unit B
左前车门控制单元B

DR1-005 Front left door control unit A
左前车门控制单元A

DR1-006 Side collision pressure sensor FL
左前侧碰压力传感器

DR1-007 Door power window regulator FL
左前门电动玻璃升降器

DR1-008 Outside rear view mirror LH
左侧外后视镜

DR1-009 Door woofer FL
左前门低音扬声器

DR1-010 Panoramic camera FL
左前环视摄像头

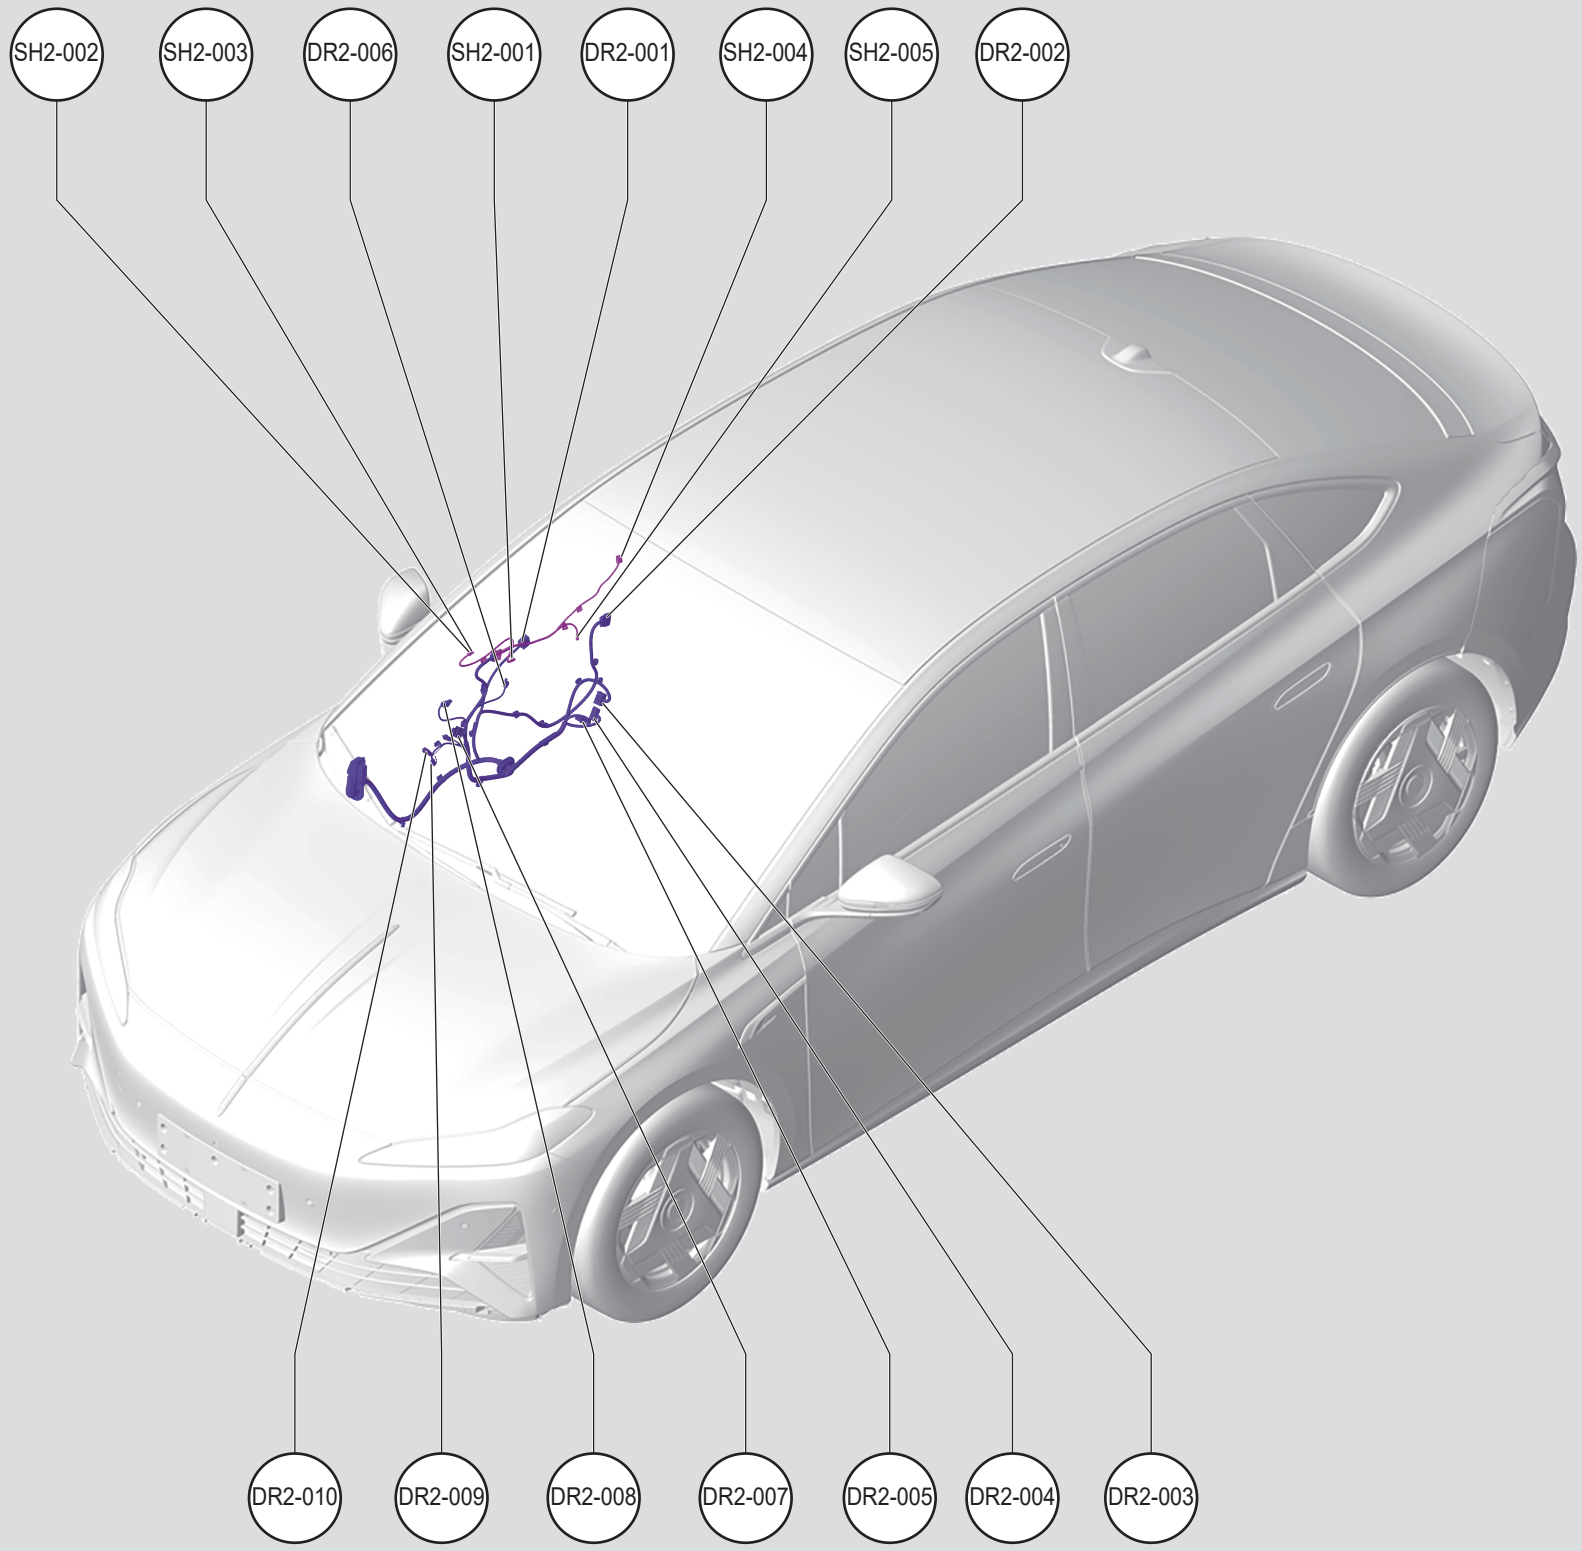
SH1-001 Door power window switch FL
左前门电动窗开关

SH1-002 Door tweeter FL_high configuration
左前门高音扬声器_高配

SH1-003 Door tweeter FL_low configuration
左前门高音扬声器_低配

SH1-004 Smart entry antenna FL
智能进入天线左前

SH1-005 Door ambient light FL Ⅰ
左前门氛围灯Ⅰ



DR2-001 Door invisible handle FR
右前门隐形门把手

DR2-002 Door lock FR
右前门锁

DR2-003 Front right door control unit A
右前车门控制单元A

DR2-004 Front right door control unit B
右前车门控制单元B

DR2-005 Front right door control unit C
右前车门控制单元C

DR2-006 Side collision pressure sensor FR
右前侧碰压力传感器

DR2-007 Outside rear view mirror RH
右侧外后视镜

DR2-008 Door power window regulator FR
右前门电动玻璃升降器

DR2-009 Door woofer FR
右前门低音扬声器

DR2-010 Panoramic camera FR
右前环视摄像头

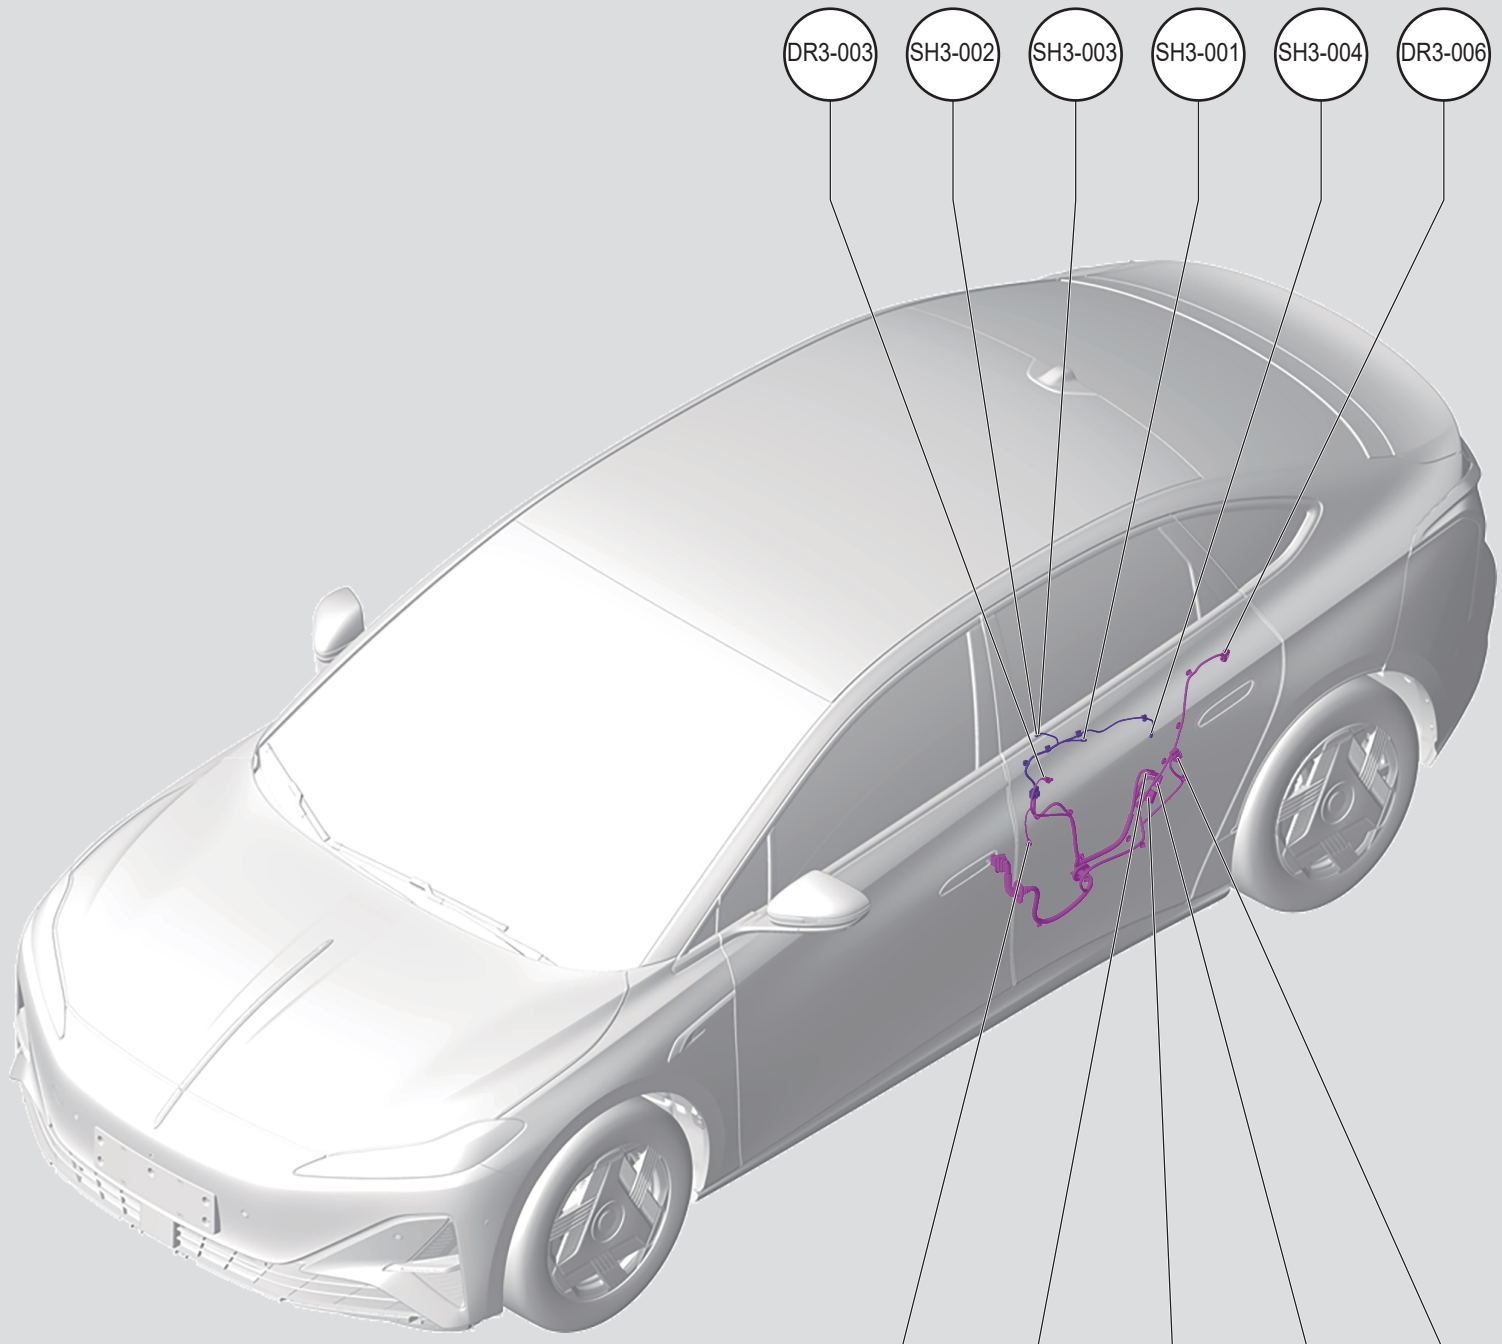
SH2-001 Door power window switch FR
右前门电动窗开关

SH2-002 Door tweeter FR_high configuration
右前门高音扬声器_高配

SH2-003 Door tweeter FR_low configuration
右前门高音扬声器_低配

SH2-004 Smart entry antenna FR
智能进入天线右前

SH2-005 Door ambient light FR Ⅰ
右前门氛围灯Ⅰ



DR3-001 Rear left door invisible handle
左后门隐形门把手

DR3-003 Door power window regulator RL
左后门电动玻璃升降器

DR3-004 Door woofer RL
左后门低音扬声器

DR3-005 Rear left door control unit A
左后车门控制单元A

DR3-006 Rear left door control unit B
左后车门控制单元B

DR3-006 Rear left door control unit B
左后车门控制单元B

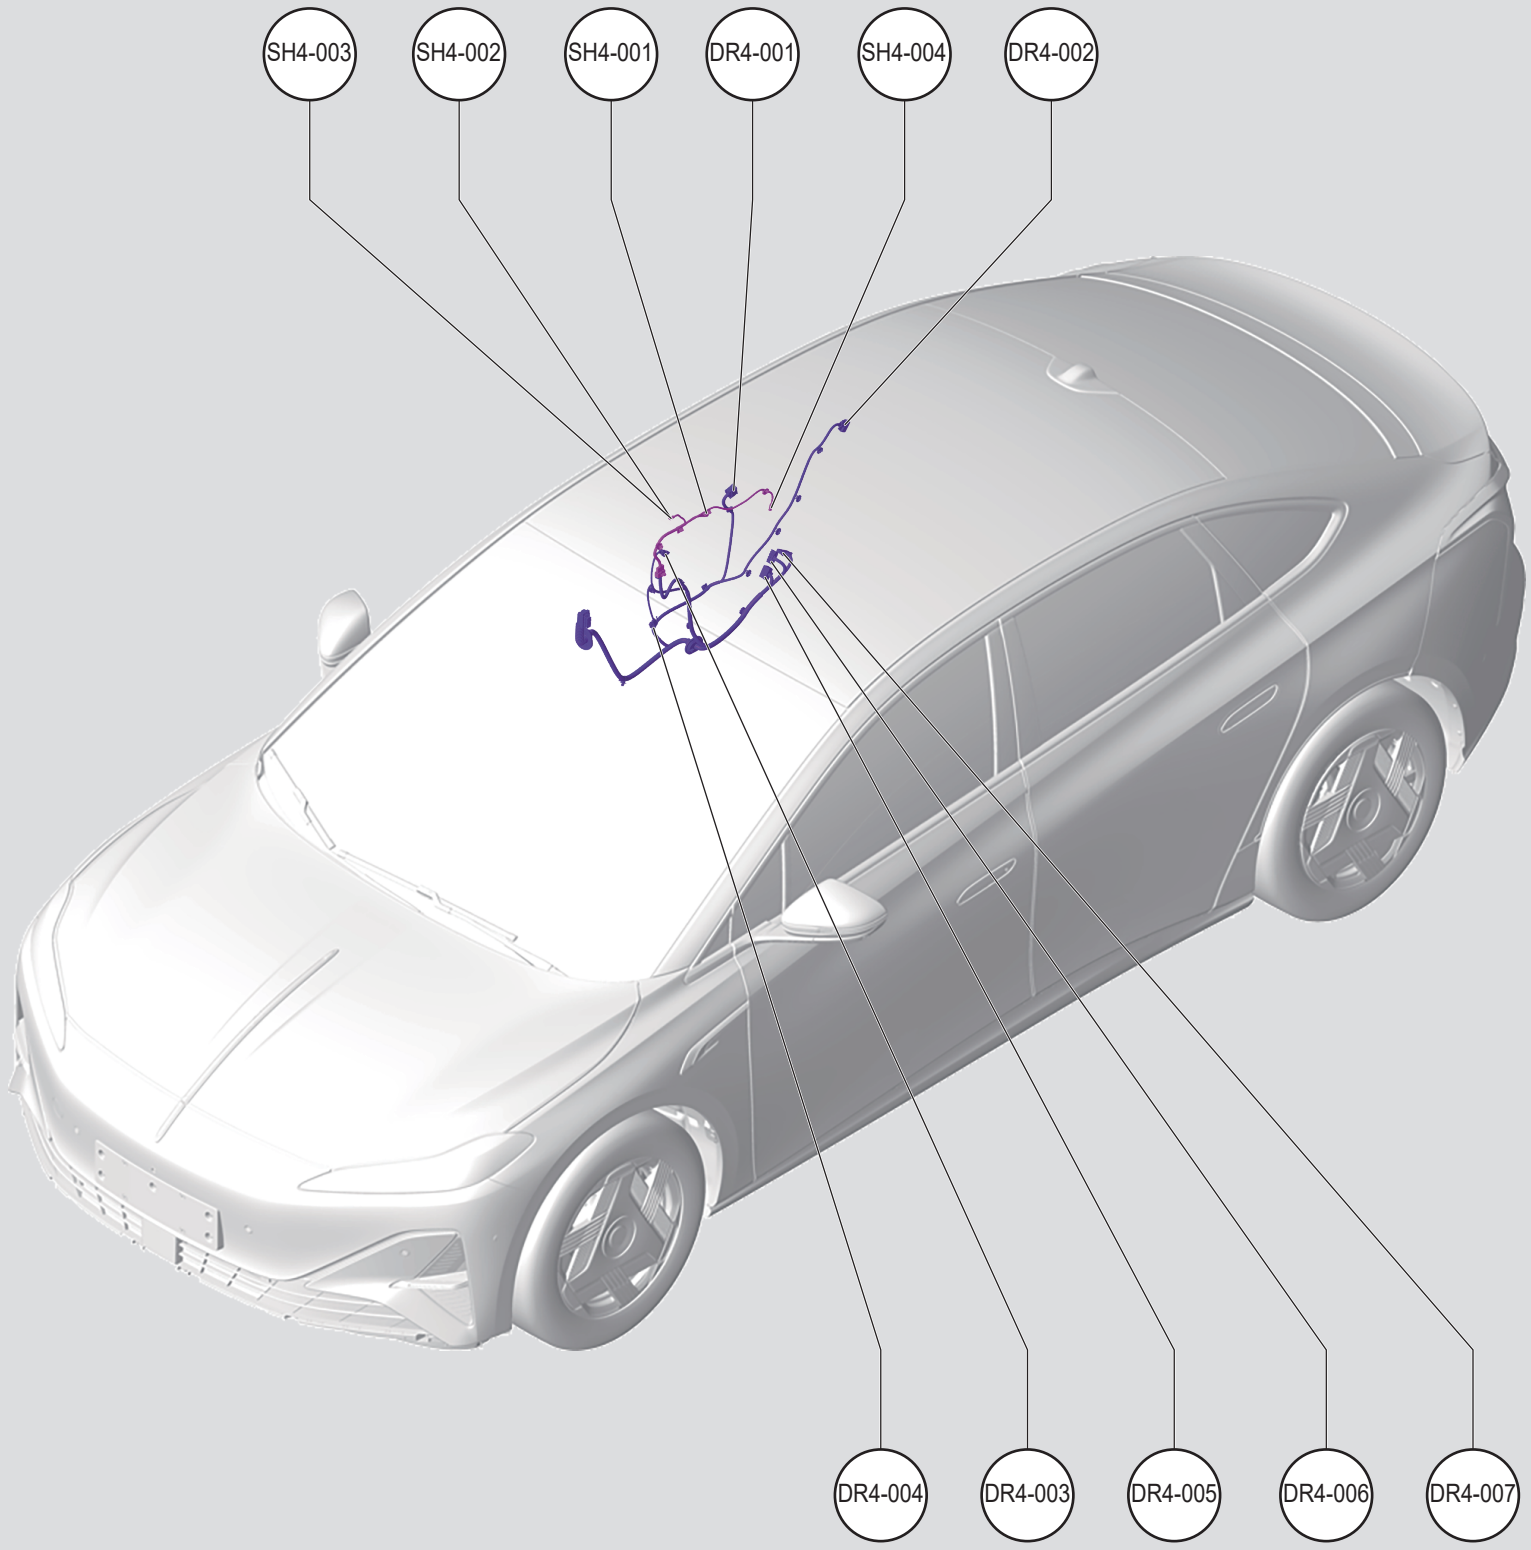
DR3-007 Rear left door control unit C
左后车门控制单元C

SH3-001 Rear left door power window switch
左后门电动窗开关

SH3-002 Door tweeter RL_low configuration
左后门高音扬声器_低配

SH3-003 Door tweeter RL_high configuration
左后门高音扬声器_高配

SH3-004 Door ambient light RL I
左后门氛围灯 I



DR4-001 Door invisible door handle RR
右后门隐形门把手

DR4-002 Door lock RR
右后门锁

DR4-003 Door power window regulator RR
右后门电动玻璃升降器

DR4-004 Door woofer RR
右后门低音扬声器

DR4-005 Rear right door control unit A
右后车门控制单元A

DR4-006 Rear right door control unit B
右后车门控制单元B

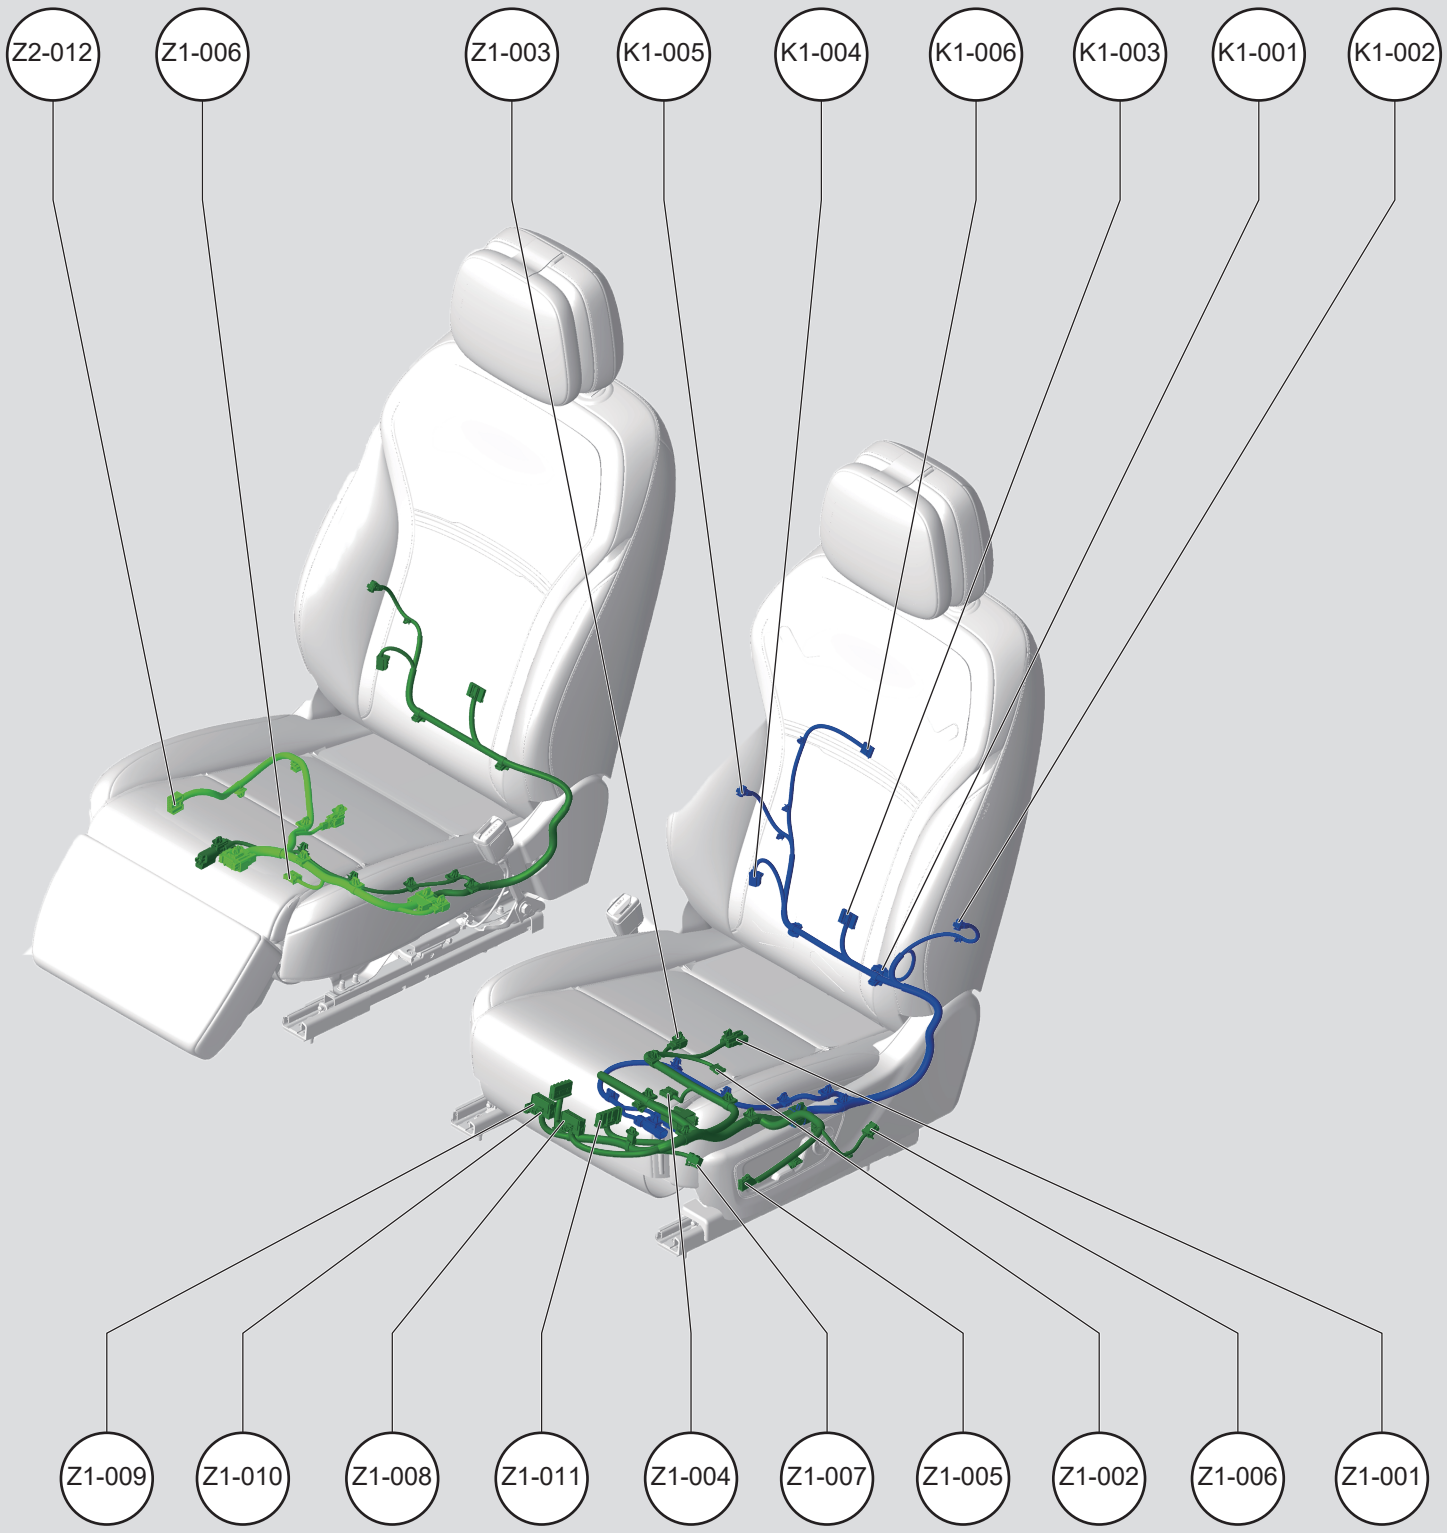
DR4-007 Rear right door control unit C
右后车门控制单元C

SH4-001 Door power window switch RR
右后门电动窗开关

SH4-002 Door tweeter RR_high configuration
右后门高音扬声器_高配

SH4-003 Door tweeter RR_low configuration
右后门高音扬声器_低配

SH4-004 Door ambient light RR I
右后门氛围灯 I



K1-001 Driver seatback heater
主驾座椅靠背加热

K1-002 Driver seat airbag
驾驶员座椅安全气囊

K1-003 Driver massage lumbar support controller
主驾按摩腰托控制器

K1-004 Driver seat angle adjustment motor
主驾座椅角度调节电机

K1-005 Driver seat right airbag
驾驶员座椅右侧安全气囊

K1-006 Driver seatback ventilation motor
主驾座椅靠背通风电机

Z1-001 Driver seat cushion ventilation motor
主驾座椅坐垫通风电机

Z1-002 Driver seat cushion heating
主驾座椅坐垫加热

Z1-003 Driver seat belt buckle
主驾驶员安全带锁扣

Z1-004 Driver seat track motor
主驾座椅滑轨电机

Z1-005 Driver seat height adjustment motor
主驾座椅高调电机

Z1-006 Driver seat adjustment switch - small current
驾驶员座椅调节开关-小电流

Z1-006 Driver seat adjustment switch - small current
驾驶员座椅调节开关-小电流

Z1-007 Driver seat tilt forward motor
主驾座椅前倾电机

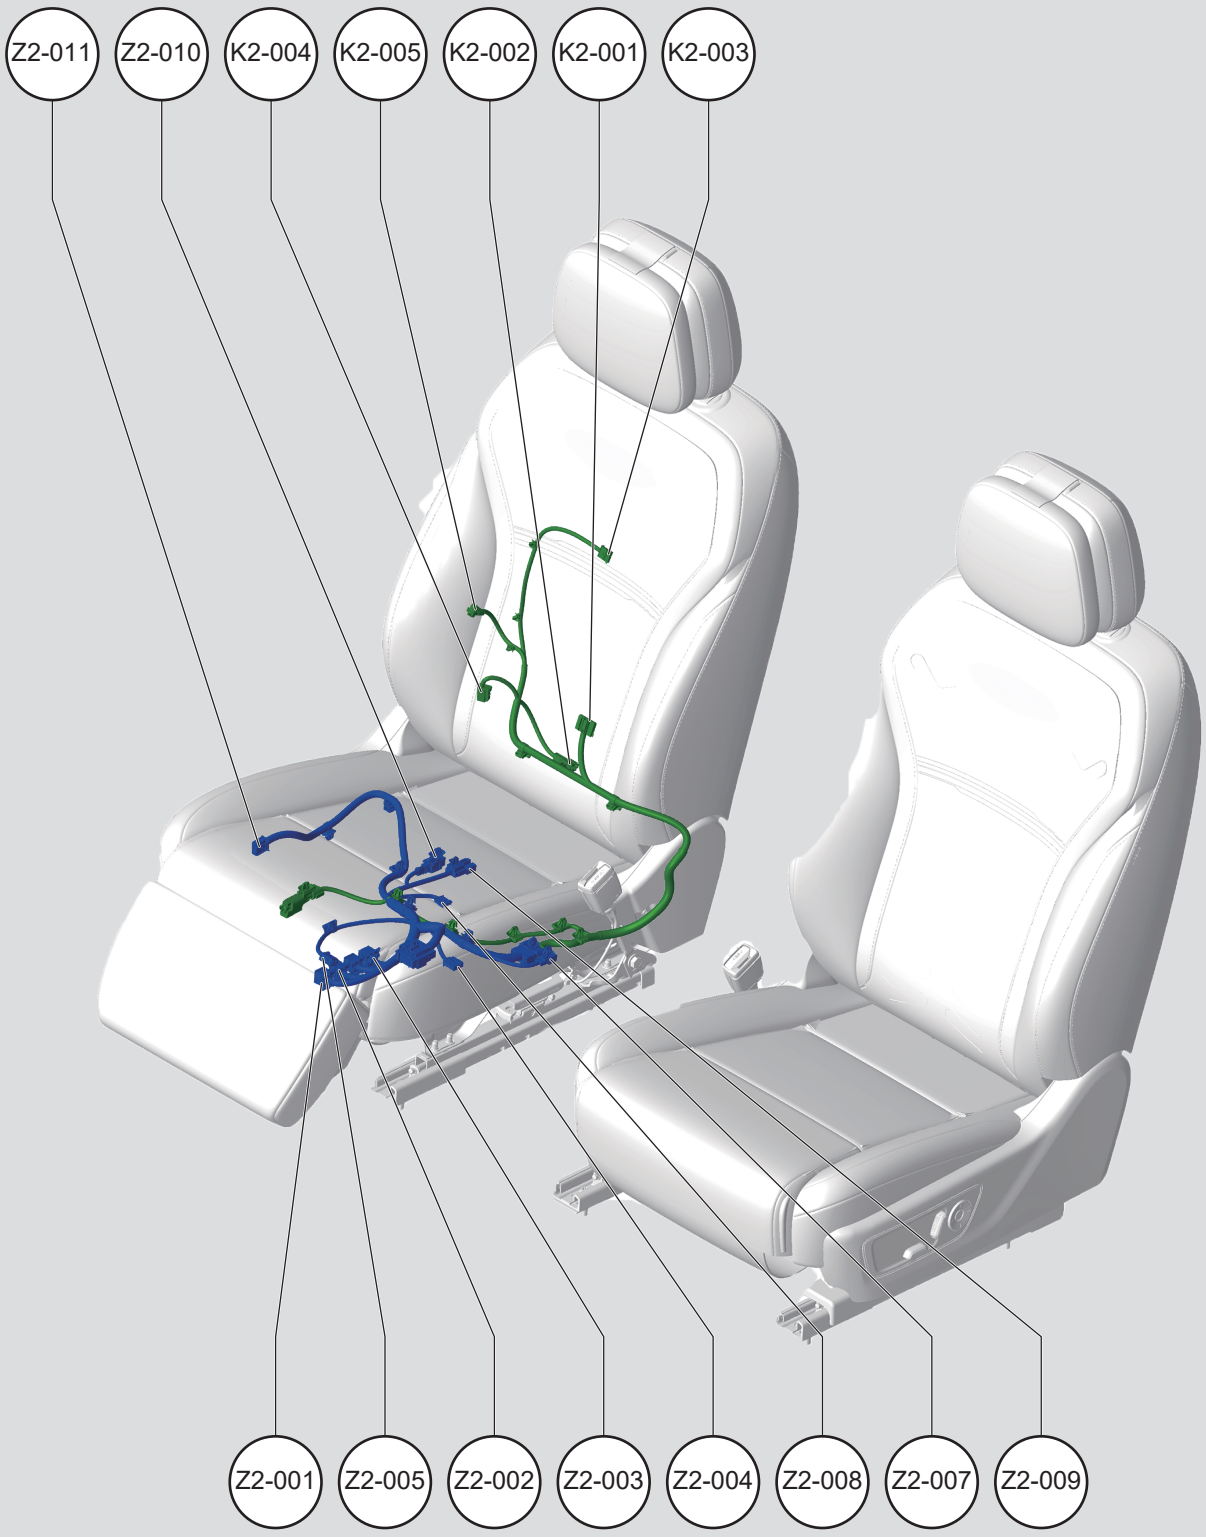
Z1-008 Driver seat control unit A
驾驶员座椅控制单元A

Z1-009 Driver seat control unit B
驾驶员座椅控制单元B

Z1-010 Driver seat control unit C
驾驶员座椅控制单元C

Z1-011 Driver seat control unit D
驾驶员座椅控制单元D

Z2-012 Front passenger seat adjustment switch- large current
副驾驶员座椅调节开关-大电流



K2-001 Front passenger massage lumbar support controller
副驾按摩腰托控制器

K2-002 Front passenger seatback heater
副驾座椅靠背加热

K2-003 Front passenger seatback ventilation motor
副驾座椅靠背通风电机

K2-004 Front passenger seat angle adjustment motor
副驾座椅角度调节电机

K2-005 Front passenger seat airbag
副驾驶员座椅安全气囊

Z2-001 Front passenger seat control unit D
副驾驶员座椅控制单元D

Z2-002 Front passenger seat control unit C
副驾驶员座椅控制单元C

Z2-003 Front passenger seat control unit A
副驾驶员座椅控制单元A

Z2-004 Front passenger leg support length adjustment motor
副驾腿托长度调节电机

Z2-005 Front passenger leg support angle adjustment motor
副驾腿托角度调节电机

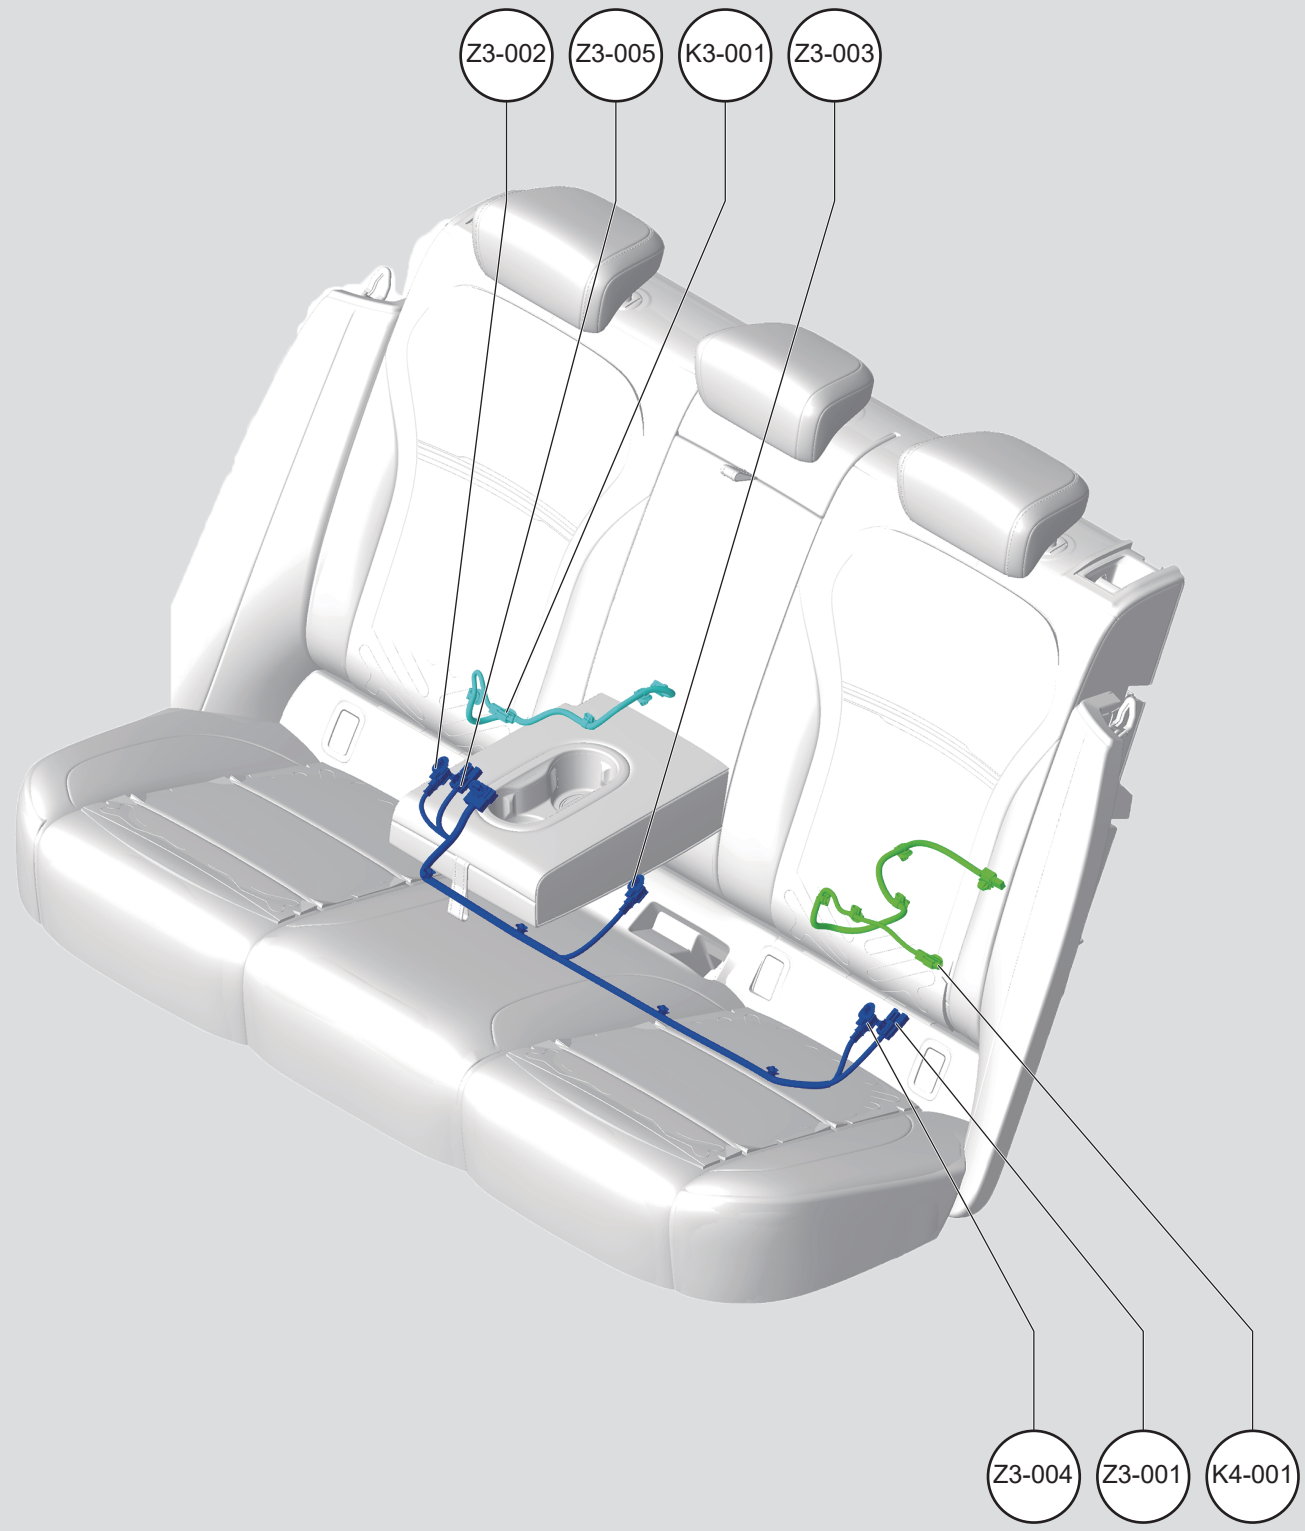
Z2-007 Front passenger seat belt buckle
副驾驶员安全带锁扣

Z2-008 Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机

Z2-009 Front passenger seat cushion heater
副驾座椅坐垫加热

Z2-010 Front passenger seat occupancy sensor
副驾驶座椅占位传感器

Z2-011 Front passenger seat adjustment switch - small current
副驾驶员座椅调节开关-小电流



K3-001 Seatback heater RL
左后座椅靠背加热

K4-001 Seatback heater RR
右后座椅靠背加热

Z3-001 Rear left seat cushion heating
左后座椅坐垫加热

Z3-002 Rear right occupancy sensor
后排右侧占位传感器

Z3-003 Rear center occupancy sensor
后排中间占位传感器

Z3-004 Rear left occupancy sensor
后排左侧占位传感器

Z3-005 Rear right seat cushion heating
右后座椅坐垫加热