
HONGQI EH5

Sedan, 5-seater, 4-doors, 2025-

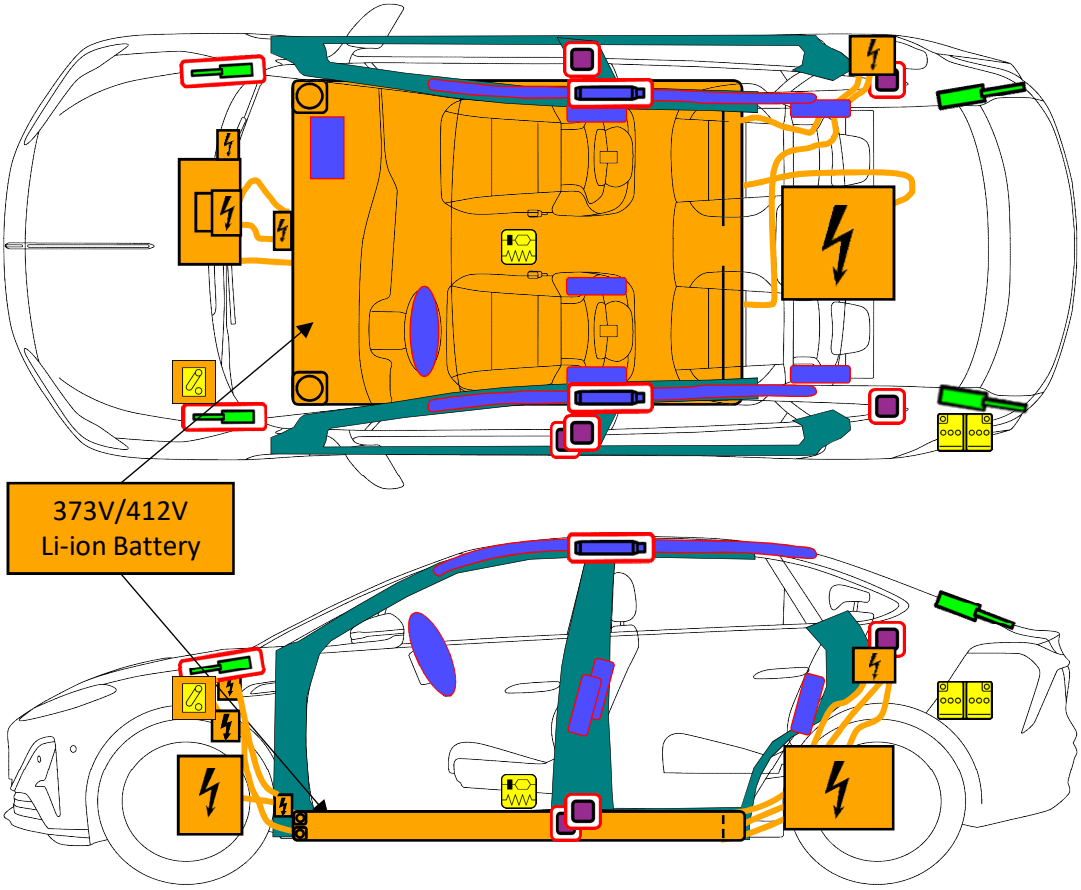






	Airbag		Seat belt pretensioner		Battery pack, high-voltage
	Gas strut / Preloaded spring		SRS control unit		High voltage component
	High strength zone		Stored gas inflator		Battery low voltage
	Low voltage device that disconnects high voltage		High voltage power cable		

HONGQI EH5

Sedan, 5-seater, 4-doors, 2025-


1. Identification / recognition

⚠ LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

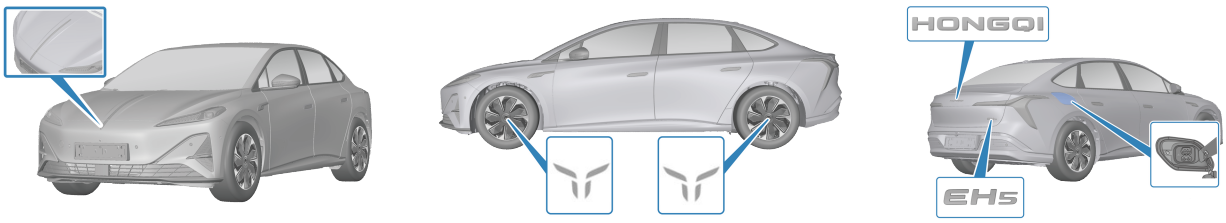

2. Immobilisation / stabilisation / lifting

Immobilise the vehicle

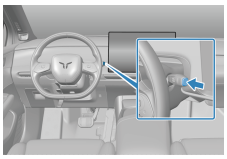

Shift into"P"



Engage EPB




Turn off the ignition



Parking wedge

Stabilisation-lifting points

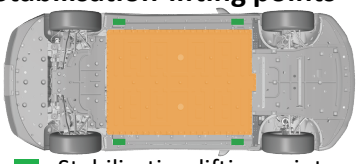


Stabilisation-lifting points


High-voltage battery

3. Disable direct hazards / safety regulations


Main disabling method

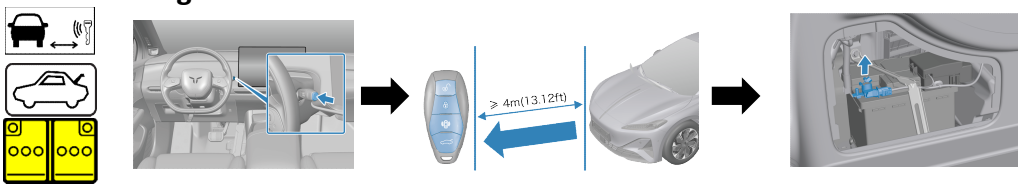

Alternative disabling method

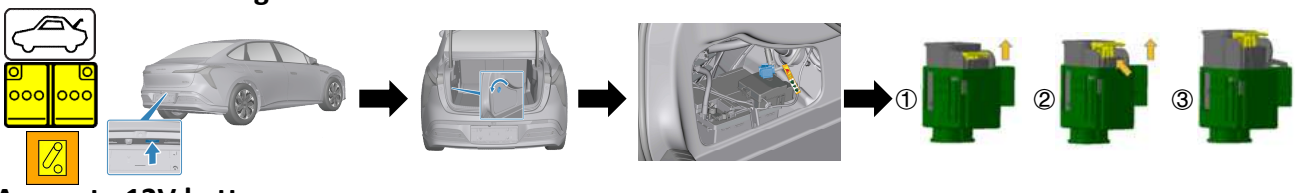

Access to 12V battery

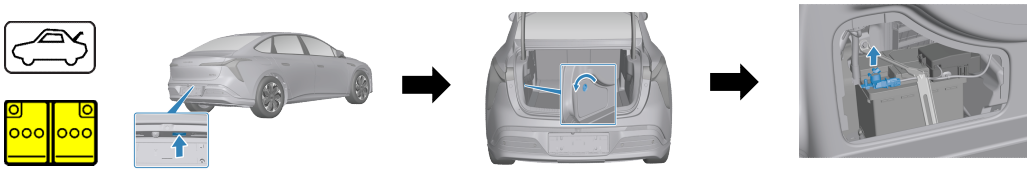

⚠ Do not touch , or open high-voltage components and the high-voltage battery!
Wear appropriate personal protective equipment!


In the event of an accident in which the airbags are deployed , the high-voltages system will be automatically deactivated.

HONGQI EH5


Sedan, 5-seater, 4-doors, 2025-

4. Access to the occupants

Glass types

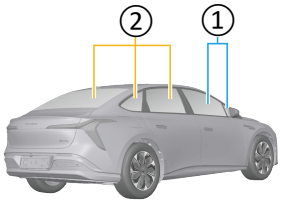


①Laminated glass

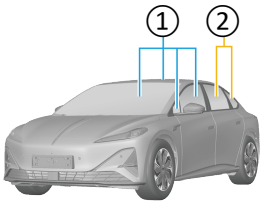


②Tempered glass

High strength zone

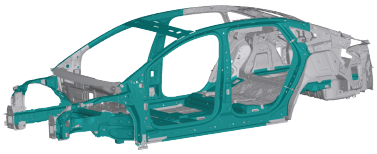


Steering column adjustment

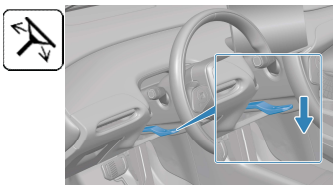


Mechanical

Door opening

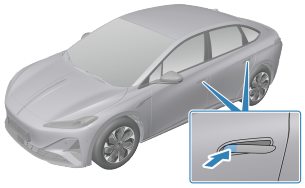


Electric

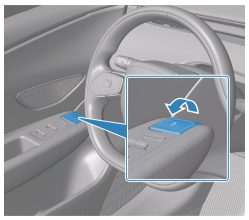


Mechanical

Seat adjustment

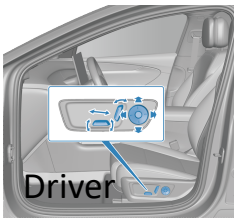

Electric

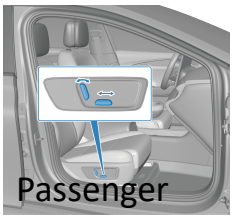

Electric

If the low-voltage battery is powered off, various electrical adjustments in the vehicle will not be properly operated, such as seat electric adjustment

5. Stored energy / liquids / gases / solids

		12V
Li-ion		373V/412V
		R1234yf 1100±15g

When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera. Always wear appropriate PPE.

IR

6. In case of fire

Extinguish the fire using large amounts of water.

IR

BATTERY RE-IGNITION!

HONGQI EH5


Sedan, 5-seater, 4-doors, 2025-

7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.

8. Towing / transportation / storage

Hook Storage Position **Hook Front** **Hook Back**

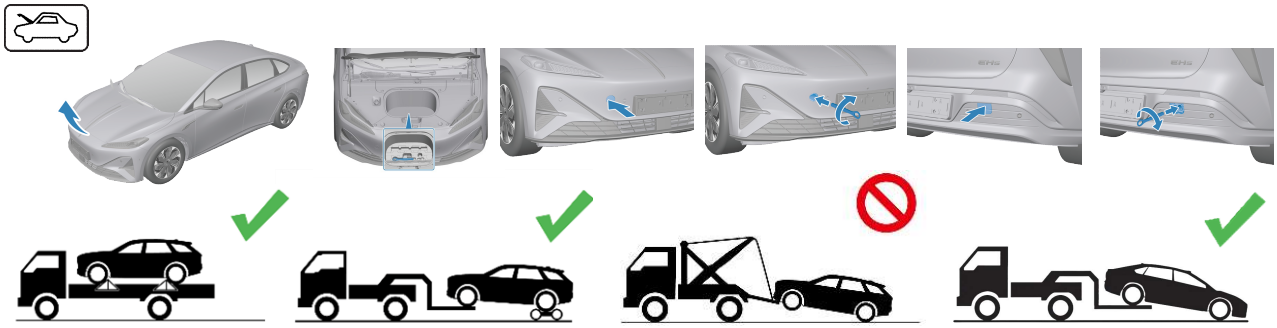

Store at a safe distance from other vehicles!

IR

BATTERY RE-IGNITION!

9. Important additional information

Para más información sobre el rescate, consulte
https://www.hongqi-auto.com/pages/cartype/

10. Explanation of pictograms used

	General warning sign		Explosive		Warning; low temperature
	Remove smart key		Corrosives		Use water to extinguish the fire
	Bonnet		Acute toxicity	IR	Use thermal Infrared camera
	Boot		Hazardous to the human health		Electric Vehicle
	Flammable		Air-conditioning component		Warning, Electricity
	Steering wheel, tilt control		Seat height adjustment		Seat adjustment, longitudinal