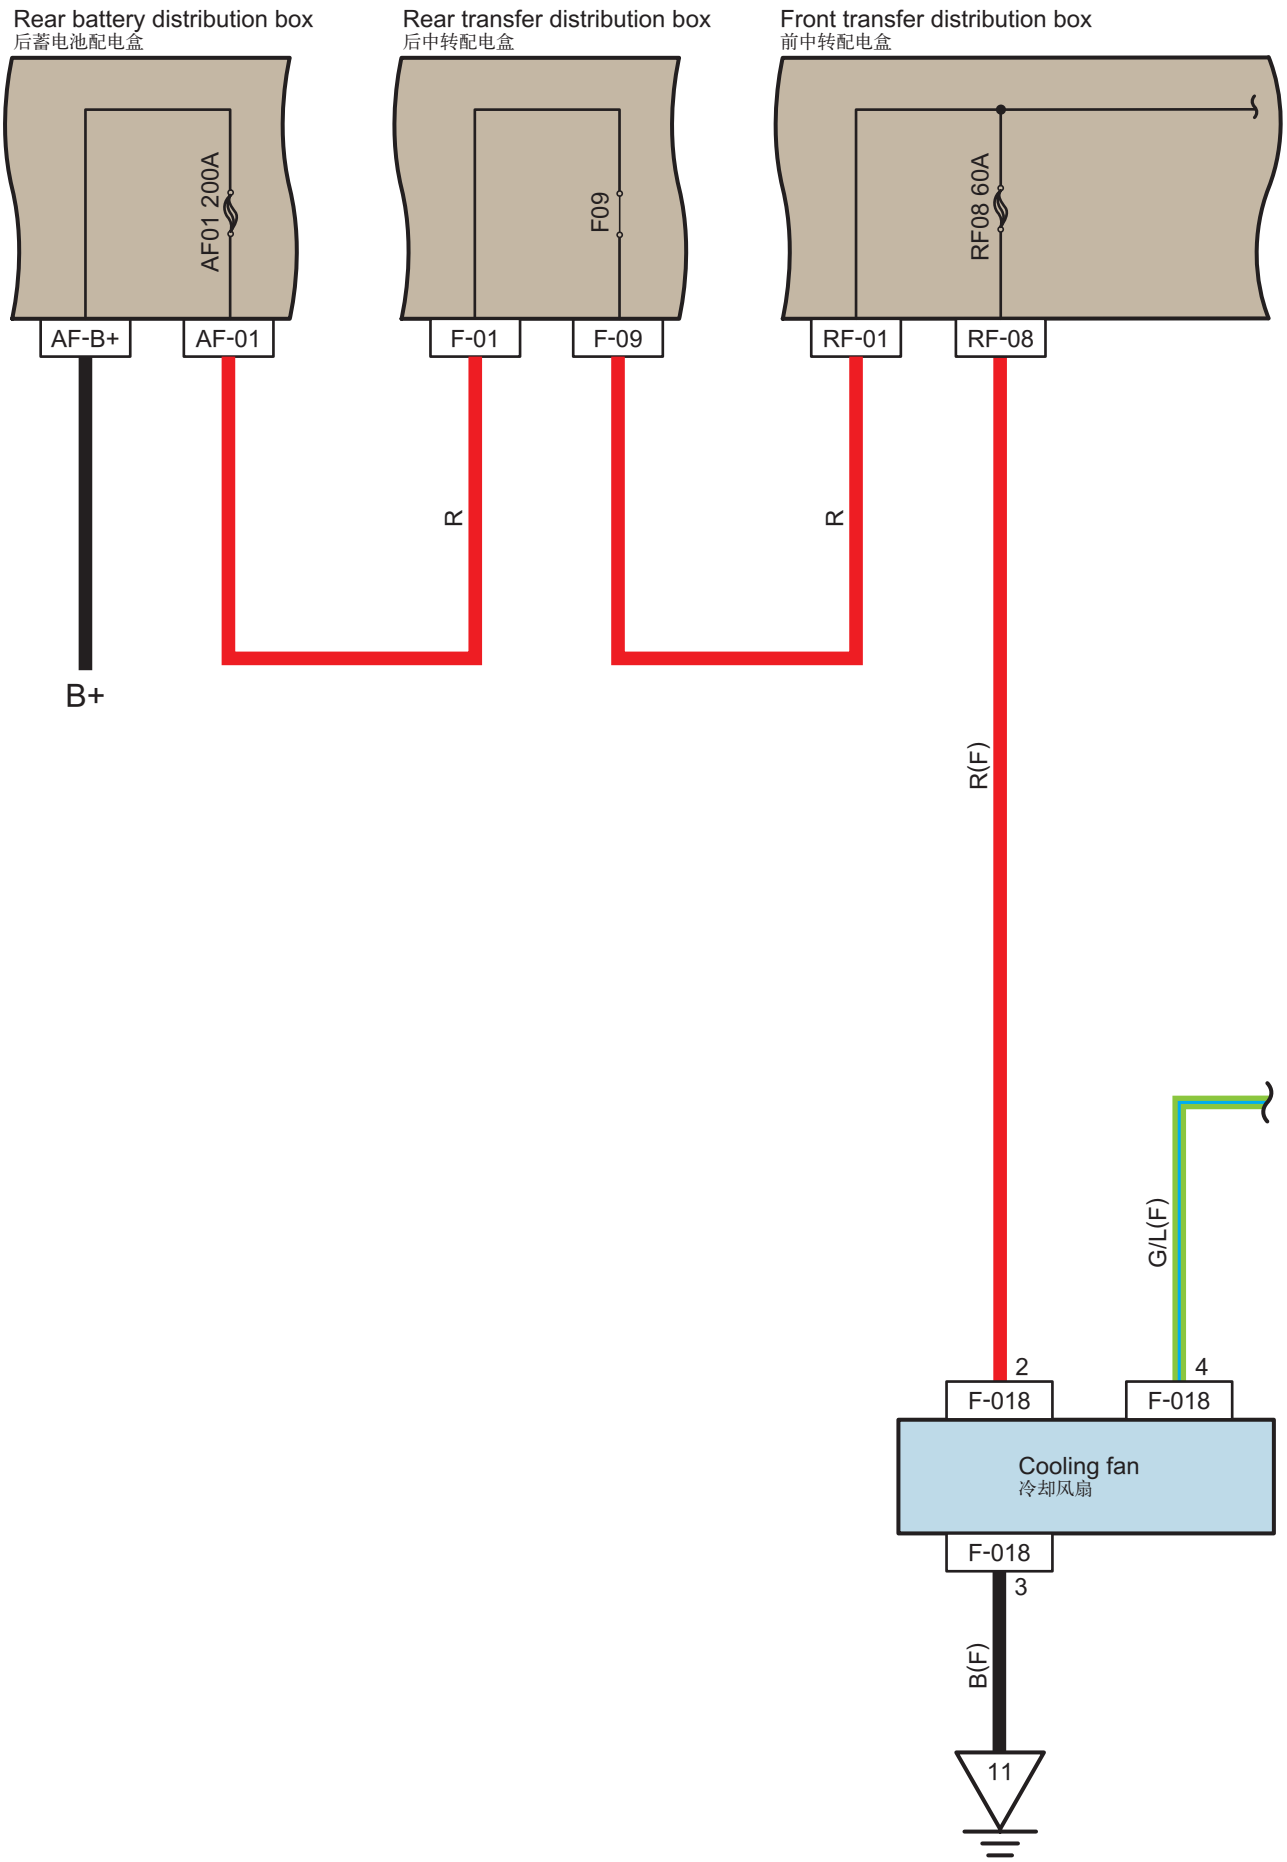
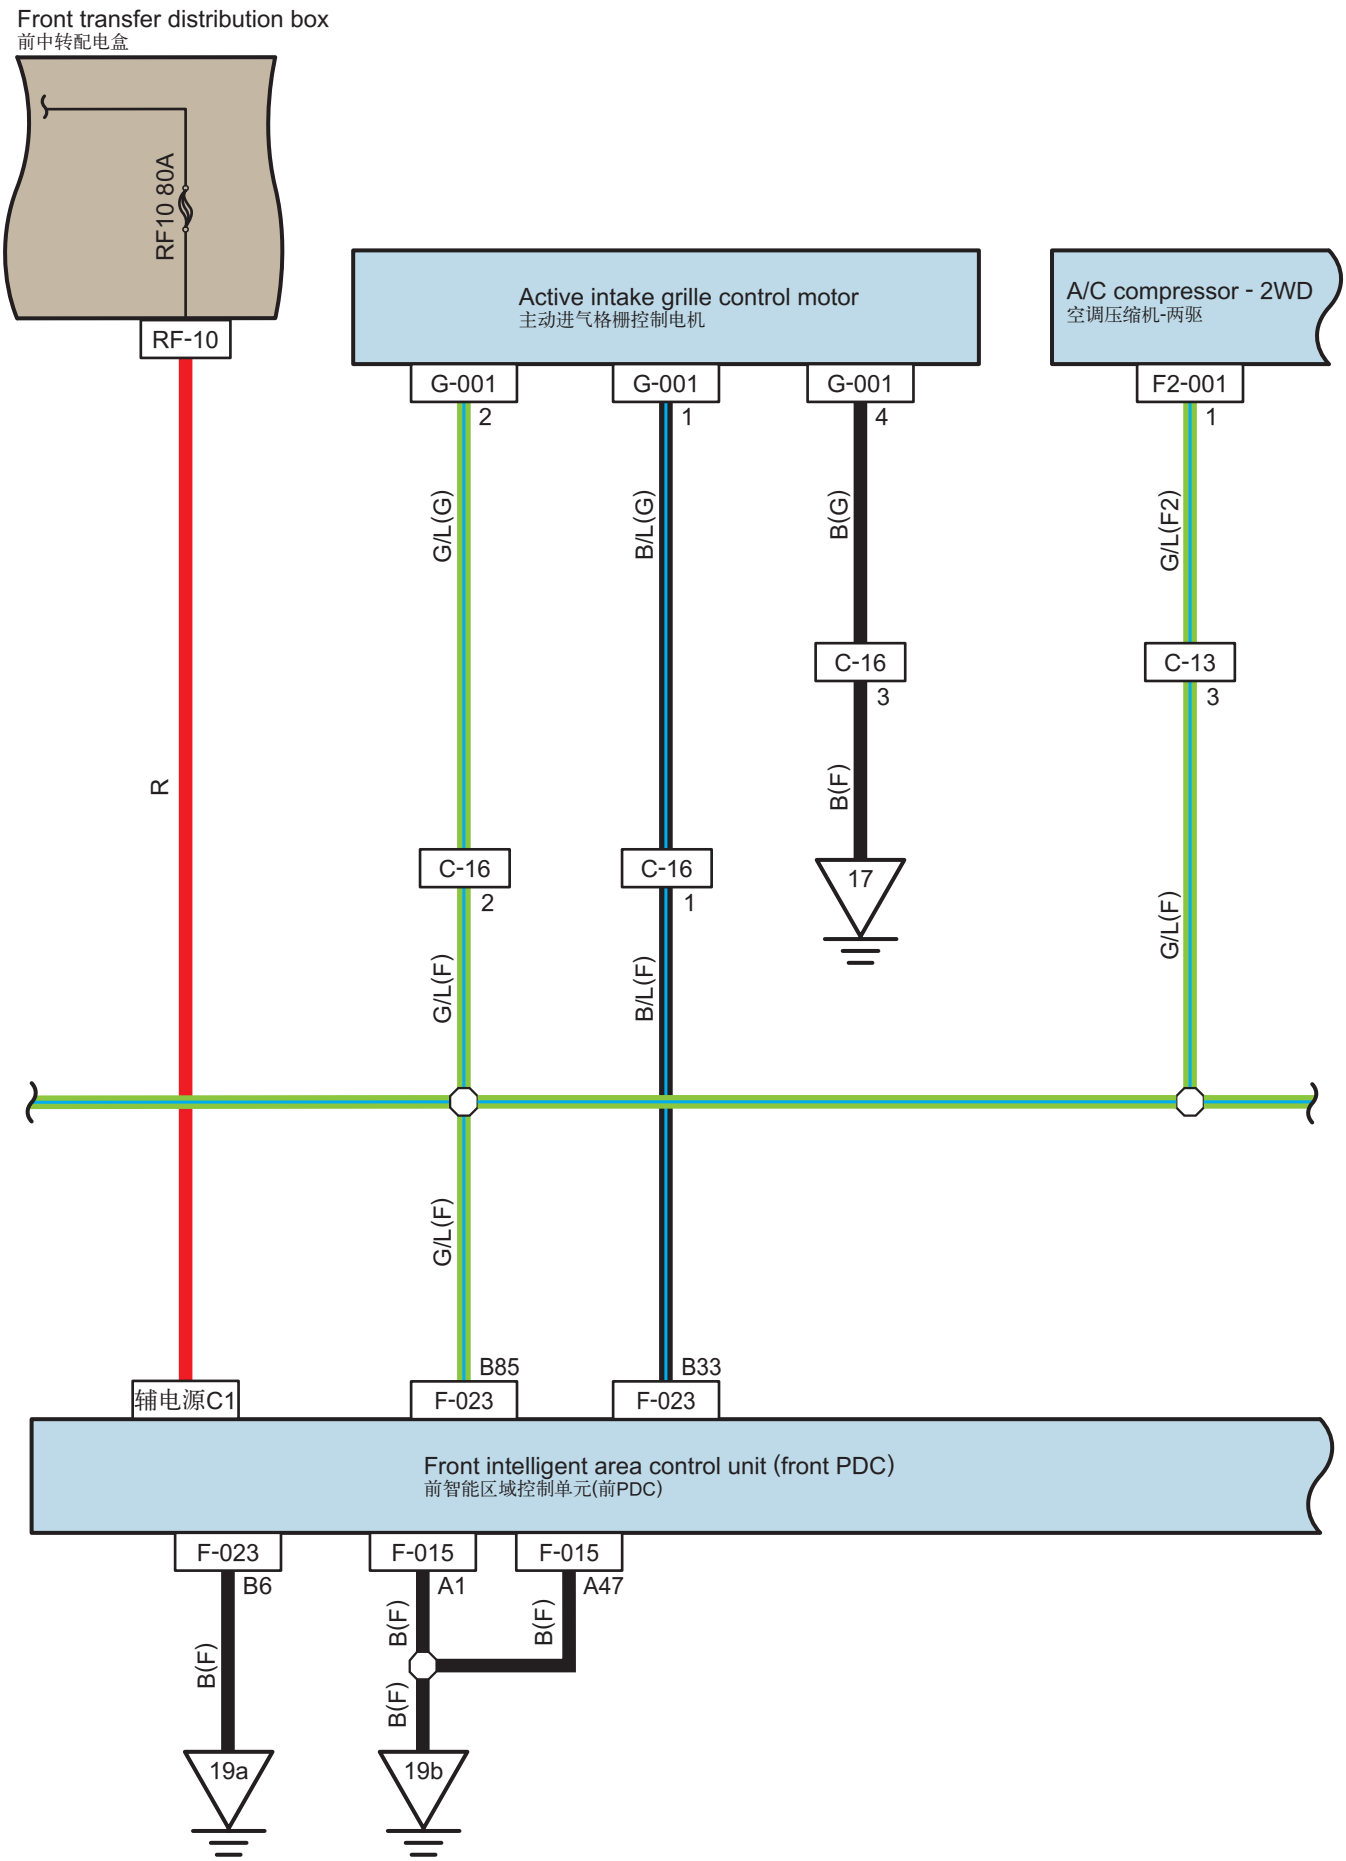
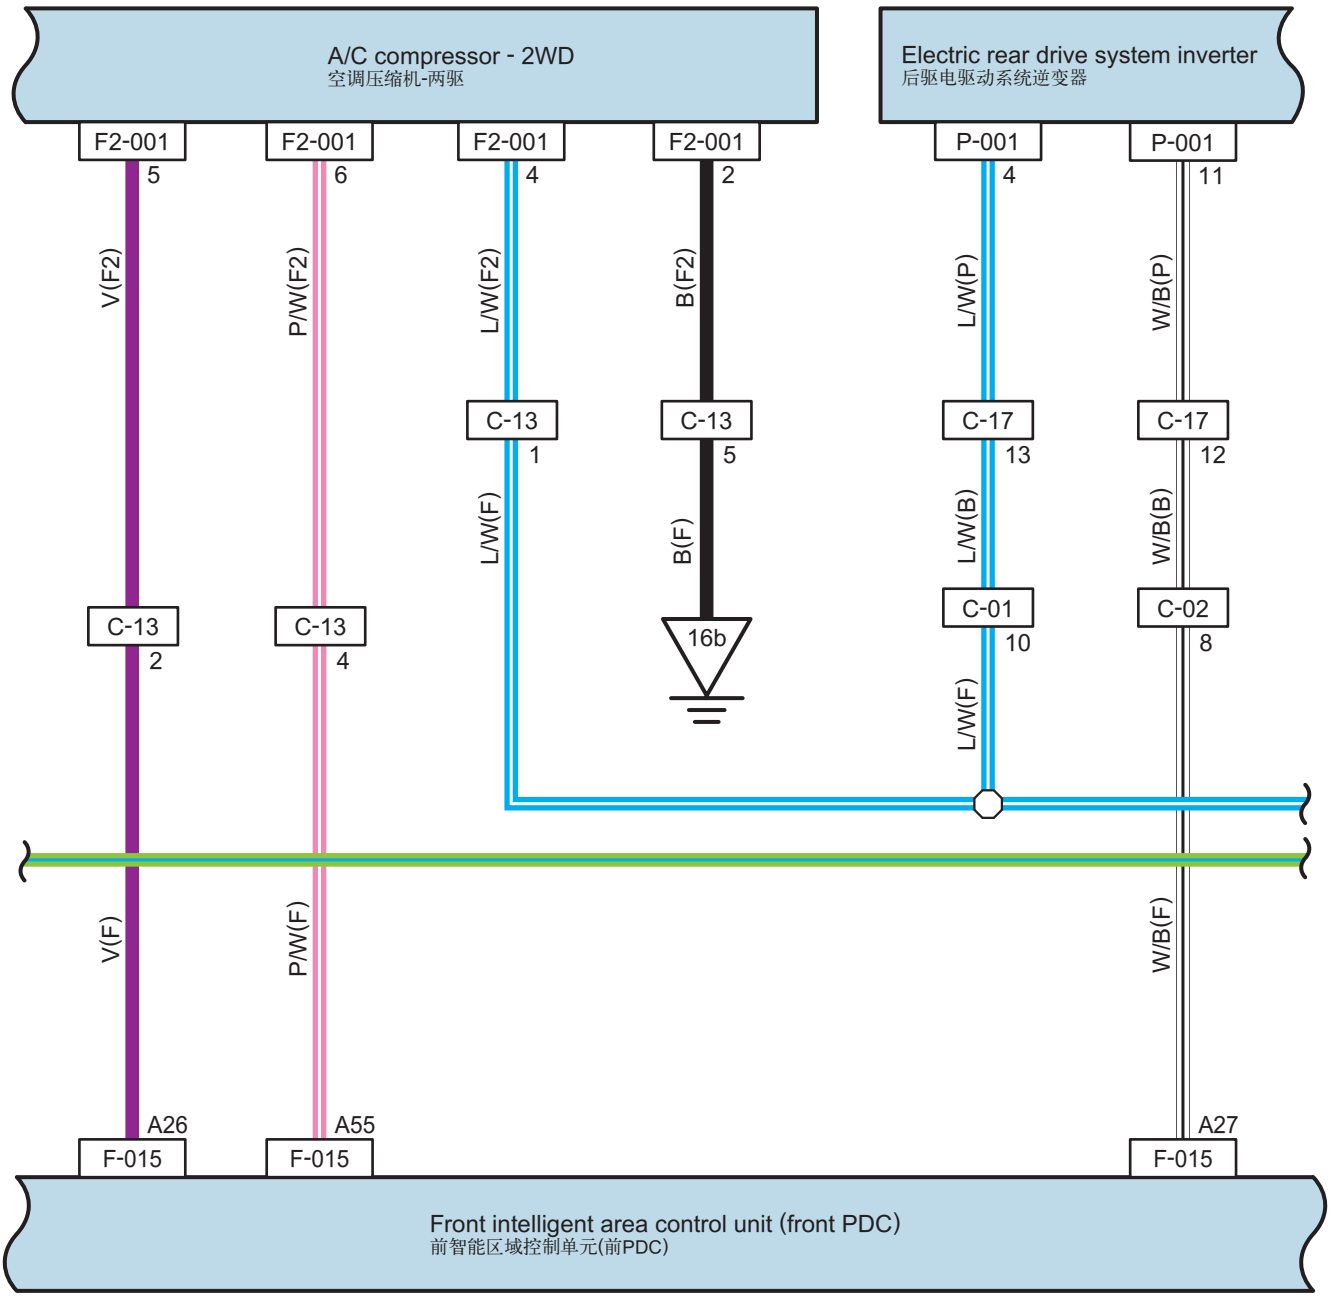
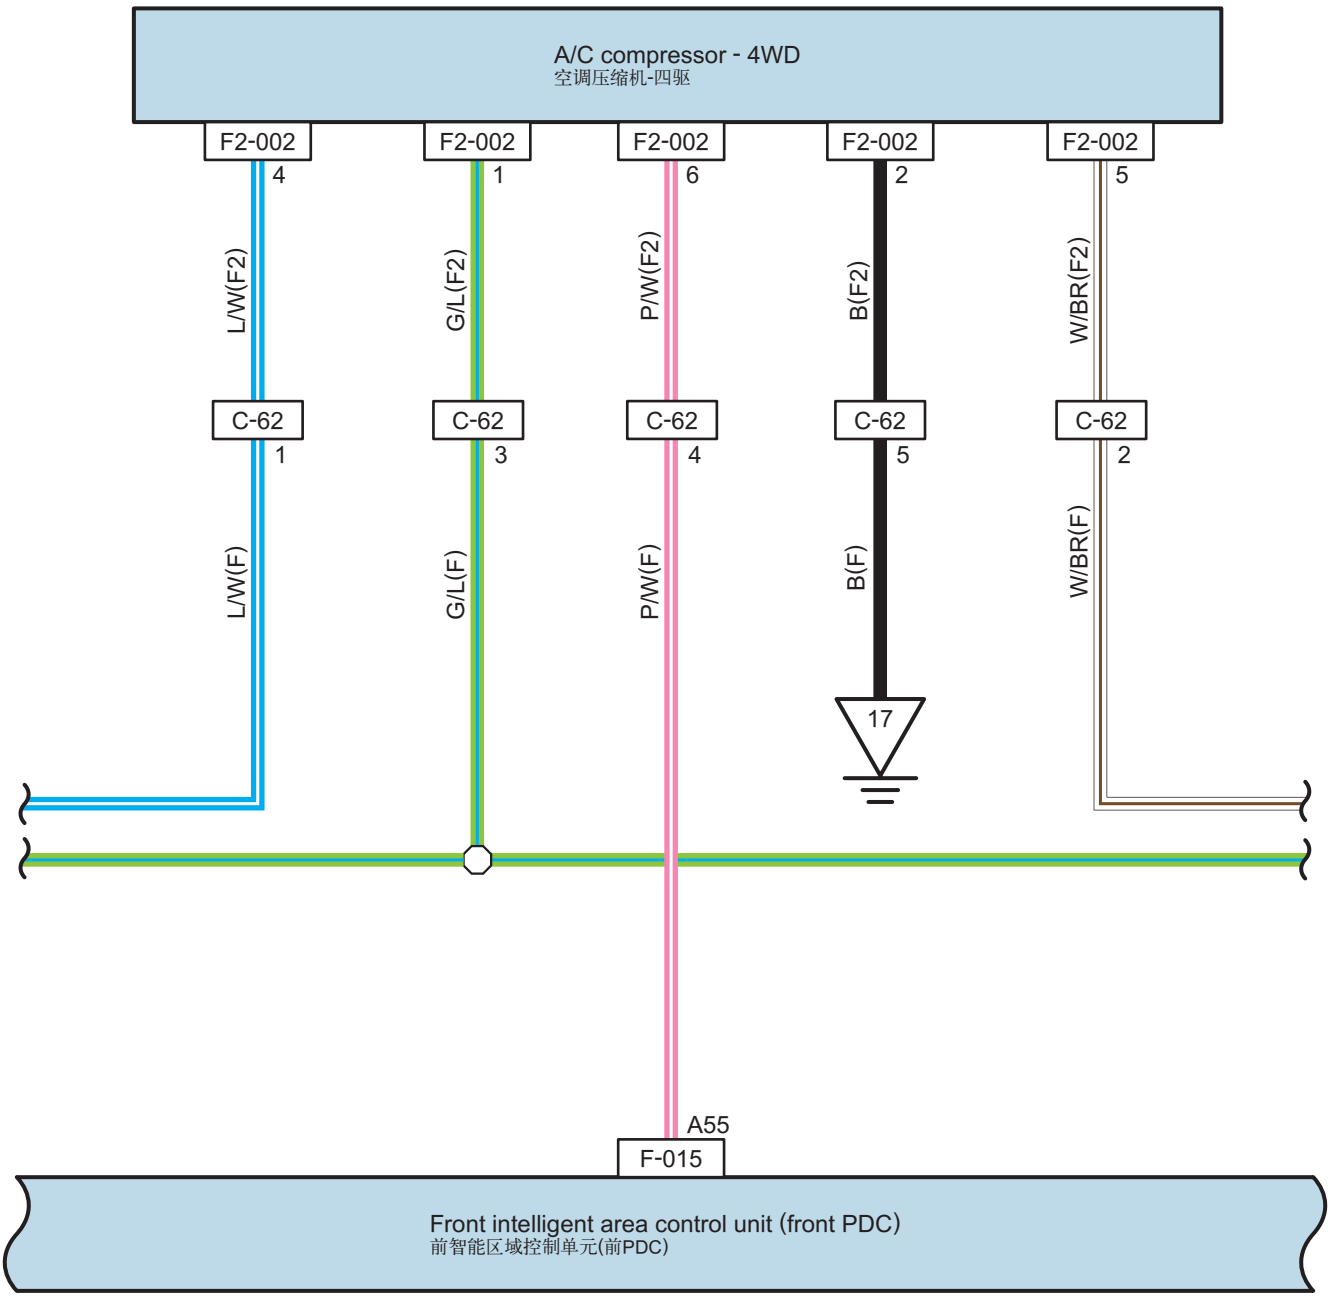
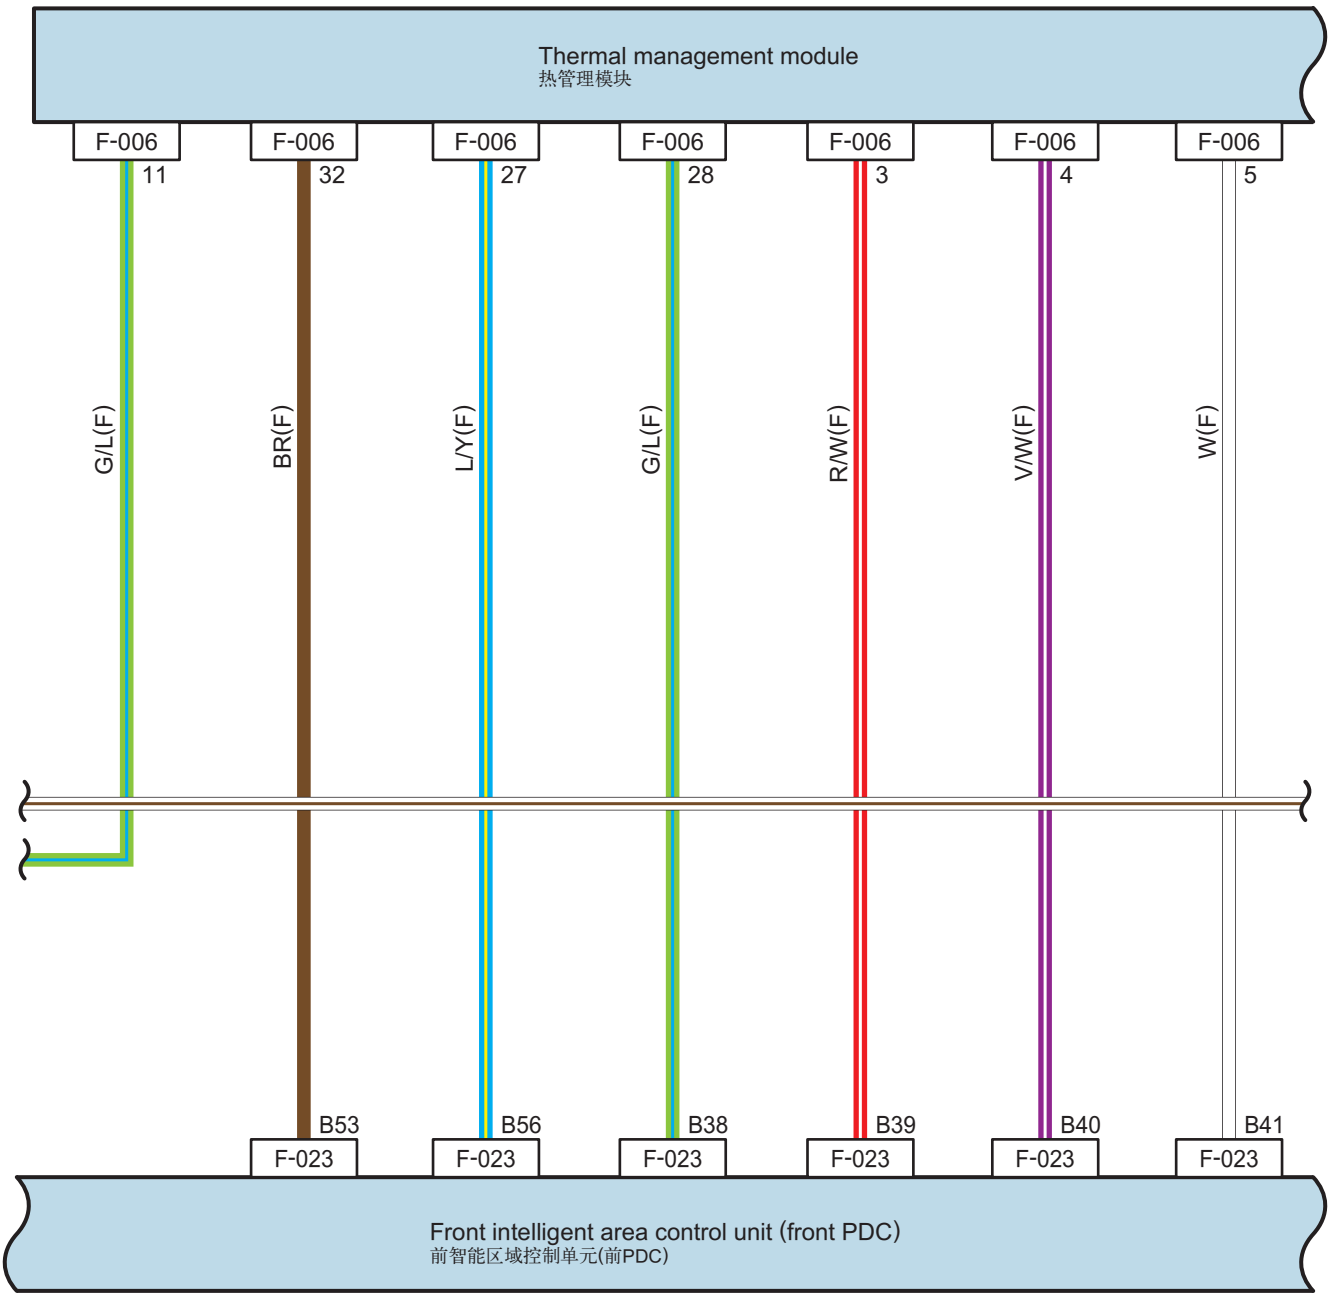
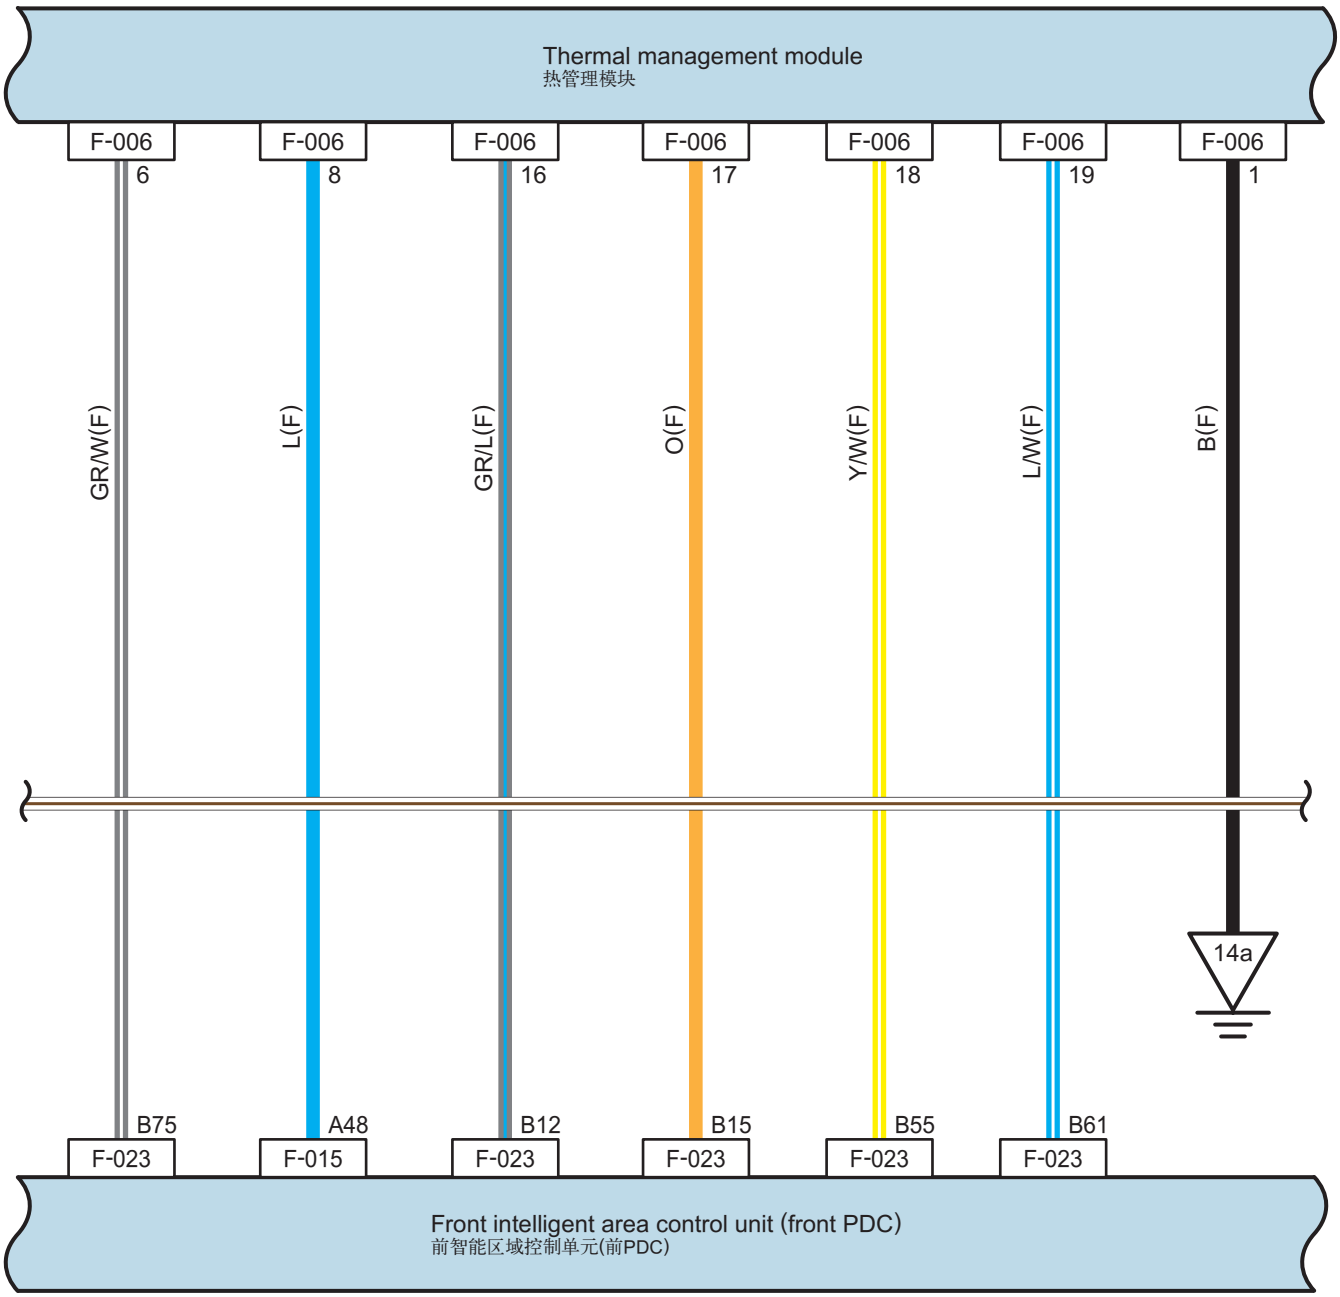

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
R
Rear transfer distribution box
后中转配电盒
F09
F-01
F-09
R
Front transfer distribution box
前中转配电盒
RF08 60A
RF-01
RF-08
R(F)
G/L(F)
2
4
F-018
F-018
Cooling fan
冷却风扇
F-018
3
B(F)
11

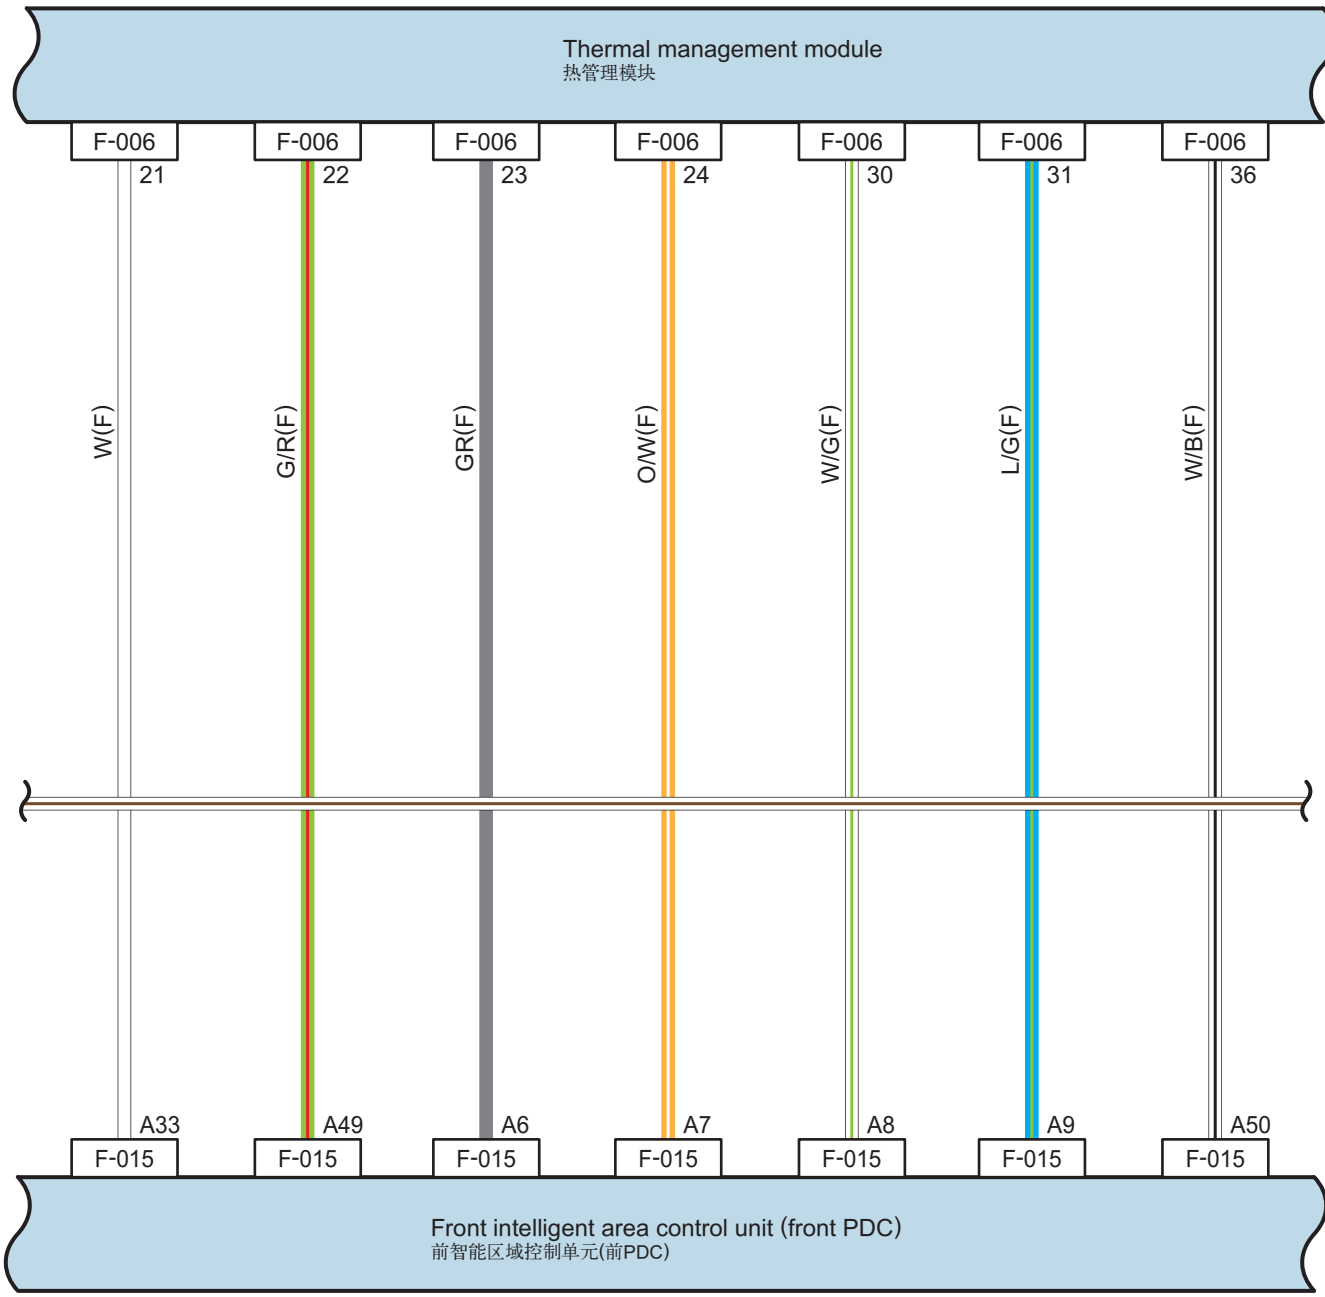

Front transfer distribution box
前中转配电盒
RF10 80A
RF-10
Active intake grille control motor
主动进气格栅控制电机
A/C compressor - 2WD
空调压缩机-两驱
G-001
2
G-001
1
G-001
4
F2-001
1
G/L(G)
B/L(G)
B(G)
G/L(F2)
C-16
3
C-13
3
B(F)
R
C-16
2
C-16
1
17
G/L(F)
B/L(F)
G/L(F)
B85
B33
辅电源C1
F-023
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
F-023
B6
F-015
A1
F-015
A47
B(F)
B(F)
B(F)
B(F)
19a
19b

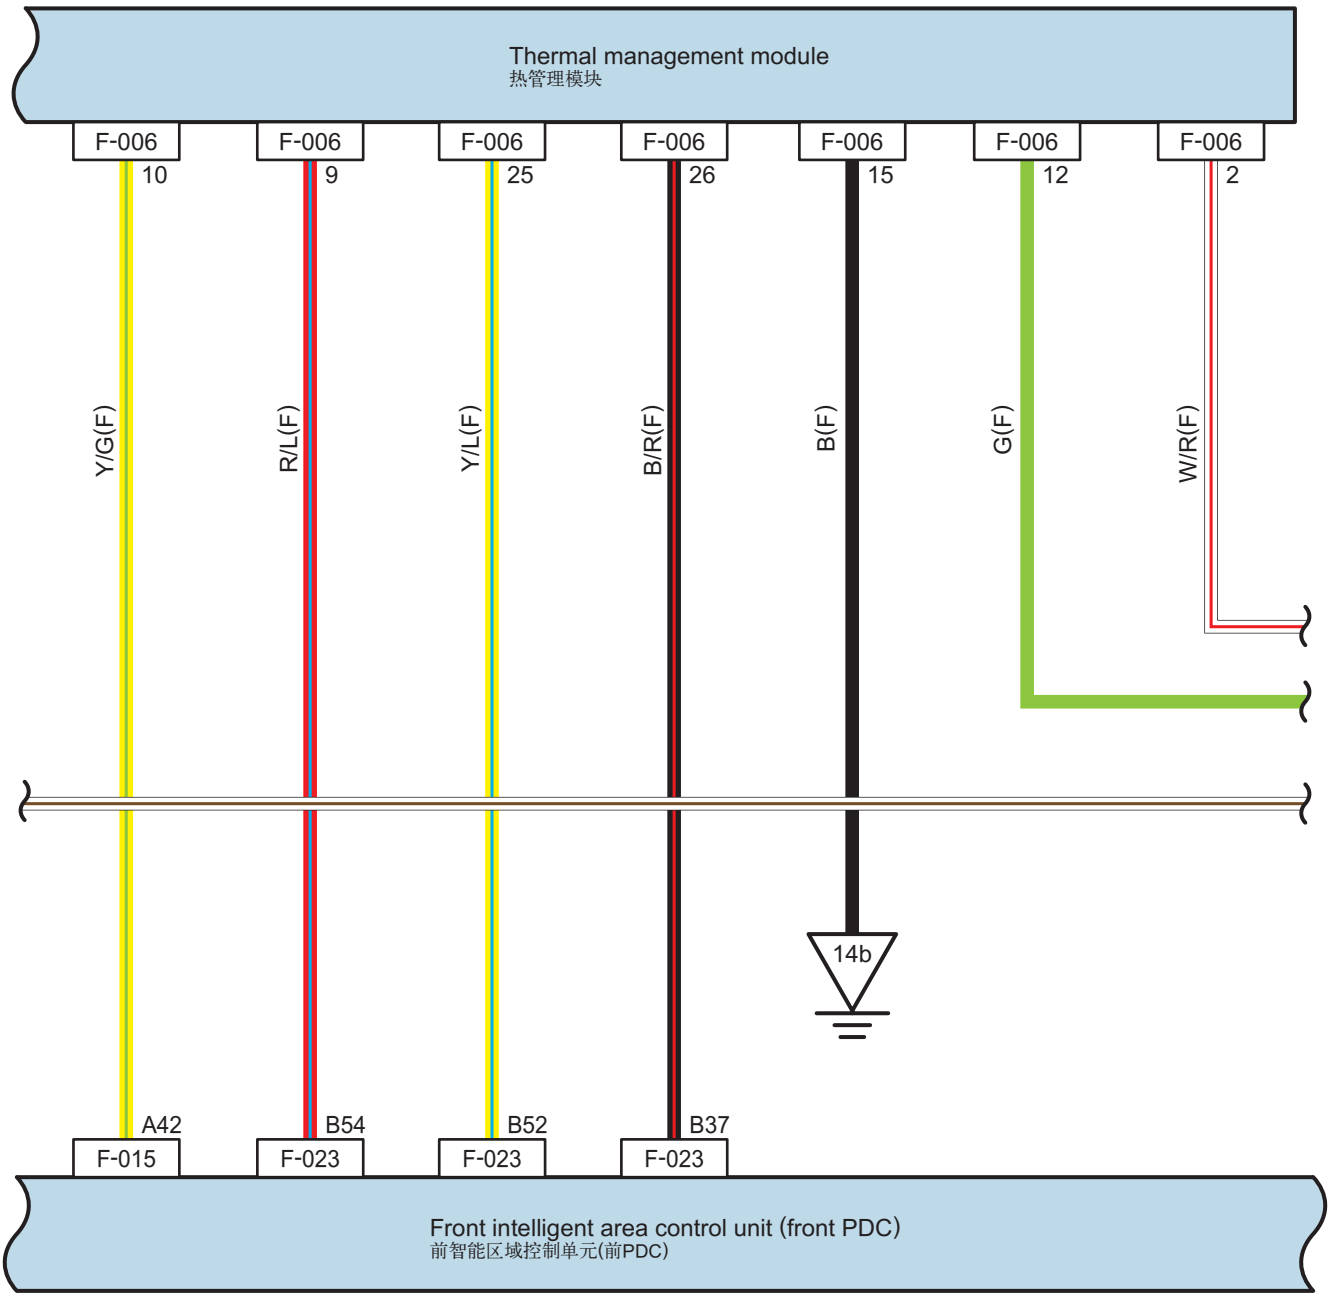

A/C compressor - 2WD
空调压缩机-两驱
Electric rear drive system inverter
后驱电驱动系统逆变器
F2-001
5
F2-001
6
F2-001
4
F2-001
2
P-001
4
P-001
11
V(F2)
P/W(F2)
L/W(F2)
B(F2)
L/W(P)
W/B(P)
C-13
1
C-13
5
C-17
13
C-17
12
L/W(F)
B(F)
L/W(B)
W/B(B)
C-13
2
C-13
4
C-01
10
C-02
8
16b
L/W(F)
V(F)
P/W(F)
W/B(F)
A26
A55
A27
F-015
F-015
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

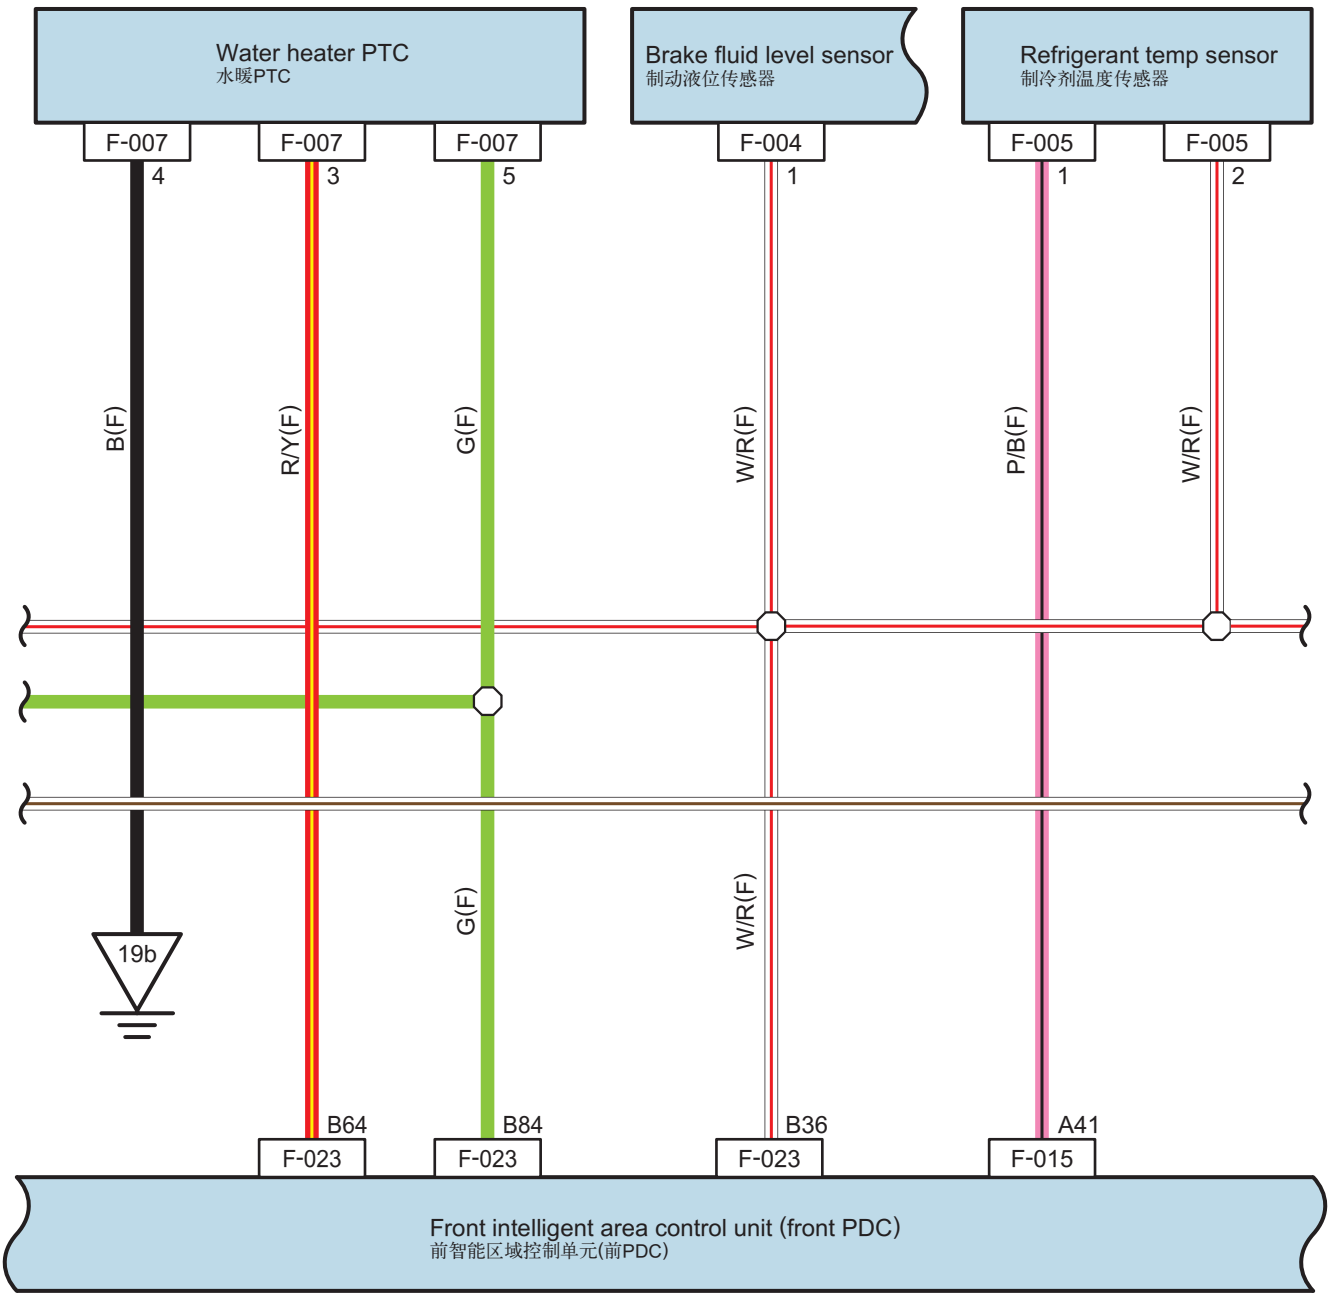

A/C compressor - 4WD
空调压缩机-四驱
F2-002
4
L/W(F2)
C-62
1
L/W(F)
F2-002
1
G/L(F2)
C-62
3
G/L(F)
F2-002
6
P/W(F2)
C-62
4
P/W(F)
F2-002
2
B(F2)
C-62
5
B(F)
17
F2-002
5
W/BR(F2)
C-62
2
W/BR(F)
A55
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

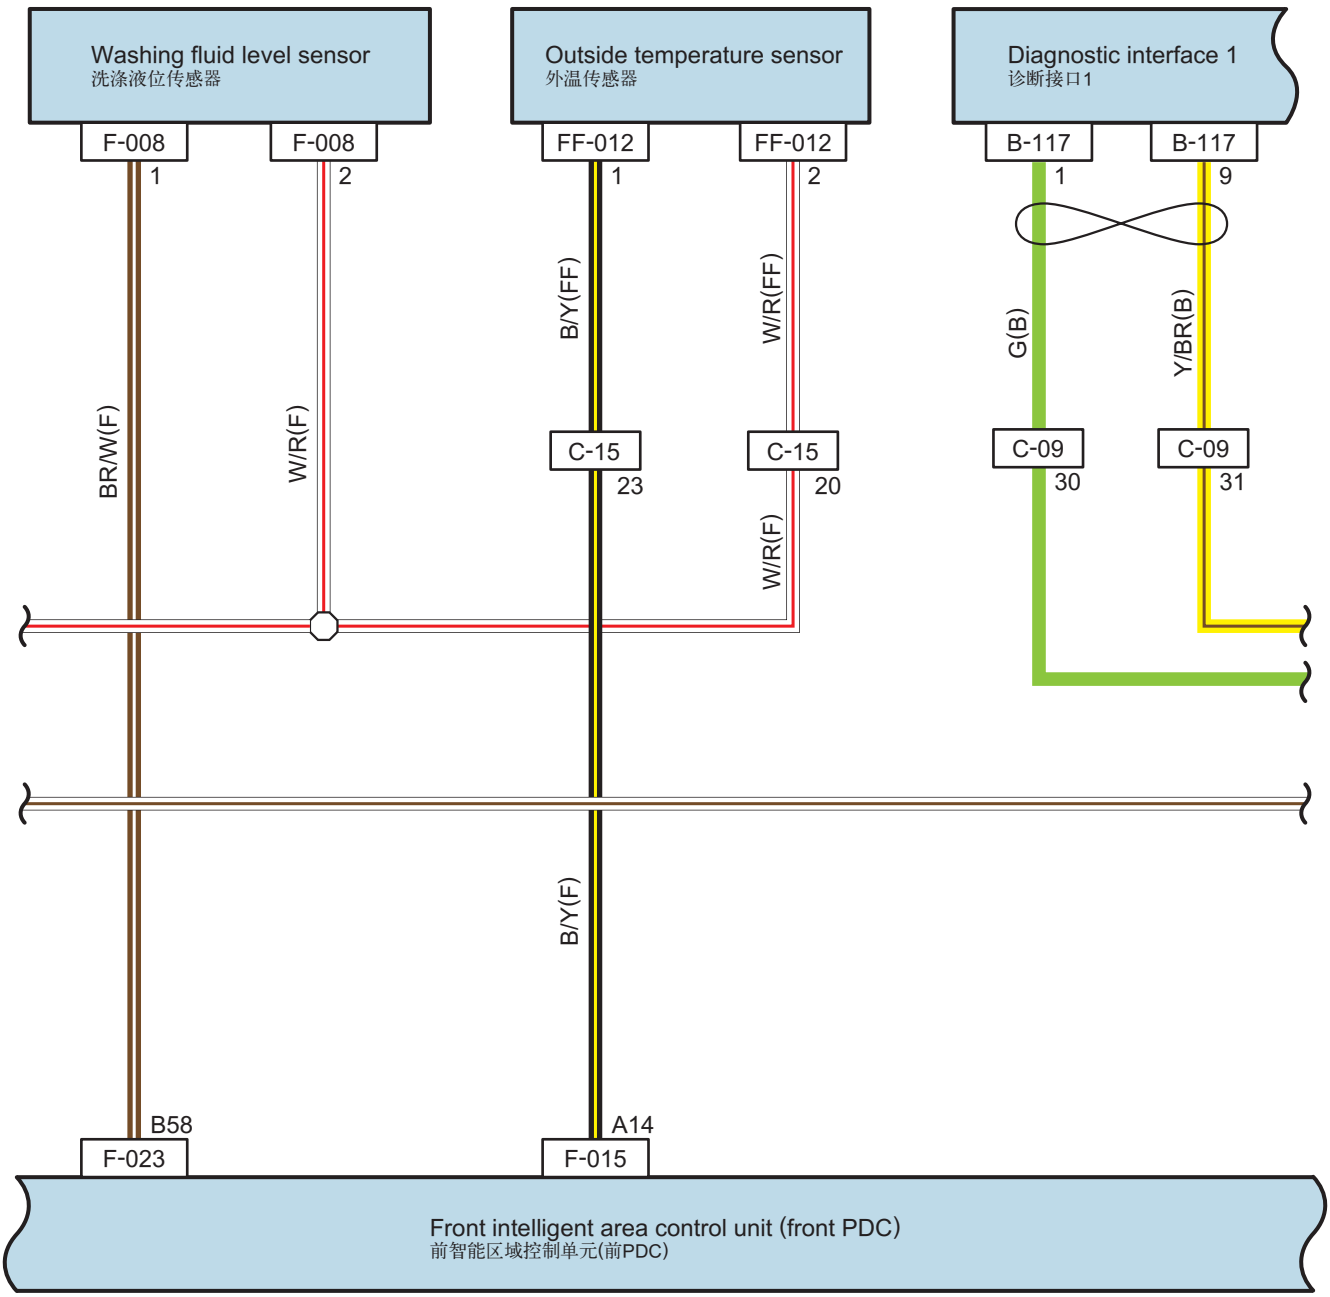

Thermal management module
热管理模块
F-006
11
G/L(F)
F-006
32
BR(F)
F-006
27
L/Y(F)
F-006
28
G/L(F)
F-006
3
R/W(F)
F-006
4
V/W(F)
F-006
5
W(F)
B53
F-023
B56
F-023
B38
F-023
B39
F-023
B40
F-023
B41
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

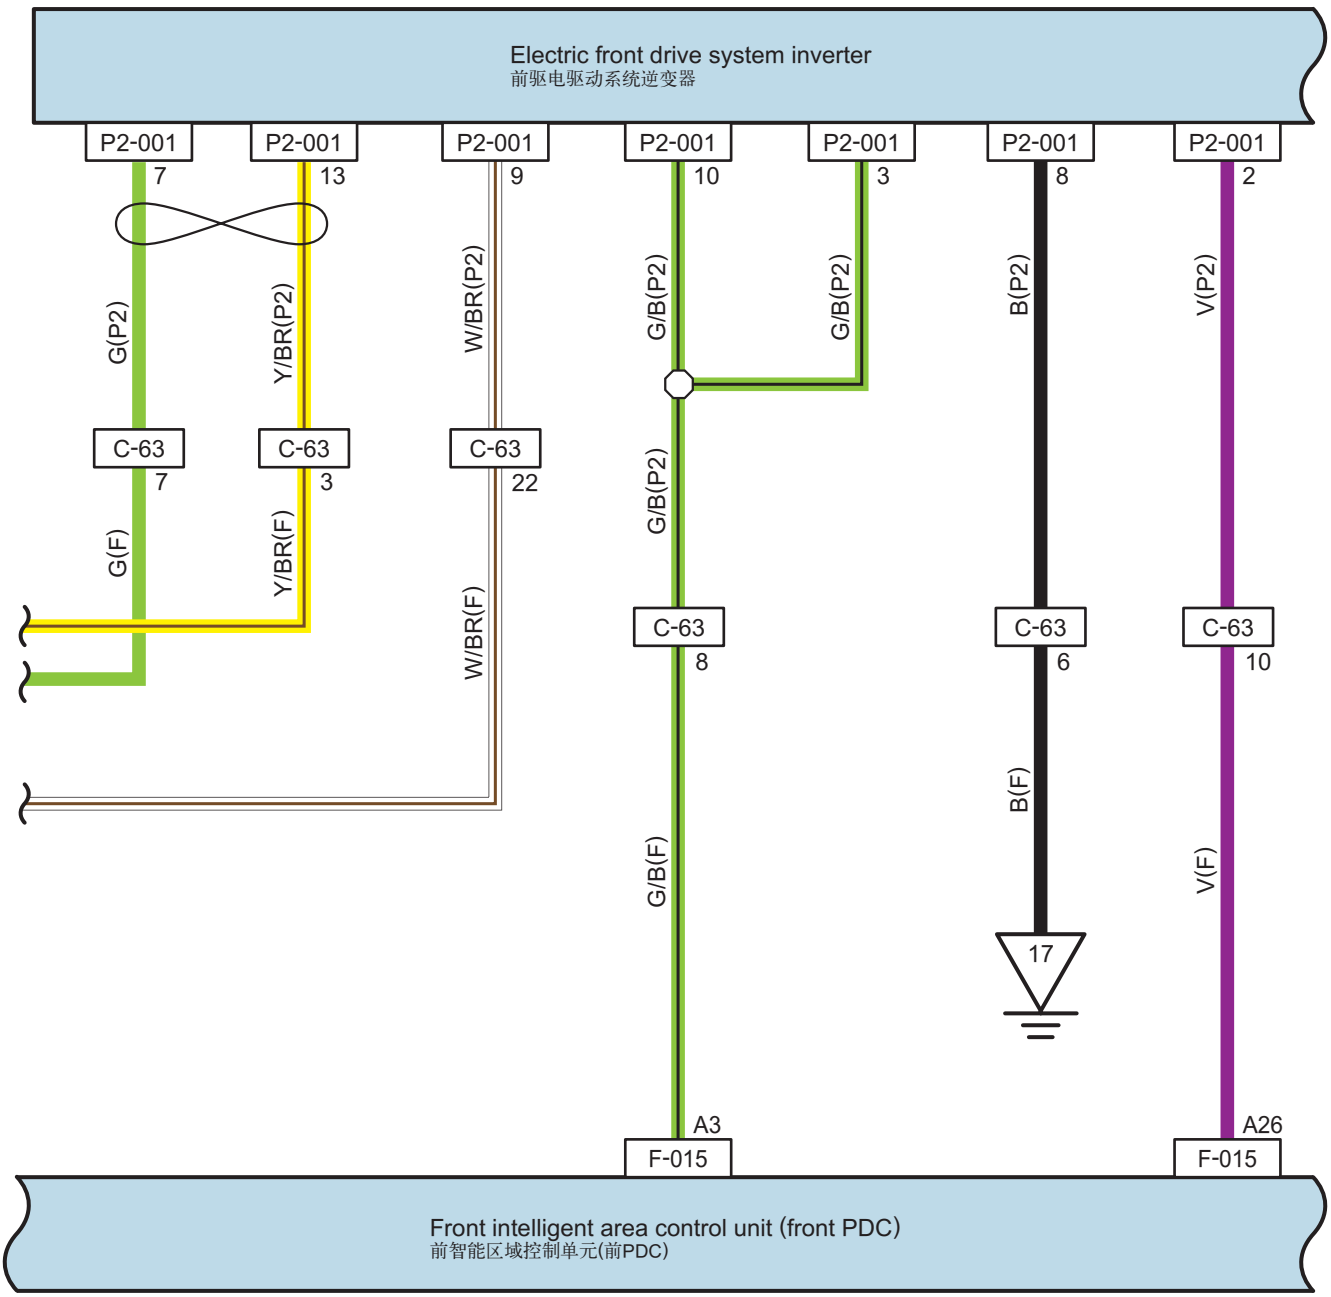

Thermal management module
热管理模块
F-006
6
F-006
8
F-006
16
F-006
17
F-006
18
F-006
19
F-006
1
GR/W(F)
L(F)
GR/L(F)
O(F)
Y/W(F)
L/W(F)
B(F)
14a
B75
F-023
A48
F-015
B12
F-023
B15
F-023
B55
F-023
B61
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

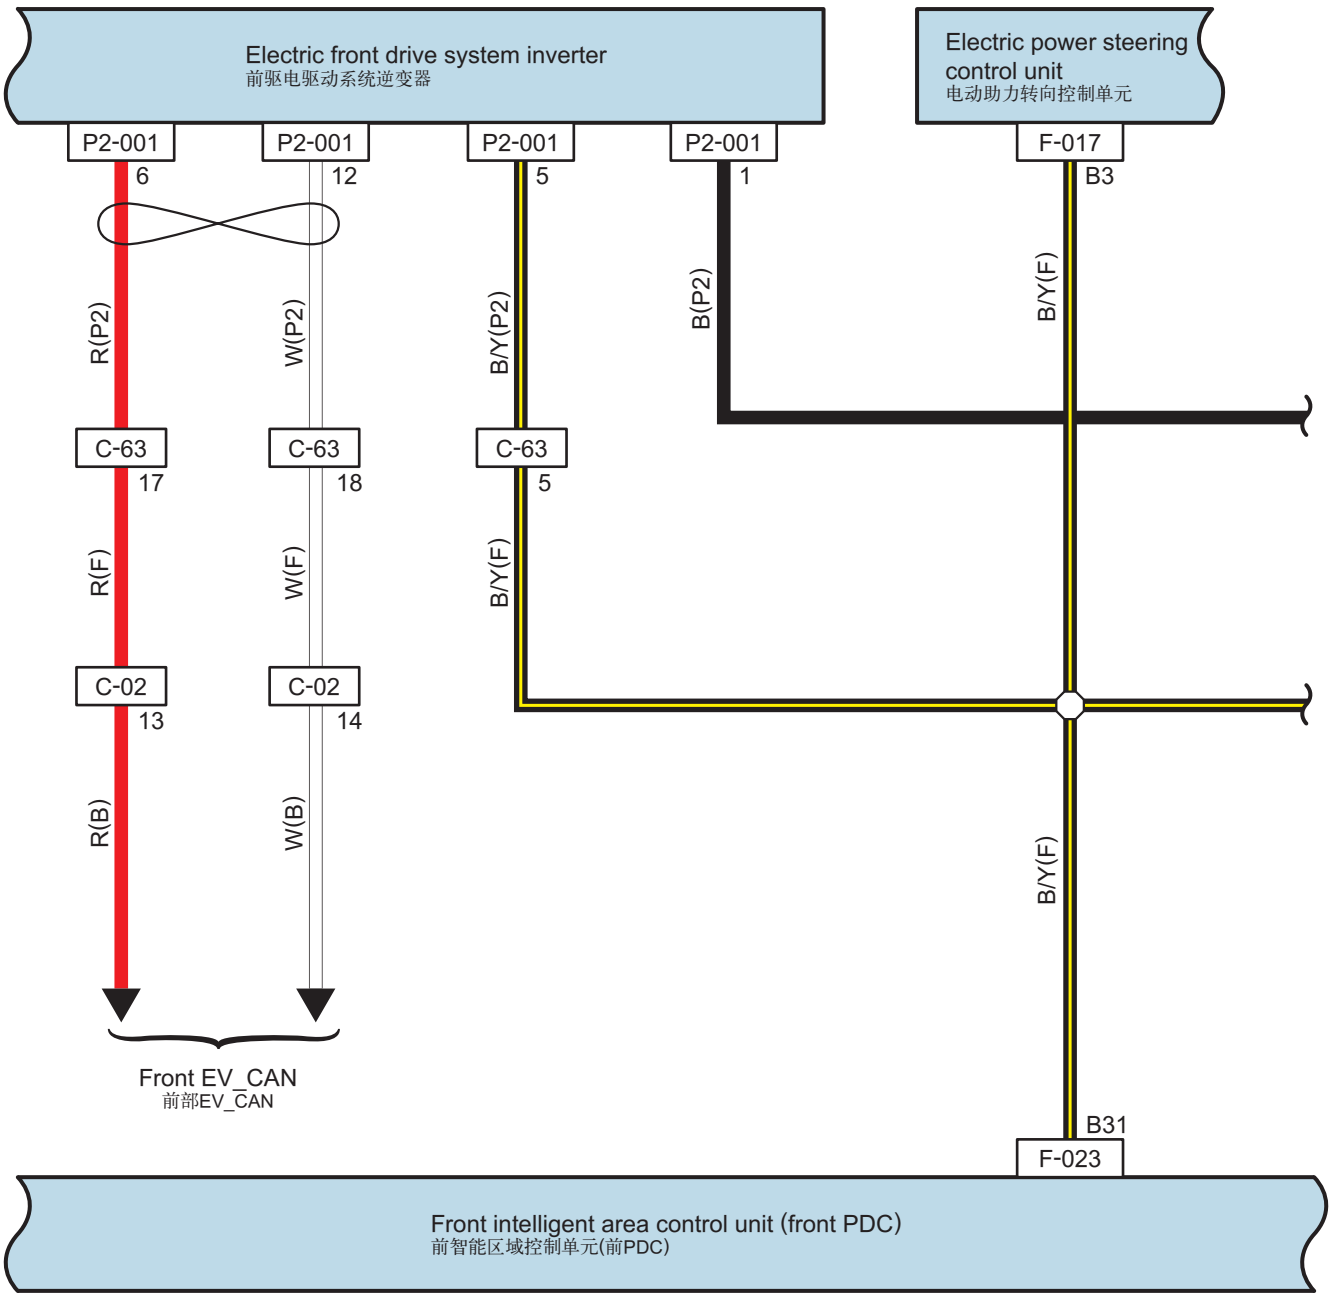

Thermal management module
热管理模块
F-006
21
W(F)
F-006
22
G/R(F)
F-006
23
GR(F)
F-006
24
O/W(F)
F-006
30
W/G(F)
F-006
31
L/G(F)
F-006
36
W/B(F)
A33
F-015
A49
F-015
A6
F-015
A7
F-015
A8
F-015
A9
F-015
A50
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

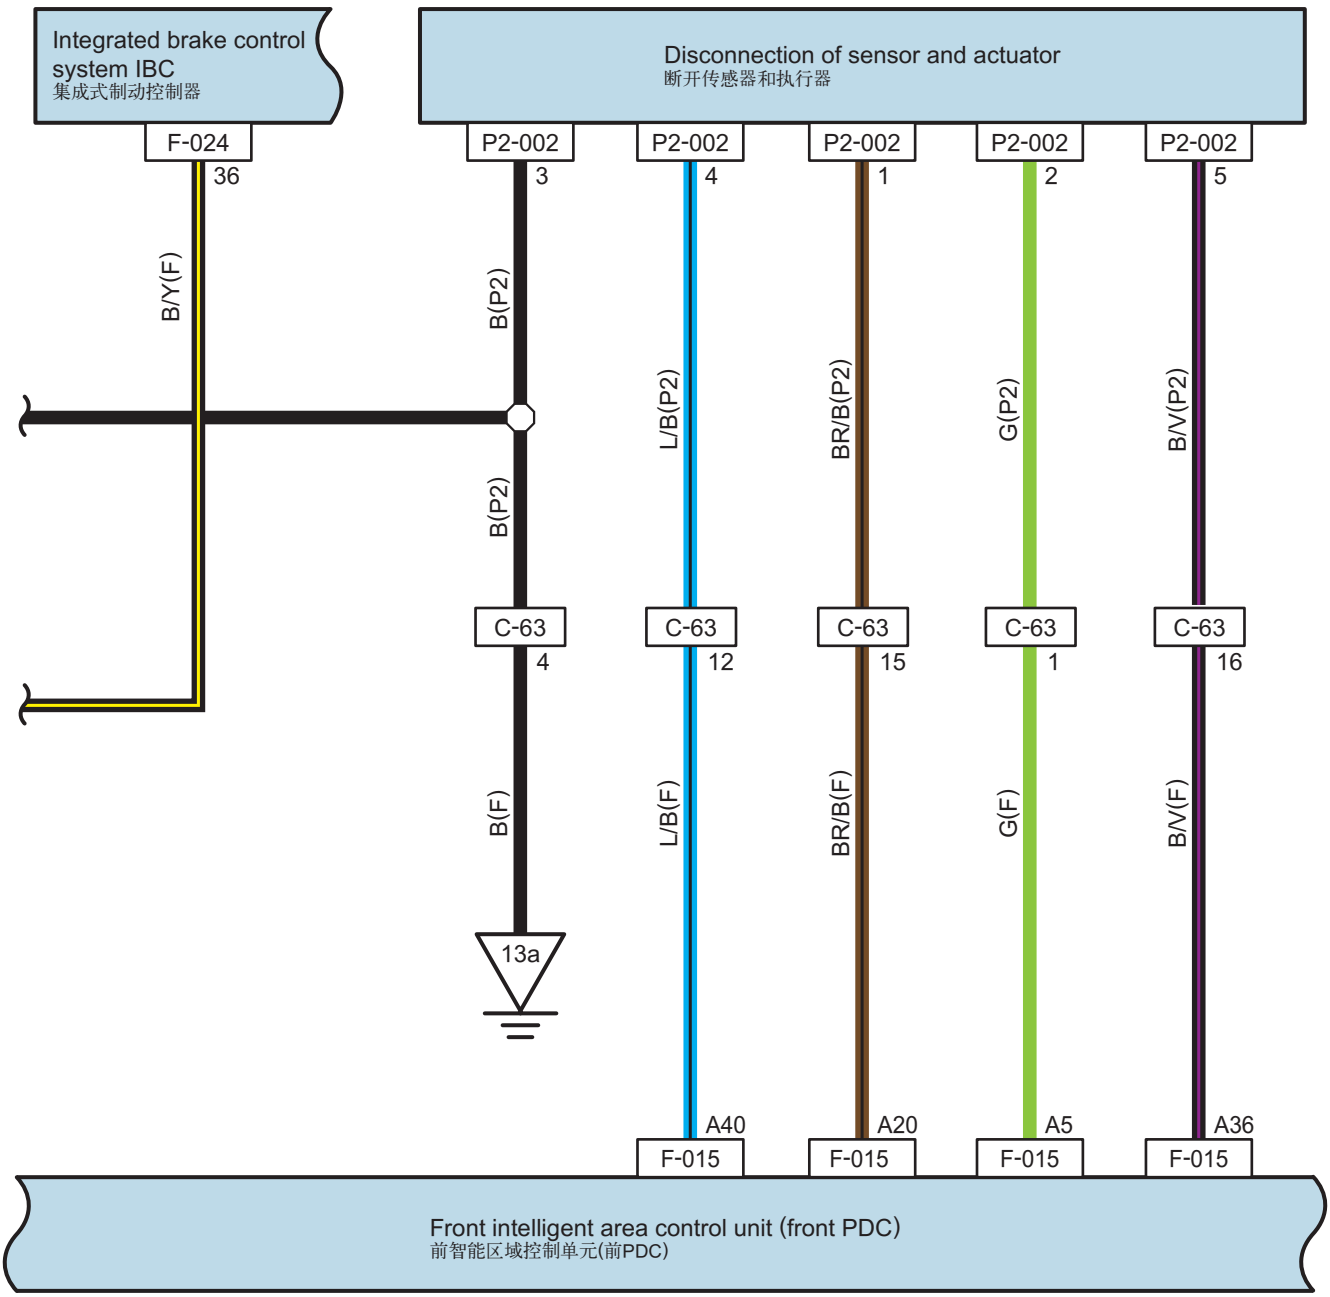

Thermal management module
热管理模块
F-006
10
F-006
9
F-006
25
F-006
26
F-006
15
F-006
12
F-006
2
Y/G(F)
R/L(F)
Y/L(F)
B/R(F)
B(F)
G(F)
W/R(F)
14b
A42
F-015
B54
F-023
B52
F-023
B37
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

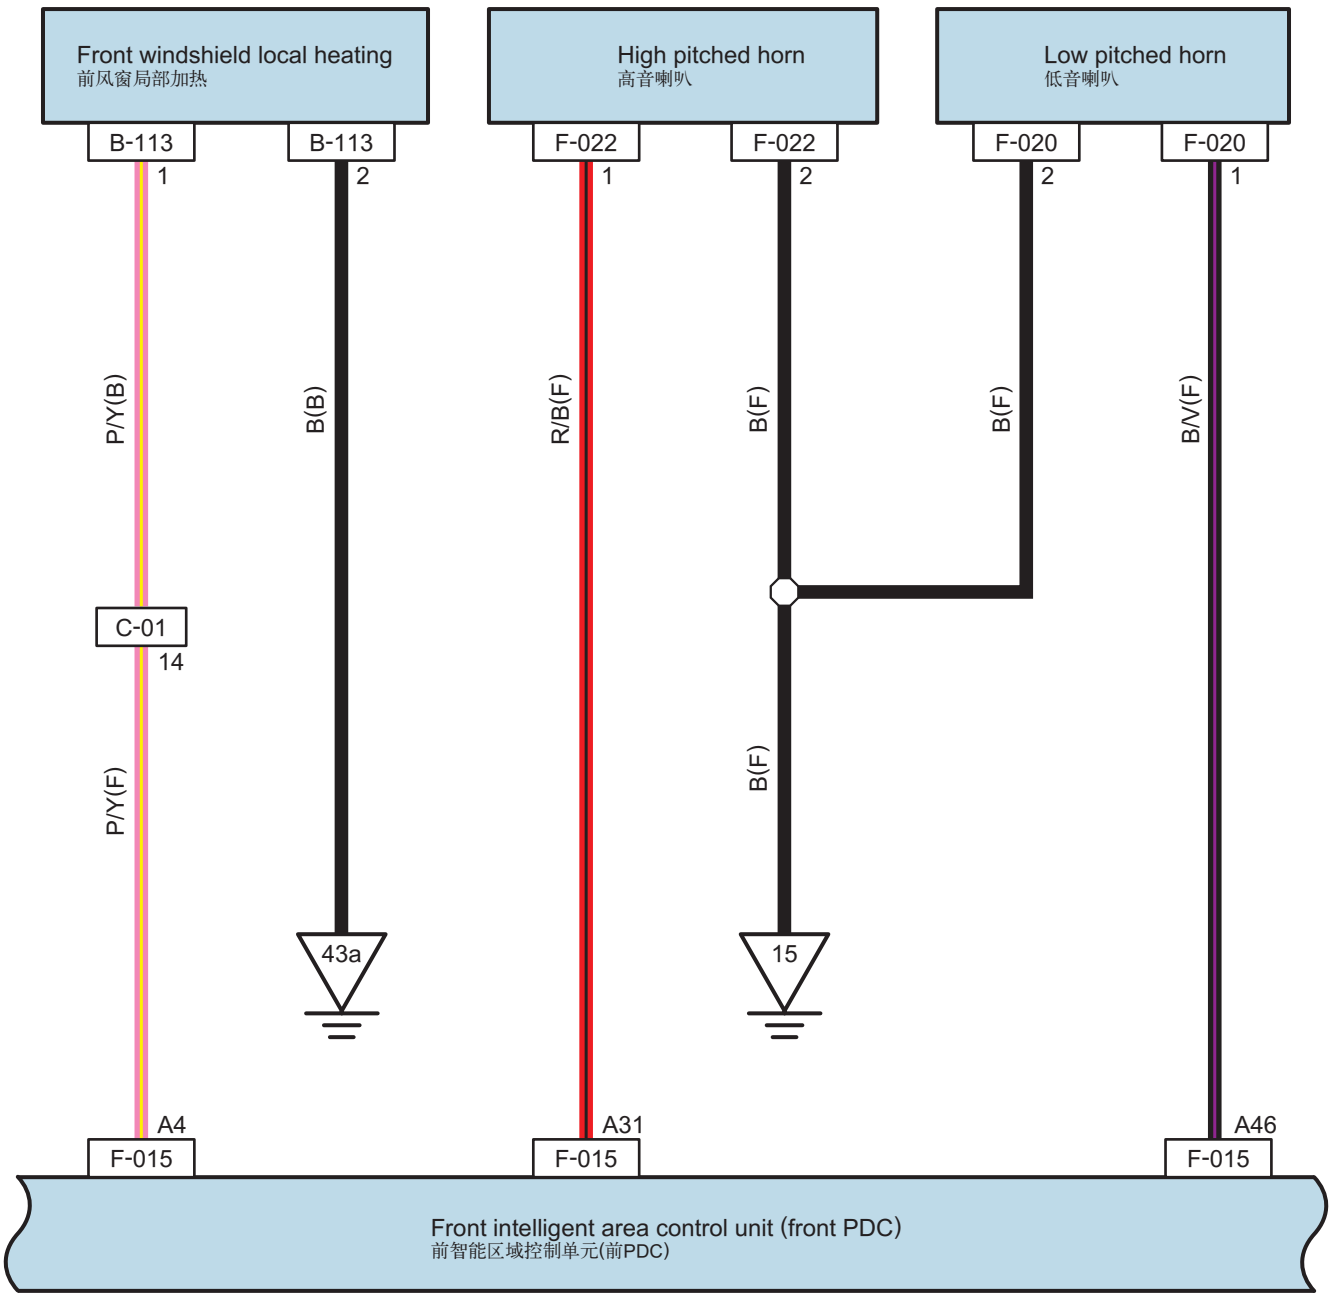

Water heater PTC
水暖PTC
Brake fluid level sensor
制动液位传感器
Refrigerant temp sensor
制冷剂温度传感器
F-007
4
F-007
3
F-007
5
F-004
1
F-005
1
F-005
2
B(F)
R/Y(F)
G(F)
W/R(F)
P/B(F)
W/R(F)
19b
G(F)
W/R(F)
B64
B84
B36
A41
F-023
F-023
F-023
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

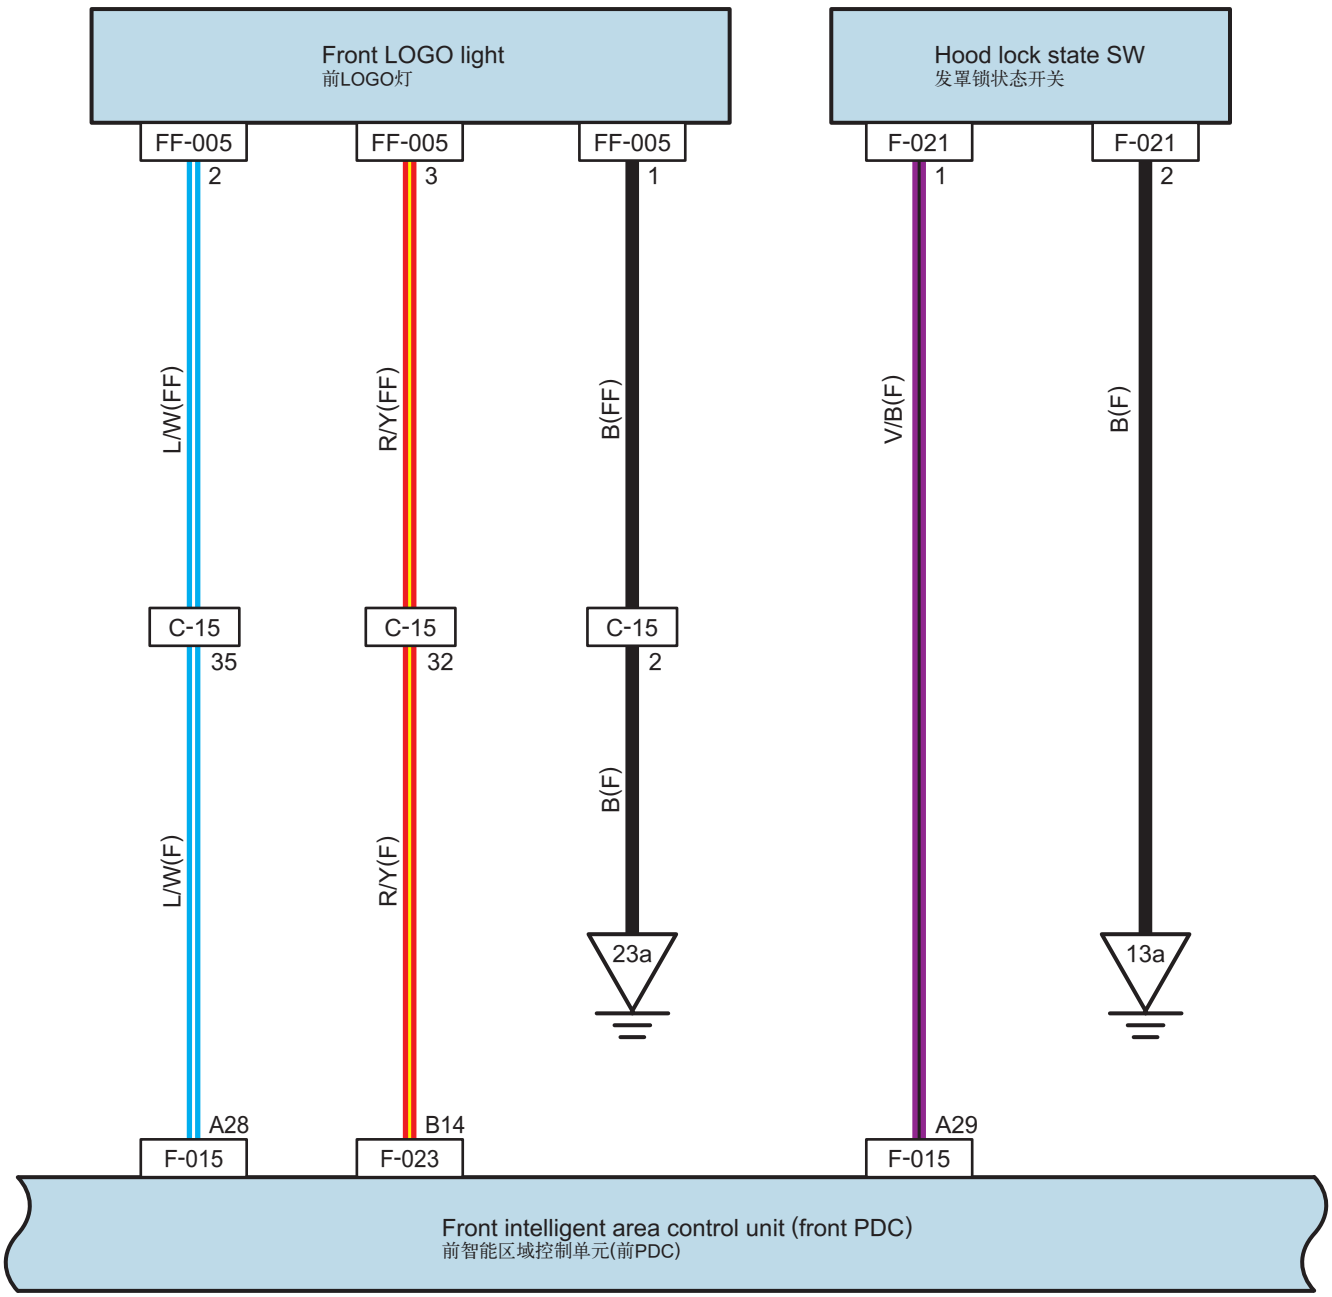

Washing fluid level sensor
洗涤液位传感器
Outside temperature sensor
外温传感器
Diagnostic interface 1
诊断接口1
F-008
1
F-008
2
FF-012
1
FF-012
2
B-117
1
B-117
9
BR/W(F)
W/R(F)
B/Y(FF)
W/R(FF)
G(B)
Y/BR(B)
C-15
23
C-15
20
C-09
30
C-09
31
W/R(F)
B/Y(F)
B58
F-023
A14
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

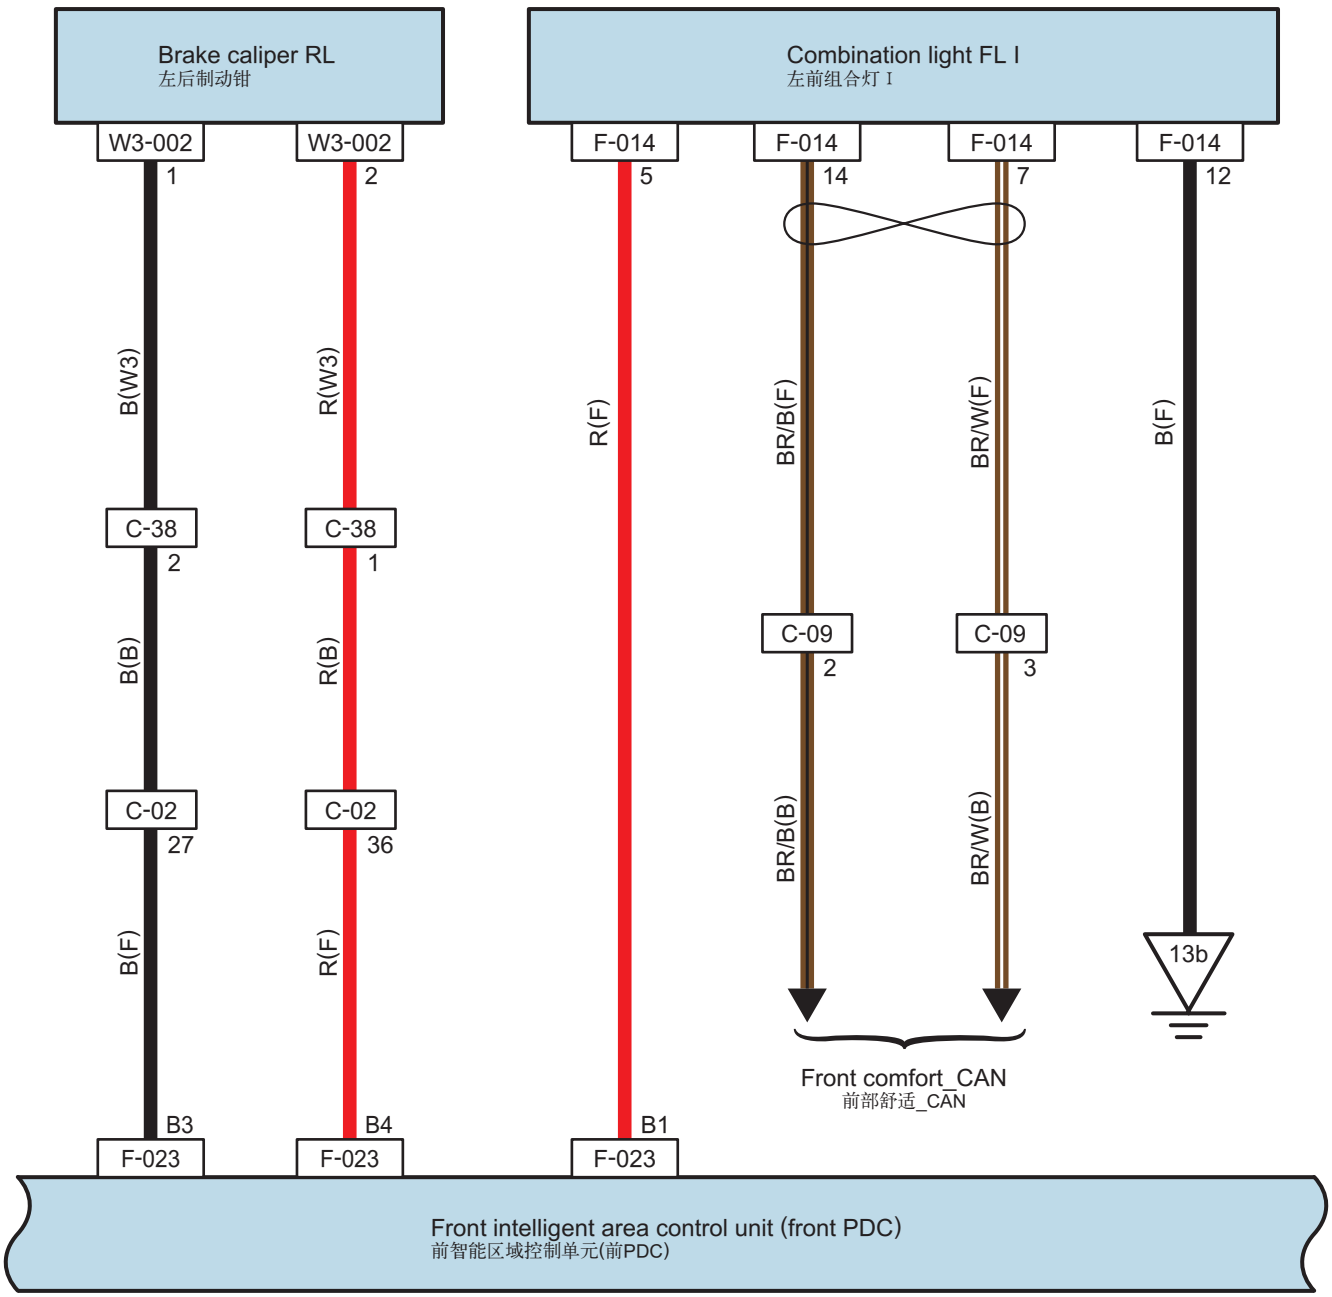

Electric front drive system inverter
前驱电驱动系统逆变器
P2-001
7
P2-001
13
P2-001
9
P2-001
10
P2-001
3
P2-001
8
P2-001
2
G(P2)
Y/BR(P2)
W/BR(P2)
G/B(P2)
G/B(P2)
B(P2)
V(P2)
C-63
7
C-63
3
C-63
22
G(F)
Y/BR(F)
W/BR(F)
G/B(P2)
C-63
8
C-63
6
C-63
10
B(F)
V(F)
17
G/B(F)
A3
F-015
A26
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

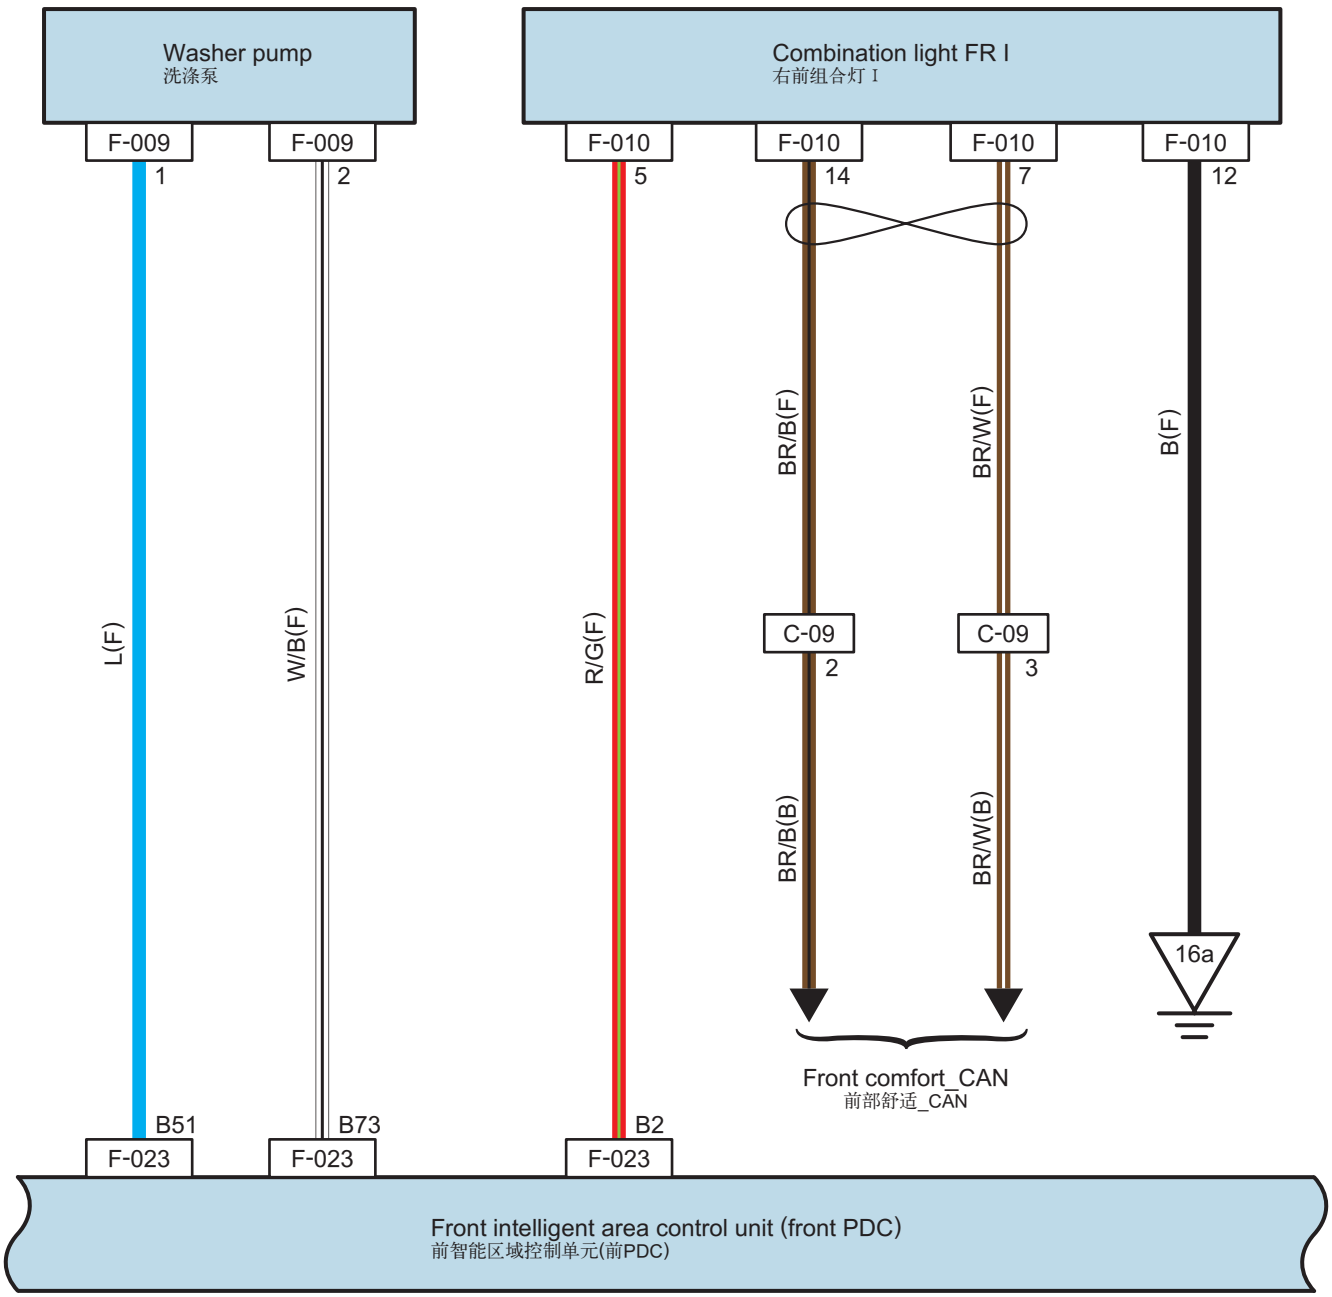

Electric front drive system inverter
前驱电驱动系统逆变器
Electric power steering control unit
电动助力转向控制单元
P2-001
6
P2-001
12
P2-001
5
P2-001
1
F-017
B3
R(P2)
W(P2)
B/Y(P2)
B(P2)
B/Y(F)
C-63
17
C-63
18
C-63
5
R(F)
W(F)
B/Y(F)
C-02
13
C-02
14
R(B)
W(B)
B/Y(F)
Front EV_CAN
前部EV_CAN
B31
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

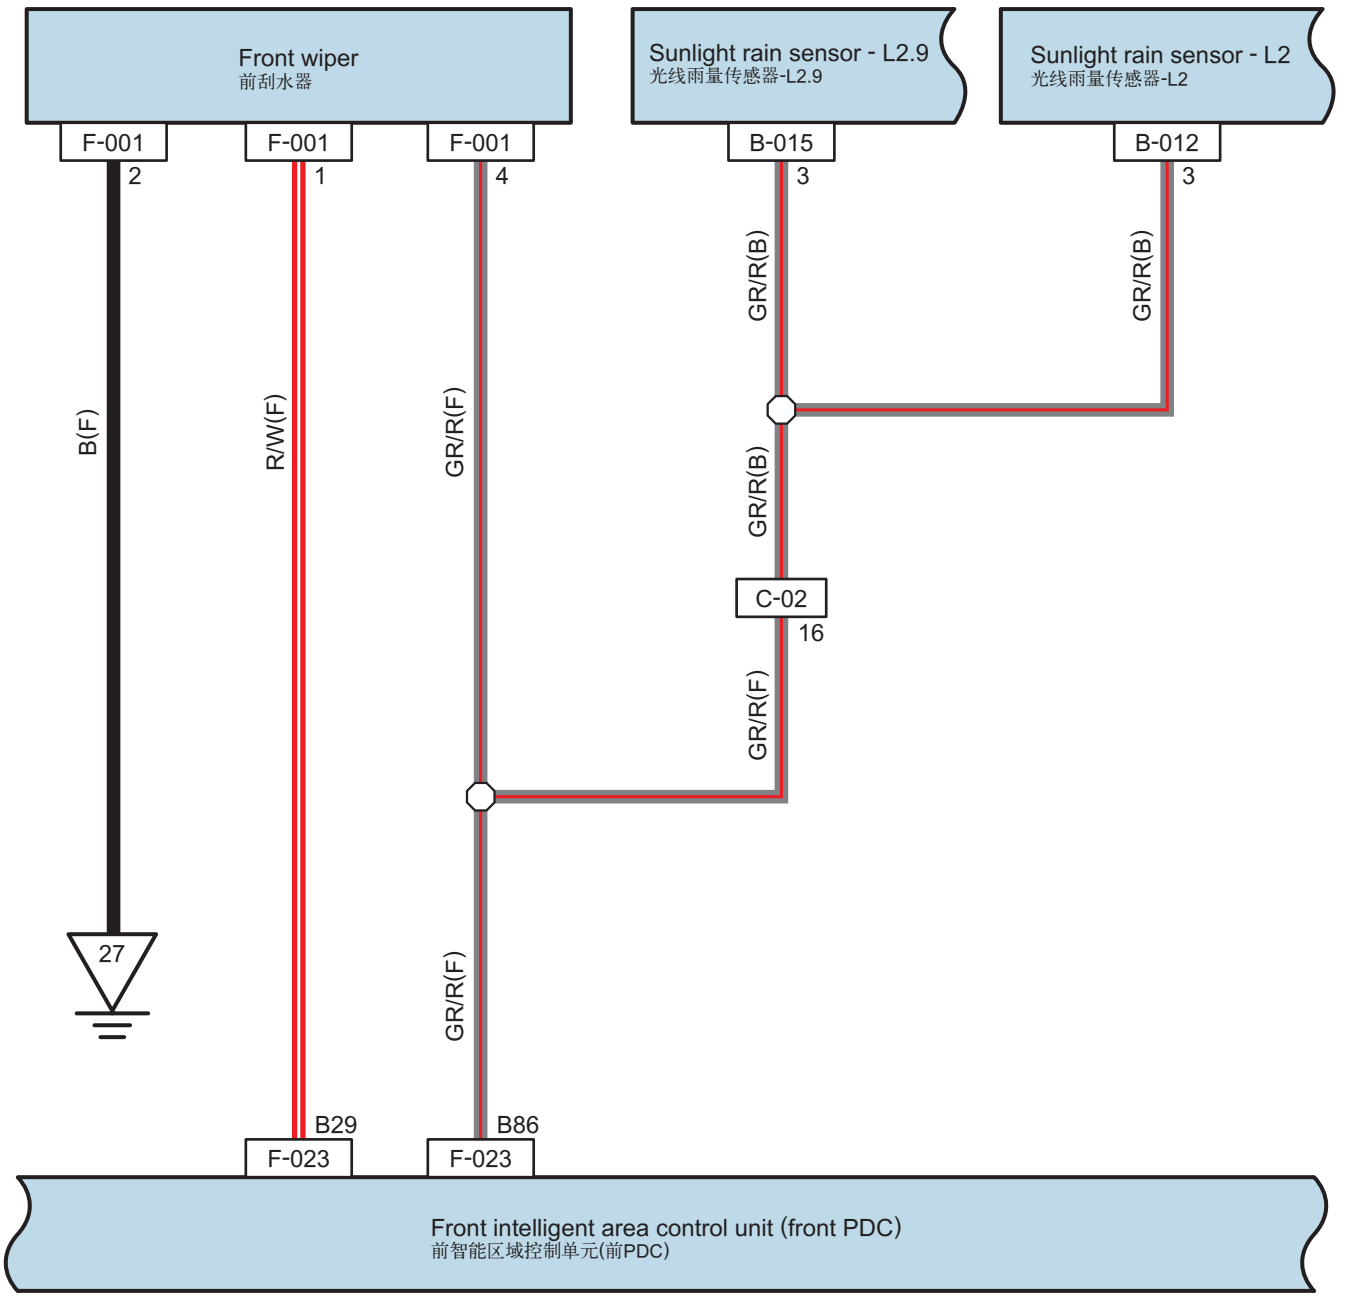

Integrated brake control system IBC
集成式制动控制器
Disconnection of sensor and actuator
断开传感器和执行器
F-024
36
B/Y(F)
P2-002
3
B(P2)
C-63
4
B(P2)
B(F)
13a
P2-002
4
L/B(P2)
C-63
12
L/B(F)
A40
F-015
P2-002
1
BR/B(P2)
C-63
15
BR/B(F)
A20
F-015
P2-002
2
G(P2)
C-63
1
G(F)
A5
F-015
P2-002
5
B/V(P2)
C-63
16
B/V(F)
A36
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

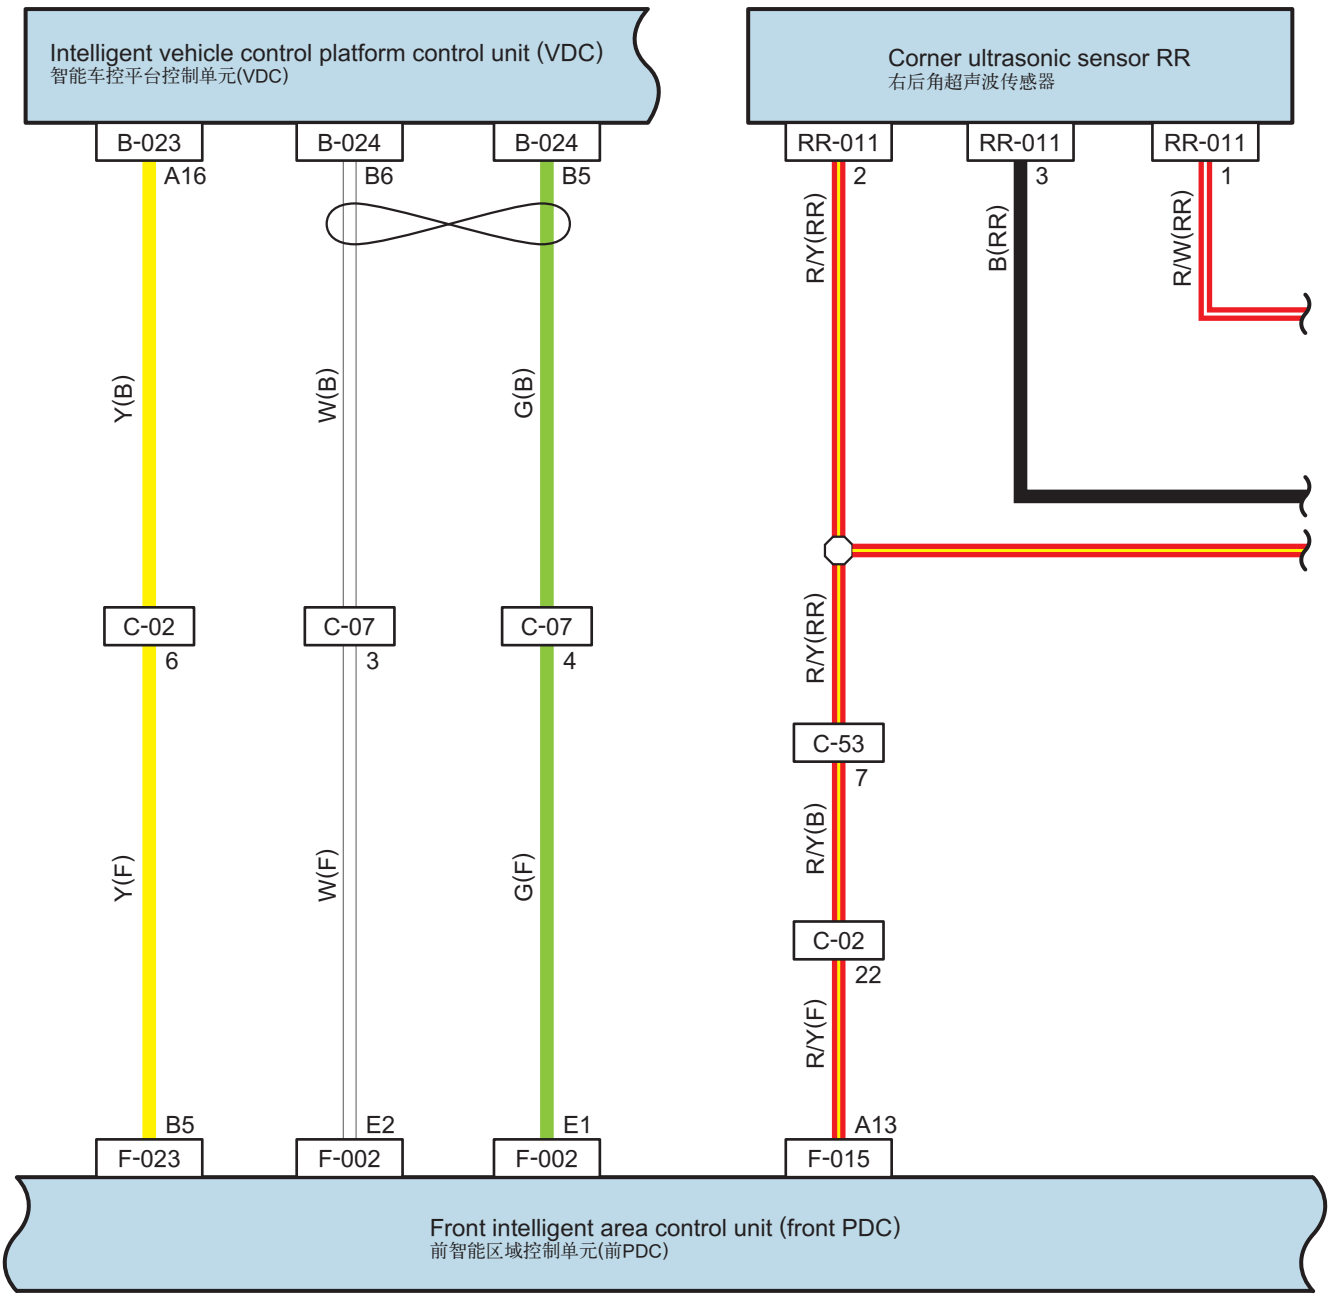

Front windshield local heating
前风窗局部加热
High pitched horn
高音喇叭
Low pitched horn
低音喇叭
B-113
1
B-113
2
F-022
1
F-022
2
F-020
2
F-020
1
P/Y(B)
B(B)
R/B(F)
B(F)
B(F)
B/V(F)
C-01
14
P/Y(F)
B(F)
43a
15
A4
F-015
A31
F-015
A46
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

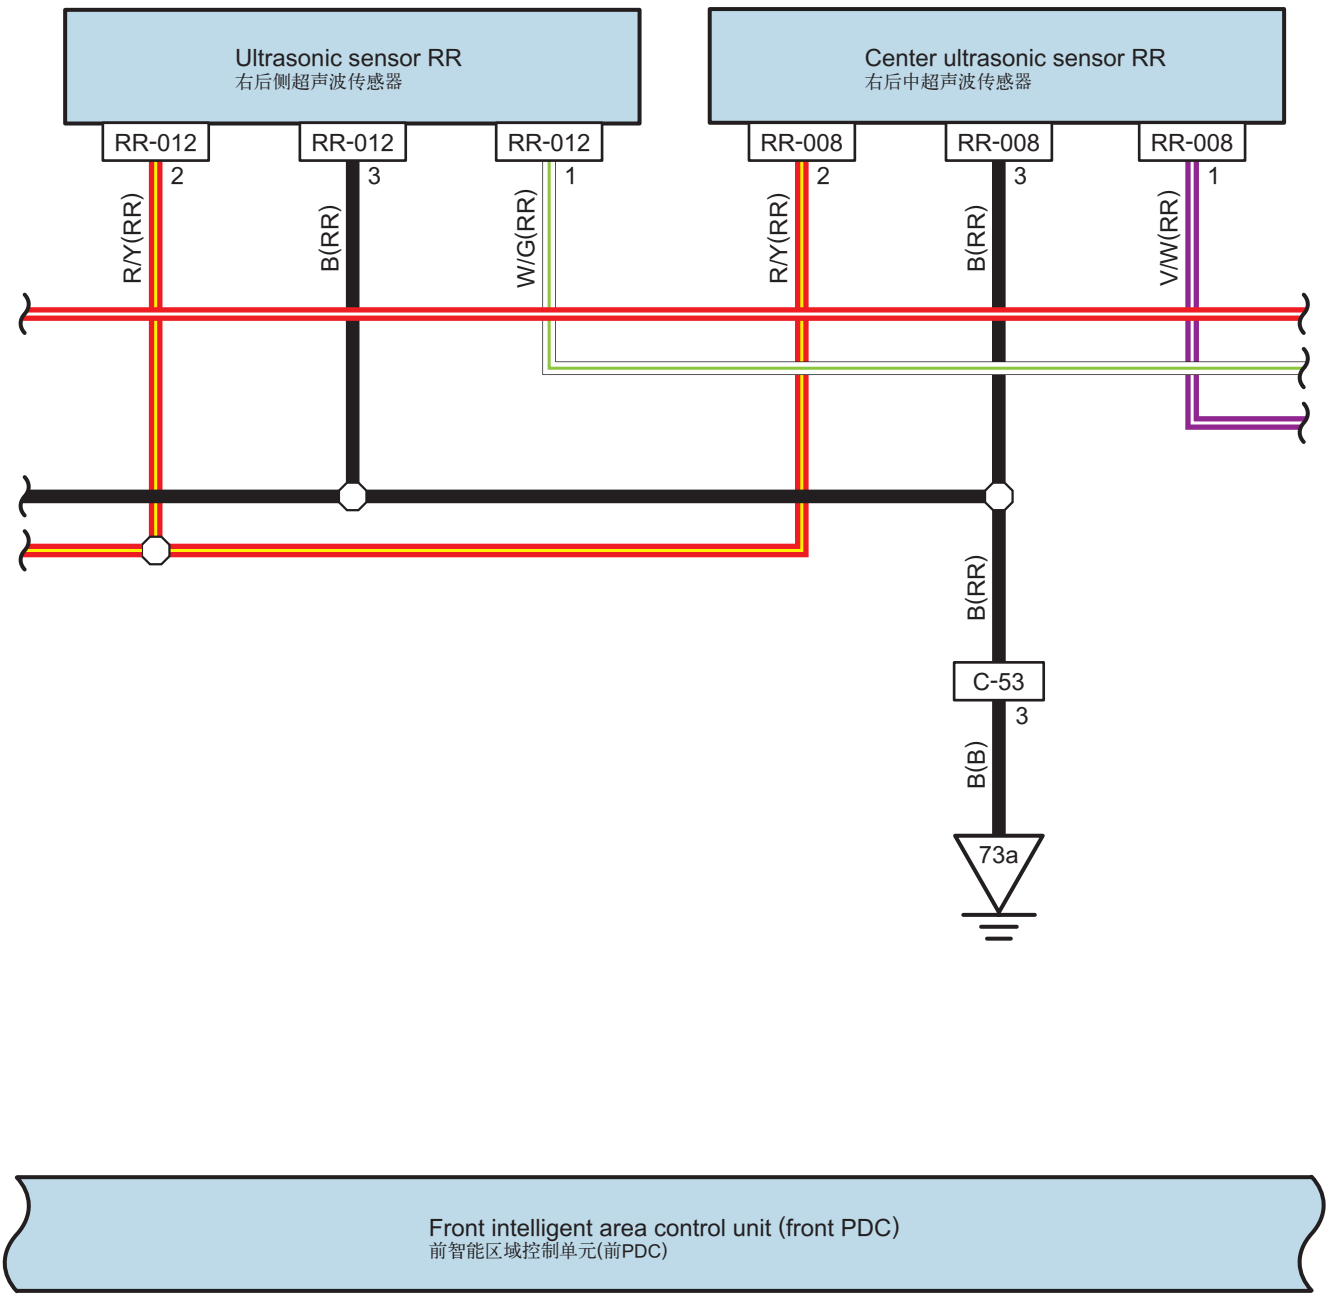

Front LOGO light
前LOGO灯
Hood lock state SW
发罩锁状态开关
FF-005
2
FF-005
3
FF-005
1
F-021
1
F-021
2
L/W(FF)
R/Y(FF)
B(FF)
V/B(F)
B(F)
C-15
35
C-15
32
C-15
2
L/W(F)
R/Y(F)
B(F)
23a
13a
A28
B14
A29
F-015
F-023
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

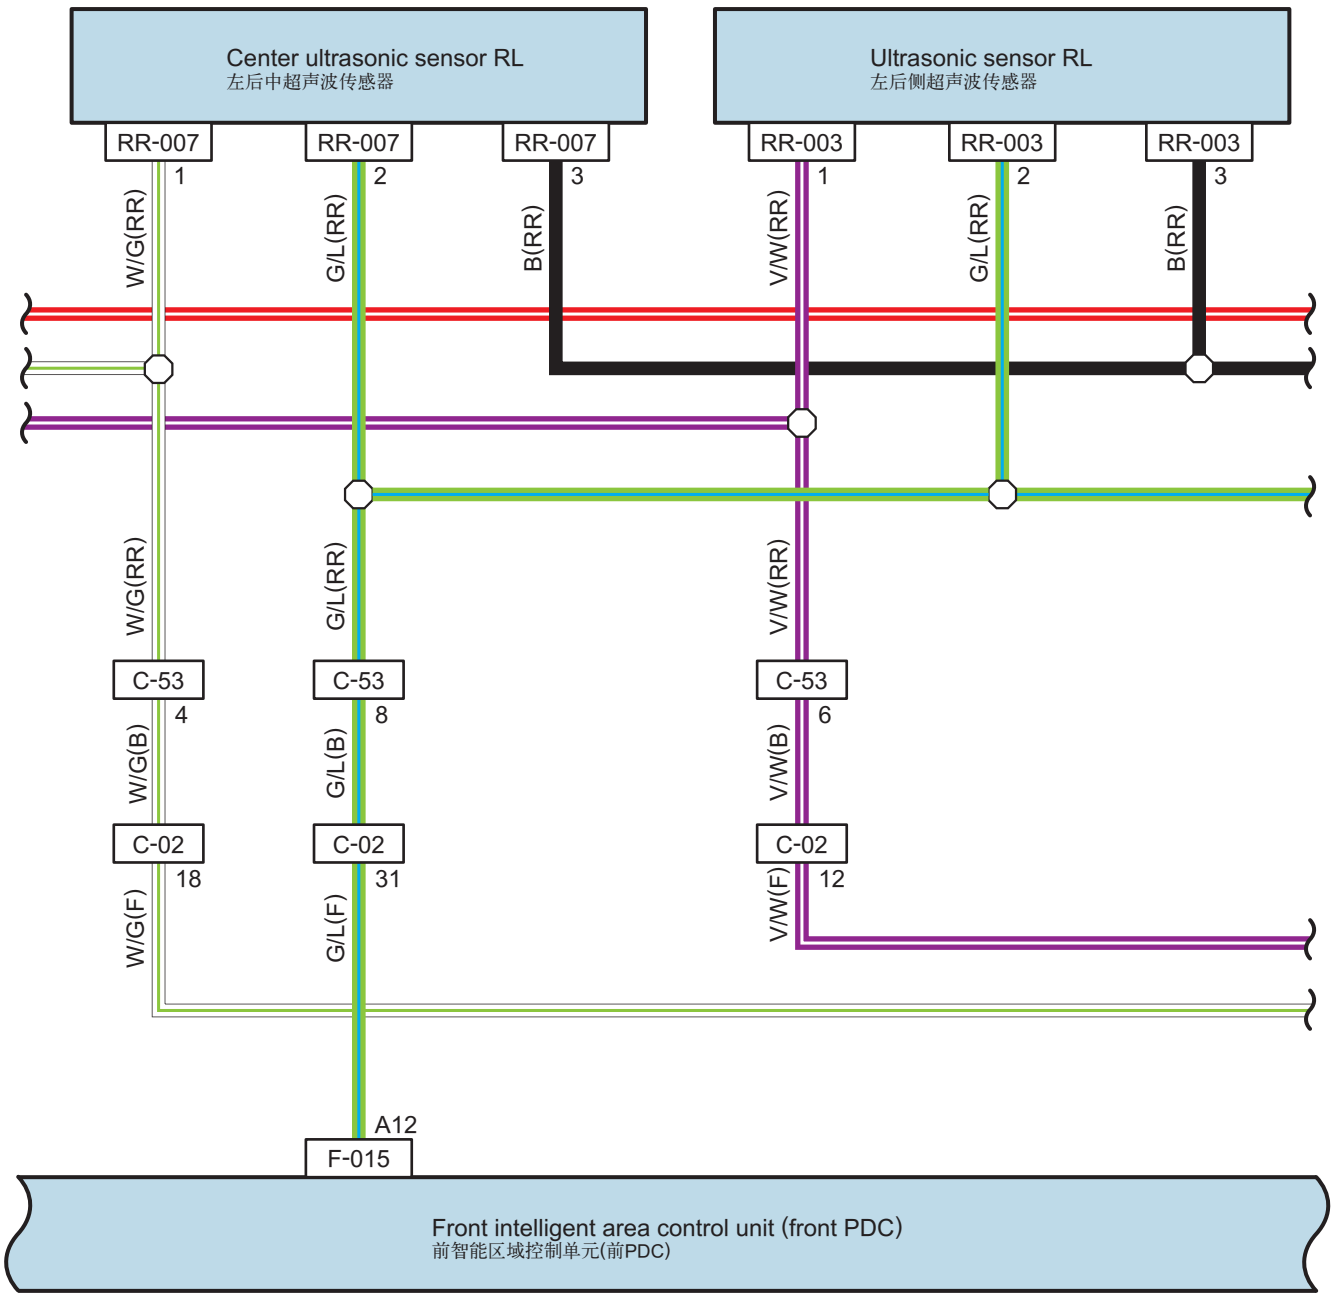

Brake caliper RL
左后制动钳
Combination light FL I
左前组合灯 I
W3-002
1
W3-002
2
F-014
5
F-014
14
F-014
7
F-014
12
B(W3)
R(W3)
R(F)
BR/B(F)
BR/W(F)
B(F)
C-38
2
C-38
1
C-09
2
C-09
3
B(B)
R(B)
BR/B(B)
BR/W(B)
C-02
27
C-02
36
13b
B(F)
R(F)
B3
B4
B1
F-023
F-023
F-023
Front comfort_CAN
前部舒适_CAN
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

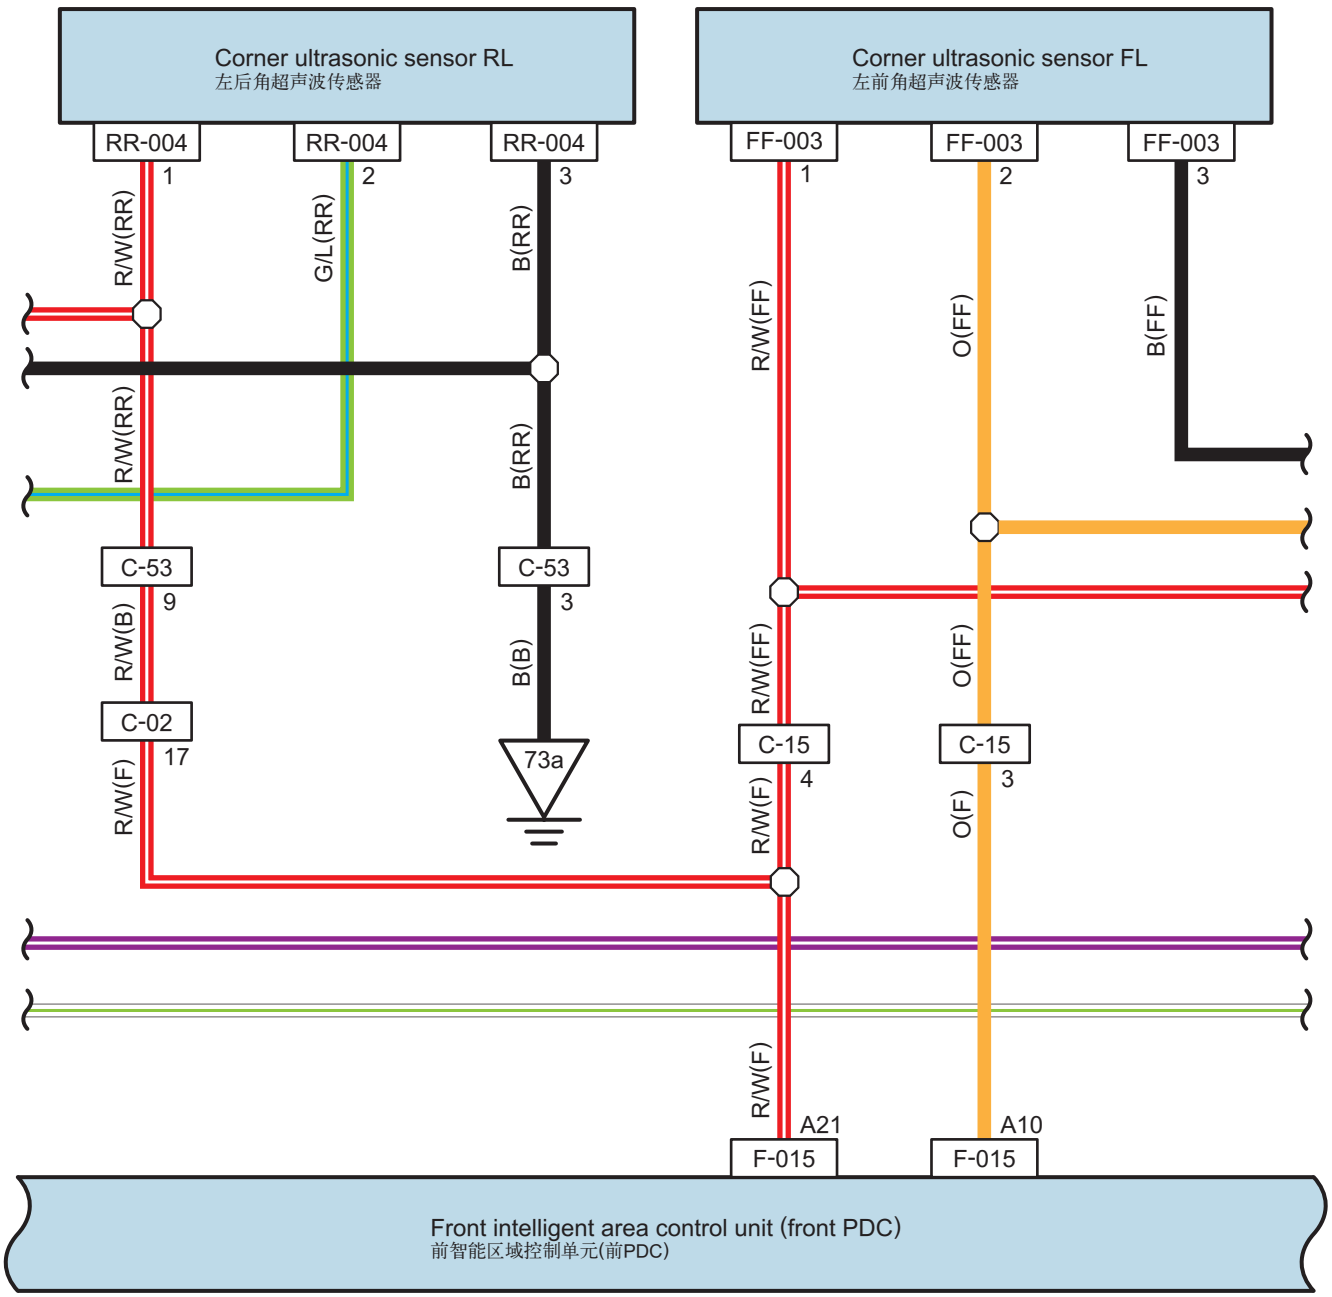

Washer pump
洗涤泵
Combination light FR I
右前组合灯 I
F-009
1
F-009
2
F-010
5
F-010
14
F-010
7
F-010
12
L(F)
W/B(F)
R/G(F)
BR/B(F)
BR/W(F)
B(F)
C-09
2
C-09
3
BR/B(B)
BR/W(B)
16a
Front comfort_CAN
前部舒适_CAN
B51
B73
B2
F-023
F-023
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

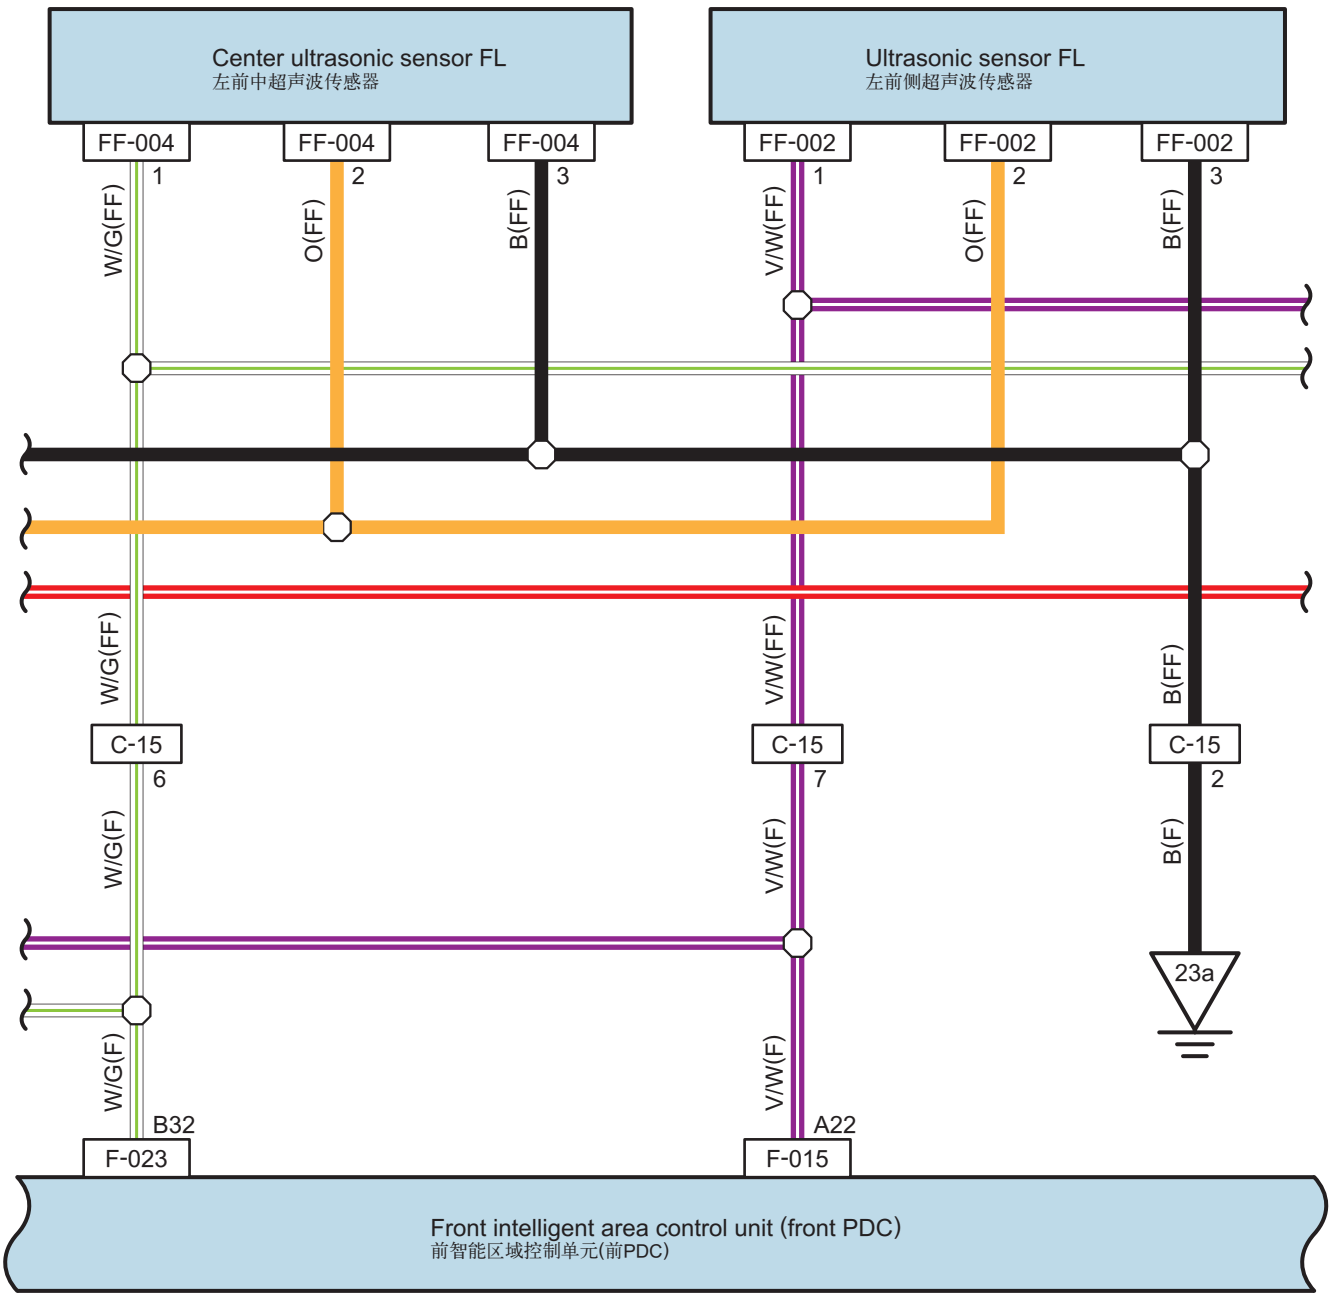

Front wiper
前刮水器
F-001
2
F-001
1
F-001
4
B(F)
R/W(F)
GR/R(F)
27
B29
F-023
B86
F-023
Sunlight rain sensor - L2.9
光线雨量传感器-L2.9
B-015
3
Sunlight rain sensor - L2
光线雨量传感器-L2
B-012
3
GR/R(B)
GR/R(B)
GR/R(B)
C-02
16
GR/R(F)
GR/R(F)
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

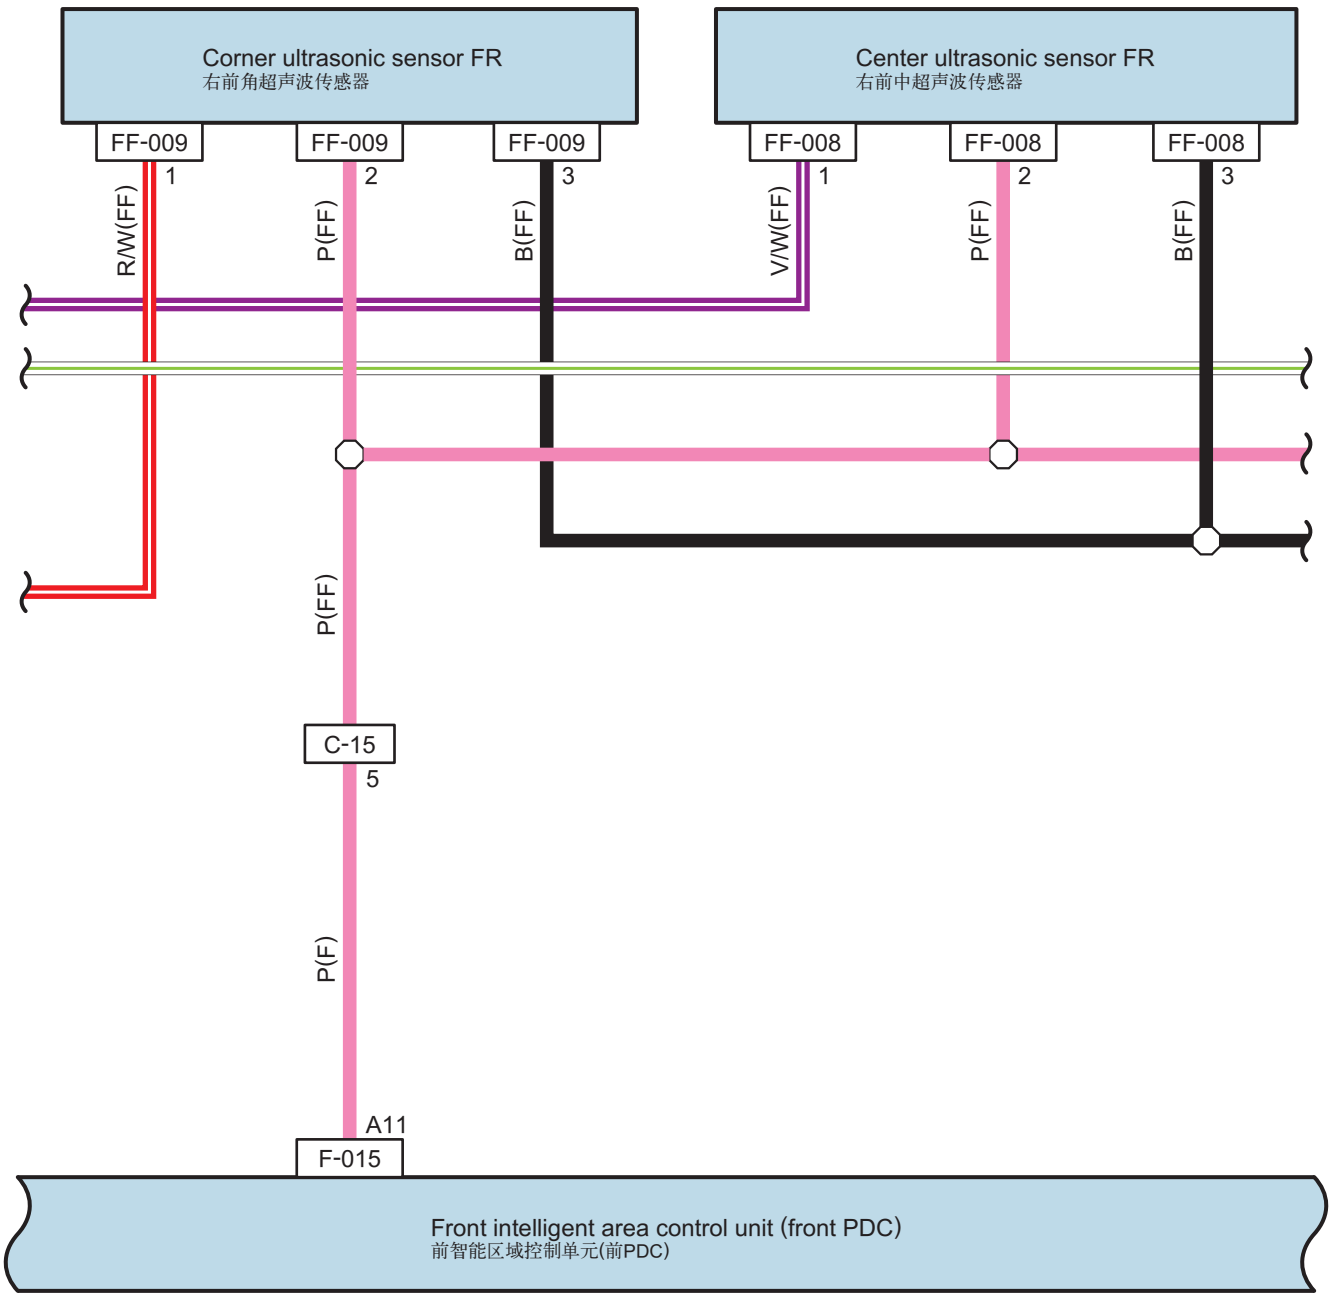

Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
Corner ultrasonic sensor RR
右后角超声波传感器
B-023
A16
B-024
B6
B-024
B5
RR-011
2
RR-011
3
RR-011
1
Y(B)
W(B)
G(B)
R/Y(RR)
B(RR)
R/W(RR)
C-02
6
C-07
3
C-07
4
R/Y(RR)
C-53
7
R/Y(B)
C-02
22
R/Y(F)
Y(F)
W(F)
G(F)
B5
E2
E1
A13
F-023
F-002
F-002
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

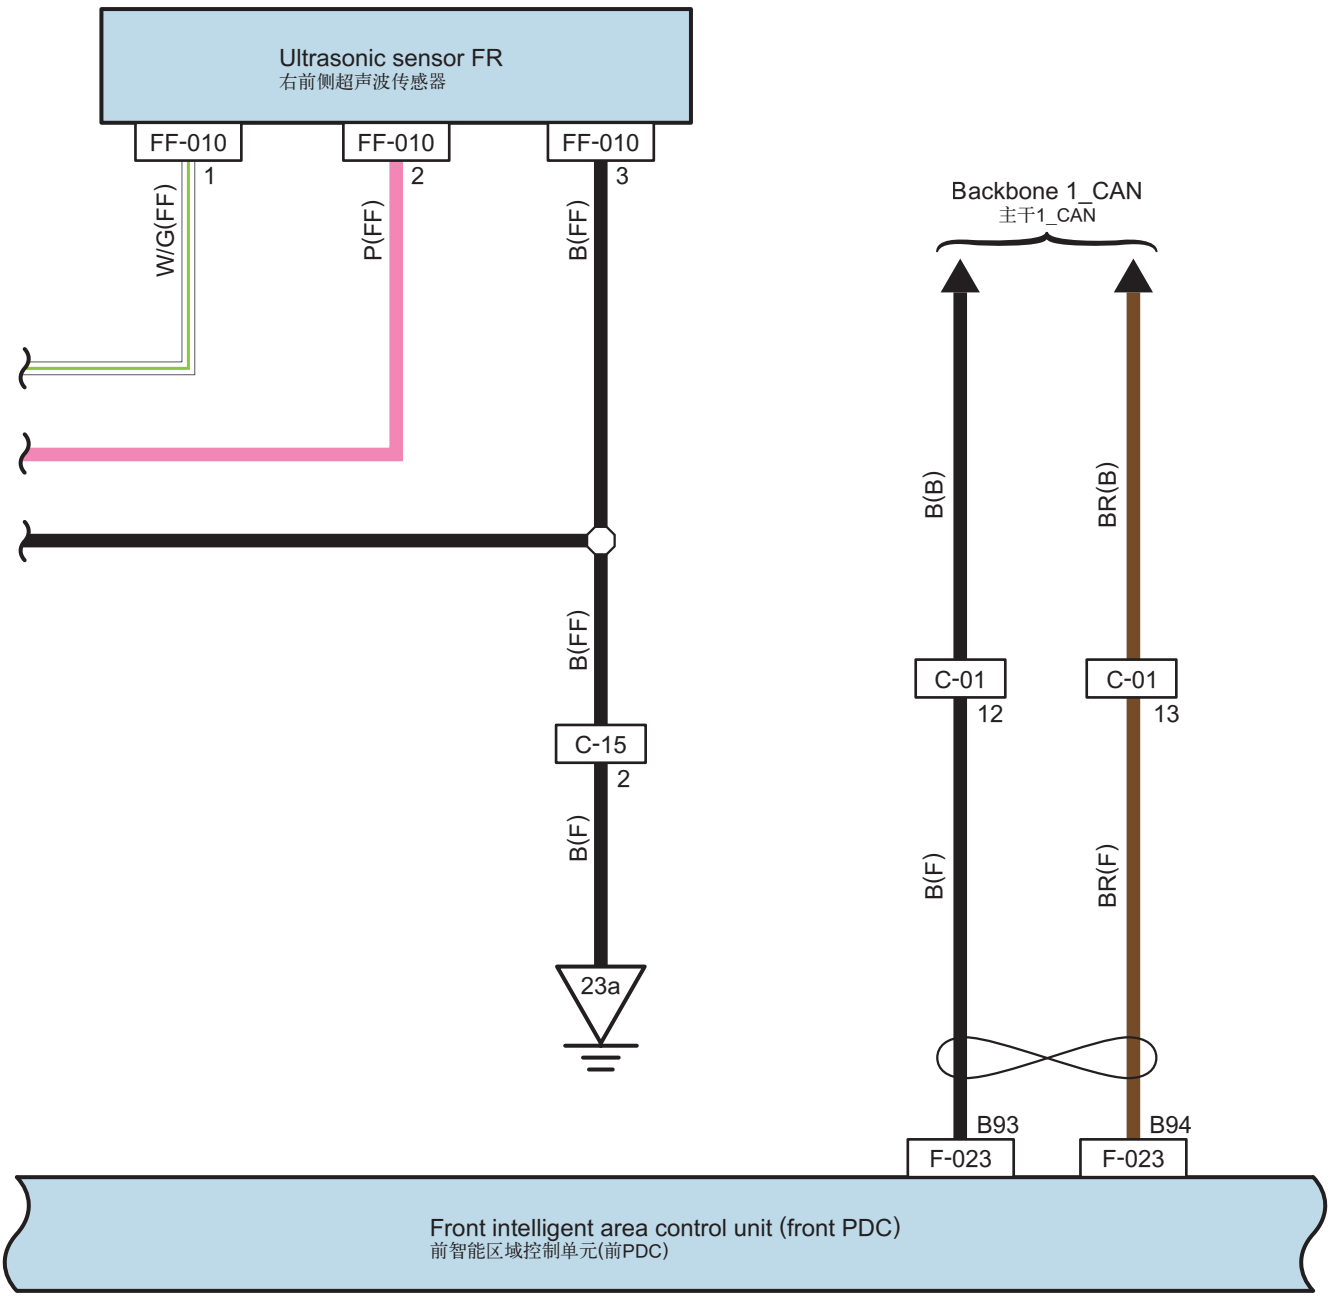

Ultrasonic sensor RR
右后侧超声波传感器
Center ultrasonic sensor RR
右后中超声波传感器
RR-012
2
R/Y(RR)
RR-012
3
B(RR)
RR-012
1
W/G(RR)
RR-008
2
R/Y(RR)
RR-008
3
B(RR)
RR-008
1
V/W(RR)
B(RR)
C-53
3
B(B)
73a
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

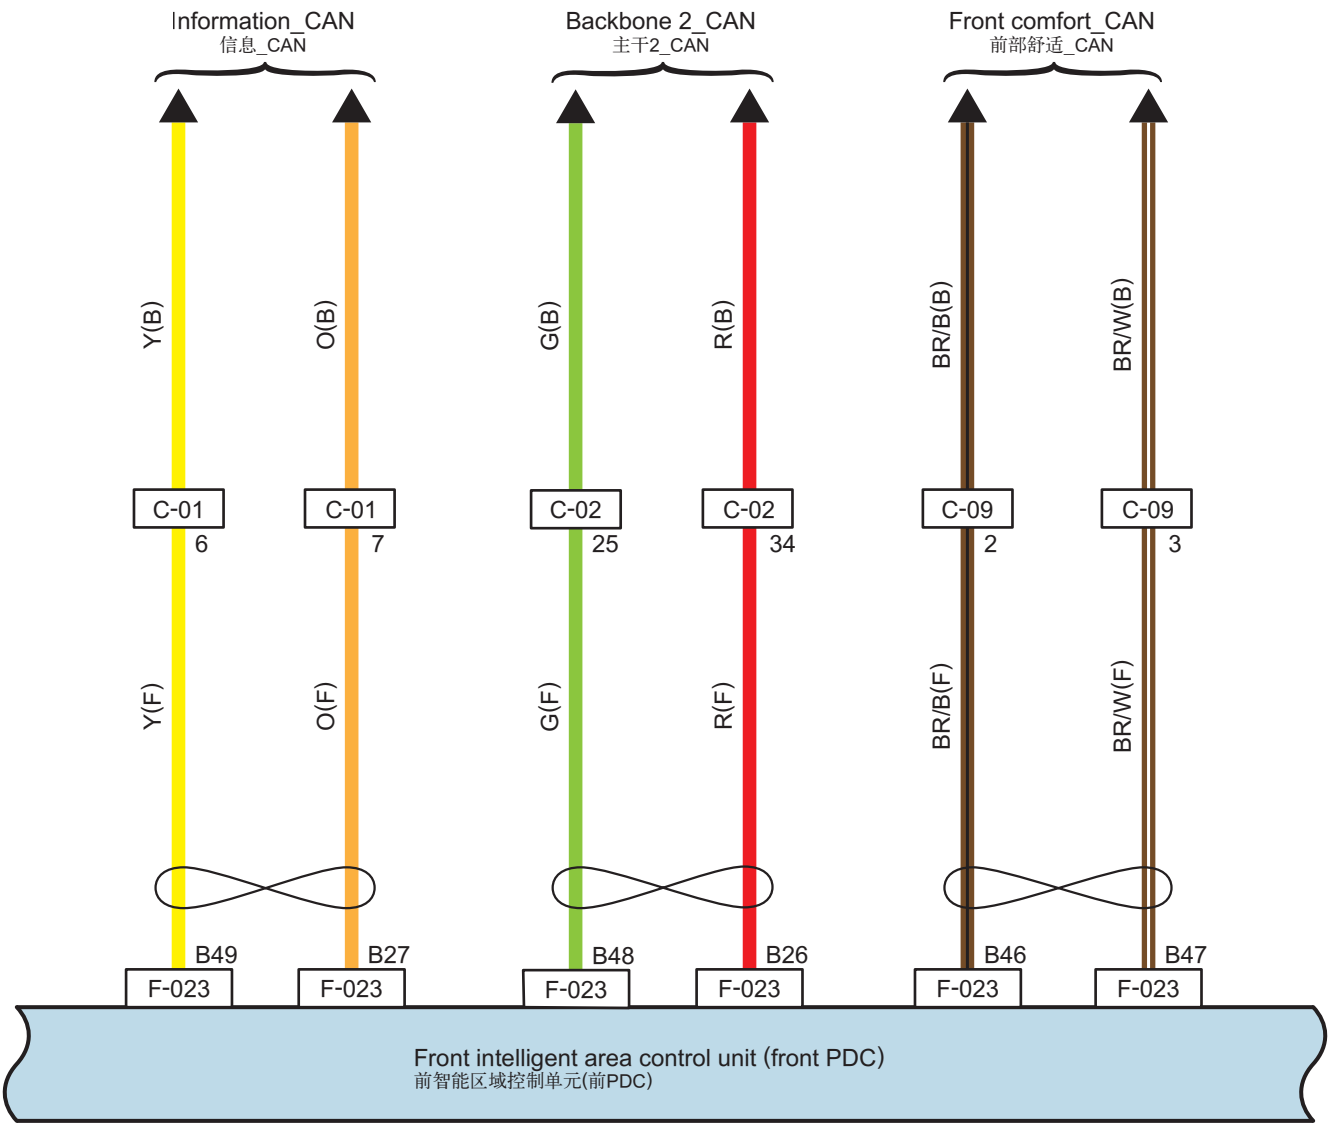

Center ultrasonic sensor RL
左后中超声波传感器
Ultrasonic sensor RL
左后侧超声波传感器
RR-007
1
RR-007
2
RR-007
3
RR-003
1
RR-003
2
RR-003
3
W/G(RR)
G/L(RR)
B(RR)
V/W(RR)
G/L(RR)
B(RR)
W/G(RR)
G/L(RR)
V/W(RR)
C-53
4
C-53
8
C-53
6
W/G(B)
G/L(B)
V/W(B)
C-02
18
C-02
31
C-02
12
W/G(F)
G/L(F)
V/W(F)
A12
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

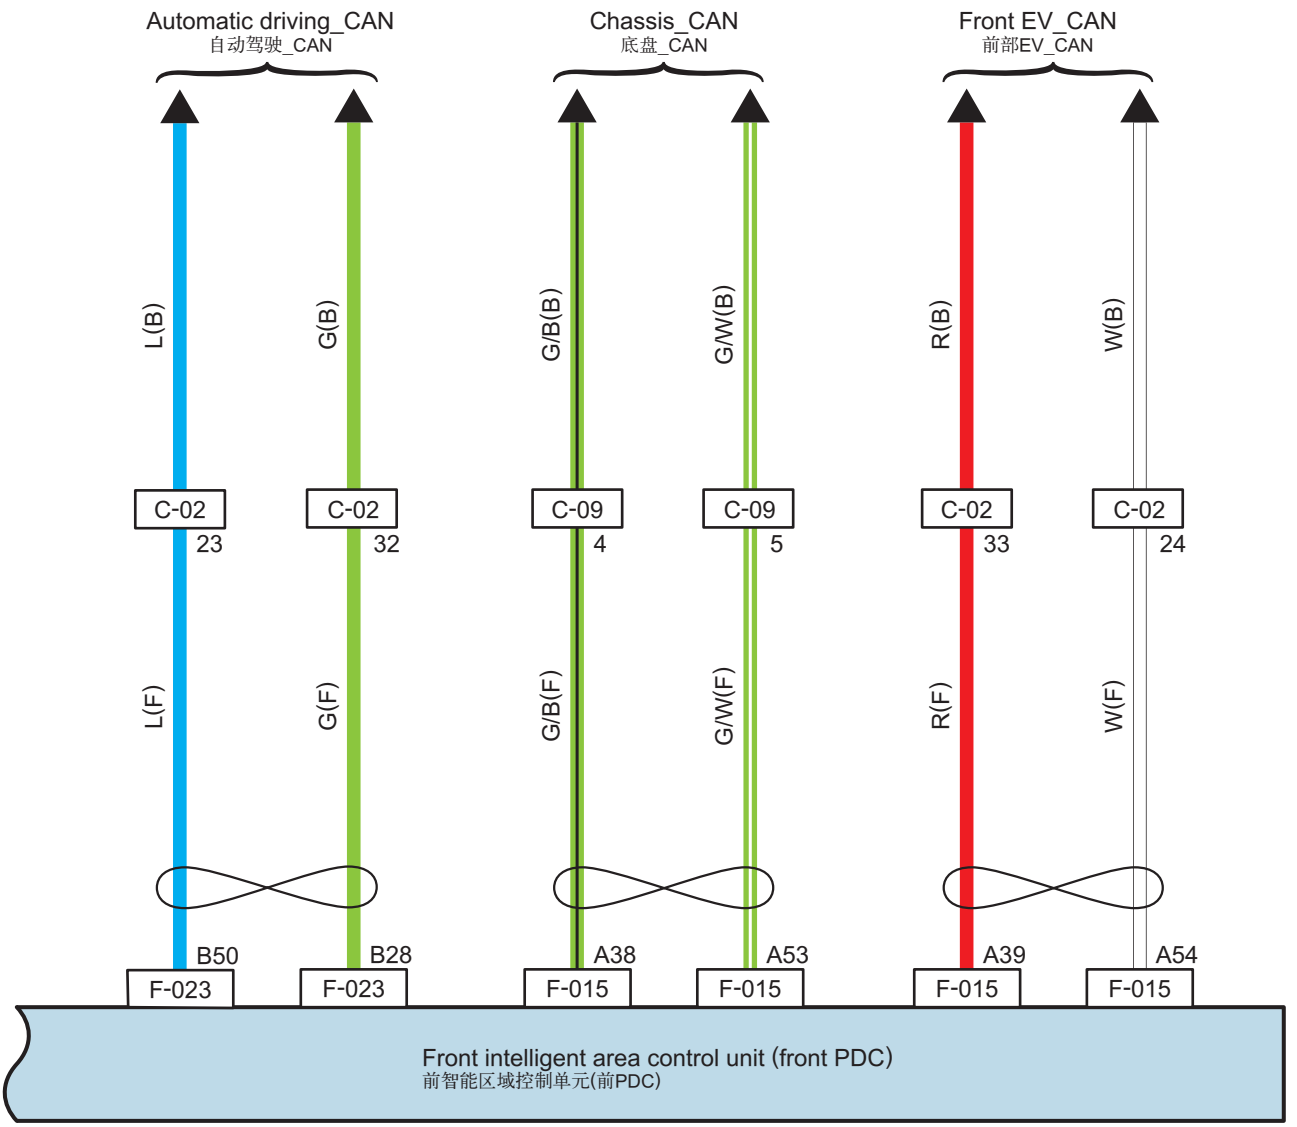

Corner ultrasonic sensor RL
左后角超声波传感器
Corner ultrasonic sensor FL
左前角超声波传感器
RR-004
1
RR-004
2
RR-004
3
FF-003
1
FF-003
2
FF-003
3
R/W(RR)
G/L(RR)
B(RR)
R/W(FF)
O(FF)
B(FF)
C-53
9
C-53
3
R/W(B)
B(B)
C-02
17
73a
C-15
4
C-15
3
R/W(F)
O(F)
A21
A10
F-015
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

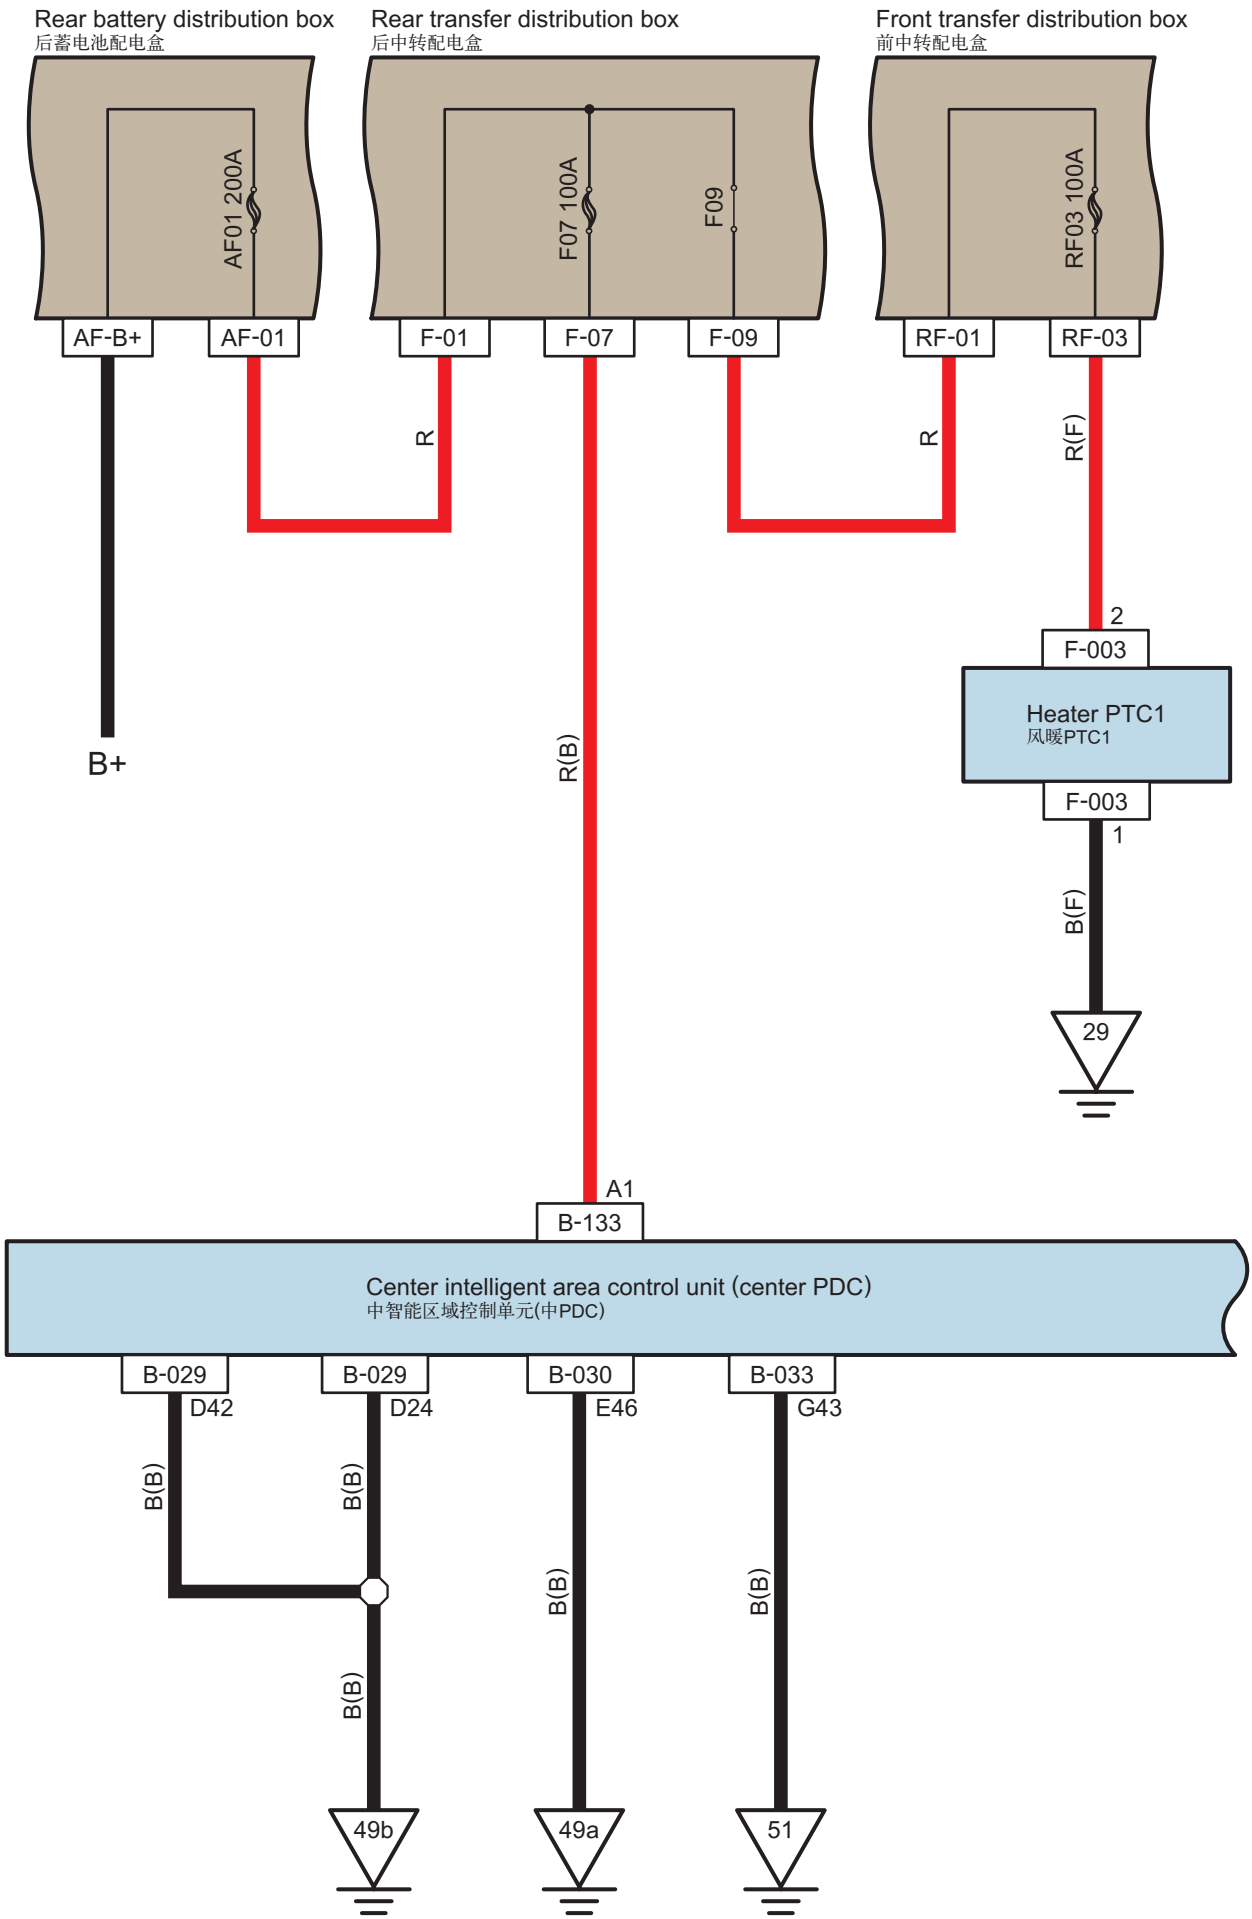

Center ultrasonic sensor FL
左前中超声波传感器
Ultrasonic sensor FL
左前侧超声波传感器
FF-004
1
FF-004
2
FF-004
3
FF-002
1
FF-002
2
FF-002
3
W/G(FF)
O(FF)
B(FF)
V/W(FF)
O(FF)
B(FF)
W/G(FF)
V/W(FF)
B(FF)
C-15
6
C-15
7
C-15
2
W/G(F)
V/W(F)
B(F)
23a
W/G(F)
V/W(F)
B32
A22
F-023
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

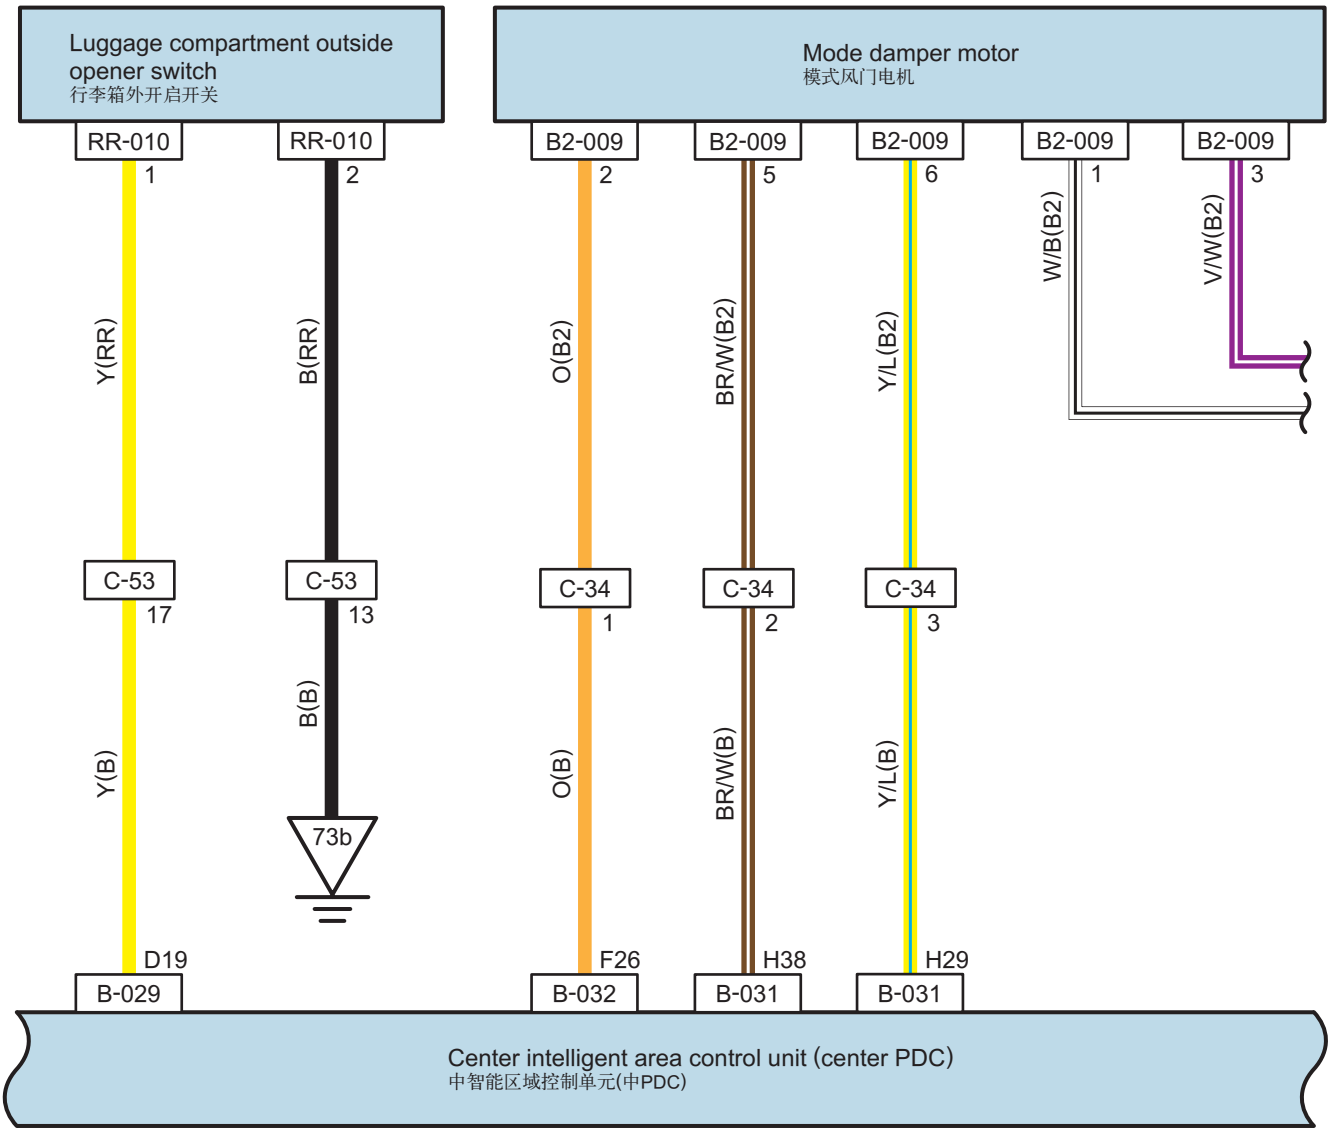

Corner ultrasonic sensor FR
右前角超声波传感器
Center ultrasonic sensor FR
右前中超声波传感器
FF-009
1
FF-009
2
FF-009
3
FF-008
1
FF-008
2
FF-008
3
R/W(FF)
P(FF)
B(FF)
V/W(FF)
P(FF)
B(FF)
P(FF)
C-15
5
P(F)
A11
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

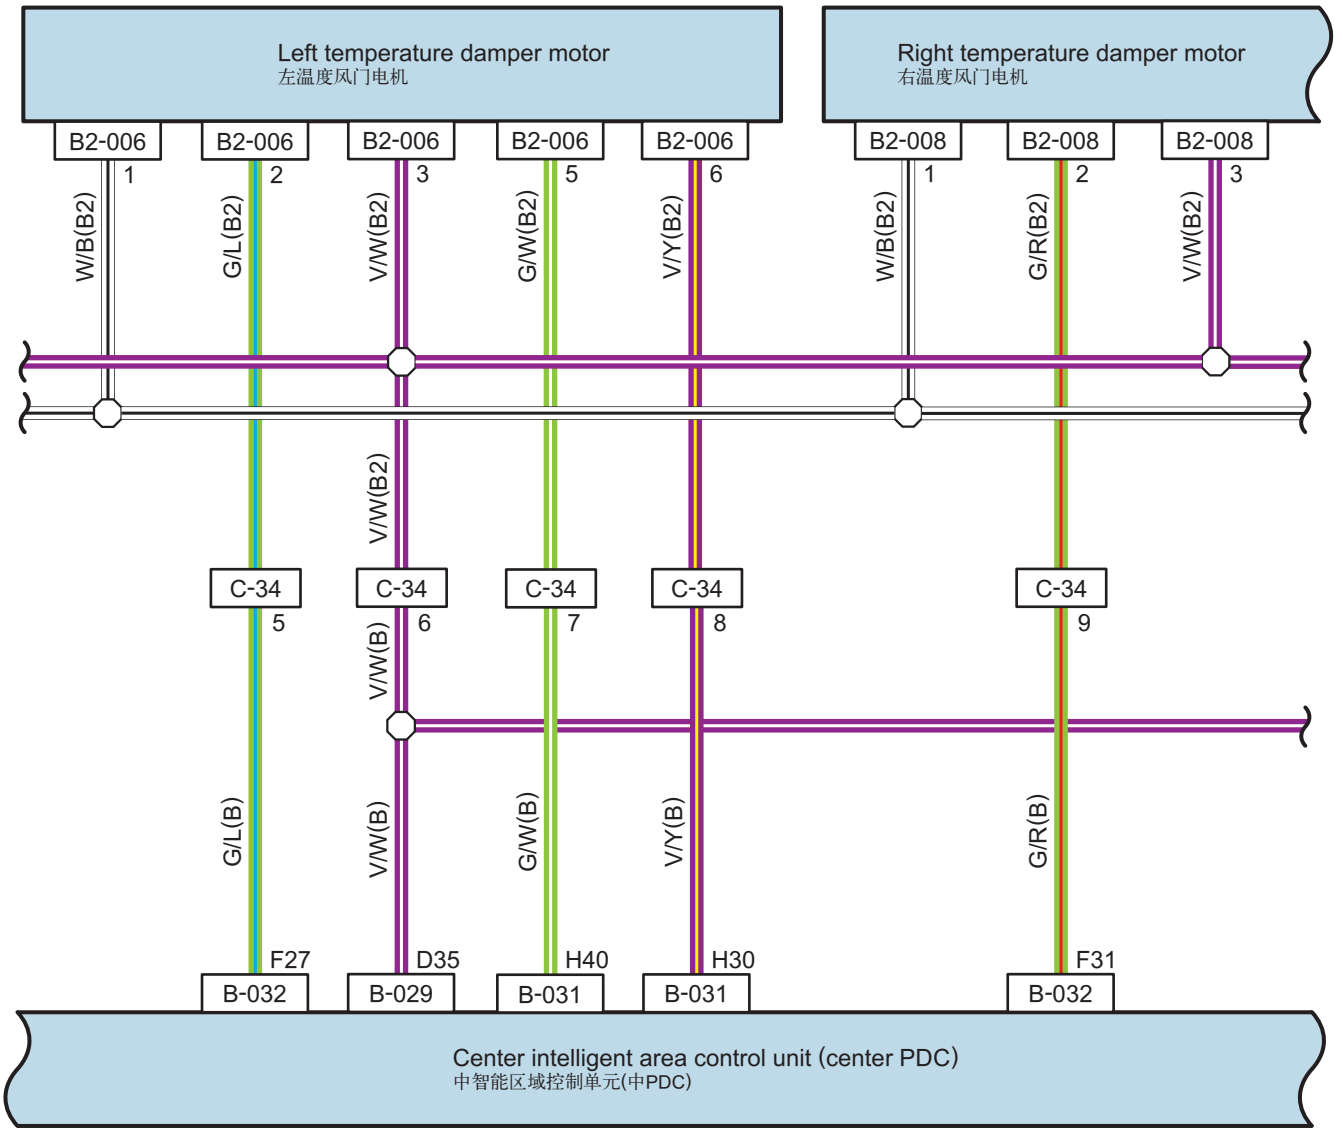

Ultrasonic sensor FR
右前侧超声波传感器
FF-010
1
FF-010
2
FF-010
3
W/G(FF)
P(FF)
B(FF)
B(FF)
C-15
2
B(F)
23a
Backbone 1_CAN
主干1_CAN
B(B)
BR(B)
C-01
12
C-01
13
B(F)
BR(F)
B93
B94
F-023
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

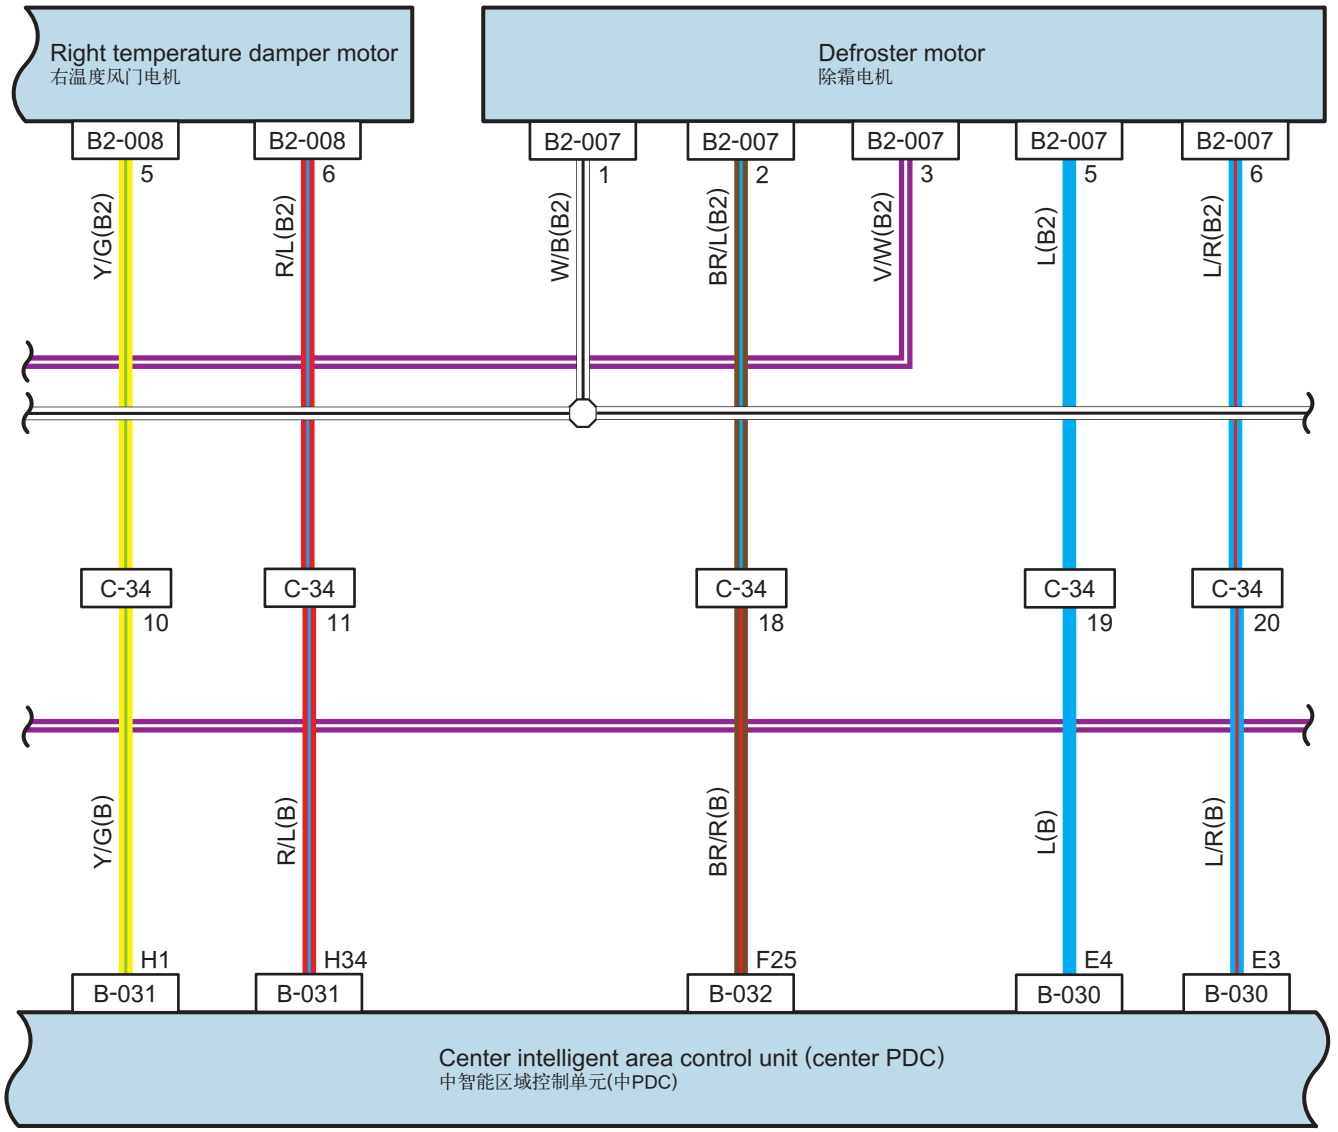

Information_CAN
信息_CAN
Backbone 2_CAN
主干2_CAN
Front comfort_CAN
前部舒适_CAN
Y(B)
O(B)
G(B)
R(B)
BR/B(B)
BR/W(B)
C-01
6
C-01
7
C-02
25
C-02
34
C-09
2
C-09
3
Y(F)
O(F)
G(F)
R(F)
BR/B(F)
BR/W(F)
B49
F-023
B27
F-023
B48
F-023
B26
F-023
B46
F-023
B47
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

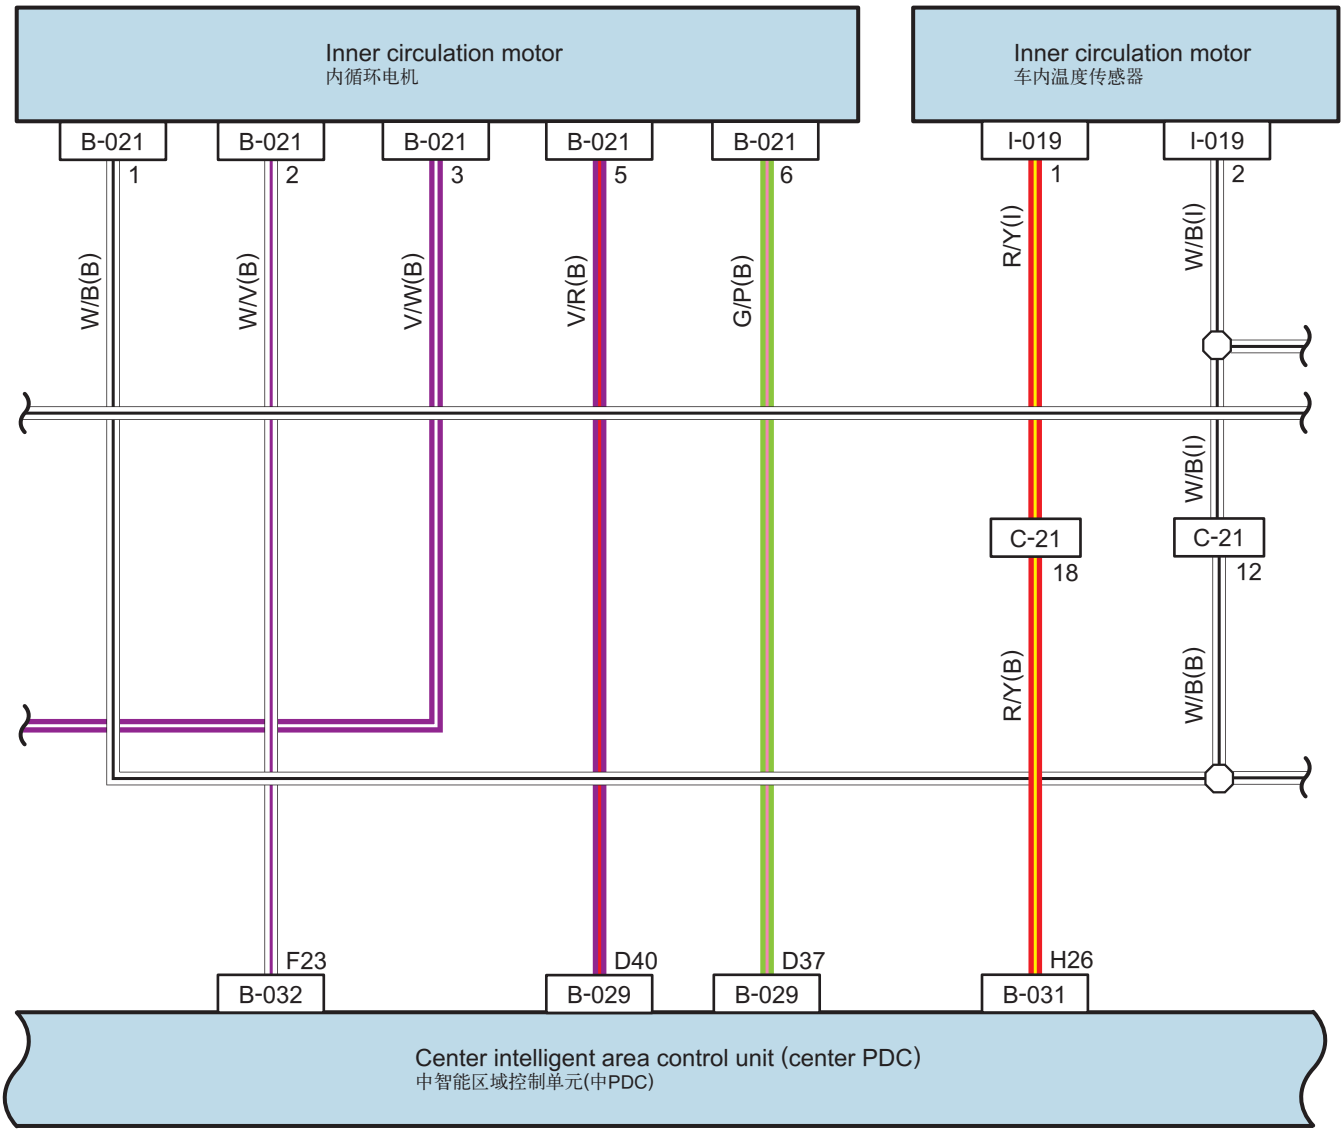

Automatic driving_CAN
自动驾驶_CAN
Chassis_CAN
底盘_CAN
Front EV_CAN
前部EV_CAN
L(B)
G(B)
G/B(B)
G/W(B)
R(B)
W(B)
C-02
23
C-02
32
C-09
4
C-09
5
C-02
33
C-02
24
L(F)
G(F)
G/B(F)
G/W(F)
R(F)
W(F)
B50
B28
A38
A53
A39
A54
F-023
F-023
F-015
F-015
F-015
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

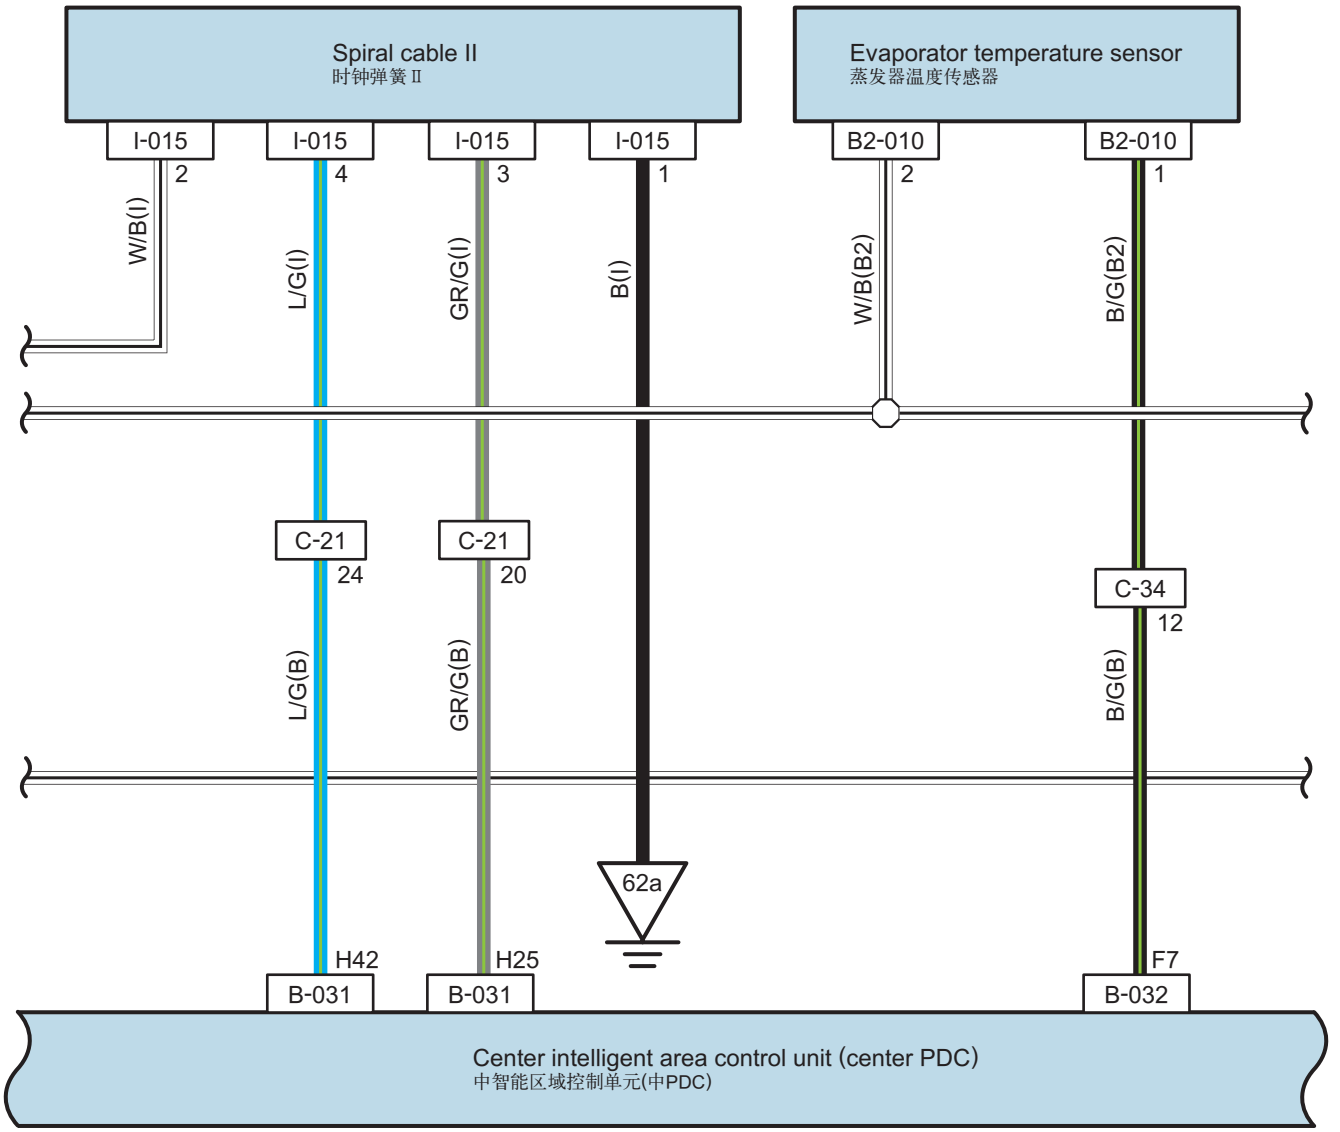

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
R
Rear transfer distribution box
后中转配电盒
F07 100A
F09
F-01
F-07
F-09
R(B)
R
Front transfer distribution box
前中转配电盒
RF03 100A
RF-01
RF-03
R(F)
2
F-003
Heater PTC1
风暖PTC1
F-003
1
B(F)
29
A1
B-133
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-029
D42
B-029
D24
B-030
E46
B-033
G43
B(B)
B(B)
B(B)
B(B)
B(B)
49b
49a
51

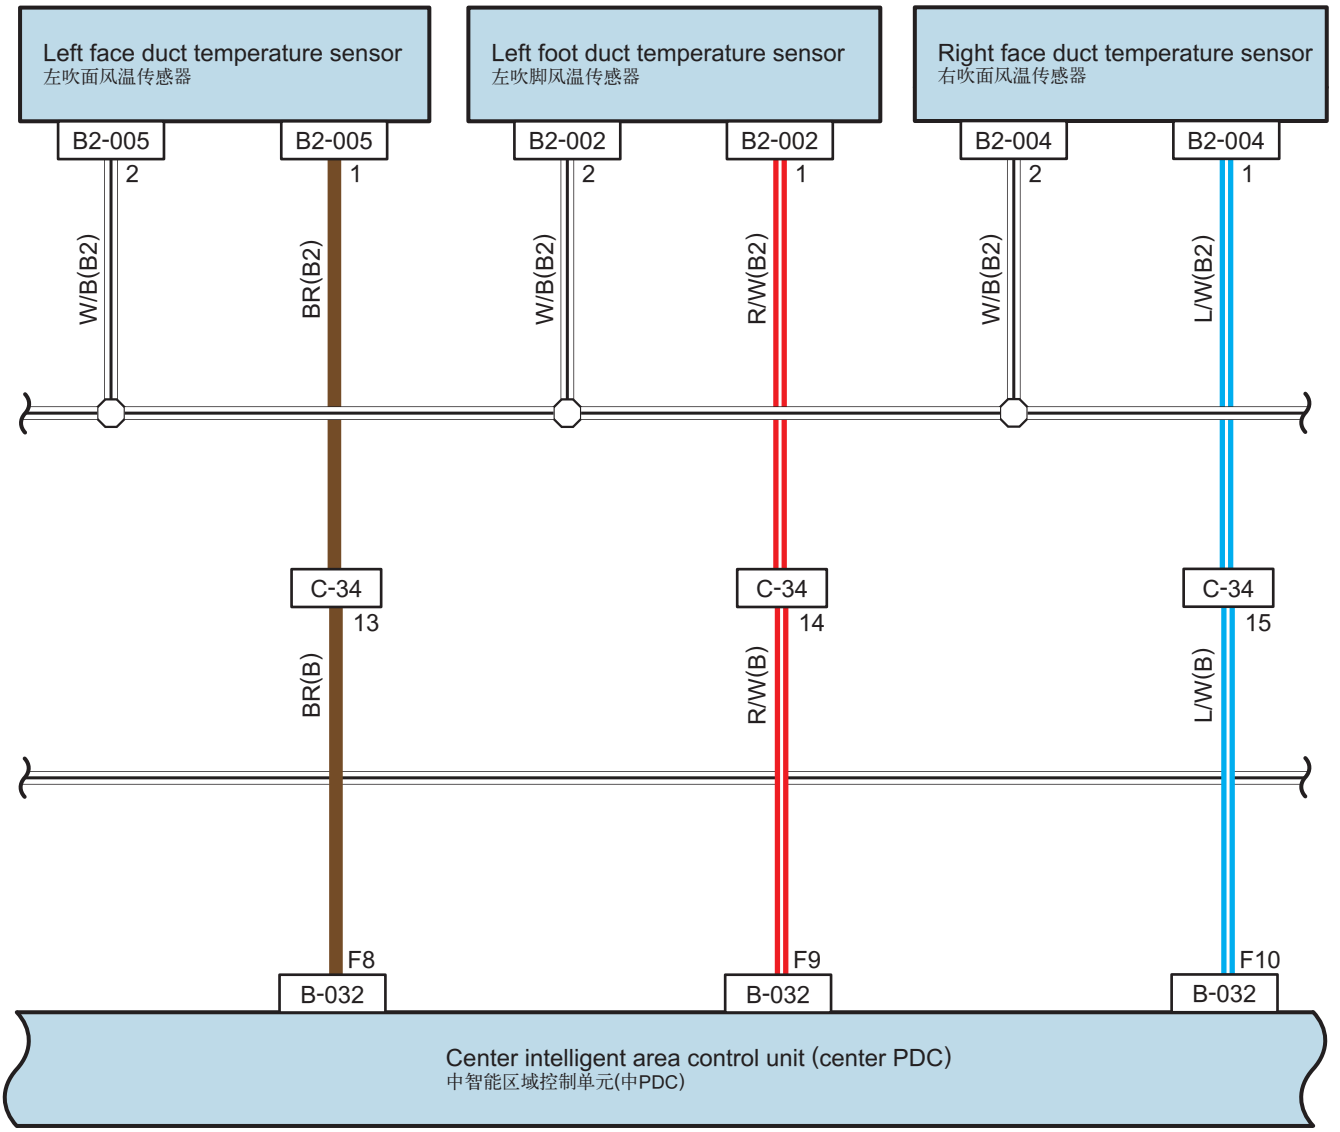

Luggage compartment outside opener switch
行李箱外开启开关
RR-010
1
RR-010
2
Y(RR)
B(RR)
C-53
17
C-53
13
B(B)
Y(B)
73b
D19
B-029
Mode damper motor
模式风门电机
B2-009
2
B2-009
5
B2-009
6
B2-009
1
B2-009
3
O(B2)
BR/W(B2)
Y/L(B2)
W/B(B2)
V/W(B2)
C-34
1
C-34
2
C-34
3
O(B)
BR/W(B)
Y/L(B)
F26
H38
H29
B-032
B-031
B-031
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

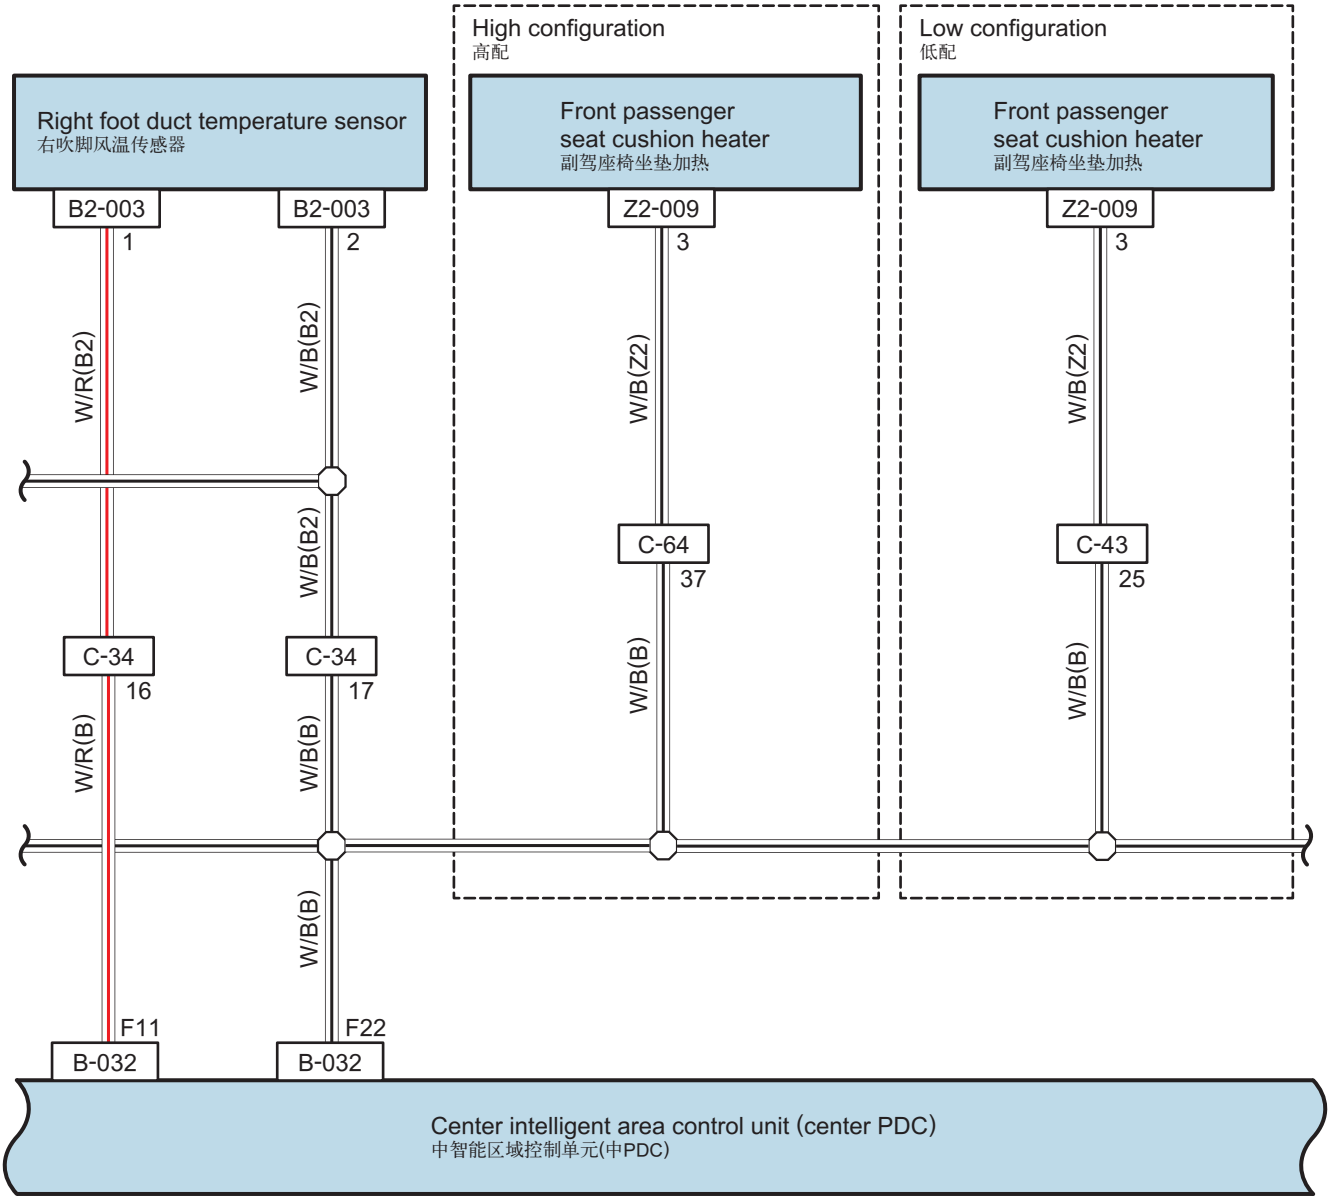

Left temperature damper motor
左温度风门电机
Right temperature damper motor
右温度风门电机
B2-006
1
W/B(B2)
B2-006
2
G/L(B2)
B2-006
3
V/W(B2)
B2-006
5
G/W(B2)
B2-006
6
V/Y(B2)
B2-008
1
W/B(B2)
B2-008
2
G/R(B2)
B2-008
3
V/W(B2)
V/W(B2)
C-34
5
C-34
6
C-34
7
C-34
8
C-34
9
V/W(B)
G/L(B)
V/W(B)
G/W(B)
V/Y(B)
G/R(B)
F27
D35
H40
H30
F31
B-032
B-029
B-031
B-031
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

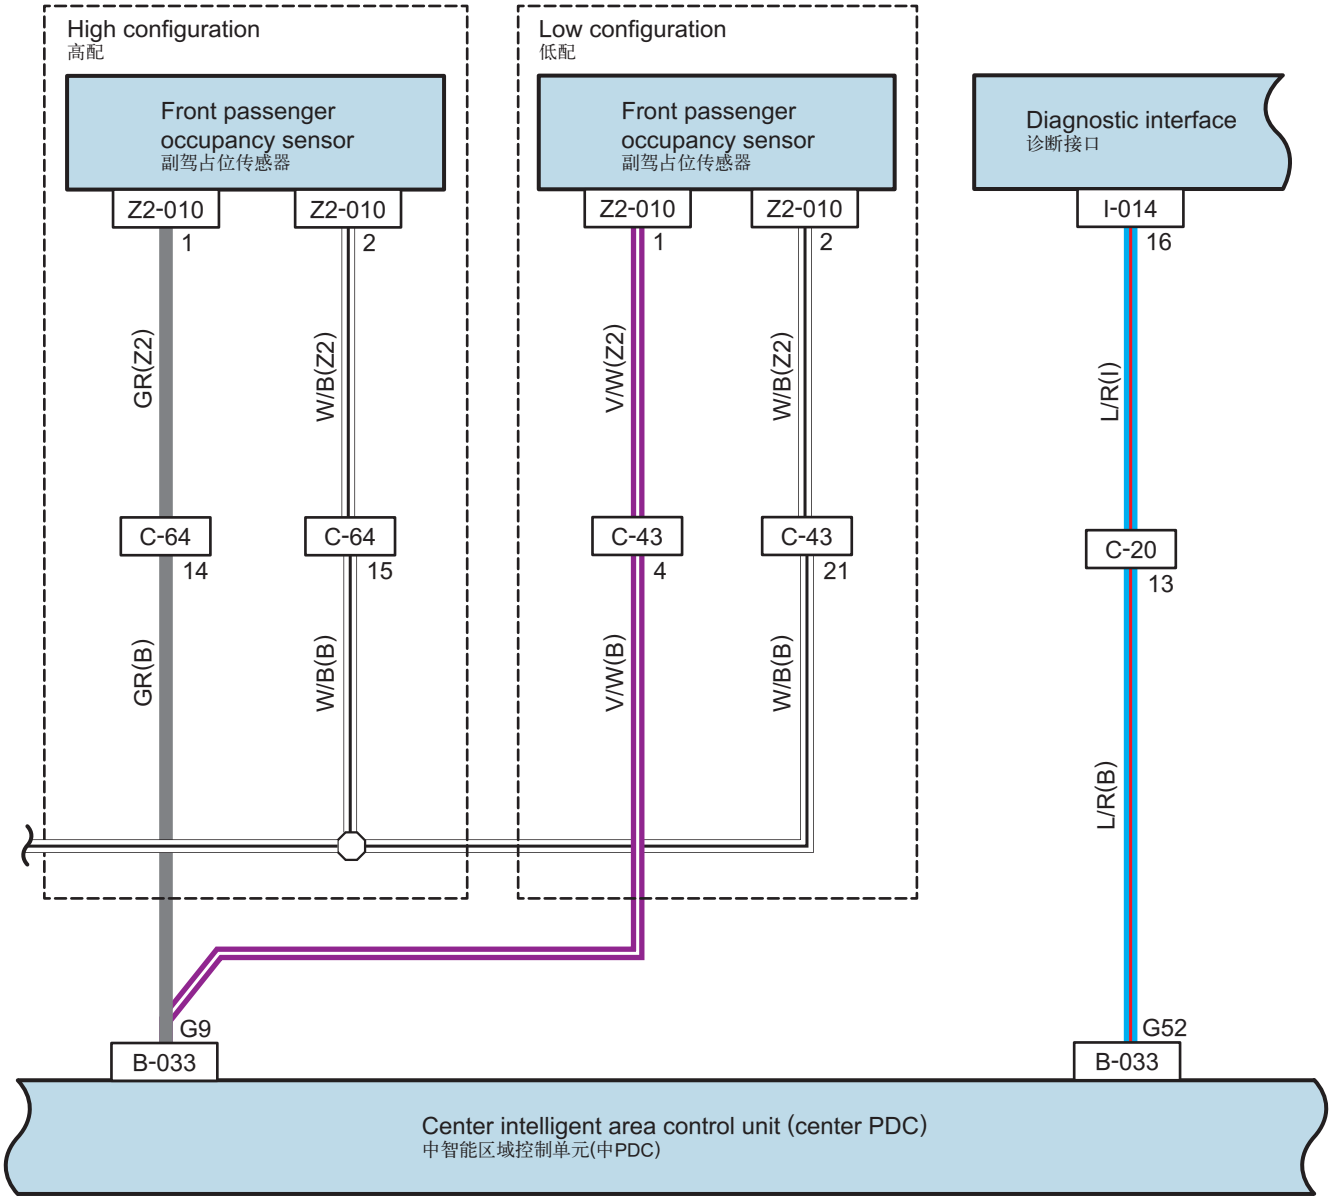

Right temperature damper motor
右温度风门电机
Defroster motor
除霜电机
B2-008
5
Y/G(B2)
B2-008
6
R/L(B2)
B2-007
1
W/B(B2)
B2-007
2
BR/L(B2)
B2-007
3
V/W(B2)
B2-007
5
L(B2)
B2-007
6
L/R(B2)
C-34
10
C-34
11
C-34
18
C-34
19
C-34
20
Y/G(B)
R/L(B)
BR/R(B)
L(B)
L/R(B)
H1
H34
F25
E4
E3
B-031
B-031
B-032
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

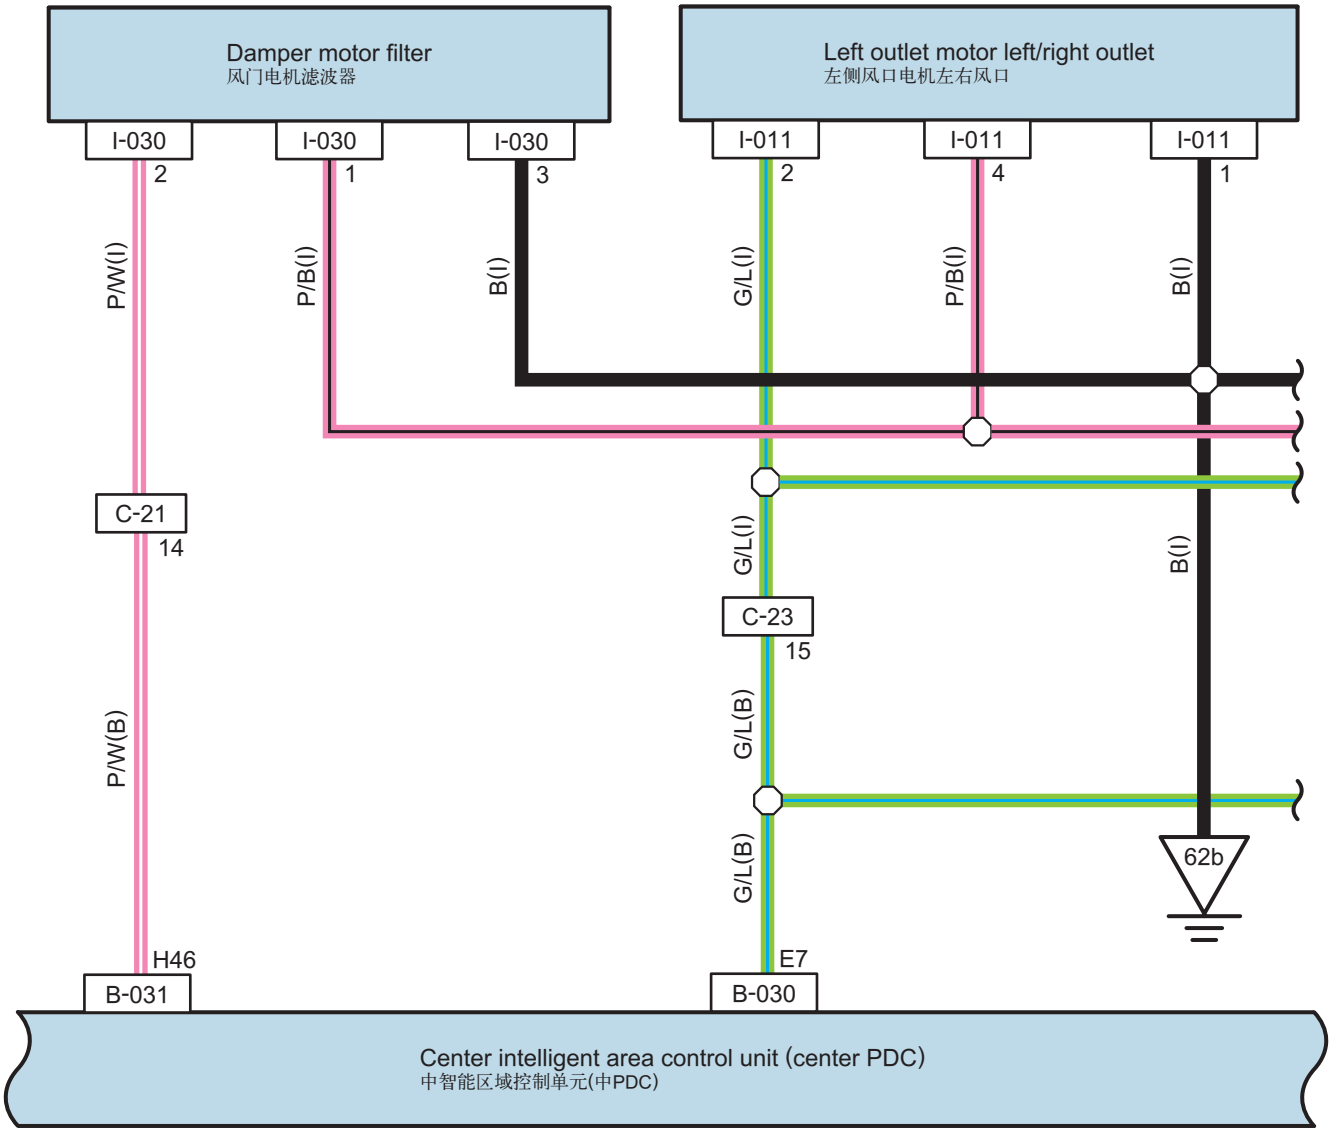

Inner circulation motor
内循环电机
Inner circulation motor
车内温度传感器
B-021
1
B-021
2
B-021
3
B-021
5
B-021
6
I-019
1
I-019
2
W/B(B)
W/V(B)
V/W(B)
V/R(B)
G/P(B)
R/Y(I)
W/B(I)
W/B(I)
C-21
18
C-21
12
R/Y(B)
W/B(B)
F23
D40
D37
H26
B-032
B-029
B-029
B-031
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

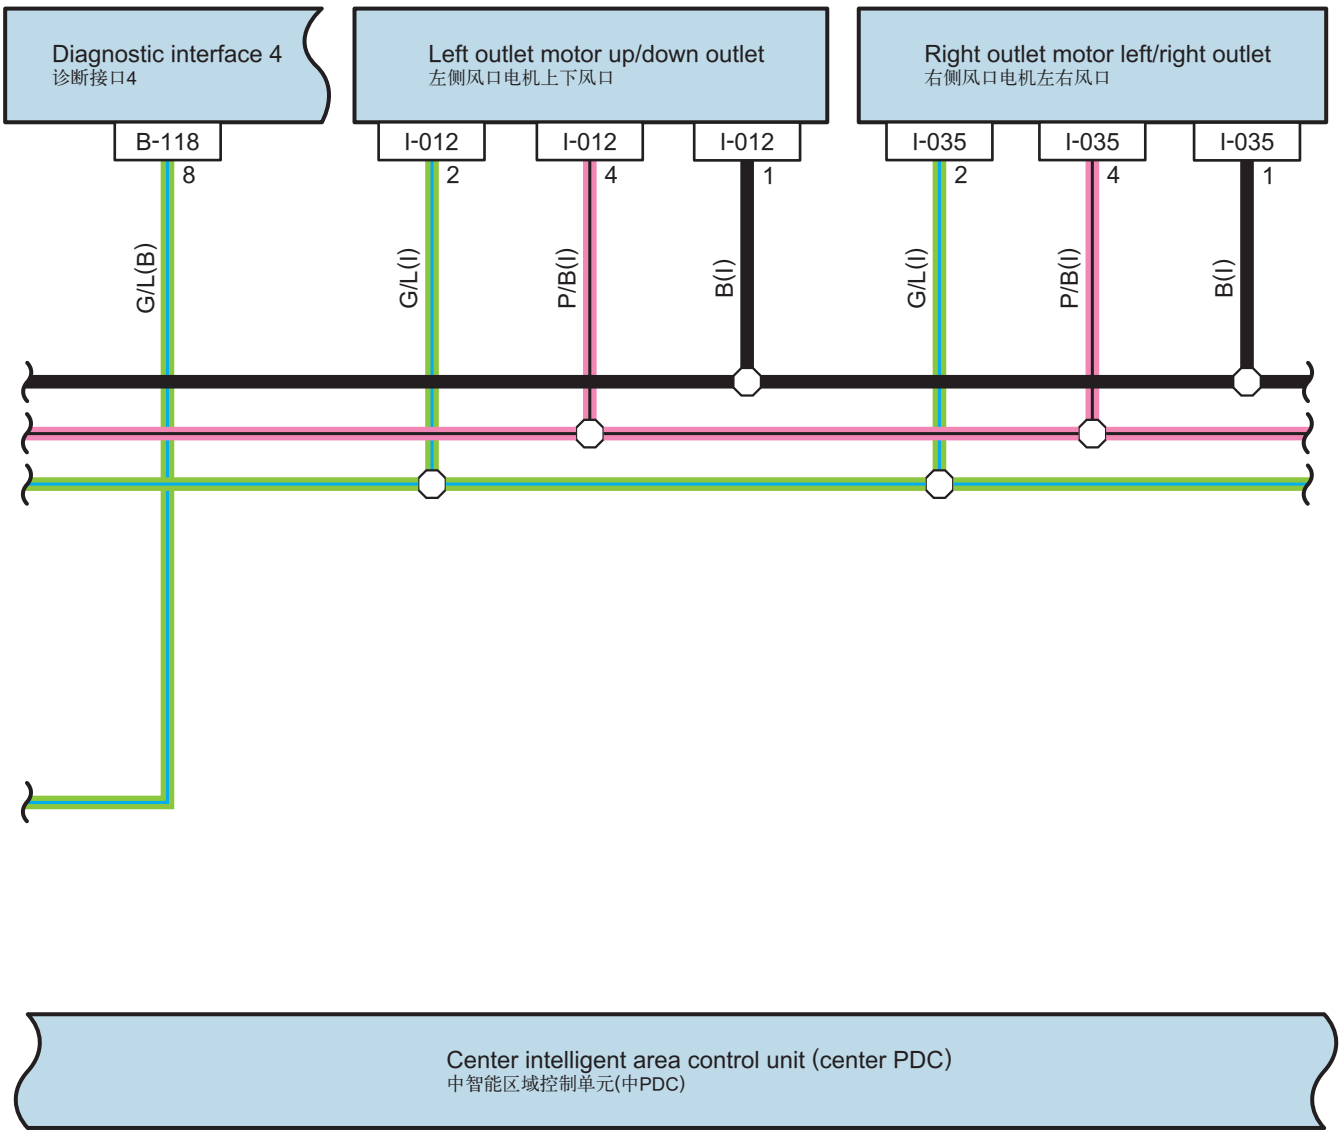

Spiral cable II
时钟弹簧 II
Evaporator temperature sensor
蒸发器温度传感器
I-015
2
I-015
4
I-015
3
I-015
1
B2-010
2
B2-010
1
W/B(I)
L/G(I)
GR/G(I)
B(I)
W/B(B2)
B/G(B2)
C-21
24
C-21
20
C-34
12
L/G(B)
GR/G(B)
B/G(B)
62a
H42
H25
F7
B-031
B-031
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

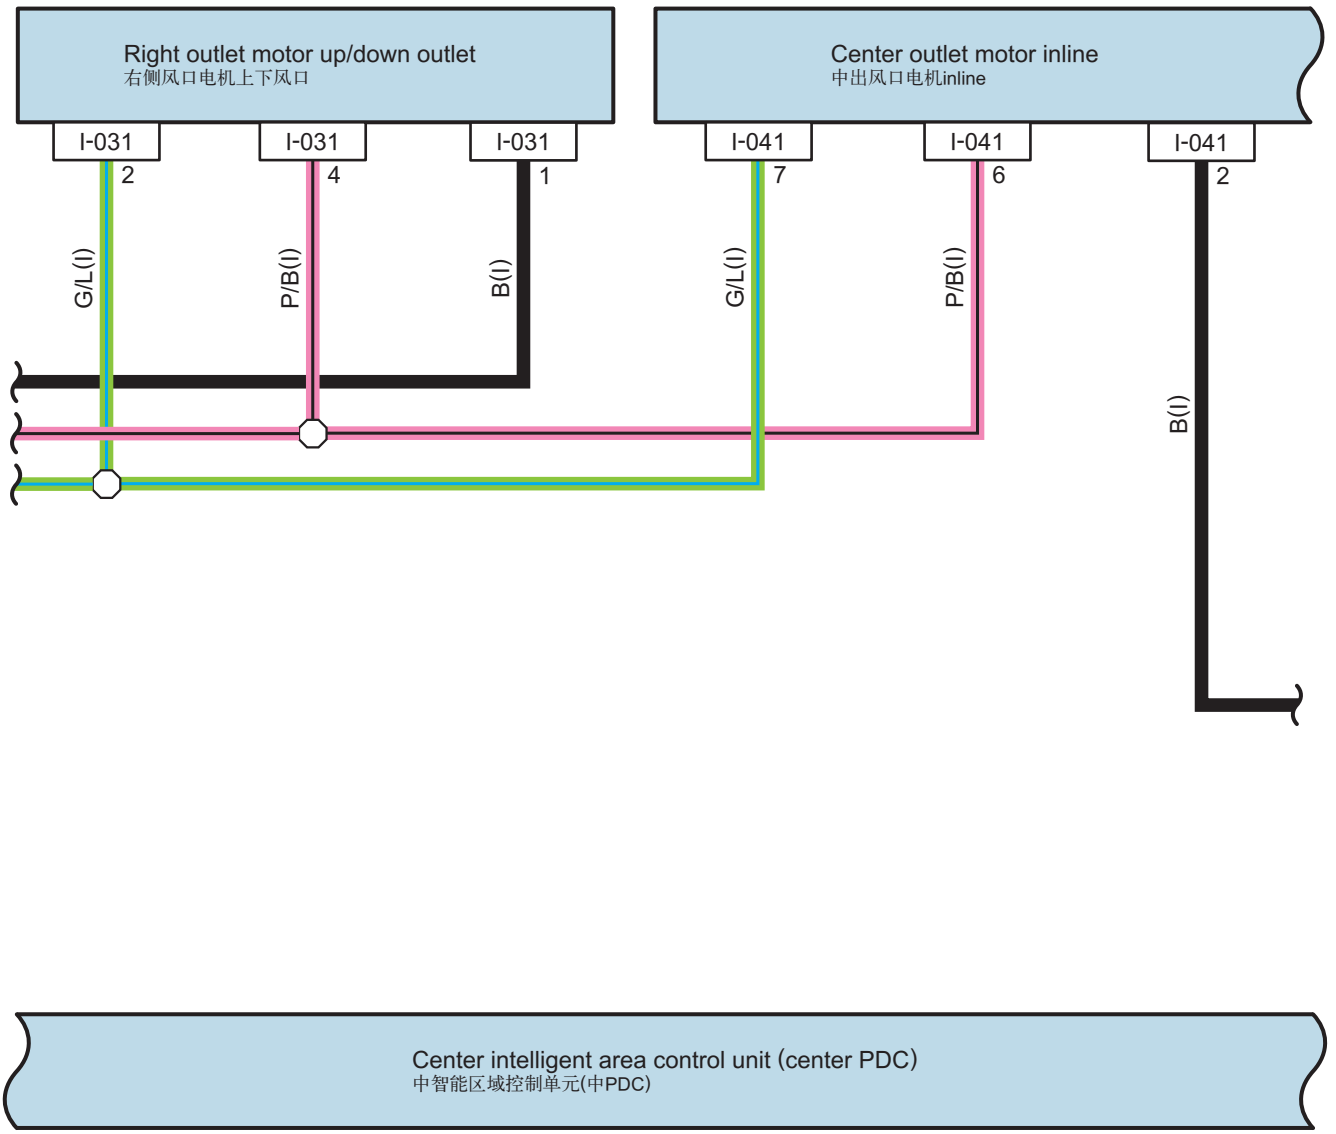

Left face duct temperature sensor
左吹面风温传感器
Left foot duct temperature sensor
左吹脚风温传感器
Right face duct temperature sensor
右吹面风温传感器
B2-005
2
B2-005
1
B2-002
2
B2-002
1
B2-004
2
B2-004
1
W/B(B2)
BR(B2)
W/B(B2)
R/W(B2)
W/B(B2)
L/W(B2)
C-34
13
C-34
14
C-34
15
BR(B)
R/W(B)
L/W(B)
F8
F9
F10
B-032
B-032
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)


High configuration
高配
Low configuration
低配
Right foot duct temperature sensor
右吹脚风温传感器
Front passenger seat cushion heater
副驾座椅坐垫加热
Front passenger seat cushion heater
副驾座椅坐垫加热
B2-003
1
B2-003
2
Z2-009
3
Z2-009
3
W/R(B2)
W/B(B2)
W/B(Z2)
W/B(Z2)
W/B(B2)
C-64
37
C-43
25
C-34
16
C-34
17
W/B(B)
W/B(B)
W/R(B)
W/B(B)
F11
F22
B-032
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

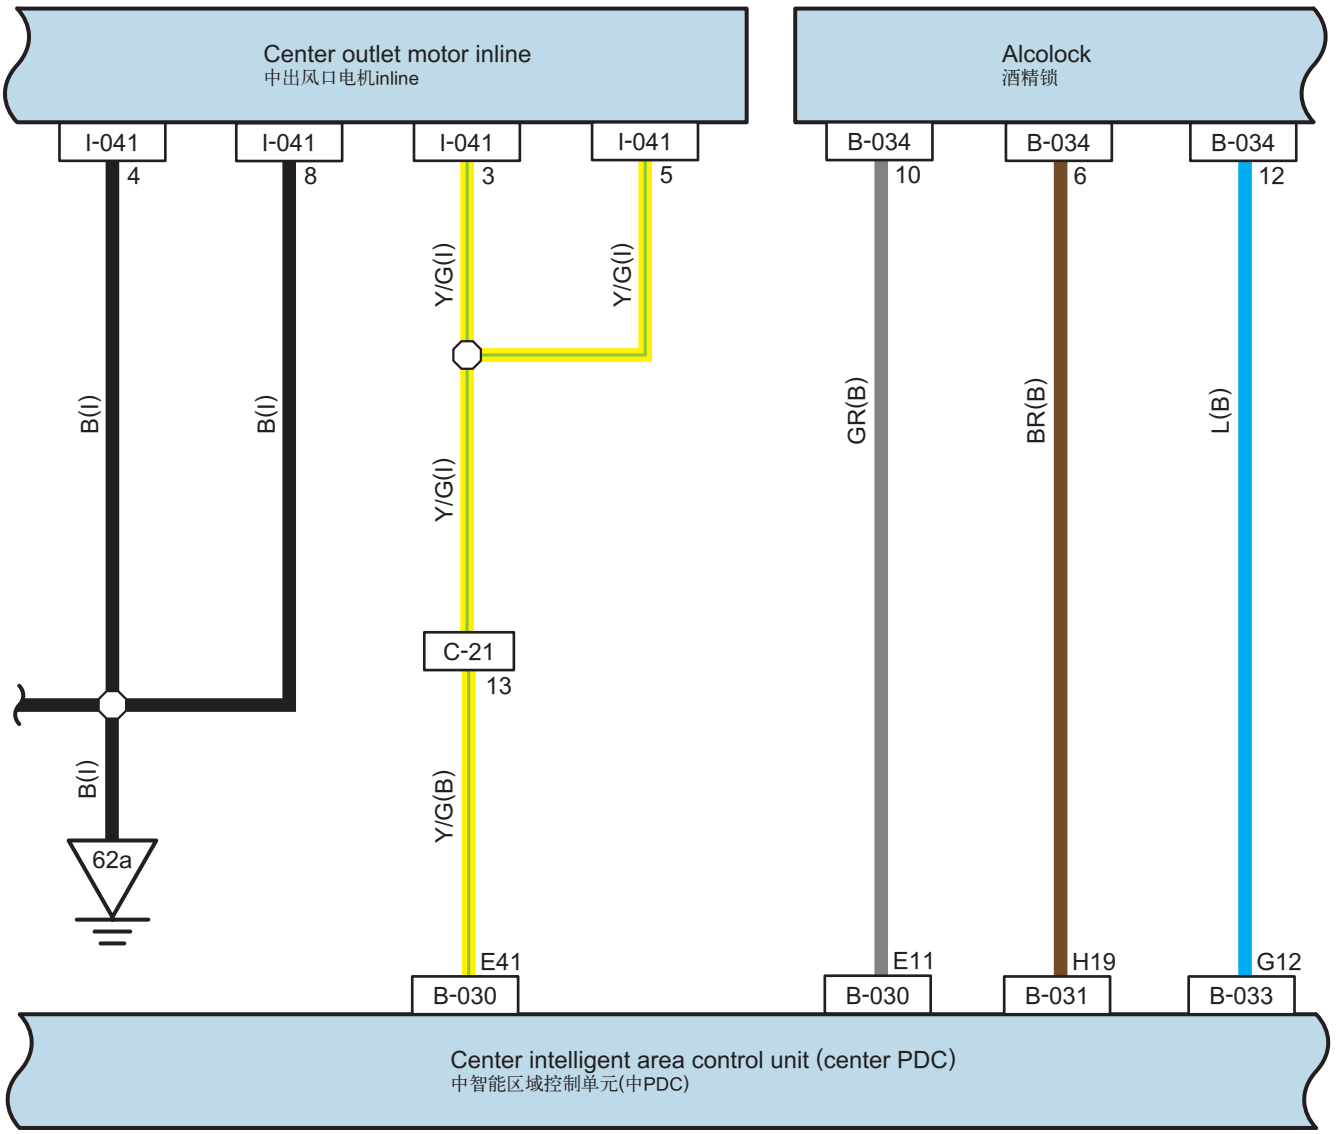

High configuration
高配
Front passenger occupancy sensor
副驾占位传感器
Z2-010
1
Z2-010
2
GR(Z2)
W/B(Z2)
C-64
14
C-64
15
GR(B)
W/B(B)
Low configuration
低配
Front passenger occupancy sensor
副驾占位传感器
Z2-010
1
Z2-010
2
V/W(Z2)
W/B(Z2)
C-43
4
C-43
21
V/W(B)
W/B(B)
Diagnostic interface
诊断接口
I-014
16
L/R(I)
C-20
13
L/R(B)
G9
B-033
G52
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

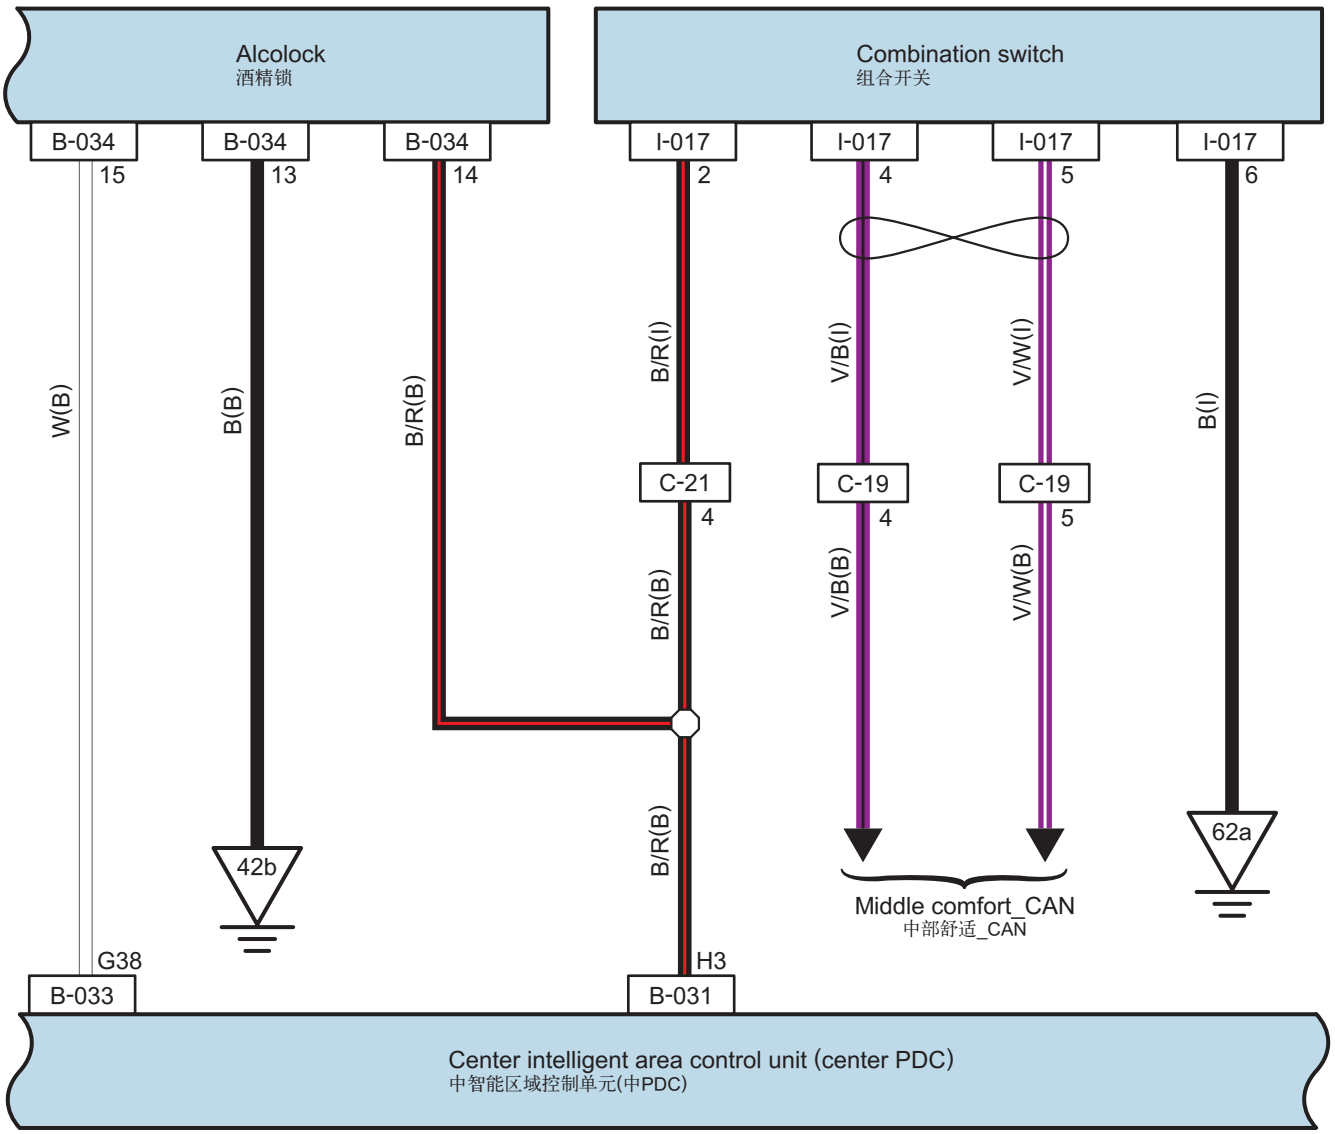

Damper motor filter
风门电机滤波器
Left outlet motor left/right outlet
左侧风口电机左右风口
I-030
2
I-030
1
I-030
3
I-011
2
I-011
4
I-011
1
P/W(I)
P/B(I)
B(I)
G/L(I)
P/B(I)
B(I)
C-21
14
G/L(I)
B(I)
C-23
15
P/W(B)
G/L(B)
62b
G/L(B)
H46
B-031
E7
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

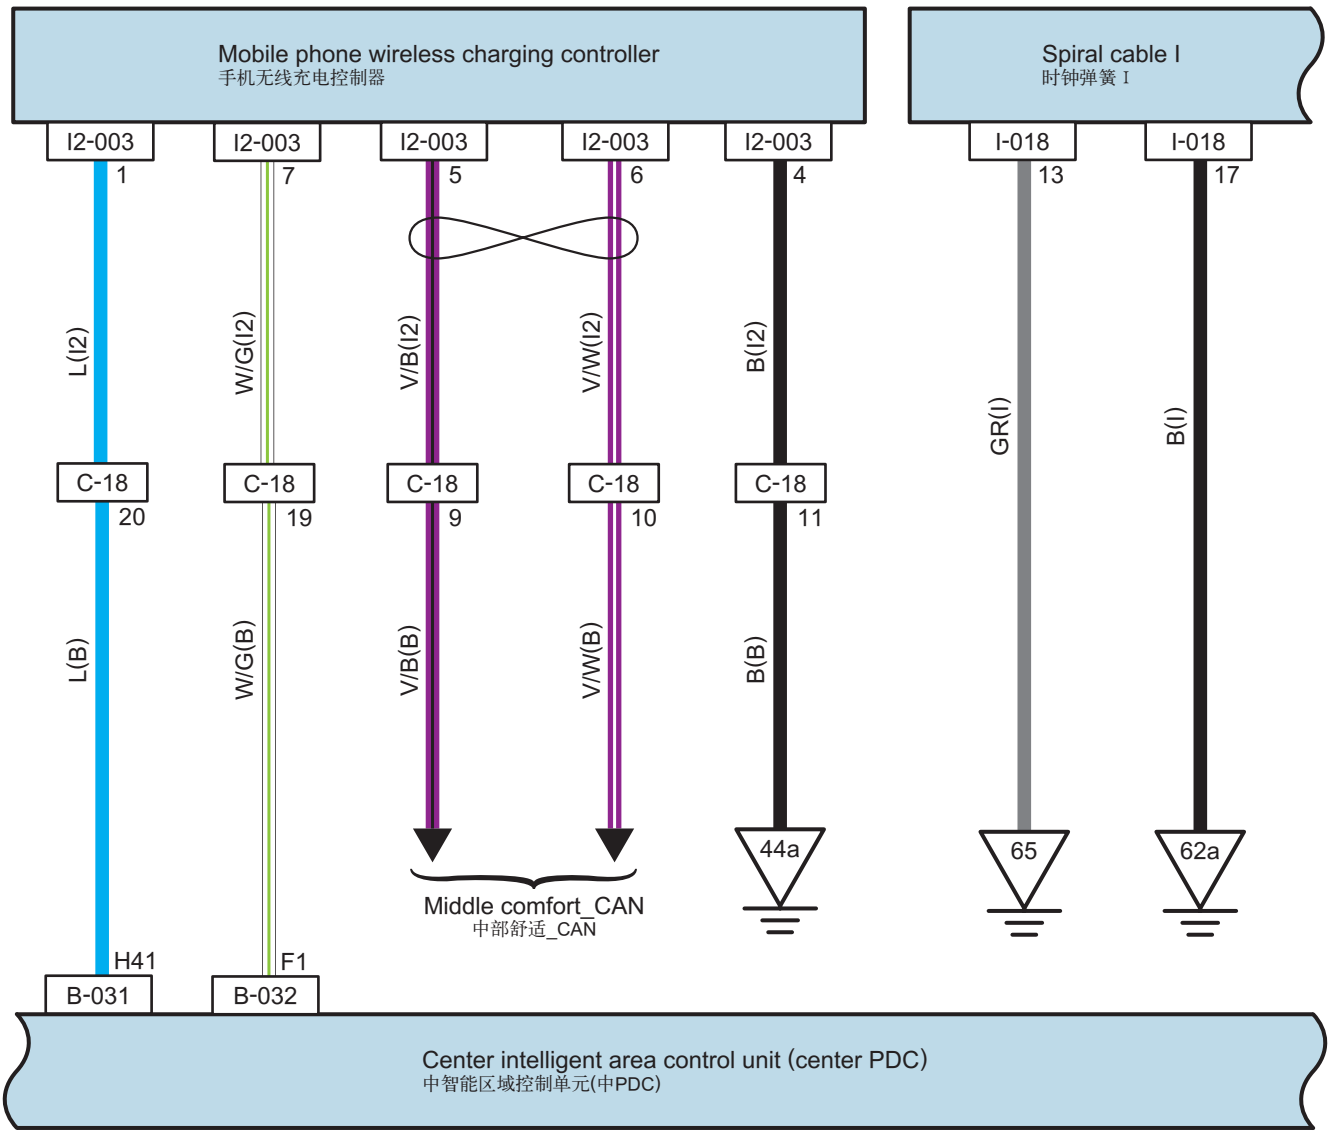

Diagnostic interface 4
诊断接口4
Left outlet motor up/down outlet
左侧风口电机上下风口
Right outlet motor left/right outlet
右侧风口电机左右风口
B-118
8
I-012
2
I-012
4
I-012
1
I-035
2
I-035
4
I-035
1
G/L(B)
G/L(I)
P/B(I)
B(I)
G/L(I)
P/B(I)
B(I)
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

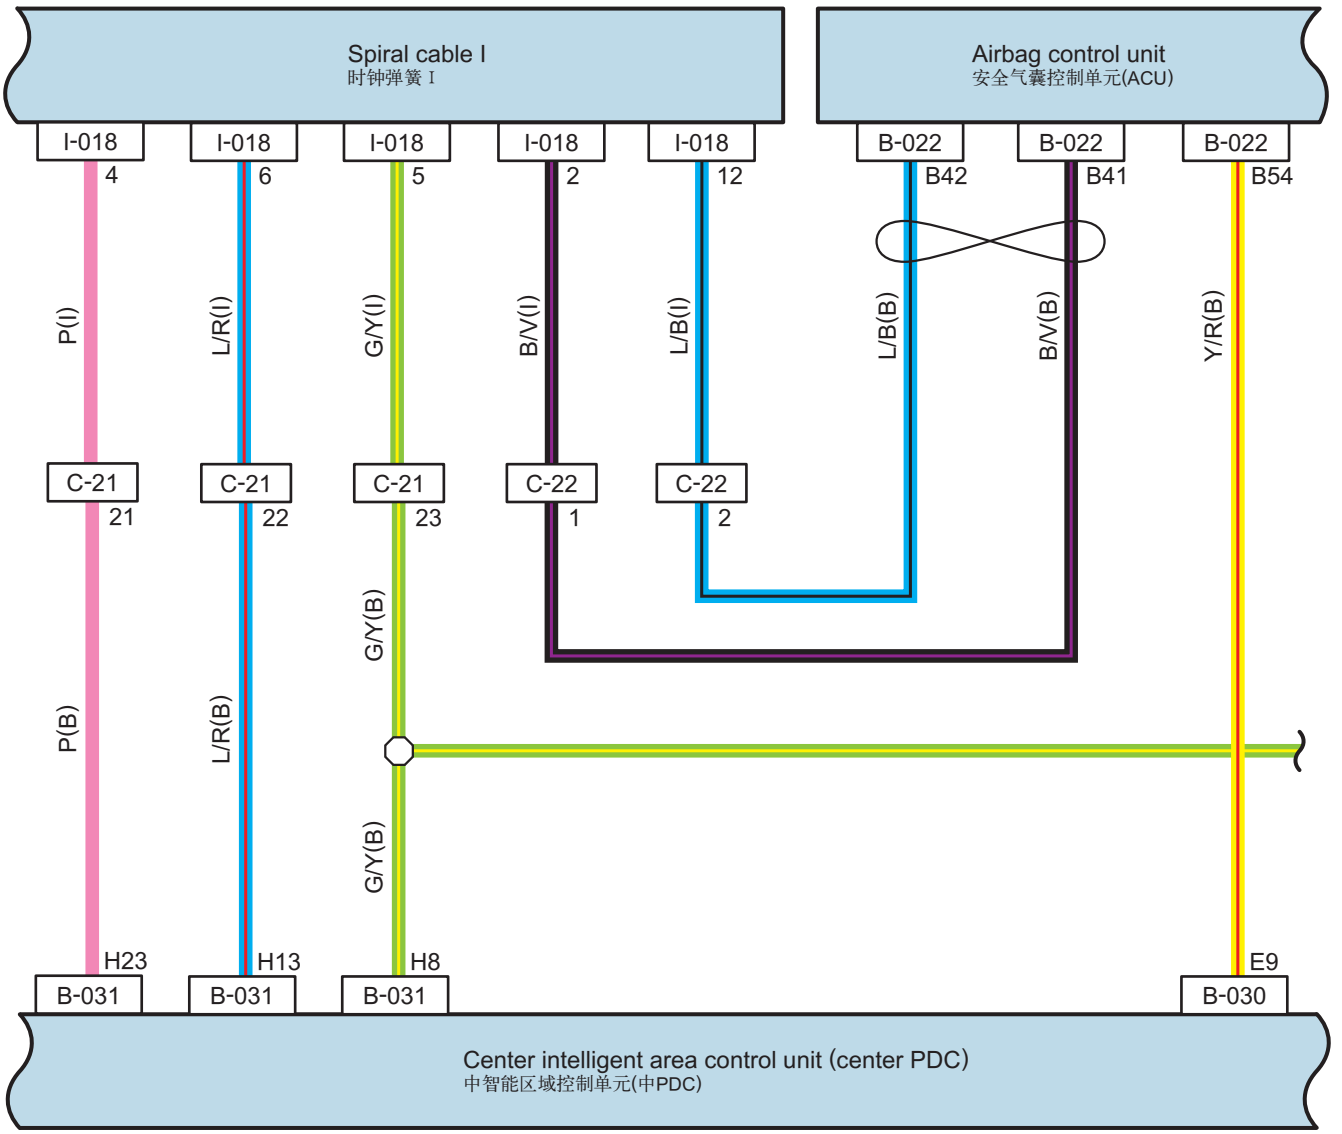


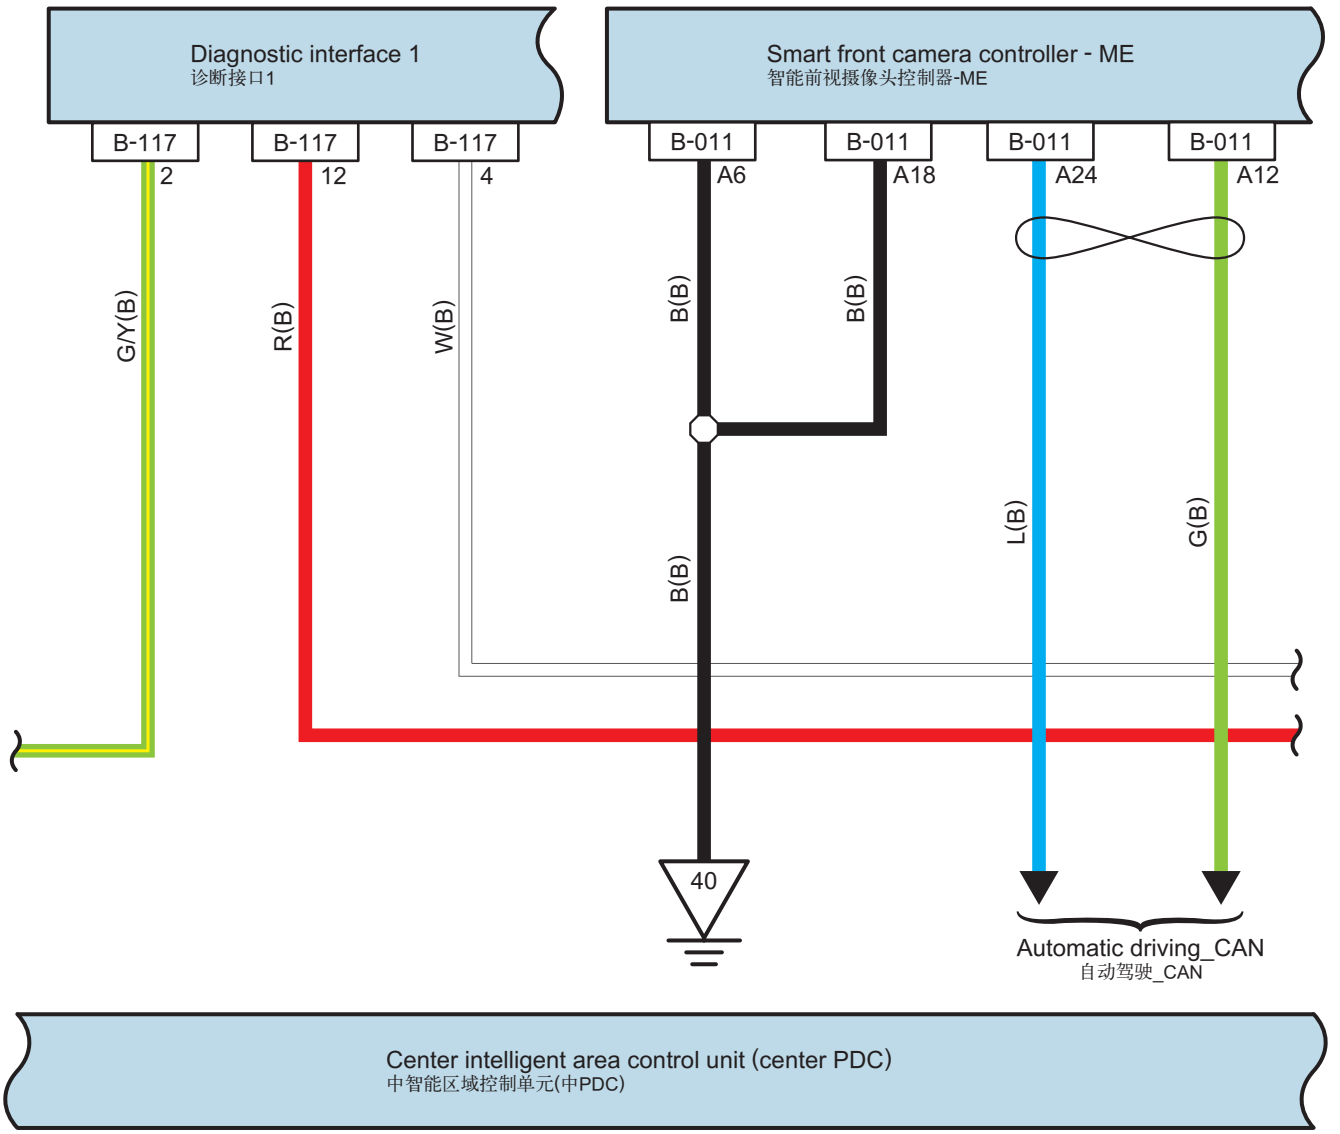
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

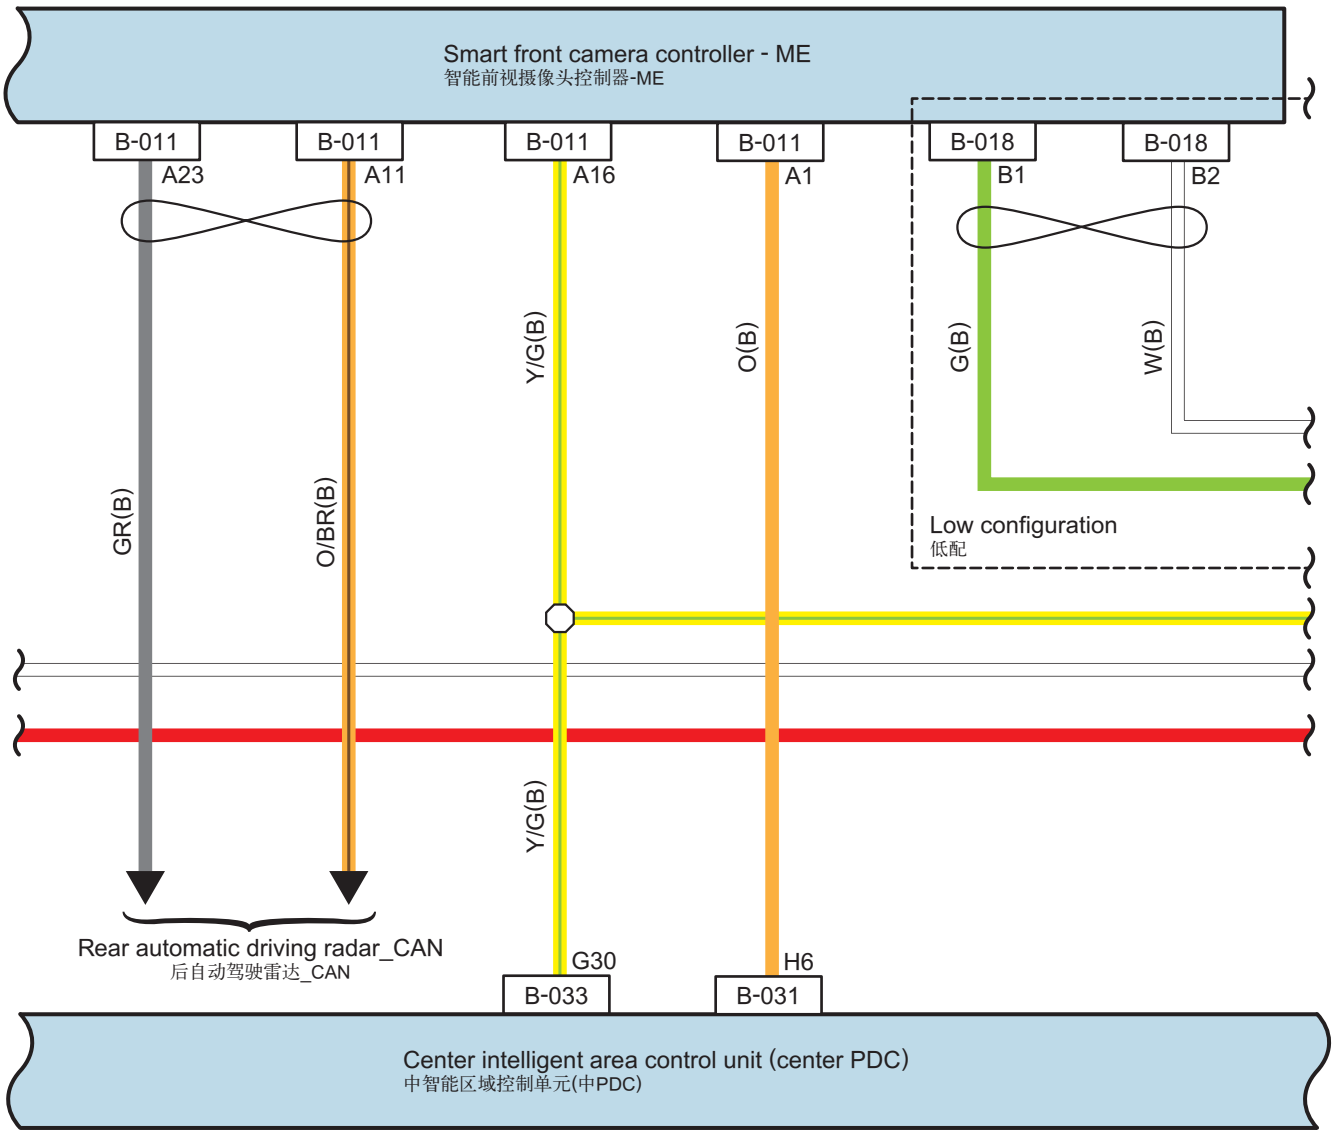

Center outlet motor inline
中出风口电机inline
I-041
4
I-041
8
I-041
3
I-041
5
B(I)
B(I)
Y/G(I)
Y/G(I)
Y/G(I)
C-21
13
B(I)
62a
Y/G(B)
E41
B-030
Alcolock
酒精锁
B-034
10
B-034
6
B-034
12
GR(B)
BR(B)
L(B)
E11
B-030
H19
B-031
G12
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

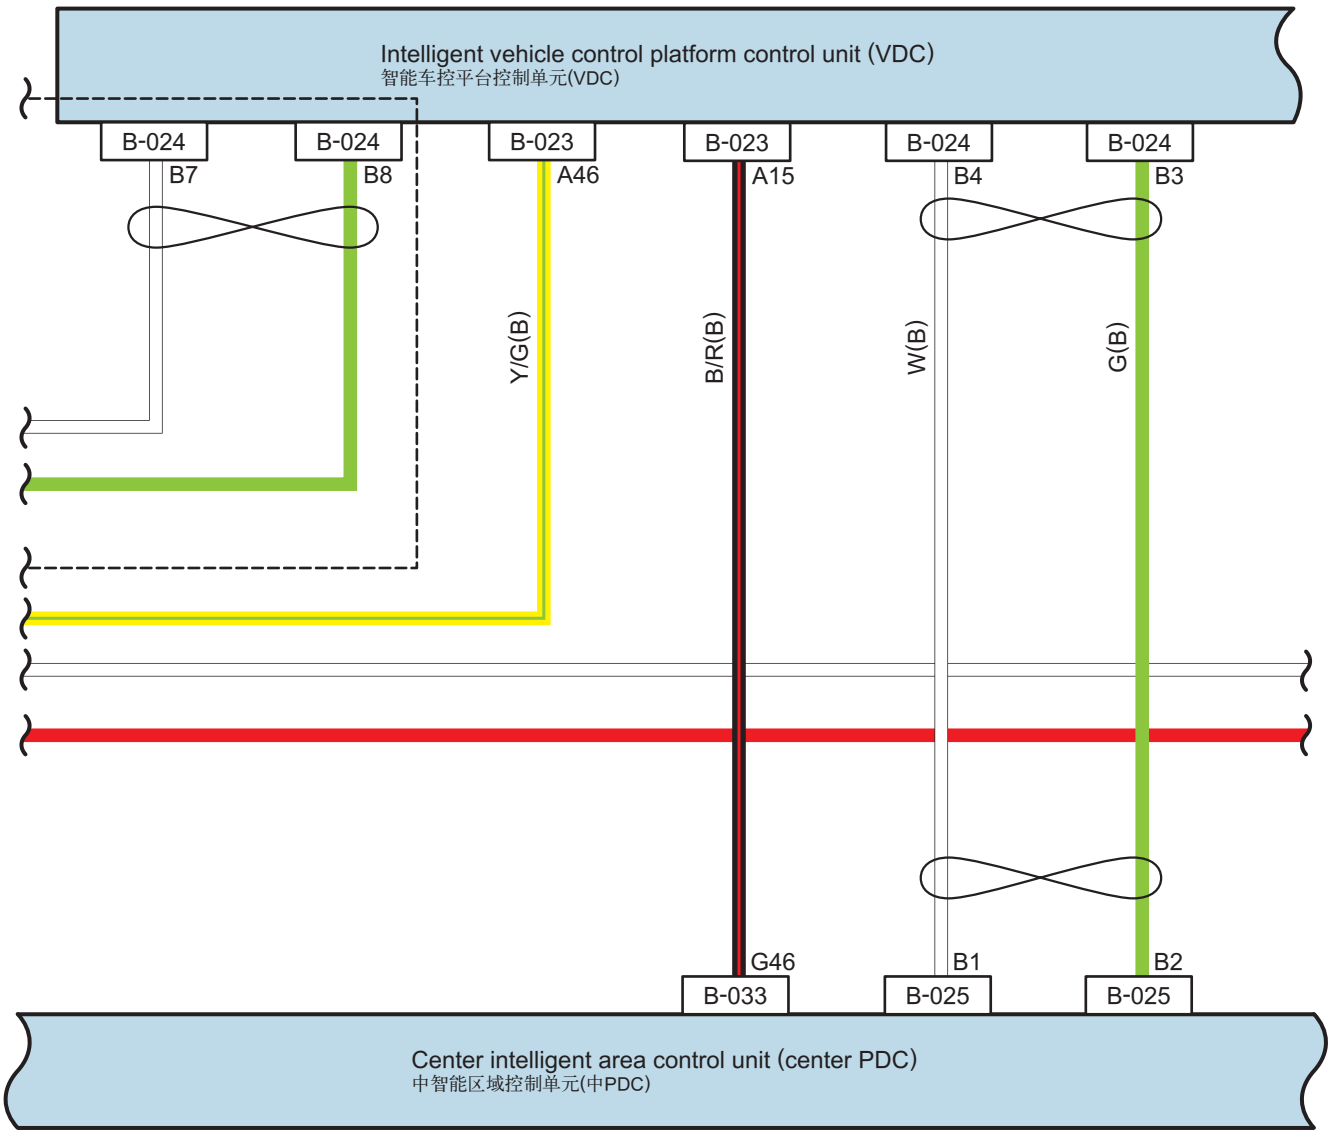

Alcolock
酒精锁
Combination switch
组合开关
B-034
15
B-034
13
B-034
14
I-017
2
I-017
4
I-017
5
I-017
6
W(B)
B(B)
B/R(B)
B/R(I)
V/B(I)
V/W(I)
B(I)
C-21
4
C-19
4
C-19
5
B/R(B)
V/B(B)
V/W(B)
42b
62a
G38
H3
B-033
B-031
Middle comfort_CAN
中部舒适_CAN
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

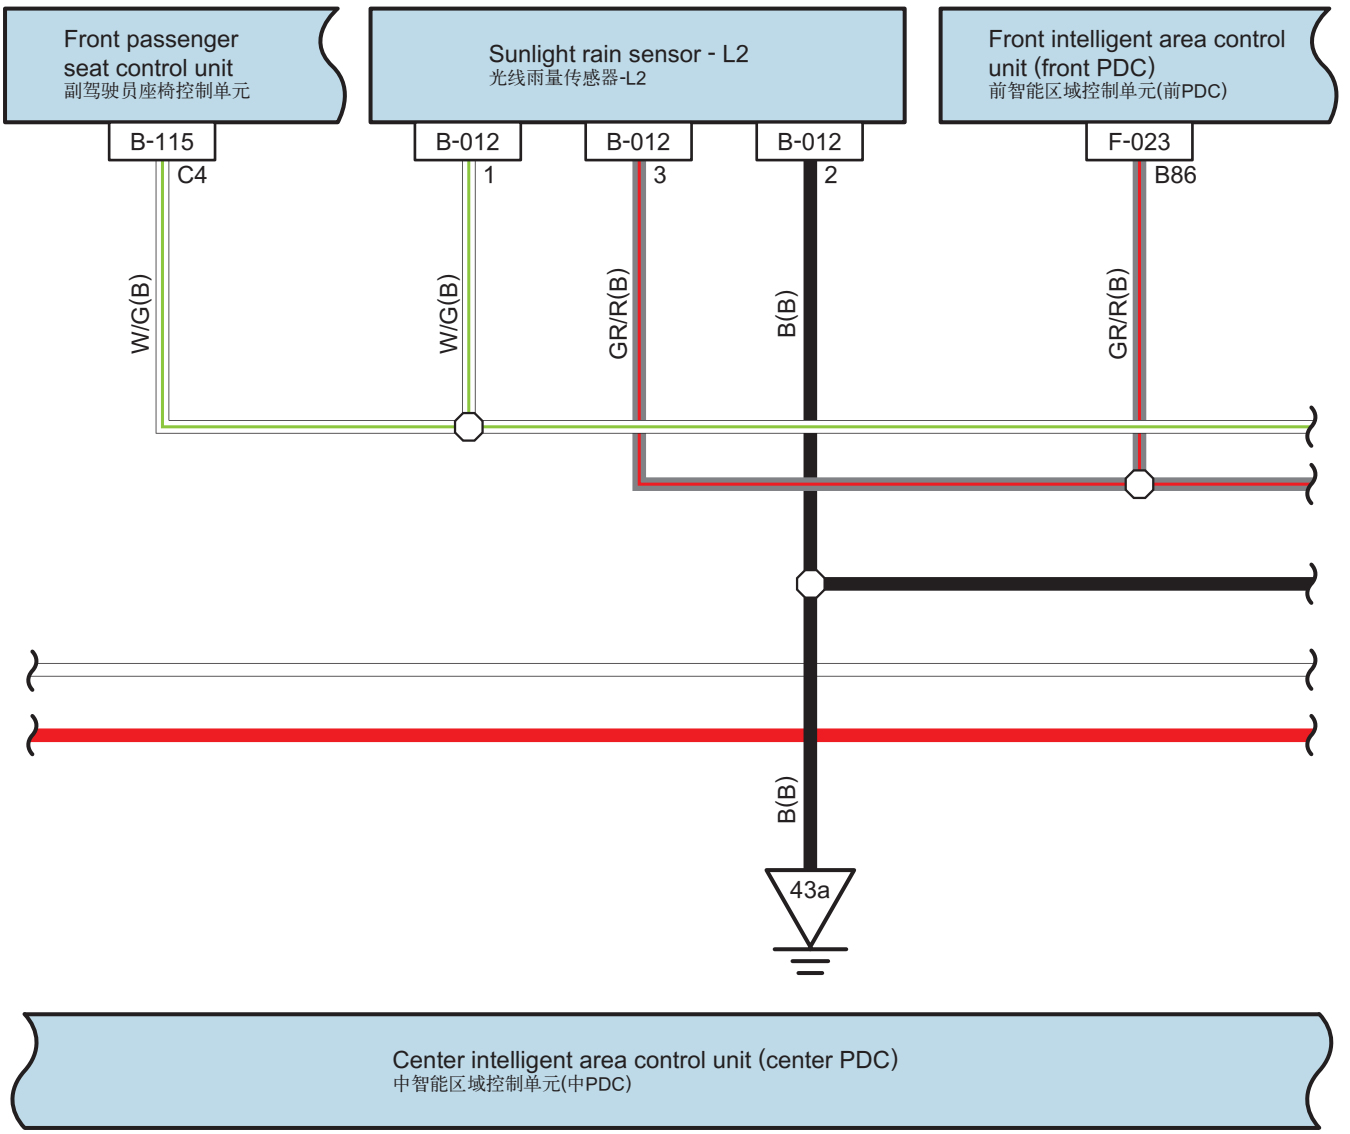

Mobile phone wireless charging controller
手机无线充电控制器
Spiral cable I
时钟弹簧 I
I2-003
1
I2-003
7
I2-003
5
I2-003
6
I2-003
4
I-018
13
I-018
17
L(I2)
W/G(I2)
V/B(I2)
V/W(I2)
B(I2)
GR(I)
B(I)
C-18
20
C-18
19
C-18
9
C-18
10
C-18
11
L(B)
W/G(B)
V/B(B)
V/W(B)
B(B)
44a
65
62a
Middle comfort_CAN
中部舒适_CAN
H41
F1
B-031
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

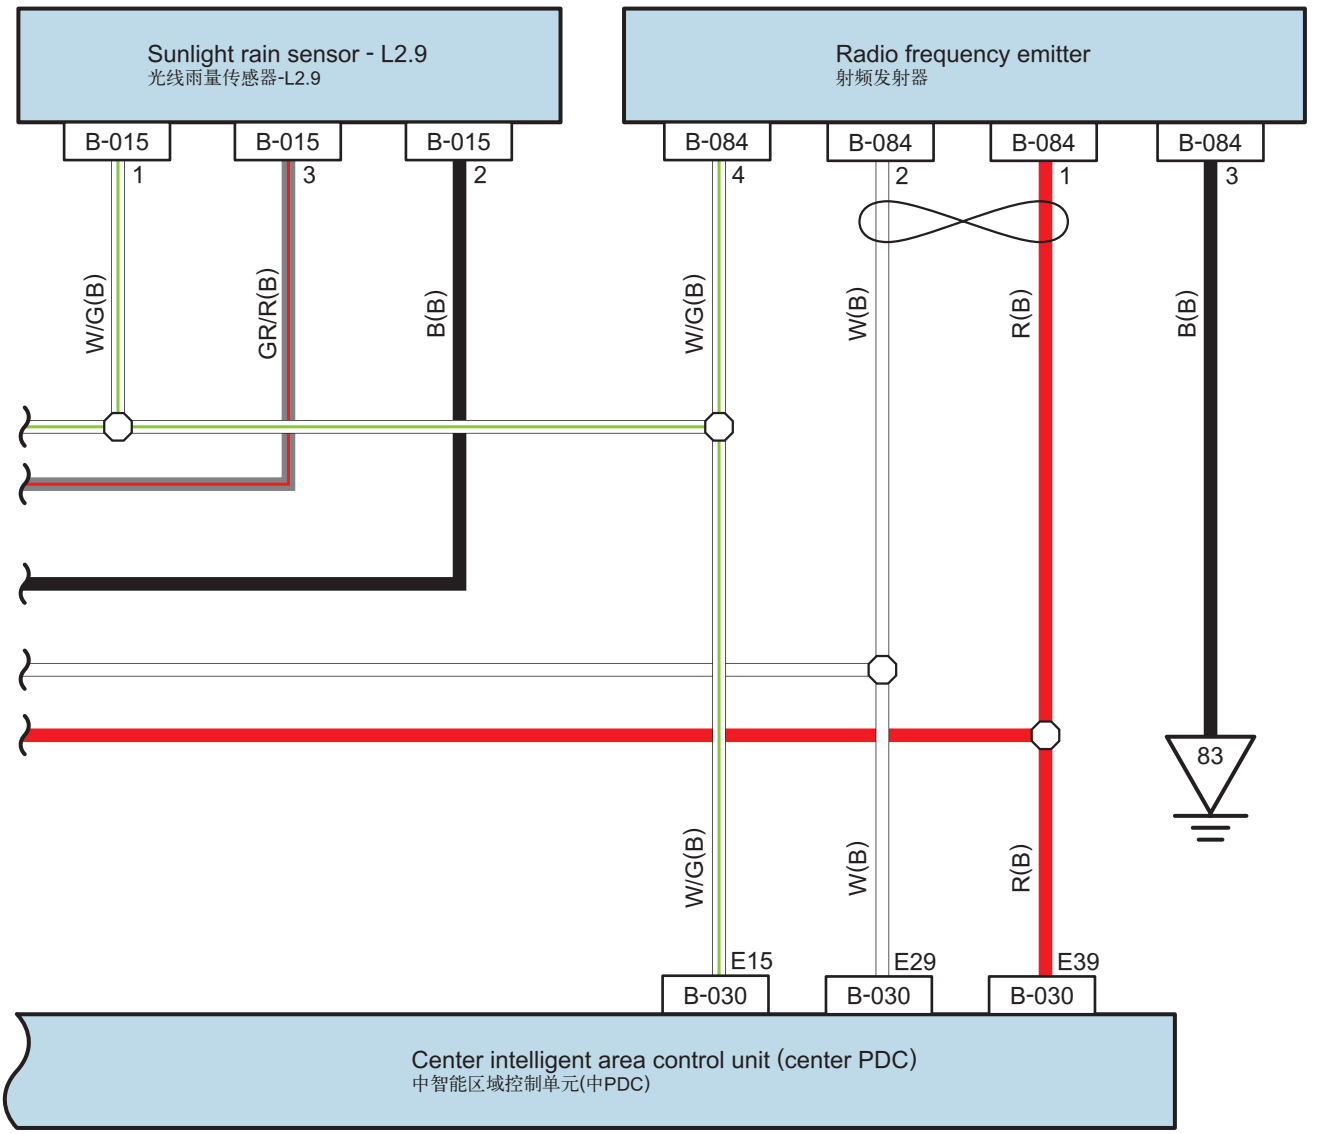

Spiral cable I
时钟弹簧 I
Airbag control unit
安全气囊控制单元(ACU)
I-018
4
I-018
6
I-018
5
I-018
2
I-018
12
B-022
B42
B-022
B41
B-022
B54
P(I)
L/R(I)
G/Y(I)
B/V(I)
L/B(I)
L/B(B)
B/V(B)
Y/R(B)
C-21
21
C-21
22
C-21
23
C-22
1
C-22
2
G/Y(B)
P(B)
L/R(B)
G/Y(B)
H23
H13
H8
E9
B-031
B-031
B-031
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

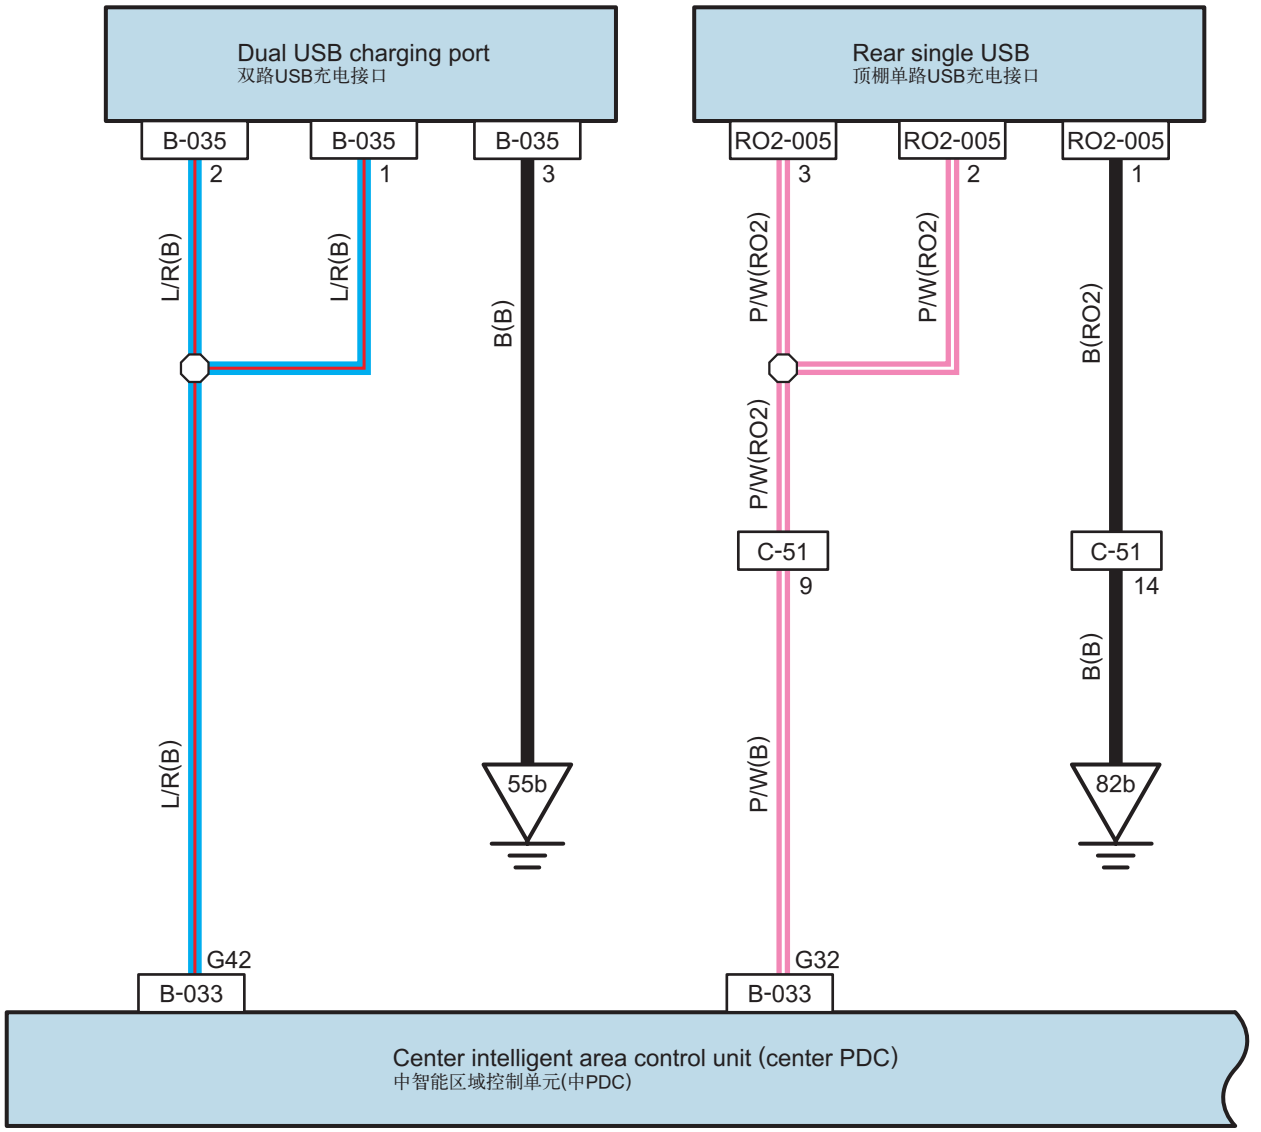

Diagnostic interface 1
诊断接口1
B-117
2
B-117
12
B-117
4
G/Y(B)
R(B)
W(B)
Smart front camera controller - ME
智能前视摄像头控制器-ME
B-011
A6
B-011
A18
B-011
A24
B-011
A12
B(B)
B(B)
B(B)
L(B)
G(B)
40
Automatic driving_CAN
自动驾驶_CAN
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

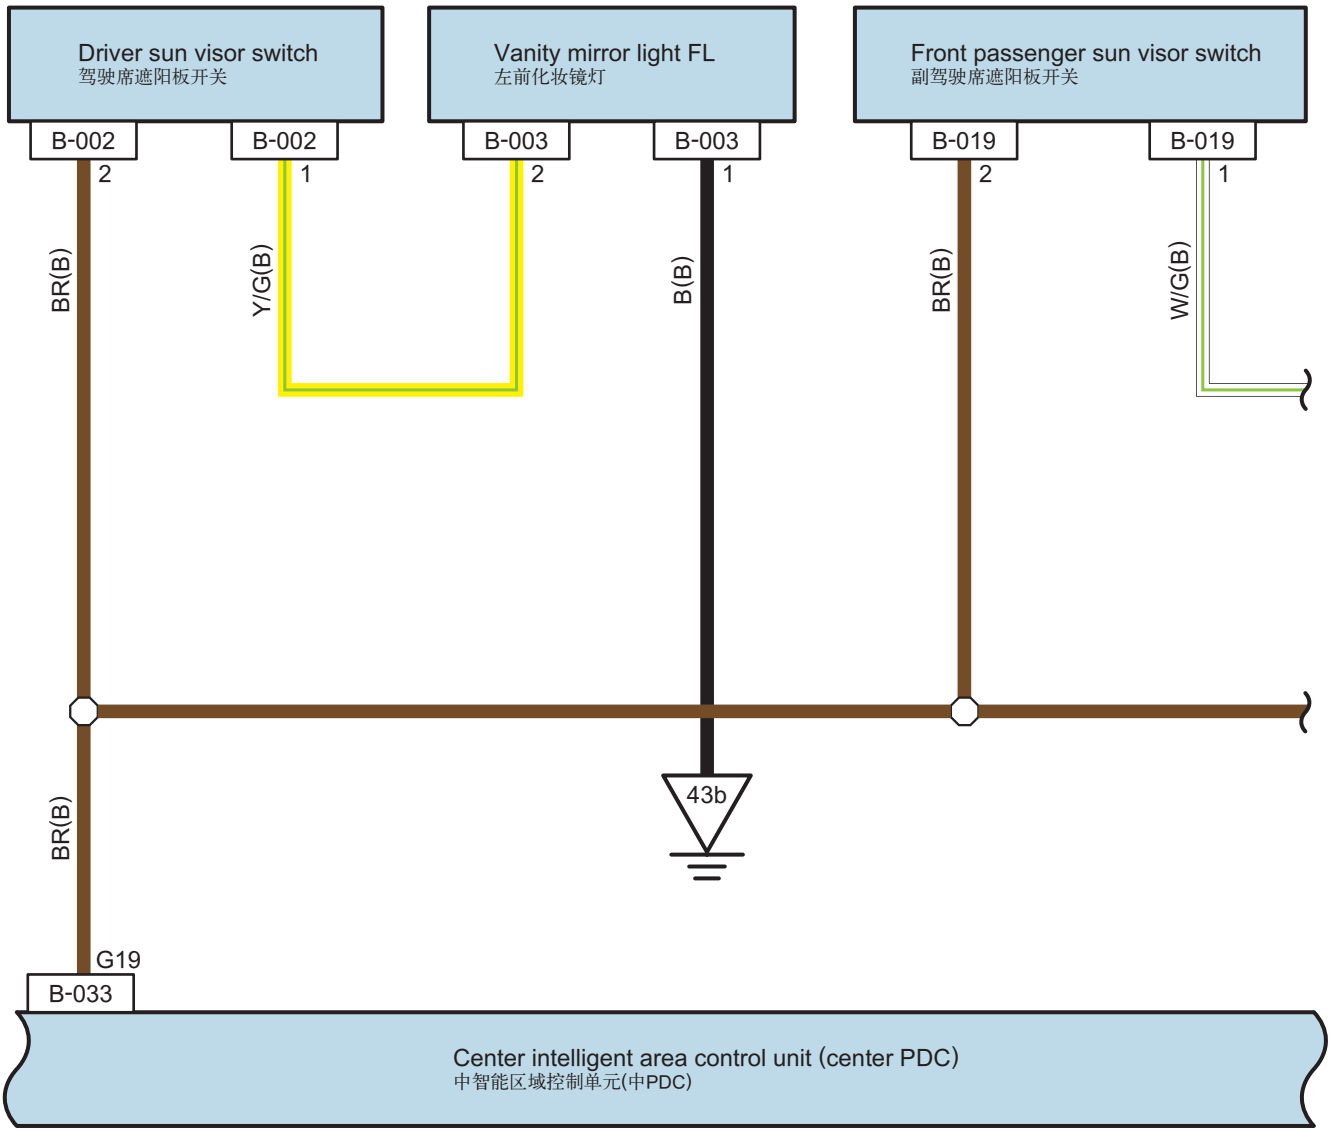

Smart front camera controller - ME
智能前视摄像头控制器-ME
B-011
A23
B-011
A11
B-011
A16
B-011
A1
B-018
B1
B-018
B2
GR(B)
O/BR(B)
Y/G(B)
O(B)
G(B)
W(B)
Low configuration
低配
Y/G(B)
Rear automatic driving radar_CAN
后自动驾驶雷达_CAN
G30
H6
B-033
B-031
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

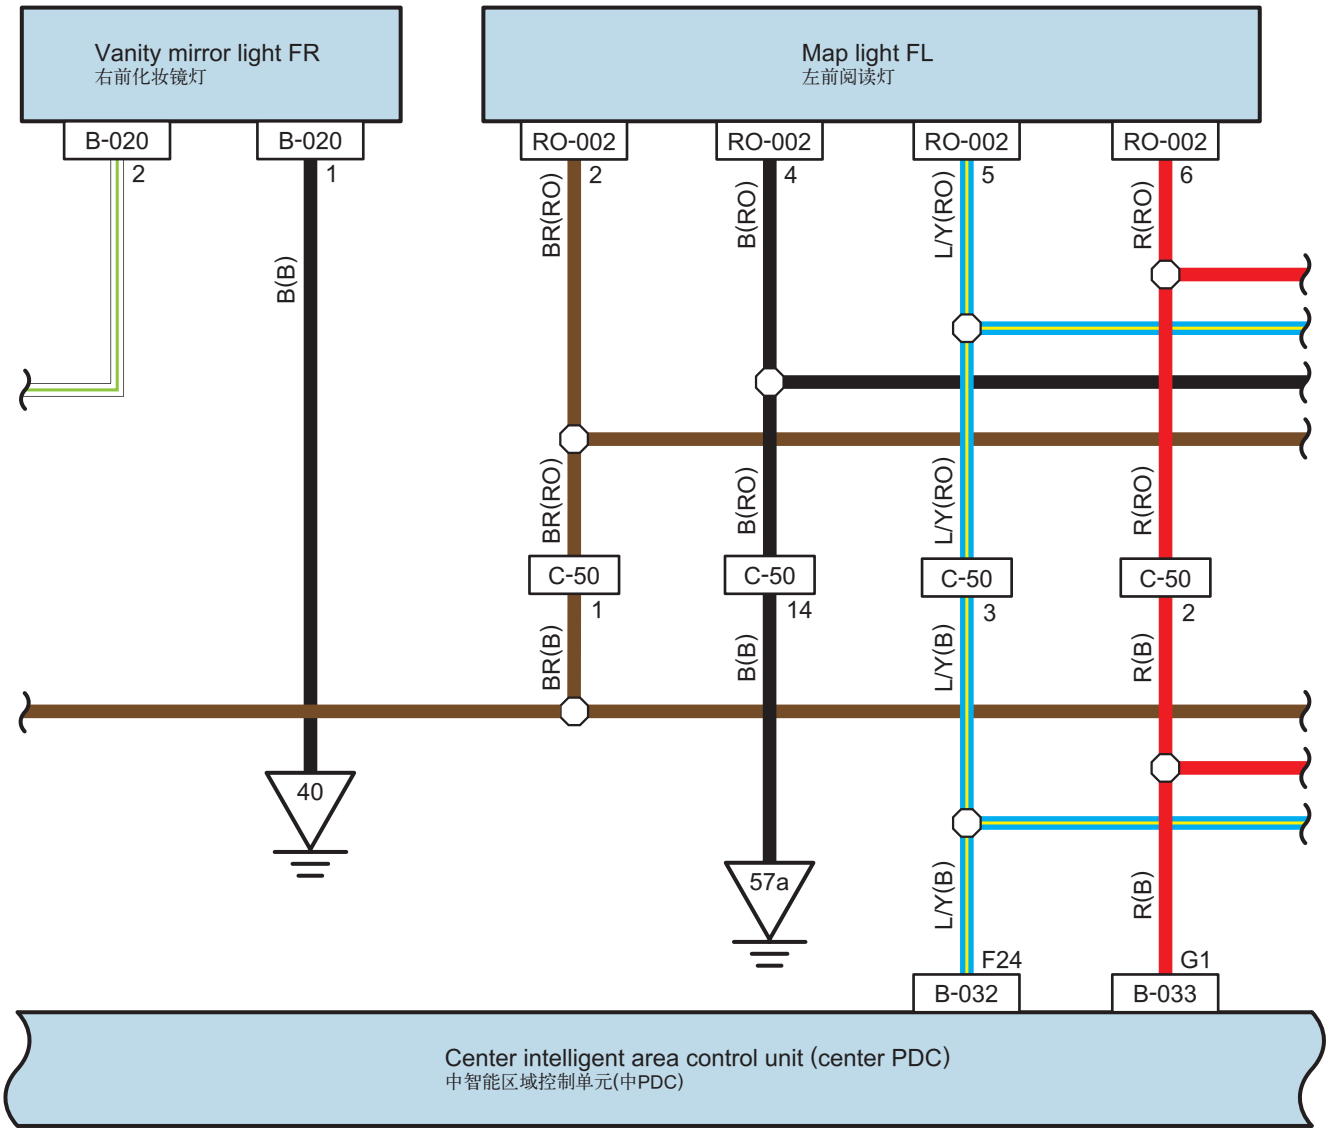

Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-024
B7
B-024
B8
B-023
A46
B-023
A15
B-024
B4
B-024
B3
Y/G(B)
B/R(B)
W(B)
G(B)
G46
B-033
B1
B-025
B2
B-025
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

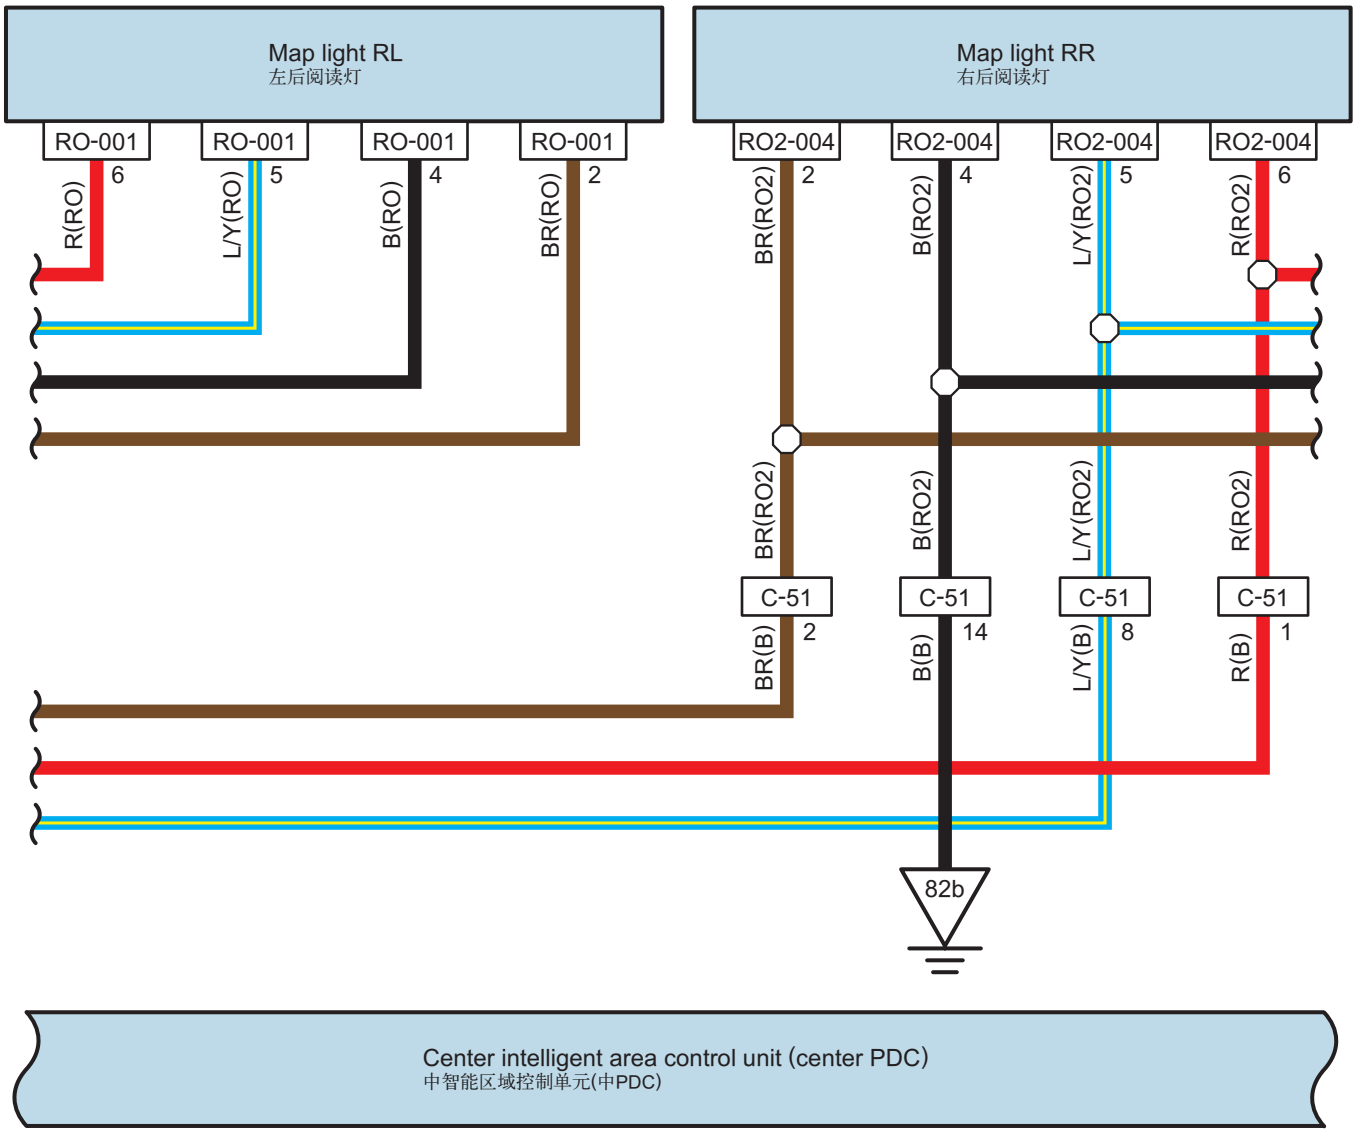

Front passenger seat control unit
副驾驶员座椅控制单元
Sunlight rain sensor - L2
光线雨量传感器-L2
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
B-115
C4
B-012
1
B-012
3
B-012
2
F-023
B86
W/G(B)
W/G(B)
GR/R(B)
B(B)
GR/R(B)
B(B)
43a
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

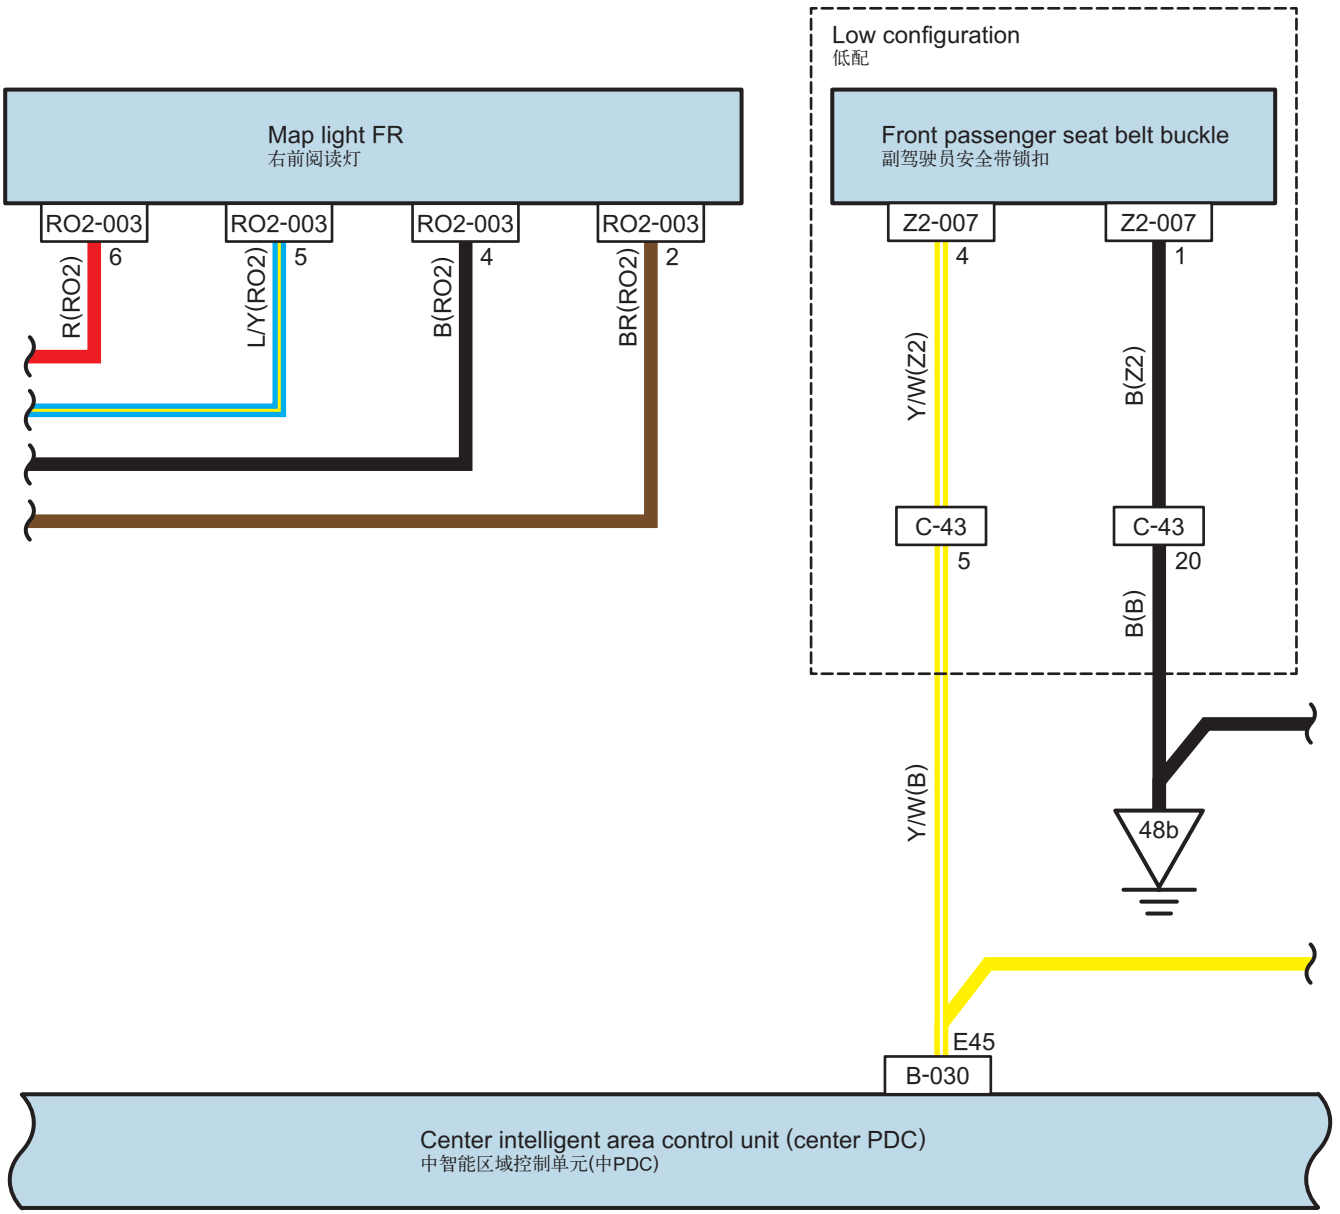

Sunlight rain sensor - L2.9
光线雨量传感器-L2.9
Radio frequency emitter
射频发射器
B-015
1
B-015
3
B-015
2
B-084
4
B-084
2
B-084
1
B-084
3
W/G(B)
GR/R(B)
B(B)
W/G(B)
W(B)
R(B)
B(B)
83
W/G(B)
W(B)
R(B)
E15
E29
E39
B-030
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

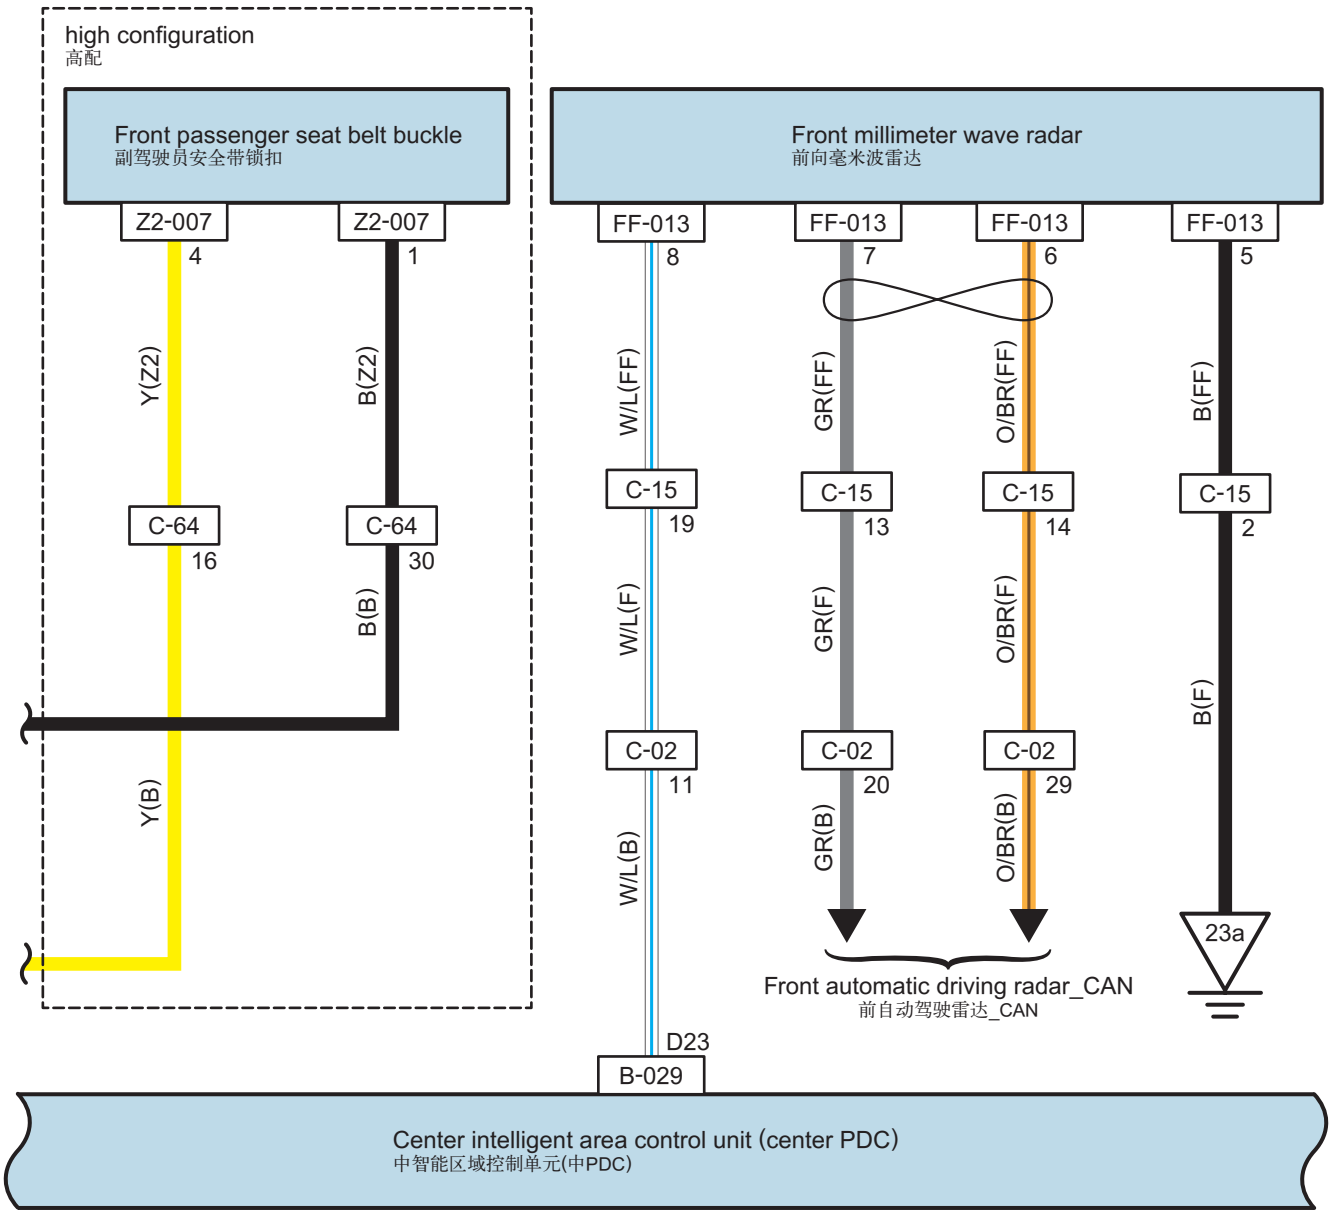

Dual USB charging port
双路USB充电接口
B-035
2
B-035
1
B-035
3
L/R(B)
L/R(B)
B(B)
L/R(B)
55b
G42
B-033
Rear single USB
顶棚单路USB充电接口
RO2-005
3
RO2-005
2
RO2-005
1
P/W(RO2)
P/W(RO2)
B(RO2)
P/W(RO2)
C-51
9
C-51
14
B(B)
P/W(B)
82b
G32
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

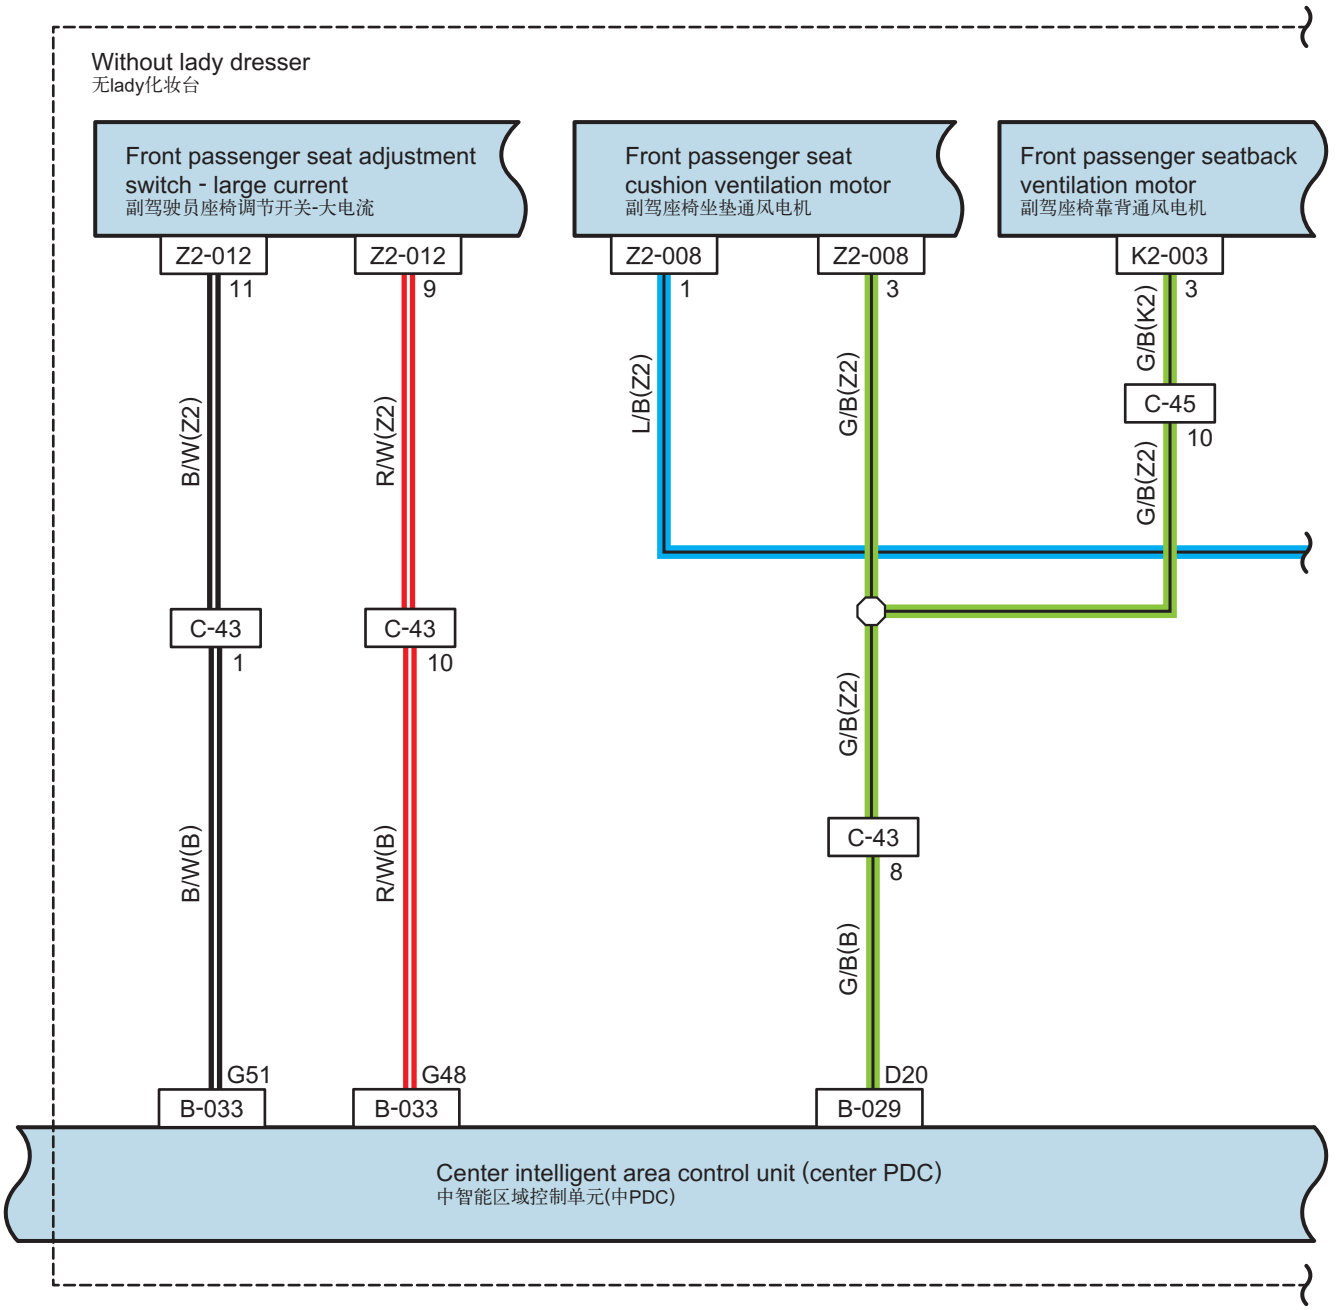

Driver sun visor switch
驾驶席遮阳板开关
Vanity mirror light FL
左前化妆镜灯
Front passenger sun visor switch
副驾驶席遮阳板开关
B-002
2
B-002
1
B-003
2
B-003
1
B-019
2
B-019
1
BR(B)
Y/G(B)
B(B)
BR(B)
W/G(B)
43b
BR(B)
G19
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

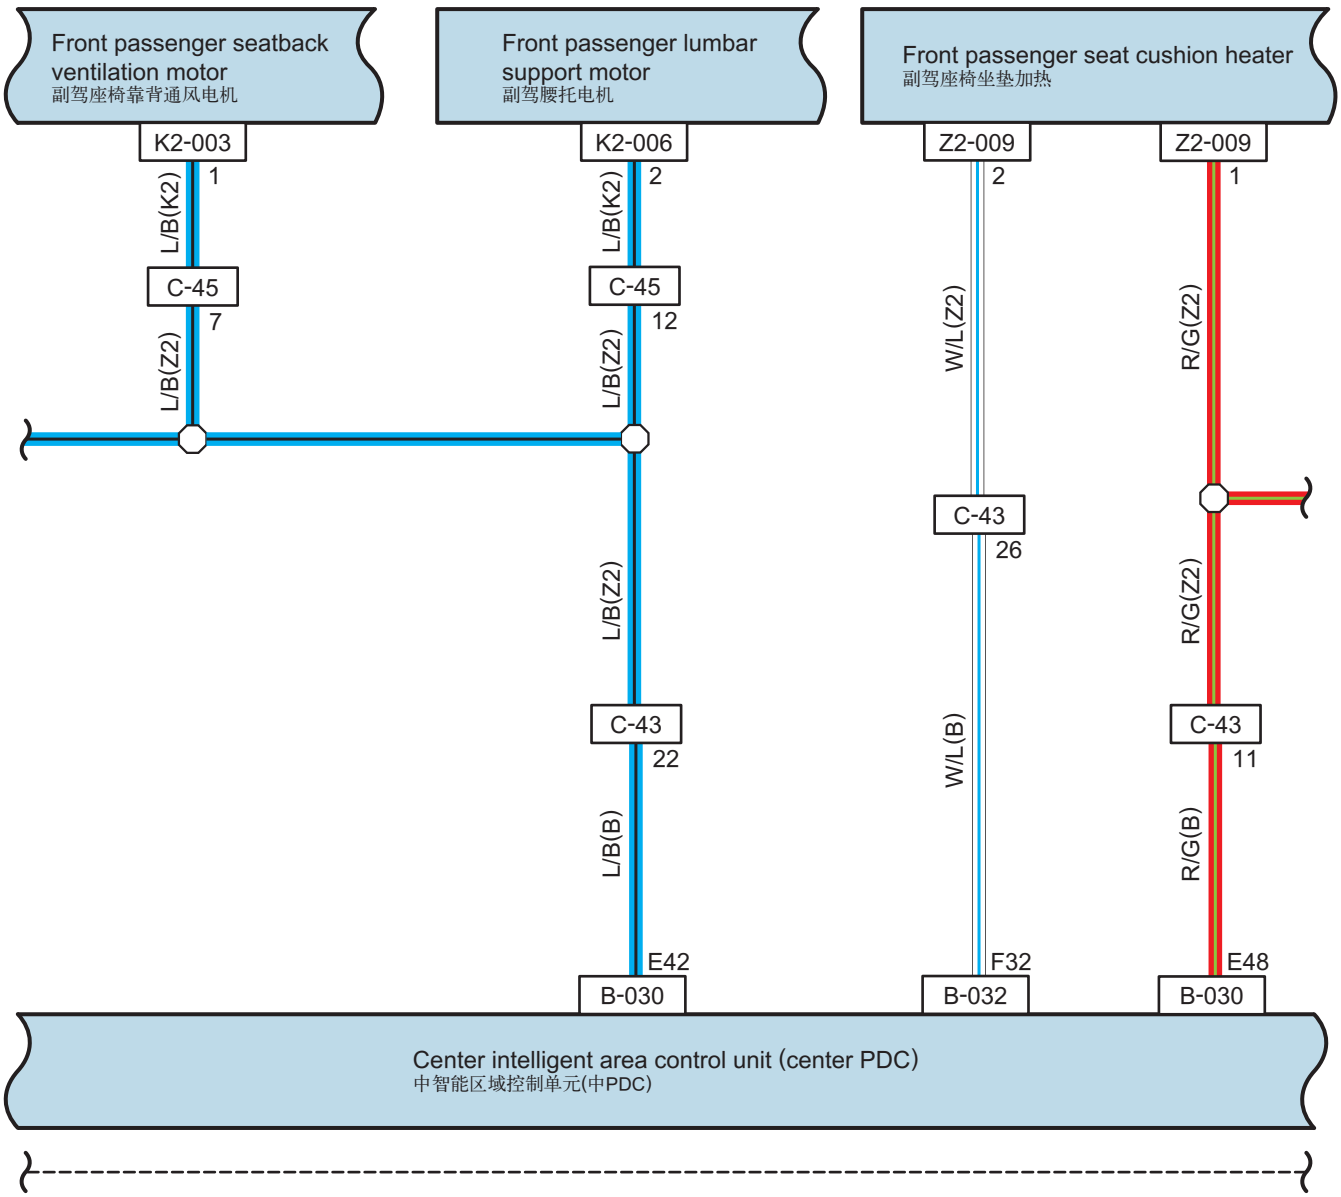

Vanity mirror light FR
右前化妆镜灯
Map light FL
左前阅读灯
B-020
2
B-020
1
B(B)
RO-002
2
RO-002
4
RO-002
5
RO-002
6
BR(RO)
B(RO)
L/Y(RO)
R(RO)
C-50
1
C-50
14
C-50
3
C-50
2
BR(B)
B(B)
L/Y(B)
R(B)
40
57a
F24
G1
B-032
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

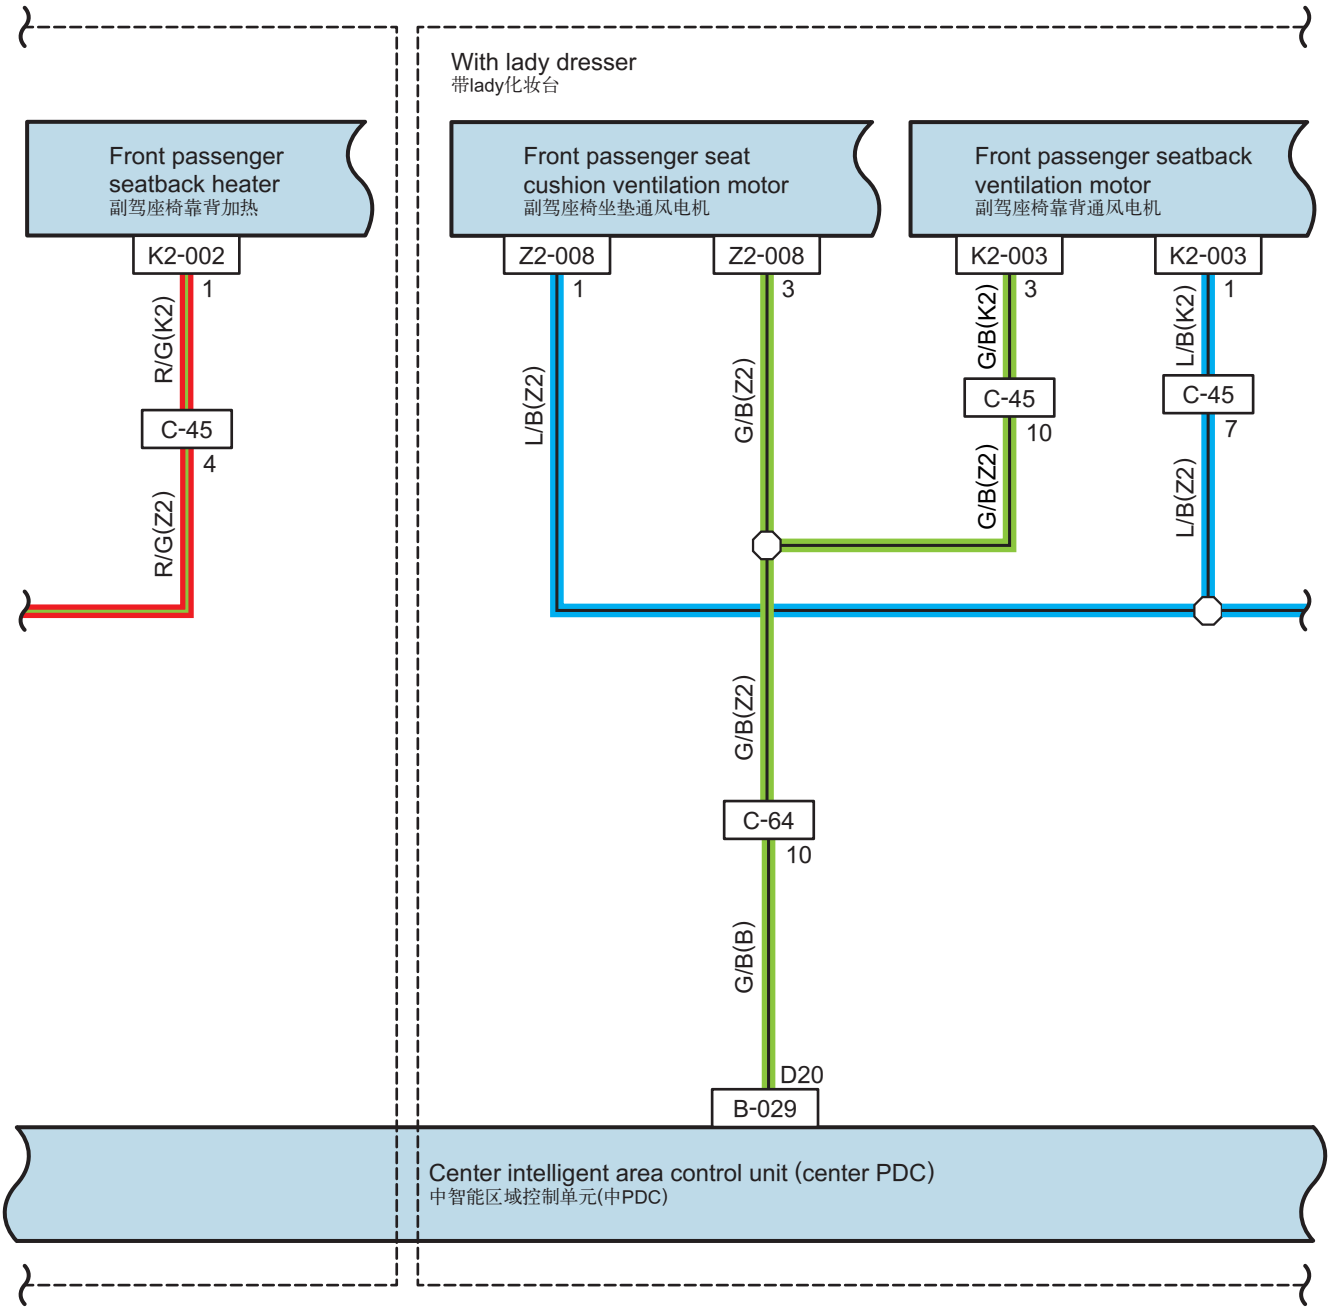

Map light RL
左后阅读灯
Map light RR
右后阅读灯
RO-001
RO-001
RO-001
RO-001
6
5
4
2
R(RO)
L/Y(RO)
B(RO)
BR(RO)
RO2-004
RO2-004
RO2-004
RO2-004
2
4
5
6
BR(RO2)
B(RO2)
L/Y(RO2)
R(RO2)
C-51
C-51
C-51
C-51
2
14
8
1
BR(B)
B(B)
L/Y(B)
R(B)
82b
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

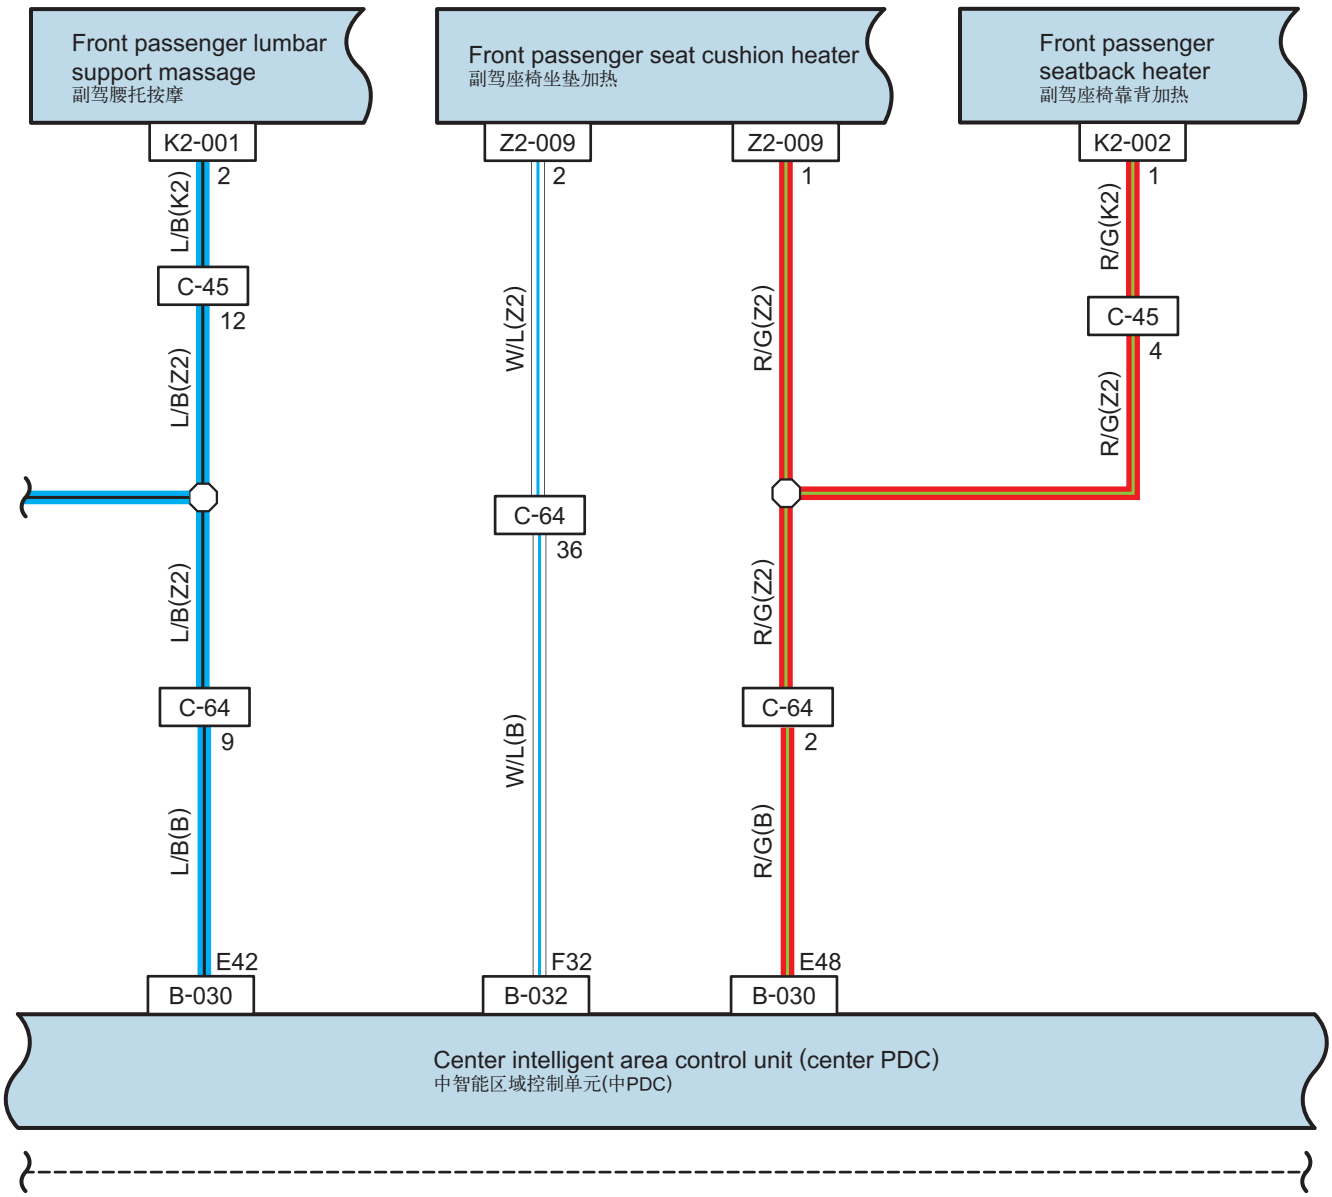

Low configuration
低配
Map light FR
右前阅读灯
RO2-003
6
R(RO2)
RO2-003
5
L/Y(RO2)
RO2-003
4
B(RO2)
RO2-003
2
BR(RO2)
Front passenger seat belt buckle
副驾驶员安全带锁扣
Z2-007
4
Y/W(Z2)
Z2-007
1
B(Z2)
C-43
5
C-43
20
B(B)
48b
Y/W(B)
E45
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

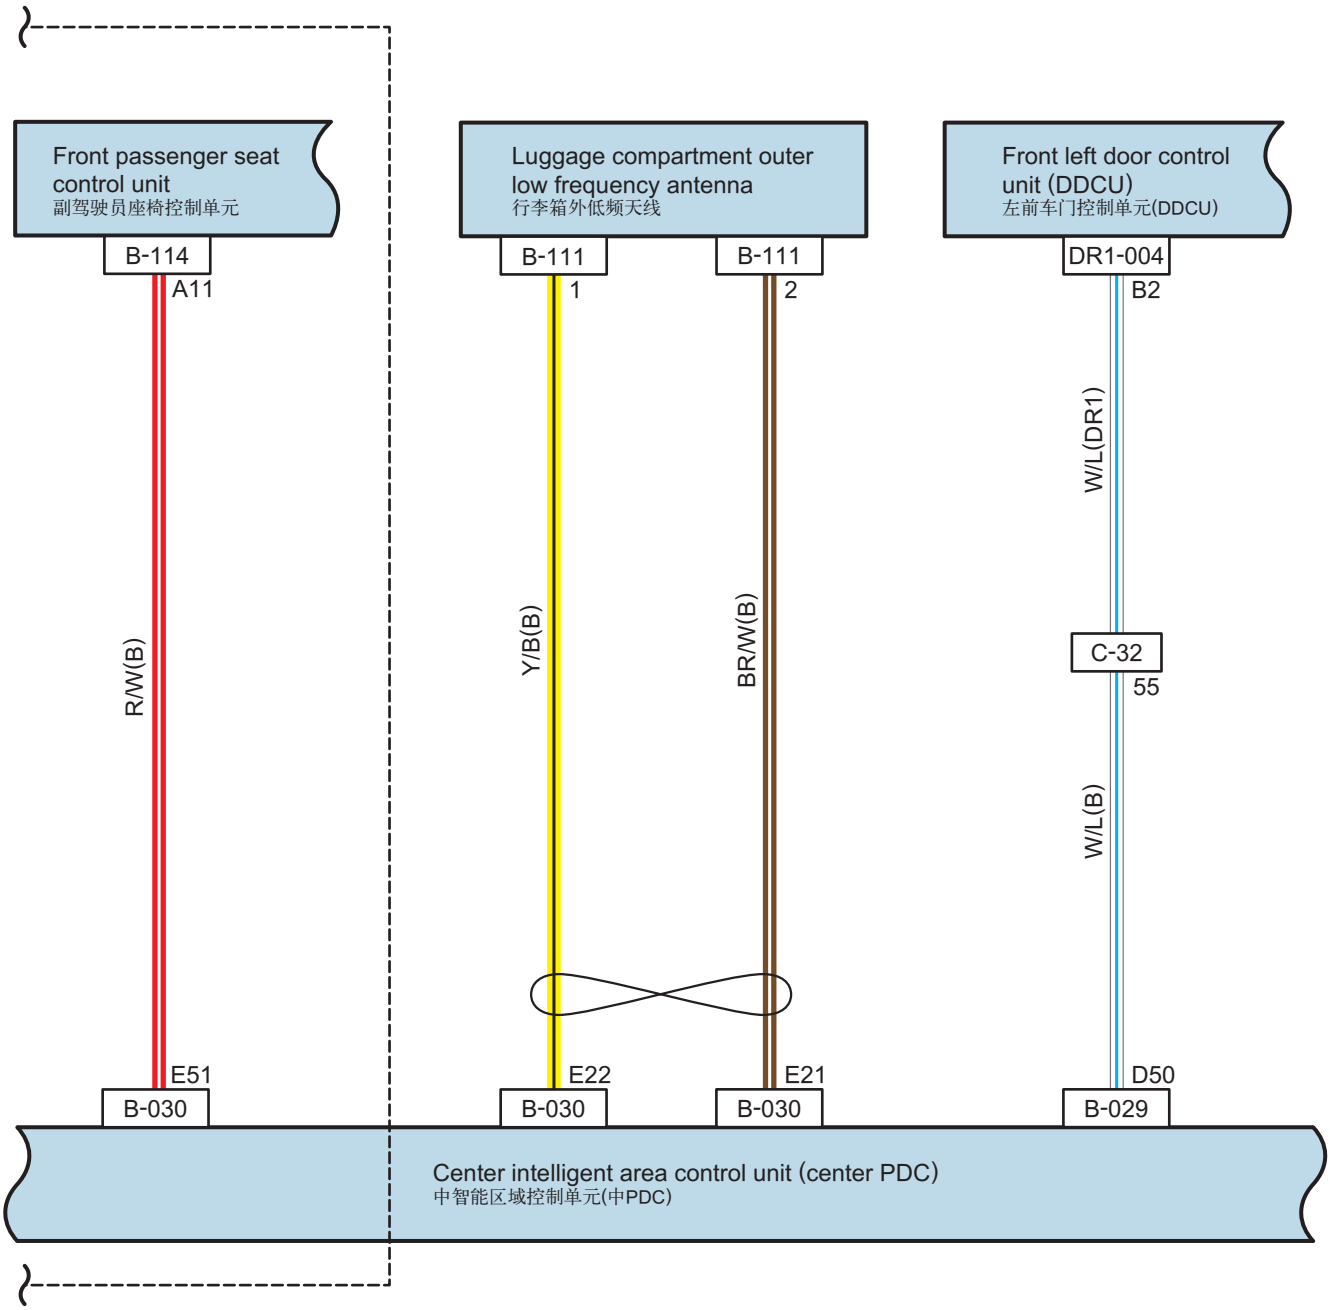

high configuration
高配
Front passenger seat belt buckle
副驾驶员安全带锁扣
Z2-007
4
Z2-007
1
Y(Z2)
B(Z2)
C-64
16
C-64
30
B(B)
Y(B)
Front millimeter wave radar
前向毫米波雷达
FF-013
8
FF-013
7
FF-013
6
FF-013
5
W/L(FF)
GR(FF)
O/BR(FF)
B(FF)
C-15
19
C-15
13
C-15
14
C-15
2
W/L(F)
GR(F)
O/BR(F)
B(F)
C-02
11
C-02
20
C-02
29
W/L(B)
GR(B)
O/BR(B)
23a
Front automatic driving radar_CAN
前自动驾驶雷达_CAN
D23
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

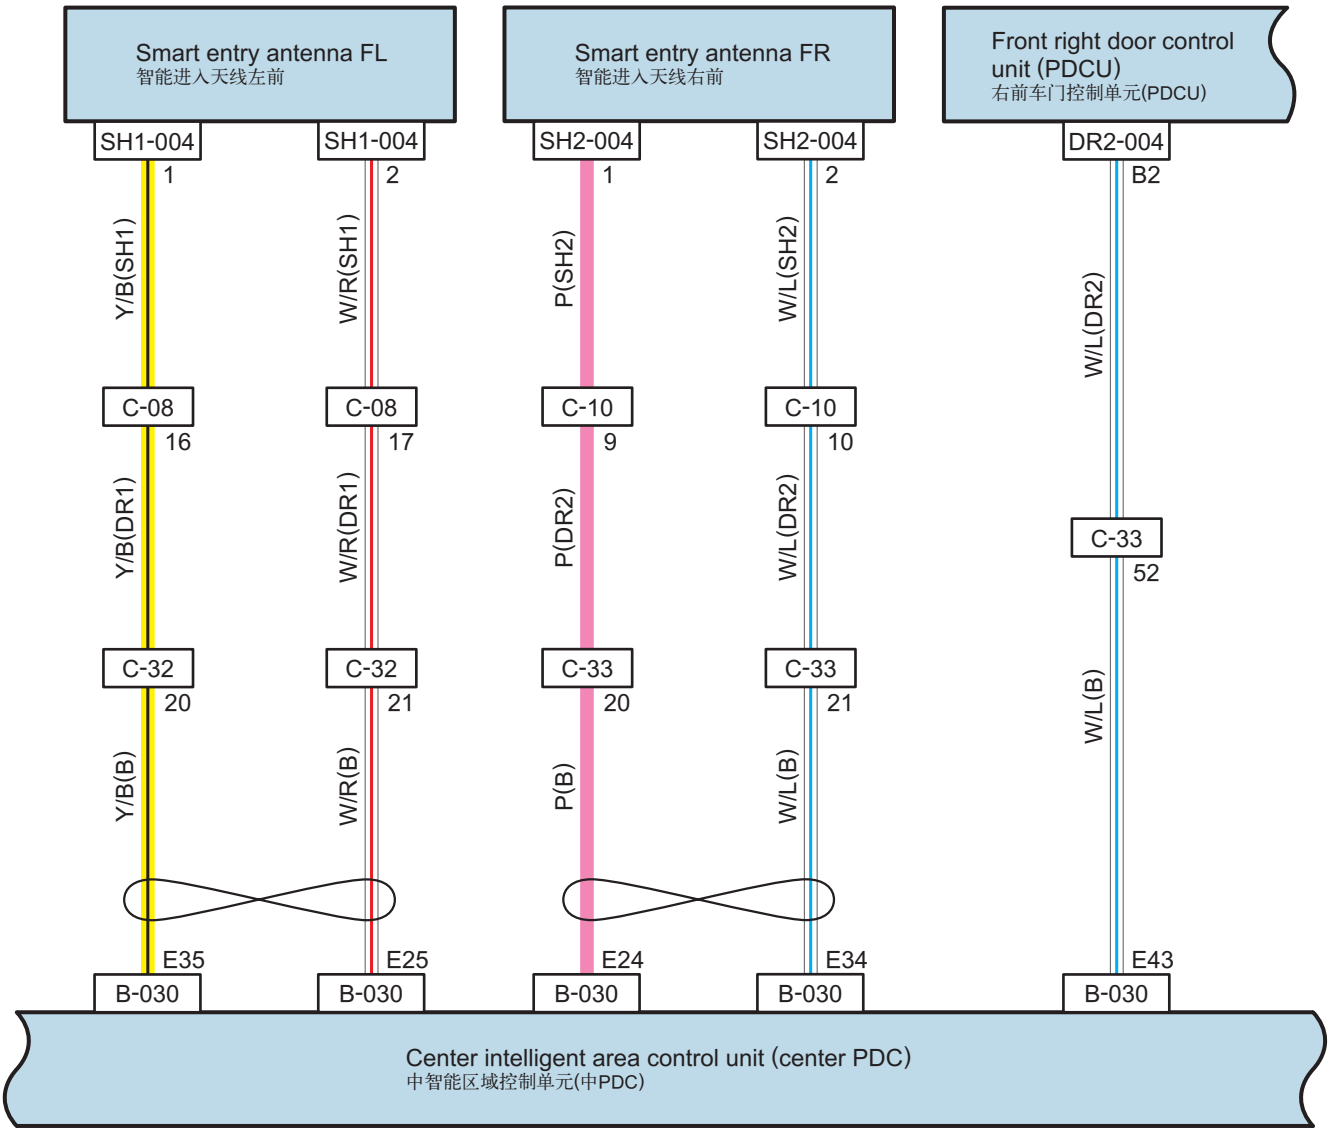

Without lady dresser
无lady化妆台
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流
Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Z2-012
11
Z2-012
9
Z2-008
1
Z2-008
3
K2-003
3
B/W(Z2)
R/W(Z2)
L/B(Z2)
G/B(Z2)
G/B(K2)
C-45
10
G/B(Z2)
C-43
1
C-43
10
G/B(Z2)
C-43
8
B/W(B)
R/W(B)
G/B(B)
G51
G48
D20
B-033
B-033
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

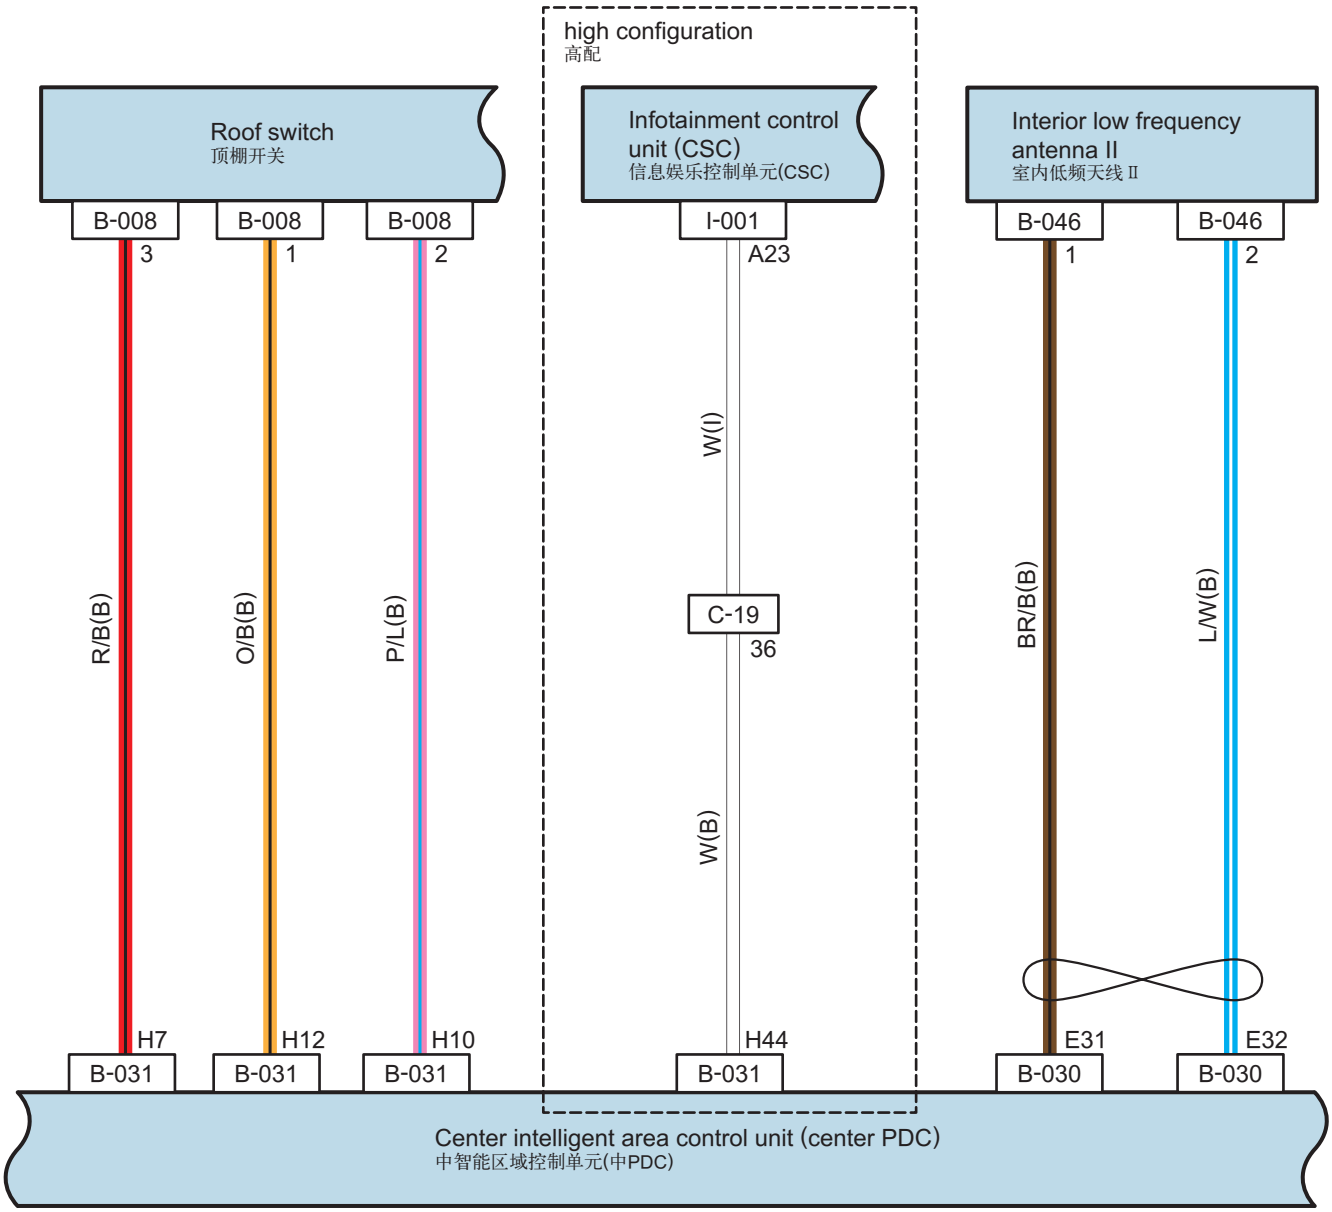

Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Front passenger lumbar support motor
副驾腰托电机
Front passenger seat cushion heater
副驾座椅坐垫加热
K2-003
1
L/B(K2)
C-45
7
L/B(Z2)
K2-006
2
L/B(K2)
C-45
12
L/B(Z2)
L/B(Z2)
C-43
22
L/B(B)
E42
B-030
Z2-009
2
W/L(Z2)
C-43
26
W/L(B)
F32
B-032
Z2-009
1
R/G(Z2)
R/G(Z2)
C-43
11
R/G(B)
E48
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

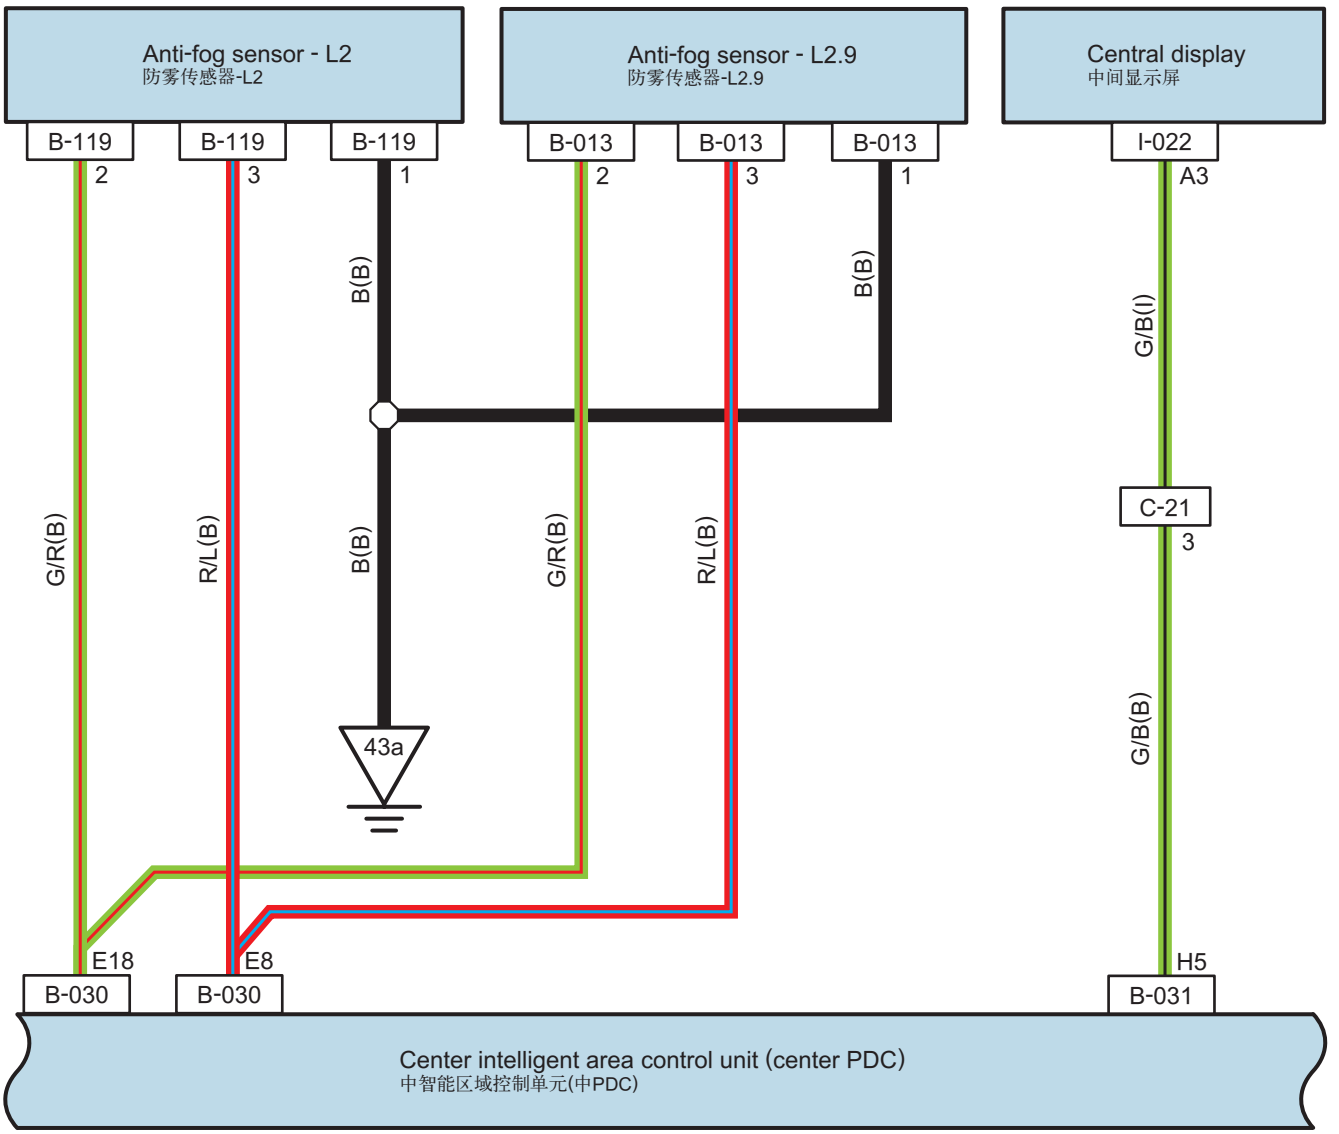

With lady dresser
带lady化妆台
Front passenger seatback heater
副驾座椅靠背加热
K2-002
1
R/G(K2)
C-45
4
R/G(Z2)
Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Z2-008
1
Z2-008
3
L/B(Z2)
G/B(Z2)
Front passenger seatback ventilation motor
副驾座椅靠背通风电机
K2-003
3
K2-003
1
G/B(K2)
L/B(K2)
C-45
10
C-45
7
G/B(Z2)
L/B(Z2)
G/B(Z2)
C-64
10
G/B(B)
D20
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

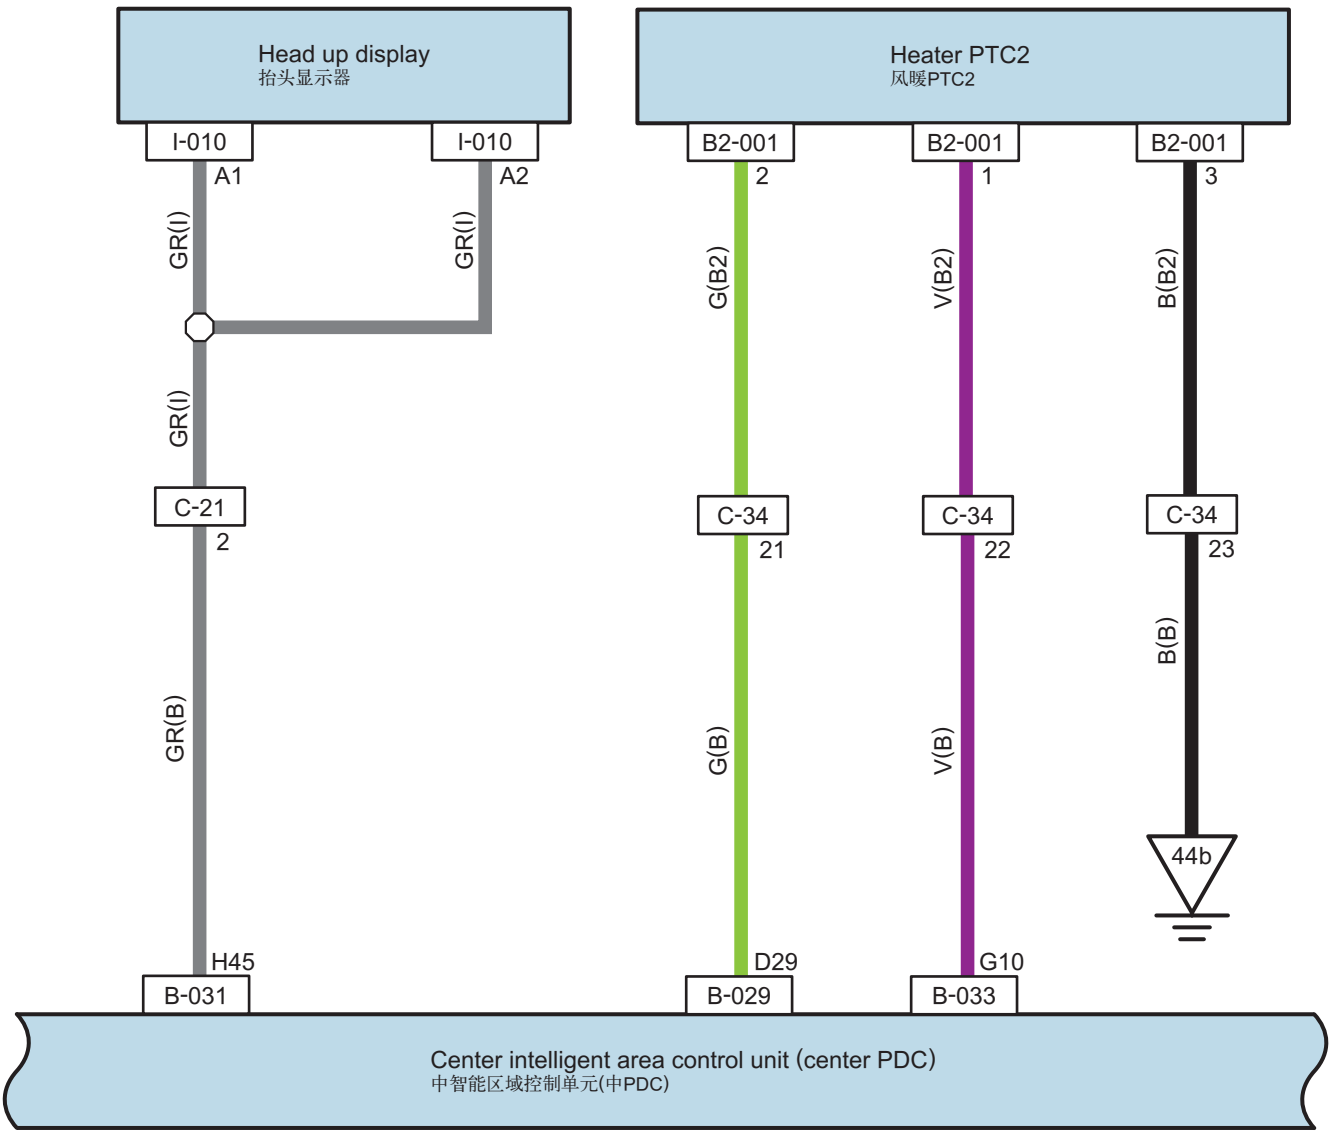

Front passenger lumbar support massage
副驾腰托按摩
Front passenger seat cushion heater
副驾座椅坐垫加热
Front passenger seatback heater
副驾座椅靠背加热
K2-001
2
L/B(K2)
C-45
12
L/B(Z2)
L/B(Z2)
C-64
9
L/B(B)
E42
B-030
Z2-009
2
W/L(Z2)
C-64
36
W/L(B)
F32
B-032
Z2-009
1
R/G(Z2)
R/G(Z2)
C-64
2
R/G(B)
E48
B-030
K2-002
1
R/G(K2)
C-45
4
R/G(Z2)
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

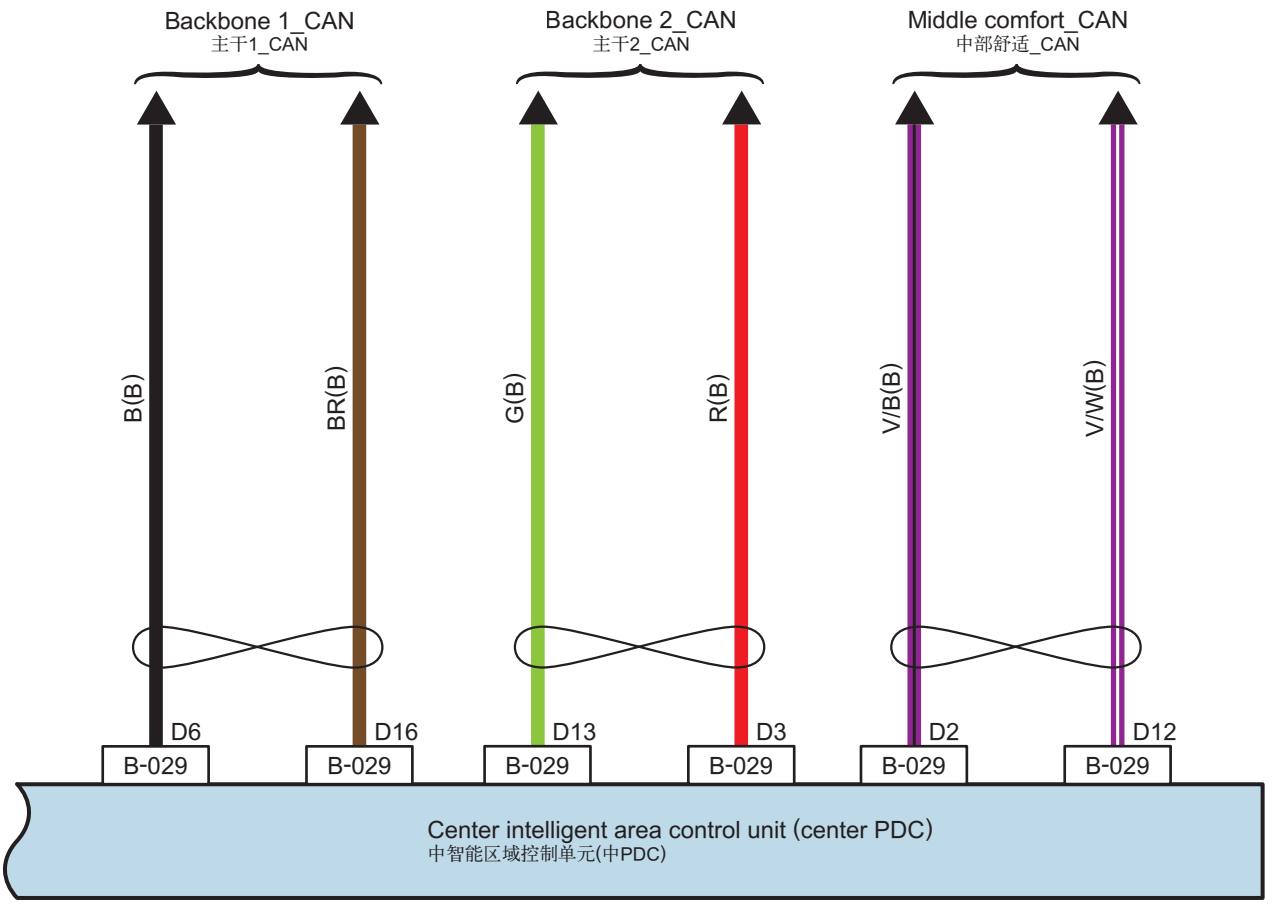

Front passenger seat control unit
副驾驶员座椅控制单元
B-114
A11
R/W(B)
E51
B-030
Luggage compartment outer low frequency antenna
行李箱外低频天线
B-111
1
Y/B(B)
E22
B-030
B-111
2
BR/W(B)
E21
B-030
Front left door control unit (DDCU)
左前车门控制单元(DDCU)
DR1-004
B2
W/L(DR1)
C-32
55
W/L(B)
D50
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

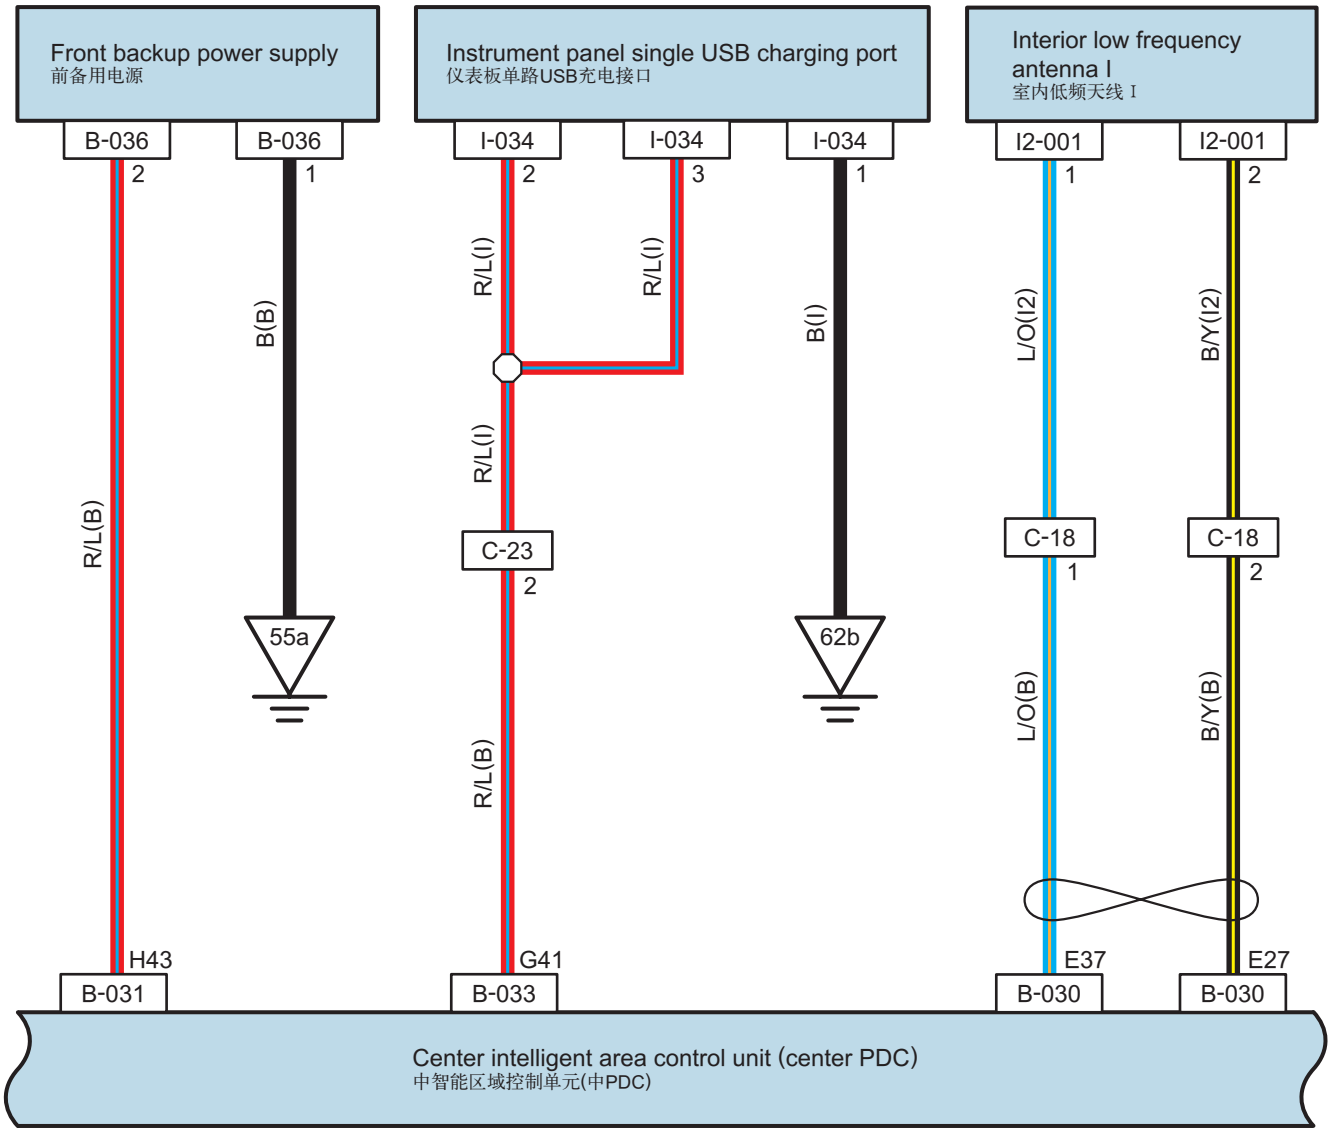

Smart entry antenna FL
智能进入天线左前
Smart entry antenna FR
智能进入天线右前
Front right door control unit (PDCU)
右前车门控制单元(PDCU)
SH1-004
1
SH1-004
2
SH2-004
1
SH2-004
2
DR2-004
B2
Y/B(SH1)
W/R(SH1)
P(SH2)
W/L(SH2)
W/L(DR2)
C-08
16
C-08
17
C-10
9
C-10
10
C-33
52
Y/B(DR1)
W/R(DR1)
P(DR2)
W/L(DR2)
C-32
20
C-32
21
C-33
20
C-33
21
Y/B(B)
W/R(B)
P(B)
W/L(B)
E35
E25
E24
E34
E43
B-030
B-030
B-030
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

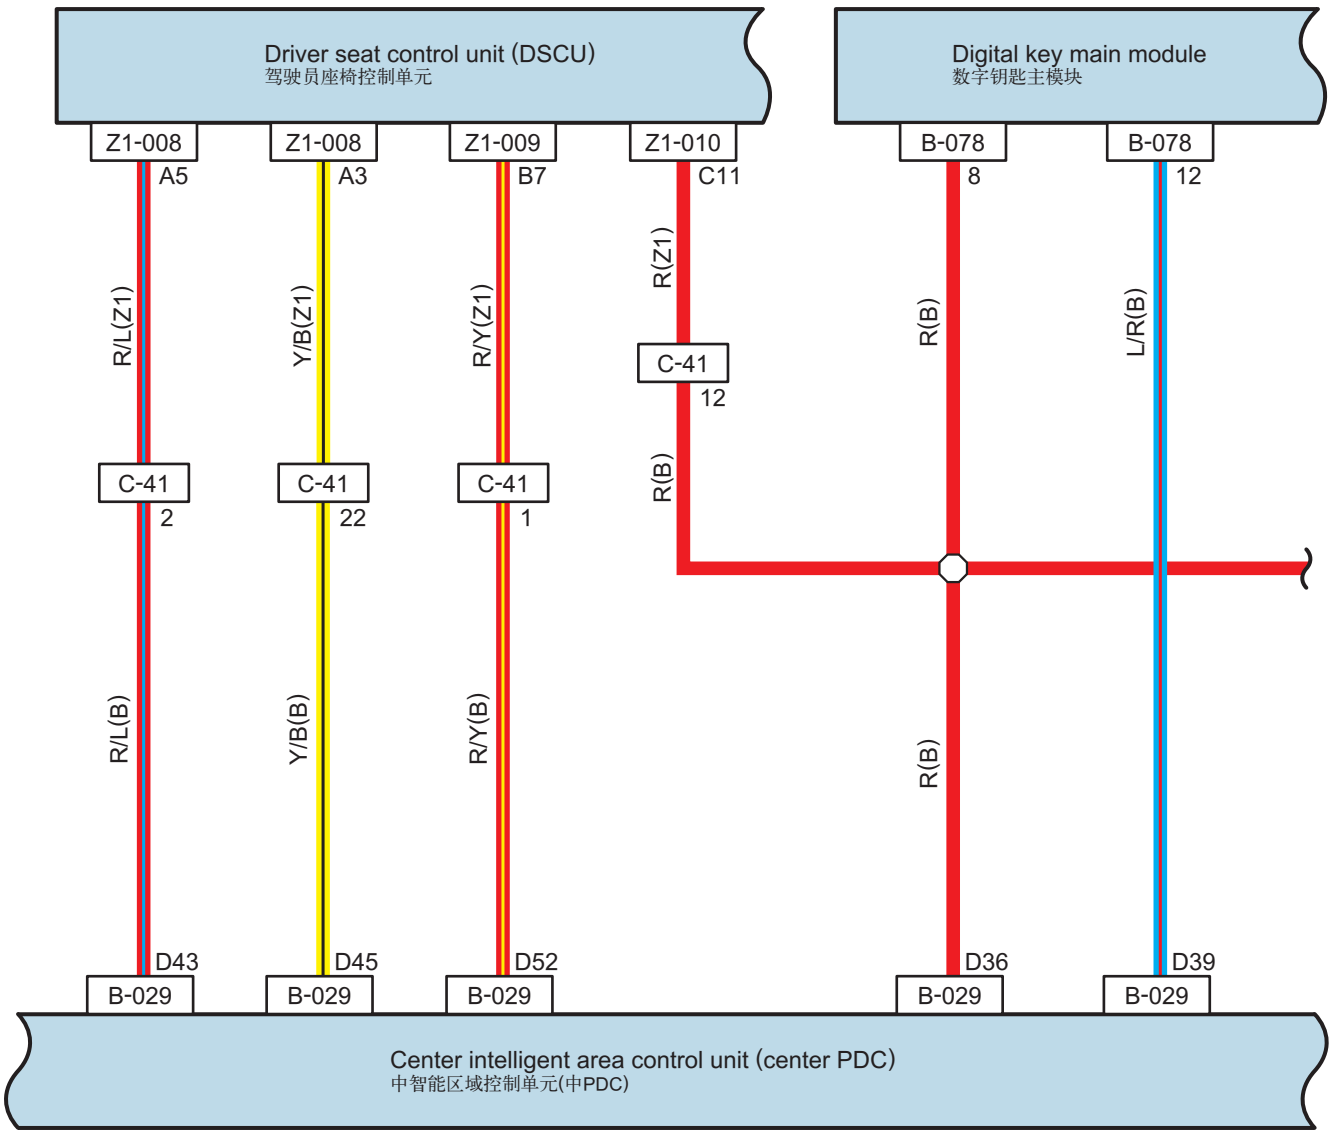

high configuration
高配
Roof switch
顶棚开关
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
Interior low frequency antenna II
室内低频天线 II
B-008
3
B-008
1
B-008
2
I-001
A23
B-046
1
B-046
2
R/B(B)
O/B(B)
P/L(B)
W(I)
C-19
36
W(B)
BR/B(B)
L/W(B)
H7
H12
H10
H44
E31
E32
B-031
B-031
B-031
B-031
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

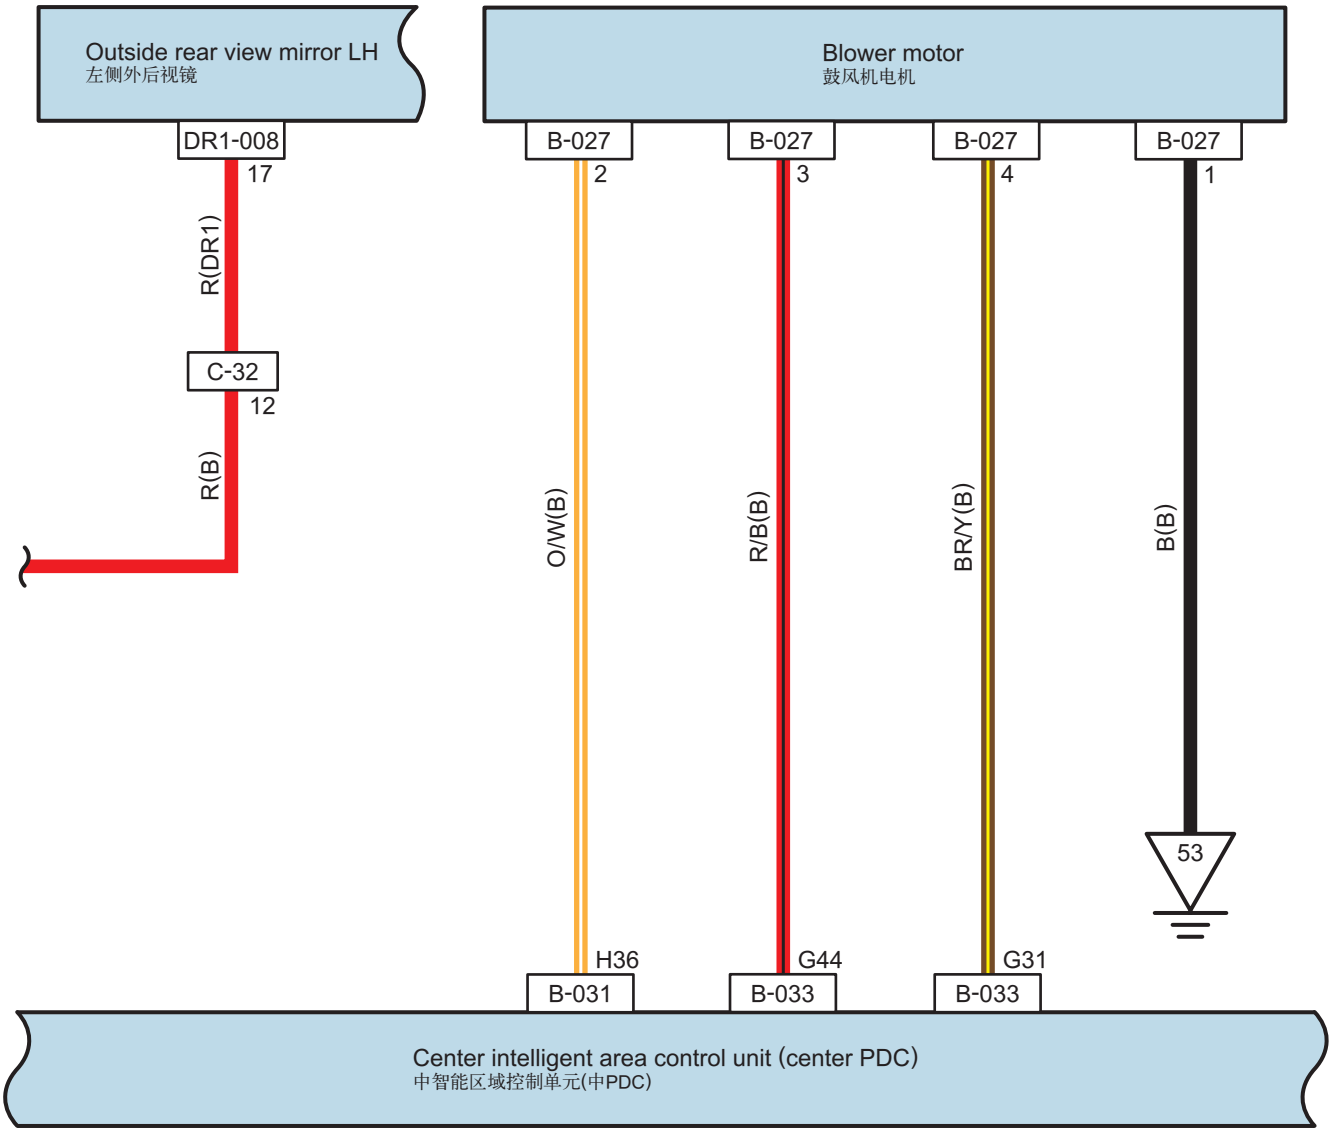

Anti-fog sensor - L2
防雾传感器-L2
Anti-fog sensor - L2.9
防雾传感器-L2.9
Central display
中间显示屏
B-119
2
B-119
3
B-119
1
B-013
2
B-013
3
B-013
1
I-022
A3
B(B)
B(B)
G/B(I)
C-21
3
G/R(B)
R/L(B)
B(B)
G/R(B)
R/L(B)
G/B(B)
43a
E18
E8
H5
B-030
B-030
B-031
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

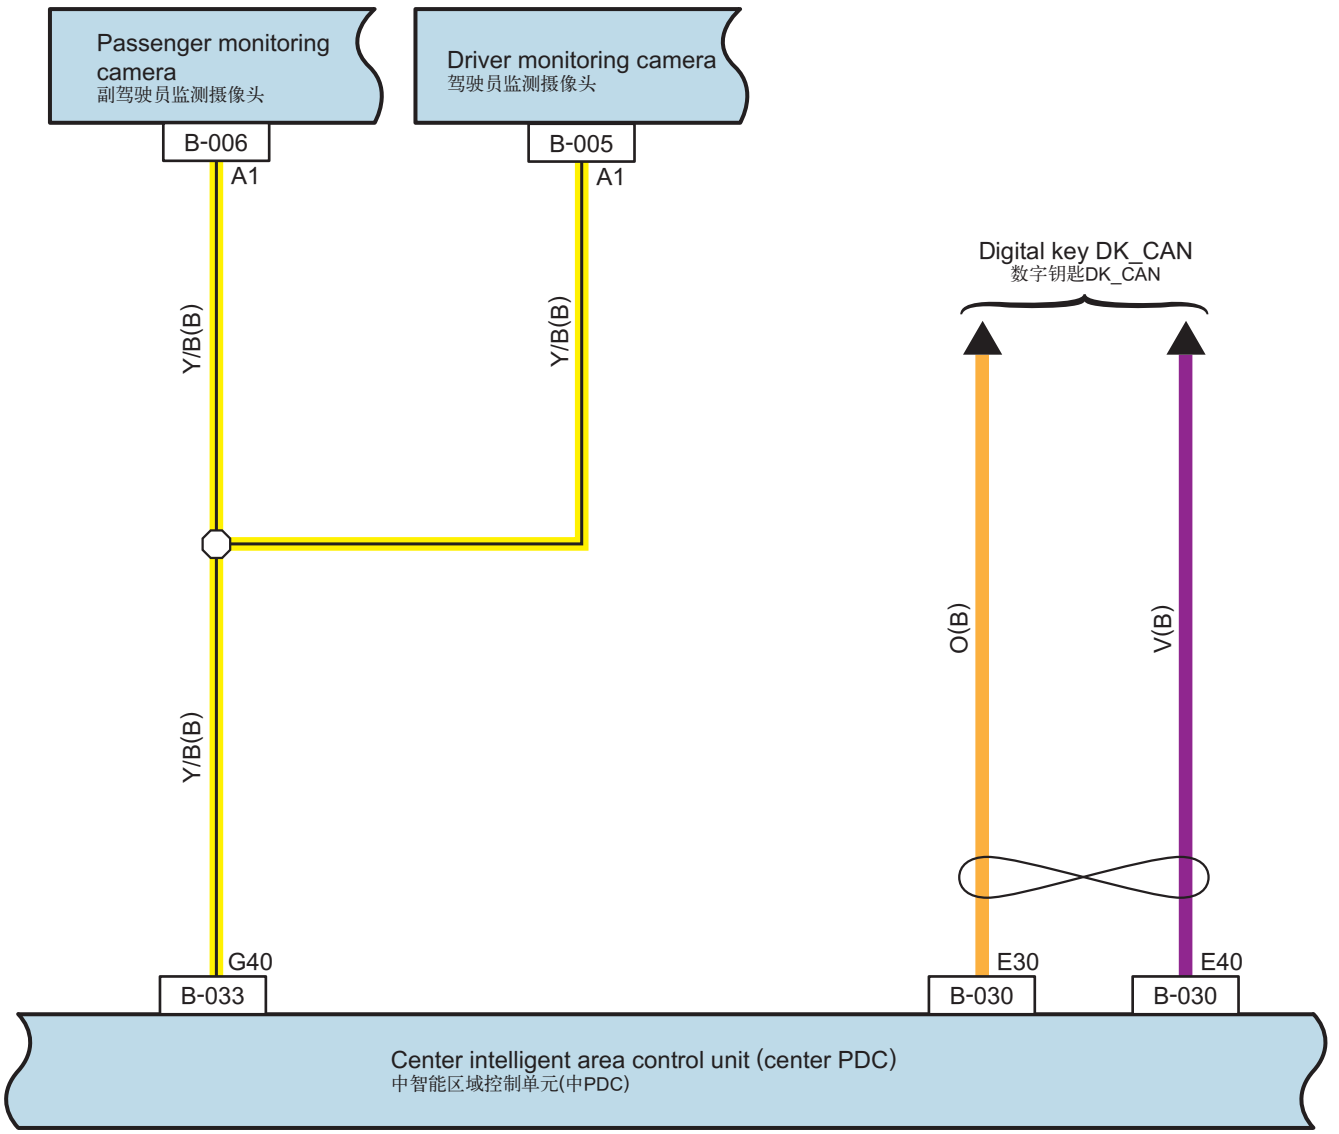

Head up display
抬头显示器
I-010
A1
I-010
A2
GR(I)
GR(I)
GR(I)
C-21
2
GR(B)
H45
B-031
Heater PTC2
风暖PTC2
B2-001
2
B2-001
1
B2-001
3
G(B2)
V(B2)
B(B2)
C-34
21
C-34
22
C-34
23
G(B)
V(B)
B(B)
44b
D29
G10
B-029
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

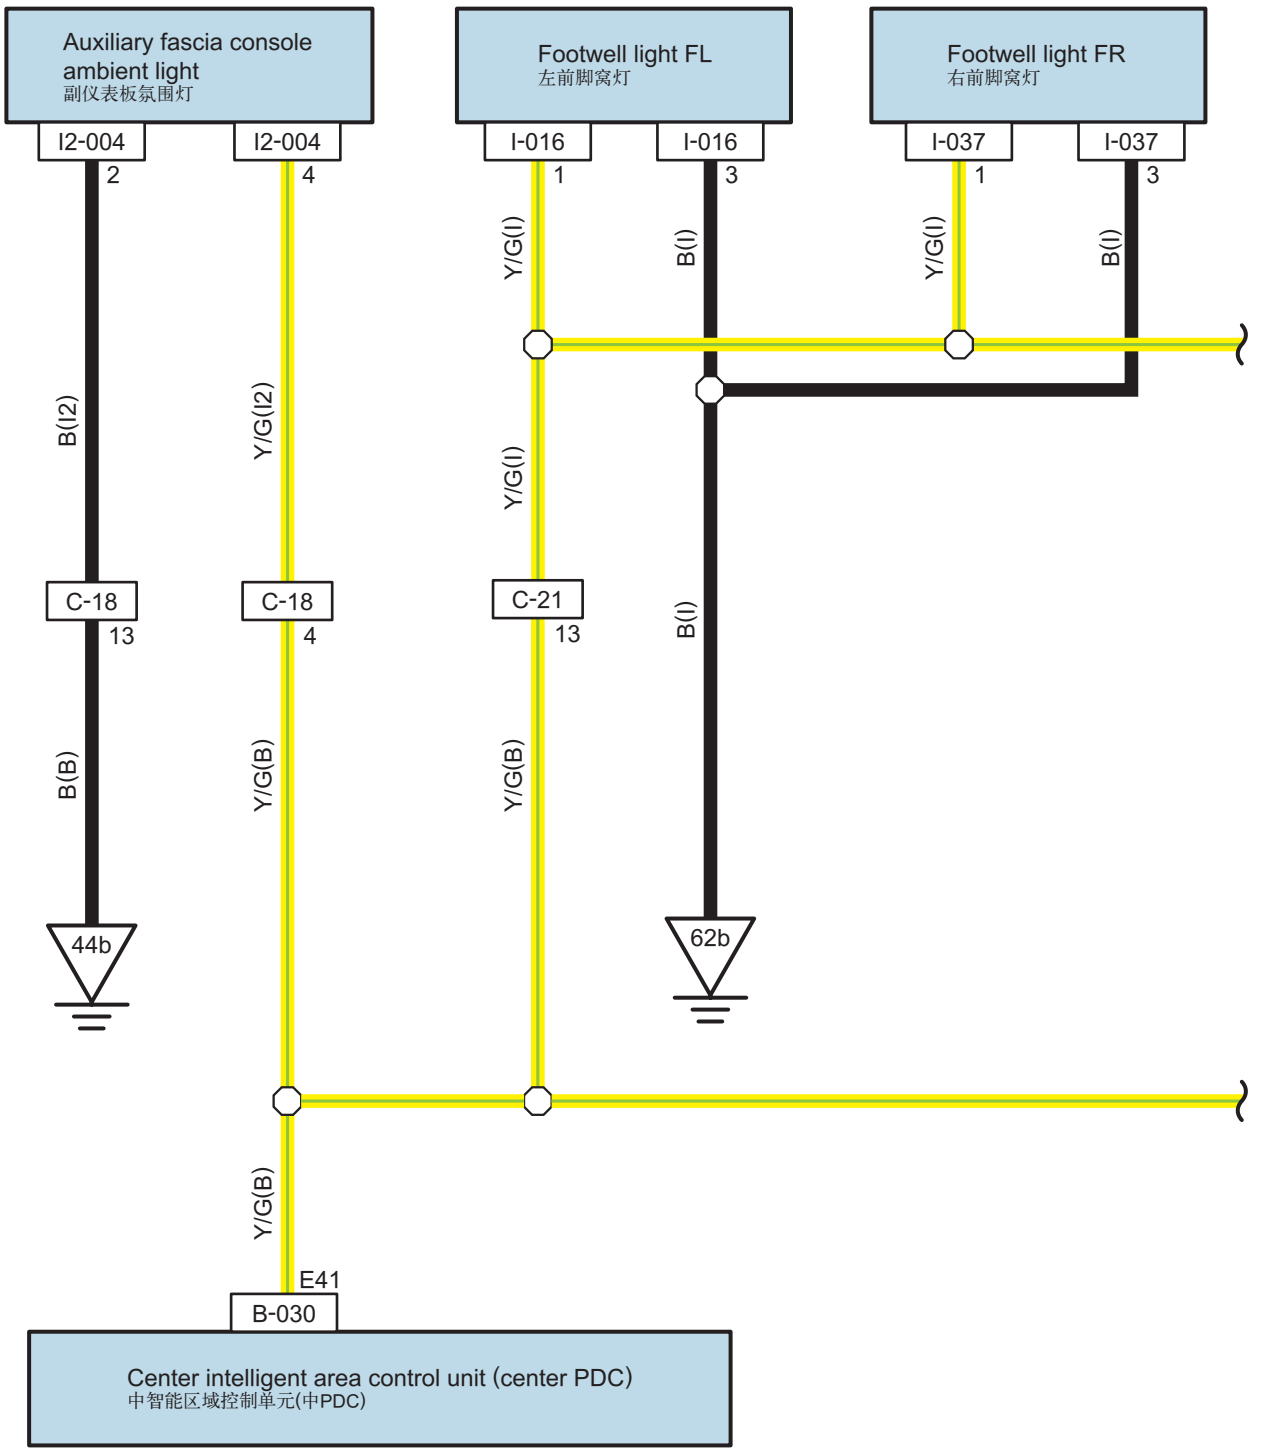

Backbone 1_CAN
主干1_CAN
Backbone 2_CAN
主干2_CAN
Middle comfort_CAN
中部舒适_CAN
B(B)
BR(B)
G(B)
R(B)
V/B(B)
V/W(B)
D6
D16
D13
D3
D2
D12
B-029
B-029
B-029
B-029
B-029
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

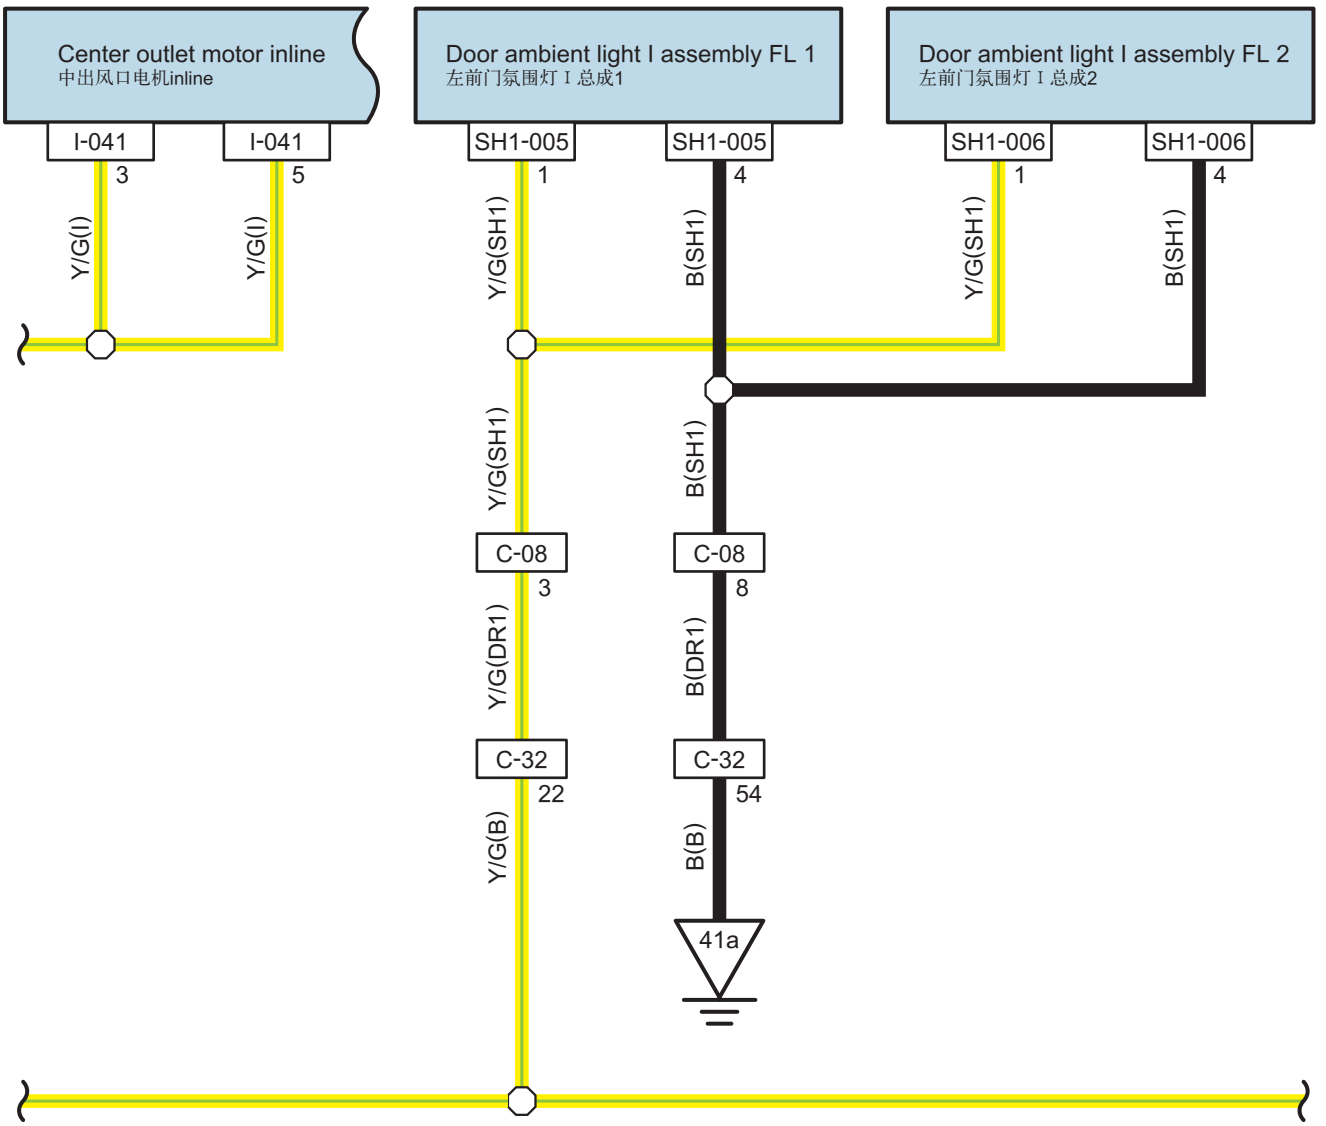

Front backup power supply
前备用电源
Instrument panel single USB charging port
仪表板单路USB充电接口
Interior low frequency antenna I
室内低频天线 I
B-036
2
B-036
1
I-034
2
I-034
3
I-034
1
I2-001
1
I2-001
2
R/L(B)
B(B)
R/L(I)
R/L(I)
R/L(I)
B(I)
L/O(I2)
B/Y(I2)
C-23
2
C-18
1
C-18
2
55a
62b
R/L(B)
L/O(B)
B/Y(B)
H43
G41
E37
E27
B-031
B-033
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

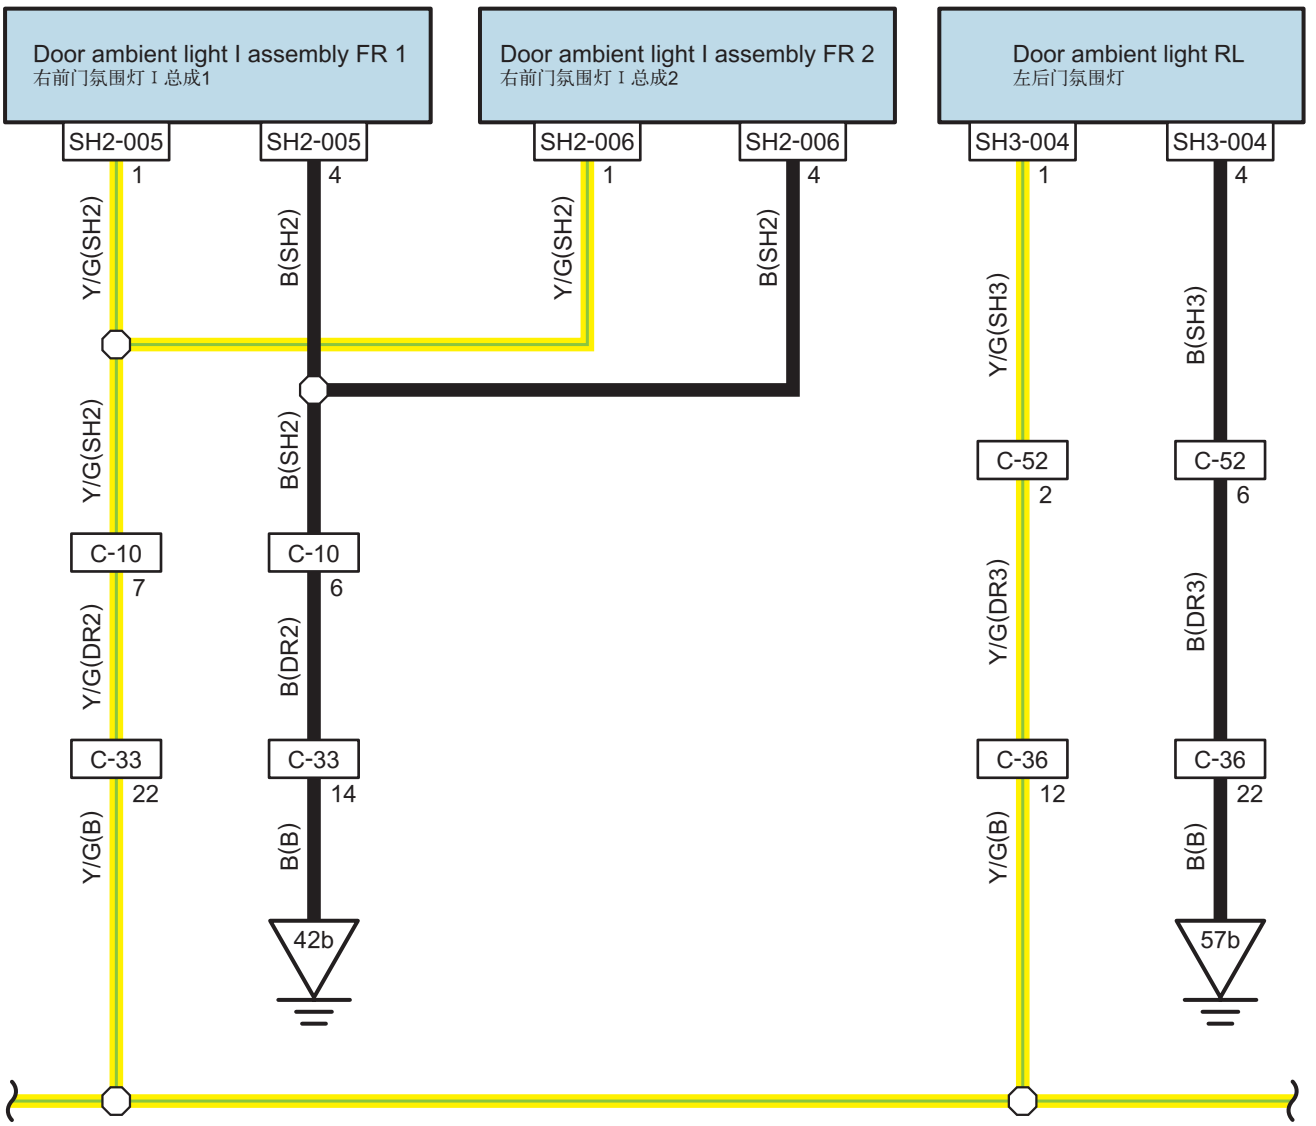

Driver seat control unit (DSCU)
驾驶员座椅控制单元
Digital key main module
数字钥匙主模块
Z1-008
A5
Z1-008
A3
Z1-009
B7
Z1-010
C11
B-078
8
B-078
12
R/L(Z1)
Y/B(Z1)
R/Y(Z1)
R(Z1)
R(B)
L/R(B)
C-41
12
C-41
2
C-41
22
C-41
1
R(B)
R/L(B)
Y/B(B)
R/Y(B)
R(B)
D43
D45
D52
D36
D39
B-029
B-029
B-029
B-029
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

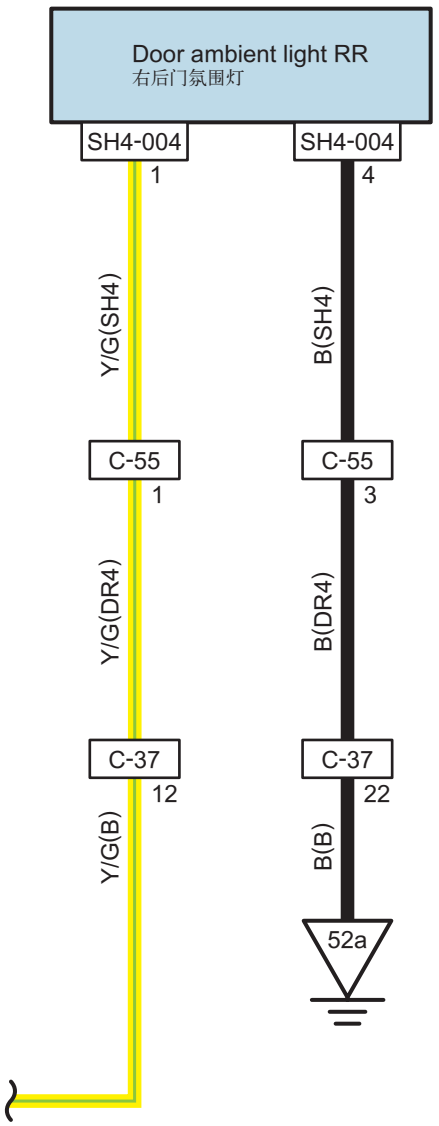

Outside rear view mirror LH
左侧外后视镜
DR1-008
17
R(DR1)
C-32
12
R(B)
Blower motor
鼓风机电机
B-027
2
B-027
3
B-027
4
B-027
1
O/W(B)
R/B(B)
BR/Y(B)
B(B)
53
H36
B-031
G44
B-033
G31
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

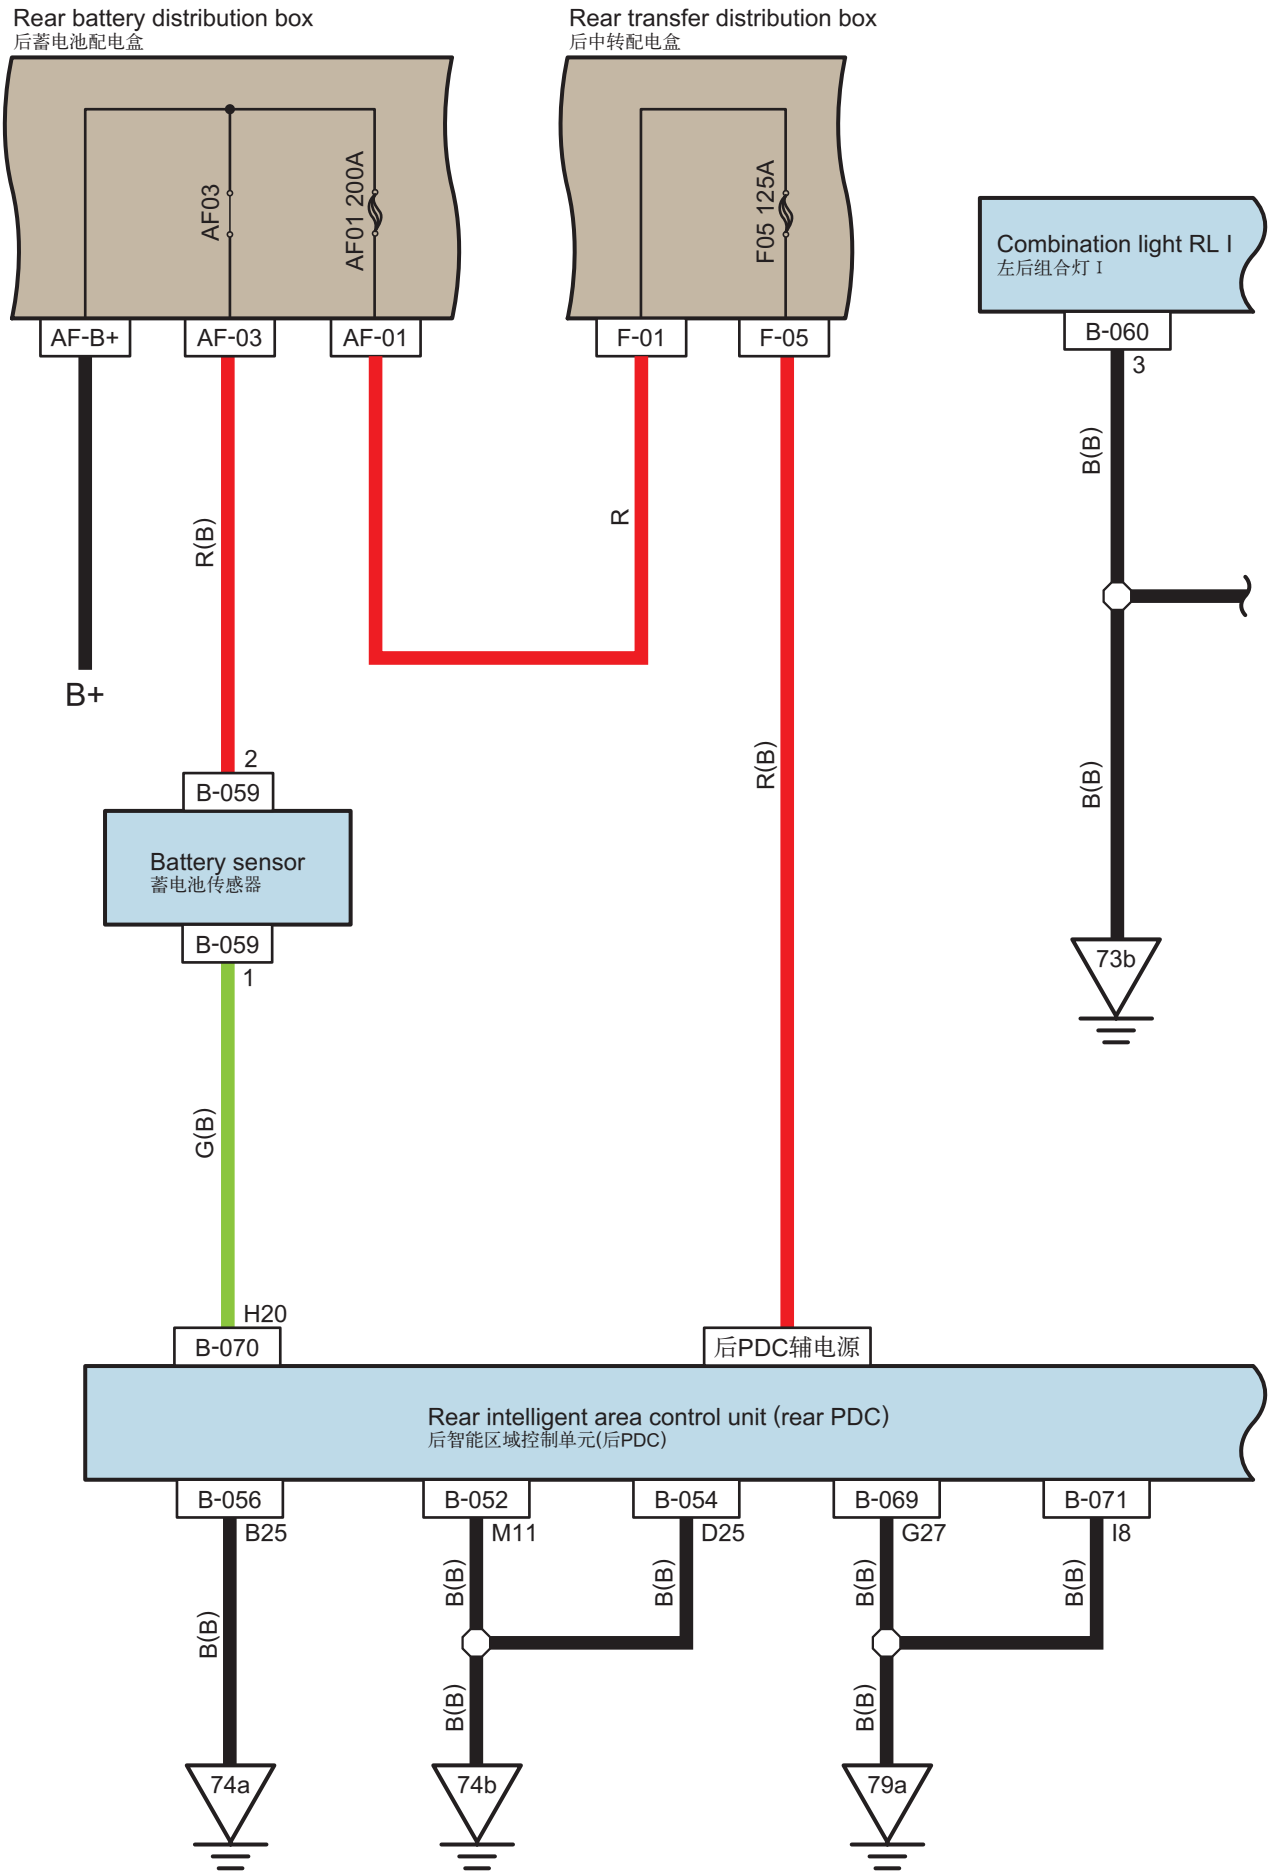

Passenger monitoring camera
副驾驶员监测摄像头
Driver monitoring camera
驾驶员监测摄像头
B-006
A1
B-005
A1
Digital key DK_CAN
数字钥匙DK_CAN
Y/B(B)
Y/B(B)
O(B)
V(B)
Y/B(B)
G40
B-033
E30
B-030
E40
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

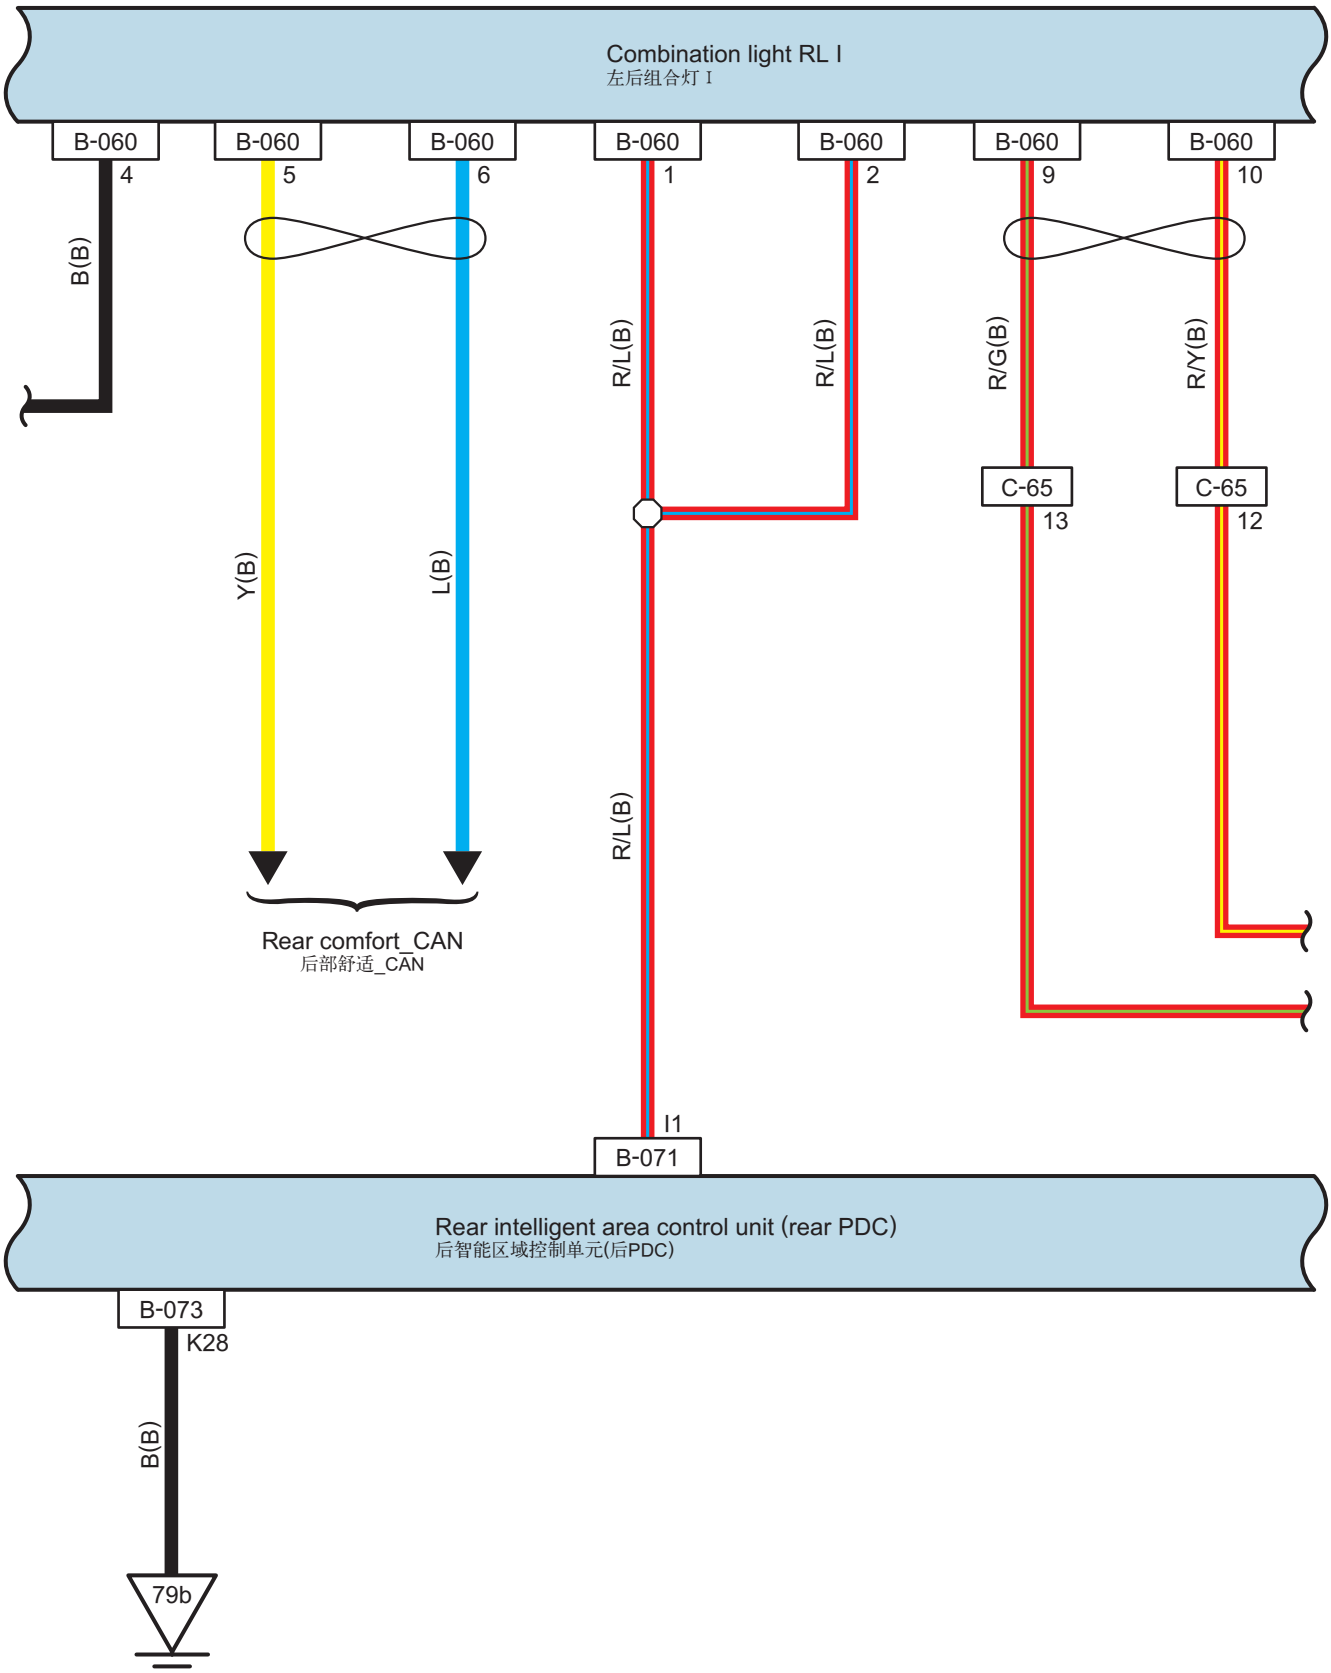

Auxiliary fascia console ambient light
副仪表板氛围灯
I2-004
2
I2-004
4
Footwell light FL
左前脚窝灯
I-016
1
I-016
3
Footwell light FR
右前脚窝灯
I-037
1
I-037
3
Y/G(I)
B(I)
Y/G(I)
B(I)
B(I2)
Y/G(I2)
Y/G(I)
C-18
13
C-18
4
C-21
13
B(I)
B(B)
Y/G(B)
Y/G(B)
44b
62b
Y/G(B)
E41
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

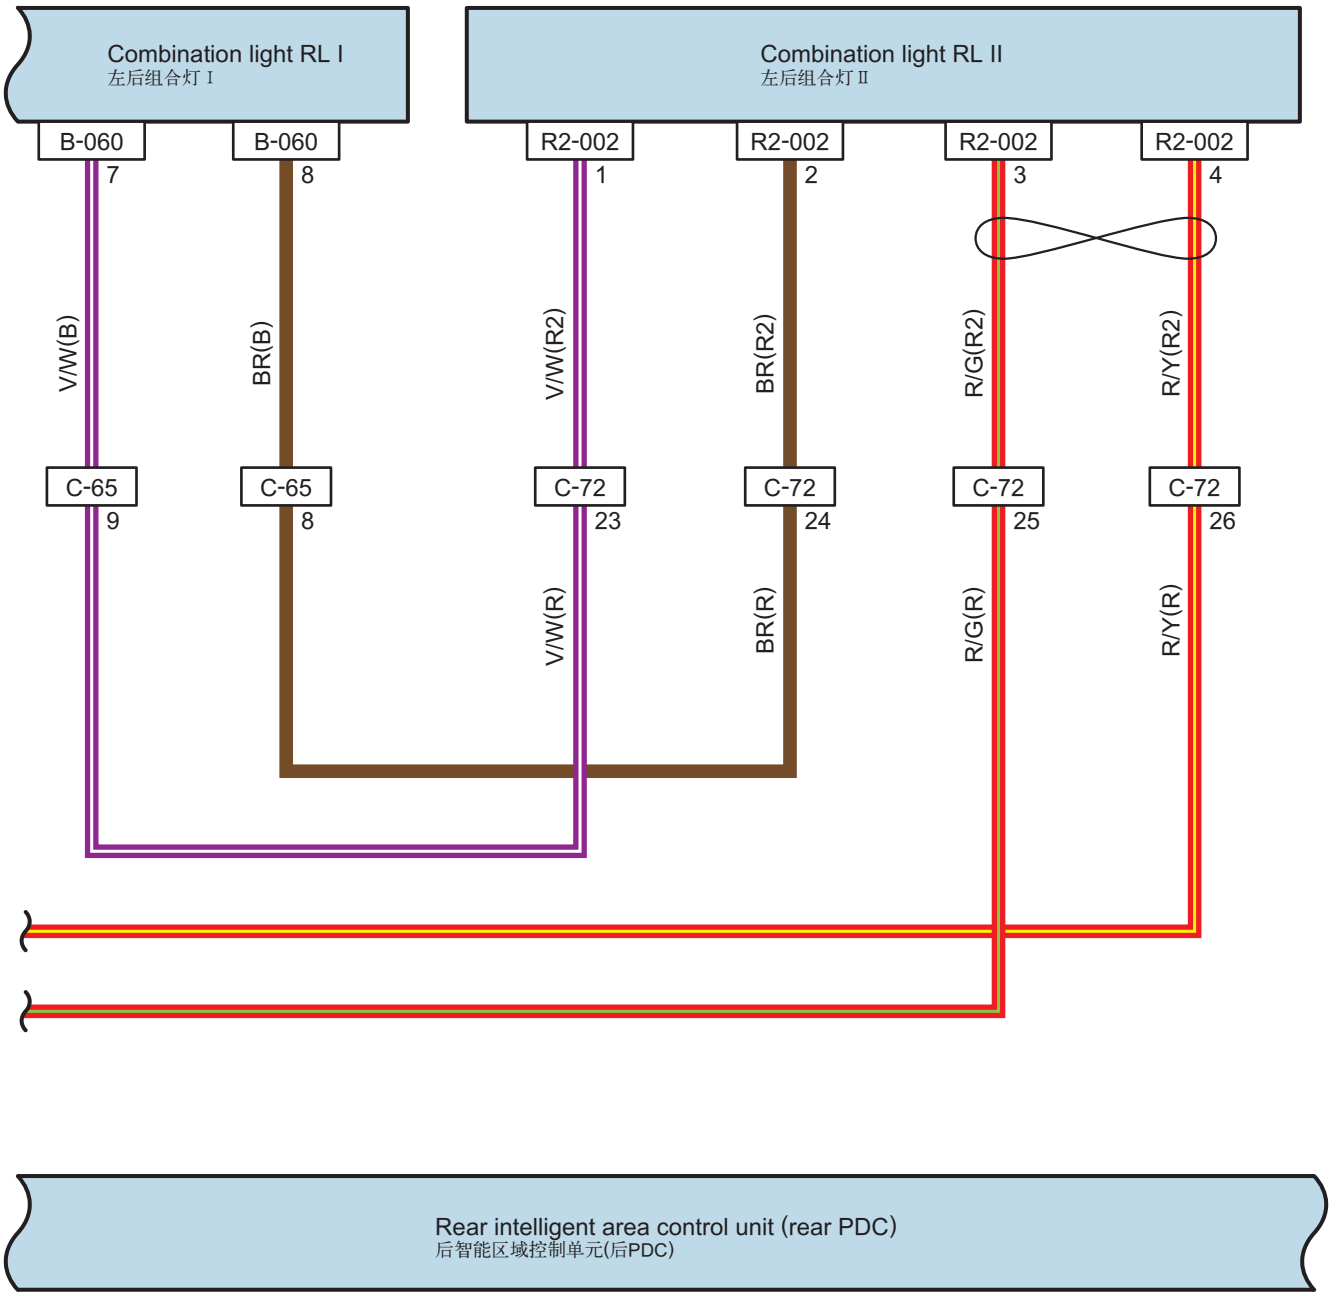

Center outlet motor inline
中出风口电机inline
I-041
3
I-041
5
Y/G(I)
Y/G(I)
Door ambient light I assembly FL 1
左前门氛围灯 I 总成1
SH1-005
1
SH1-005
4
Y/G(SH1)
B(SH1)
Door ambient light I assembly FL 2
左前门氛围灯 I 总成2
SH1-006
1
SH1-006
4
Y/G(SH1)
B(SH1)
Y/G(SH1)
B(SH1)
C-08
3
C-08
8
Y/G(DR1)
B(DR1)
C-32
22
C-32
54
Y/G(B)
B(B)
41a

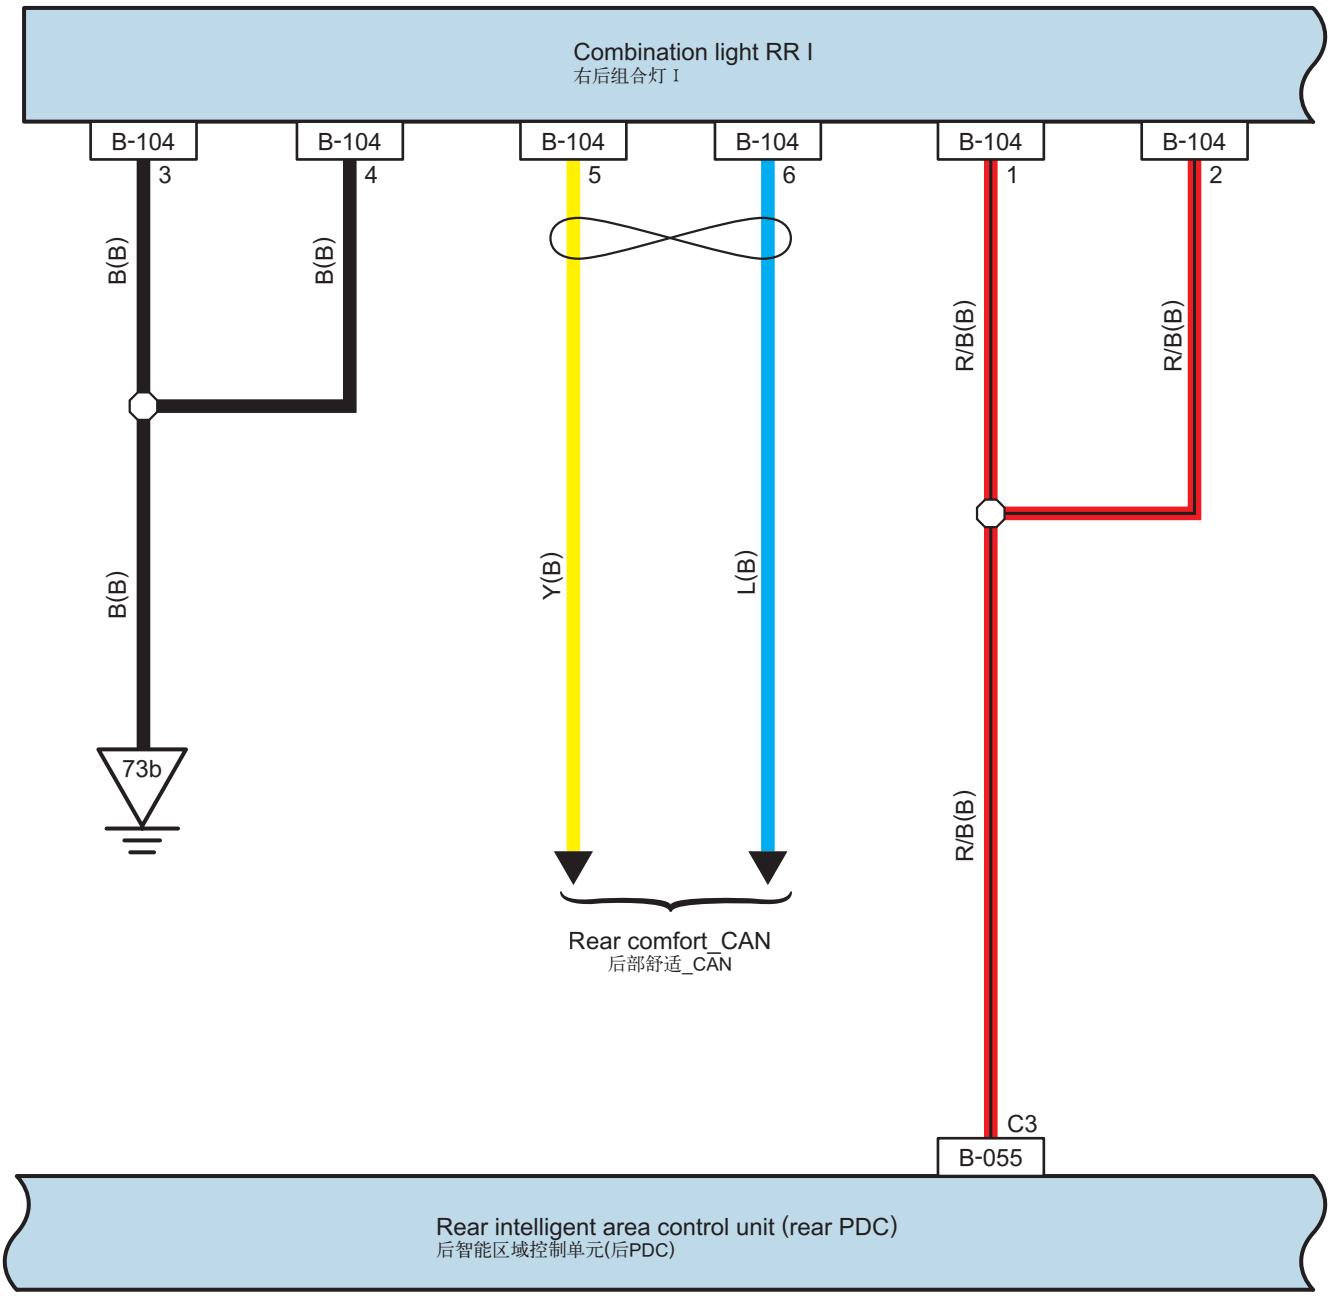

Door ambient light I assembly FR 1
右前门氛围灯 I 总成1
Door ambient light I assembly FR 2
右前门氛围灯 I 总成2
Door ambient light RL
左后门氛围灯
SH2-005
1
SH2-005
4
SH2-006
1
SH2-006
4
SH3-004
1
SH3-004
4
Y/G(SH2)
B(SH2)
Y/G(SH2)
B(SH2)
Y/G(SH3)
B(SH3)
C-10
7
C-10
6
C-52
2
C-52
6
Y/G(DR2)
B(DR2)
Y/G(DR3)
B(DR3)
C-33
22
C-33
14
C-36
12
C-36
22
Y/G(B)
B(B)
Y/G(B)
B(B)
42b
57b

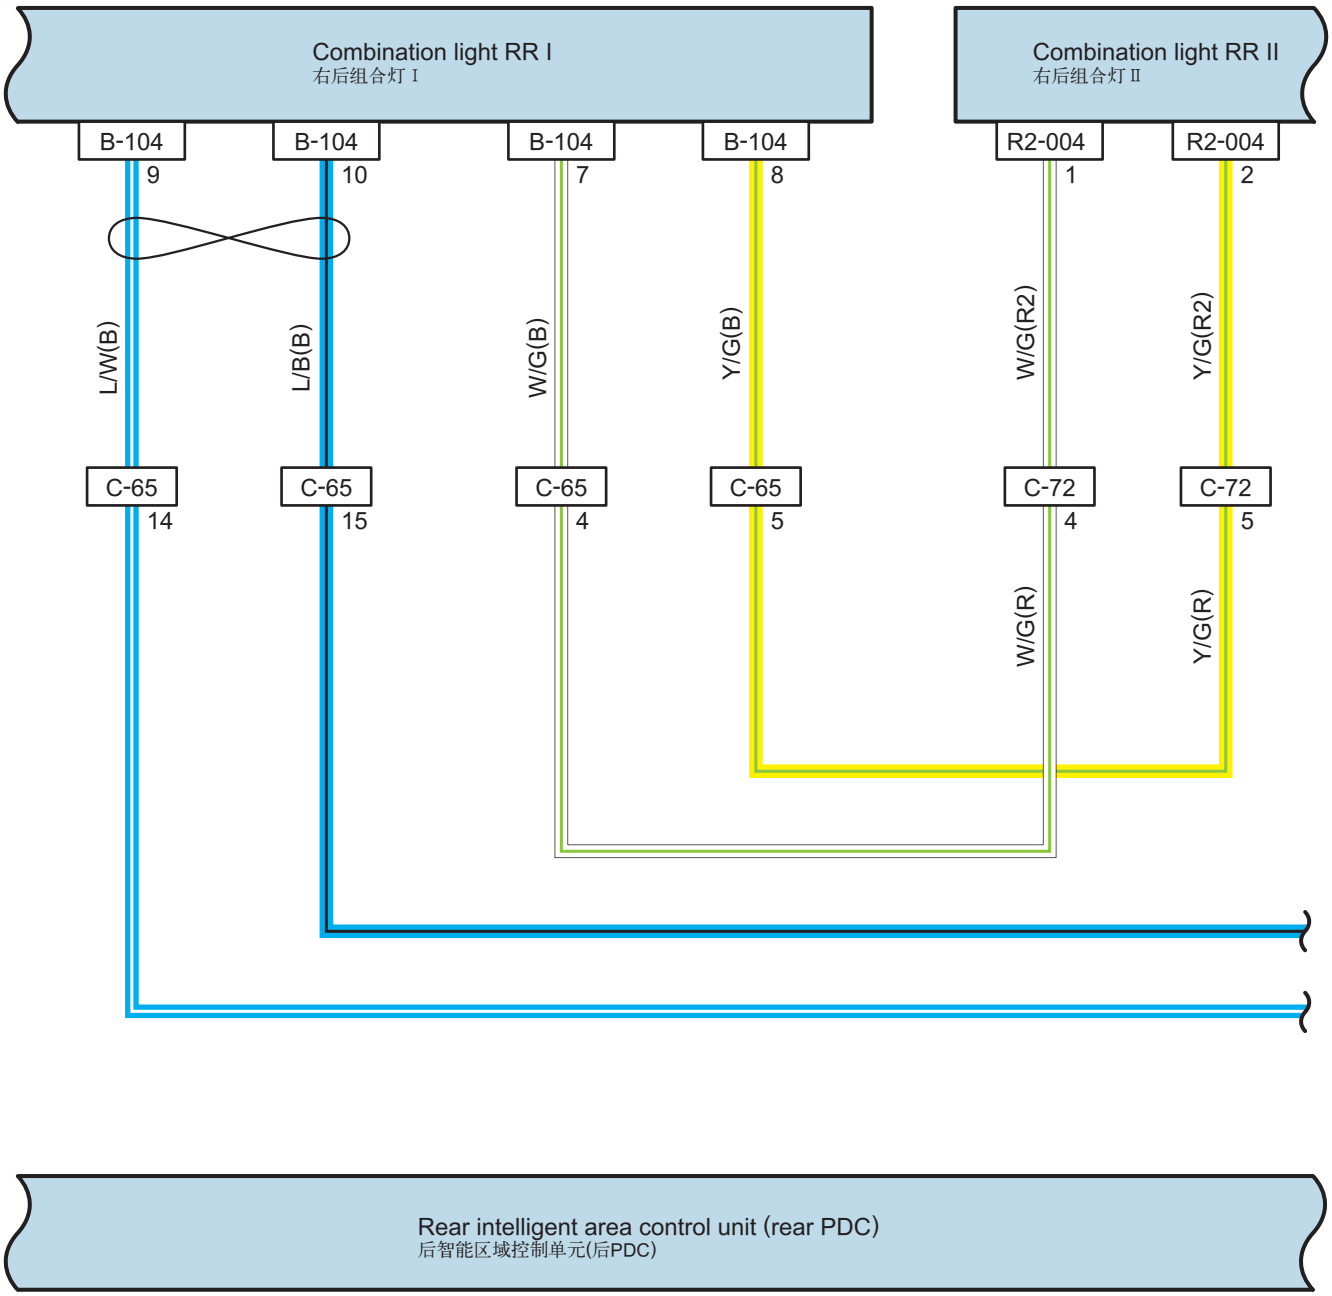

Door ambient light RR
右后门氛围灯
SH4-004
1
SH4-004
4
Y/G(SH4)
B(SH4)
C-55
1
C-55
3
Y/G(DR4)
B(DR4)
C-37
12
C-37
22
Y/G(B)
B(B)
52a

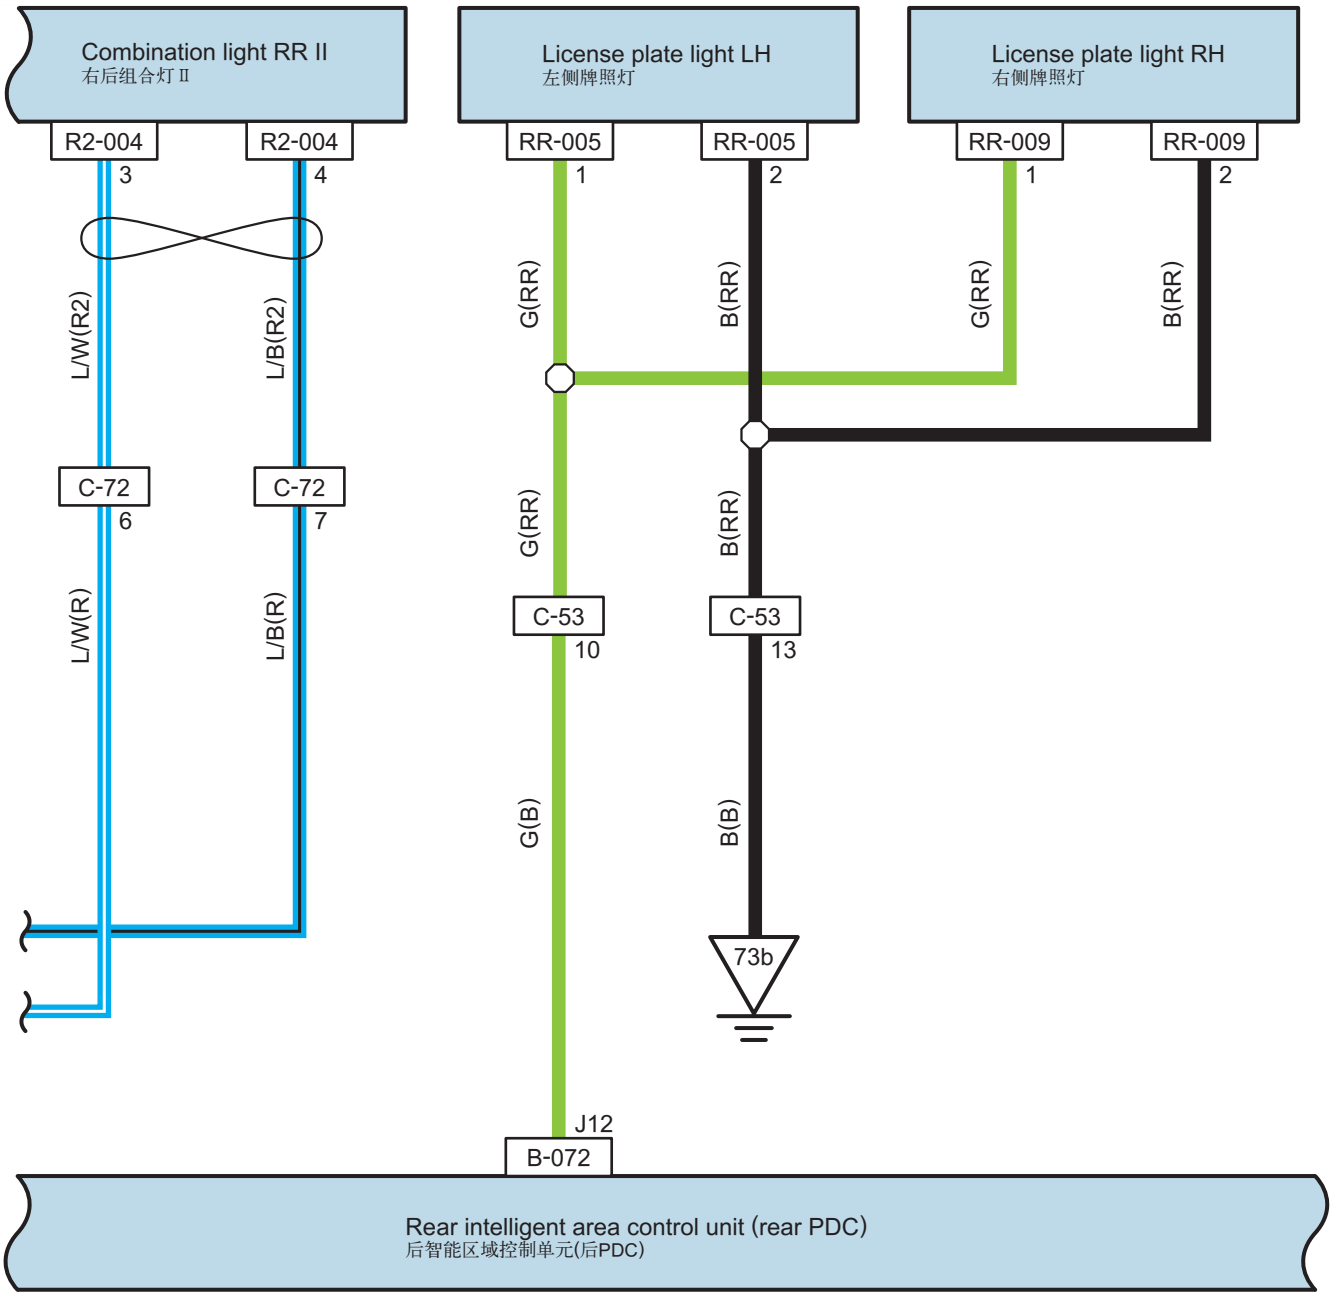

Rear battery distribution box
后蓄电池配电盒
AF03
AF01 200A
AF-B+
AF-03
AF-01
Rear transfer distribution box
后中转配电盒
F05 125A
F-01
F-05
Combination light RL I
左后组合灯 I
B-060
3
B(B)
B(B)
73b
B+
R(B)
R
R(B)
2
B-059
Battery sensor
蓄电池传感器
B-059
1
G(B)
H20
B-070
后PDC辅电源
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-056
B25
B-052
M11
B-054
D25
B-069
G27
B-071
I8
B(B)
B(B)
B(B)
B(B)
B(B)
B(B)
74a
74b
79a

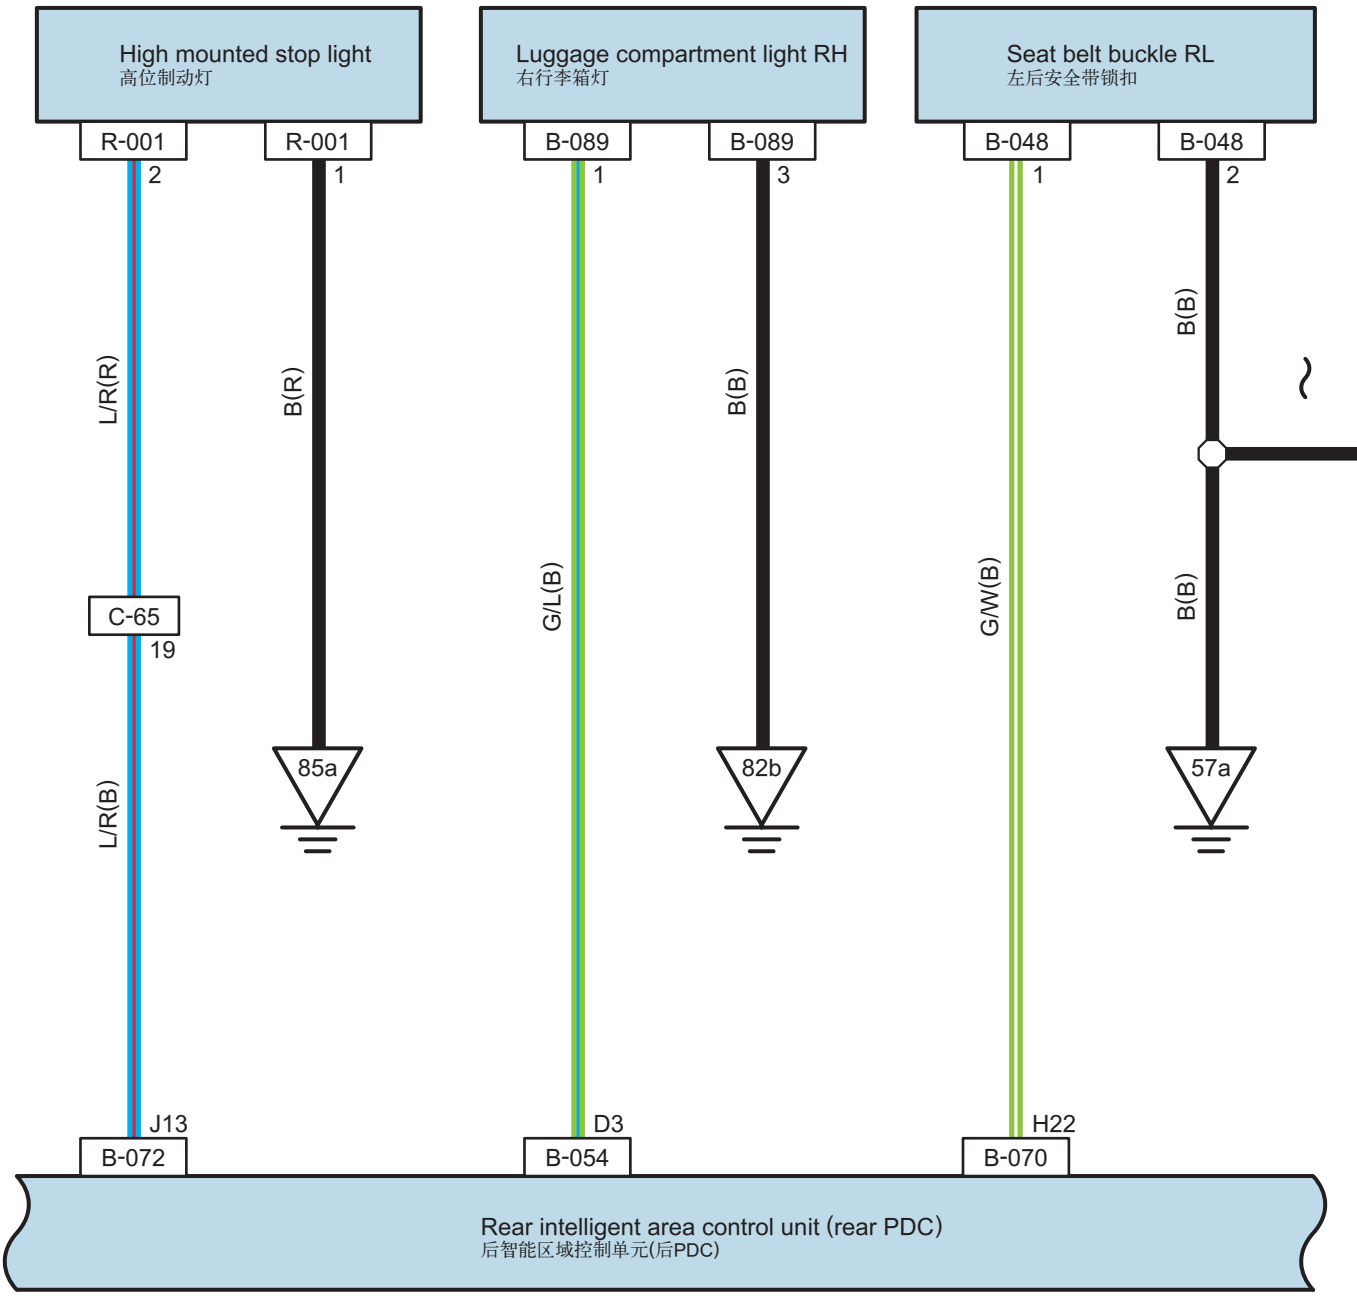

Combination light RL I
左后组合灯 I
B-060
4
B-060
5
B-060
6
B-060
1
B-060
2
B-060
9
B-060
10
B(B)
Y(B)
L(B)
R/L(B)
R/L(B)
R/G(B)
R/Y(B)
C-65
13
C-65
12
Rear comfort_CAN
后部舒适_CAN
R/L(B)
I1
B-071
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-073
K28
B(B)
79b

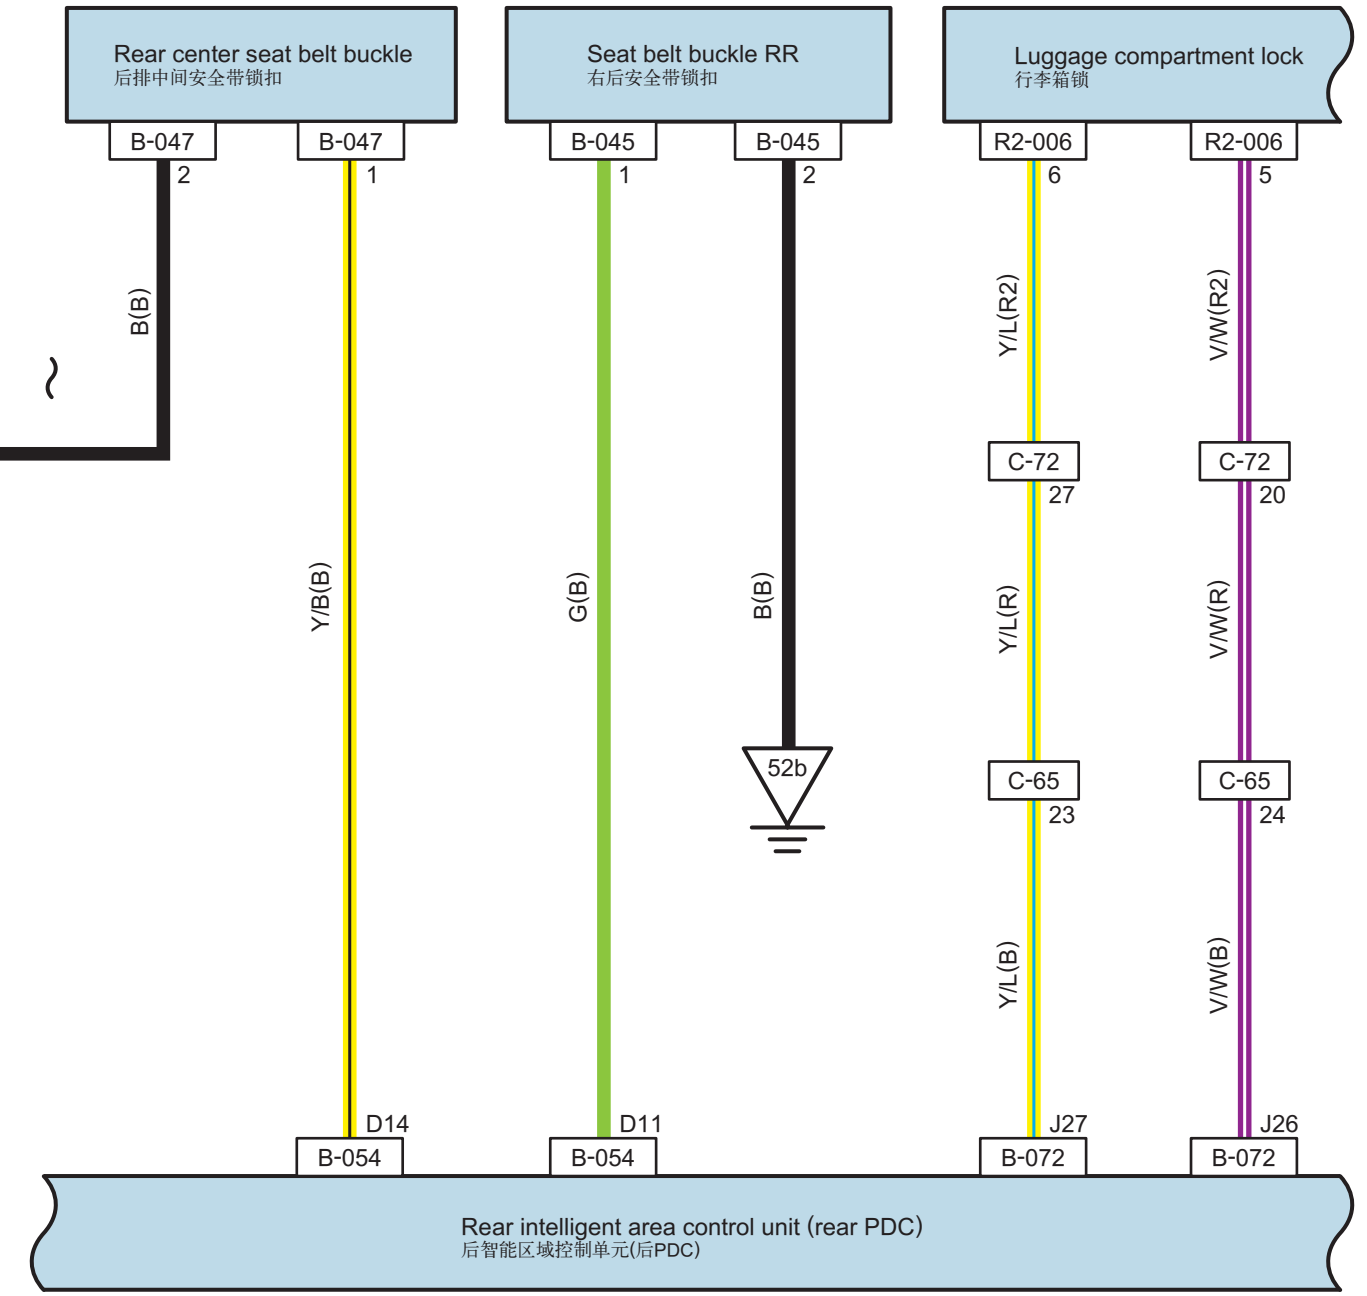

Combination light RL I
左后组合灯 I
Combination light RL II
左后组合灯 II
B-060
7
B-060
8
R2-002
1
R2-002
2
R2-002
3
R2-002
4
V/W(B)
BR(B)
V/W(R2)
BR(R2)
R/G(R2)
R/Y(R2)
C-65
9
C-65
8
C-72
23
C-72
24
C-72
25
C-72
26
V/W(R)
BR(R)
R/G(R)
R/Y(R)
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

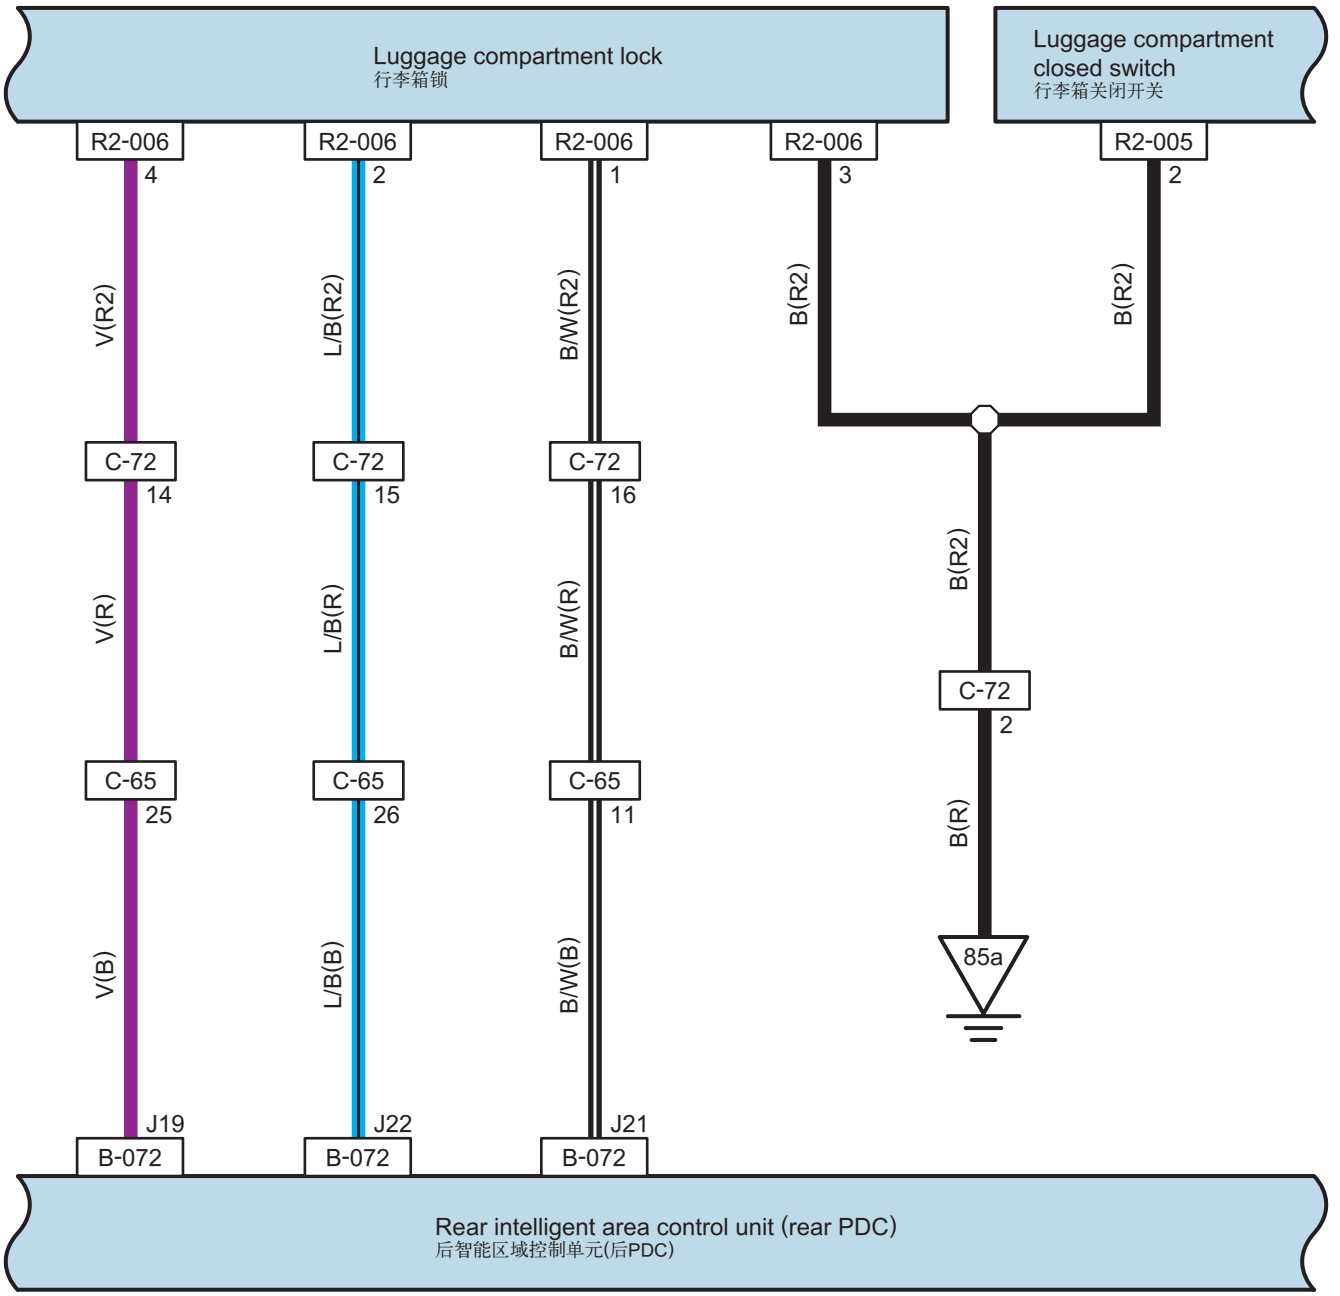

Combination light RR I
右后组合灯 I
B-104
3
B-104
4
B-104
5
B-104
6
B-104
1
B-104
2
B(B)
B(B)
B(B)
73b
Y(B)
L(B)
R/B(B)
R/B(B)
R/B(B)
Rear comfort_CAN
后部舒适_CAN
C3
B-055
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

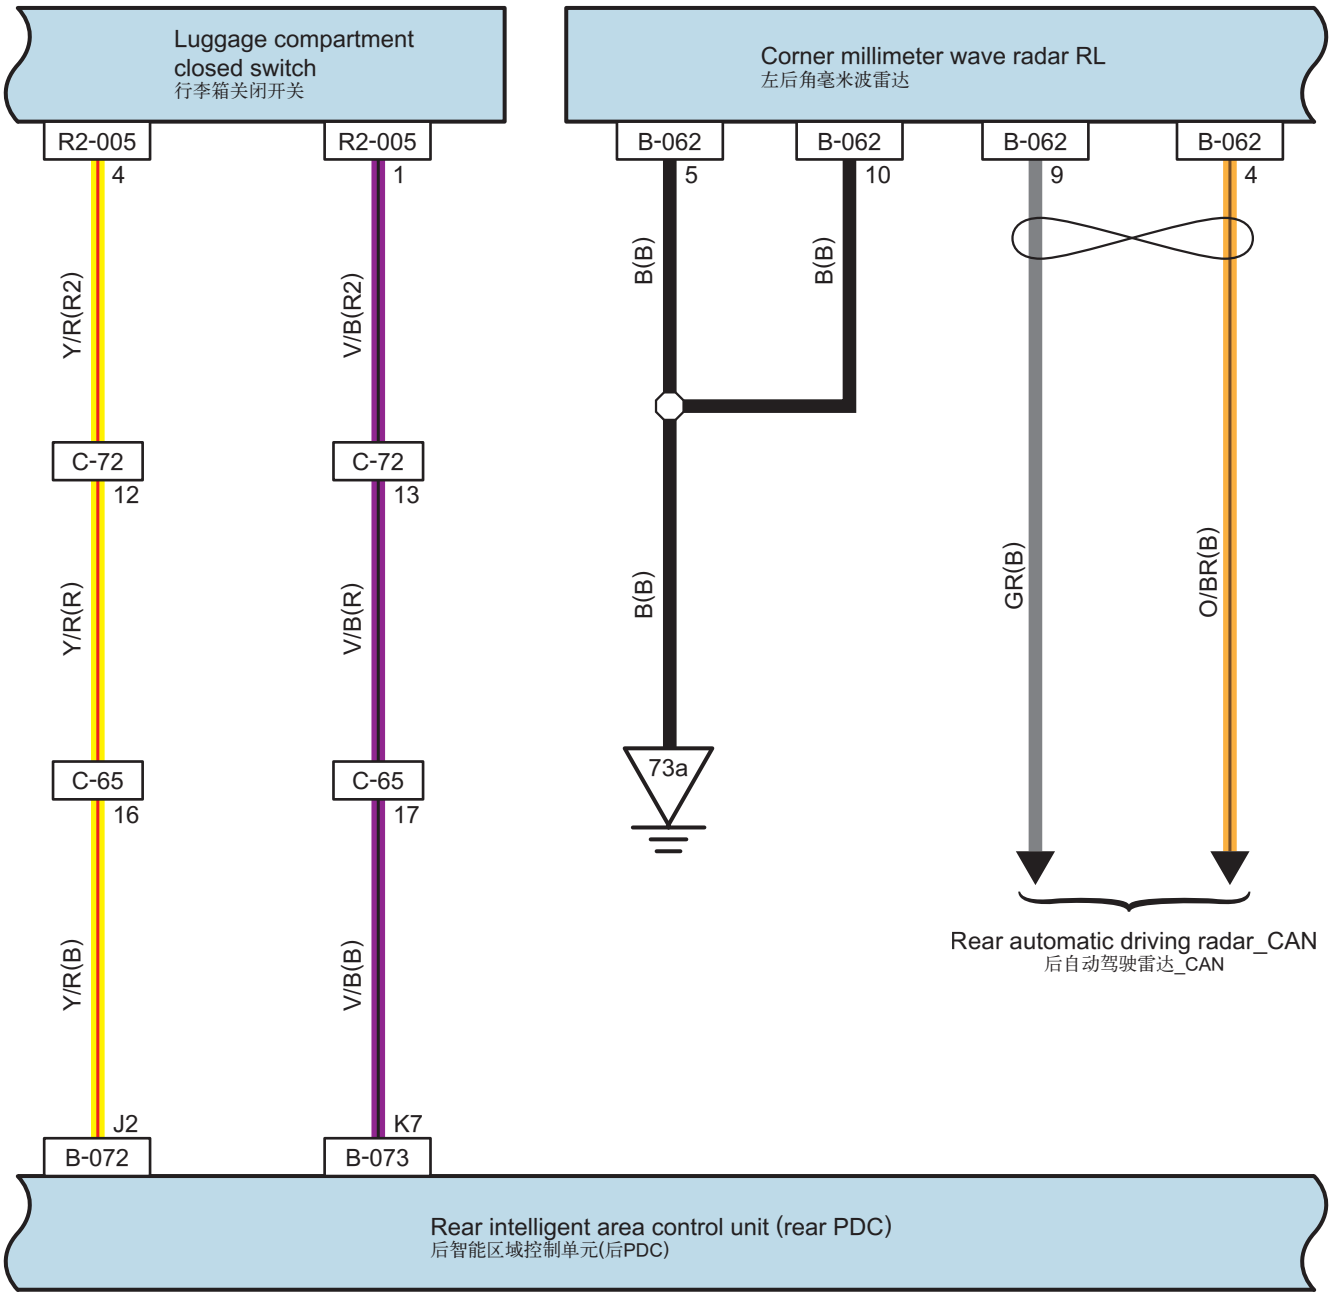

Combination light RR I
右后组合灯 I
Combination light RR II
右后组合灯 II
B-104
9
B-104
10
B-104
7
B-104
8
R2-004
1
R2-004
2
L/W(B)
L/B(B)
W/G(B)
Y/G(B)
W/G(R2)
Y/G(R2)
C-65
14
C-65
15
C-65
4
C-65
5
C-72
4
C-72
5
W/G(R)
Y/G(R)
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

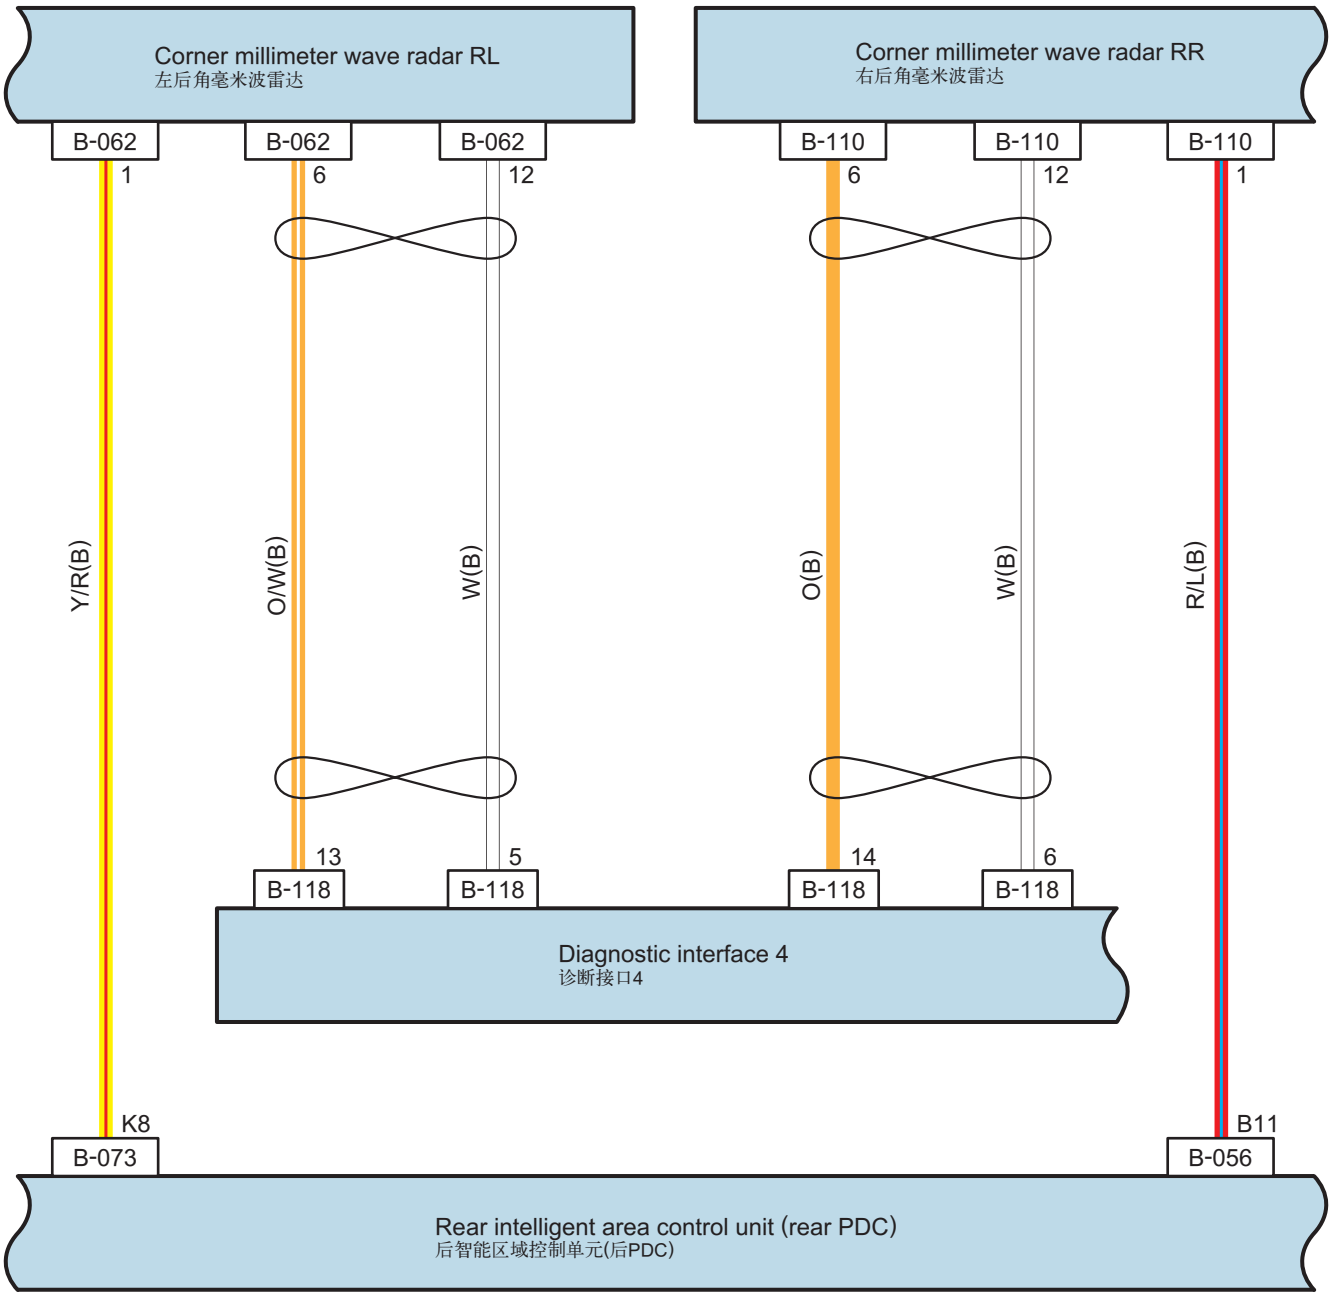

Combination light RR II
右后组合灯Ⅱ
License plate light LH
左侧牌照灯
License plate light RH
右侧牌照灯
R2-004
3
R2-004
4
RR-005
1
RR-005
2
RR-009
1
RR-009
2
L/W(R2)
L/B(R2)
G(RR)
B(RR)
G(RR)
B(RR)
C-72
6
C-72
7
G(RR)
B(RR)
L/W(R)
L/B(R)
C-53
10
C-53
13
G(B)
B(B)
73b
J12
B-072
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

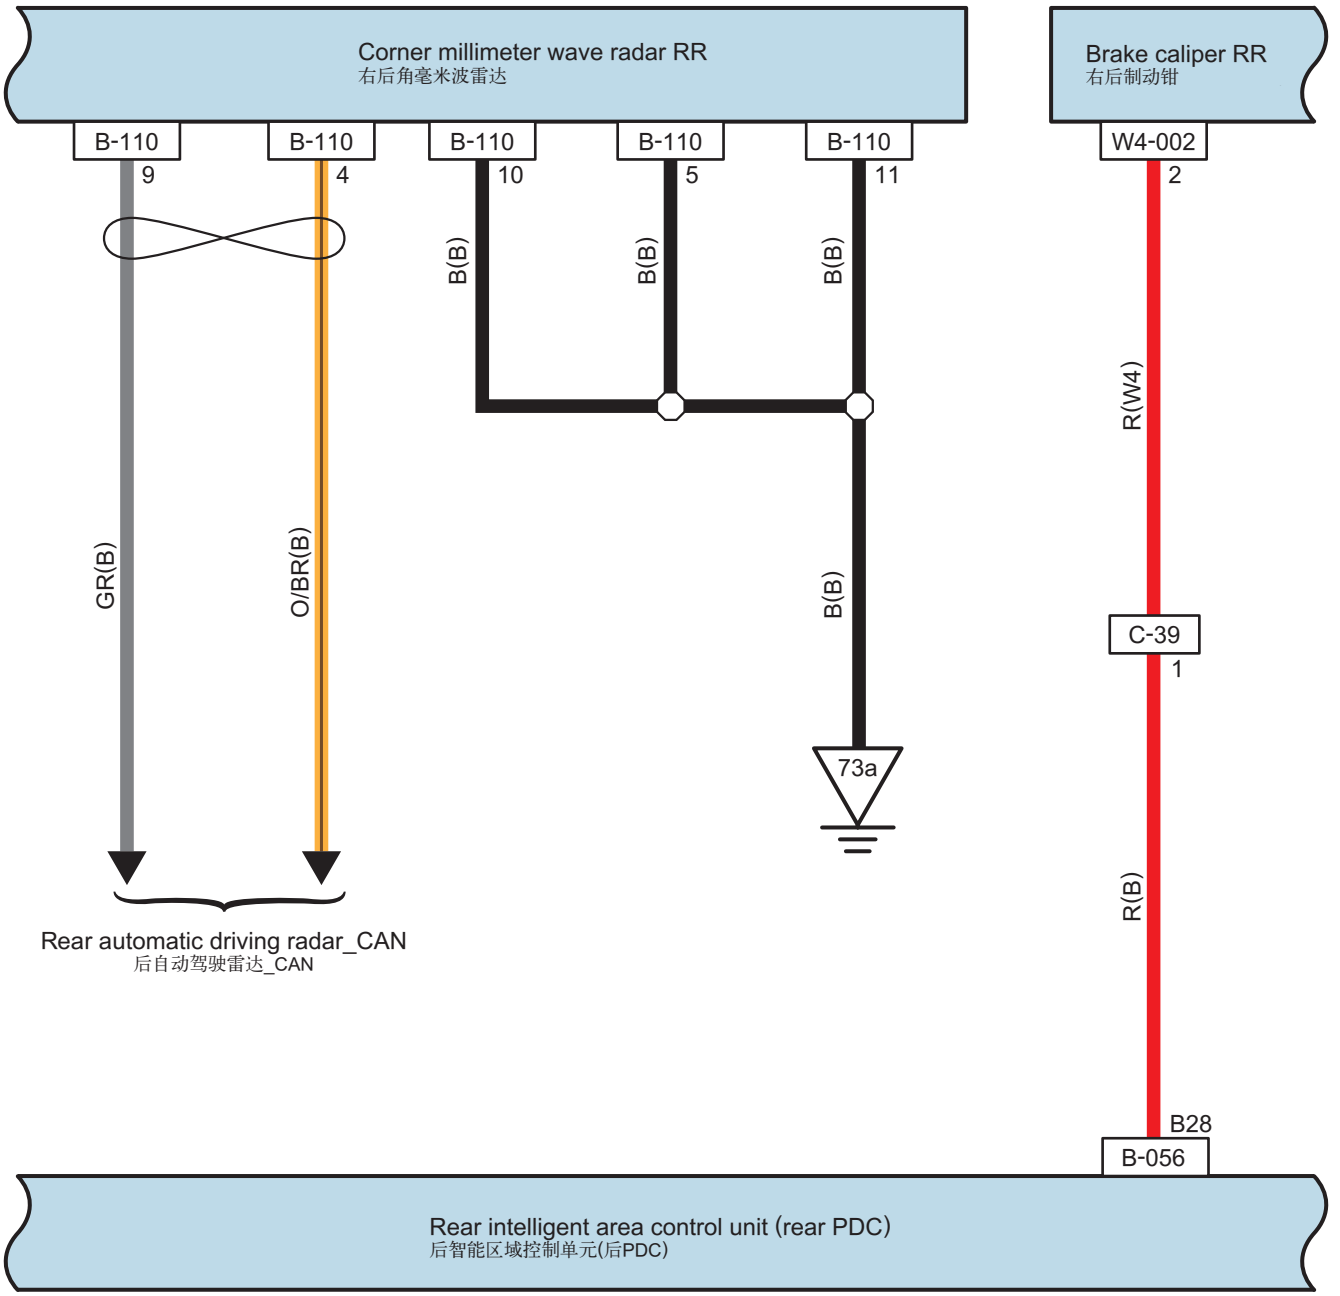

High mounted stop light
高位制动灯
R-001
2
R-001
1
L/R(R)
B(R)
C-65
19
L/R(B)
85a
J13
B-072
Luggage compartment light RH
右行李箱灯
B-089
1
B-089
3
G/L(B)
B(B)
82b
D3
B-054
Seat belt buckle RL
左后安全带锁扣
B-048
1
B-048
2
G/W(B)
B(B)
B(B)
57a
H22
B-070
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

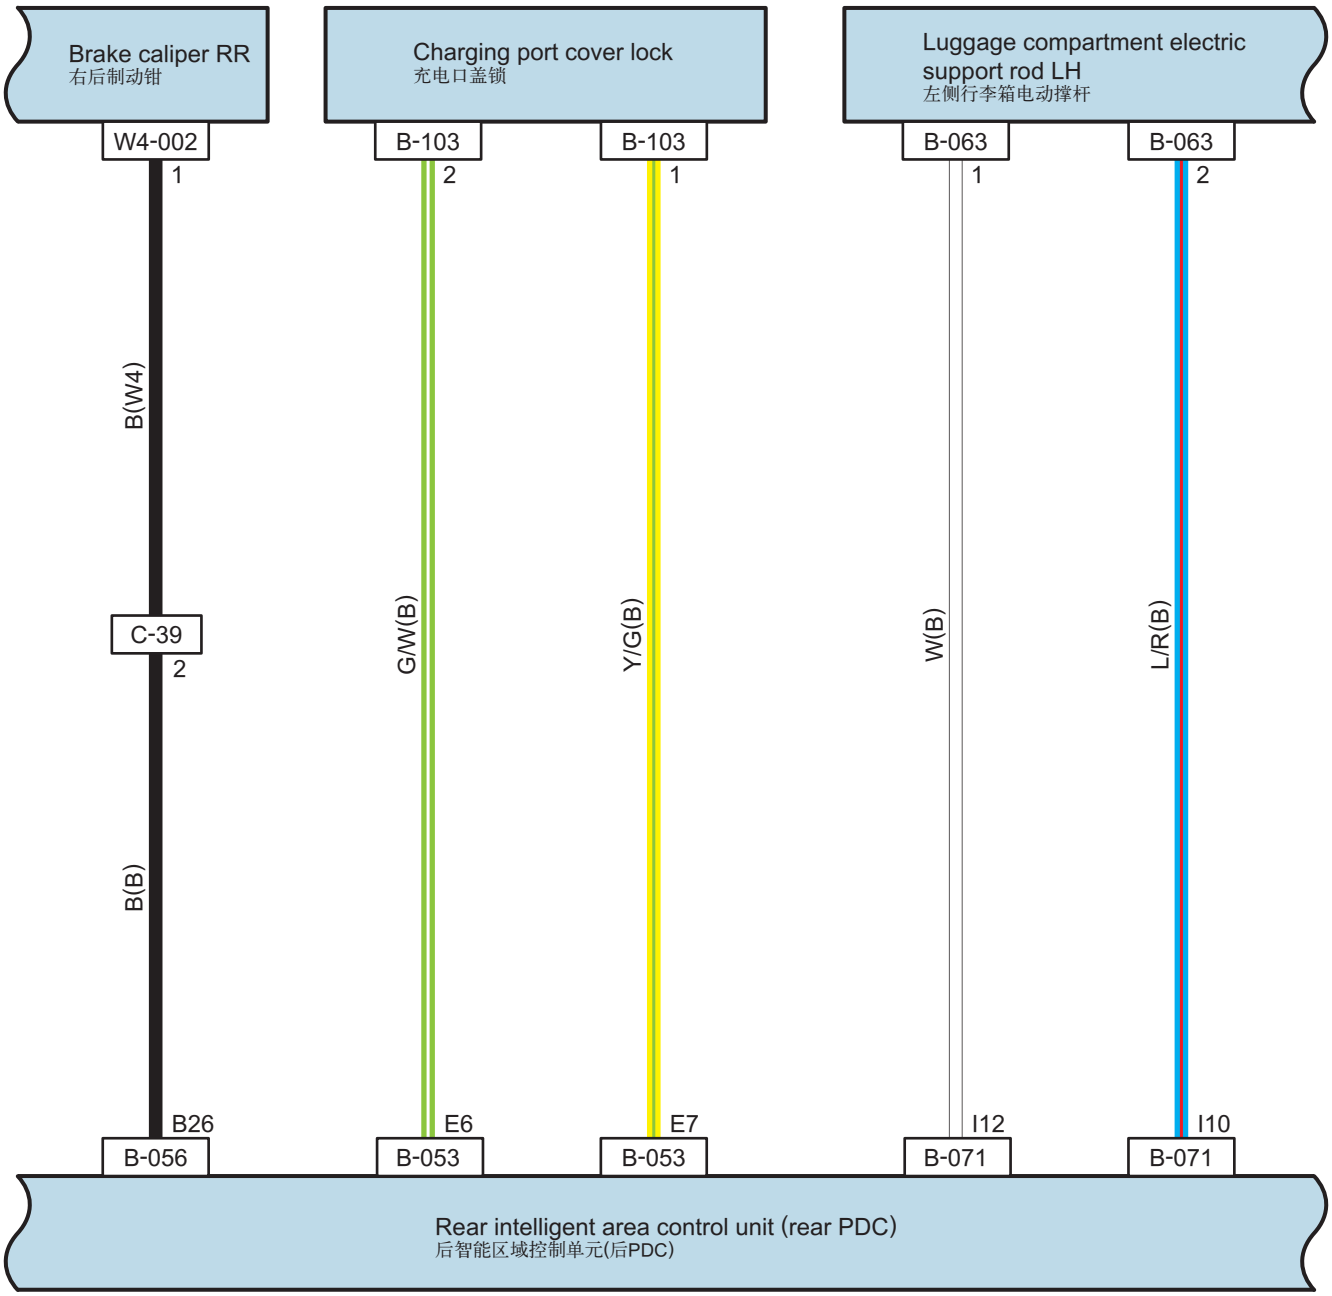

Rear center seat belt buckle
后排中间安全带锁扣
B-047
2
B-047
1
B(B)
Y/B(B)
Seat belt buckle RR
右后安全带锁扣
B-045
1
B-045
2
G(B)
B(B)
52b
Luggage compartment lock
行李箱锁
R2-006
6
R2-006
5
Y/L(R2)
V/W(R2)
C-72
27
C-72
20
Y/L(R)
V/W(R)
C-65
23
C-65
24
Y/L(B)
V/W(B)
D14
B-054
D11
B-054
J27
B-072
J26
B-072
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

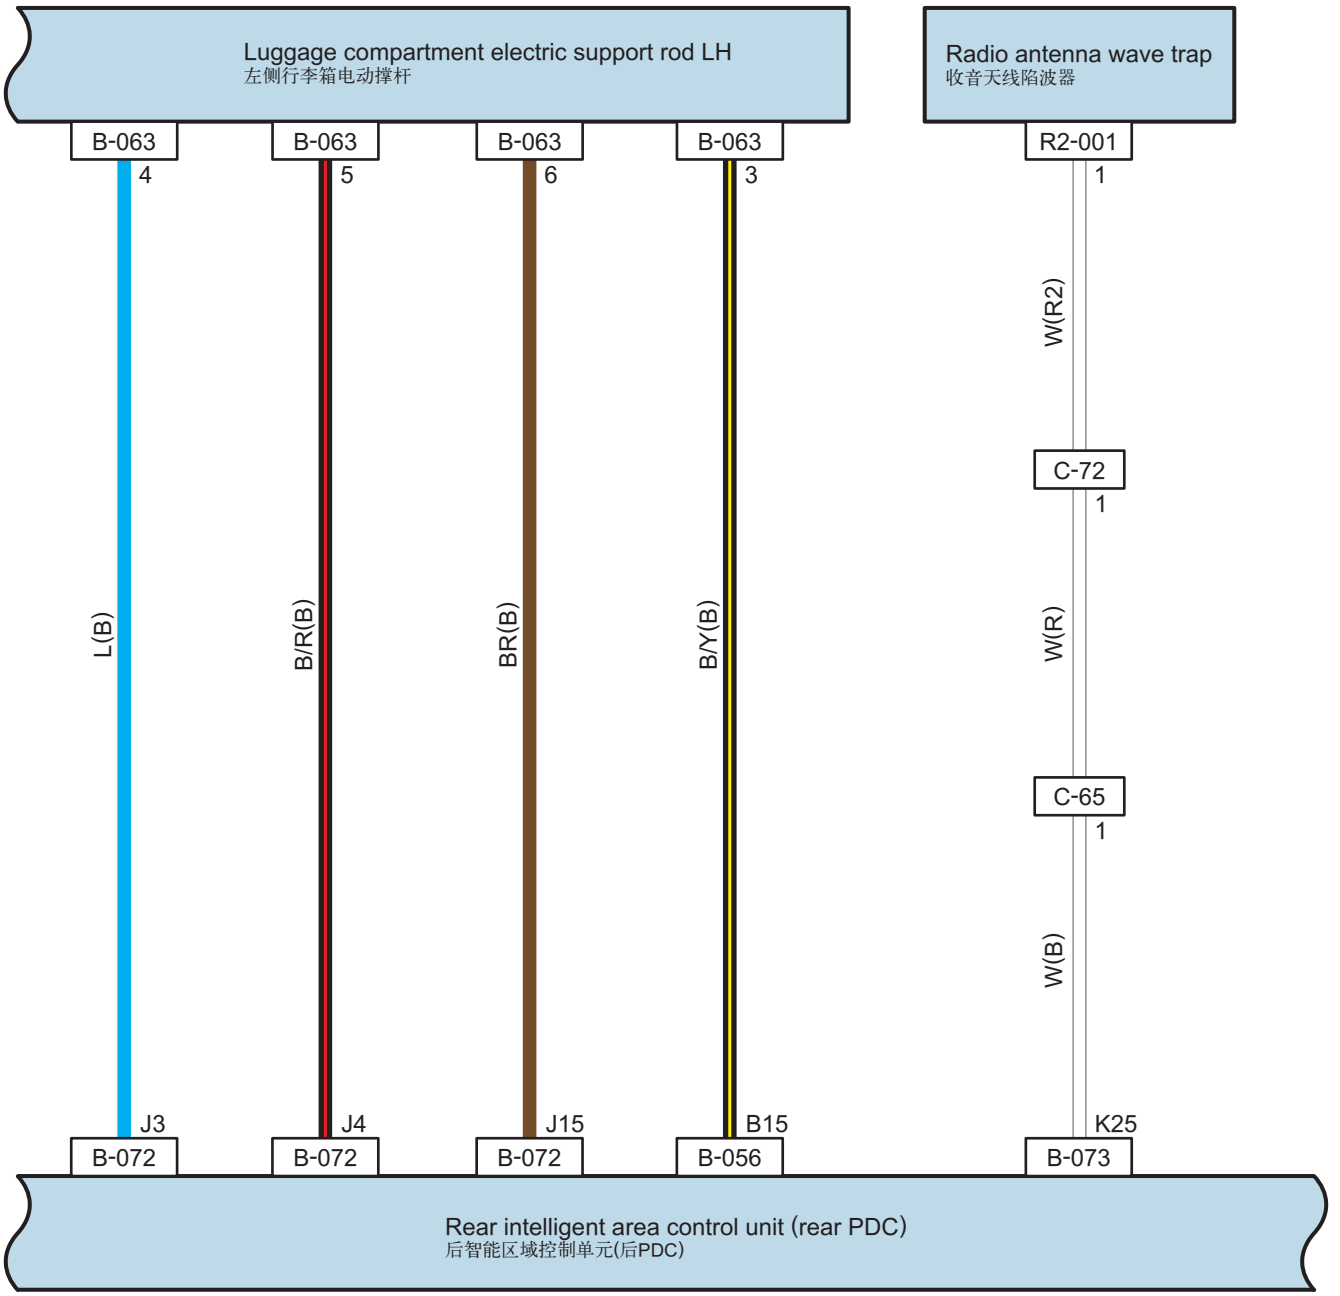

Luggage compartment lock
行李箱锁
Luggage compartment closed switch
行李箱关闭开关
R2-006
4
R2-006
2
R2-006
1
R2-006
3
R2-005
2
V(R2)
L/B(R2)
B/W(R2)
B(R2)
B(R2)
C-72
14
C-72
15
C-72
16
C-72
2
V(R)
L/B(R)
B/W(R)
B(R2)
C-65
25
C-65
26
C-65
11
B(R)
V(B)
L/B(B)
B/W(B)
85a
J19
J22
J21
B-072
B-072
B-072
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

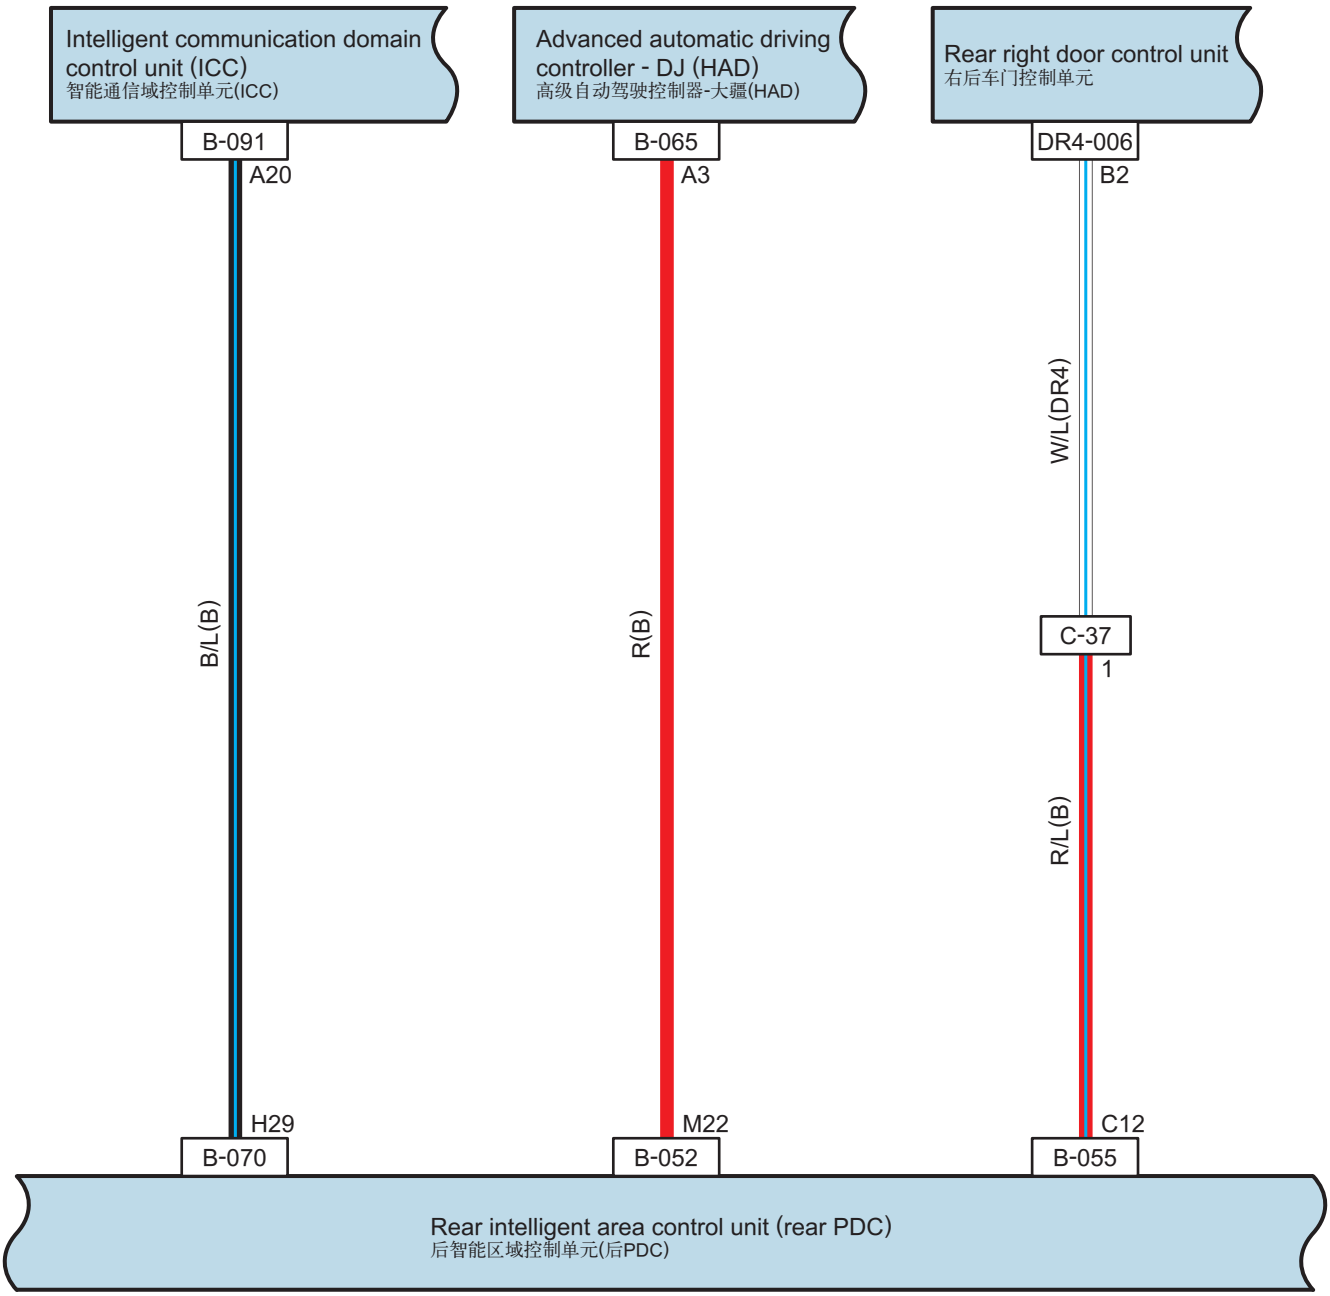

Luggage compartment closed switch
行李箱关闭开关
R2-005
4
R2-005
1
Y/R(R2)
V/B(R2)
C-72
12
C-72
13
Y/R(R)
V/B(R)
C-65
16
C-65
17
Y/R(B)
V/B(B)
J2
K7
B-072
B-073
Corner millimeter wave radar RL
左后角毫米波雷达
B-062
5
B-062
10
B-062
9
B-062
4
B(B)
B(B)
B(B)
73a
GR(B)
O/BR(B)
Rear automatic driving radar_CAN
后自动驾驶雷达_CAN
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

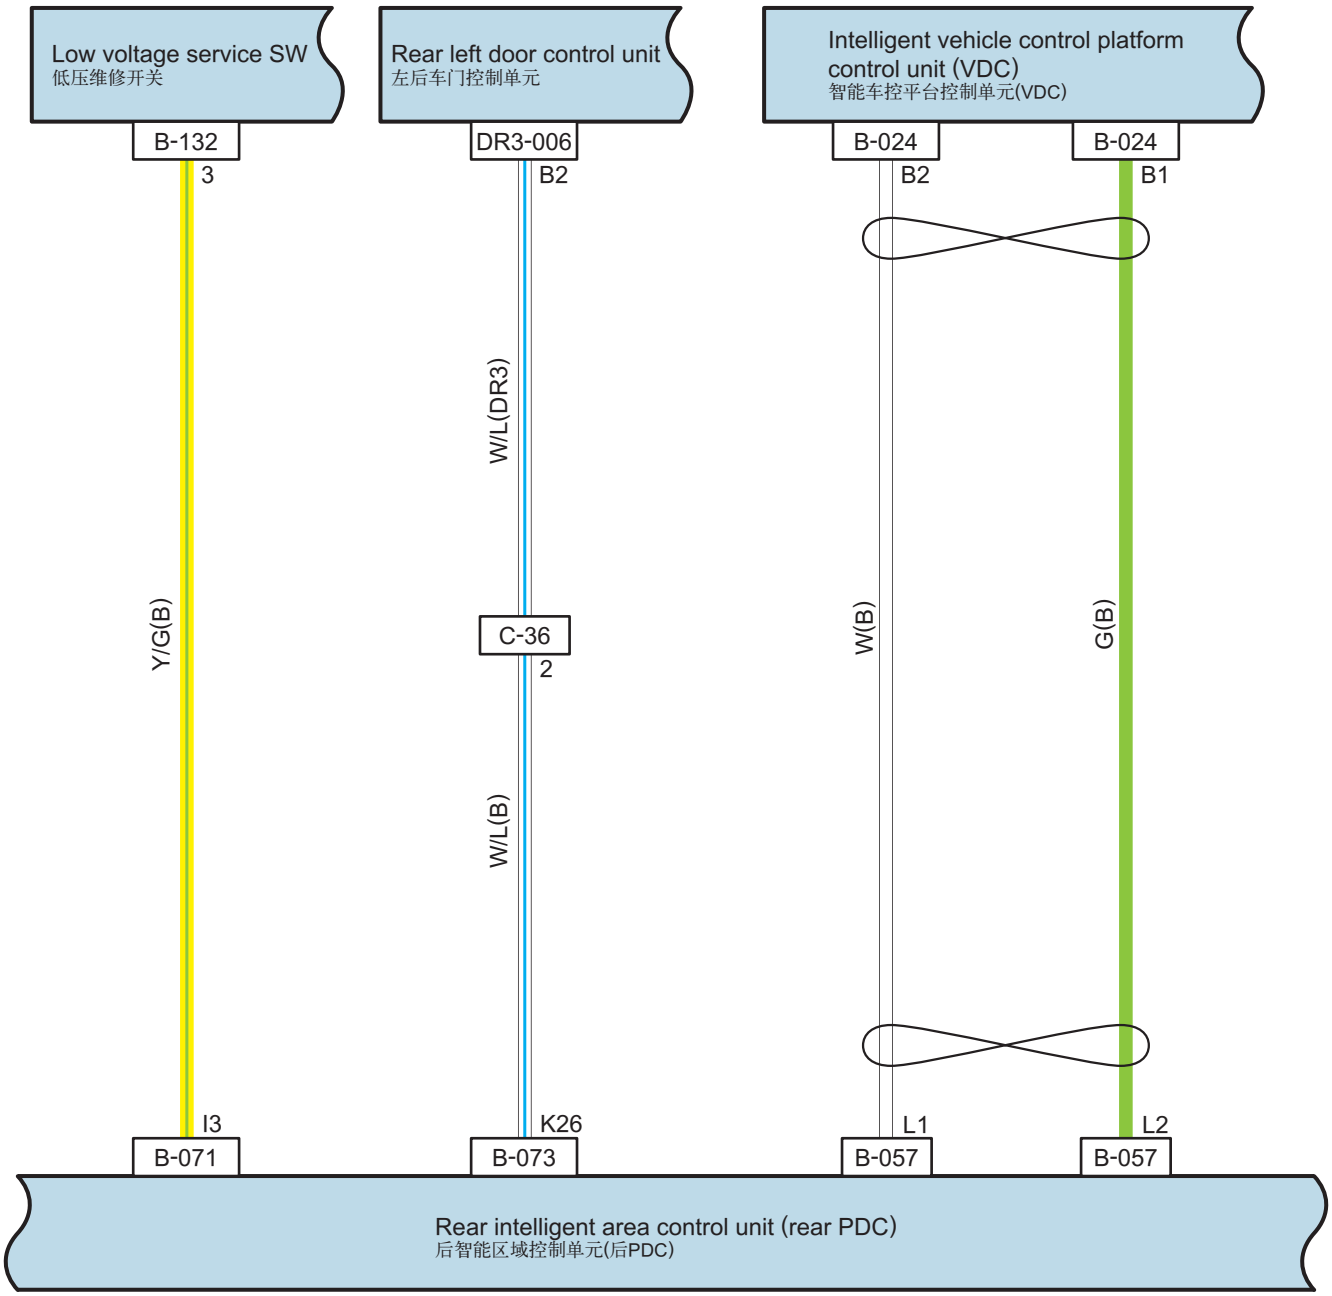

Corner millimeter wave radar RL
左后角毫米波雷达
Corner millimeter wave radar RR
右后角毫米波雷达
B-062
B-062
B-062
1
6
12
B-110
B-110
B-110
6
12
1
Y/R(B)
O/W(B)
W(B)
O(B)
W(B)
R/L(B)
13
5
14
6
B-118
B-118
B-118
B-118
Diagnostic interface 4
诊断接口4
K8
B11
B-073
B-056
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

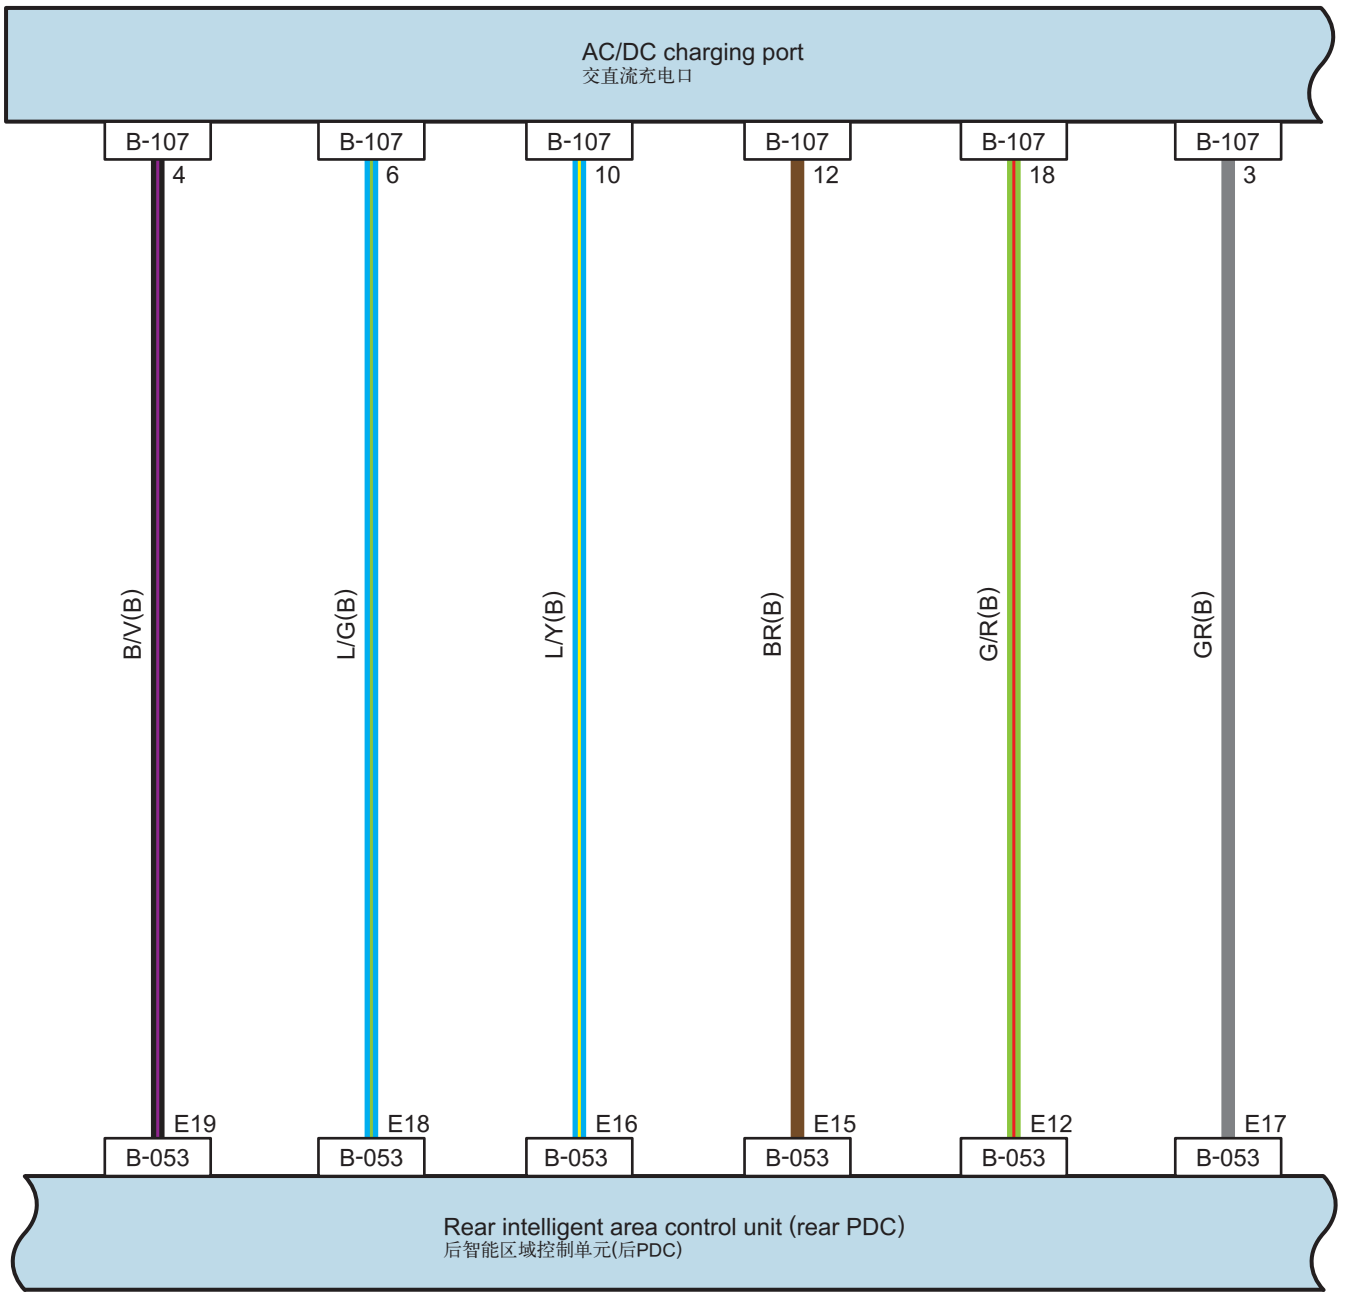

Corner millimeter wave radar RR
右后角毫米波雷达
B-110
9
B-110
4
B-110
10
B-110
5
B-110
11
B(B)
B(B)
B(B)
GR(B)
O/BR(B)
B(B)
73a
Rear automatic driving radar_CAN
后自动驾驶雷达_CAN
Brake caliper RR
右后制动钳
W4-002
2
R(W4)
C-39
1
R(B)
B28
B-056
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

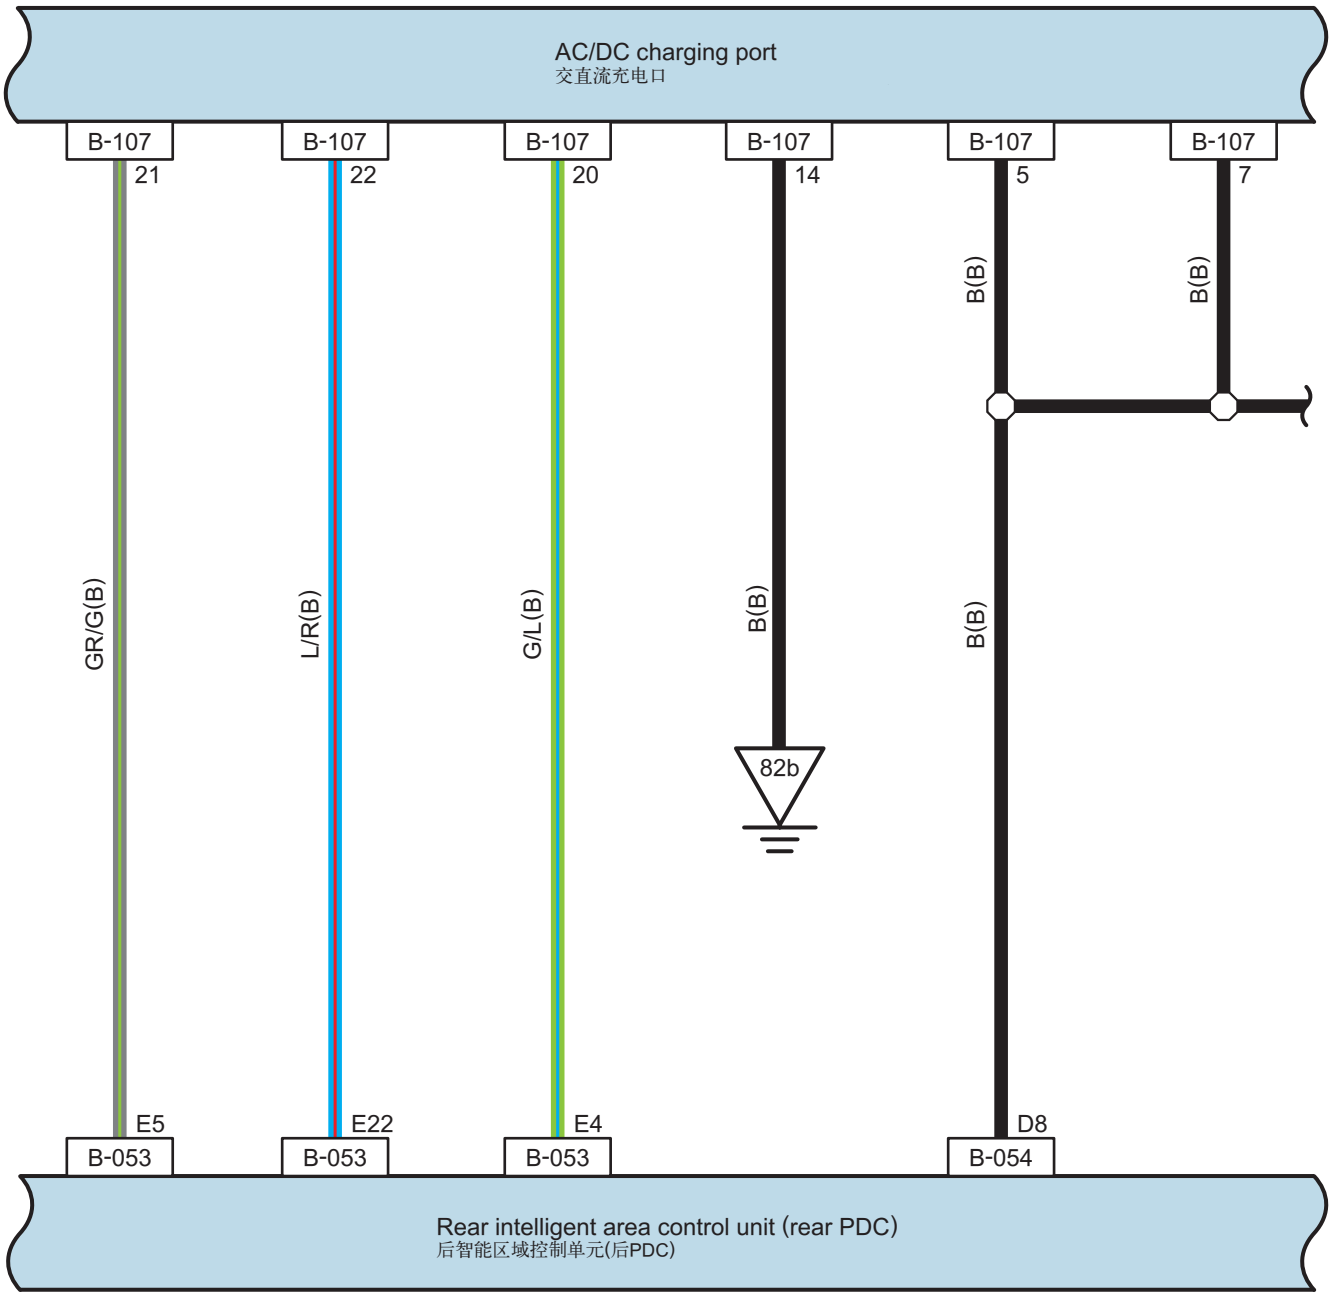

Brake caliper RR
右后制动钳
W4-002
1
B(W4)
C-39
2
B(B)
B26
B-056
Charging port cover lock
充电口盖锁
B-103
2
G/W(B)
E6
B-053
B-103
1
Y/G(B)
E7
B-053
Luggage compartment electric support rod LH
左侧行李箱电动撑杆
B-063
1
W(B)
I12
B-071
B-063
2
L/R(B)
I10
B-071
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

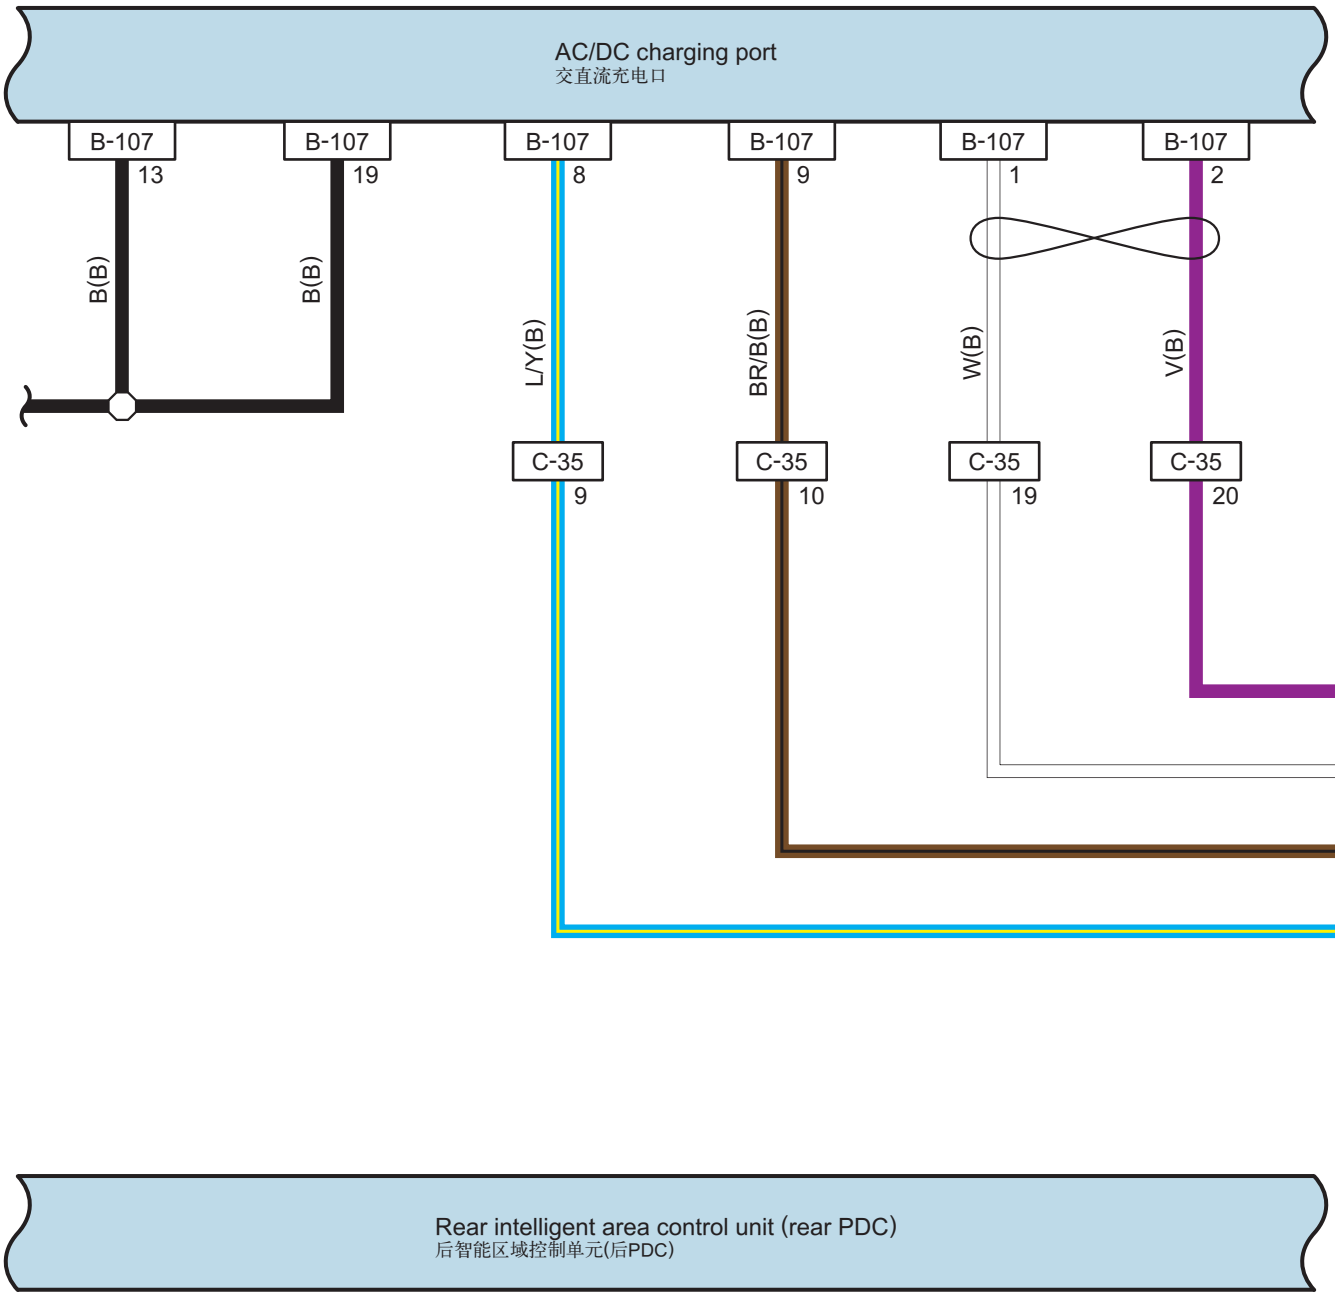

Luggage compartment electric support rod LH
左侧行李箱电动撑杆
Radio antenna wave trap
收音天线陷波器
B-063
4
B-063
5
B-063
6
B-063
3
R2-001
1
W(R2)
C-72
1
W(R)
C-65
1
W(B)
L(B)
B/R(B)
BR(B)
B/Y(B)
J3
J4
J15
B15
K25
B-072
B-072
B-072
B-056
B-073
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

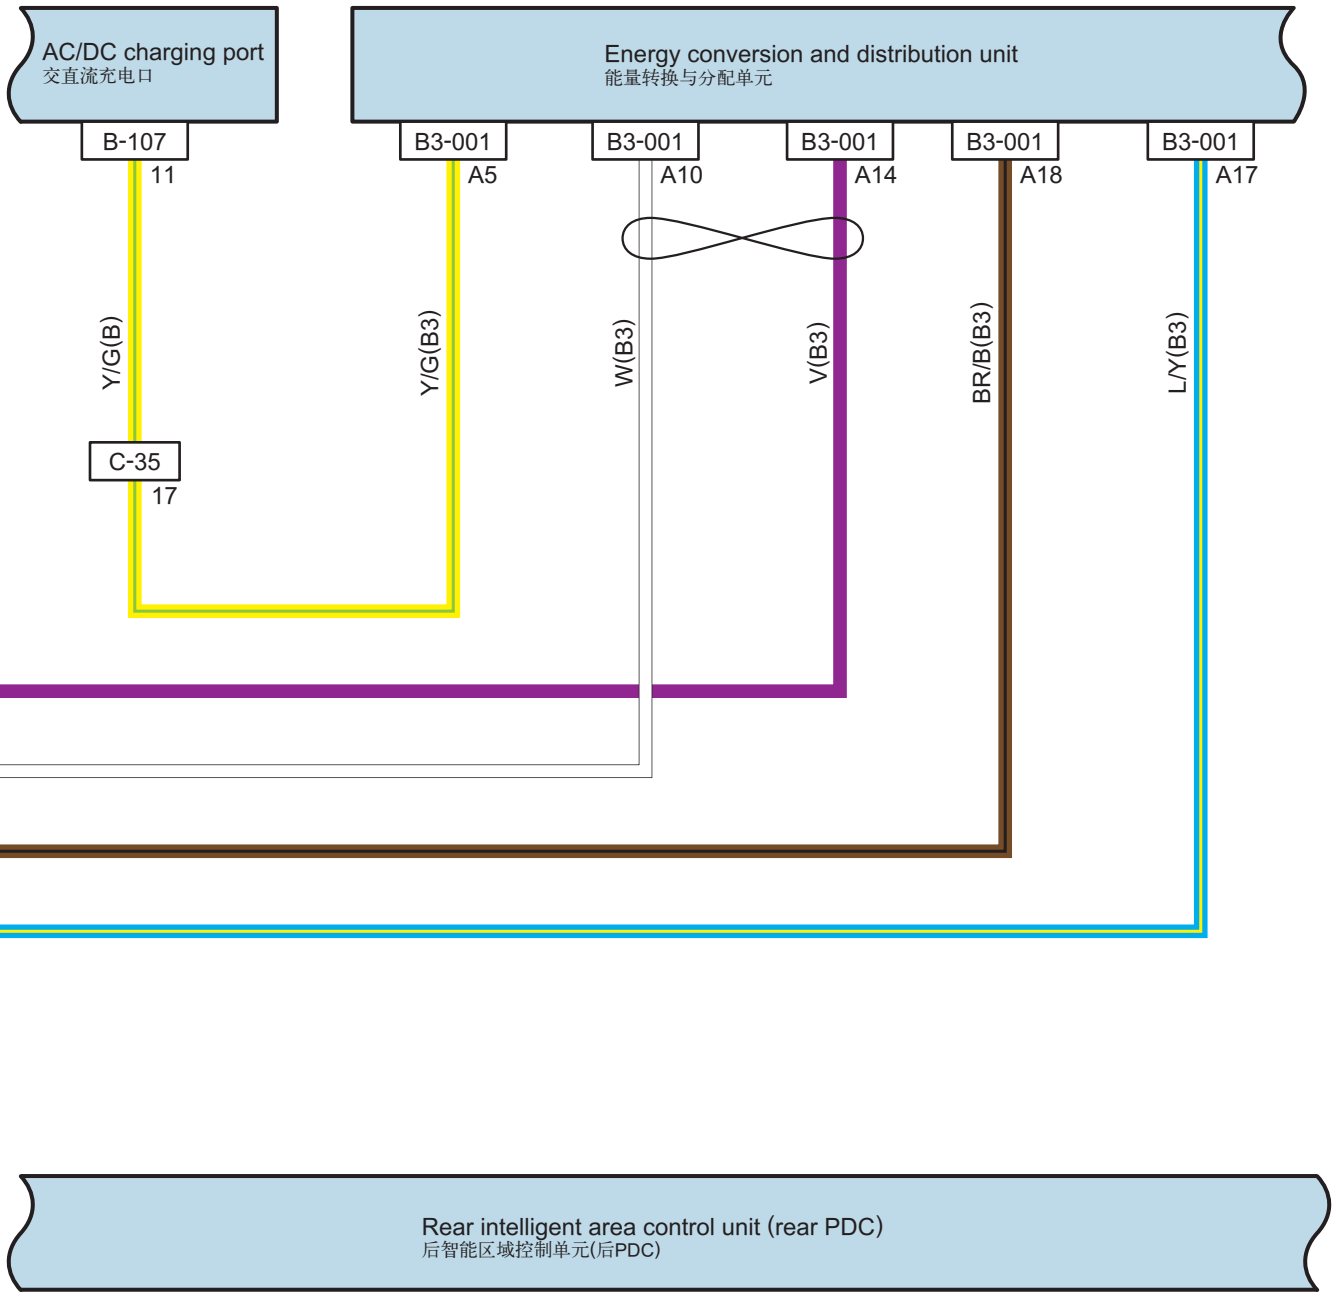

Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)
Rear right door control unit
右后车门控制单元
B-091
A20
B-065
A3
DR4-006
B2
W/L(DR4)
B/L(B)
R(B)
C-37
1
R/L(B)
H29
M22
C12
B-070
B-052
B-055
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

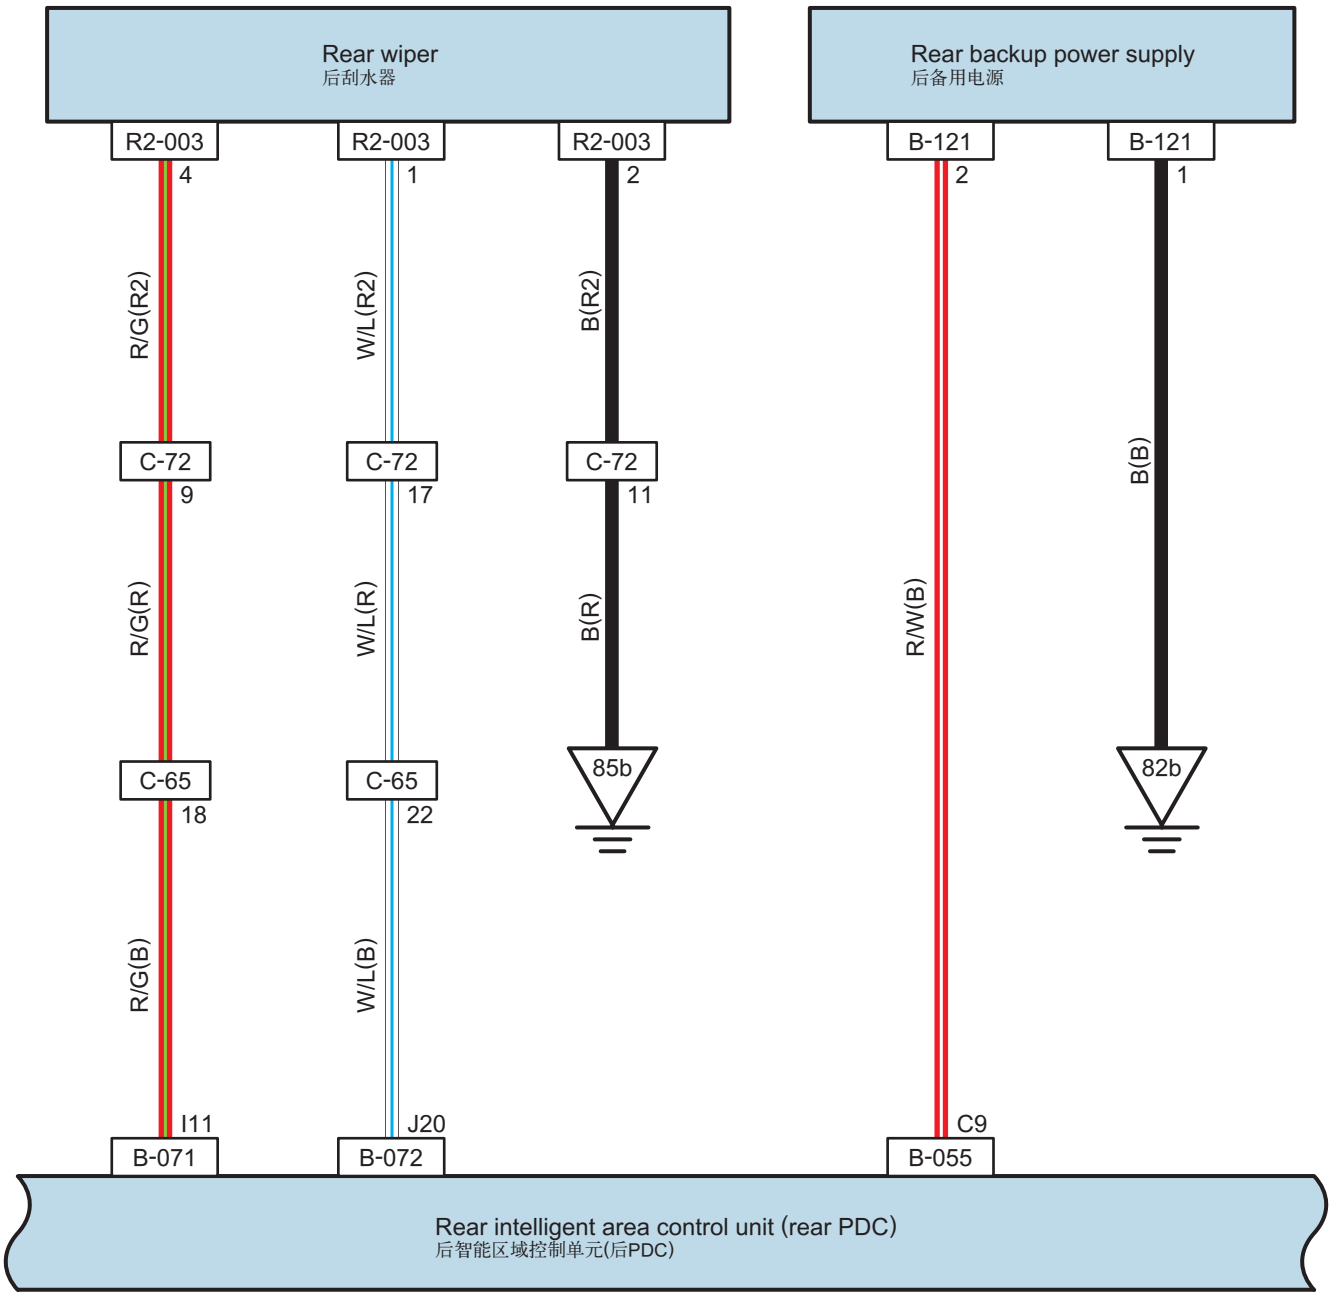

Low voltage service SW
低压维修开关
Rear left door control unit
左后车门控制单元
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-132
3
DR3-006
B2
B-024
B2
B-024
B1
W/L(DR3)
Y/G(B)
C-36
2
W/L(B)
W(B)
G(B)
I3
K26
L1
L2
B-071
B-073
B-057
B-057
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

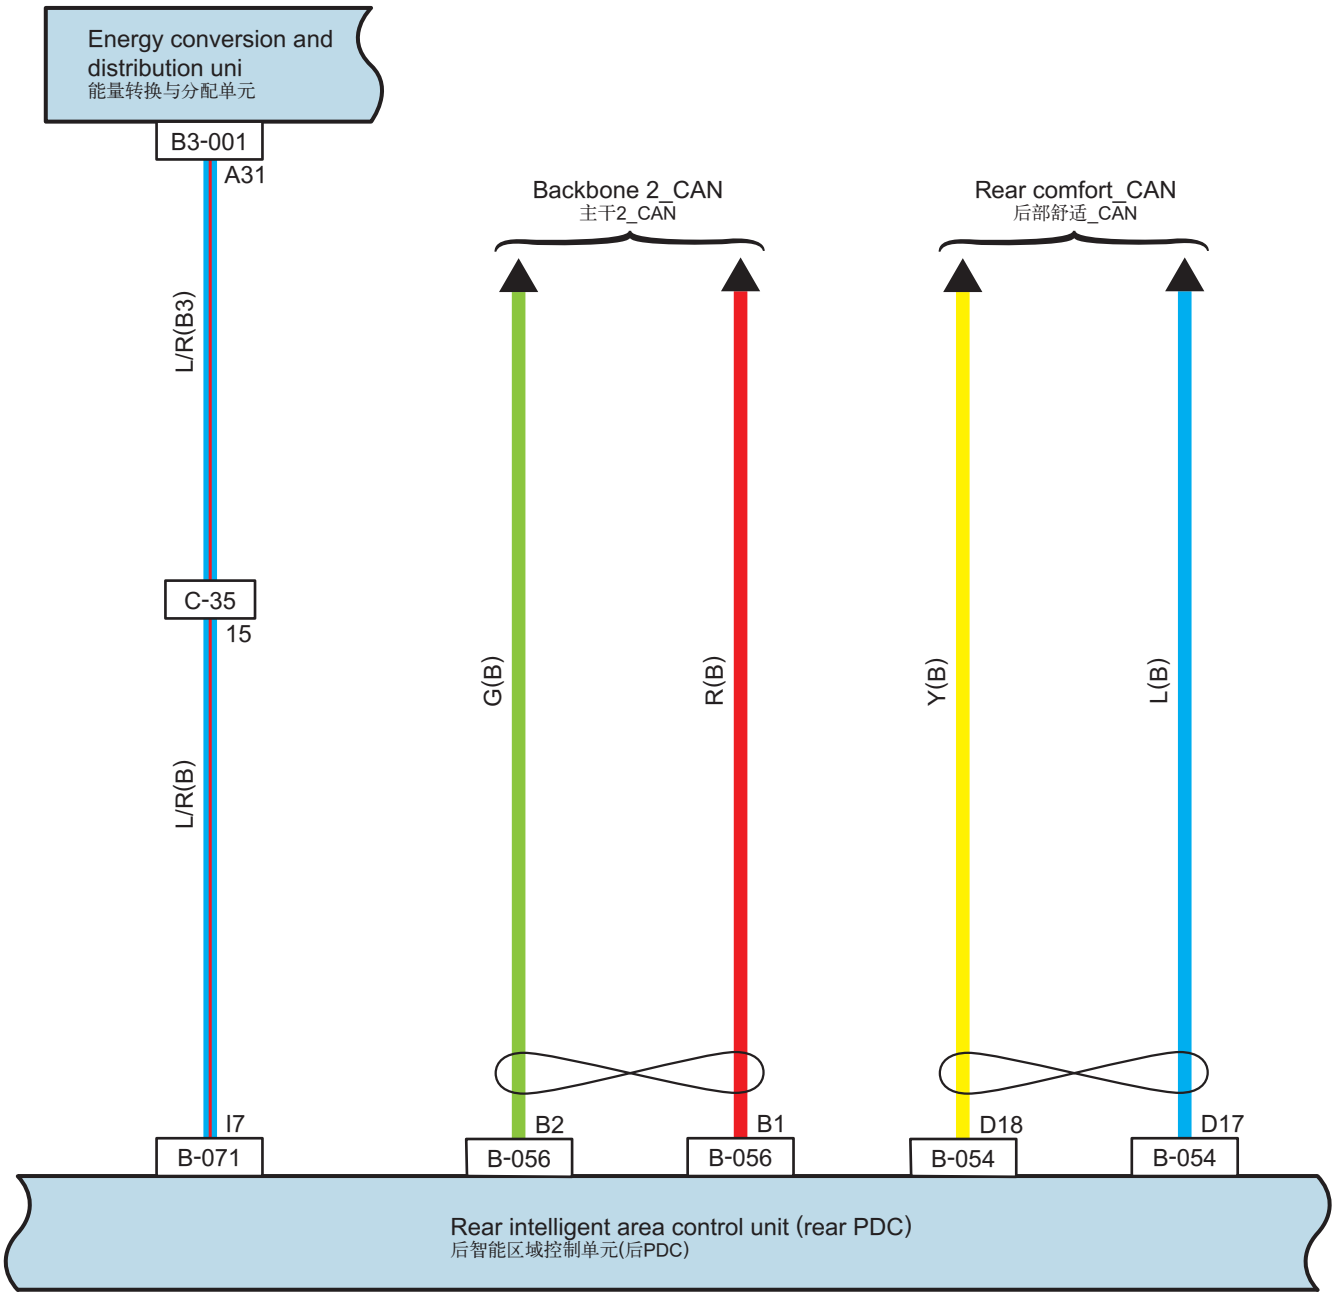

AC/DC charging port
交直流充电口
B-107
4
B-107
6
B-107
10
B-107
12
B-107
18
B-107
3
B/V(B)
L/G(B)
L/Y(B)
BR(B)
G/R(B)
GR(B)
E19
B-053
E18
B-053
E16
B-053
E15
B-053
E12
B-053
E17
B-053
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

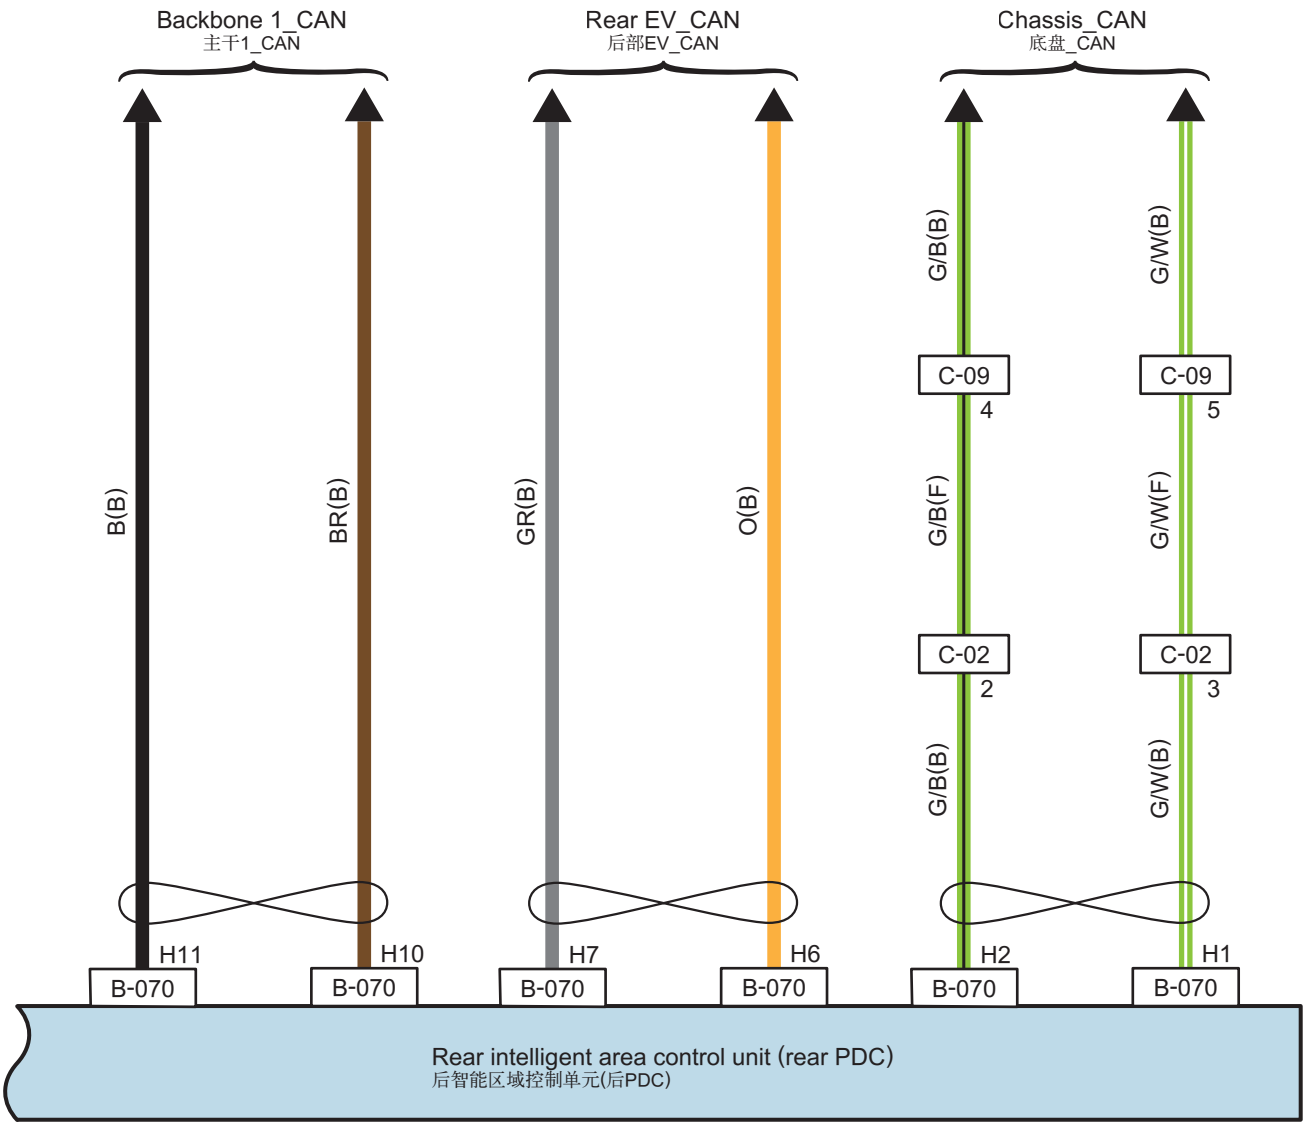

AC/DC charging port
交直流充电口
B-107
21
B-107
22
B-107
20
B-107
14
B-107
5
B-107
7
B(B)
B(B)
GR/G(B)
L/R(B)
G/L(B)
B(B)
B(B)
82b
E5
E22
E4
D8
B-053
B-053
B-053
B-054
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

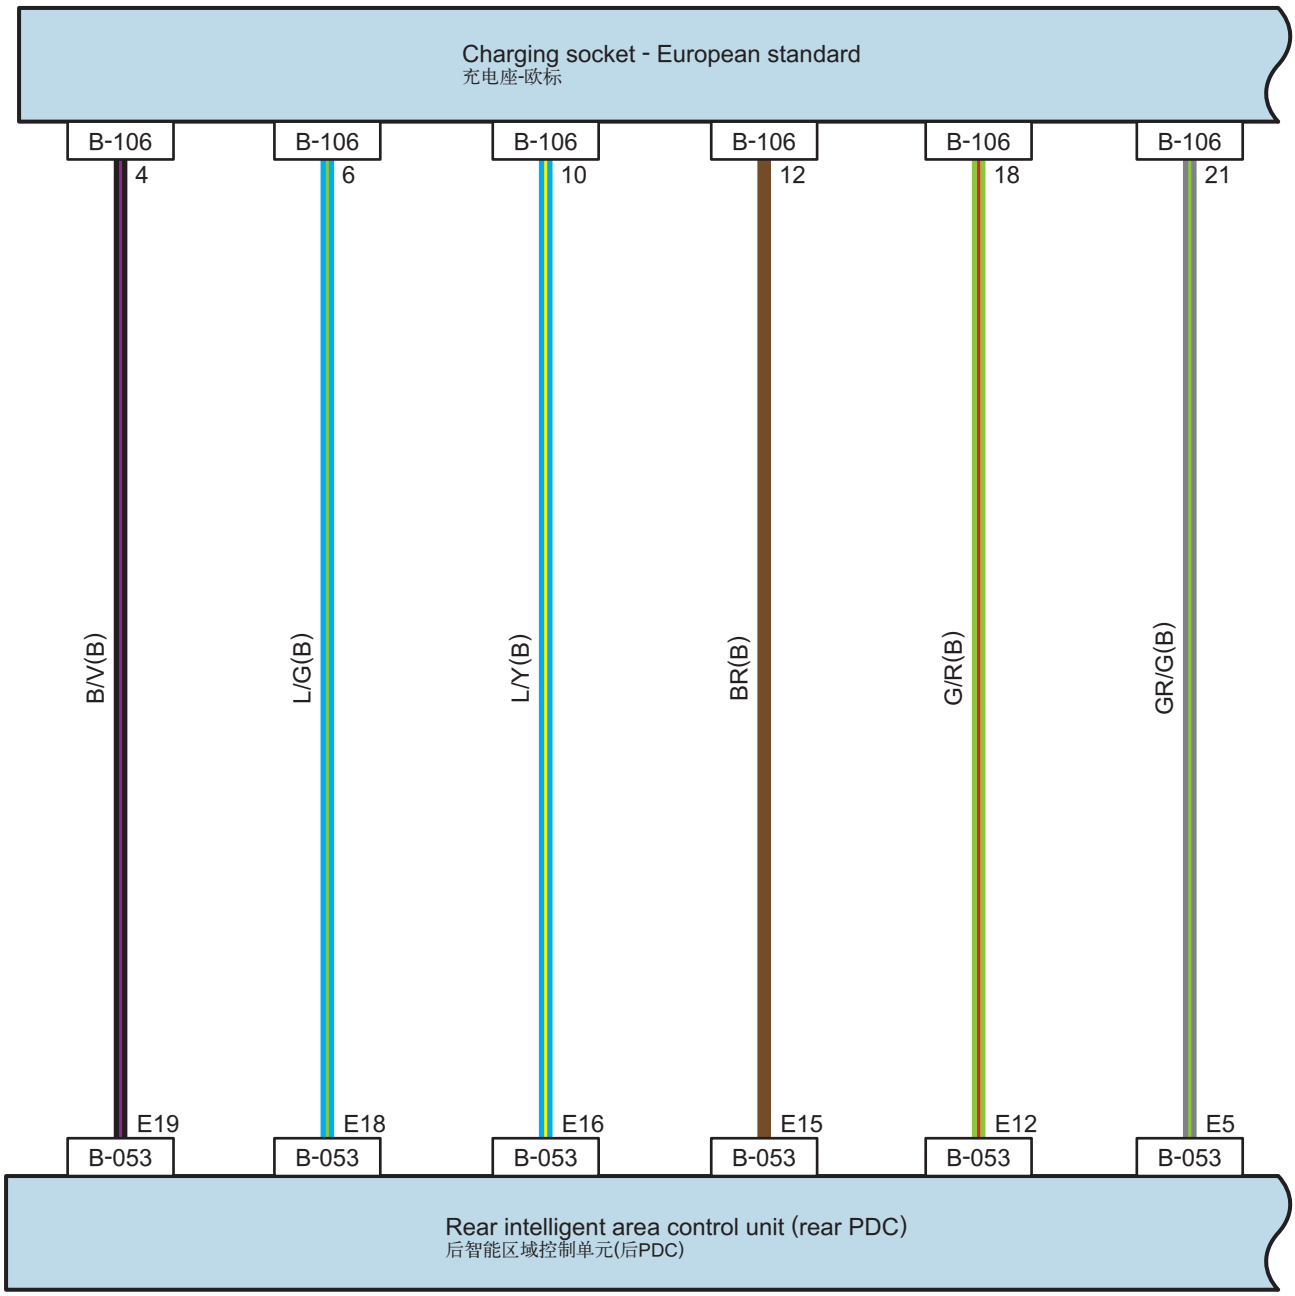

AC/DC charging port
交直流充电口
B-107
13
B-107
19
B-107
8
B-107
9
B-107
1
B-107
2
B(B)
B(B)
L/Y(B)
BR/B(B)
W(B)
V(B)
C-35
9
C-35
10
C-35
19
C-35
20
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

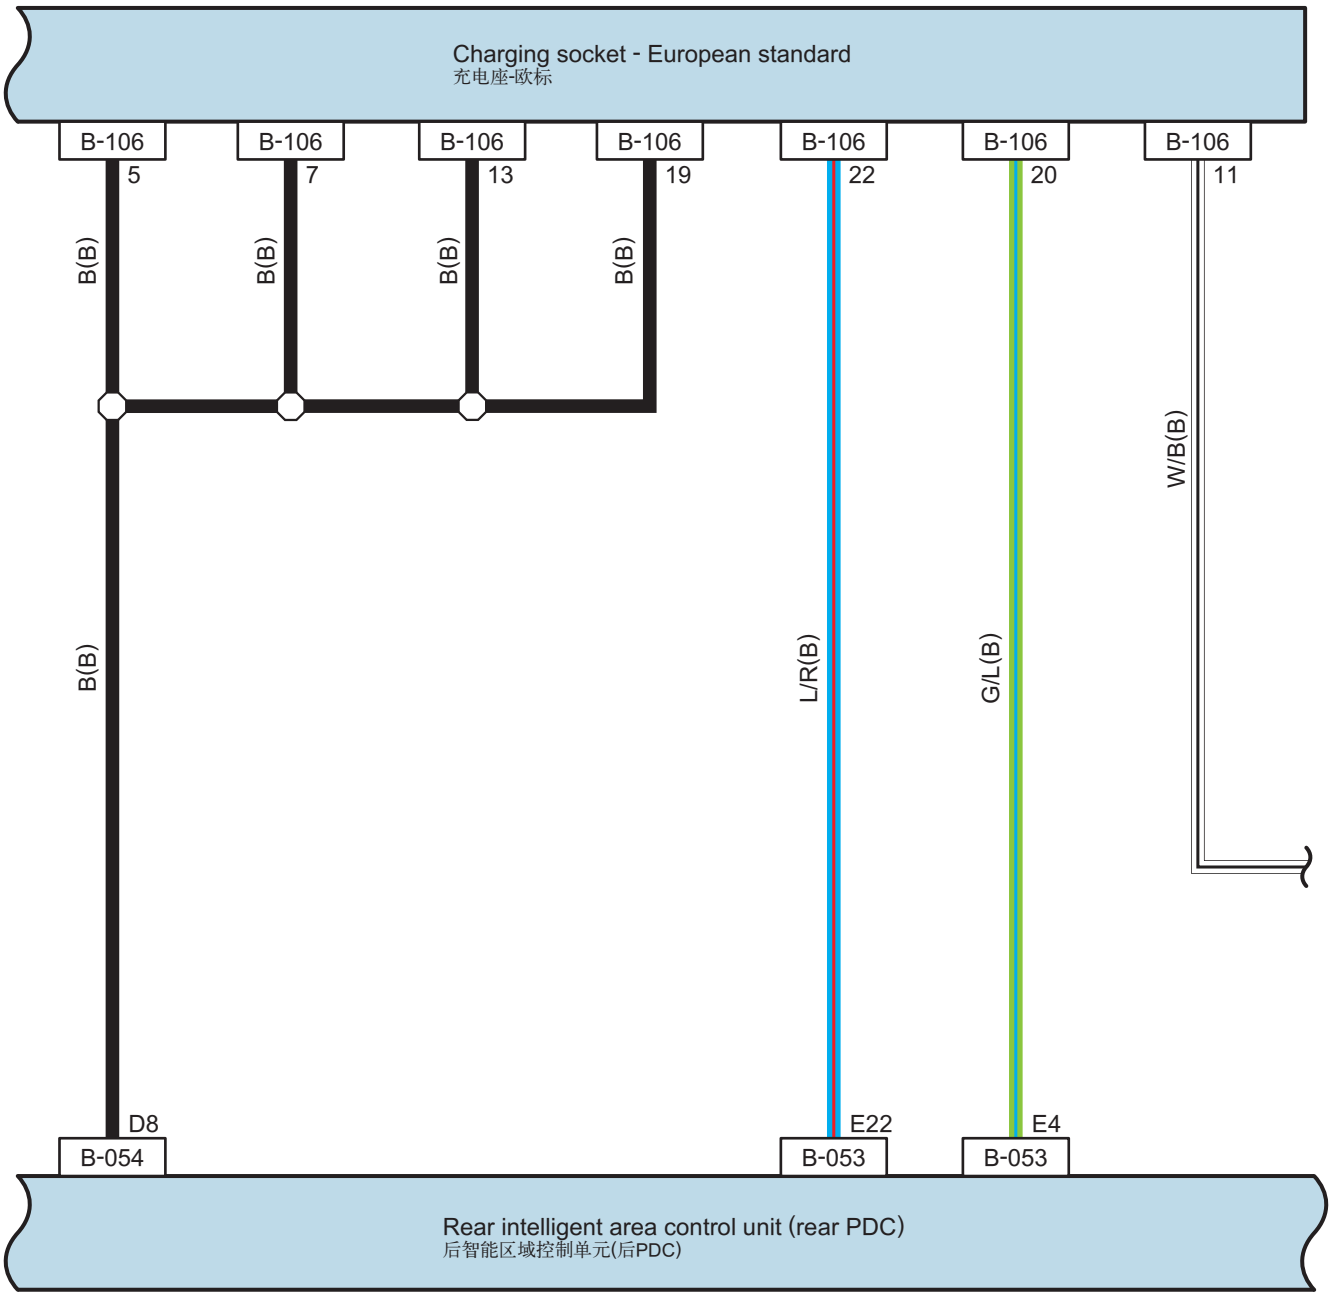

AC/DC charging port
交直流充电口
B-107
11
Energy conversion and distribution unit
能量转换与分配单元
B3-001
A5
B3-001
A10
B3-001
A14
B3-001
A18
B3-001
A17
Y/G(B)
Y/G(B3)
W(B3)
V(B3)
BR/B(B3)
L/Y(B3)
C-35
17
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

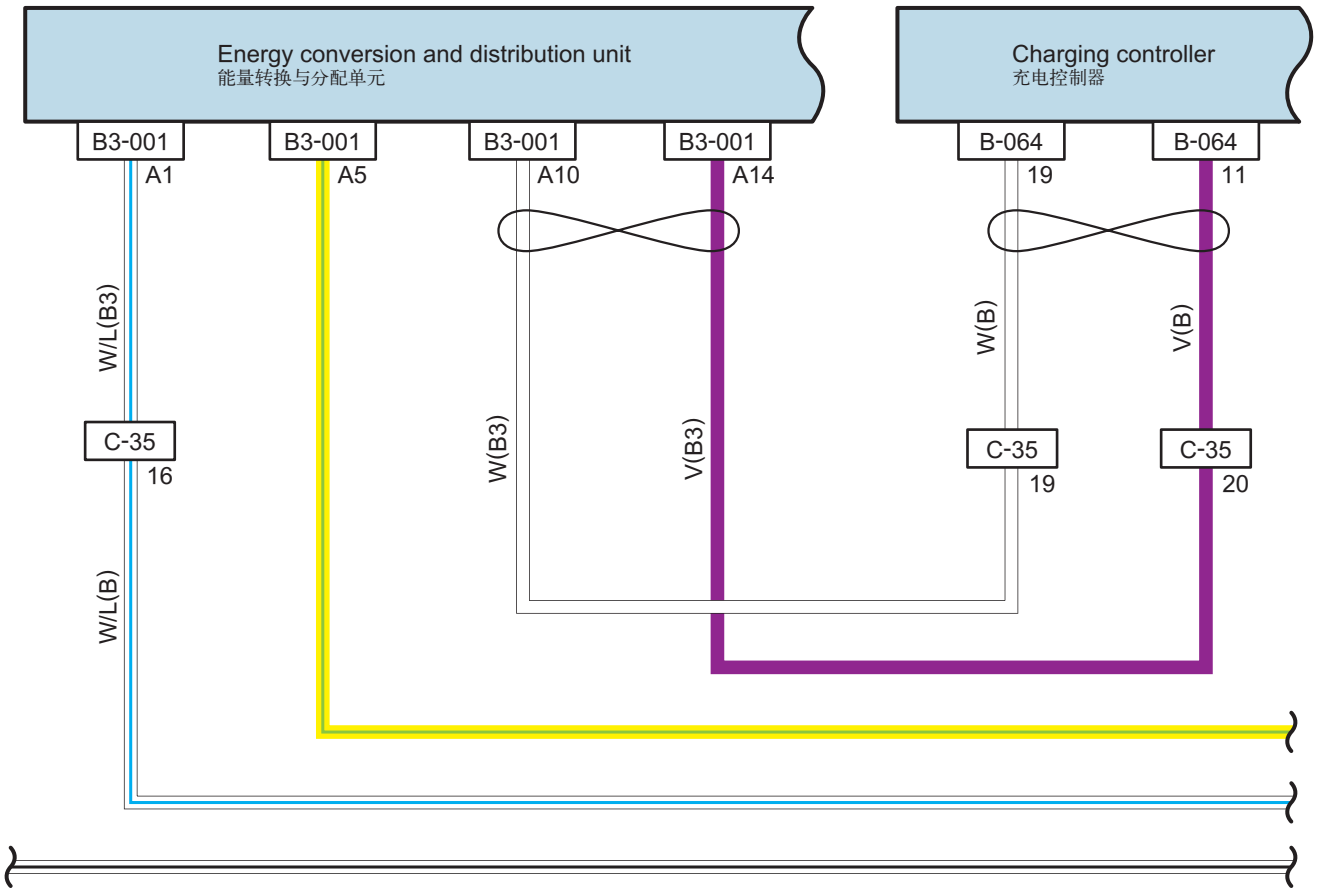

Rear wiper
后刮水器
Rear backup power supply
后备用电源
R2-003
4
R2-003
1
R2-003
2
B-121
2
B-121
1
R/G(R2)
W/L(R2)
B(R2)
B(B)
C-72
9
C-72
17
C-72
11
R/G(R)
W/L(R)
B(R)
R/W(B)
85b
82b
C-65
18
C-65
22
R/G(B)
W/L(B)
I11
J20
C9
B-071
B-072
B-055
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)


Energy conversion and distribution uni
能量转换与分配单元
B3-001
A31
L/R(B3)
C-35
15
L/R(B)
I7
B-071
Backbone 2_CAN
主干2_CAN
G(B)
R(B)
B2
B1
B-056
B-056
Rear comfort_CAN
后部舒适_CAN
Y(B)
L(B)
D18
D17
B-054
B-054
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

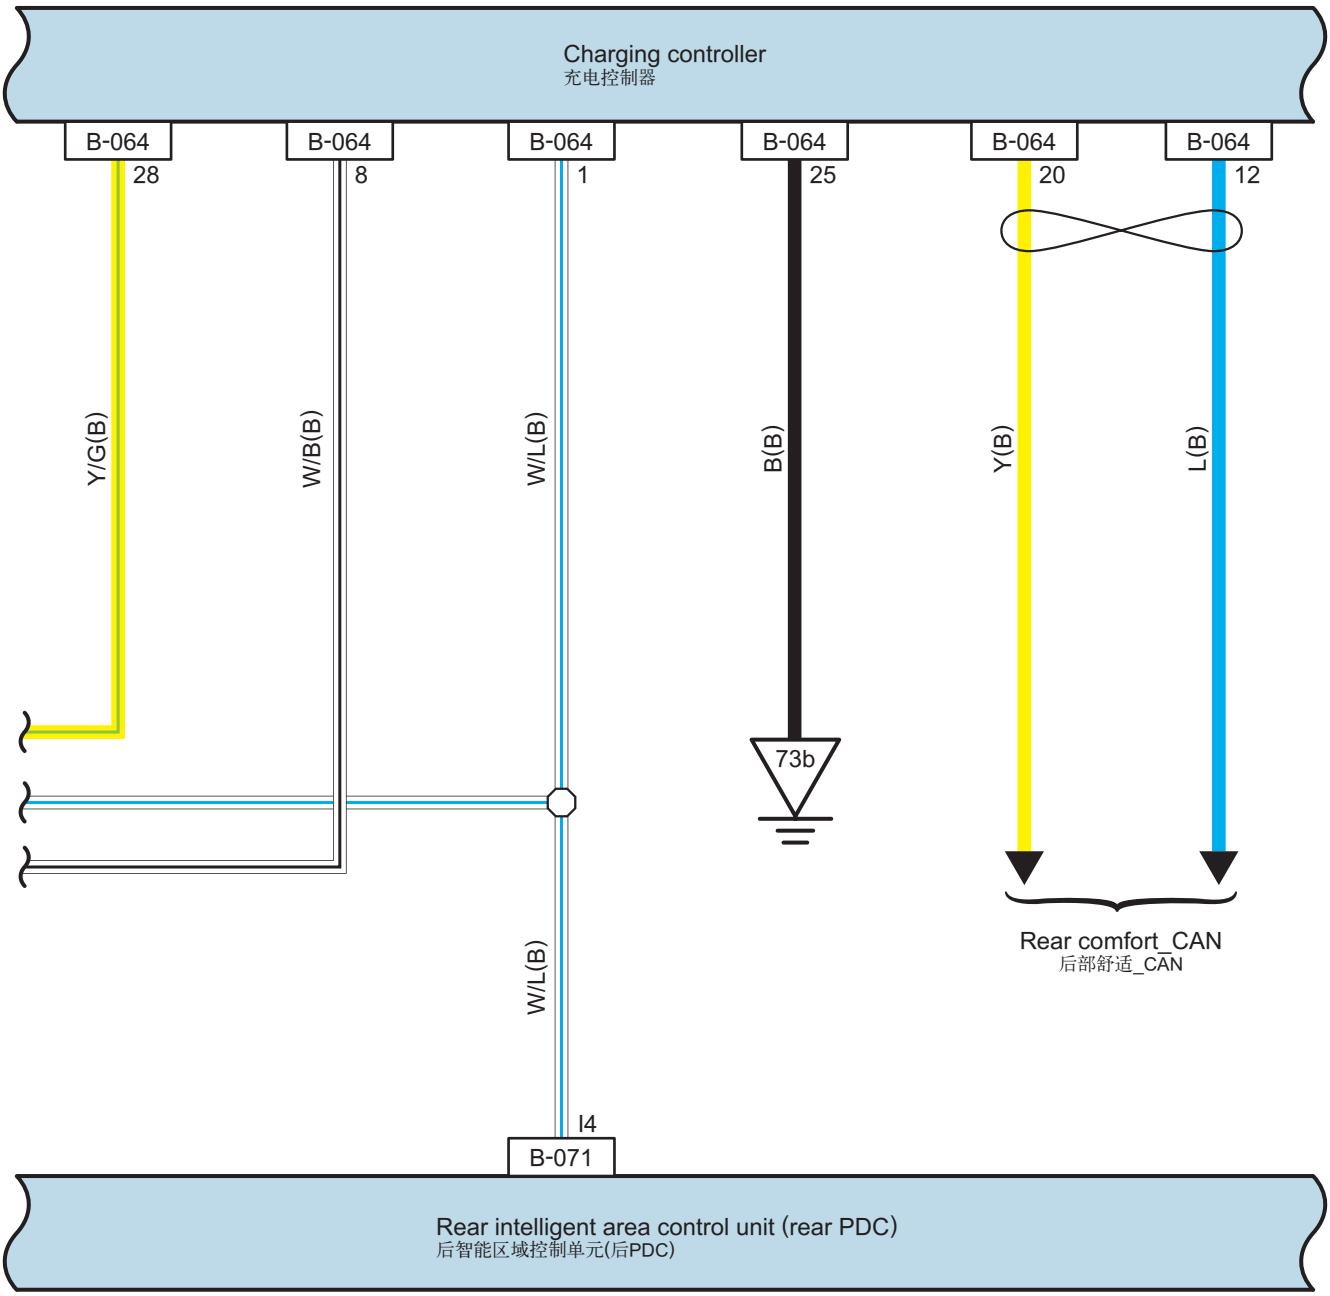

Backbone 1_CAN
主干1_CAN
Rear EV_CAN
后部EV_CAN
Chassis_CAN
底盘_CAN
B(B)
BR(B)
GR(B)
O(B)
G/B(B)
G/W(B)
G/B(F)
G/W(F)
G/B(B)
G/W(B)
C-09
4
C-09
5
C-02
2
C-02
3
H11
H10
H7
H6
H2
H1
B-070
B-070
B-070
B-070
B-070
B-070
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

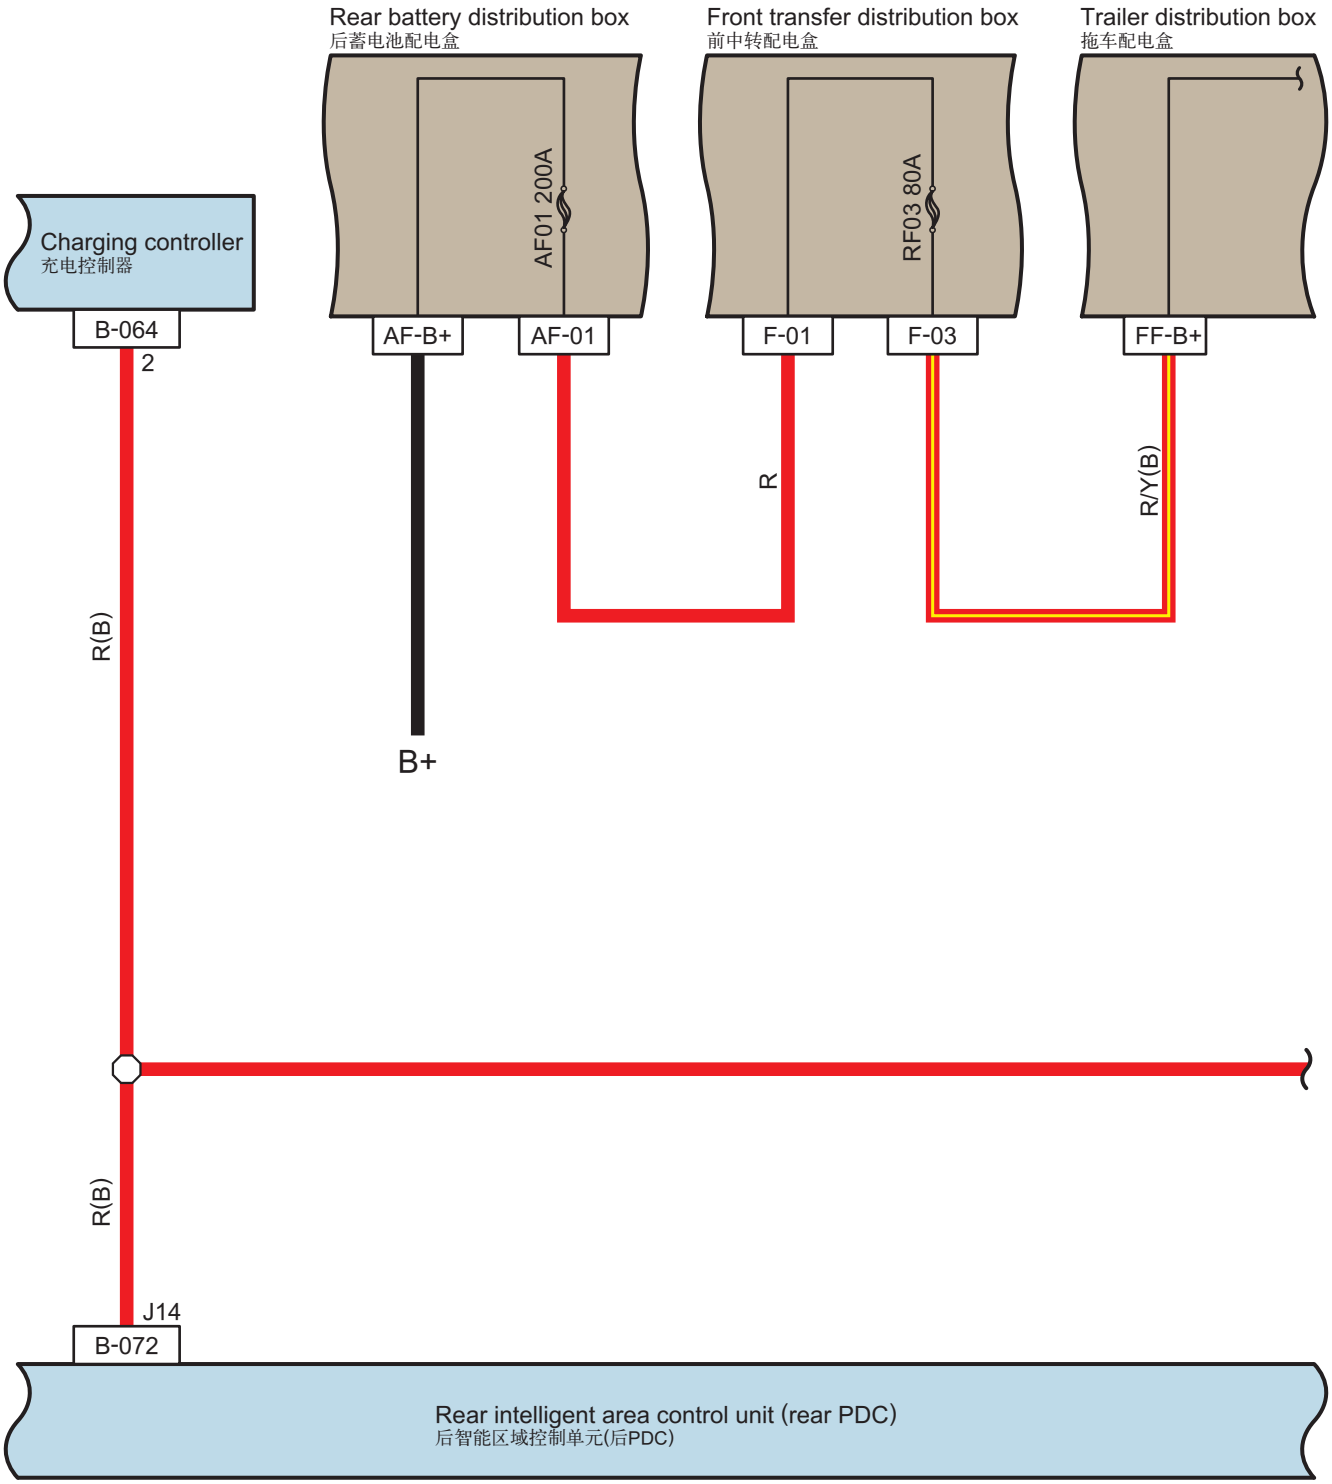

Charging socket - European standard
充电座-欧标
B-106
4
B-106
6
B-106
10
B-106
12
B-106
18
B-106
21
B/V(B)
L/G(B)
L/Y(B)
BR(B)
G/R(B)
GR/G(B)
E19
E18
E16
E15
E12
E5
B-053
B-053
B-053
B-053
B-053
B-053
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

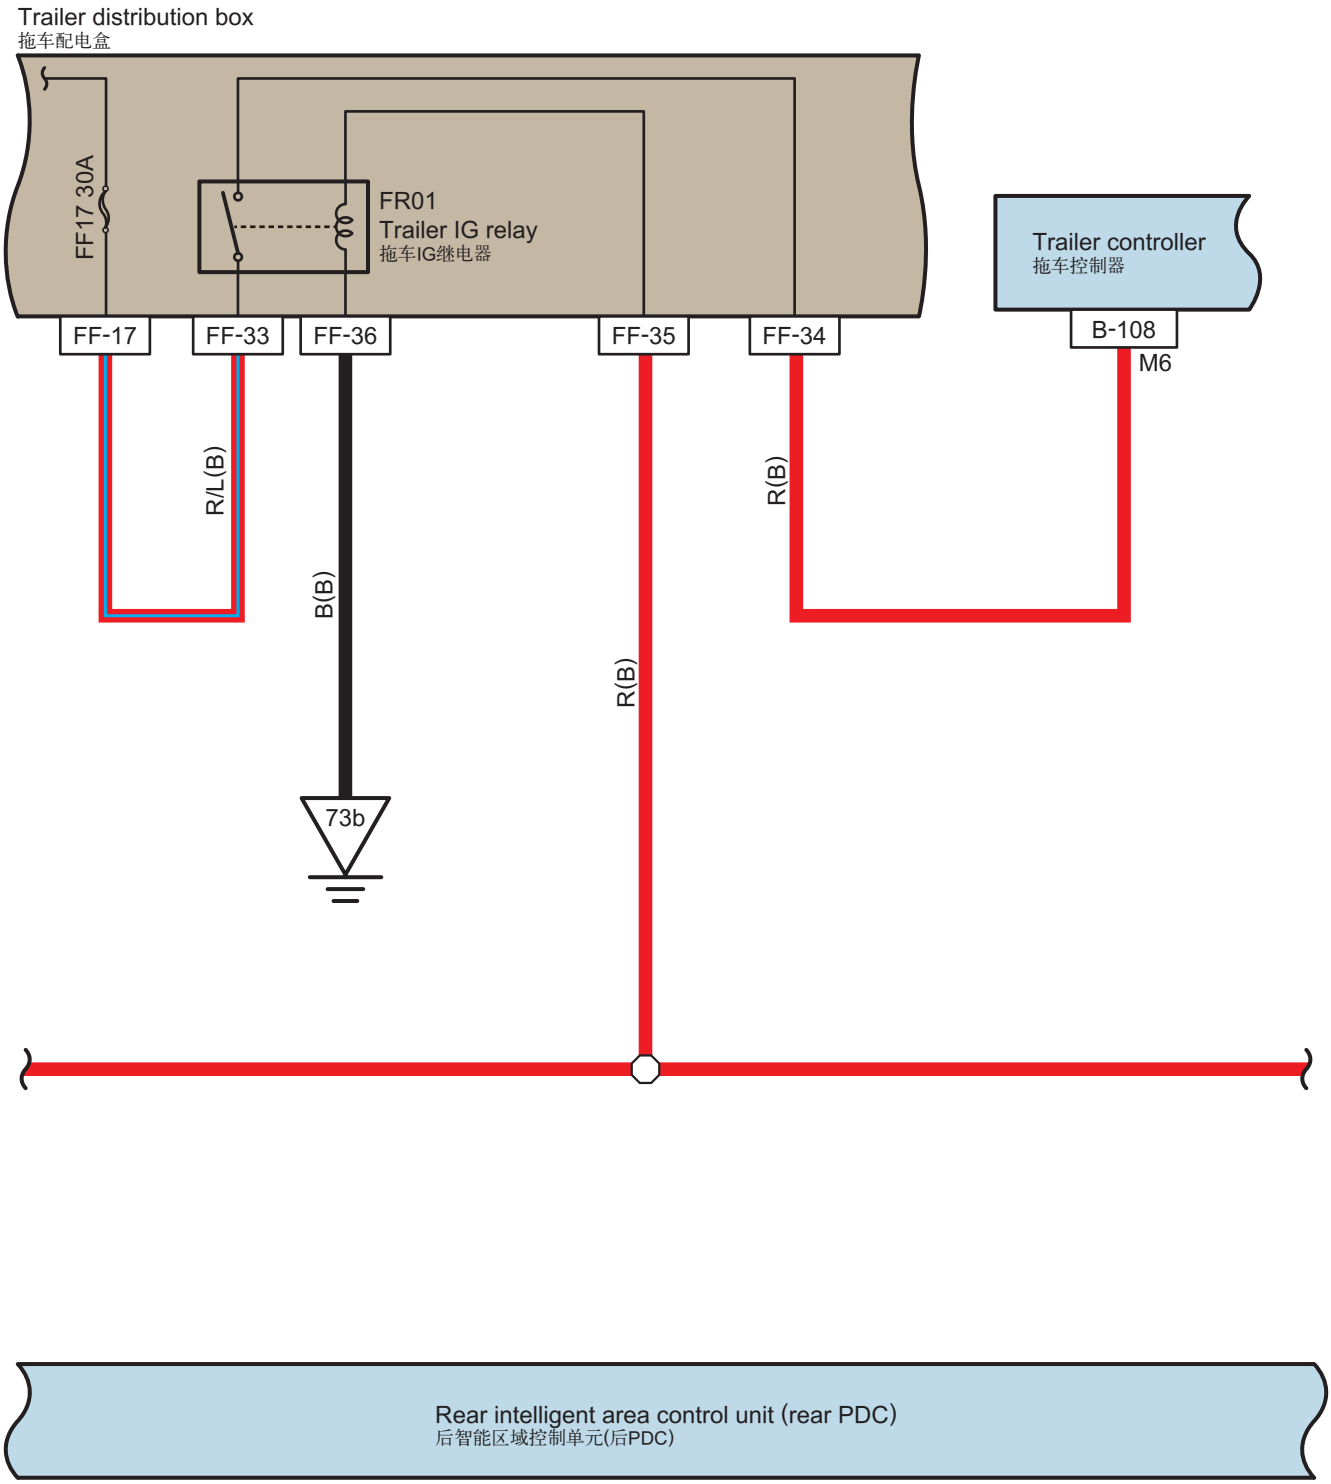

Charging socket - European standard
充电座-欧标
B-106
5
B-106
7
B-106
13
B-106
19
B-106
22
B-106
20
B-106
11
B(B)
B(B)
B(B)
B(B)
B(B)
L/R(B)
G/L(B)
W/B(B)
D8
B-054
E22
B-053
E4
B-053
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

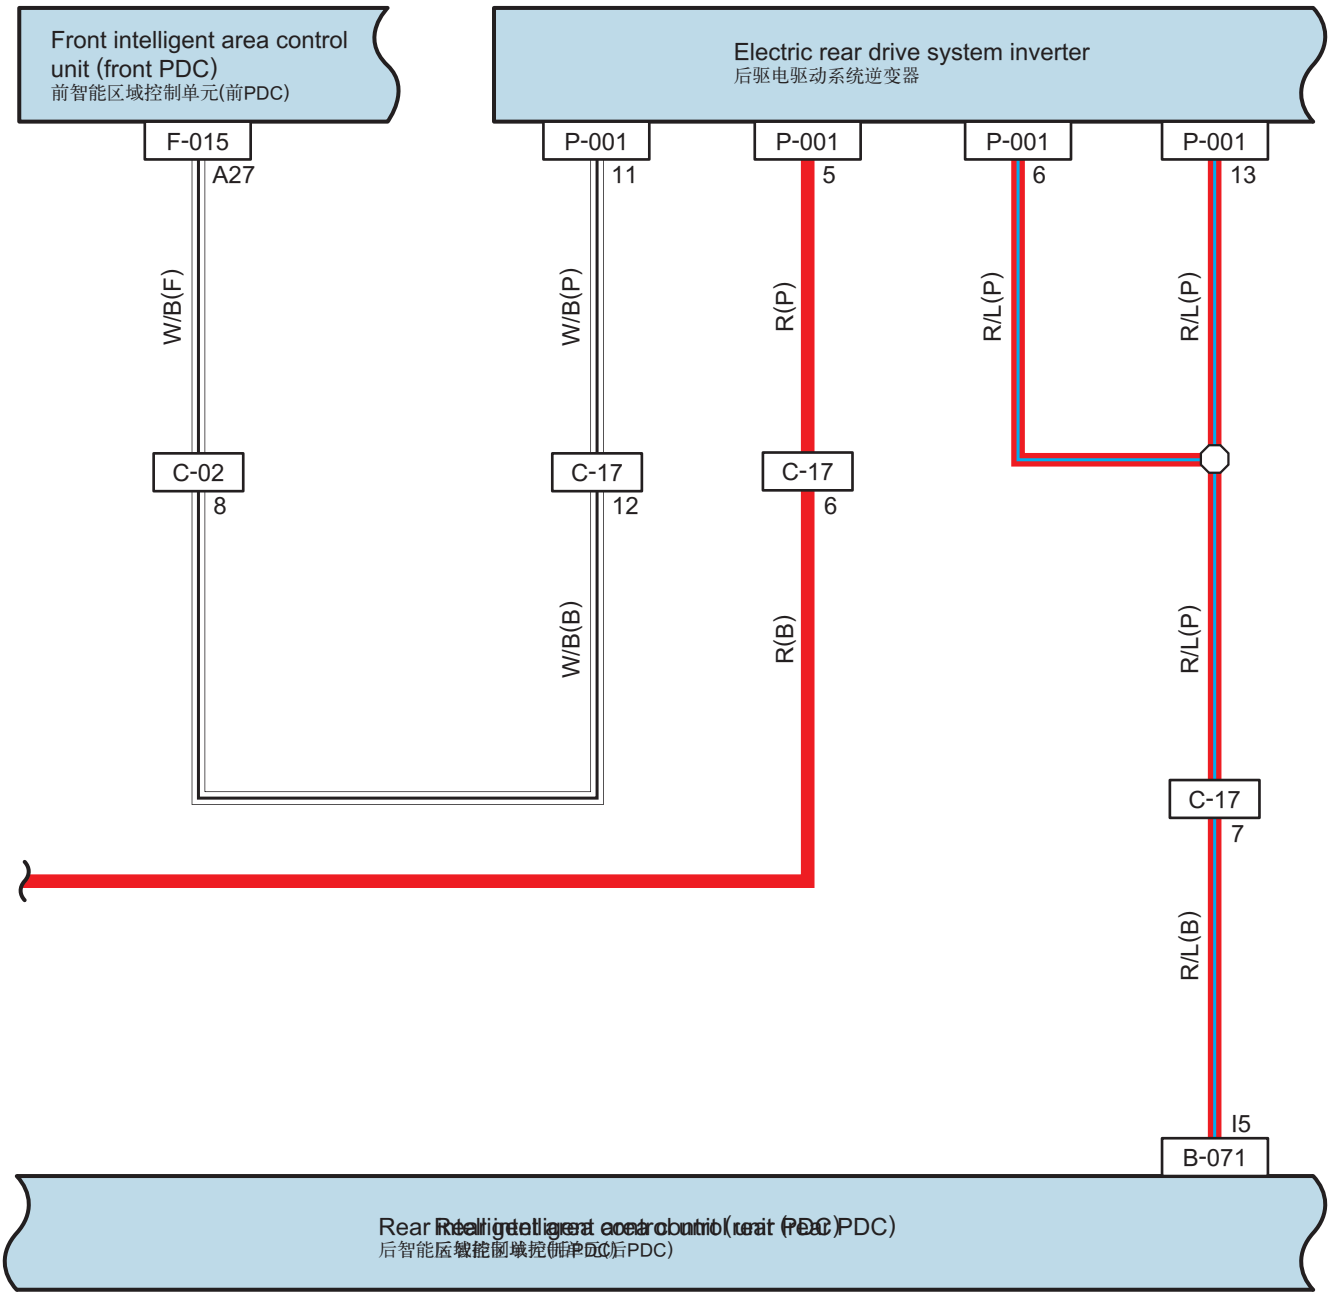


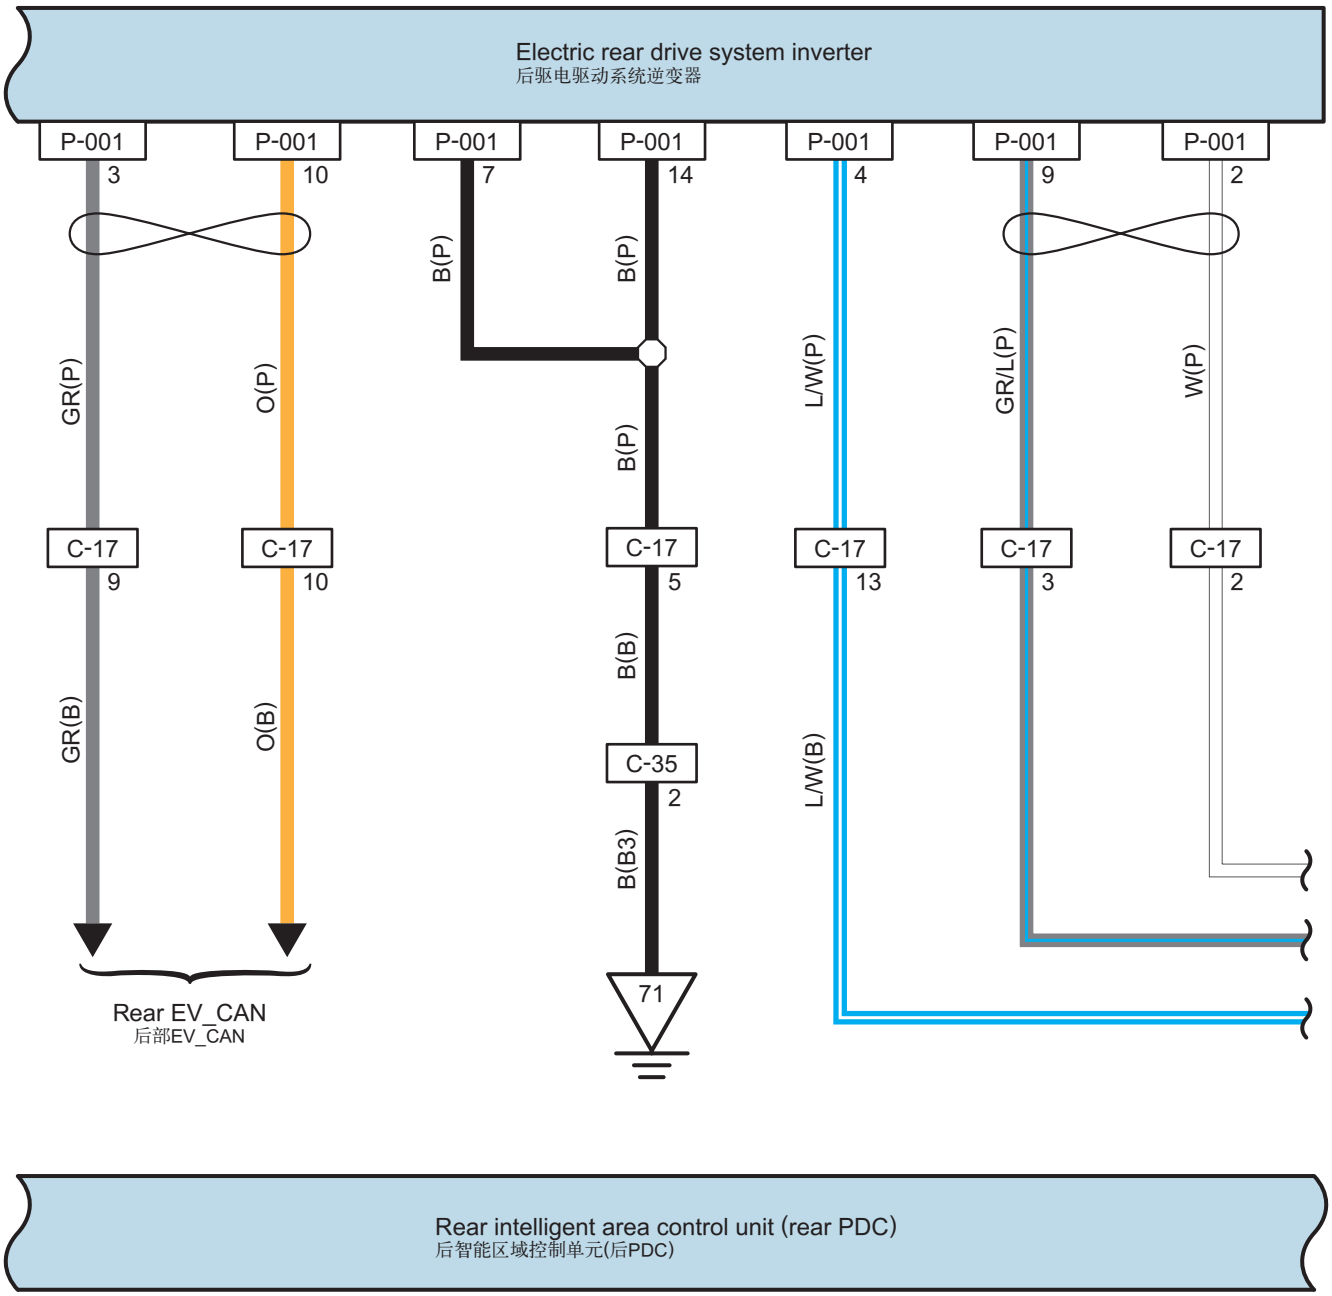
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

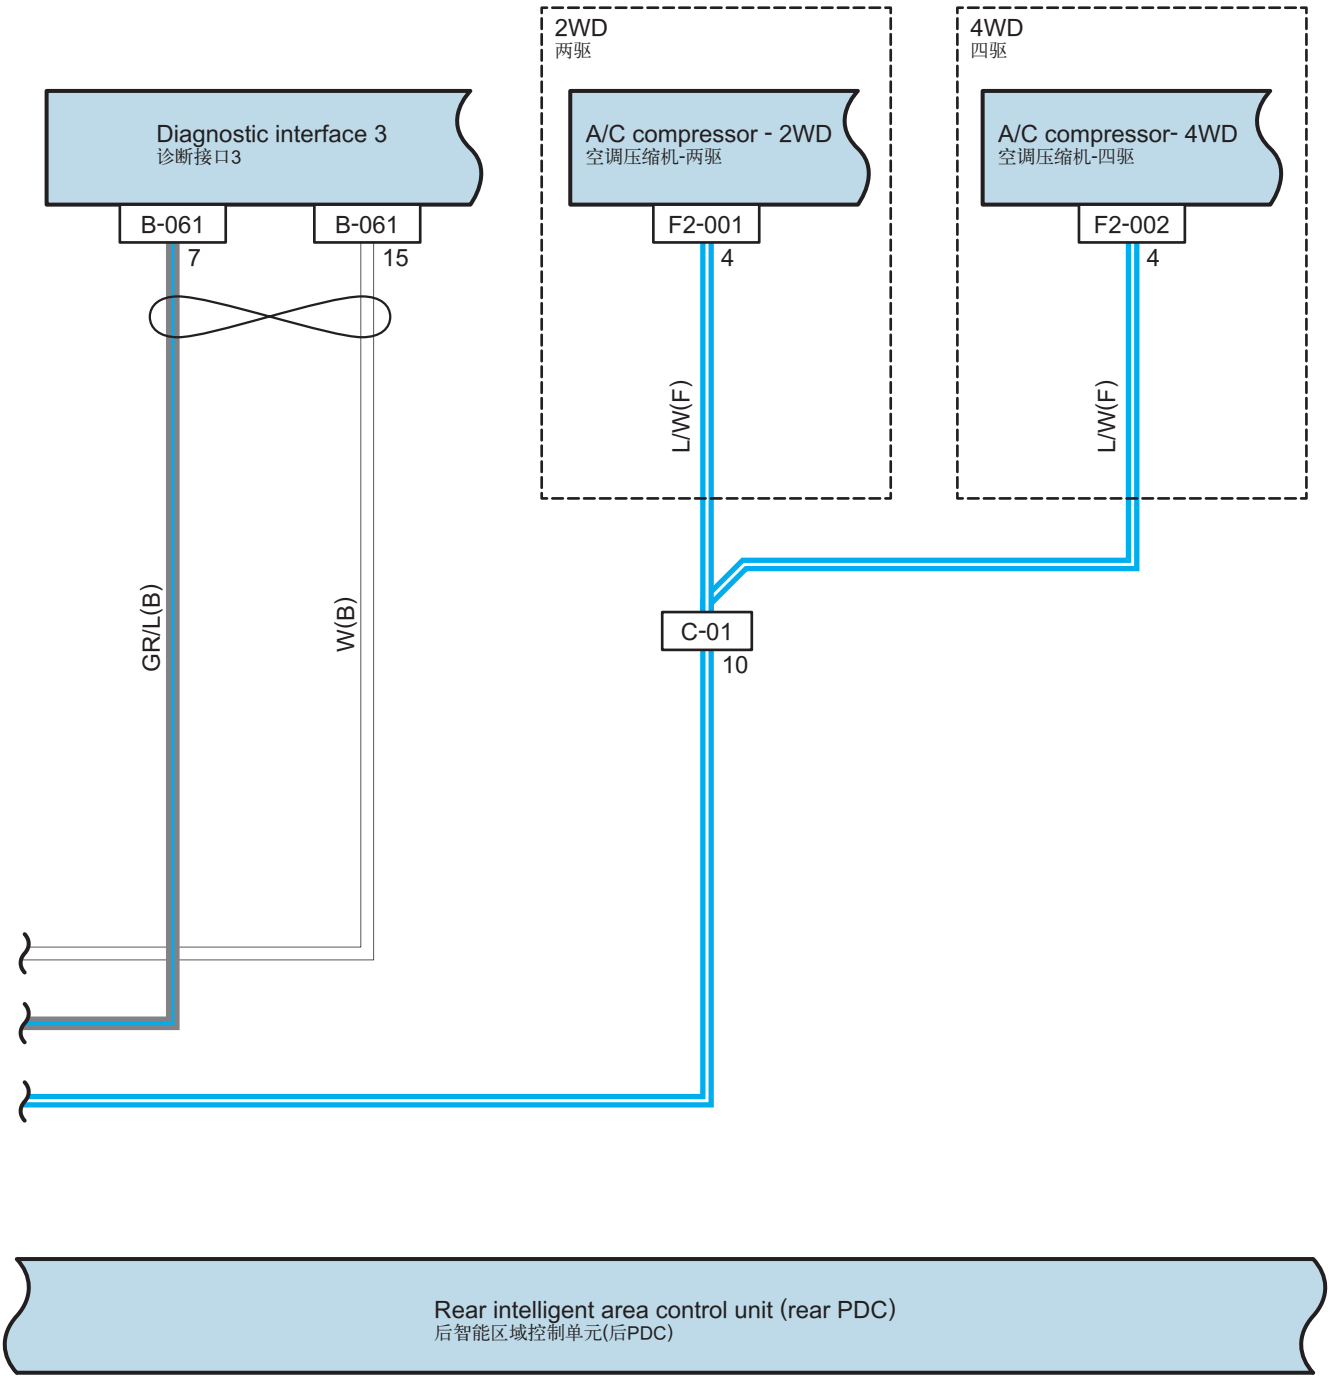

Charging controller
充电控制器
B-064
28
B-064
8
B-064
1
B-064
25
B-064
20
B-064
12
Y/G(B)
W/B(B)
W/L(B)
B(B)
Y(B)
L(B)
73b
Rear comfort_CAN
后部舒适_CAN
W/L(B)
I4
B-071
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

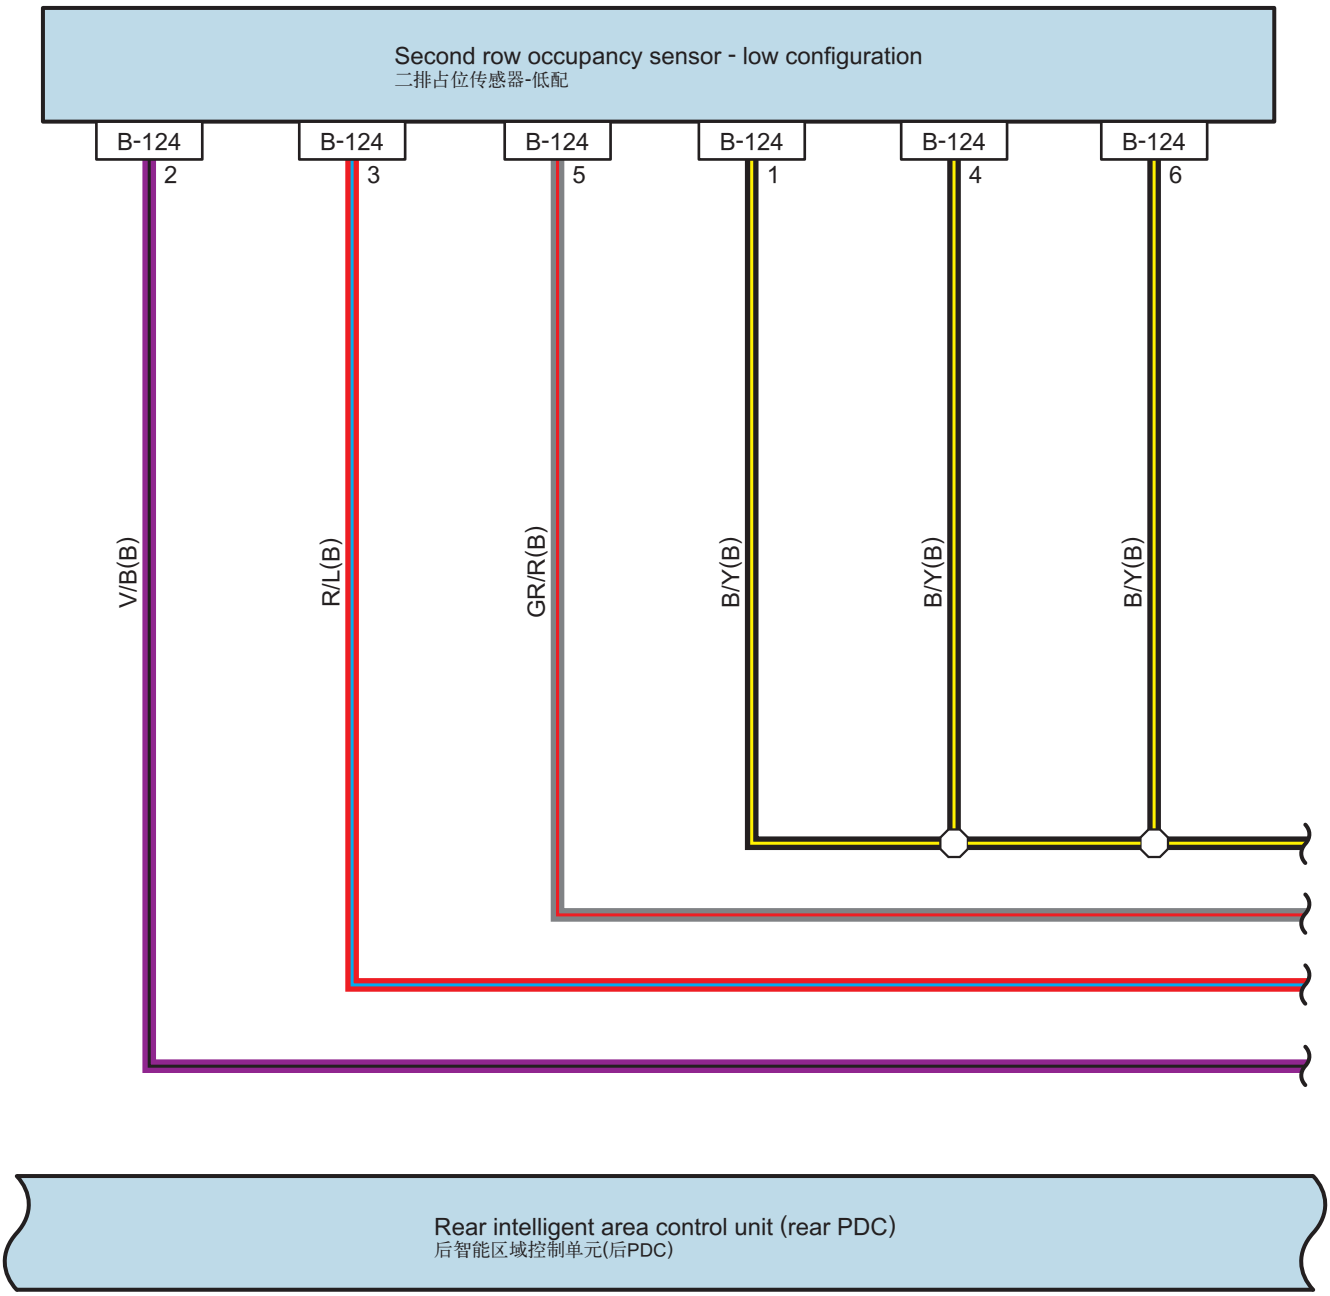

Rear battery distribution box
后蓄电池配电盒
Front transfer distribution box
前中转配电盒
Trailer distribution box
拖车配电盒
AF01 200A
RF03 80A
Charging controller
充电控制器
B-064
2
AF-B+
AF-01
F-01
F-03
FF-B+
R
R/Y(B)
R(B)
B+
R(B)
J14
B-072
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

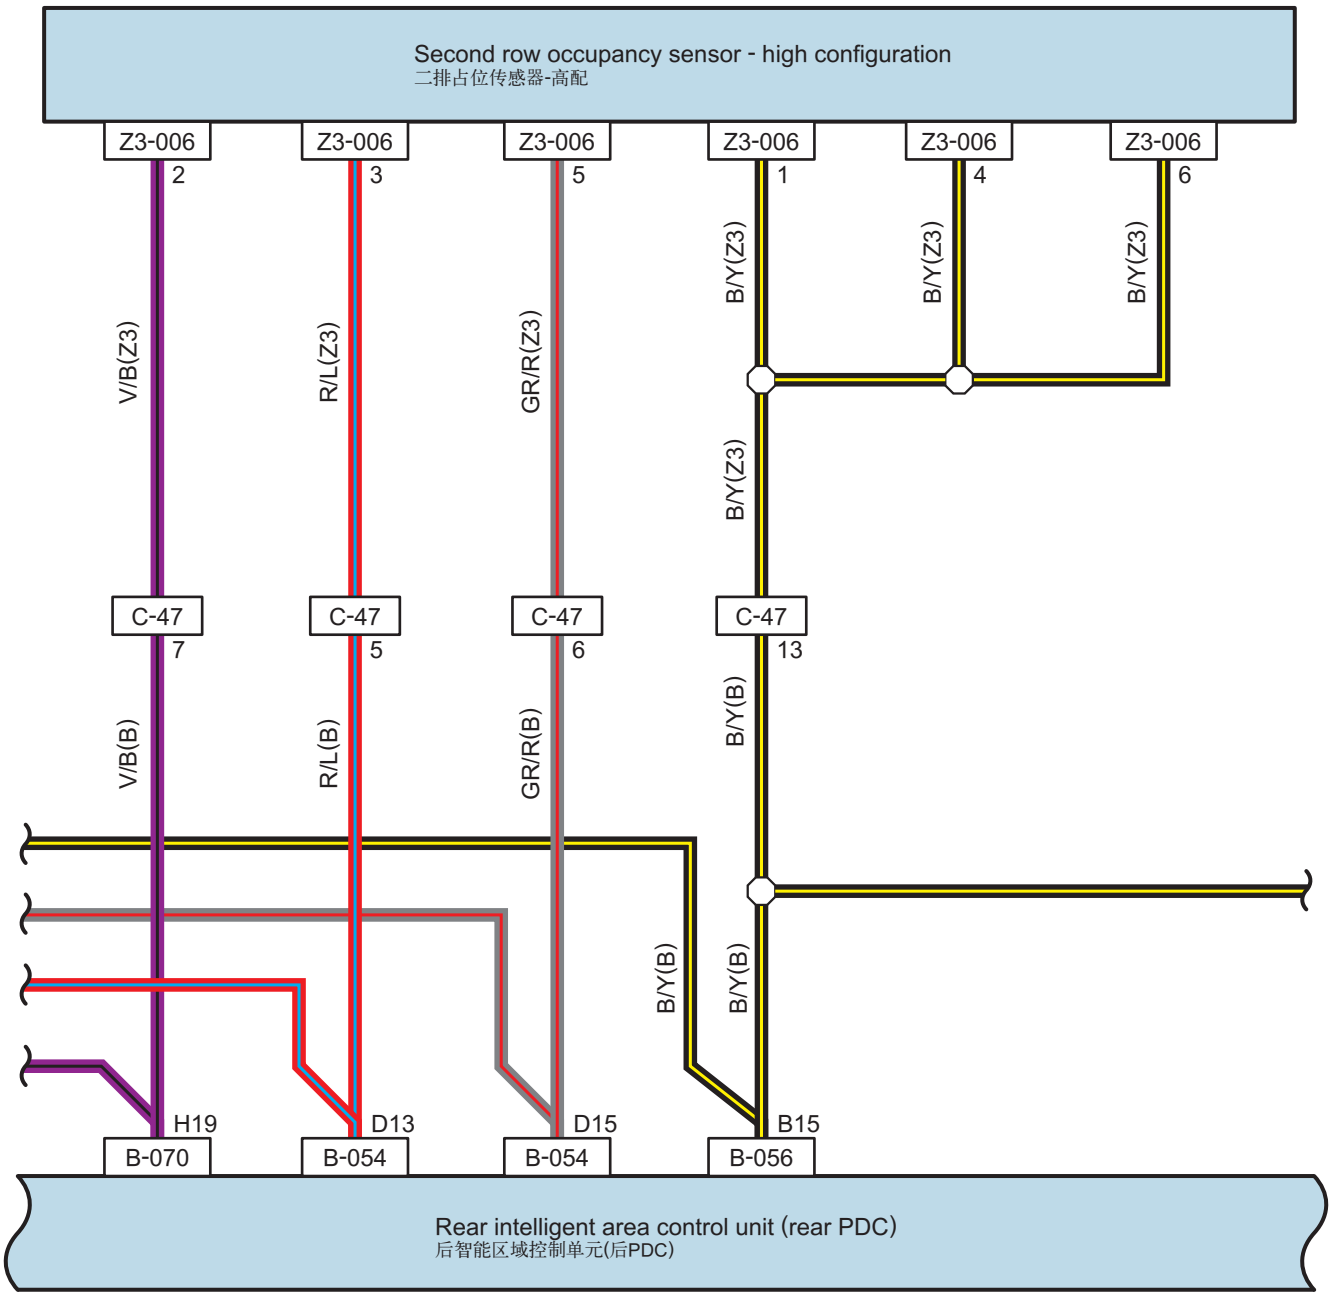

Trailer distribution box
拖车配电盒
FF17 30A
FR01
Trailer IG relay
拖车IG继电器
Trailer controller
拖车控制器
B-108
M6
FF-17
FF-33
FF-36
FF-35
FF-34
R/L(B)
B(B)
R(B)
R(B)
73b
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

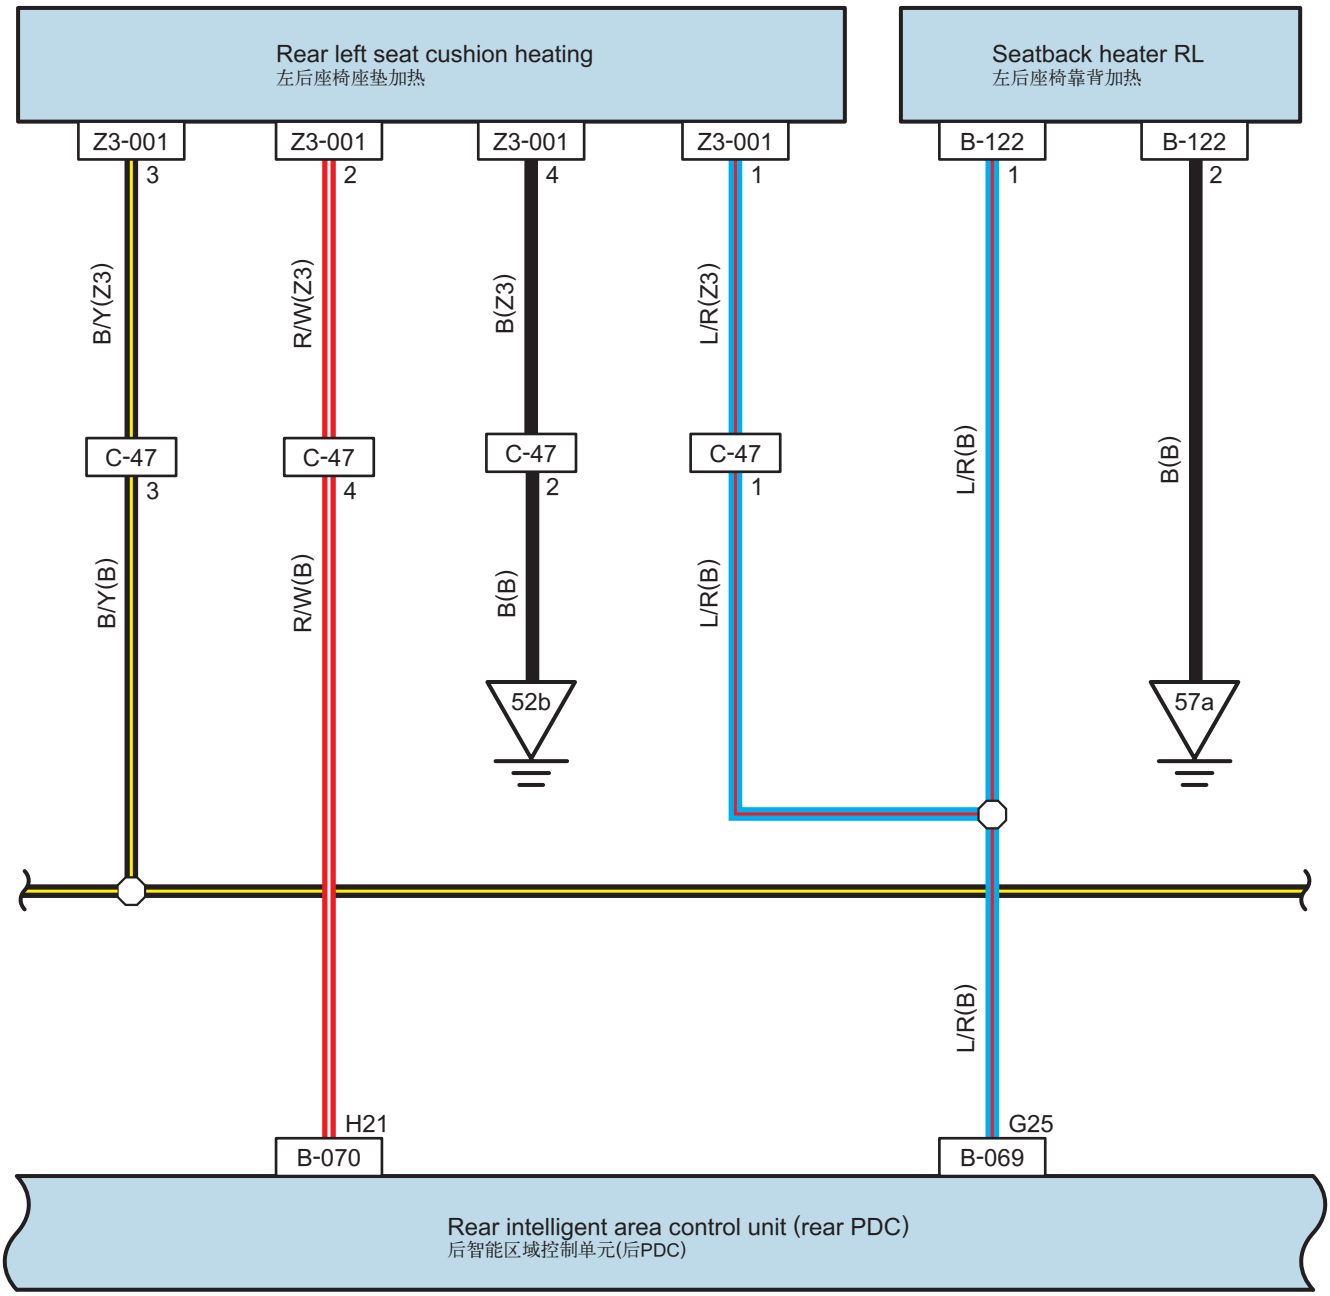

Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
Electric rear drive system inverter
后驱电驱动系统逆变器
F-015
A27
P-001
11
P-001
5
P-001
6
P-001
13
W/B(F)
W/B(P)
R(P)
R/L(P)
R/L(P)
C-02
8
C-17
12
C-17
6
W/B(B)
R(B)
R/L(P)
C-17
7
R/L(B)
I5
B-071
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

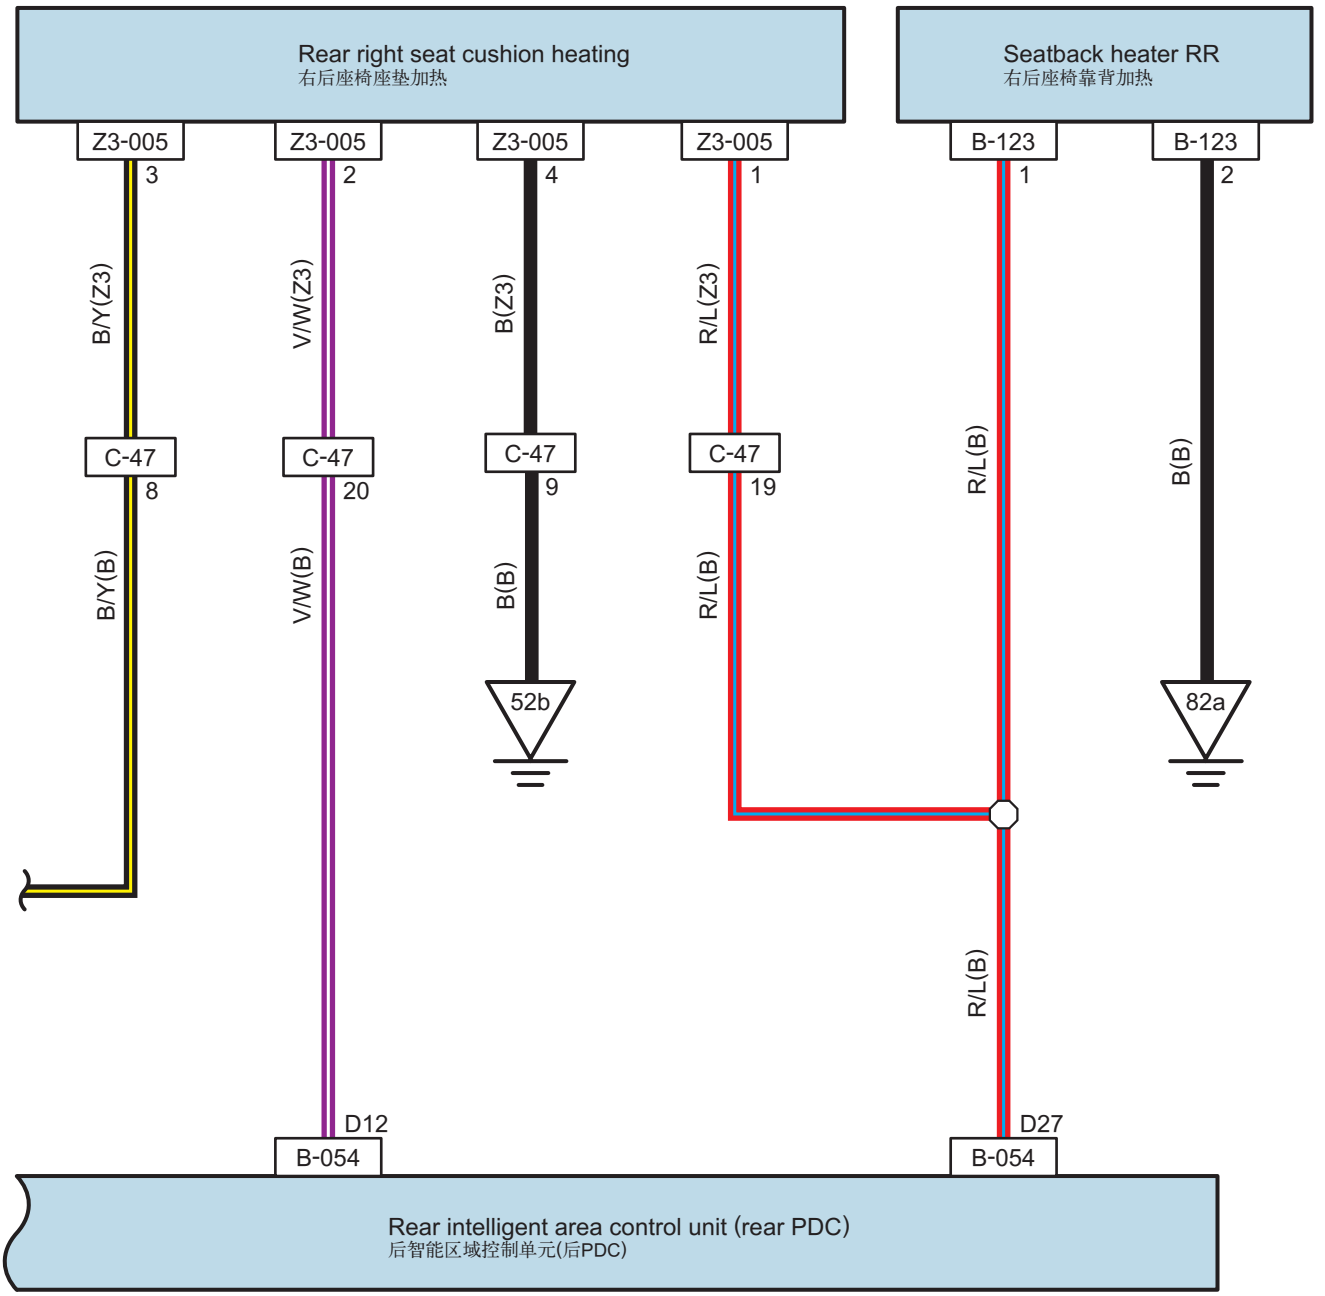

Electric rear drive system inverter
后驱电驱动系统逆变器
P-001
3
P-001
10
P-001
7
P-001
14
P-001
4
P-001
9
P-001
2
B(P)
B(P)
B(P)
L/W(P)
GR/L(P)
W(P)
GR(P)
O(P)
C-17
9
C-17
10
C-17
5
C-17
13
C-17
3
C-17
2
GR(B)
O(B)
B(B)
C-35
2
B(B3)
L/W(B)
71
Rear EV_CAN
后部EV_CAN
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

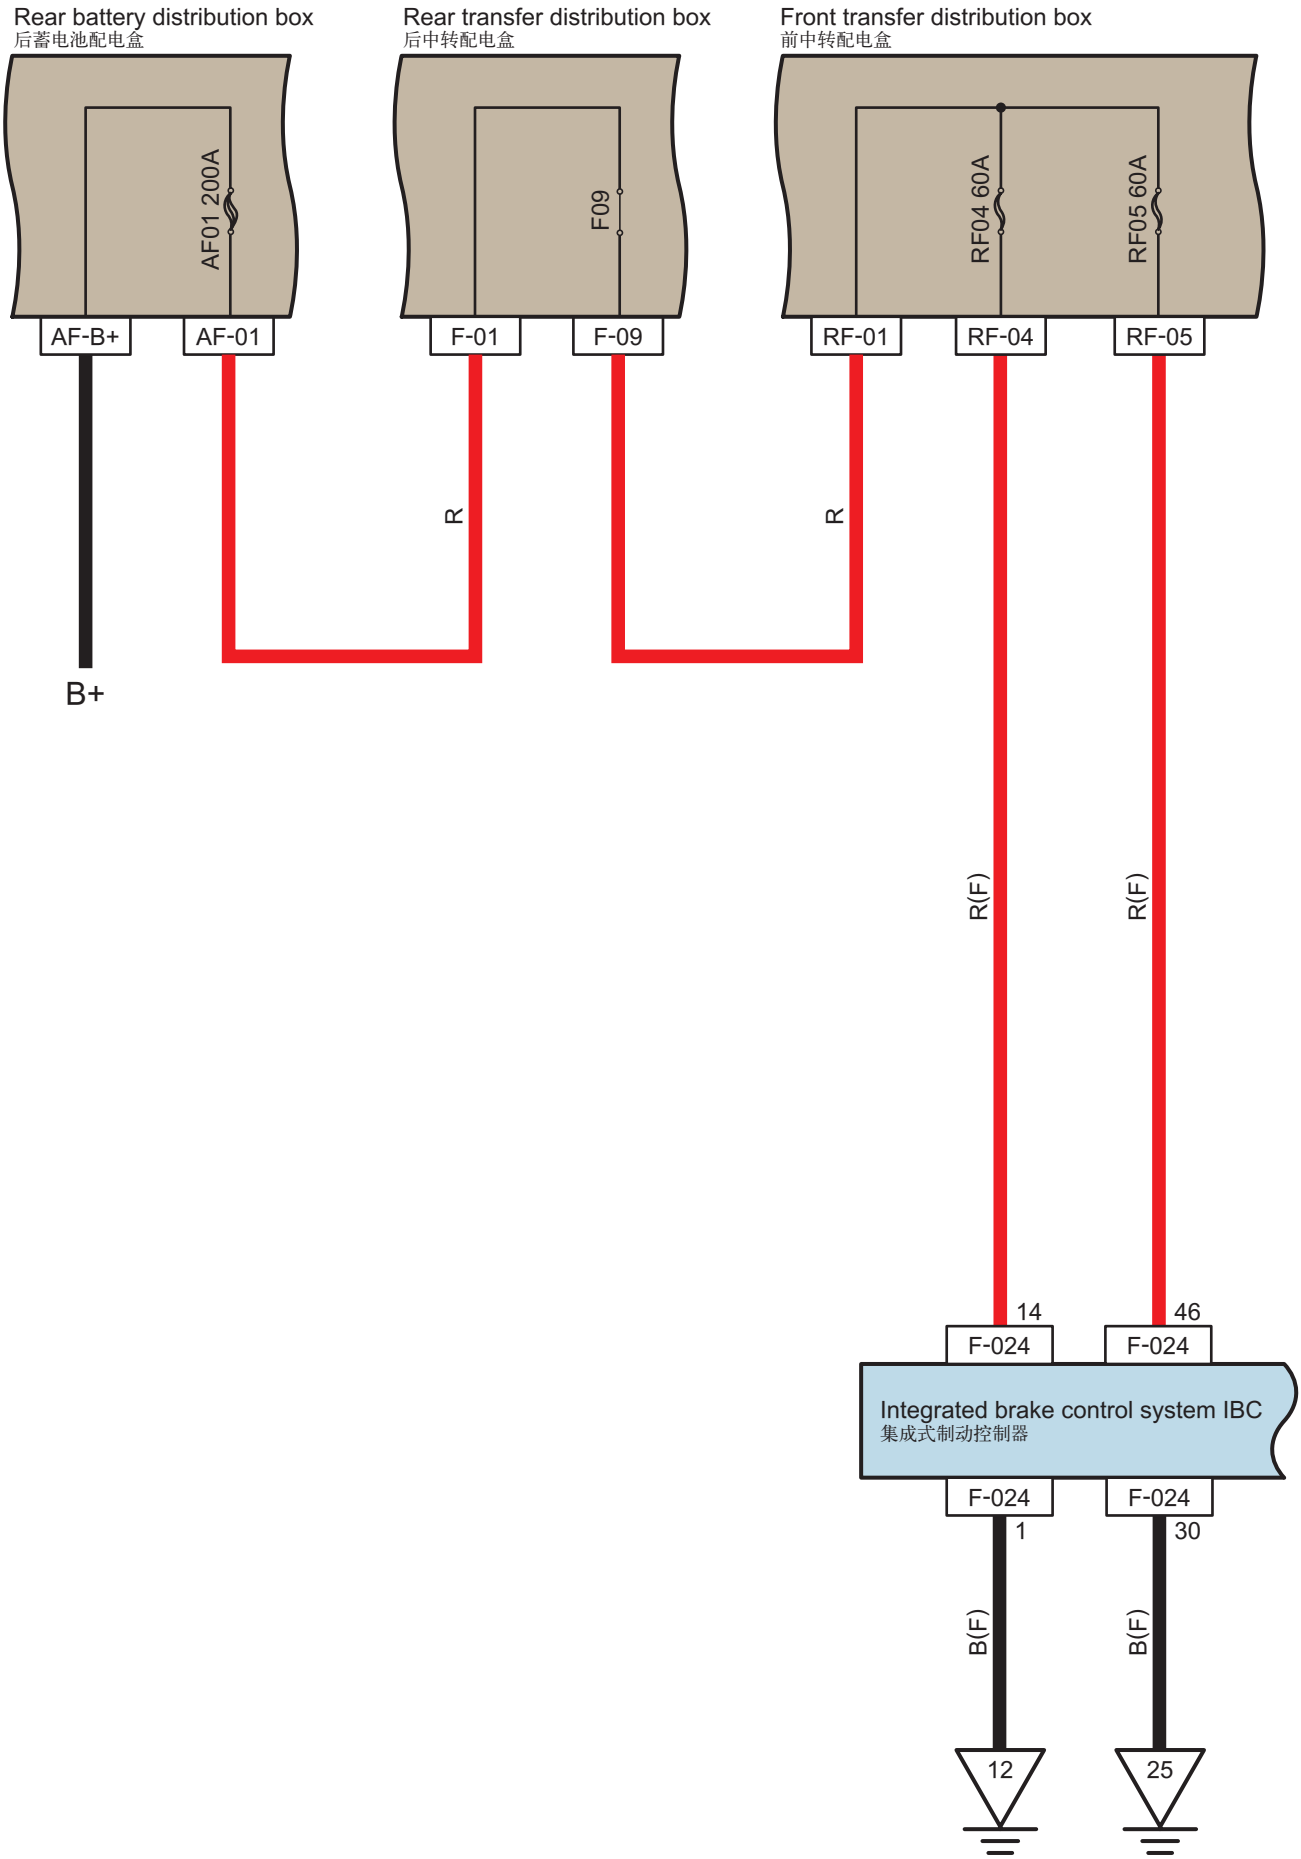

2WD
两驱
4WD
四驱
Diagnostic interface 3
诊断接口3
A/C compressor - 2WD
空调压缩机-两驱
A/C compressor- 4WD
空调压缩机-四驱
B-061
7
B-061
15
F2-001
4
F2-002
4
L/W(F)
L/W(F)
GR/L(B)
W(B)
C-01
10
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

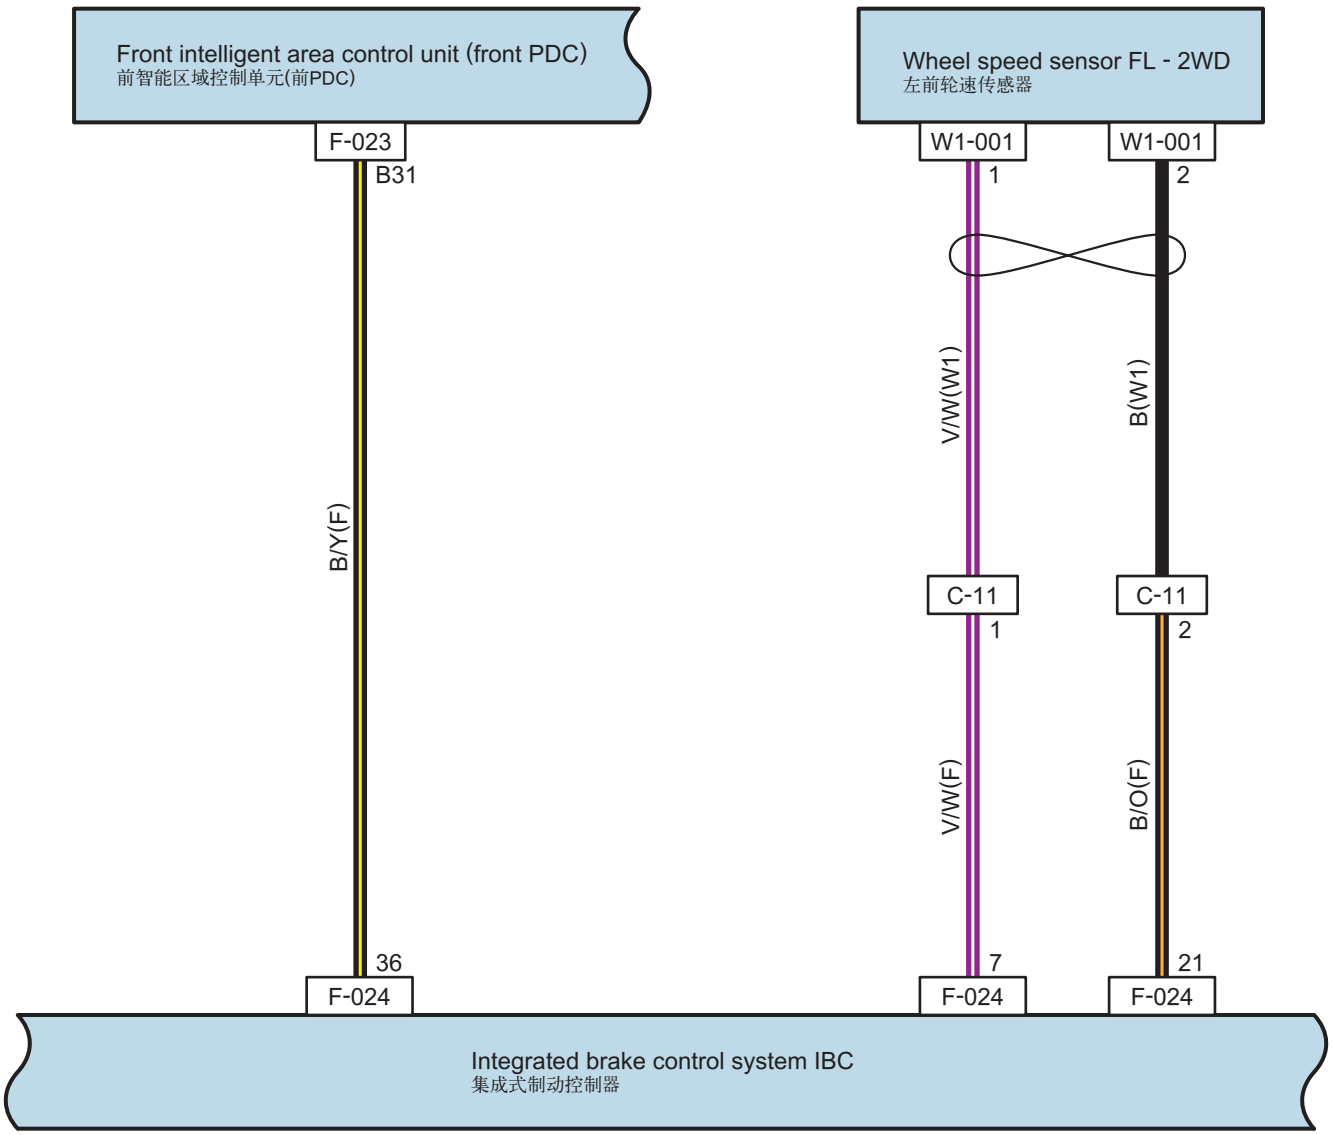

Second row occupancy sensor - low configuration
二排占位传感器-低配
B-124
2
B-124
3
B-124
5
B-124
1
B-124
4
B-124
6
V/B(B)
R/L(B)
GR/R(B)
B/Y(B)
B/Y(B)
B/Y(B)
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

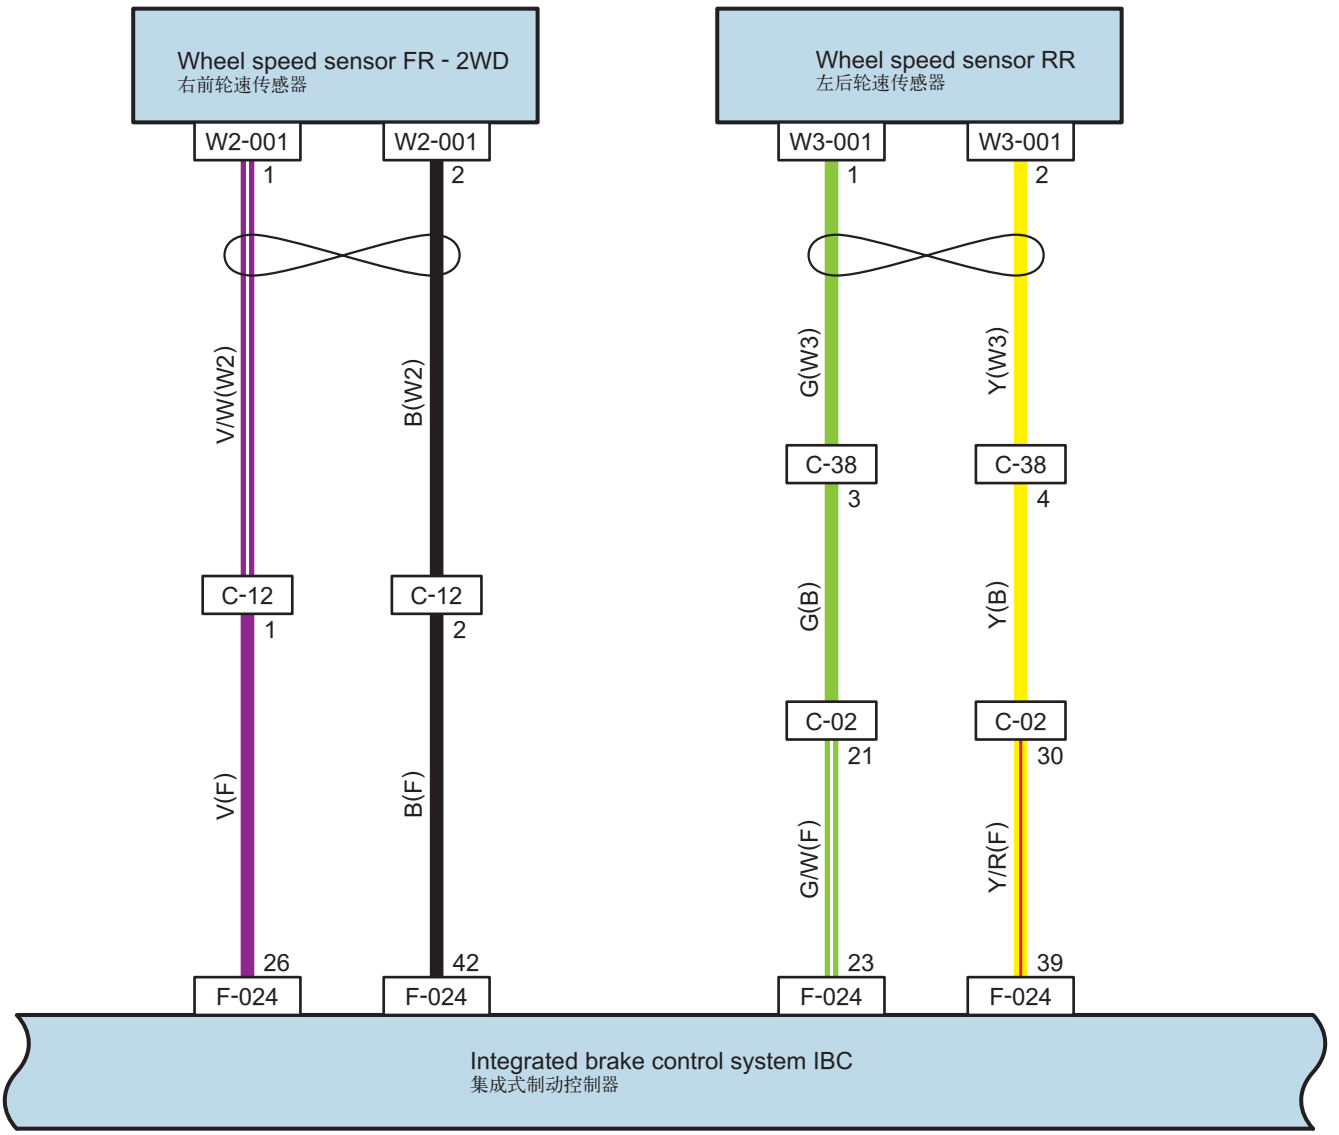

Second row occupancy sensor - high configuration
二排占位传感器-高配
Z3-006
2
Z3-006
3
Z3-006
5
Z3-006
1
Z3-006
4
Z3-006
6
V/B(Z3)
R/L(Z3)
GR/R(Z3)
B/Y(Z3)
B/Y(Z3)
B/Y(Z3)
B/Y(Z3)
C-47
7
C-47
5
C-47
6
C-47
13
V/B(B)
R/L(B)
GR/R(B)
B/Y(B)
B/Y(B)
B/Y(B)
H19
D13
D15
B15
B-070
B-054
B-054
B-056
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

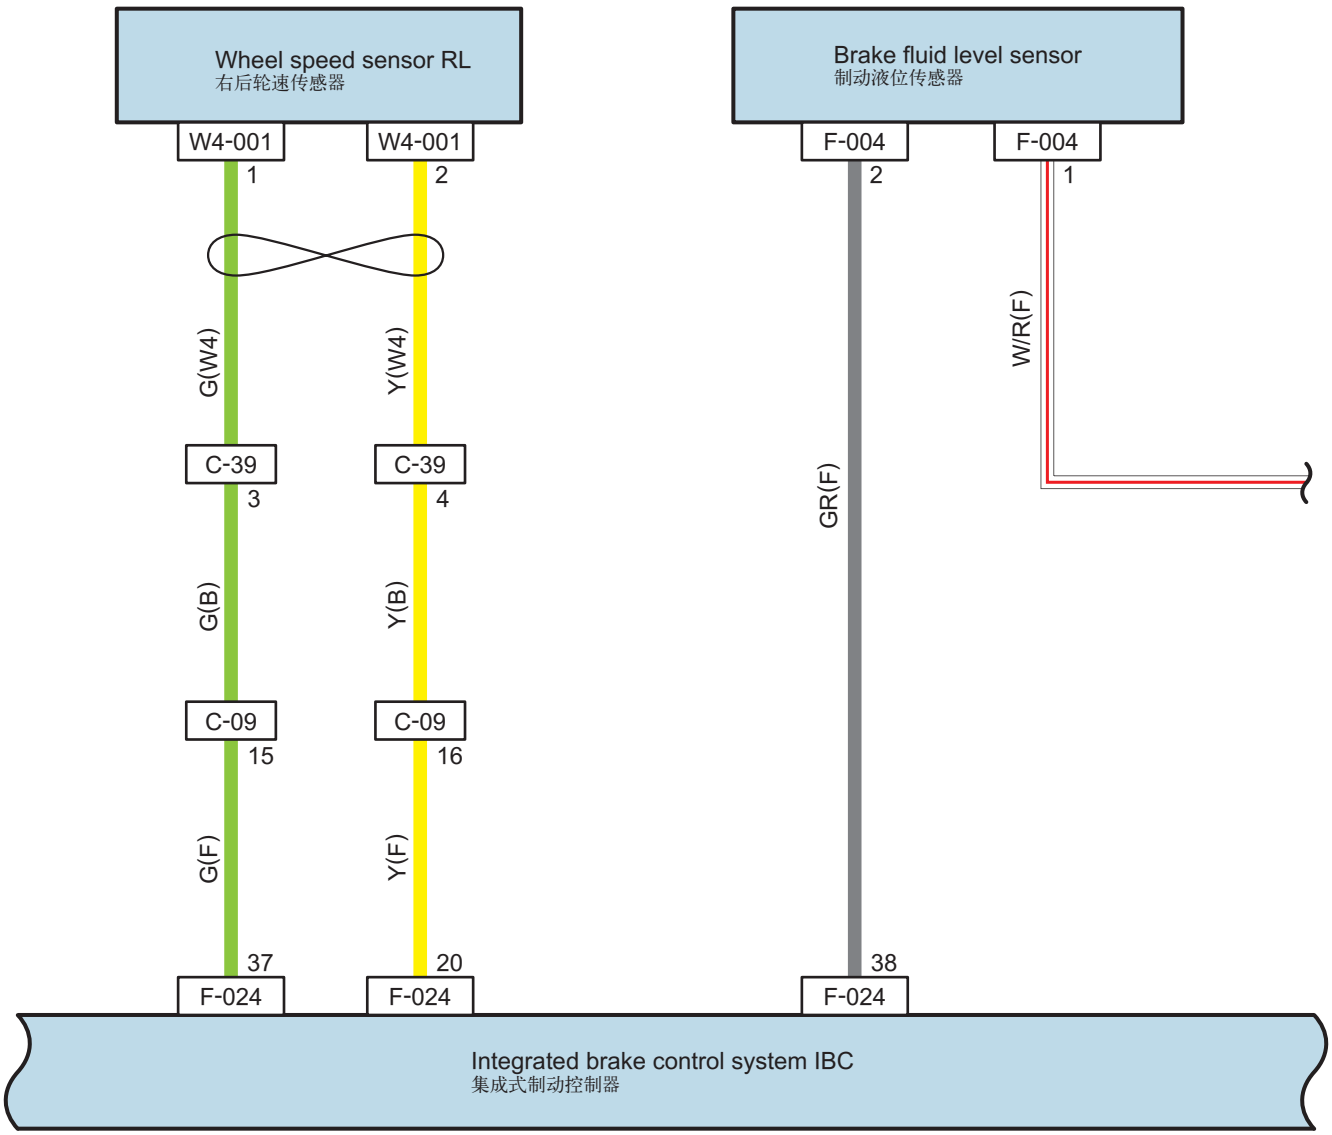

Rear left seat cushion heating
左后座椅座垫加热
Seatback heater RL
左后座椅靠背加热
Z3-001
3
Z3-001
2
Z3-001
4
Z3-001
1
B-122
1
B-122
2
B/Y(Z3)
R/W(Z3)
B(Z3)
L/R(Z3)
L/R(B)
B(B)
C-47
3
C-47
4
C-47
2
C-47
1
B/Y(B)
R/W(B)
B(B)
L/R(B)
52b
57a
L/R(B)
H21
B-070
G25
B-069
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

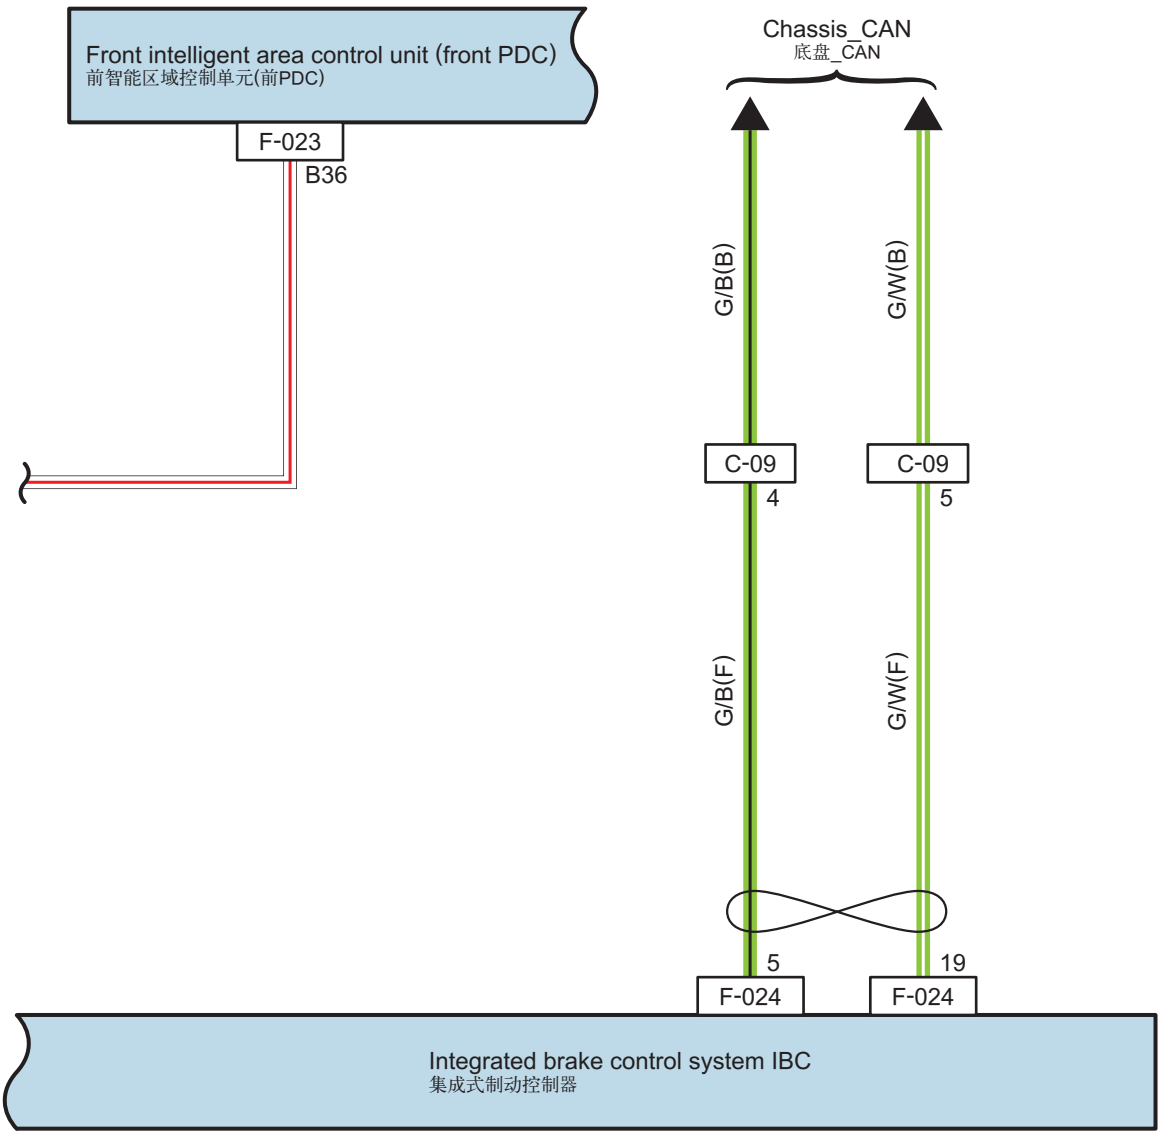

Rear right seat cushion heating
右后座椅座垫加热
Seatback heater RR
右后座椅靠背加热
Z3-005
3
Z3-005
2
Z3-005
4
Z3-005
1
B-123
1
B-123
2
B/Y(Z3)
V/W(Z3)
B(Z3)
R/L(Z3)
R/L(B)
B(B)
C-47
8
C-47
20
C-47
9
C-47
19
B/Y(B)
V/W(B)
B(B)
R/L(B)
52b
82a
R/L(B)
D12
B-054
D27
B-054
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

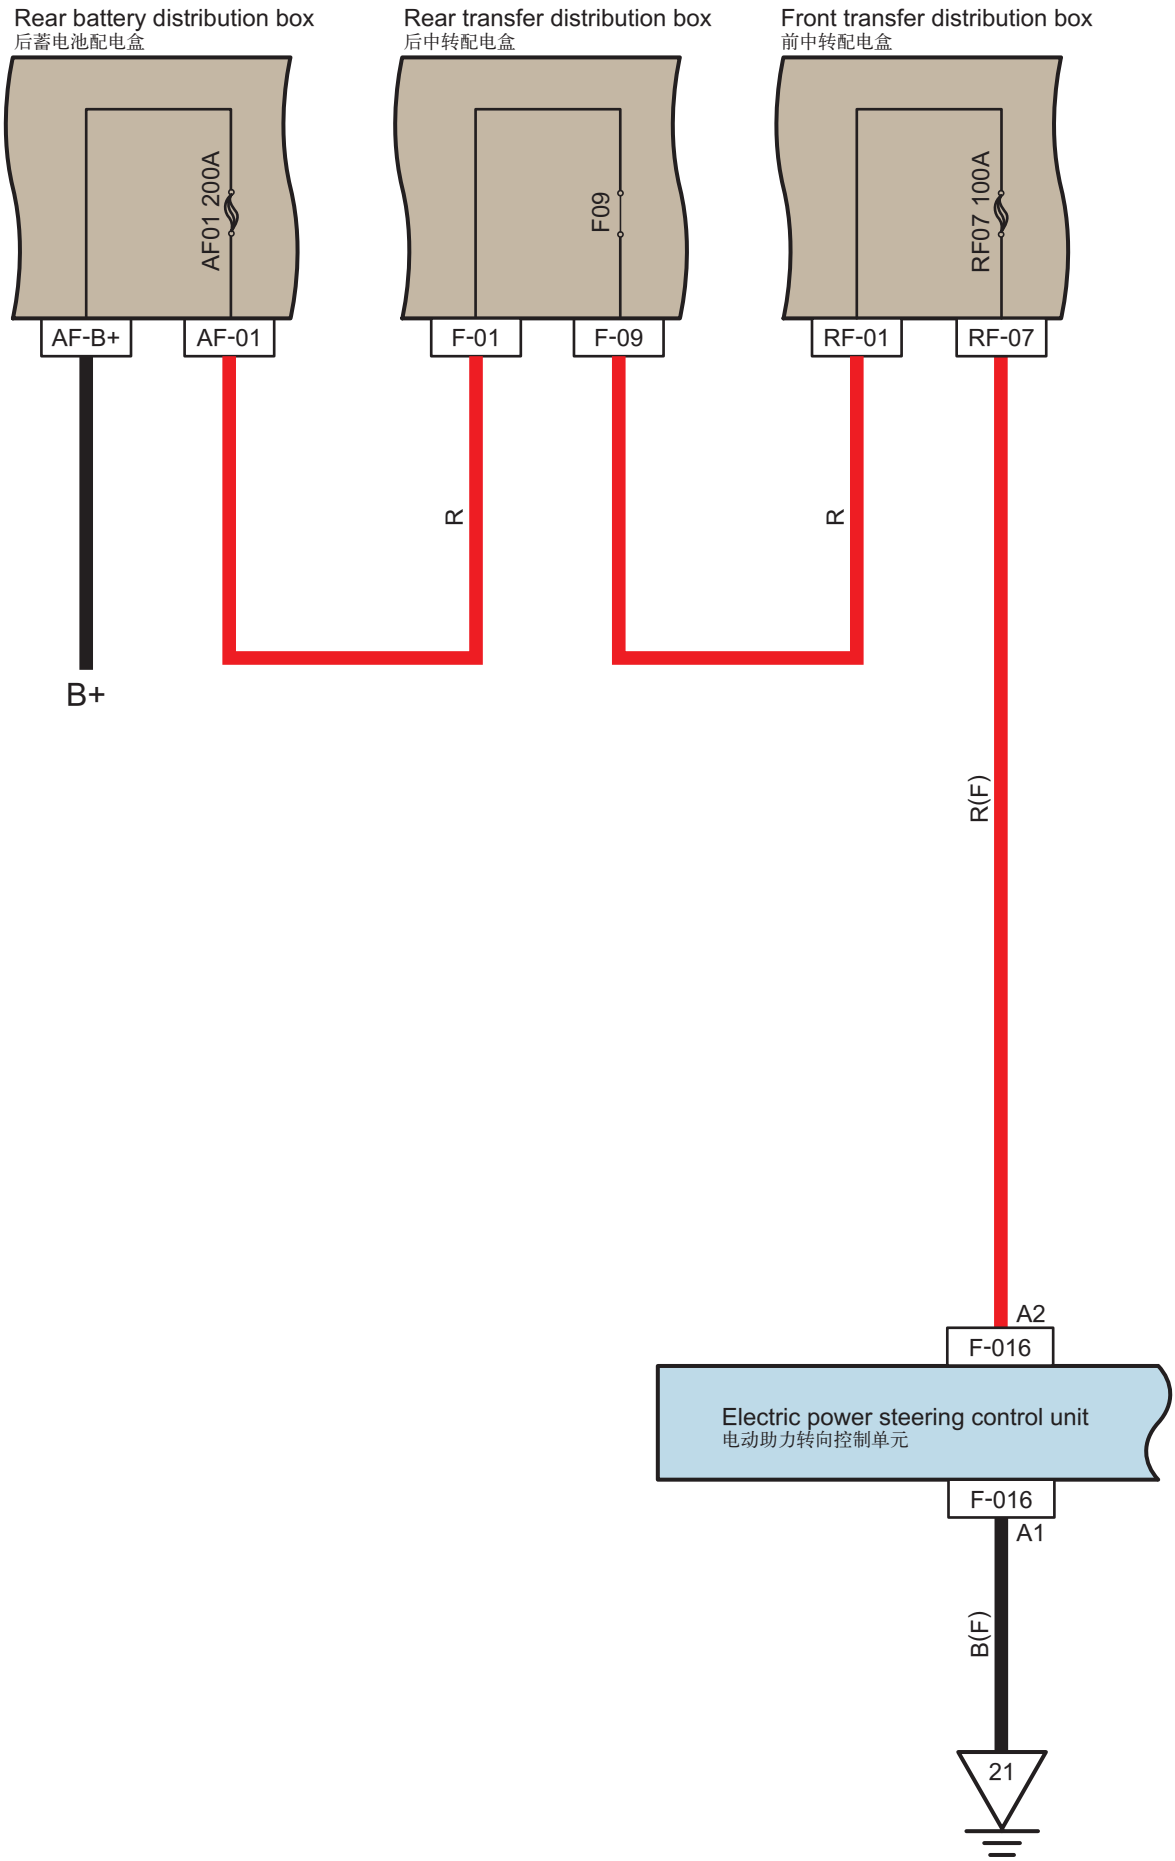

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
AF01 200A
F09
RF04 60A
RF05 60A
AF-B+
AF-01
F-01
F-09
RF-01
RF-04
RF-05
R
R
B+
R(F)
R(F)
14
46
F-024
F-024
Integrated brake control system IBC
集成式制动控制器
F-024
F-024
1
30
B(F)
B(F)
12
25

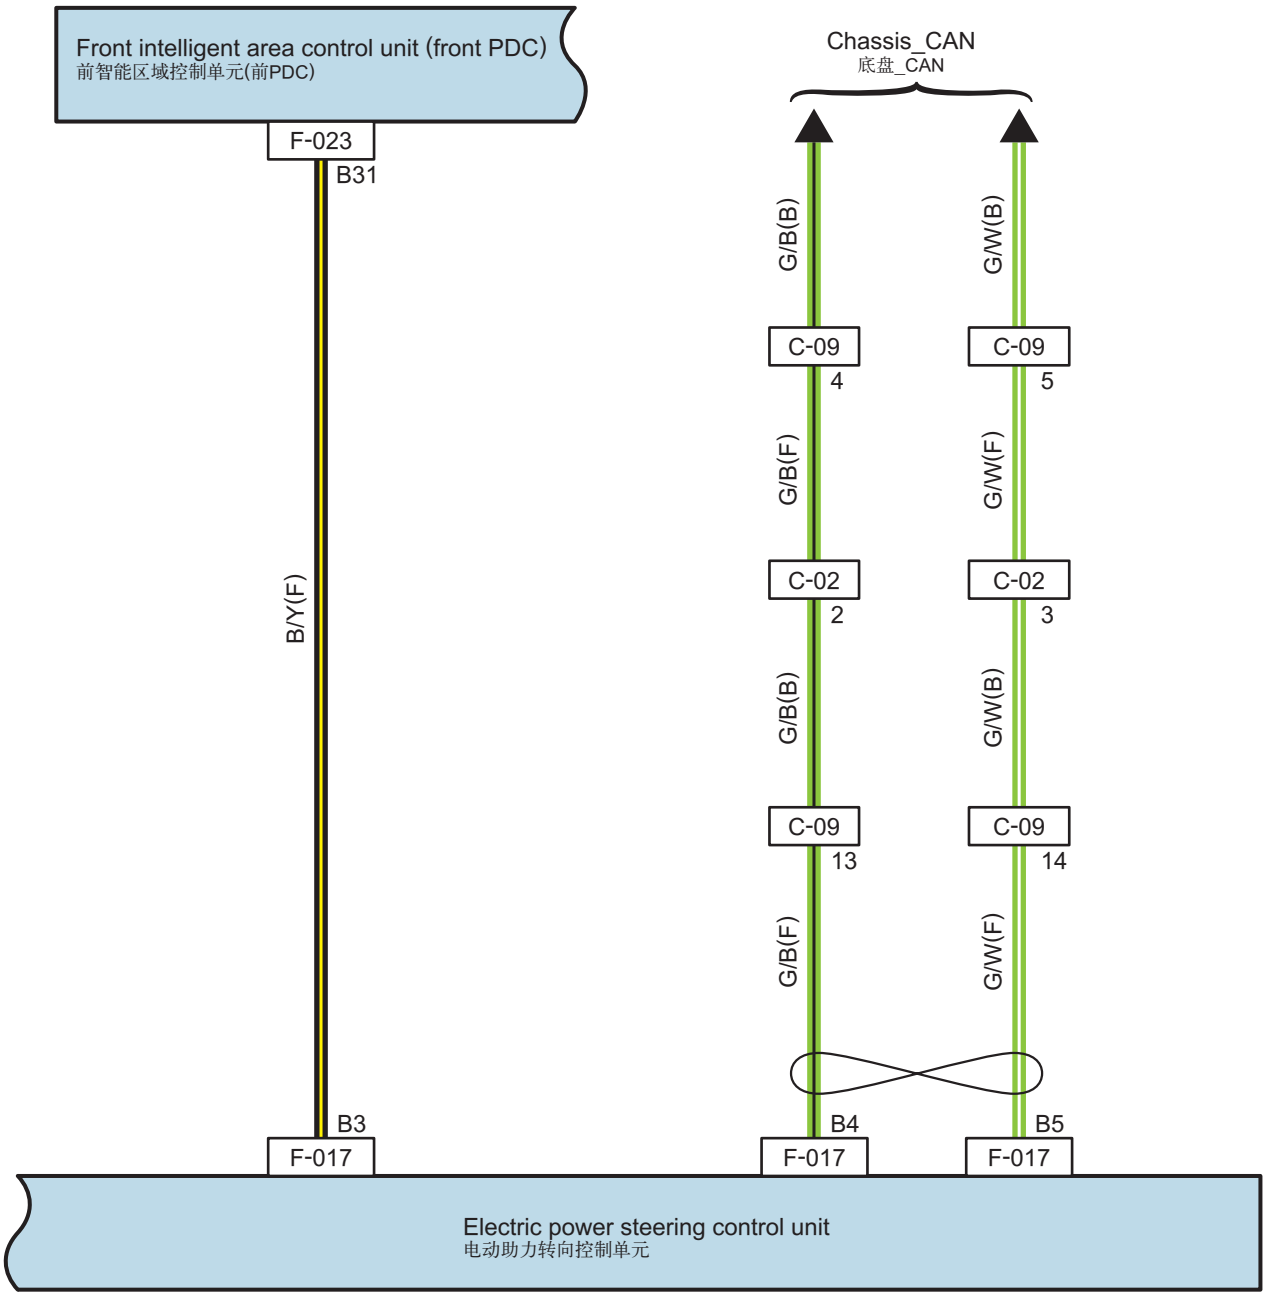

Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
F-023
B31
B/Y(F)
36
F-024
Wheel speed sensor FL - 2WD
左前轮速传感器
W1-001
1
W1-001
2
V/W(W1)
B(W1)
C-11
1
C-11
2
V/W(F)
B/O(F)
7
21
F-024
F-024
Integrated brake control system IBC
集成式制动控制器

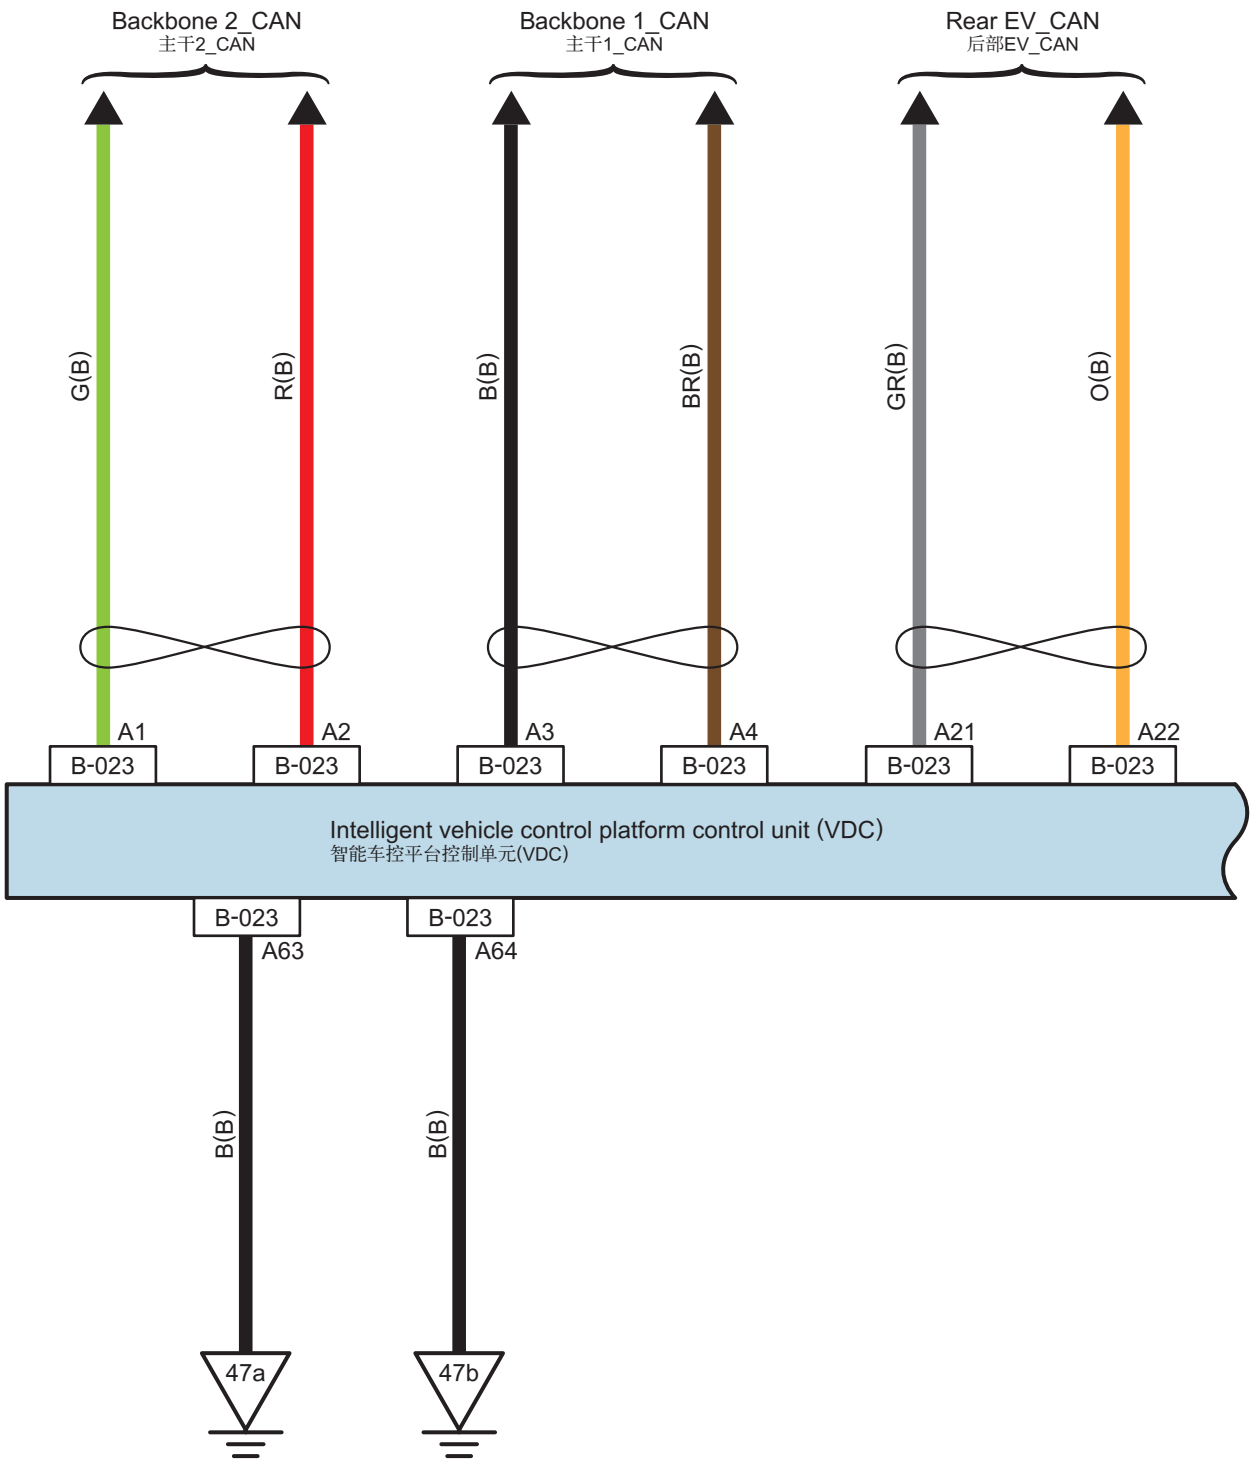

Wheel speed sensor FR - 2WD
右前轮速传感器
W2-001
1
W2-001
2
V/W(W2)
B(W2)
C-12
1
C-12
2
V(F)
B(F)
26
42
F-024
F-024
Wheel speed sensor RR
左后轮速传感器
W3-001
1
W3-001
2
G(W3)
Y(W3)
C-38
3
C-38
4
G(B)
Y(B)
C-02
21
C-02
30
G/W(F)
Y/R(F)
23
39
F-024
F-024
Integrated brake control system IBC
集成式制动控制器

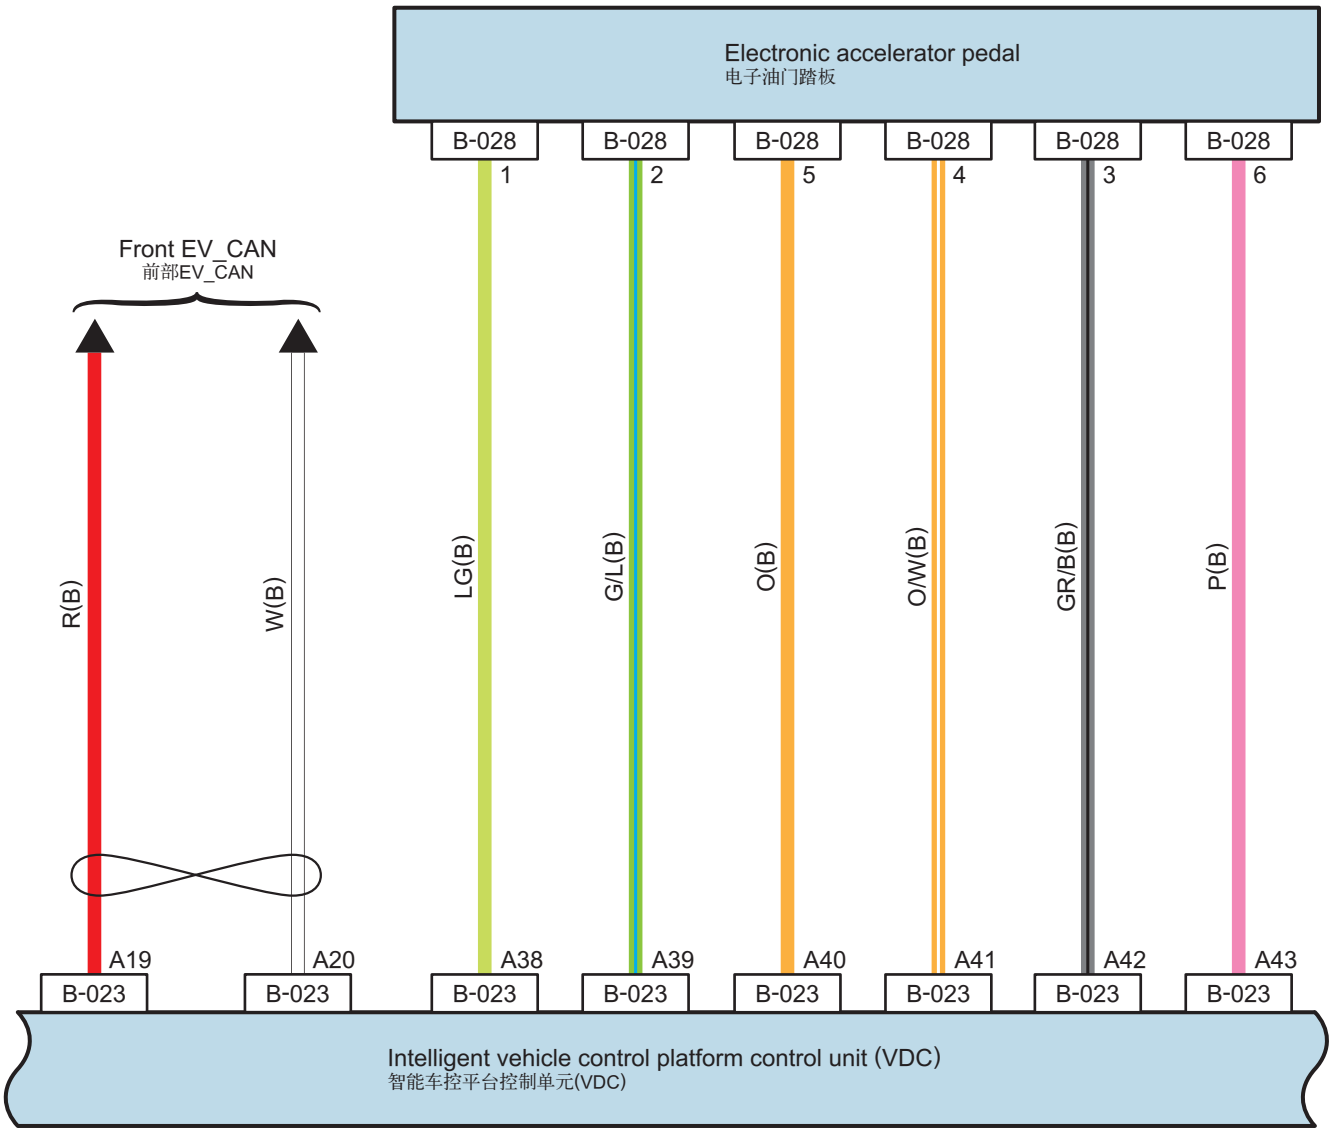

Wheel speed sensor RL
右后轮速传感器
W4-001
1
W4-001
2
G(W4)
Y(W4)
C-39
3
C-39
4
G(B)
Y(B)
C-09
15
C-09
16
G(F)
Y(F)
37
20
F-024
F-024
Brake fluid level sensor
制动液位传感器
F-004
2
F-004
1
W/R(F)
GR(F)
38
F-024
Integrated brake control system IBC
集成式制动控制器

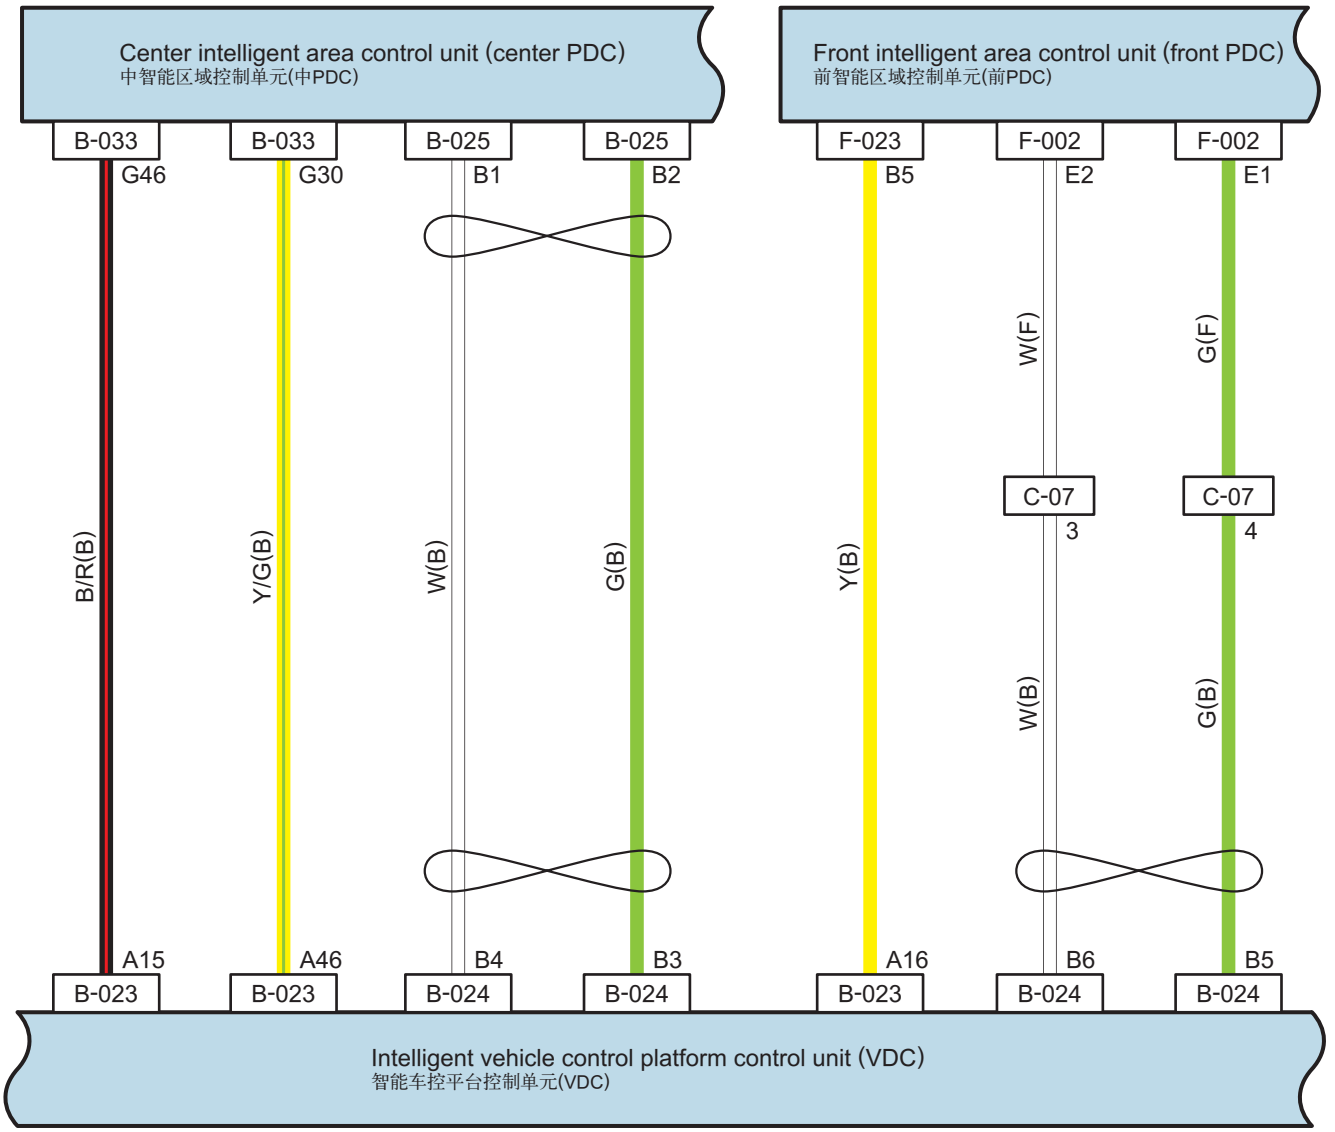

Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
F-023
B36
Chassis_CAN
底盘_CAN
G/B(B)
G/W(B)
C-09
4
C-09
5
G/B(F)
G/W(F)
5
19
F-024
F-024
Integrated brake control system IBC
集成式制动控制器

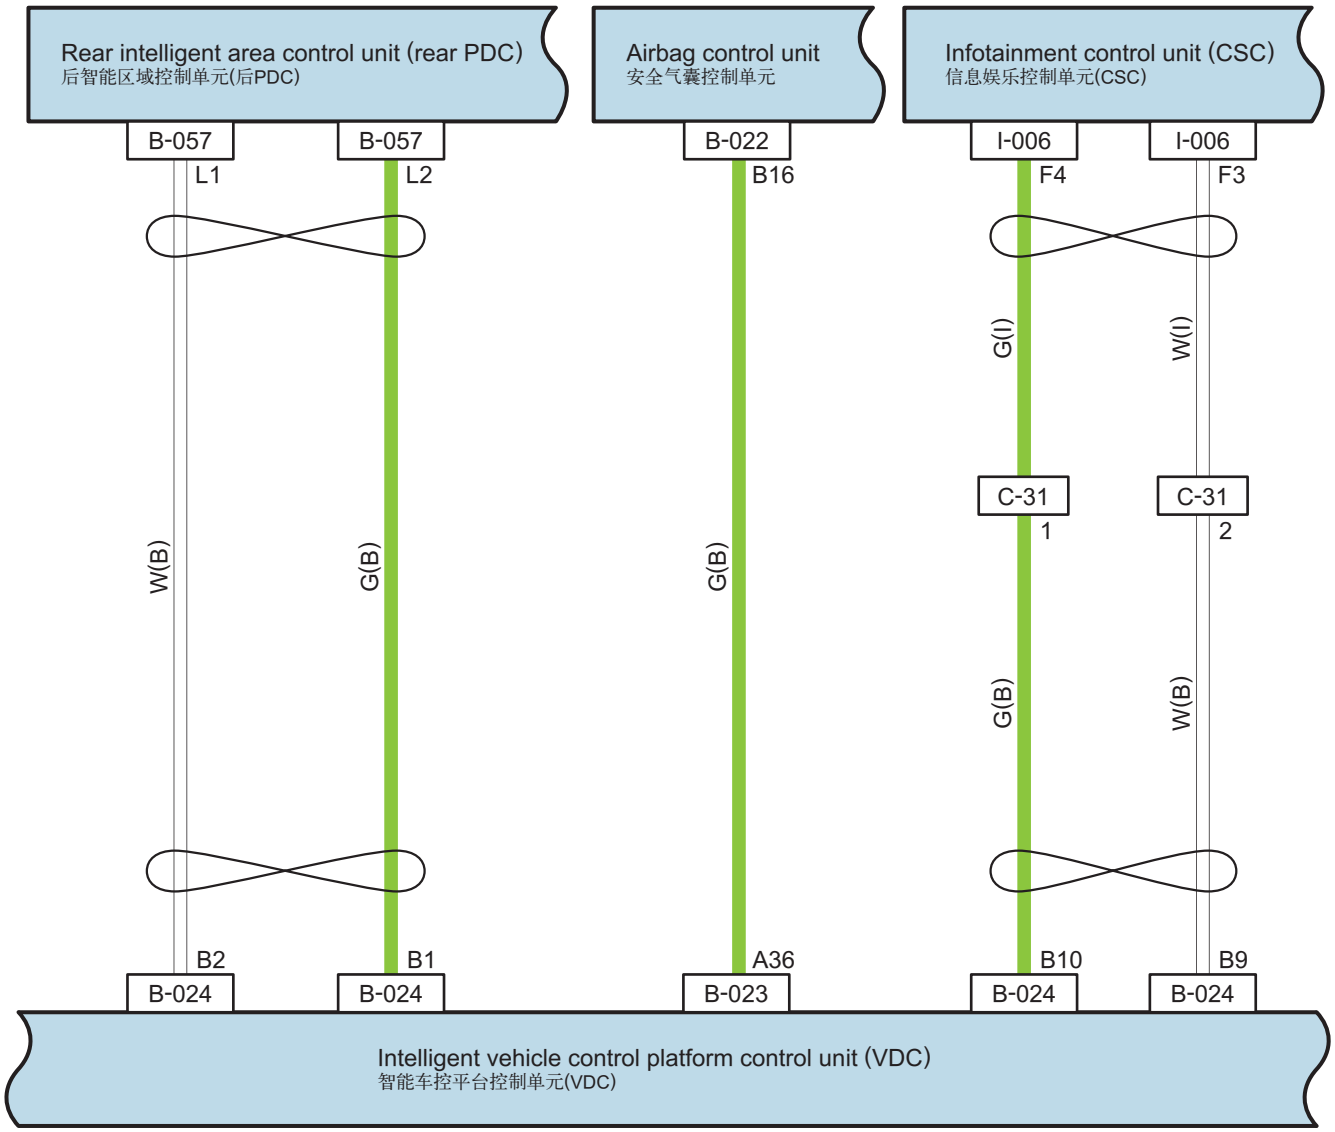

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
R
Rear transfer distribution box
后中转配电盒
F09
F-01
F-09
R
Front transfer distribution box
前中转配电盒
RF07 100A
RF-01
RF-07
R(F)
A2
F-016
Electric power steering control unit
电动助力转向控制单元
F-016
A1
B(F)
21

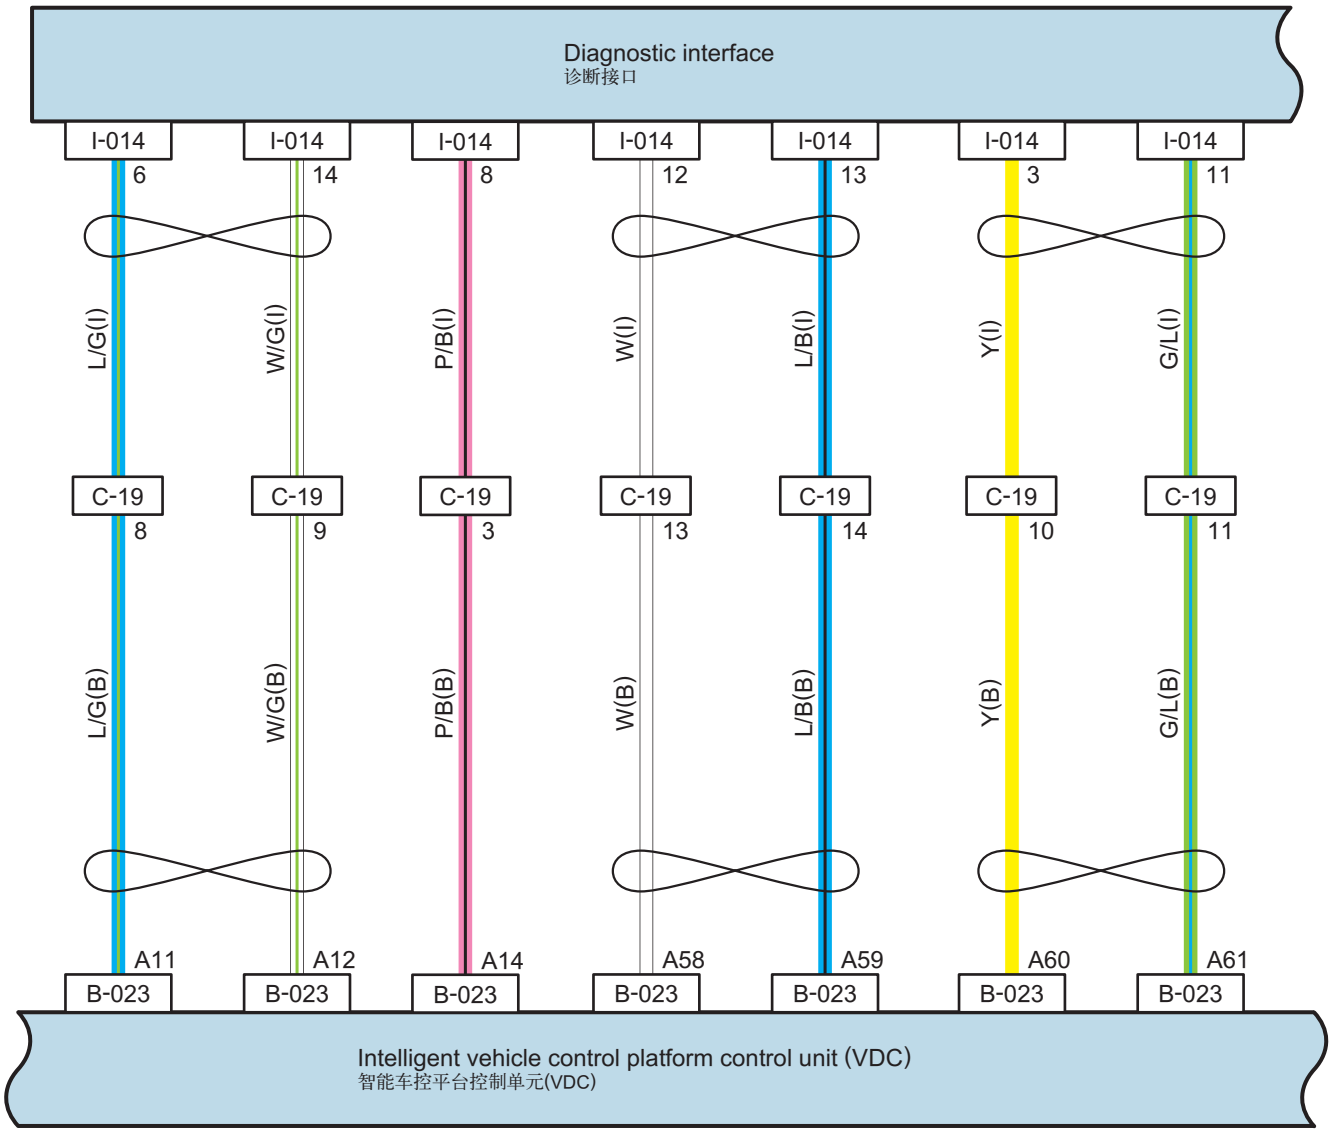

Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
F-023
B31
B/Y(F)
B3
F-017
Chassis_CAN
底盘_CAN
G/B(B)
G/W(B)
C-09
4
C-09
5
G/B(F)
G/W(F)
C-02
2
C-02
3
G/B(B)
G/W(B)
C-09
13
C-09
14
G/B(F)
G/W(F)
B4
B5
F-017
F-017
Electric power steering control unit
电动助力转向控制单元

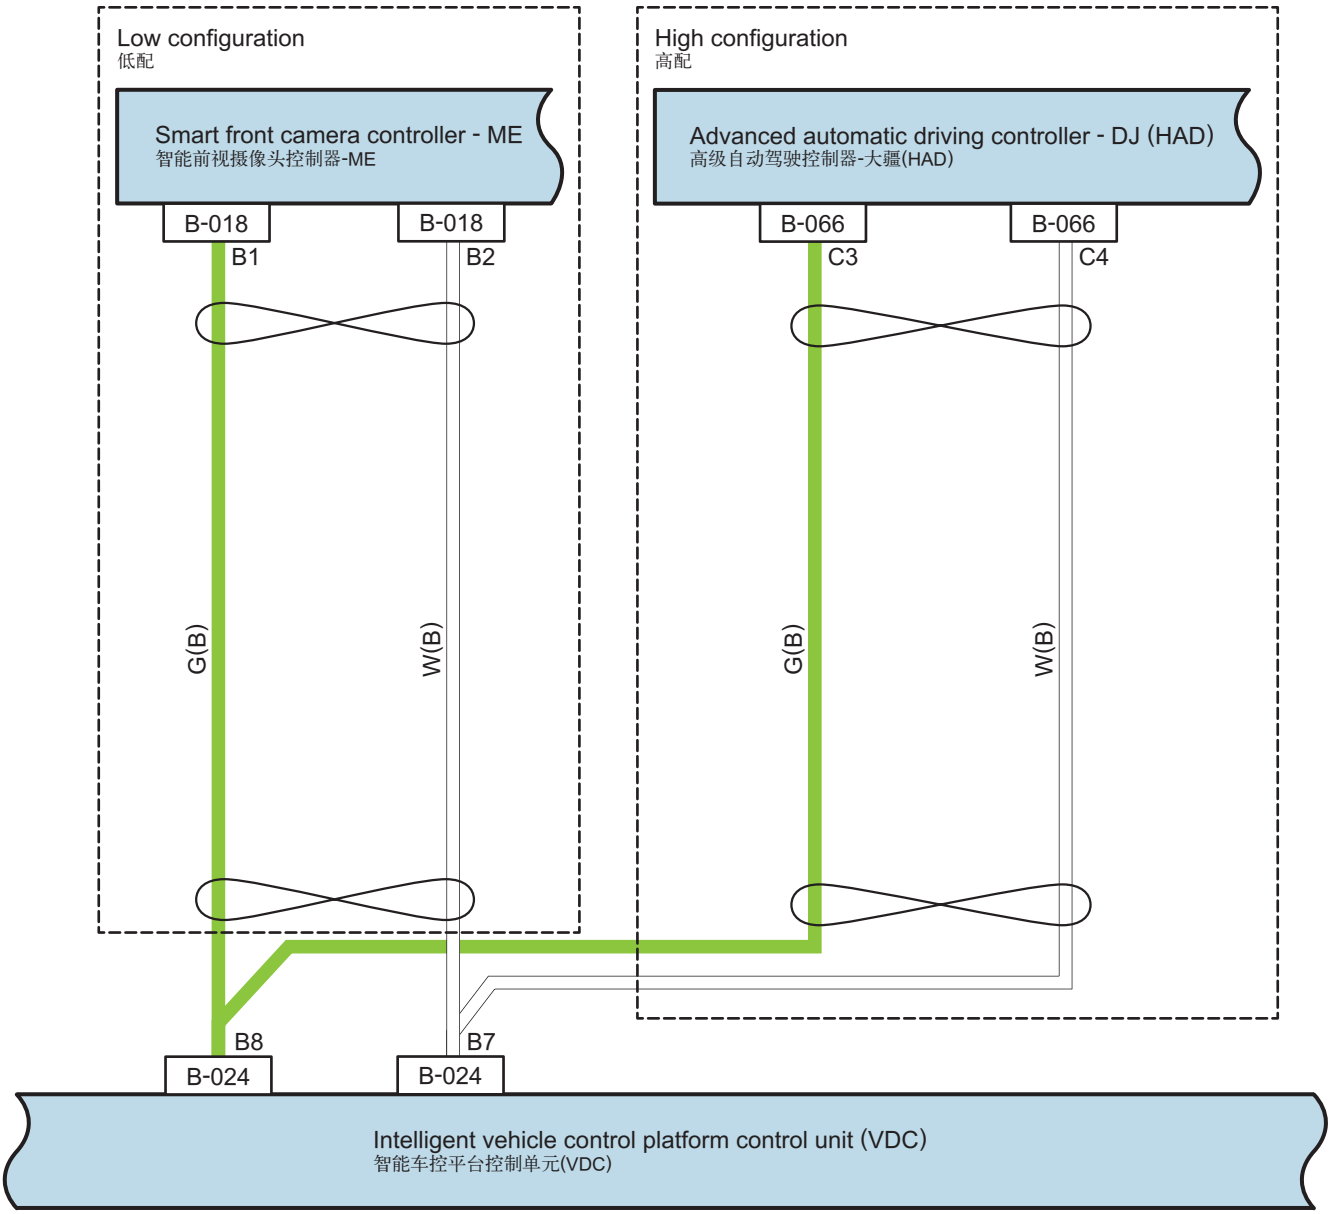

Backbone 2_CAN
主干2_CAN
Backbone 1_CAN
主干1_CAN
Rear EV_CAN
后部EV_CAN
G(B)
R(B)
B(B)
BR(B)
GR(B)
O(B)
A1
A2
A3
A4
A21
A22
B-023
B-023
B-023
B-023
B-023
B-023
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-023
B-023
A63
A64
B(B)
B(B)
47a
47b

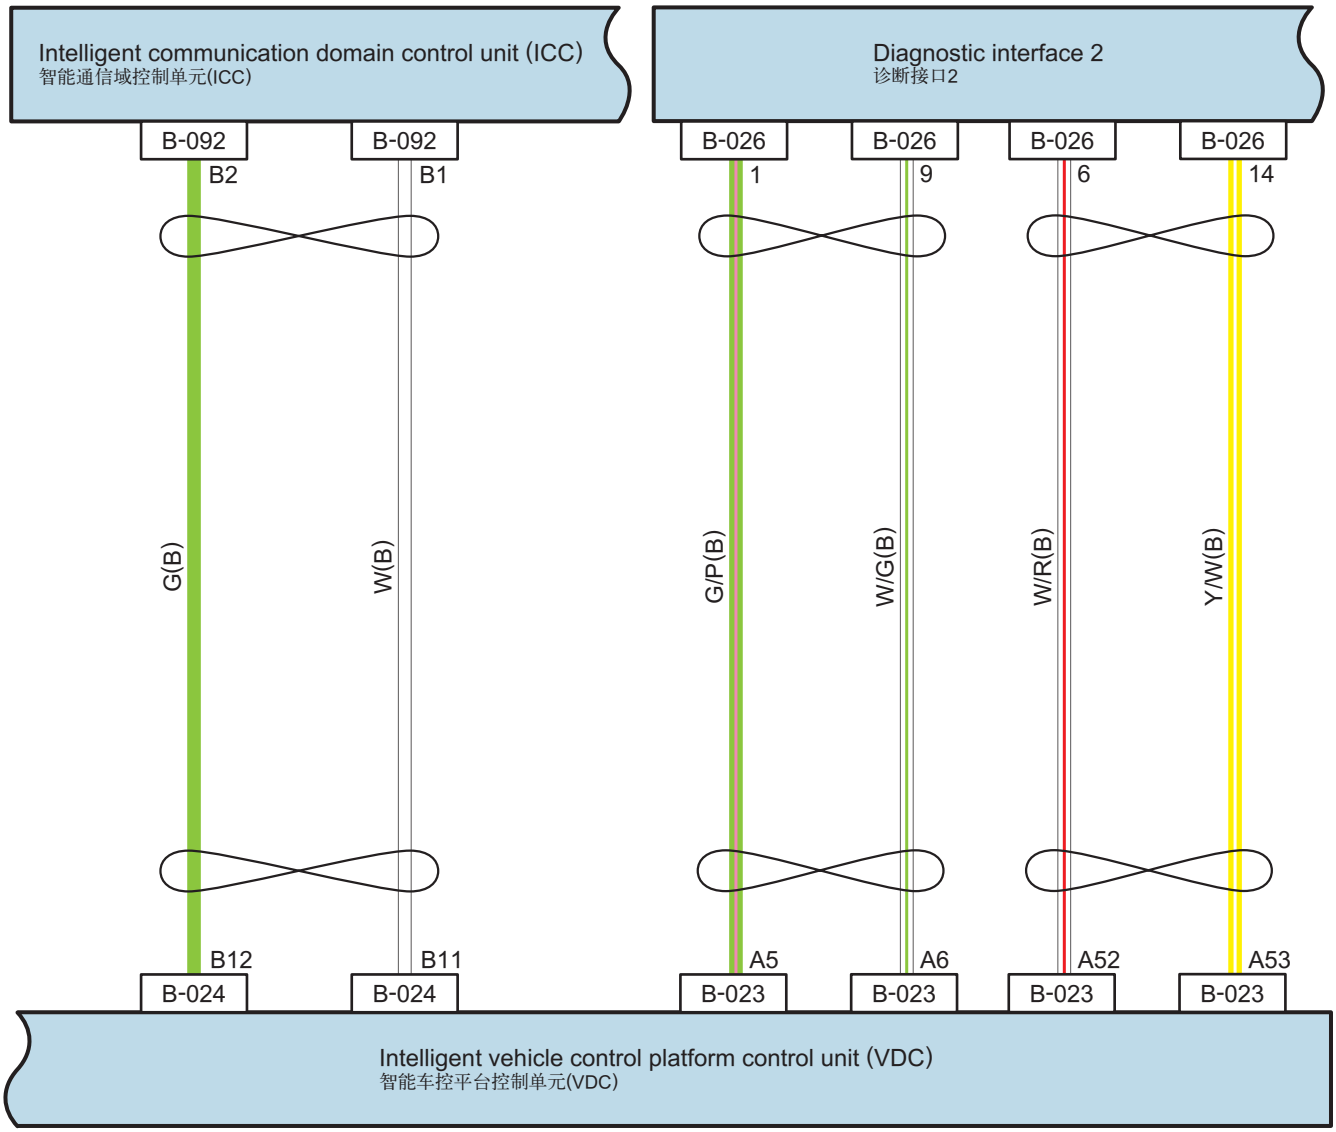

Electronic accelerator pedal
电子油门踏板
B-028
1
B-028
2
B-028
5
B-028
4
B-028
3
B-028
6
Front EV_CAN
前部EV_CAN
R(B)
W(B)
LG(B)
G/L(B)
O(B)
O/W(B)
GR/B(B)
P(B)
A19
A20
A38
A39
A40
A41
A42
A43
B-023
B-023
B-023
B-023
B-023
B-023
B-023
B-023
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

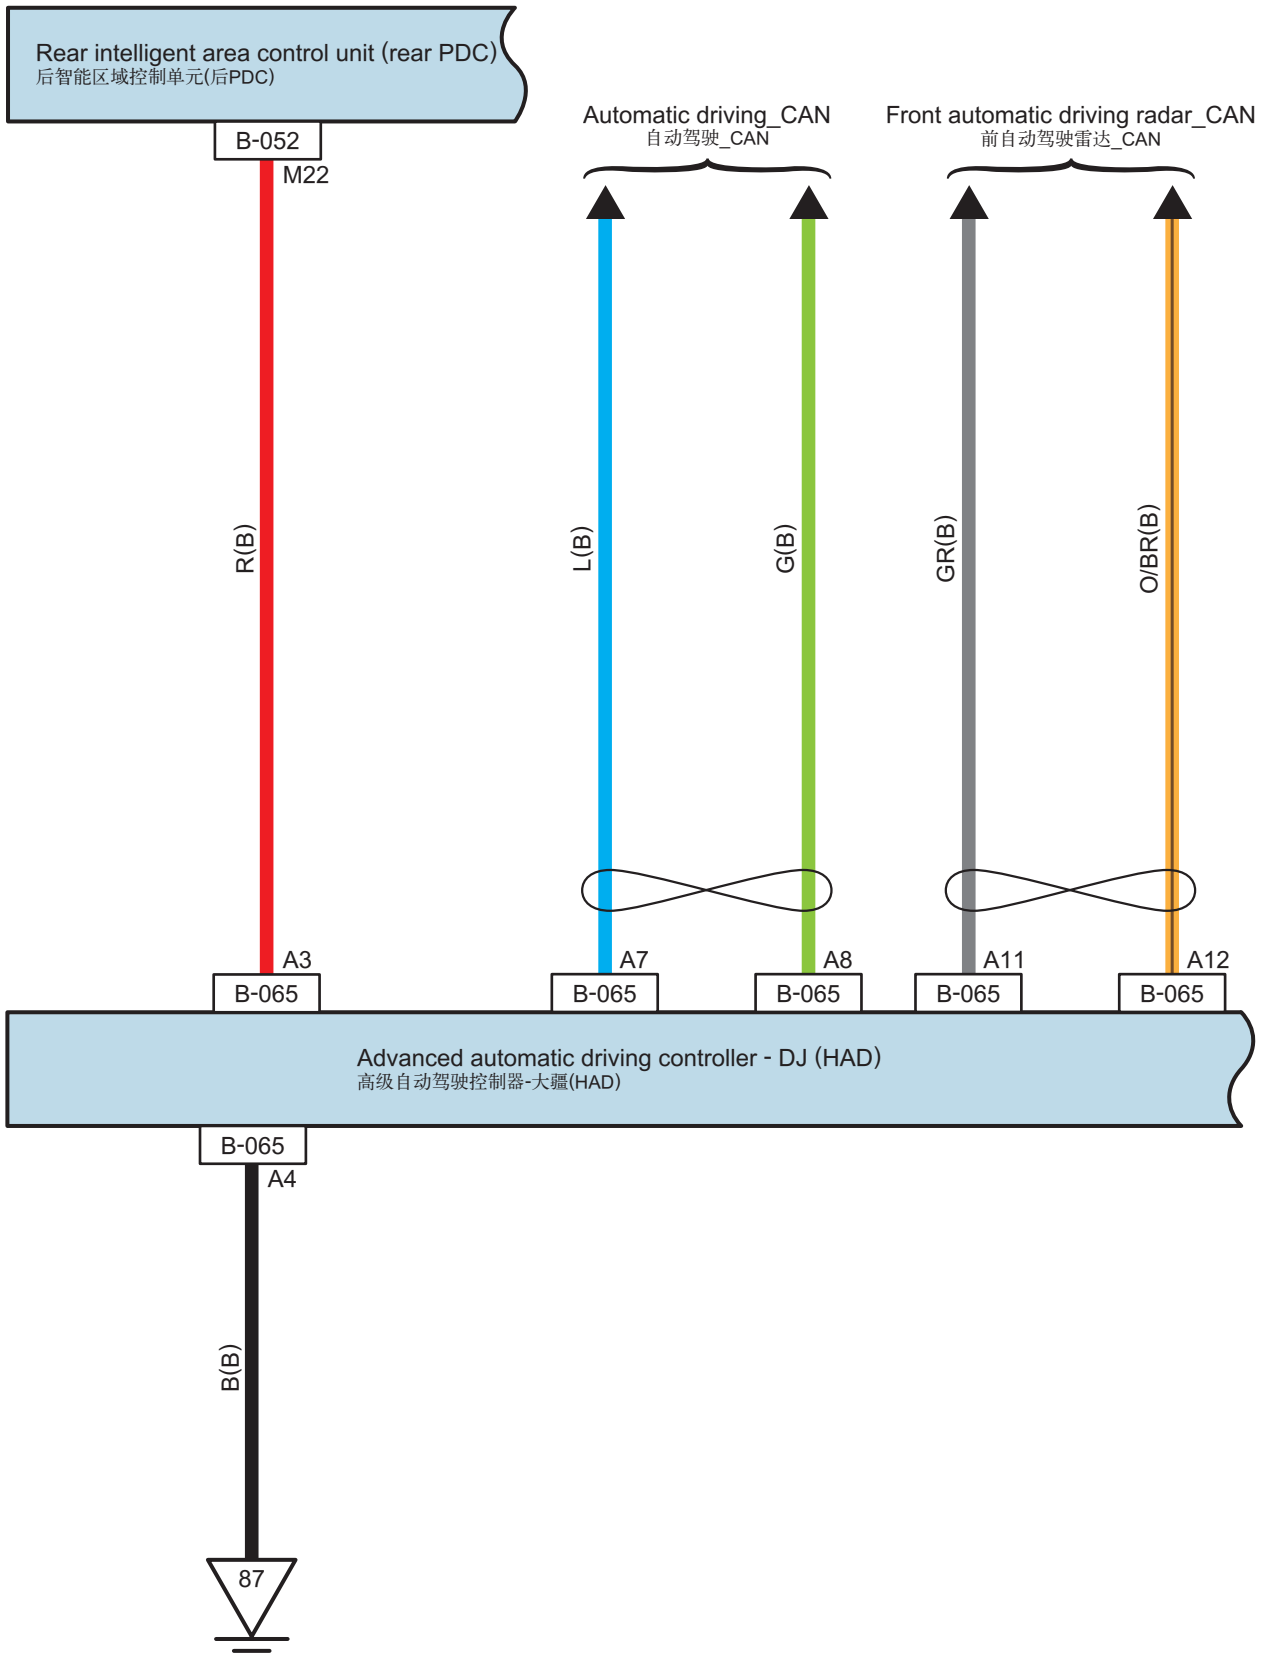

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
B-033
G46
B-033
G30
B-025
B1
B-025
B2
F-023
B5
F-002
E2
F-002
E1
B/R(B)
Y/G(B)
W(B)
G(B)
Y(B)
W(F)
G(F)
C-07
3
C-07
4
W(B)
G(B)
A15
A46
B4
B3
A16
B6
B5
B-023
B-023
B-024
B-024
B-023
B-024
B-024
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

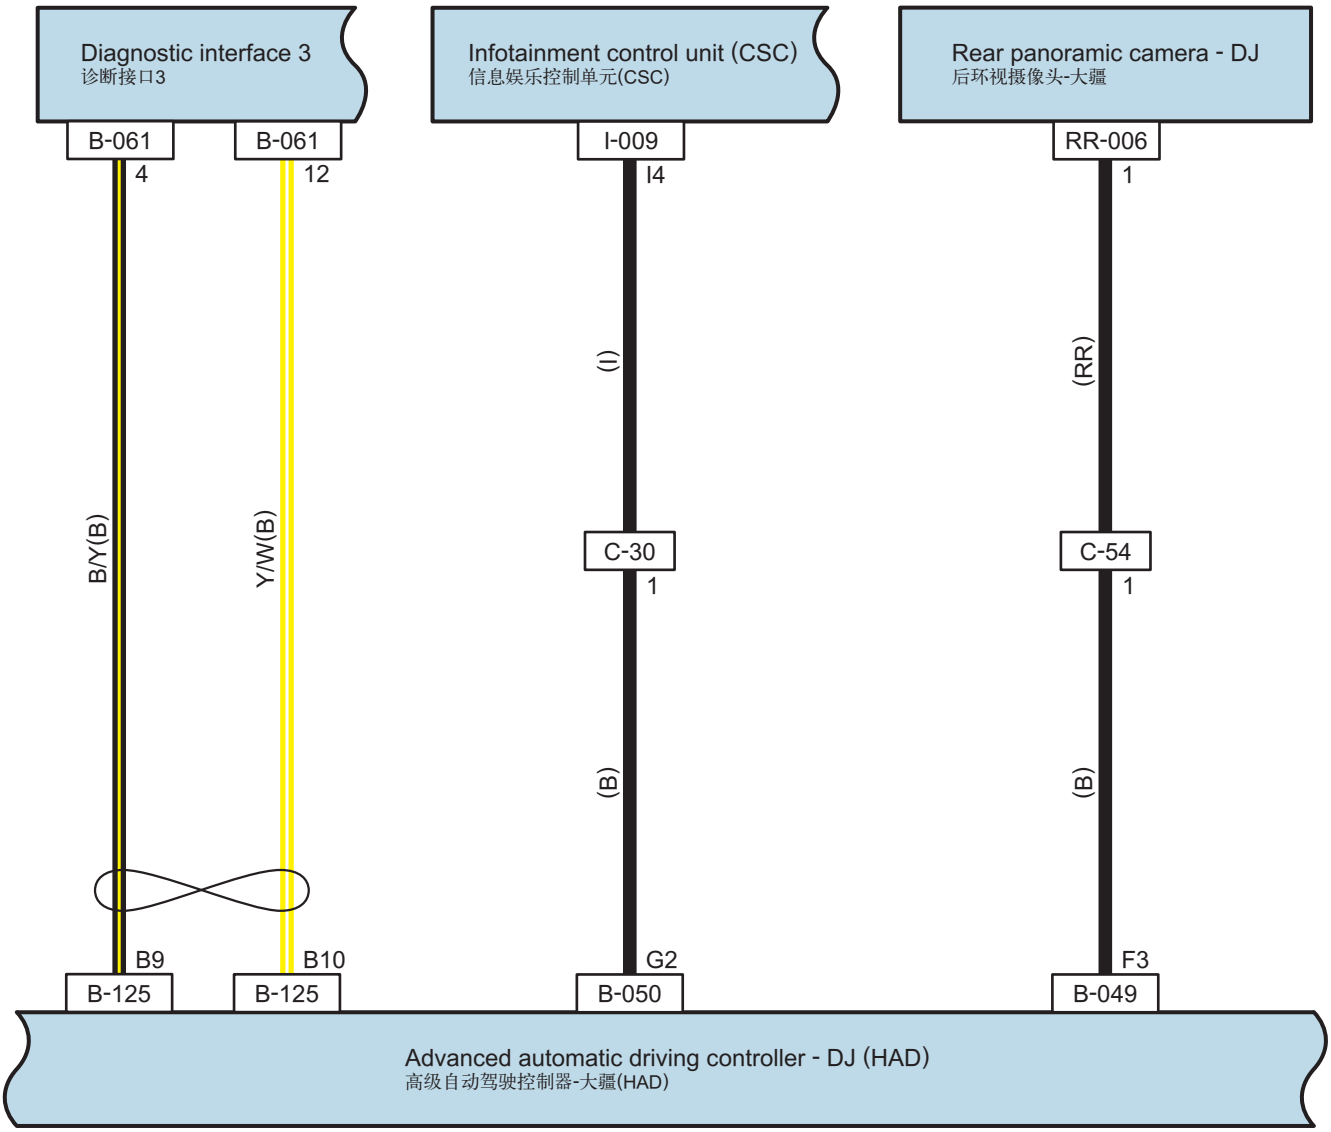

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Airbag control unit
安全气囊控制单元
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
B-057
B-057
B-022
I-006
I-006
L1
L2
B16
F4
F3
G(I)
W(I)
C-31
C-31
1
2
W(B)
G(B)
G(B)
G(B)
W(B)
B2
B1
A36
B10
B9
B-024
B-024
B-023
B-024
B-024
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

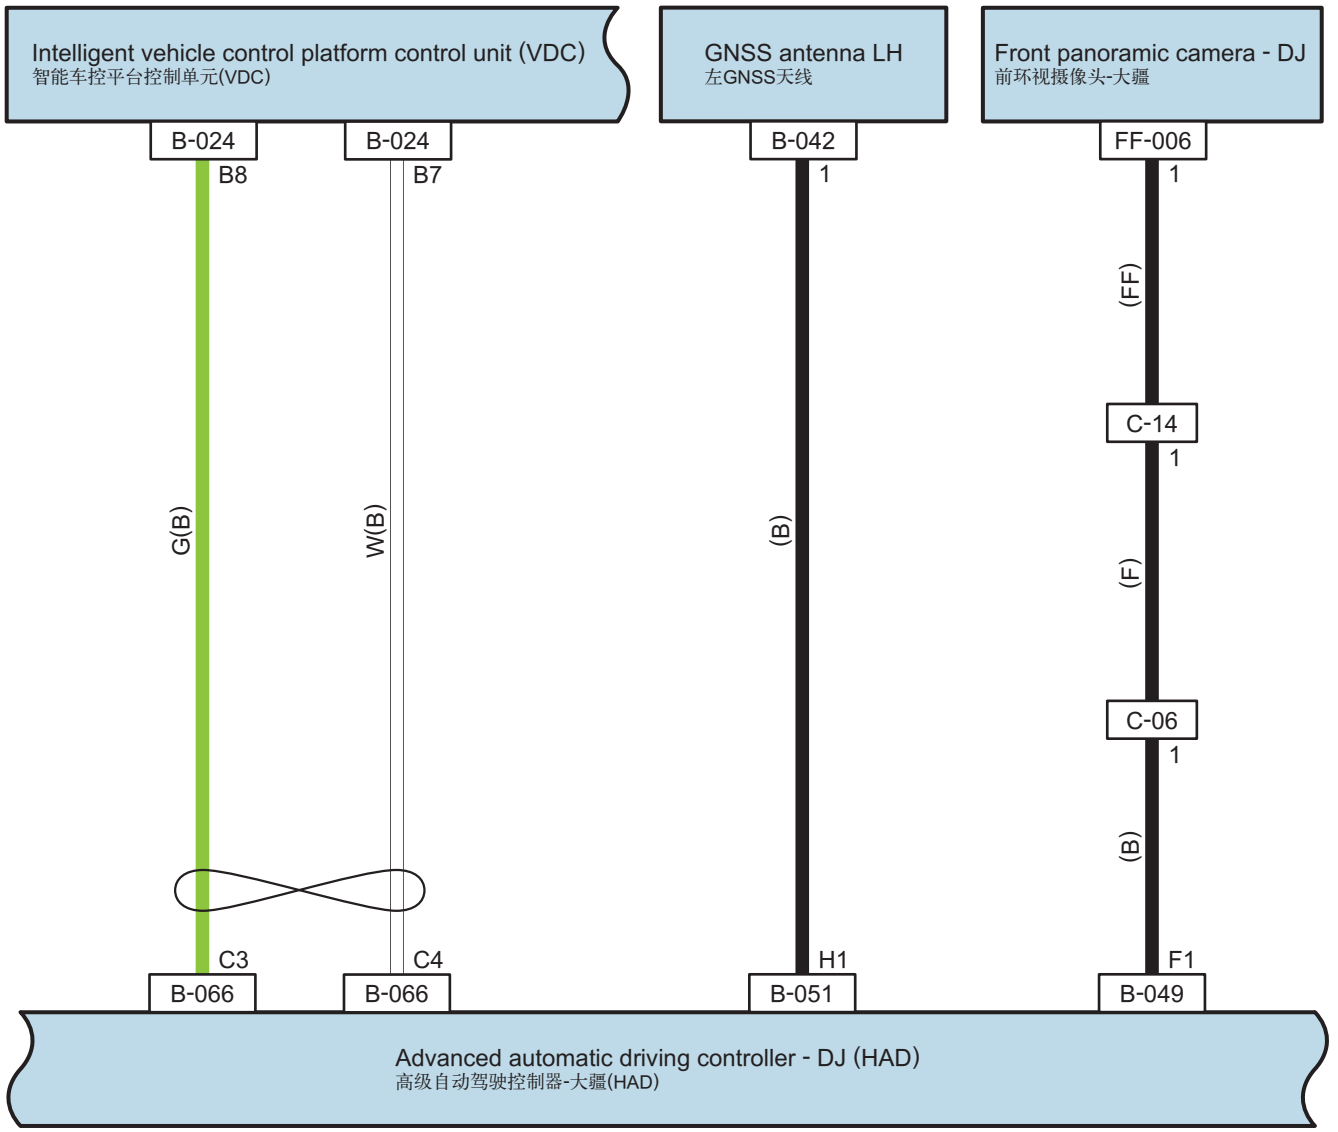

Diagnostic interface
诊断接口
I-014
6
I-014
14
I-014
8
I-014
12
I-014
13
I-014
3
I-014
11
L/G(I)
W/G(I)
P/B(I)
W(I)
L/B(I)
Y(I)
G/L(I)
C-19
8
C-19
9
C-19
3
C-19
13
C-19
14
C-19
10
C-19
11
L/G(B)
W/G(B)
P/B(B)
W(B)
L/B(B)
Y(B)
G/L(B)
A11
A12
A14
A58
A59
A60
A61
B-023
B-023
B-023
B-023
B-023
B-023
B-023
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

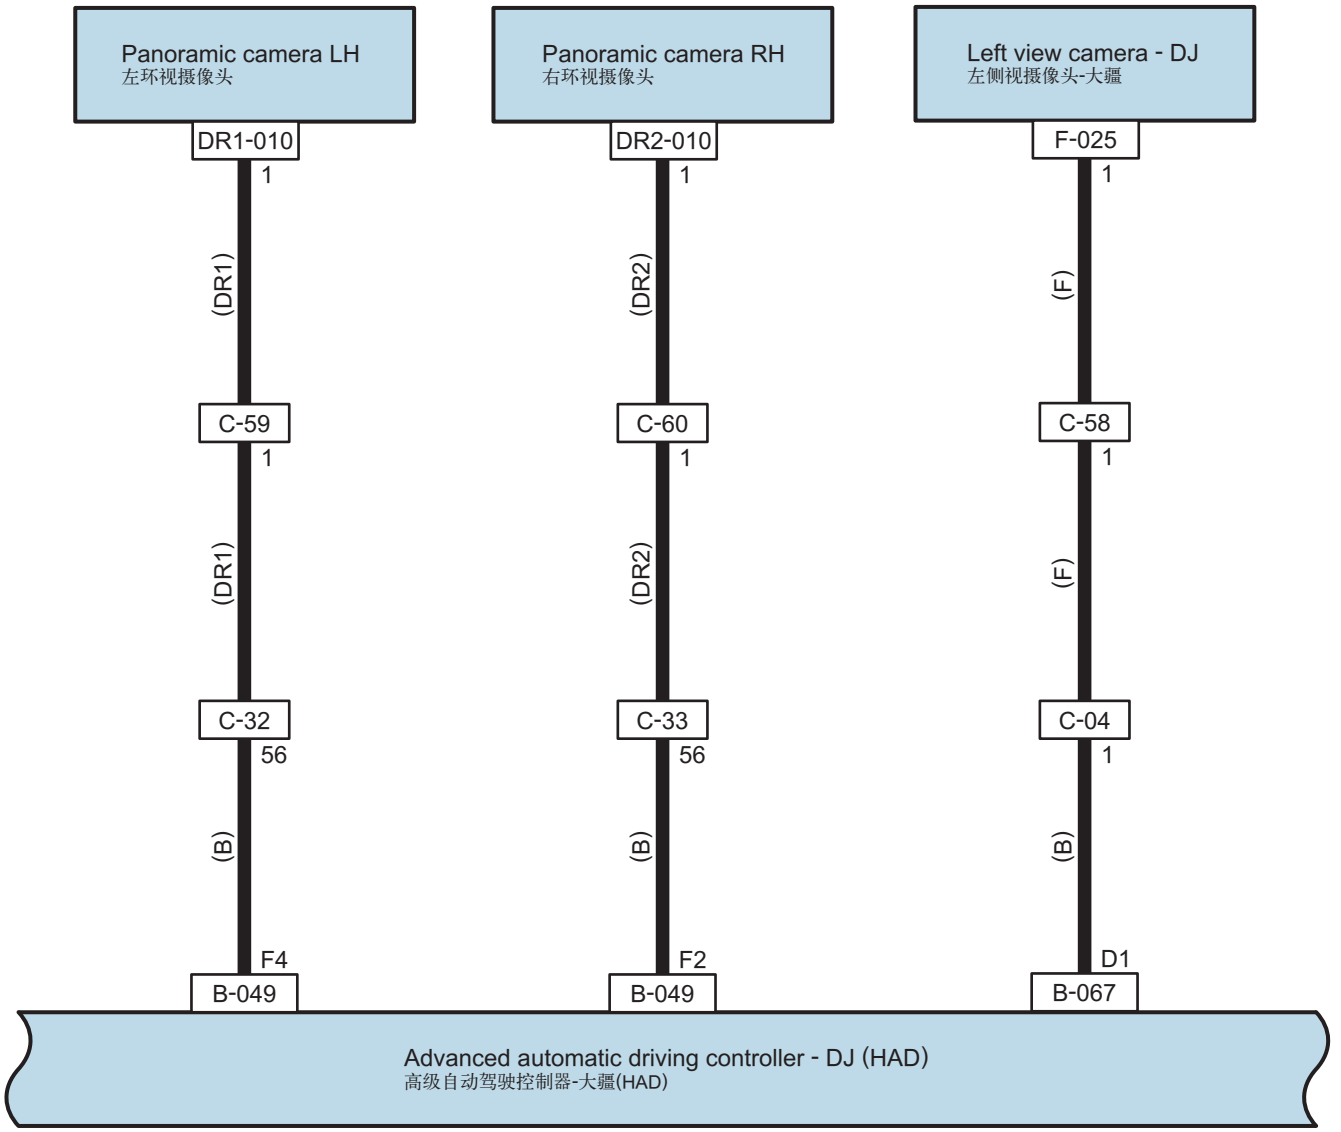

Low configuration
低配
Smart front camera controller - ME
智能前视摄像头控制器-ME
B-018
B1
B-018
B2
G(B)
W(B)
High configuration
高配
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)
B-066
C3
B-066
C4
G(B)
W(B)
B8
B-024
B7
B-024
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

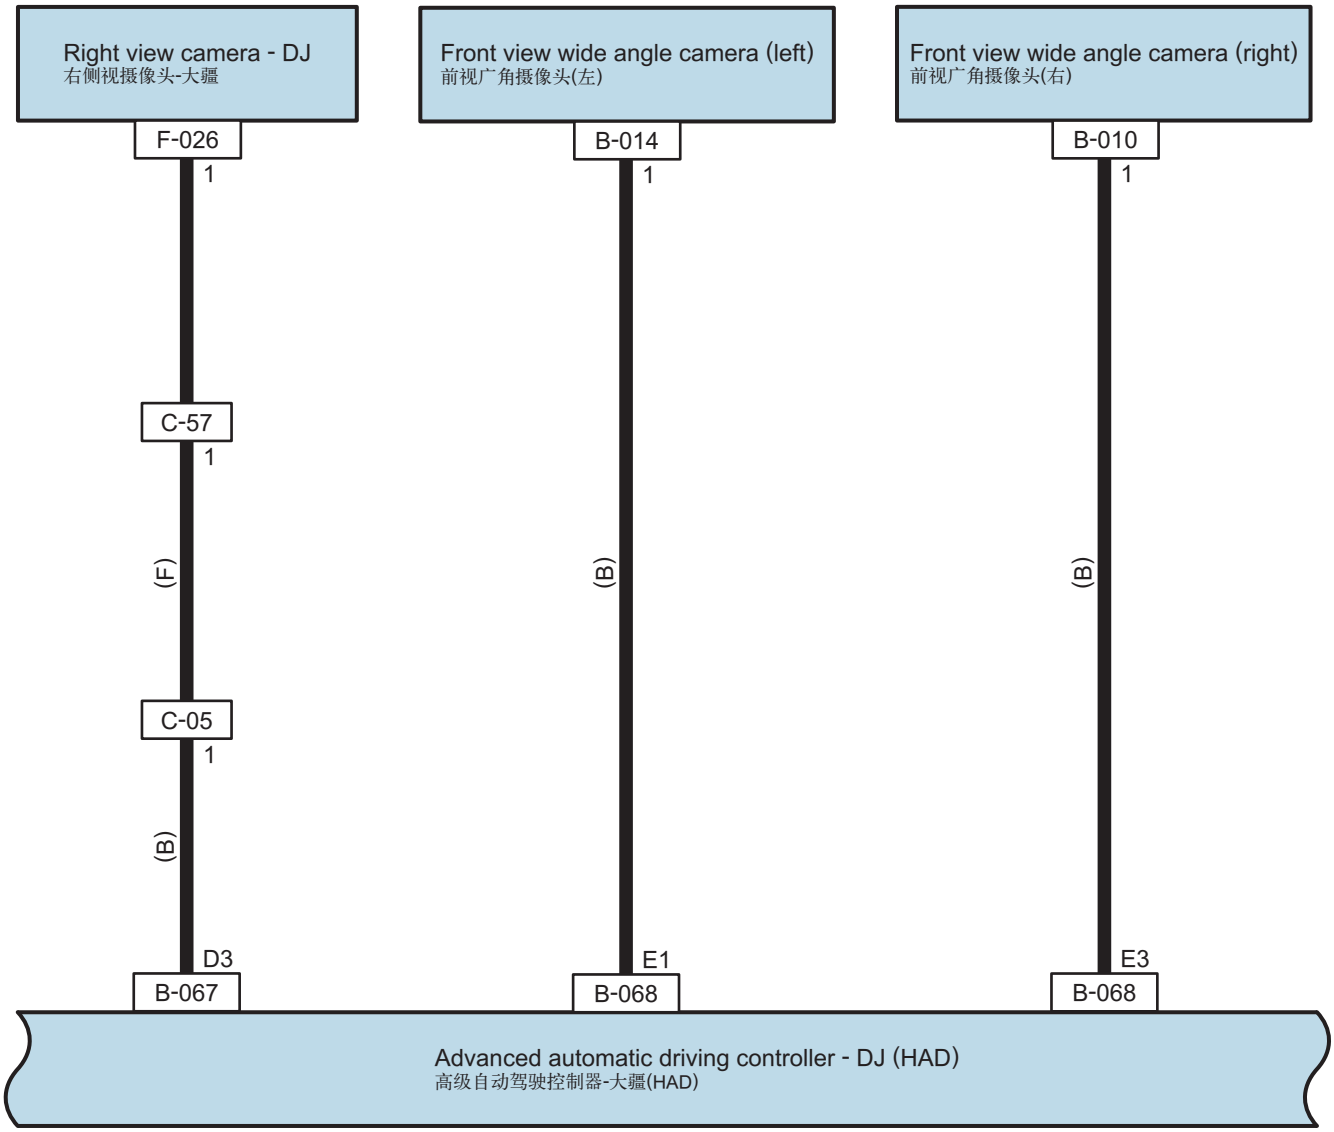

Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
Diagnostic interface 2
诊断接口2
B-092
B-092
B-026
B-026
B-026
B-026
B2
B1
1
9
6
14
G(B)
W(B)
G/P(B)
W/G(B)
W/R(B)
Y/W(B)
B12
B11
A5
A6
A52
A53
B-024
B-024
B-023
B-023
B-023
B-023
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

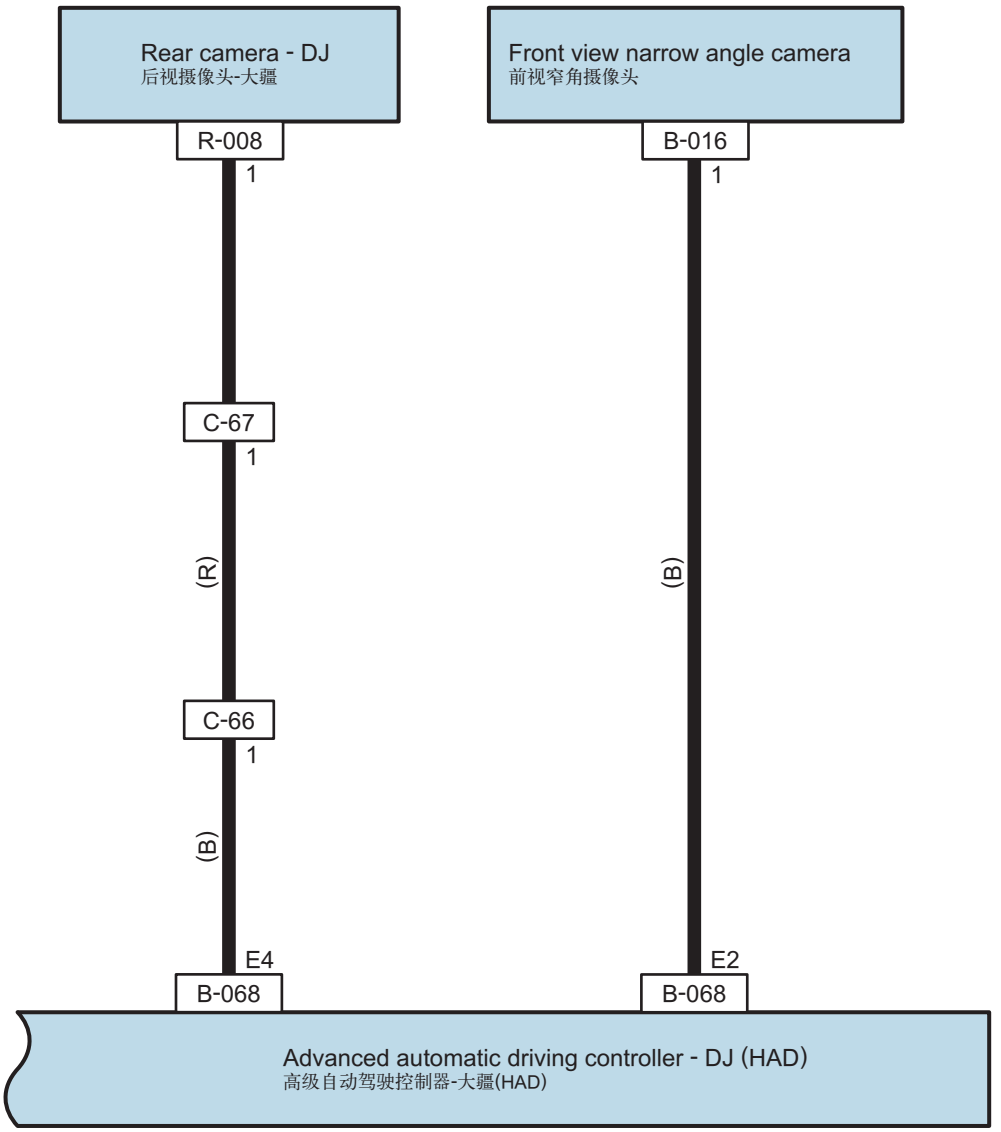

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-052
M22
R(B)
Automatic driving_CAN
自动驾驶_CAN
L(B)
G(B)
Front automatic driving radar_CAN
前自动驾驶雷达_CAN
GR(B)
O/BR(B)
A3
B-065
A7
B-065
A8
B-065
A11
B-065
A12
B-065
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)
B-065
A4
B(B)
87

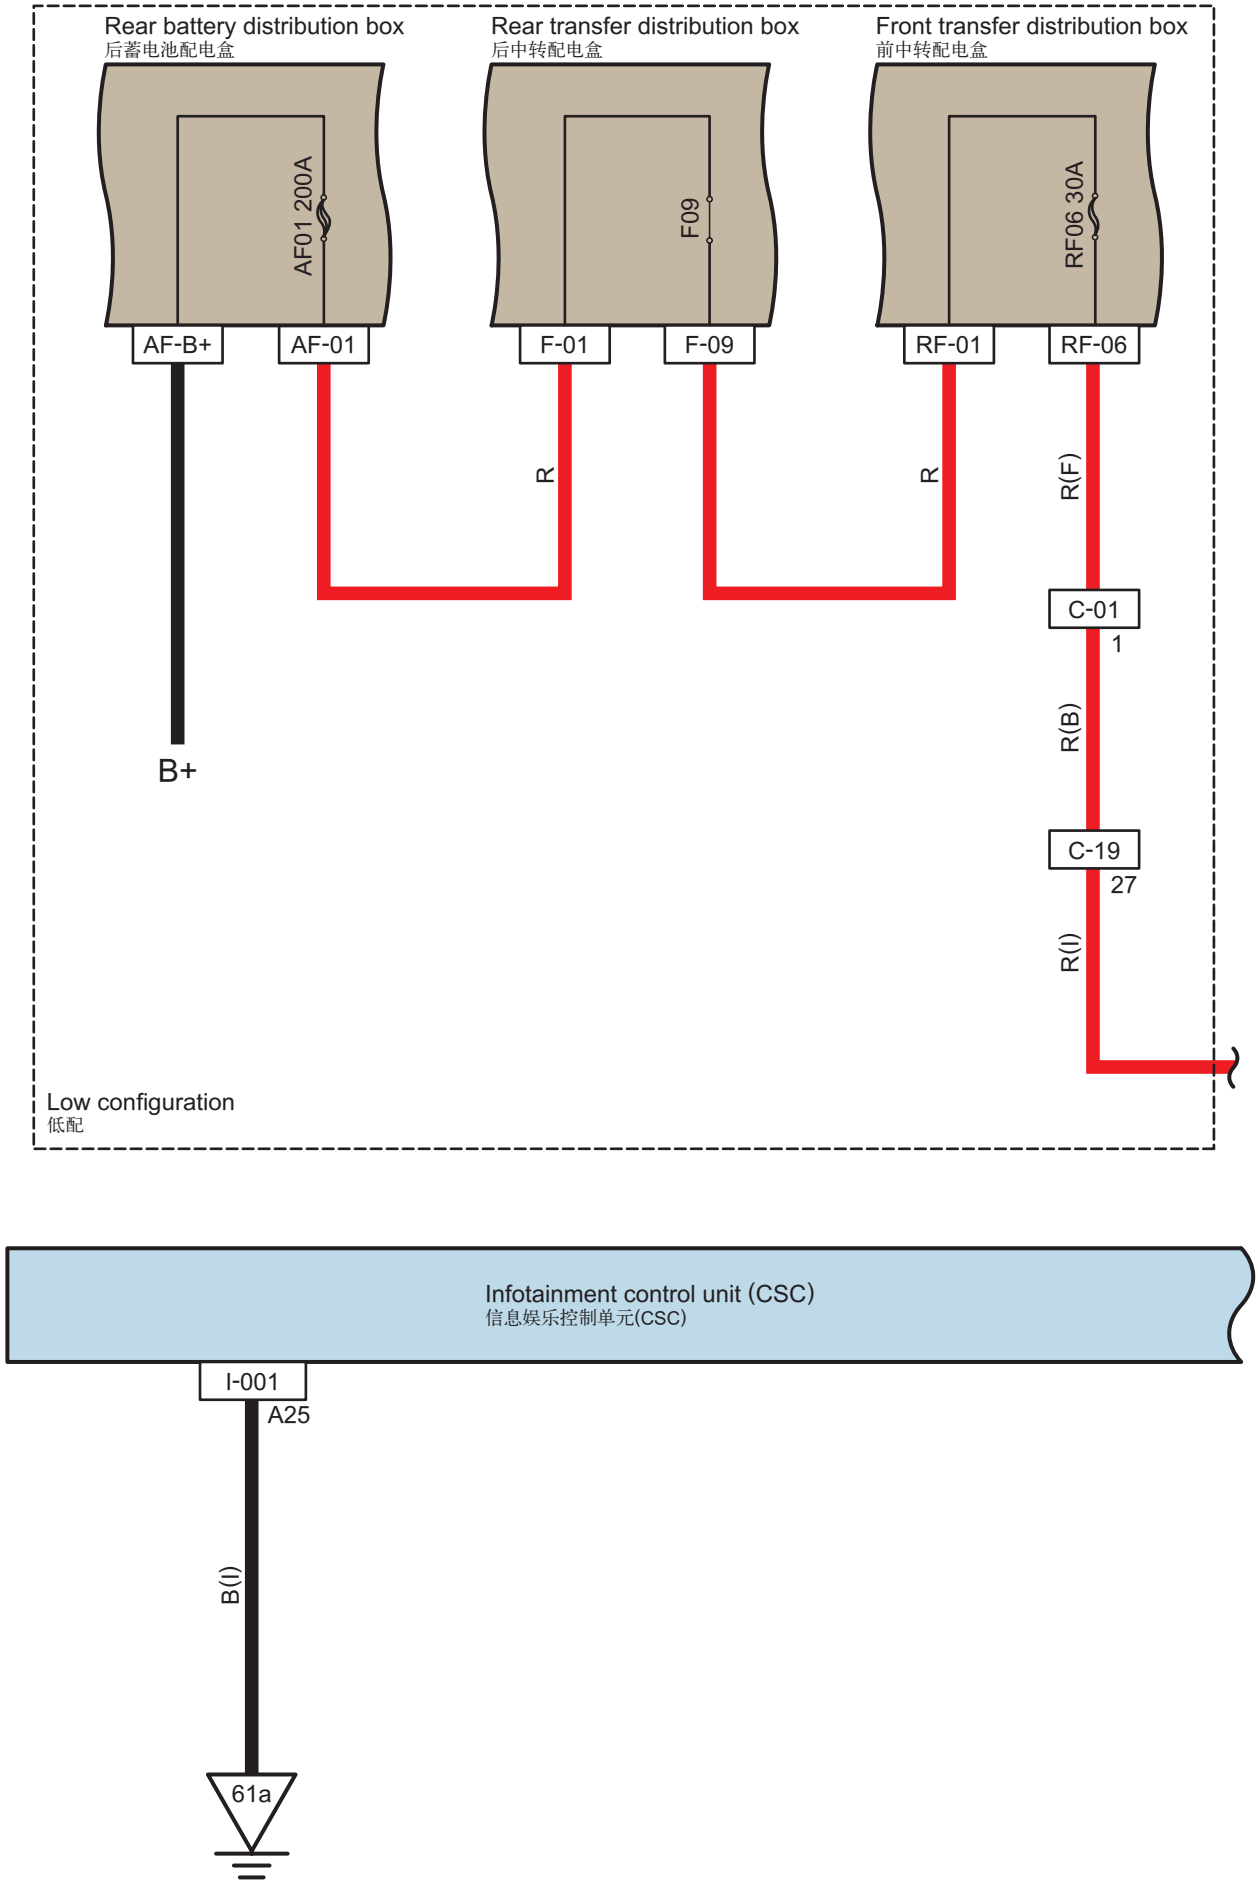

Diagnostic interface 3
诊断接口3
B-061
4
B-061
12
B/Y(B)
Y/W(B)
B9
B10
B-125
B-125
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
I-009
I4
(I)
C-30
1
(B)
G2
B-050
Rear panoramic camera - DJ
后环视摄像头-大疆
RR-006
1
(RR)
C-54
1
(B)
F3
B-049
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)

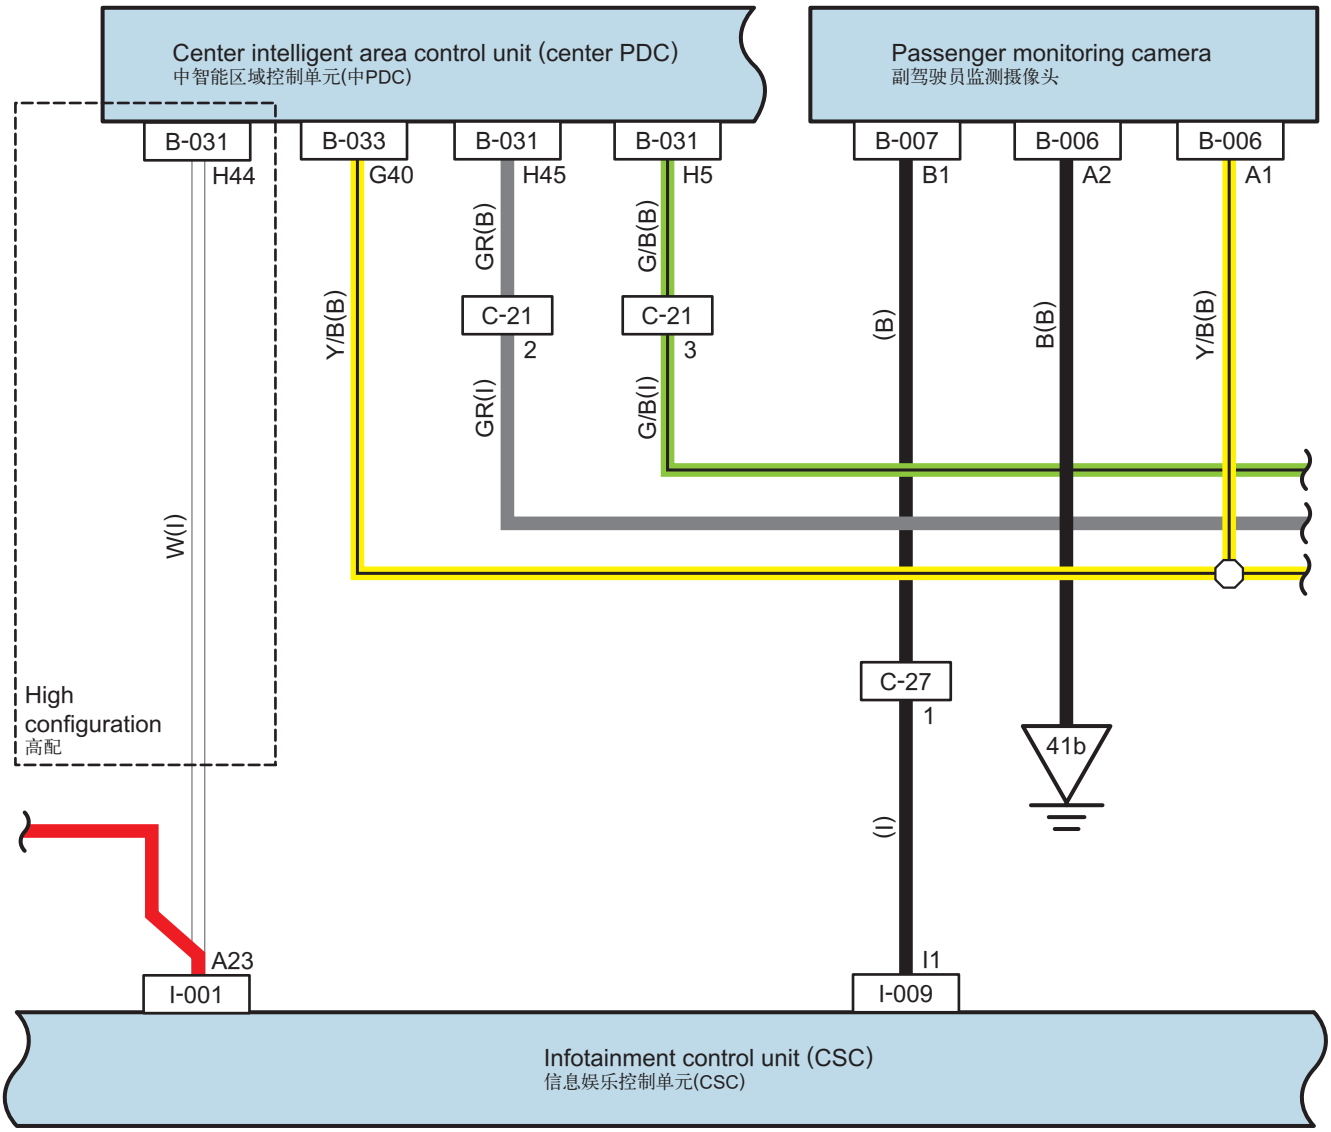

Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
GNSS antenna LH
左GNSS天线
Front panoramic camera - DJ
前环视摄像头-大疆
B-024
B8
B-024
B7
B-042
1
FF-006
1
G(B)
W(B)
(B)
(FF)
C-14
1
(F)
C-06
1
(B)
C3
C4
H1
F1
B-066
B-066
B-051
B-049
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)

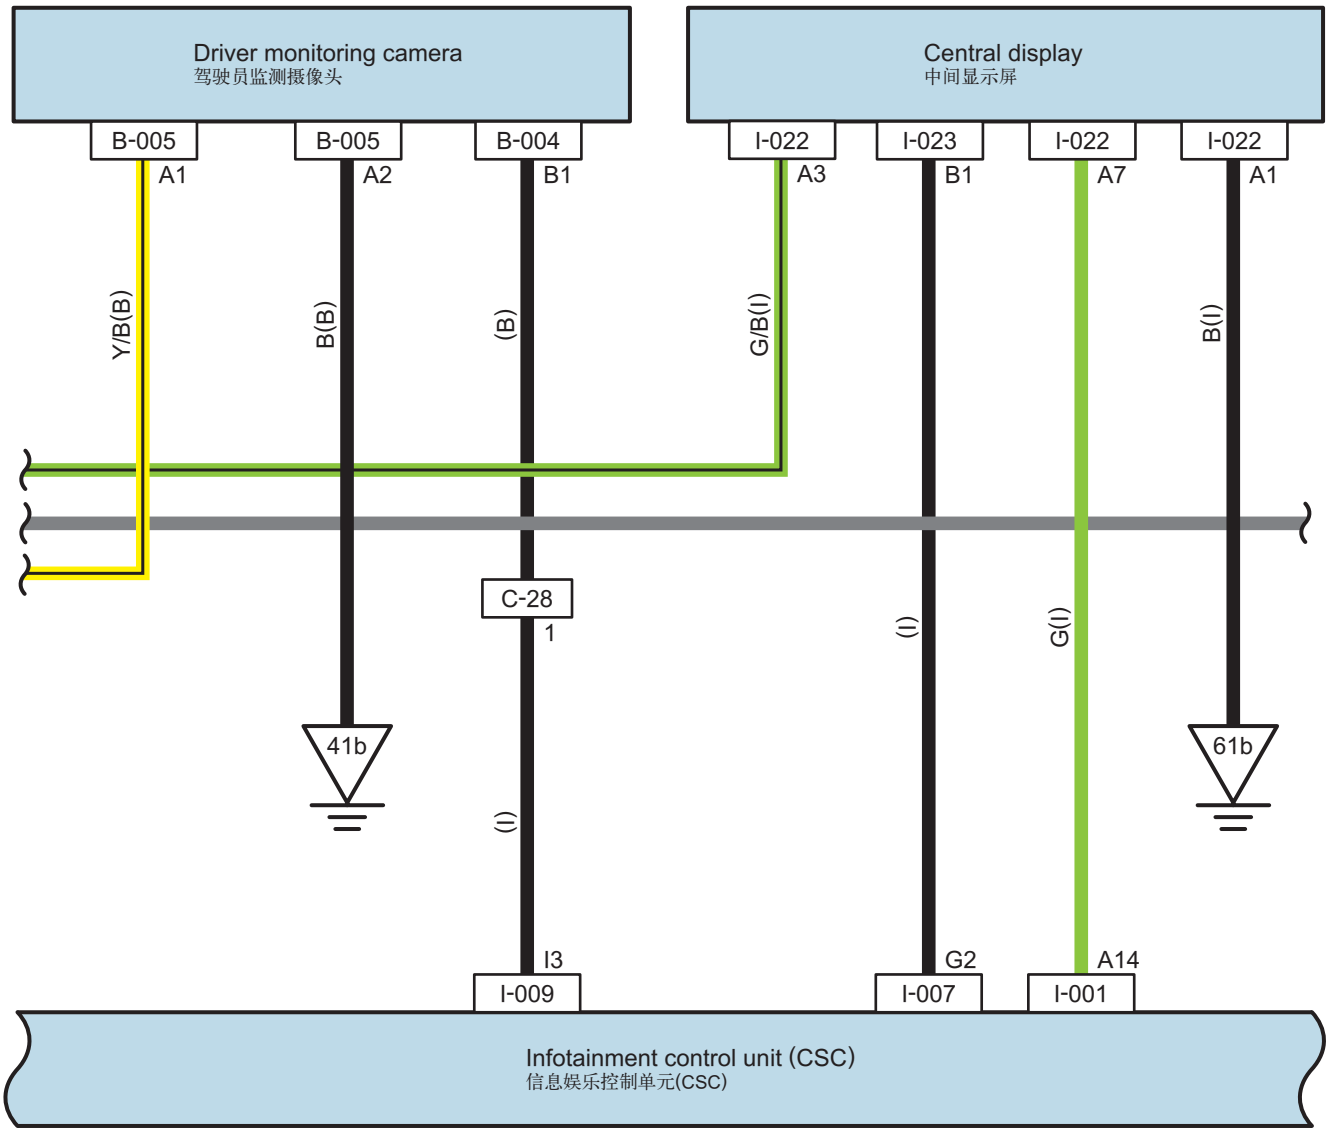

Panoramic camera LH
左环视摄像头
DR1-010
1
(DR1)
C-59
1
(DR1)
C-32
56
(B)
F4
B-049
Panoramic camera RH
右环视摄像头
DR2-010
1
(DR2)
C-60
1
(DR2)
C-33
56
(B)
F2
B-049
Left view camera - DJ
左侧视摄像头-大疆
F-025
1
(F)
C-58
1
(F)
C-04
1
(B)
D1
B-067
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)

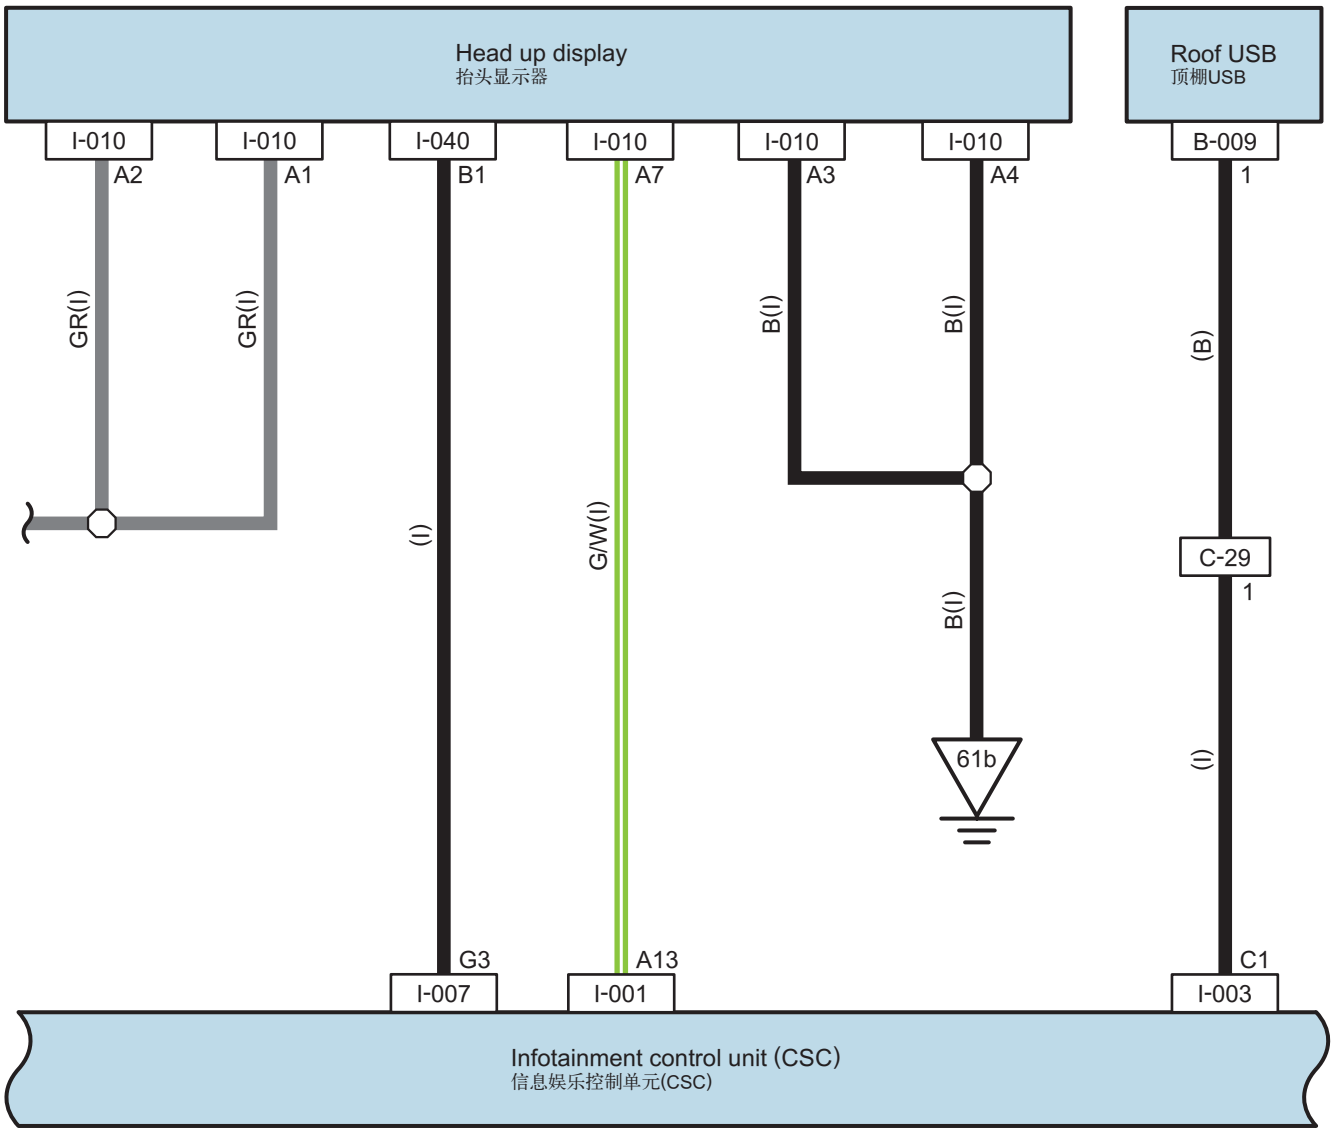

Right view camera - DJ
右侧视摄像头-大疆
F-026
1
C-57
1
(F)
C-05
1
(B)
D3
B-067
Front view wide angle camera (left)
前视广角摄像头(左)
B-014
1
(B)
E1
B-068
Front view wide angle camera (right)
前视广角摄像头(右)
B-010
1
(B)
E3
B-068
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)

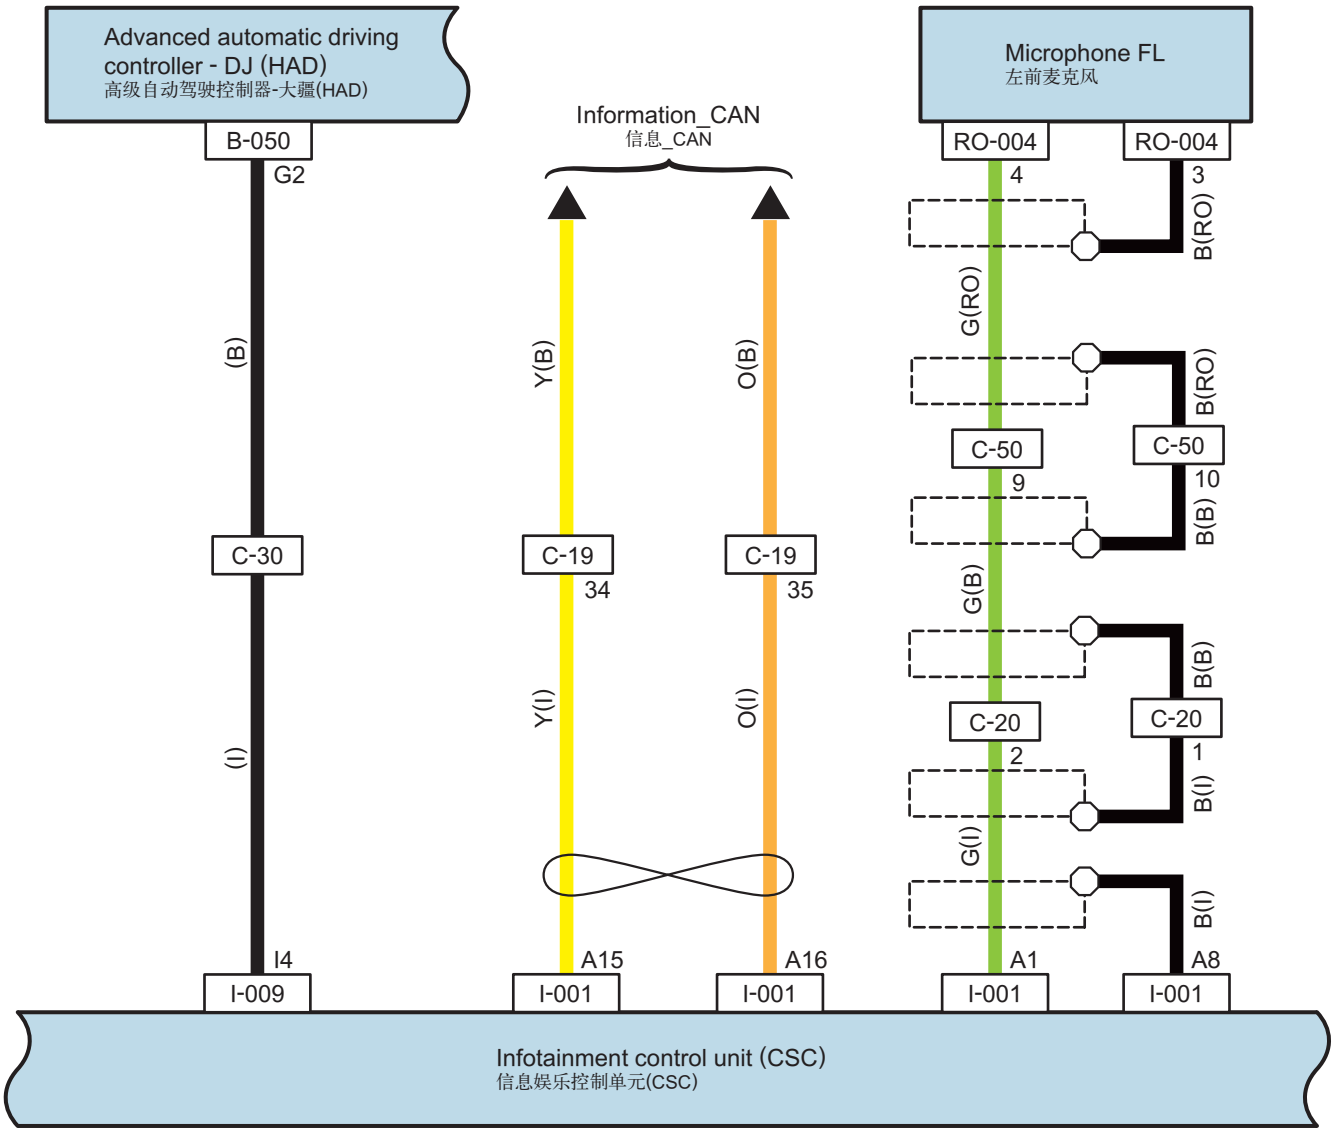

Rear camera - DJ
后视摄像头-大疆
Front view narrow angle camera
前视窄角摄像头
R-008
1
B-016
1
C-67
1
(R)
(B)
C-66
1
(B)
E4
E2
B-068
B-068
Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)

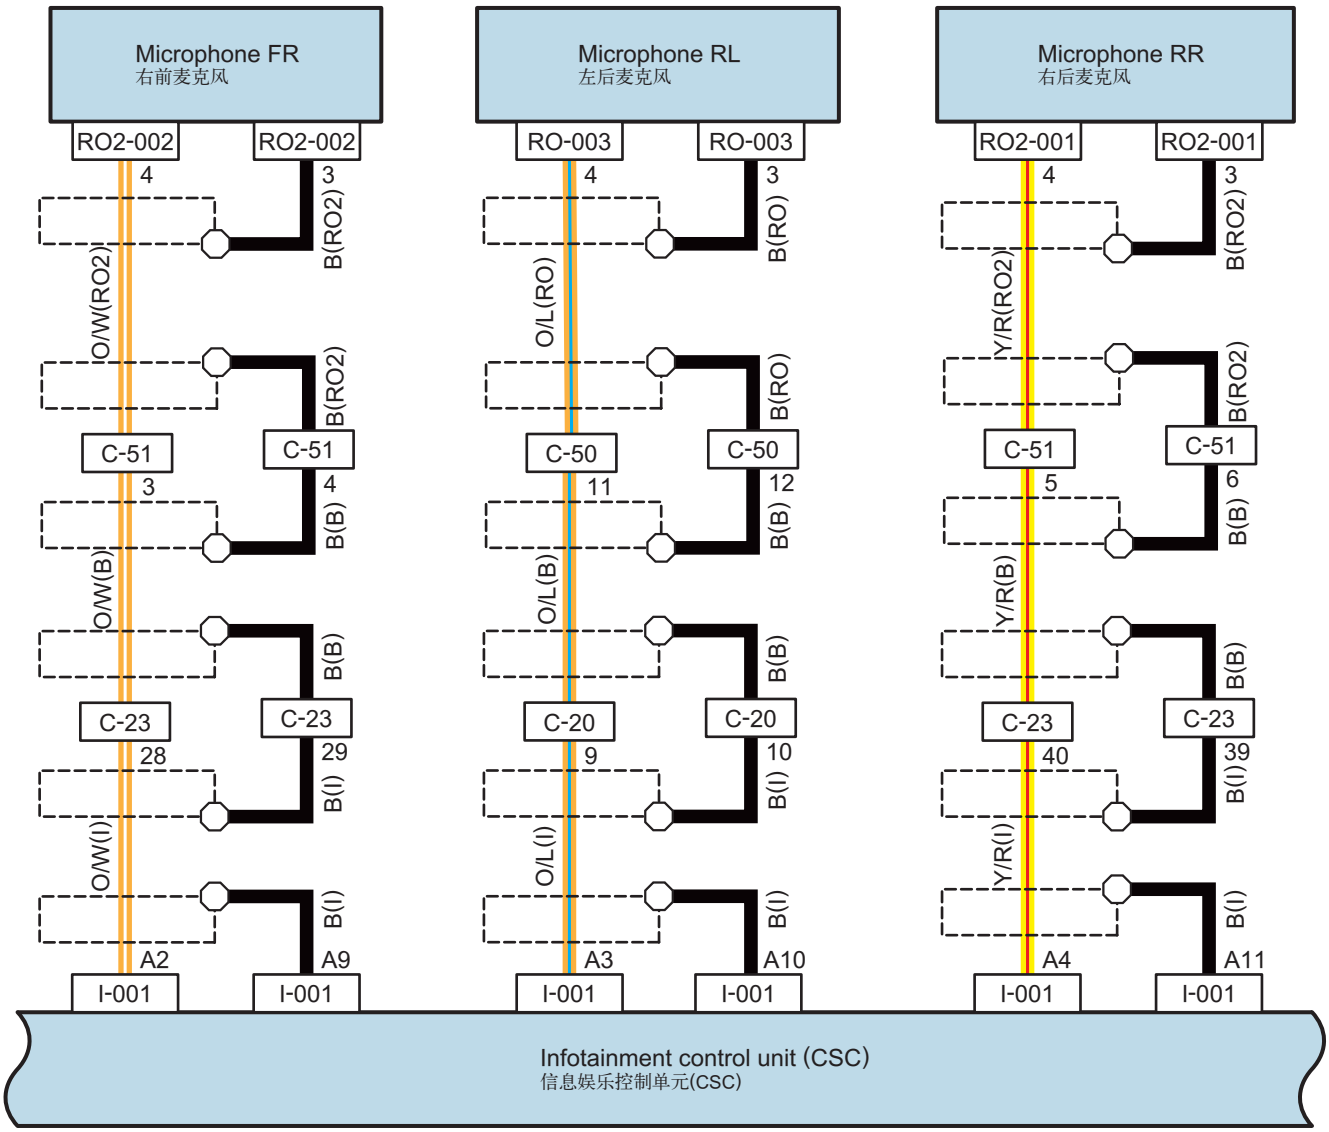

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
Rear transfer distribution box
后中转配电盒
F09
F-01
F-09
R
R
Front transfer distribution box
前中转配电盒
RF06 30A
RF-01
RF-06
R(F)
C-01
1
R(B)
C-19
27
R(I)
Low configuration
低配
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
I-001
A25
B(I)
61a

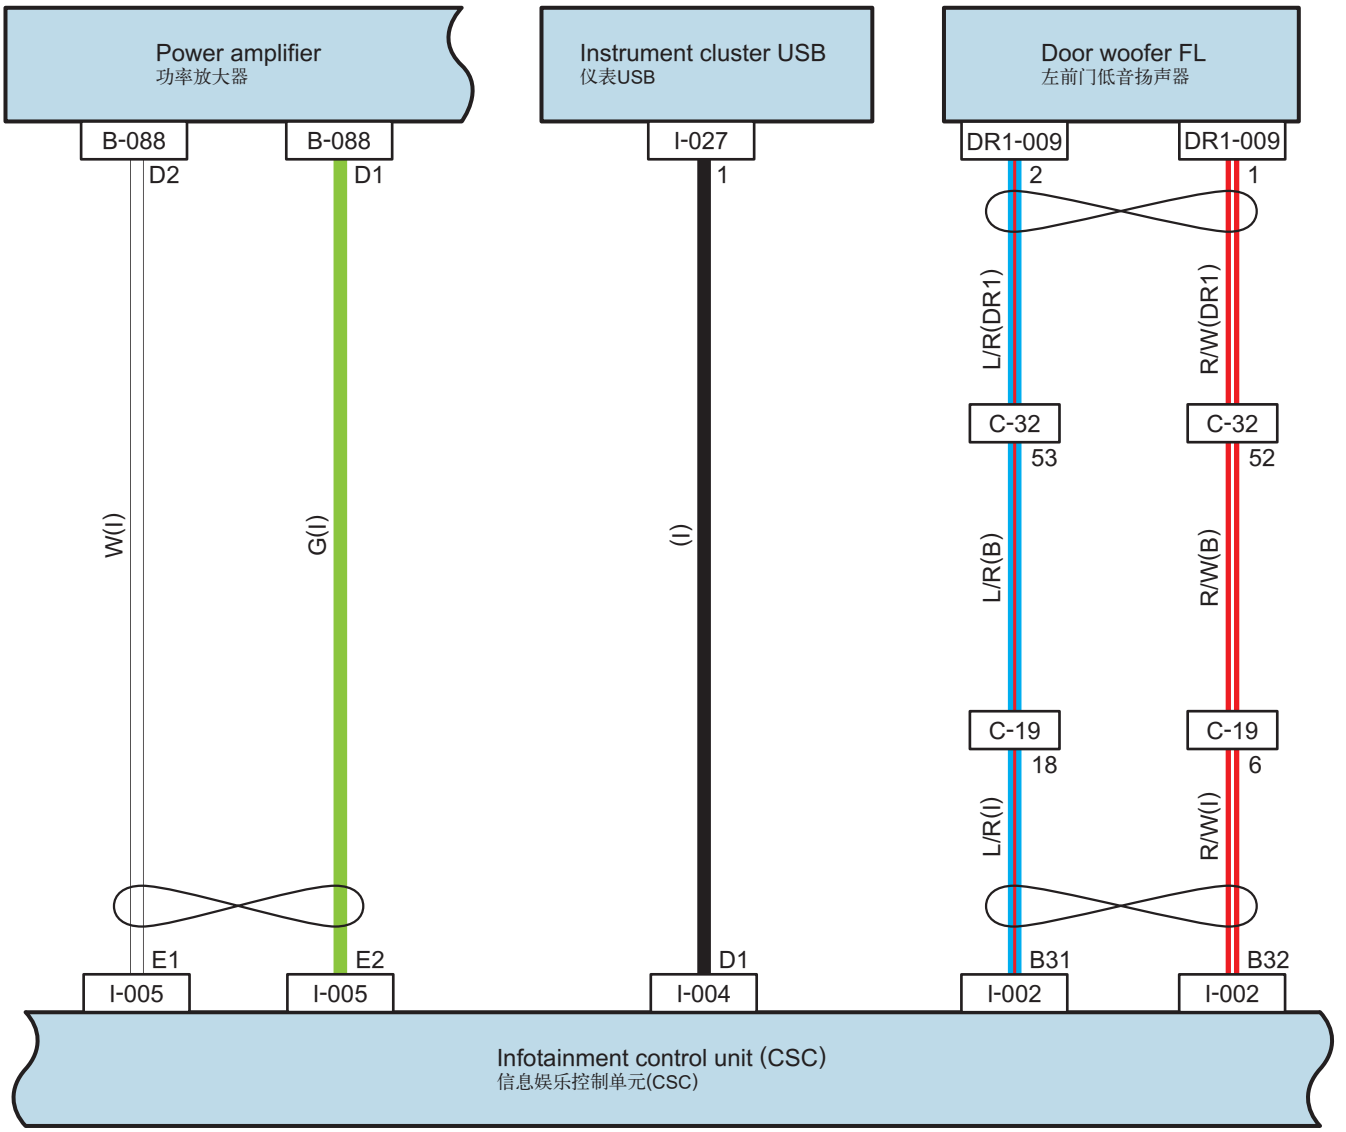

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
Passenger monitoring camera
副驾驶员监测摄像头
B-031
H44
B-033
G40
B-031
H45
B-031
H5
B-007
B1
B-006
A2
B-006
A1
GR(B)
G/B(B)
Y/B(B)
C-21
2
C-21
3
GR(I)
G/B(I)
(B)
B(B)
Y/B(B)
W(I)
C-27
1
41b
(I)
High
configuration
高配
A23
I1
I-001
I-009
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

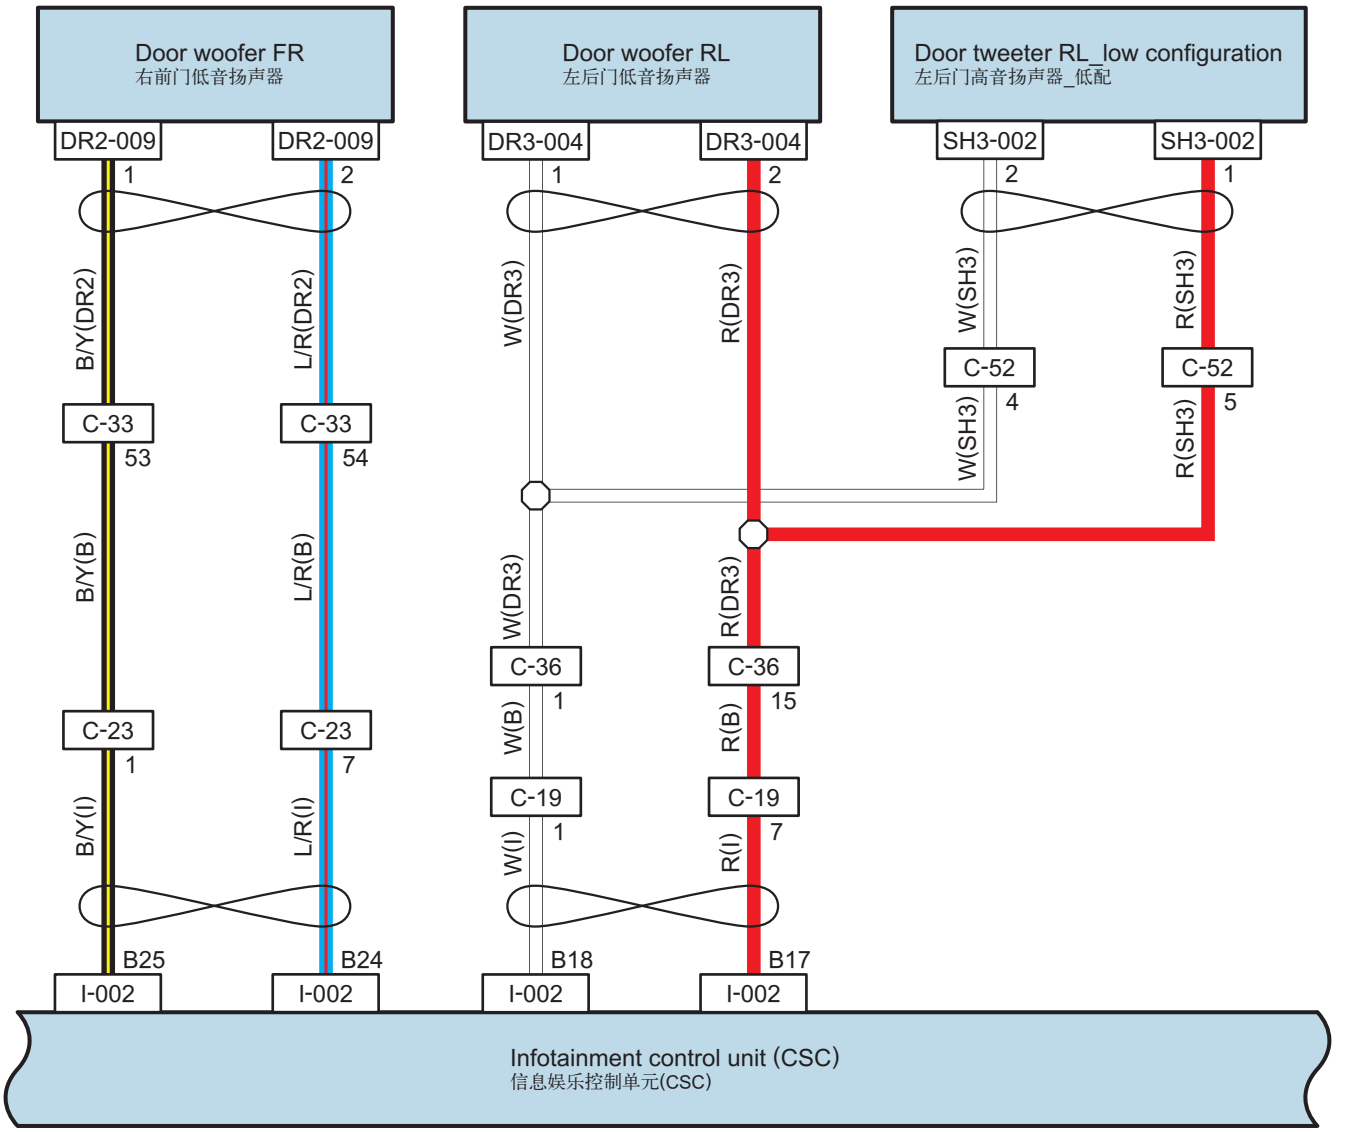

Driver monitoring camera
驾驶员监测摄像头
Central display
中间显示屏
B-005
A1
B-005
A2
B-004
B1
I-022
A3
I-023
B1
I-022
A7
I-022
A1
Y/B(B)
B(B)
(B)
G/B(I)
(I)
G(I)
B(I)
C-28
1
41b
61b
(I)
I3
G2
A14
I-009
I-007
I-001
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

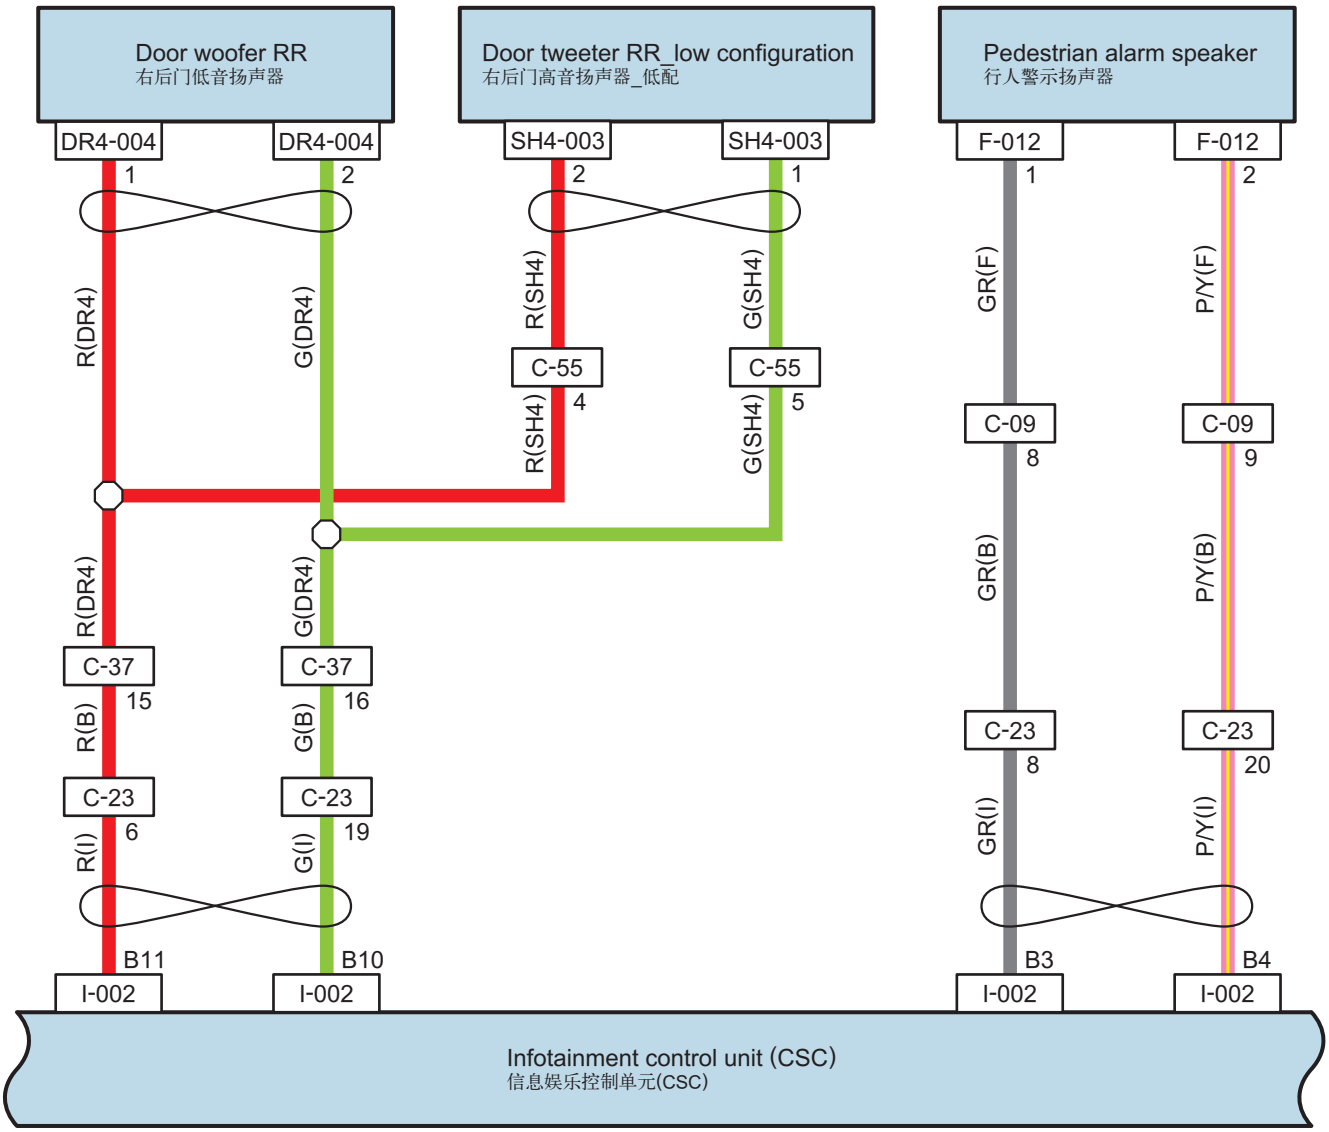

Head up display
抬头显示器
Roof USB
顶棚USB
I-010
A2
I-010
A1
I-040
B1
I-010
A7
I-010
A3
I-010
A4
B-009
1
GR(I)
GR(I)
(I)
G/W(I)
B(I)
B(I)
B(I)
(B)
C-29
1
(I)
61b
G3
A13
C1
I-007
I-001
I-003
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

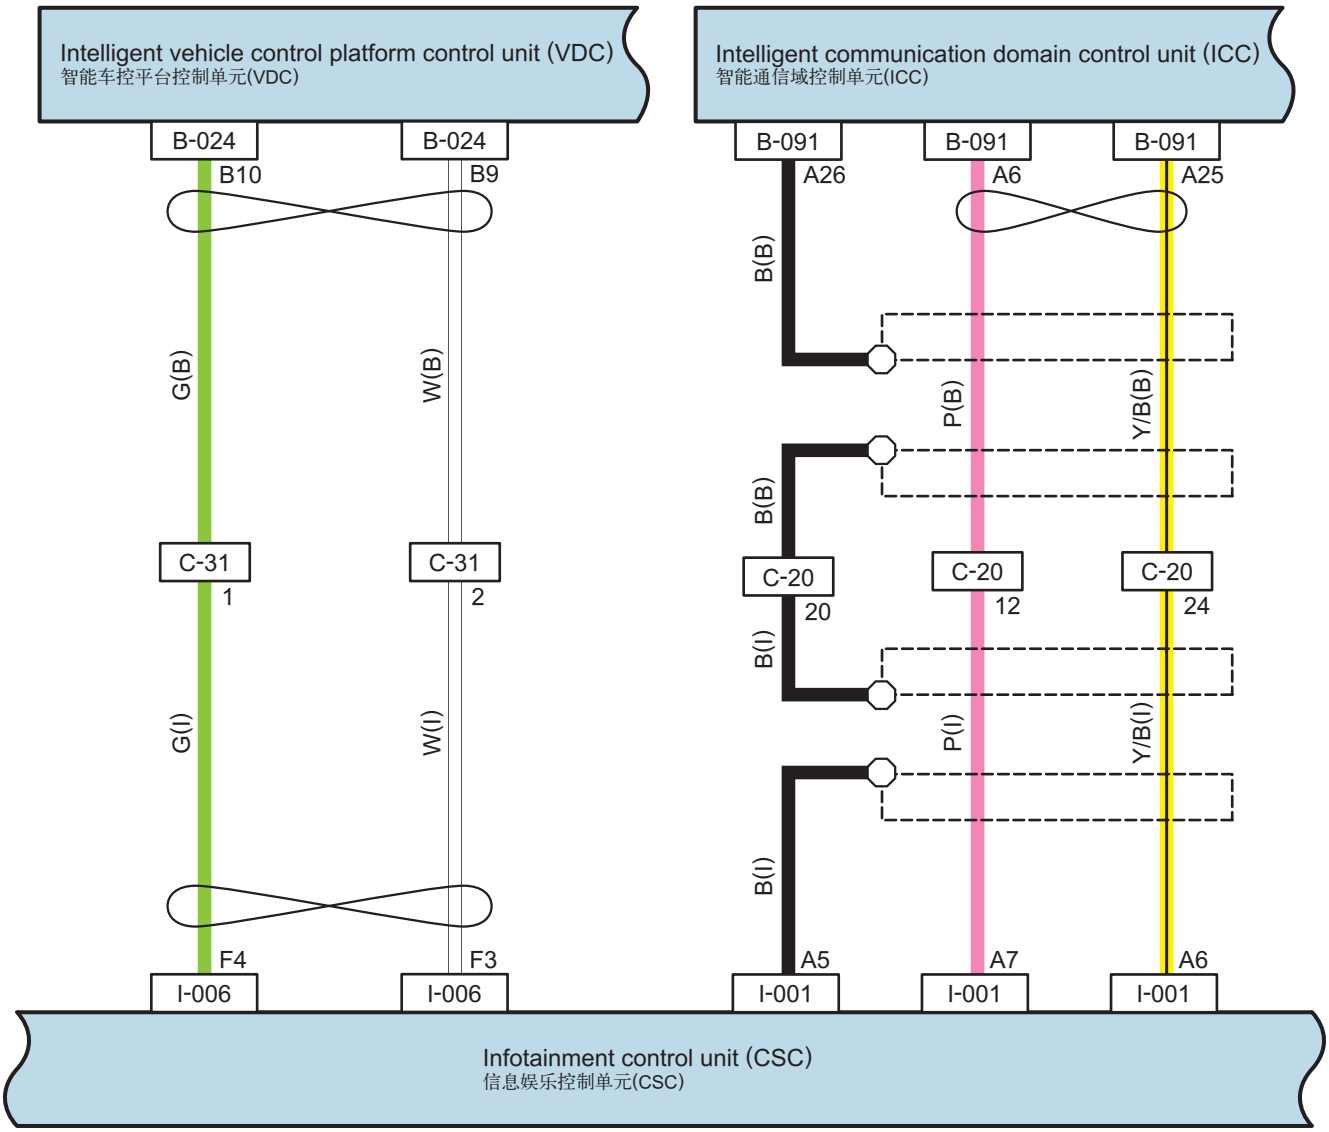

Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)
B-050
G2
(B)
C-30
(I)
I4
I-009
Information_CAN
信息_CAN
Y(B)
O(B)
C-19
34
C-19
35
Y(I)
O(I)
A15
A16
I-001
I-001
Microphone FL
左前麦克风
RO-004
RO-004
4
3
B(RO)
G(RO)
B(RO)
C-50
C-50
9
10
B(B)
G(B)
B(B)
C-20
C-20
2
1
B(I)
G(I)
B(I)
A1
A8
I-001
I-001
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

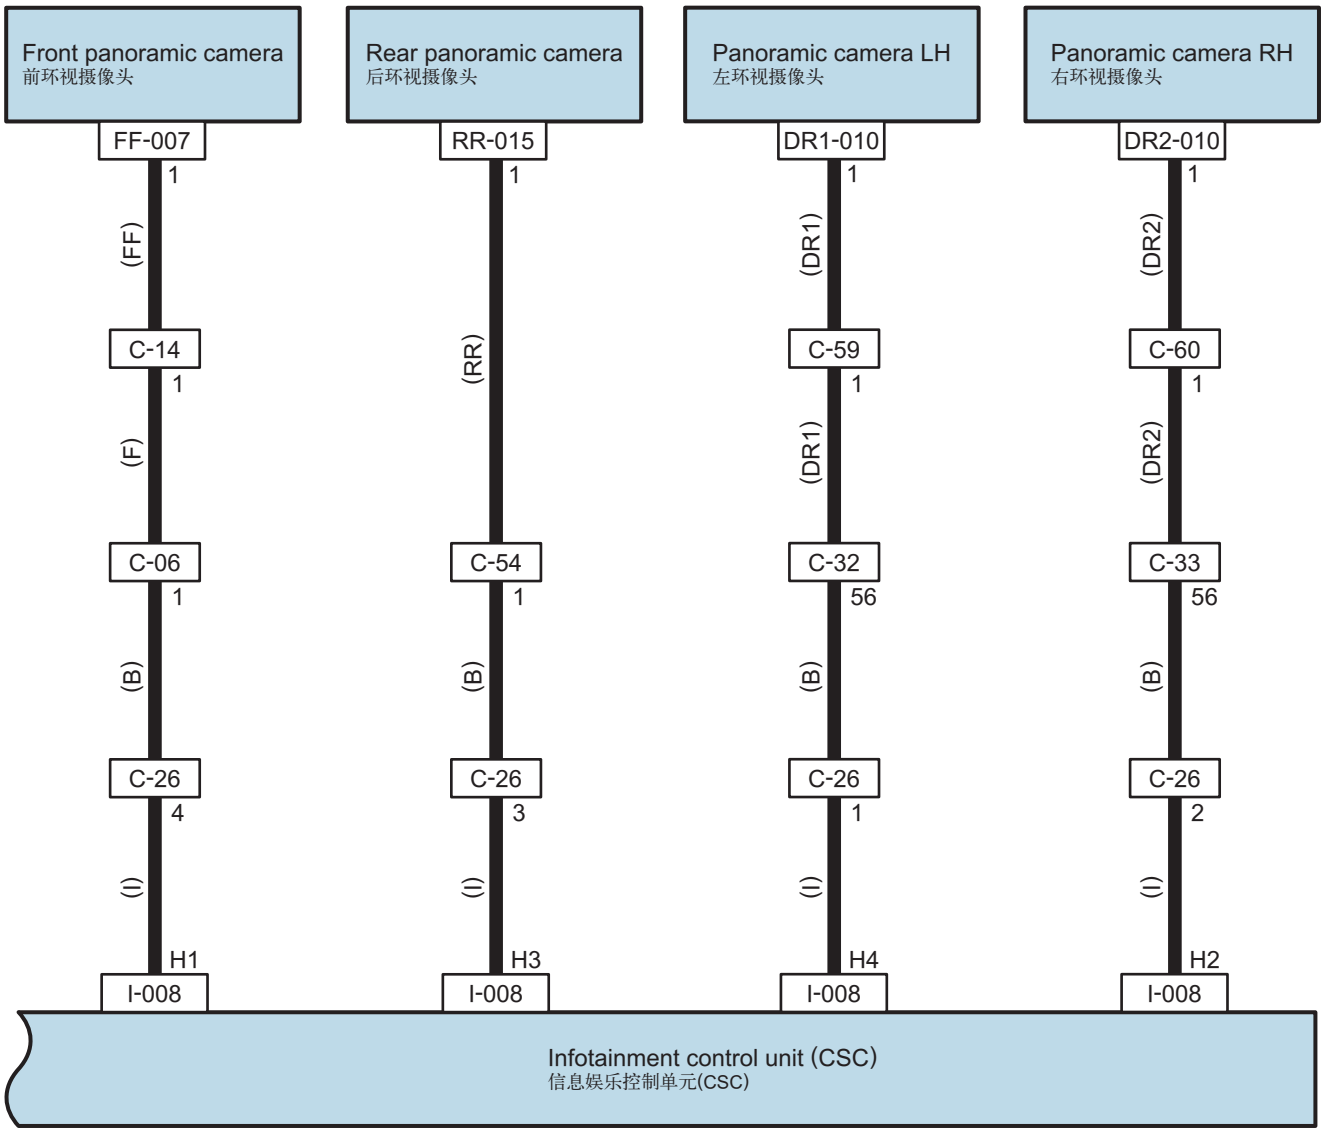

Microphone FR
右前麦克风
Microphone RL
左后麦克风
Microphone RR
右后麦克风
RO2-002
RO2-002
RO-003
RO-003
RO2-001
RO2-001
4
3
B(RO2)
O/W(RO2)
B(RO)
O/L(RO)
Y/R(RO2)
C-51
C-50
C-51
5
6
B(B)
O/W(B)
O/L(B)
Y/R(B)
C-23
C-20
C-23
28
29
40
39
B(I)
O/W(I)
O/L(I)
Y/R(I)
A2
A9
A3
A10
A4
A11
I-001
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

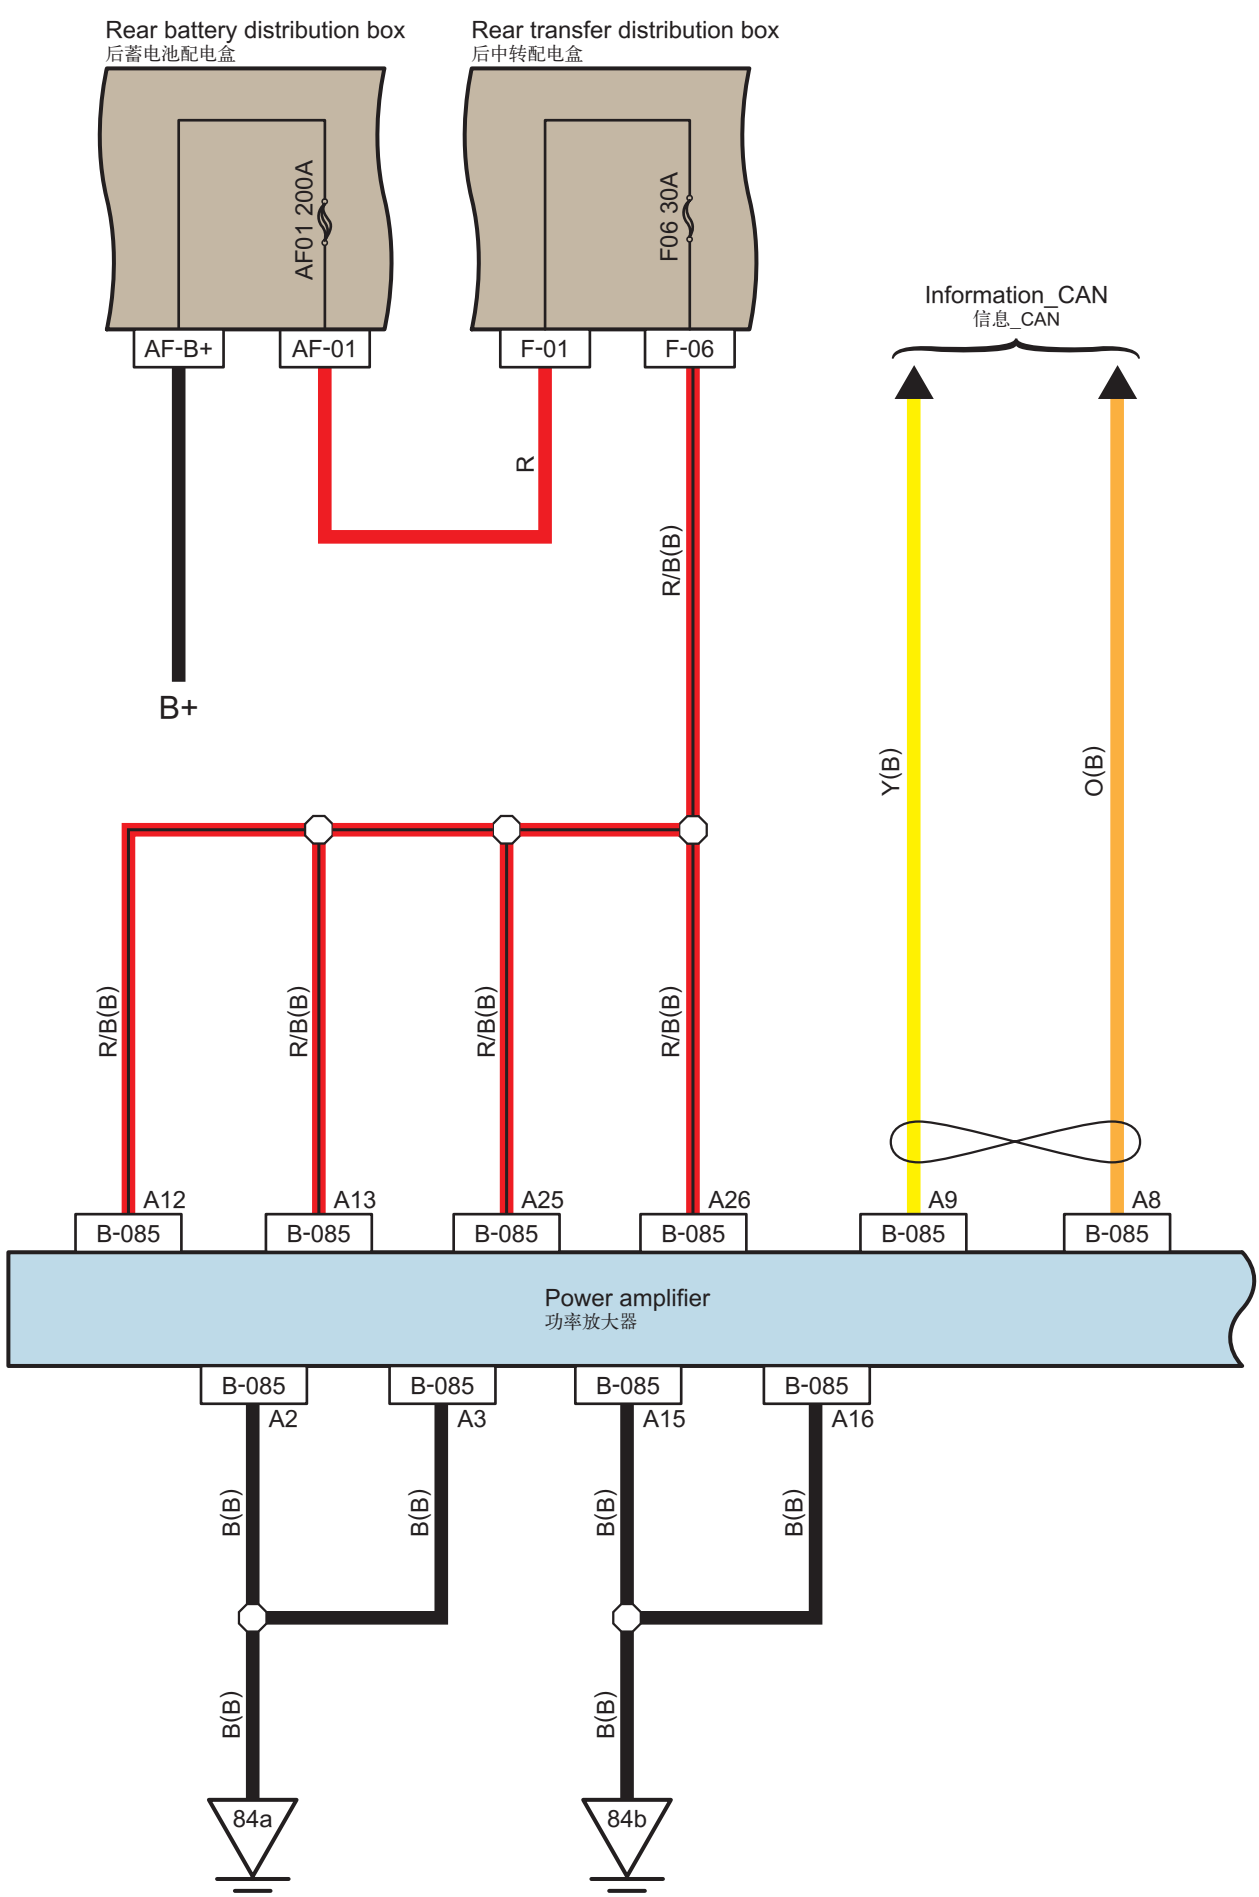

Power amplifier
功率放大器
B-088
D2
B-088
D1
W(I)
G(I)
E1
E2
I-005
I-005
Instrument cluster USB
仪表USB
I-027
1
(I)
D1
I-004
Door woofer FL
左前门低音扬声器
DR1-009
2
DR1-009
1
L/R(DR1)
R/W(DR1)
C-32
53
C-32
52
L/R(B)
R/W(B)
C-19
18
C-19
6
L/R(I)
R/W(I)
B31
B32
I-002
I-002
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

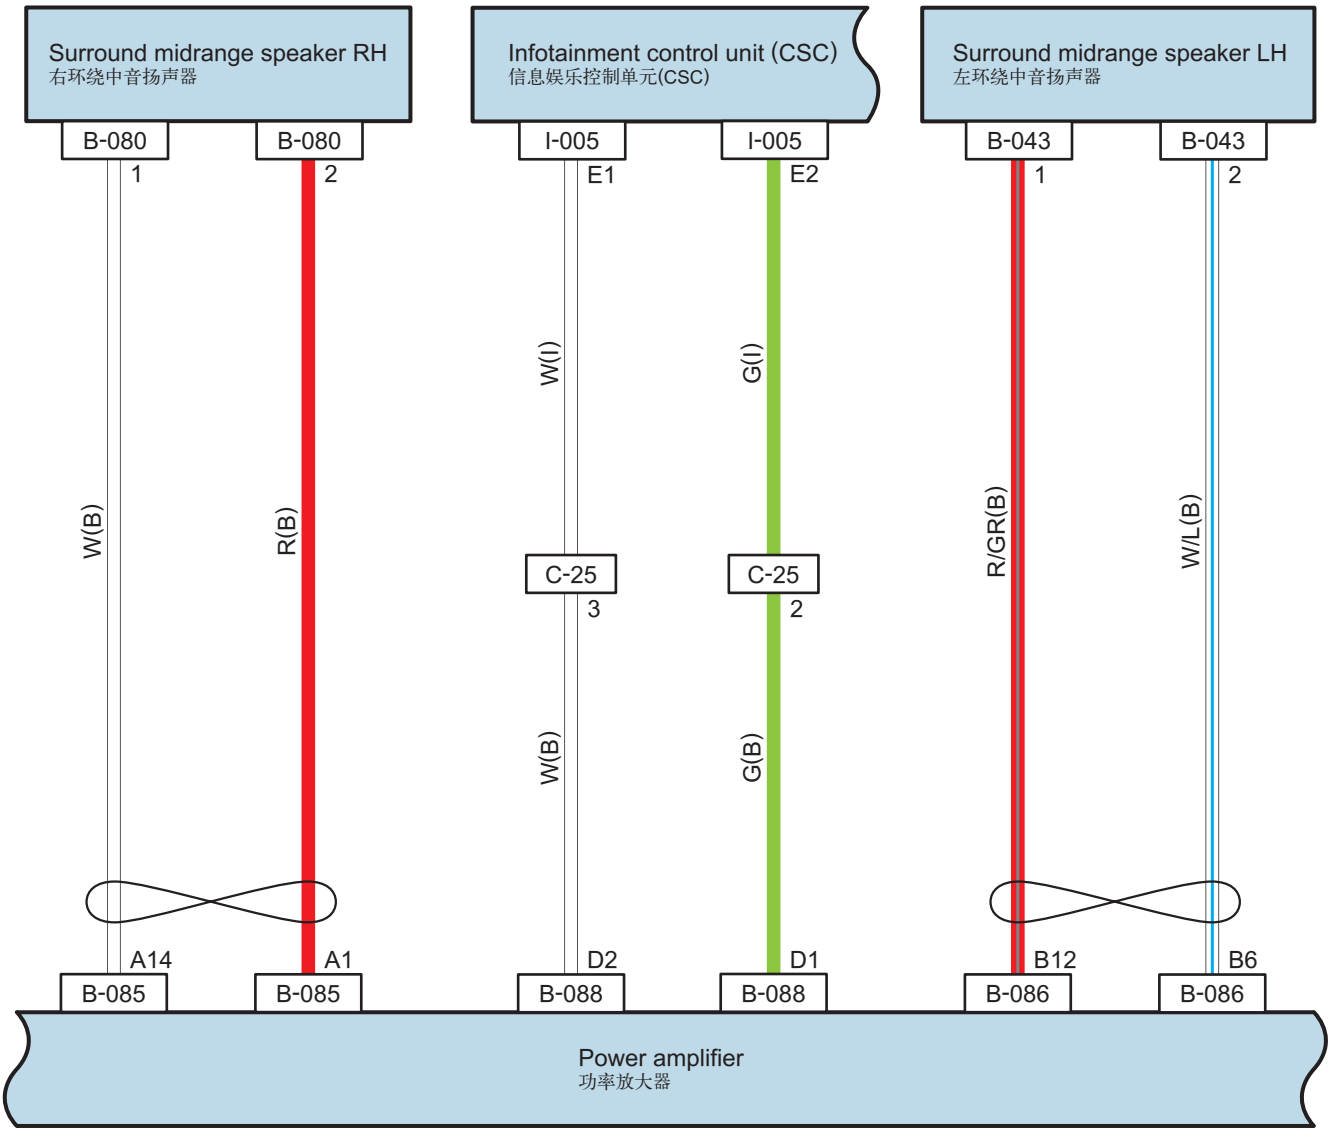

Door woofer FR
右前门低音扬声器
Door woofer RL
左后门低音扬声器
Door tweeter RL_low configuration
左后门高音扬声器_低配
DR2-009
1
DR2-009
2
DR3-004
1
DR3-004
2
SH3-002
2
SH3-002
1
B/Y(DR2)
L/R(DR2)
W(DR3)
R(DR3)
W(SH3)
R(SH3)
C-33
53
C-33
54
C-52
4
C-52
5
W(SH3)
R(SH3)
B/Y(B)
L/R(B)
W(DR3)
R(DR3)
C-36
1
C-36
15
C-23
1
C-23
7
W(B)
R(B)
C-19
1
C-19
7
B/Y(I)
L/R(I)
W(I)
R(I)
B25
B24
B18
B17
I-002
I-002
I-002
I-002
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

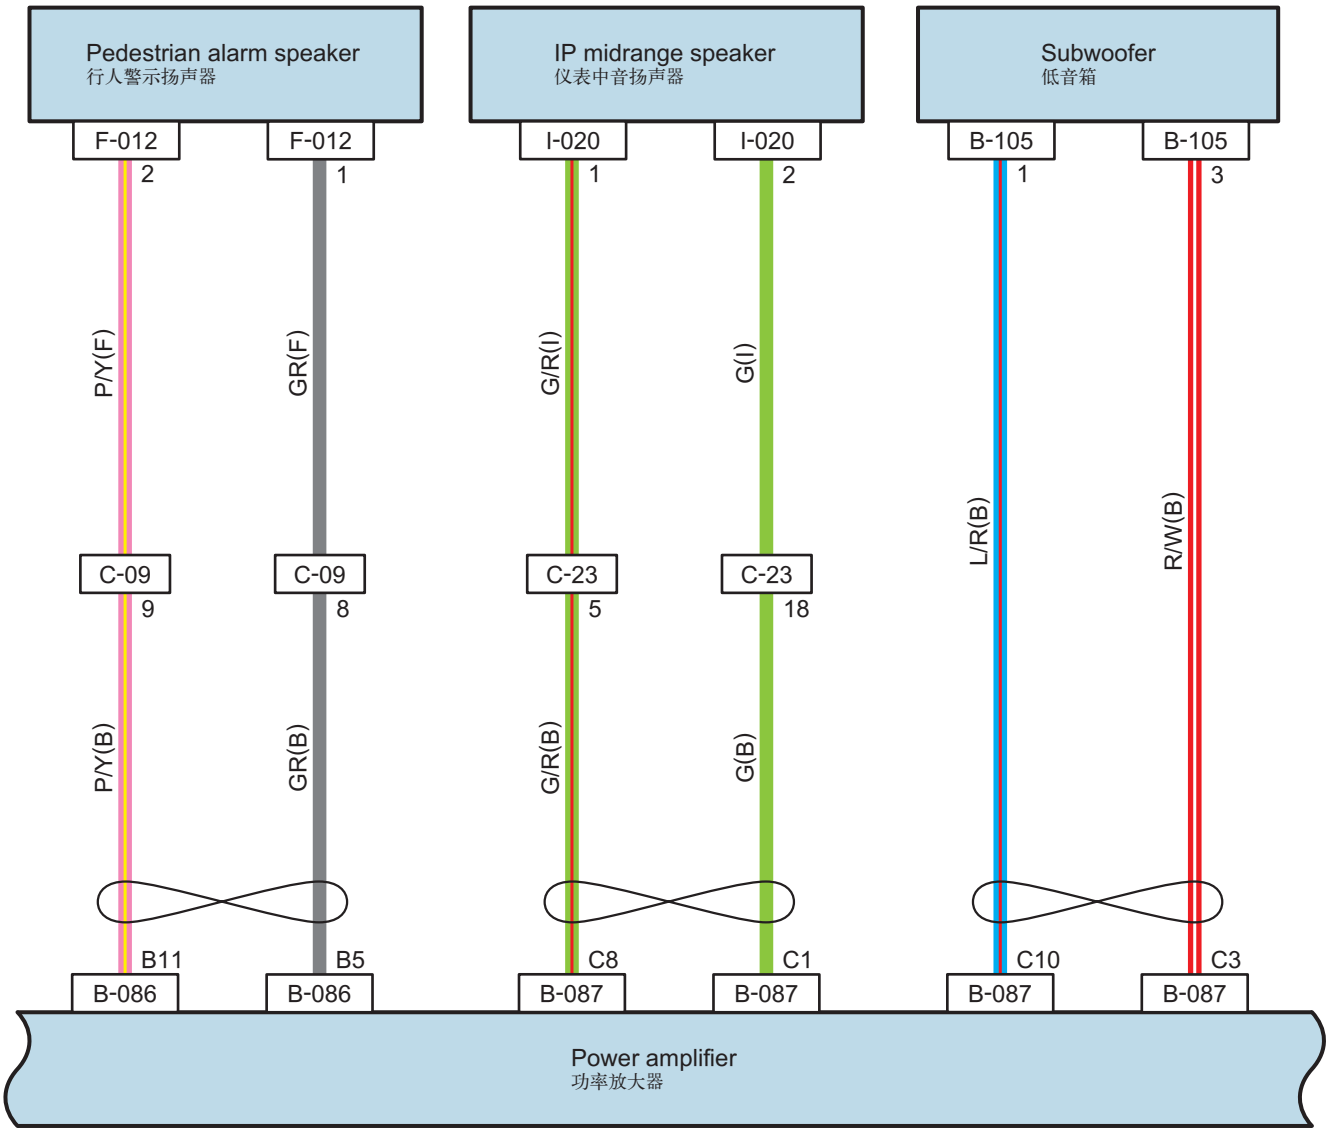

Door woofer RR
右后门低音扬声器
Door tweeter RR_low configuration
右后门高音扬声器_低配
Pedestrian alarm speaker
行人警示扬声器
DR4-004
1
DR4-004
2
SH4-003
2
SH4-003
1
F-012
1
F-012
2
R(DR4)
G(DR4)
R(SH4)
G(SH4)
GR(F)
P/Y(F)
C-55
4
C-55
5
C-09
8
C-09
9
R(SH4)
G(SH4)
GR(B)
P/Y(B)
R(DR4)
G(DR4)
C-37
15
C-37
16
C-23
8
C-23
20
R(B)
G(B)
GR(I)
P/Y(I)
C-23
6
C-23
19
R(I)
G(I)
B11
B10
B3
B4
I-002
I-002
I-002
I-002
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

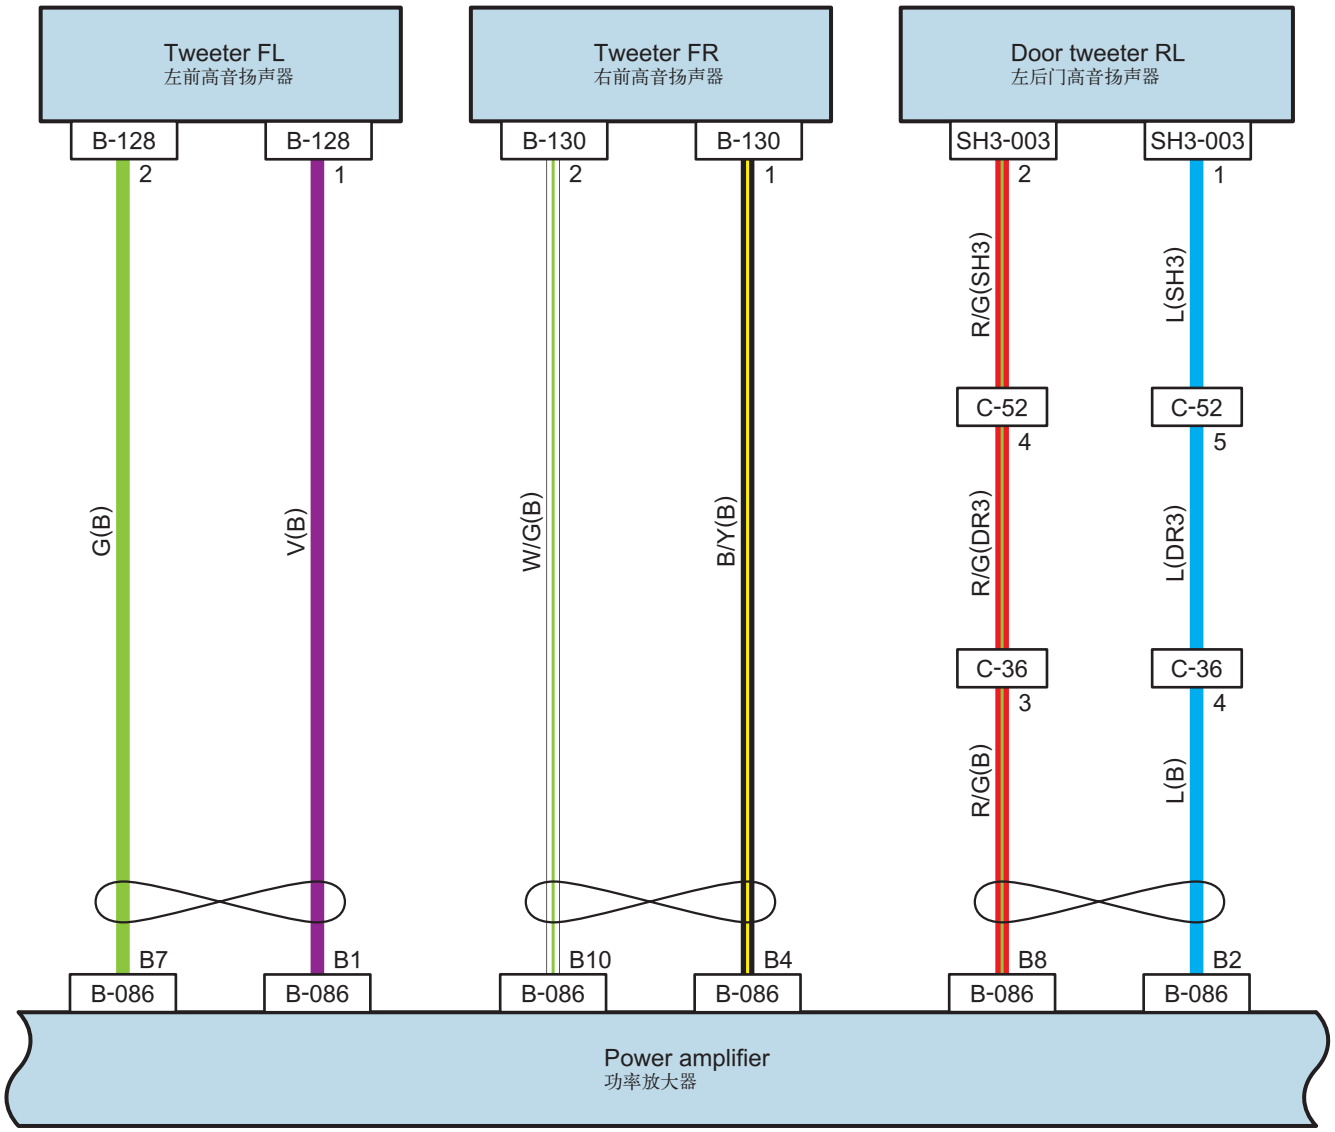

Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
B-024
B10
B-024
B9
G(B)
W(B)
C-31
1
C-31
2
G(I)
W(I)
F4
F3
I-006
I-006
B-091
A26
B-091
A6
B-091
A25
B(B)
P(B)
Y/B(B)
B(B)
C-20
20
C-20
12
C-20
24
B(I)
P(I)
Y/B(I)
B(I)
A5
A7
A6
I-001
I-001
I-001
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

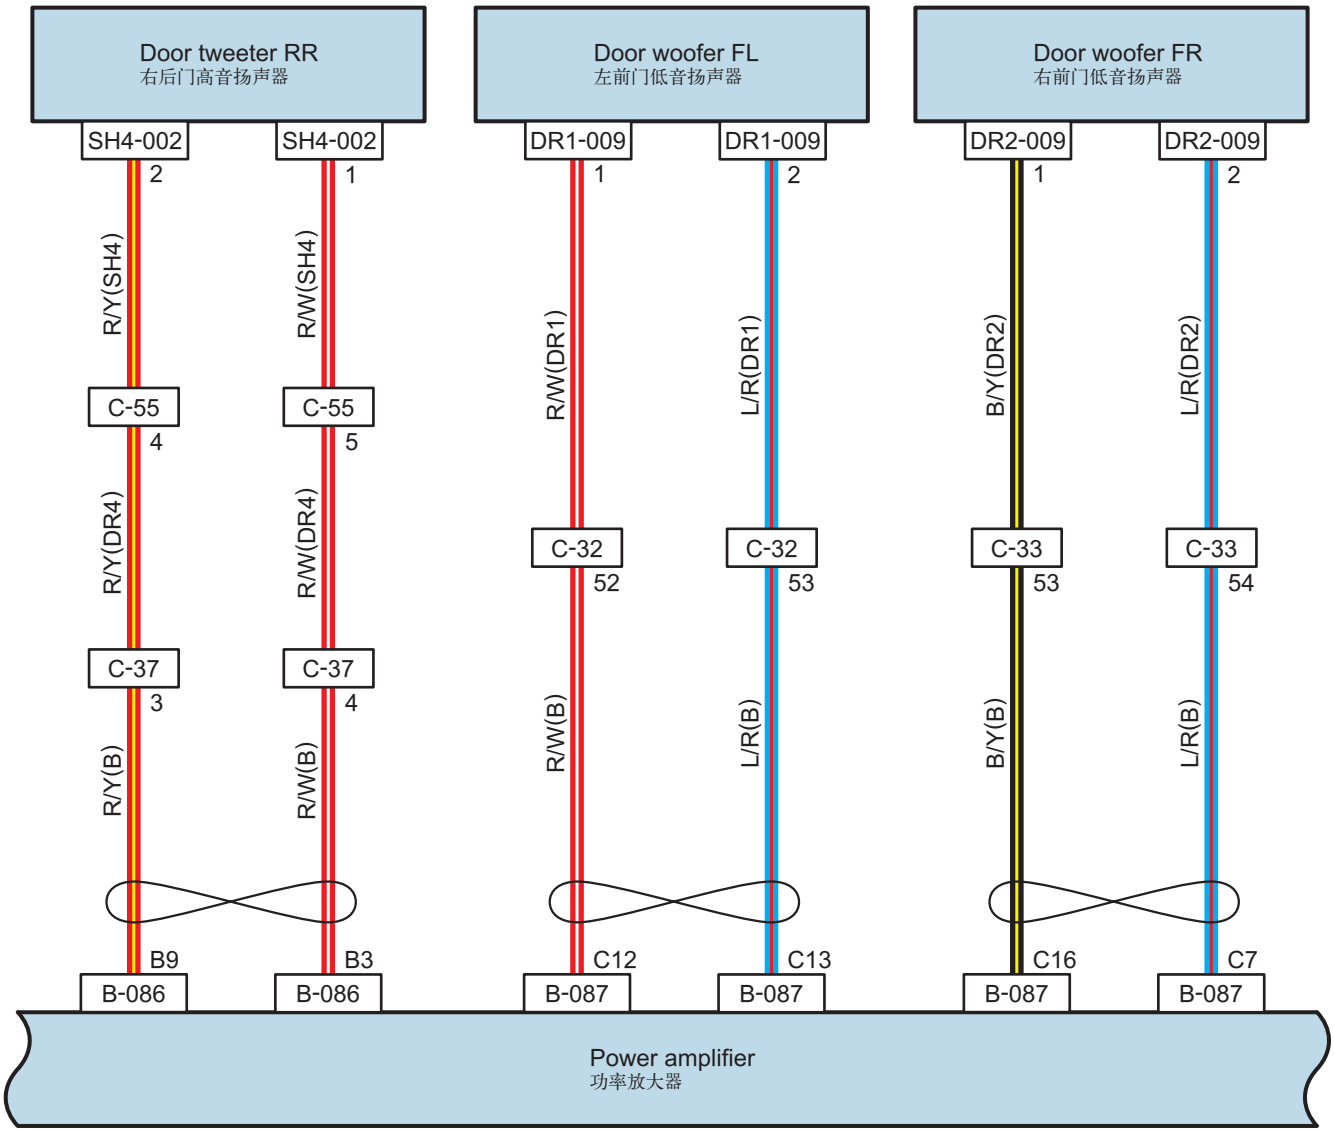

Front panoramic camera
前环视摄像头
Rear panoramic camera
后环视摄像头
Panoramic camera LH
左环视摄像头
Panoramic camera RH
右环视摄像头
FF-007
RR-015
DR1-010
DR2-010
1
(FF)
(RR)
(DR1)
(DR2)
C-14
C-59
C-60
(F)
C-06
C-54
C-32
C-33
56
(B)
C-26
4
3
2
(I)
H1
H3
H4
H2
I-008
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

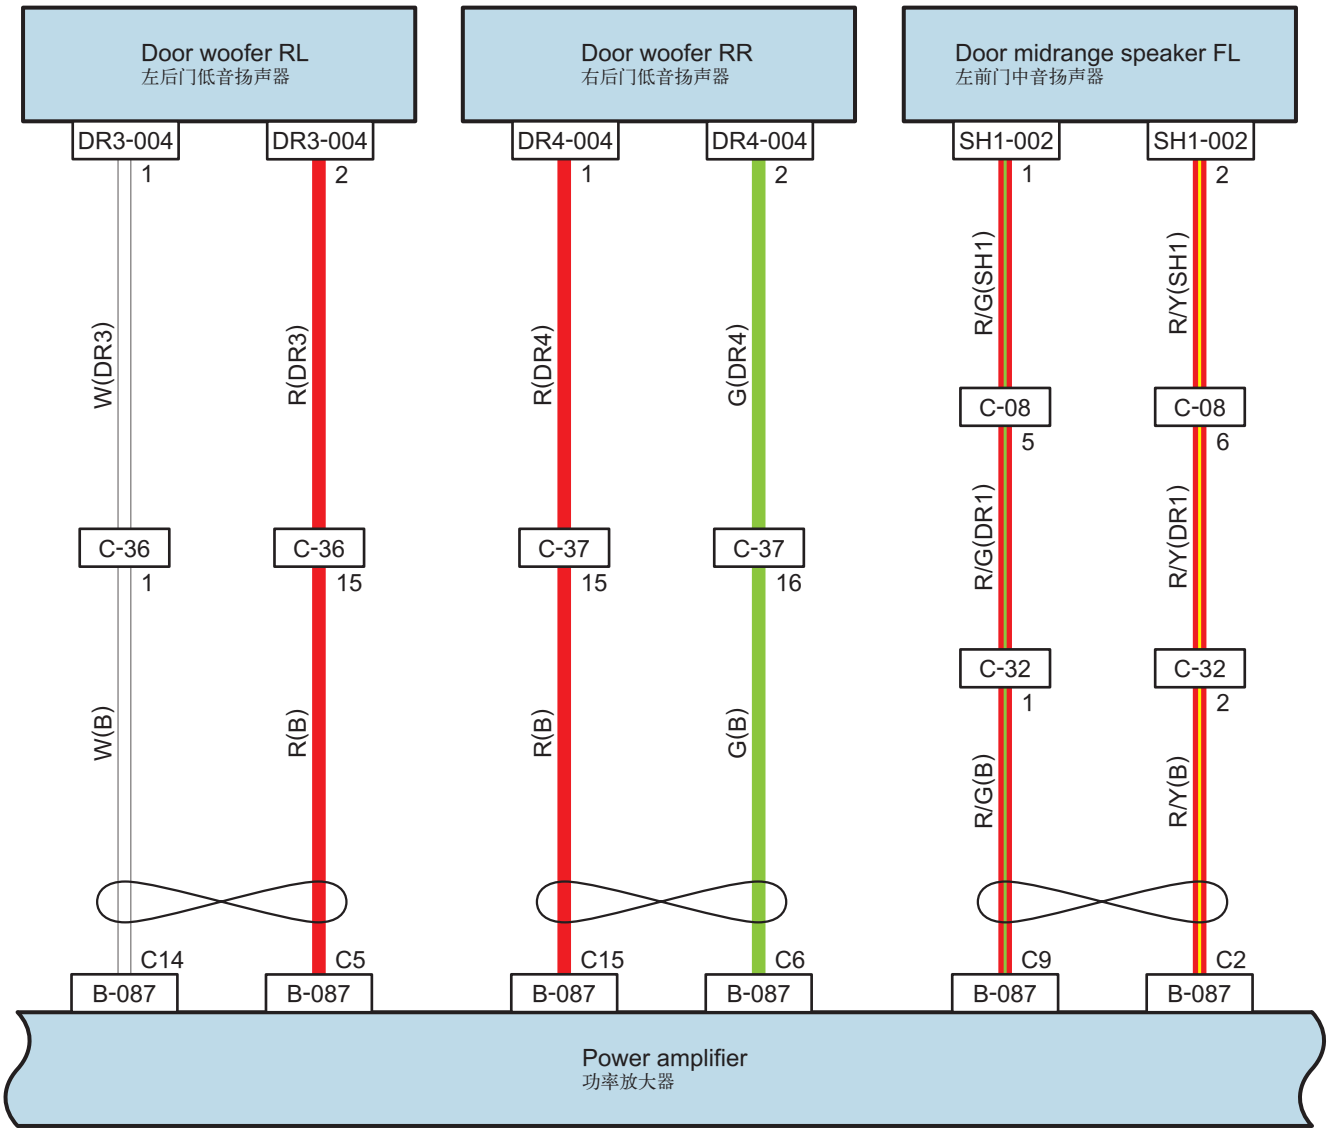

Rear battery distribution box
后蓄电池配电盒
AF01 200A
AF-B+
AF-01
B+
R
Rear transfer distribution box
后中转配电盒
F06 30A
F-01
F-06
R/B(B)
Information_CAN
信息_CAN
Y(B)
O(B)
R/B(B)
R/B(B)
R/B(B)
R/B(B)
A12
A13
A25
A26
A9
A8
B-085
B-085
B-085
B-085
B-085
B-085
Power amplifier
功率放大器
B-085
B-085
B-085
B-085
A2
A3
A15
A16
B(B)
B(B)
B(B)
B(B)
B(B)
B(B)
84a
84b

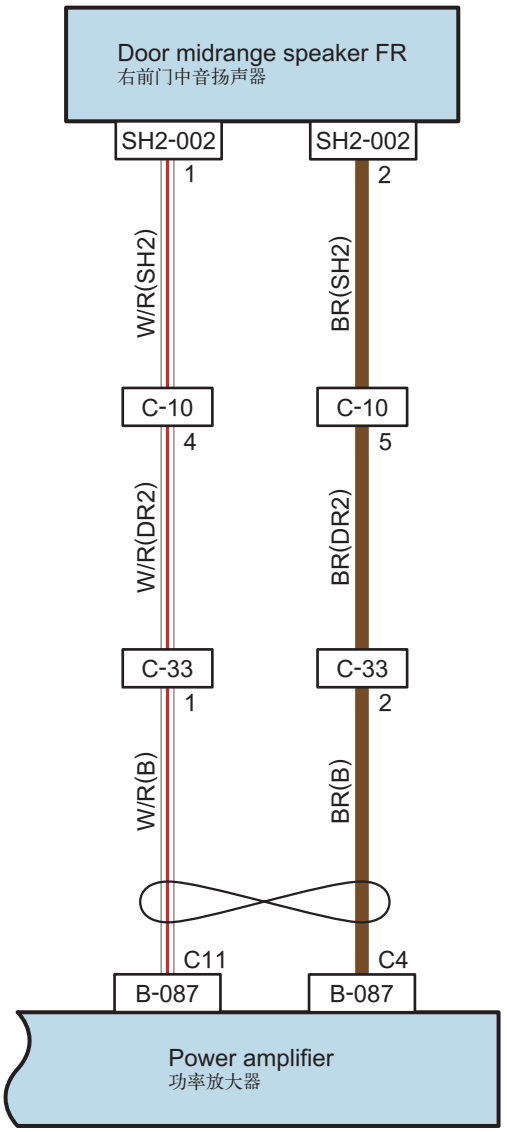

Surround midrange speaker RH
右环绕中音扬声器
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
Surround midrange speaker LH
左环绕中音扬声器
B-080
1
B-080
2
I-005
E1
I-005
E2
B-043
1
B-043
2
W(B)
R(B)
W(I)
G(I)
R/GR(B)
W/L(B)
C-25
3
C-25
2
W(B)
G(B)
A14
A1
D2
D1
B12
B6
B-085
B-085
B-088
B-088
B-086
B-086
Power amplifier
功率放大器

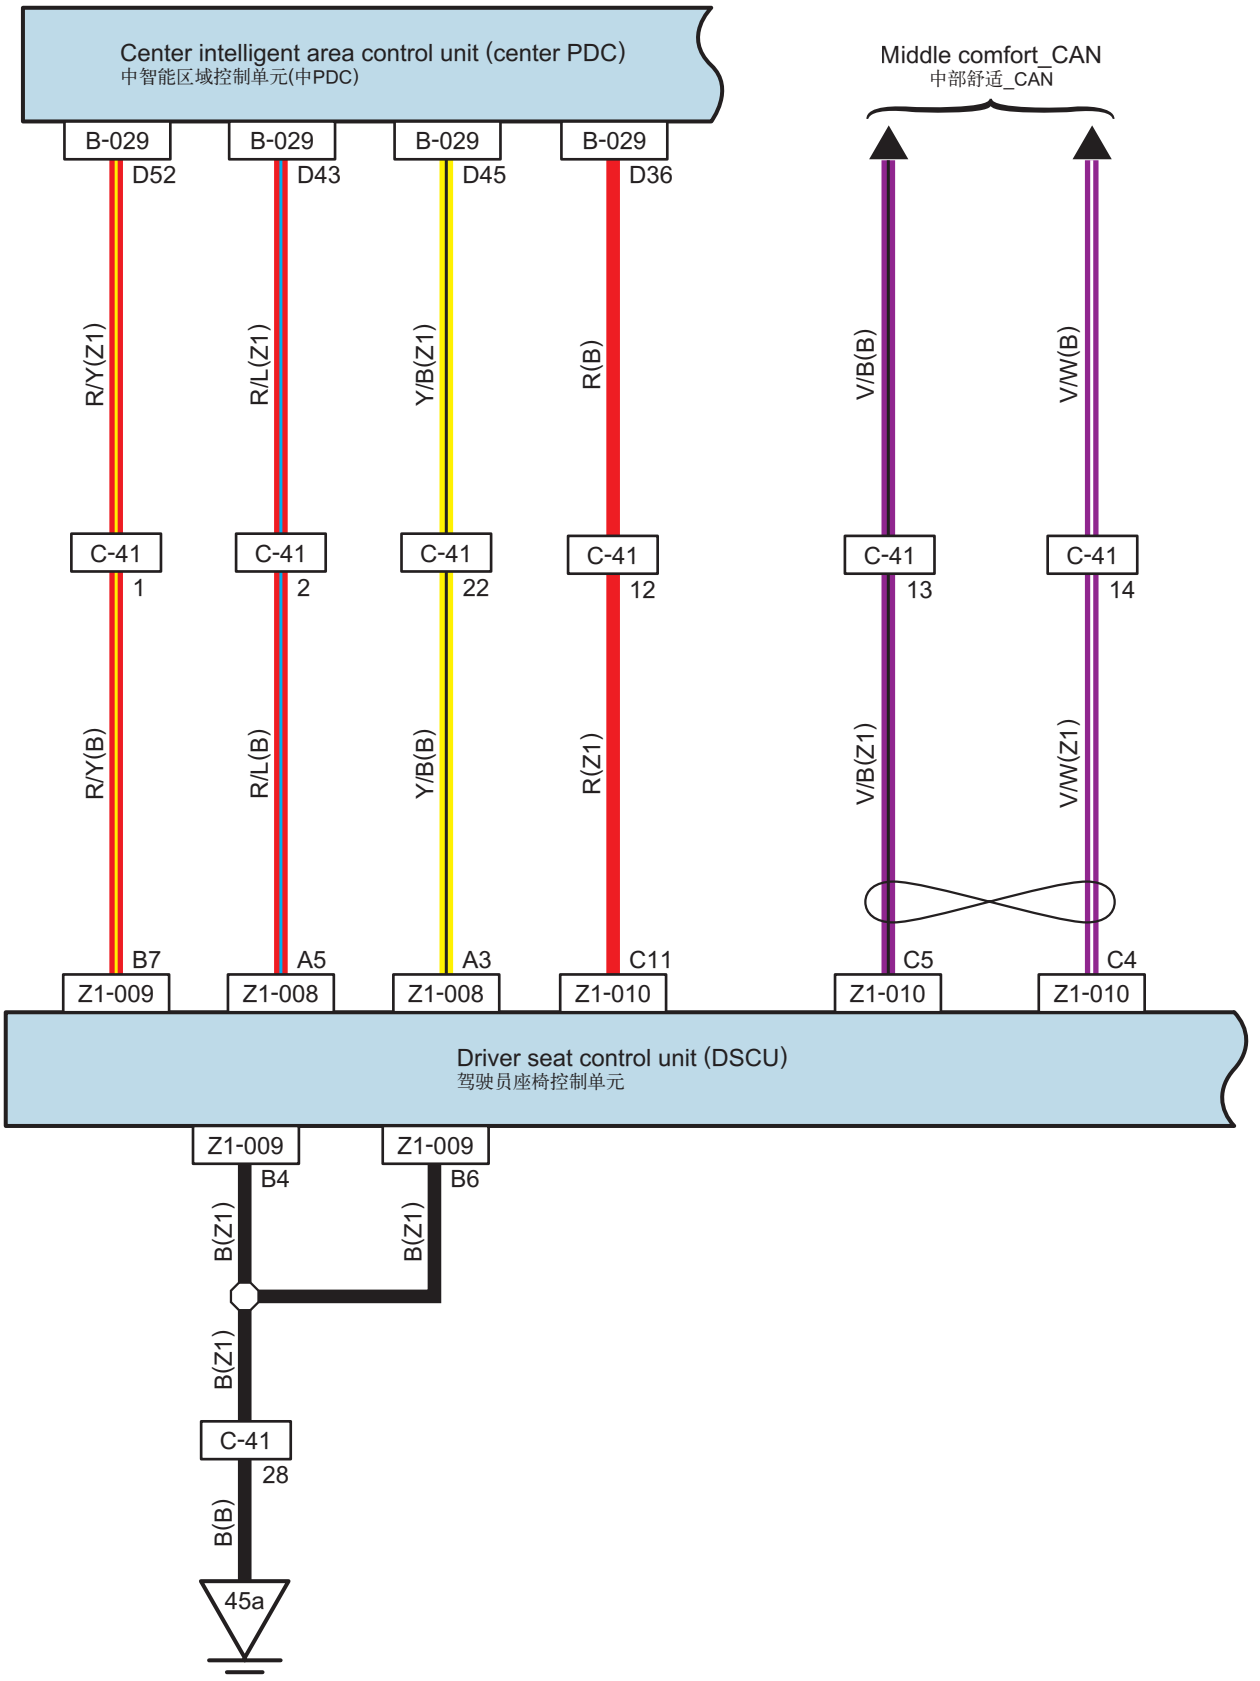

Pedestrian alarm speaker
行人警示扬声器
IP midrange speaker
仪表中音扬声器
Subwoofer
低音箱
F-012
2
F-012
1
I-020
1
I-020
2
B-105
1
B-105
3
P/Y(F)
GR(F)
G/R(I)
G(I)
L/R(B)
R/W(B)
C-09
9
C-09
8
C-23
5
C-23
18
P/Y(B)
GR(B)
G/R(B)
G(B)
B11
B5
C8
C1
C10
C3
B-086
B-086
B-087
B-087
B-087
B-087
Power amplifier
功率放大器

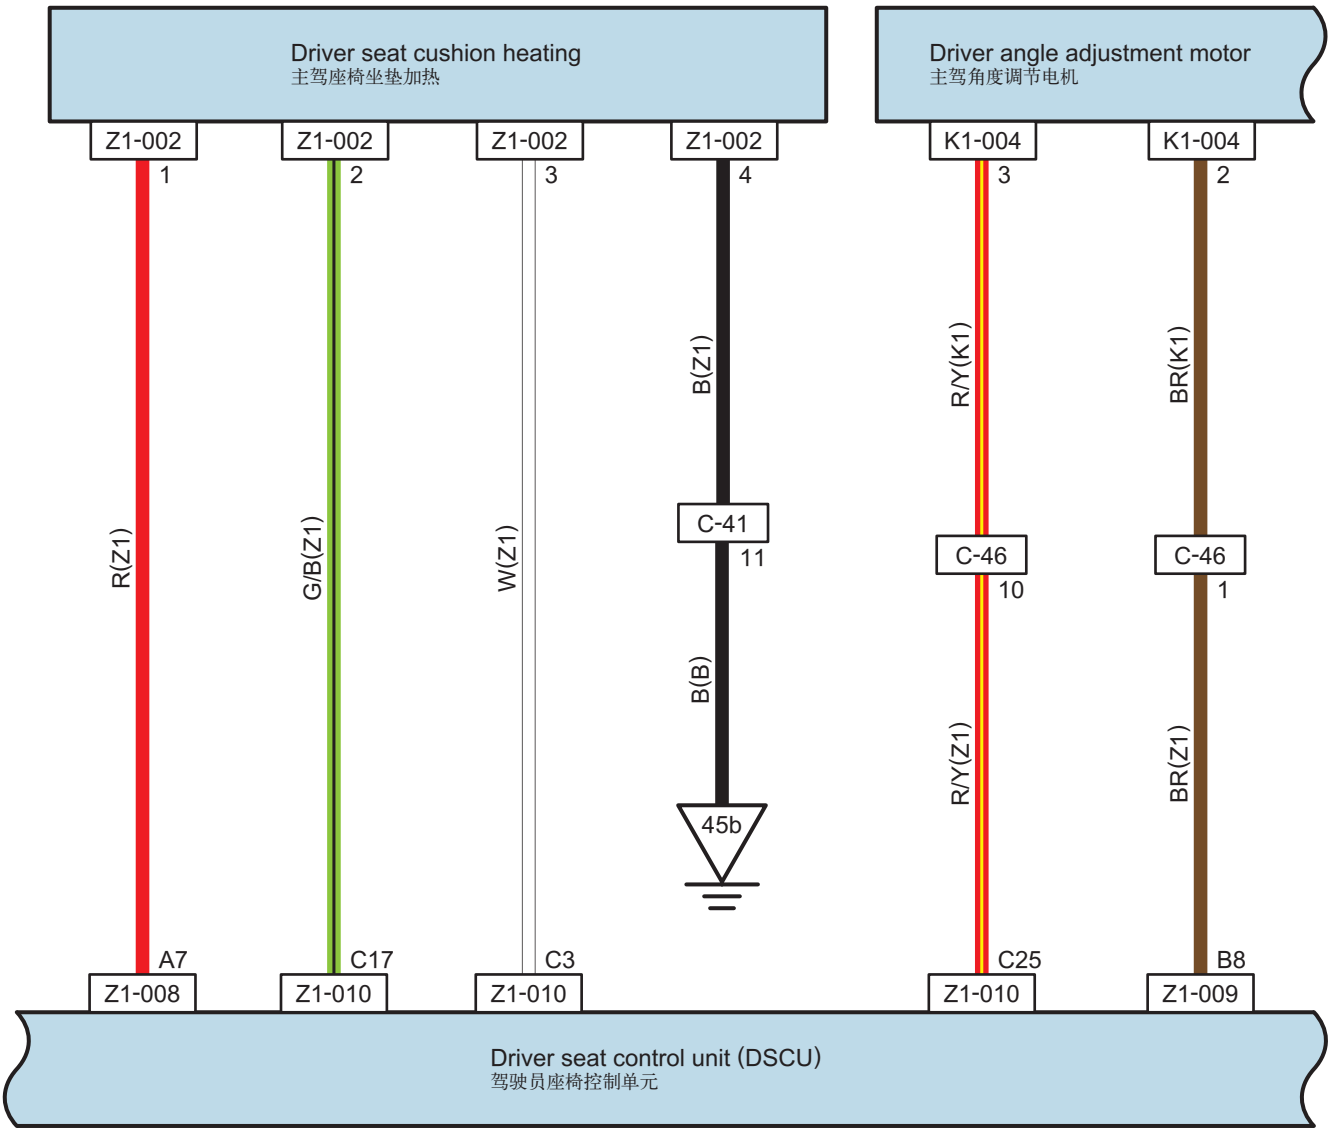

Tweeter FL
左前高音扬声器
B-128
2
B-128
1
G(B)
V(B)
B7
B1
B-086
B-086
Tweeter FR
右前高音扬声器
B-130
2
B-130
1
W/G(B)
B/Y(B)
B10
B4
B-086
B-086
Door tweeter RL
左后门高音扬声器
SH3-003
2
SH3-003
1
R/G(SH3)
L(SH3)
C-52
4
C-52
5
R/G(DR3)
L(DR3)
C-36
3
C-36
4
R/G(B)
L(B)
B8
B2
B-086
B-086
Power amplifier
功率放大器

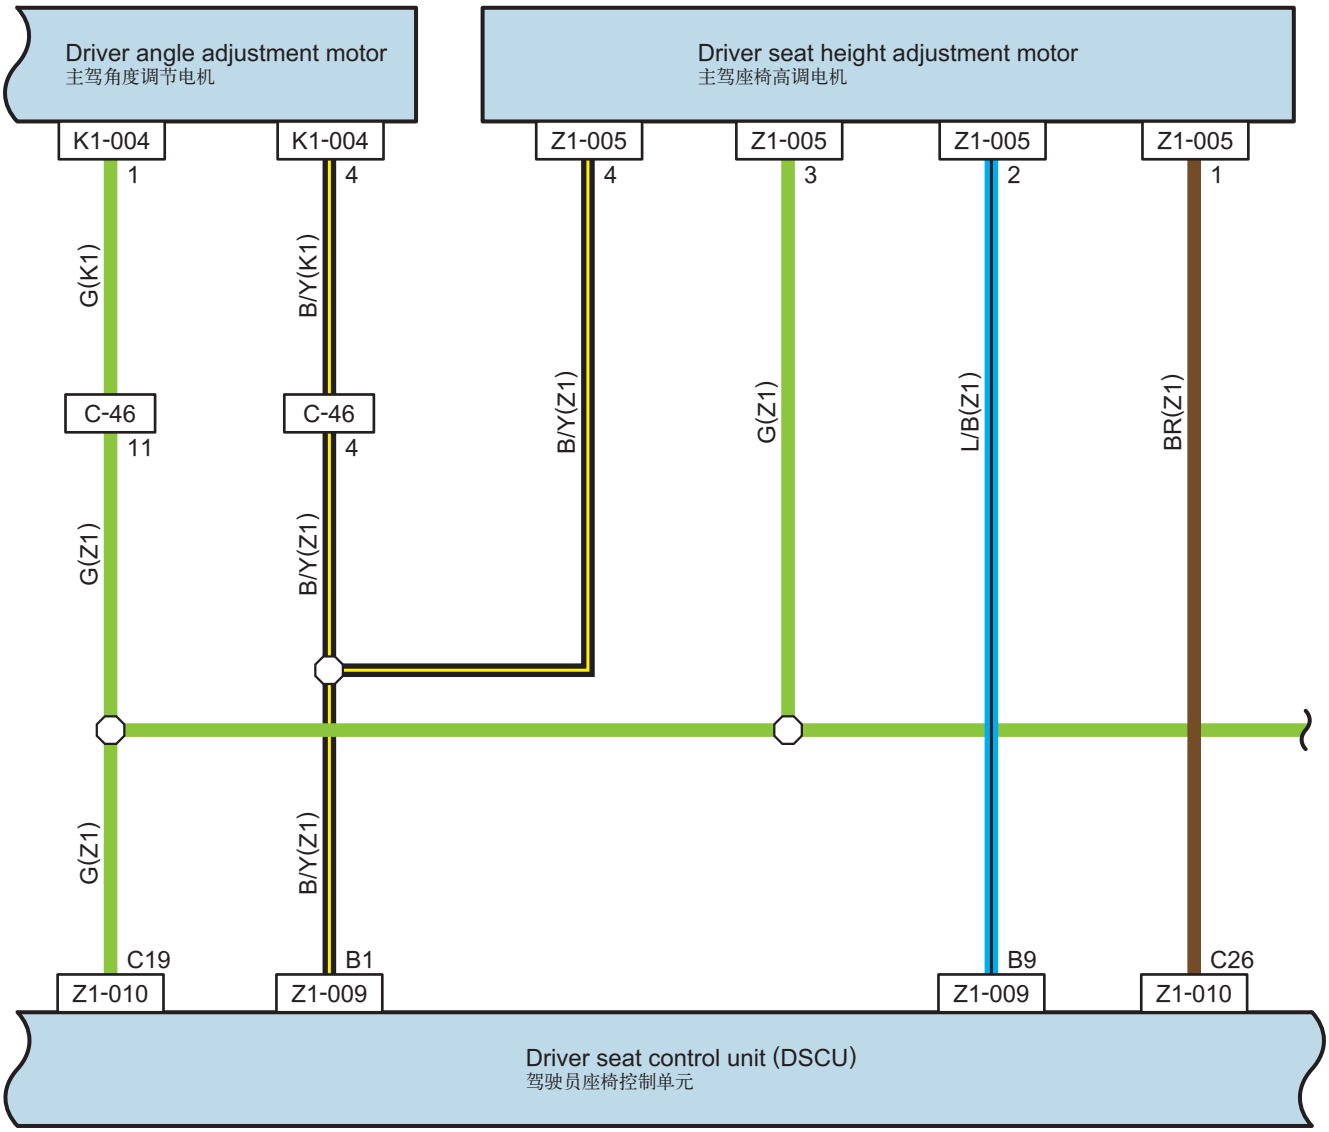

Door tweeter RR
右后门高音扬声器
SH4-002
2
SH4-002
1
R/Y(SH4)
R/W(SH4)
C-55
4
C-55
5
R/Y(DR4)
R/W(DR4)
C-37
3
C-37
4
R/Y(B)
R/W(B)
B9
B3
B-086
B-086
Door woofer FL
左前门低音扬声器
DR1-009
1
DR1-009
2
R/W(DR1)
L/R(DR1)
C-32
52
C-32
53
R/W(B)
L/R(B)
C12
C13
B-087
B-087
Door woofer FR
右前门低音扬声器
DR2-009
1
DR2-009
2
B/Y(DR2)
L/R(DR2)
C-33
53
C-33
54
B/Y(B)
L/R(B)
C16
C7
B-087
B-087
Power amplifier
功率放大器

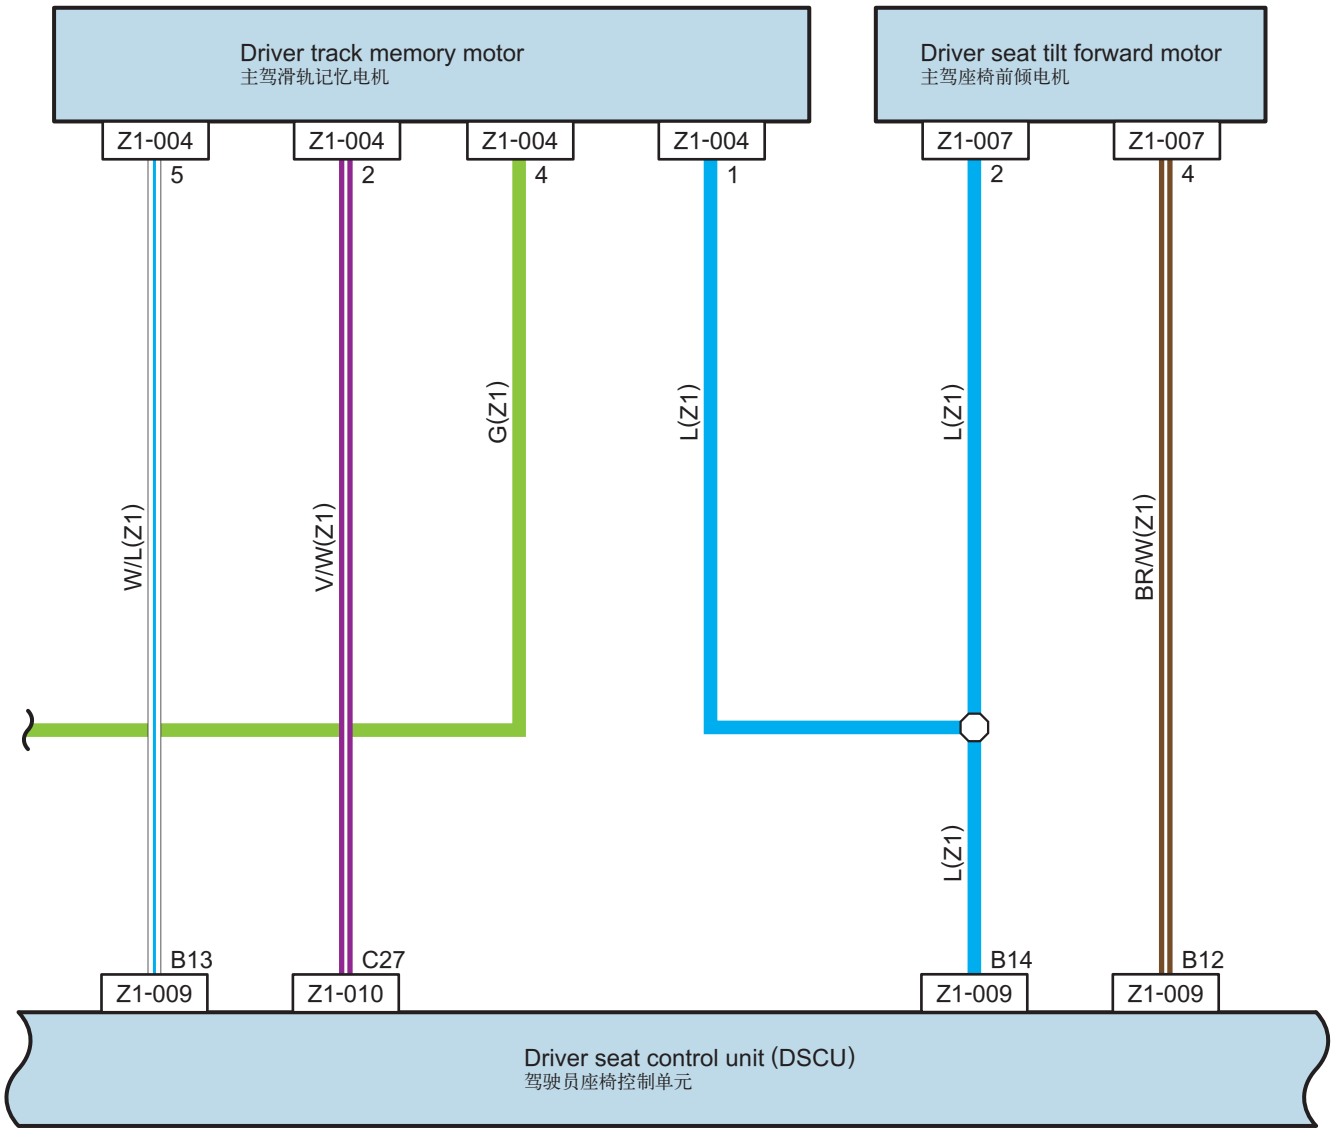

Door woofer RL
左后门低音扬声器
Door woofer RR
右后门低音扬声器
Door midrange speaker FL
左前门中音扬声器
DR3-004
1
DR3-004
2
DR4-004
1
DR4-004
2
SH1-002
1
SH1-002
2
W(DR3)
R(DR3)
R(DR4)
G(DR4)
R/G(SH1)
R/Y(SH1)
C-08
5
C-08
6
R/G(DR1)
R/Y(DR1)
C-36
1
C-36
15
C-37
15
C-37
16
C-32
1
C-32
2
W(B)
R(B)
R(B)
G(B)
R/G(B)
R/Y(B)
C14
C5
C15
C6
C9
C2
B-087
B-087
B-087
B-087
B-087
B-087
Power amplifier
功率放大器

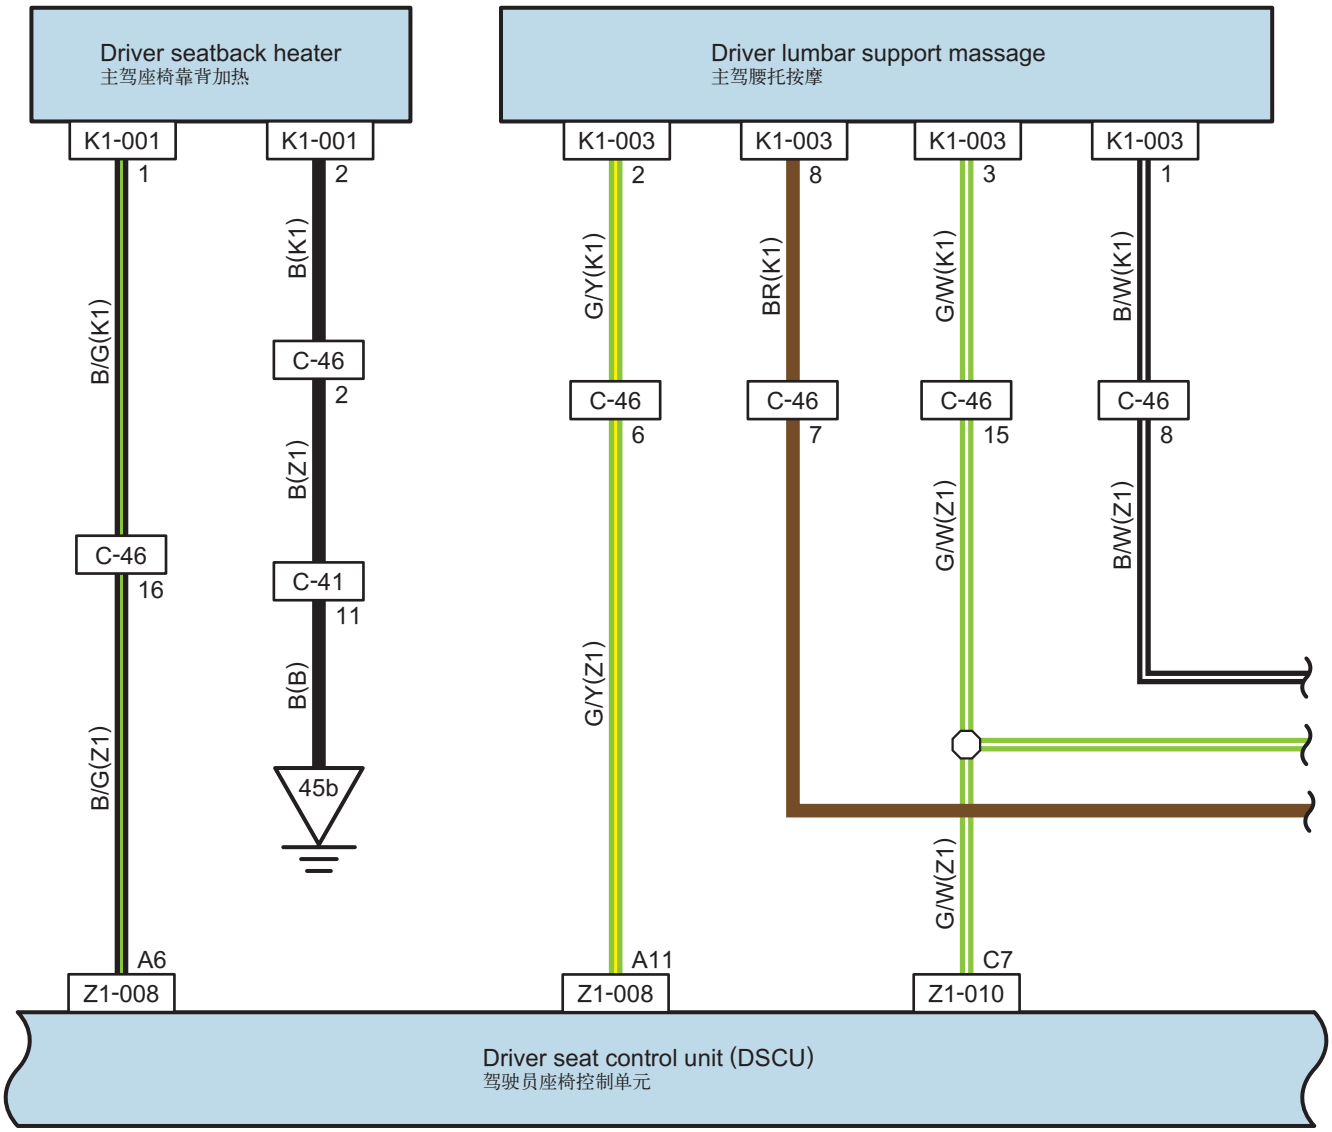

Door midrange speaker FR
右前门中音扬声器
SH2-002
1
SH2-002
2
W/R(SH2)
BR(SH2)
C-10
4
C-10
5
W/R(DR2)
BR(DR2)
C-33
1
C-33
2
W/R(B)
BR(B)
C11
C4
B-087
B-087
Power amplifier
功率放大器

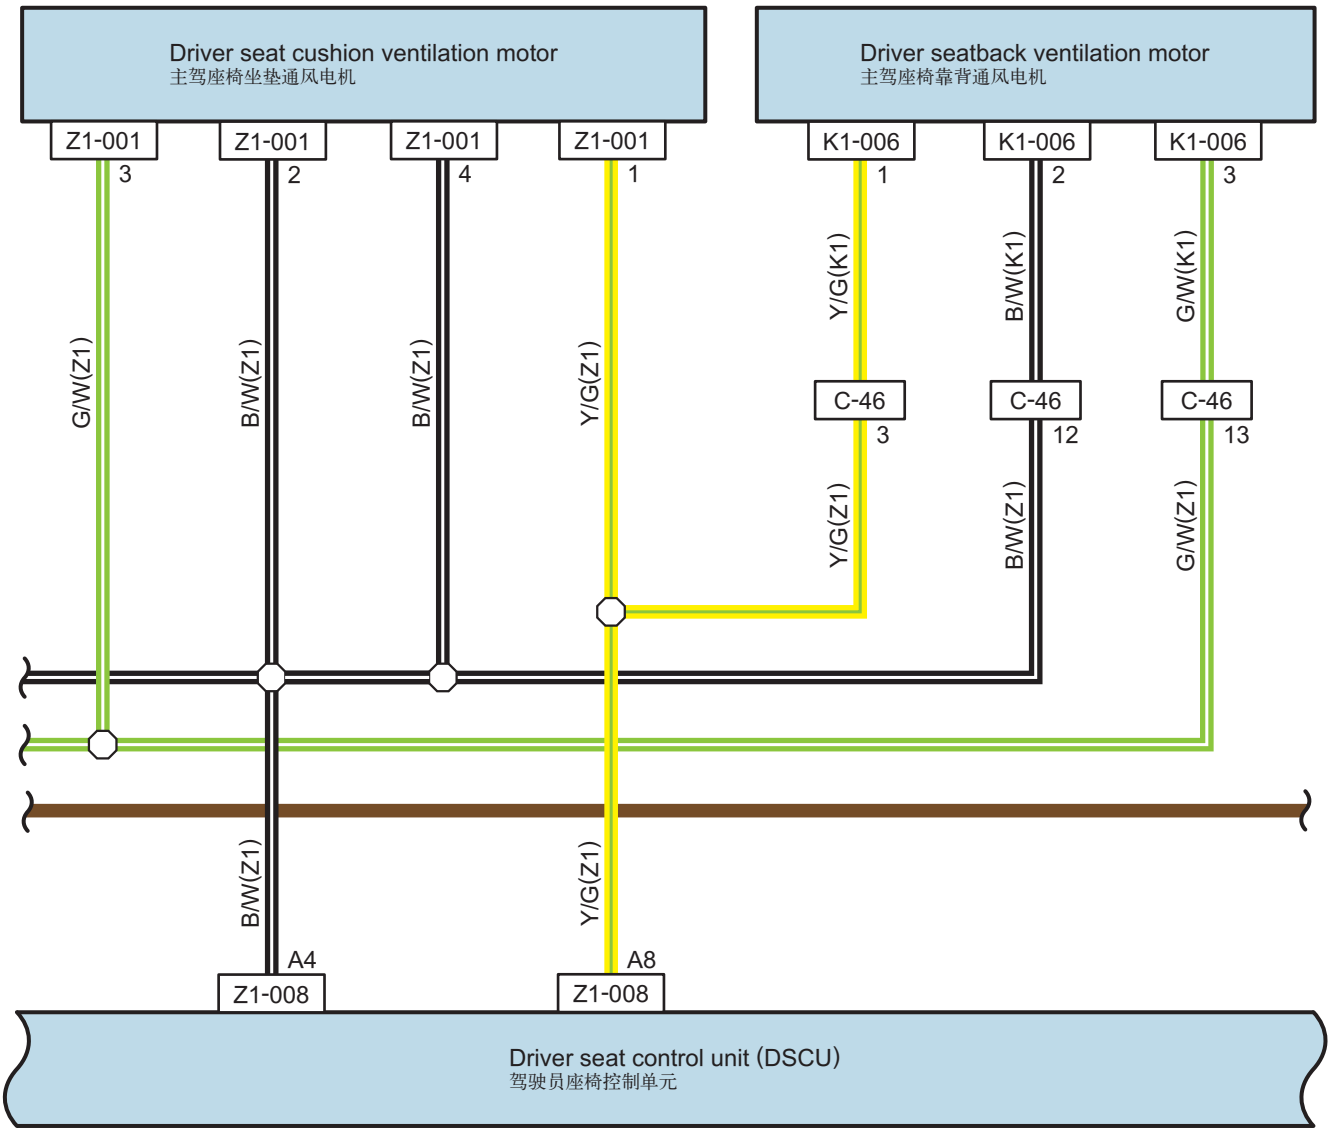

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-029
D52
B-029
D43
B-029
D45
B-029
D36
Middle comfort_CAN
中部舒适_CAN
R/Y(Z1)
R/L(Z1)
Y/B(Z1)
R(B)
V/B(B)
V/W(B)
C-41
1
C-41
2
C-41
22
C-41
12
C-41
13
C-41
14
R/Y(B)
R/L(B)
Y/B(B)
R(Z1)
V/B(Z1)
V/W(Z1)
B7
Z1-009
A5
Z1-008
A3
Z1-008
C11
Z1-010
C5
Z1-010
C4
Z1-010
Driver seat control unit (DSCU)
驾驶员座椅控制单元
Z1-009
B4
Z1-009
B6
B(Z1)
B(Z1)
B(Z1)
C-41
28
B(B)
45a

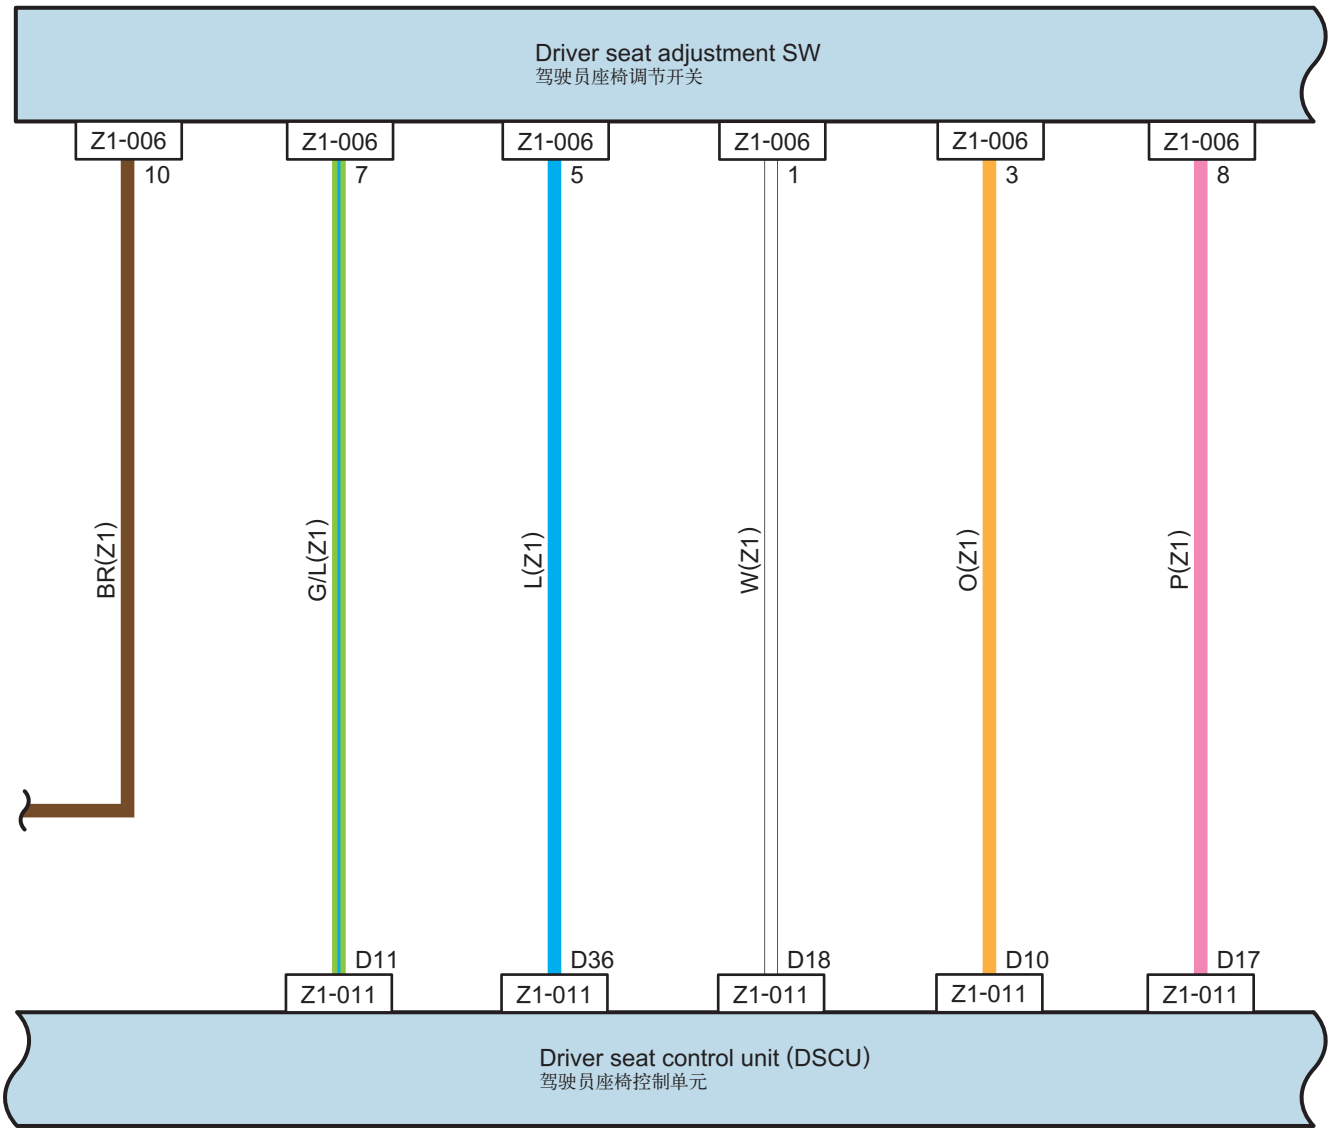

Driver seat cushion heating
主驾座椅坐垫加热
Driver angle adjustment motor
主驾角度调节电机
Z1-002
1
Z1-002
2
Z1-002
3
Z1-002
4
K1-004
3
K1-004
2
R(Z1)
G/B(Z1)
W(Z1)
B(Z1)
R/Y(K1)
BR(K1)
C-41
11
C-46
10
C-46
1
B(B)
R/Y(Z1)
BR(Z1)
45b
A7
C17
C3
C25
B8
Z1-008
Z1-010
Z1-010
Z1-010
Z1-009
Driver seat control unit (DSCU)
驾驶员座椅控制单元

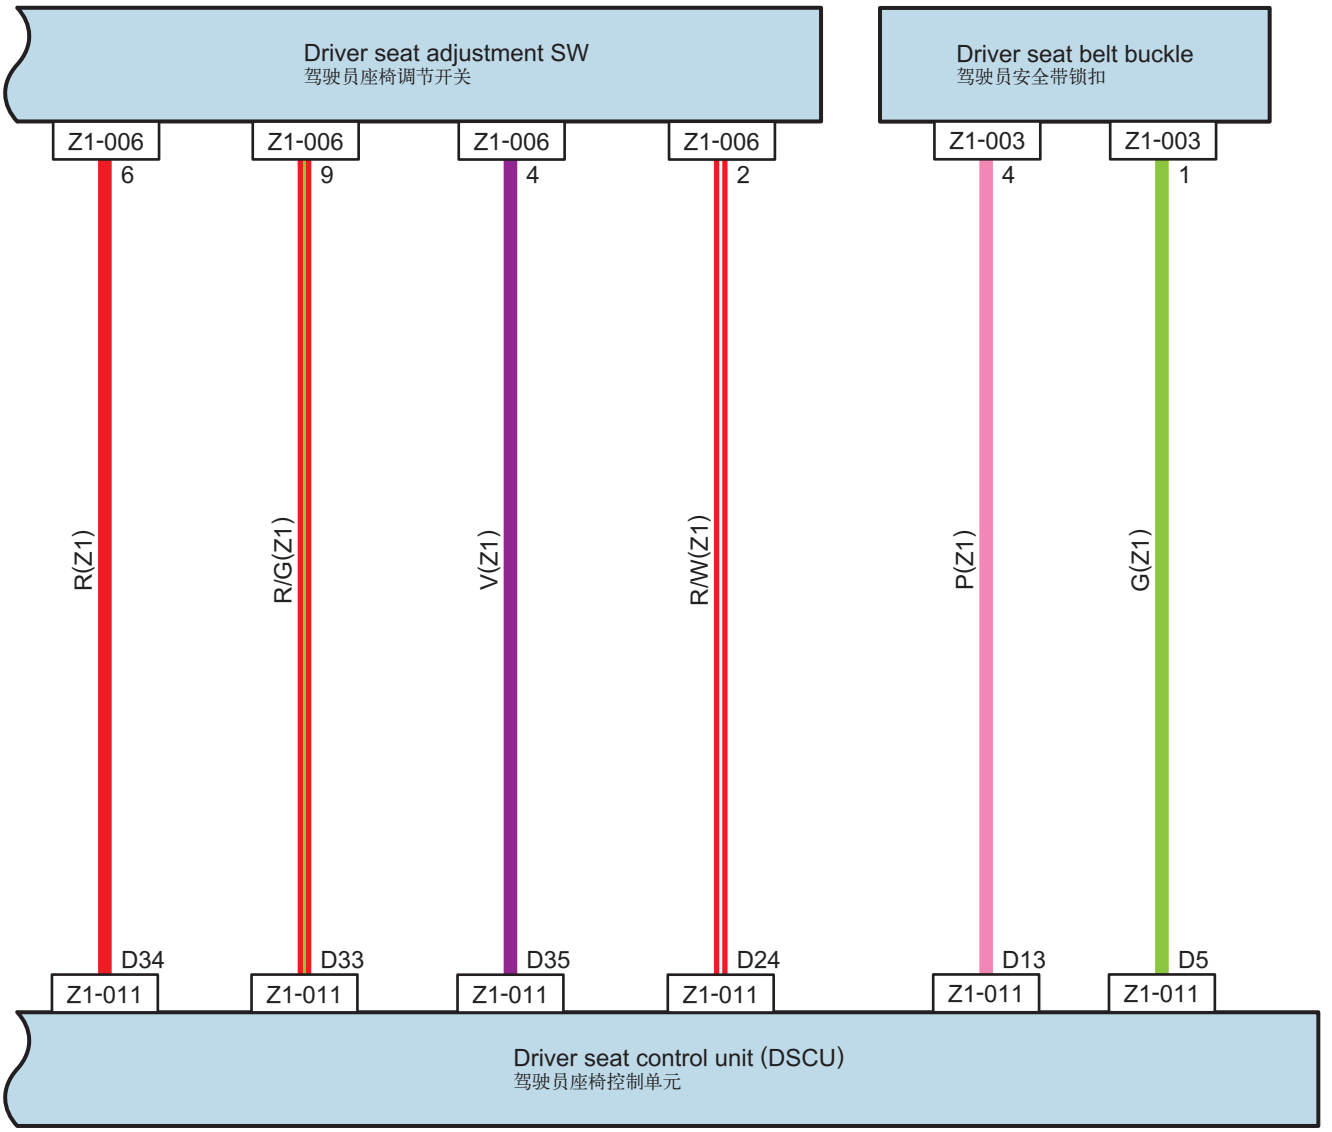

Driver angle adjustment motor
主驾角度调节电机
Driver seat height adjustment motor
主驾座椅高调电机
K1-004
1
K1-004
4
Z1-005
4
Z1-005
3
Z1-005
2
Z1-005
1
G(K1)
B/Y(K1)
B/Y(Z1)
G(Z1)
L/B(Z1)
BR(Z1)
C-46
11
C-46
4
G(Z1)
B/Y(Z1)
G(Z1)
B/Y(Z1)
C19
B1
B9
C26
Z1-010
Z1-009
Z1-009
Z1-010
Driver seat control unit (DSCU)
驾驶员座椅控制单元

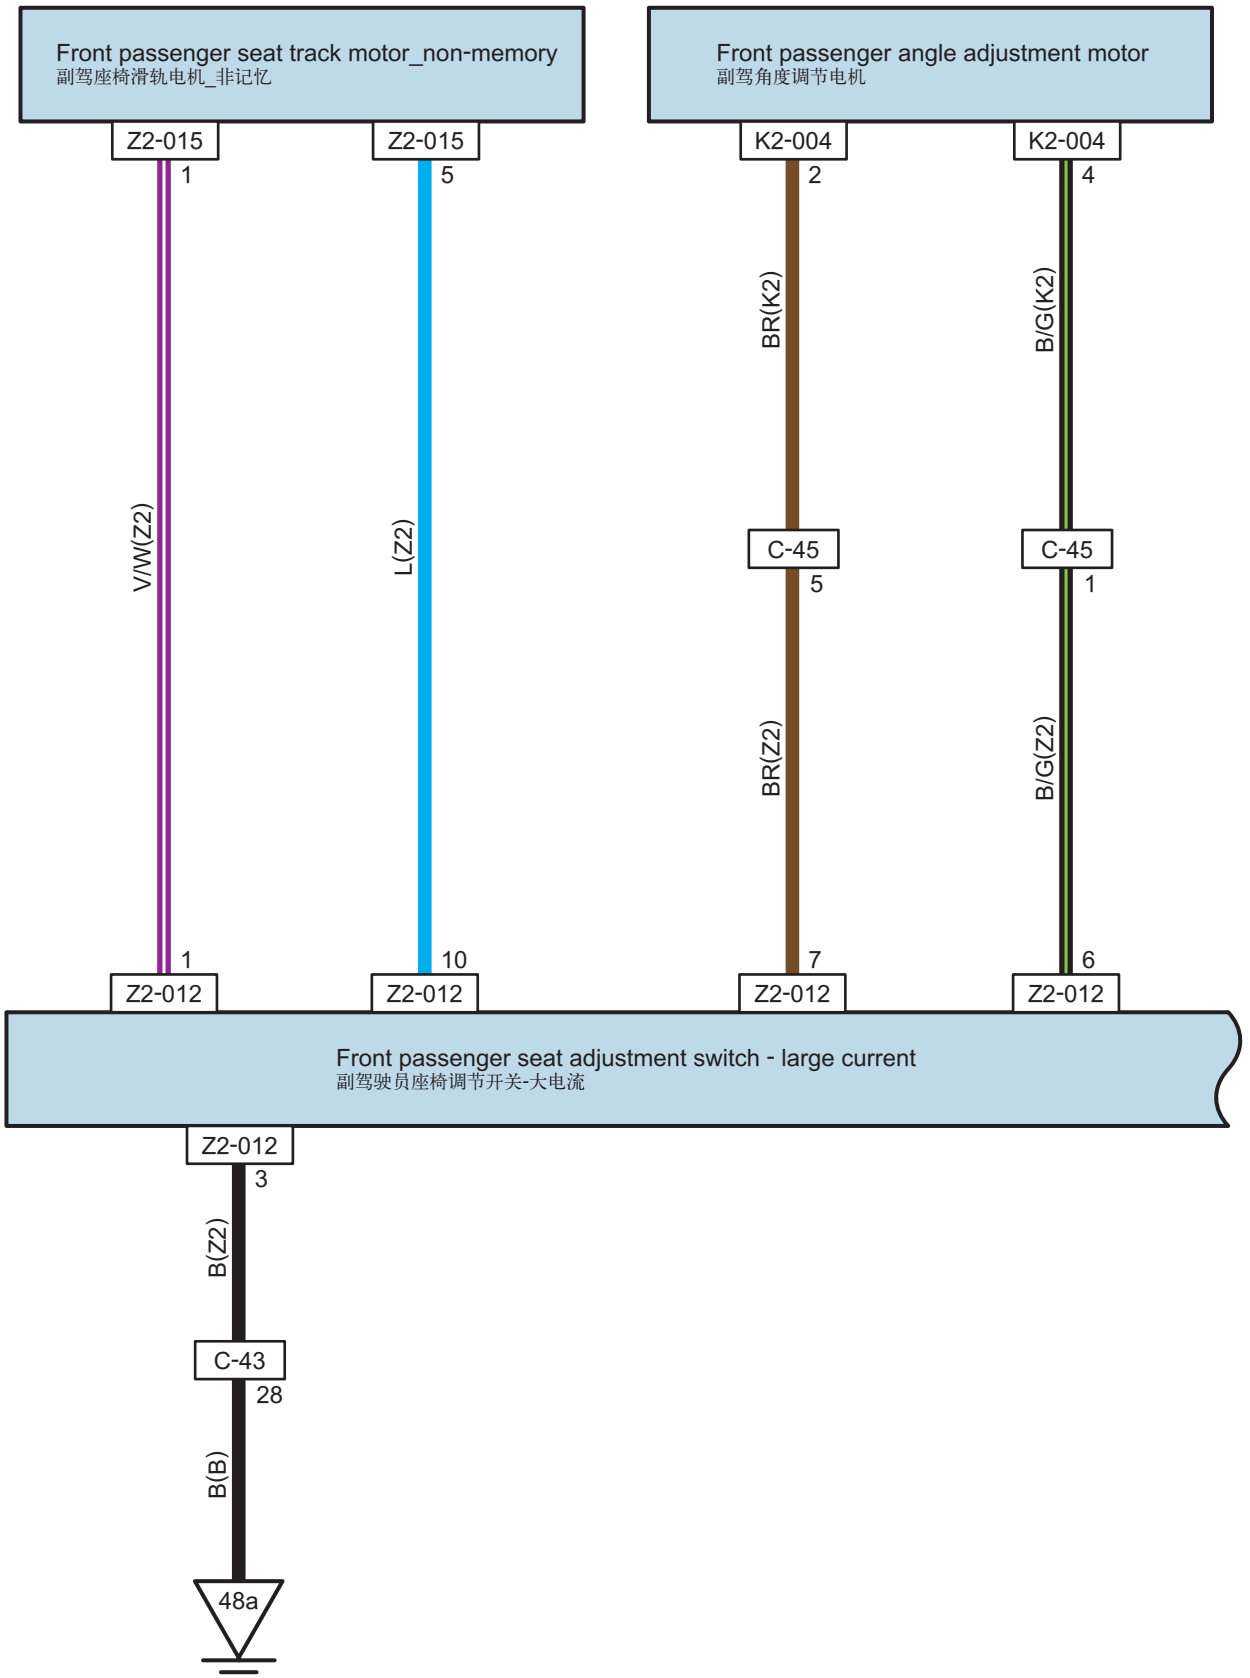

Driver track memory motor
主驾滑轨记忆电机
Driver seat tilt forward motor
主驾座椅前倾电机
Z1-004
5
Z1-004
2
Z1-004
4
Z1-004
1
Z1-007
2
Z1-007
4
W/L(Z1)
V/W(Z1)
G(Z1)
L(Z1)
L(Z1)
L(Z1)
BR/W(Z1)
B13
C27
B14
B12
Z1-009
Z1-010
Z1-009
Z1-009
Driver seat control unit (DSCU)
驾驶员座椅控制单元

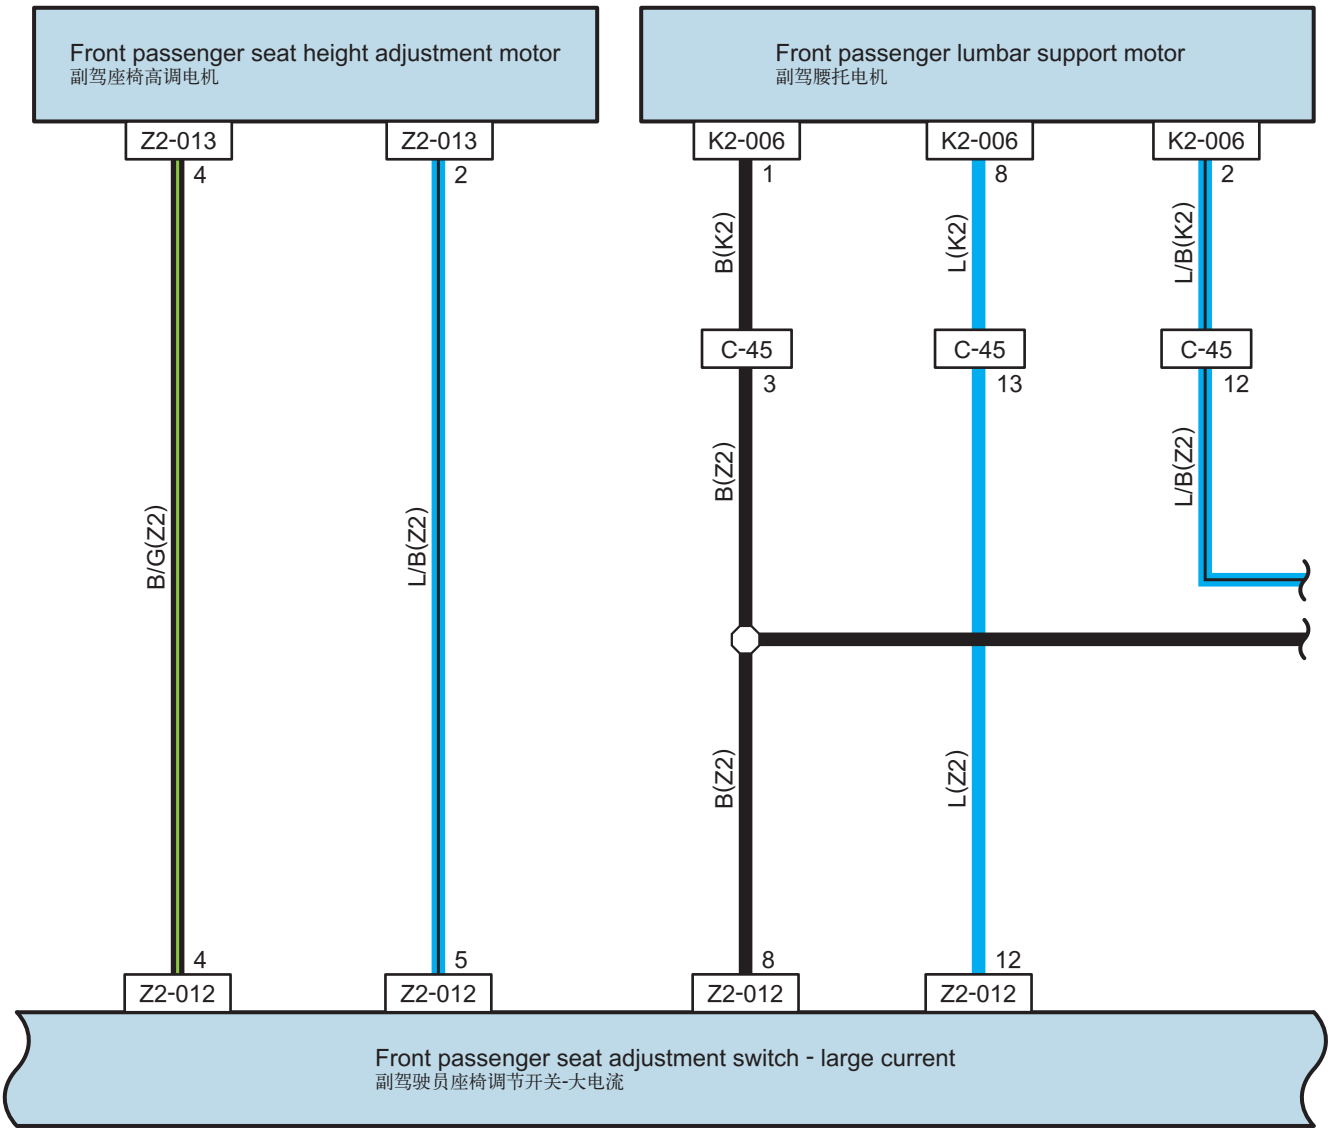

Driver seatback heater
主驾座椅靠背加热
Driver lumbar support massage
主驾腰托按摩
K1-001
1
K1-001
2
K1-003
2
K1-003
8
K1-003
3
K1-003
1
B/G(K1)
B(K1)
G/Y(K1)
BR(K1)
G/W(K1)
B/W(K1)
C-46
2
C-46
6
C-46
7
C-46
15
C-46
8
B(Z1)
G/W(Z1)
B/W(Z1)
C-46
16
C-41
11
B(B)
45b
G/Y(Z1)
G/W(Z1)
B/G(Z1)
A6
A11
C7
Z1-008
Z1-008
Z1-010
Driver seat control unit (DSCU)
驾驶员座椅控制单元

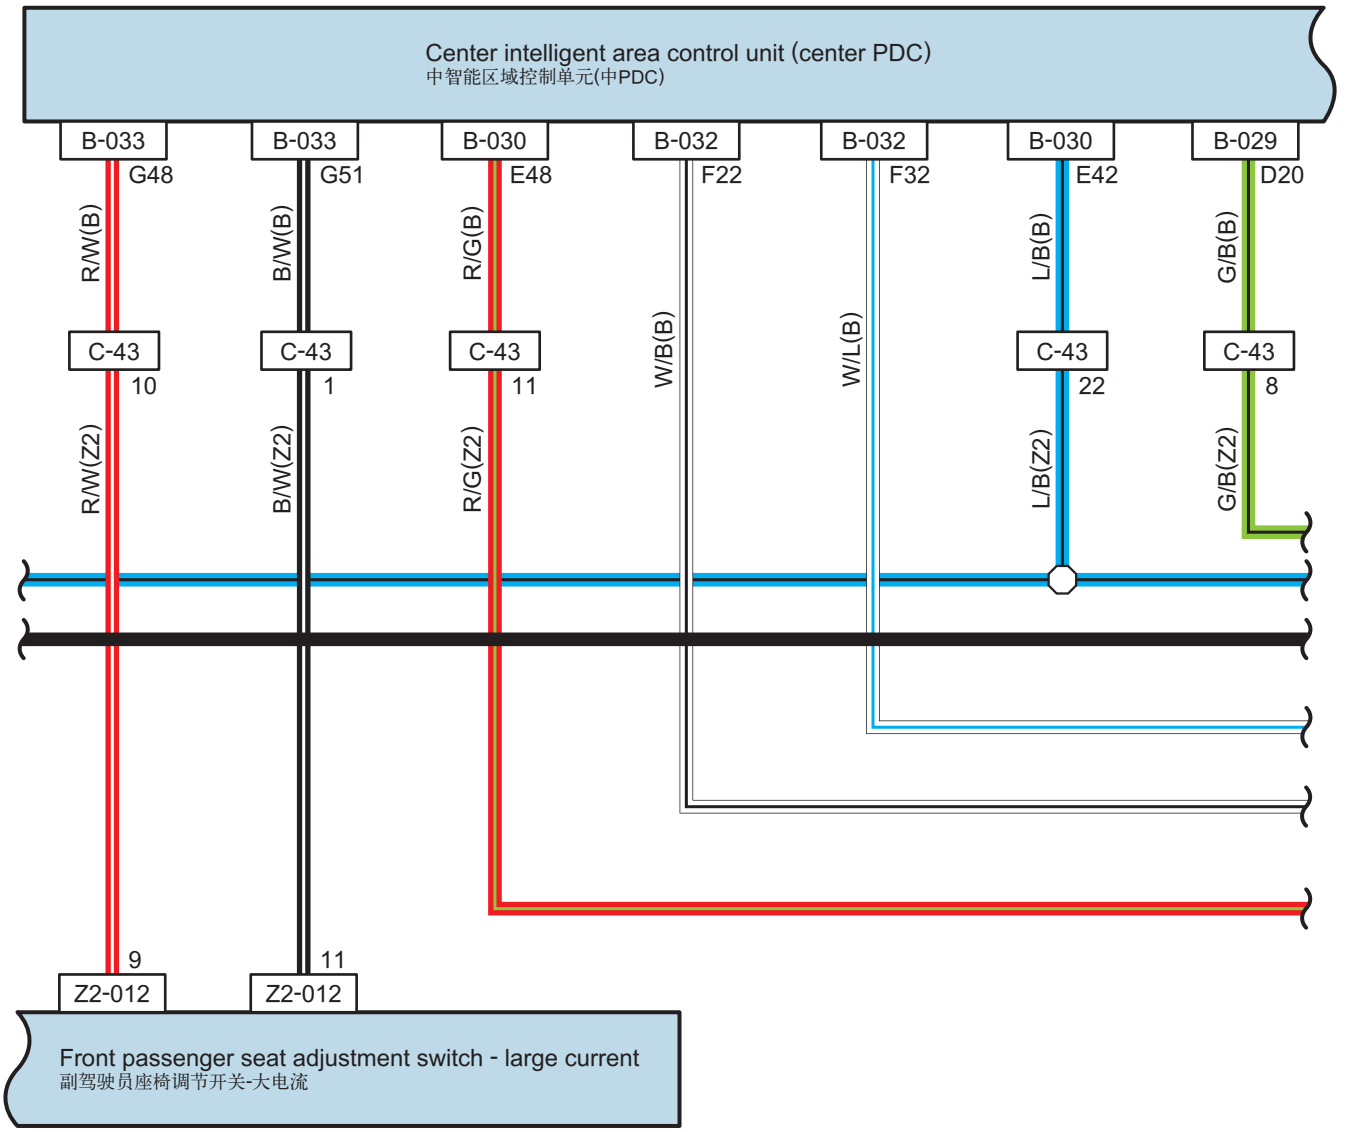

Driver seat cushion ventilation motor
主驾座椅坐垫通风电机
Driver seatback ventilation motor
主驾座椅靠背通风电机
Z1-001
3
Z1-001
2
Z1-001
4
Z1-001
1
K1-006
1
K1-006
2
K1-006
3
G/W(Z1)
B/W(Z1)
B/W(Z1)
Y/G(Z1)
Y/G(K1)
B/W(K1)
G/W(K1)
C-46
3
C-46
12
C-46
13
Y/G(Z1)
B/W(Z1)
G/W(Z1)
B/W(Z1)
Y/G(Z1)
A4
A8
Z1-008
Z1-008
Driver seat control unit (DSCU)
驾驶员座椅控制单元

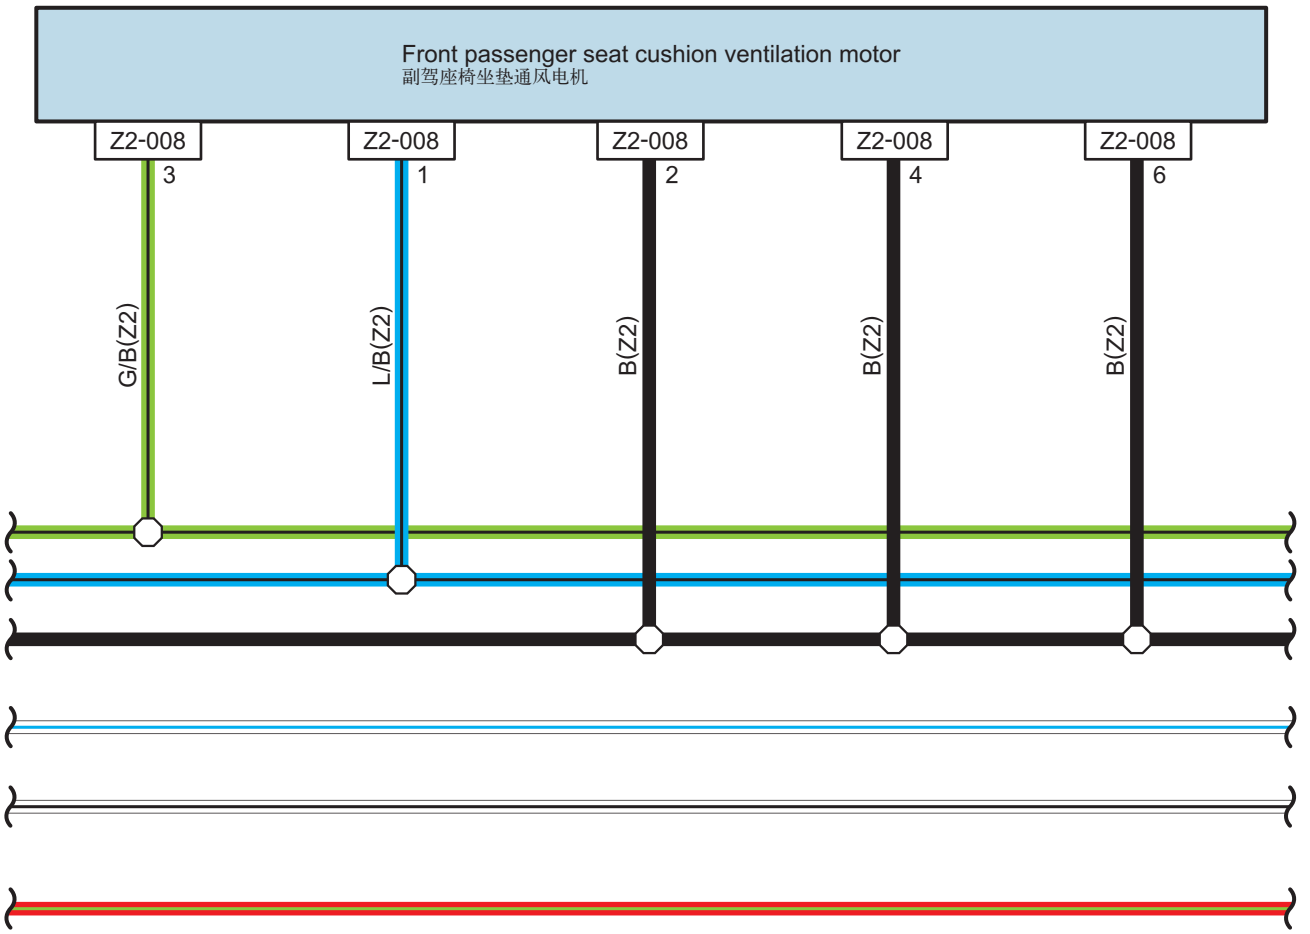

Driver seat adjustment SW
驾驶员座椅调节开关
Z1-006
10
Z1-006
7
Z1-006
5
Z1-006
1
Z1-006
3
Z1-006
8
BR(Z1)
G/L(Z1)
L(Z1)
W(Z1)
O(Z1)
P(Z1)
D11
D36
D18
D10
D17
Z1-011
Z1-011
Z1-011
Z1-011
Z1-011
Driver seat control unit (DSCU)
驾驶员座椅控制单元

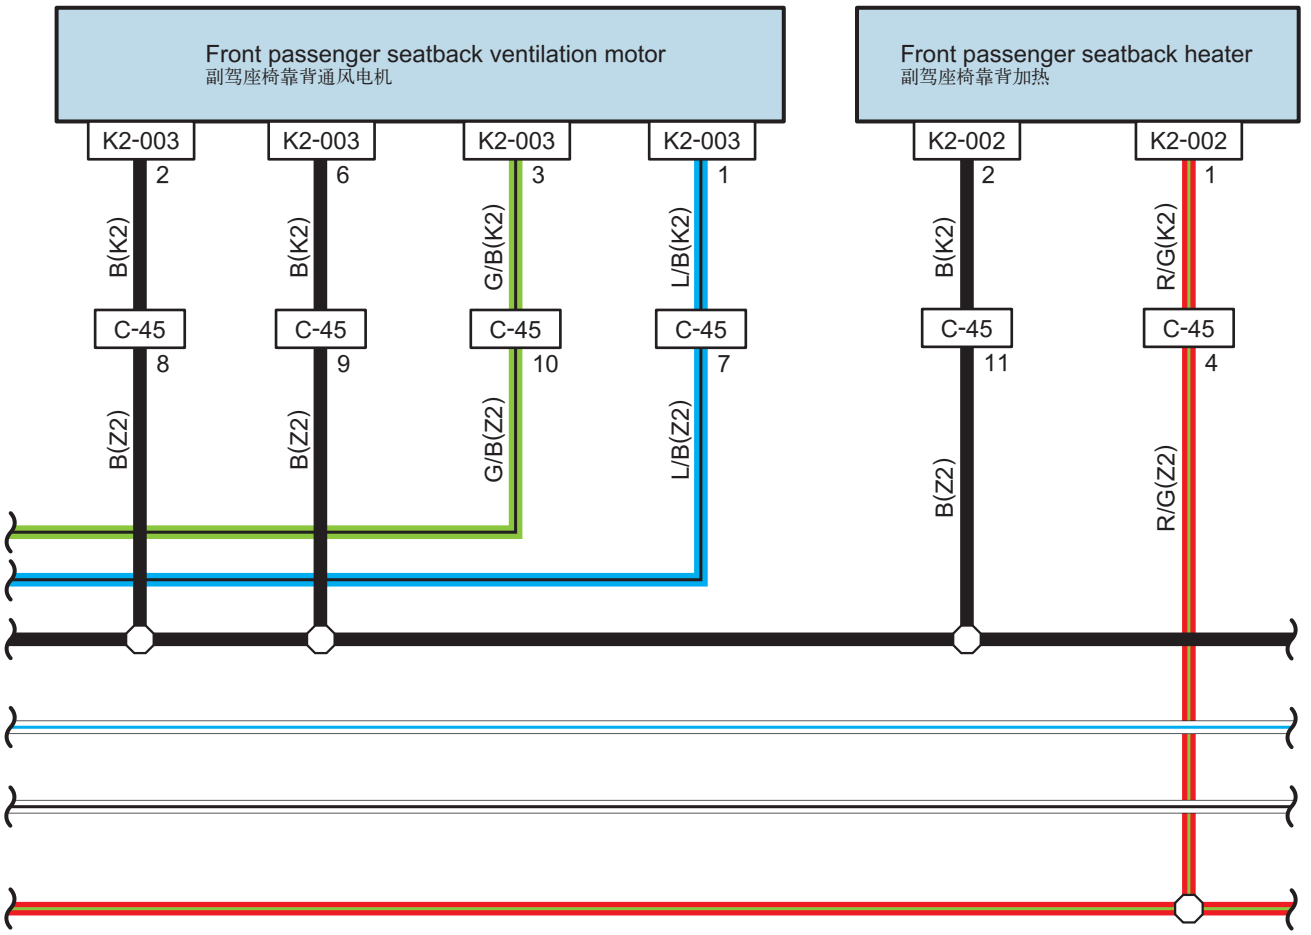

Driver seat adjustment SW
驾驶员座椅调节开关
Driver seat belt buckle
驾驶员安全带锁扣
Z1-006
6
Z1-006
9
Z1-006
4
Z1-006
2
Z1-003
4
Z1-003
1
R(Z1)
R/G(Z1)
V(Z1)
R/W(Z1)
P(Z1)
G(Z1)
D34
D33
D35
D24
D13
D5
Z1-011
Z1-011
Z1-011
Z1-011
Z1-011
Z1-011
Driver seat control unit (DSCU)
驾驶员座椅控制单元

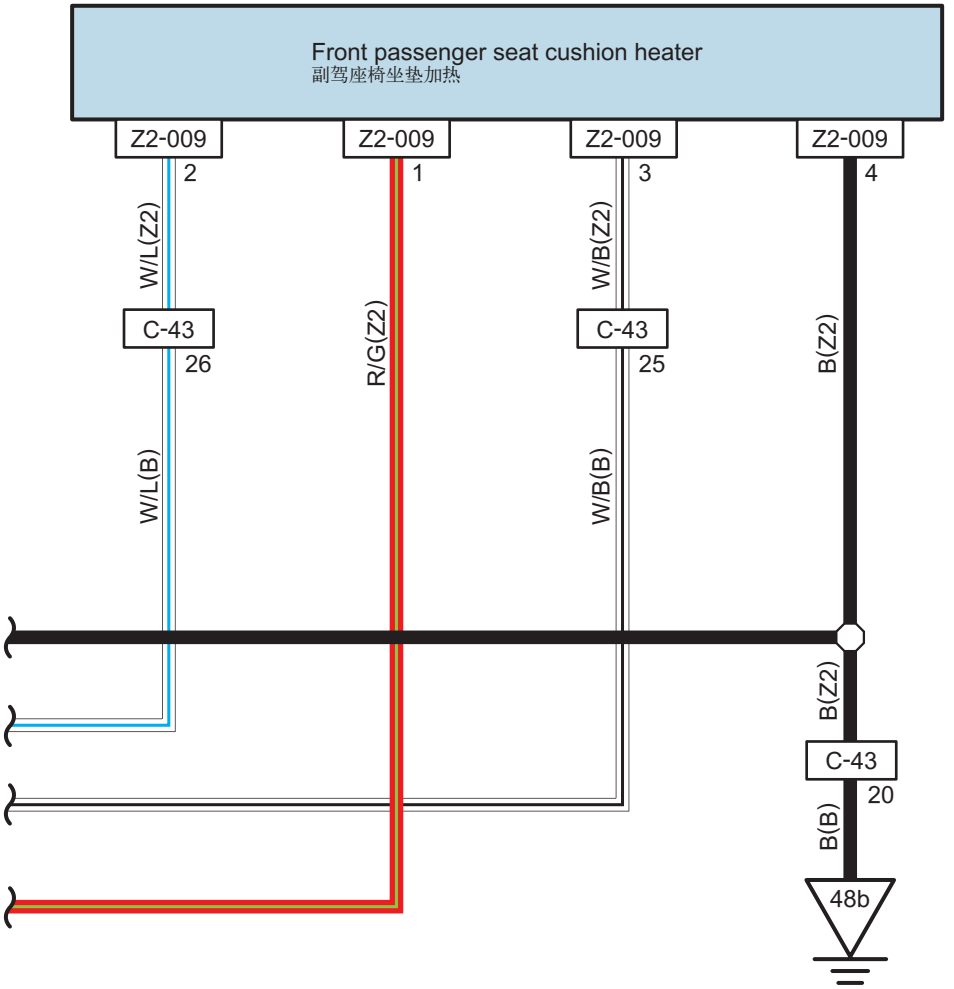

Front passenger seat track motor_non-memory
副驾座椅滑轨电机_非记忆
Z2-015
1
Z2-015
5
V/W(Z2)
L(Z2)
Front passenger angle adjustment motor
副驾角度调节电机
K2-004
2
K2-004
4
BR(K2)
B/G(K2)
C-45
5
C-45
1
BR(Z2)
B/G(Z2)
1
10
7
6
Z2-012
Z2-012
Z2-012
Z2-012
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流
Z2-012
3
B(Z2)
C-43
28
B(B)
48a

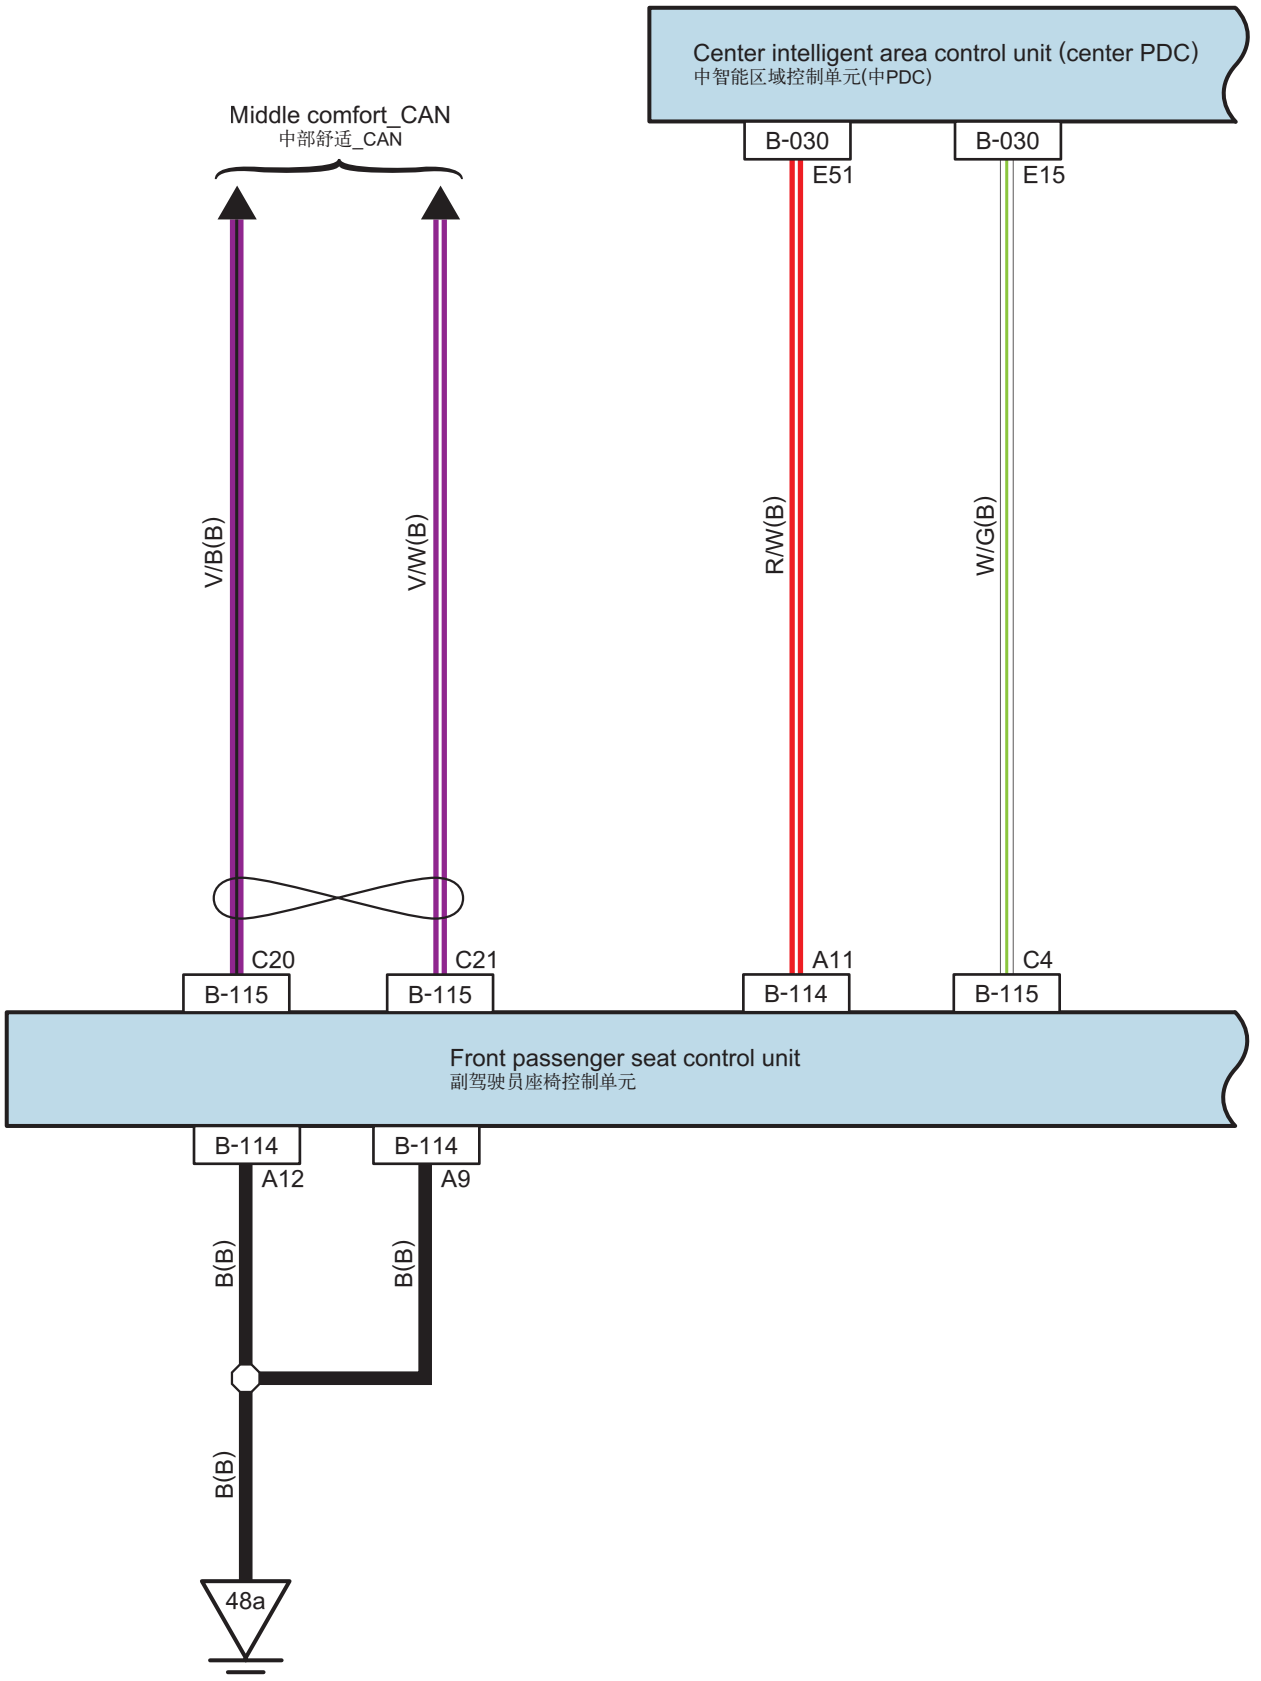

Front passenger seat height adjustment motor
副驾座椅高调电机
Front passenger lumbar support motor
副驾腰托电机
Z2-013
4
Z2-013
2
K2-006
1
K2-006
8
K2-006
2
B(K2)
L(K2)
L/B(K2)
C-45
3
C-45
13
C-45
12
B(Z2)
L/B(Z2)
B/G(Z2)
L/B(Z2)
B(Z2)
L(Z2)
4
Z2-012
5
Z2-012
8
Z2-012
12
Z2-012
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流

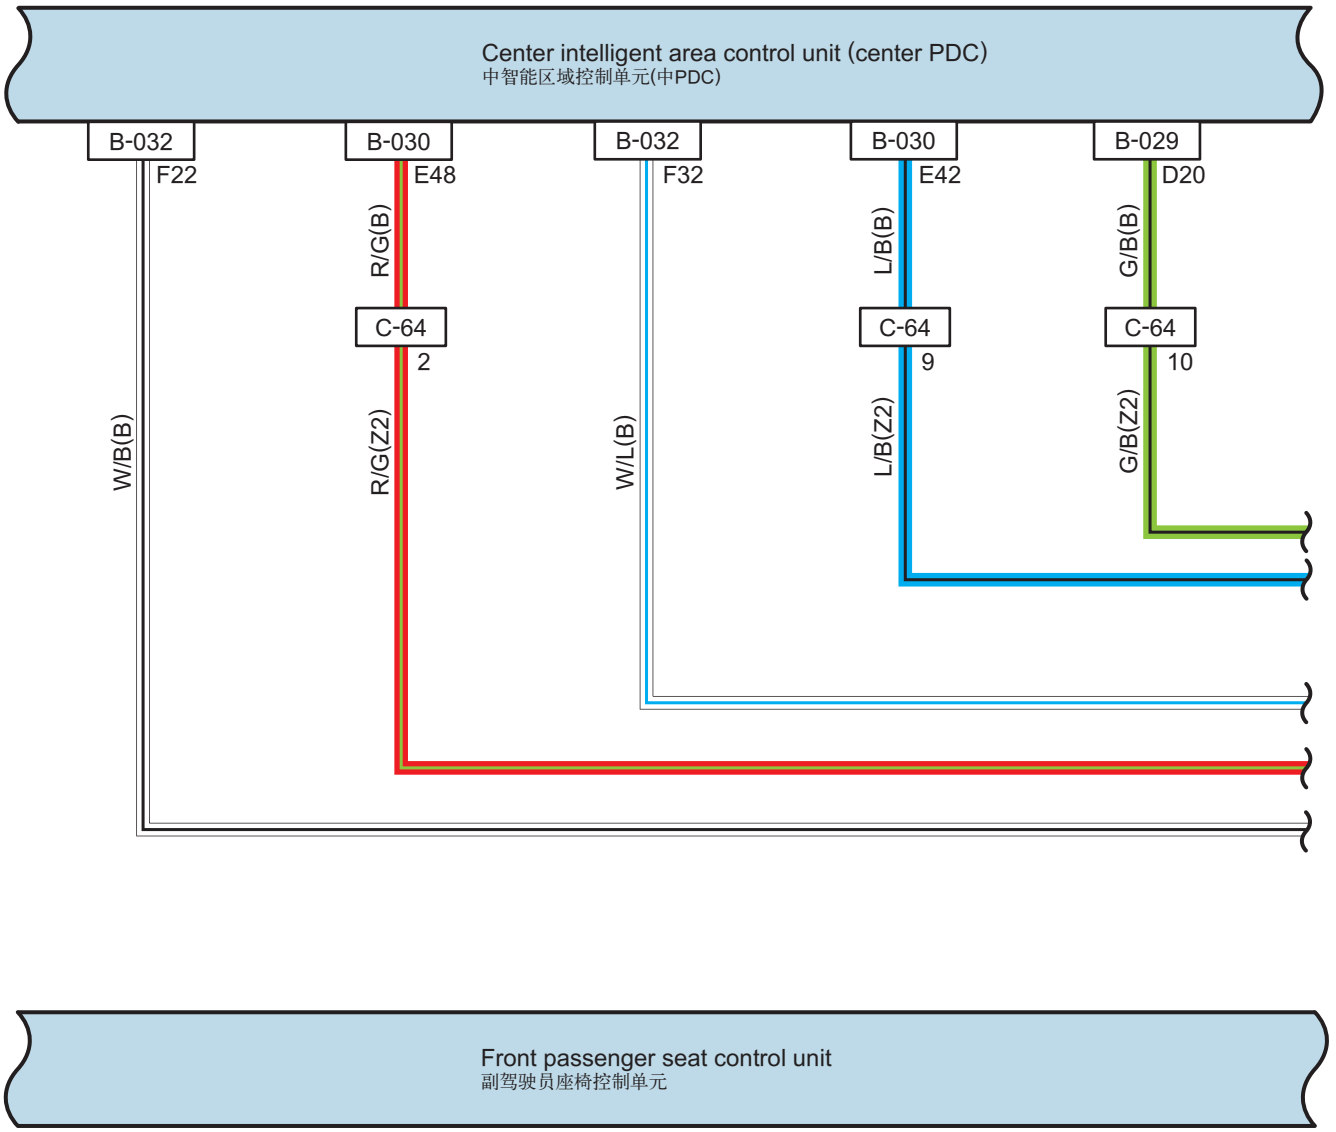

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-033
G48
B-033
G51
B-030
E48
B-032
F22
B-032
F32
B-030
E42
B-029
D20
R/W(B)
B/W(B)
R/G(B)
W/B(B)
W/L(B)
L/B(B)
G/B(B)
C-43
10
C-43
1
C-43
11
C-43
22
C-43
8
R/W(Z2)
B/W(Z2)
R/G(Z2)
L/B(Z2)
G/B(Z2)
9
11
Z2-012
Z2-012
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流

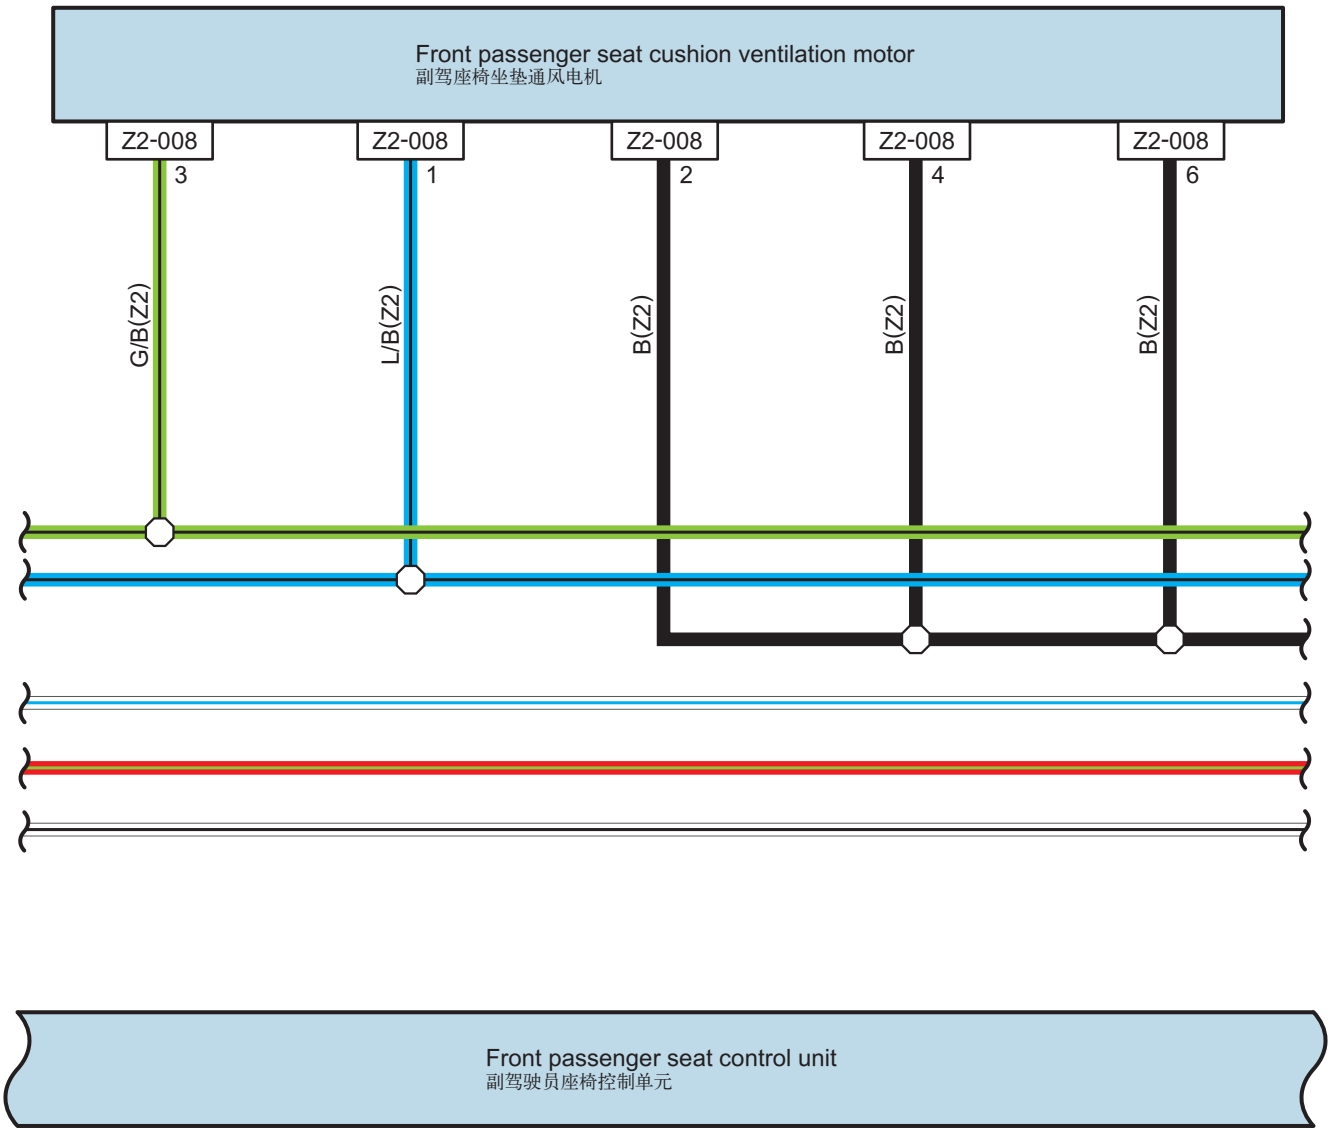

Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Z2-008
3
Z2-008
1
Z2-008
2
Z2-008
4
Z2-008
6
G/B(Z2)
L/B(Z2)
B(Z2)
B(Z2)
B(Z2)

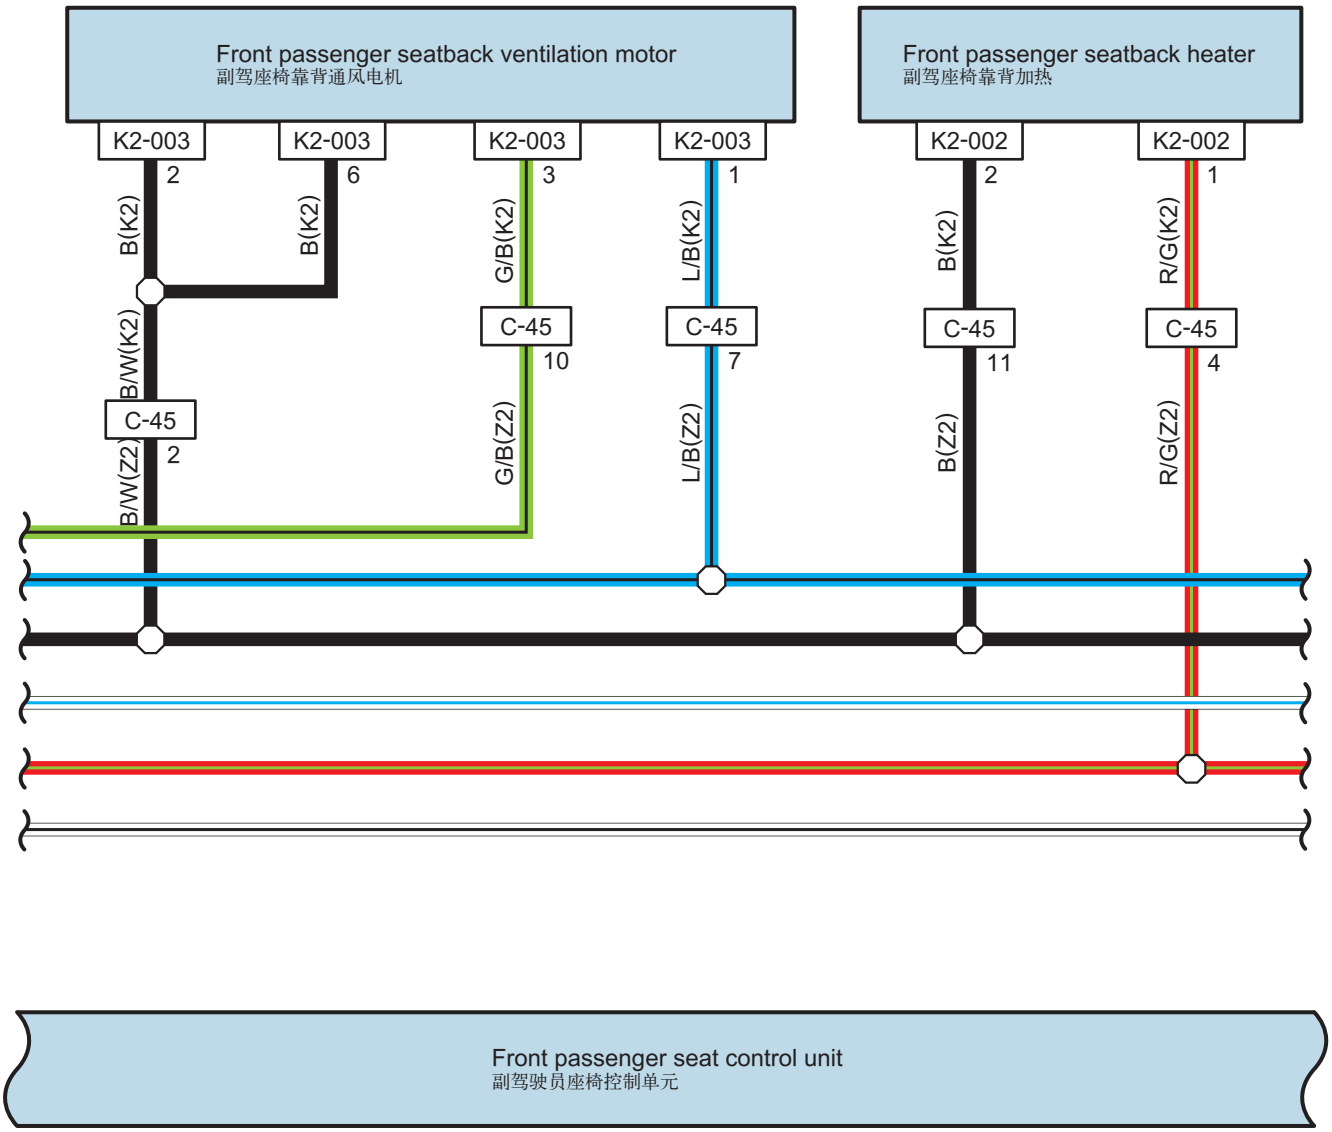

Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Front passenger seatback heater
副驾座椅靠背加热
K2-003
2
B(K2)
C-45
8
B(Z2)
K2-003
6
B(K2)
C-45
9
B(Z2)
K2-003
3
G/B(K2)
C-45
10
G/B(Z2)
K2-003
1
L/B(K2)
C-45
7
L/B(Z2)
K2-002
2
B(K2)
C-45
11
B(Z2)
K2-002
1
R/G(K2)
C-45
4
R/G(Z2)

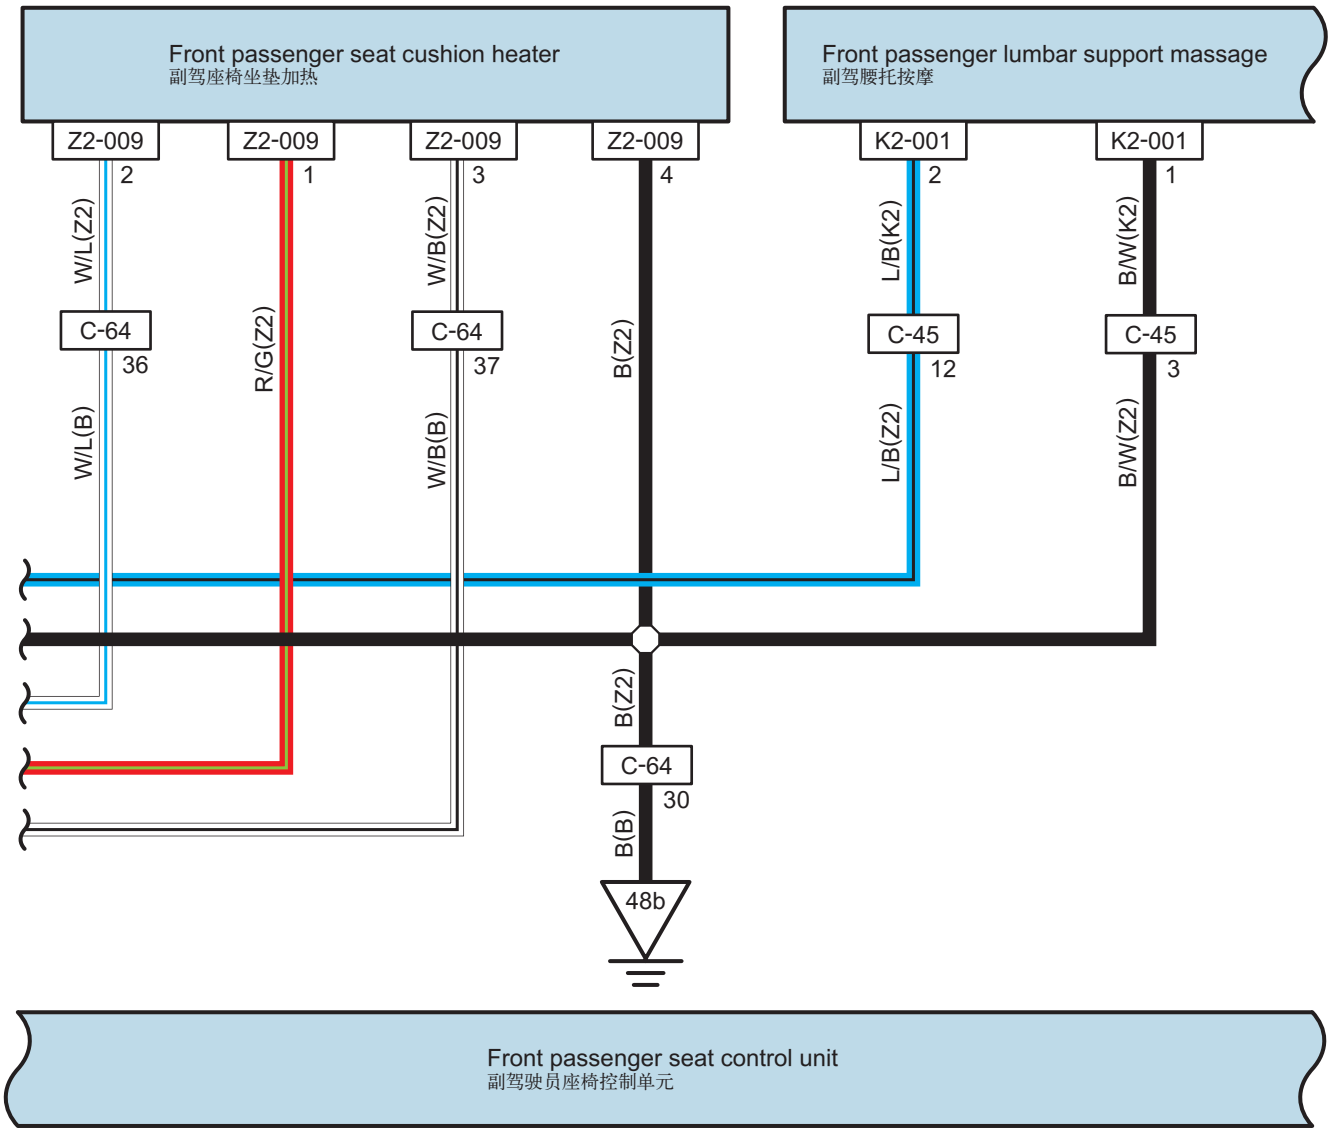

Front passenger seat cushion heater
副驾座椅坐垫加热
Z2-009
2
Z2-009
1
Z2-009
3
Z2-009
4
W/L(Z2)
R/G(Z2)
W/B(Z2)
B(Z2)
C-43
26
C-43
25
W/L(B)
W/B(B)
B(Z2)
C-43
20
B(B)
48b

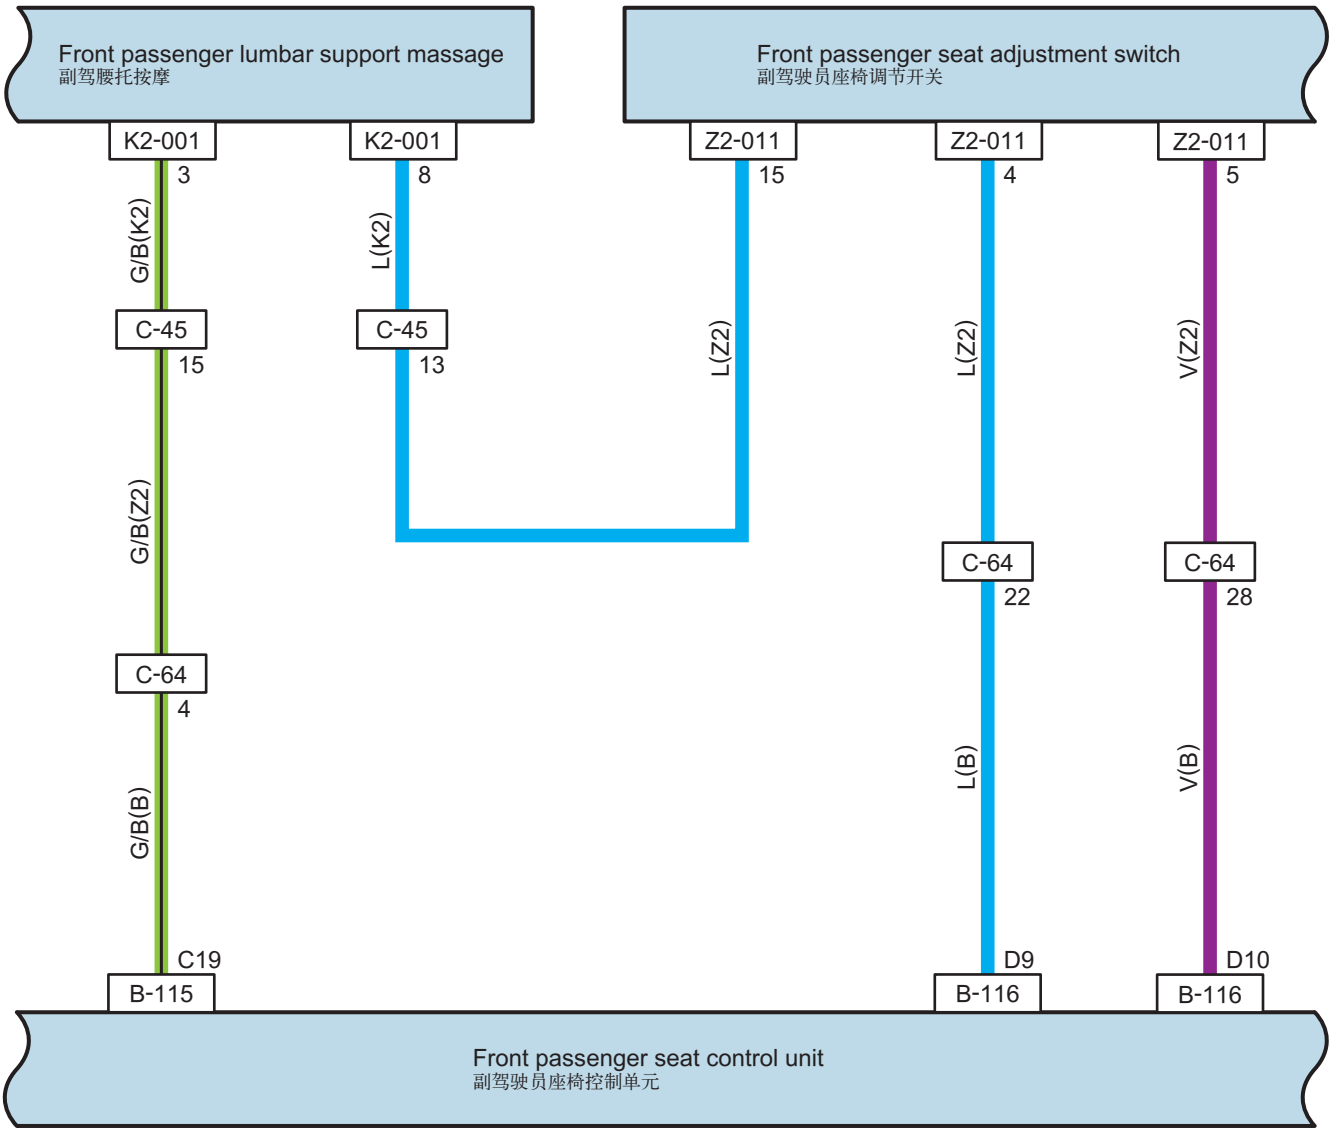

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-030
E51
B-030
E15
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
R/W(B)
W/G(B)
C20
B-115
C21
B-115
A11
B-114
C4
B-115
Front passenger seat control unit
副驾驶员座椅控制单元
B-114
A12
B-114
A9
B(B)
B(B)
B(B)
48a

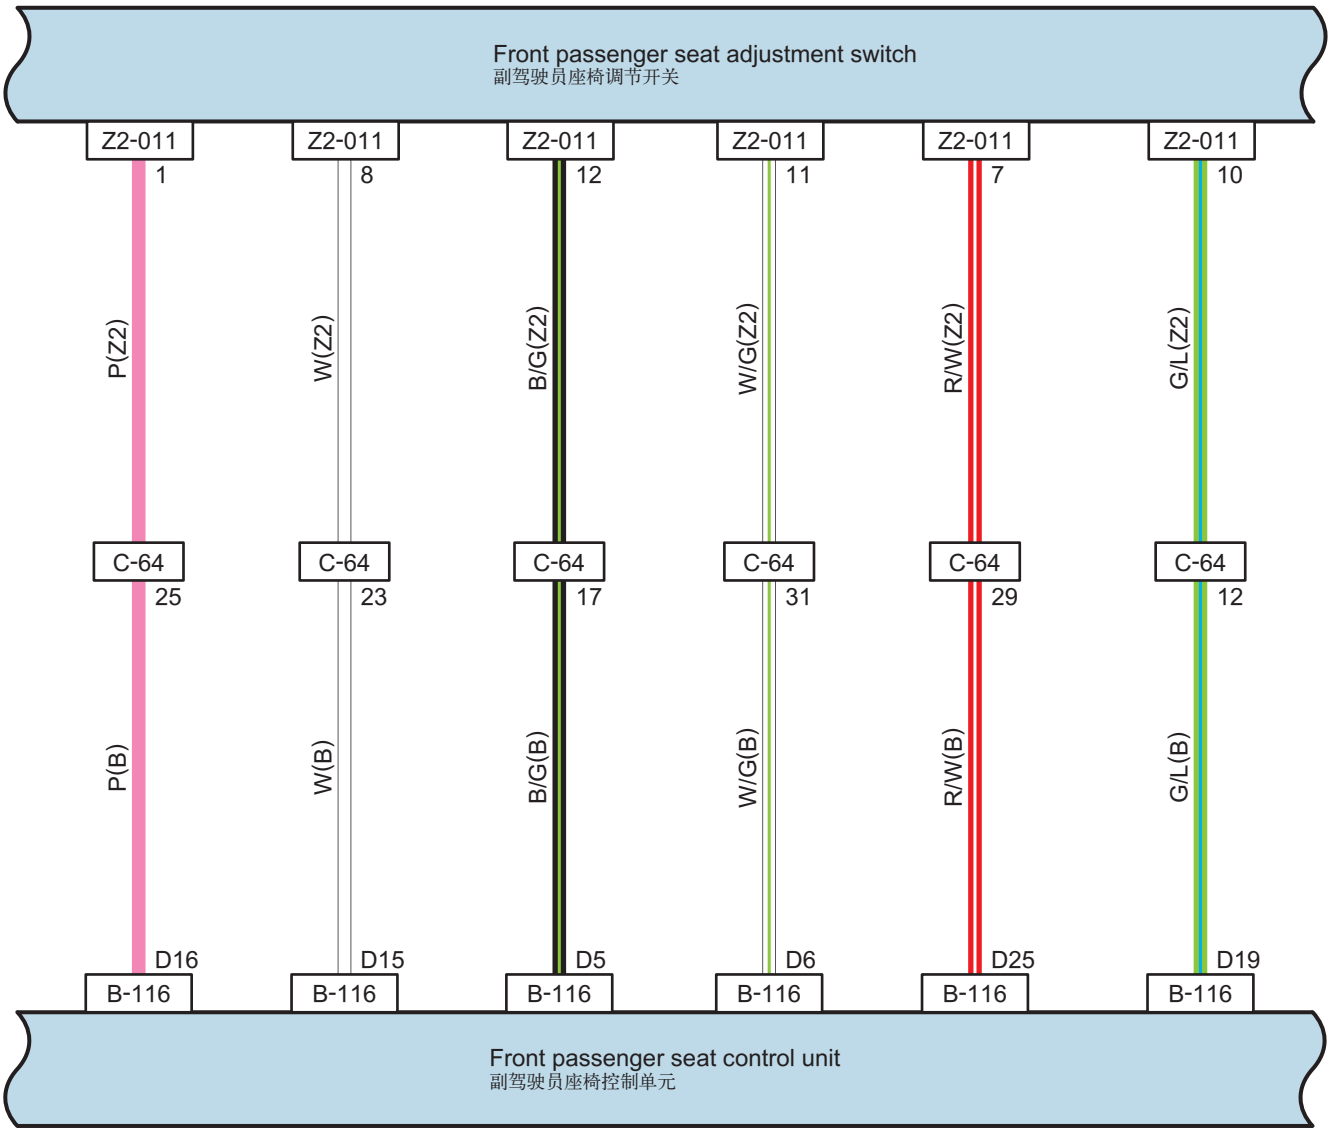

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-032
F22
B-030
E48
B-032
F32
B-030
E42
B-029
D20
R/G(B)
L/B(B)
G/B(B)
C-64
2
C-64
9
C-64
10
W/B(B)
R/G(Z2)
W/L(B)
L/B(Z2)
G/B(Z2)
Front passenger seat control unit
副驾驶员座椅控制单元

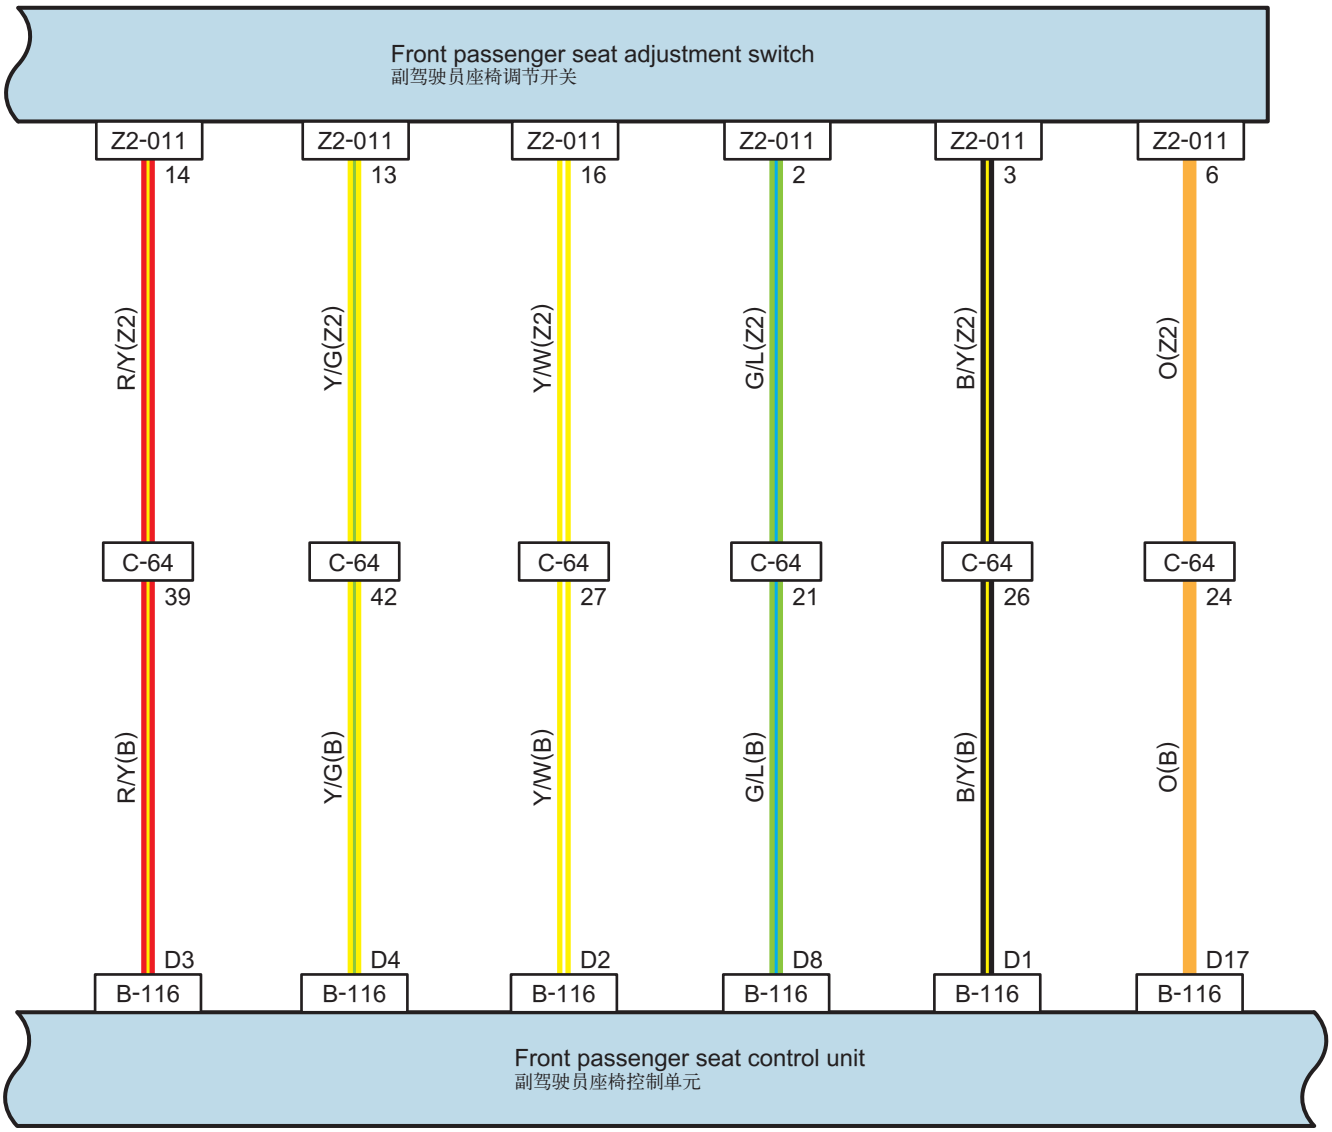

Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Z2-008
3
Z2-008
1
Z2-008
2
Z2-008
4
Z2-008
6
G/B(Z2)
L/B(Z2)
B(Z2)
B(Z2)
B(Z2)
Front passenger seat control unit
副驾驶员座椅控制单元

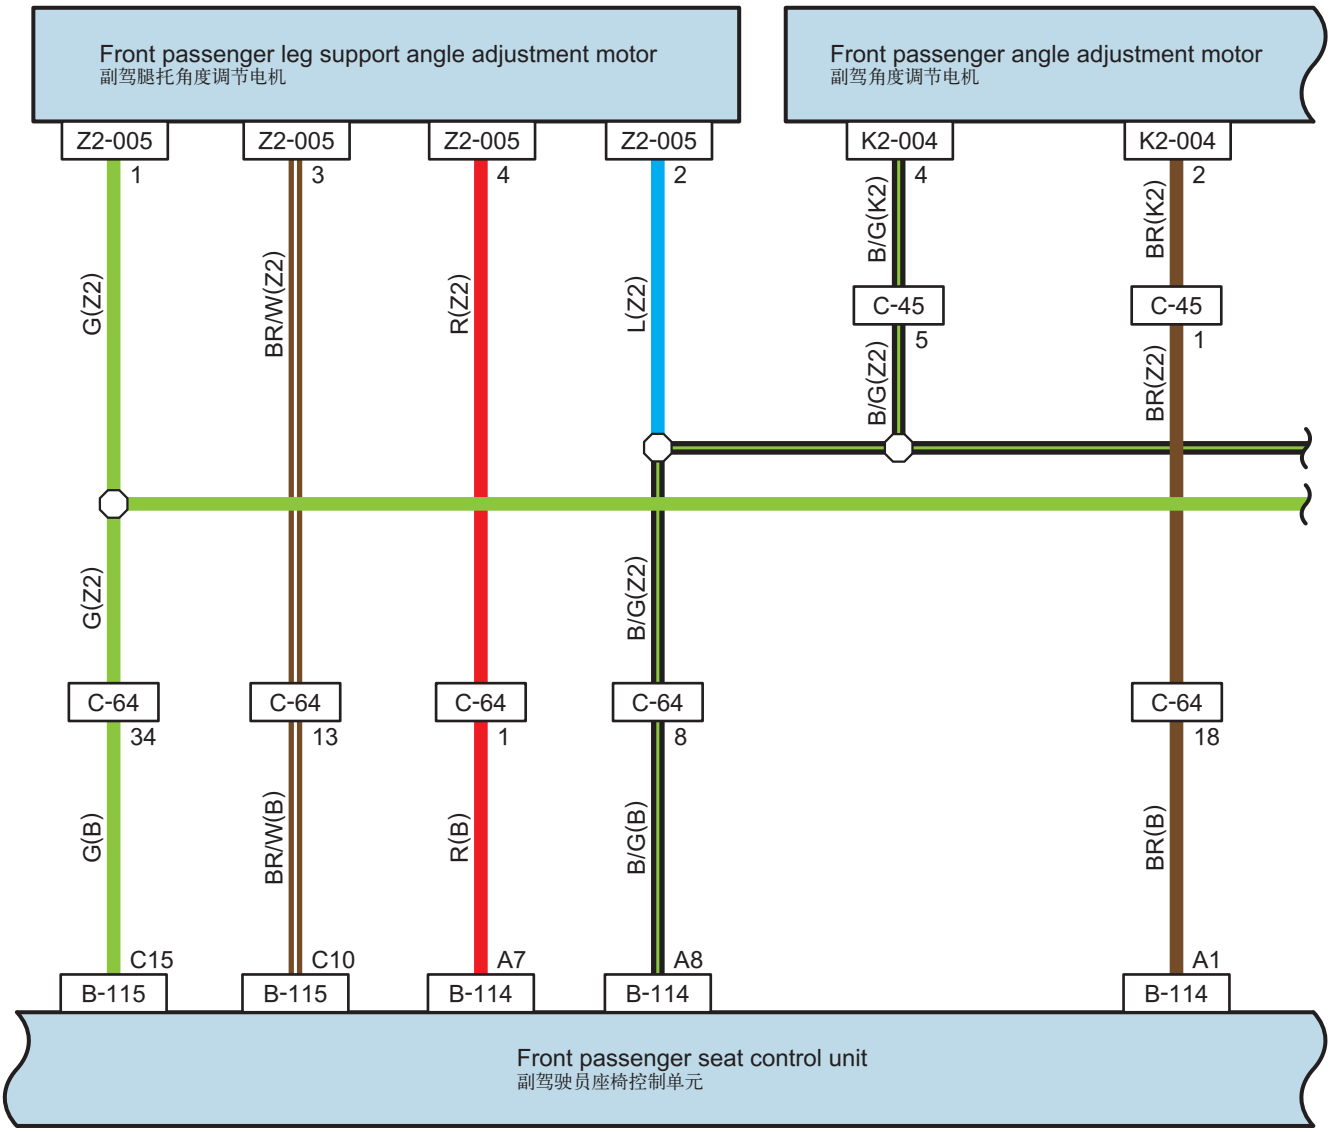

Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Front passenger seatback heater
副驾座椅靠背加热
K2-003
2
K2-003
6
K2-003
3
K2-003
1
K2-002
2
K2-002
1
B(K2)
B(K2)
G/B(K2)
L/B(K2)
B(K2)
R/G(K2)
B/W(K2)
C-45
10
C-45
7
C-45
11
C-45
4
C-45
2
B/W(Z2)
G/B(Z2)
L/B(Z2)
B(Z2)
R/G(Z2)
Front passenger seat control unit
副驾驶员座椅控制单元

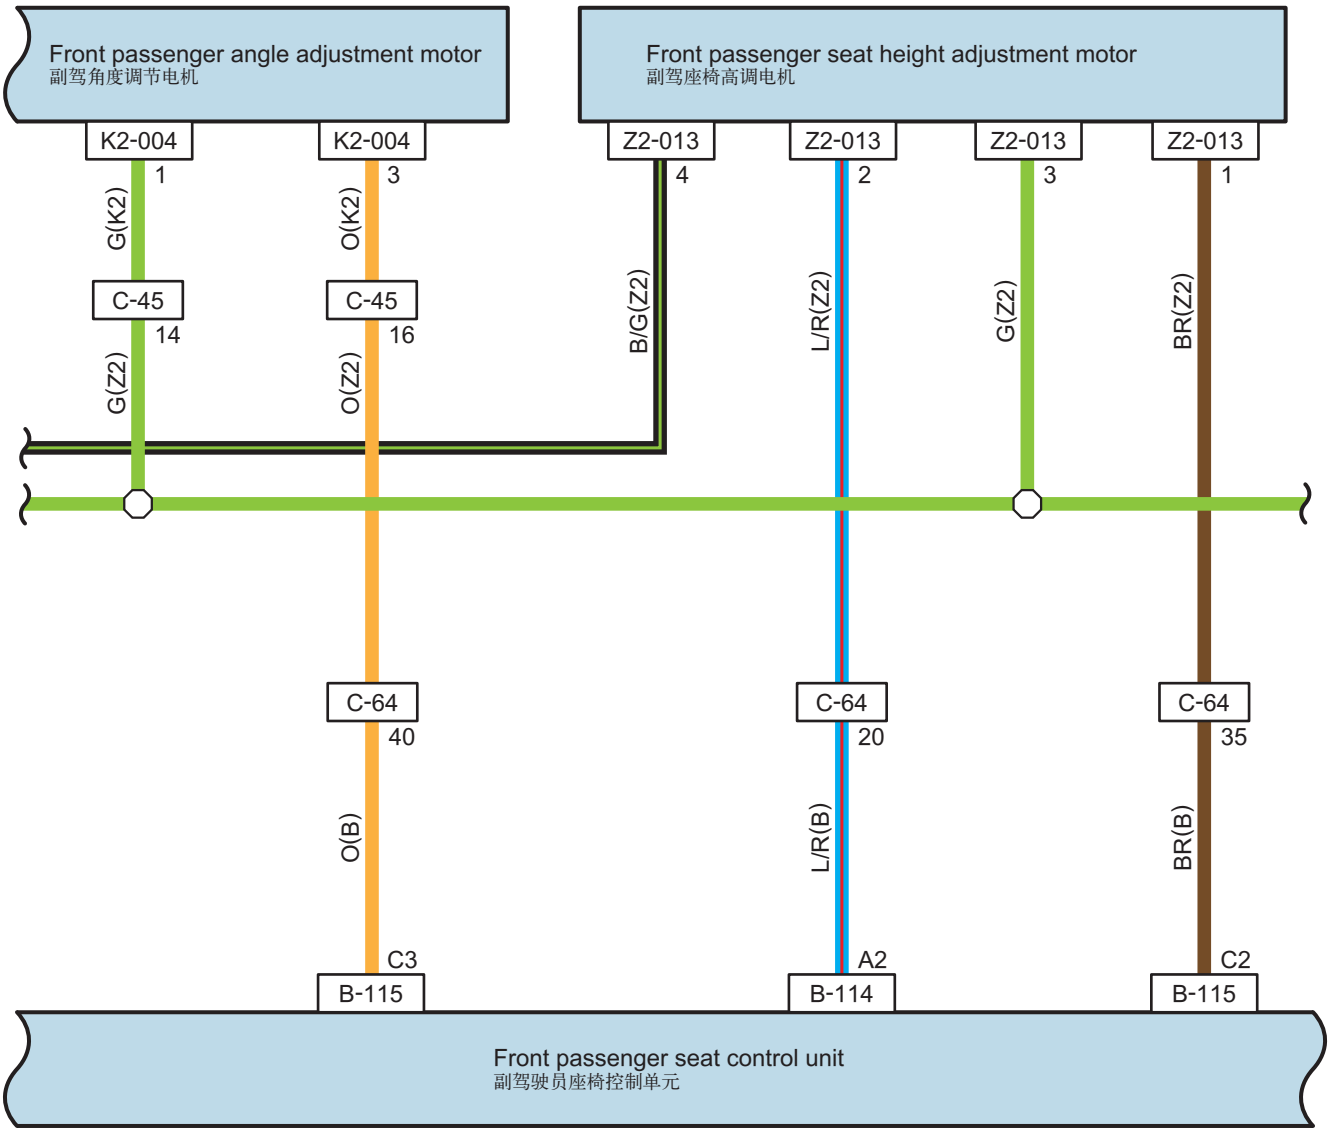

Front passenger seat cushion heater
副驾座椅坐垫加热
Front passenger lumbar support massage
副驾腰托按摩
Z2-009
2
Z2-009
1
Z2-009
3
Z2-009
4
K2-001
2
K2-001
1
W/L(Z2)
R/G(Z2)
W/B(Z2)
B(Z2)
L/B(K2)
B/W(K2)
C-64
36
C-64
37
C-45
12
C-45
3
W/L(B)
W/B(B)
L/B(Z2)
B/W(Z2)
B(Z2)
C-64
30
B(B)
48b
Front passenger seat control unit
副驾驶员座椅控制单元

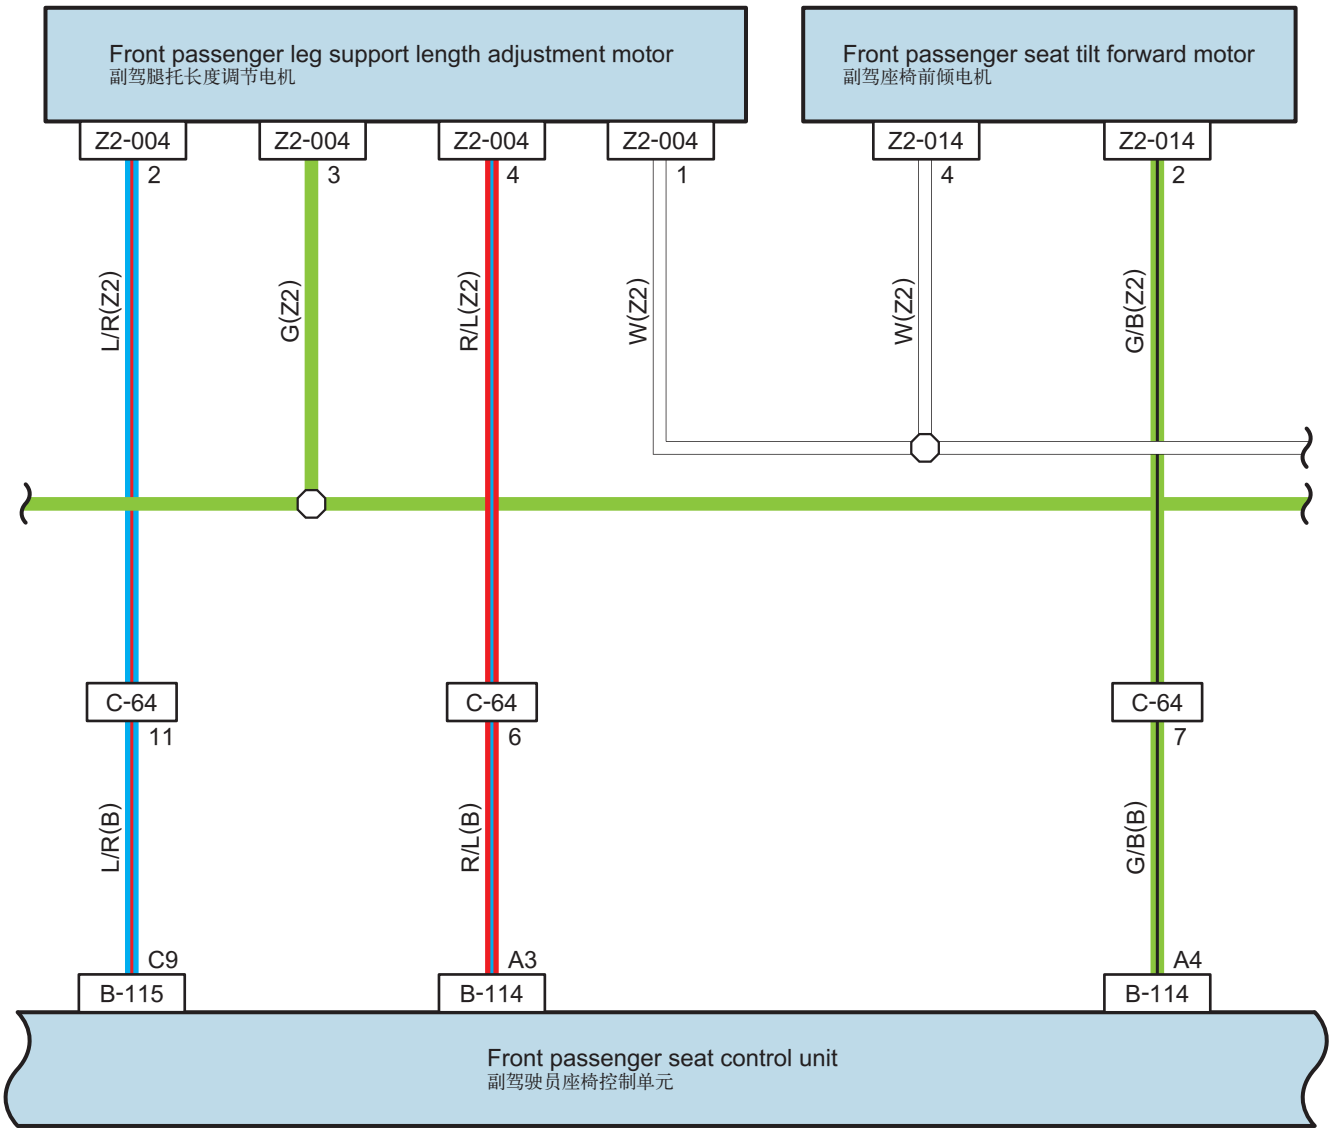

Front passenger lumbar support massage
副驾腰托按摩
Front passenger seat adjustment switch
副驾驶员座椅调节开关
K2-001
3
K2-001
8
Z2-011
15
Z2-011
4
Z2-011
5
G/B(K2)
L(K2)
L(Z2)
L(Z2)
V(Z2)
C-45
15
C-45
13
G/B(Z2)
C-64
22
C-64
28
C-64
4
G/B(B)
L(B)
V(B)
C19
D9
D10
B-115
B-116
B-116
Front passenger seat control unit
副驾驶员座椅控制单元

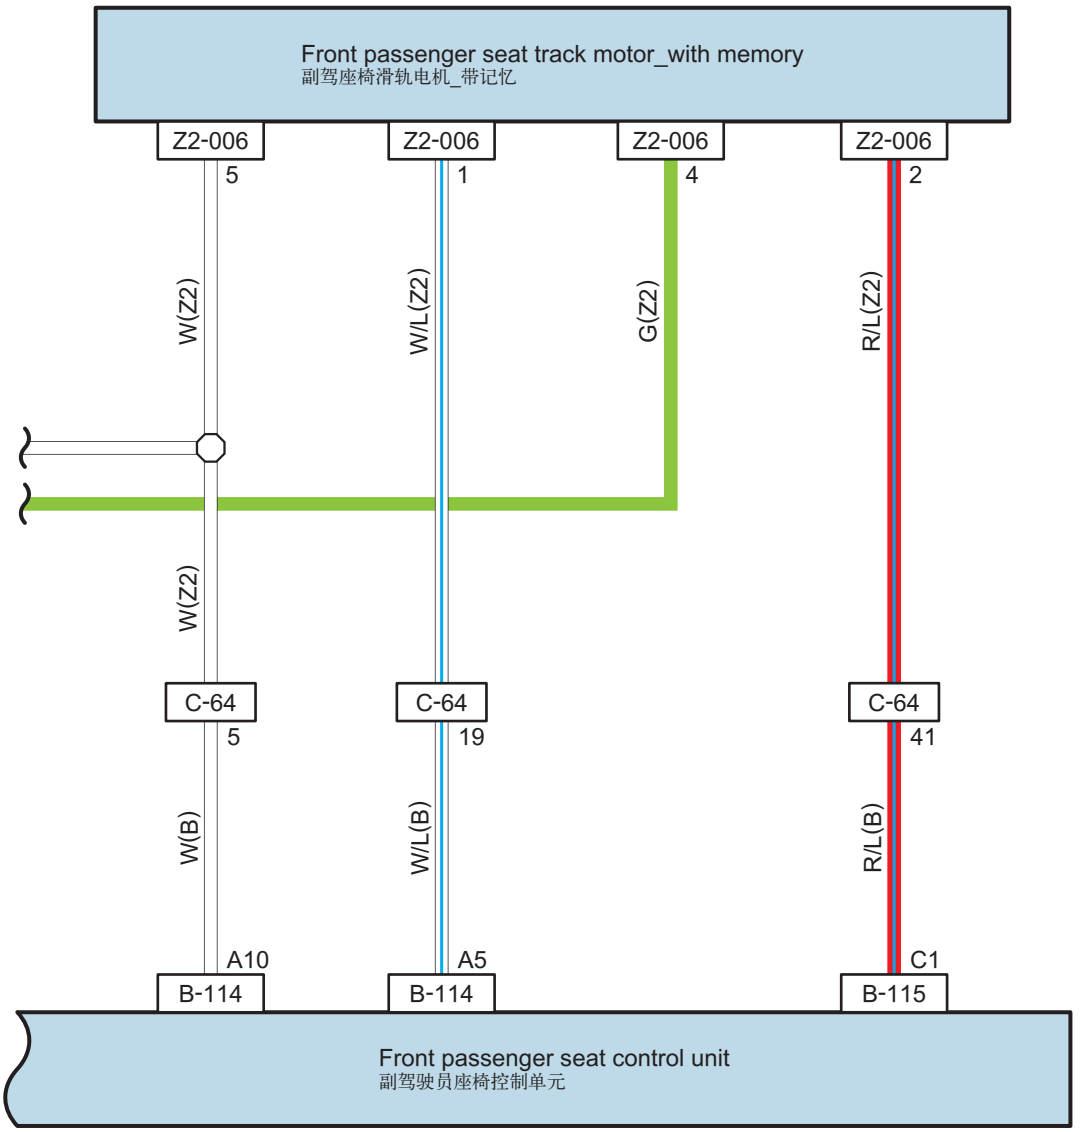

Front passenger seat adjustment switch
副驾驶员座椅调节开关
Z2-011
1
8
12
11
7
10
P(Z2)
W(Z2)
B/G(Z2)
W/G(Z2)
R/W(Z2)
G/L(Z2)
C-64
25
23
17
31
29
12
P(B)
W(B)
B/G(B)
W/G(B)
R/W(B)
G/L(B)
D16
D15
D5
D6
D25
D19
B-116
Front passenger seat control unit
副驾驶员座椅控制单元

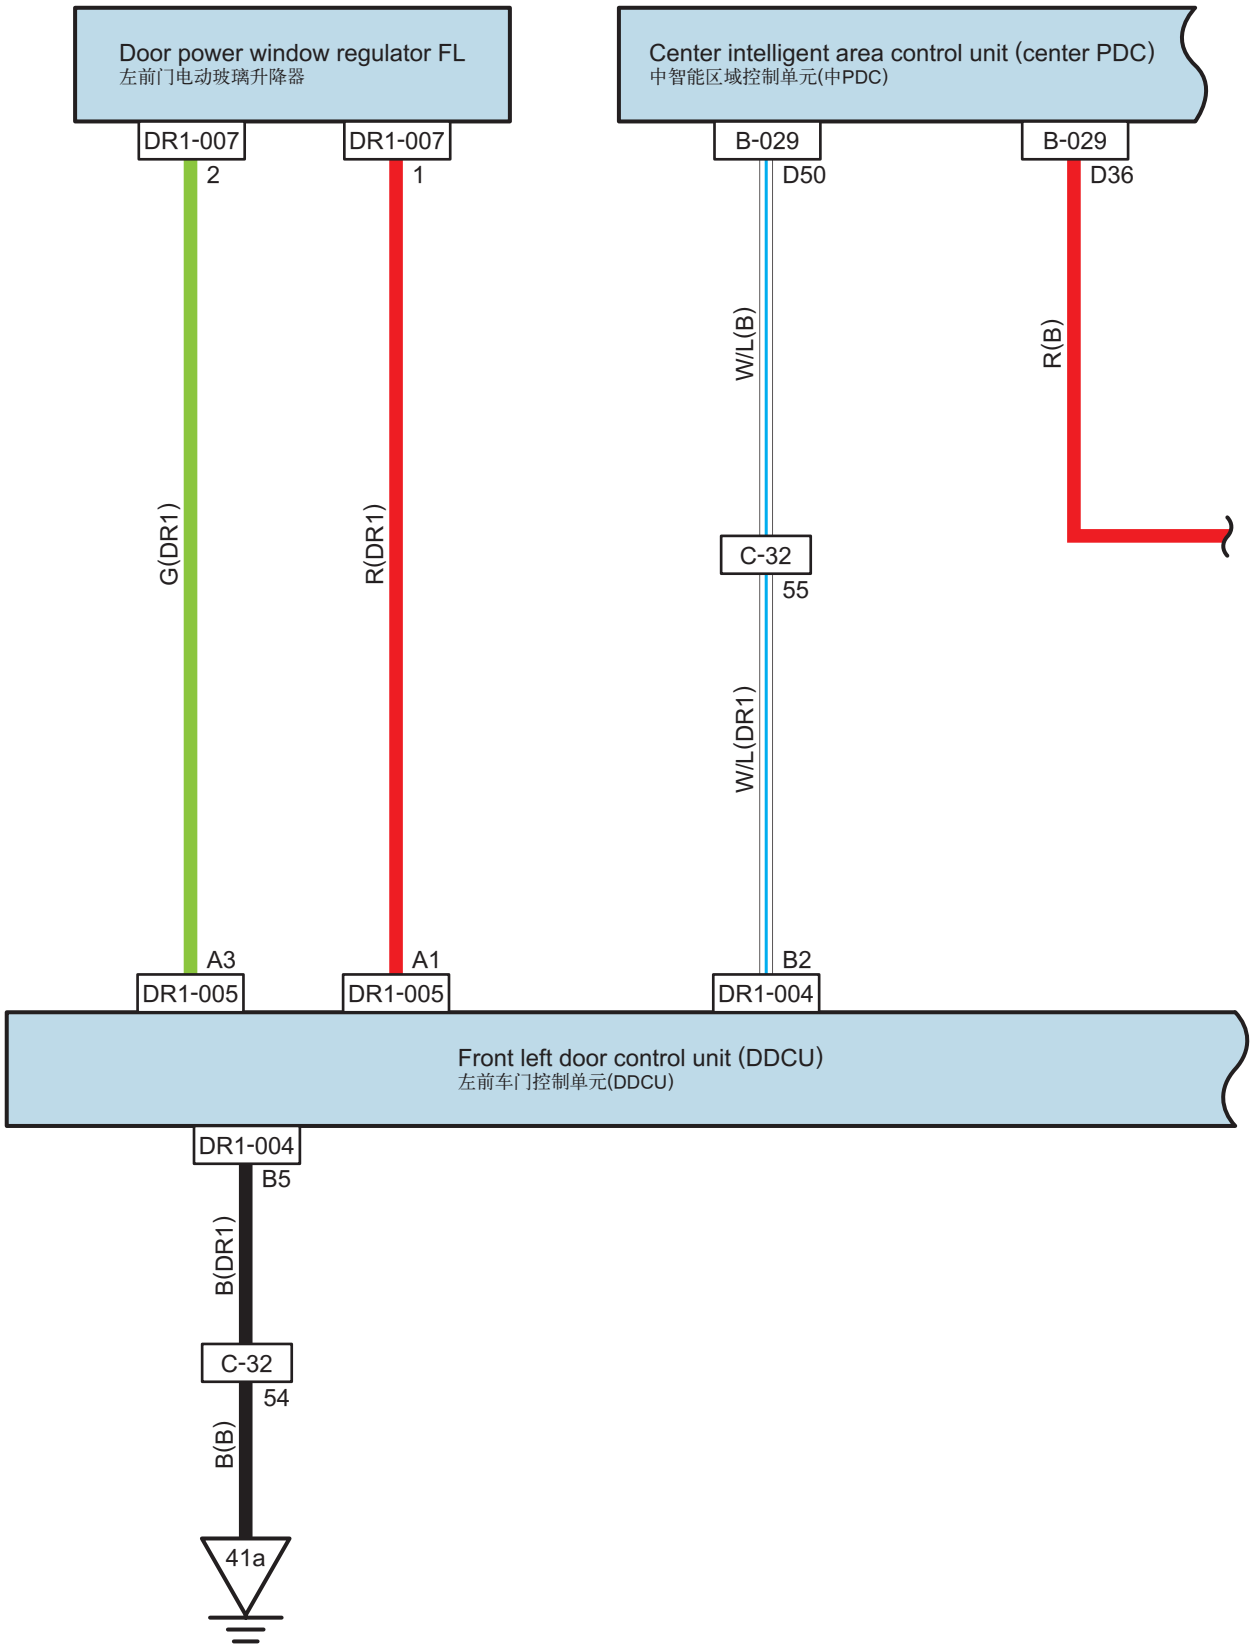

Front passenger seat adjustment switch
副驾驶员座椅调节开关
Z2-011
14
13
16
2
3
6
R/Y(Z2)
Y/G(Z2)
Y/W(Z2)
G/L(Z2)
B/Y(Z2)
O(Z2)
C-64
39
42
27
21
26
24
R/Y(B)
Y/G(B)
Y/W(B)
G/L(B)
B/Y(B)
O(B)
D3
D4
D2
D8
D1
D17
B-116
Front passenger seat control unit
副驾驶员座椅控制单元

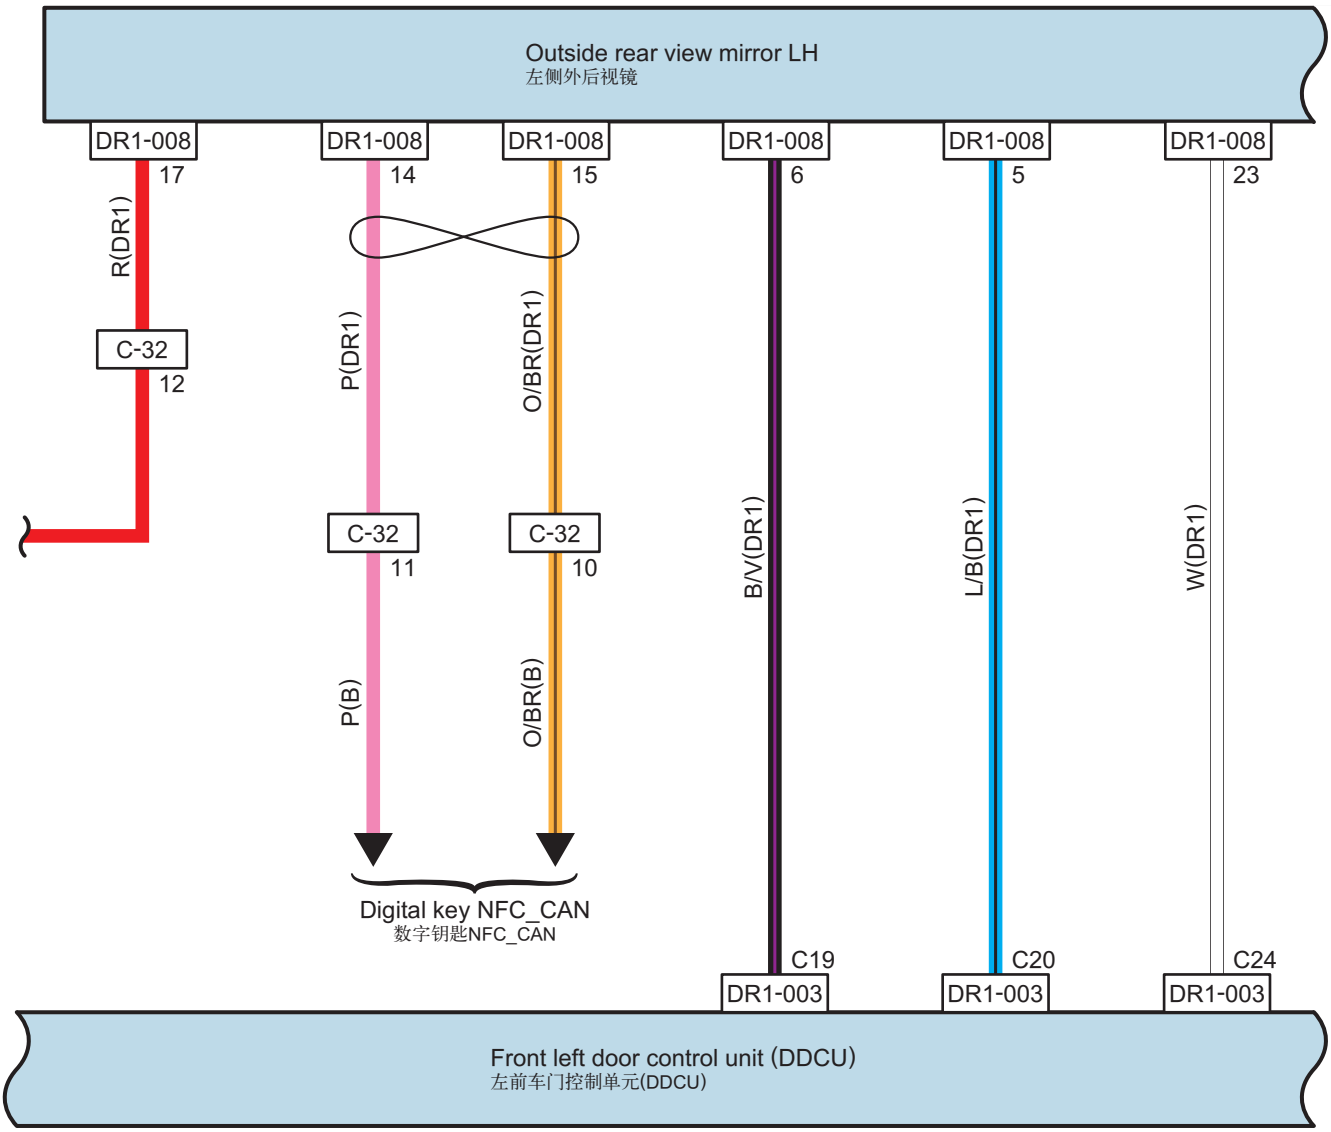

Front passenger leg support angle adjustment motor
副驾腿托角度调节电机
Front passenger angle adjustment motor
副驾角度调节电机
Z2-005
1
Z2-005
3
Z2-005
4
Z2-005
2
K2-004
4
K2-004
2
G(Z2)
BR/W(Z2)
R(Z2)
L(Z2)
B/G(K2)
BR(K2)
C-45
5
C-45
1
B/G(Z2)
BR(Z2)
G(Z2)
B/G(Z2)
C-64
34
C-64
13
C-64
1
C-64
8
C-64
18
G(B)
BR/W(B)
R(B)
B/G(B)
BR(B)
C15
C10
A7
A8
A1
B-115
B-115
B-114
B-114
B-114
Front passenger seat control unit
副驾驶员座椅控制单元

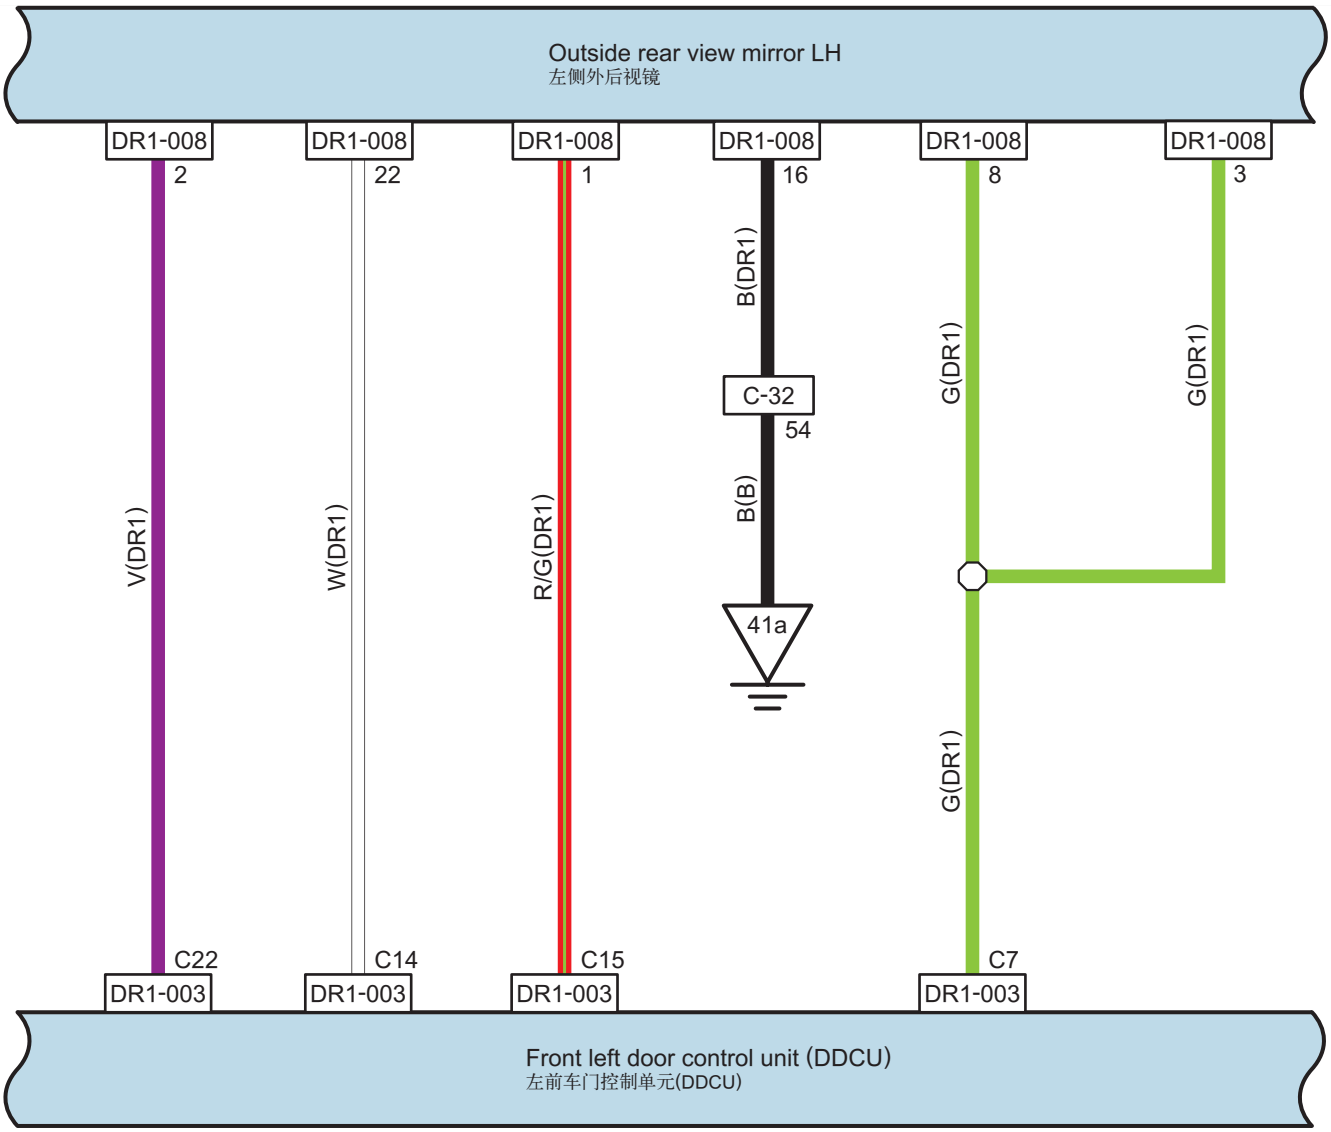

Front passenger angle adjustment motor
副驾角度调节电机
Front passenger seat height adjustment motor
副驾座椅高调电机
K2-004
1
K2-004
3
Z2-013
4
Z2-013
2
Z2-013
3
Z2-013
1
G(K2)
O(K2)
B/G(Z2)
L/R(Z2)
G(Z2)
BR(Z2)
C-45
14
C-45
16
G(Z2)
O(Z2)
C-64
40
C-64
20
C-64
35
O(B)
L/R(B)
BR(B)
C3
A2
C2
B-115
B-114
B-115
Front passenger seat control unit
副驾驶员座椅控制单元

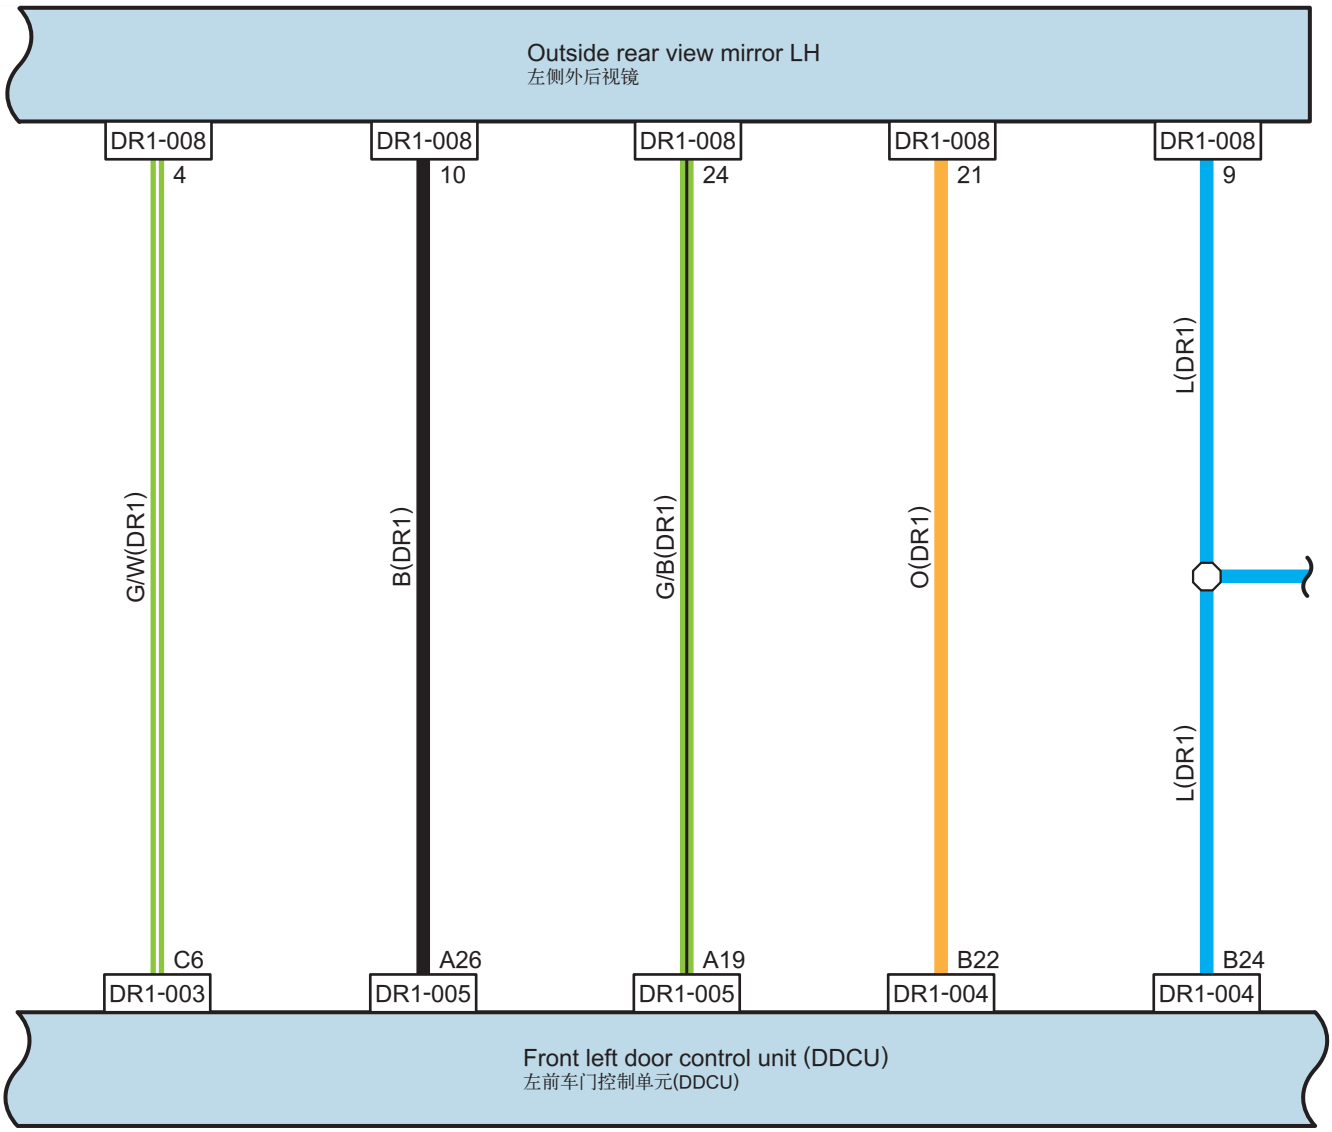

Front passenger leg support length adjustment motor
副驾腿托长度调节电机
Front passenger seat tilt forward motor
副驾座椅前倾电机
Z2-004
2
Z2-004
3
Z2-004
4
Z2-004
1
Z2-014
4
Z2-014
2
L/R(Z2)
G(Z2)
R/L(Z2)
W(Z2)
W(Z2)
G/B(Z2)
C-64
11
C-64
6
C-64
7
L/R(B)
R/L(B)
G/B(B)
C9
A3
A4
B-115
B-114
B-114
Front passenger seat control unit
副驾驶员座椅控制单元

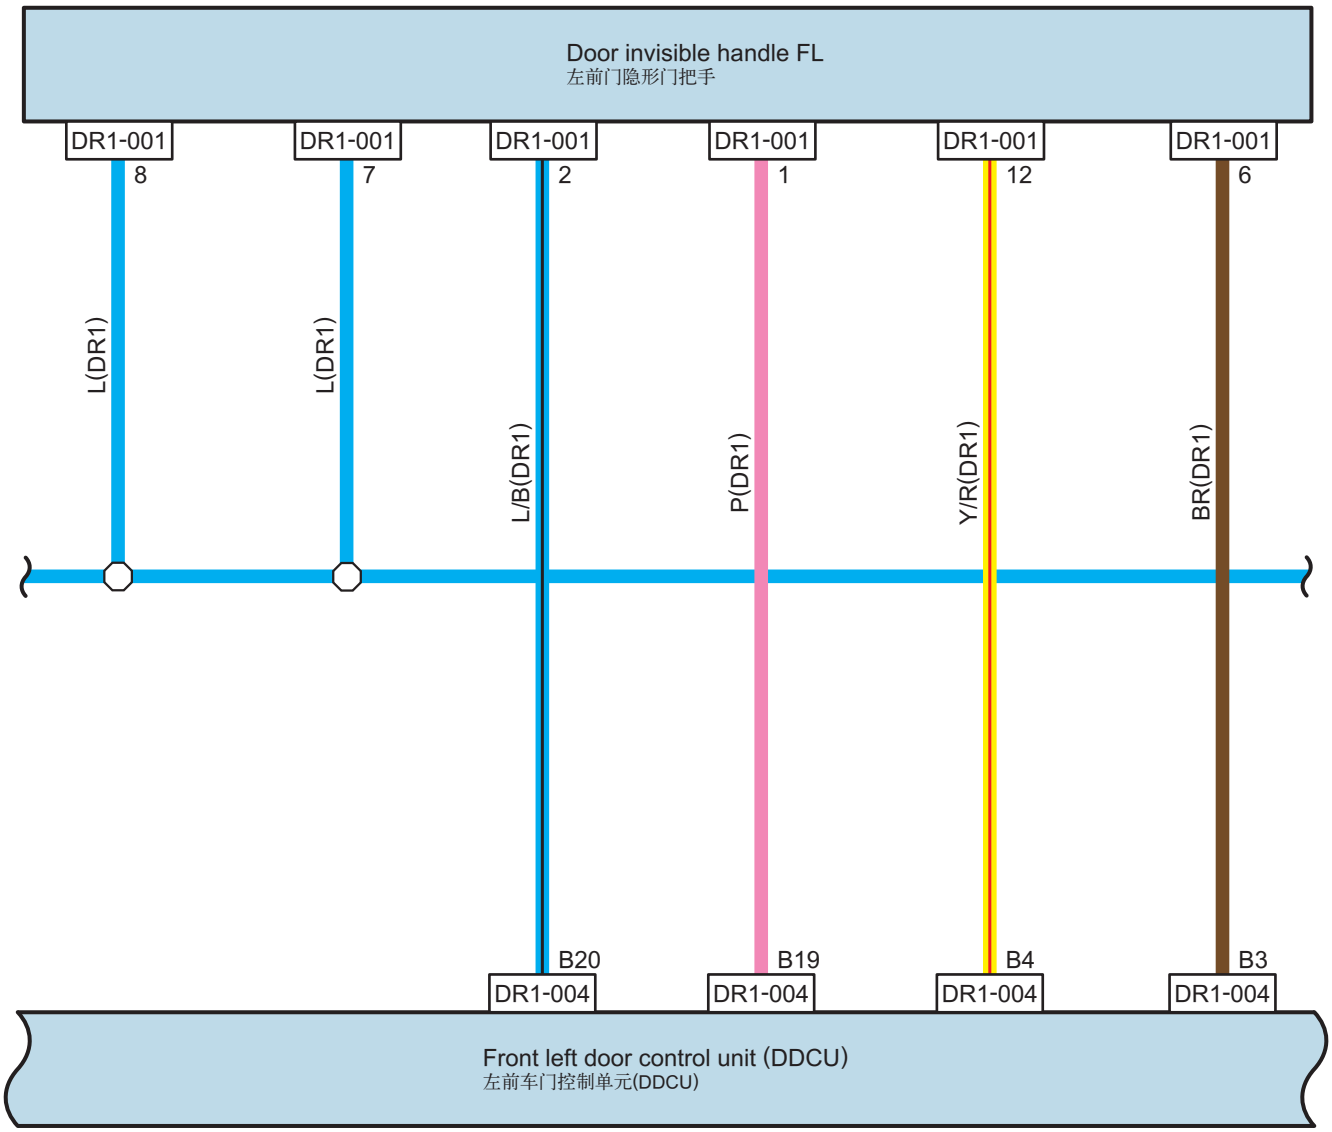

Front passenger seat track motor_with memory
副驾座椅滑轨电机_带记忆
Z2-006
5
Z2-006
1
Z2-006
4
Z2-006
2
W(Z2)
W/L(Z2)
G(Z2)
R/L(Z2)
W(Z2)
C-64
5
C-64
19
C-64
41
W(B)
W/L(B)
R/L(B)
A10
A5
C1
B-114
B-114
B-115
Front passenger seat control unit
副驾驶员座椅控制单元

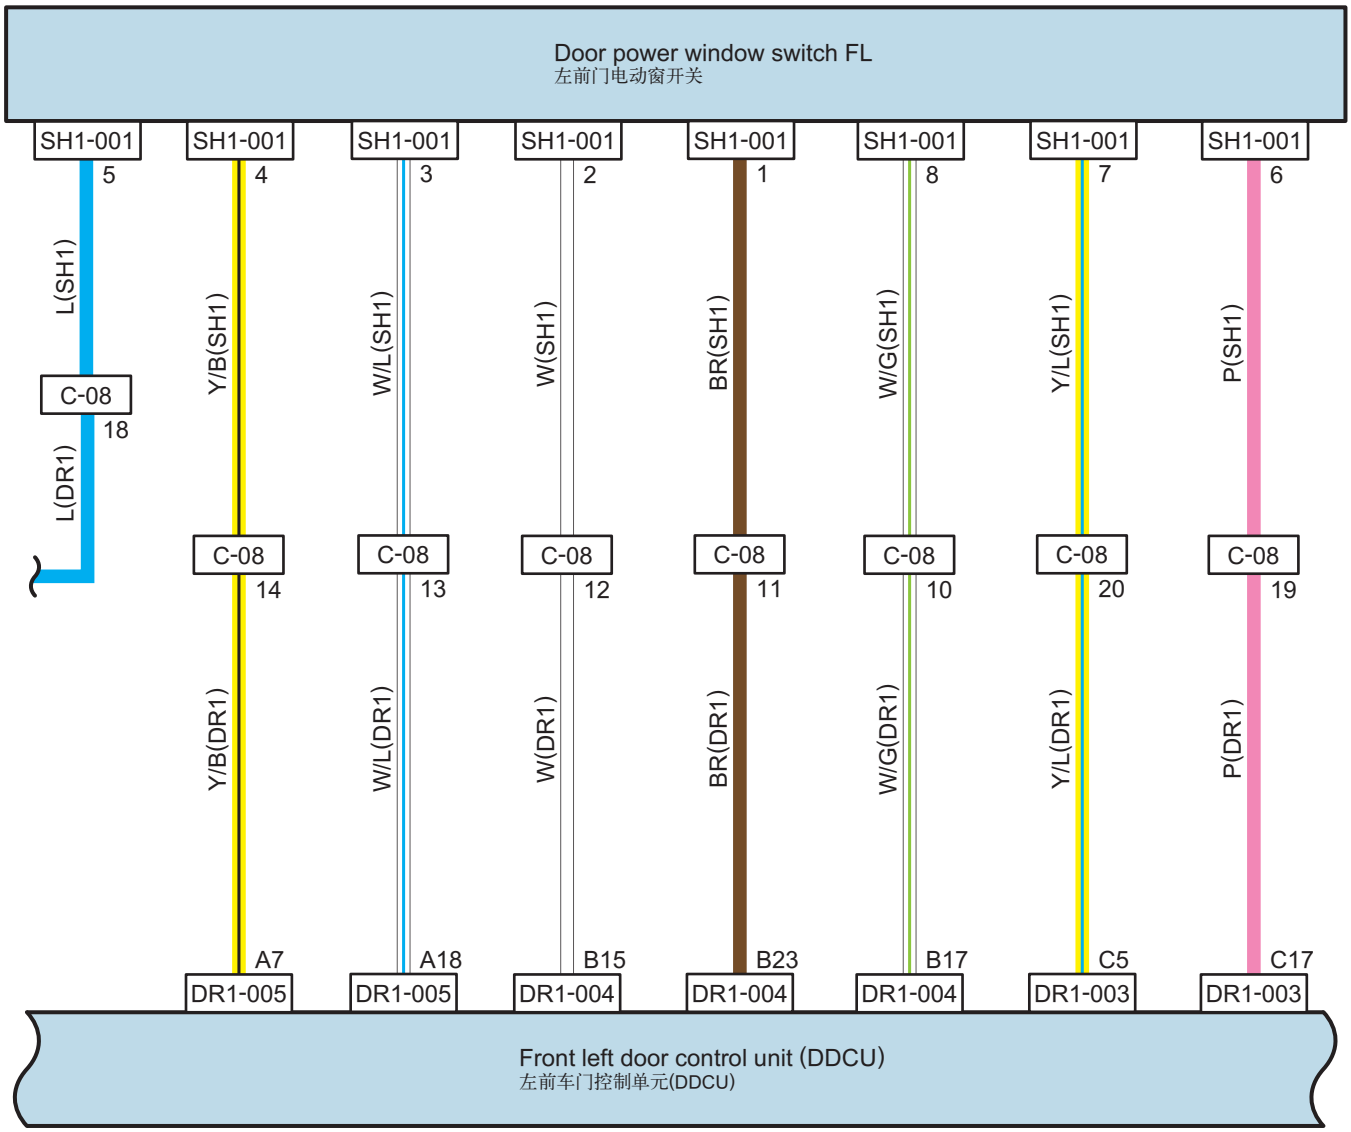

Door power window regulator FL
左前门电动玻璃升降器
DR1-007
2
DR1-007
1
G(DR1)
R(DR1)
A3
DR1-005
A1
DR1-005
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-029
D50
B-029
D36
W/L(B)
R(B)
C-32
55
W/L(DR1)
B2
DR1-004
Front left door control unit (DDCU)
左前车门控制单元(DDCU)
DR1-004
B5
B(DR1)
C-32
54
B(B)
41a

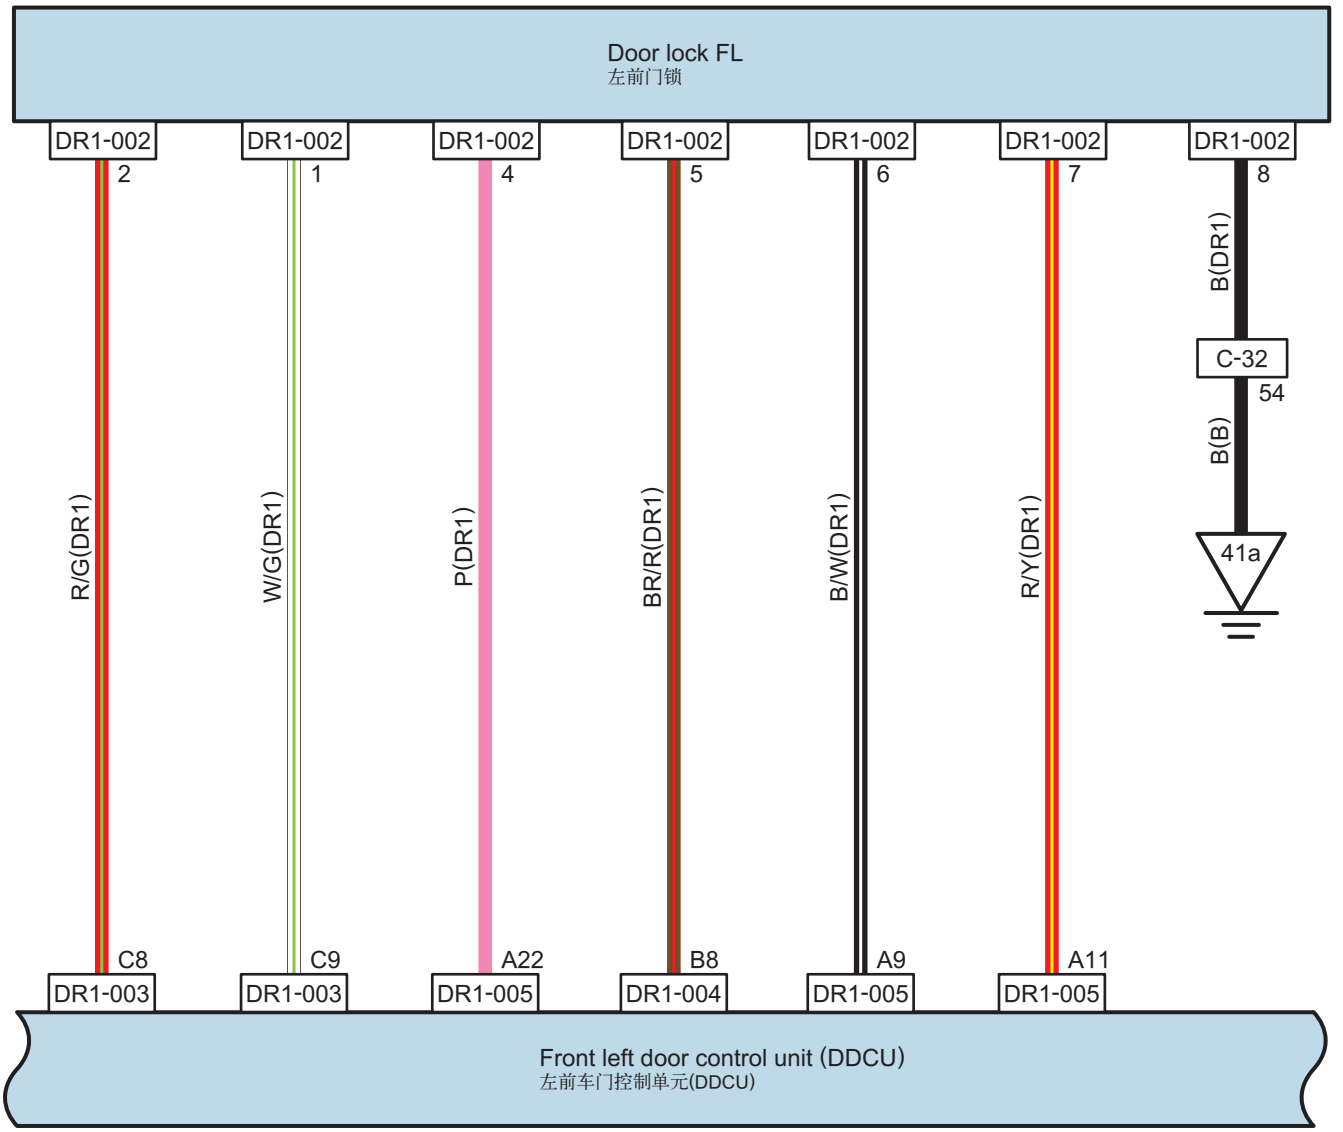

Outside rear view mirror LH
左侧外后视镜
DR1-008
17
R(DR1)
C-32
12
DR1-008
14
P(DR1)
C-32
11
P(B)
DR1-008
15
O/BR(DR1)
C-32
10
O/BR(B)
Digital key NFC_CAN
数字钥匙NFC_CAN
DR1-008
6
B/V(DR1)
C19
DR1-003
DR1-008
5
L/B(DR1)
C20
DR1-003
DR1-008
23
W(DR1)
C24
DR1-003
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

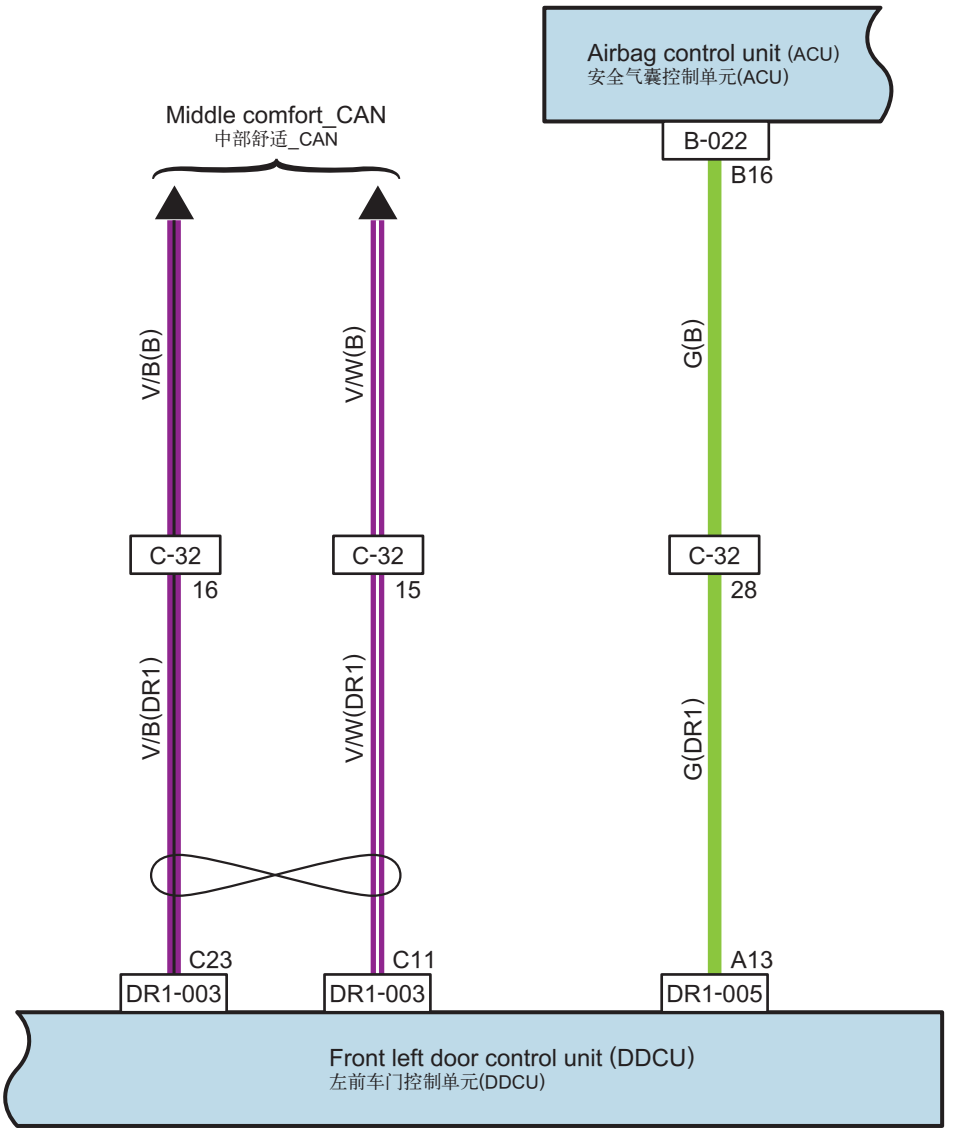

Outside rear view mirror LH
左侧外后视镜
DR1-008
2
DR1-008
22
DR1-008
1
DR1-008
16
DR1-008
8
DR1-008
3
V(DR1)
W(DR1)
R/G(DR1)
B(DR1)
C-32
54
B(B)
41a
G(DR1)
G(DR1)
G(DR1)
C22
C14
C15
C7
DR1-003
DR1-003
DR1-003
DR1-003
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

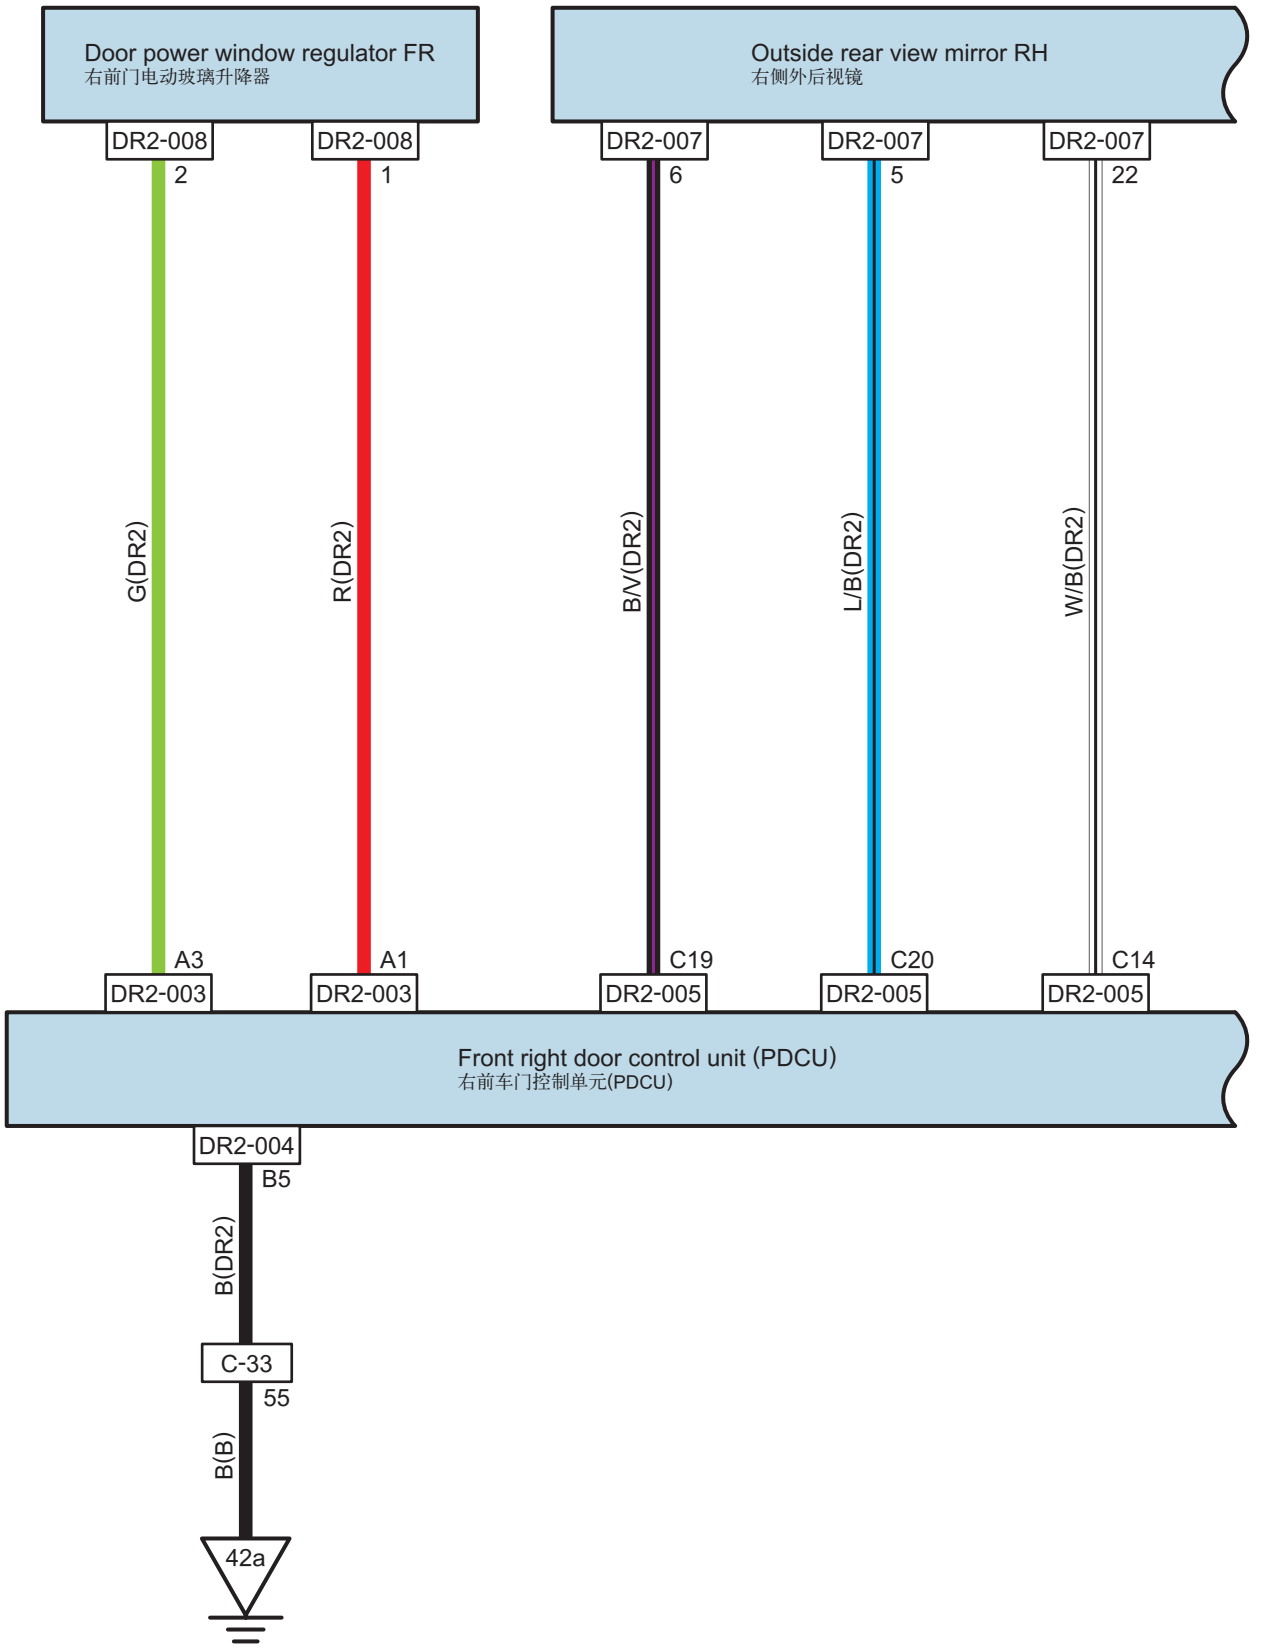

Outside rear view mirror LH
左侧外后视镜
DR1-008
4
DR1-008
10
DR1-008
24
DR1-008
21
DR1-008
9
G/W(DR1)
B(DR1)
G/B(DR1)
O(DR1)
L(DR1)
L(DR1)
C6
A26
A19
B22
B24
DR1-003
DR1-005
DR1-005
DR1-004
DR1-004
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

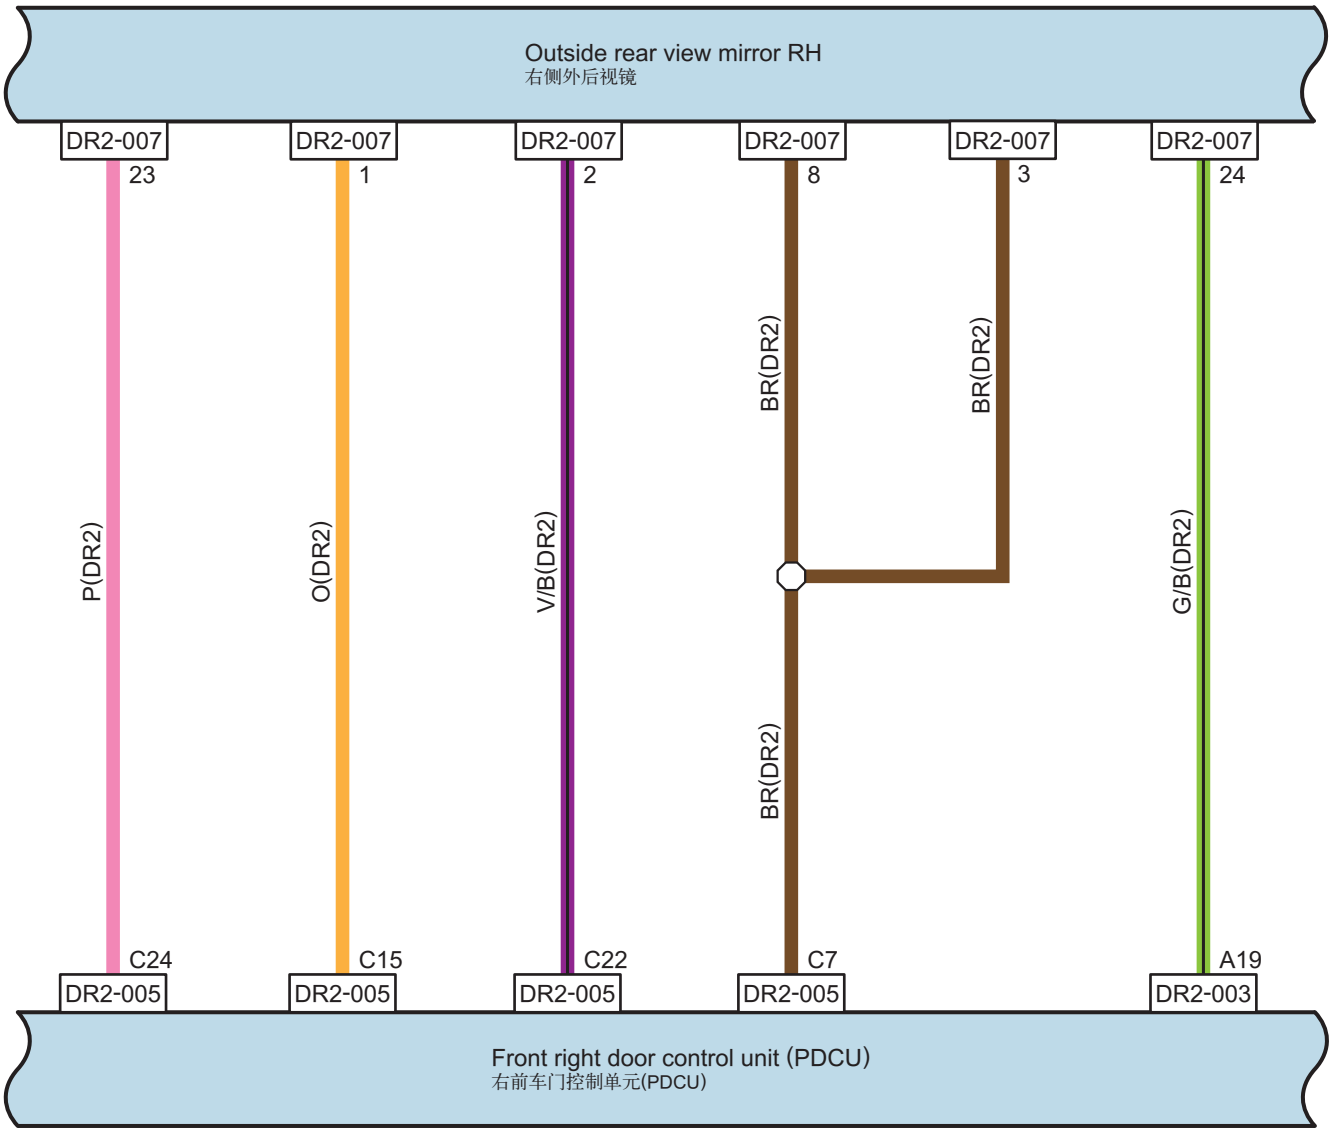

Door invisible handle FL
左前门隐形门把手
DR1-001
8
DR1-001
7
DR1-001
2
DR1-001
1
DR1-001
12
DR1-001
6
L(DR1)
L(DR1)
L/B(DR1)
P(DR1)
Y/R(DR1)
BR(DR1)
B20
B19
B4
B3
DR1-004
DR1-004
DR1-004
DR1-004
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

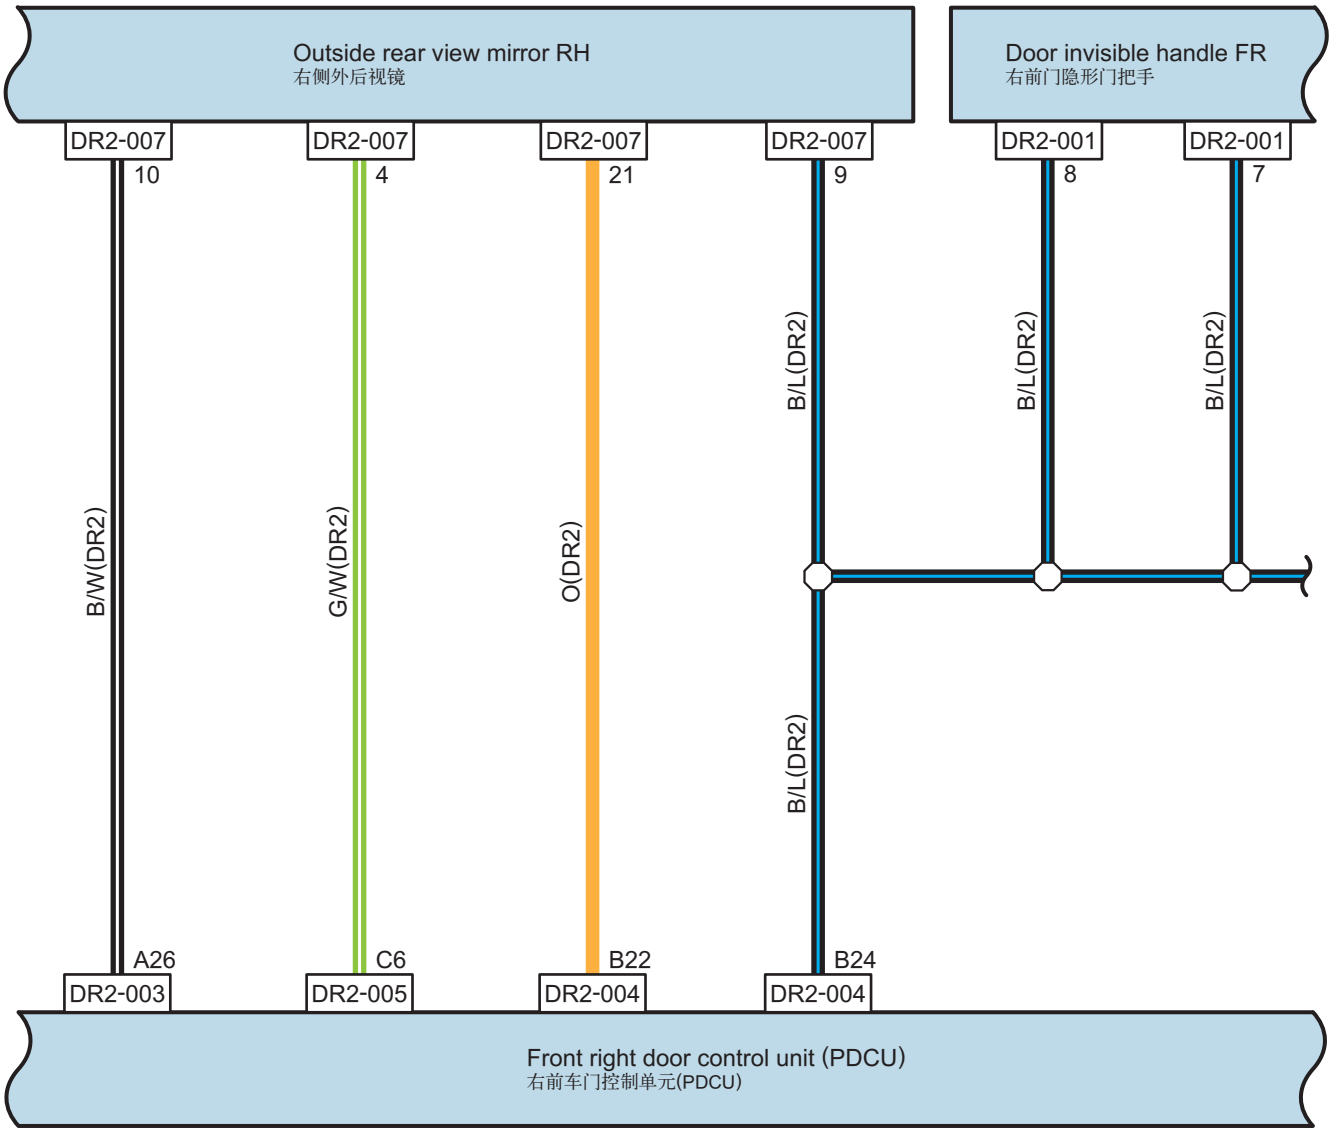

Door power window switch FL
左前门电动窗开关
SH1-001
5
4
3
2
1
8
7
6
L(SH1)
Y/B(SH1)
W/L(SH1)
W(SH1)
BR(SH1)
W/G(SH1)
Y/L(SH1)
P(SH1)
C-08
18
L(DR1)
C-08
14
13
12
11
10
20
19
Y/B(DR1)
W/L(DR1)
W(DR1)
BR(DR1)
W/G(DR1)
Y/L(DR1)
P(DR1)
A7
A18
B15
B23
B17
C5
C17
DR1-005
DR1-005
DR1-004
DR1-004
DR1-004
DR1-003
DR1-003
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

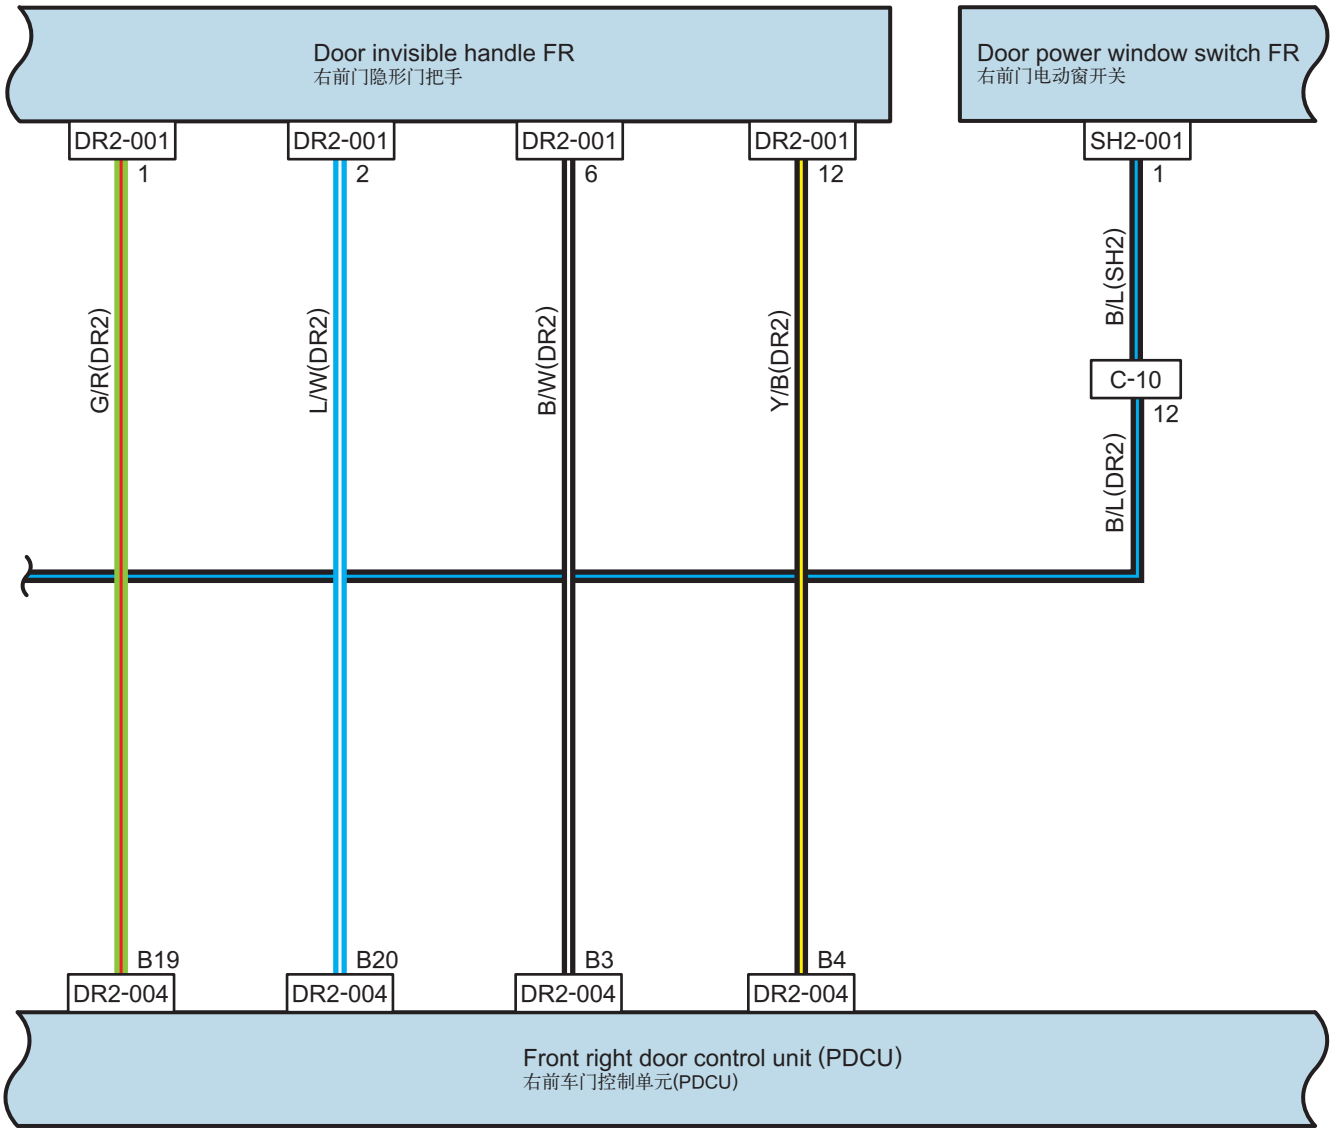

Door lock FL
左前门锁
DR1-002
2
1
4
5
6
7
8
R/G(DR1)
W/G(DR1)
P(DR1)
BR/R(DR1)
B/W(DR1)
R/Y(DR1)
B(DR1)
C-32
54
B(B)
41a
C8
C9
A22
B8
A9
A11
DR1-003
DR1-003
DR1-005
DR1-004
DR1-005
DR1-005
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

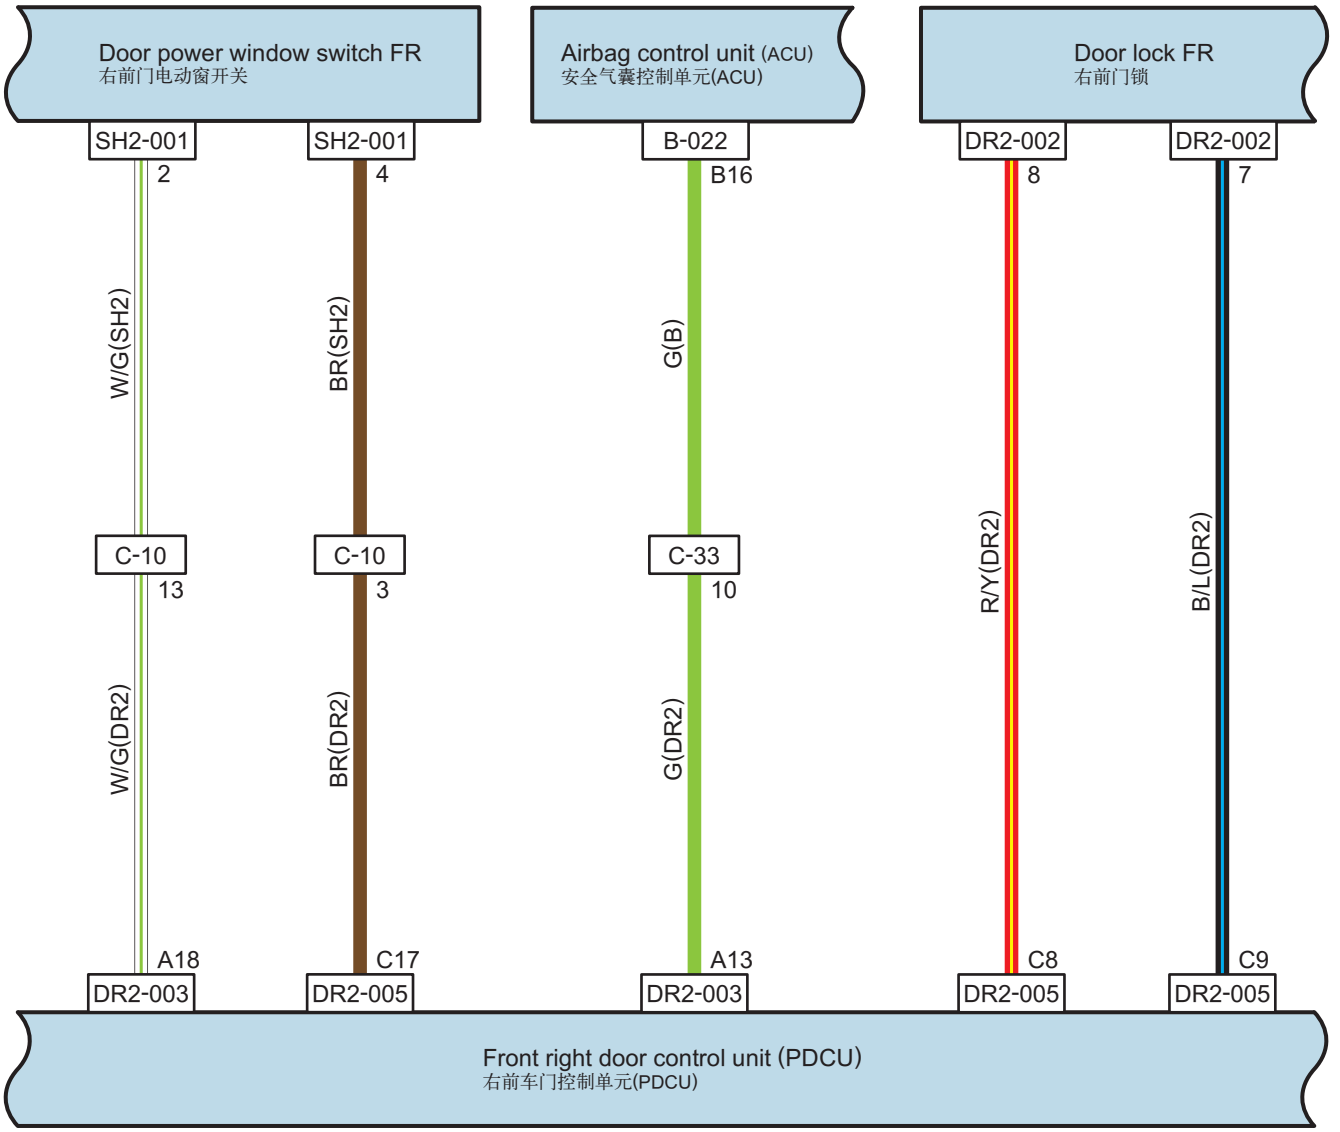

Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B16
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
G(B)
C-32
16
C-32
15
C-32
28
V/B(DR1)
V/W(DR1)
G(DR1)
C23
C11
A13
DR1-003
DR1-003
DR1-005
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

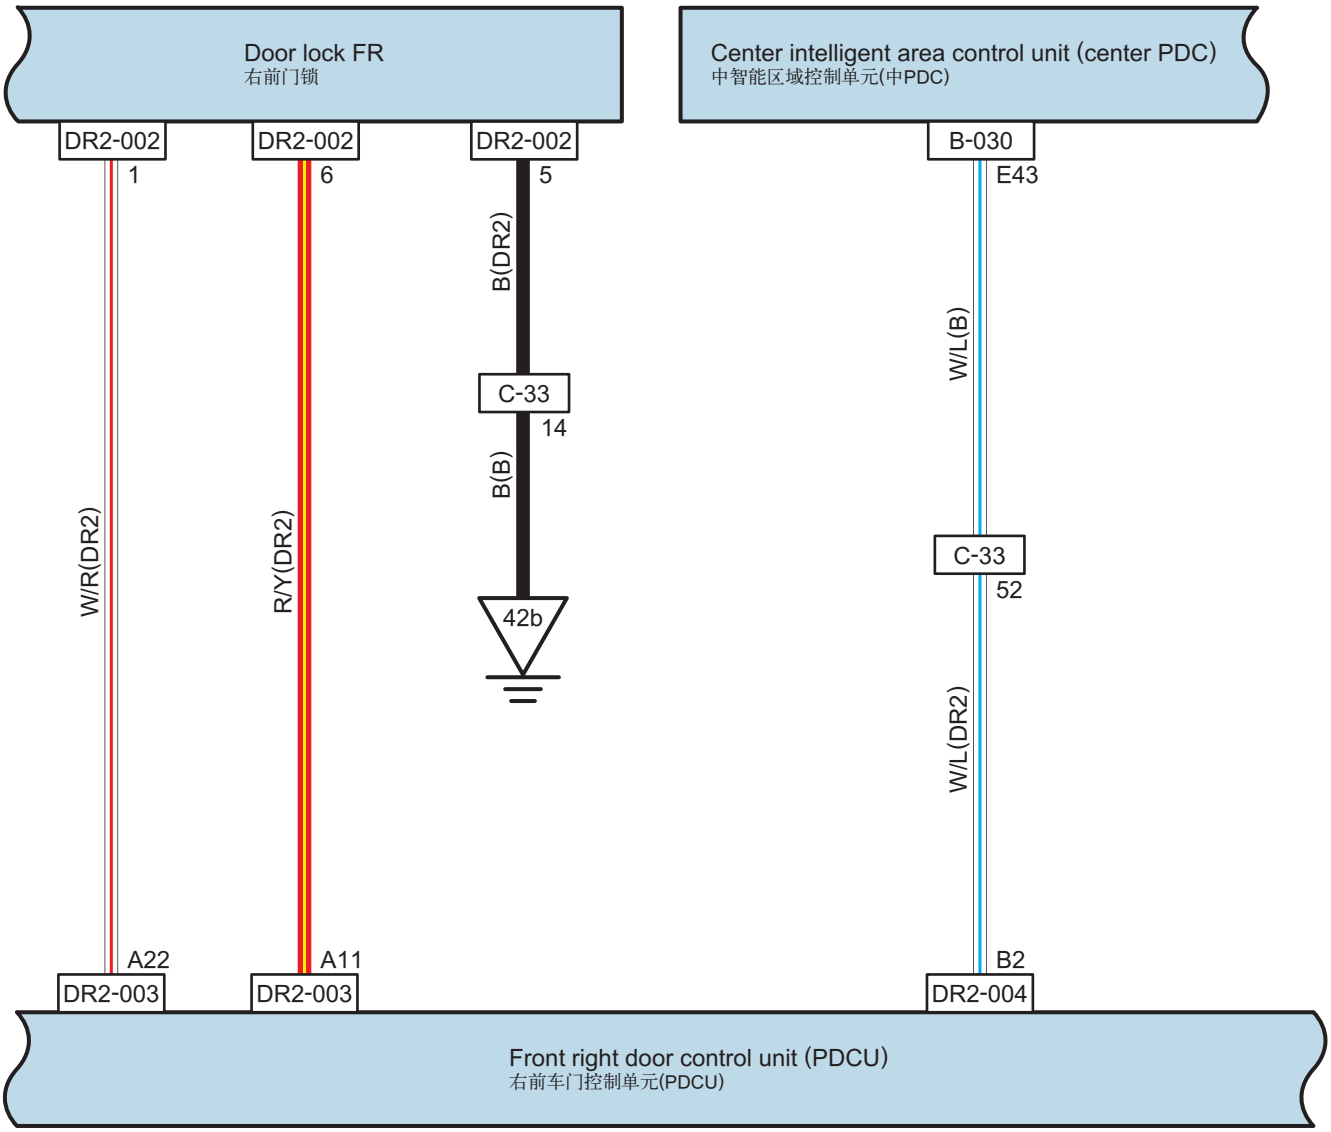

Door power window regulator FR
右前门电动玻璃升降器
Outside rear view mirror RH
右侧外后视镜
DR2-008
2
DR2-008
1
DR2-007
6
DR2-007
5
DR2-007
22
G(DR2)
R(DR2)
B/V(DR2)
L/B(DR2)
W/B(DR2)
A3
A1
C19
C20
C14
DR2-003
DR2-003
DR2-005
DR2-005
DR2-005
Front right door control unit (PDCU)
右前车门控制单元(PDCU)
DR2-004
B5
B(DR2)
C-33
55
B(B)
42a

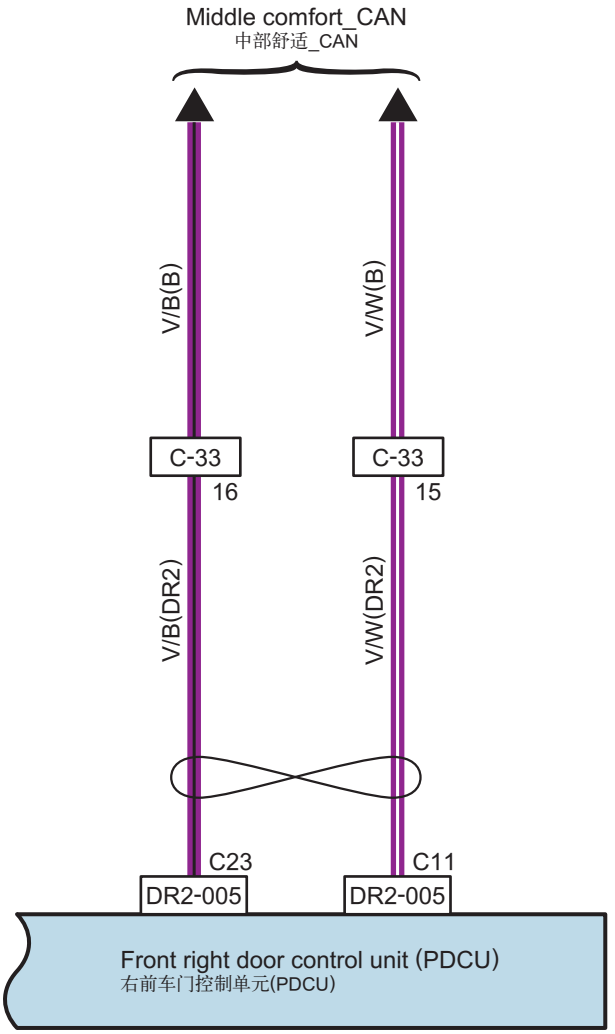

Outside rear view mirror RH
右侧外后视镜
DR2-007
23
DR2-007
1
DR2-007
2
DR2-007
8
DR2-007
3
DR2-007
24
P(DR2)
O(DR2)
V/B(DR2)
BR(DR2)
BR(DR2)
BR(DR2)
G/B(DR2)
C24
DR2-005
C15
DR2-005
C22
DR2-005
C7
DR2-005
A19
DR2-003
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

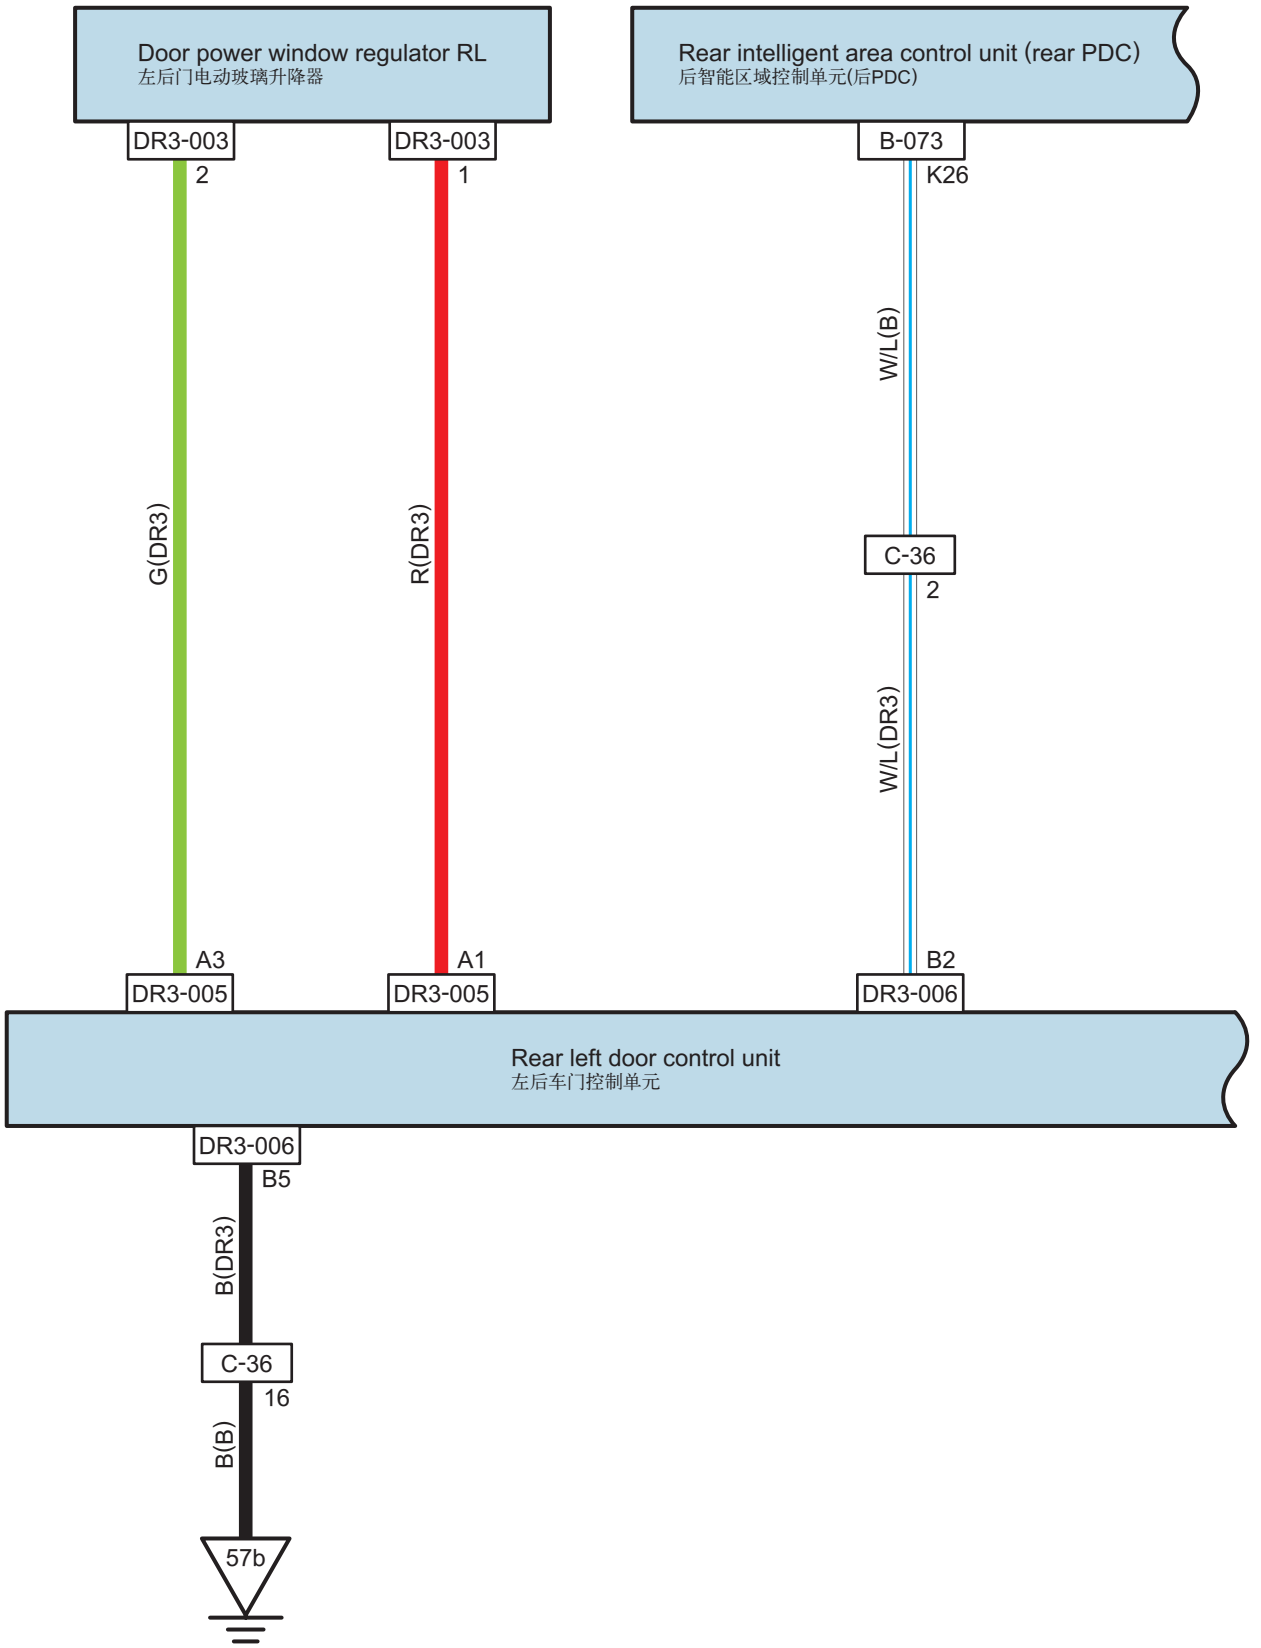

Outside rear view mirror RH
右侧外后视镜
Door invisible handle FR
右前门隐形门把手
DR2-007
10
DR2-007
4
DR2-007
21
DR2-007
9
DR2-001
8
DR2-001
7
B/W(DR2)
G/W(DR2)
O(DR2)
B/L(DR2)
B/L(DR2)
B/L(DR2)
B/L(DR2)
A26
C6
B22
B24
DR2-003
DR2-005
DR2-004
DR2-004
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

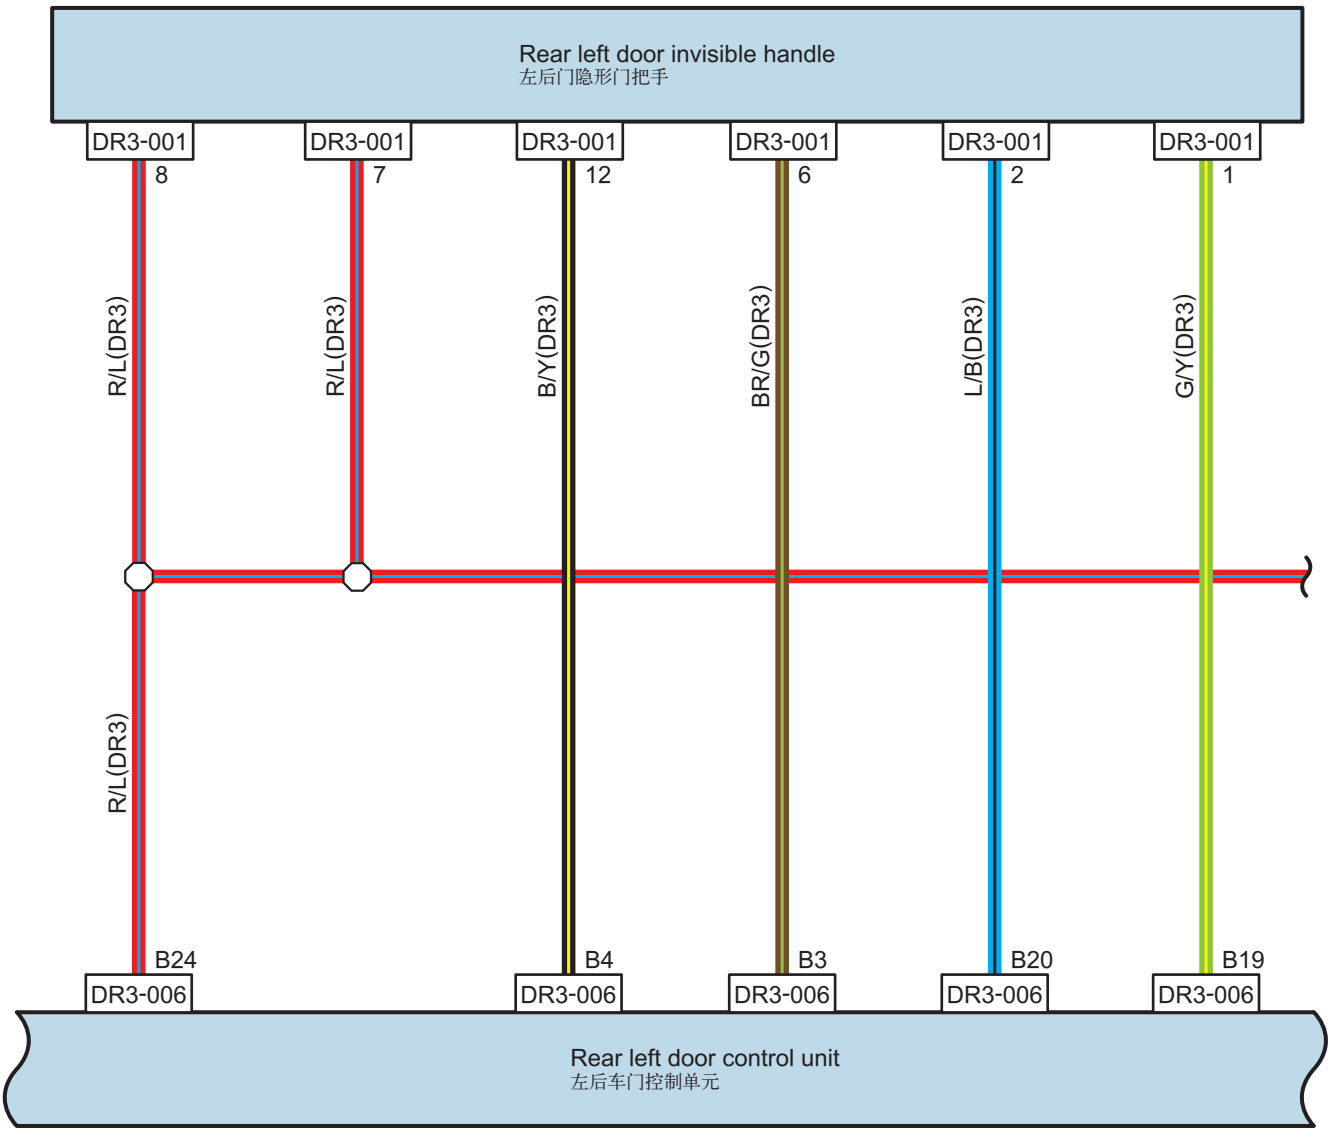

Door invisible handle FR
右前门隐形门把手
Door power window switch FR
右前门电动窗开关
DR2-001
1
DR2-001
2
DR2-001
6
DR2-001
12
SH2-001
1
G/R(DR2)
L/W(DR2)
B/W(DR2)
Y/B(DR2)
B/L(SH2)
C-10
12
B/L(DR2)
B19
B20
B3
B4
DR2-004
DR2-004
DR2-004
DR2-004
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

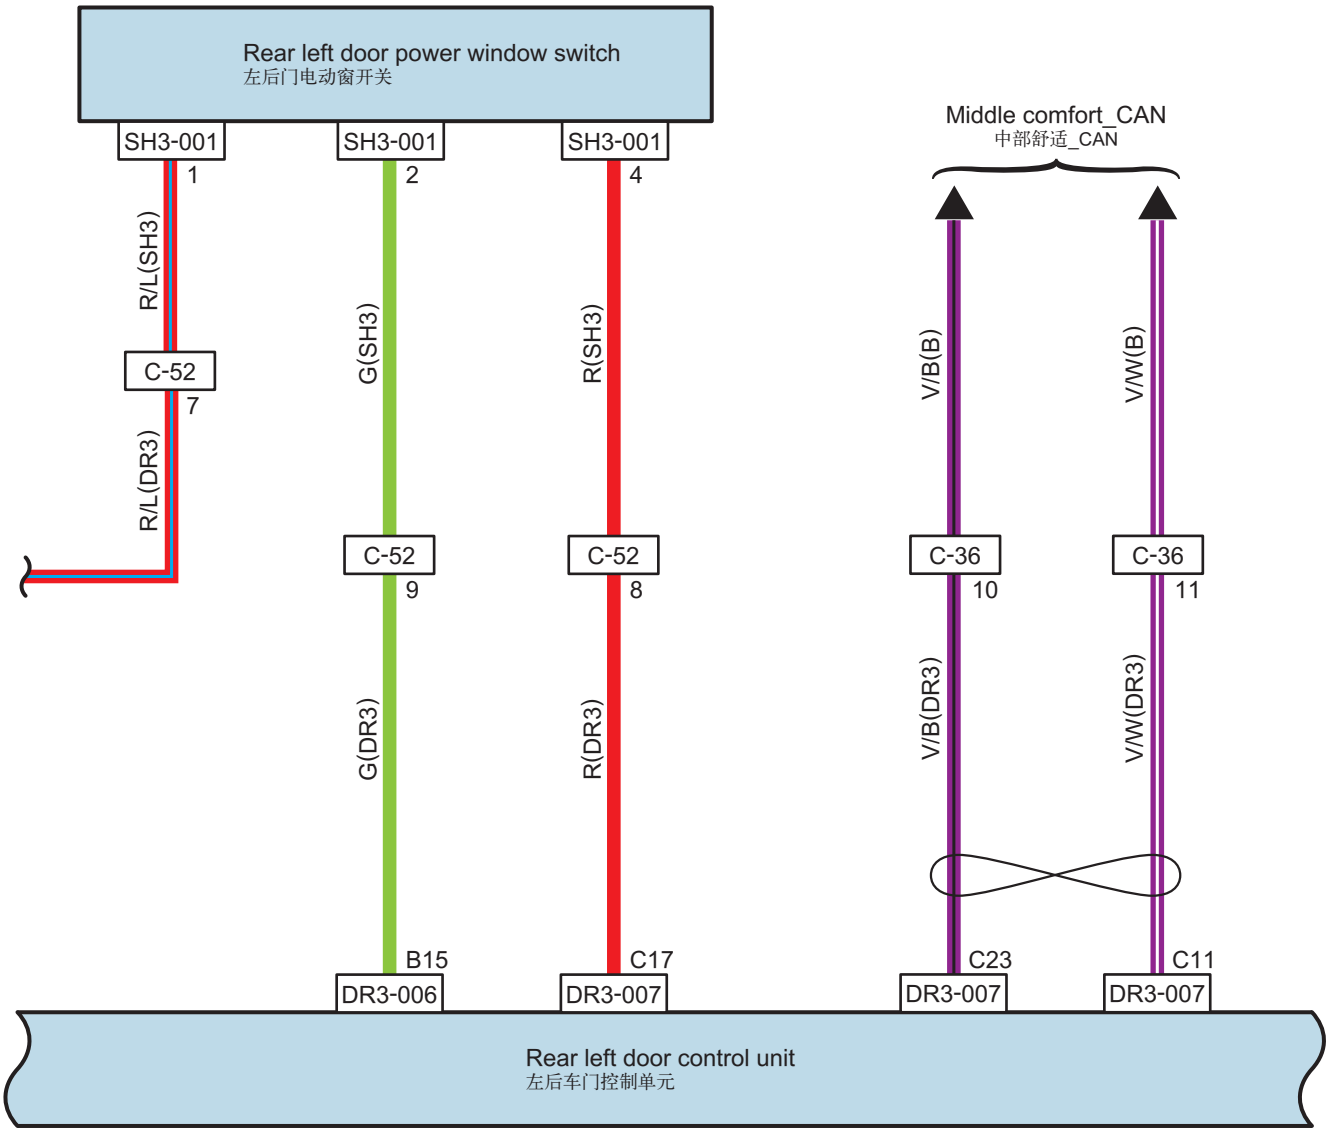

Door power window switch FR
右前门电动窗开关
Airbag control unit (ACU)
安全气囊控制单元(ACU)
Door lock FR
右前门锁
SH2-001
2
SH2-001
4
B-022
B16
DR2-002
8
DR2-002
7
W/G(SH2)
BR(SH2)
G(B)
R/Y(DR2)
B/L(DR2)
C-10
13
C-10
3
C-33
10
W/G(DR2)
BR(DR2)
G(DR2)
A18
C17
A13
C8
C9
DR2-003
DR2-005
DR2-003
DR2-005
DR2-005
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

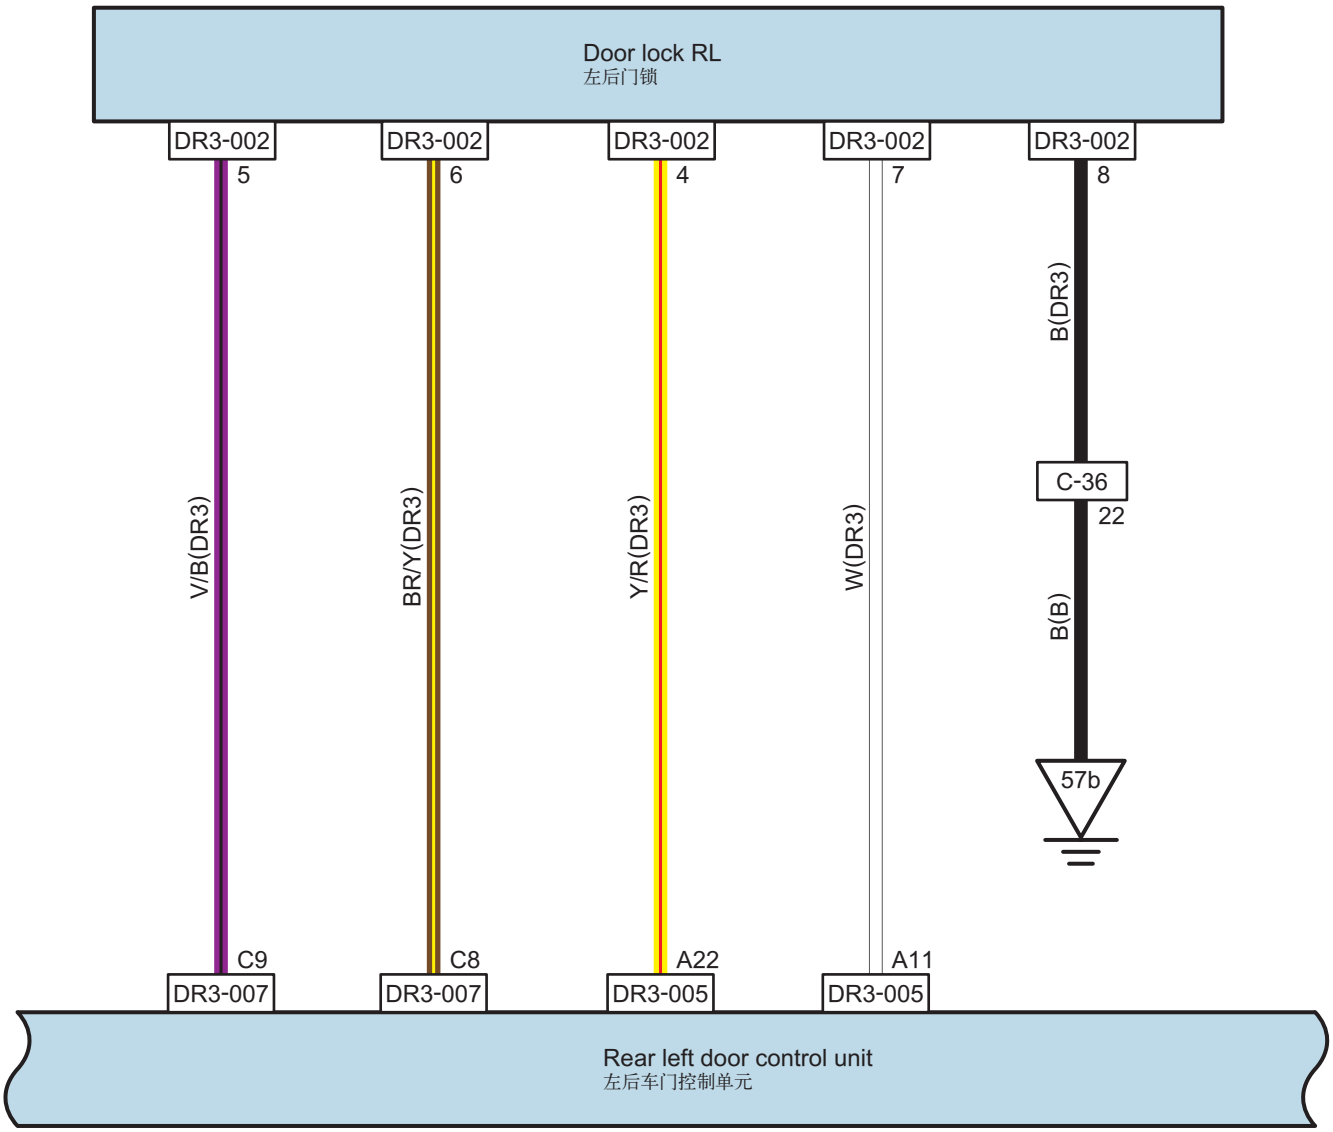

Door lock FR
右前门锁
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
DR2-002
1
DR2-002
6
DR2-002
5
B-030
E43
B(DR2)
W/L(B)
C-33
14
B(B)
C-33
52
42b
W/R(DR2)
R/Y(DR2)
W/L(DR2)
A22
A11
B2
DR2-003
DR2-003
DR2-004
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

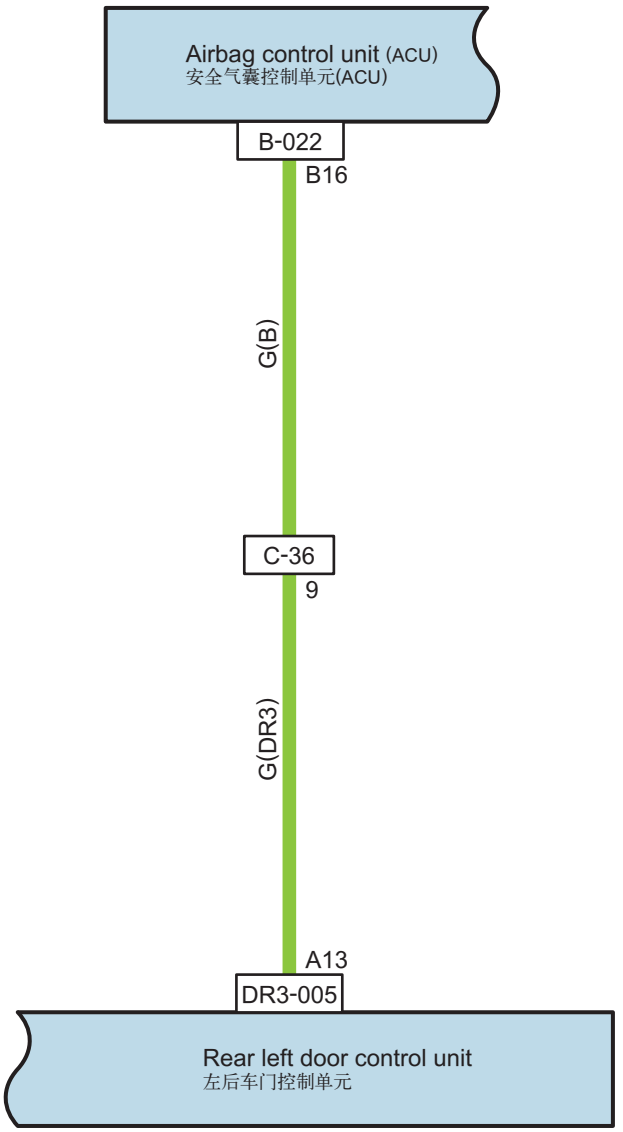

Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
C-33
16
C-33
15
V/B(DR2)
V/W(DR2)
C23
C11
DR2-005
DR2-005
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

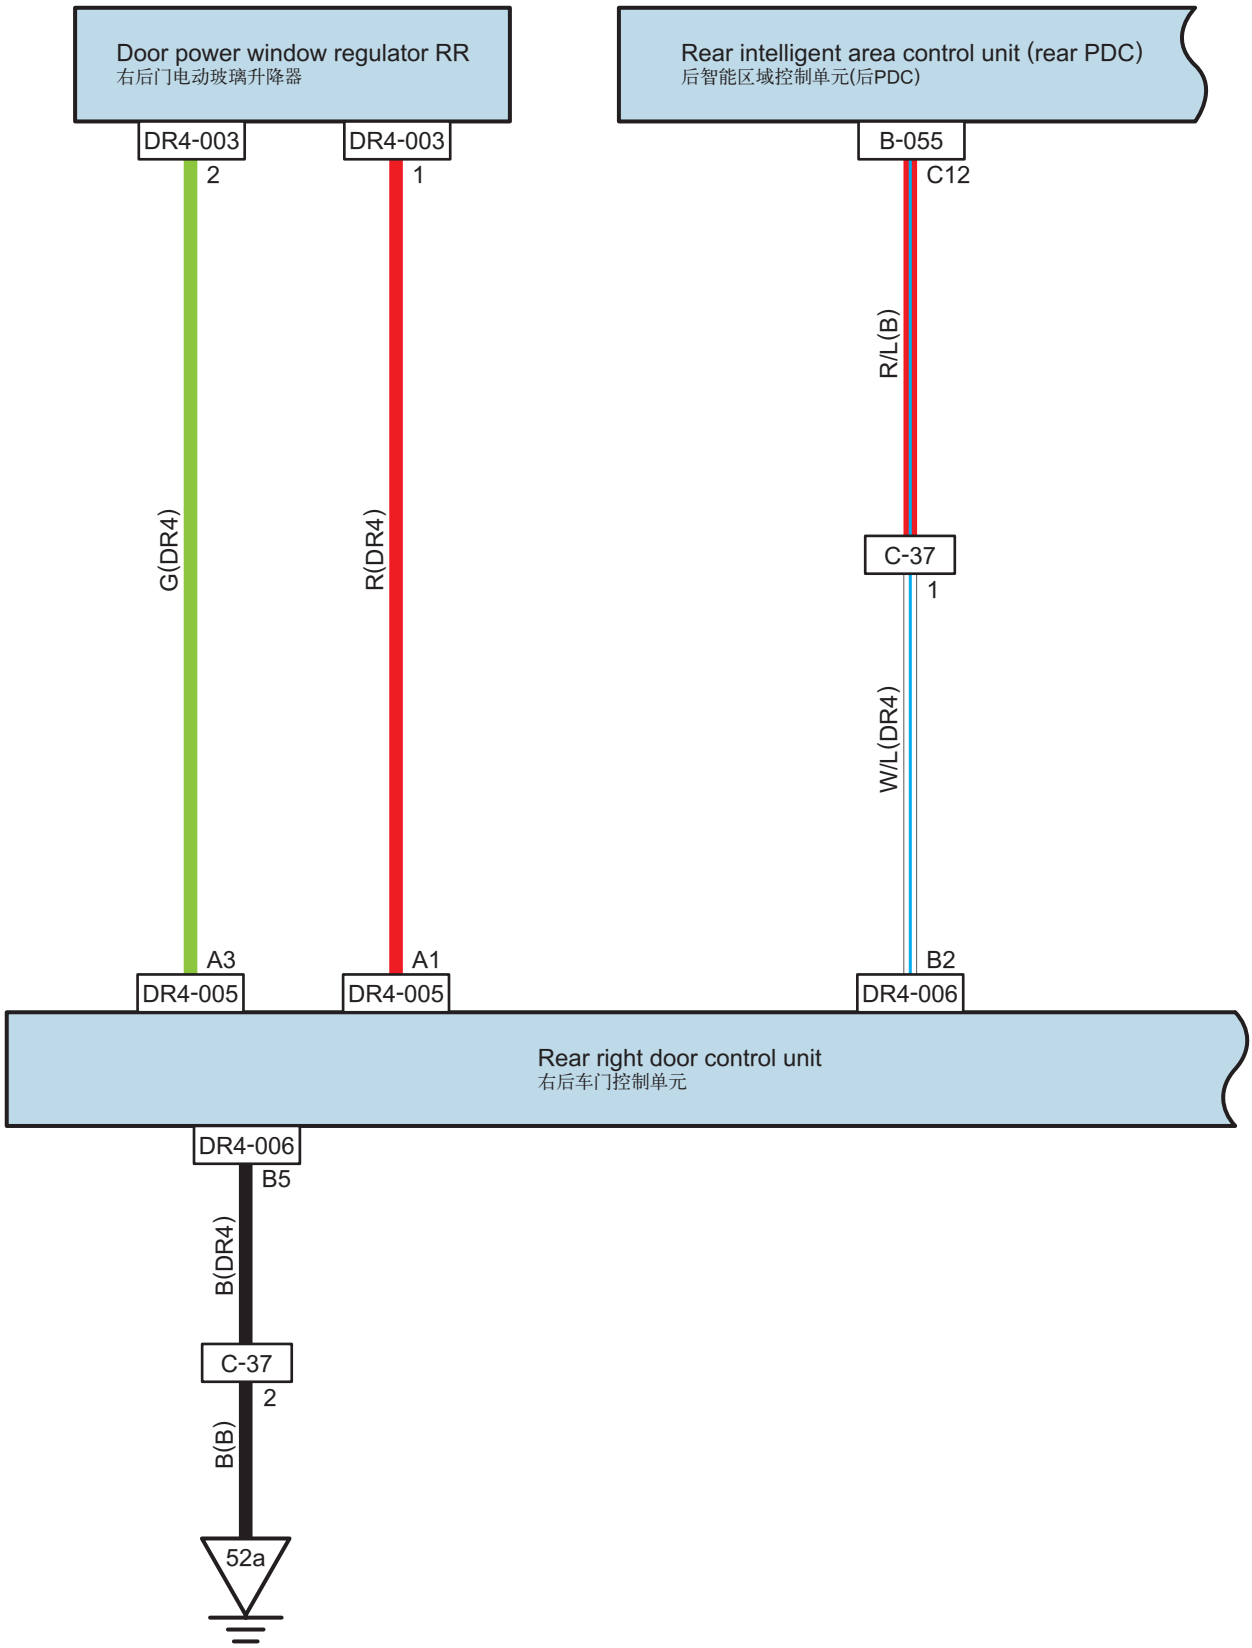

Door power window regulator RL
左后门电动玻璃升降器
DR3-003
2
DR3-003
1
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-073
K26
W/L(B)
G(DR3)
R(DR3)
C-36
2
W/L(DR3)
A3
A1
B2
DR3-005
DR3-005
DR3-006
Rear left door control unit
左后车门控制单元
DR3-006
B5
B(DR3)
C-36
16
B(B)
57b

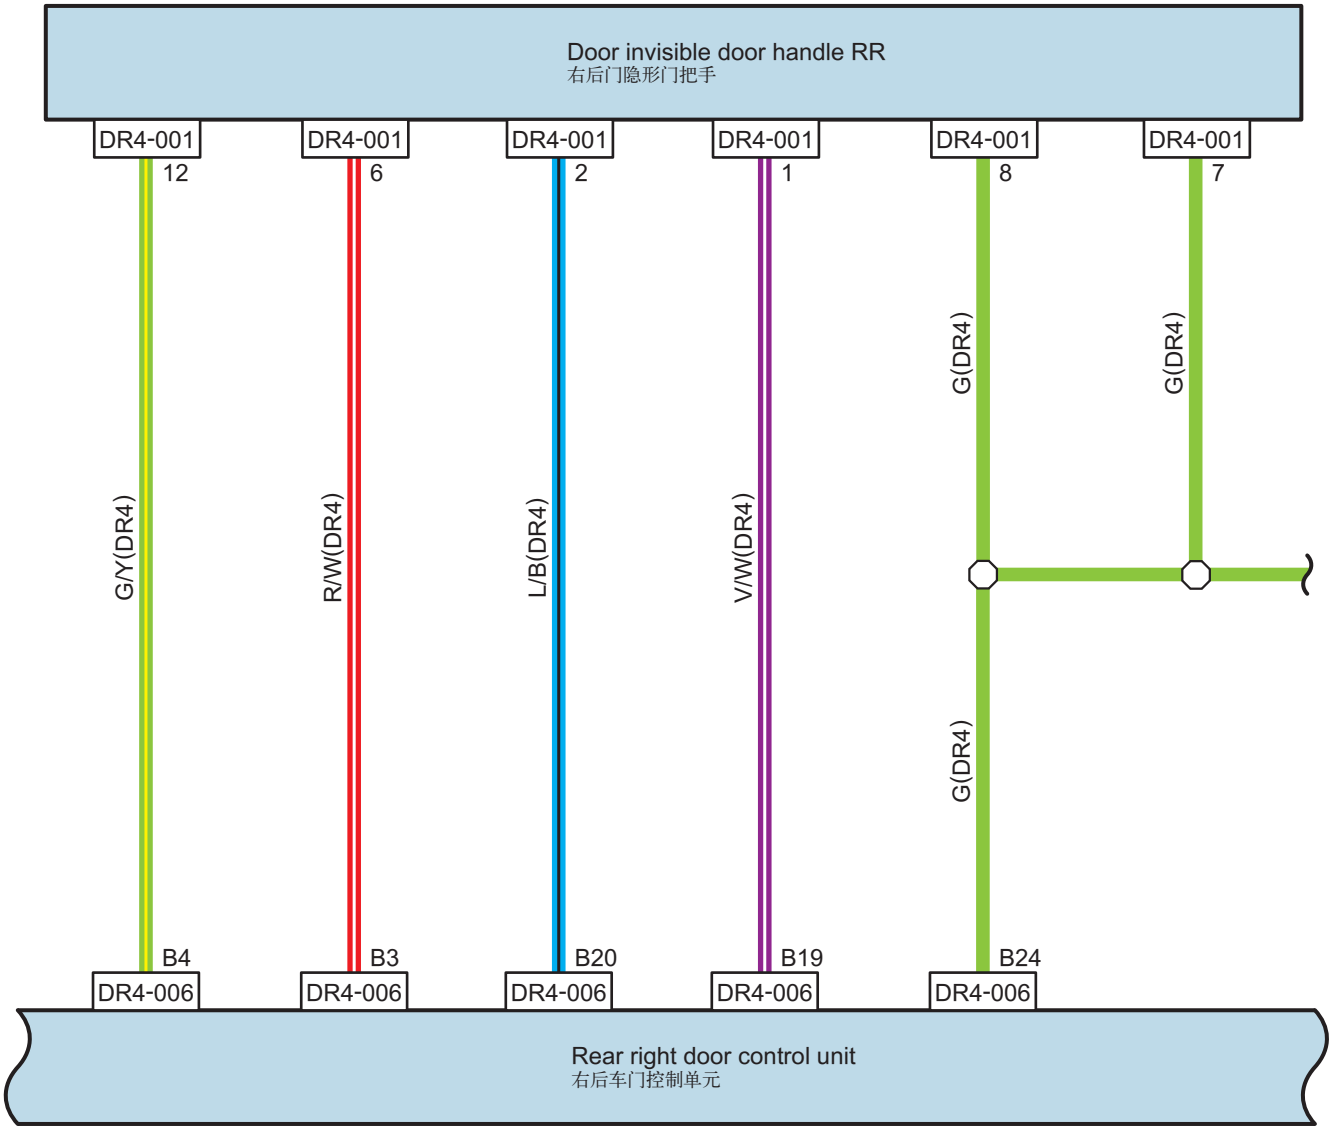

Rear left door invisible handle
左后门隐形门把手
DR3-001
8
DR3-001
7
DR3-001
12
DR3-001
6
DR3-001
2
DR3-001
1
R/L(DR3)
R/L(DR3)
B/Y(DR3)
BR/G(DR3)
L/B(DR3)
G/Y(DR3)
R/L(DR3)
B24
DR3-006
B4
DR3-006
B3
DR3-006
B20
DR3-006
B19
DR3-006
Rear left door control unit
左后车门控制单元

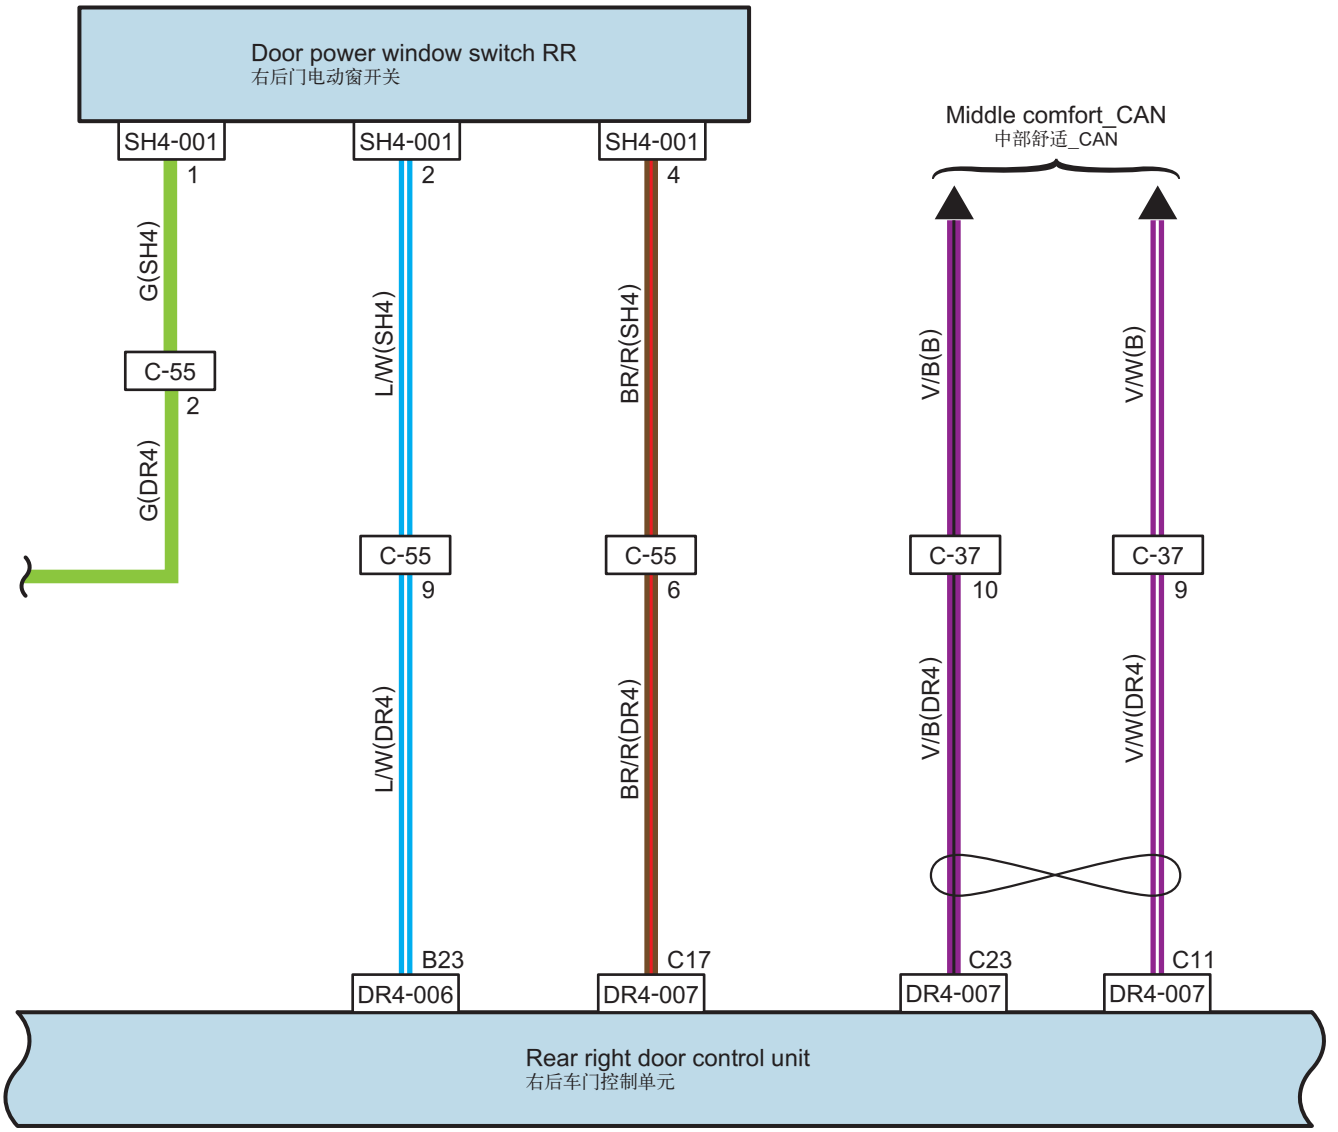

Rear left door power window switch
左后门电动窗开关
SH3-001
1
SH3-001
2
SH3-001
4
R/L(SH3)
G(SH3)
R(SH3)
C-52
7
R/L(DR3)
C-52
9
C-52
8
G(DR3)
R(DR3)
B15
C17
DR3-006
DR3-007
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
C-36
10
C-36
11
V/B(DR3)
V/W(DR3)
C23
C11
DR3-007
DR3-007
Rear left door control unit
左后车门控制单元

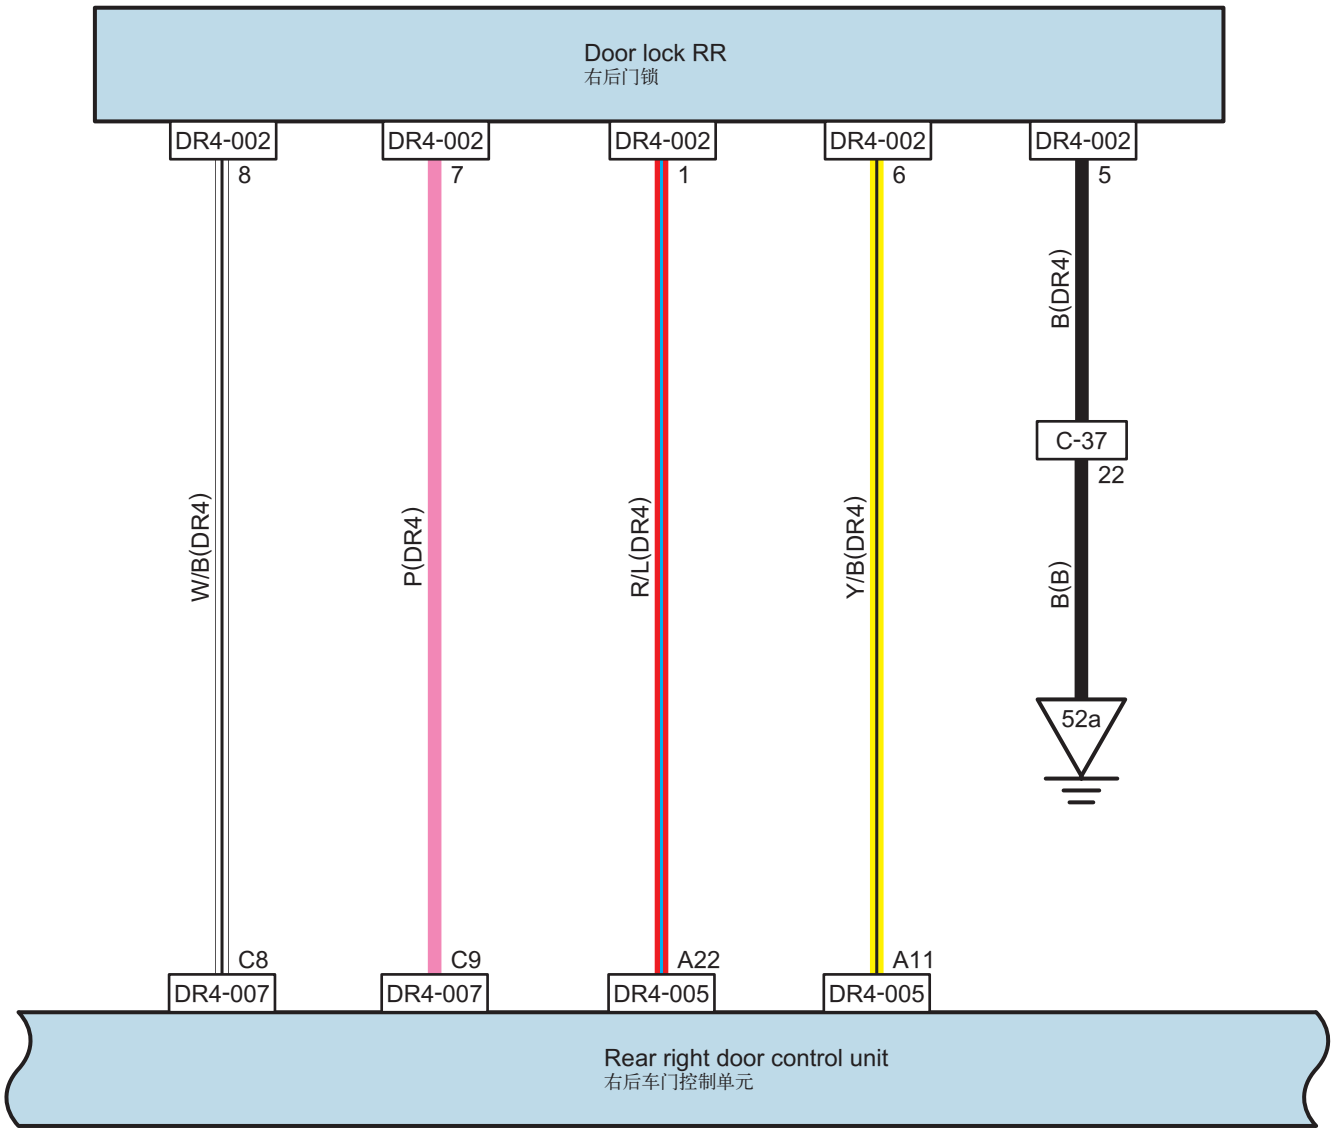

Door lock RL
左后门锁
DR3-002
5
DR3-002
6
DR3-002
4
DR3-002
7
DR3-002
8
V/B(DR3)
BR/Y(DR3)
Y/R(DR3)
W(DR3)
B(DR3)
C-36
22
B(B)
57b
C9
C8
A22
A11
DR3-007
DR3-007
DR3-005
DR3-005
Rear left door control unit
左后车门控制单元

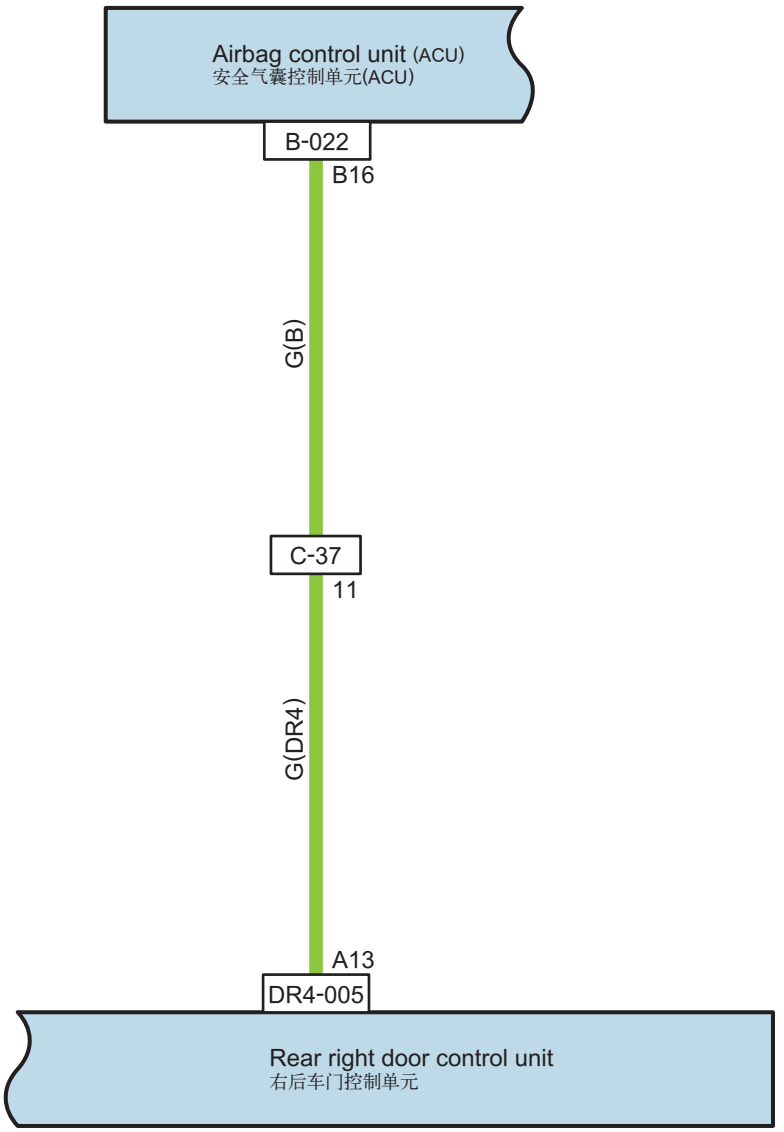

Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B16
G(B)
C-36
9
G(DR3)
A13
DR3-005
Rear left door control unit
左后车门控制单元

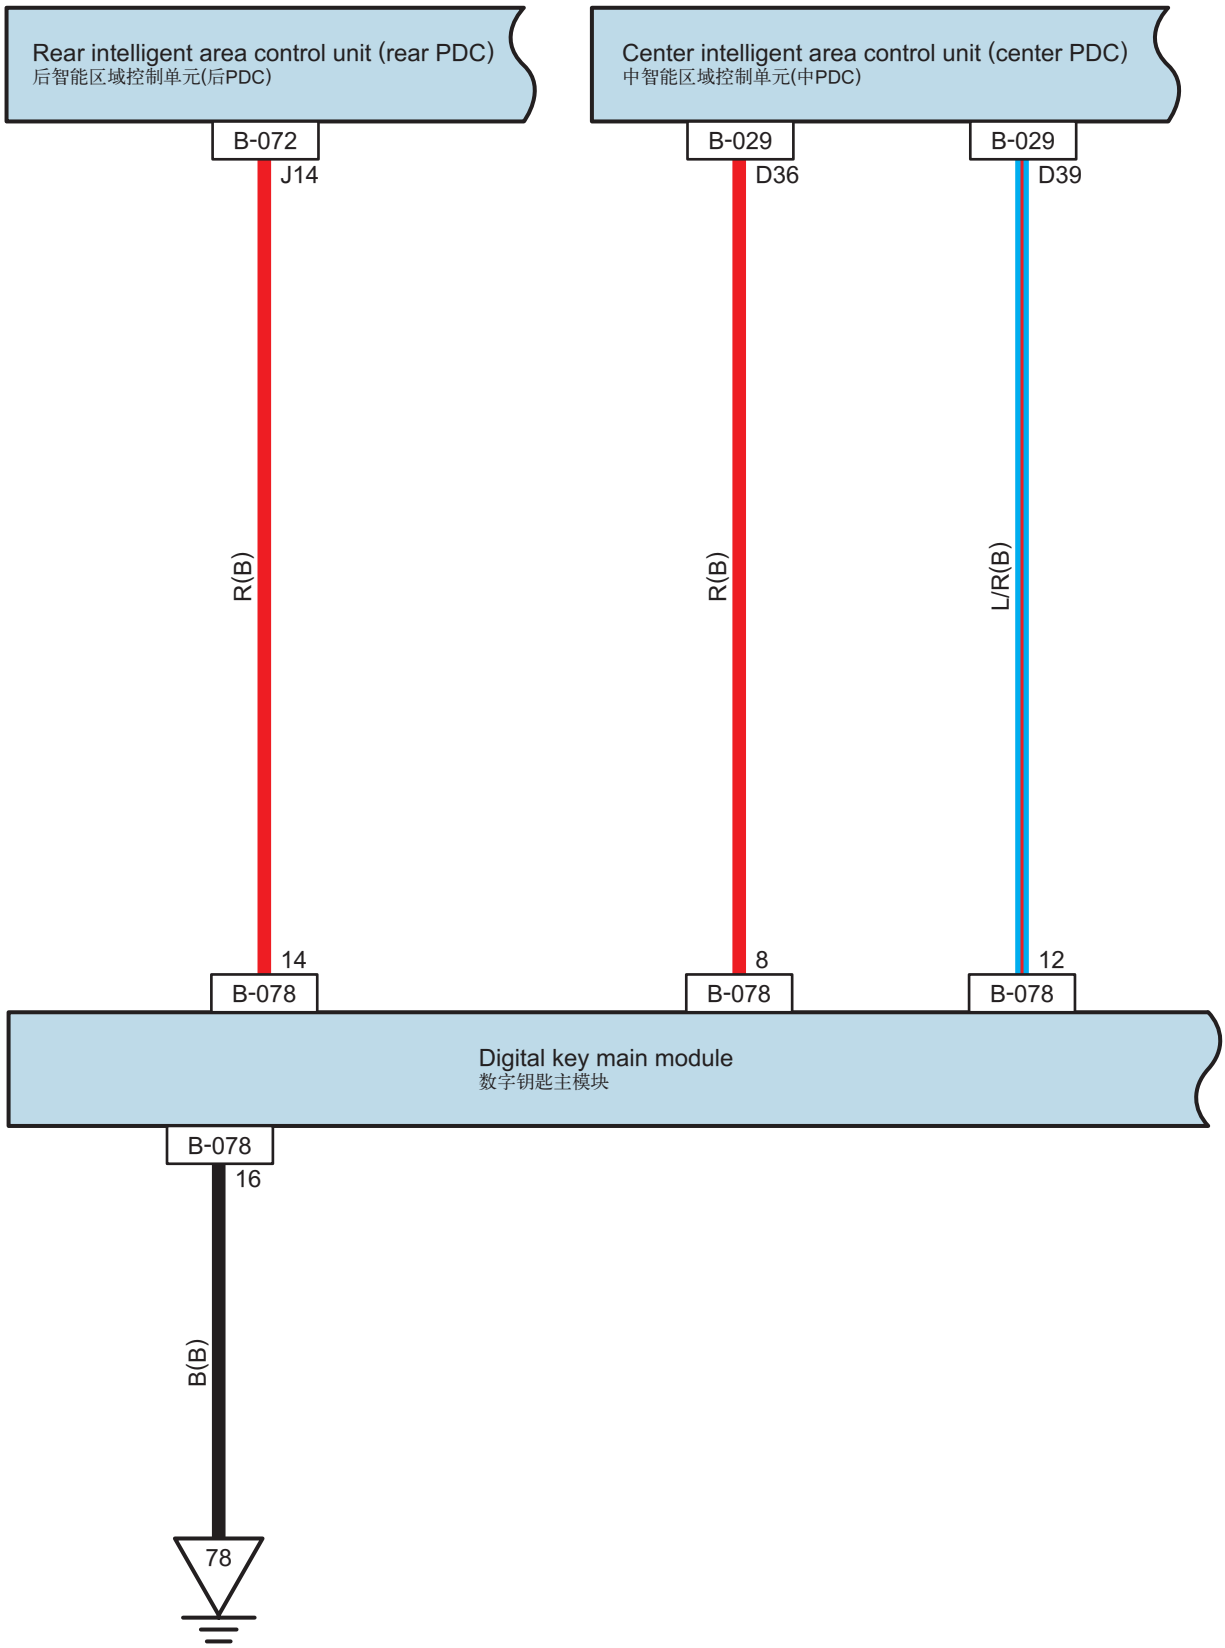

Door power window regulator RR
右后门电动玻璃升降器
DR4-003
2
DR4-003
1
G(DR4)
R(DR4)
A3
DR4-005
A1
DR4-005
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-055
C12
R/L(B)
C-37
1
W/L(DR4)
B2
DR4-006
Rear right door control unit
右后车门控制单元
DR4-006
B5
B(DR4)
C-37
2
B(B)
52a

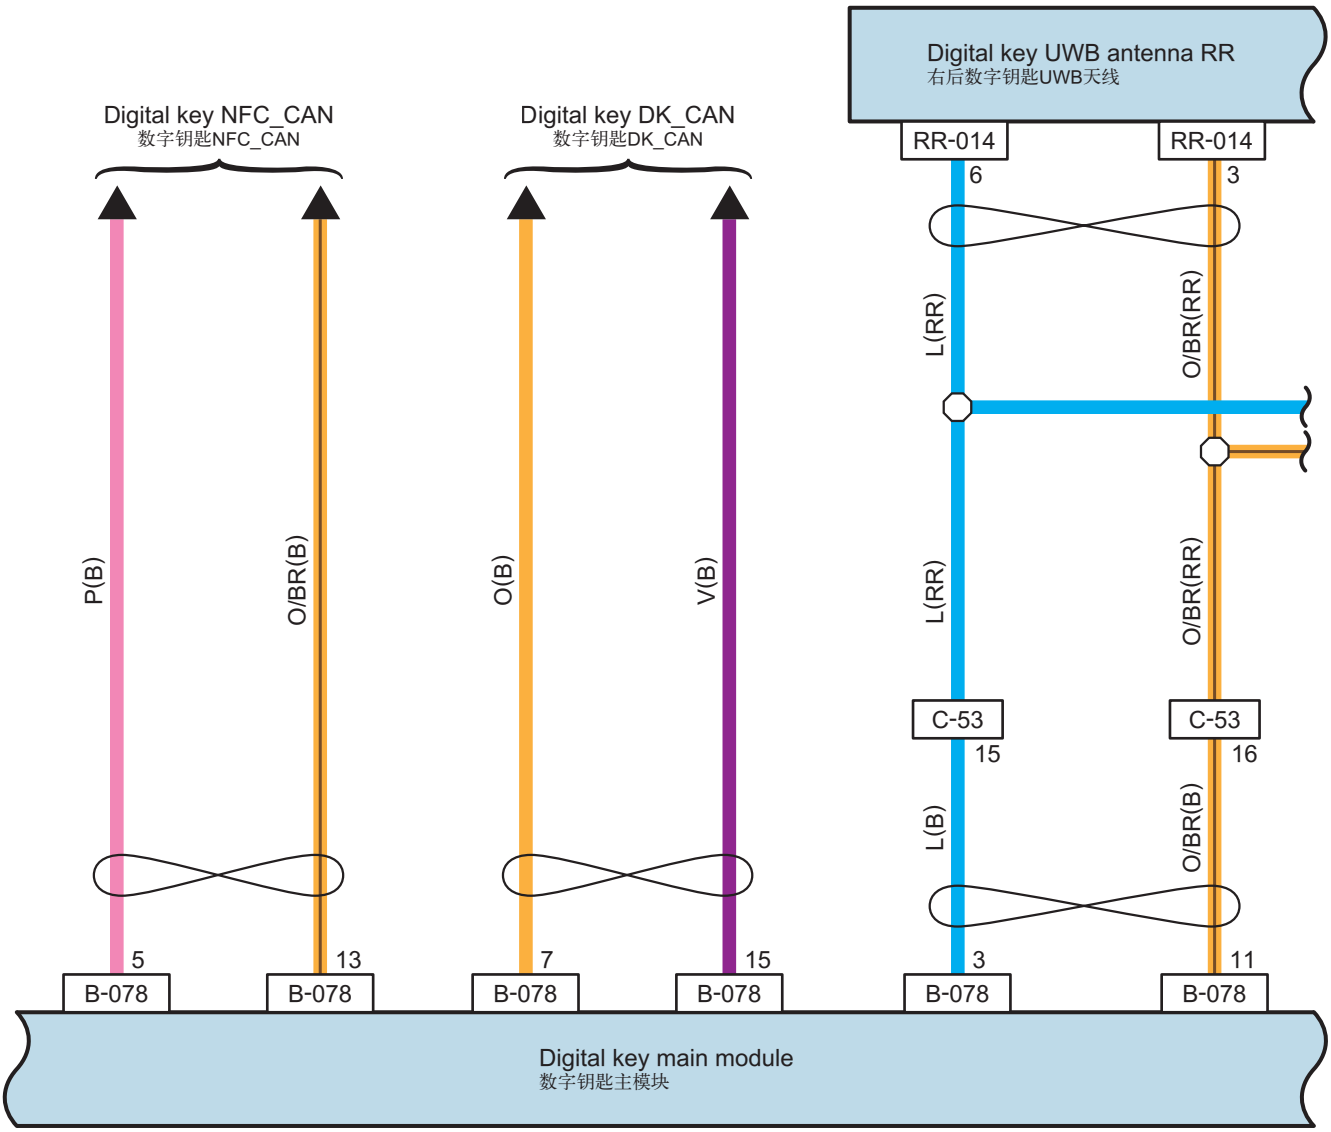

Door invisible door handle RR
右后门隐形门把手
DR4-001
12
DR4-001
6
DR4-001
2
DR4-001
1
DR4-001
8
DR4-001
7
G/Y(DR4)
R/W(DR4)
L/B(DR4)
V/W(DR4)
G(DR4)
G(DR4)
G(DR4)
B4
B3
B20
B19
B24
DR4-006
DR4-006
DR4-006
DR4-006
DR4-006
Rear right door control unit
右后车门控制单元

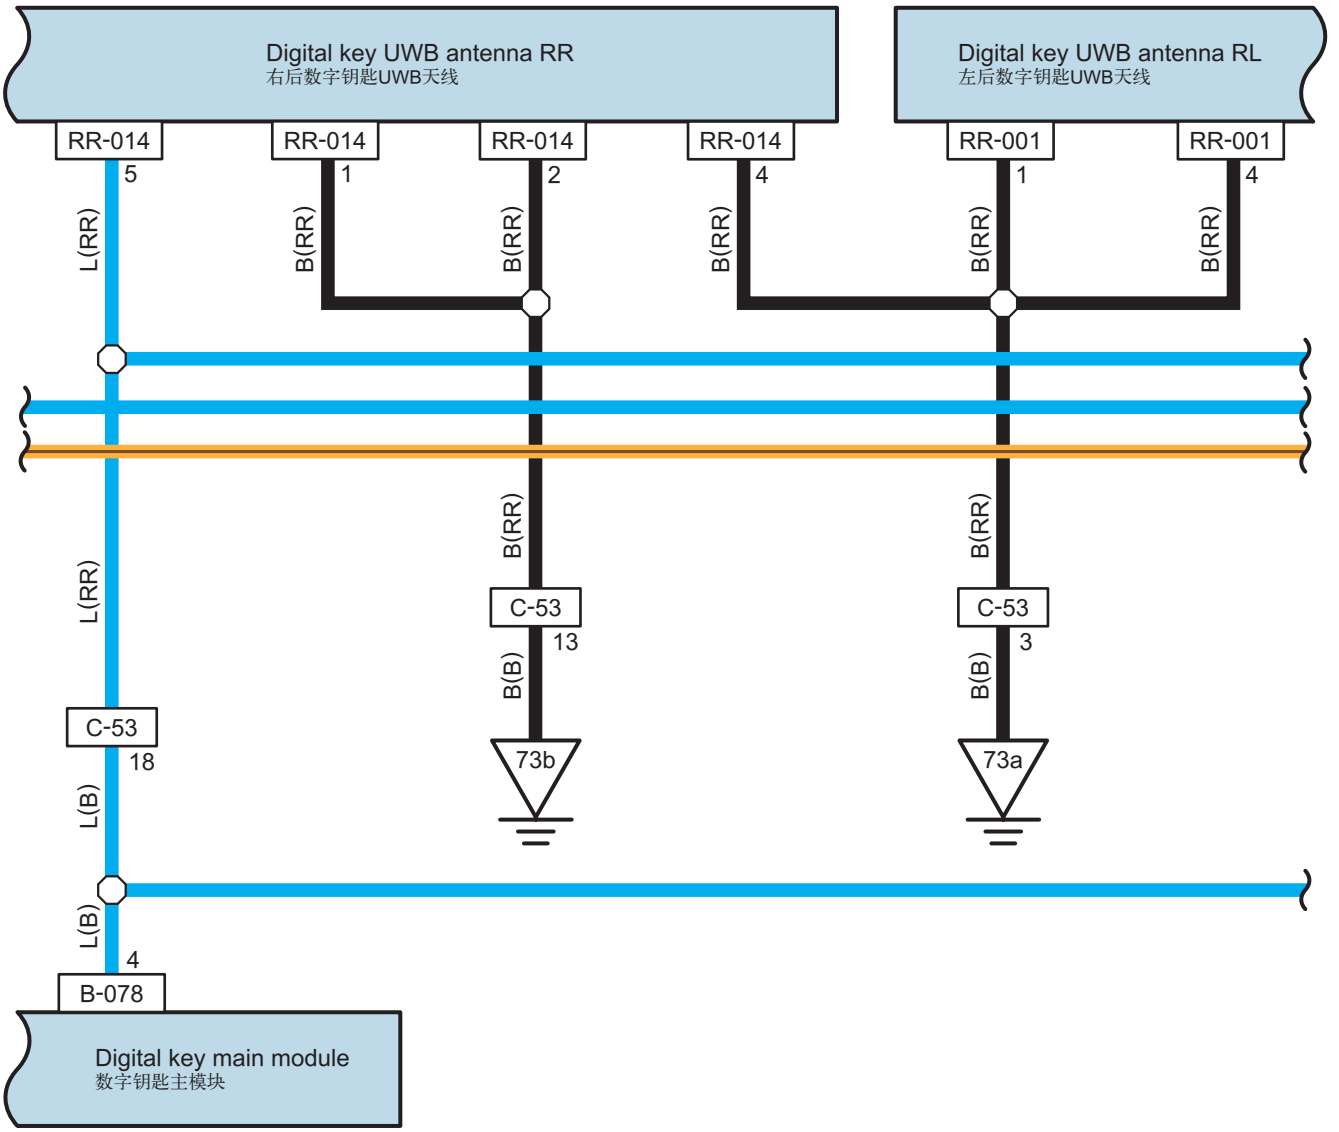

Door power window switch RR
右后门电动窗开关
SH4-001
1
SH4-001
2
SH4-001
4
G(SH4)
C-55
2
G(DR4)
L/W(SH4)
BR/R(SH4)
C-55
9
C-55
6
L/W(DR4)
BR/R(DR4)
B23
DR4-006
C17
DR4-007
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
C-37
10
C-37
9
V/B(DR4)
V/W(DR4)
C23
DR4-007
C11
DR4-007
Rear right door control unit
右后车门控制单元

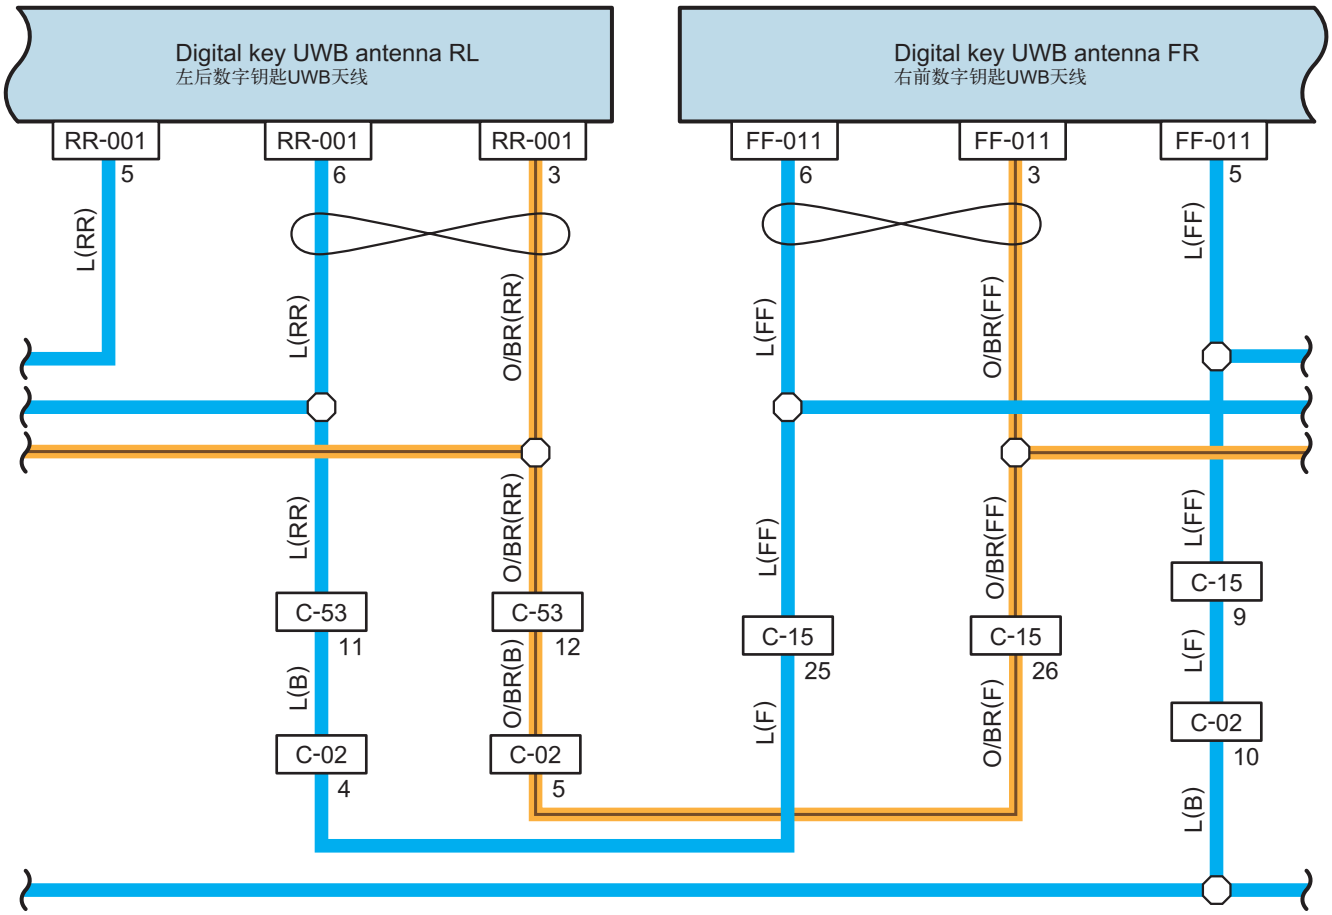

Door lock RR
右后门锁
DR4-002
8
DR4-002
7
DR4-002
1
DR4-002
6
DR4-002
5
W/B(DR4)
P(DR4)
R/L(DR4)
Y/B(DR4)
B(DR4)
C-37
22
B(B)
52a
C8
C9
A22
A11
DR4-007
DR4-007
DR4-005
DR4-005
Rear right door control unit
右后车门控制单元

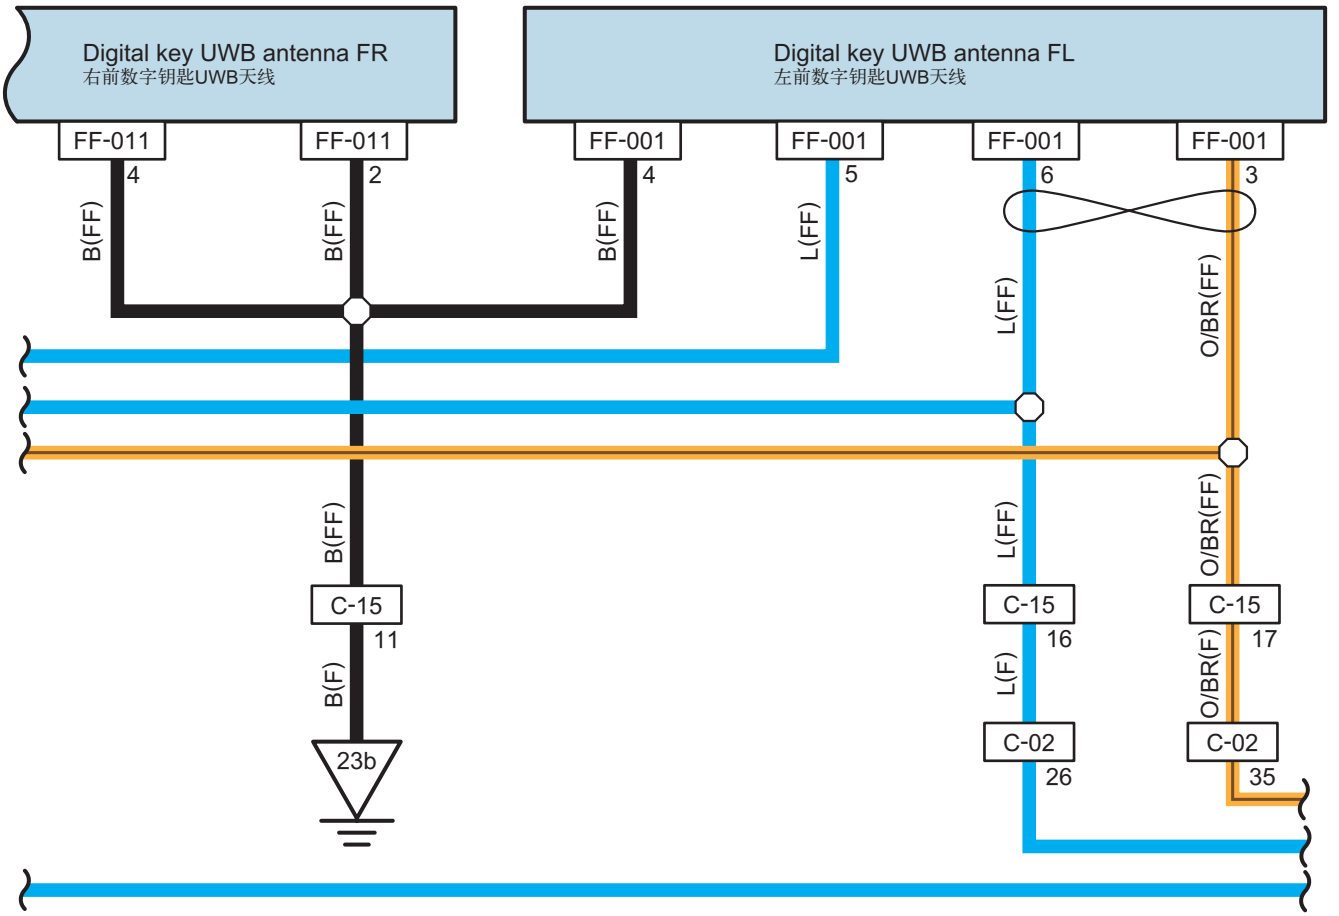

Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B16
G(B)
C-37
11
G(DR4)
A13
DR4-005
Rear right door control unit
右后车门控制单元

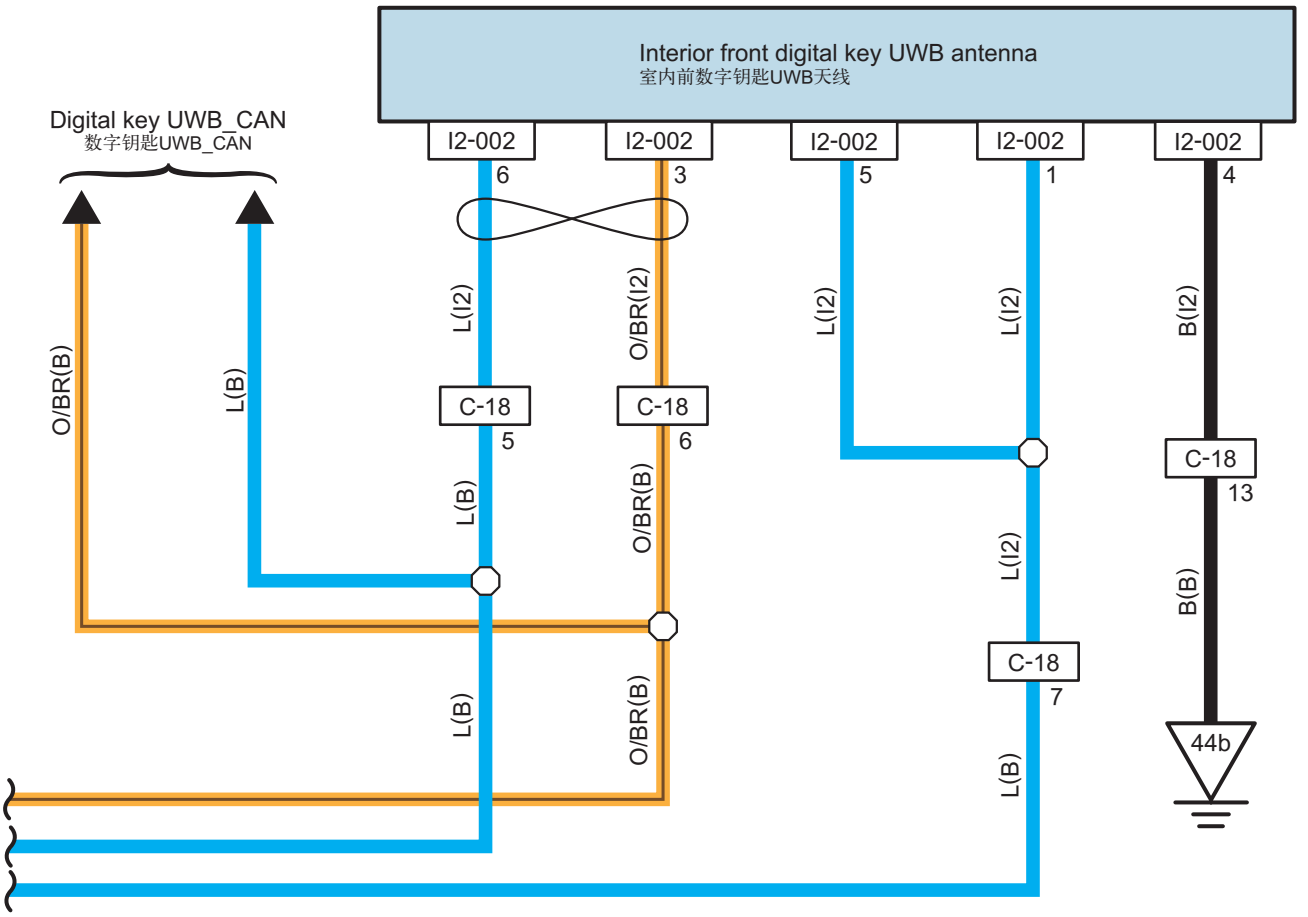

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-072
J14
B-029
D36
B-029
D39
R(B)
R(B)
L/R(B)
14
8
12
B-078
B-078
B-078
Digital key main module
数字钥匙主模块
B-078
16
B(B)
78

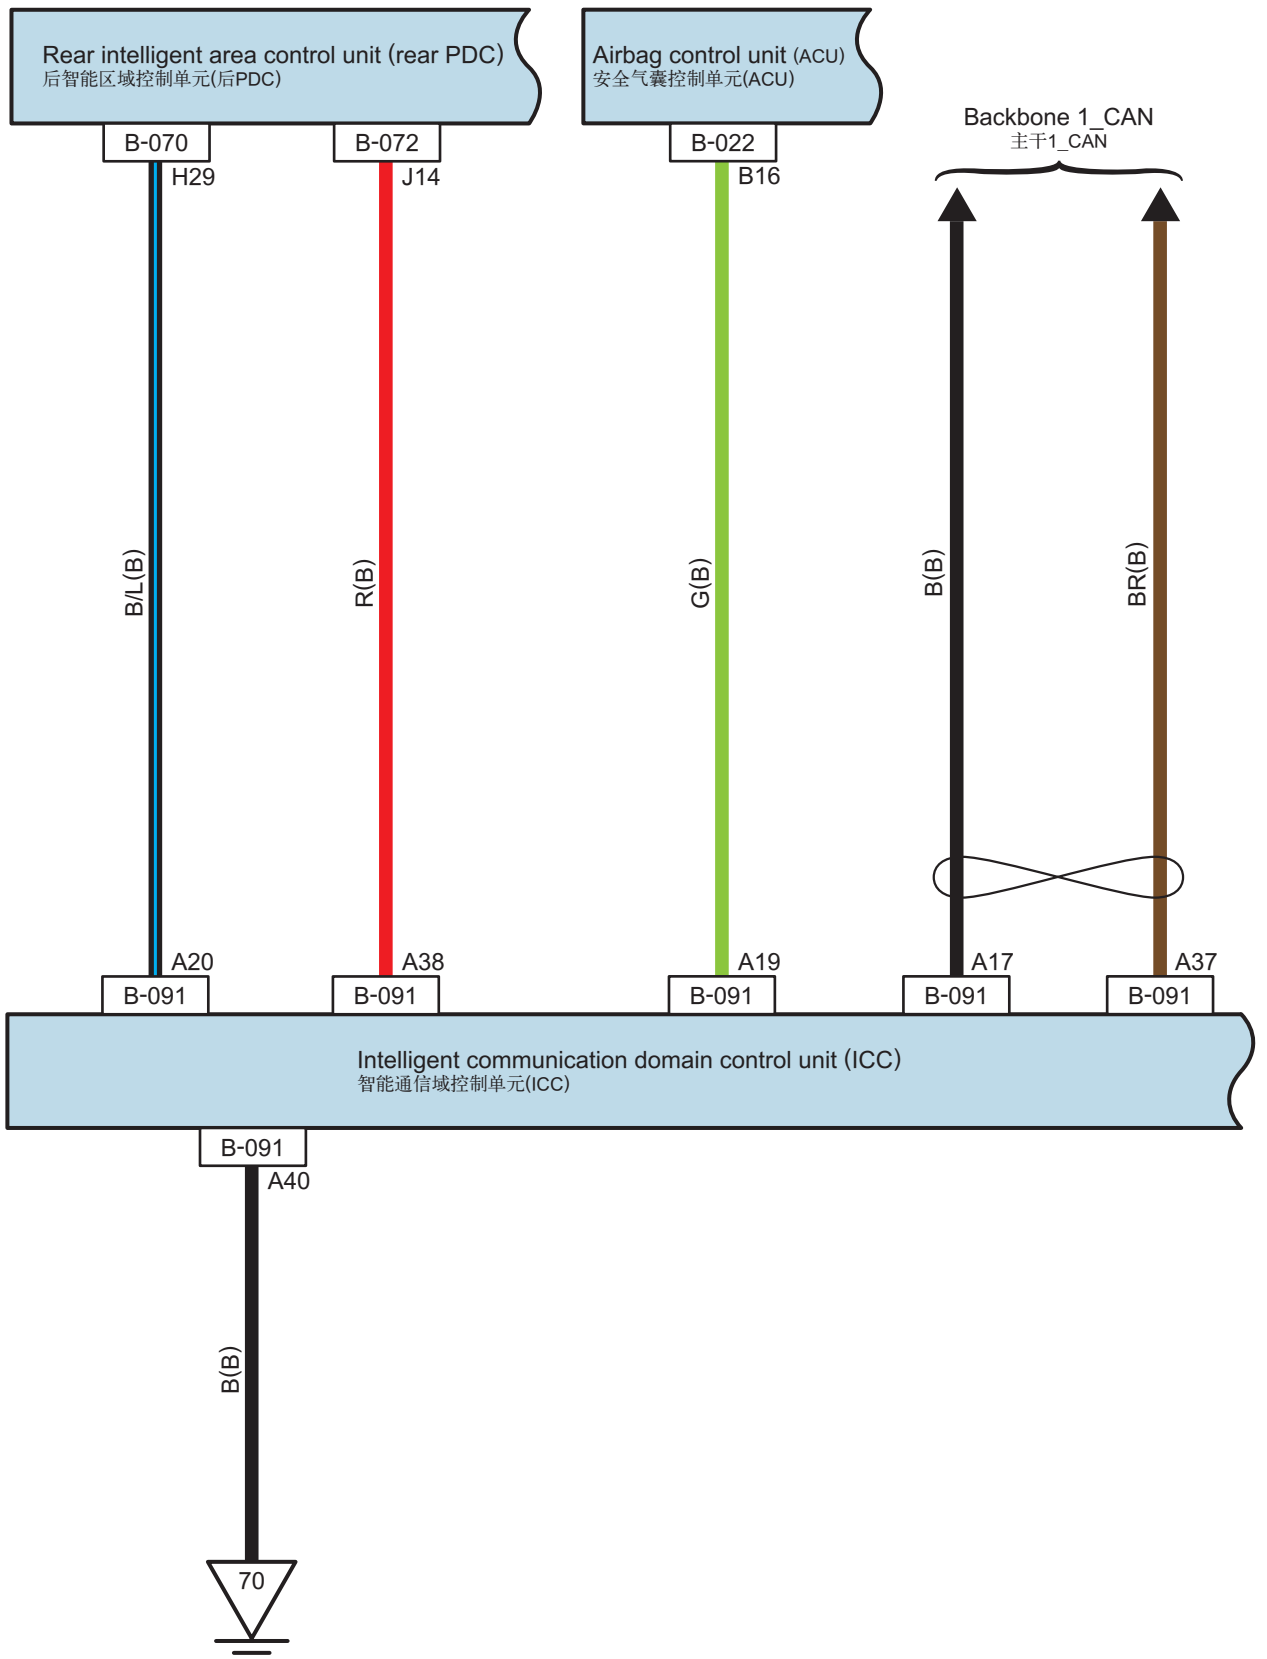

Digital key UWB antenna RR
右后数字钥匙UWB天线
RR-014
6
RR-014
3
L(RR)
O/BR(RR)
L(RR)
O/BR(RR)
C-53
15
C-53
16
L(B)
O/BR(B)
3
11
B-078
B-078
Digital key NFC_CAN
数字钥匙NFC_CAN
P(B)
O/BR(B)
5
13
B-078
B-078
Digital key DK_CAN
数字钥匙DK_CAN
O(B)
V(B)
7
15
B-078
B-078
Digital key main module
数字钥匙主模块

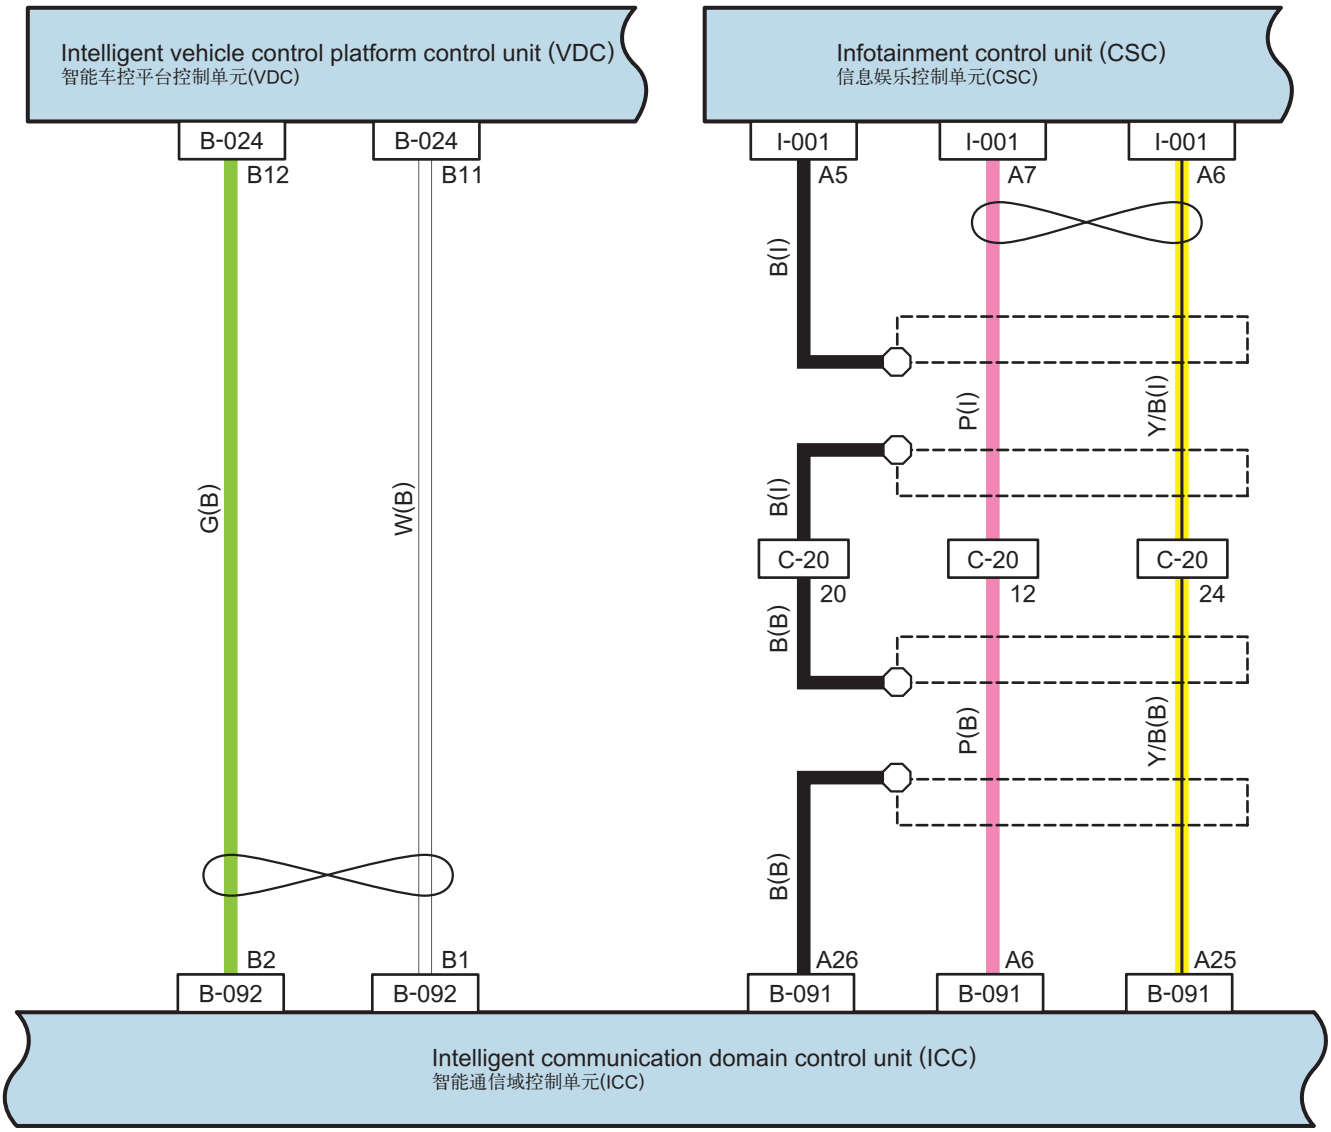

Digital key UWB antenna RR
右后数字钥匙UWB天线
Digital key UWB antenna RL
左后数字钥匙UWB天线
RR-014
5
RR-014
1
RR-014
2
RR-014
4
RR-001
1
RR-001
4
L(RR)
B(RR)
B(RR)
B(RR)
B(RR)
B(RR)
B(RR)
C-53
13
C-53
3
B(B)
B(B)
73b
73a
L(RR)
C-53
18
L(B)
L(B)
4
B-078
Digital key main module
数字钥匙主模块

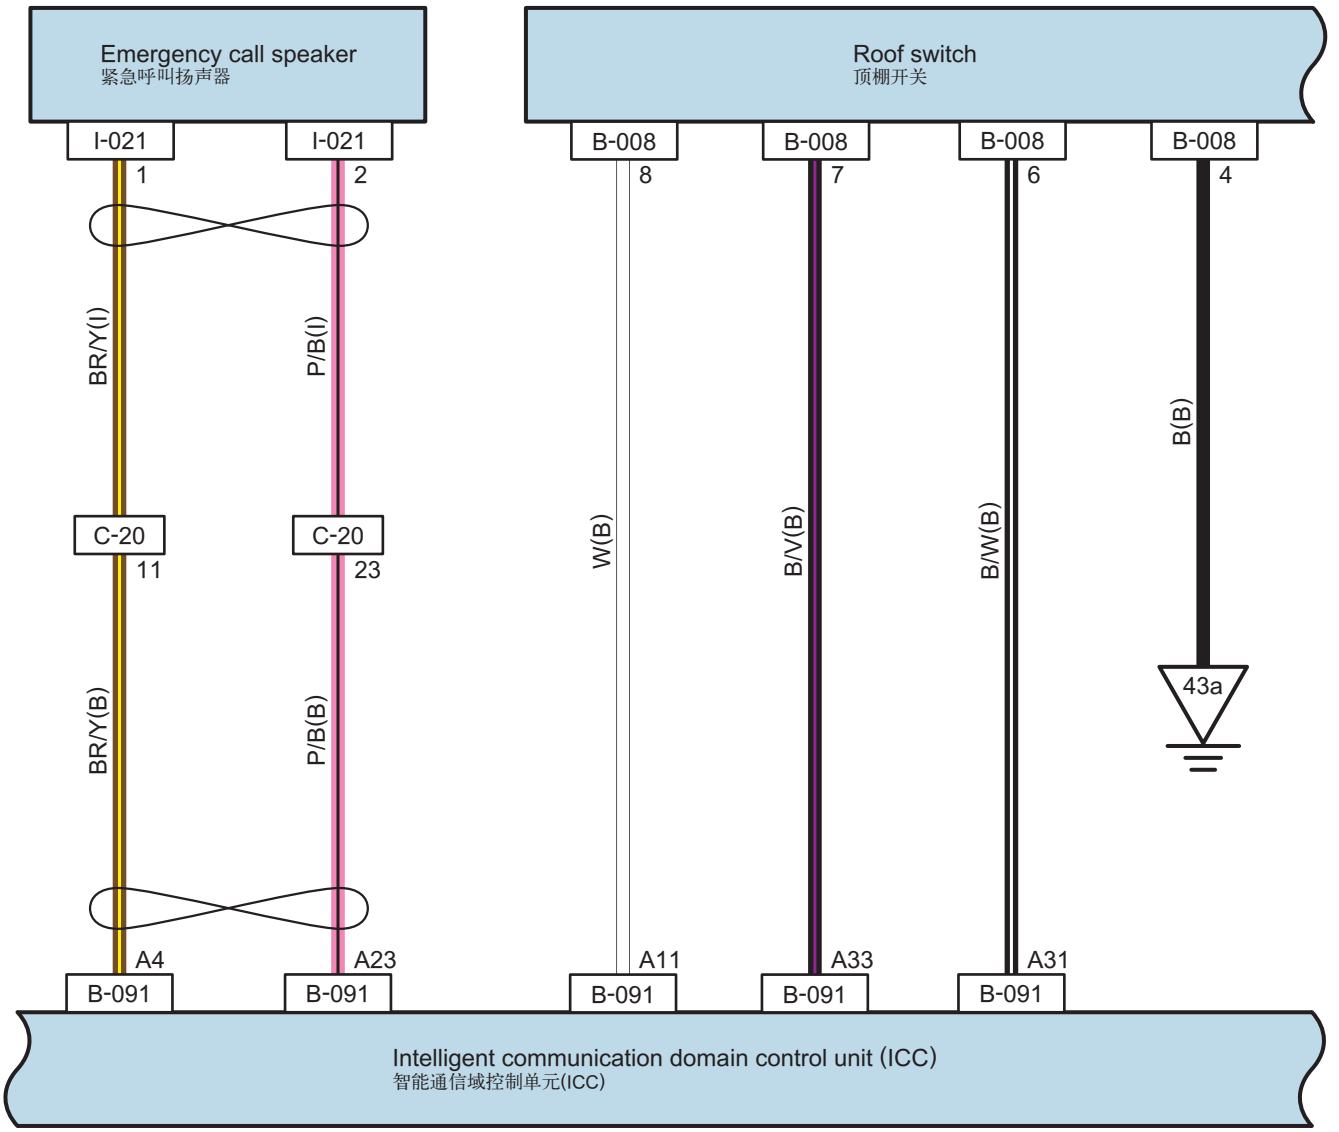

Digital key UWB antenna RL
左后数字钥匙UWB天线
Digital key UWB antenna FR
右前数字钥匙UWB天线
RR-001
5
RR-001
6
RR-001
3
FF-011
6
FF-011
3
FF-011
5
L(RR)
L(RR)
O/BR(RR)
L(FF)
O/BR(FF)
L(FF)
L(RR)
O/BR(RR)
L(FF)
O/BR(FF)
L(FF)
C-53
11
C-53
12
C-15
25
C-15
26
C-15
9
L(B)
O/BR(B)
L(F)
O/BR(F)
L(F)
C-02
4
C-02
5
C-02
10
L(B)

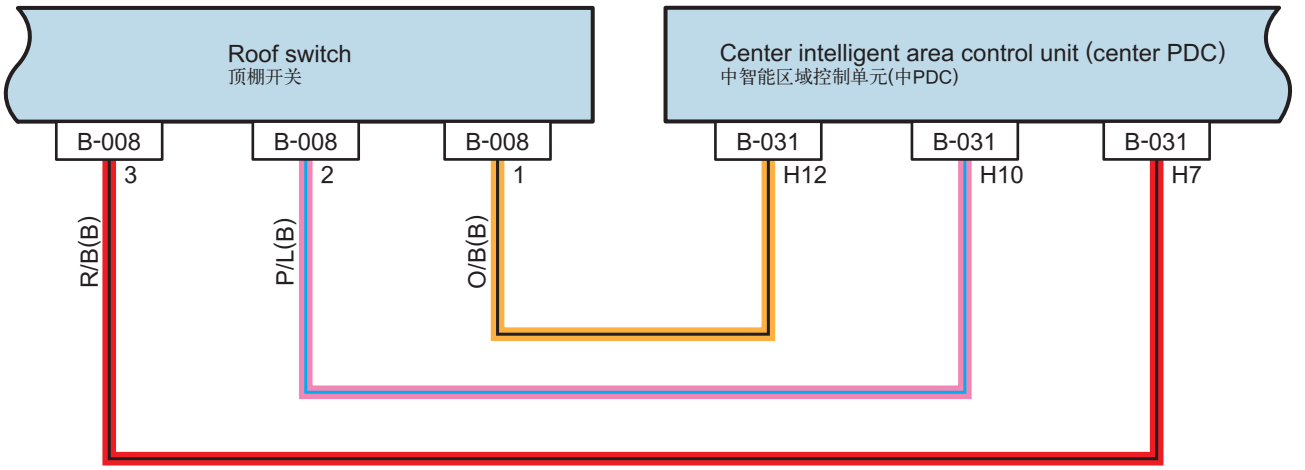

Digital key UWB antenna FR
右前数字钥匙UWB天线
Digital key UWB antenna FL
左前数字钥匙UWB天线
FF-011
4
FF-011
2
FF-001
4
FF-001
5
FF-001
6
FF-001
3
B(FF)
B(FF)
B(FF)
L(FF)
L(FF)
O/BR(FF)
B(FF)
L(FF)
O/BR(FF)
C-15
11
C-15
16
C-15
17
B(F)
L(F)
O/BR(F)
23b
C-02
26
C-02
35


Interior front digital key UWB antenna
室内前数字钥匙UWB天线
Digital key UWB_CAN
数字钥匙UWB_CAN
I2-002
6
I2-002
3
I2-002
5
I2-002
1
I2-002
4
L(I2)
O/BR(I2)
L(I2)
L(I2)
B(I2)
O/BR(B)
L(B)
C-18
5
C-18
6
C-18
13
L(B)
O/BR(B)
L(I2)
B(B)
C-18
7
L(B)
O/BR(B)
L(B)
44b

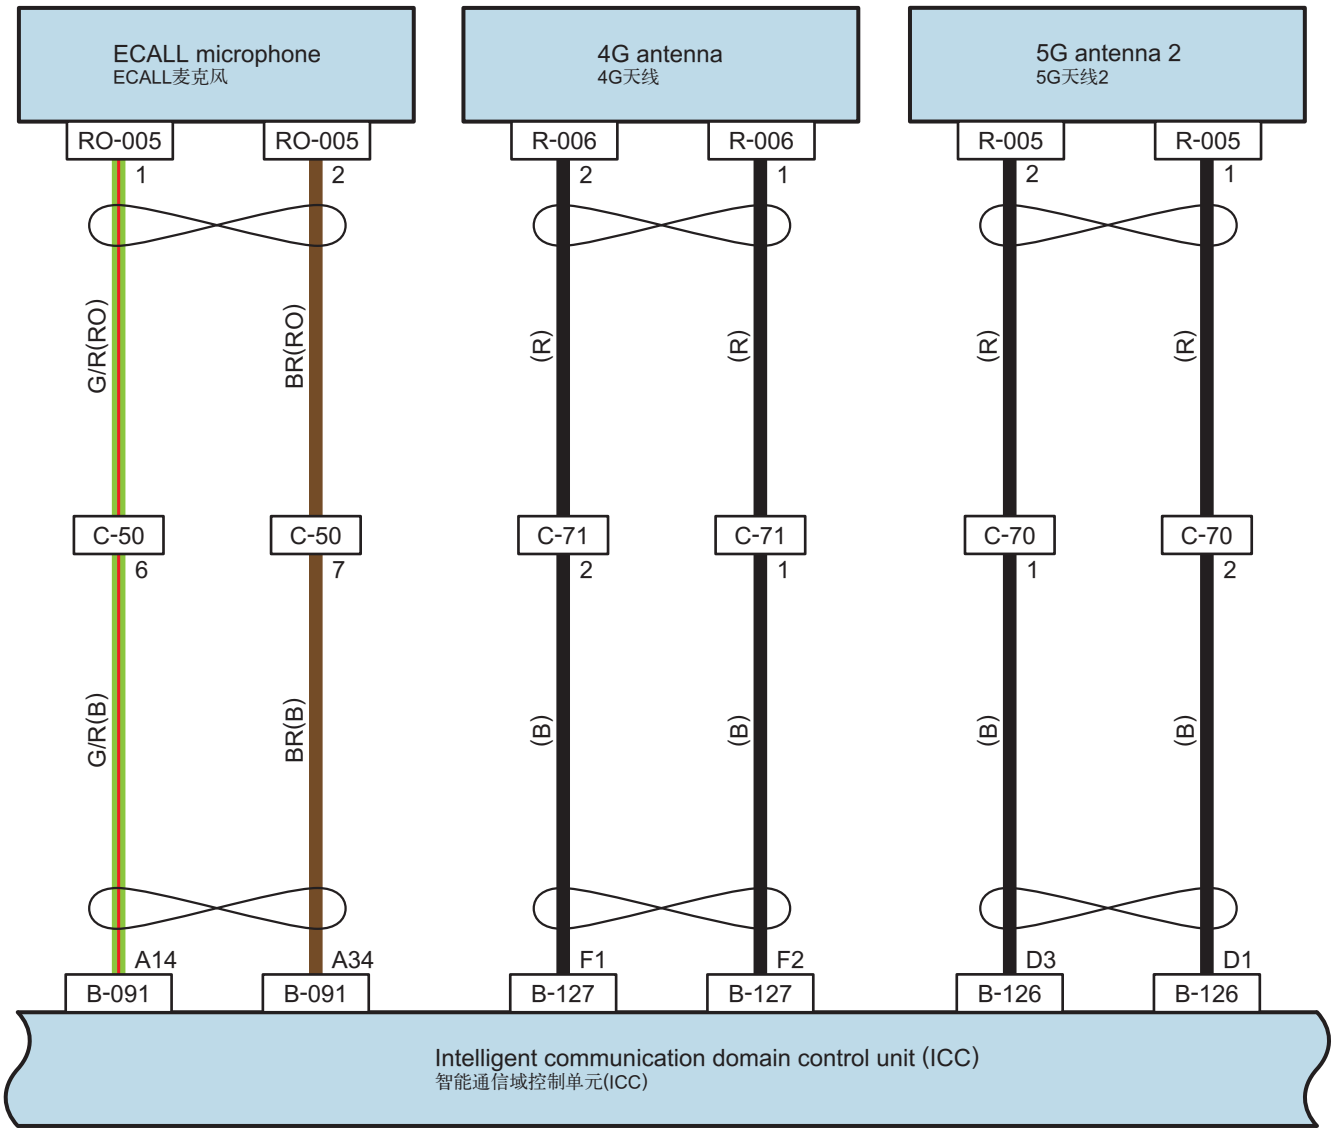

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Airbag control unit (ACU)
安全气囊控制单元(ACU)
Backbone 1_CAN
主干1_CAN
B-070
H29
B-072
J14
B-022
B16
B/L(B)
R(B)
G(B)
B(B)
BR(B)
A20
A38
A19
A17
A37
B-091
B-091
B-091
B-091
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
B-091
A40
B(B)
70

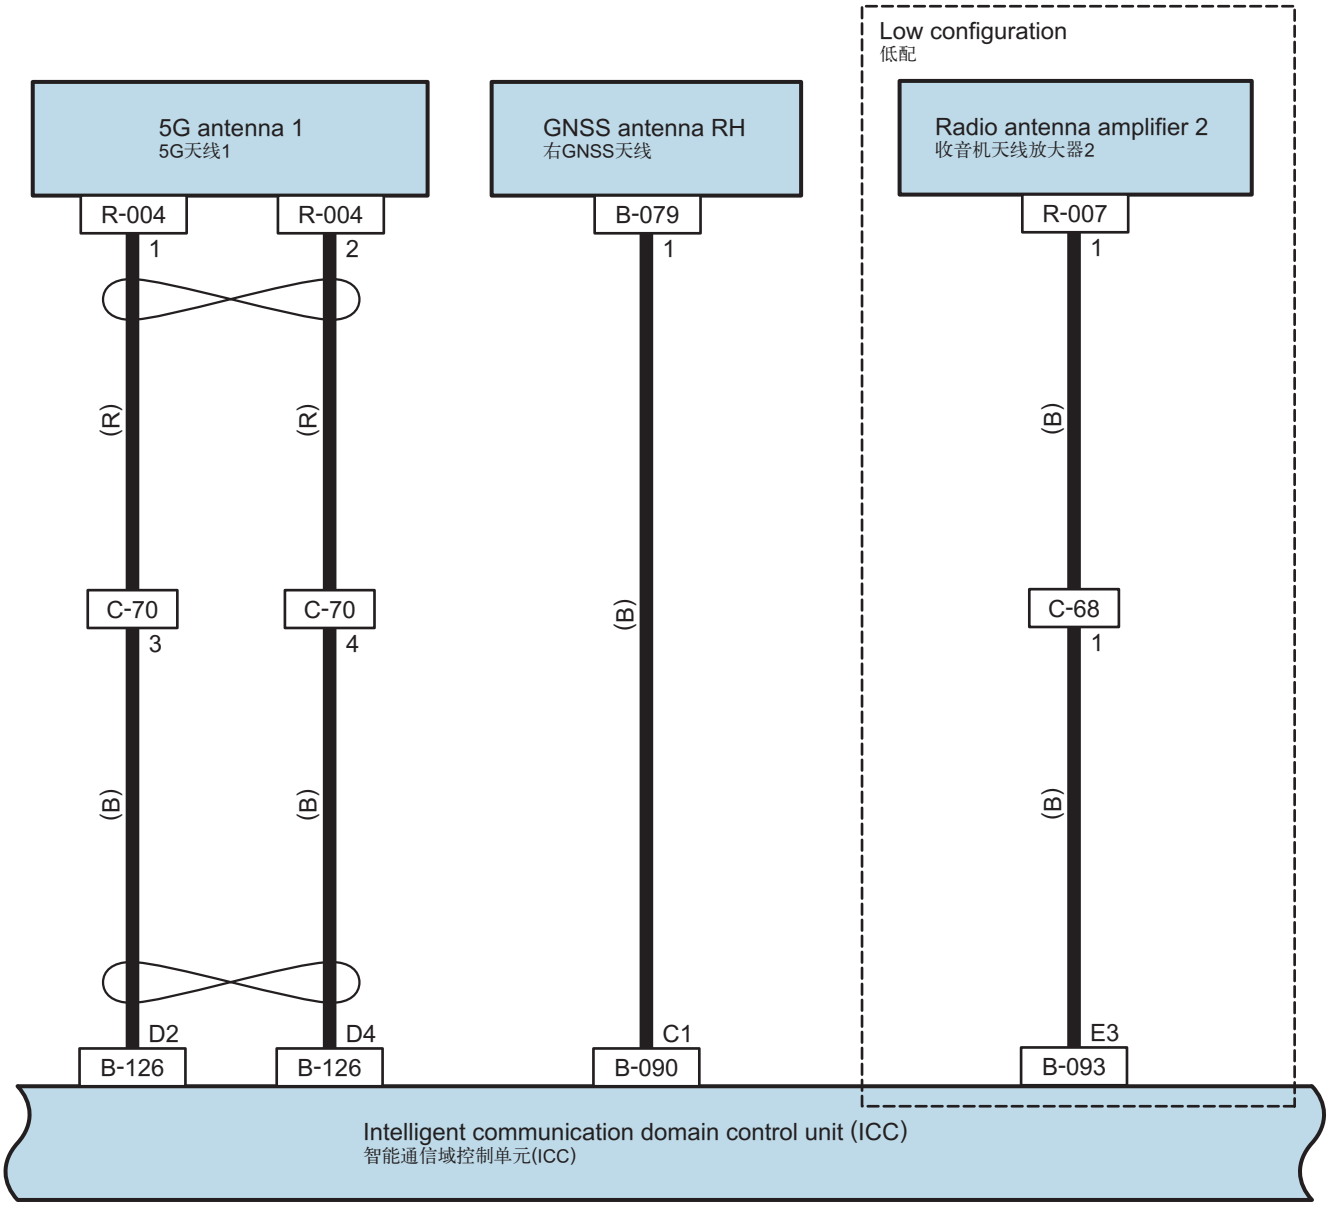

Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
B-024
B12
B-024
B11
I-001
A5
I-001
A7
I-001
A6
B(I)
P(I)
Y/B(I)
G(B)
W(B)
B(I)
C-20
20
C-20
12
C-20
24
B(B)
P(B)
Y/B(B)
B(B)
B2
B1
A26
A6
A25
B-092
B-092
B-091
B-091
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

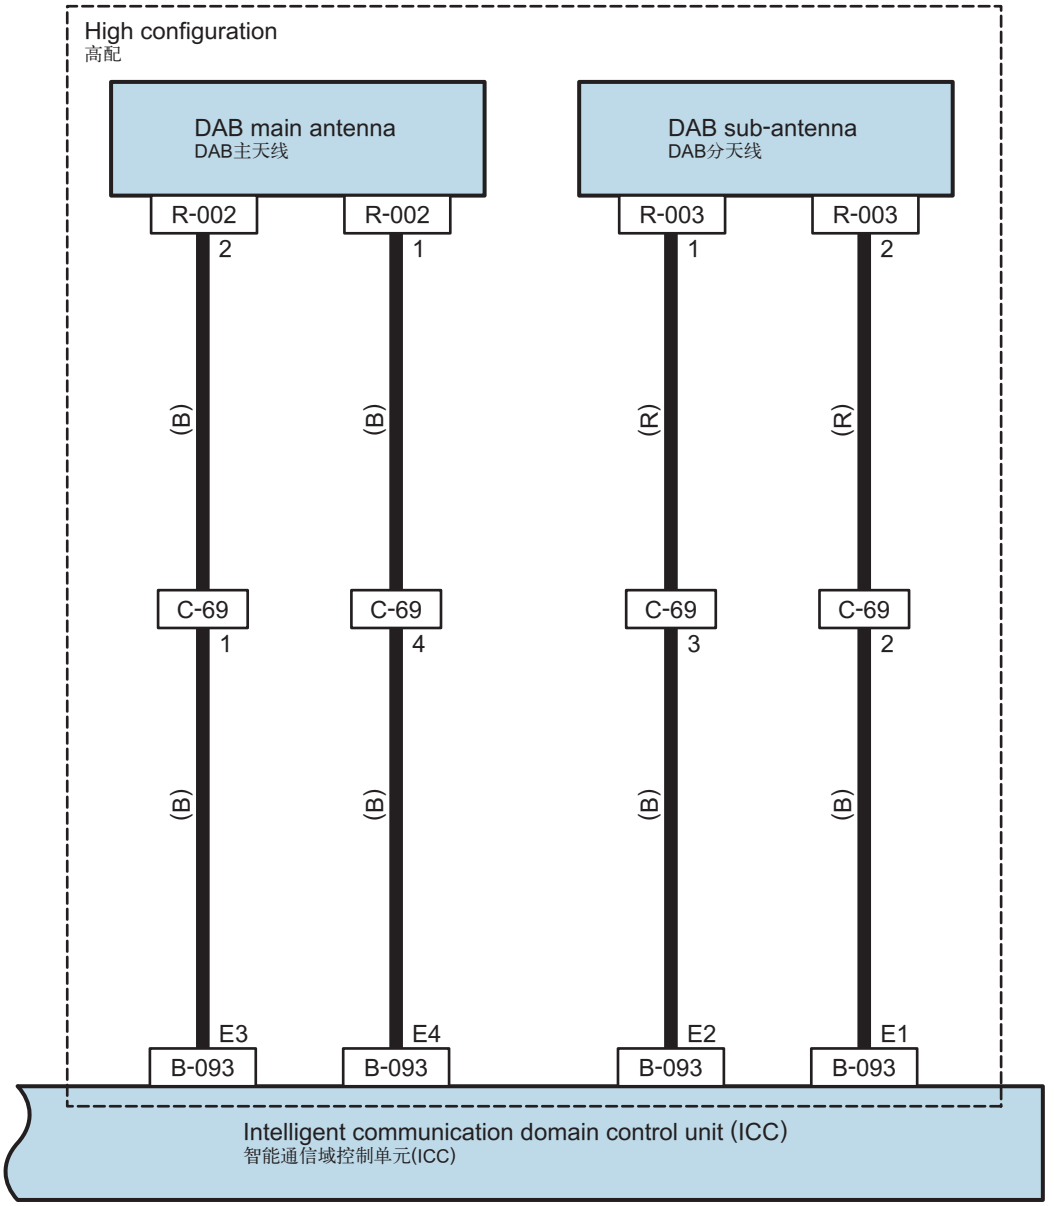

Emergency call speaker
紧急呼叫扬声器
Roof switch
顶棚开关
I-021
1
I-021
2
B-008
8
B-008
7
B-008
6
B-008
4
BR/Y(I)
P/B(I)
W(B)
B/V(B)
B/W(B)
B(B)
C-20
11
C-20
23
43a
BR/Y(B)
P/B(B)
A4
A23
A11
A33
A31
B-091
B-091
B-091
B-091
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

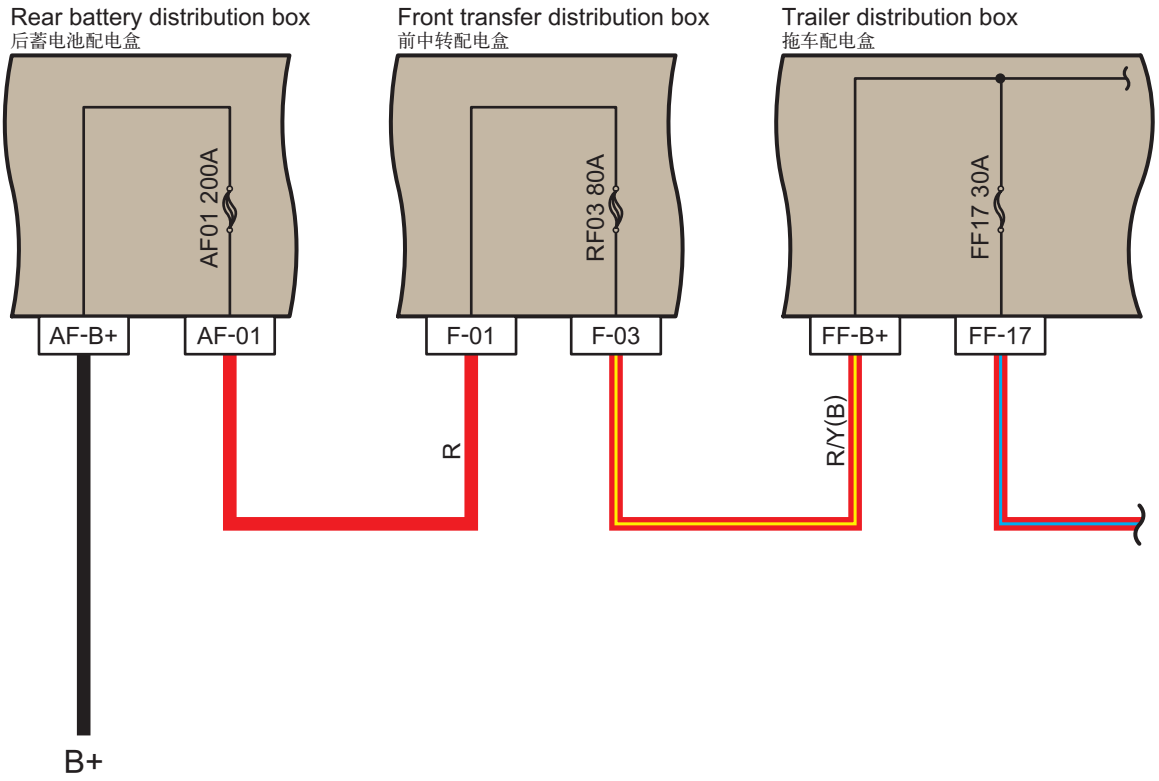


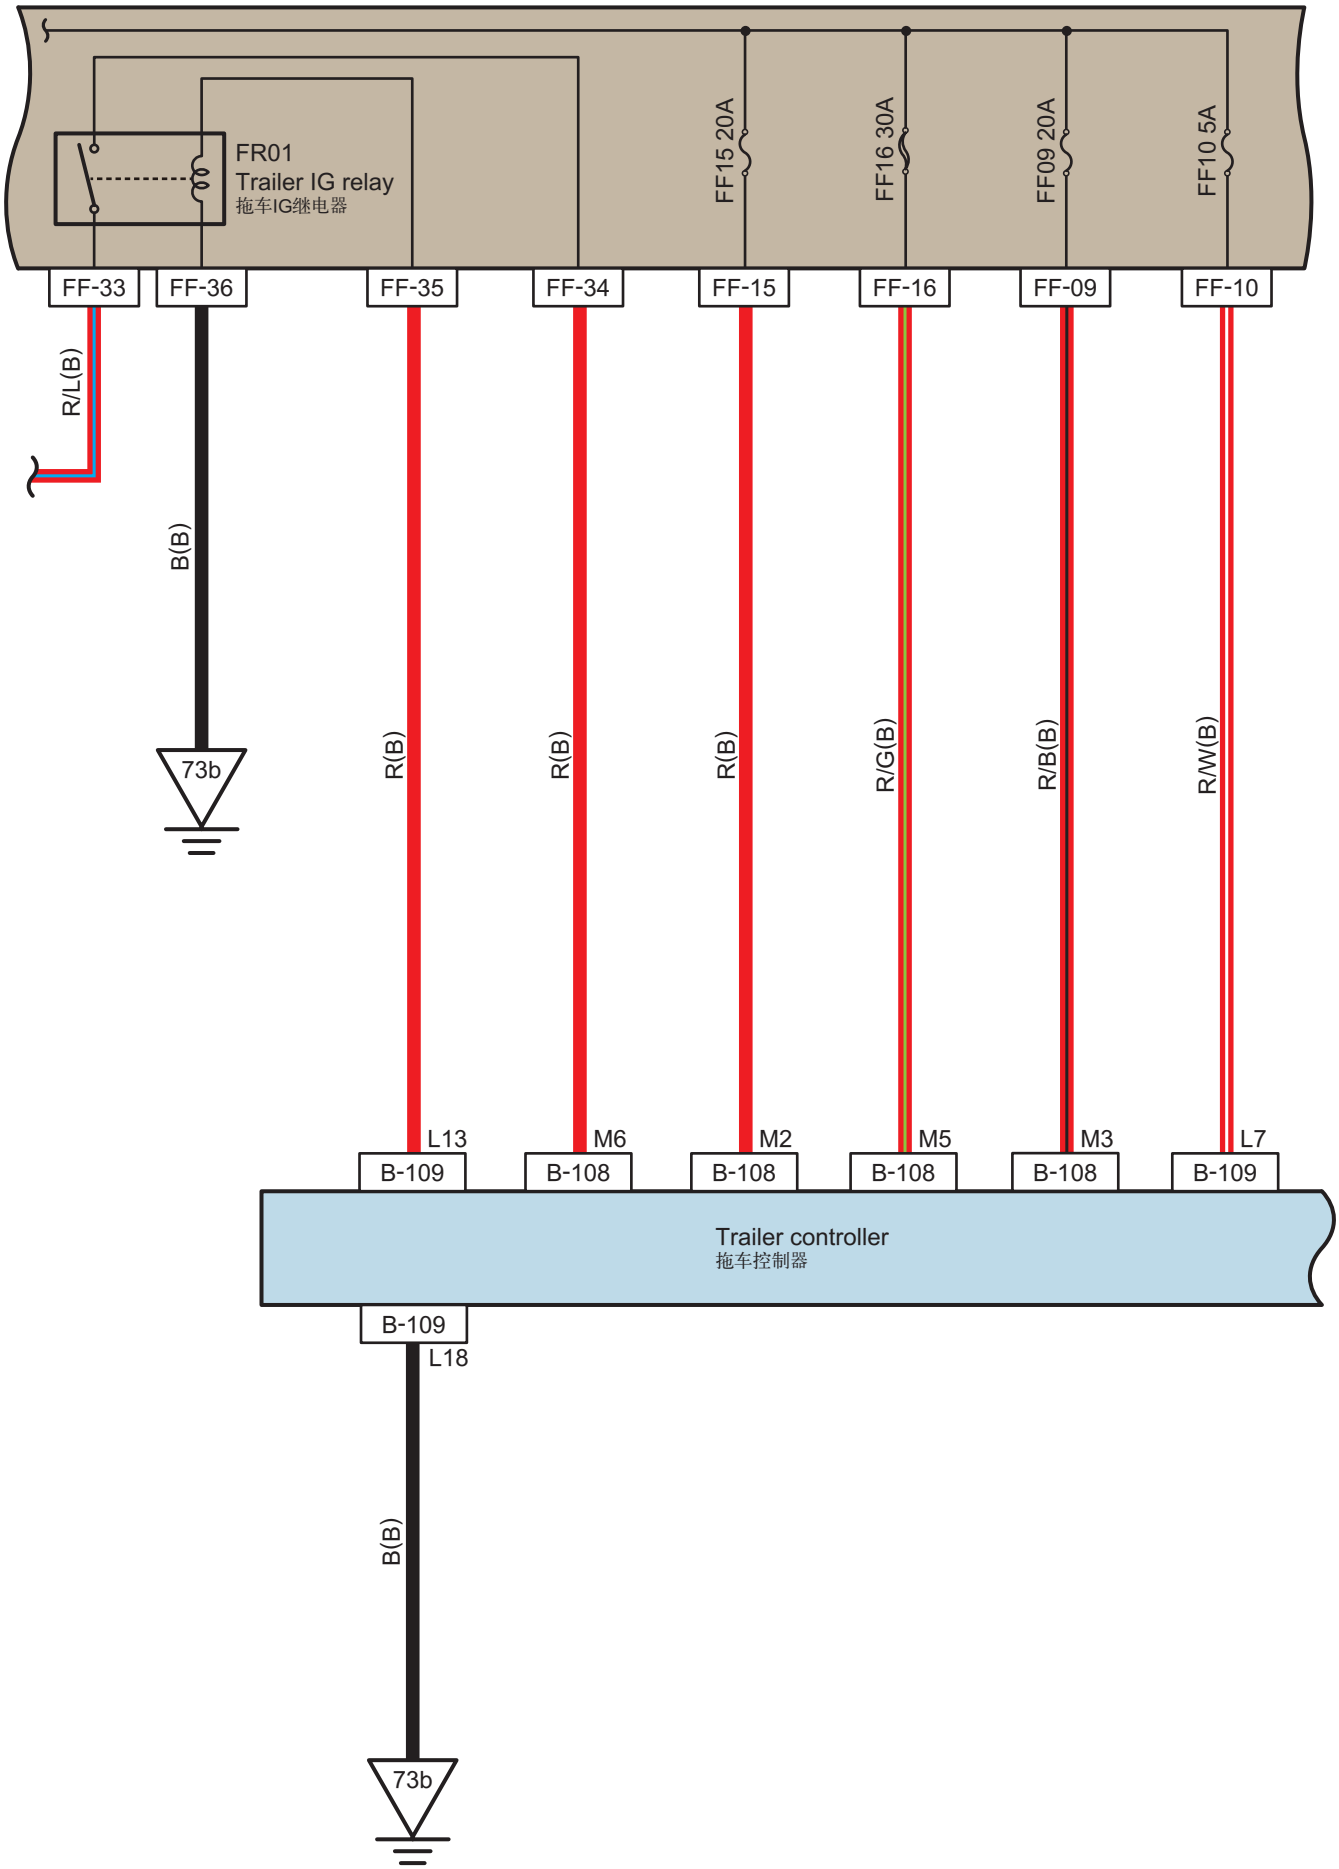
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

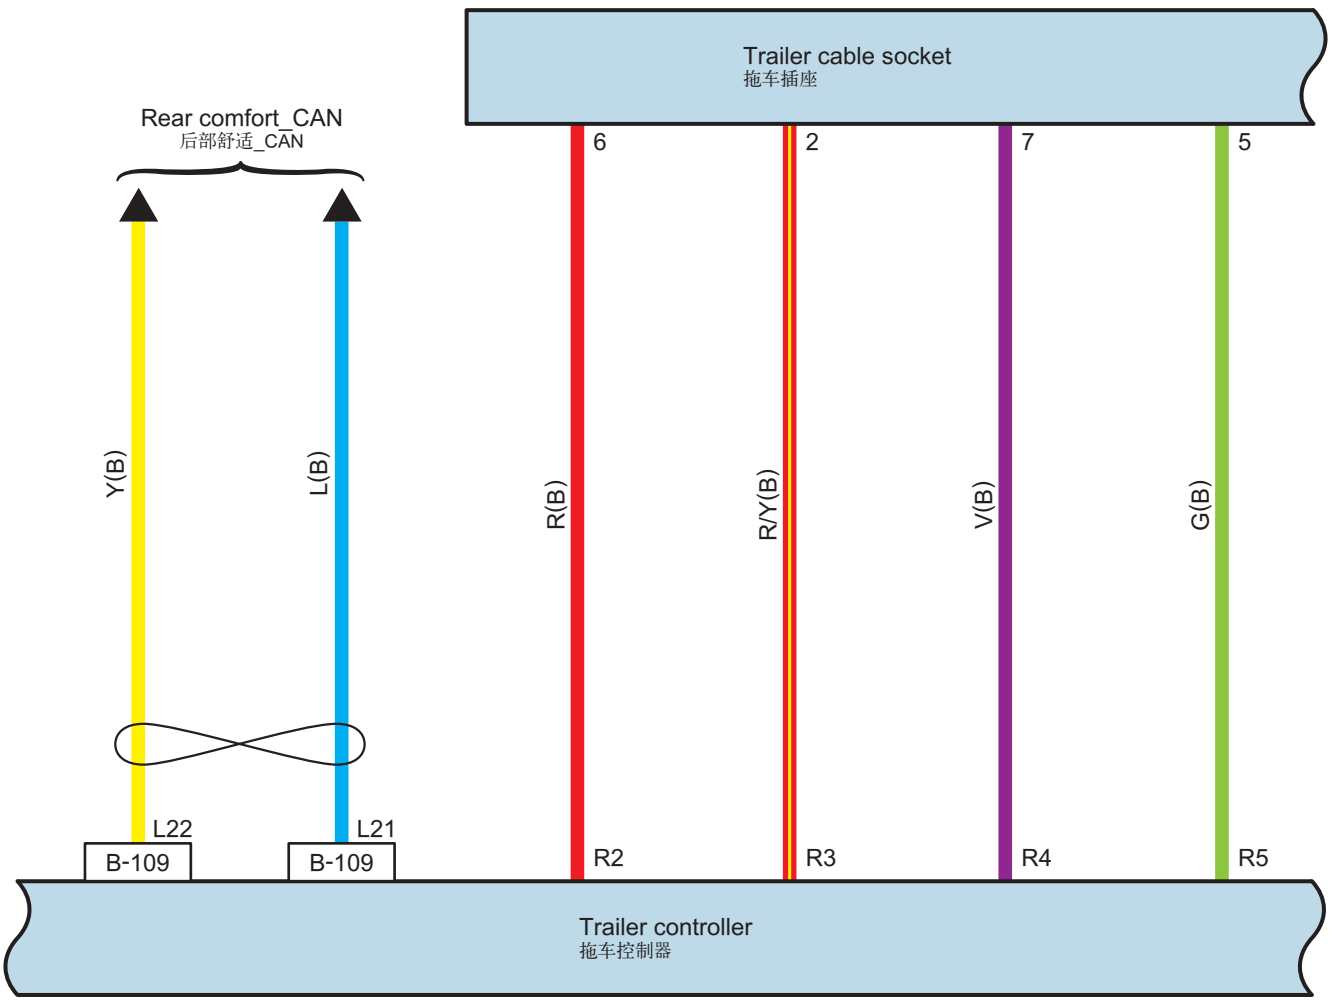

ECALL microphone
ECALL麦克风
4G antenna
4G天线
5G antenna 2
5G天线2
RO-005
RO-005
R-006
R-006
R-005
R-005
1
2
2
1
2
1
G/R(RO)
BR(RO)
(R)
(R)
(R)
(R)
C-50
C-50
C-71
C-71
C-70
C-70
6
7
2
1
1
2
G/R(B)
BR(B)
(B)
(B)
(B)
(B)
A14
A34
F1
F2
D3
D1
B-091
B-091
B-127
B-127
B-126
B-126
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

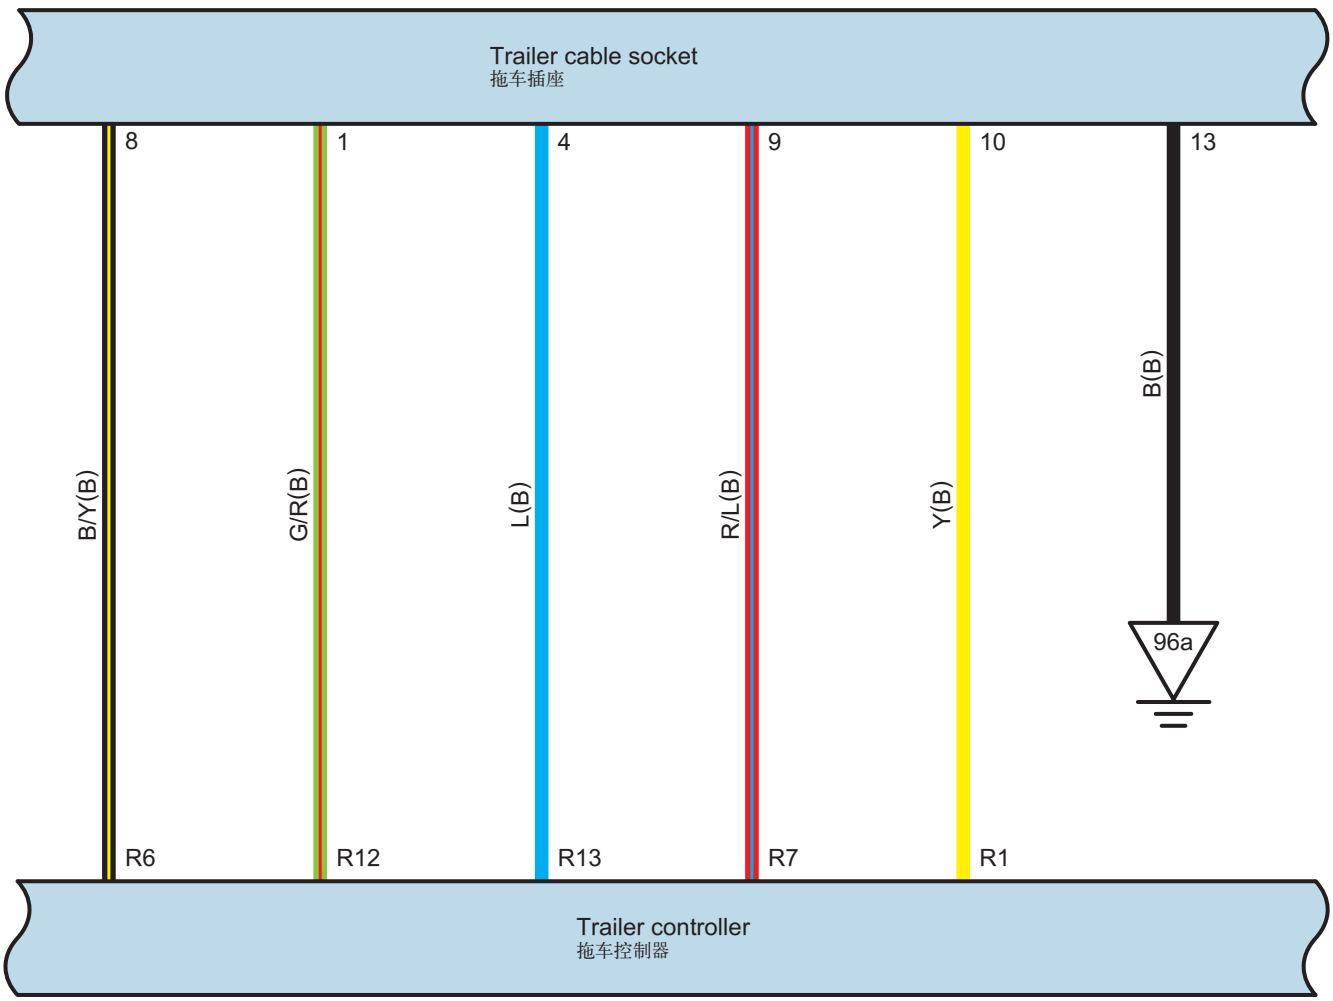

Low configuration
低配
5G antenna 1
5G天线1
GNSS antenna RH
右GNSS天线
Radio antenna amplifier 2
收音机天线放大器2
R-004
1
R-004
2
B-079
1
R-007
1
(R)
(R)
(B)
(B)
C-70
3
C-70
4
C-68
1
(B)
(B)
(B)
D2
D4
C1
E3
B-126
B-126
B-090
B-093
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

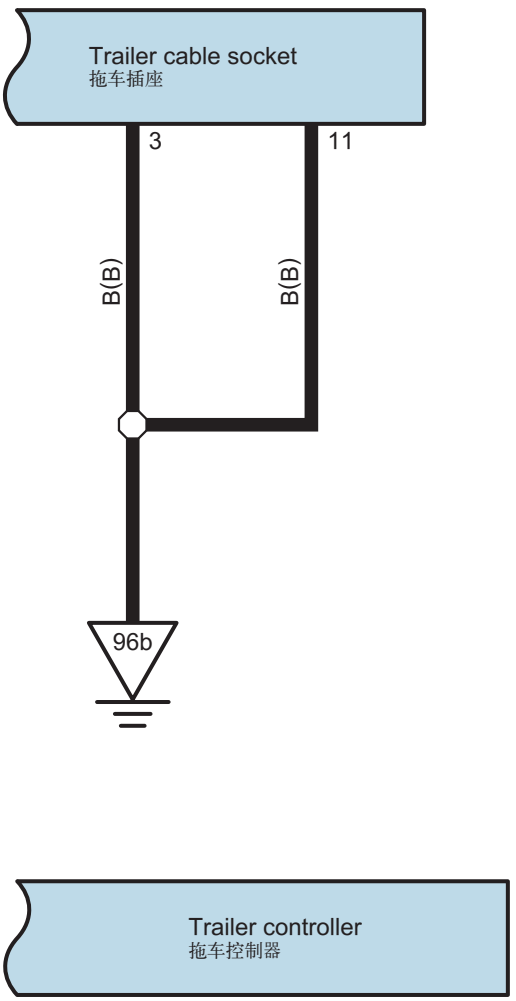

High configuration
高配
DAB main antenna
DAB主天线
DAB sub-antenna
DAB分天线
R-002
2
R-002
1
R-003
1
R-003
2
(B)
(B)
(R)
(R)
C-69
1
C-69
4
C-69
3
C-69
2
(B)
(B)
(B)
(B)
E3
E4
E2
E1
B-093
B-093
B-093
B-093
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)


Rear battery distribution box
后蓄电池配电盒
Front transfer distribution box
前中转配电盒
Trailer distribution box
拖车配电盒
AF01 200A
RF03 80A
FF17 30A
AF-B+
AF-01
F-01
F-03
FF-B+
FF-17
R
R/Y(B)
B+

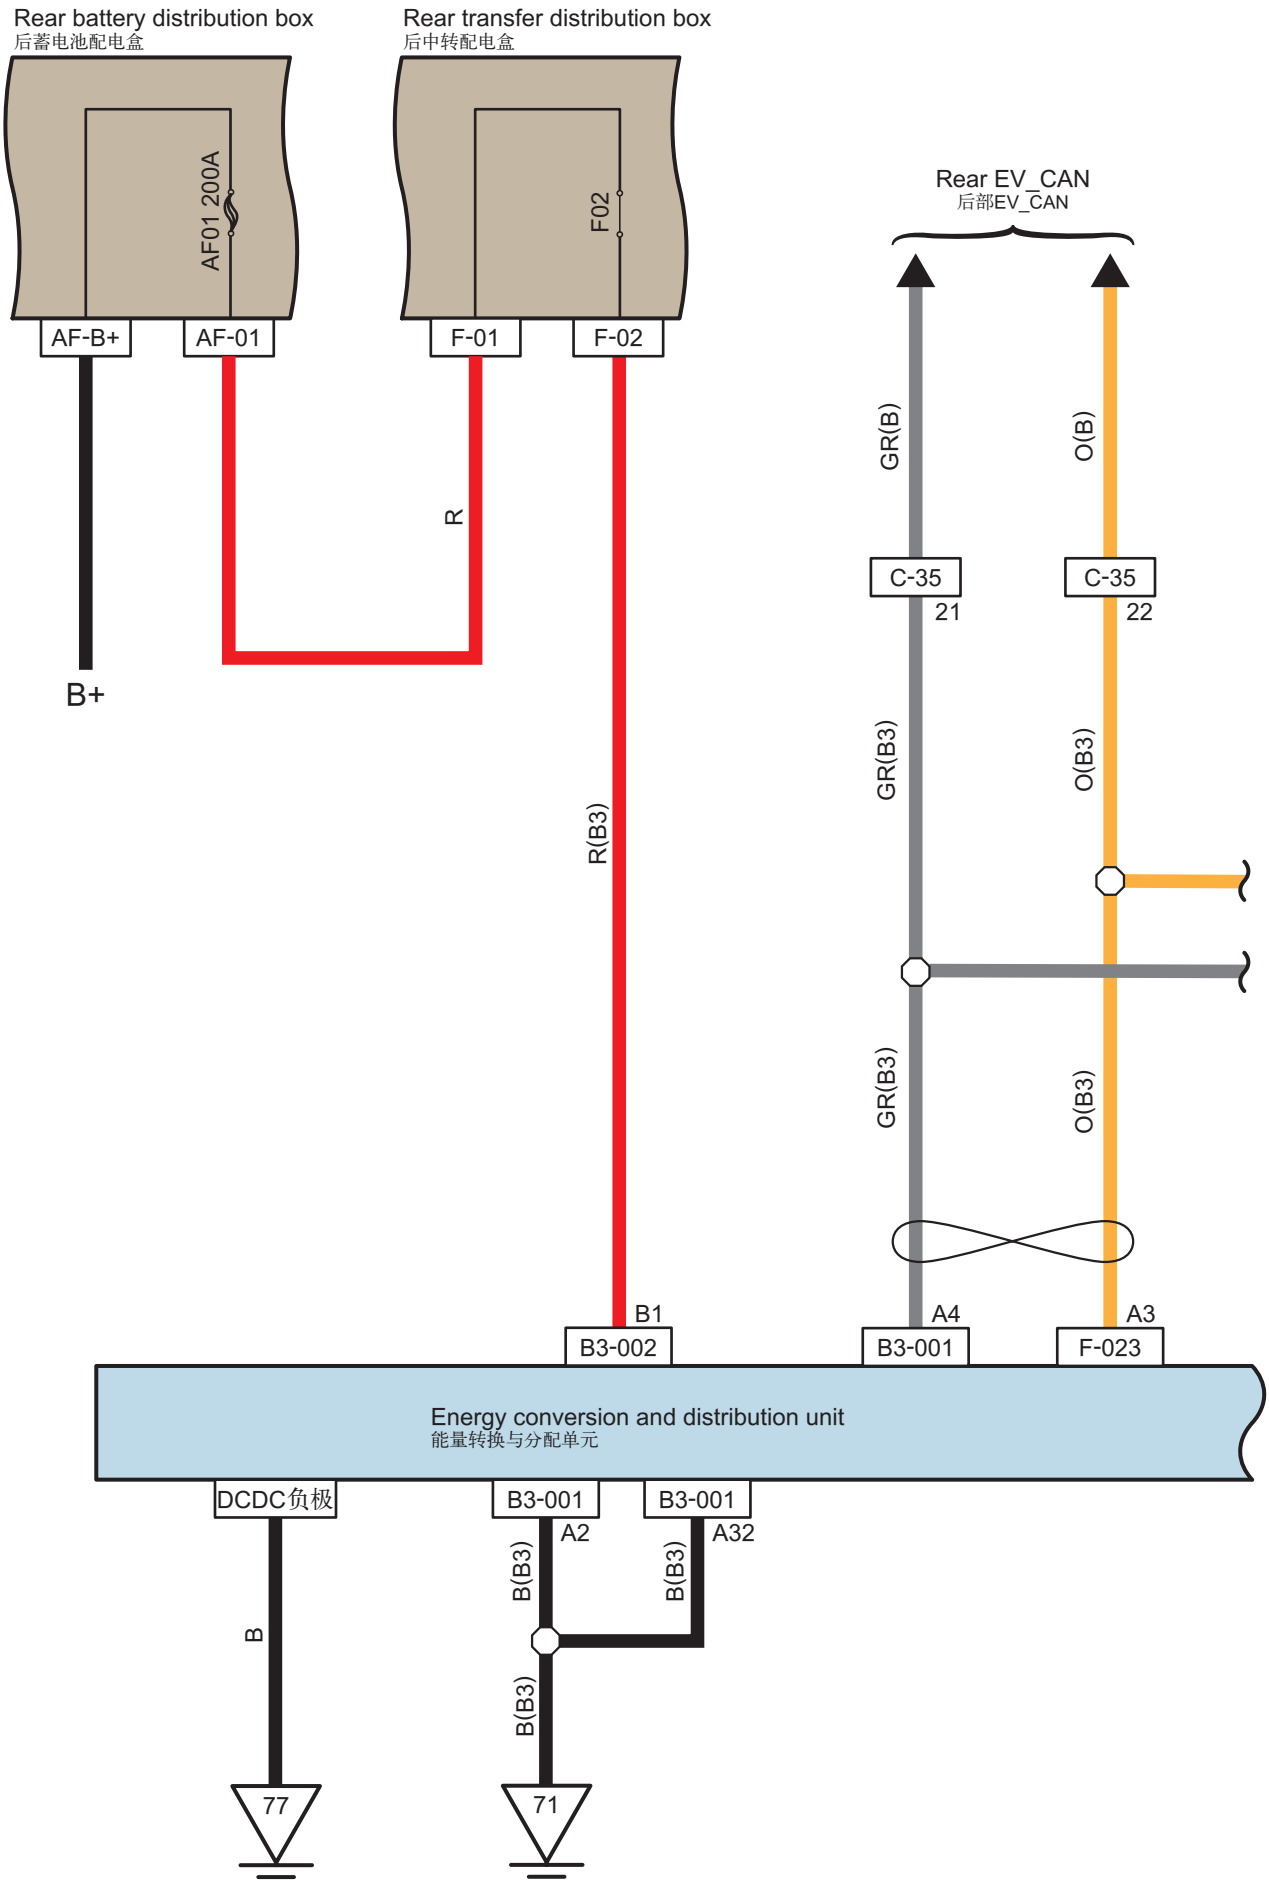

FR01
Trailer IG relay
拖车IG继电器
FF15 20A
FF16 30A
FF09 20A
FF10 5A
FF-33
FF-36
FF-35
FF-34
FF-15
FF-16
FF-09
FF-10
R/L(B)
B(B)
73b
R(B)
R(B)
R(B)
R/G(B)
R/B(B)
R/W(B)
L13
M6
M2
M5
M3
L7
B-109
B-108
B-108
B-108
B-108
B-109
Trailer controller
拖车控制器
B-109
L18
B(B)
73b

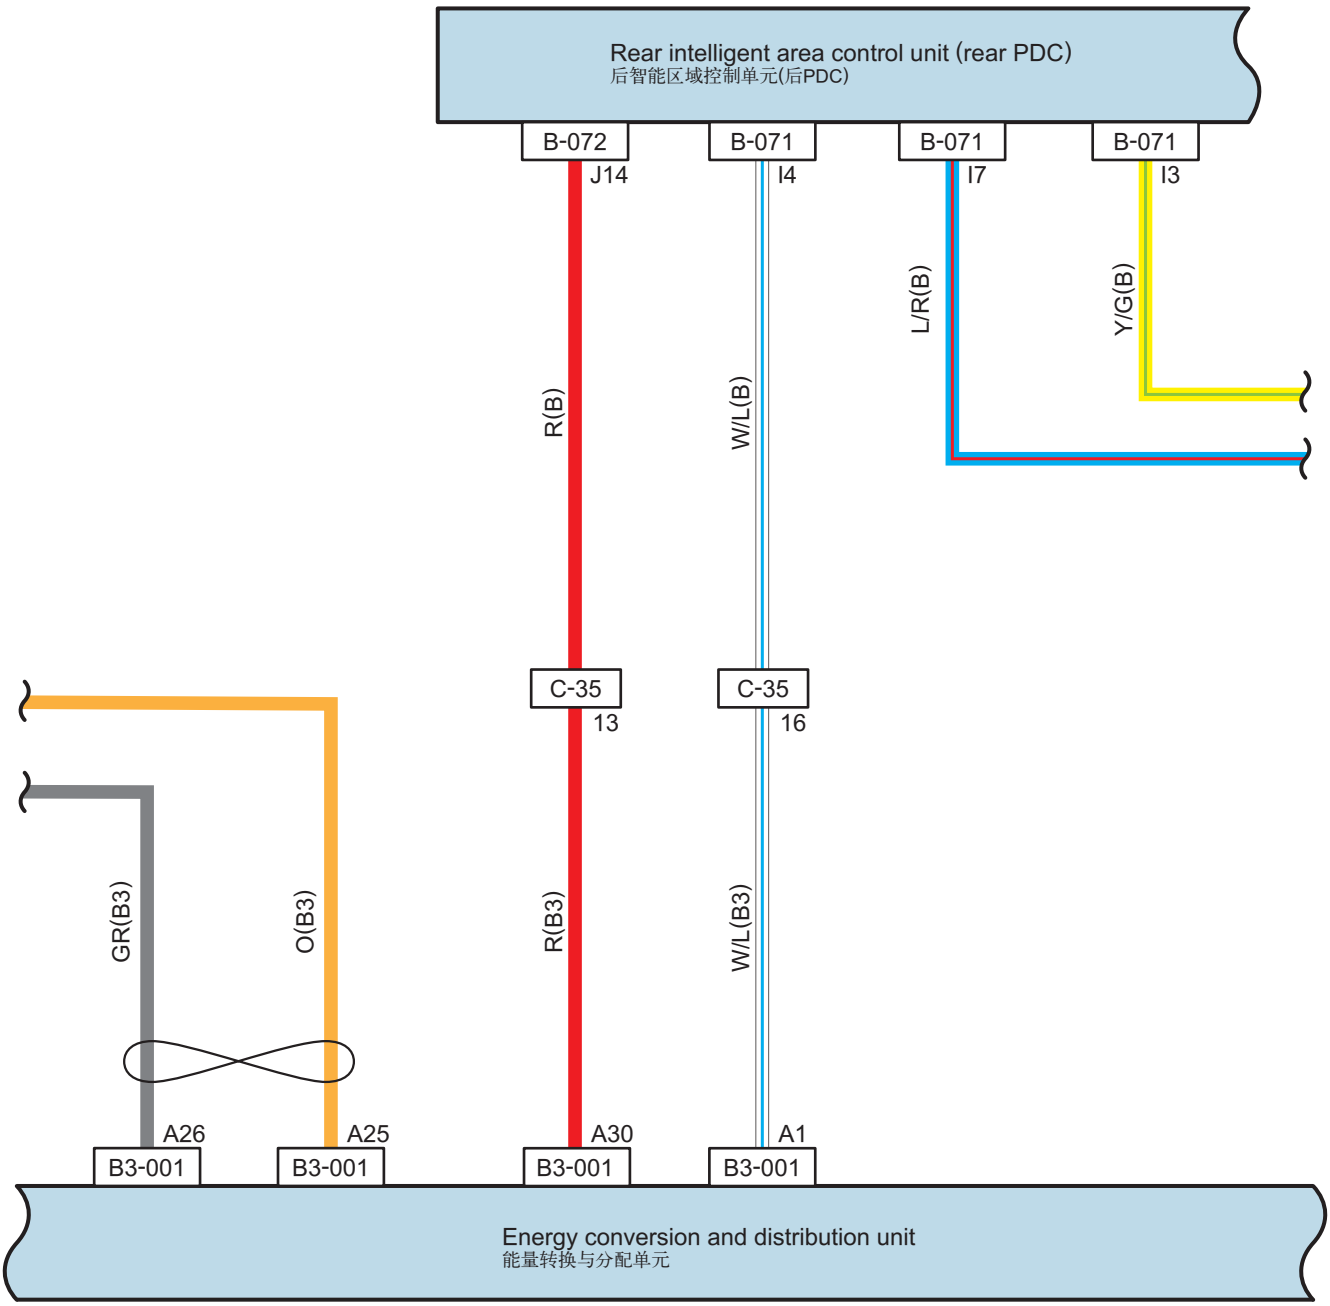

Trailer cable socket
拖车插座
Rear comfort_CAN
后部舒适_CAN
6
2
7
5
Y(B)
L(B)
R(B)
R/Y(B)
V(B)
G(B)
L22
L21
B-109
B-109
R2
R3
R4
R5
Trailer controller
拖车控制器

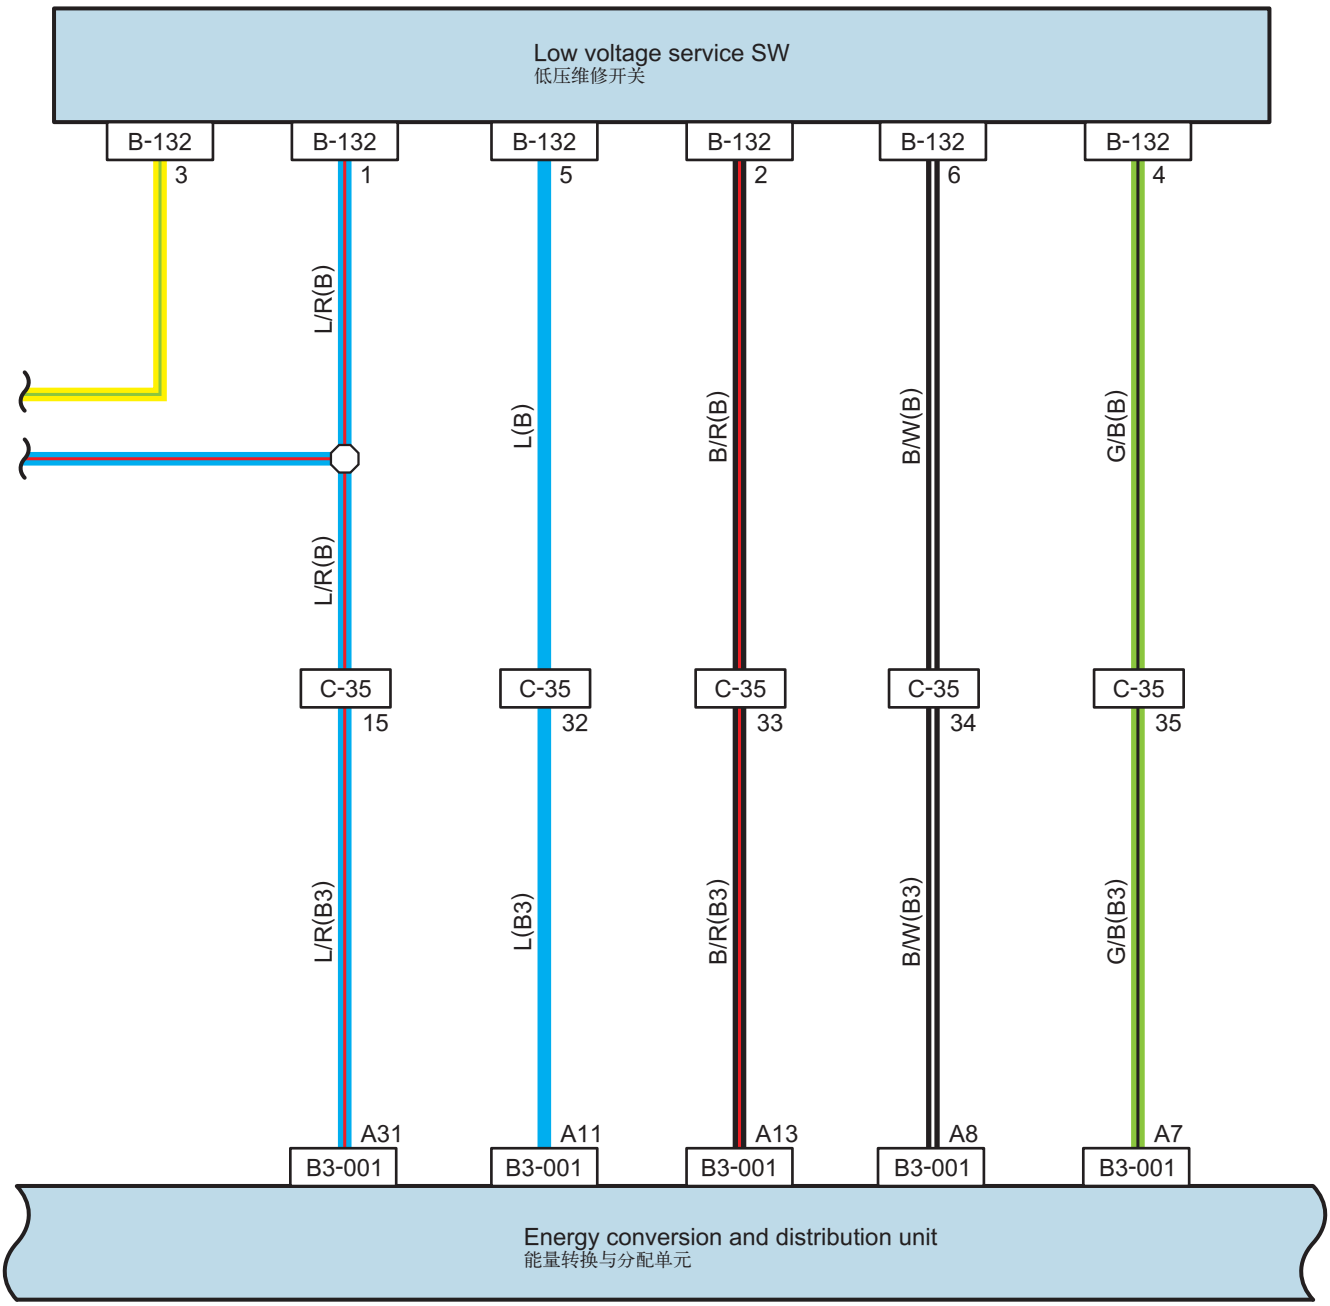

Trailer cable socket
拖车插座
8
1
4
9
10
13
B/Y(B)
G/R(B)
L(B)
R/L(B)
Y(B)
B(B)
96a
R6
R12
R13
R7
R1
Trailer controller
拖车控制器

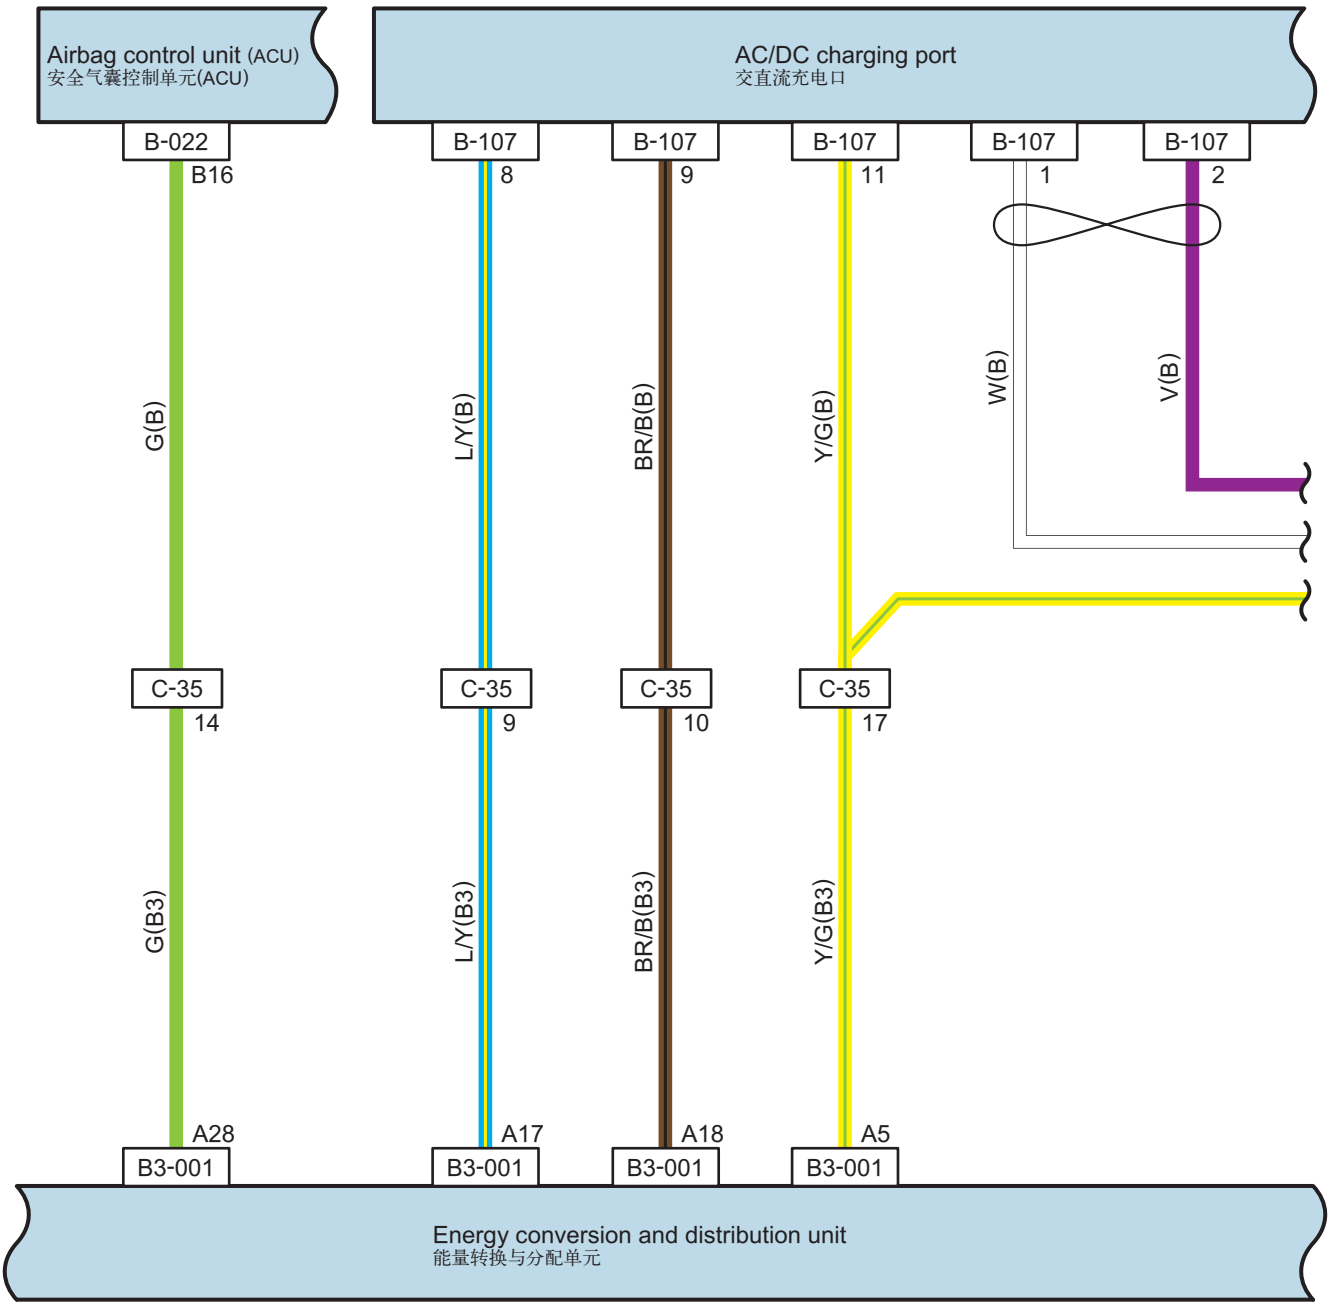


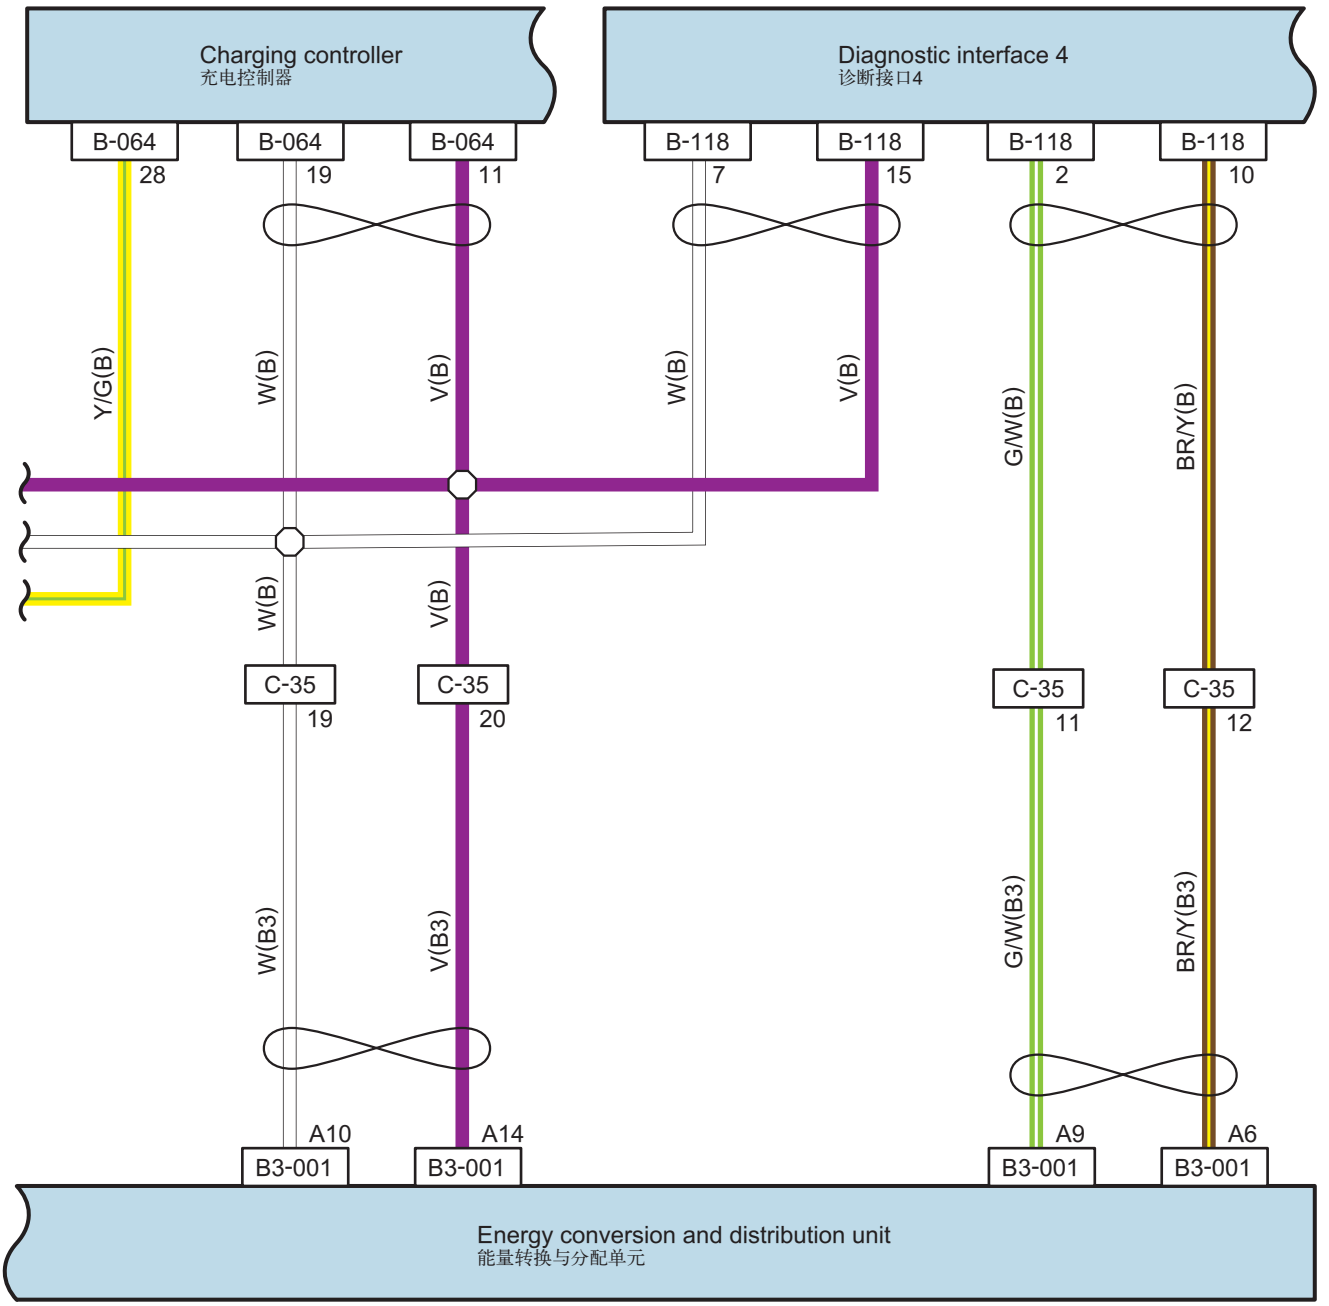
Trailer controller
拖车控制器

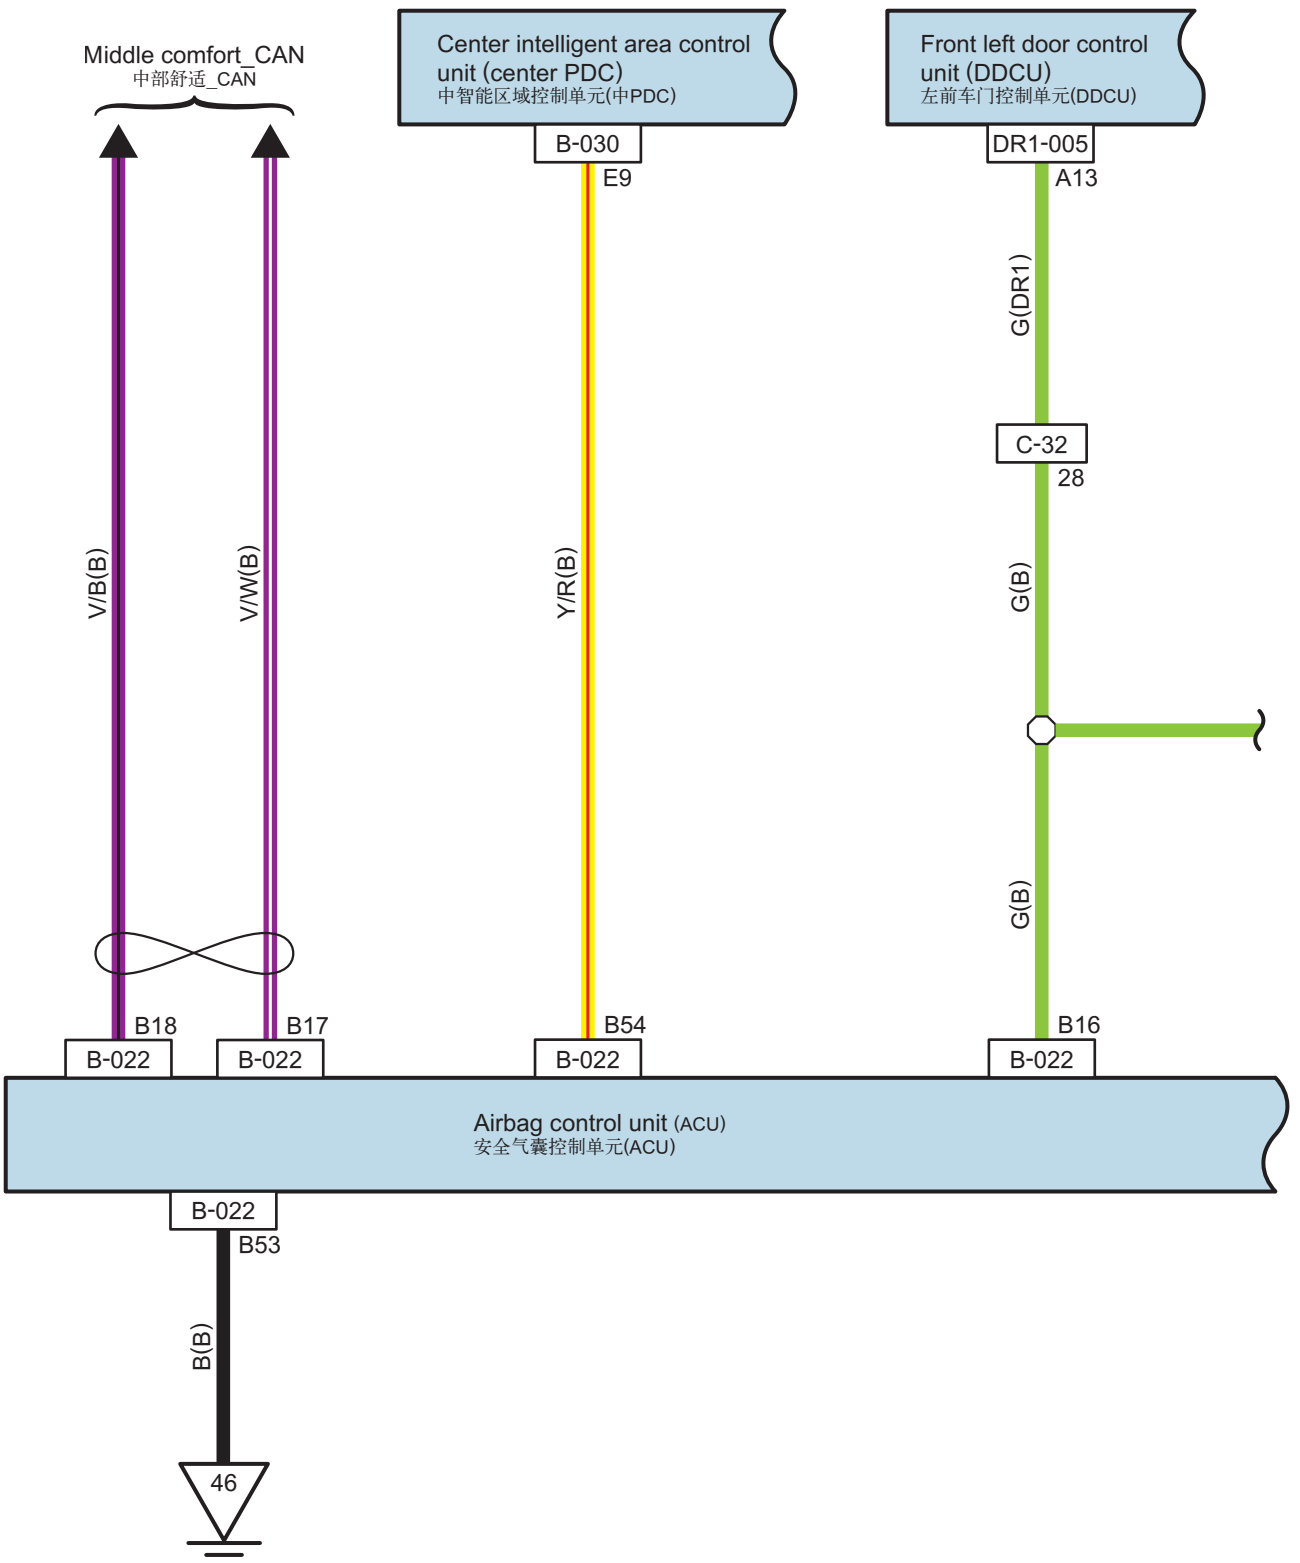

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
AF01 200A
F02
AF-B+
AF-01
F-01
F-02
B+
R
R(B3)
Rear EV_CAN
后部EV_CAN
GR(B)
O(B)
C-35
21
C-35
22
GR(B3)
O(B3)
GR(B3)
O(B3)
B1
B3-002
A4
B3-001
A3
F-023
Energy conversion and distribution unit
能量转换与分配单元
DCDC负极
B3-001
A2
B3-001
A32
B
B(B3)
B(B3)
B(B3)
77
71

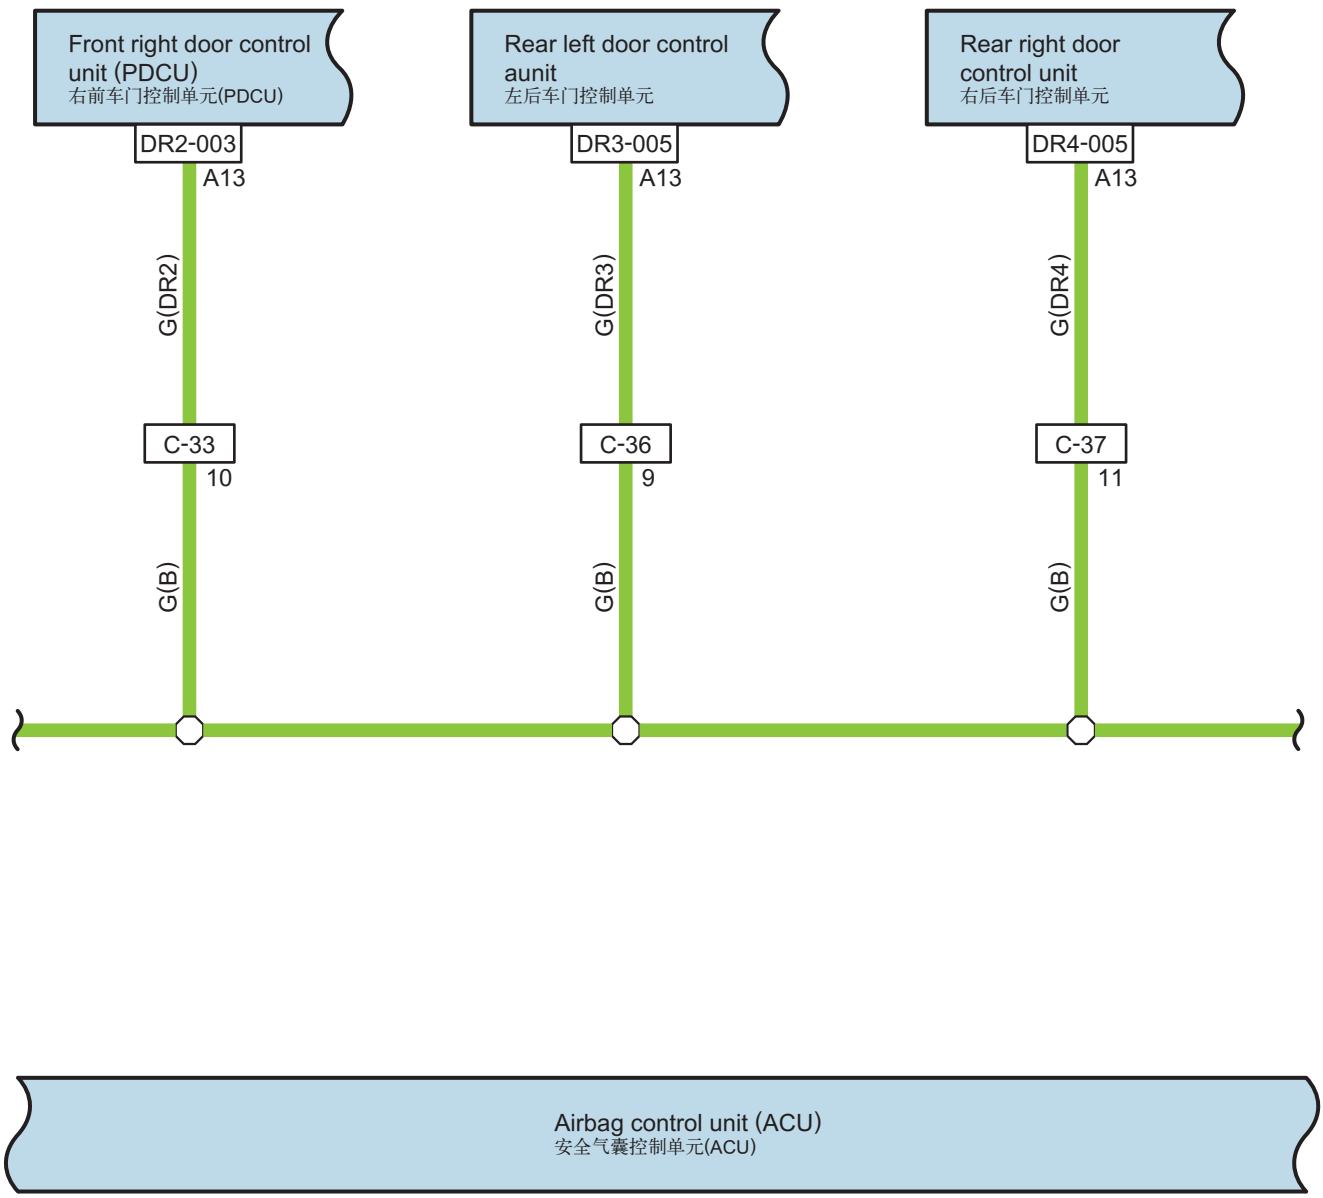

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-072
J14
B-071
I4
B-071
I7
B-071
I3
R(B)
W/L(B)
L/R(B)
Y/G(B)
C-35
13
C-35
16
GR(B3)
O(B3)
R(B3)
W/L(B3)
A26
A25
A30
A1
B3-001
B3-001
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

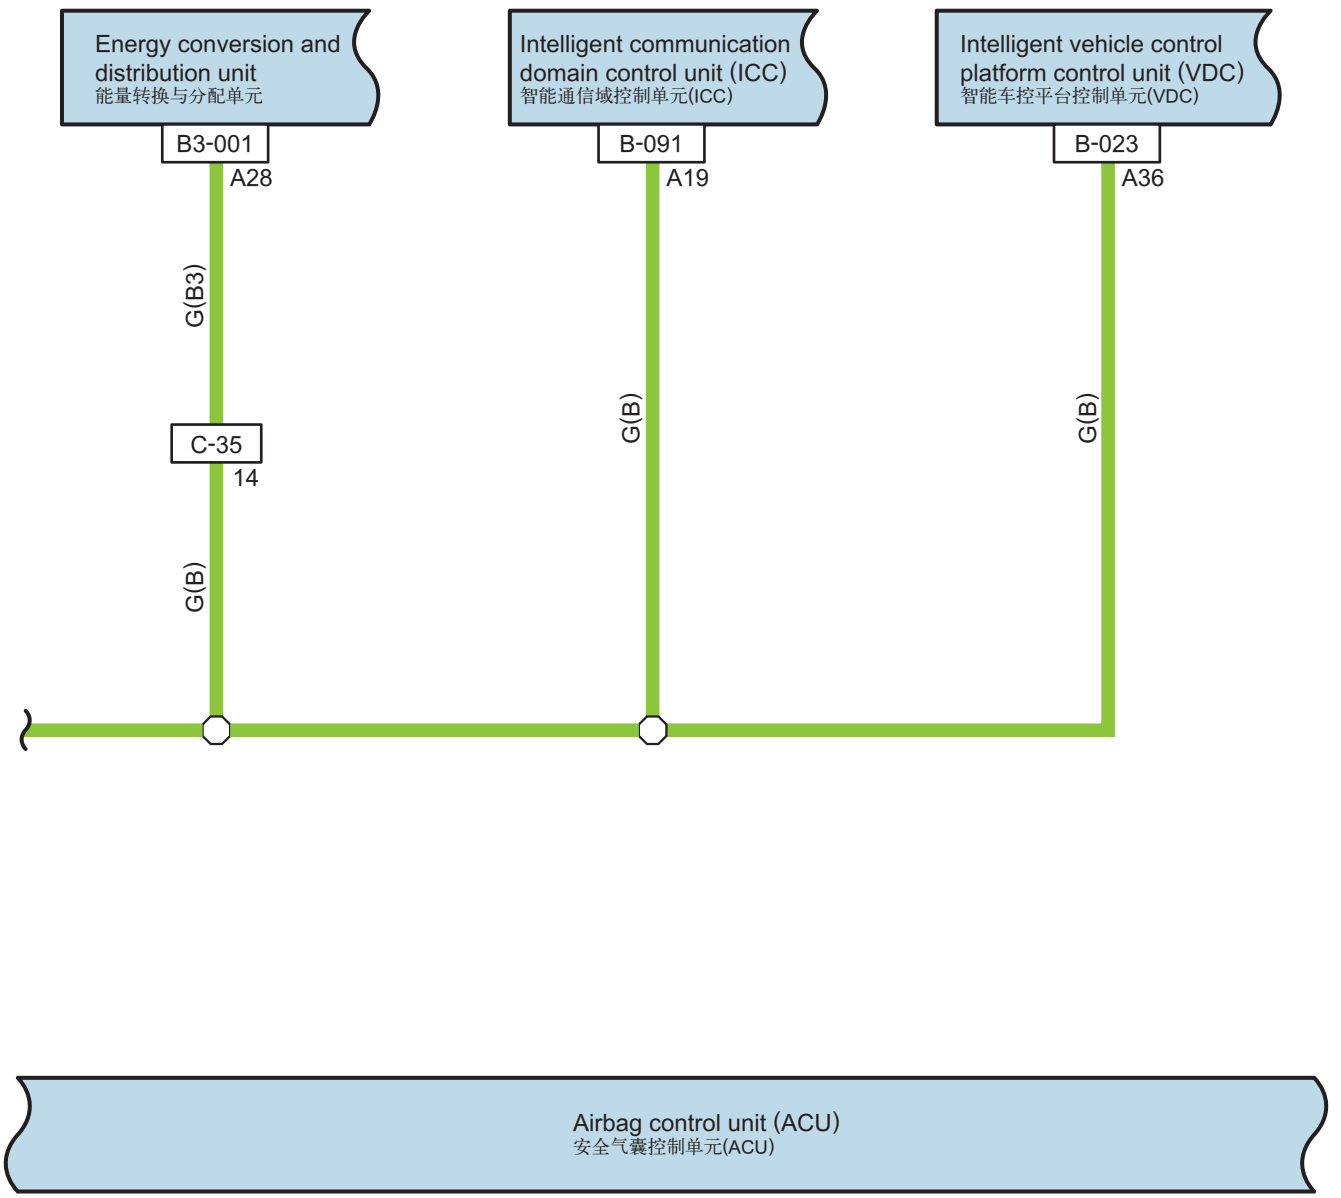

Low voltage service SW
低压维修开关
B-132
3
B-132
1
B-132
5
B-132
2
B-132
6
B-132
4
L/R(B)
L(B)
B/R(B)
B/W(B)
G/B(B)
L/R(B)
C-35
15
C-35
32
C-35
33
C-35
34
C-35
35
L/R(B3)
L(B3)
B/R(B3)
B/W(B3)
G/B(B3)
A31
A11
A13
A8
A7
B3-001
B3-001
B3-001
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

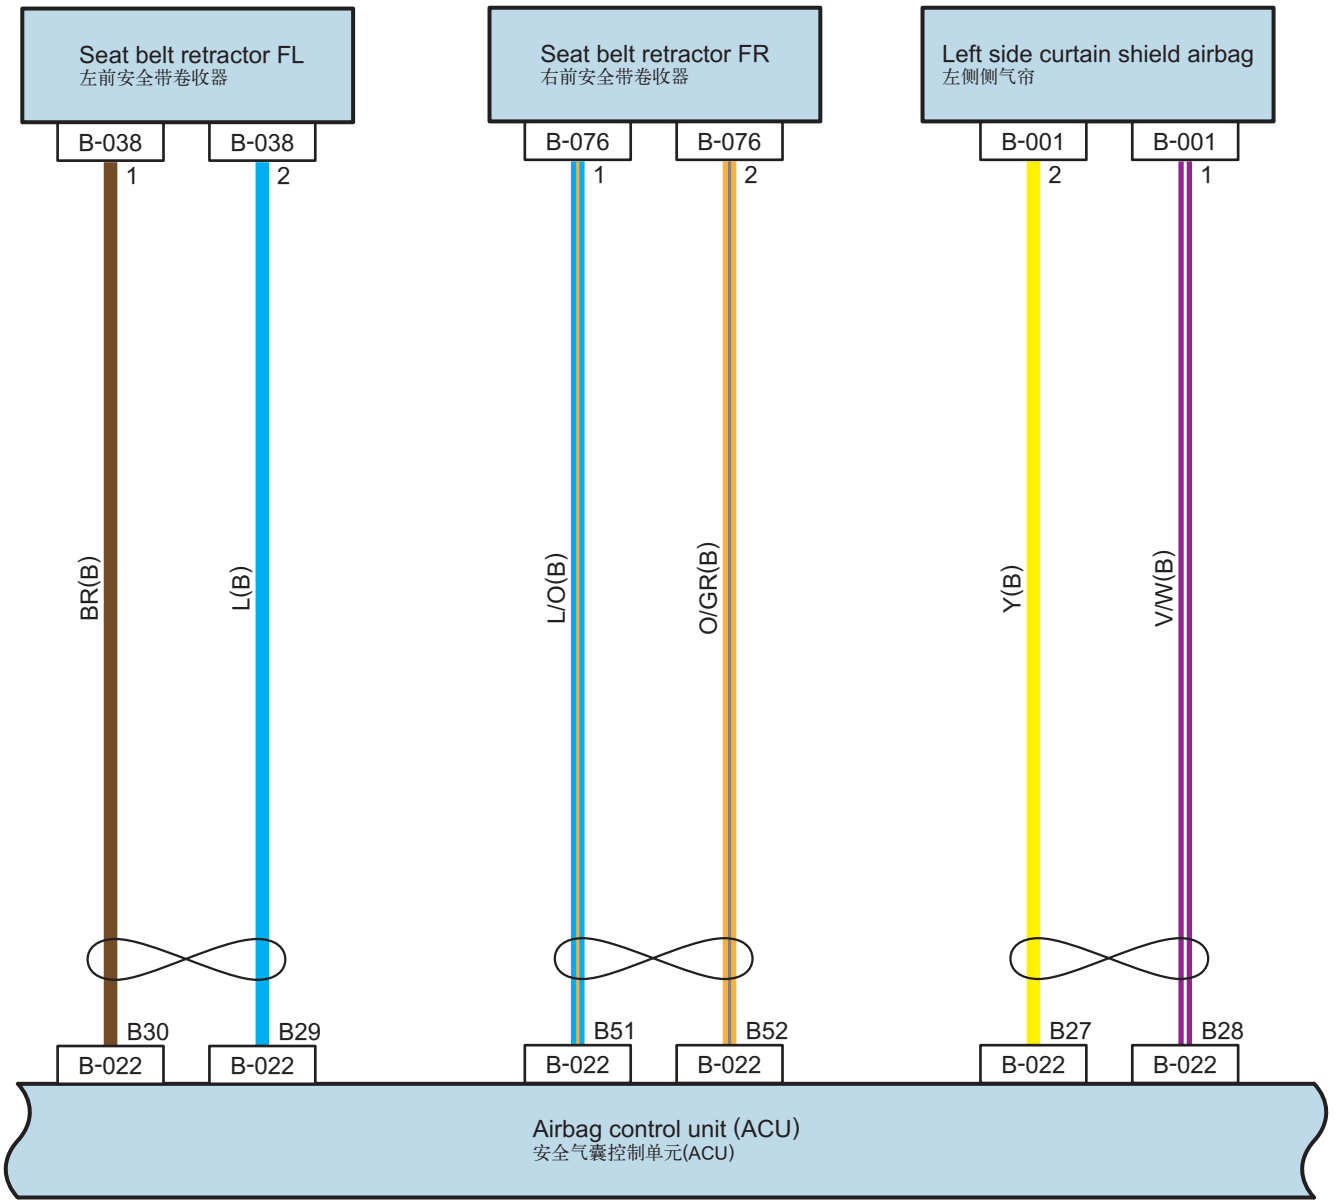

Airbag control unit (ACU)
安全气囊控制单元(ACU)
AC/DC charging port
交直流充电口
B-022
B16
B-107
8
B-107
9
B-107
11
B-107
1
B-107
2
G(B)
L/Y(B)
BR/B(B)
Y/G(B)
W(B)
V(B)
C-35
14
C-35
9
C-35
10
C-35
17
G(B3)
L/Y(B3)
BR/B(B3)
Y/G(B3)
A28
A17
A18
A5
B3-001
B3-001
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

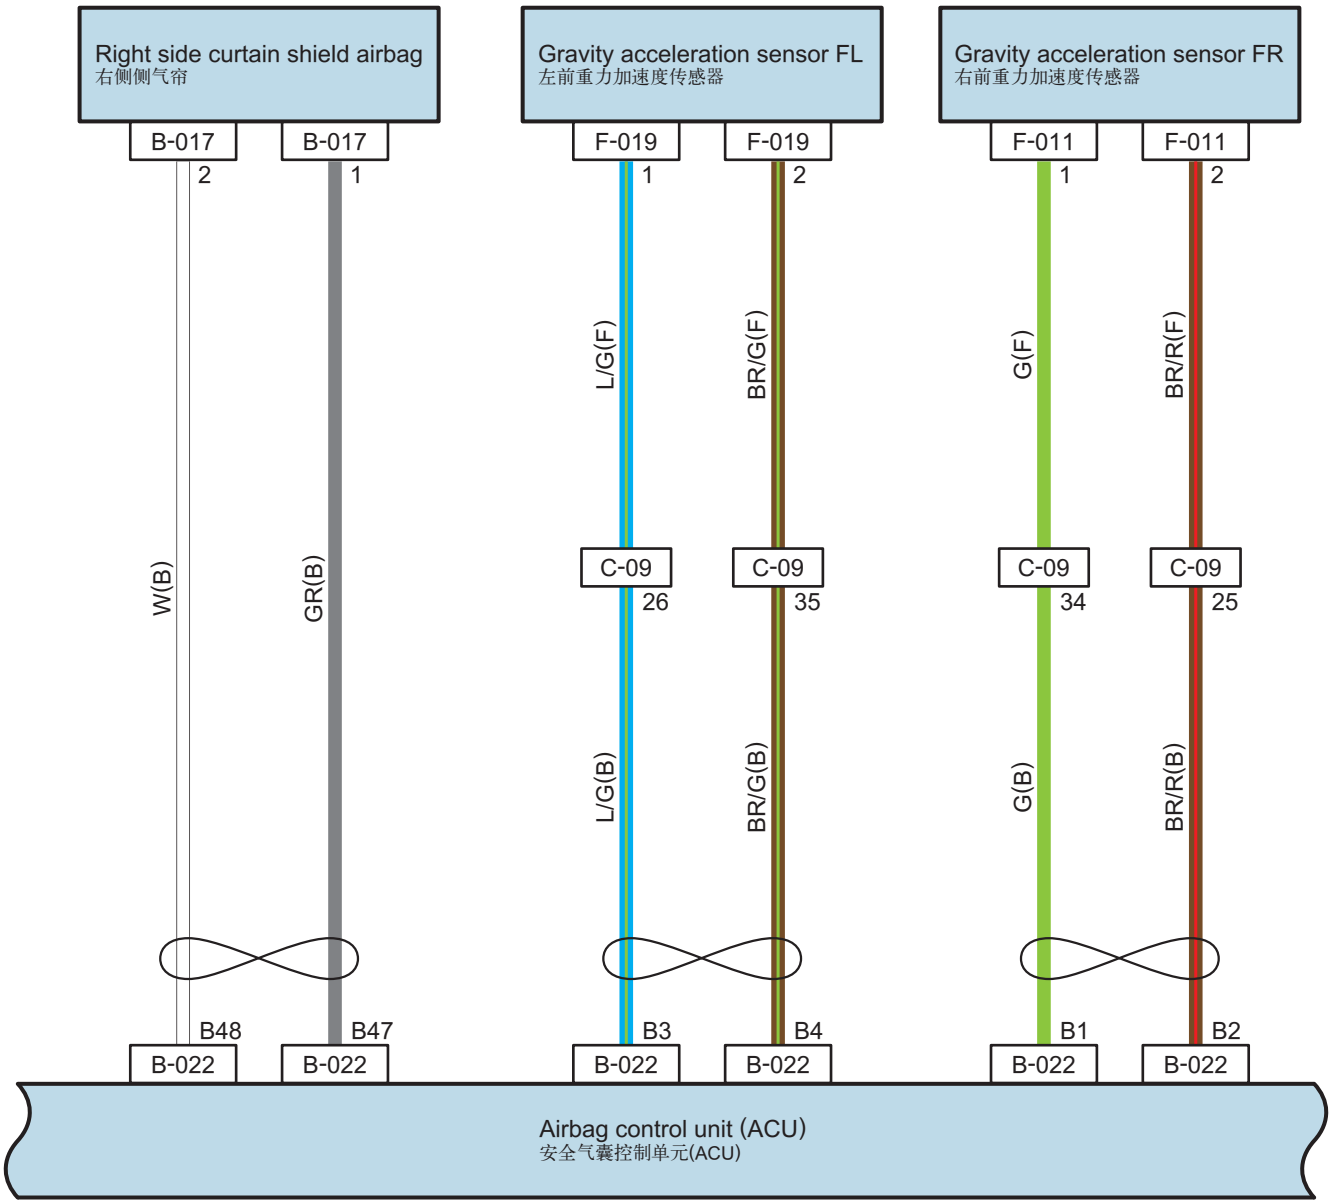

Charging controller
充电控制器
Diagnostic interface 4
诊断接口4
B-064
28
B-064
19
B-064
11
B-118
7
B-118
15
B-118
2
B-118
10
Y/G(B)
W(B)
V(B)
W(B)
V(B)
G/W(B)
BR/Y(B)
W(B)
V(B)
C-35
19
C-35
20
C-35
11
C-35
12
W(B3)
V(B3)
G/W(B3)
BR/Y(B3)
A10
A14
A9
A6
B3-001
B3-001
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元

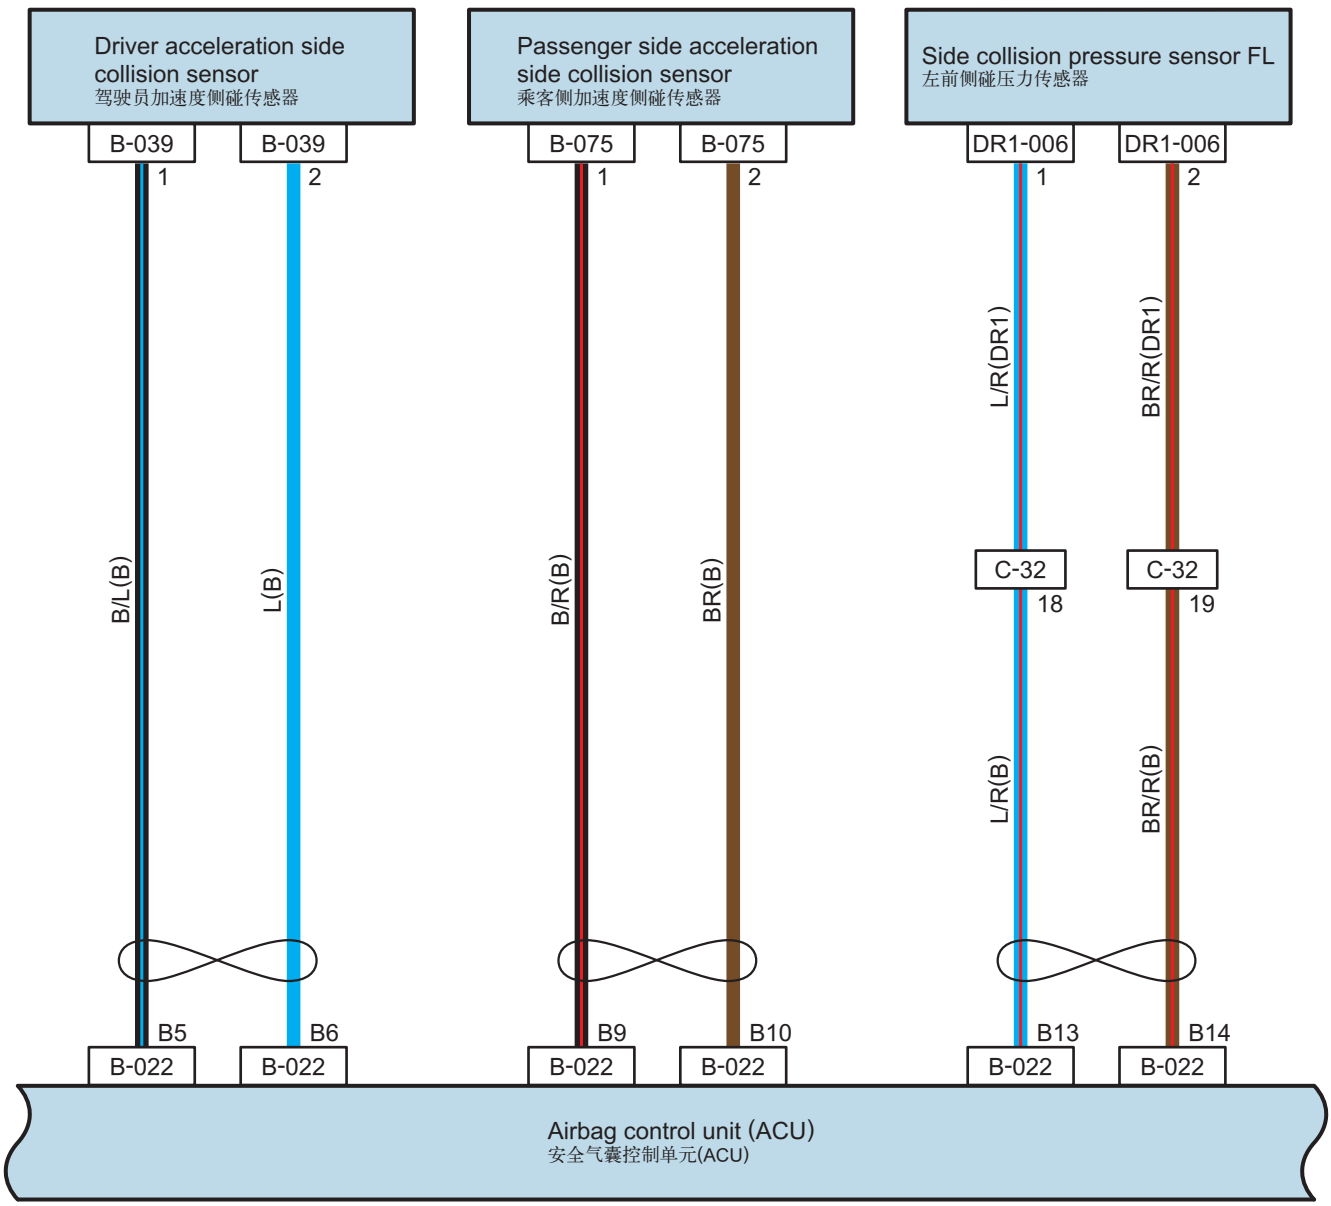

Middle comfort_CAN
中部舒适_CAN
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
Front left door control unit (DDCU)
左前车门控制单元(DDCU)
B-030
E9
DR1-005
A13
G(DR1)
C-32
28
G(B)
V/B(B)
V/W(B)
Y/R(B)
G(B)
B18
B17
B54
B16
B-022
B-022
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B53
B(B)
46

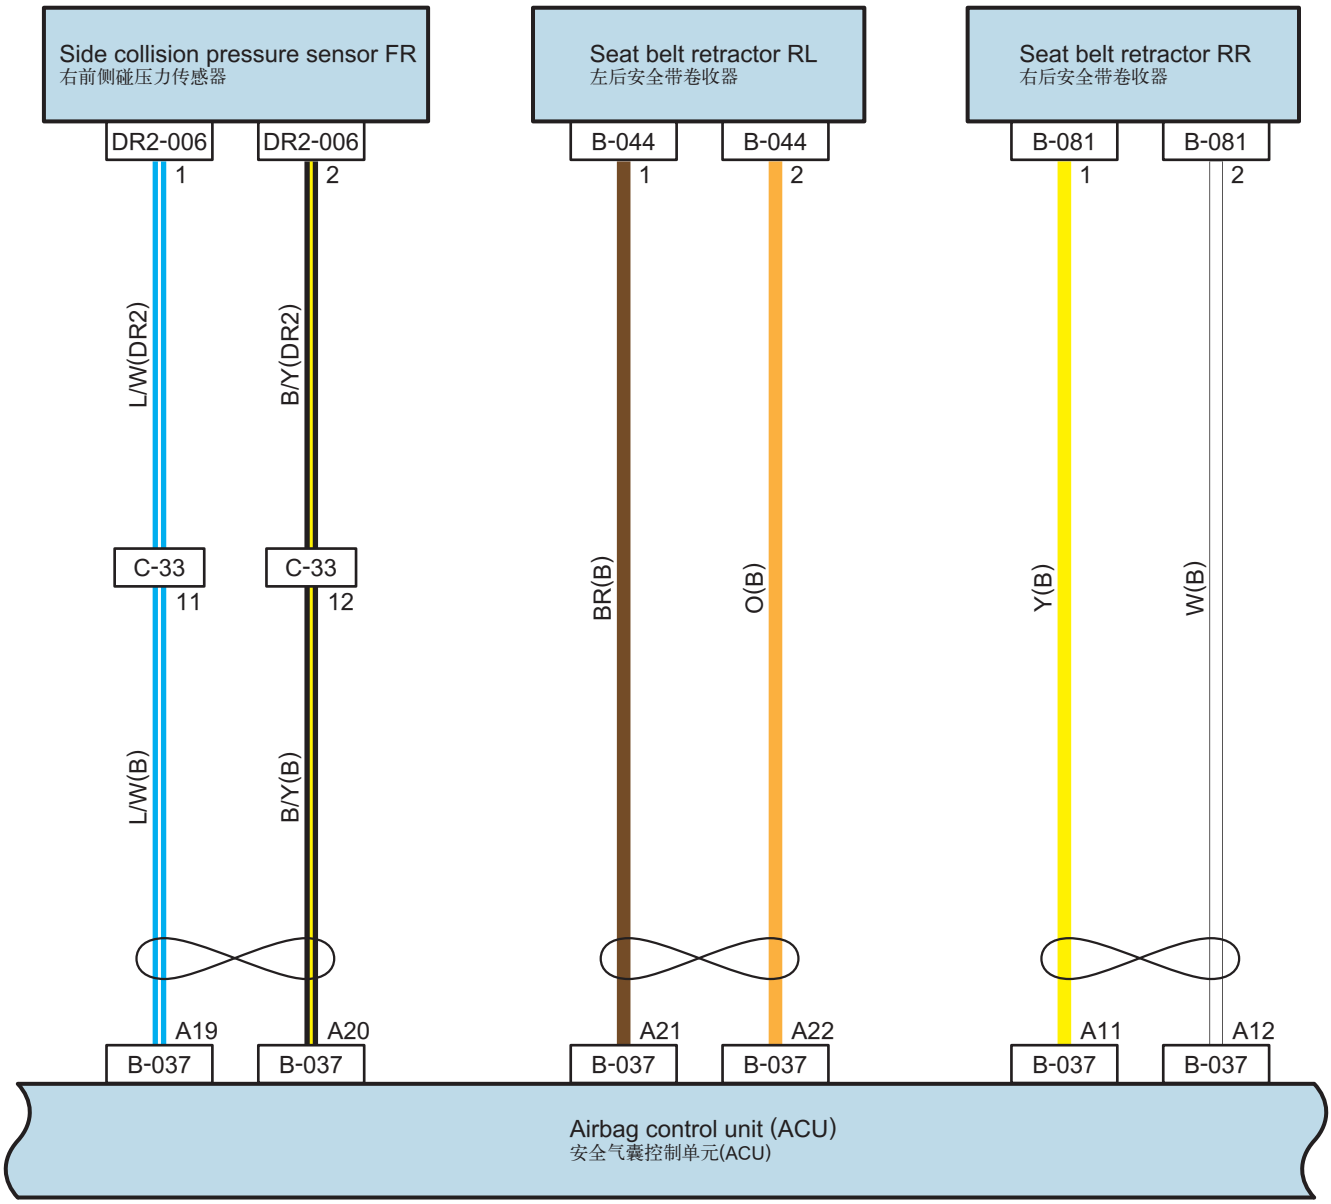

Front right door control unit (PDCU)
右前车门控制单元(PDCU)
DR2-003
A13
G(DR2)
C-33
10
G(B)
Rear left door control aunit
左后车门控制单元
DR3-005
A13
G(DR3)
C-36
9
G(B)
Rear right door control unit
右后车门控制单元
DR4-005
A13
G(DR4)
C-37
11
G(B)
Airbag control unit (ACU)
安全气囊控制单元(ACU)

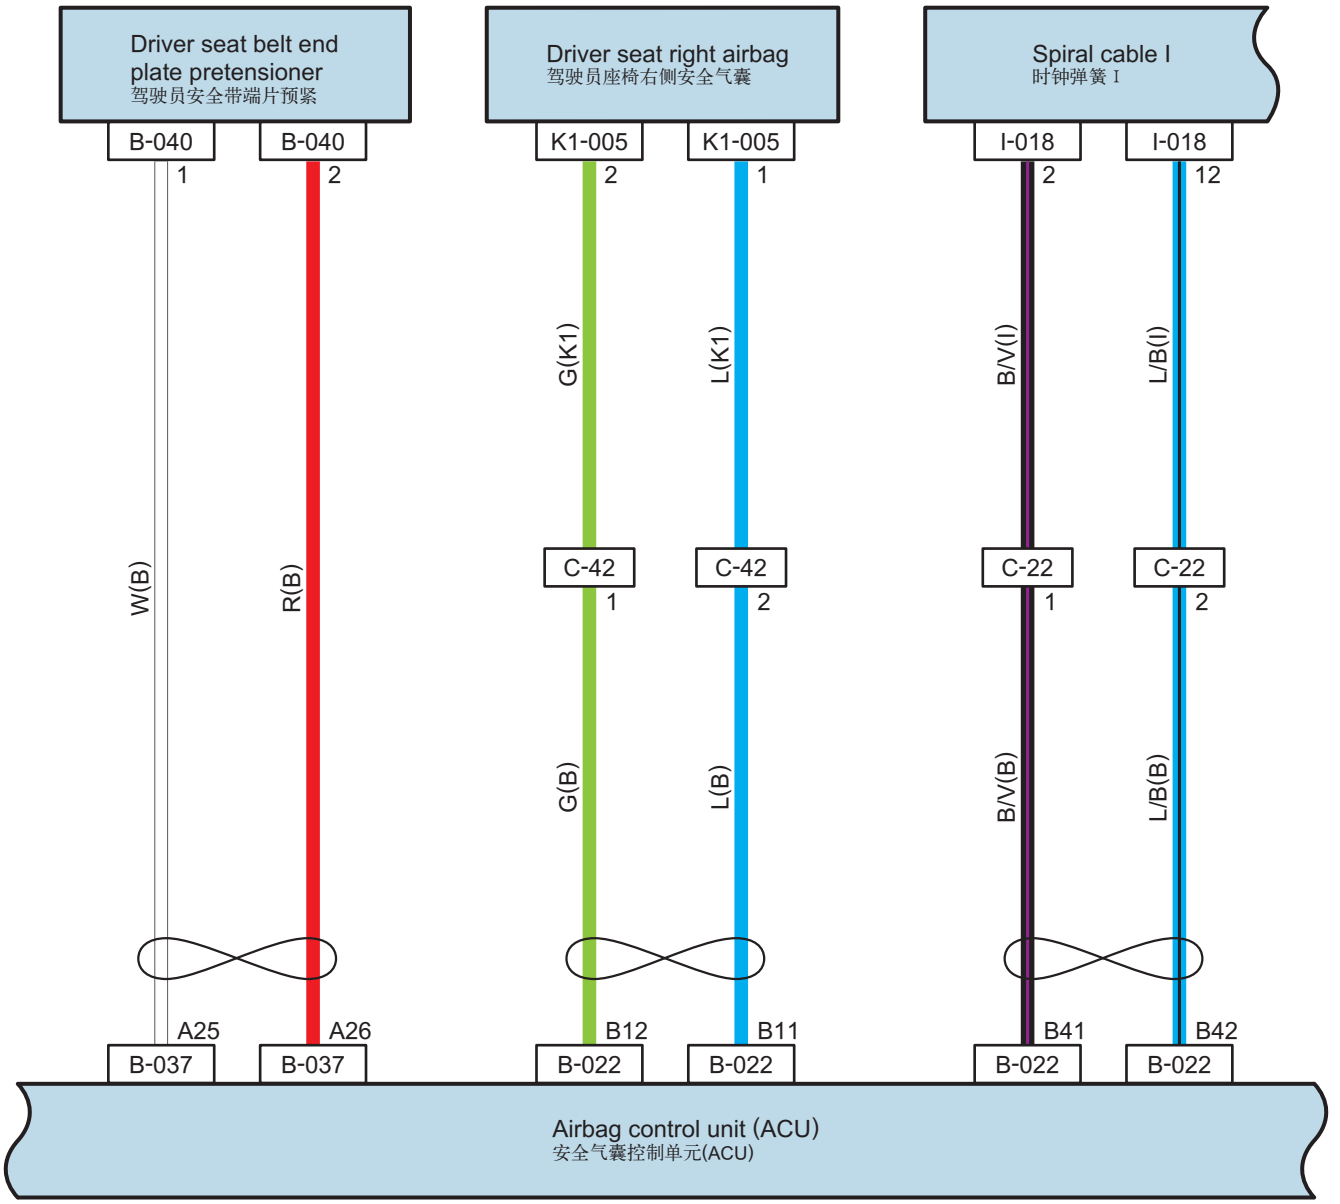

Energy conversion and distribution unit
能量转换与分配单元
B3-001
A28
G(B3)
C-35
14
G(B)
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
B-091
A19
G(B)
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-023
A36
G(B)
Airbag control unit (ACU)
安全气囊控制单元(ACU)

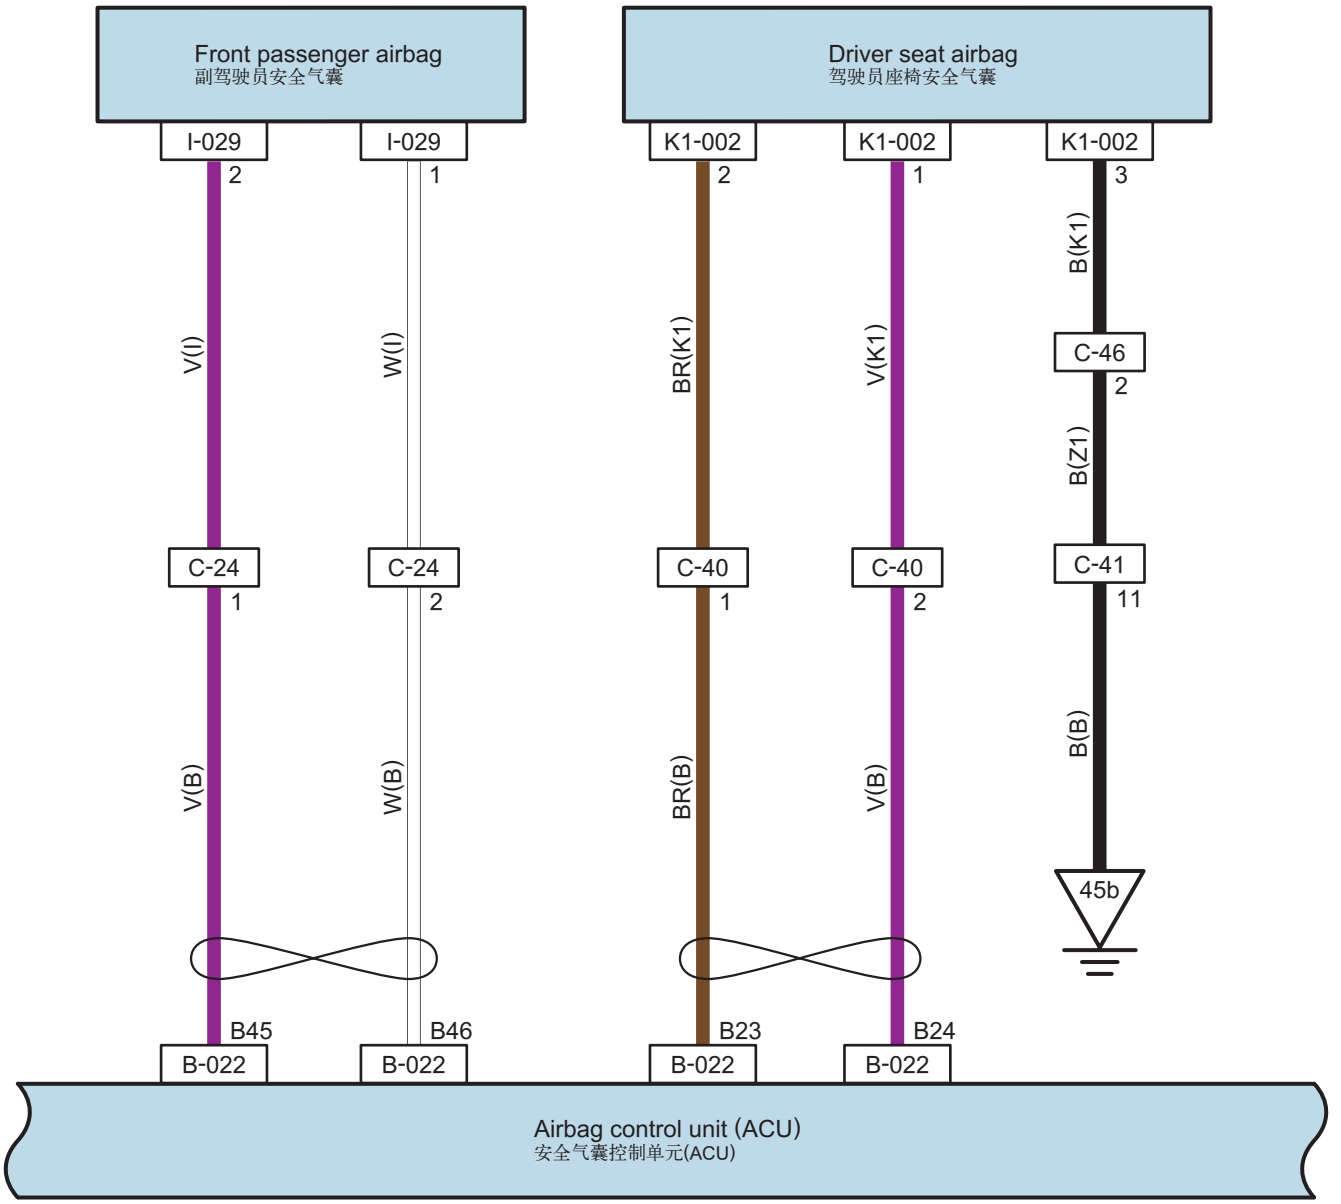

Seat belt retractor FL
左前安全带卷收器
B-038
B-038
1
2
BR(B)
L(B)
B30
B29
B-022
B-022
Seat belt retractor FR
右前安全带卷收器
B-076
B-076
1
2
L/O(B)
O/GR(B)
B51
B52
B-022
B-022
Left side curtain shield airbag
左侧侧气帘
B-001
B-001
2
1
Y(B)
V/W(B)
B27
B28
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

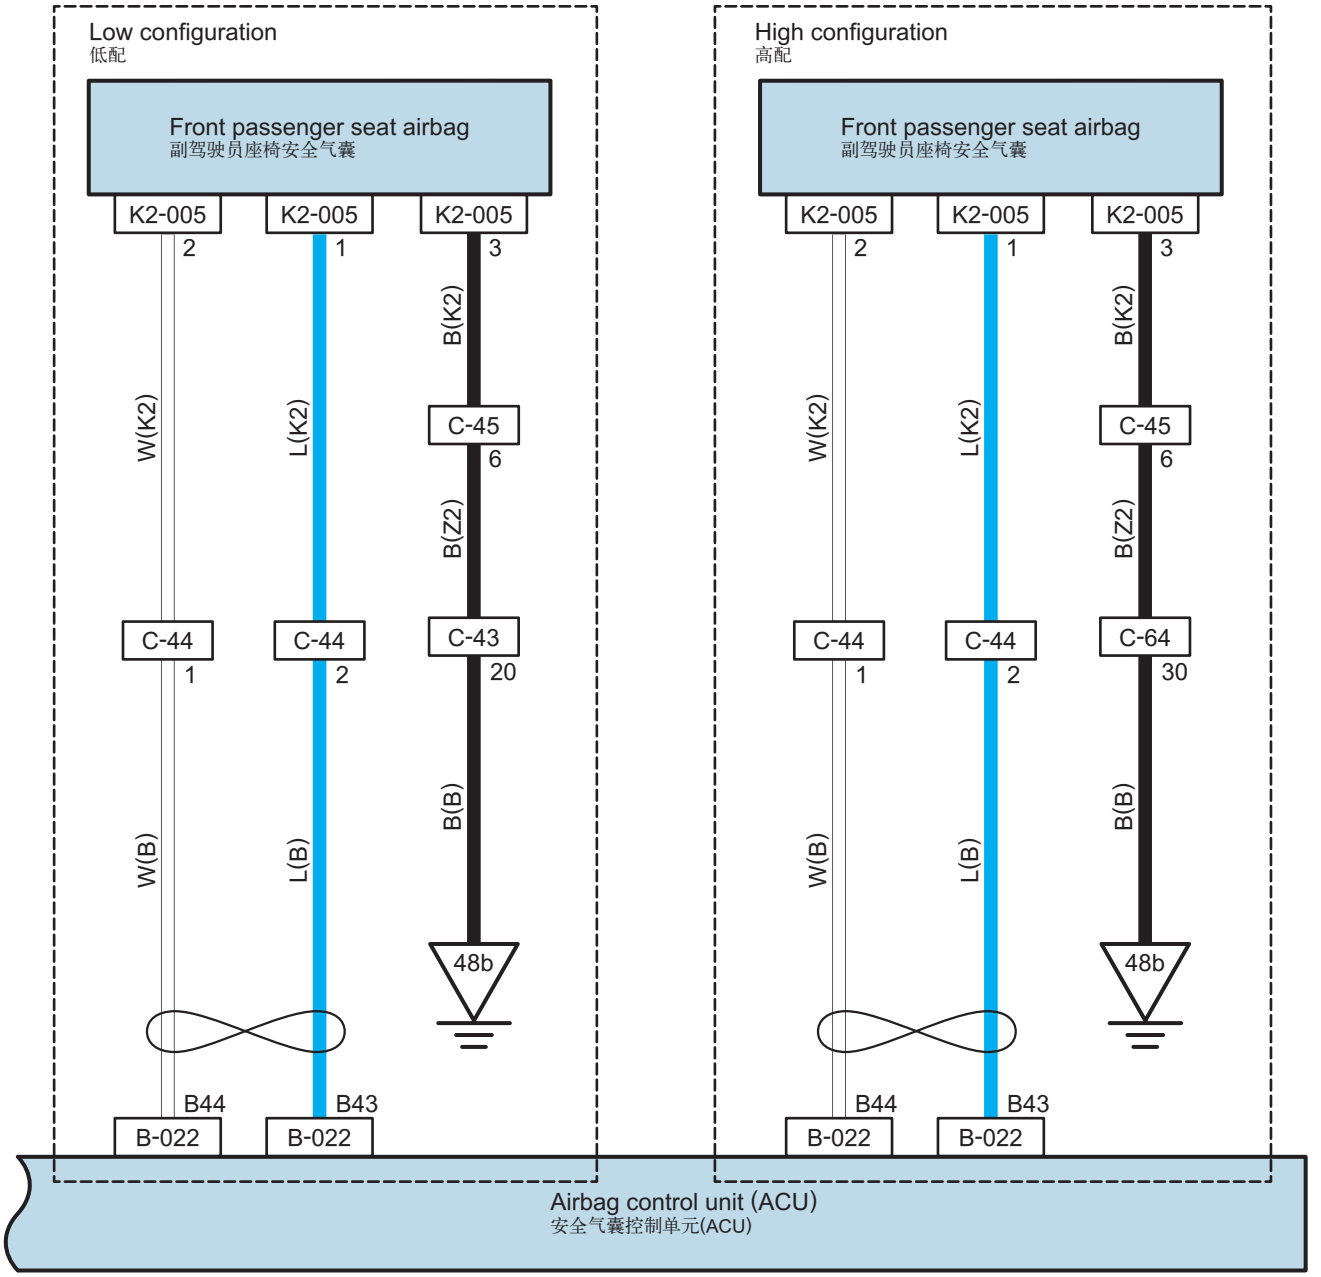

Right side curtain shield airbag
右侧侧气帘
B-017
2
B-017
1
W(B)
GR(B)
B48
B47
B-022
B-022
Gravity acceleration sensor FL
左前重力加速度传感器
F-019
1
F-019
2
L/G(F)
BR/G(F)
C-09
26
C-09
35
L/G(B)
BR/G(B)
B3
B4
B-022
B-022
Gravity acceleration sensor FR
右前重力加速度传感器
F-011
1
F-011
2
G(F)
BR/R(F)
C-09
34
C-09
25
G(B)
BR/R(B)
B1
B2
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

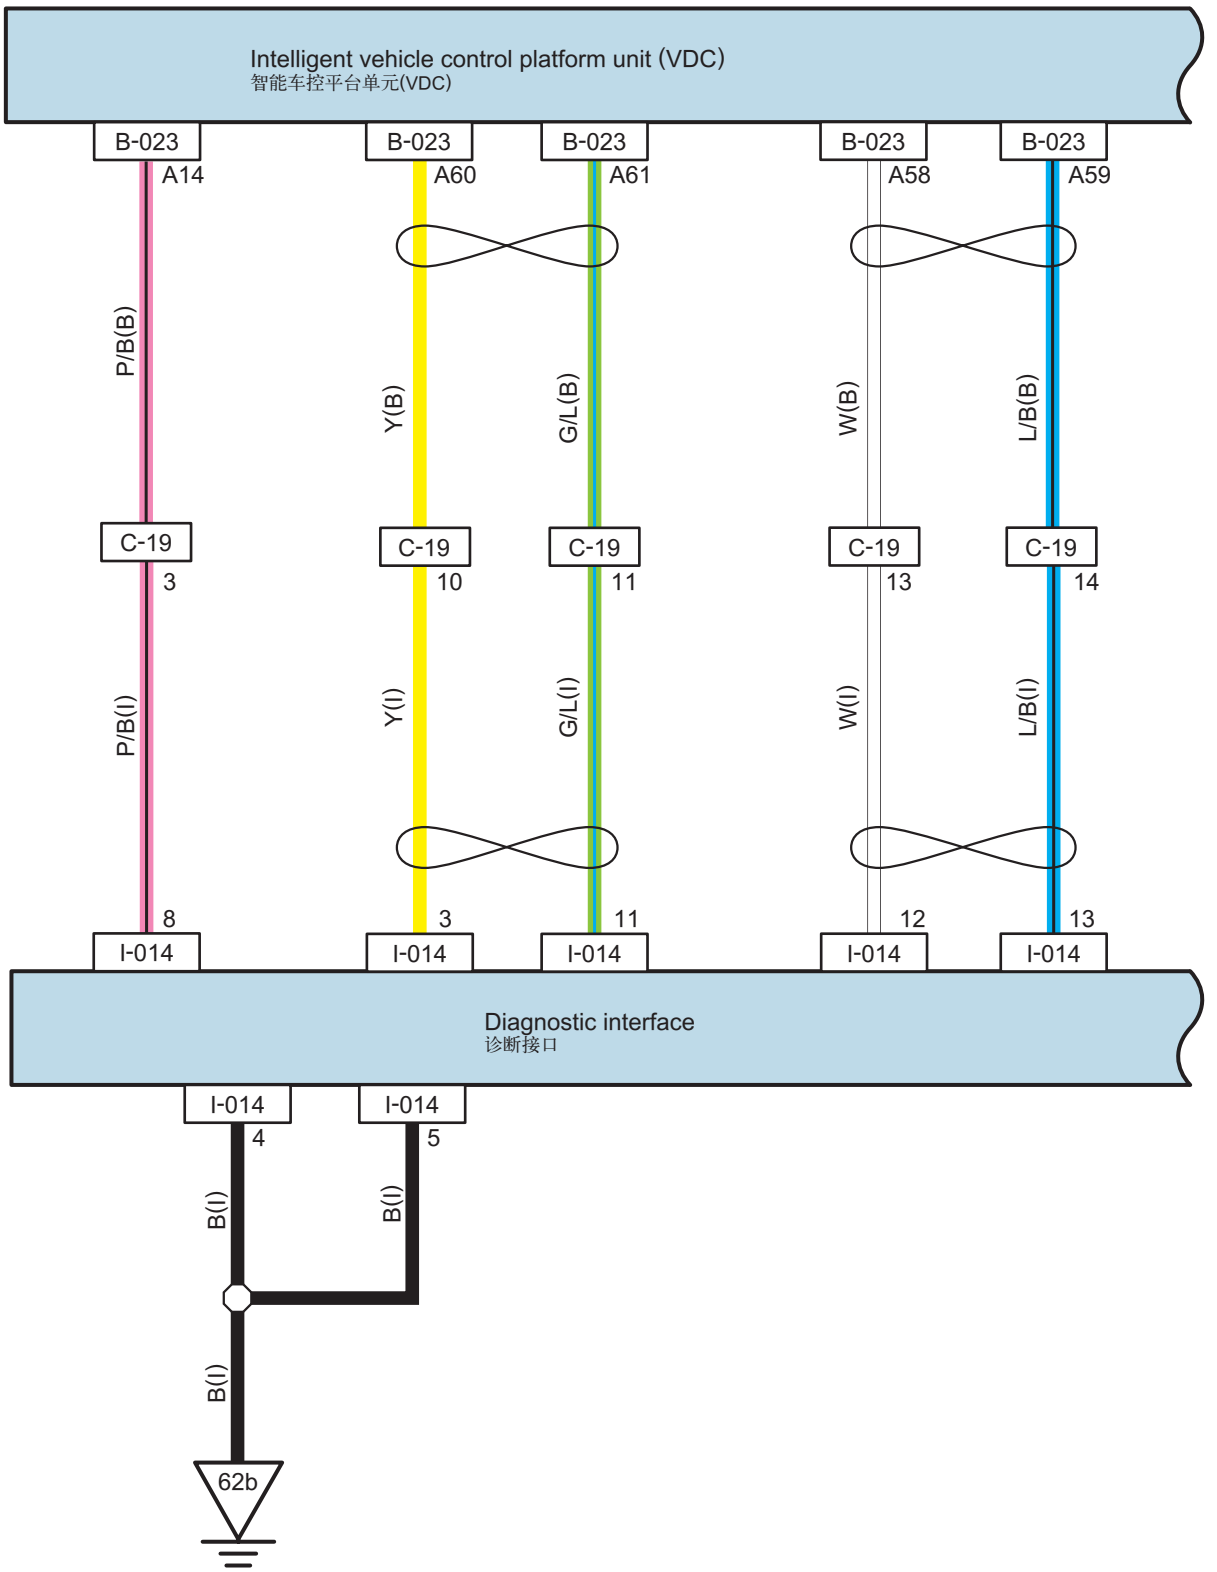

Driver acceleration side collision sensor
驾驶员加速度侧碰传感器
Passenger side acceleration side collision sensor
乘客侧加速度侧碰传感器
Side collision pressure sensor FL
左前侧碰压力传感器
B-039
B-039
1
2
B/L(B)
L(B)
B5
B6
B-022
B-022
B-075
B-075
1
2
B/R(B)
BR(B)
B9
B10
B-022
B-022
DR1-006
DR1-006
1
2
L/R(DR1)
BR/R(DR1)
C-32
C-32
18
19
L/R(B)
BR/R(B)
B13
B14
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

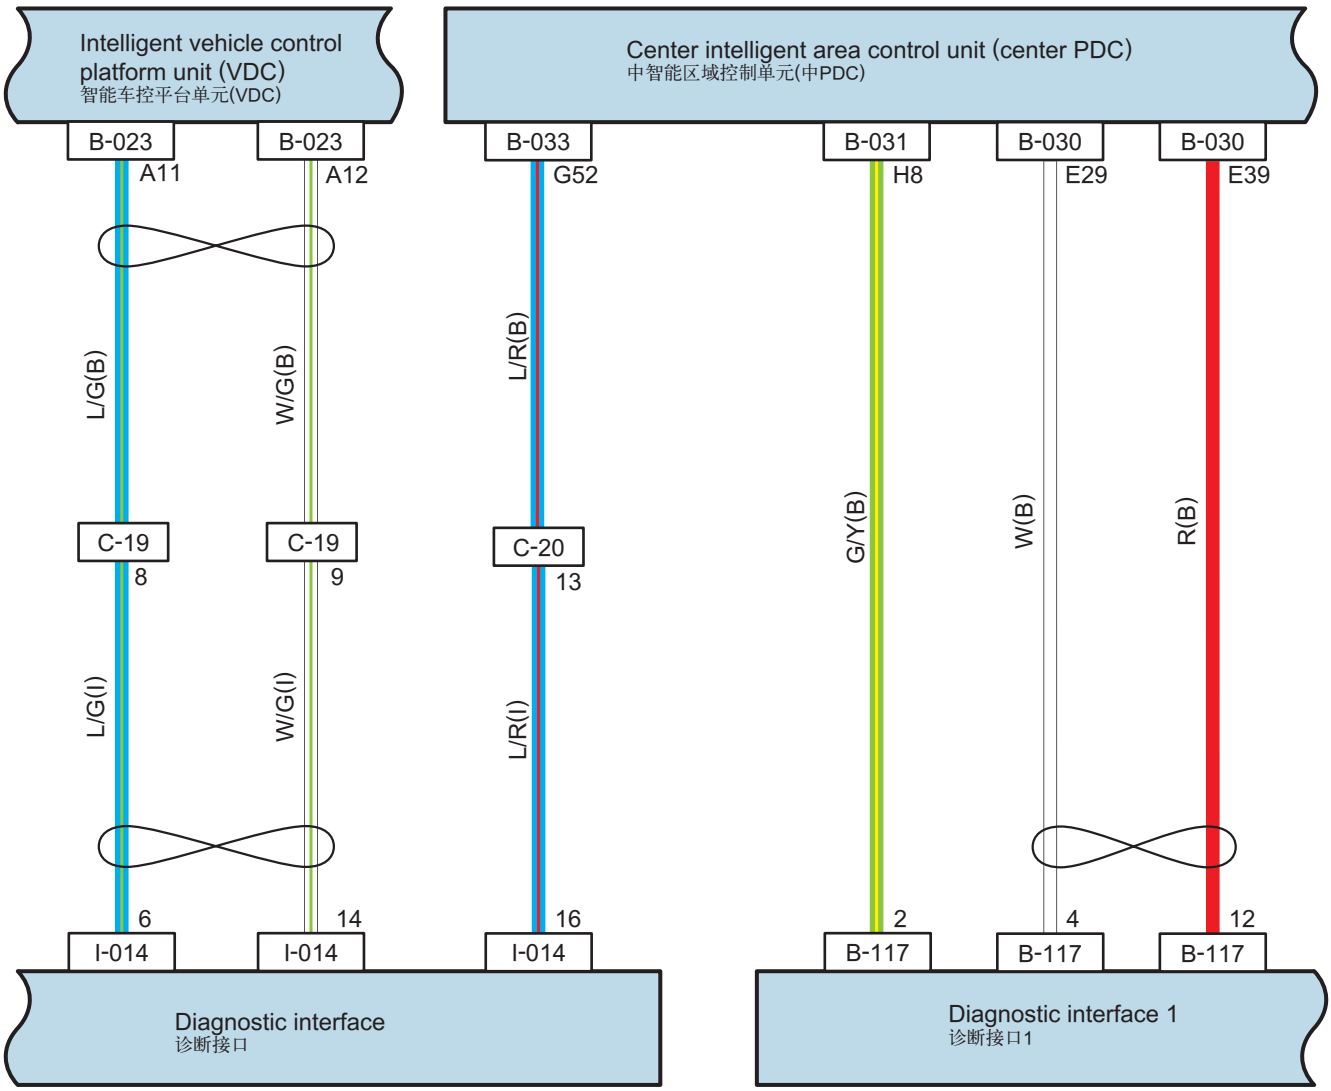

Side collision pressure sensor FR
右前侧碰压力传感器
DR2-006
1
DR2-006
2
L/W(DR2)
B/Y(DR2)
C-33
11
C-33
12
L/W(B)
B/Y(B)
A19
A20
B-037
B-037
Seat belt retractor RL
左后安全带卷收器
B-044
1
B-044
2
BR(B)
O(B)
A21
A22
B-037
B-037
Seat belt retractor RR
右后安全带卷收器
B-081
1
B-081
2
Y(B)
W(B)
A11
A12
B-037
B-037
Airbag control unit (ACU)
安全气囊控制单元(ACU)

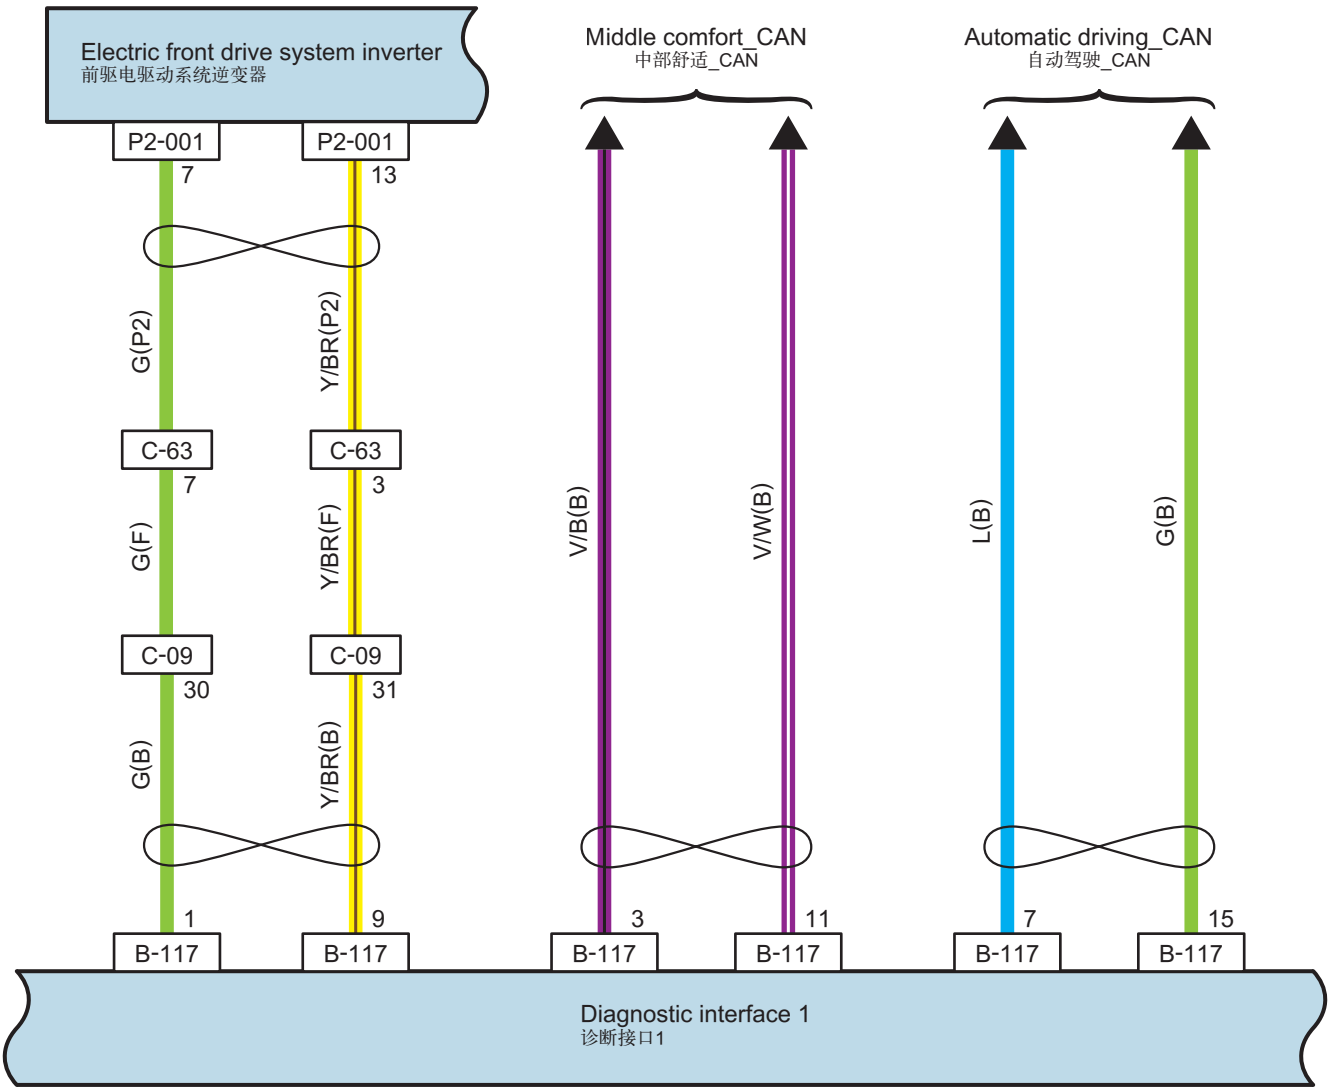

Driver seat belt end plate pretensioner
驾驶员安全带端片预紧
B-040
1
B-040
2
W(B)
R(B)
A25
A26
B-037
B-037
Driver seat right airbag
驾驶员座椅右侧安全气囊
K1-005
2
K1-005
1
G(K1)
L(K1)
C-42
1
C-42
2
G(B)
L(B)
B12
B11
B-022
B-022
Spiral cable I
时钟弹簧 I
I-018
2
I-018
12
B/V(I)
L/B(I)
C-22
1
C-22
2
B/V(B)
L/B(B)
B41
B42
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

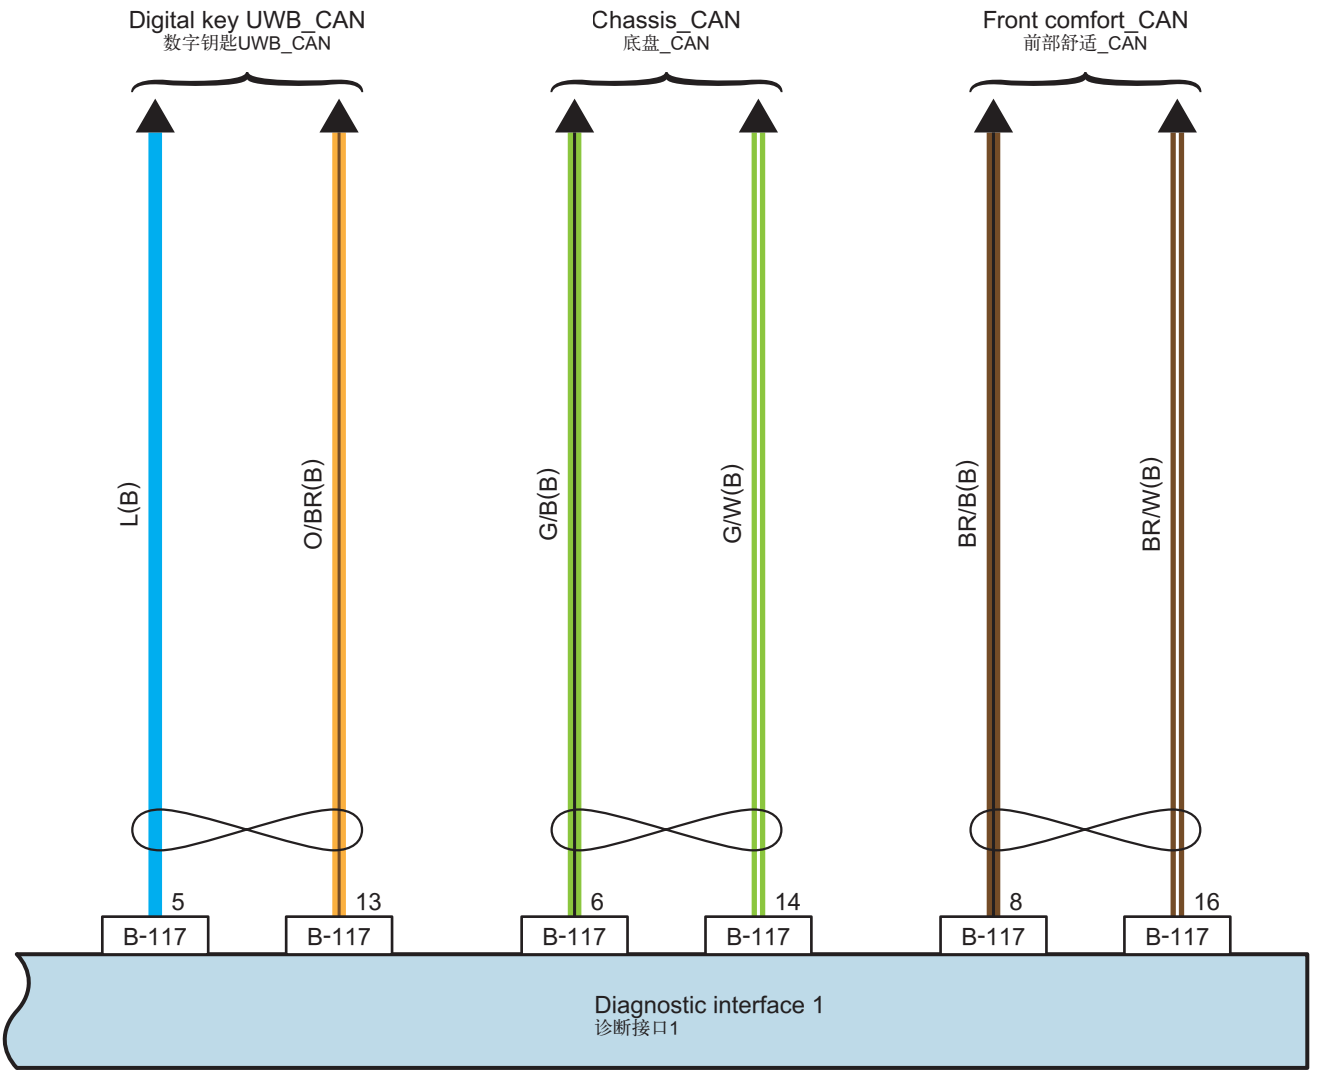

Front passenger airbag
副驾驶员安全气囊
Driver seat airbag
驾驶员座椅安全气囊
I-029
2
I-029
1
K1-002
2
K1-002
1
K1-002
3
V(I)
W(I)
BR(K1)
V(K1)
B(K1)
C-46
2
B(Z1)
C-24
1
C-24
2
C-40
1
C-40
2
C-41
11
V(B)
W(B)
BR(B)
V(B)
B(B)
45b
B45
B46
B23
B24
B-022
B-022
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

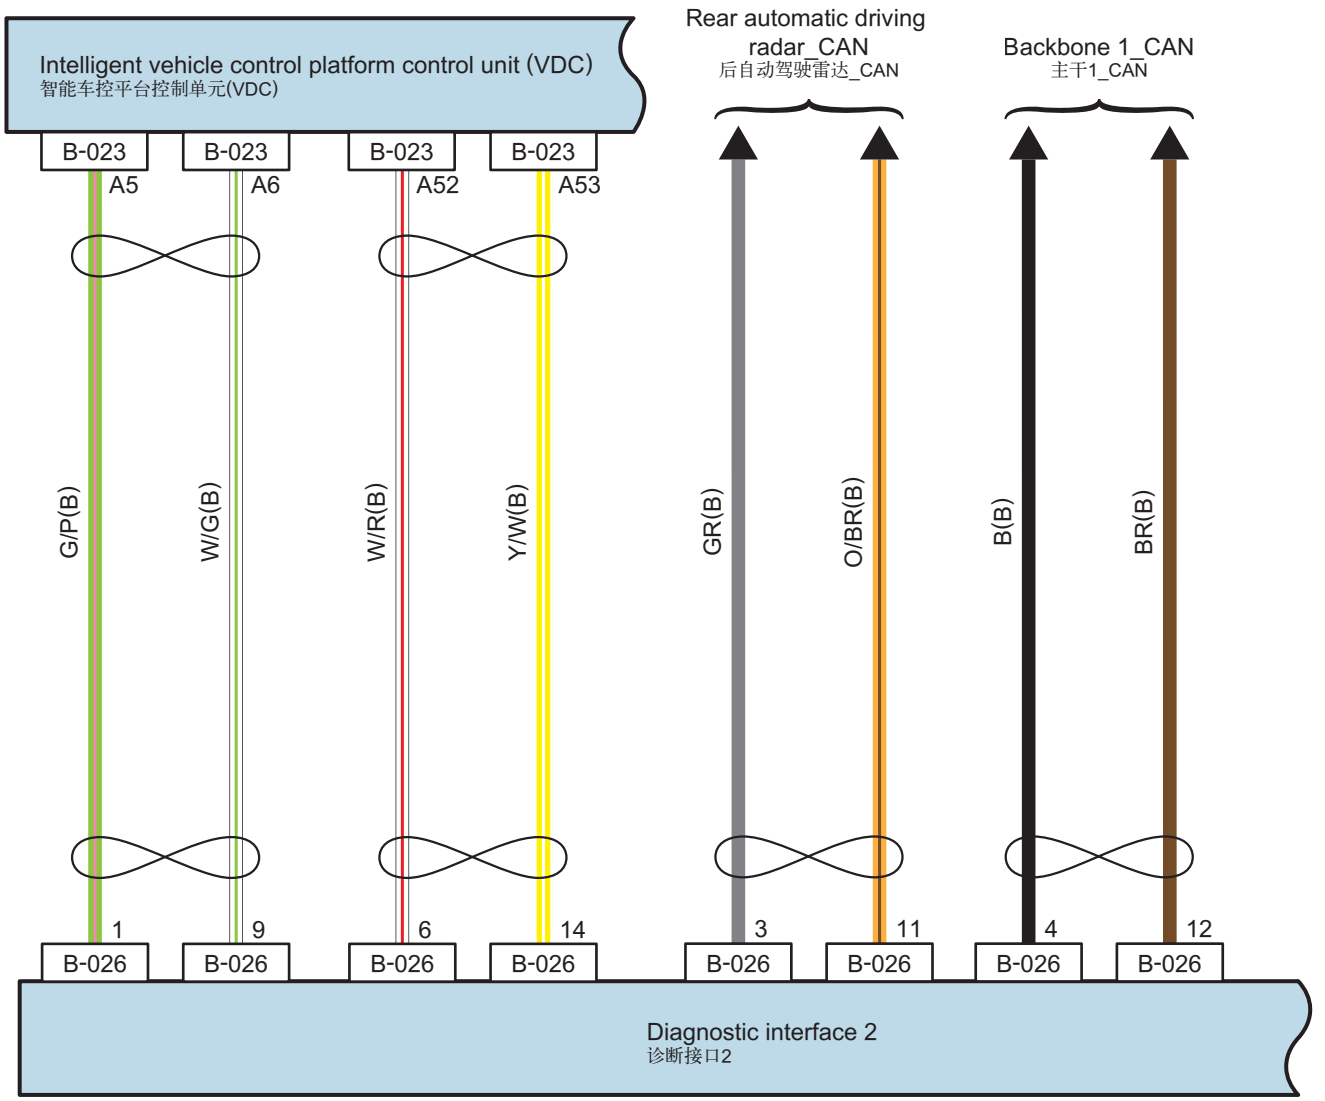

Low configuration
低配
Front passenger seat airbag
副驾驶员座椅安全气囊
K2-005
2
K2-005
1
K2-005
3
W(K2)
L(K2)
B(K2)
C-45
6
B(Z2)
C-44
1
C-44
2
C-43
20
W(B)
L(B)
B(B)
48b
B44
B43
B-022
B-022
High configuration
高配
Front passenger seat airbag
副驾驶员座椅安全气囊
K2-005
2
K2-005
1
K2-005
3
W(K2)
L(K2)
B(K2)
C-45
6
B(Z2)
C-44
1
C-44
2
C-64
30
W(B)
L(B)
B(B)
48b
B44
B43
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

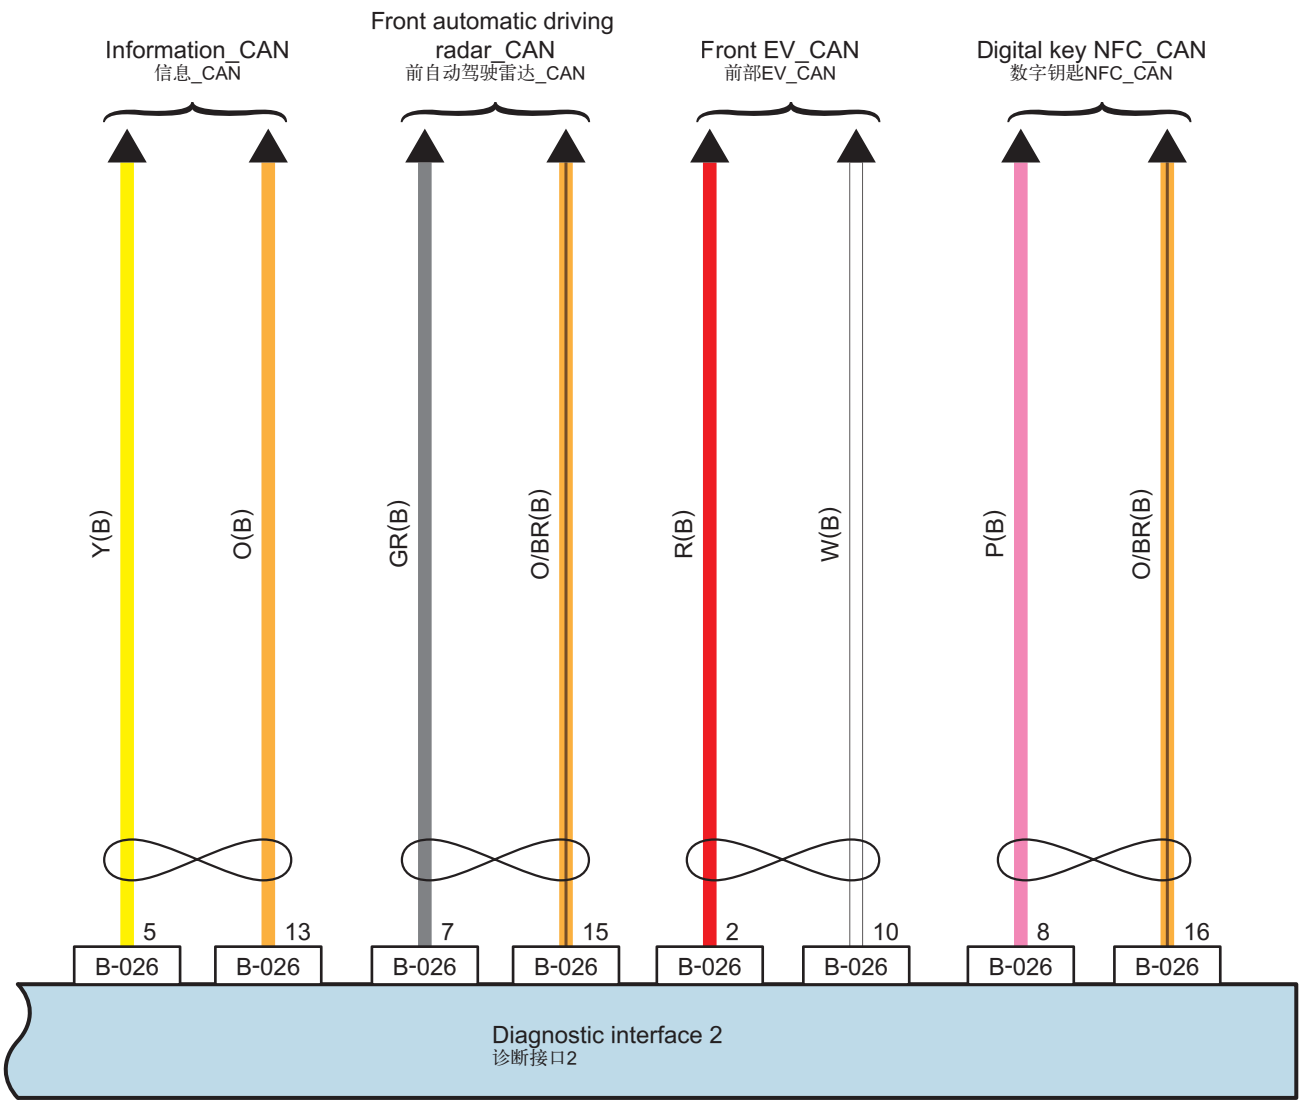

Intelligent vehicle control platform unit (VDC)
智能车控平台单元(VDC)
B-023
A14
B-023
A60
B-023
A61
B-023
A58
B-023
A59
P/B(B)
Y(B)
G/L(B)
W(B)
L/B(B)
C-19
3
C-19
10
C-19
11
C-19
13
C-19
14
P/B(I)
Y(I)
G/L(I)
W(I)
L/B(I)
8
3
11
12
13
I-014
I-014
I-014
I-014
I-014
Diagnostic interface
诊断接口
I-014
4
I-014
5
B(I)
B(I)
B(I)
62b

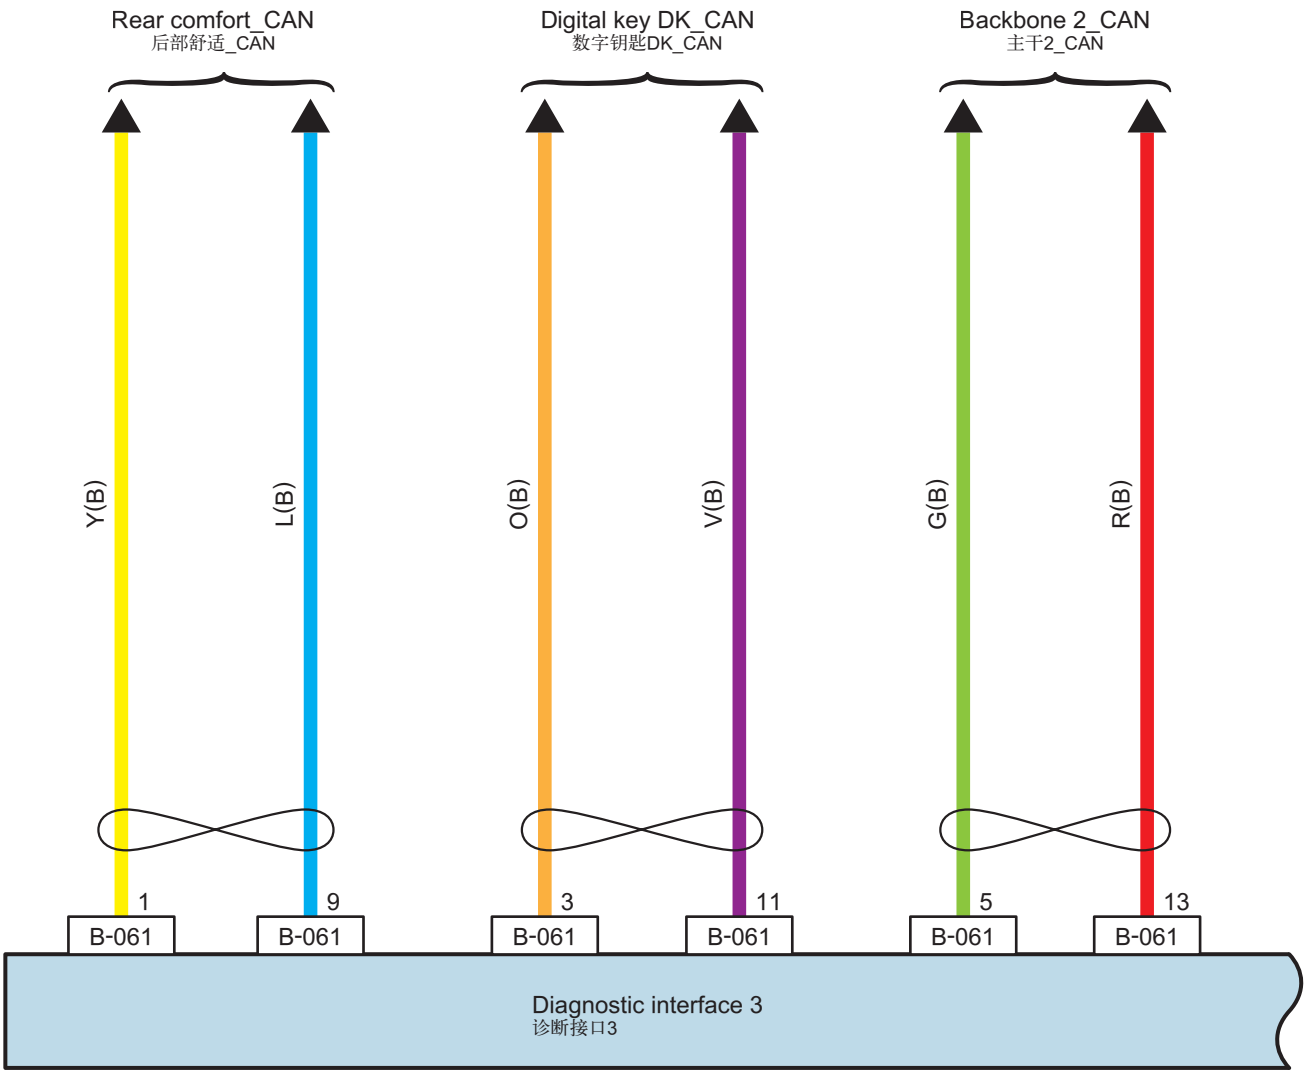

Intelligent vehicle control platform unit (VDC)
智能车控平台单元(VDC)
B-023
A11
B-023
A12
L/G(B)
W/G(B)
C-19
8
C-19
9
L/G(I)
W/G(I)
6
14
I-014
I-014
Diagnostic interface
诊断接口
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-033
G52
L/R(B)
C-20
13
L/R(I)
16
I-014
B-031
H8
B-030
E29
B-030
E39
G/Y(B)
W(B)
R(B)
2
4
12
B-117
B-117
B-117
Diagnostic interface 1
诊断接口1

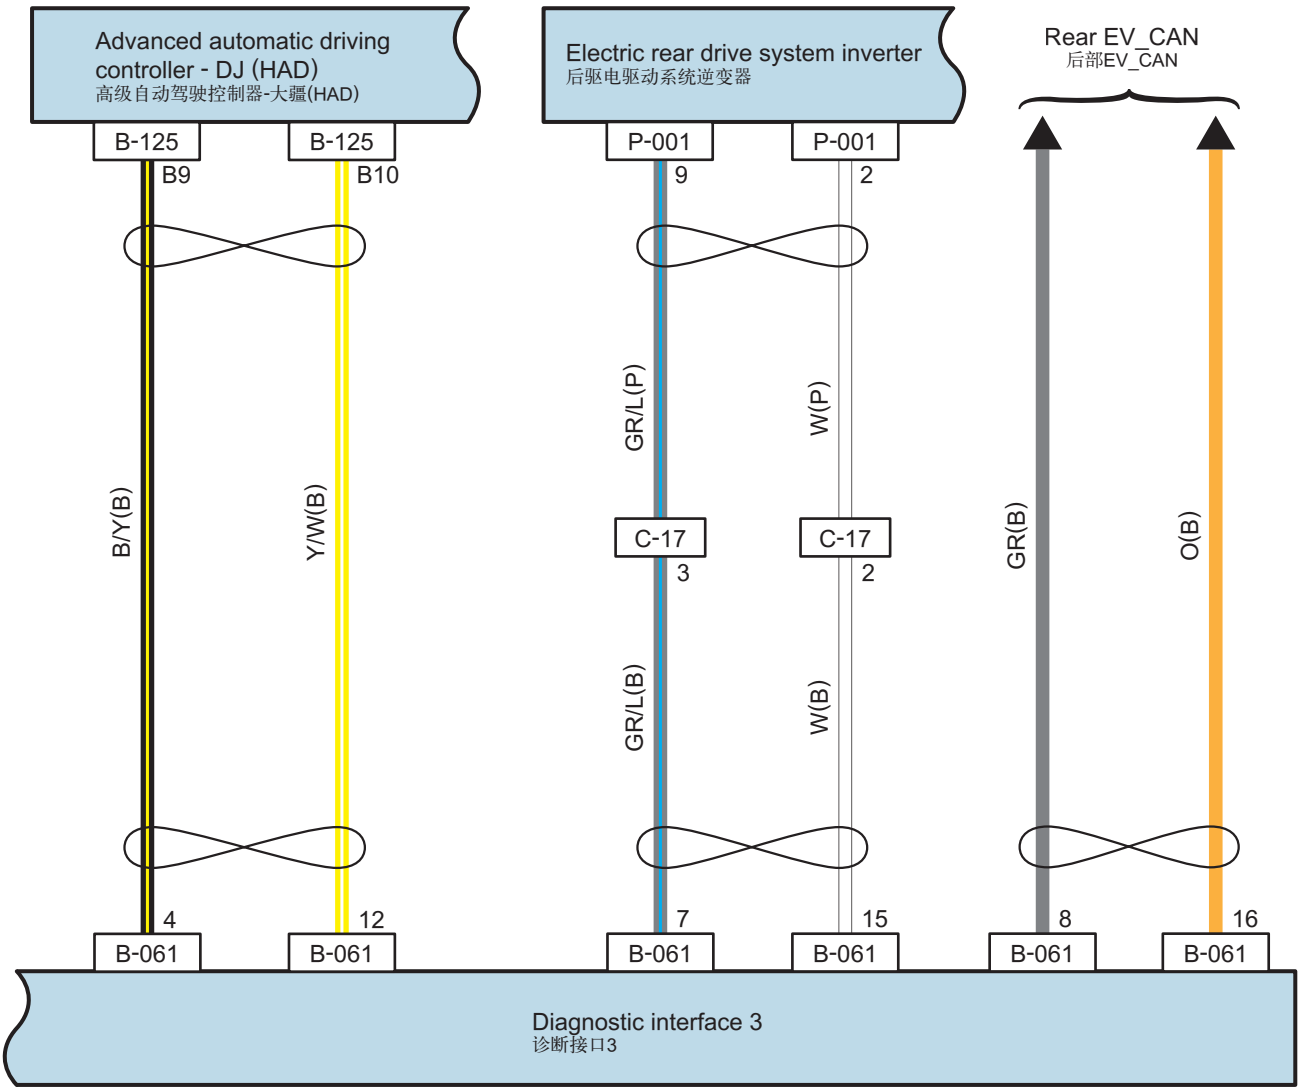

Electric front drive system inverter
前驱电驱动系统逆变器
P2-001
7
P2-001
13
G(P2)
Y/BR(P2)
C-63
7
C-63
3
G(F)
Y/BR(F)
C-09
30
C-09
31
G(B)
Y/BR(B)
1
9
B-117
B-117
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
3
11
B-117
B-117
Automatic driving_CAN
自动驾驶_CAN
L(B)
G(B)
7
15
B-117
B-117
Diagnostic interface 1
诊断接口1

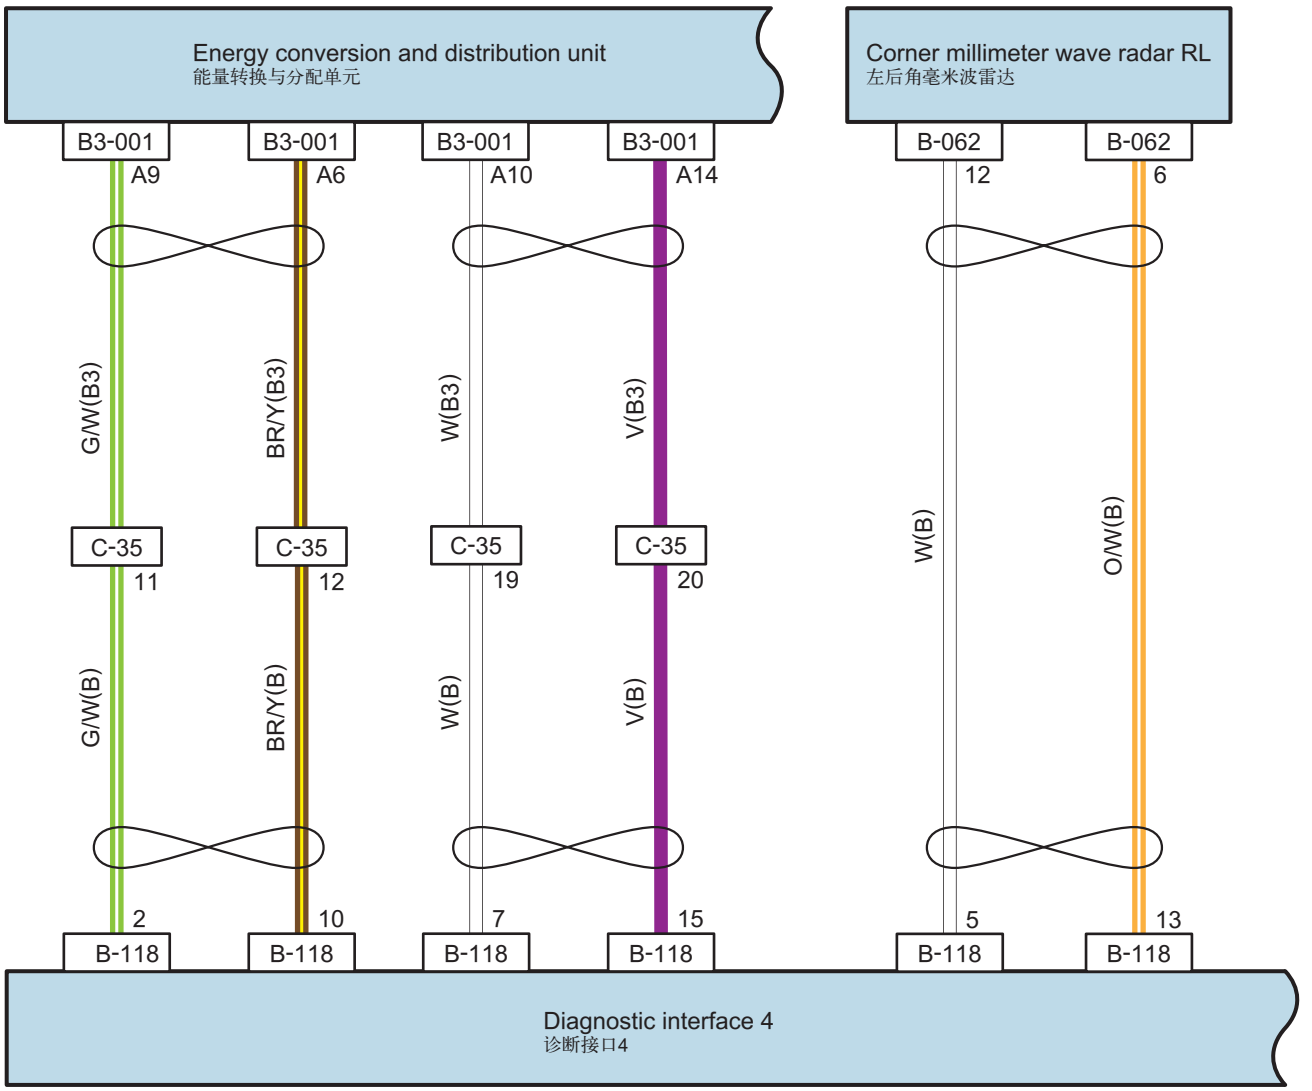

Digital key UWB_CAN
数字钥匙UWB_CAN
Chassis_CAN
底盘_CAN
Front comfort_CAN
前部舒适_CAN
L(B)
O/BR(B)
G/B(B)
G/W(B)
BR/B(B)
BR/W(B)
5
13
6
14
8
16
B-117
B-117
B-117
B-117
B-117
B-117
Diagnostic interface 1
诊断接口1

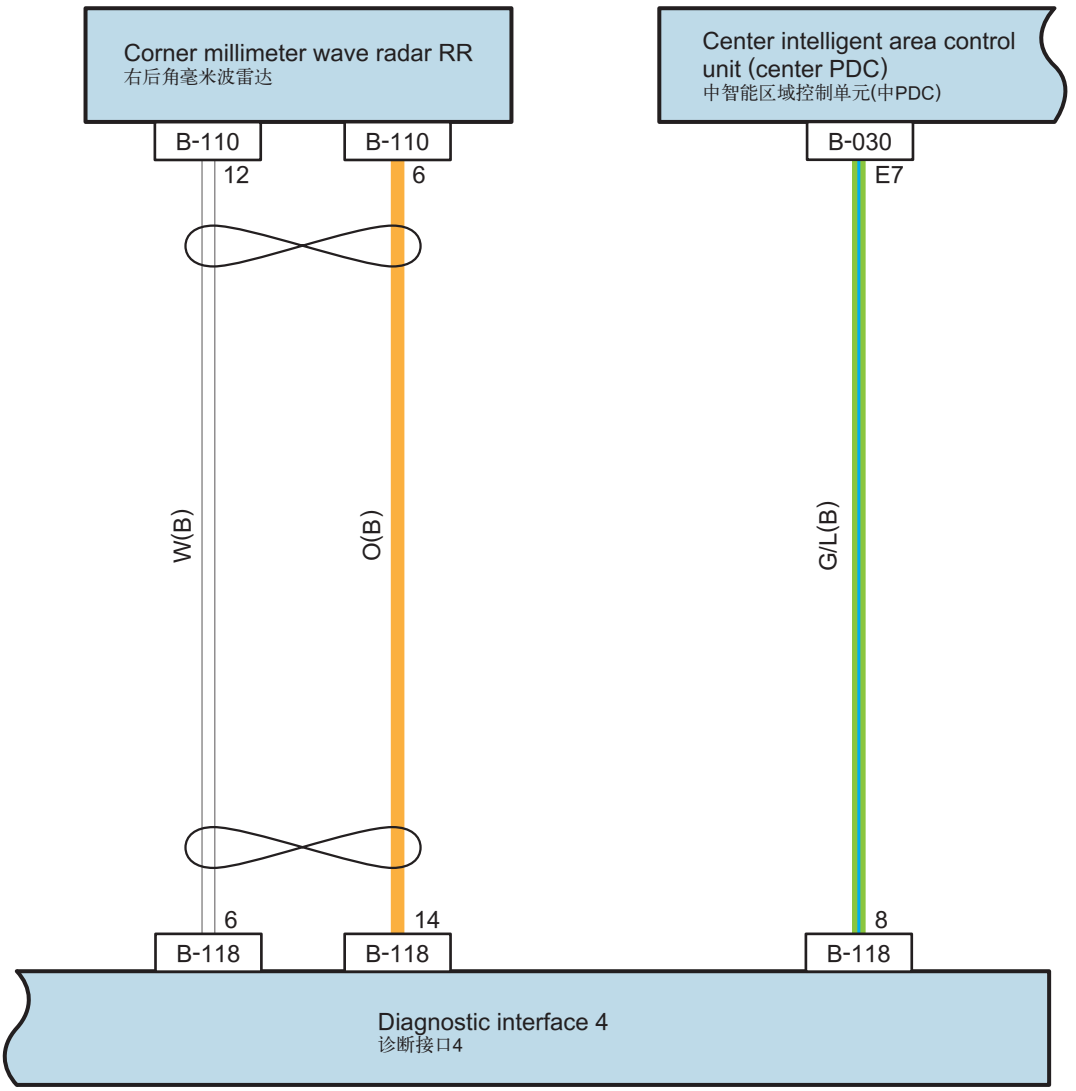

Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
Rear automatic driving radar_CAN
后自动驾驶雷达_CAN
Backbone 1_CAN
主干1_CAN
B-023
A5
A6
A52
A53
G/P(B)
W/G(B)
W/R(B)
Y/W(B)
GR(B)
O/BR(B)
B(B)
BR(B)
1
9
6
14
3
11
4
12
B-026
Diagnostic interface 2
诊断接口2


Information_CAN
信息_CAN
Front automatic driving radar_CAN
前自动驾驶雷达_CAN
Front EV_CAN
前部EV_CAN
Digital key NFC_CAN
数字钥匙NFC_CAN
Y(B)
O(B)
GR(B)
O/BR(B)
R(B)
W(B)
P(B)
O/BR(B)
5
13
7
15
2
10
8
16
B-026
B-026
B-026
B-026
B-026
B-026
B-026
B-026
Diagnostic interface 2
诊断接口2

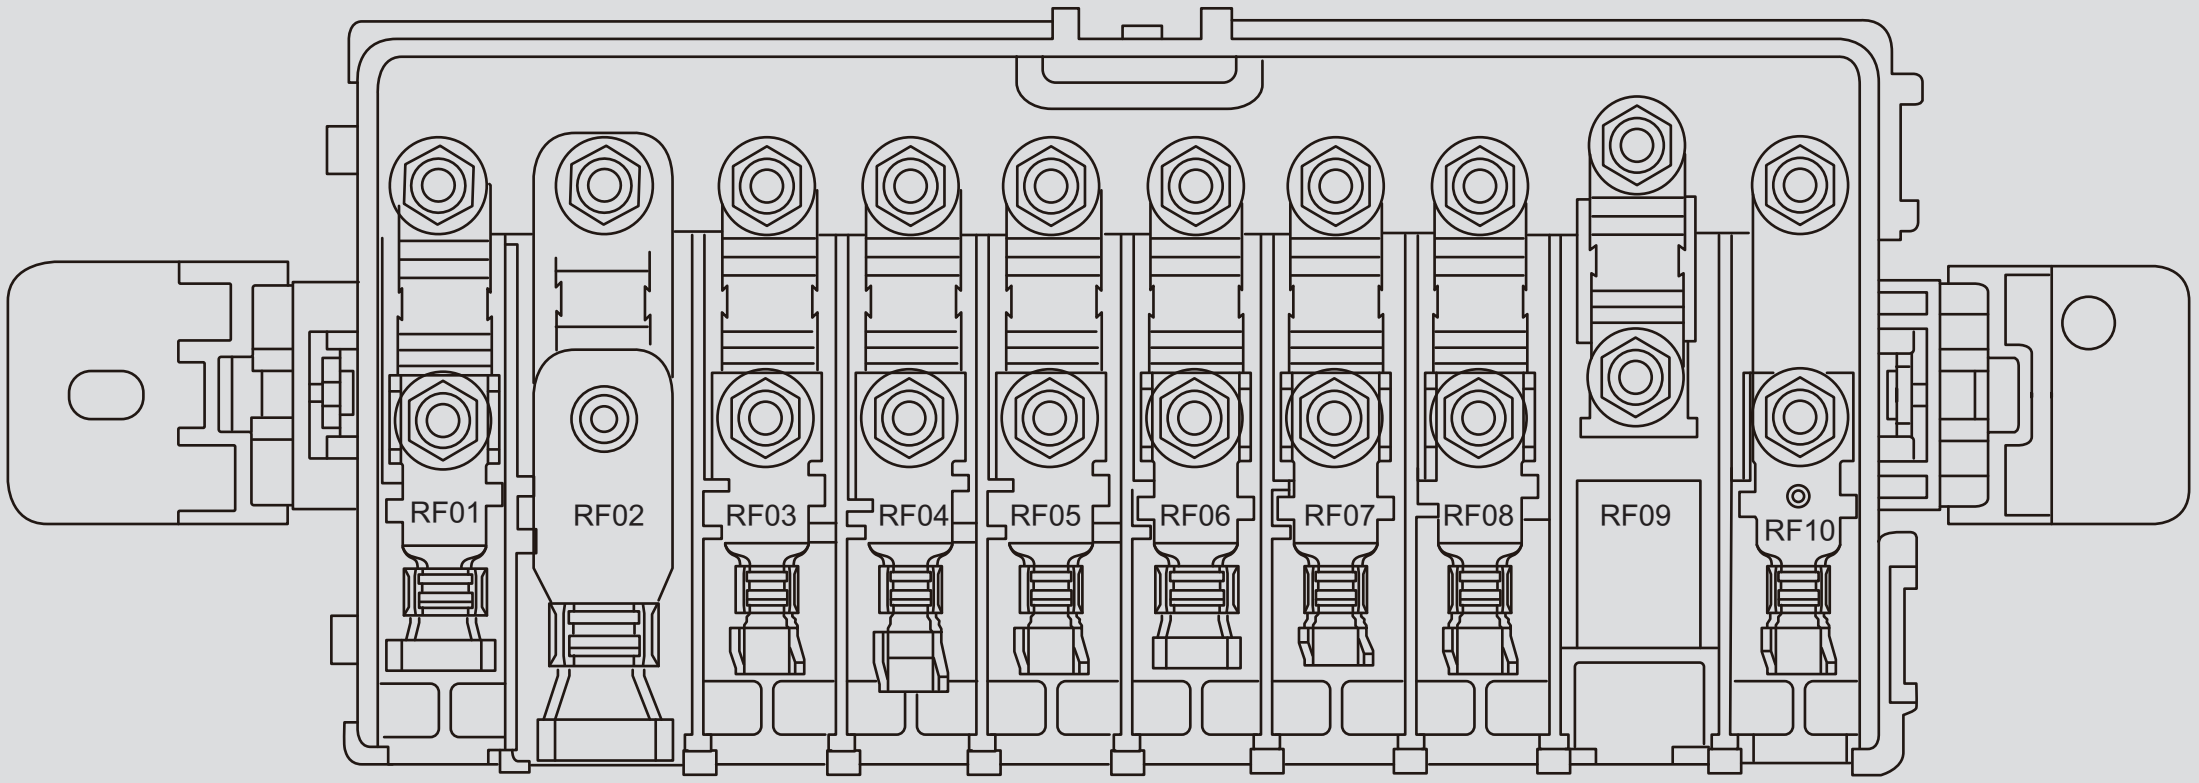

Rear comfort_CAN
后部舒适_CAN
Digital key DK_CAN
数字钥匙DK_CAN
Backbone 2_CAN
主干2_CAN
Y(B)
L(B)
O(B)
V(B)
G(B)
R(B)
1
9
3
11
5
13
B-061
B-061
B-061
B-061
B-061
B-061
Diagnostic interface 3
诊断接口3


Advanced automatic driving controller - DJ (HAD)
高级自动驾驶控制器-大疆(HAD)
B-125
B9
B-125
B10
B/Y(B)
Y/W(B)
4
12
B-061
B-061
Electric rear drive system inverter
后驱电驱动系统逆变器
P-001
9
P-001
2
GR/L(P)
W(P)
C-17
3
C-17
2
GR/L(B)
W(B)
7
15
B-061
B-061
Rear EV_CAN
后部EV_CAN
GR(B)
O(B)
8
16
B-061
B-061
Diagnostic interface 3
诊断接口3


Energy conversion and distribution unit
能量转换与分配单元
Corner millimeter wave radar RL
左后角毫米波雷达
B3-001
A9
B3-001
A6
B3-001
A10
B3-001
A14
B-062
12
B-062
6
G/W(B3)
BR/Y(B3)
W(B3)
V(B3)
W(B)
O/W(B)
C-35
11
C-35
12
C-35
19
C-35
20
G/W(B)
BR/Y(B)
W(B)
V(B)
2
10
7
15
5
13
B-118
B-118
B-118
B-118
B-118
B-118
Diagnostic interface 4
诊断接口4


Corner millimeter wave radar RR
右后角毫米波雷达
B-110
B-110
12
6
W(B)
O(B)
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-030
E7
G/L(B)
6
14
8
B-118
B-118
B-118
Diagnostic interface 4
诊断接口4

Front transfer distribution box
前中转配电盒

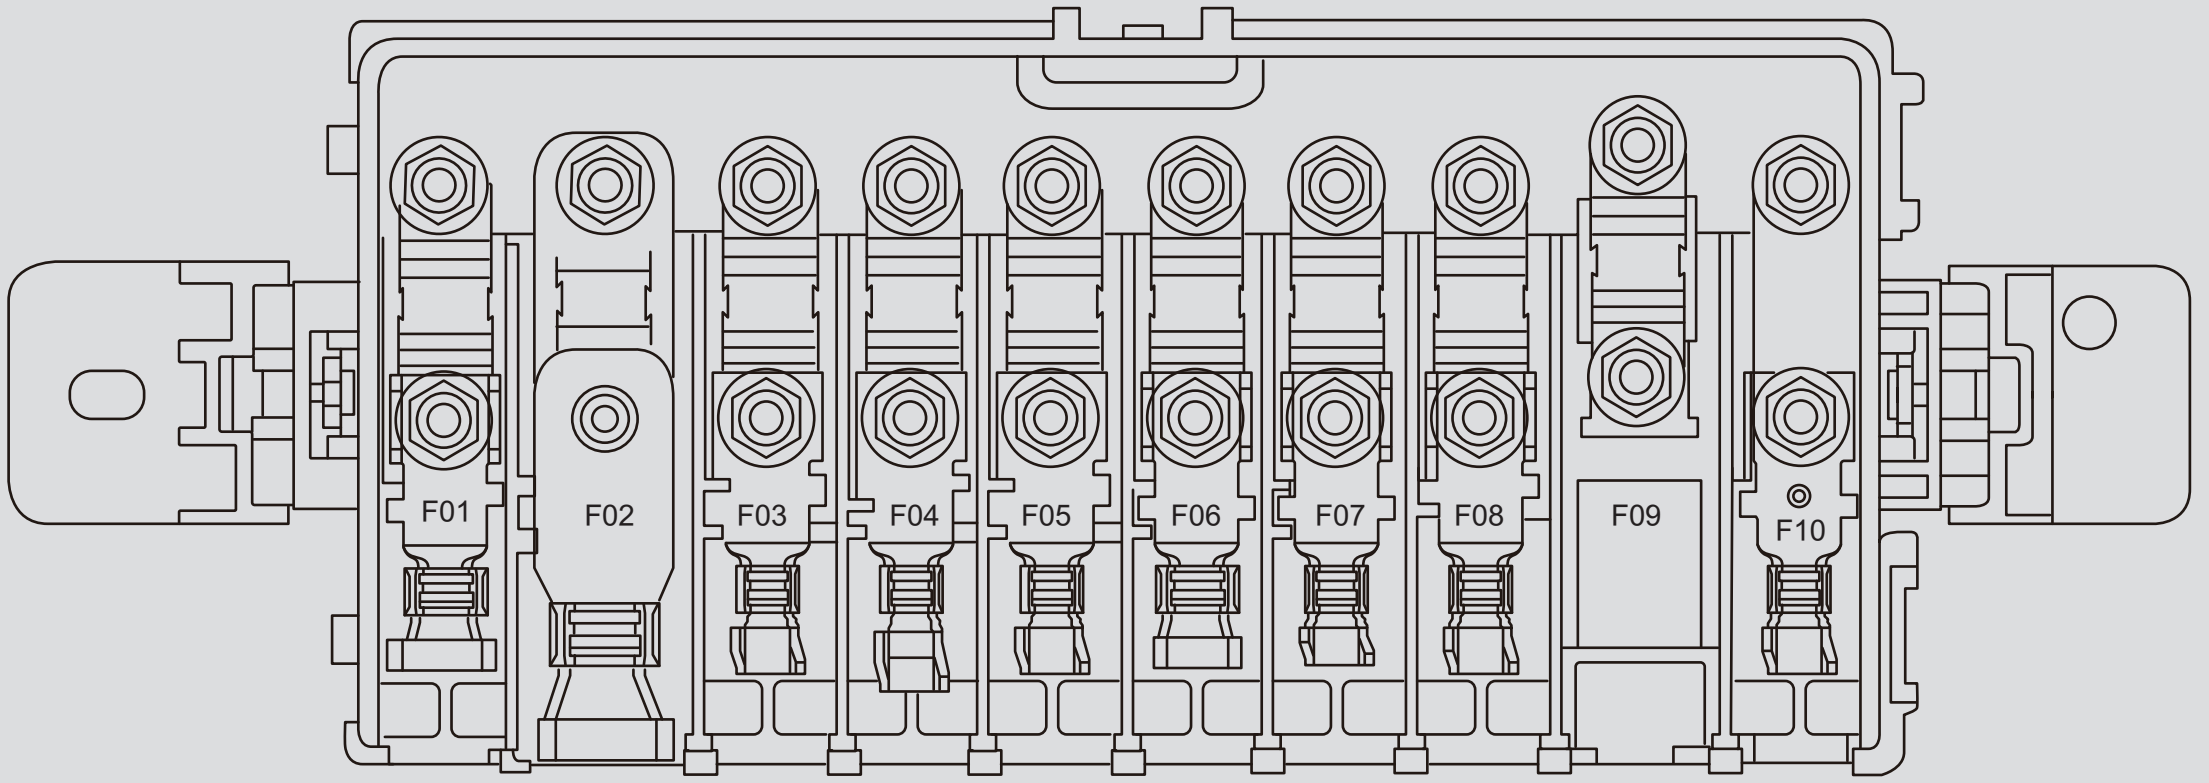


Number 编号	Name 名称	Ampere 安
RF01	Rear transfer box 后中转盒	—
RF02	Reserved 预留	—
RF03	Heater PTC 风暖PTC	100A
RF04	IBC1	60A
RF05	IBC2	60A
RF06	CSC low configuration CSC低配	30A
RF07	EPS	100A
RF08	Cooling fan 冷却风扇	60A
RF09	Reserved 预留	—
RF10	Front PDC 前PDC	80A

Power supply and ground information
电源及接地信息

Front transfer distribution box power supply layout
前中转配电盒电源分布

Front transfer distribution box
后中转配电盒

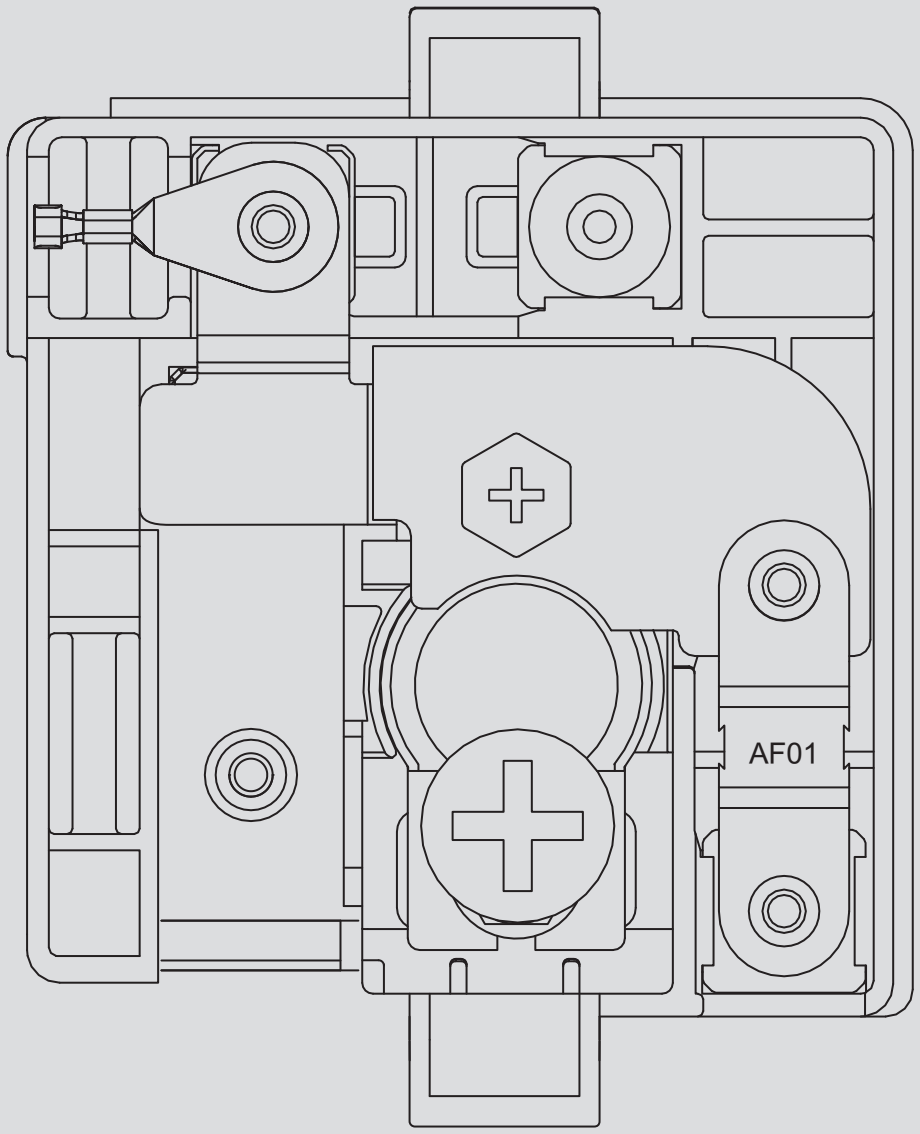


Number 编号	Name 名称	Ampere 安
F01	Battery distribution box 蓄电池配电盒	—
F02	DCDC DCDC	—
F03	Trailer distribution box 拖车配电盒	80A
F04	Reserved 预留	—
F05	Reserved 后PDC	125A
F06	Amplifier 功放	30A
F07	Center PDC2 中PDC2	100A
F08	Reserved 预留	—
F09	Front transfer distribution box 前中转配电盒	—
F10	Reserved 预留	—

Power supply and ground information
电源及接地信息

Rear transfer distribution box power supply layout
后中转配电盒电源分布

Rear battery distribution box
后蓄电池配电盒

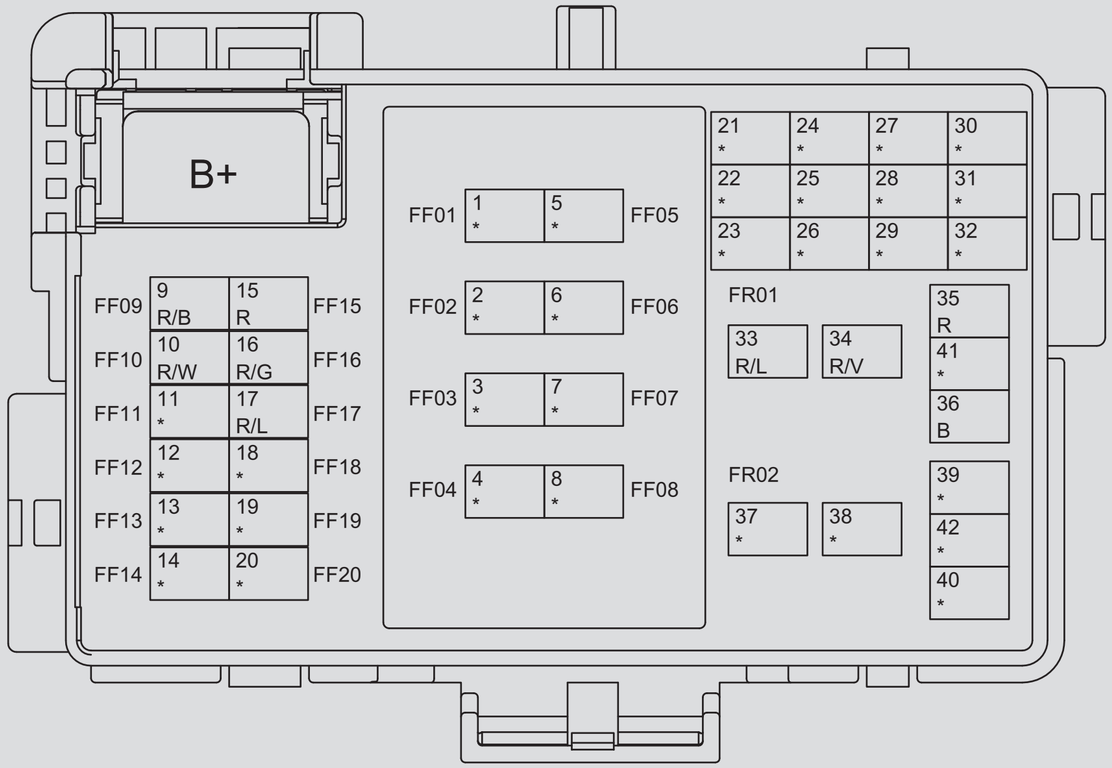


Number 编号	Name 名称	Ampere 安
AF01	Rear transfer box 后中转盒	200A

Power supply and ground information
电源及接地信息

Rear battery distribution box power supply layout
后蓄电池配电盒电源分布

Trailer distribution box
拖车配电盒

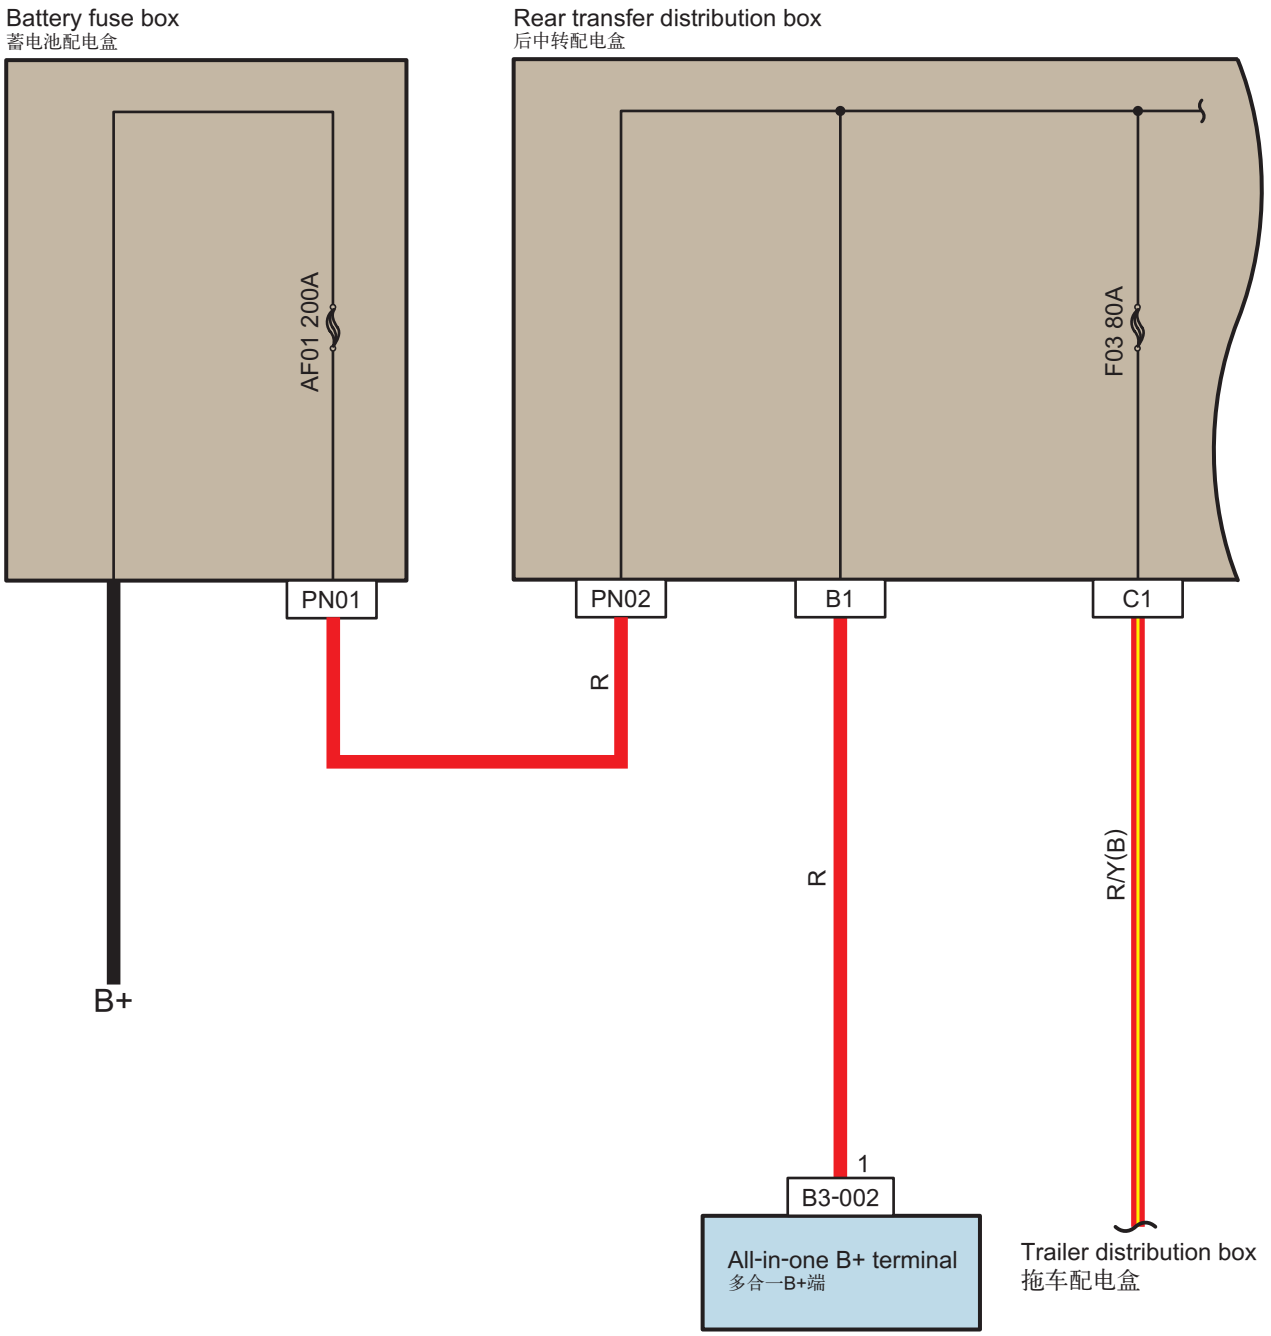


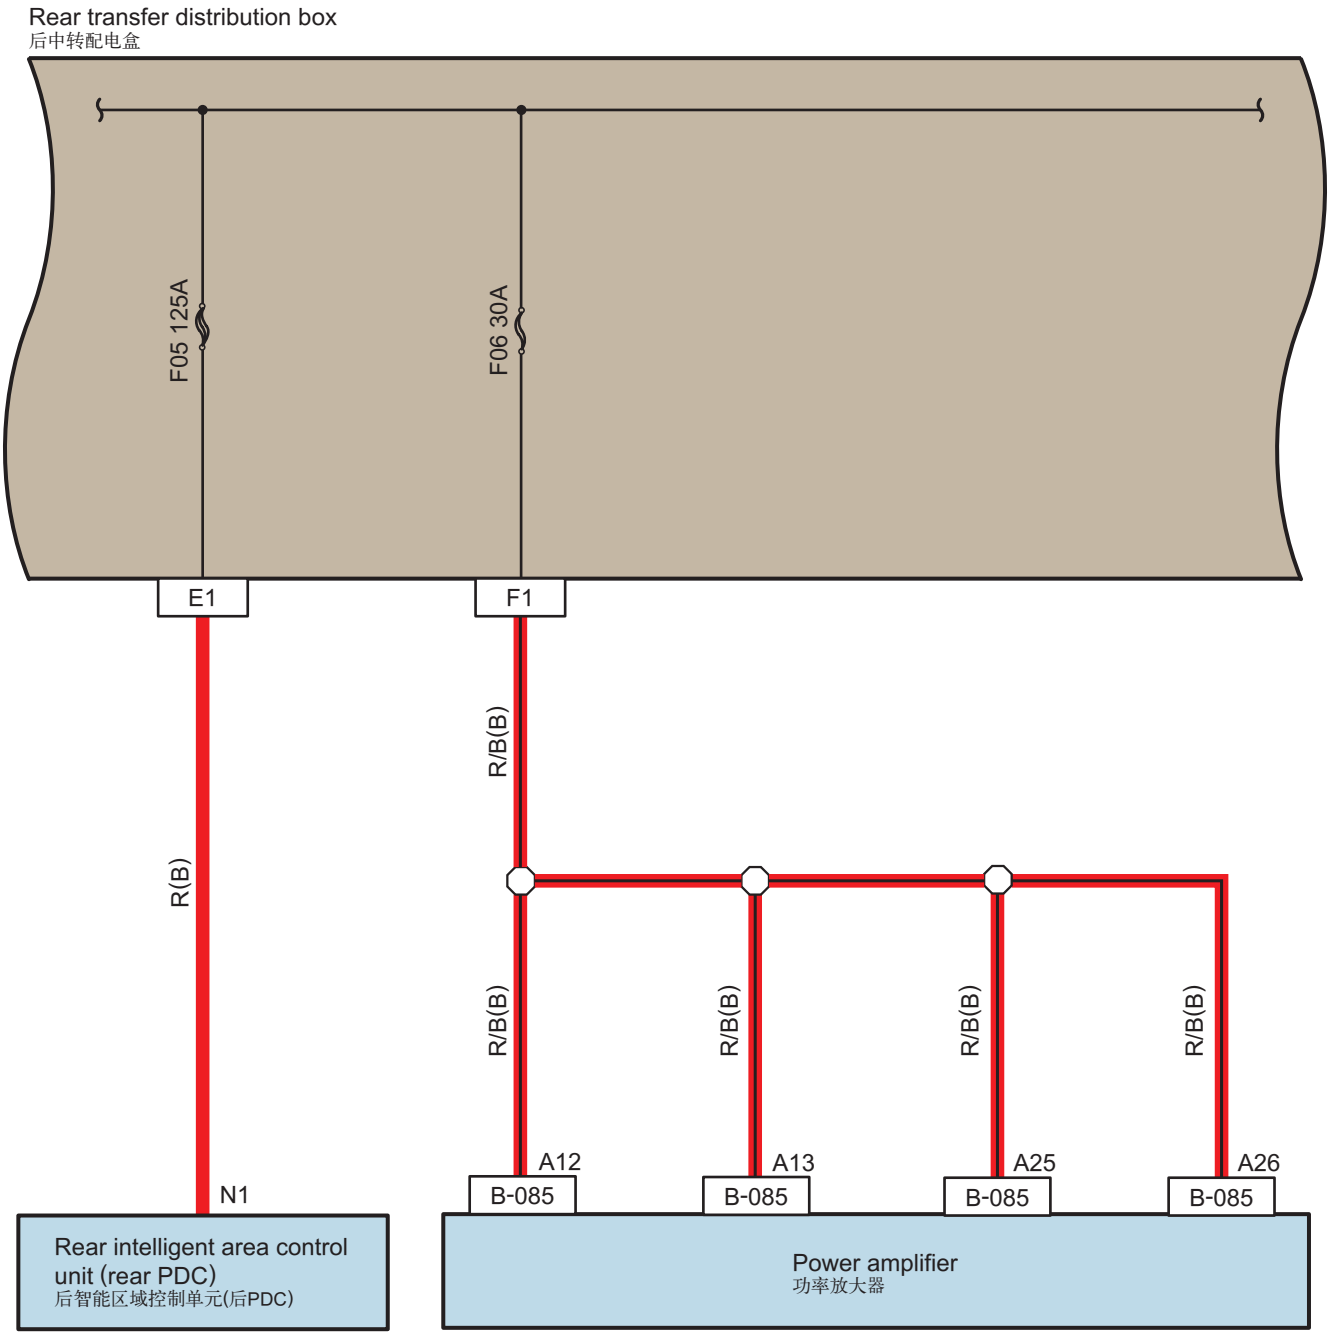
Number 编号	Name 名称	Ampere 安
FF06	Reserved 预留	—
FF07	Reserved 预留	—
FF08	Reserved 预留	—
FF09	Light power supply input 2 灯具电源输入2	20A
FF10	Trailer controller B+ 拖车控制器B+	5A
FF11	Reserved 预留	—
FF12	Reserved 预留	—
FF13	Reserved 预留	—
FF14	Reserved 预留	—
FF15	Light power supply input 1 灯具电源输入1	20A
FF16	Trailer B+ 拖车B+	30A
FF17	Trailer IG 拖车IG	30A
FF18	Reserved 预留	—
FF19	Reserved 预留	—
FF20	Reserved 预留	—
FR01	Trailer IG relay 拖车IG继电器	—
FR02	Reserved 预留	—

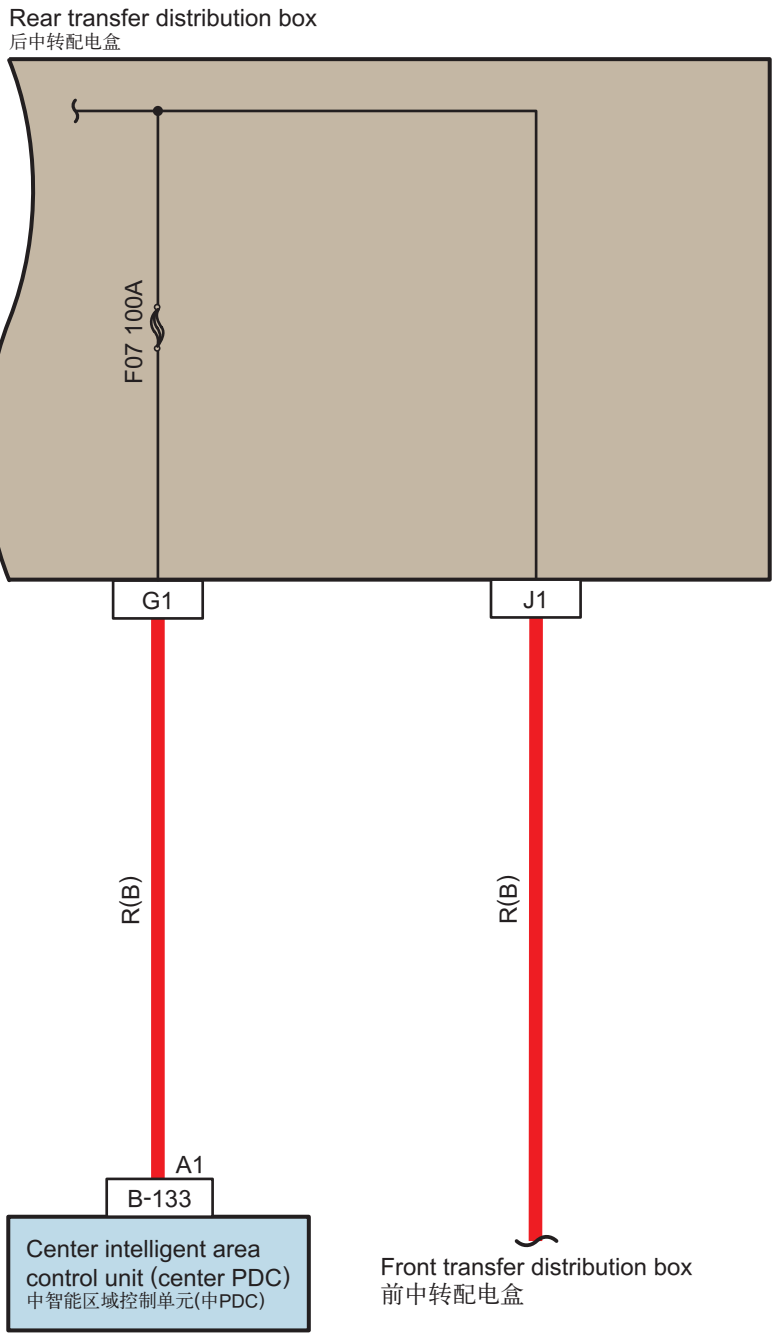
Number 编号	Name 名称	Ampere 安
FF01	Reserved 预留	—
FF02	Reserved 预留	—
FF03	Reserved 预留	—
FF04	Reserved 预留	—
FF05	Reserved 预留	—

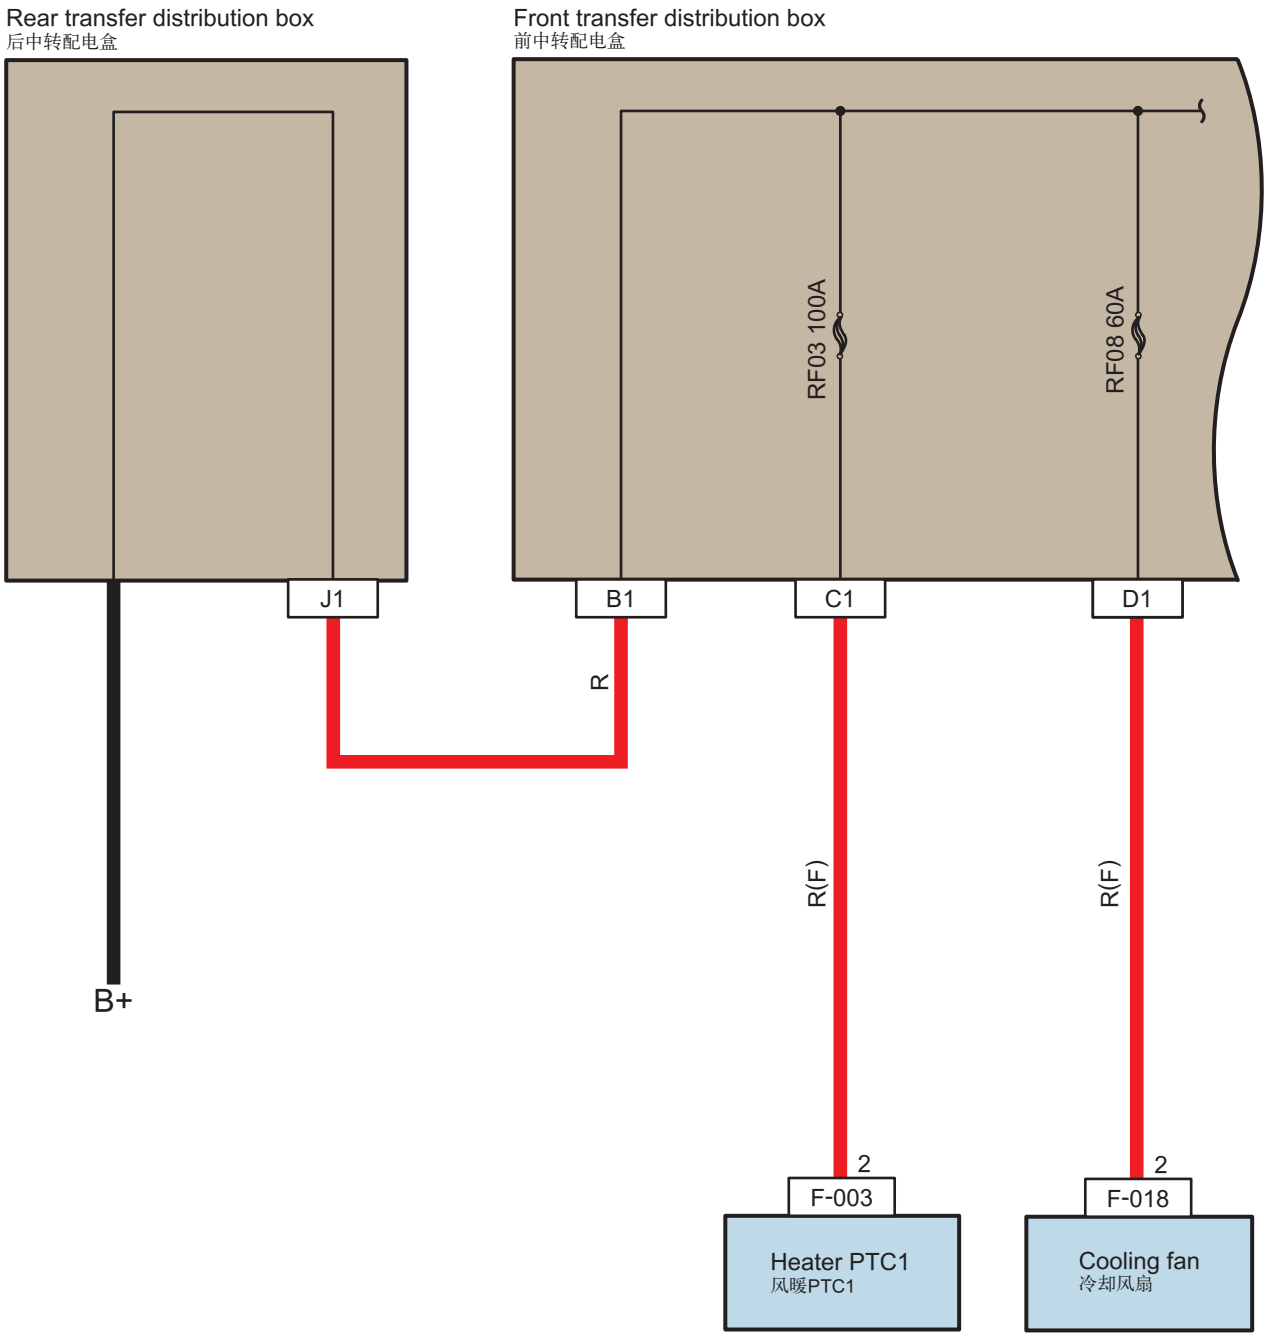
Power supply and ground information
电源及接地信息

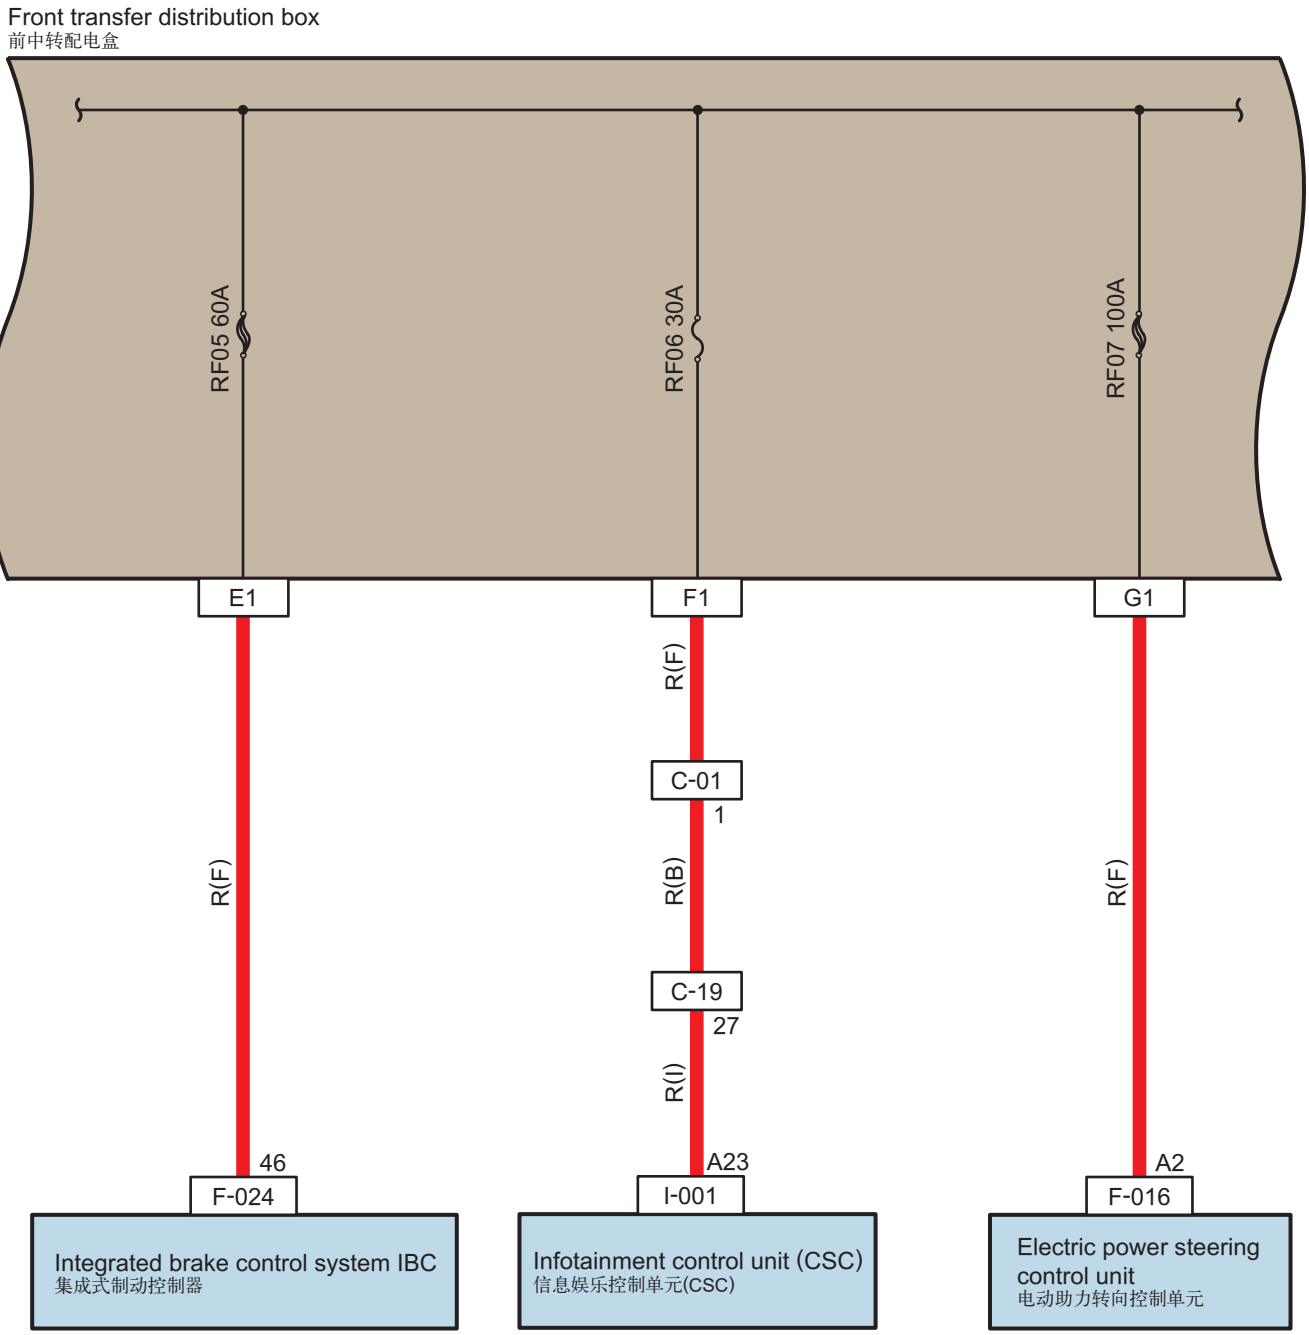
Trailer distribution box power supply layout
拖车配电盒电源分布

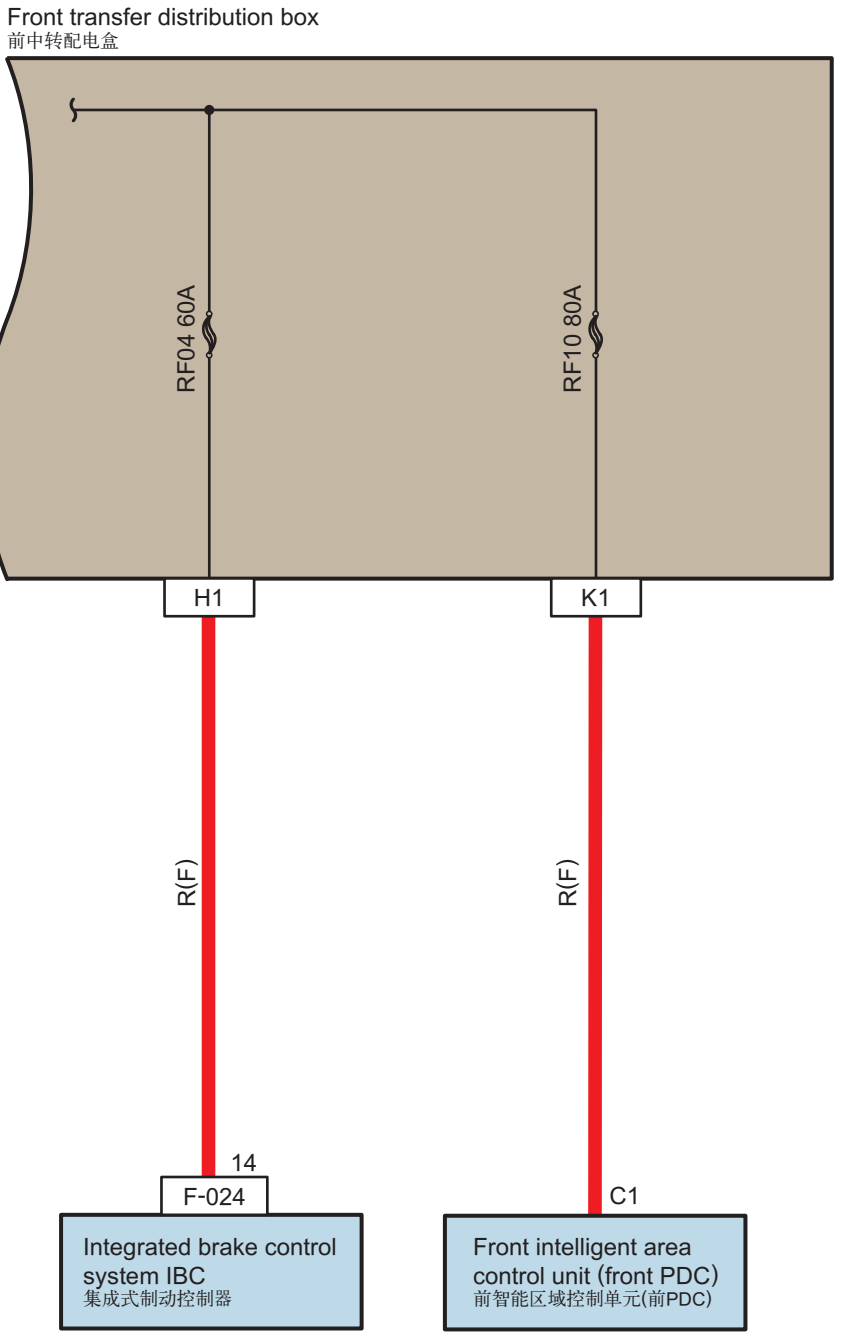

Battery fuse box
蓄电池配电盒
Rear transfer distribution box
后中转配电盒
AF01 200A
F03 80A
PN01
PN02
B1
C1
R
R
R/Y(B)
B+
1
B3-002
All-in-one B+ terminal
多合一B+端
Trailer distribution box
拖车配电盒

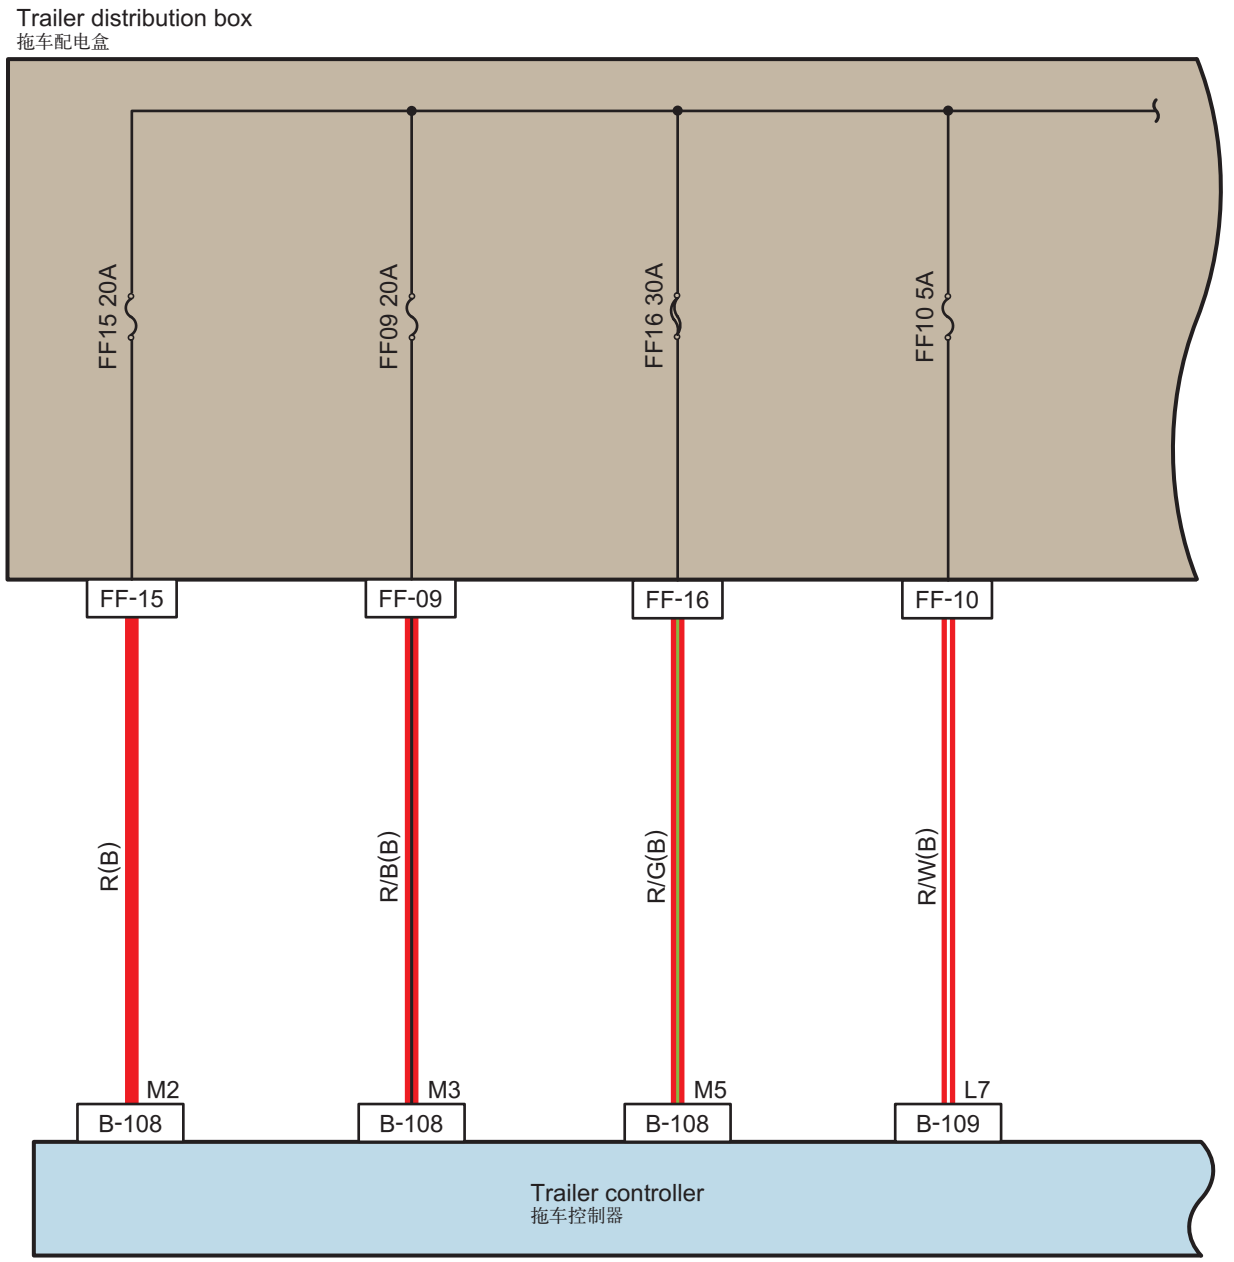

Rear transfer distribution box
后中转配电盒
F05 125A
F06 30A
E1
F1
R(B)
R/B(B)
R/B(B)
R/B(B)
R/B(B)
R/B(B)
A12
A13
A25
A26
B-085
B-085
B-085
B-085
N1
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Power amplifier
功率放大器

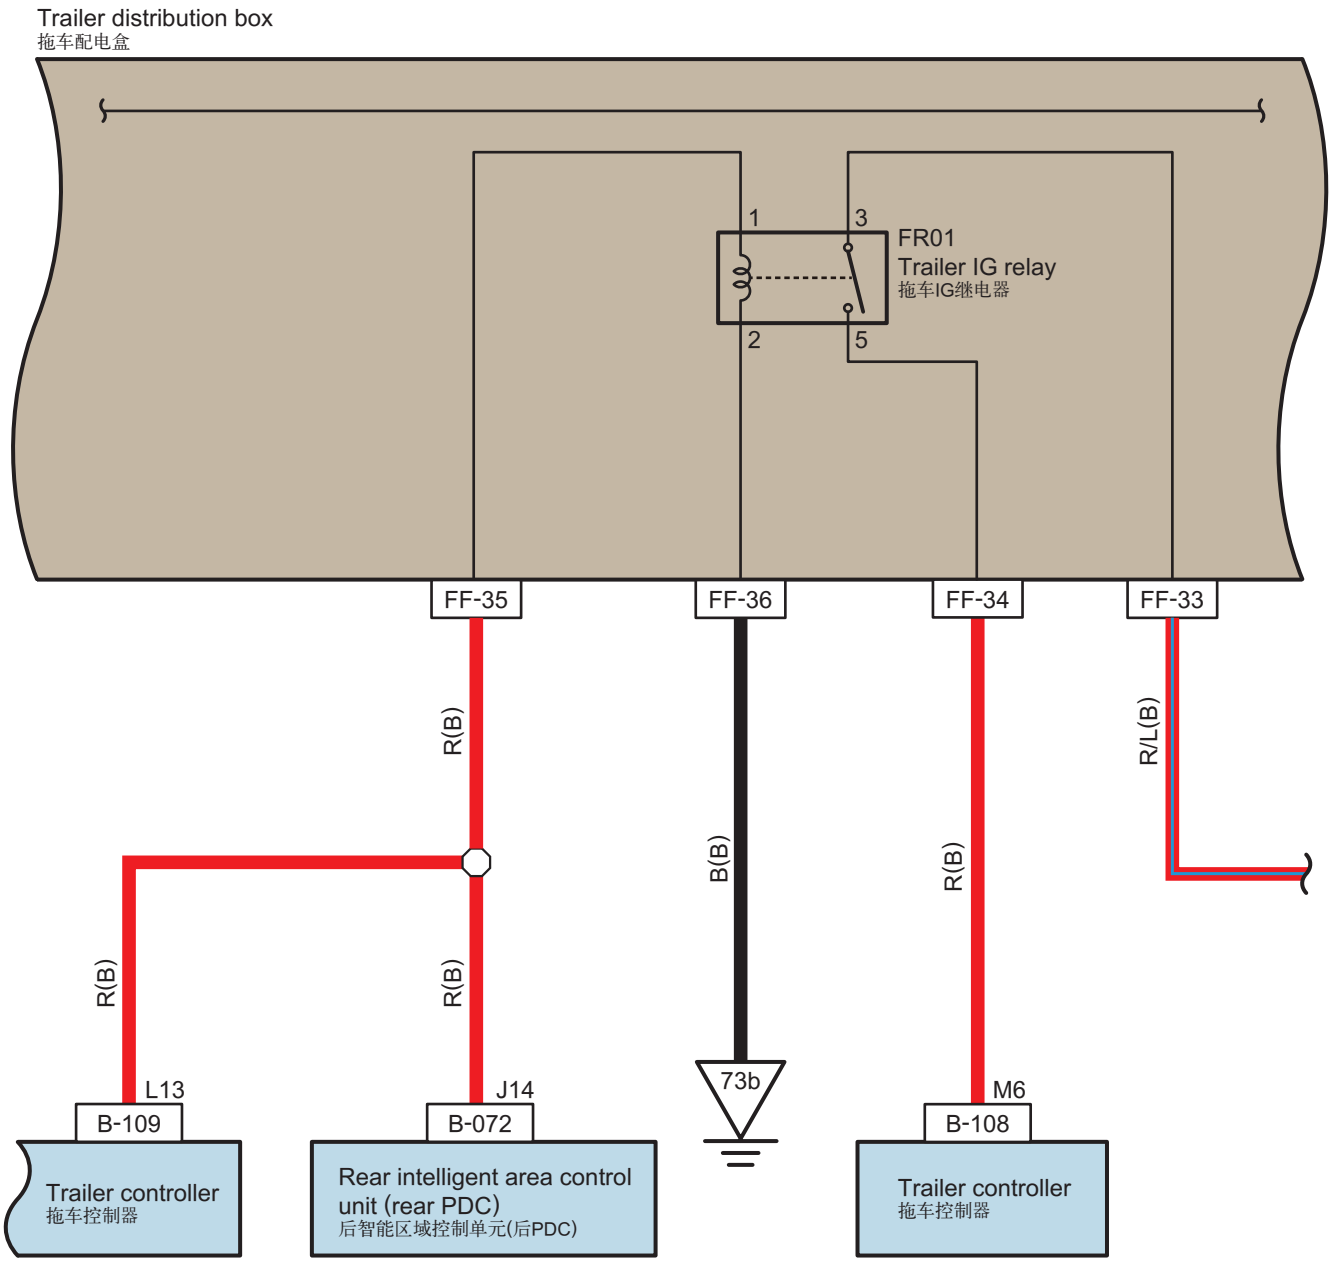

Rear transfer distribution box
后中转配电盒
F07 100A
G1
J1
R(B)
R(B)
A1
B-133
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
Front transfer distribution box
前中转配电盒

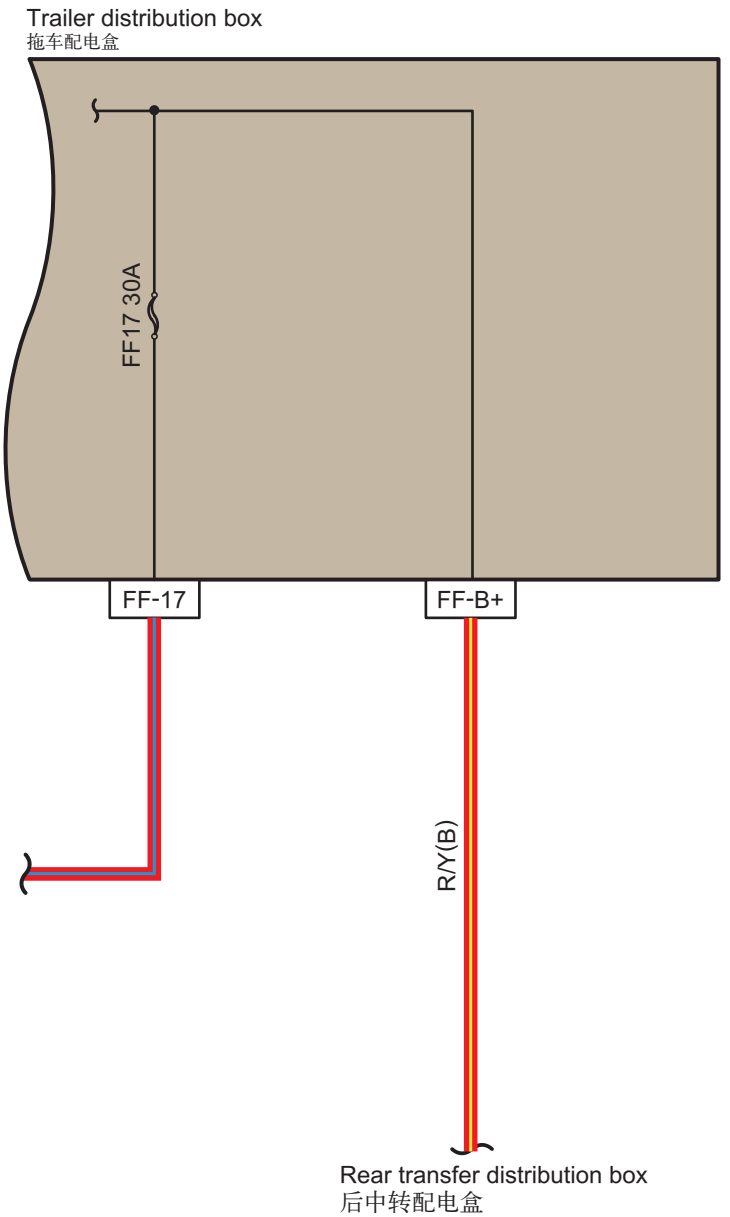

Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
RF03 100A
RF08 60A
J1
B1
C1
D1
R
R(F)
R(F)
B+
2
2
F-003
F-018
Heater PTC1
风暖PTC1
Cooling fan
冷却风扇

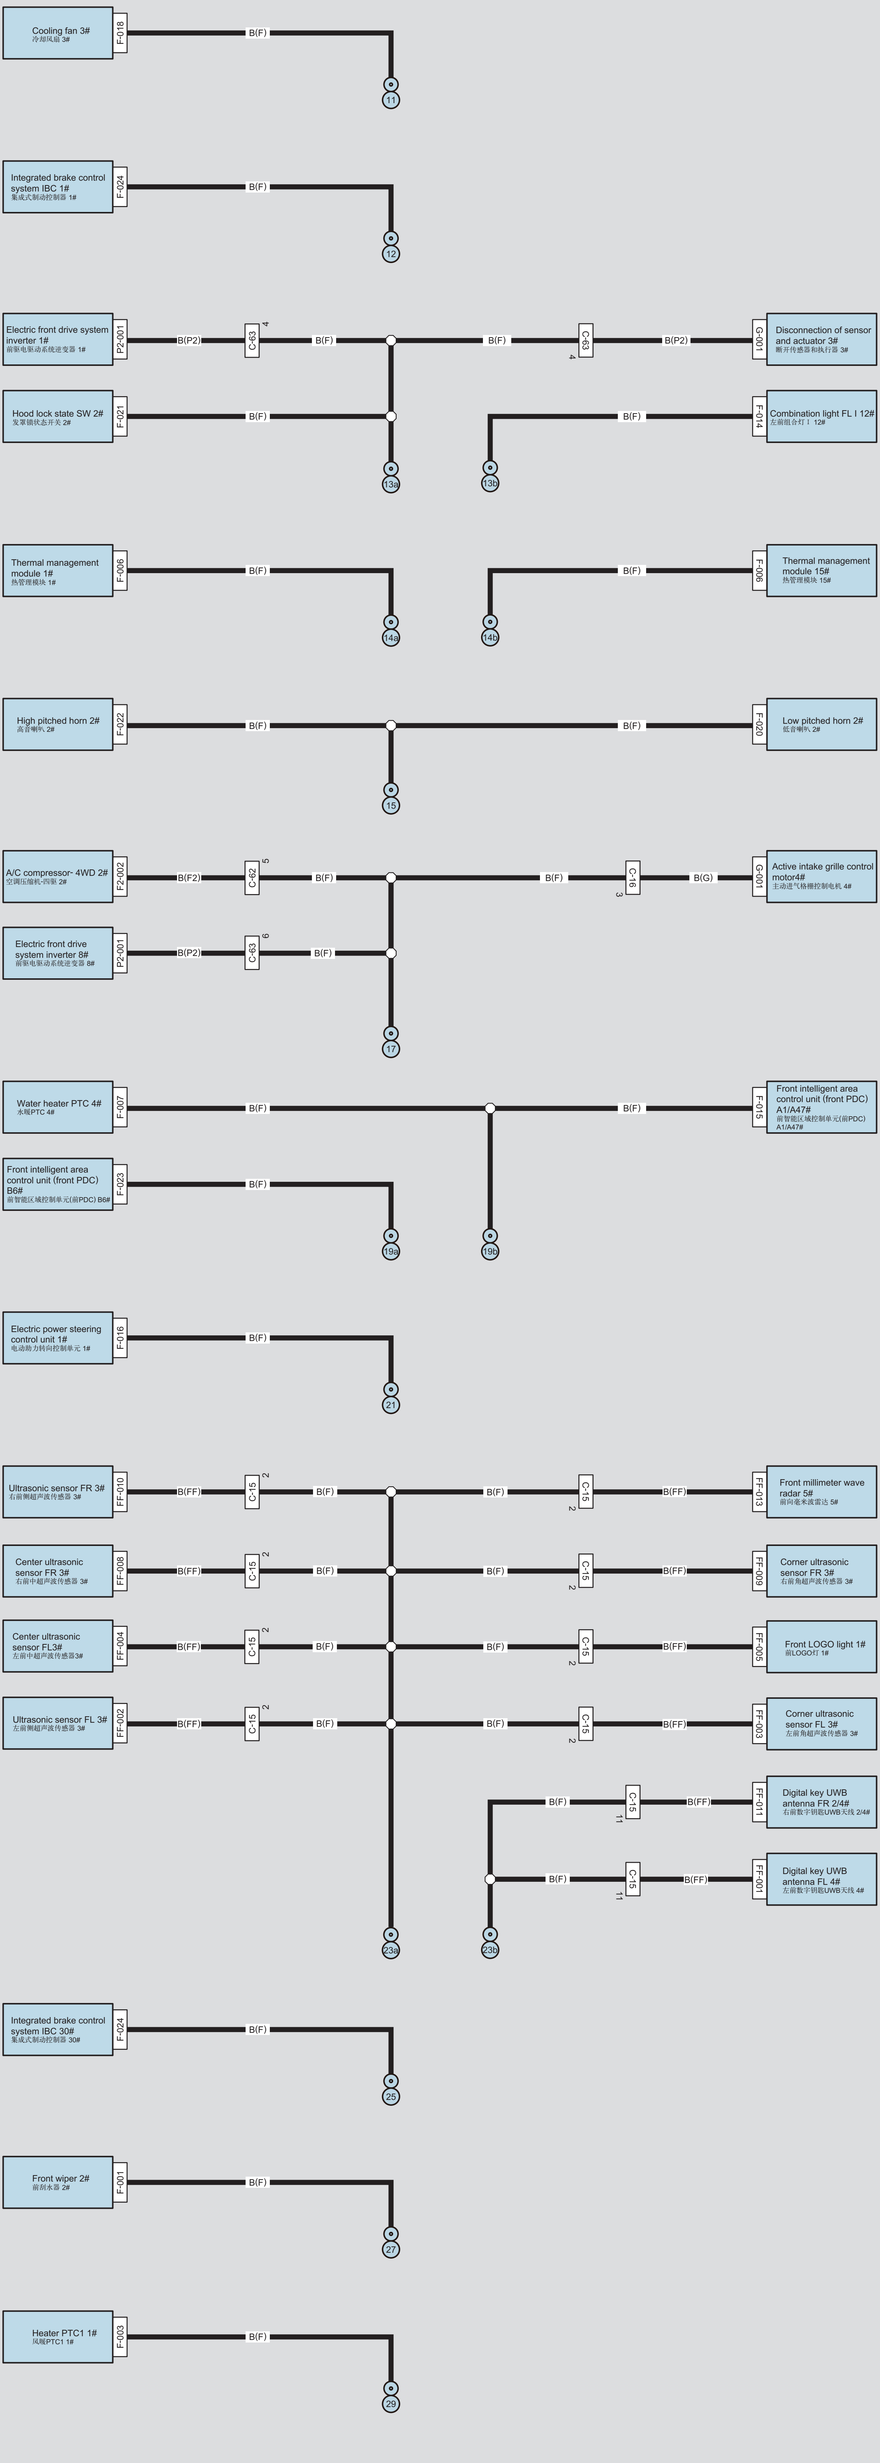

Front transfer distribution box
前中转配电盒
RF05 60A
RF06 30A
RF07 100A
E1
F1
G1
R(F)
C-01
1
R(B)
C-19
27
R(I)
R(F)
46
A23
A2
F-024
I-001
F-016
Integrated brake control system IBC
集成式制动控制器
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
Electric power steering control unit
电动助力转向控制单元

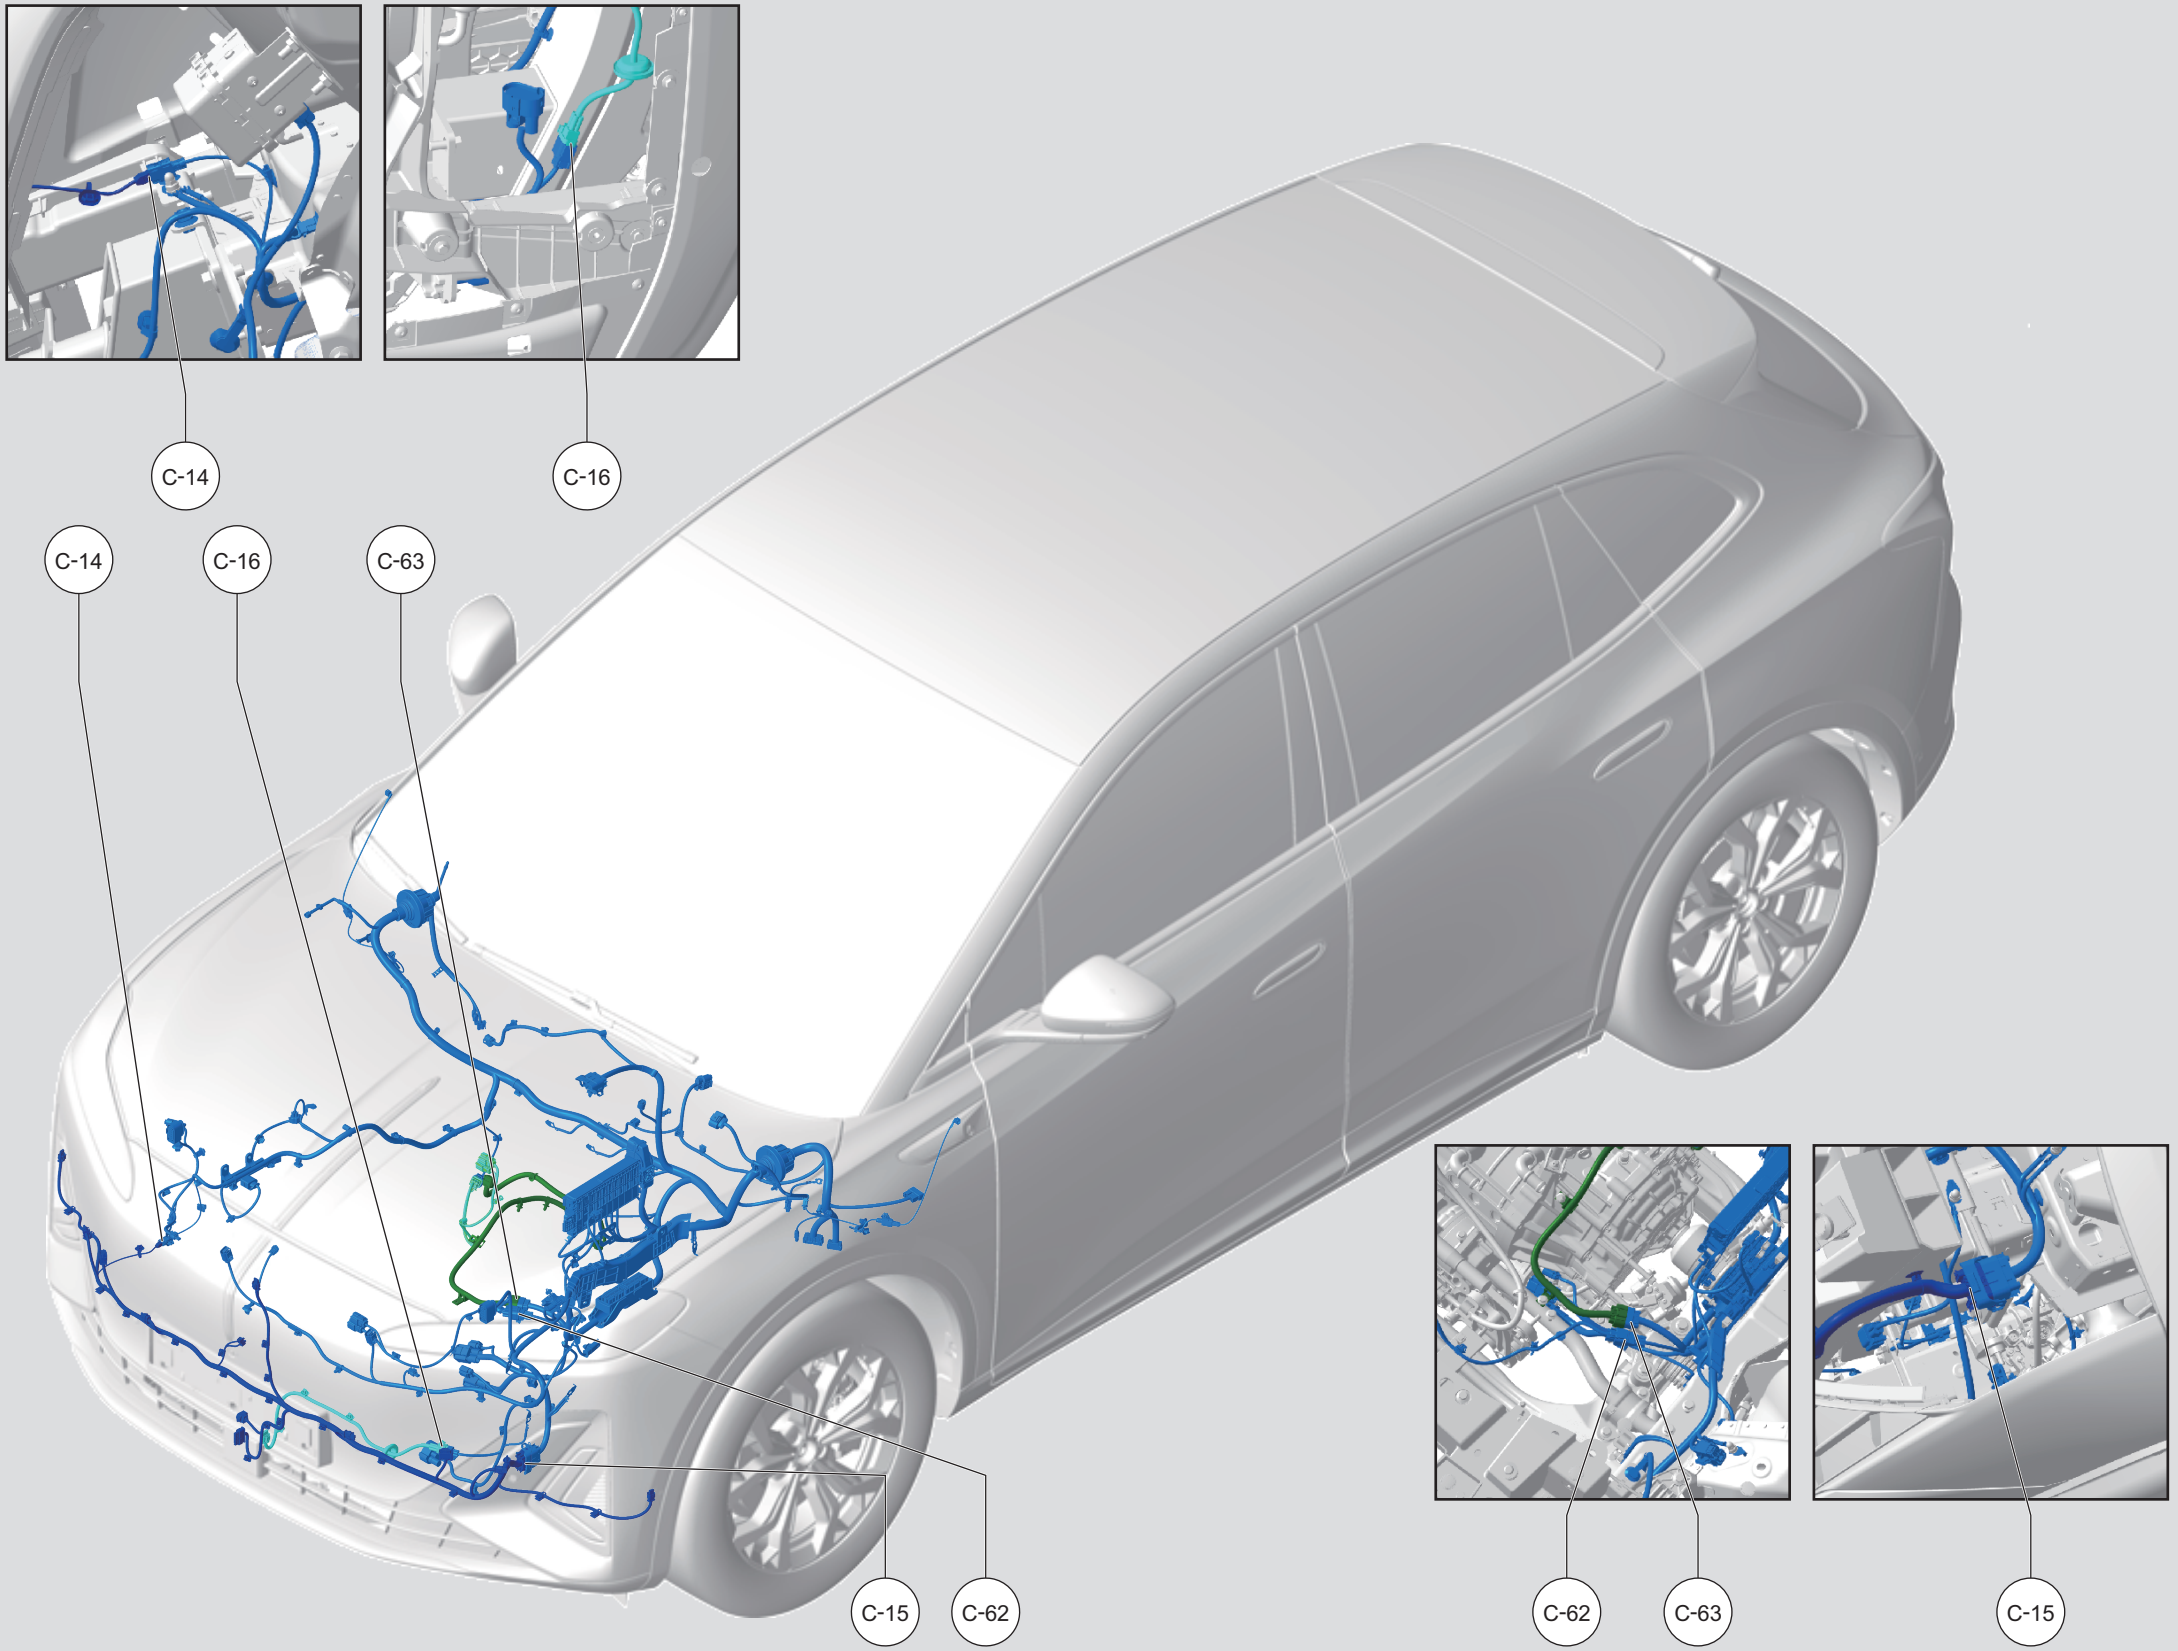

Front transfer distribution box
前中转配电盒
RF04 60A
RF10 80A
H1
K1
R(F)
R(F)
14
F-024
C1
Integrated brake control system IBC
集成式制动控制器
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

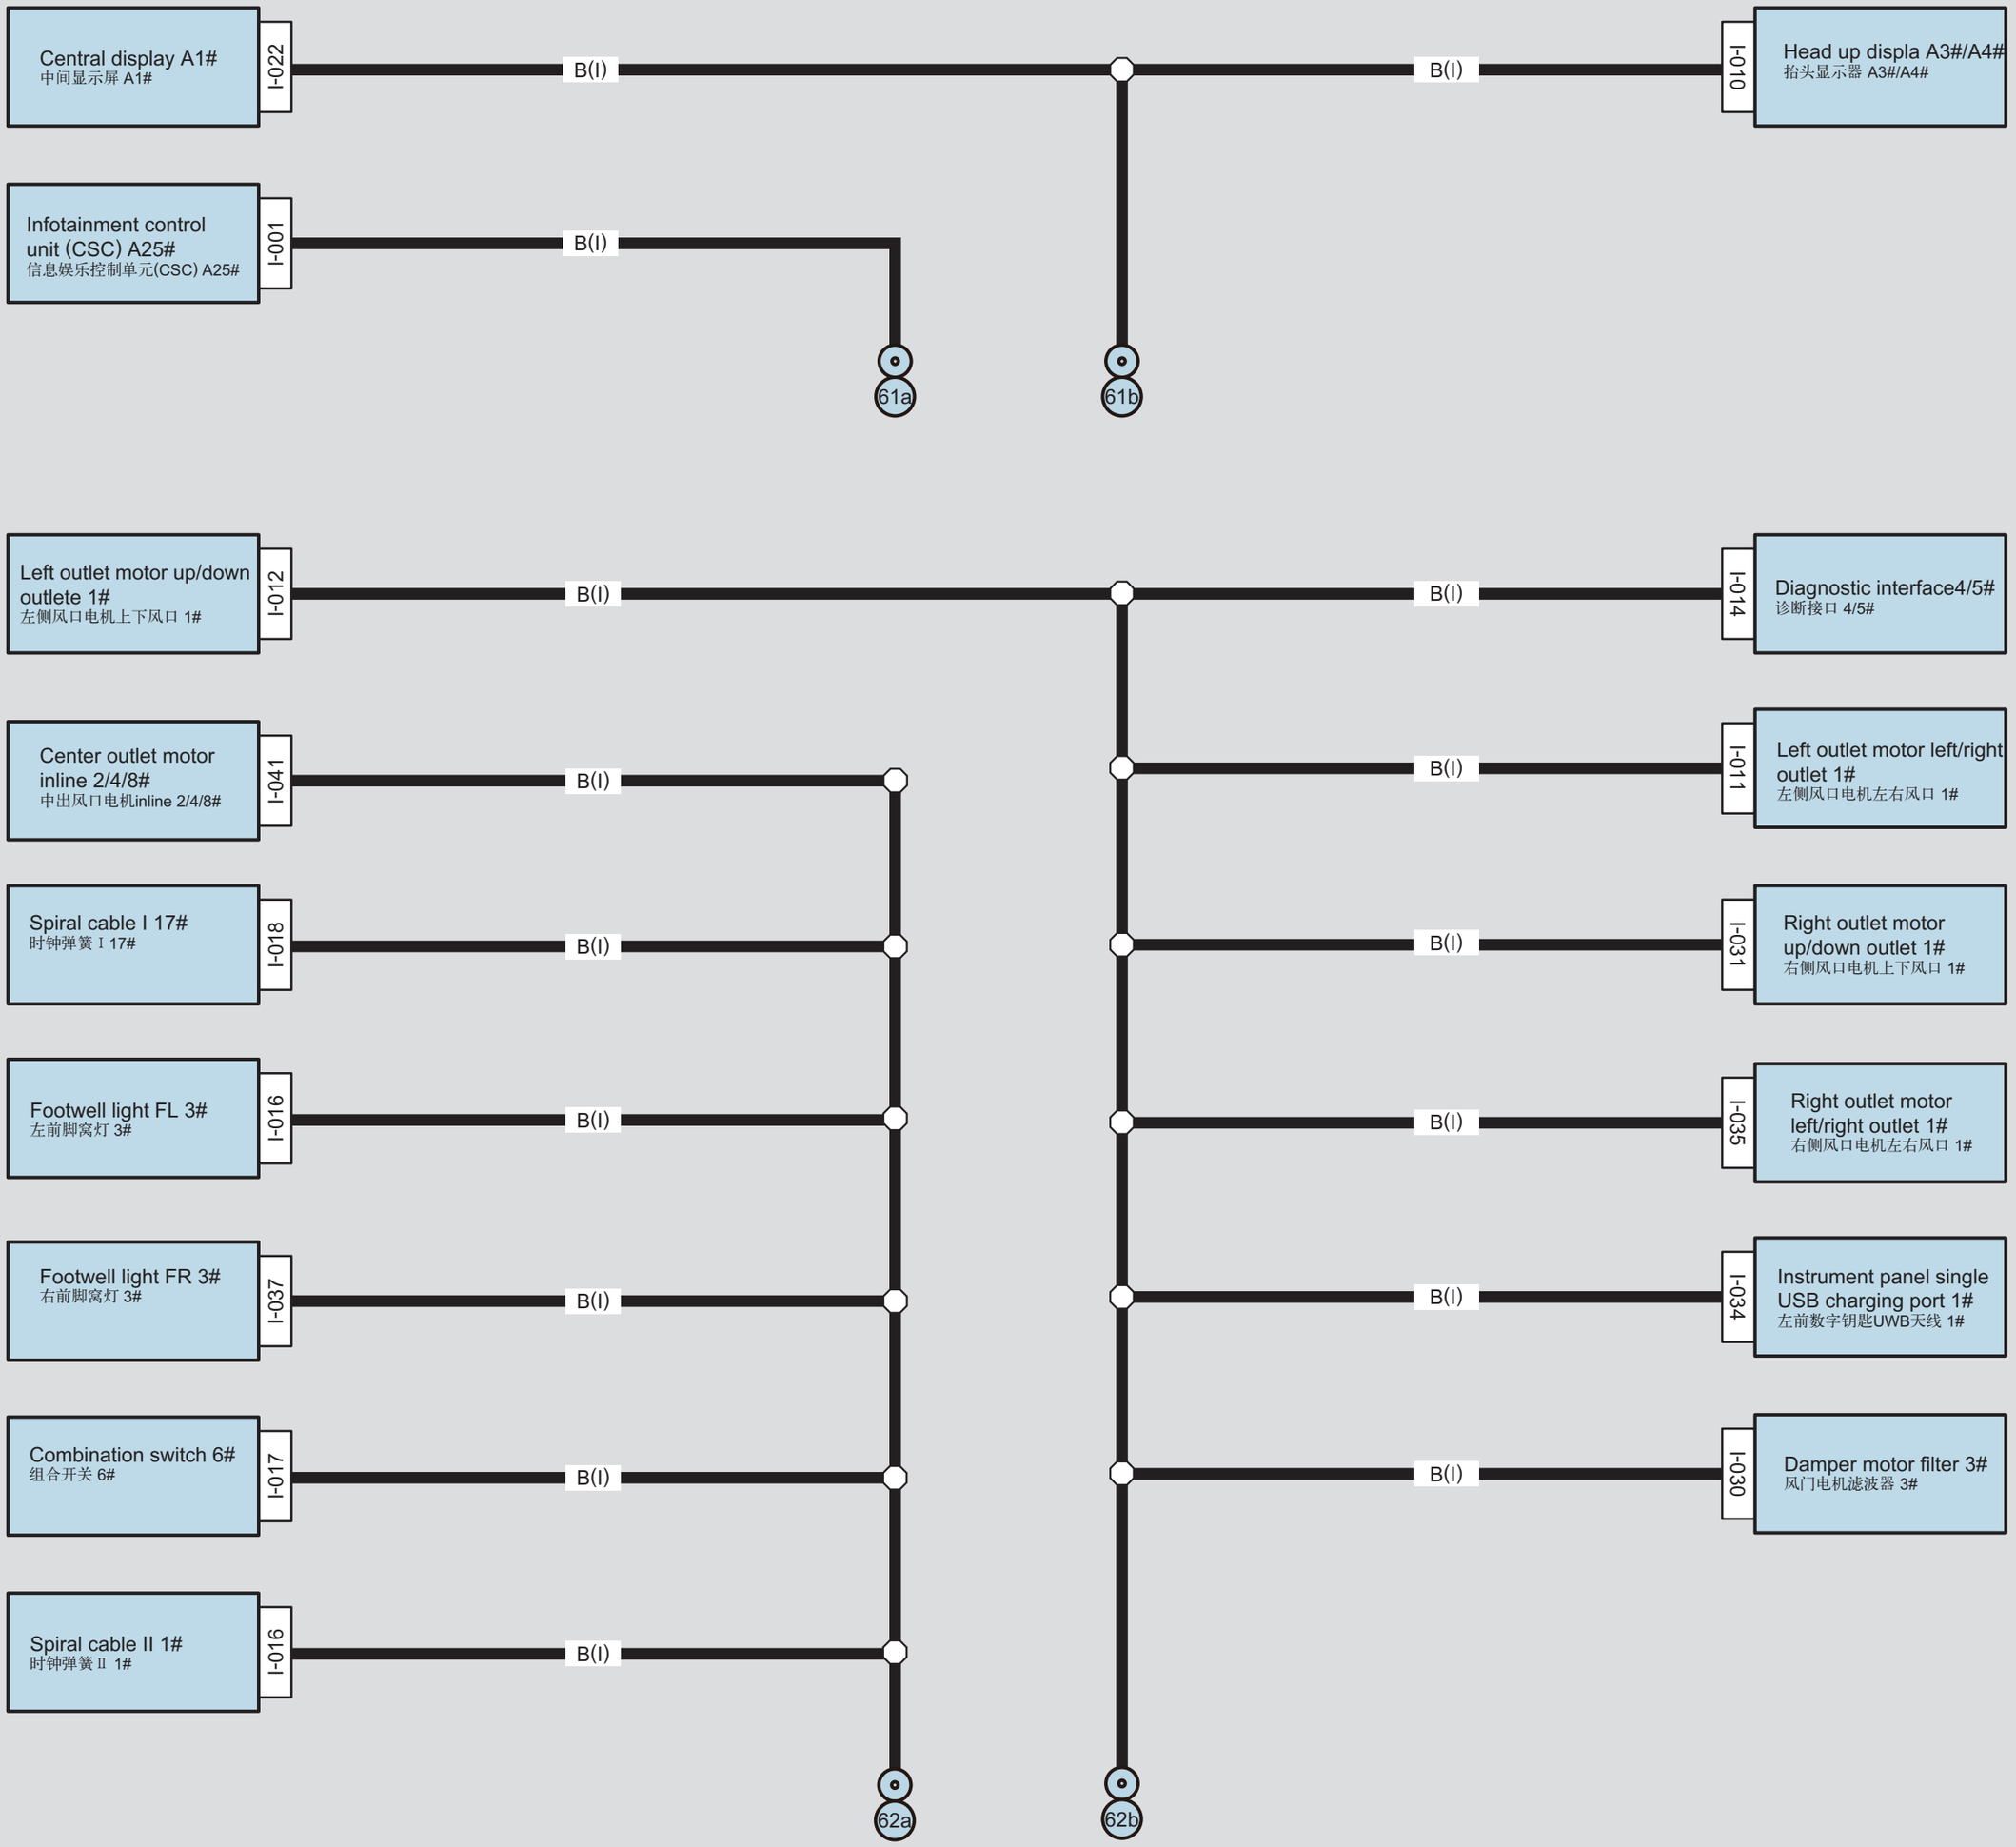

Trailer distribution box
拖车配电盒
FF15 20A
FF09 20A
FF16 30A
FF10 5A
FF-15
FF-09
FF-16
FF-10
R(B)
R/B(B)
R/G(B)
R/W(B)
M2
M3
M5
L7
B-108
B-108
B-108
B-109
Trailer controller
拖车控制器

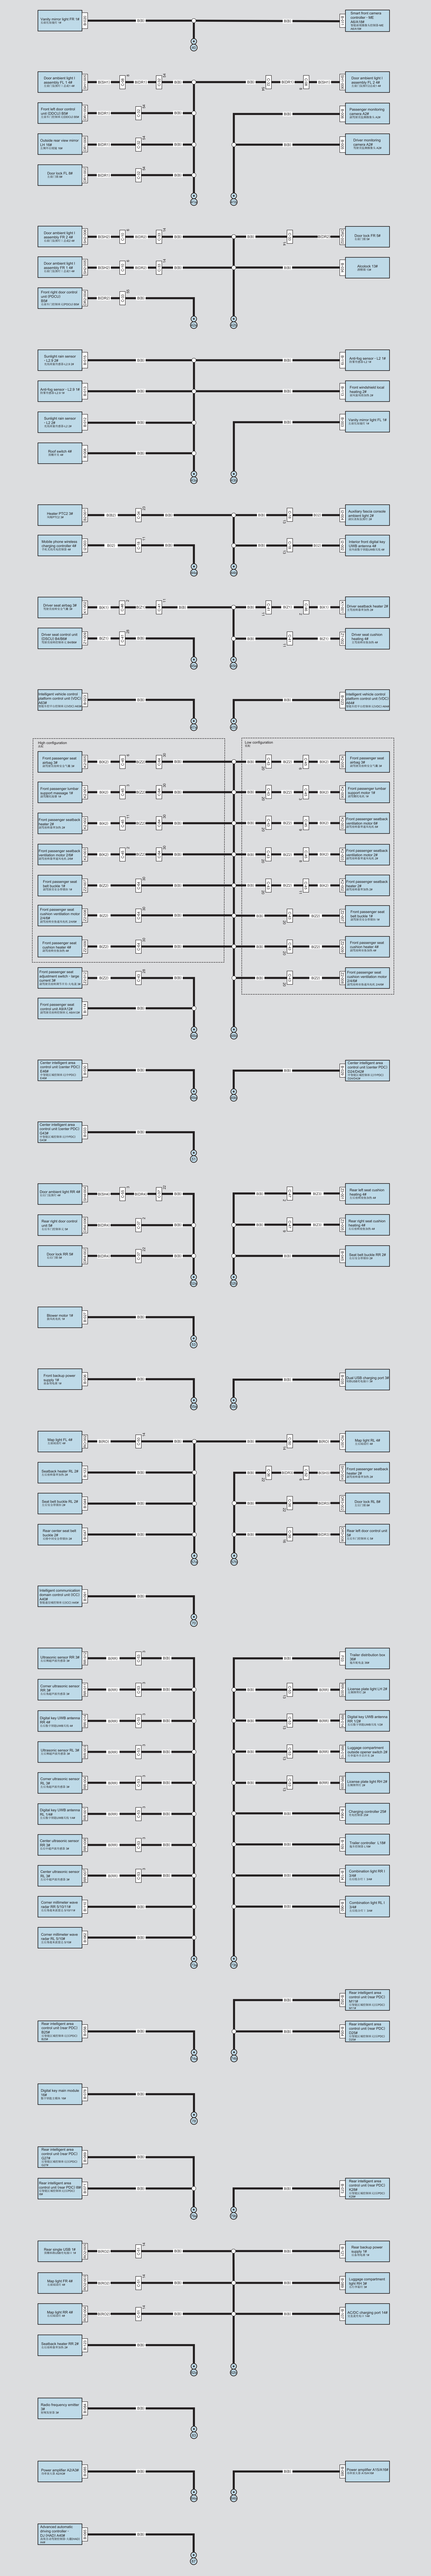

Trailer distribution box
拖车配电盒
1
3
FR01
Trailer IG relay
拖车IG继电器
2
5
FF-35
FF-36
FF-34
FF-33
R(B)
B(B)
R(B)
R/L(B)
R(B)
R(B)
L13
B-109
J14
B-072
73b
M6
B-108
Trailer controller
拖车控制器
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Trailer controller
拖车控制器

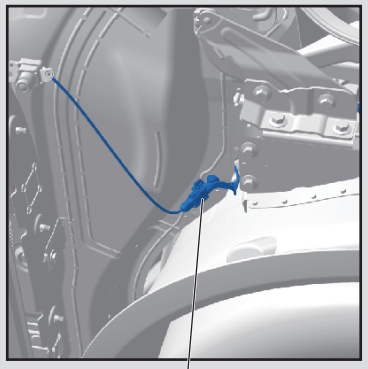

Trailer distribution box
拖车配电盒
FF17 30A
FF-17
FF-B+
R/Y(B)
Rear transfer distribution box
后中转配电盒

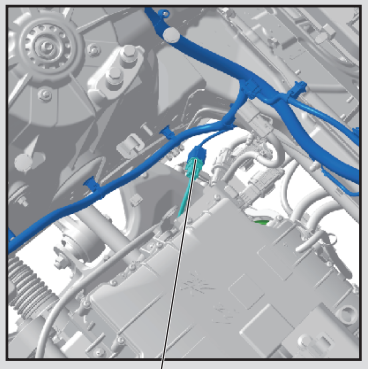

Cooling fan 3#
冷却风扇 3#
F-018
B(F)
11
Integrated brake control system IBC 1#
集成式制动控制器 1#
F-024
B(F)
12
Electric front drive system inverter 1#
前驱电驱动系统逆变器 1#
P2-001
B(P2)
C-63
4
B(F)
B(F)
C-33
4
B(P2)
G-001
Disconnection of sensor and actuator 3#
断开传感器和执行器 3#
Hood lock state SW 2#
发罩锁状态开关 2#
F-021
B(F)
13a
B(F)
13c
F-014
Combination light FL I 12#
左前组合灯 I 12#
Thermal management module 1#
热管理模块 1#
F-006
B(F)
14a
B(F)
14c
F-006
Thermal management module 1#
热管理模块 1#
High pitched horn 2#
高音喇叭 2#
F-022
B(F)
15
B(F)
F-020
Low pitched horn 2#
低音喇叭 2#
A/C compressor- 4WD 2#
空调压缩机-四驱 2#
P2-002
B(F2)
C-62
5
B(F)
B(F)
C-16
3
B(G)
G-001
Active intake grille control motor4#
主动进气格栅控制电机 4#
Electric front drive system inverter 8#
前驱电驱动系统逆变器 8#
P2-001
B(P2)
C-63
6
B(F)
17
Water heater PTC 4#
水暖PTC 4#
F-007
B(F)
19a
B(F)
19c
F-015
Front intelligent area control unit (front PDC) A1/A47#
前智能区域控制单元(前PDC) A1/A47#
Front intelligent area control unit (front PDC) B6#
前智能区域控制单元(前PDC) B6#
F-023
B(F)
Electric power steering control unit 1#
电动助力转向控制单元 1#
F-016
B(F)
21
Ultrasonic sensor FR 3#
右前侧超声波传感器 3#
FF-010
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-013
Front millimeter wave radar 5#
前向毫米波雷达 5#
Center ultrasonic sensor FR 3#
右前中超声波传感器 3#
FF-008
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-009
Corner ultrasonic sensor FR 3#
右前角超声波传感器 3#
Center ultrasonic sensor FL3#
左前中超声波传感器3#
FF-004
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-005
Front LOGO light 1#
前LOGO灯 1#
Ultrasonic sensor FL 3#
左前侧超声波传感器 3#
FF-002
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-003
Corner ultrasonic sensor FL 3#
左前角超声波传感器 3#
B(F)
C-15
11
B(FF)
FF-011
Digital key UWB antenna FR 2/4#
右前数字钥匙UWB天线 2/4#
B(F)
C-15
11
B(FF)
FF-001
Digital key UWB antenna FL 4#
左前数字钥匙UWB天线 4#
23a
23c
Integrated brake control system IBC 30#
集成式制动控制器 30#
F-024
B(F)
25
Front wiper 2#
前刮水器 2#
F-001
B(F)
27
Heater PTC1 1#
风暖PTC1 1#
F-003
B(F)
29


C-14
C-16
C-14
C-16
C-63
C-15
C-62
C-62
C-63
C-15


Central display A1#
中间显示屏 A1#
I-022
B(I)
Head up displa A3#/A4#
抬头显示器 A3#/A4#
I-010
B(I)
Infotainment control unit (CSC) A25#
信息娱乐控制单元(CSC) A25#
I-001
B(I)
61a
61b
Left outlet motor up/down outlete 1#
左侧风口电机上下风口 1#
I-012
B(I)
Diagnostic interface4/5#
诊断接口 4/5#
I-014
B(I)
Center outlet motor inline 2/4/8#
中出风口电机inline 2/4/8#
I-041
B(I)
Left outlet motor left/right outlet 1#
左侧风口电机左右风口 1#
I-011
B(I)
Spiral cable I 17#
时钟弹簧 I 17#
I-018
B(I)
Right outlet motor up/down outlet 1#
右侧风口电机上下风口 1#
I-031
B(I)
Footwell light FL 3#
左前脚窝灯 3#
I-016
B(I)
Right outlet motor left/right outlet 1#
右侧风口电机左右风口 1#
I-035
B(I)
Footwell light FR 3#
右前脚窝灯 3#
I-037
B(I)
Instrument panel single USB charging port 1#
左前数字钥匙UWB天线 1#
I-034
B(I)
Combination switch 6#
组合开关 6#
I-017
B(I)
Damper motor filter 3#
风门电机滤波器 3#
I-030
B(I)
Spiral cable II 1#
时钟弹簧 II 1#
I-016
B(I)
62a
62b


Vanity mirror light FR 1M
Smart front camera controller - ME
Door ambient light / assembly FL 1.5M
Door ambient light / assembly FL LHD
Front left door control unit DOCU1 RHF
Passenger monitoring camera A2M
Outside rear view mirror camera
Driver monitoring camera A2M
Door lock FL 6P
Door ambient light / assembly FR 1.5M
Door lock FR 5M
Door ambient light / assembly FR 1M
Ambient light 10M
Front right door control unit DOCU2
Sunlight rain sensor - LZ 2.5M
Anti-fog sensor - LZ 1M
Anti-fog sensor - LZ 2.1M
Front windshield local heating 4M
Sunlight rain sensor - LZ 2M
Vanity mirror light FL 1M
Roof switch 4P
Heater (PTC) 3P
Auxiliary fascia console ambient light 2M
Mobile phone wireless charging module 4P
Interior front digital key reader 4M
Driver seat airbag 3P
Driver seatback heater 2P
Driver seat control unit with memory
Driver seat cushion heater 2P
Intelligent vehicle control platform control unit (VCU) 4A3P
Intelligent vehicle control platform control unit (VCU) 4A4P
High configuration
Low configuration
Front passenger seat cushion heater 2P
Front passenger lumbar support massage 6P
Front passenger seatback heater 2M
Front passenger seatback ventilation motor 6P
Front passenger seatback ventilation motor 2M
Front passenger seat belt buckle 1M
Front passenger seat cushion ventilation motor 6P
Front passenger seat cushion heater 4P
Front passenger seat adjustment switch - power 5P
Front passenger seat control unit ADAS 2M
Center intelligent area control unit Center PDCU 4A3M
Center intelligent area control unit Center PDCU 4A4M
Door ambient light RR 4P
Rear left door control unit
Door lock RR 5P
Rear left door control unit
Rear left seat cushion heating 4P
Rear right seat cushion heating 4P
Seat belt buckle RR 2M
Shoot motor 1P
Front backup power supply 3P
Roof USB charging port 3M
Map light RL 4P
Seatback heater RL 2M
Seat belt buckle RL 2M
Rear center seat belt buzzer 2P
Rear left door control unit
Intelligent communication domain control unit (DCU) 4A3M
Ultrasonic sensor RR 3M
Corner ultrasonic sensor RR 3M
Digital key UWB antenna RR 3M
Ultrasonic sensor RL 3M
Corner ultrasonic sensor RL 3M
Digital key UWB antenna RL 3M
Center ultrasonic sensor RR 3M
Corner ultrasonic sensor RL 3M
Corner millimeter wave radar RR 5/10/14M
Corner millimeter wave radar RL 5/10/14M
Trailer distribution box 4M
License plate light LH 2M
Luggage compartment camera scanner switch 3P
License plate light RH 2M
Charging controller 2M
Trailer controller 3.5M
Combination light RR1 / 2M
Combination light RL1 / 2M
Rear intelligent area control unit rear PDCU 4A3M
Rear intelligent area control unit rear PDCU 4A4M
Digital key main module 4P
Rear intelligent area control unit rear PDCU 3A7M
Rear intelligent area control unit rear PDCU RM 4M
Rear angle USB 1M
Rear backup power supply 1P
Map light FR 4P
Luggage compartment light RH 4P
Map light RR 4P
RCDC charging unit 1M
Seatback heater RR 2M
Radio frequency emitter 2P
Power amplifier A2A3M
Power amplifier A12A14M
Advanced automatic driving controller (ADC) A4M





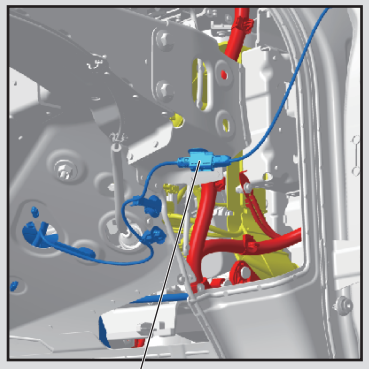
C-57

C-13

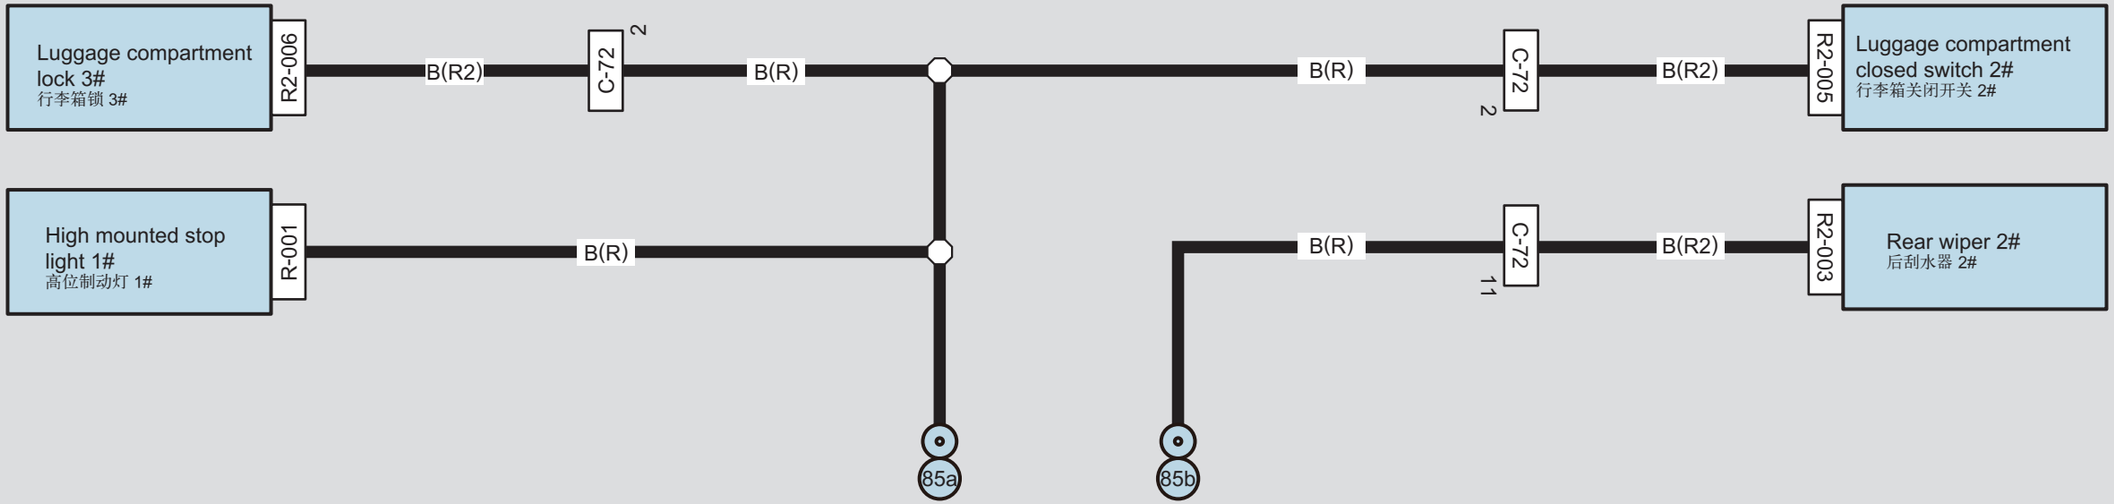
C-57

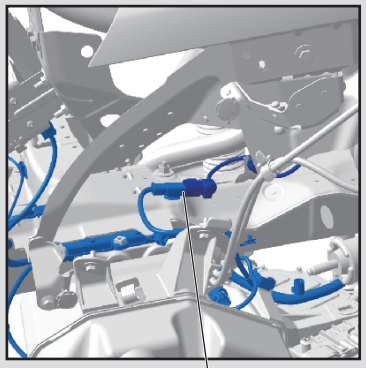
C-13

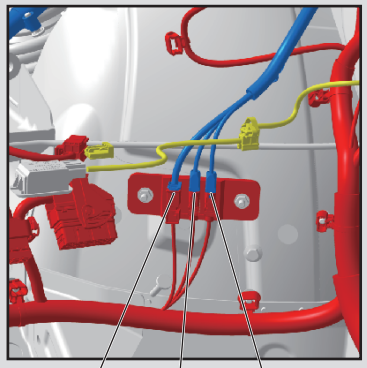
C-58



C-58


Luggage compartment lock 3#
行李箱锁 3#
R2-006
B(R2)
C-72
2
B(R)
B(R)
C-72
2
B(R2)
R2-005
Luggage compartment closed switch 2#
行李箱关闭开关 2#
High mounted stop light 1#
高位制动灯 1#
R-001
B(R)
B(R)
C-72
11
B(R2)
R2-003
Rear wiper 2#
后刮水器 2#
85a
85b





C-12

C-05

C-06

C-07

C-12

C-05

C-07

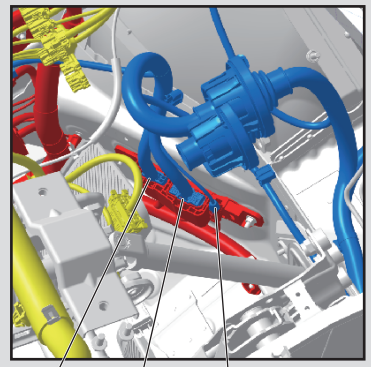
C-06

C-11

C-04

C-02

C-01

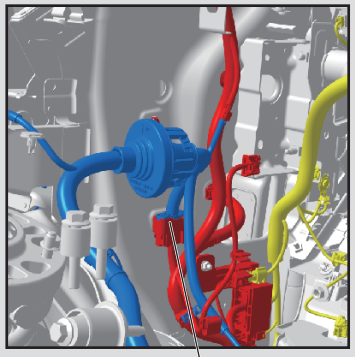


C-11

C-01

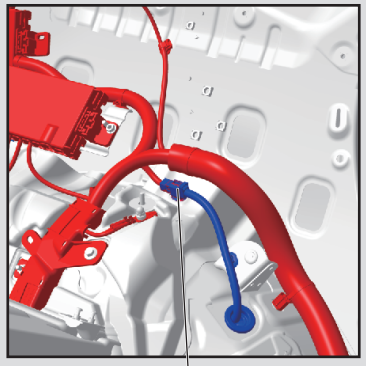
C-02

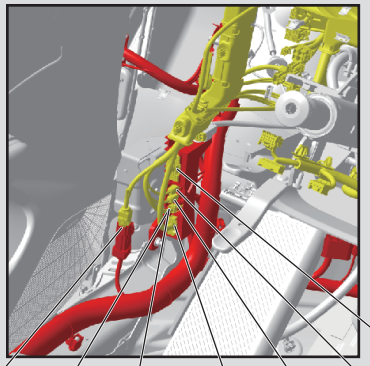
C-04



C-09

C-09





C-38

C-29

C-26

C-30

C-20

C-27

C-28

C-19

C-38

C-18

C-21

C-19

C-26

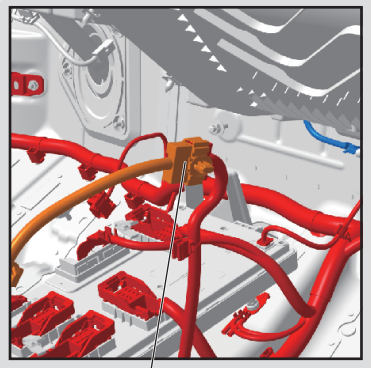
C-30

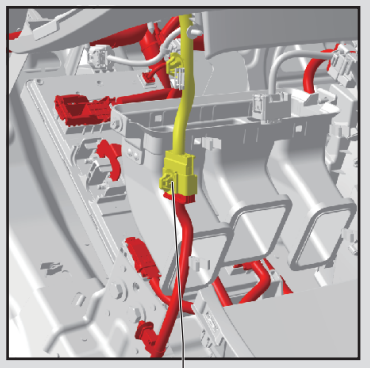
C-20

C-27

C-28

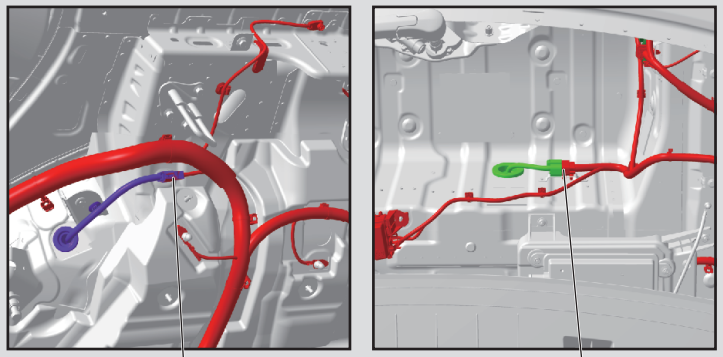
C-29





C-18

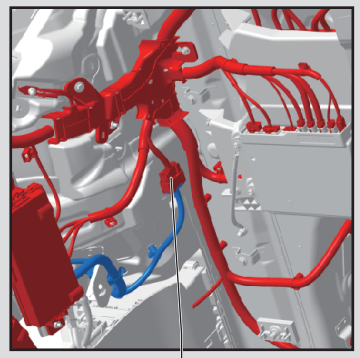
C-21



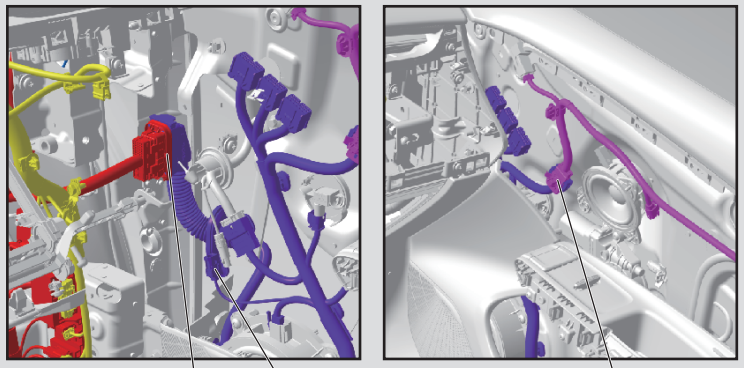
C-39

C-17

C-22 C-23 C-24 C-25 C-31



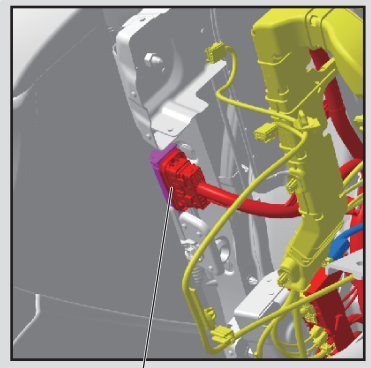
C-35

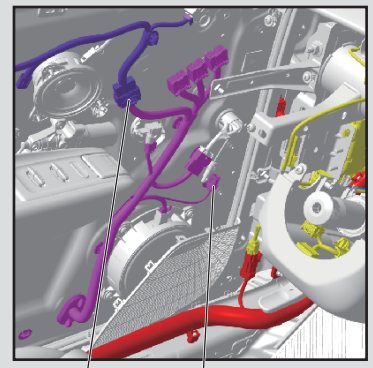


C-33 C-06 C-10

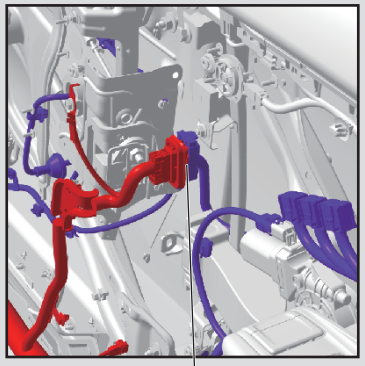
C-33 C-06 C-10

C-32 C-59 C-08

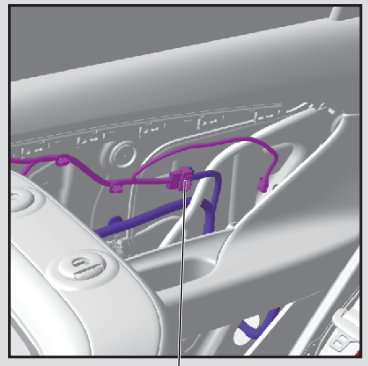




C-32 C-08 C-59

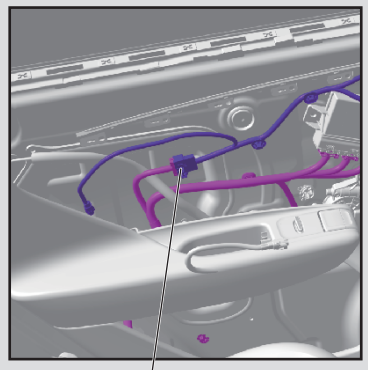


C-37

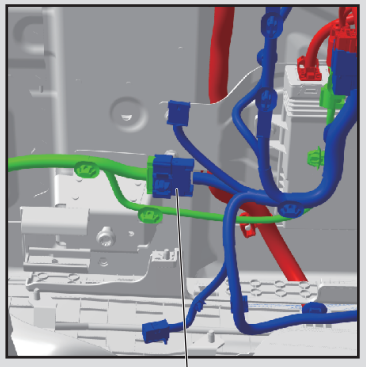


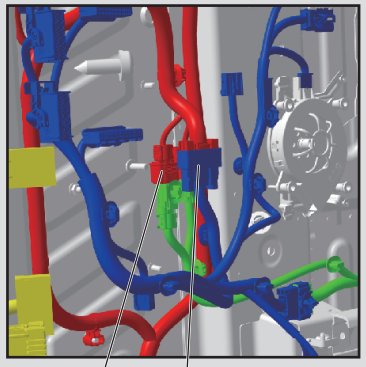
C-55

C-36



C-52





C-45

C-40

C-41

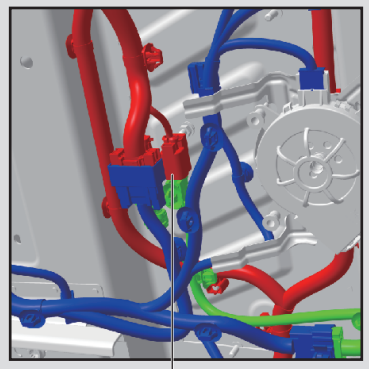
C-45

C-41

C-40

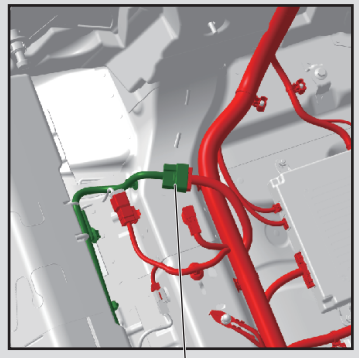
C-42

C-46



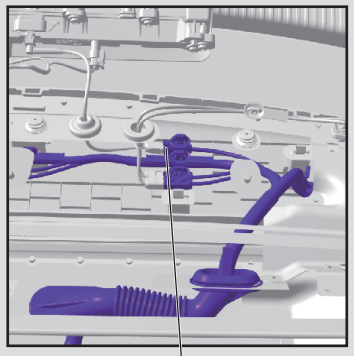
C-46

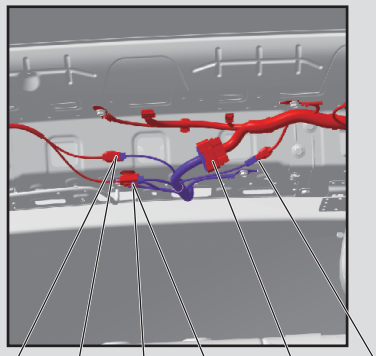
C-42



C-47

C-47



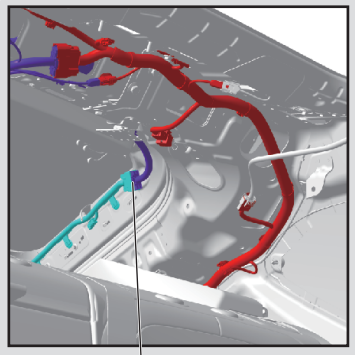


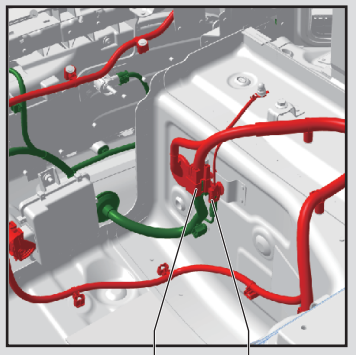
C-67

C-70 C-71 C-68 C-69 C-65 C-66

C-70 C-71 C-68 C-69 C-65 C-66 C-67 C-72

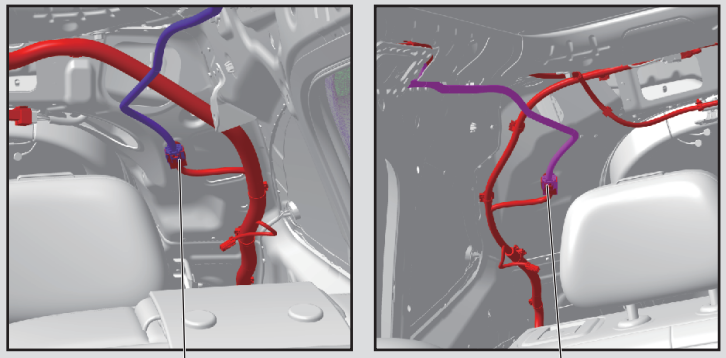
C-54 C-53





C-72

C-53 C-54

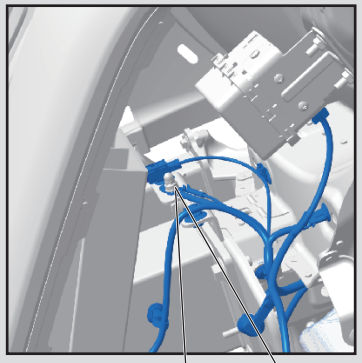


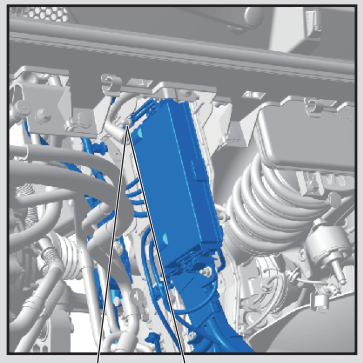
C-50

C-51

C-51

C-50

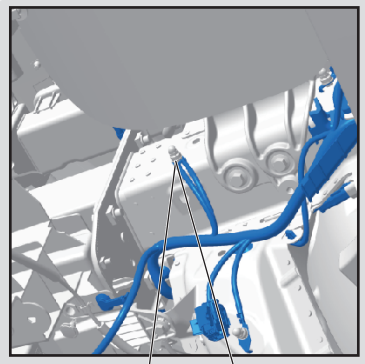


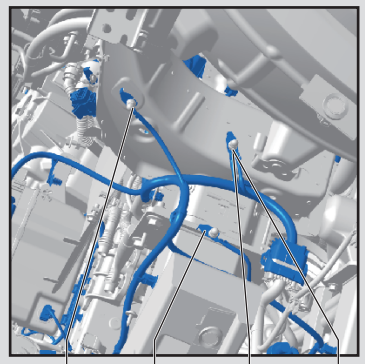


16a 16b 19a 19b

16a 16b

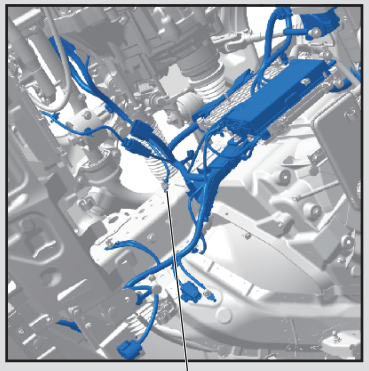
13a 13b 11 23a 23b 15 19a 19b

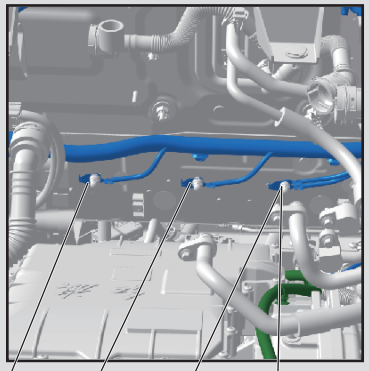




13a 13b

15 11 23a 23b





21

25

12

14a

14b

25

12

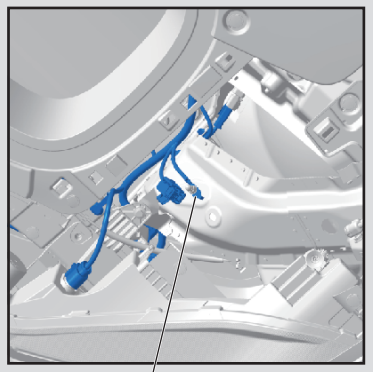
14a

14b

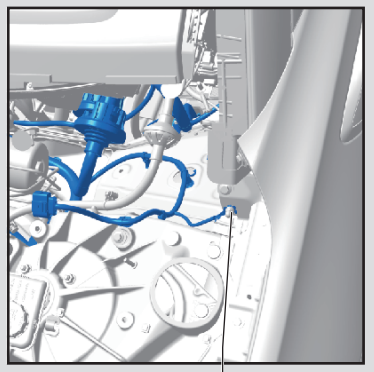
21

17

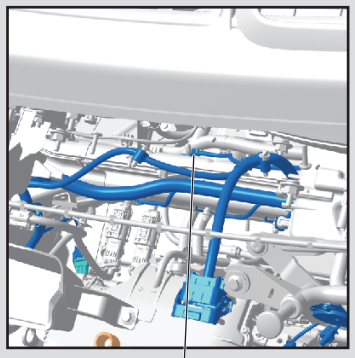
27



17

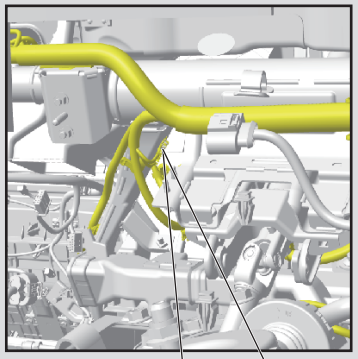


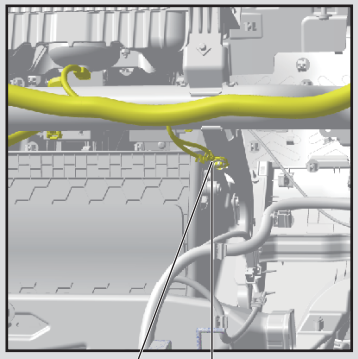
27



29

29





61a

61b

62a

62b

62a

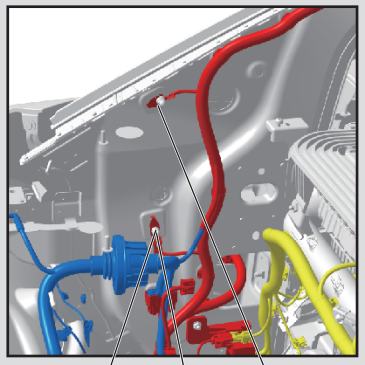
62b

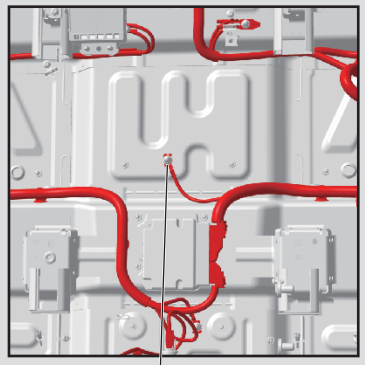
65

61a

61b

65

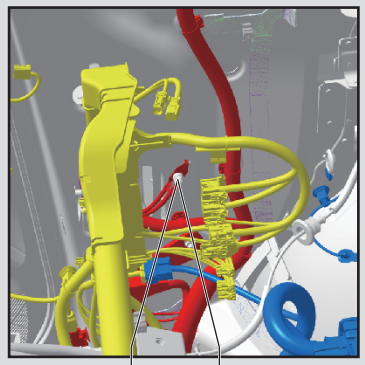


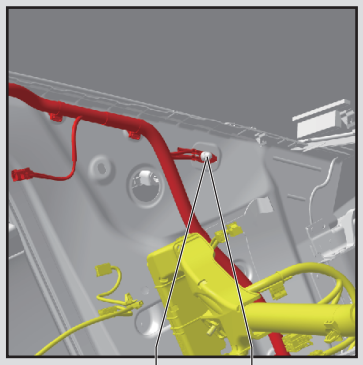


42a 42b 40 46

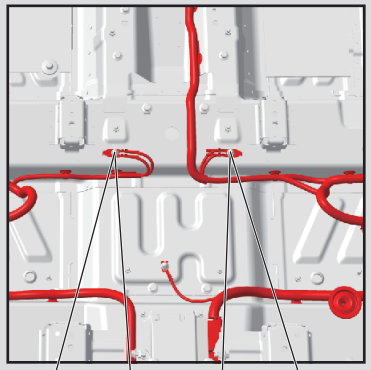
42a 42b 40

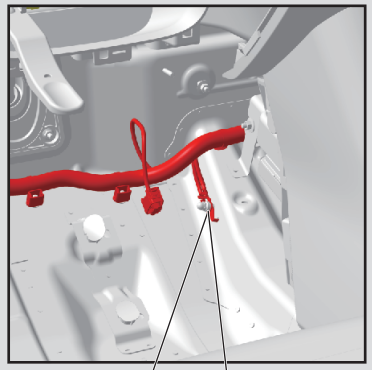
43a 41a 41b 43b 46





43a 43b 41a 41b

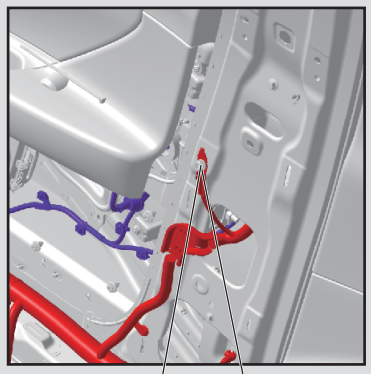




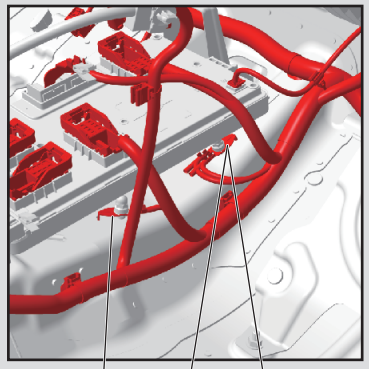
45a 45b 48a 48b 47a 47b

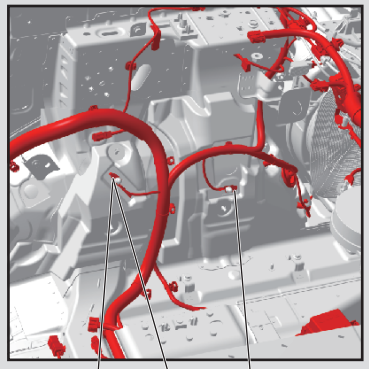
47a 47b

44a 44b 51 48a 48b 45a 45b 52a 52b



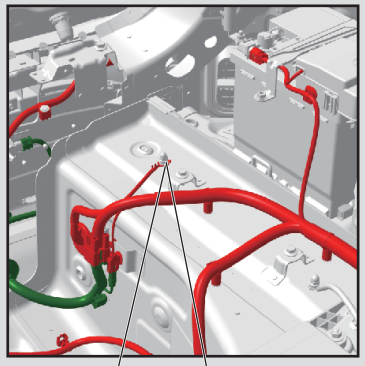
51 44a 44b 52a 52b

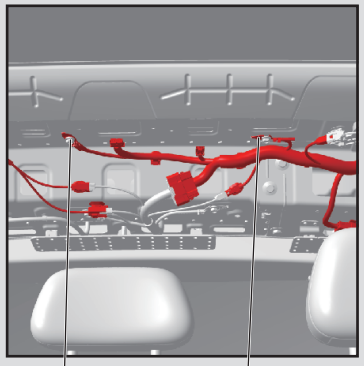




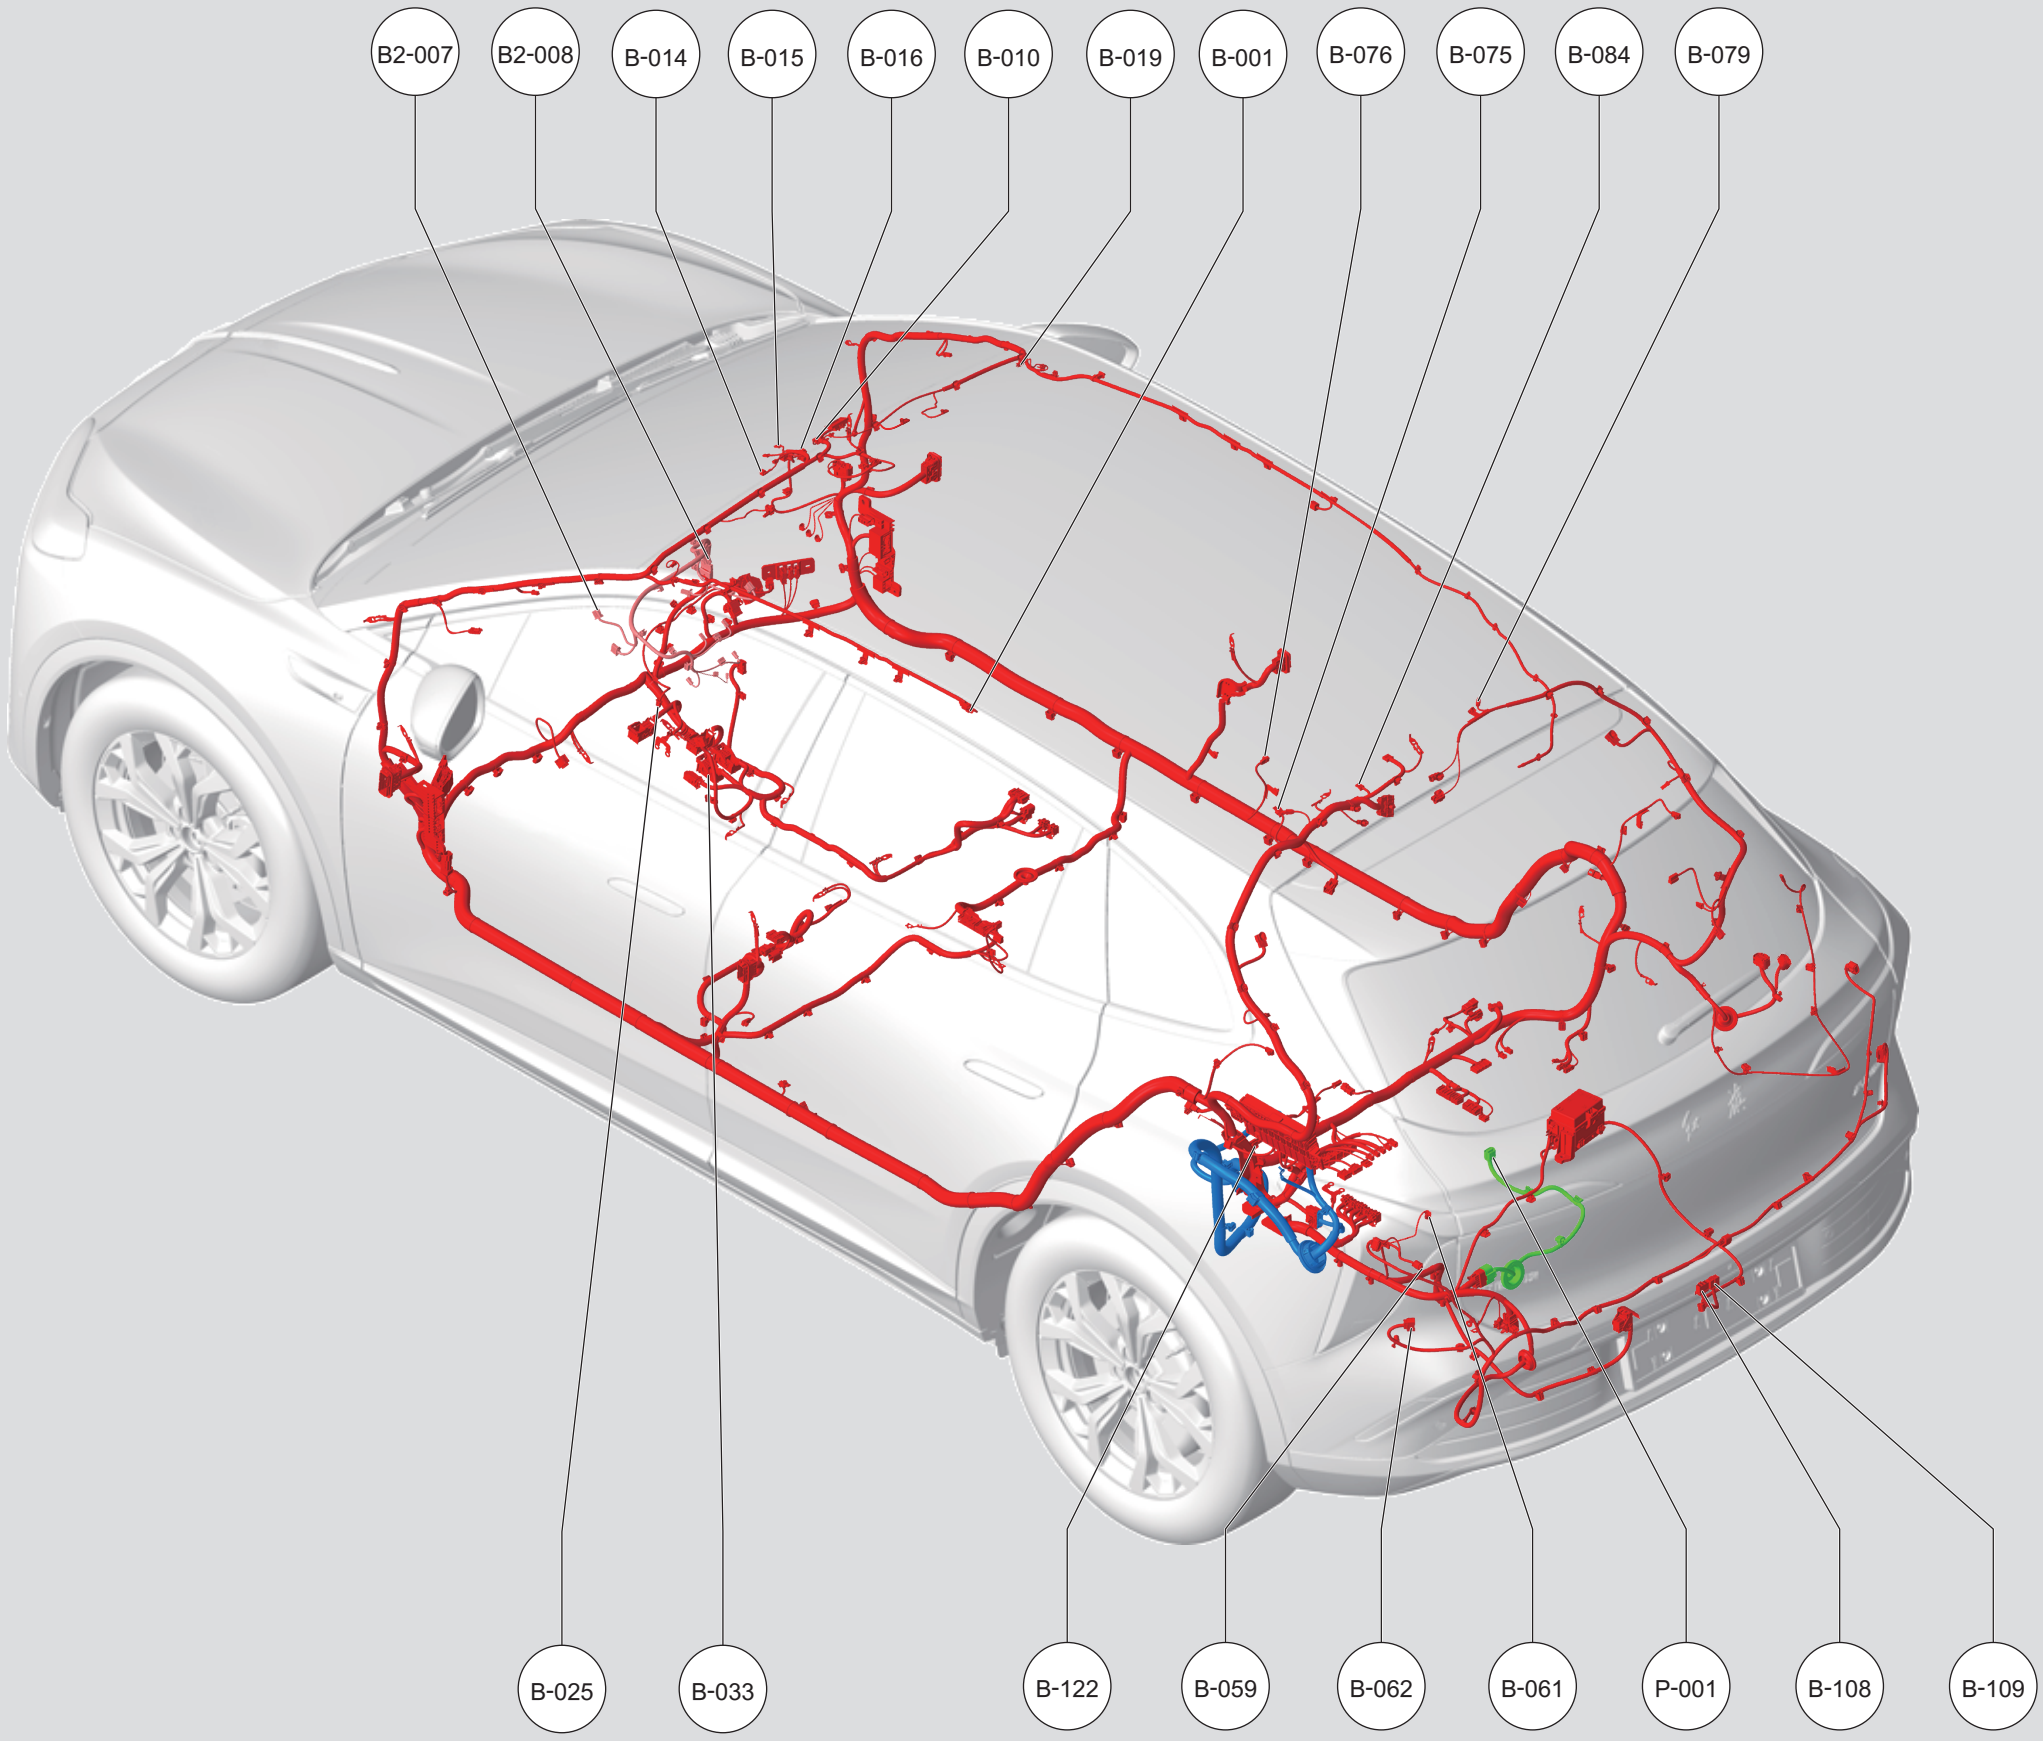


55a 55b 57a 57b


73a
73b


78
83

78
83
79a
79b
71
73a
73b
74a
74b
79a
79b
74a
74b
71



B-001 Left side curtain shield airbag
左侧侧气帘

B-010 Front view wide angle camera (right)
前视广角摄像头(右)

B-014 Front view wide angle camera (left)
前视广角摄像头(左)

B-015 Sunlight rain sensor - L2.9
光线雨量传感器-L2.9

B-016 Front view narrow angle camera
前视窄角摄像头

B-019 Front passenger sun visor switch
副驾驶席遮阳板开关

B-025 Center intelligent area control unit (center PDC) B
中智能区域控制单元(中PDC)B

B-033 Center intelligent area control unit (center PDC) G
中智能区域控制单元(中PDC)G

B-059 Battery sensor
蓄电池传感器

B-061 Diagnostic interface 3
诊断接口3

B-062 Corner millimeter wave radar RL
左后角毫米波雷达

B-075 Passenger side acceleration side collision sensor
乘客侧加速度侧碰传感器

B-076 Seat belt retractor FR
右前安全带卷收器

B-079 GNSS antenna RH
右GNSS天线

B-084 Radio frequency emitter
射频发射器

B-108 Trailer controller M
拖车控制器M

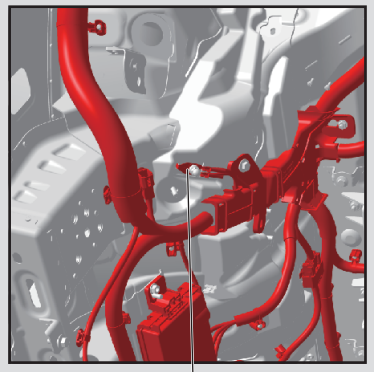
B-109 Trailer controller L
拖车控制器L

B-122 Seatback heater RL
左后座椅靠背加热

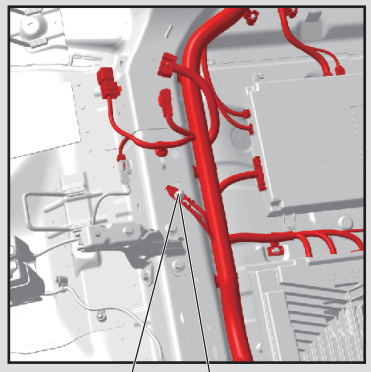
B2-007 Defroster motor
除霜电机

B2-008 Right temperature damper motor
右温度风门电机

P-001 Electric rear drive system inverter
后驱电驱动系统逆变器



87



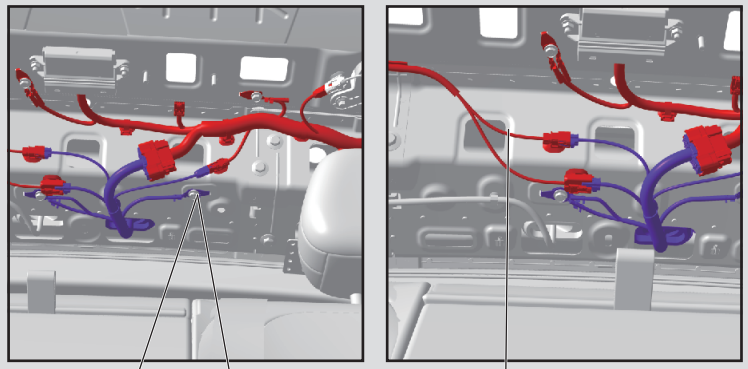
84a

84b

87

84a

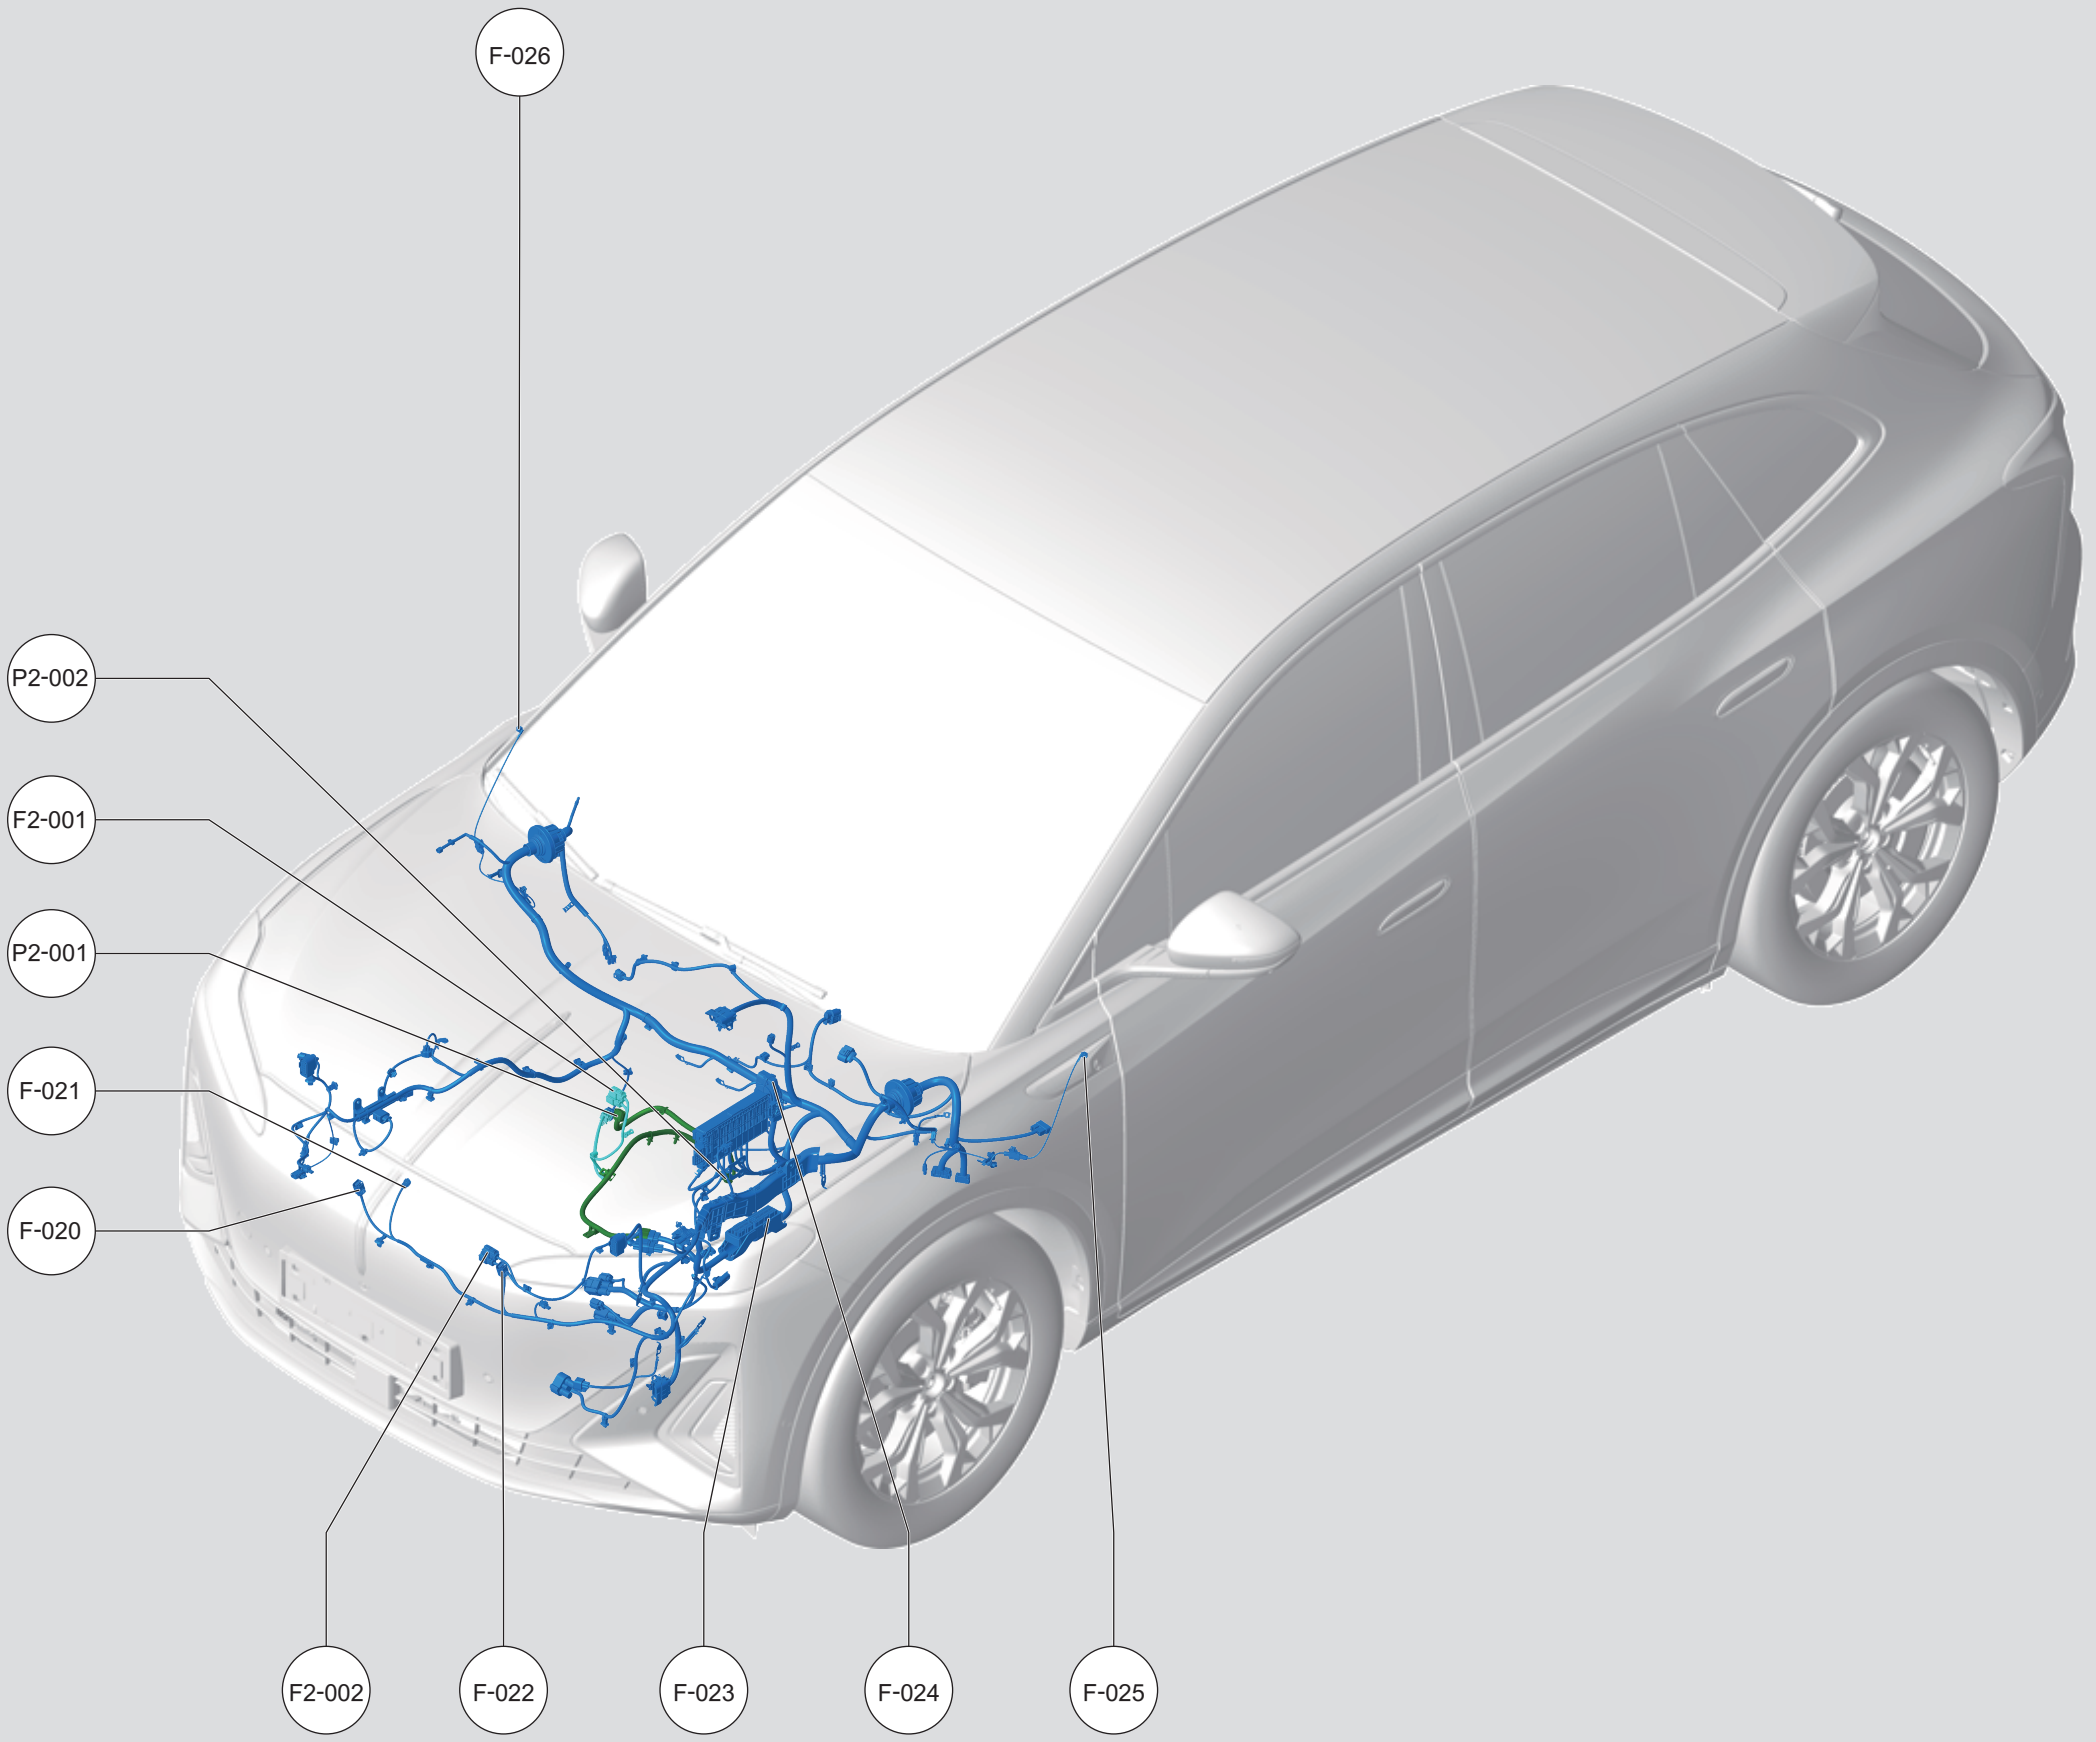
84b


85a
85b

86

85a
85b
86
88

88



F-020 Low pitched horn
低音喇叭

F-021 Hood lock state SW
发罩锁状态开关

F-022 High pitched horn
高音喇叭

F-023 Front intelligent area control unit (front PDC) B
前智能区域控制单元(前PDC)B

F-024 Integrated brake control system IBC
集成式制动控制系统IBC

F-025 Left view camera - DJ
左侧视摄像头-大疆

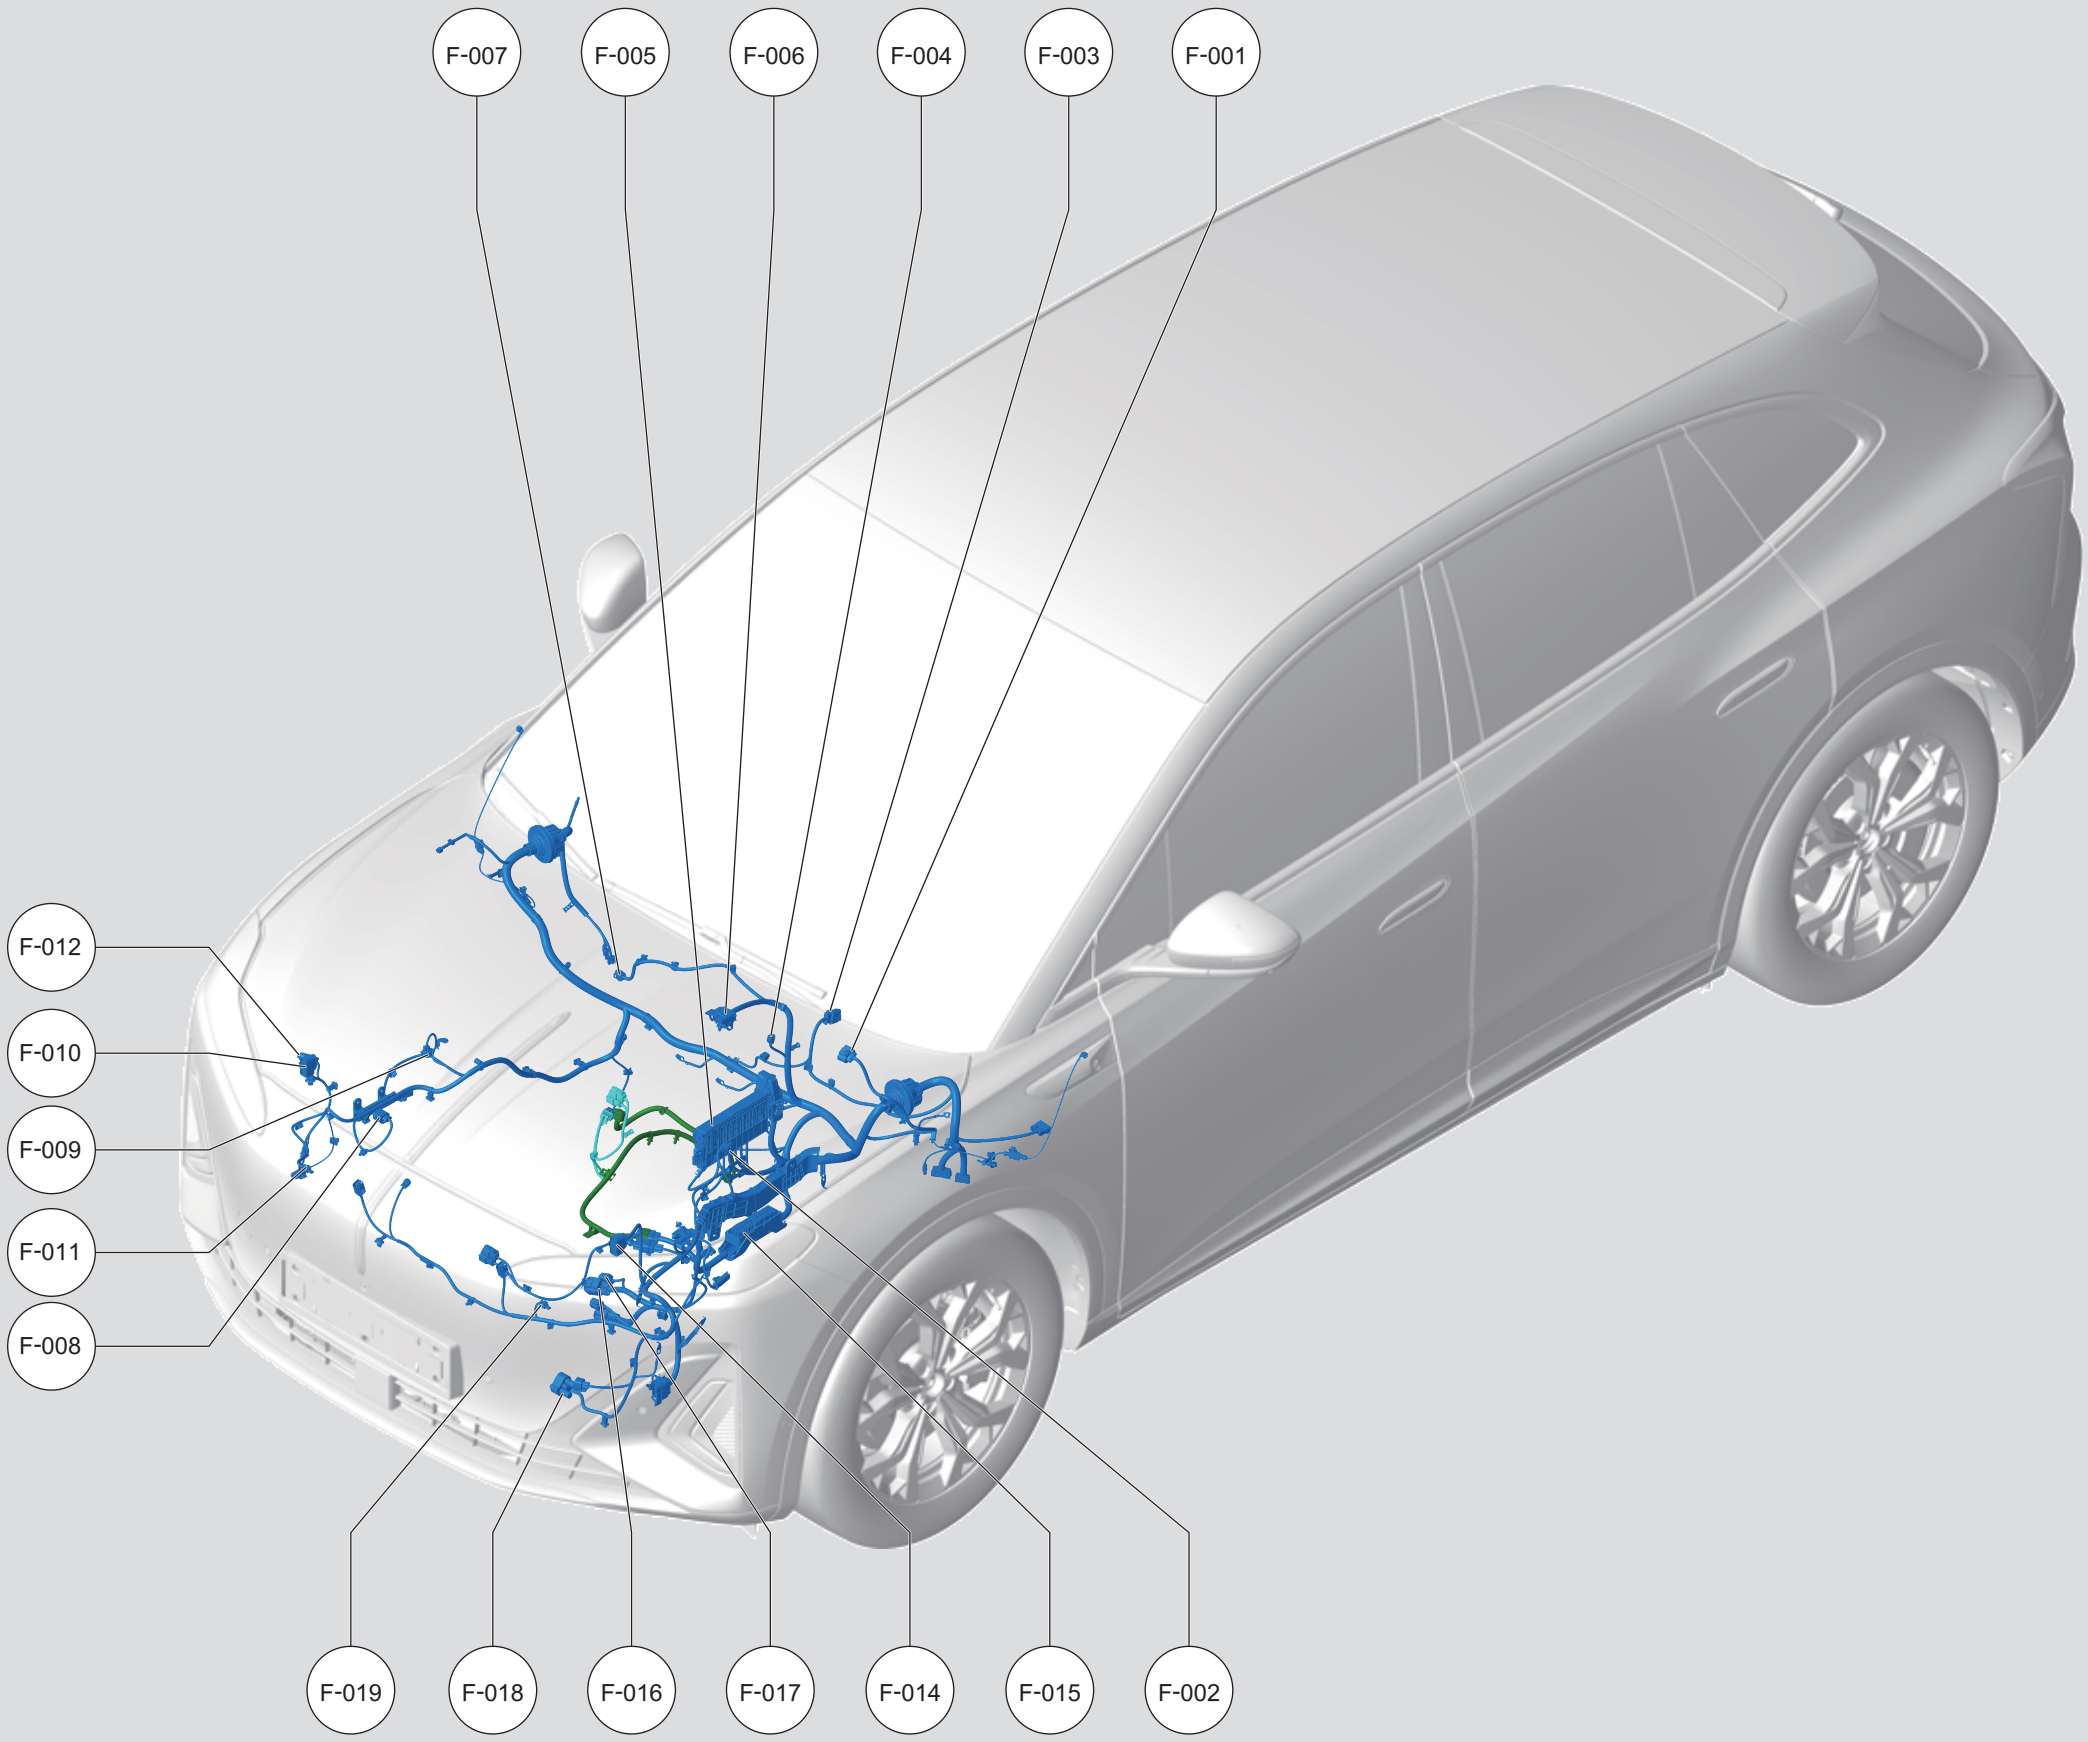
F-026 Right view camera - DJ
右侧视摄像头-大疆

F2-001 A/C compressor - 2WD
空调压缩机-两驱

F2-002 A/C compressor- 4WD
空调压缩机-四驱

P2-001 Electric front drive system inverter
前驱电驱动系统逆变器

P2-002 Disconnection of sensor and actuator
断开传感器和执行器



F-001 Front wiper
前刮水器

F-002 Front intelligent area control unit (front PDC) E
前智能区域控制单元(前PDC)E

F-003 Heater PTC1
风暖PTC1

F-004 Brake fluid level sensor
制动液位传感器

F-005 Refrigerant temp sensor
制冷剂温度传感器

F-006 Thermal management module
热管理模块

F-007 Water heater PTC
水暖PTC

F-008 Washing fluid level sensor
洗涤液位传感器

F-009 Washer pump
洗涤泵

F-010 Combination light FR I
右前组合灯 I

F-011 Gravity acceleration sensor FR
右前重力加速度传感器

F-012 Pedestrian alarm speaker
行人警示扬声器

F-014 Combination light FL I
左前组合灯 I

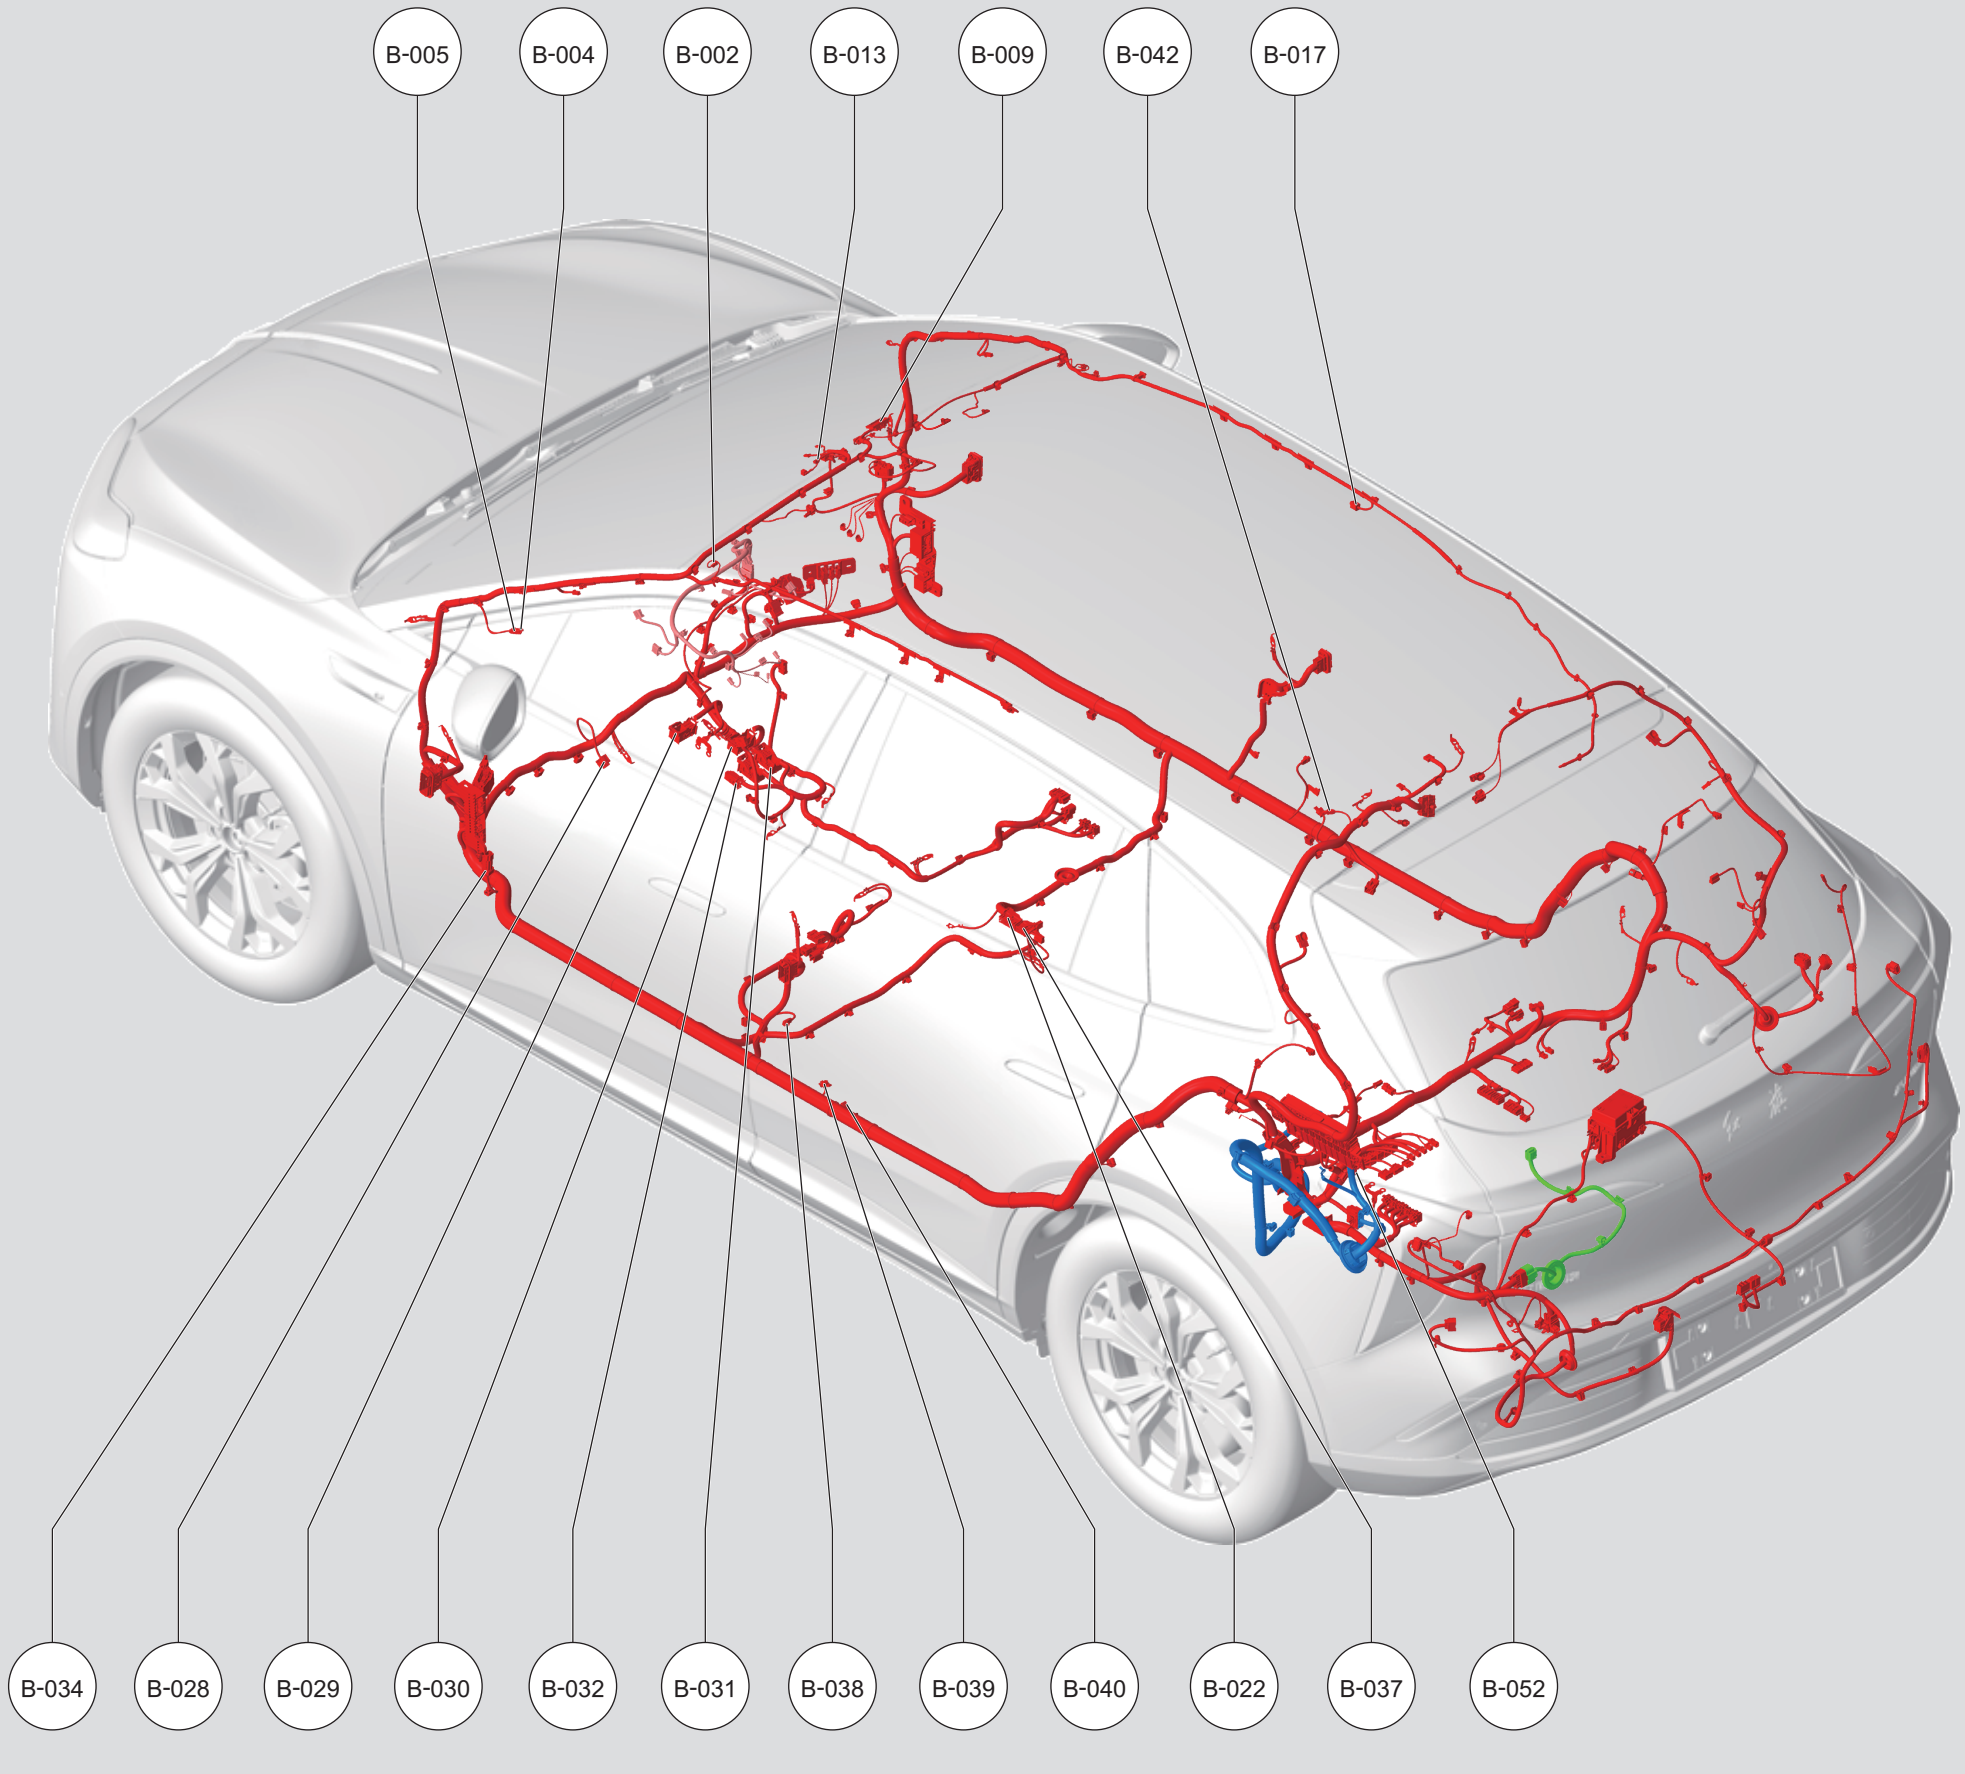
F-015 Front intelligent area control unit (front PDC) A
前智能区域控制单元(前PDC)A

F-016 Electric power steering control unit A
电动助力转向控制单元A

F-017 Electric power steering control unit B
电动助力转向控制单元B

F-018 Cooling fan
冷却风扇

F-019 Gravity acceleration sensor FL
左前重力加速度传感器



B-002 Driver sun visor switch
驾驶席遮阳板开关

B-004 Driver monitoring camera B
驾驶员监测摄像头B

B-005 Driver monitoring camera A
驾驶员监测摄像头A

B-009 Roof USB
顶棚USB

B-013 Anti-fog sensor - L2.9
防雾传感器-L2.9

B-017 Right side curtain shield airbag
右侧侧气帘

B-022 Airbag control unit(ACU) B
安全气囊控制单元(ACU) B

B-028 Electronic accelerator pedal
电子油门踏板

B-029 Center intelligent area control unit (center PDC) D
中智能区域控制单元(中PDC)D

B-030 Center intelligent area control unit (center PDC) E
中智能区域控制单元(中PDC)E

B-031 Center intelligent area control unit (center PDC) H
中智能区域控制单元(中PDC)H

B-032 Center intelligent area control unit (center PDC) F
中智能区域控制单元(中PDC)F

B-034 Alcolock
酒精锁

B-037 Airbag control unit (ACU) A
安全气囊控制单元(ACU) A

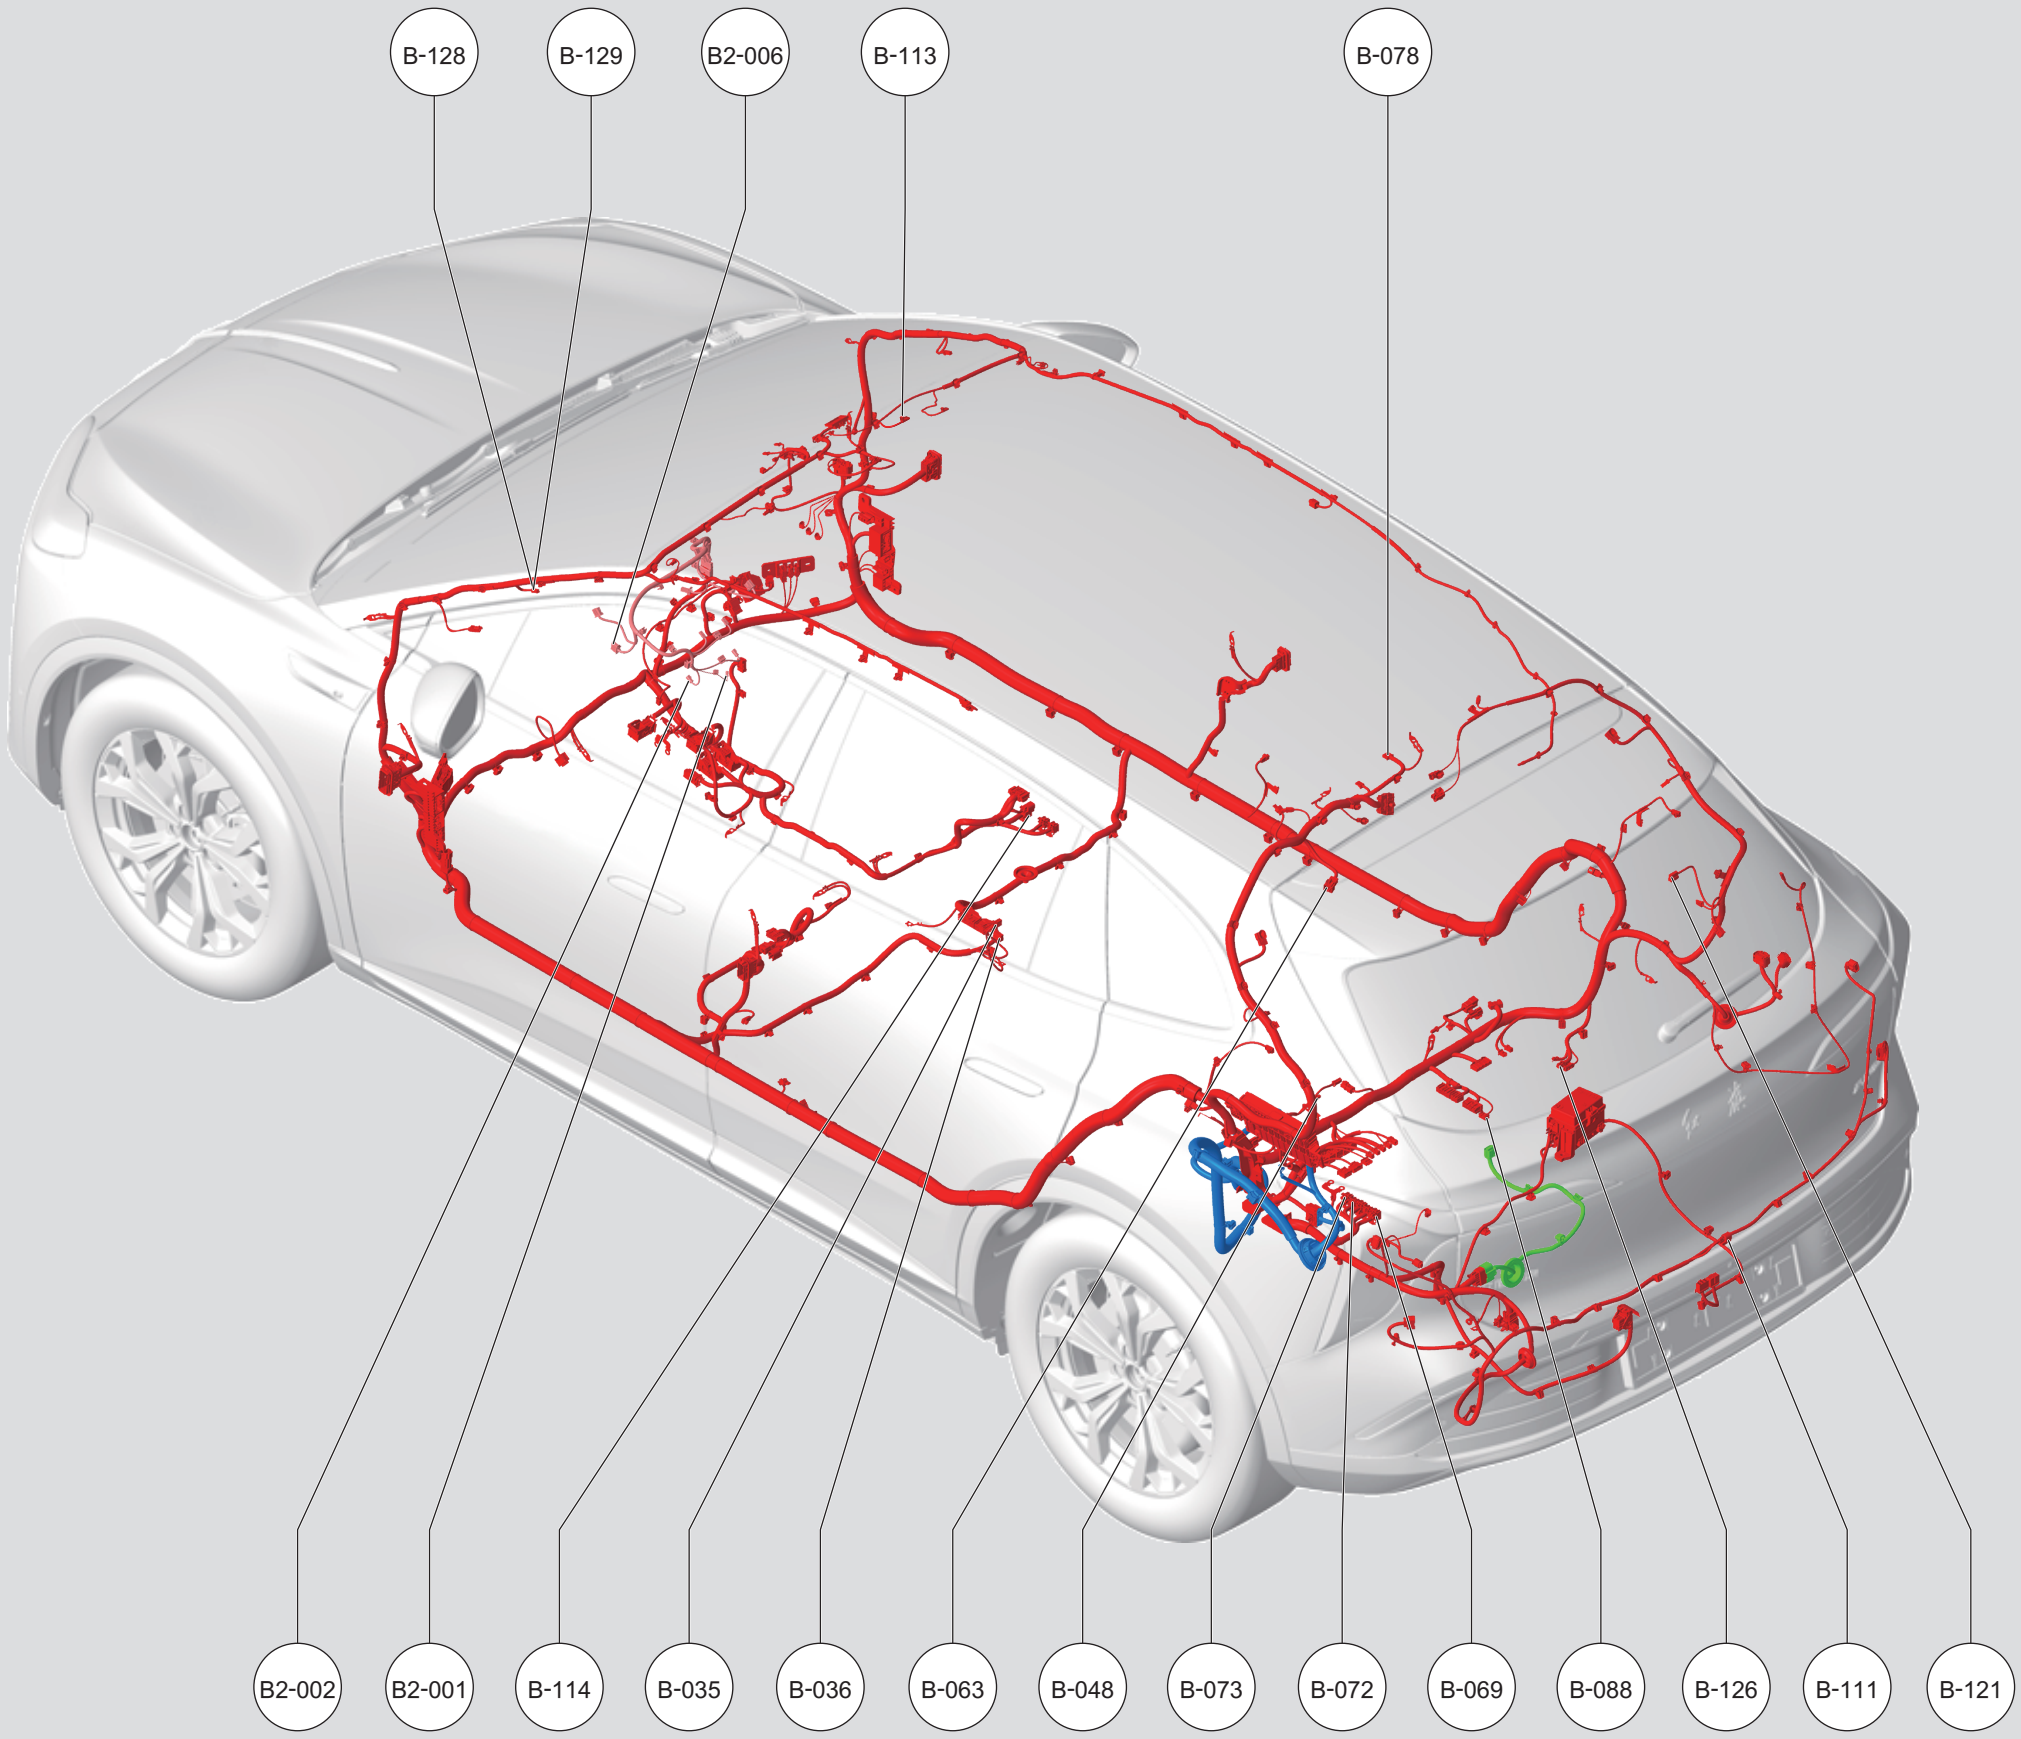
B-038 Seat belt retractor FL
左前安全带卷收器

B-039 Driver acceleration side collision sensor
驾驶员加速度侧碰传感器

B-040 Driver seat belt end plate pretensioner
驾驶员安全带端片预紧

B-042 GNSS antenna LH
左GNSS天线

B-052 Rear intelligent area control unit (rear PDC) M
后智能区域控制单元(后PDC)M



B-035 Dual USB charging port
双路USB充电接口

B-036 Front backup power supply
前备用电源

B-048 Seat belt buckle RL
左后安全带锁扣

B-063 Luggage compartment electric support rod LH
左侧行李箱电动撑杆

B-069 Rear intelligent area control unit (rear PDC) G
后智能区域控制单元(后PDC)G

B-072 Rear intelligent area control unit (rear PDC) J
后智能区域控制单元(后PDC)J

B-073 Rear intelligent area control unit (rear PDC) K
后智能区域控制单元(后PDC)K

B-078 Digital key main module
数字钥匙主模块

B-088 Power amplifier D
功率放大器D

B-111 Luggage compartment outer low frequency antenna
行李箱外低频天线

B-113 Front windshield local heating
前风窗局部加热

B-114 Front passenger seat control unit A
副驾驶员座椅控制单元A

B-121 Rear backup power supply
后备用电源

B-126 Intelligent communication domain control unit (ICC) 5G
智能通信域控制单元(ICC)5G

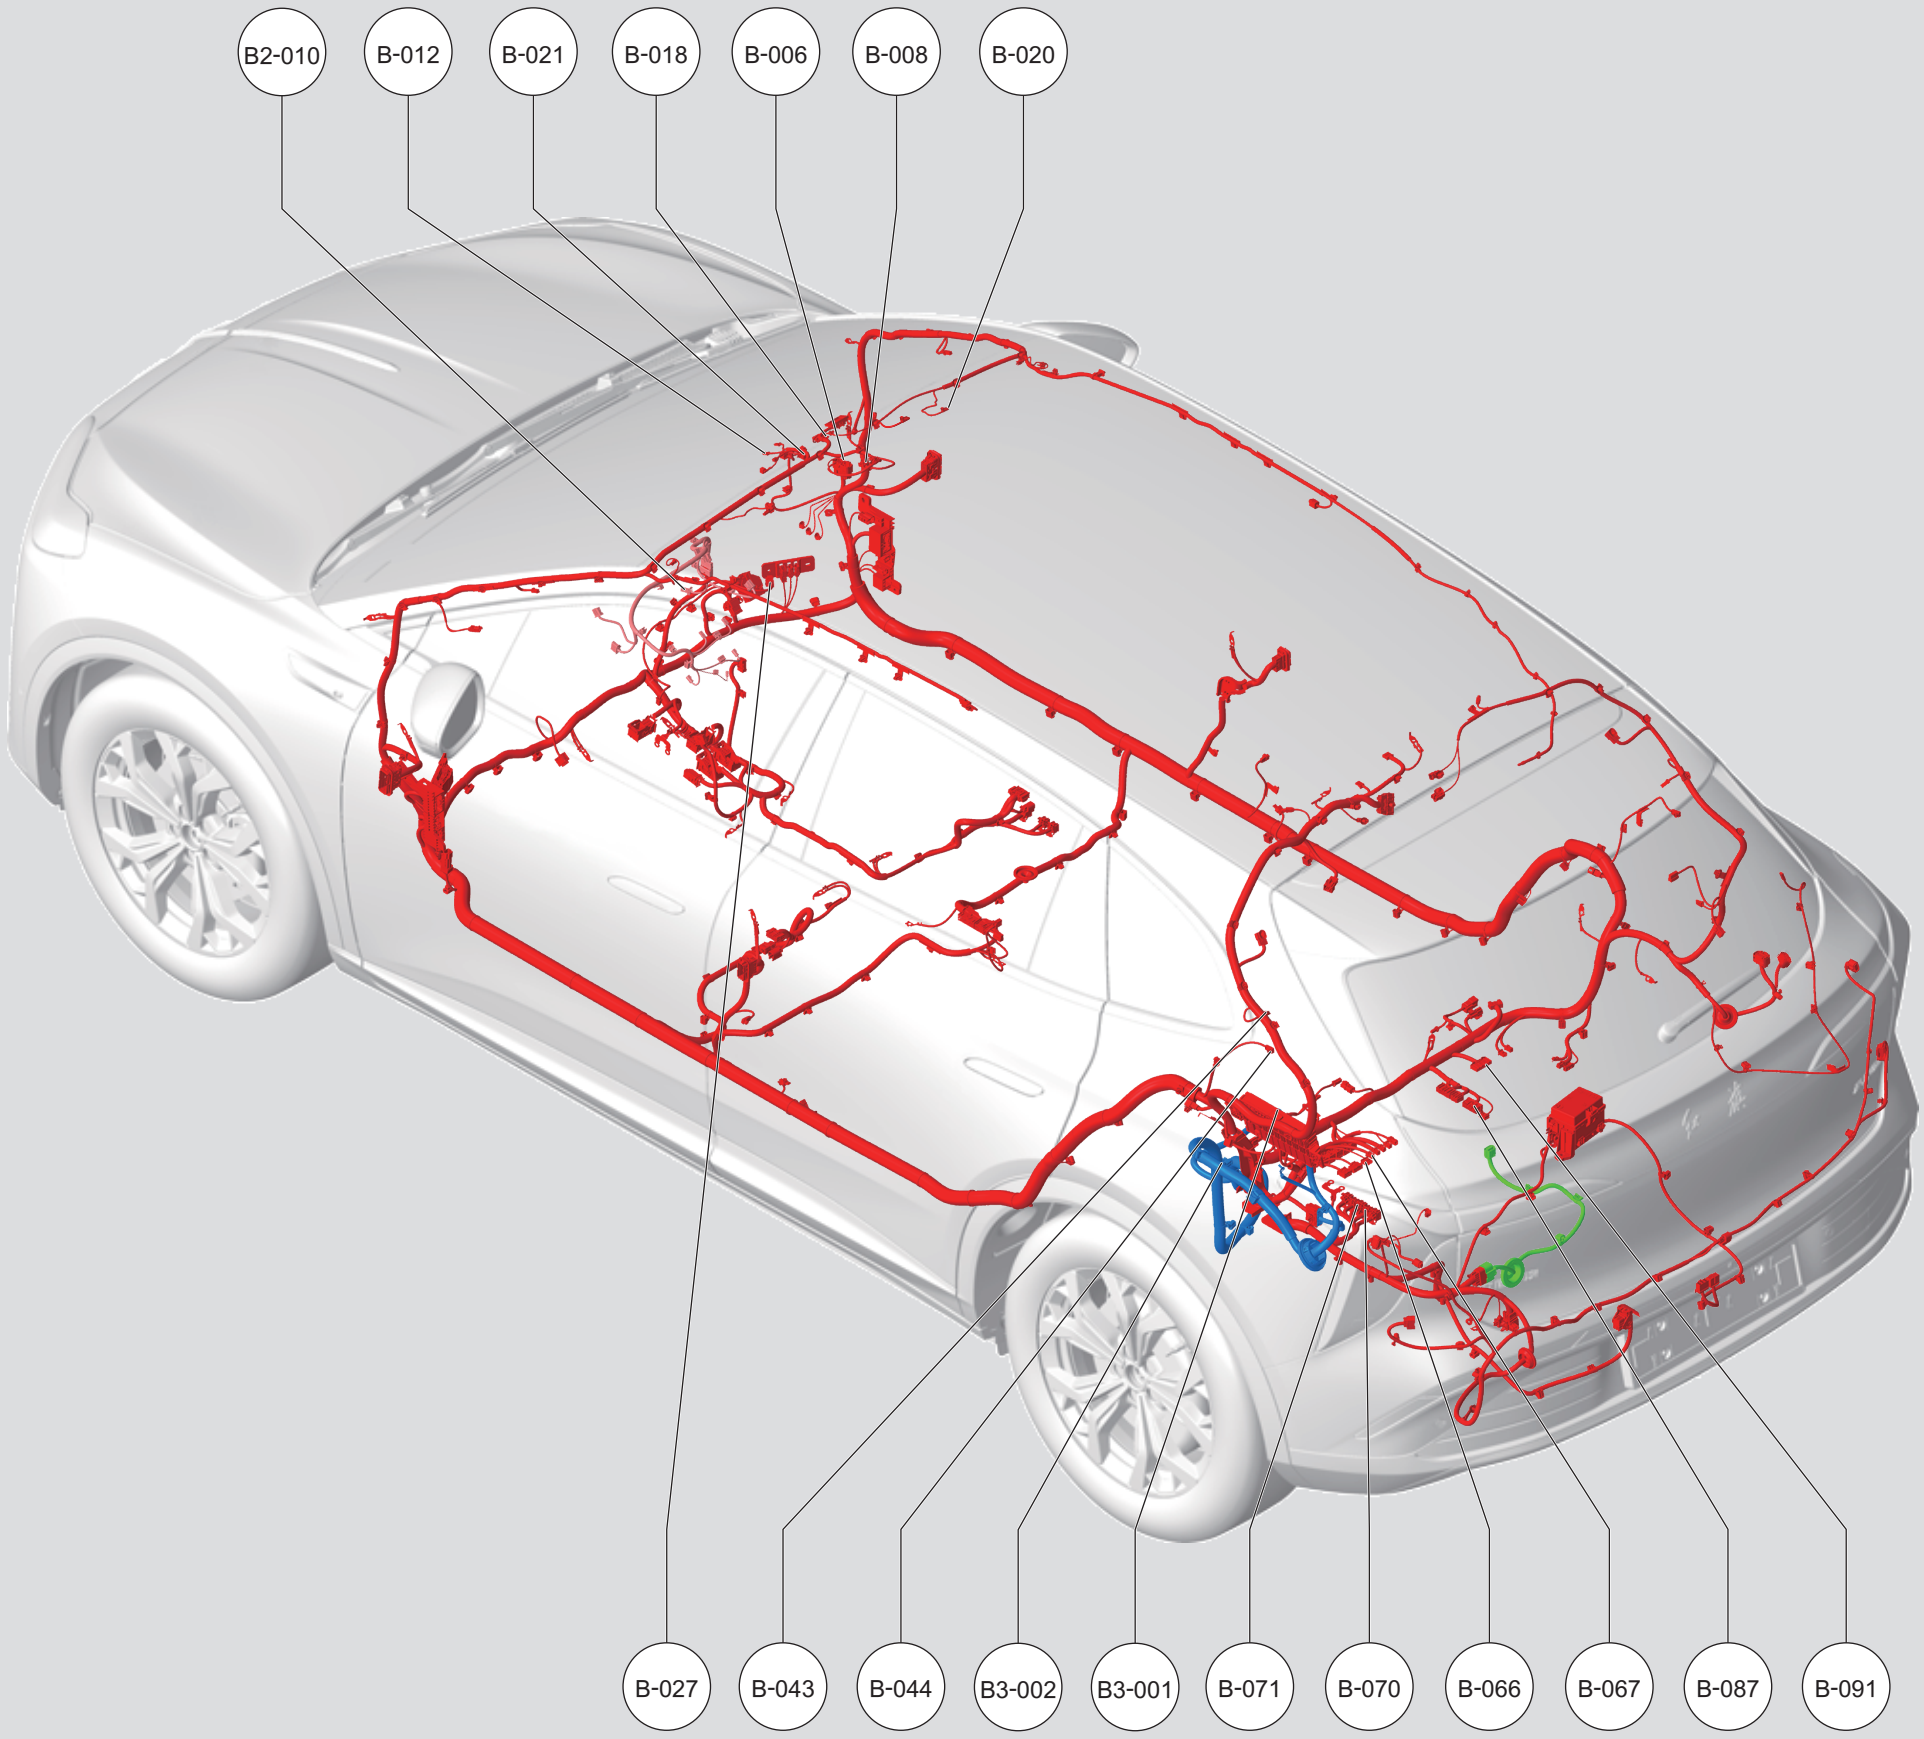
B-128 Tweeter FL
左前高音扬声器

B-129 Tweeter FL_low configuration
左前门高音扬声器_低配

B2-001 Heater PTC2
风暖PTC2

B2-002 Left foot duct temperature sensor
左吹脚风温传感器

B2-006 Left temperature damper motor
左温度风门电机



B-006 Passenger monitoring camera A
副驾驶员监测摄像头A

B-008 Roof switch
顶棚开关

B-012 Sunlight rain sensor - L2
光线雨量传感器-L2

B-018 Smart front camera controller - MEB
智能前视摄像头控制器-ME B

B-020 Vanity mirror light FR
右前化妆镜灯

B-021 Inner circulation motor
内循环电机

B-027 Blower motor
鼓风机电机

B-043 Surround midrange speaker LH
左环绕中音扬声器

B-044 Seat belt retractor RL
左后安全带卷收器

B-066 Advanced automatic driving controller - DJ (HAD) C
高级自动驾驶控制器-大疆(HAD)C

B-067 Advanced automatic driving controller - DJ (HAD) D
高级自动驾驶控制器-大疆(HAD)D

B-070 Rear intelligent area control unit (rear PDC) H
后智能区域控制单元(后PDC)H

B-071 Rear intelligent area control unit (rear PDC) I
后智能区域控制单元(后PDC)I

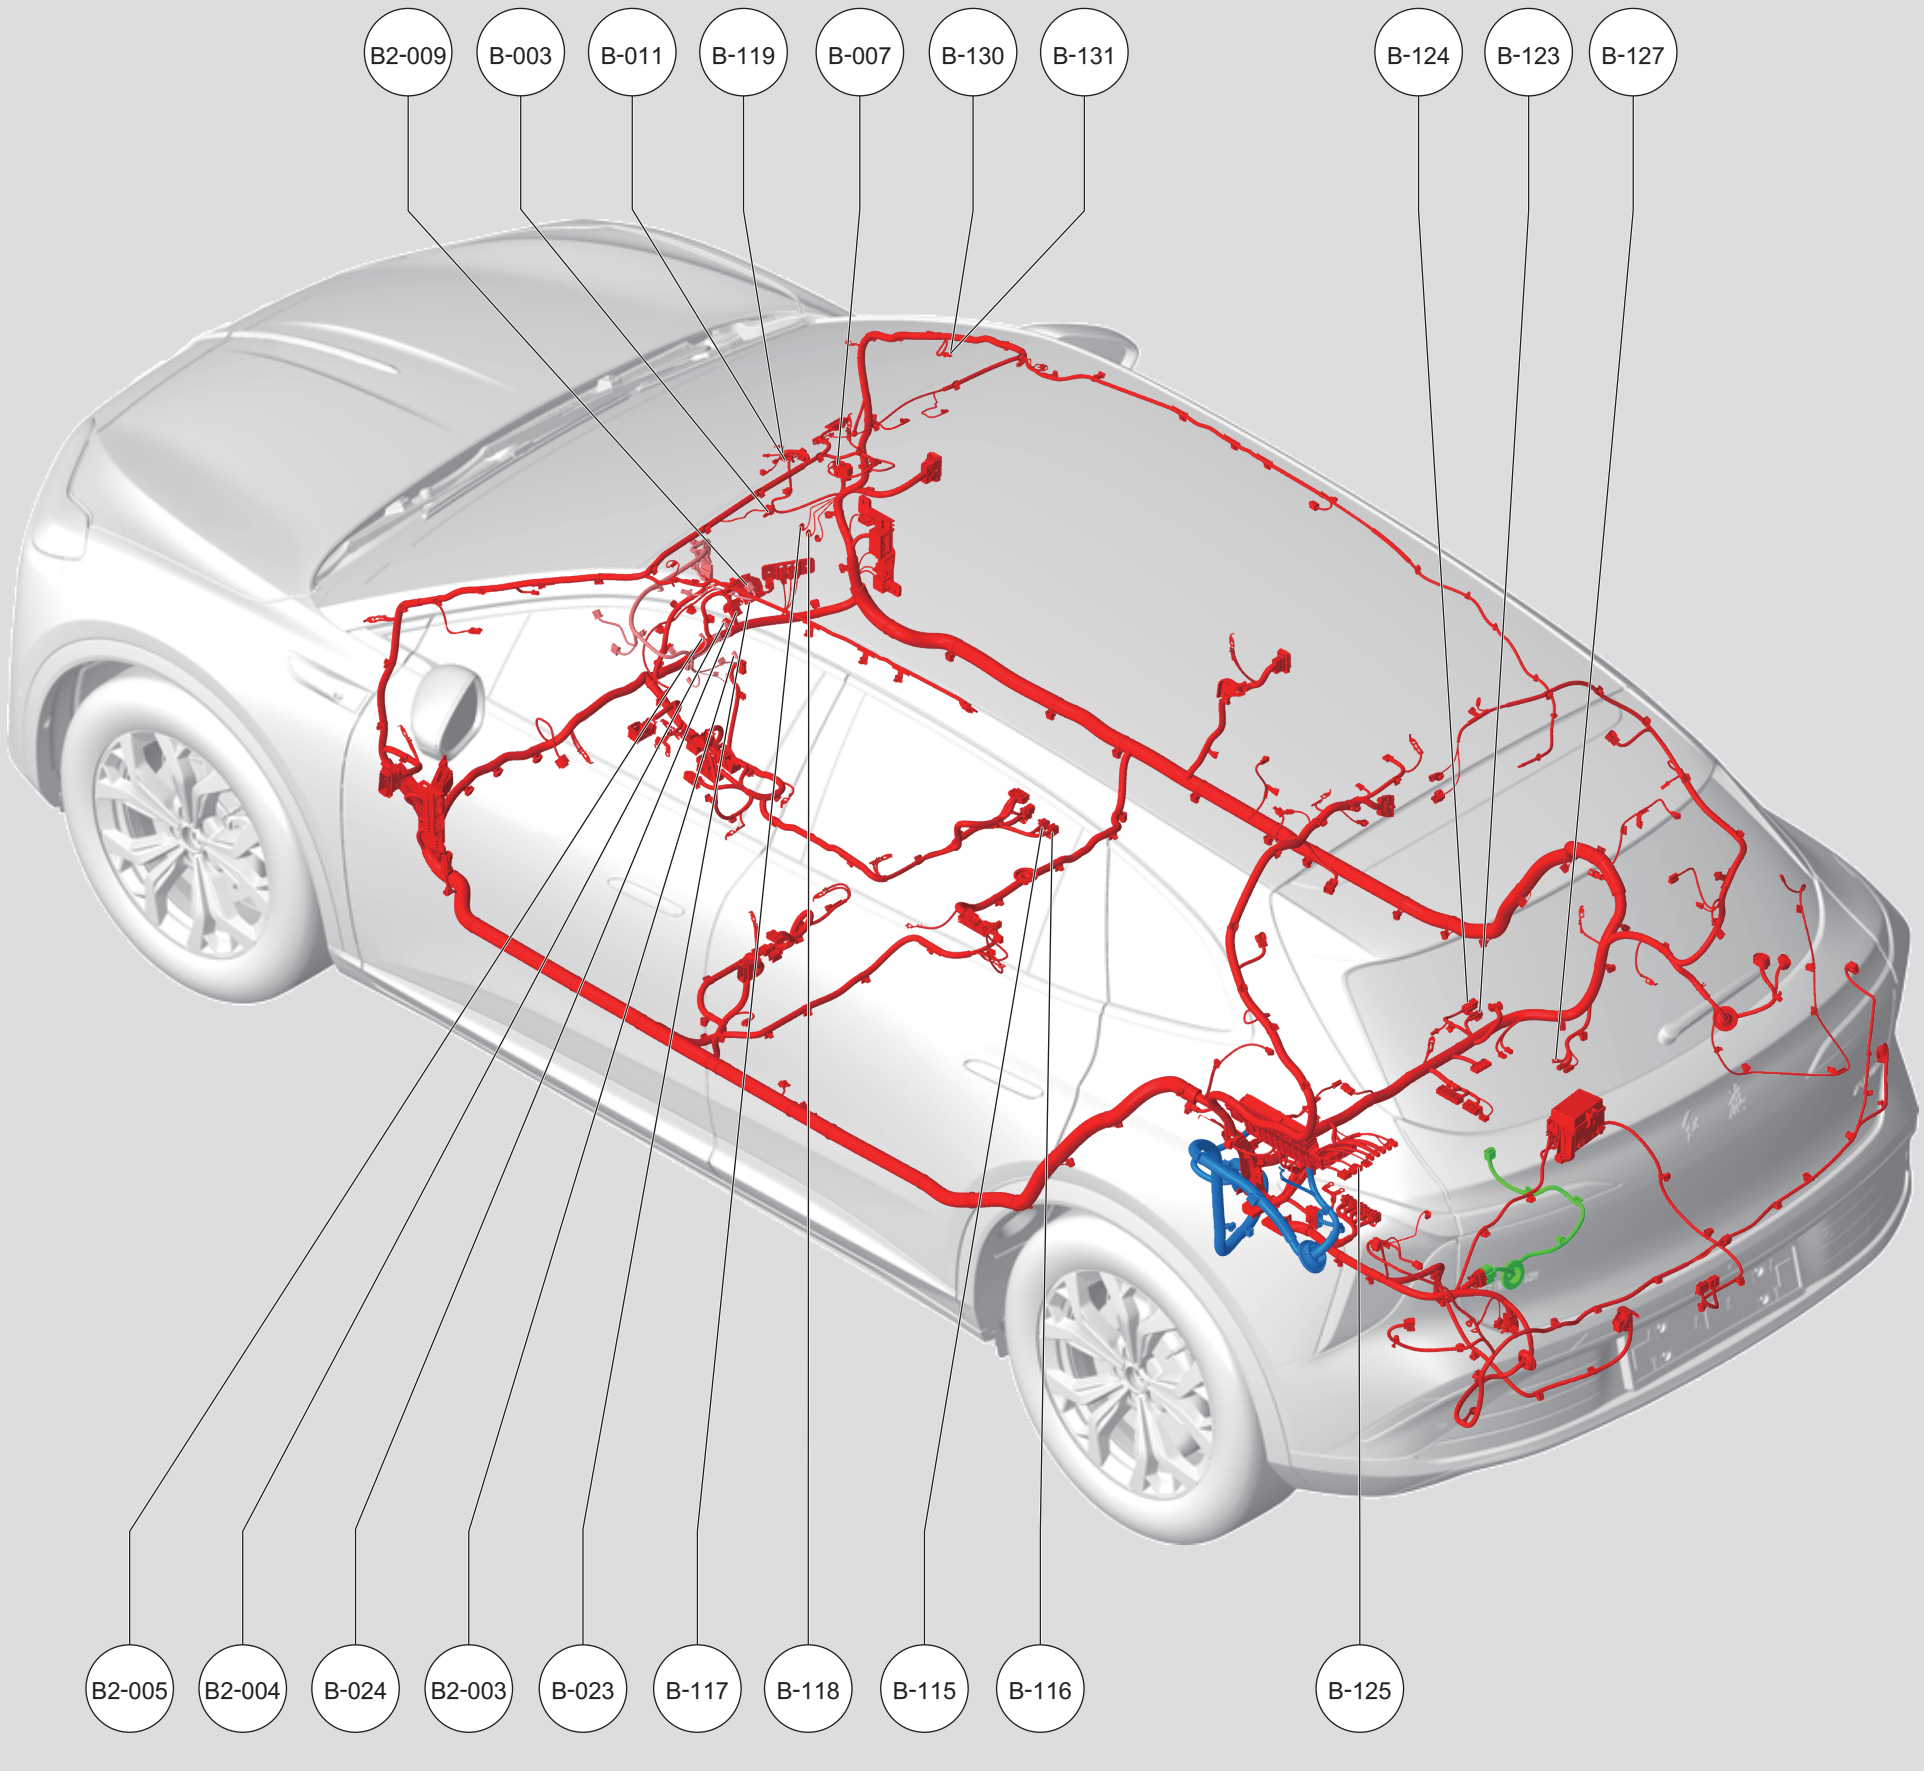
B-087 Power amplifier C
功率放大器C

B-091 Intelligent communication domain control unit (ICC)A
智能通信域控制单元(ICC)A

B2-010 Evaporator temperature sensor
蒸发器温度传感器

B3-001 Energy conversion and distribution unit
能量转换与分配单元

B3-002 All-in-one B+ terminal
多合一B+端



B-003 Vanity mirror light FL
左前化妆镜灯

B-007 Passenger monitoring camera B
副驾驶员监测摄像头B

B-011 Smart front camera controller - MEA
智能前视摄像头控制器-ME A

B-023 Intelligent vehicle control platform control unit (VDC) A
智能车控平台控制单元(VDC)A

B-024 Intelligent vehicle control platform control unit (VDC) B
智能车控平台控制单元(VDC)B

B-115 Front passenger seat control unit C
副驾驶员座椅控制单元C

B-116 Front passenger seat control unit D
副驾驶员座椅控制单元D

B-117 Diagnostic interface 1
诊断接口1

B-118 Diagnostic interface 4
诊断接口4

B-119 Anti-fog sensor - L2
防雾传感器-L2

B-123 Seatback heater RR
右后座椅靠背加热

B-124 Second row occupancy sensor - low configuration
二排占位传感器-低配

B-125 Advanced automatic driving controller - DJ (HAD) B
高级自动驾驶控制器-大疆(HAD)B

B-127 Intelligent communication domain control unit (ICC) 4G
智能通信域控制单元(ICC)4G

B-130 Tweeter FR
右前高音扬声器

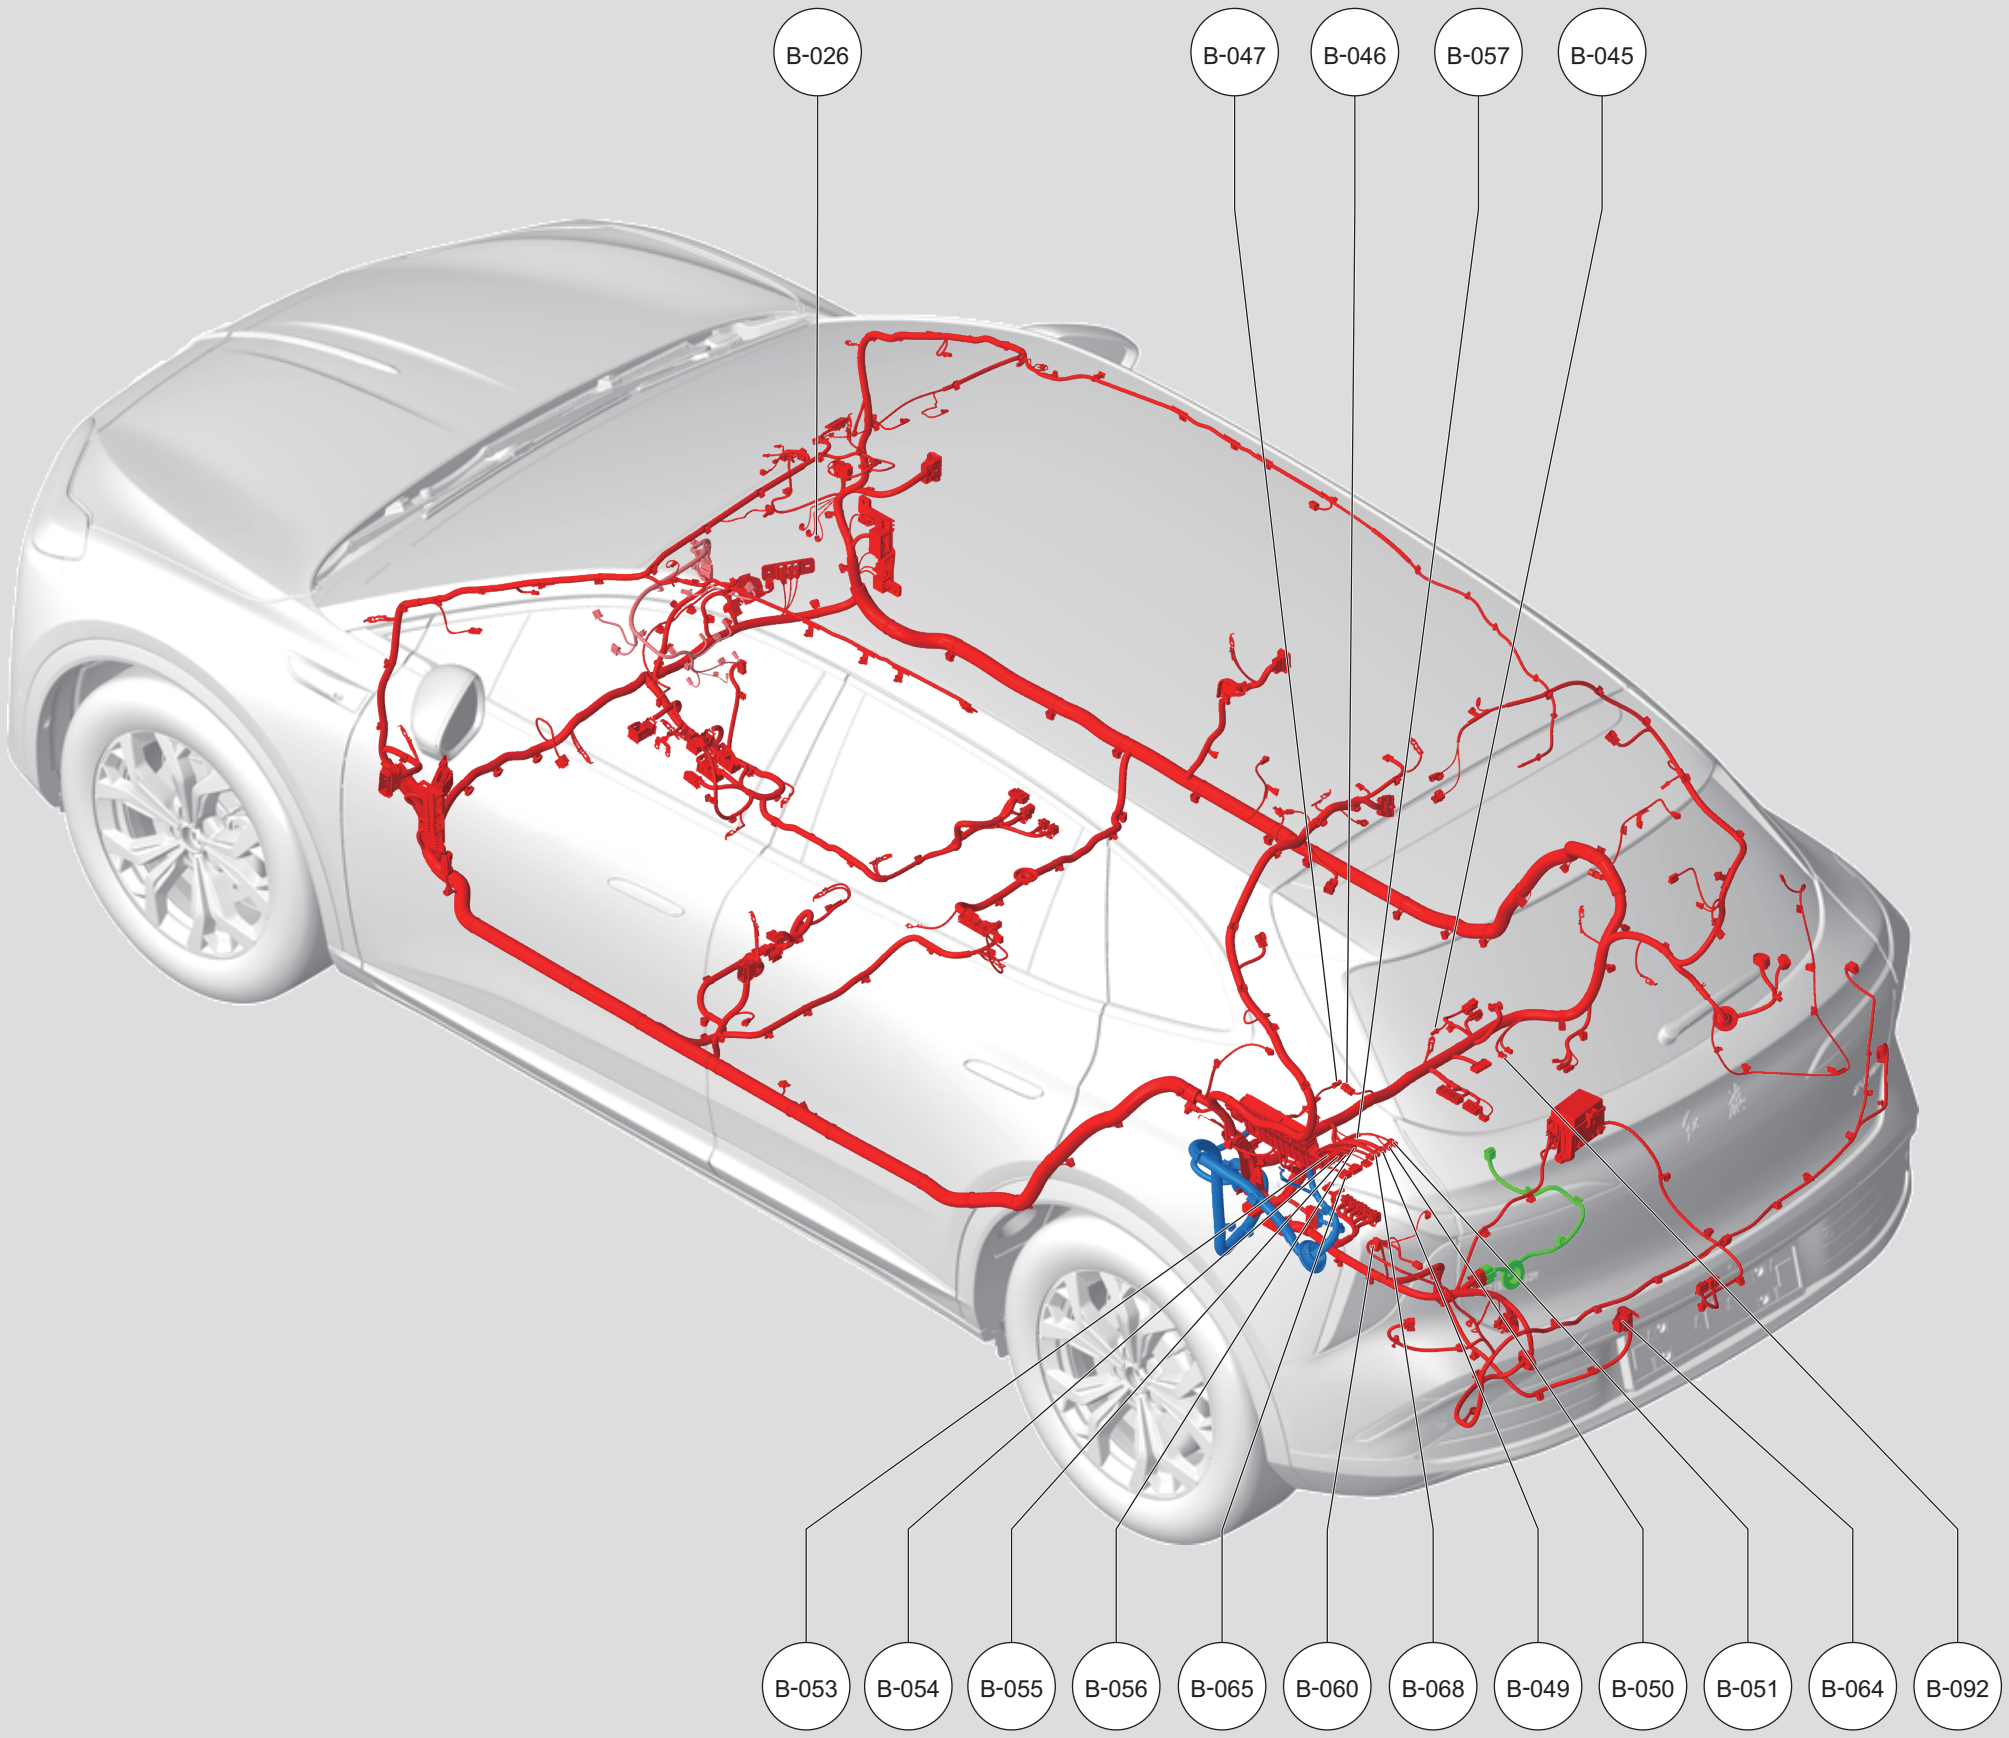
B-131 Tweeter FR_low configuration
右前门高音扬声器_低配

B2-003 Right foot duct temperature sensor
右吹脚风温传感器

B2-004 Right face duct temperature sensor
右吹面风温传感器

B2-005 Left face duct temperature sensor
左吹面风温传感器

B2-009 Mode damper motor
模式风门电机



B-026 Diagnostic interface 2
诊断接口2

B-045 Seat belt buckle RR
右后安全带锁扣

B-046 Interior low frequency antenna II
室内低频天线Ⅱ

B-047 Rear center seat belt buckle
后排中间安全带锁扣

B-049 Advanced automatic driving controller - DJ (HAD) F
高级自动驾驶控制器-大疆(HAD)F

B-050 Advanced automatic driving controller - DJ (HAD) G
高级自动驾驶控制器-大疆(HAD)G

B-051 Advanced automatic driving controller - DJ (HAD) H
高级自动驾驶控制器-大疆(HAD)H

B-053 Rear intelligent area control unit (rear PDC) E
后智能区域控制单元(后PDC)E

B-054 Rear intelligent area control unit (rear PDC) D
后智能区域控制单元(后PDC)D

B-055 Rear intelligent area control unit (rear PDC) C
后智能区域控制单元(后PDC)C

B-056 Rear intelligent area control unit (rear PDC) B
后智能区域控制单元(后PDC)B

B-057 Rear intelligent area control unit (rear PDC) L
后智能区域控制单元(后PDC)L

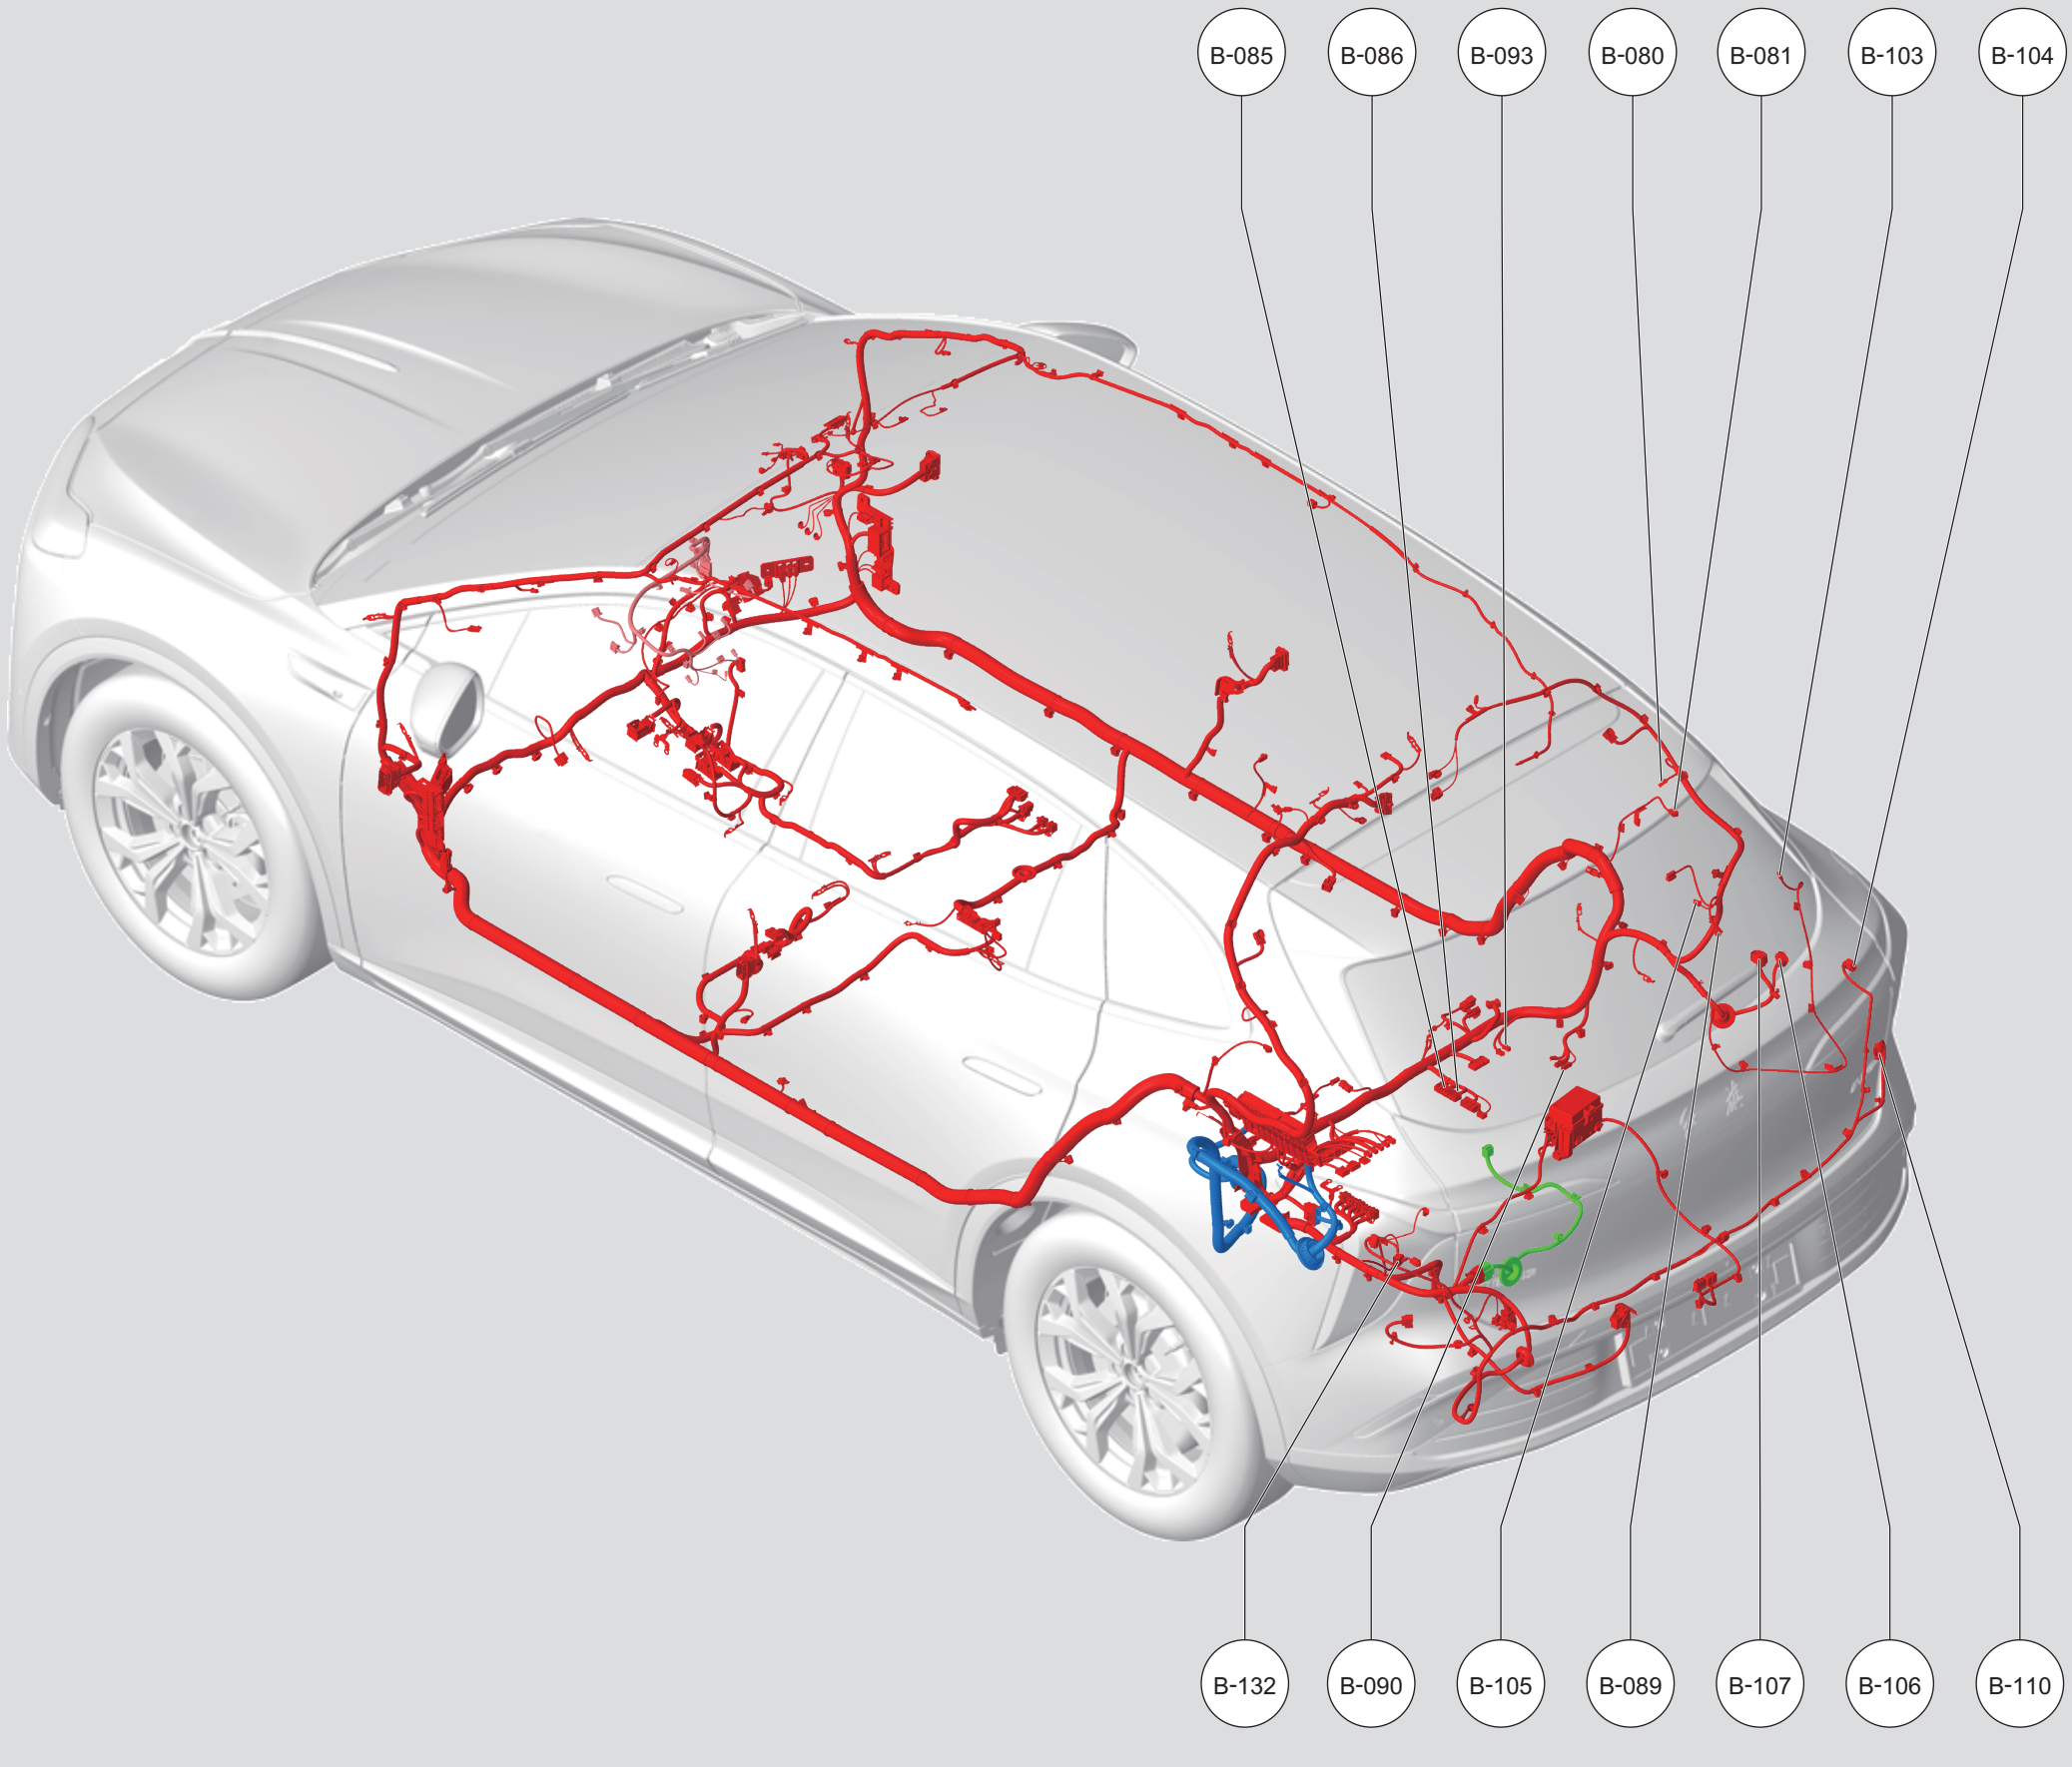
B-060 Combination light RL I
左后组合灯Ⅰ

B-065 Advanced automatic driving controller - DJ (HAD) A
高级自动驾驶控制器-大疆(HAD)A

B-064 Charging controller
充电控制器

B-068 Advanced automatic driving controller - DJ (HAD) E
高级自动驾驶控制器-大疆(HAD)E

B-092 Intelligent communication domain control unit (ICC) B
智能通信域控制单元(ICC)B



B-080 Surround midrange speaker RH
右环绕中音扬声器

B-081 Seat belt retractor RR
右后安全带卷收器

B-085 Power amplifier A
功率放大器A

B-086 Power amplifier B
功率放大器B

B-089 Luggage compartment light RH
右行李箱灯

B-090 Intelligent communication domain control unit (ICC) C
智能通信域控制单元(ICC)C

B-093 Intelligent communication domain control unit (ICC) E
智能通信域控制单元(ICC)E

B-103 Charging port cover lock
充电口盖锁

B-104 Combination light RR I
右后组合灯 I

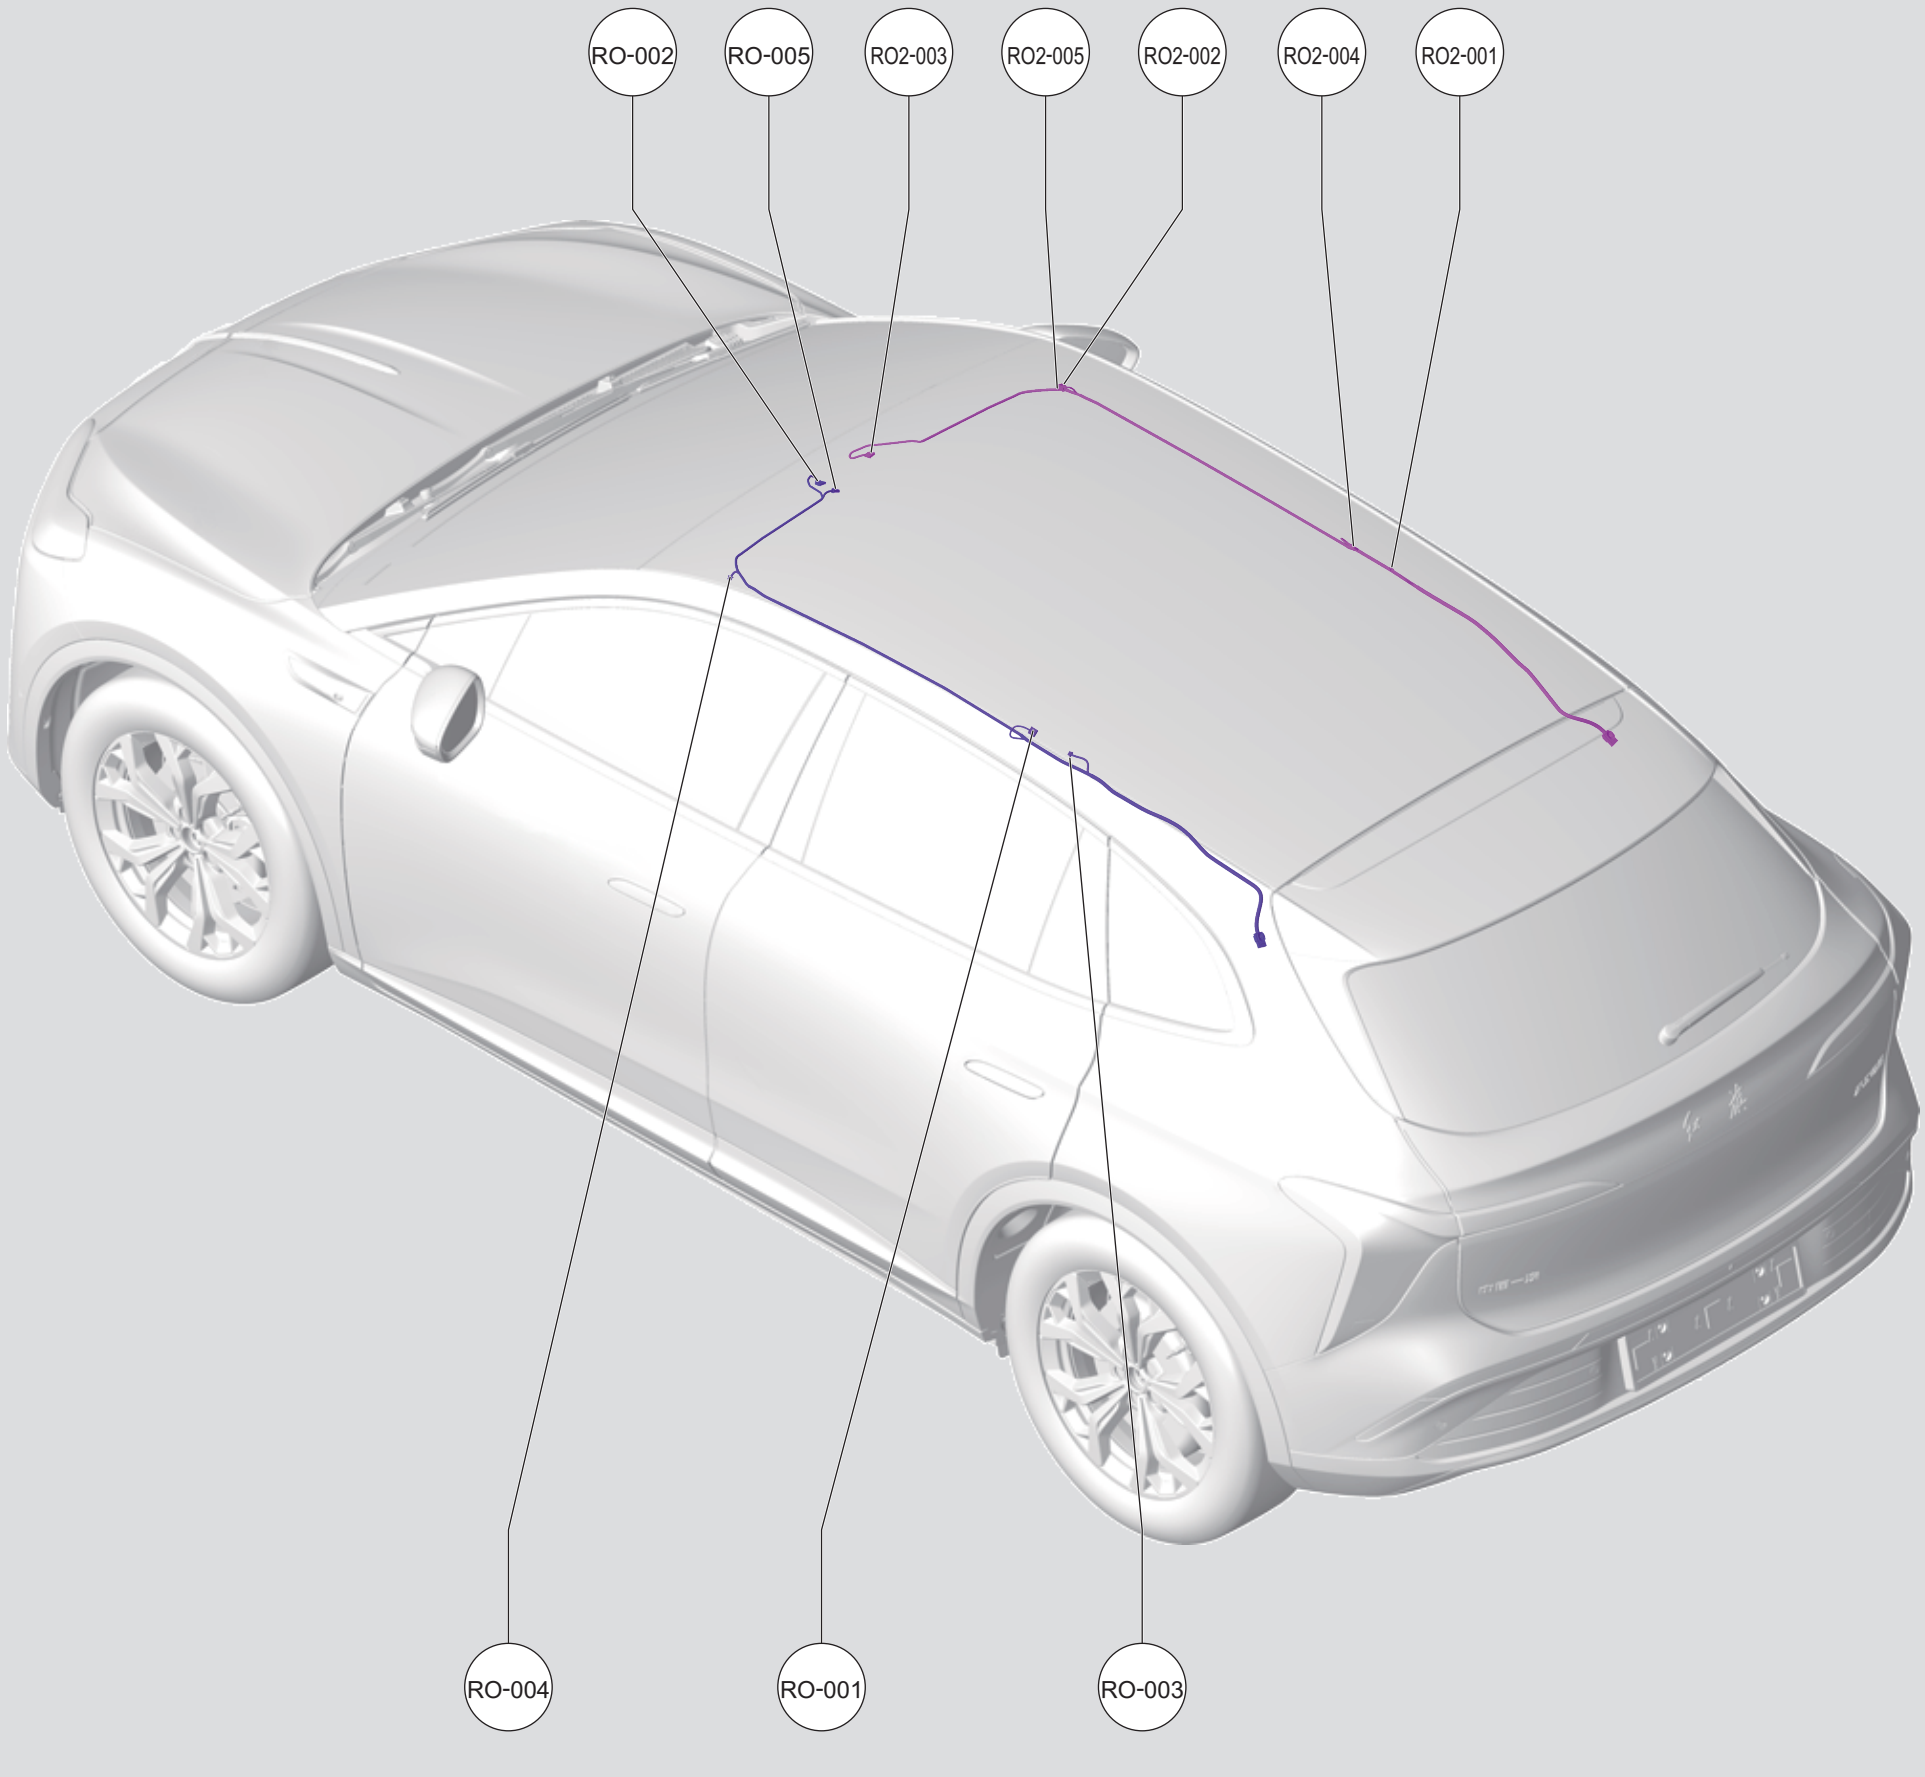
B-105 Subwoofer
低音箱

B-106 Charging socket - European standard
充电座-欧标

B-107 AC/DC charging port
交直流充电口

B-110 Corner millimeter wave radar RR
右后角毫米波雷达

B-132 Low voltage service SW
低压维修开关



RO-001 Map light RL
左后阅读灯

RO-002 Map light FL
左前阅读灯

RO-003 Microphone RL
左后麦克风

RO-004 Microphone FL
左前麦克风

RO-005 ECALL microphone
ECALL麦克风

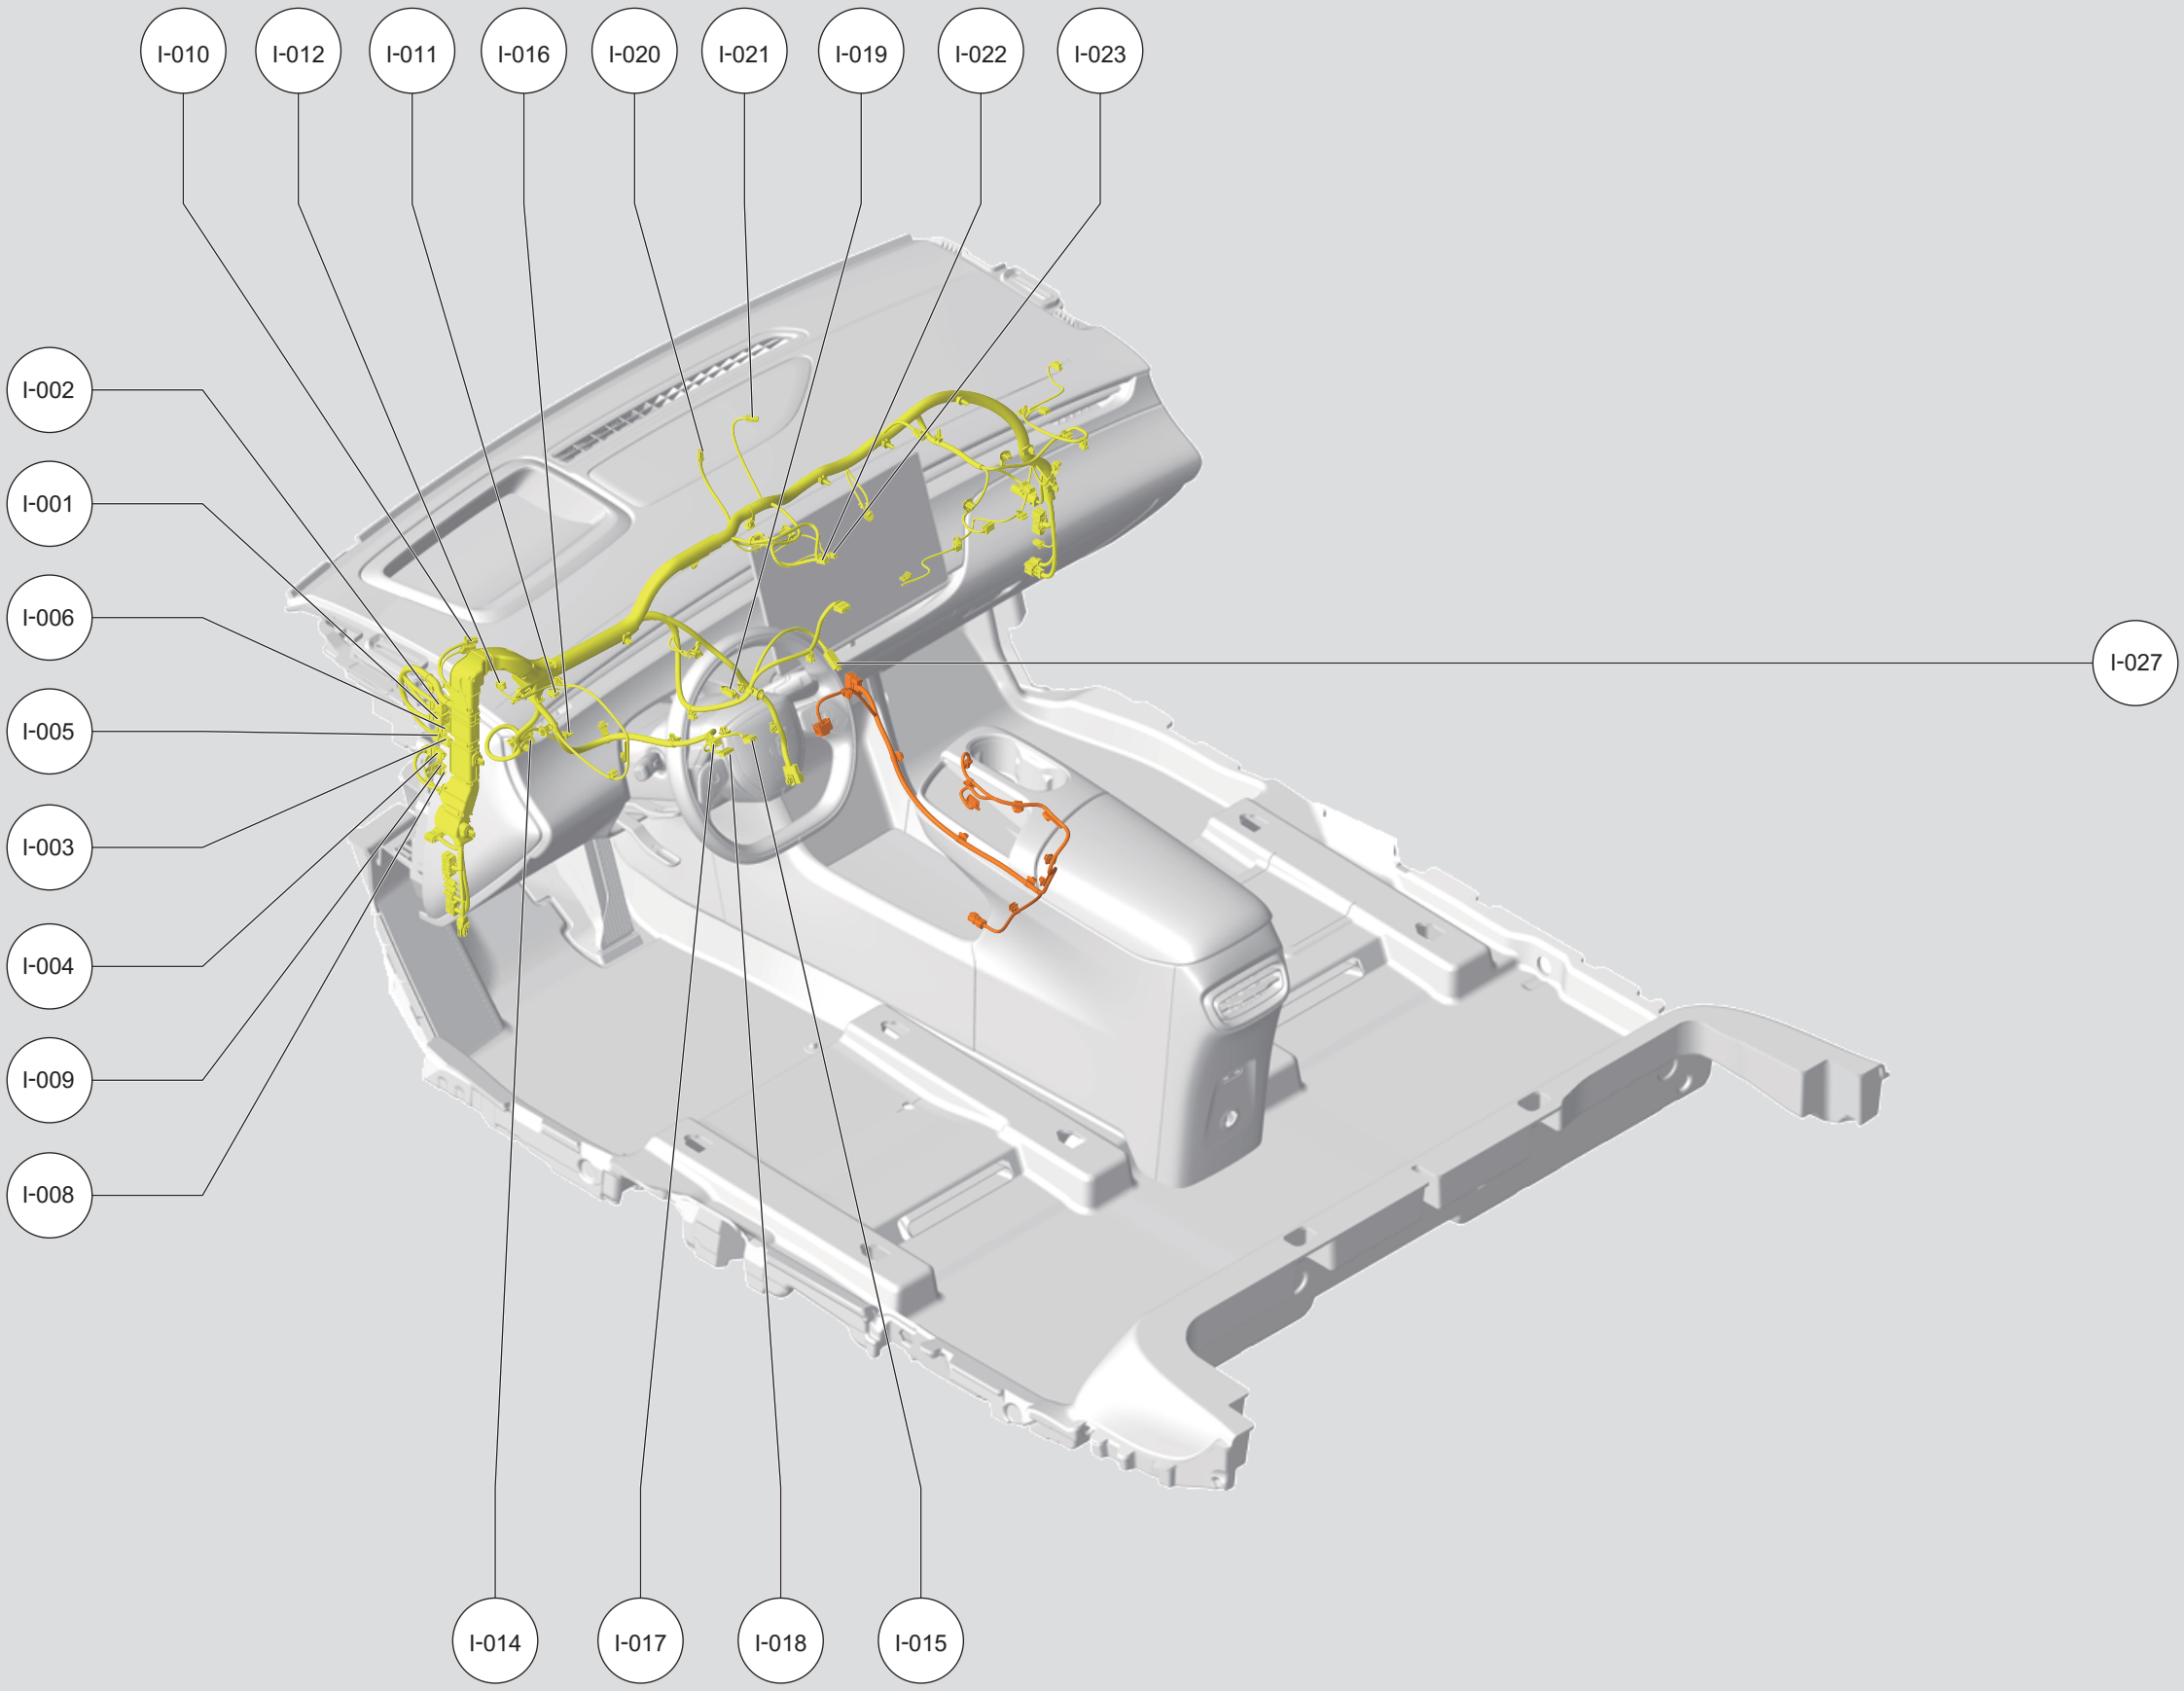
RO2-001 Microphone RR
右后麦克风

RO2-002 Microphone FR
右前麦克风

RO2-003 Map light FR
右前阅读灯

RO2-004 Map light RR
右后阅读灯

RO2-005 Rear single USB
后单路USB



I-001 Infotainment control unit (CSC) A
信息娱乐控制单元(CSC)A

I-002 Infotainment control unit (CSC) B
信息娱乐控制单元(CSC)B

I-003 Infotainment control unit (CSC) C
信息娱乐控制单元(CSC)C

I-004 Infotainment control unit (CSC) D
信息娱乐控制单元(CSC)D

I-005 Infotainment control unit (CSC) E
信息娱乐控制单元(CSC)E

I-006 Infotainment control unit (CSC) F
信息娱乐控制单元(CSC)F

I-008 Infotainment control unit (CSC) H
信息娱乐控制单元(CSC)H

I-009 Infotainment control unit (CSC) I
信息娱乐控制单元(CSC)I

I-010 Head up display A
抬头显示器A

I-011 Left outlet motor left/right outlet
左侧风口电机左右风口

I-012 Left outlet motor up/down outlet
左侧风口电机上下风口

I-014 Diagnostic interface
诊断接口

I-015 Spiral cable II
时钟弹簧 II

I-016 Footwell light FL
左前脚窝灯

I-017 Combination switch
组合开关

I-018 Spiral cable I
时钟弹簧 I

I-019 Inside temperature sensor
车内温度传感器

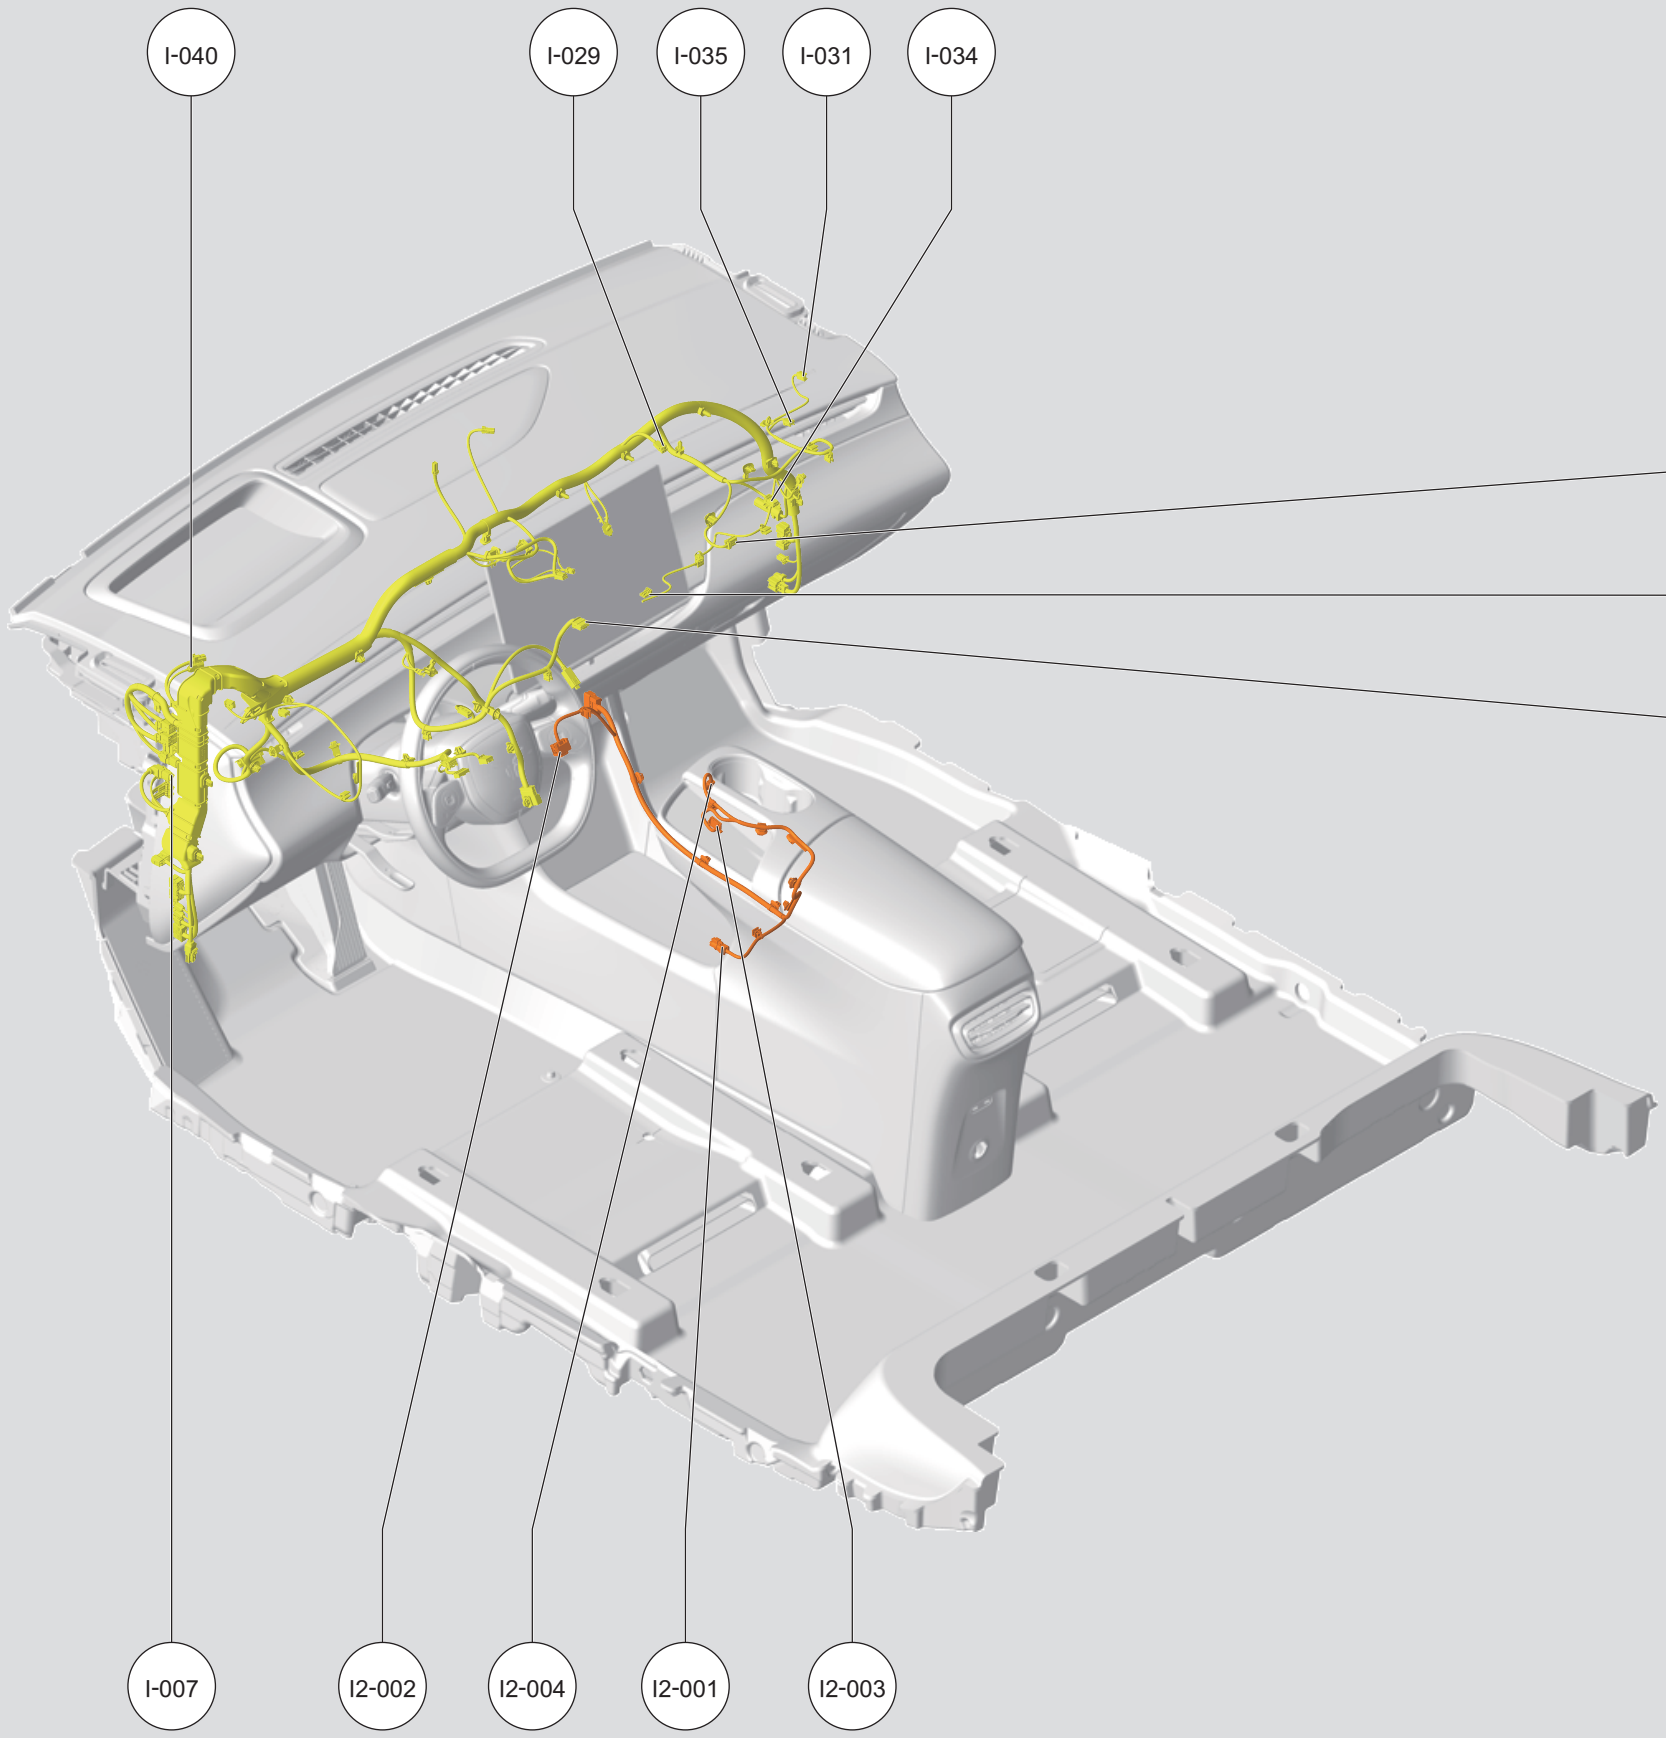
I-020 IP midrange speaker
仪表中音扬声器

I-021 Emergency call speaker
紧急呼叫扬声器

I-022 Central display A
中间显示屏A

I-023 Central display B
中间显示屏B

I-027 Instrument cluster USB
仪表USB



I-029 Front passenger airbag
副驾驶员安全气囊

I-030 Damper motor filter
风门电机滤波器

I-031 Right outlet motor up/down outlet
右侧风口电机上下风口

I-034 Instrument panel single USB charging port
仪表板单路USB充电接口

I-035 Right outlet motor left/right outlet
右侧风口电机左右风口

I-037 Footwell light FR
右前脚窝灯

I-040 Head up display B
抬头显示器B

I-041 Center outlet motor inline
中出风口电机inline

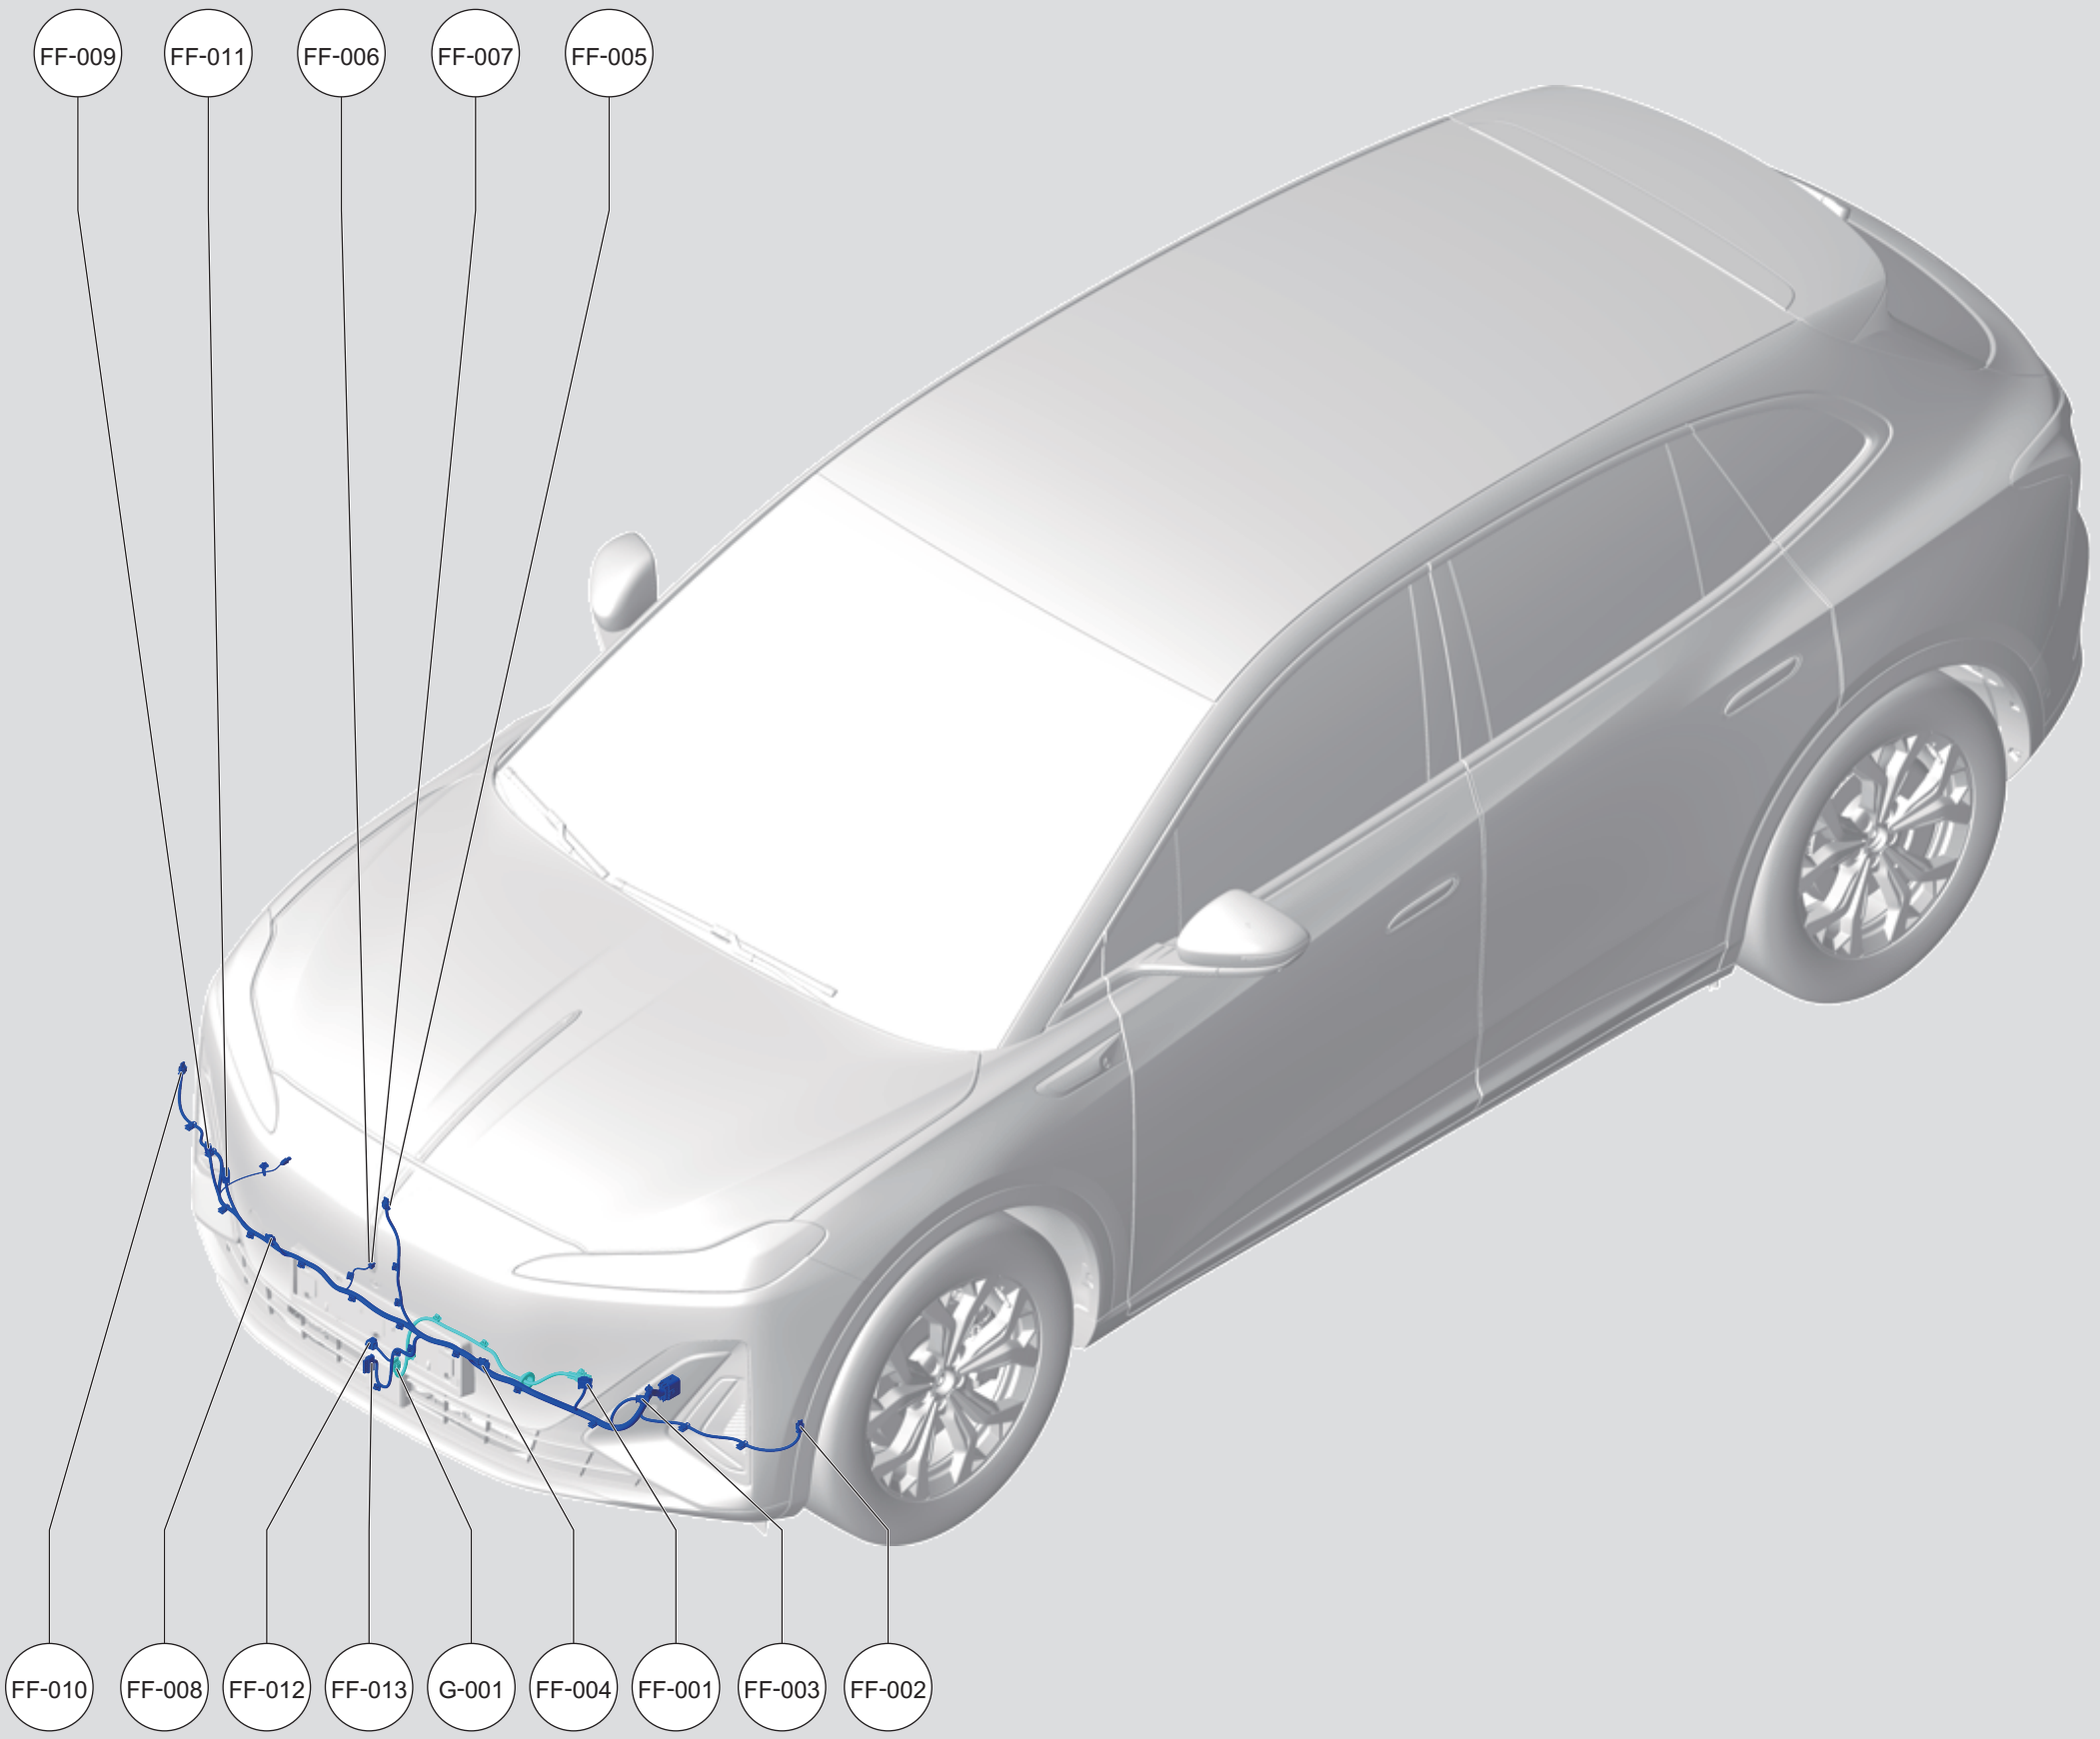
I-007 Infotainment control unit (CSC) G
信息娱乐控制单元(CSC)G

I2-001 Interior low frequency antenna I
室内低频天线 I

I2-002 Interior front digital key UWB antenna
室内前数字钥匙UWB天线

I2-003 Mobile phone wireless charging controller
手机无线充电控制器

I2-004 Auxiliary fascia console ambient light
副仪表板氛围灯



FF-001 Digital key UWB antenna FL
左前数字钥匙UWB天线

FF-002 Ultrasonic sensor FL
左前侧超声波传感器

FF-003 Corner ultrasonic sensor FL
左前角超声波传感器

FF-004 Center ultrasonic sensor FL
左前中超声波传感器

FF-005 Front LOGO light
前LOGO灯

FF-006 Front panoramic camera - DJ
前环视摄像头-大疆

FF-007 Front panoramic camera
前环视摄像头

FF-008 Center ultrasonic sensor FR
右前中超声波传感器

FF-009 Corner ultrasonic sensor FR
右前角超声波传感器

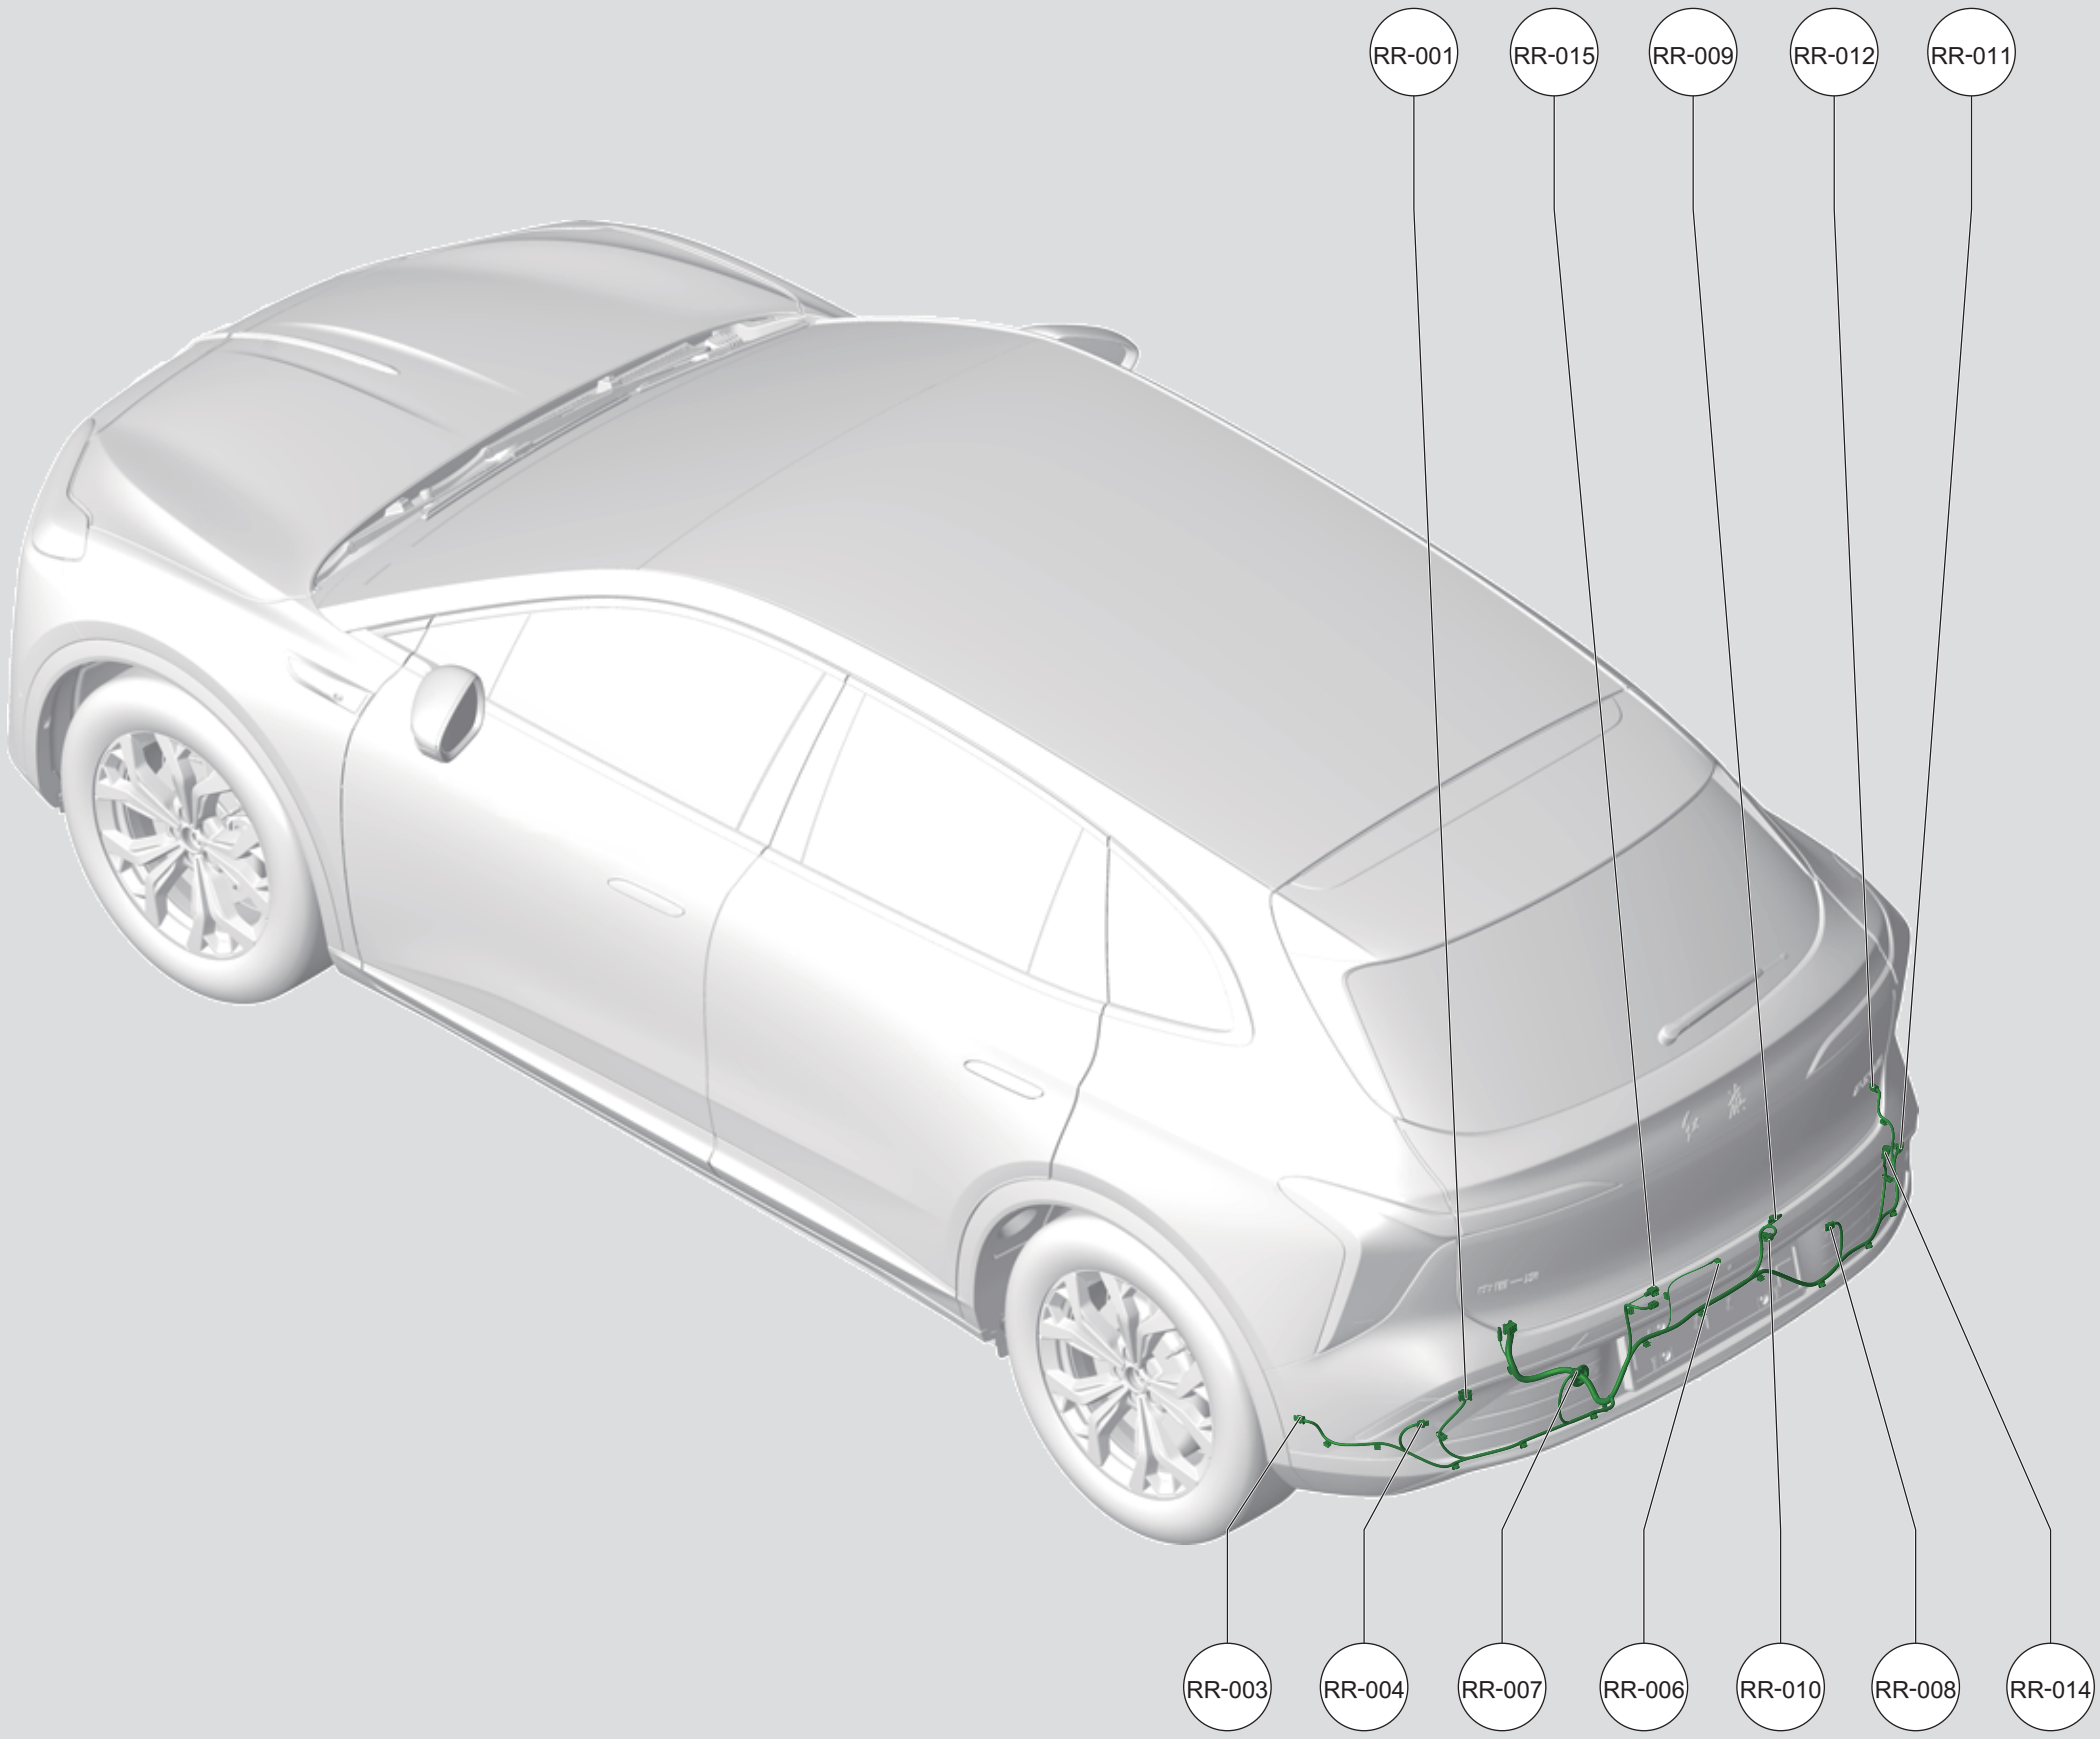
FF-010 Ultrasonic sensor FR
右前侧超声波传感器

FF-011 Digital key UWB antenna FR
右前数字钥匙UWB天线

FF-012 Outside temperature sensor
外温传感器

FF-013 Front millimeter wave radar
前向毫米波雷达

G-001 Active intake grille control motor
主动进气格栅控制电机



RR-001 Digital key UWB antenna RL
左后数字钥匙UWB天线

RR-003 Ultrasonic sensor RL
左后侧超声波传感器

RR-004 Corner ultrasonic sensor RL
左后角超声波传感器

RR-006 Rear panoramic camera - DJ
后环视摄像头-大疆

RR-007 Center ultrasonic sensor RL
左后中超声波传感器

RR-008 Center ultrasonic sensor RR
右后中超声波传感器

RR-009 License plate light RH
右侧牌照灯

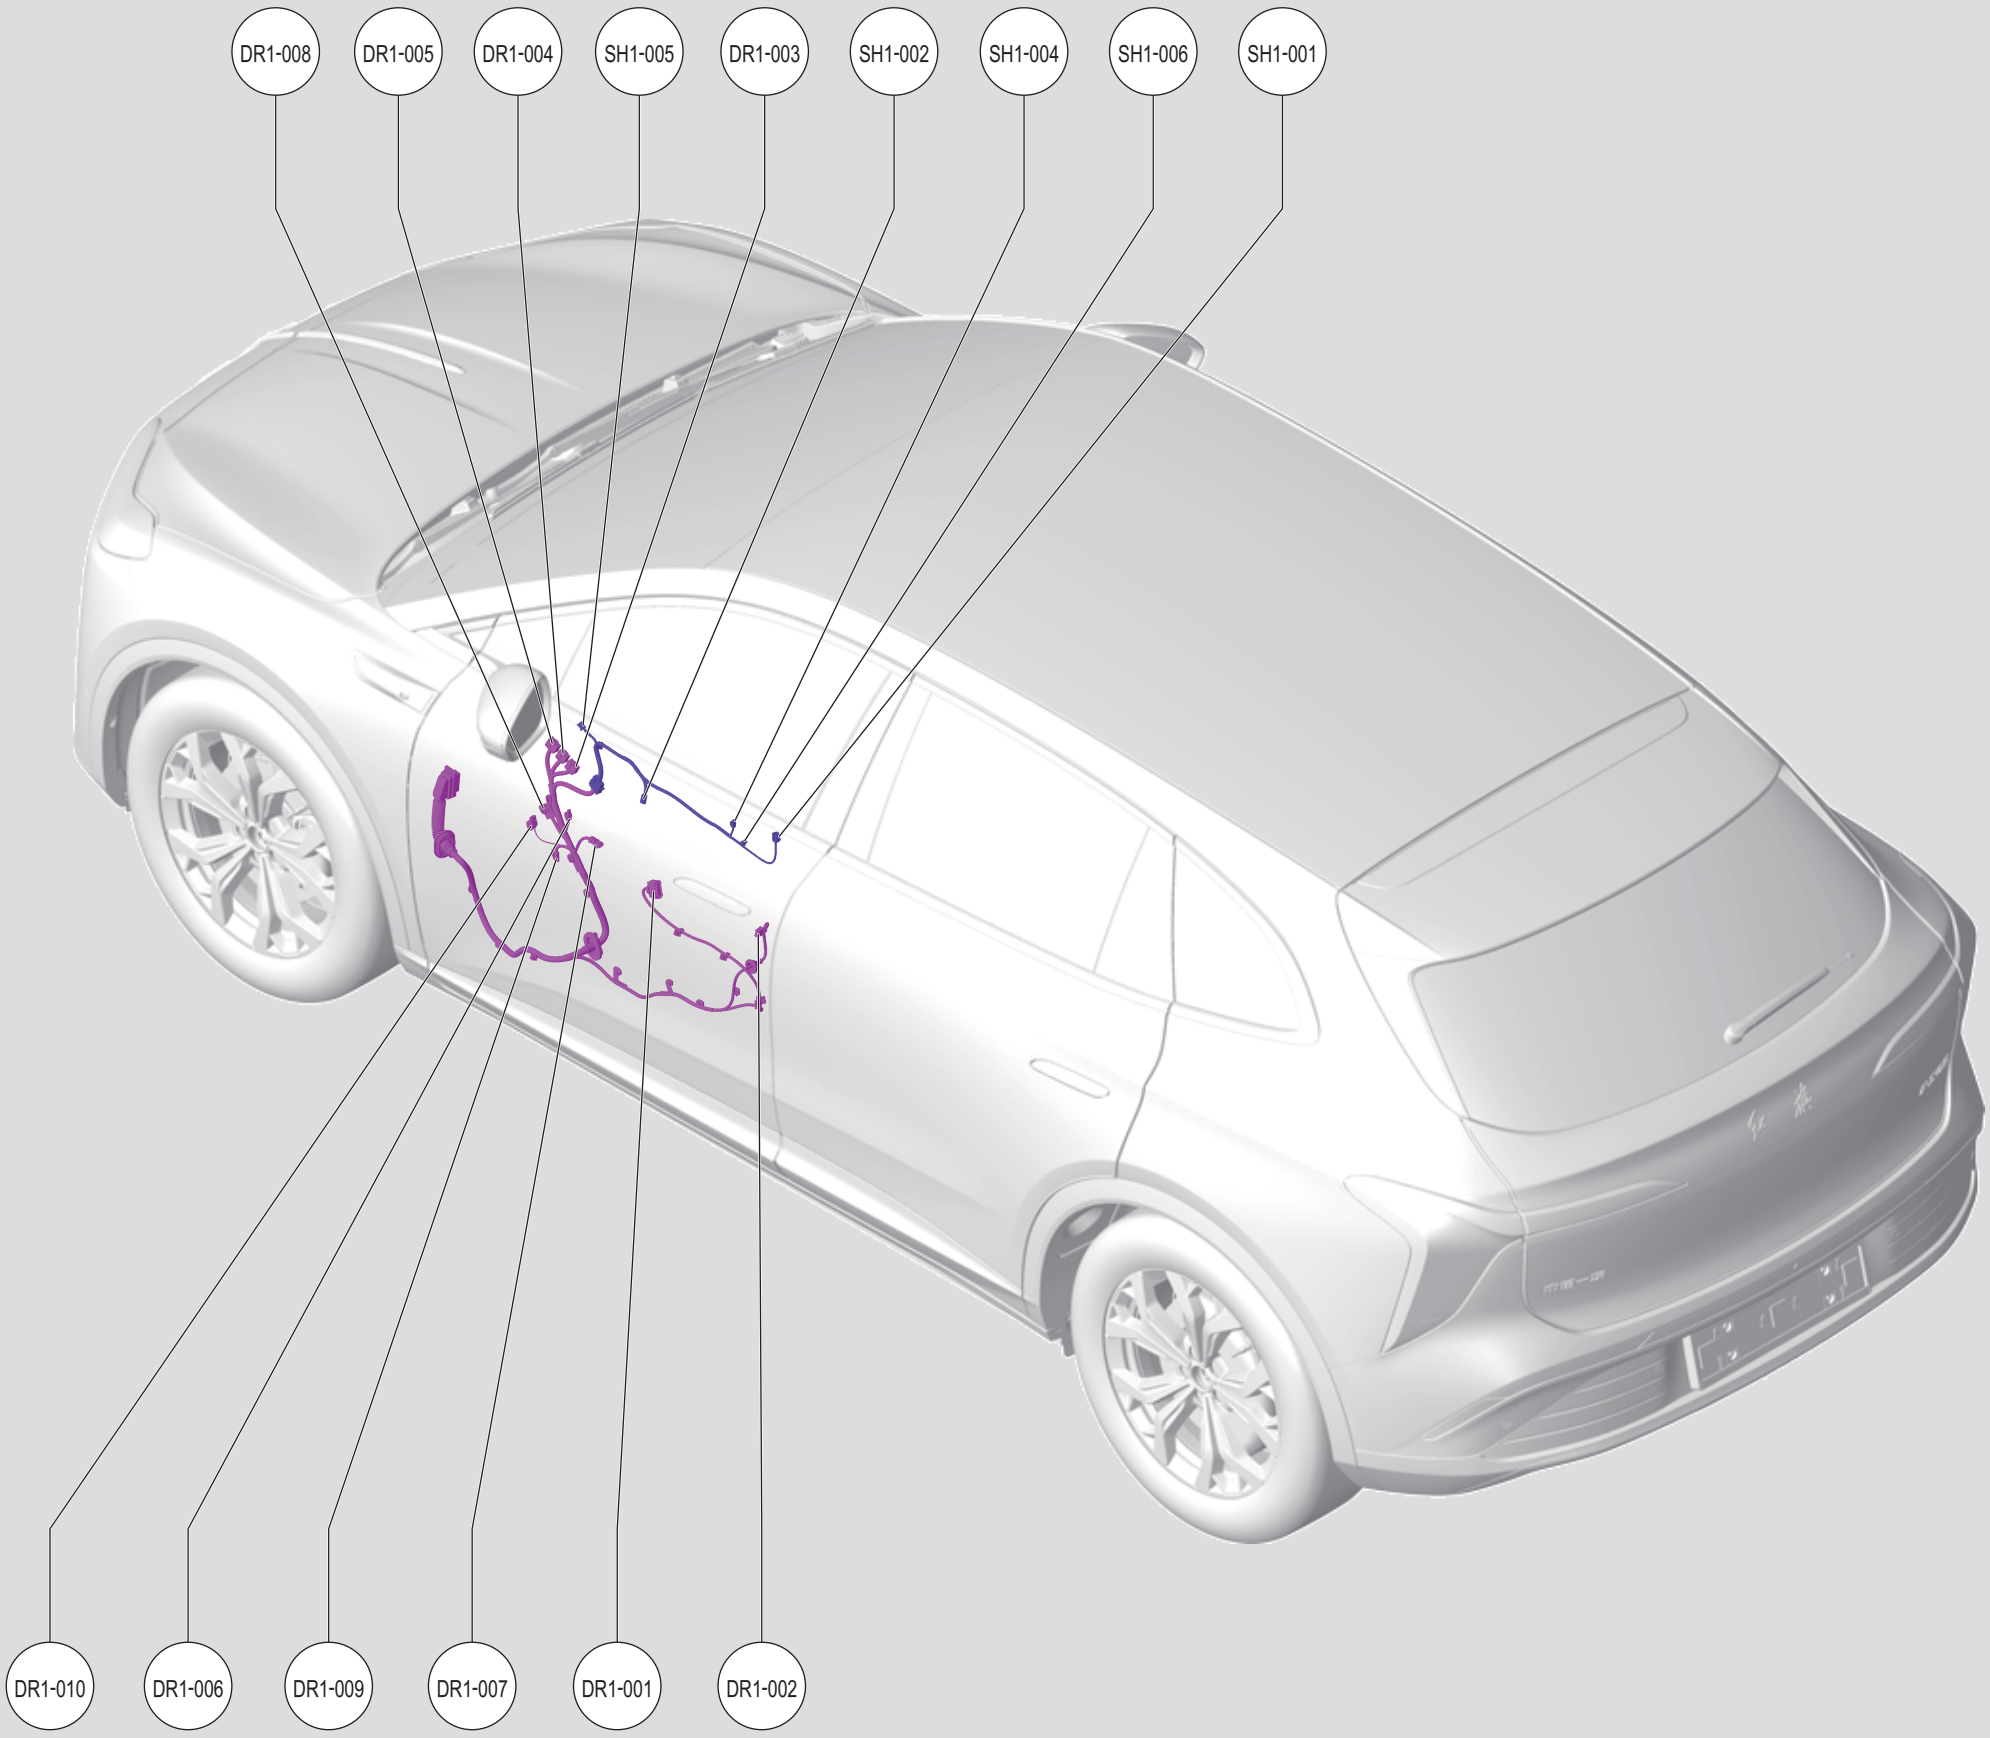
RR-010 Luggage compartment outside opener switch
行李箱外开启开关

RR-011 Corner ultrasonic sensor RR
右后角超声波传感器

RR-012 Ultrasonic sensor RR
右后侧超声波传感器

RR-014 Digital key UWB antenna RR
右后数字钥匙UWB天线

RR-015 Rear panoramic camera
后环视摄像头



DR1-001 Door invisible handle FL
左前门隐形门把手

DR1-002 Door lock FL
左前门锁

DR1-003 Front left door control unit (DDCU) C
左前车门控制单元(DDCU)C

DR1-004 Front left door control unit (DDCU) B
左前车门控制单元(DDCU)B

DR1-005 Front left door control unit (DDCU) A
左前车门控制单元(DDCU)A

DR1-006 Side collision pressure sensor FL
左前侧碰压力传感器

DR1-007 Door power window regulator FL
左前门电动玻璃升降器

DR1-008 Outside rear view mirror LH
左侧外后视镜

DR1-009 Door woofer FL
左前门低音扬声器

DR1-010 Panoramic camera LH
左环视摄像头

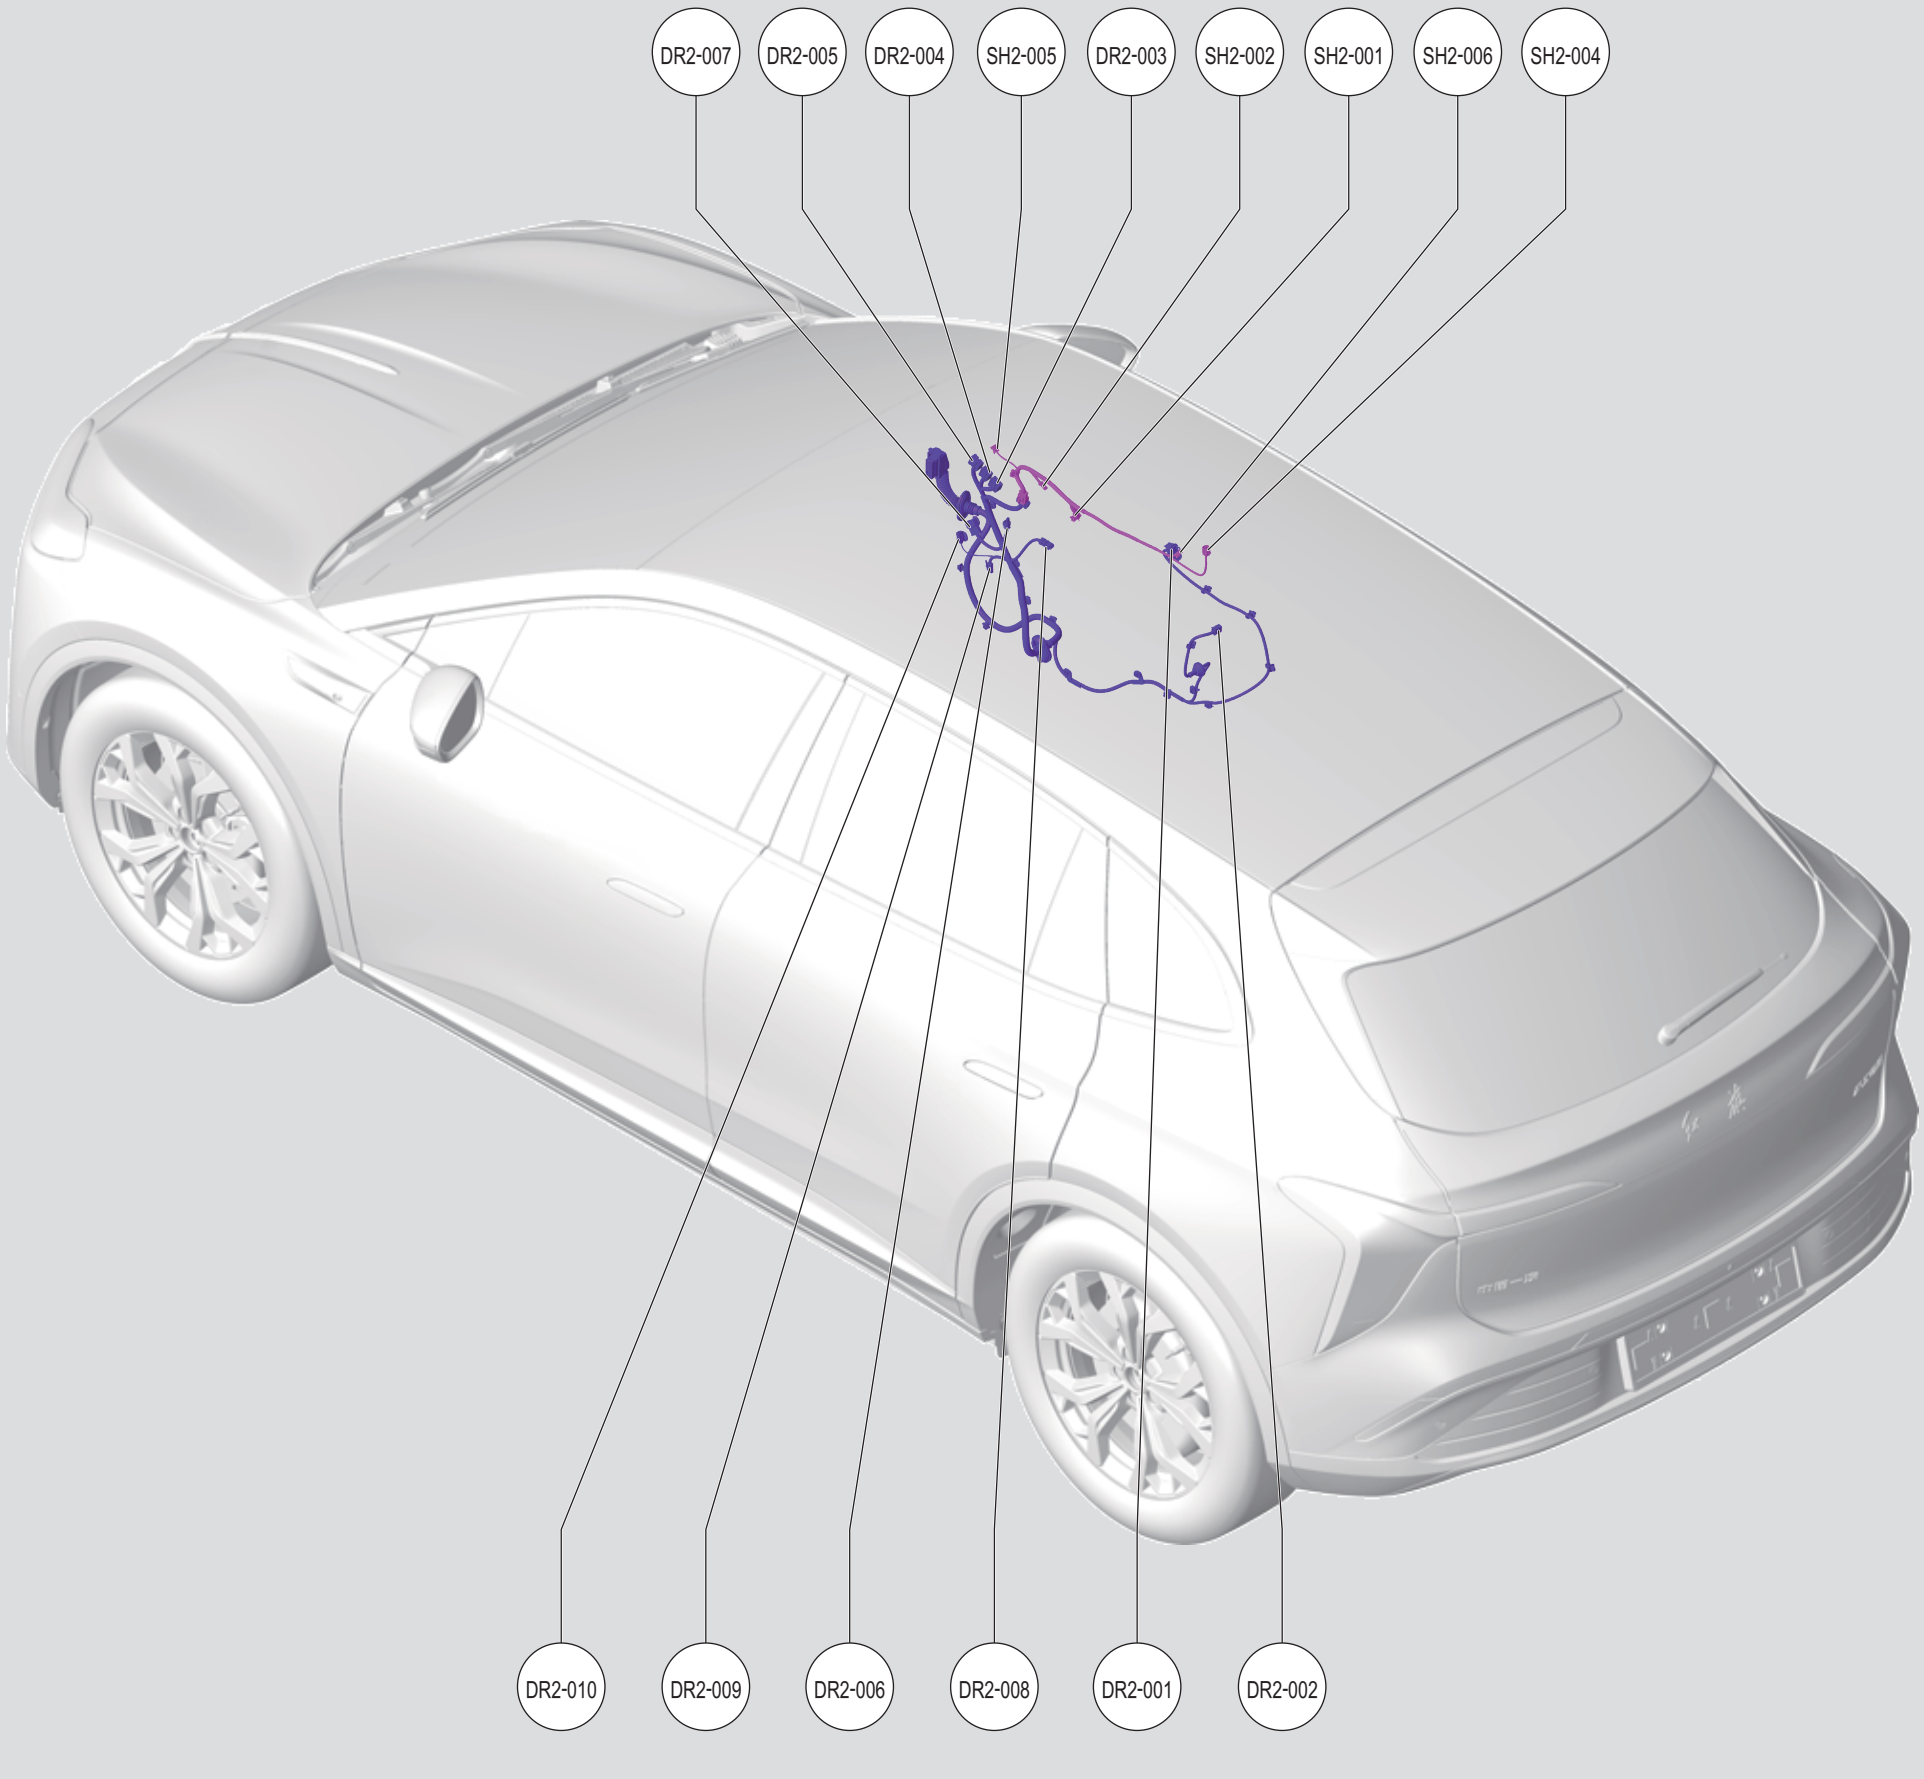
SH1-001 Door power window switch FL
左前门电动窗开关

SH1-002 Door midrange speaker FL
左前门中音扬声器

SH1-004 Smart entry antenna FL
智能进入天线左前

SH1-005 Door ambient light I assembly FL 1
左前门氛围灯Ⅰ总成1

SH1-006 Door ambient light I assembly FL 2
左前门氛围灯Ⅰ总成2



DR2-001 Door invisible handle FR
右前门隐形门把手

DR2-002 Door lock FR
右前门锁

DR2-003 Front right door control unit (PDCU) A
右前车门控制单元(PDCU)A

DR2-004 Front right door control unit (PDCU) B
右前车门控制单元(PDCU)B

DR2-005 Front right door control unit (PDCU) C
右前车门控制单元(PDCU)C

DR2-006 Side collision pressure sensor FR
右前侧碰压力传感器

DR2-007 Outside rear view mirror RH
右侧外后视镜

DR2-008 Door power window regulator FR
右前门电动玻璃升降器

DR2-009 Door woofer FR
右前门低音扬声器

DR2-010 Panoramic camera RH
右环视摄像头

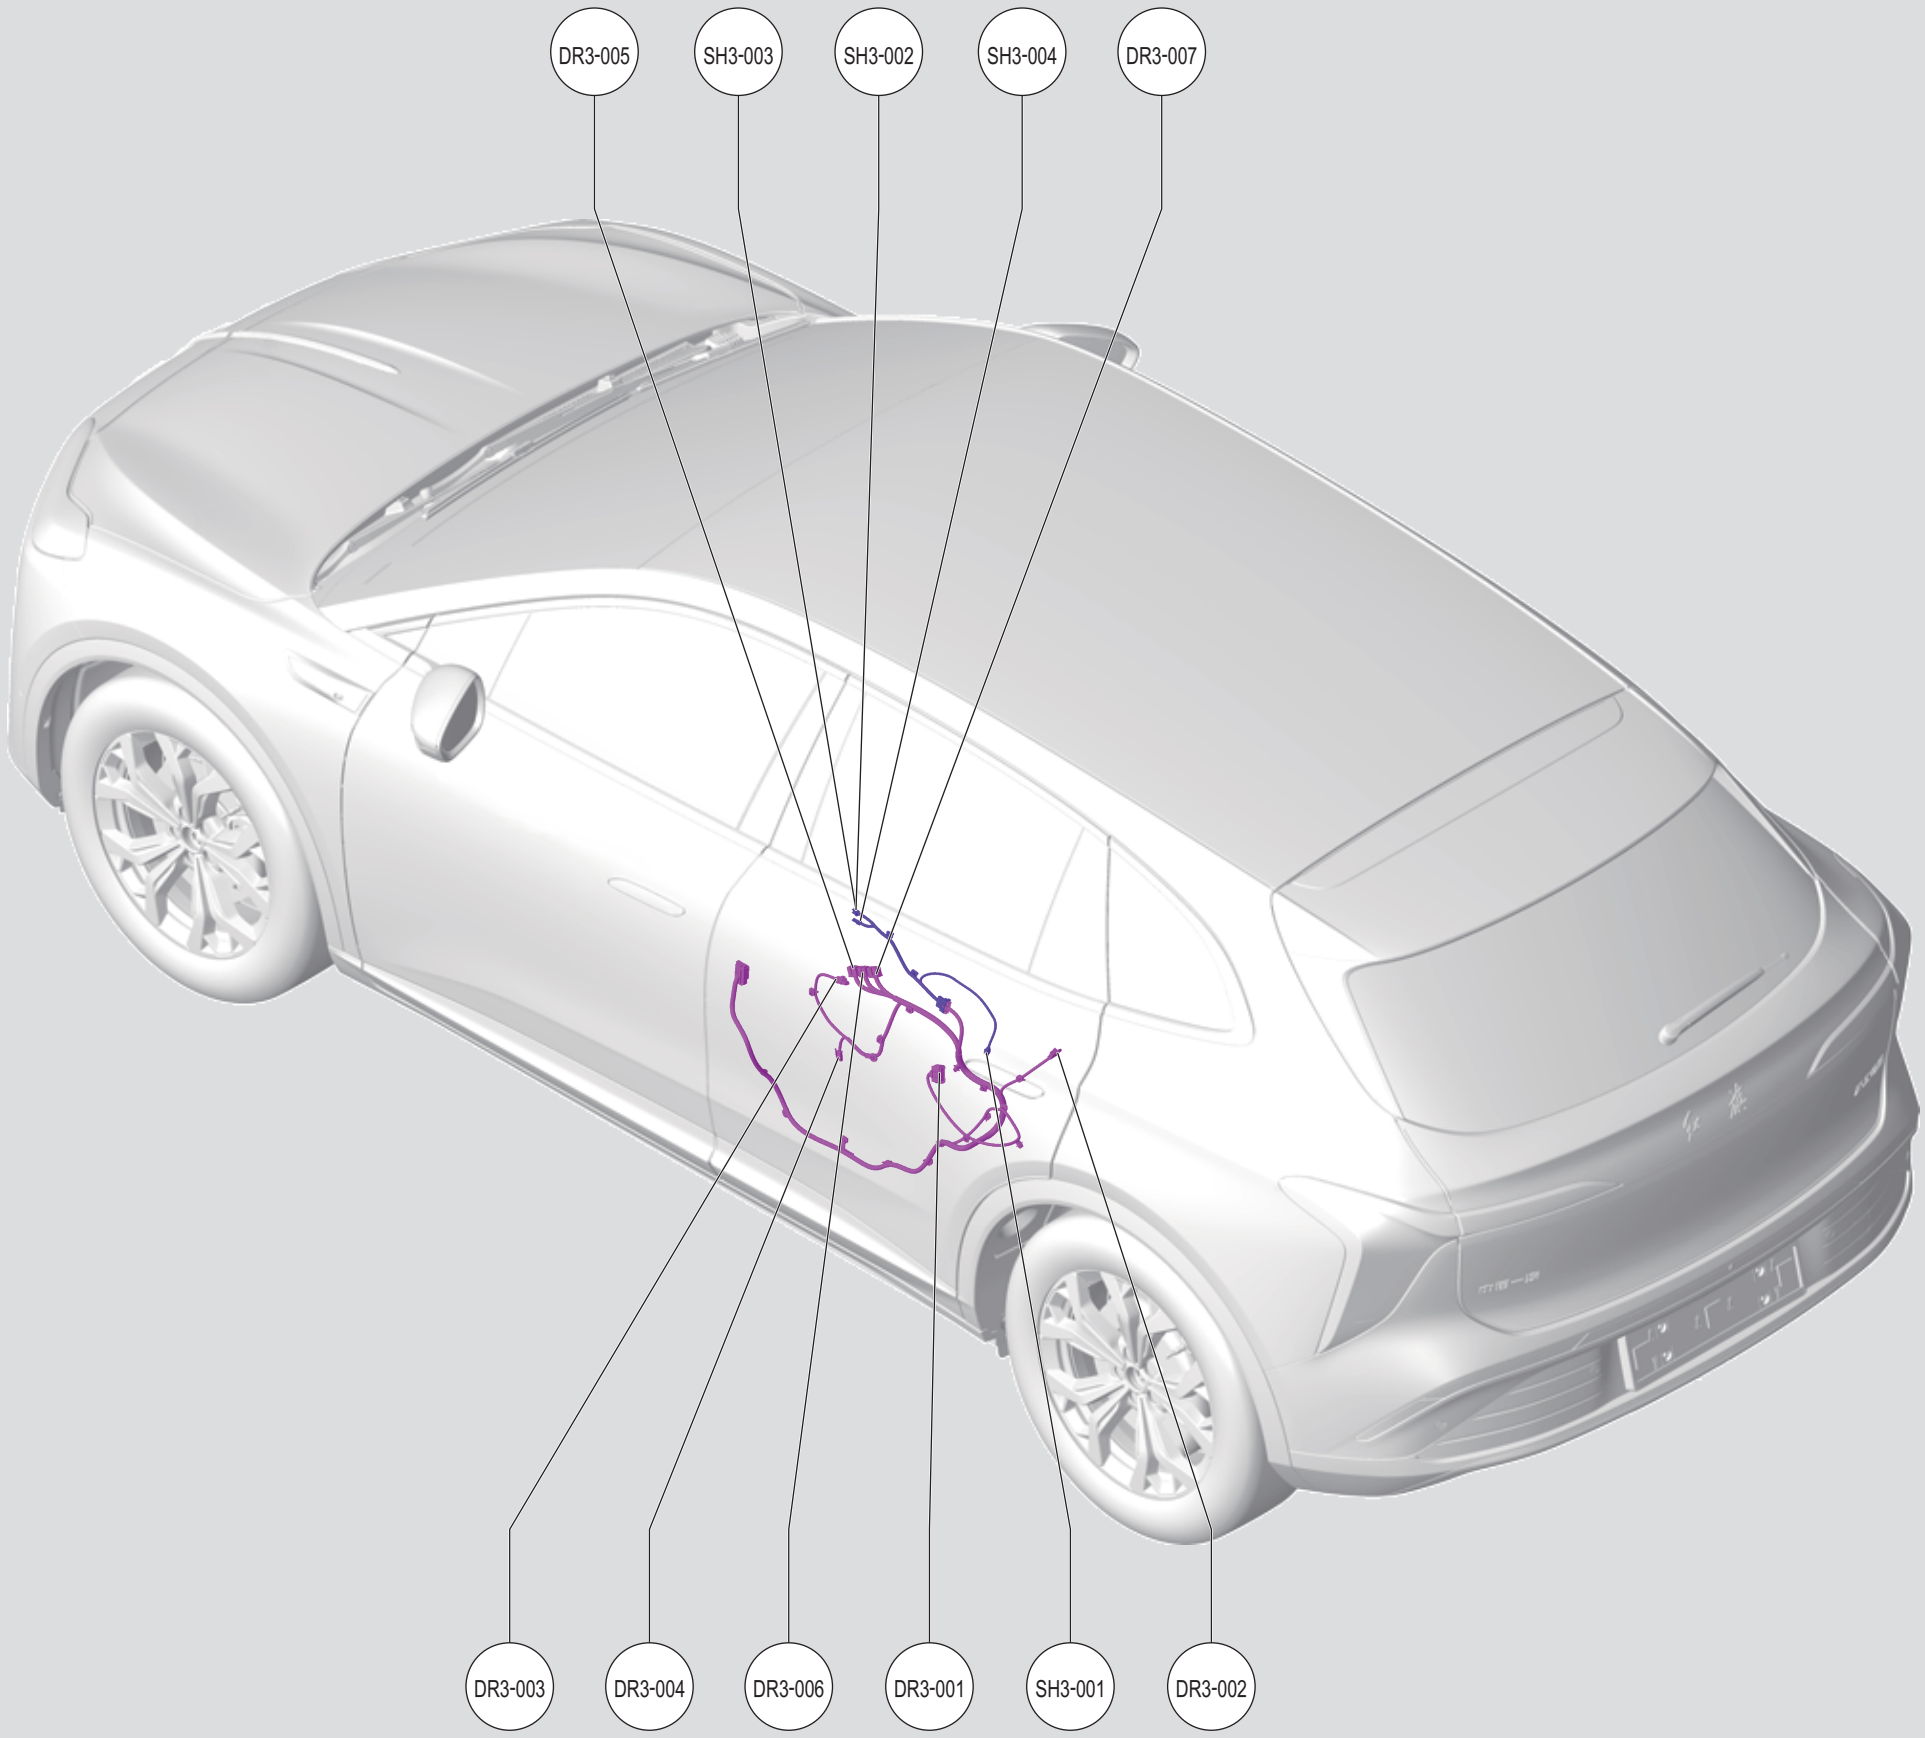
SH2-001 Door power window switch FR
右前门电动窗开关

SH2-002 Door midrange speaker FR
右前门中音扬声器

SH2-004 Smart entry antenna FR
智能进入天线右前

SH2-005 Door ambient light I assembly FR 1
右前门氛围灯Ⅰ总成1

SH2-006 Door ambient light I assembly FR 2
右前门氛围灯Ⅰ总成2



DR3-001 Rear left door invisible handle
左后门隐形门把手

DR3-002 Door lock RL
左后门锁

DR3-003 Door power window regulator RL
左后门电动玻璃升降器

DR3-004 Door woofer RL
左后门低音扬声器

DR3-005 Rear left door control unit A
左后车门控制单元A

DR3-006 Rear left door control unit B
左后车门控制单元B

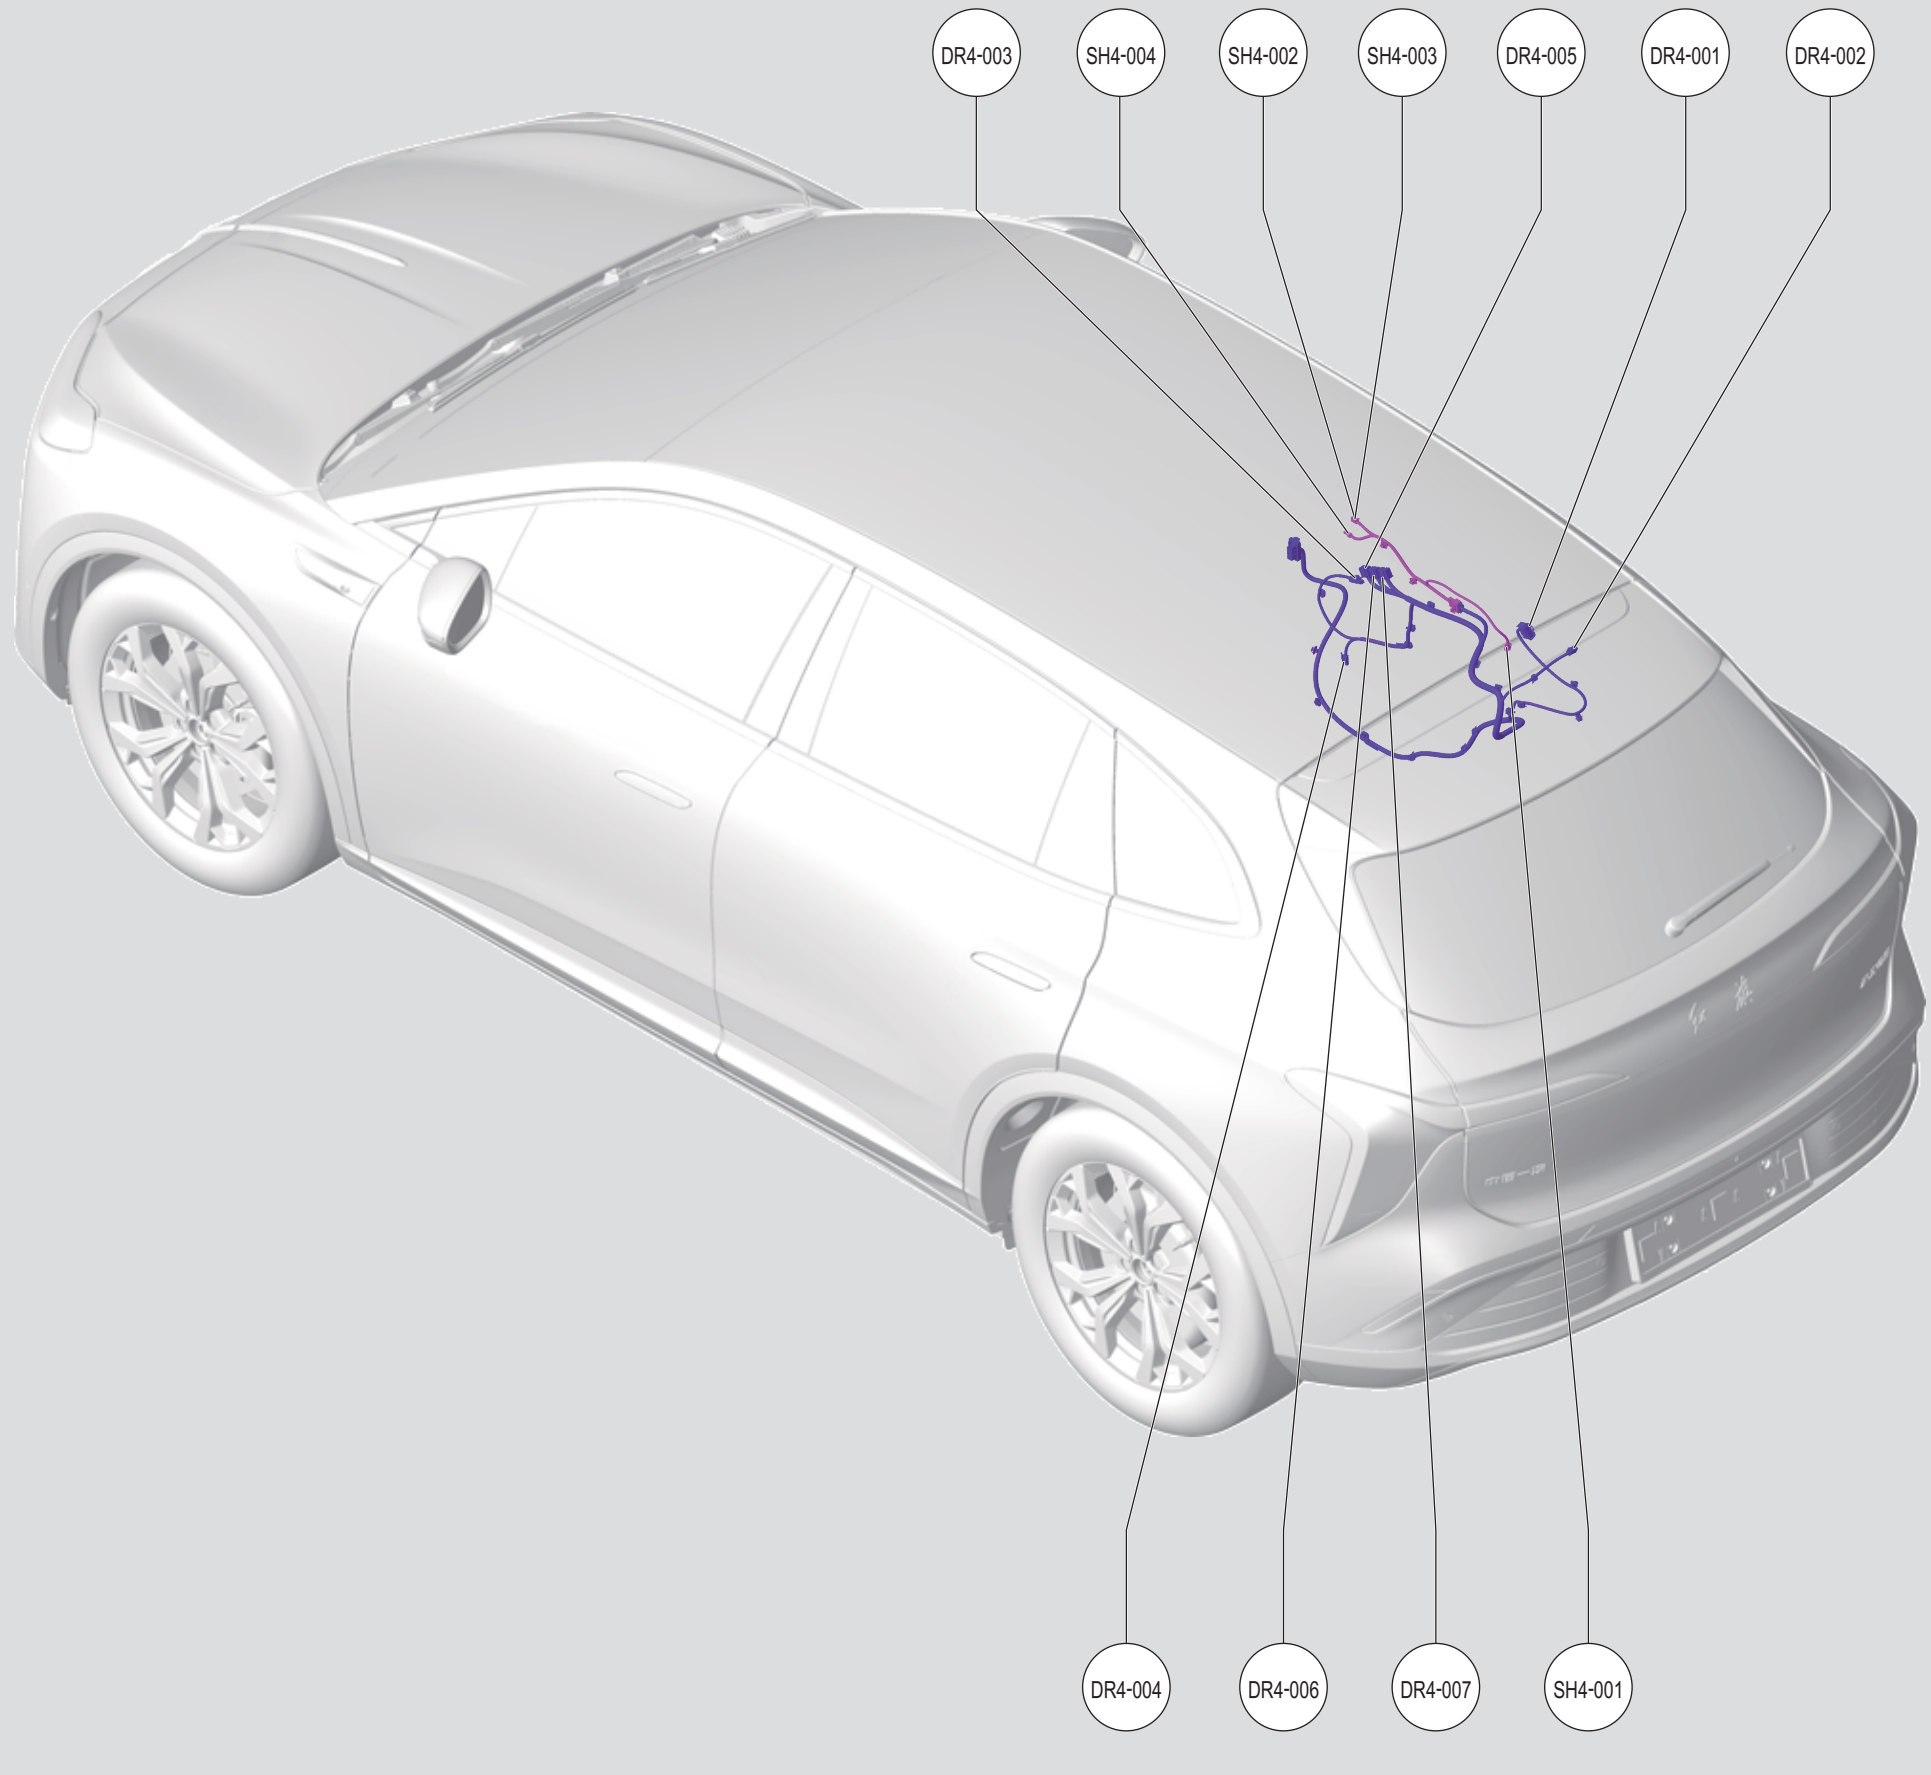
DR3-007 Rear left door control unit C
左后车门控制单元C

SH3-001 Rear left door power window switch
左后门电动窗开关

SH3-002 Door tweeter RL_low configuration
左后门高音扬声器_低配

SH3-003 Door tweeter RL
左后门高音扬声器

SH3-004 Door ambient light RL
左后门氛围灯



DR4-001 Door invisible door handle RR
右后门隐形门把手

DR4-002 Door lock RR
右后门锁

DR4-003 Door power window regulator RR
右后门电动玻璃升降器

DR4-004 Door woofer RR
右后门低音扬声器

DR4-005 Rear right door control unit A
右后车门控制单元A

DR4-006 Rear right door control unit B
右后车门控制单元B

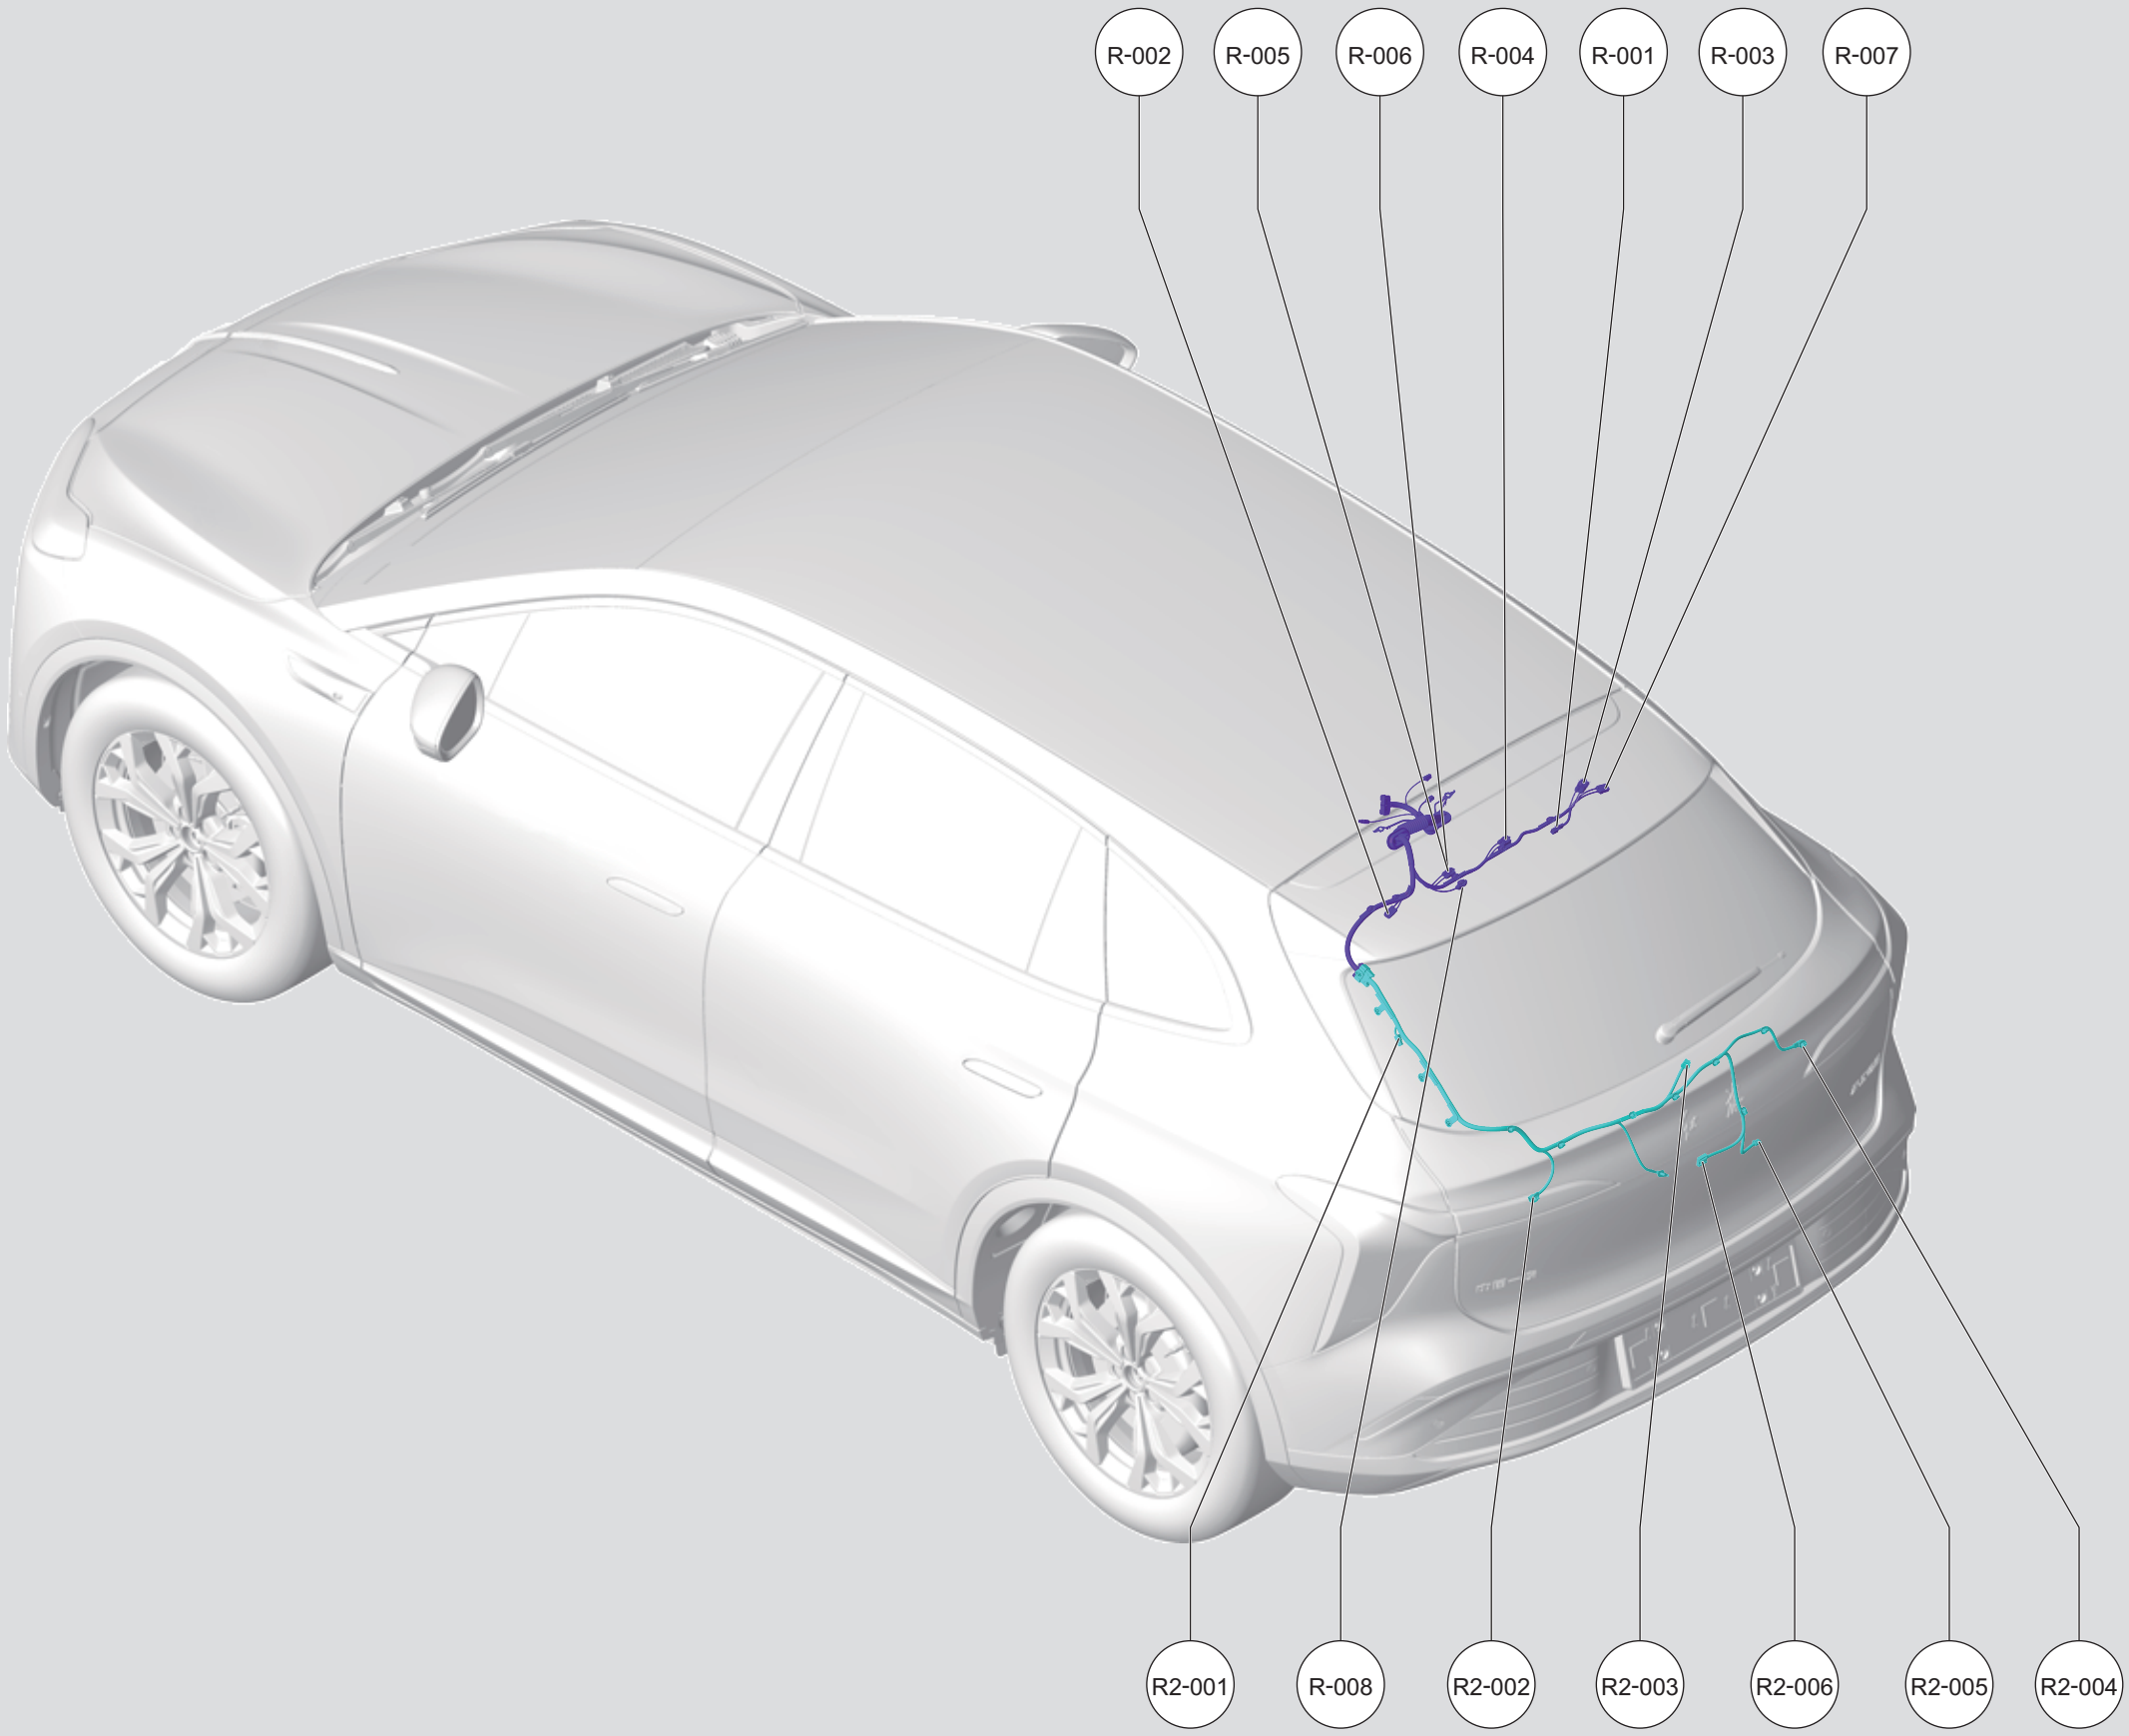
DR4-007 Rear right door control unit C
右后车门控制单元C

SH4-001 Door power window switch RR
右后门电动窗开关

SH4-002 Door tweeter RR
右后门高音扬声器

SH4-003 Door tweeter RR_low configuration
右后门高音扬声器_低配

SH4-004 Door ambient light RR
右后门氛围灯



R-001 High mounted stop light
高位制动灯

R-002 DAB main antenna
DAB主天线

R-003 DAB sub-antenna
DAB分天线

R-004 5G antenna 1
5G天线1

R-005 5G antenna 2
5G天线2

R-006 4G antenna
4G天线

R-007 Radio antenna amplifier 2
收音机天线放大器2

R-008 Rear camera - DJ
后视摄像头-大疆

R2-001 Radio antenna wave trap
收音天线陷波器

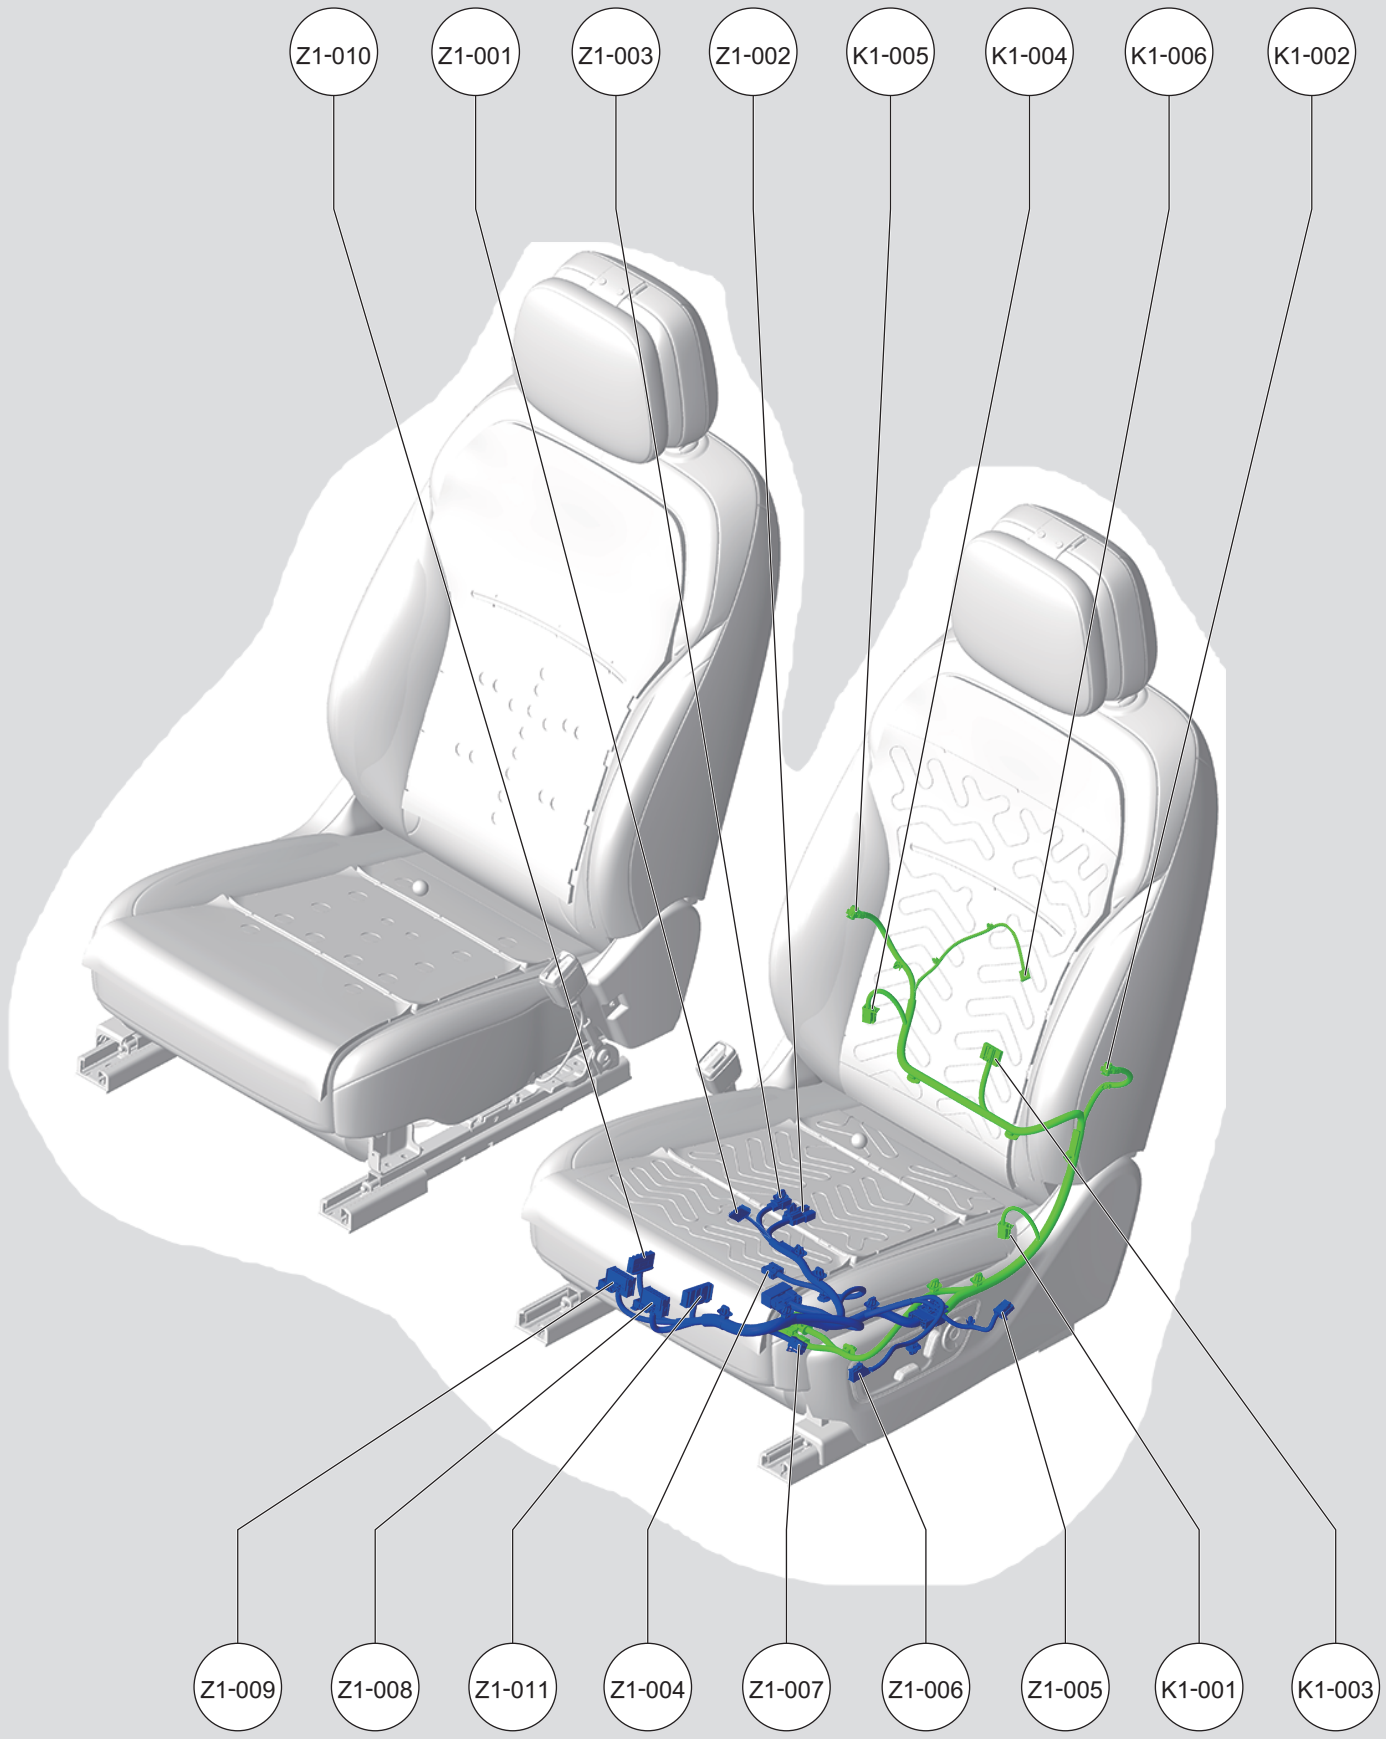
R2-002 Combination light RL II
左后组合灯Ⅱ

R2-003 Rear wiper
后刮水器

R2-004 Combination light RR II
右后组合灯Ⅱ

R2-005 Luggage compartment closed switch
行李箱关闭开关

R2-006 Luggage compartment lock
行李箱锁



K1-001 Driver seatback heater
主驾座椅靠背加热

K1-002 Driver seat airbag
驾驶员座椅安全气囊

K1-003 Driver lumbar support massage
主驾腰托按摩

K1-004 Driver angle adjustment motor
主驾角度调节电机

K1-005 Driver seat right airbag
驾驶员座椅右侧安全气囊

K1-006 Driver seatback ventilation motor
主驾座椅靠背通风电机

Z1-001 Driver seat cushion ventilation motor
主驾座椅坐垫通风电机

Z1-002 Driver seat cushion heating
主驾座椅坐垫加热

Z1-003 Driver seat belt buckle
驾驶员安全带锁扣

Z1-004 Driver track memory motor
主驾滑轨记忆电机

Z1-005 Driver seat height adjustment motor
主驾座椅高调电机

Z1-006 Driver seat adjustment SW
驾驶员座椅调节开关

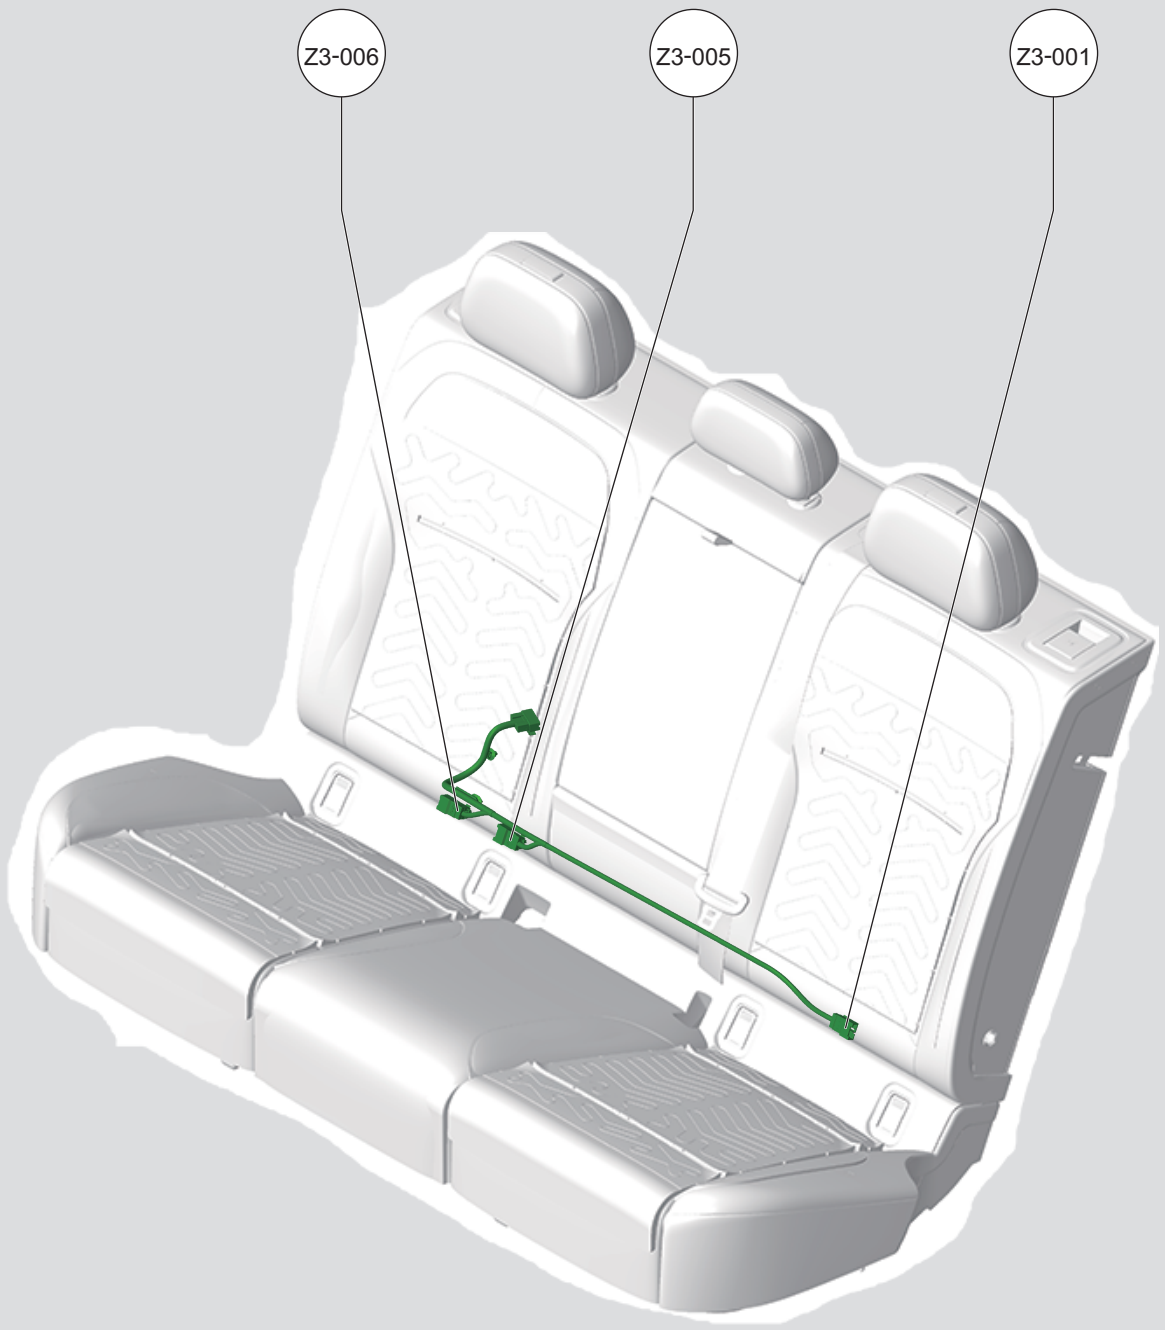
Z1-007 Driver seat tilt forward motor
主驾座椅前倾电机

Z1-008 Driver seat control unit (DSCU) A
驾驶员座椅控制单元 A

Z1-009 Driver seat control unit (DSCU) B
驾驶员座椅控制单元 B

Z1-010 Driver seat control unit (DSCU) C
驾驶员座椅控制单元 C

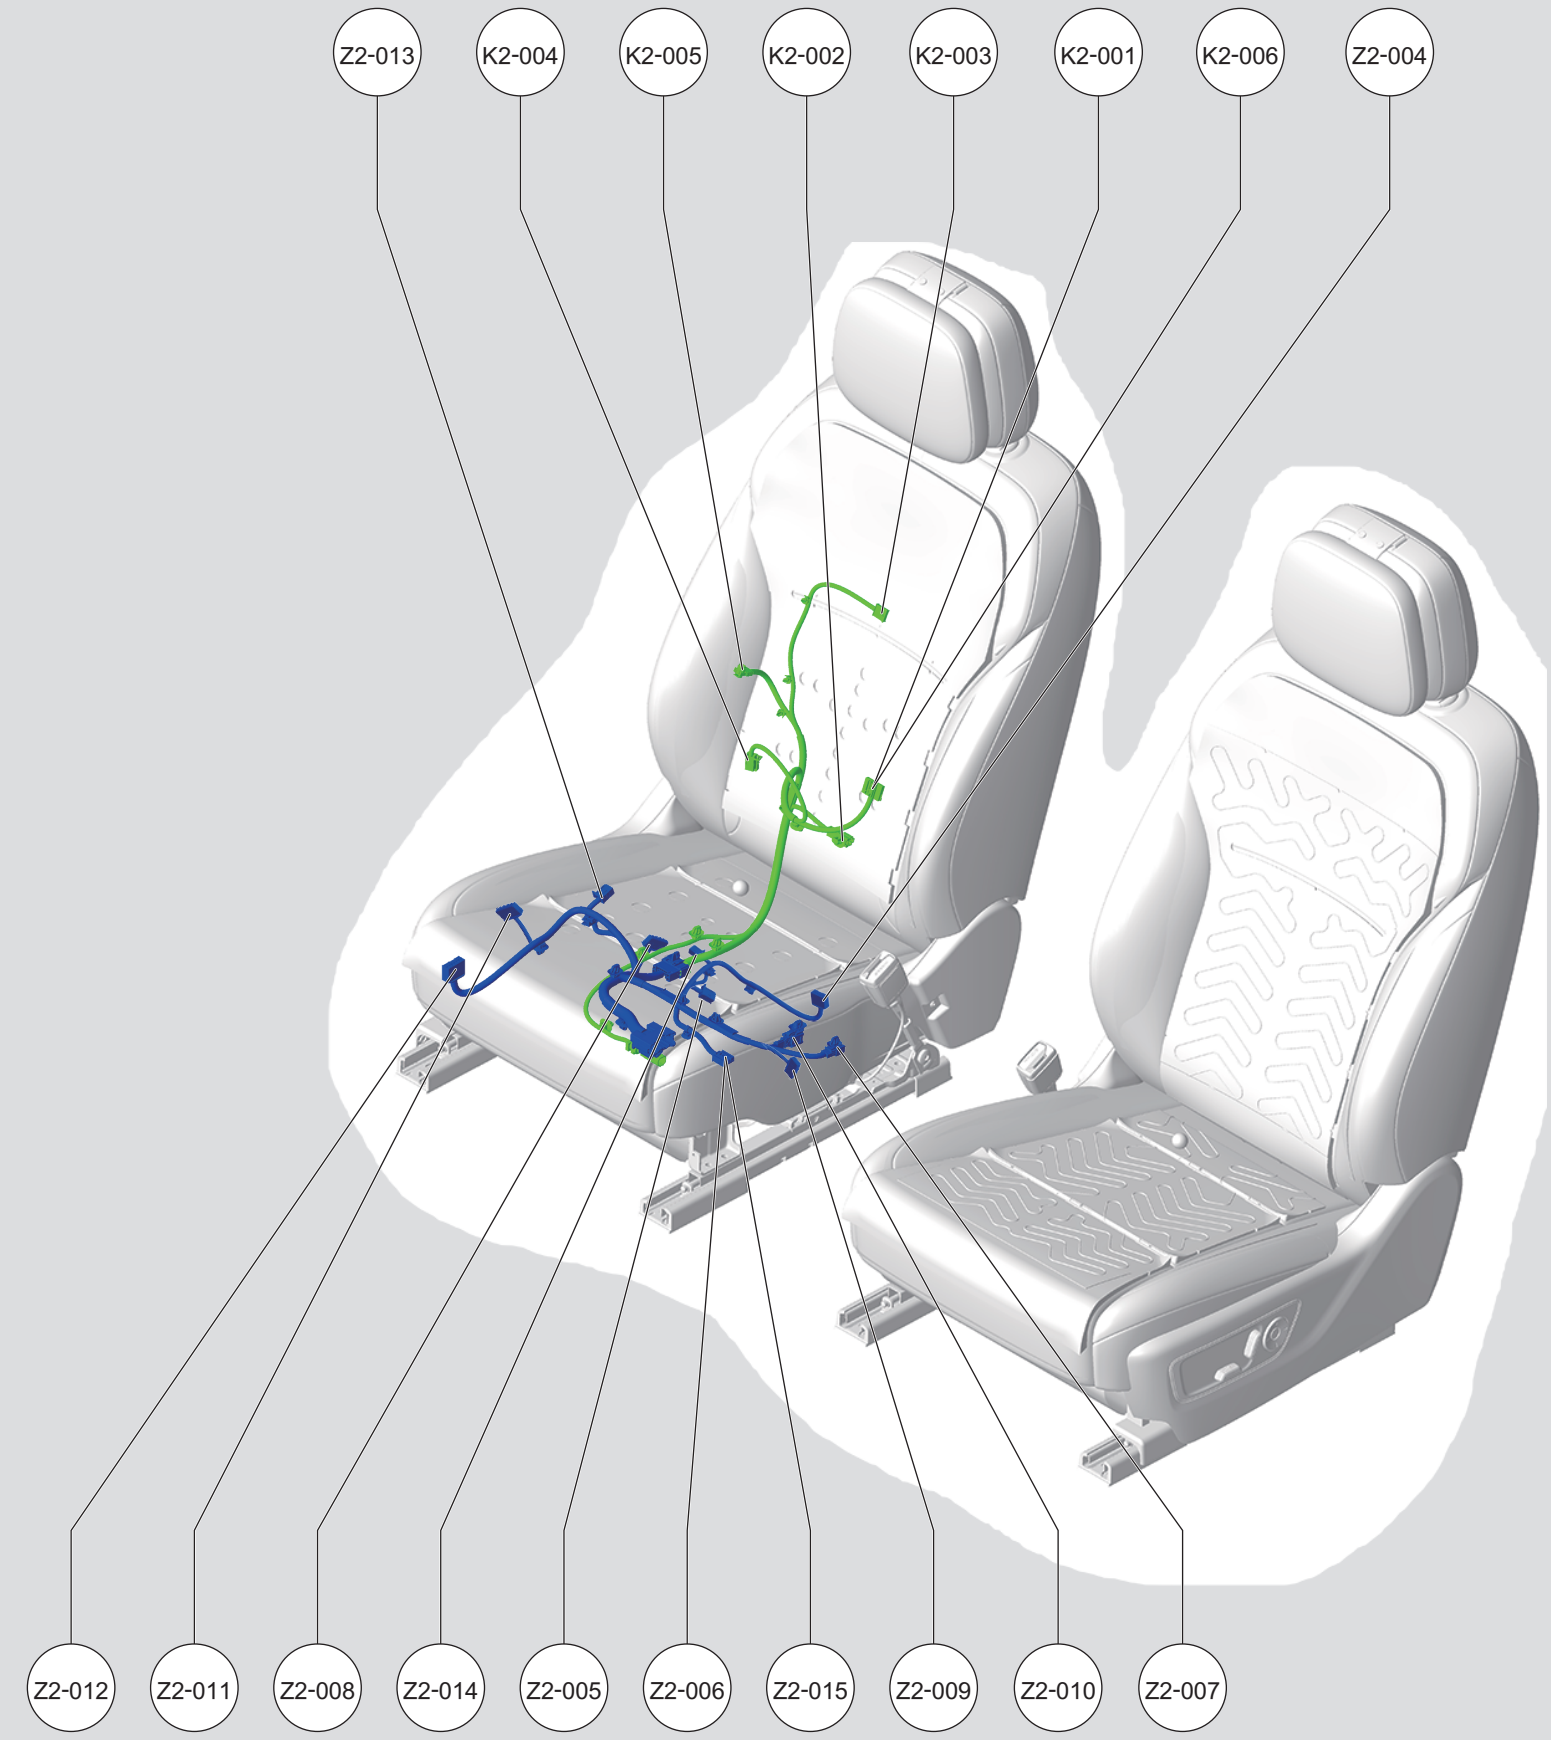
Z1-011 Driver seat control unit (DSCU) D
驾驶员座椅控制单元 D



Z3-001 Rear left seat cushion heating
左后座椅座垫加热

Z3-005 Rear right seat cushion heating
右后座椅座垫加热

Z3-006 Second row occupancy sensor - high configuration
二排占位传感器-高配



K2-001 Front passenger lumbar support massage
副驾腰托按摩

K2-002 Front passenger seatback heater
副驾座椅靠背加热

K2-003 Front passenger seatback ventilation motor
副驾座椅靠背通风电机

K2-004 Front passenger angle adjustment motor
副驾角度调节电机

K2-005 Front passenger seat airbag
副驾驶员座椅安全气囊

K2-006 Front passenger lumbar support motor
副驾腰托电机

Z2-004 Front passenger leg support length adjustment motor
副驾腿托长度调节电机

Z2-005 Front passenger leg support angle adjustment motor
副驾腿托角度调节电机

Z2-006 Front passenger seat track motor_with memory
副驾座椅滑轨电机_带记忆

Z2-007 Front passenger seat belt buckle
副驾驶员安全带锁扣

Z2-008 Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机

Z2-009 Front passenger seat cushion heater
副驾座椅坐垫加热

Z2-010 Front passenger occupancy sensor
副驾占位传感器

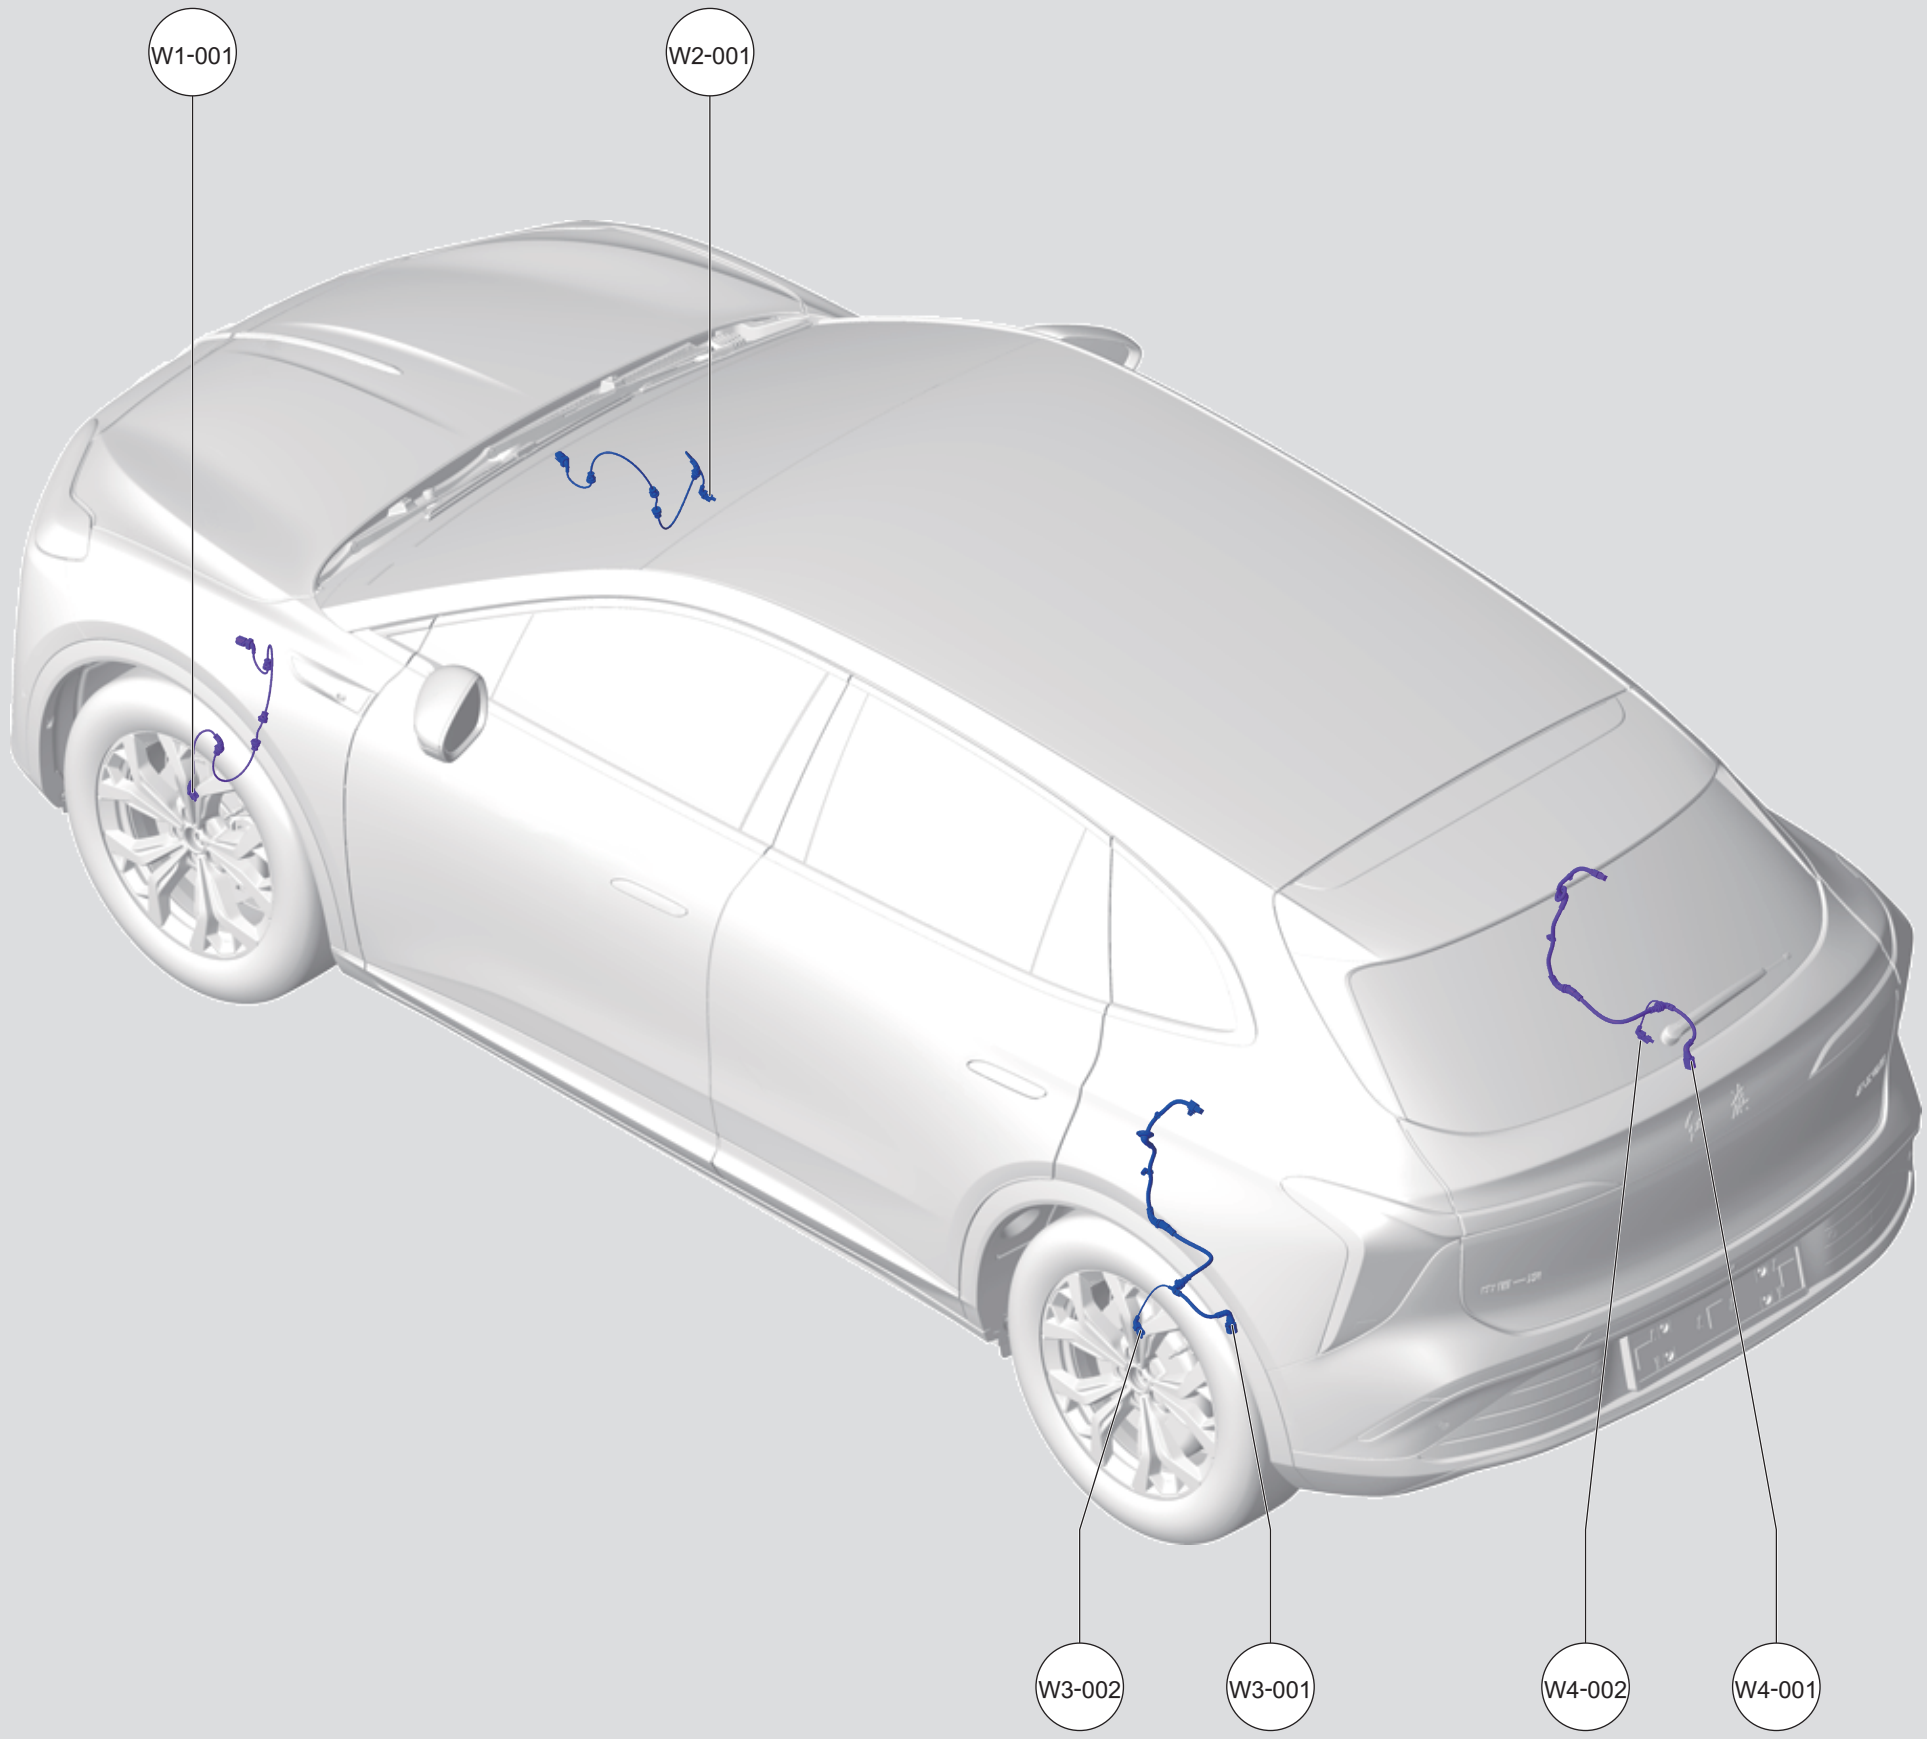
Z2-011 Front passenger seat adjustment switch
副驾驶员座椅调节开关

Z2-012 Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流

Z2-013 Front passenger seat height adjustment motor
副驾座椅高调电机

Z2-014 Front passenger seat tilt forward motor
副驾座椅前倾电机

Z2-015 Front passenger seat track motor_non-memory
副驾座椅滑轨电机_非记忆



W1-001 Wheel speed sensor FL - 2WD
左前轮速传感器

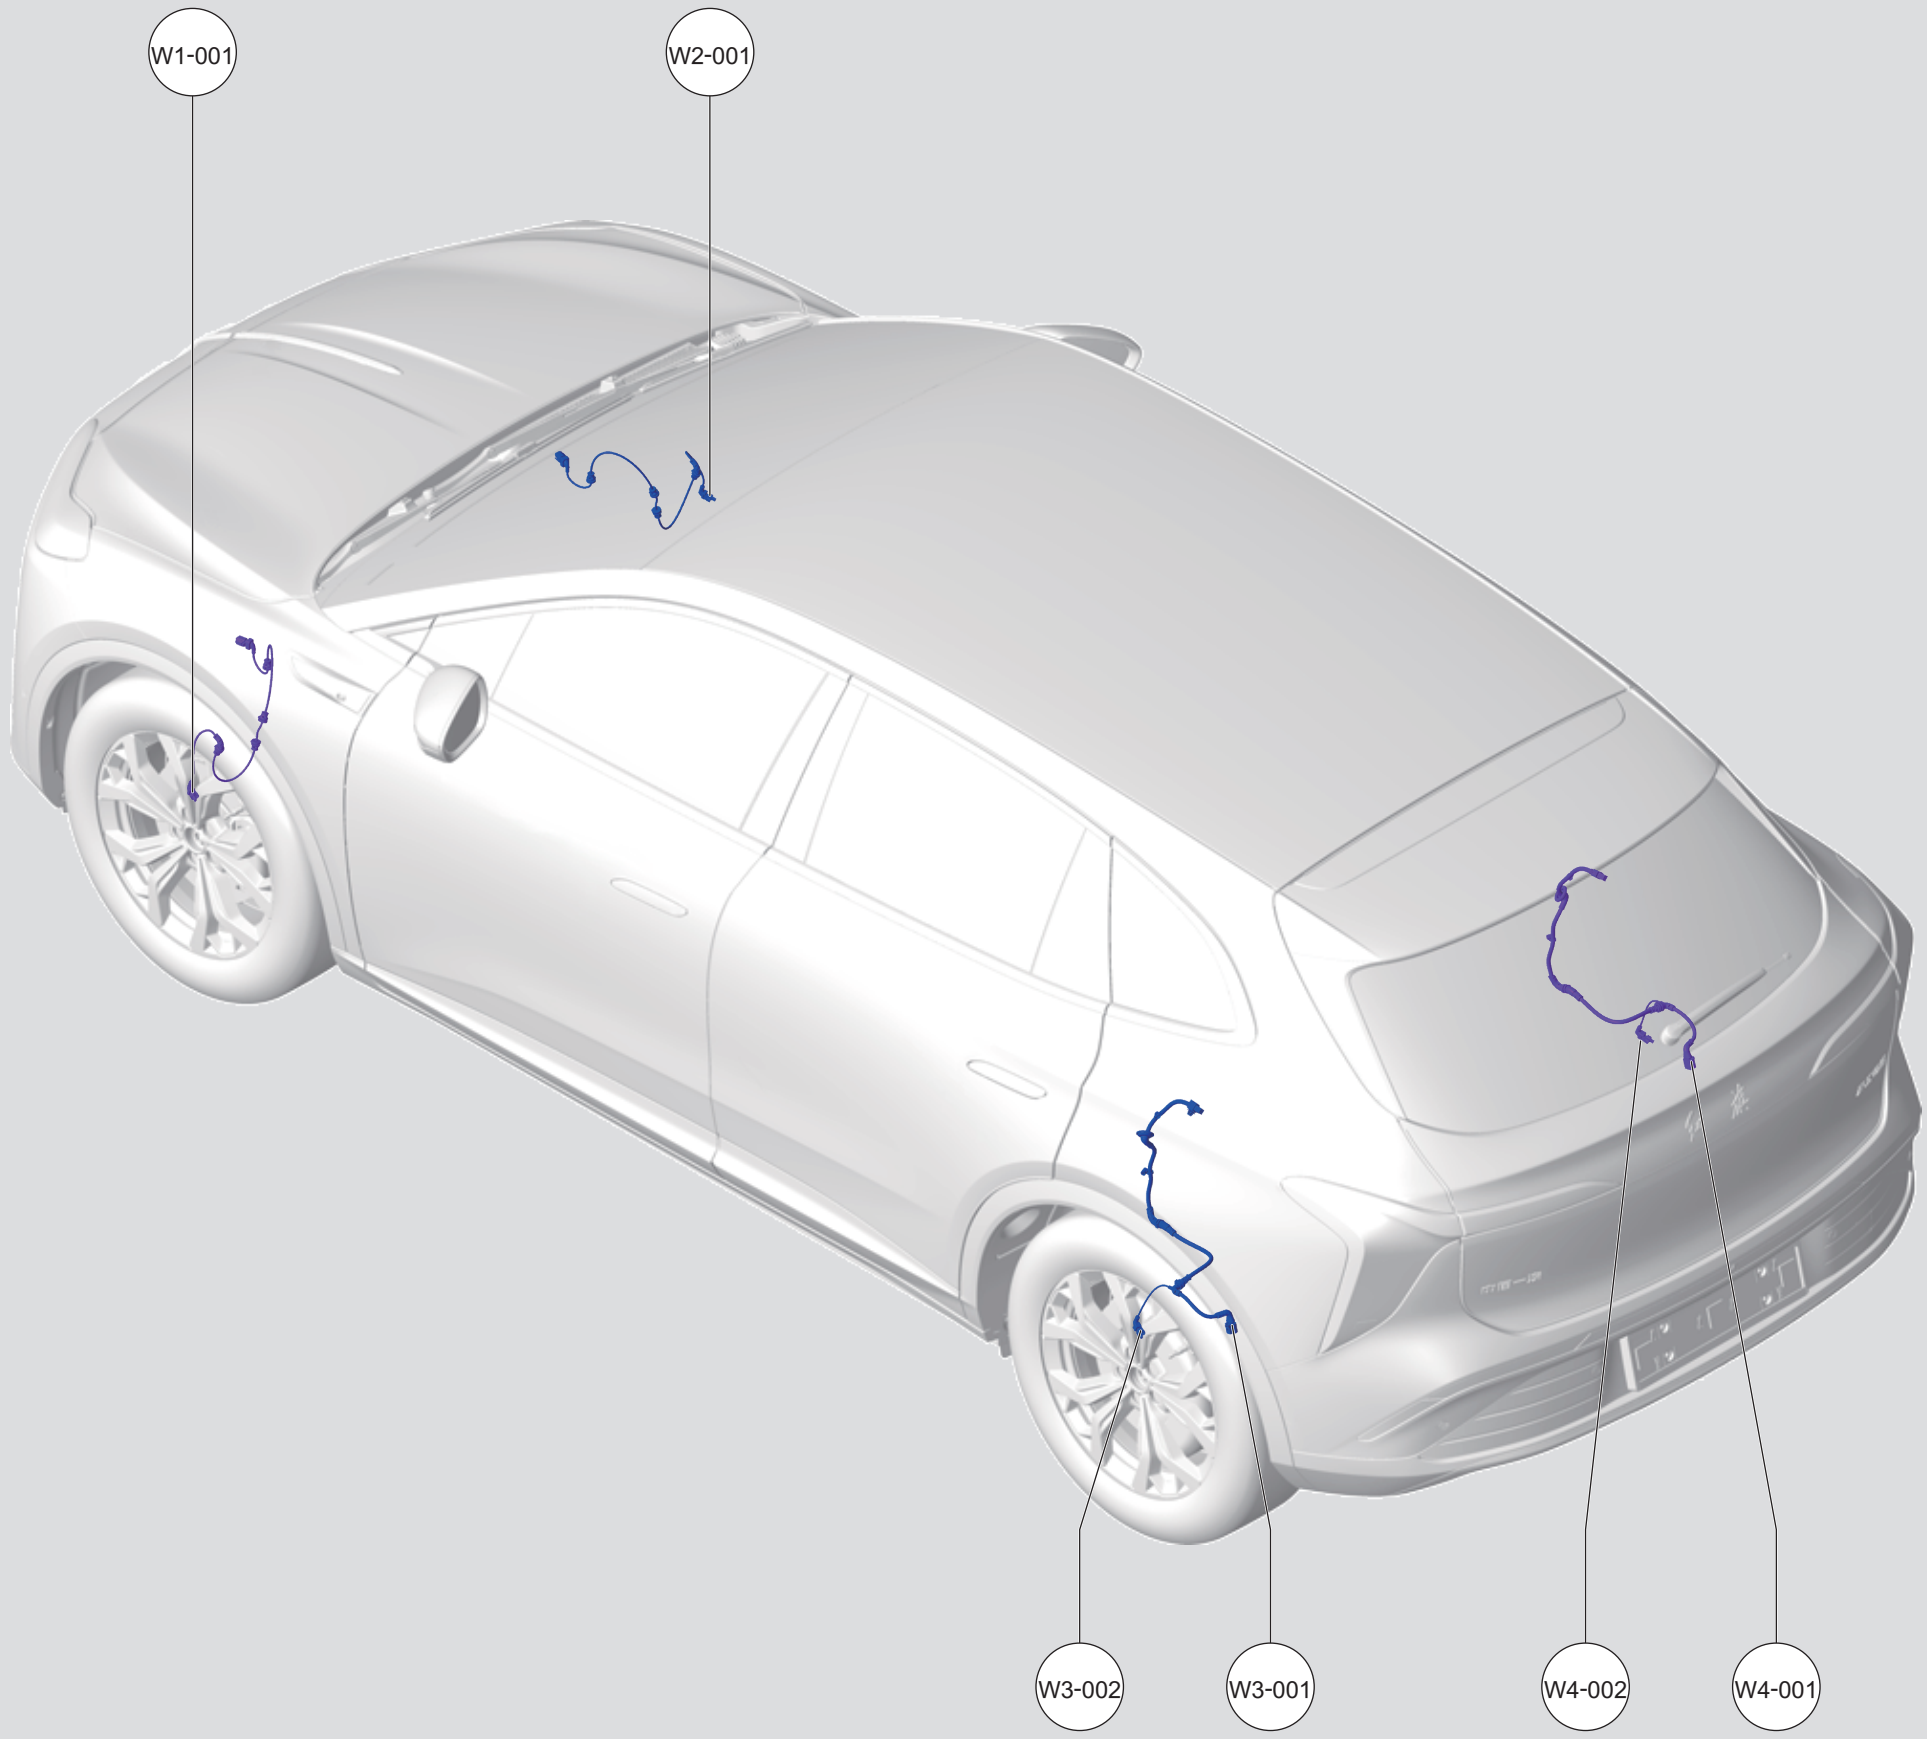
W2-001 Wheel speed sensor FR - 2WD
右前轮速传感器

W3-001 Wheel speed sensor RL
左后轮速传感器

W3-002 Brake caliper RL
左后制动钳

W4-001 Wheel speed sensor RR
右后轮速传感器

W4-002 Brake caliper RR
右后制动钳



W1-001 Wheel speed sensor FL - 2WD
左前轮速传感器

W2-001 Wheel speed sensor FR - 2WD
右前轮速传感器

W3-001 Wheel speed sensor RL
左后轮速传感器

W3-002 Brake caliper RL
左后制动钳

W4-001 Wheel speed sensor RR
右后轮速传感器

W4-002 Brake caliper RR
右后制动钳