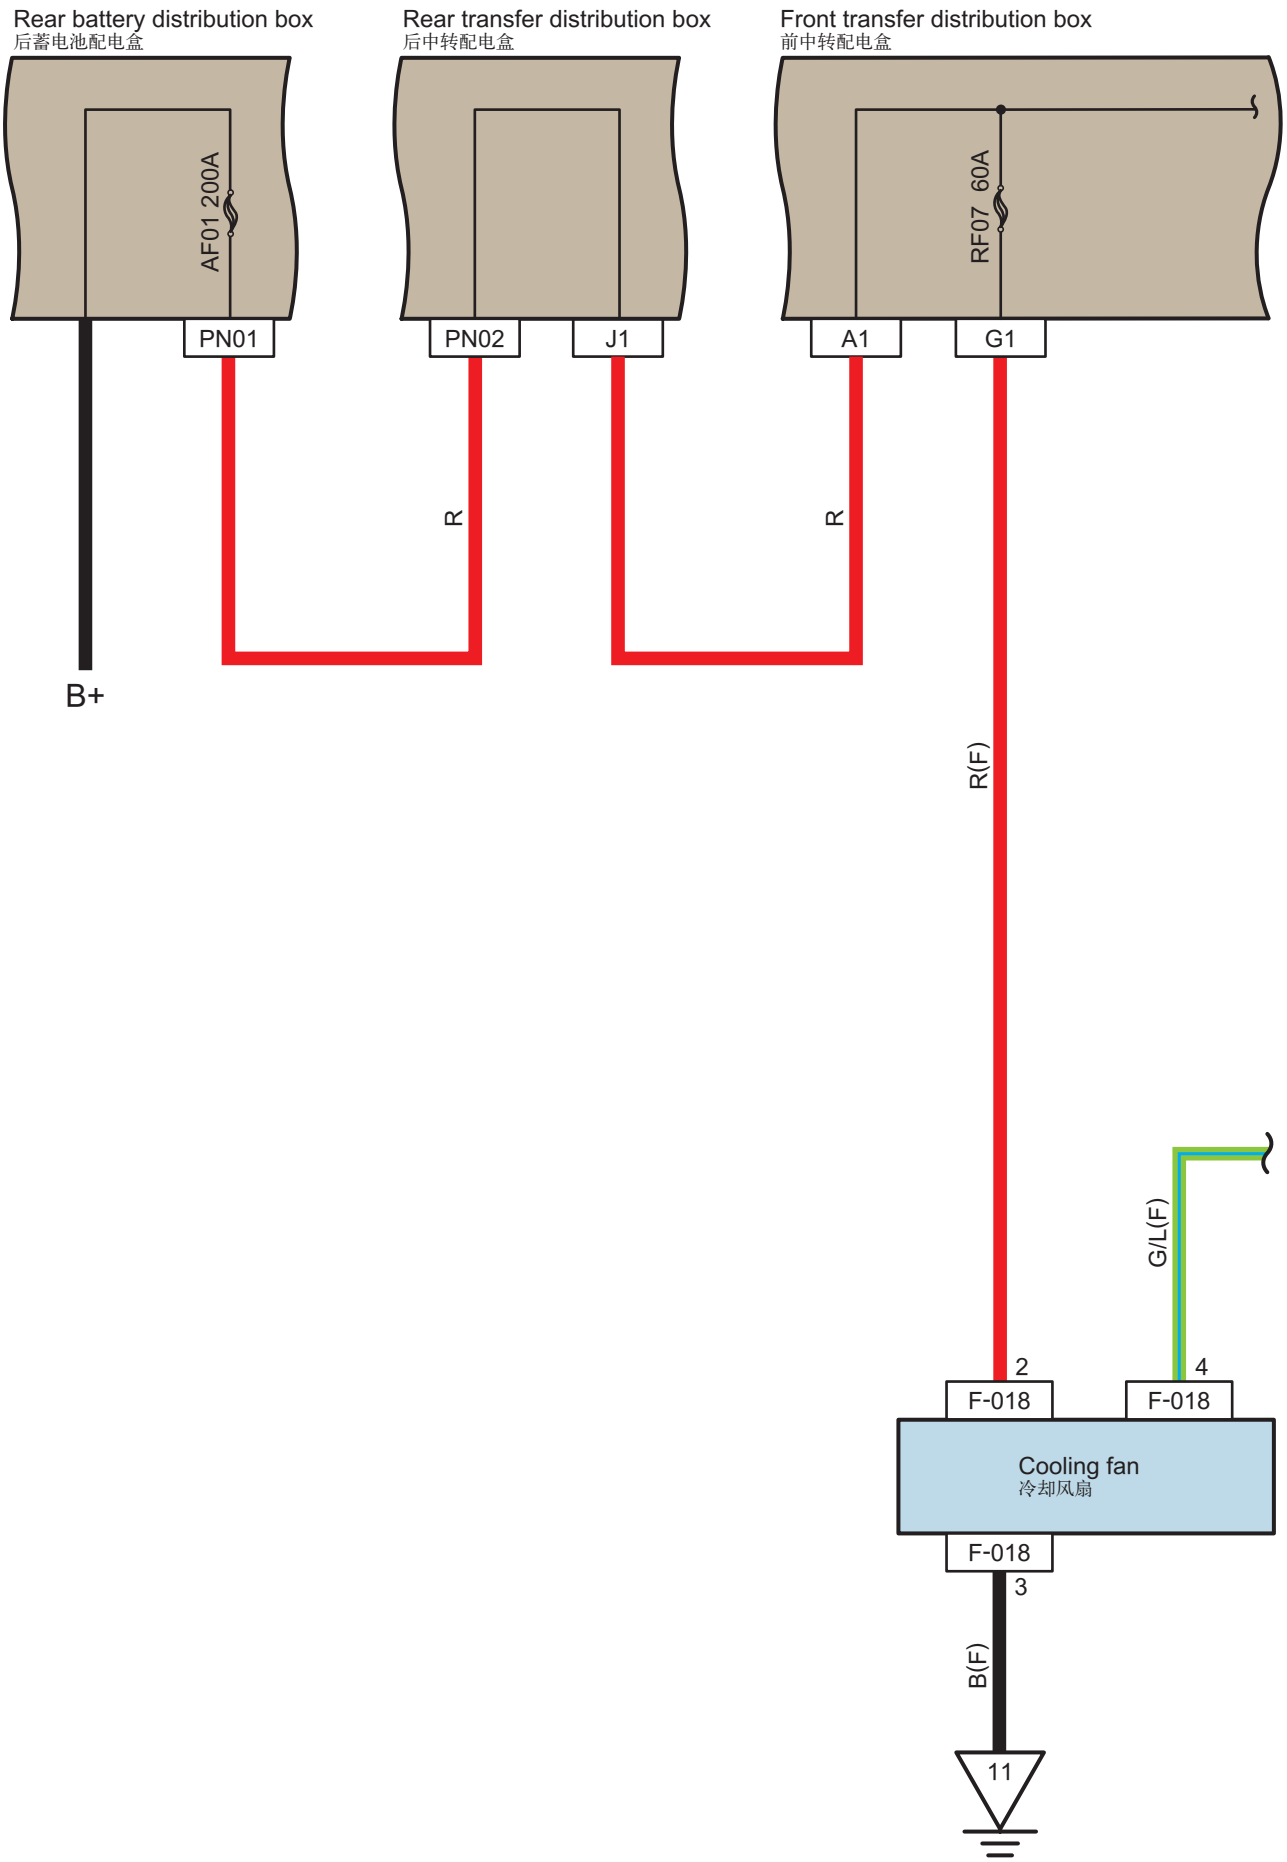
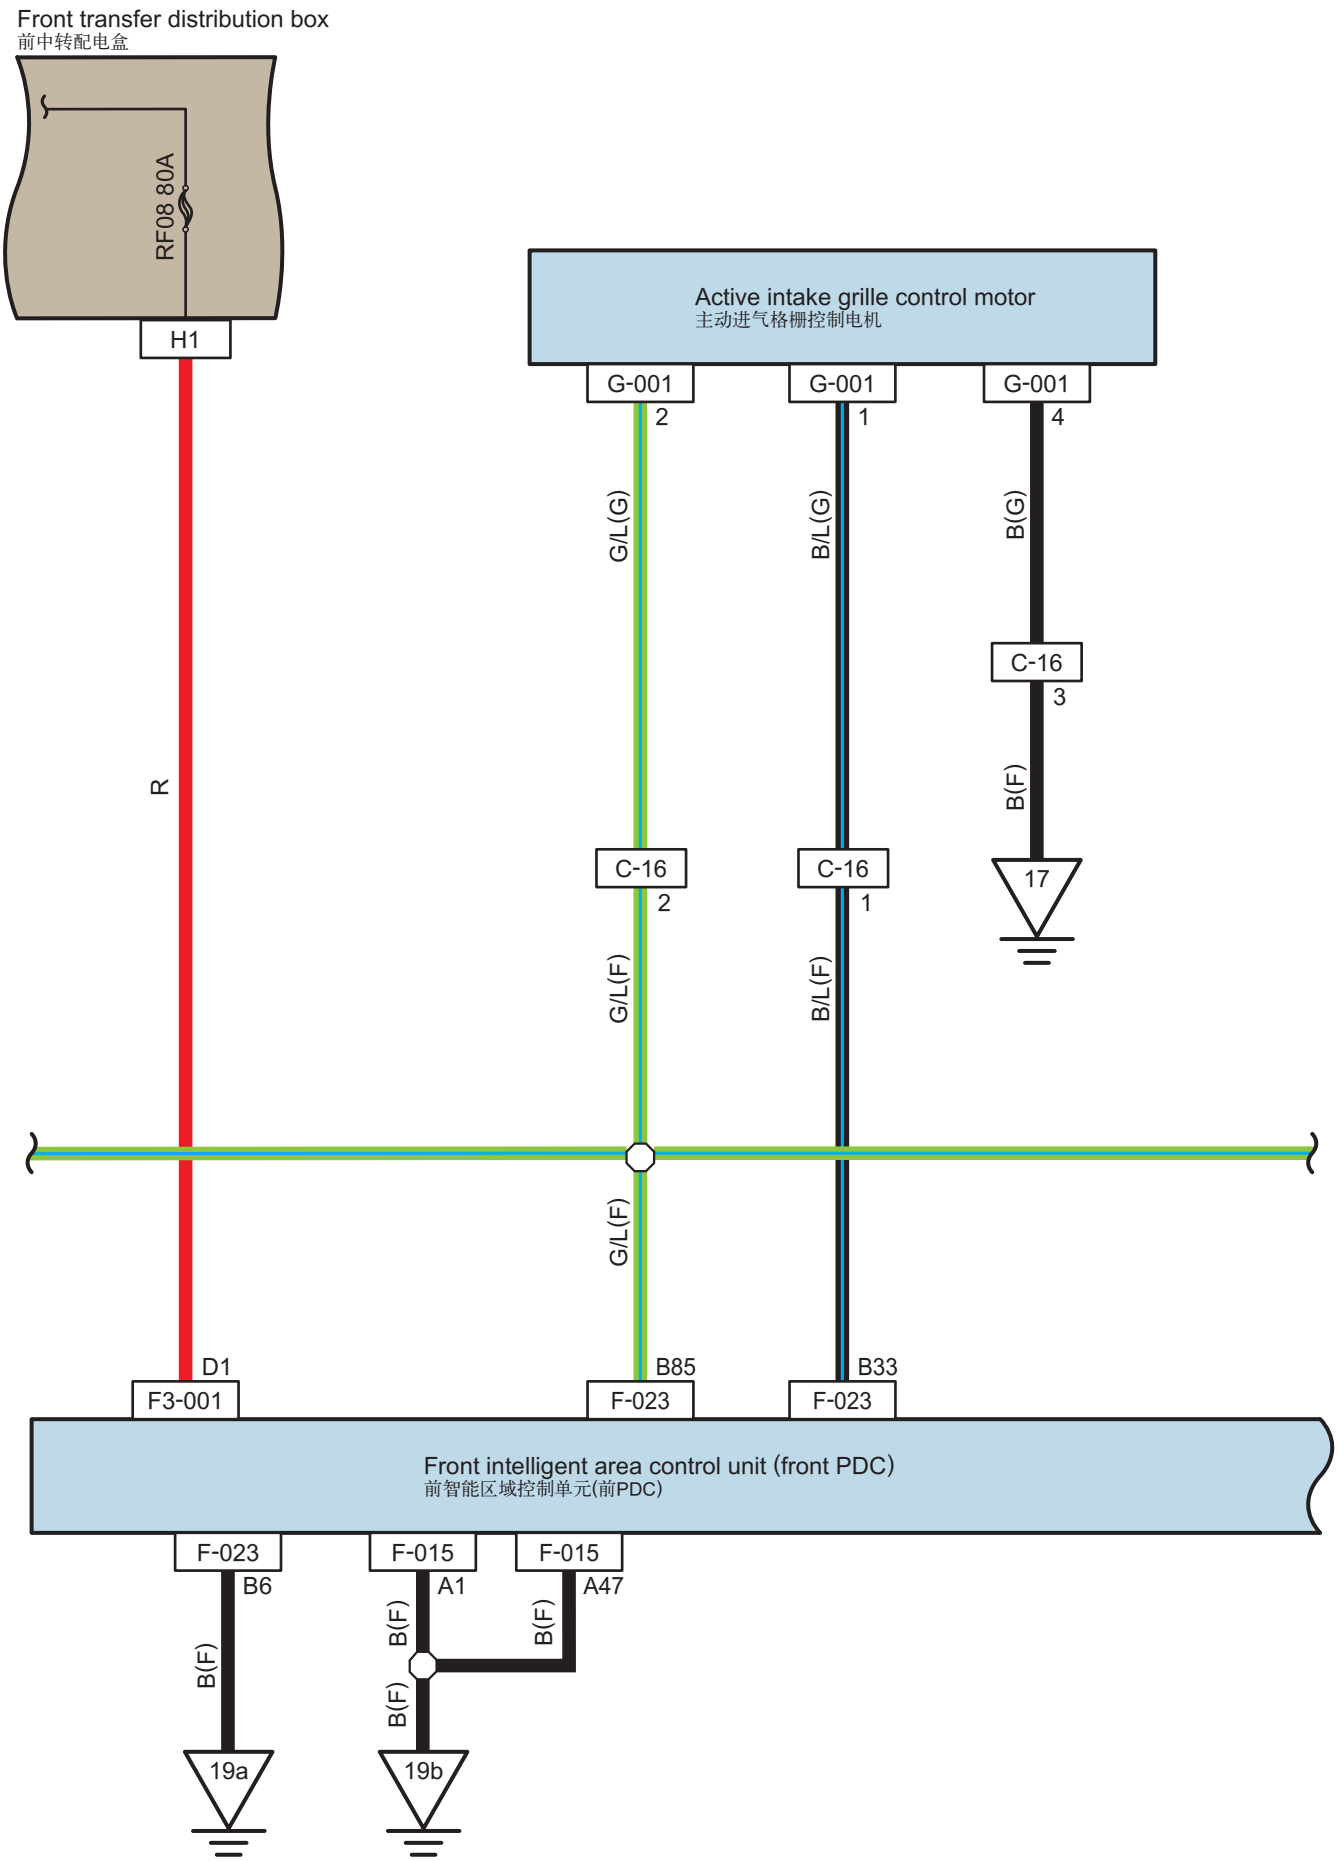
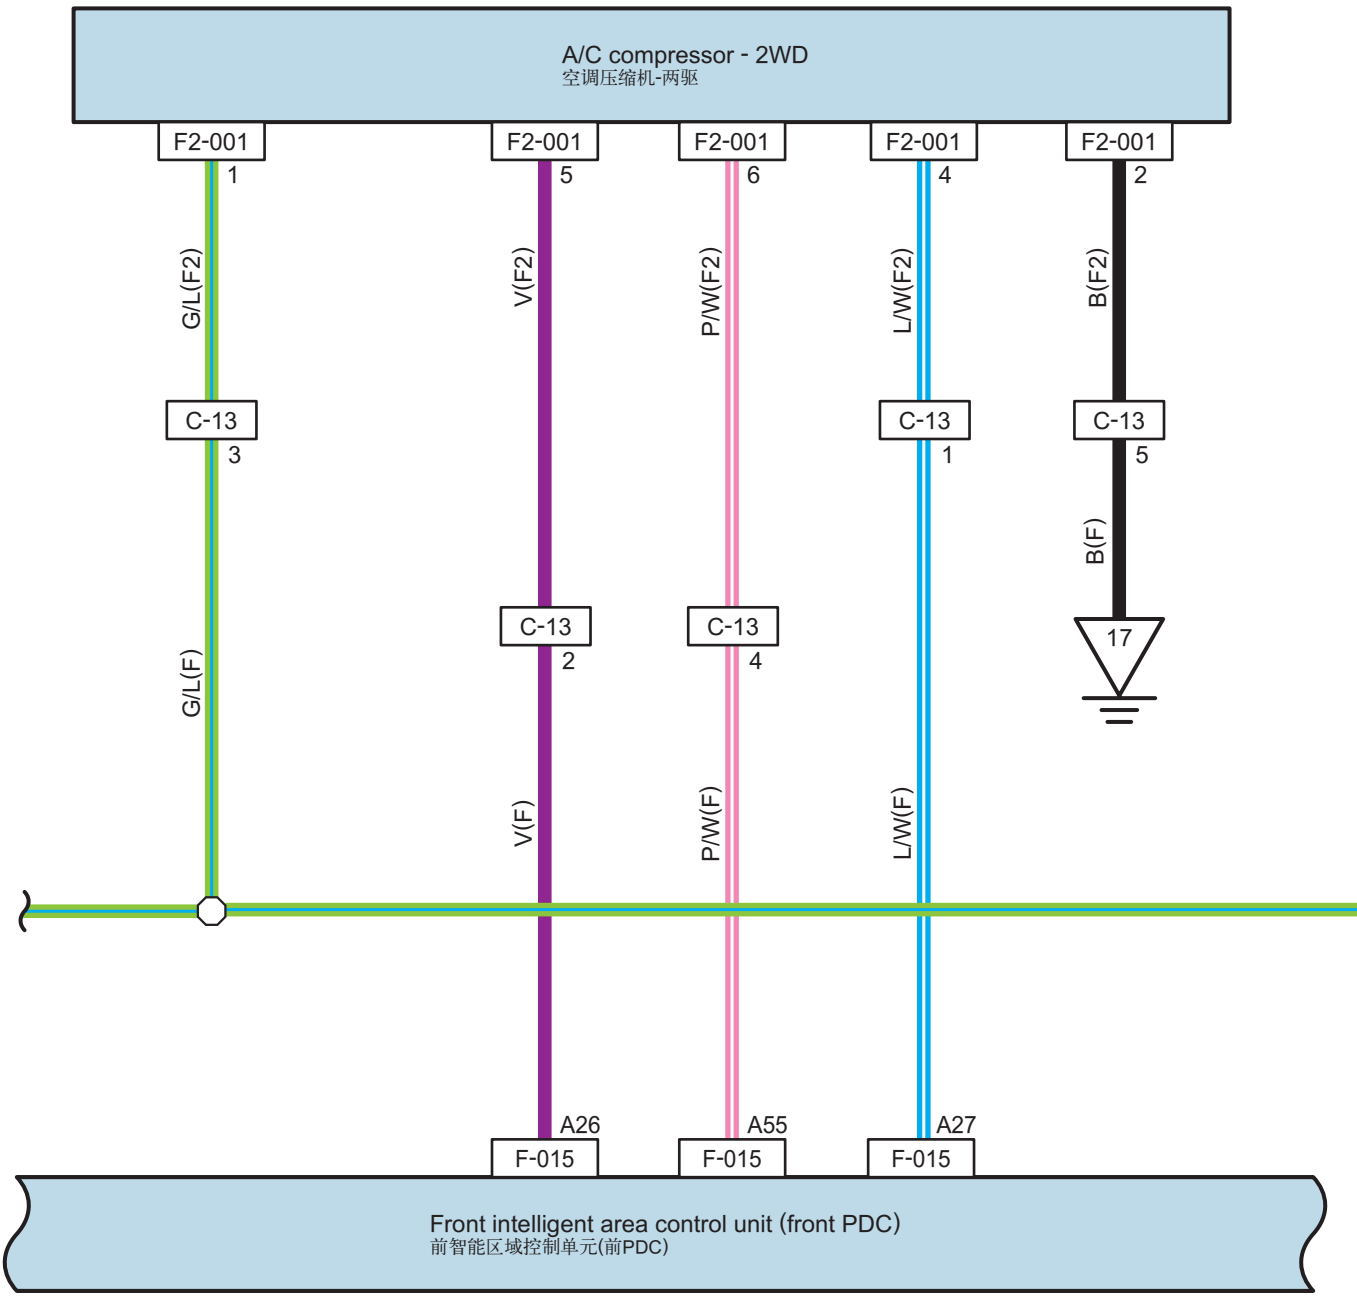
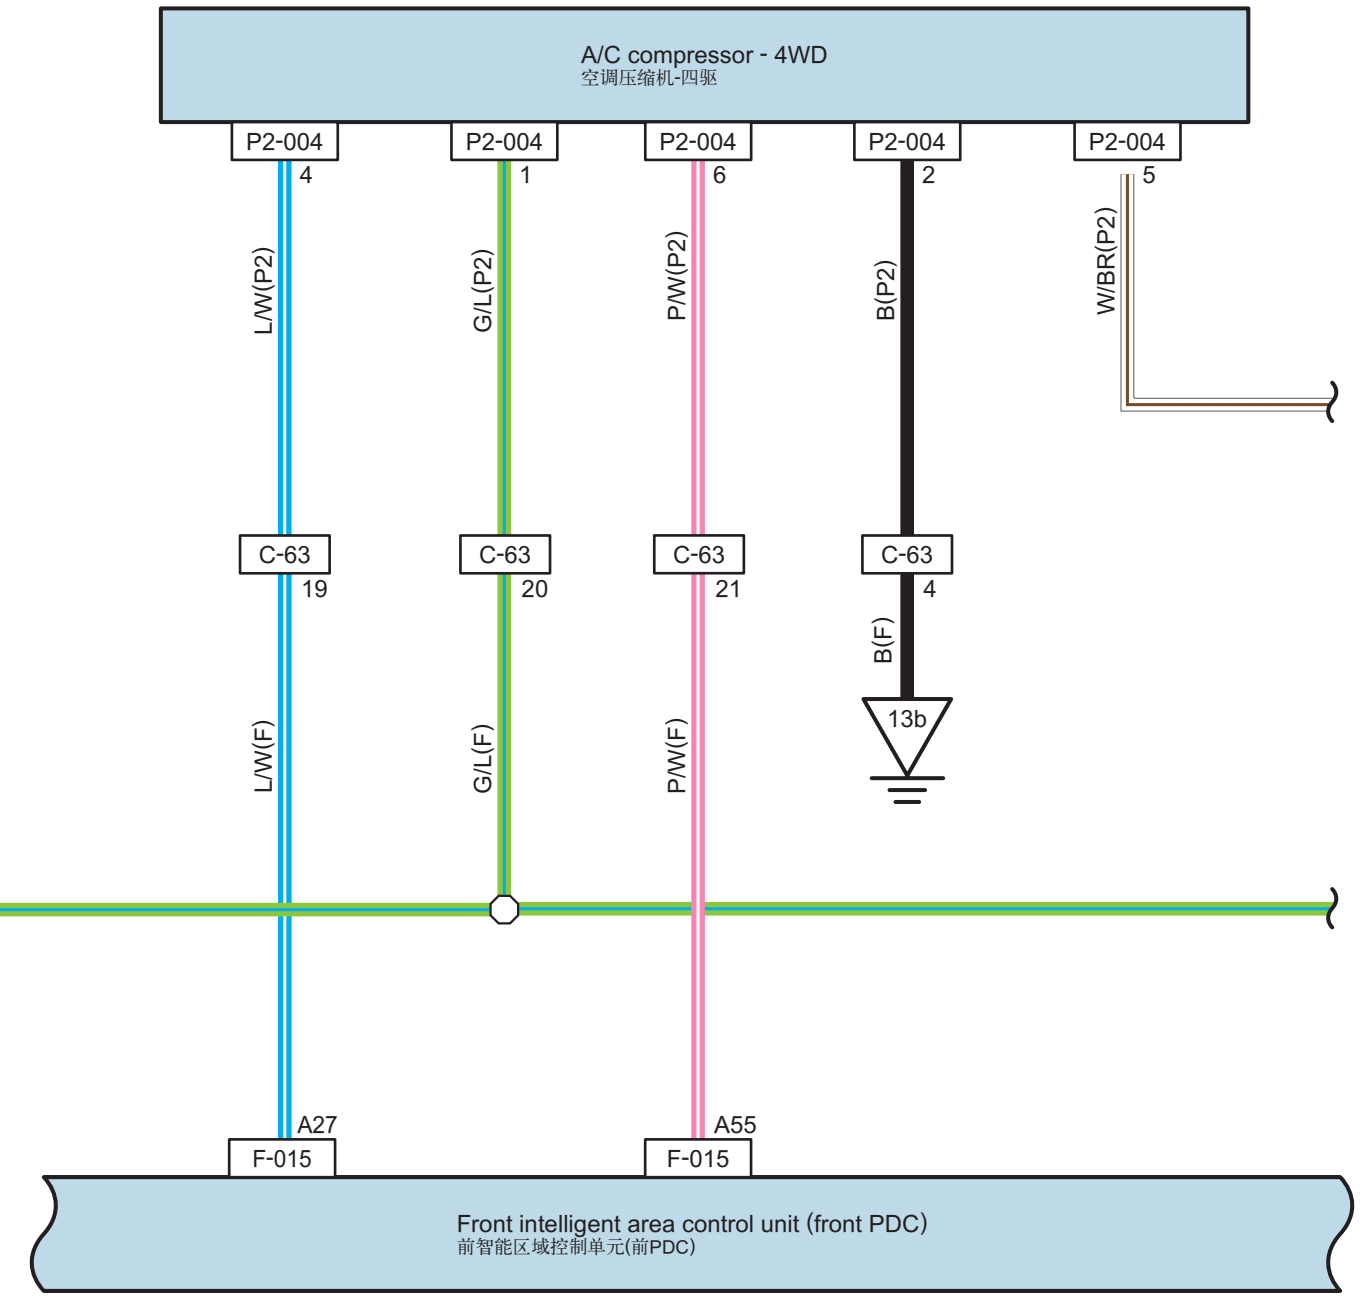
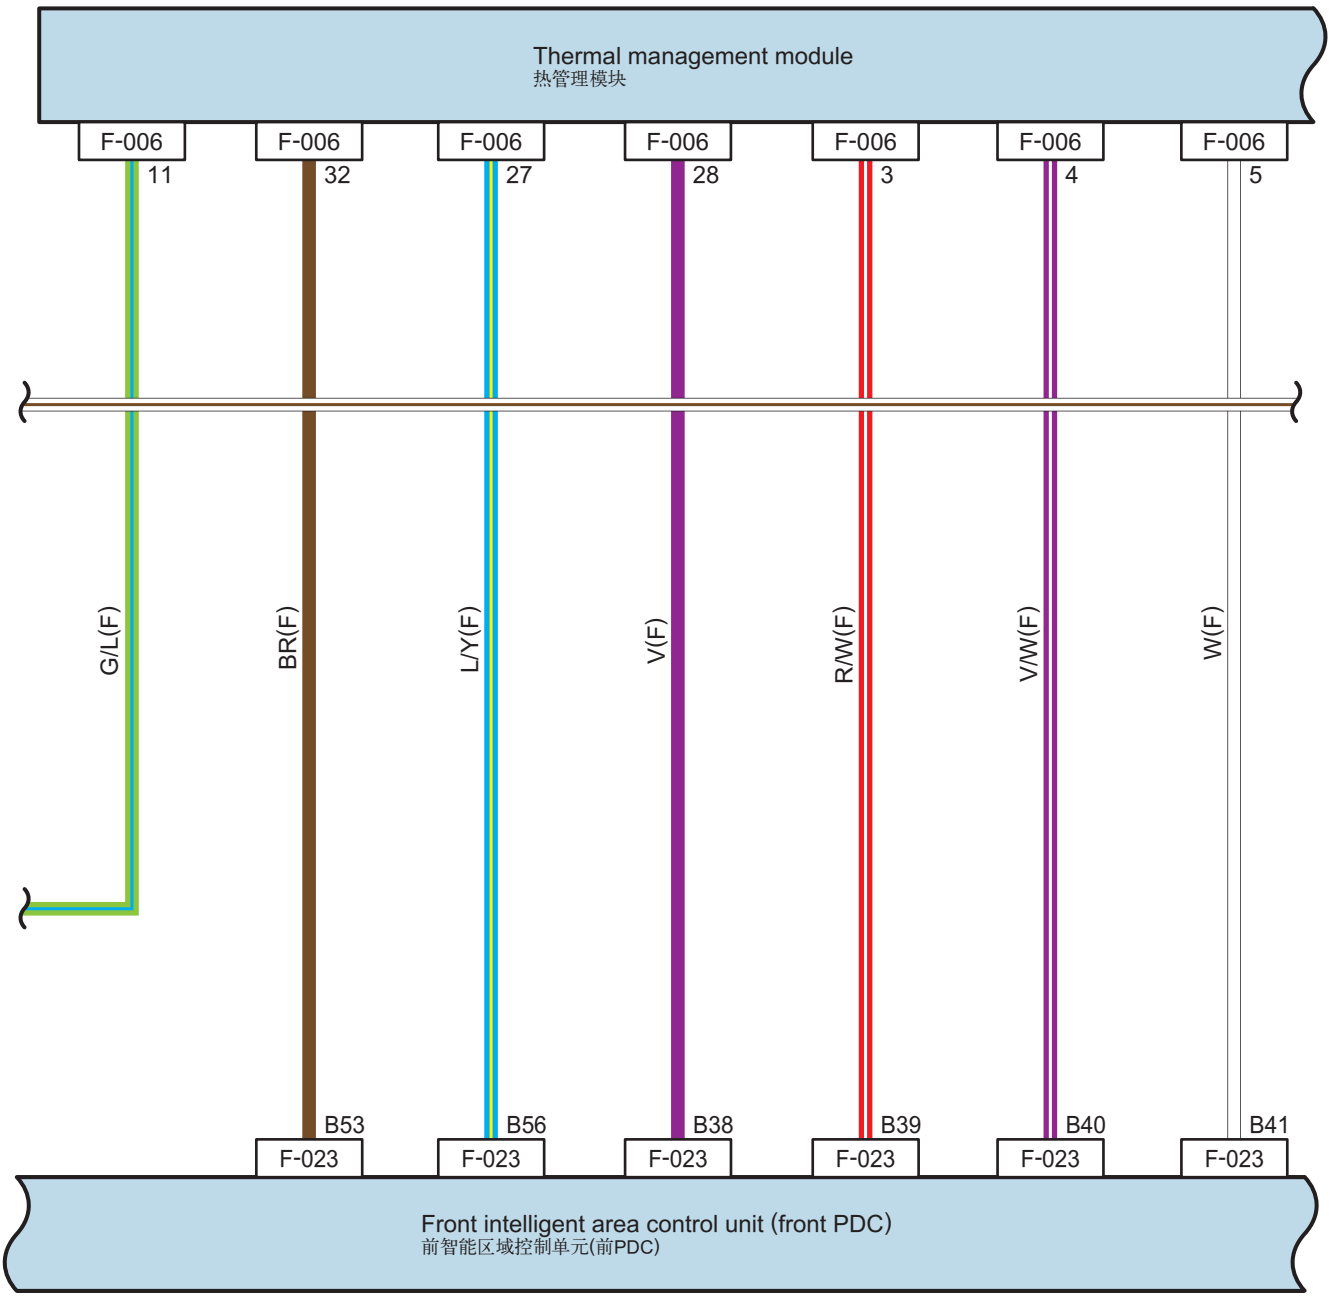
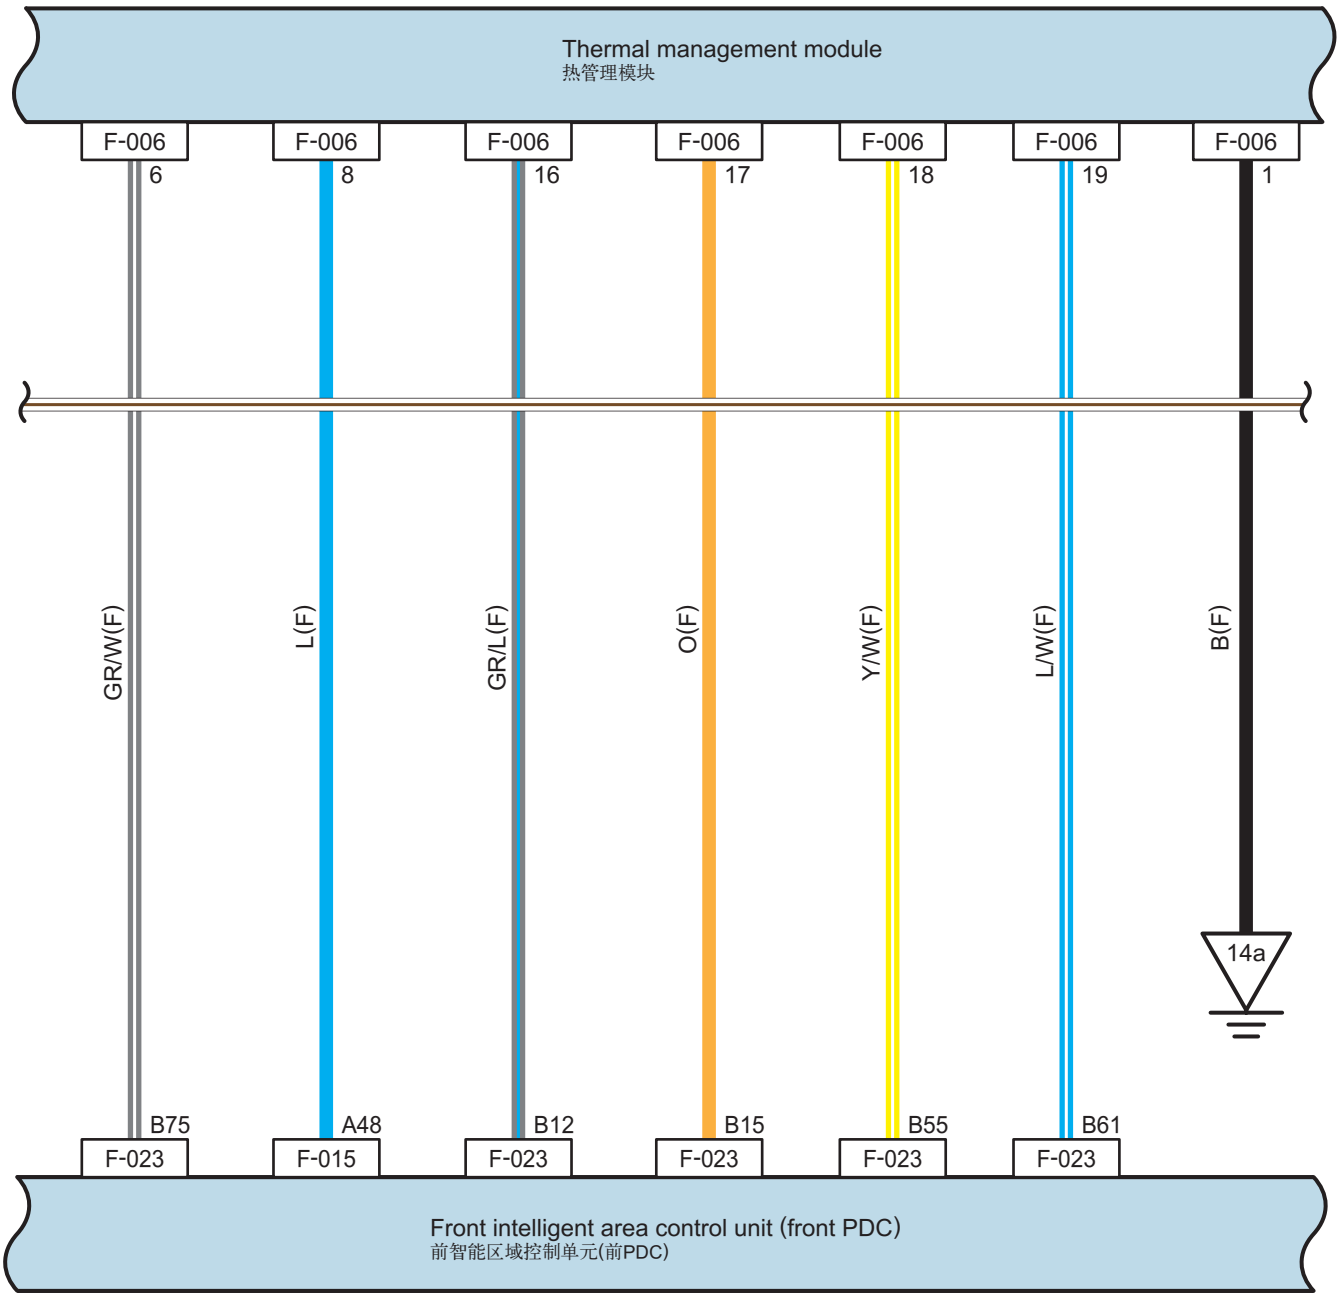

Rear battery distribution box
后蓄电池配电盒
AF01 200A
PN01
B+
Rear transfer distribution box
后中转配电盒
PN02
J1
R
R
Front transfer distribution box
前中转配电盒
RF07 60A
A1
G1
R(F)
G/L(F)
2
4
F-018
F-018
Cooling fan
冷却风扇
F-018
3
B(F)
11

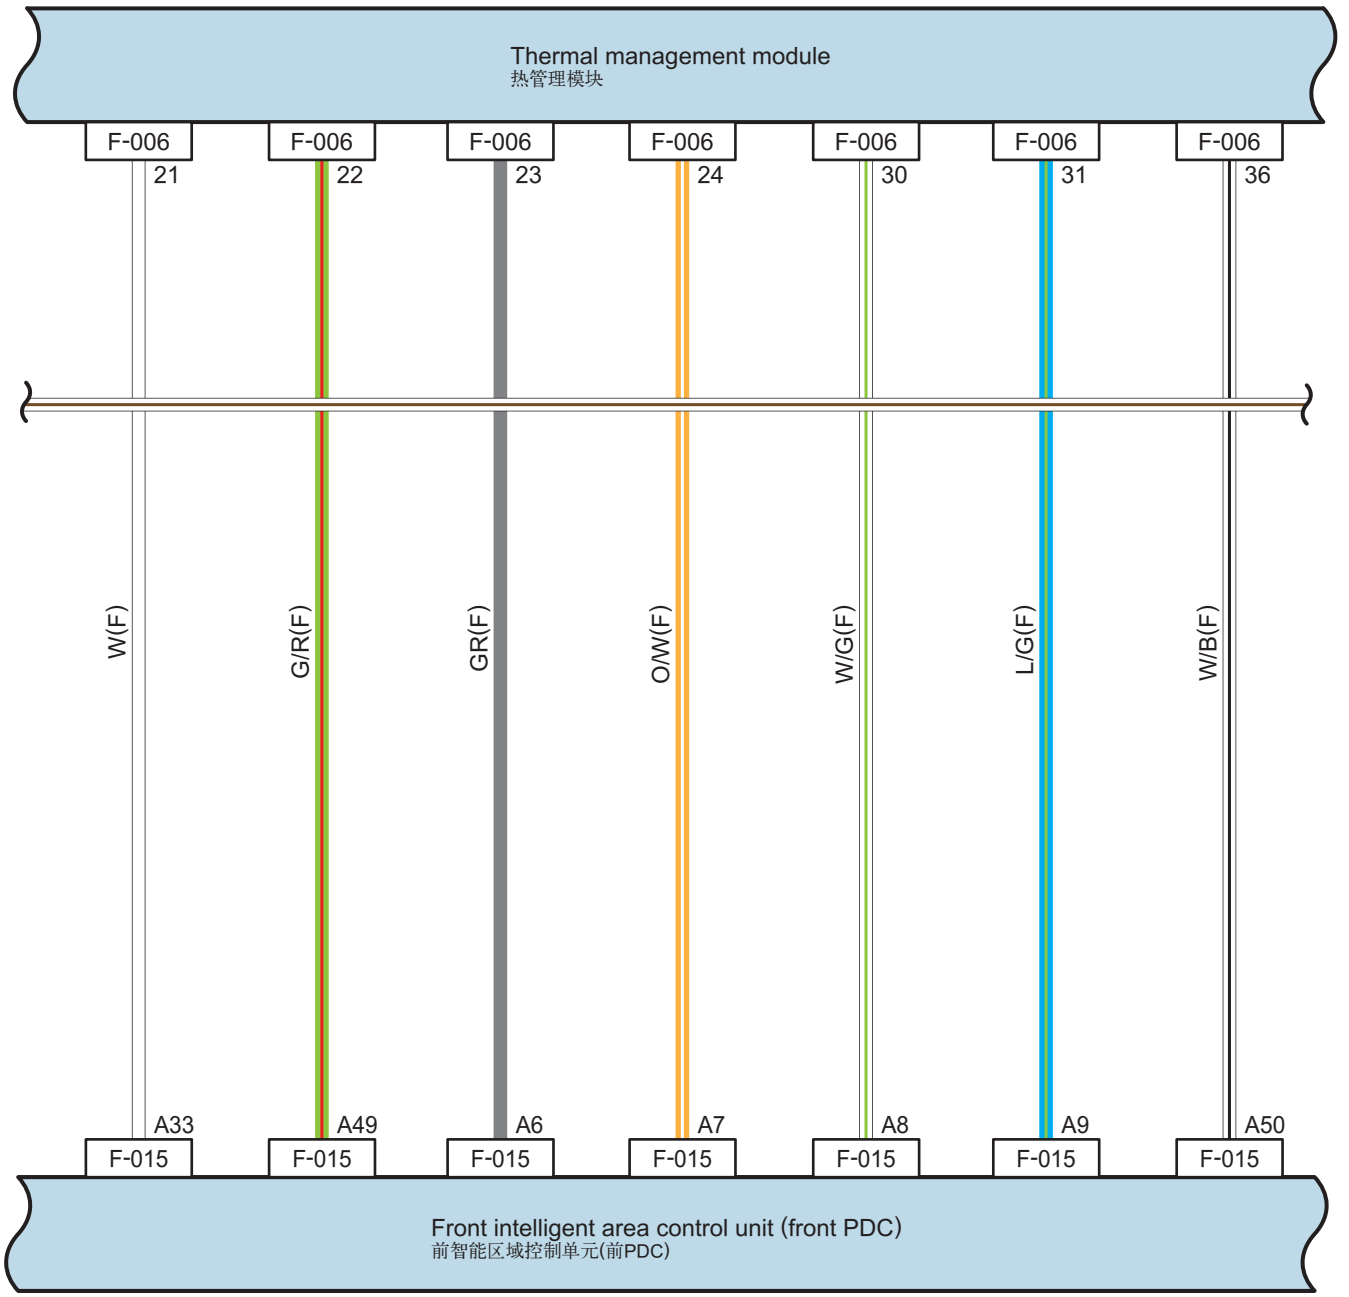

Front transfer distribution box
前中转配电盒
RF08 80A
H1
Active intake grille control motor
主动进气格栅控制电机
G-001
2
G-001
1
G-001
4
G/L(G)
B/L(G)
B(G)
C-16
3
B(F)
17
C-16
2
C-16
1
G/L(F)
B/L(F)
R
G/L(F)
D1
F3-001
B85
F-023
B33
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
F-023
B6
F-015
A1
F-015
A47
B(F)
B(F)
B(F)
B(F)
19a
19b

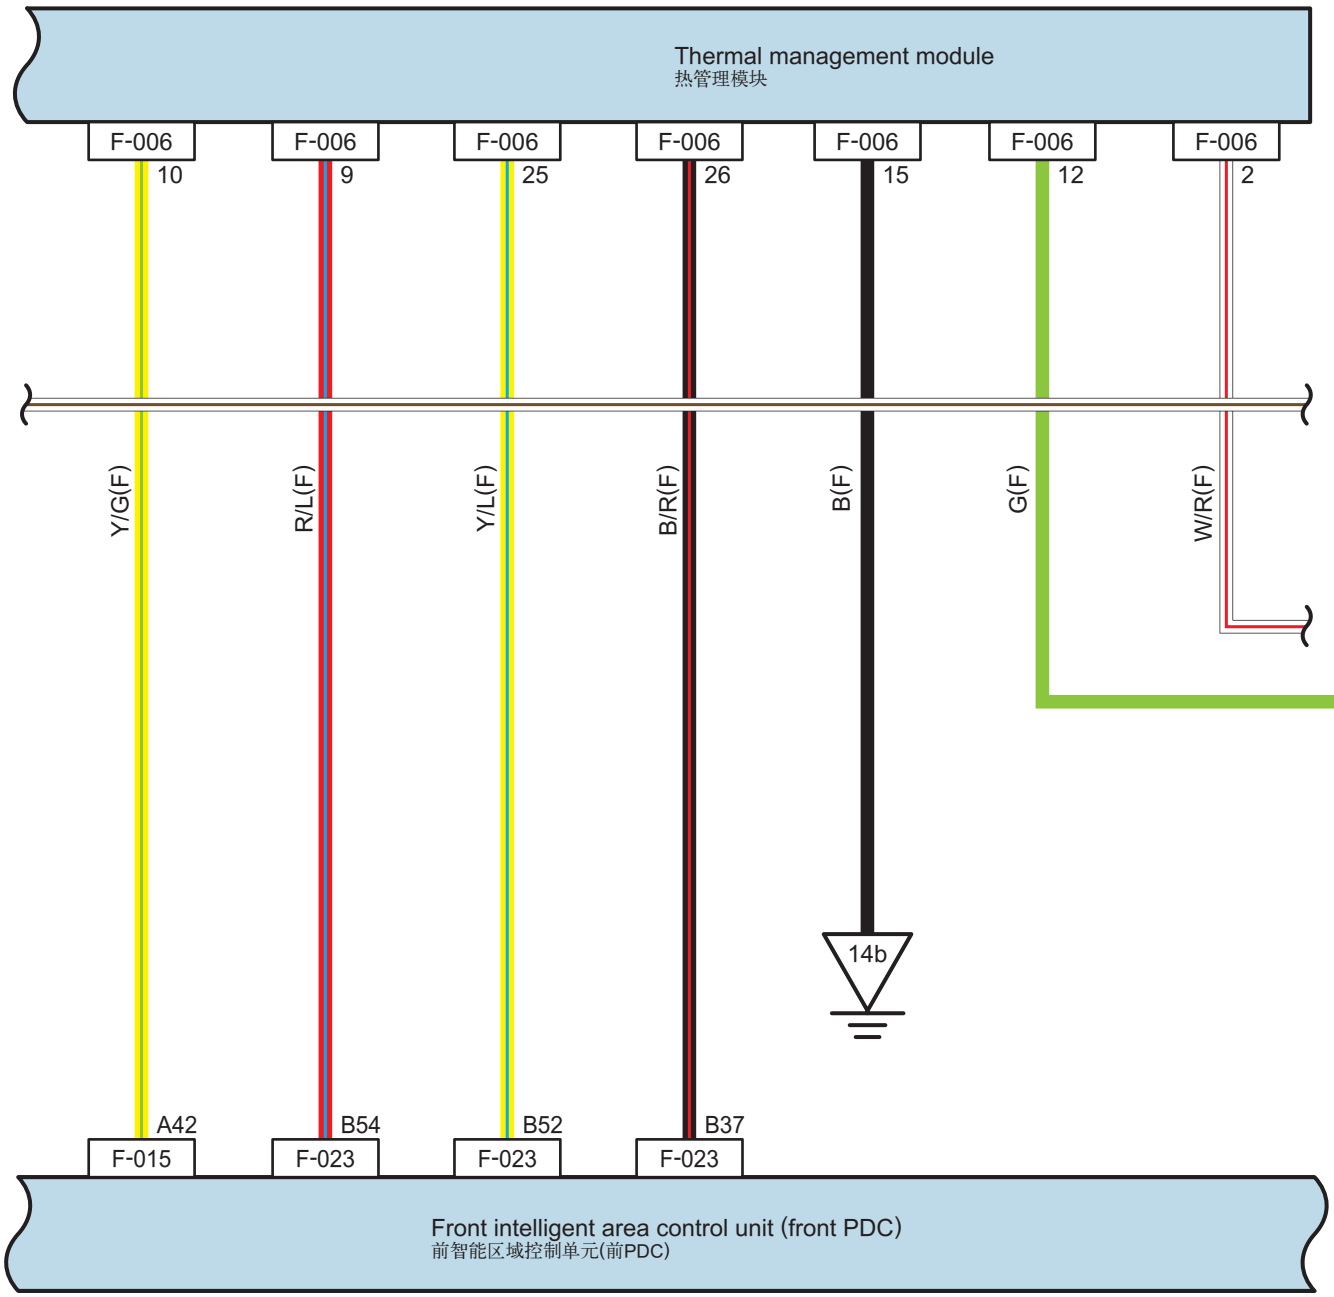

A/C compressor - 2WD
空调压缩机-两驱
F2-001
1
F2-001
5
F2-001
6
F2-001
4
F2-001
2
G/L(F2)
V(F2)
P/W(F2)
L/W(F2)
B(F2)
C-13
3
C-13
1
C-13
5
B(F)
17
C-13
2
C-13
4
G/L(F)
V(F)
P/W(F)
L/W(F)
A26
A55
A27
F-015
F-015
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

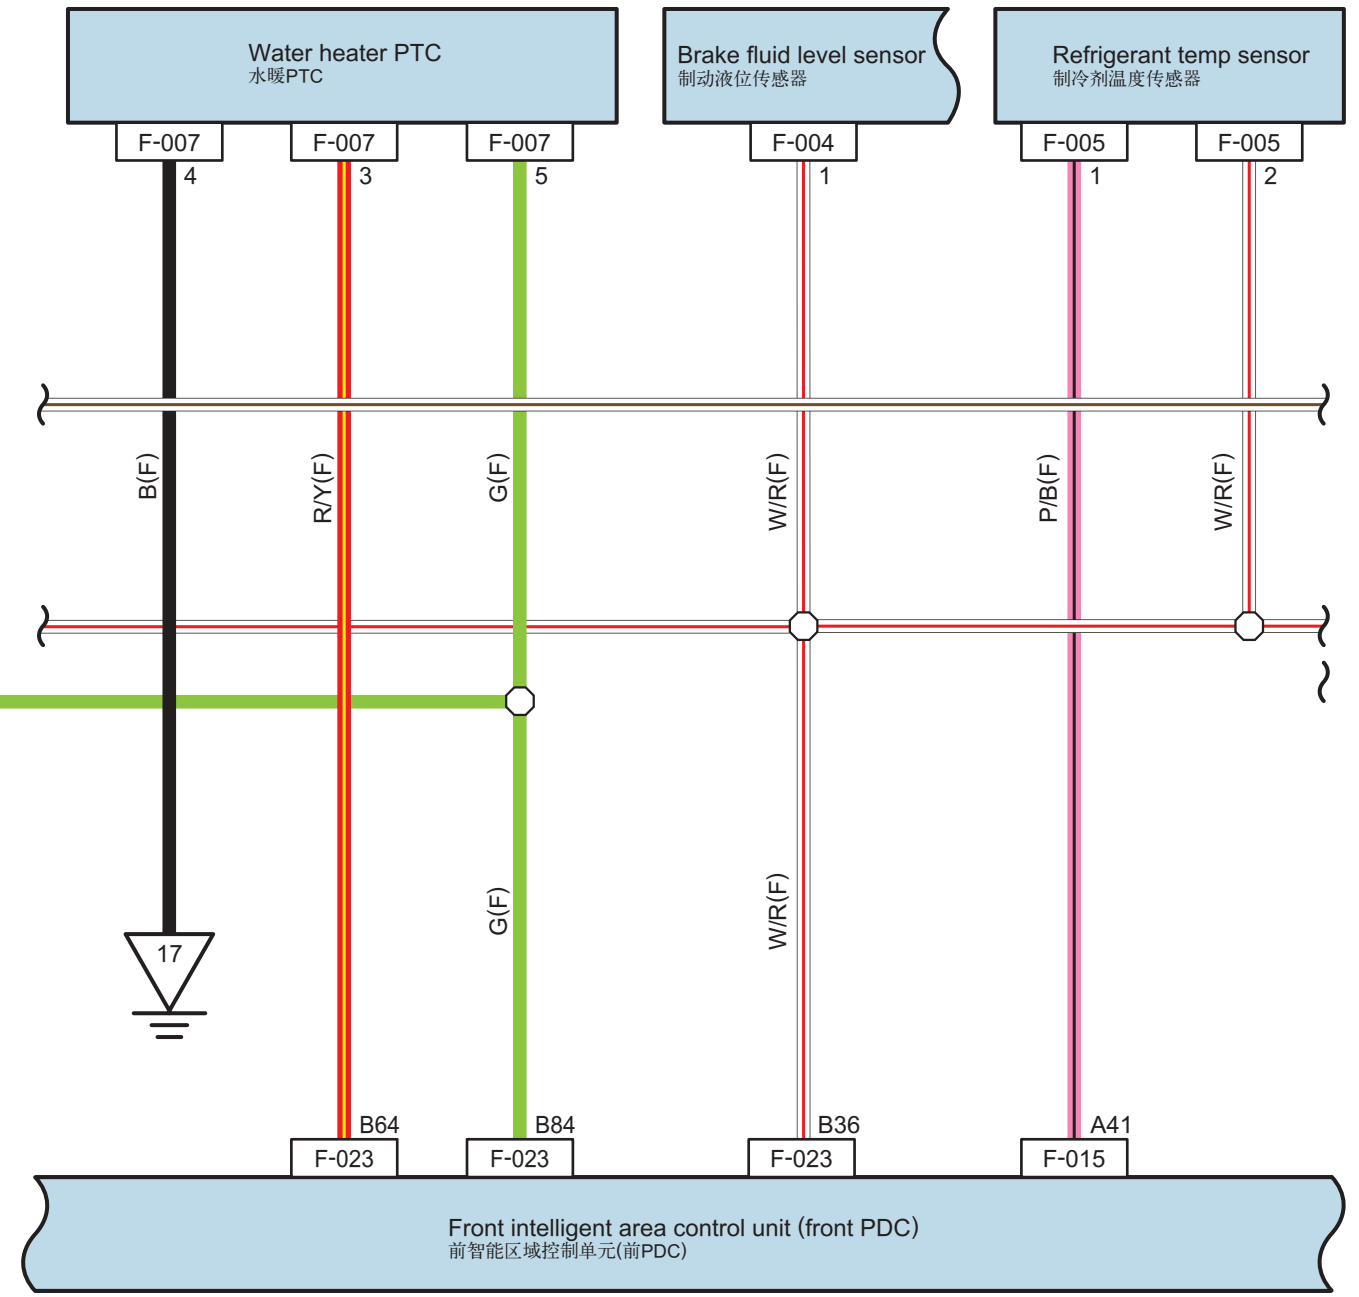

A/C compressor - 4WD
空调压缩机-四驱
P2-004
4
L/W(P2)
P2-004
1
G/L(P2)
P2-004
6
P/W(P2)
P2-004
2
B(P2)
P2-004
5
W/BR(P2)
C-63
19
L/W(F)
C-63
20
G/L(F)
C-63
21
P/W(F)
C-63
4
B(F)
13b
A27
F-015
A55
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

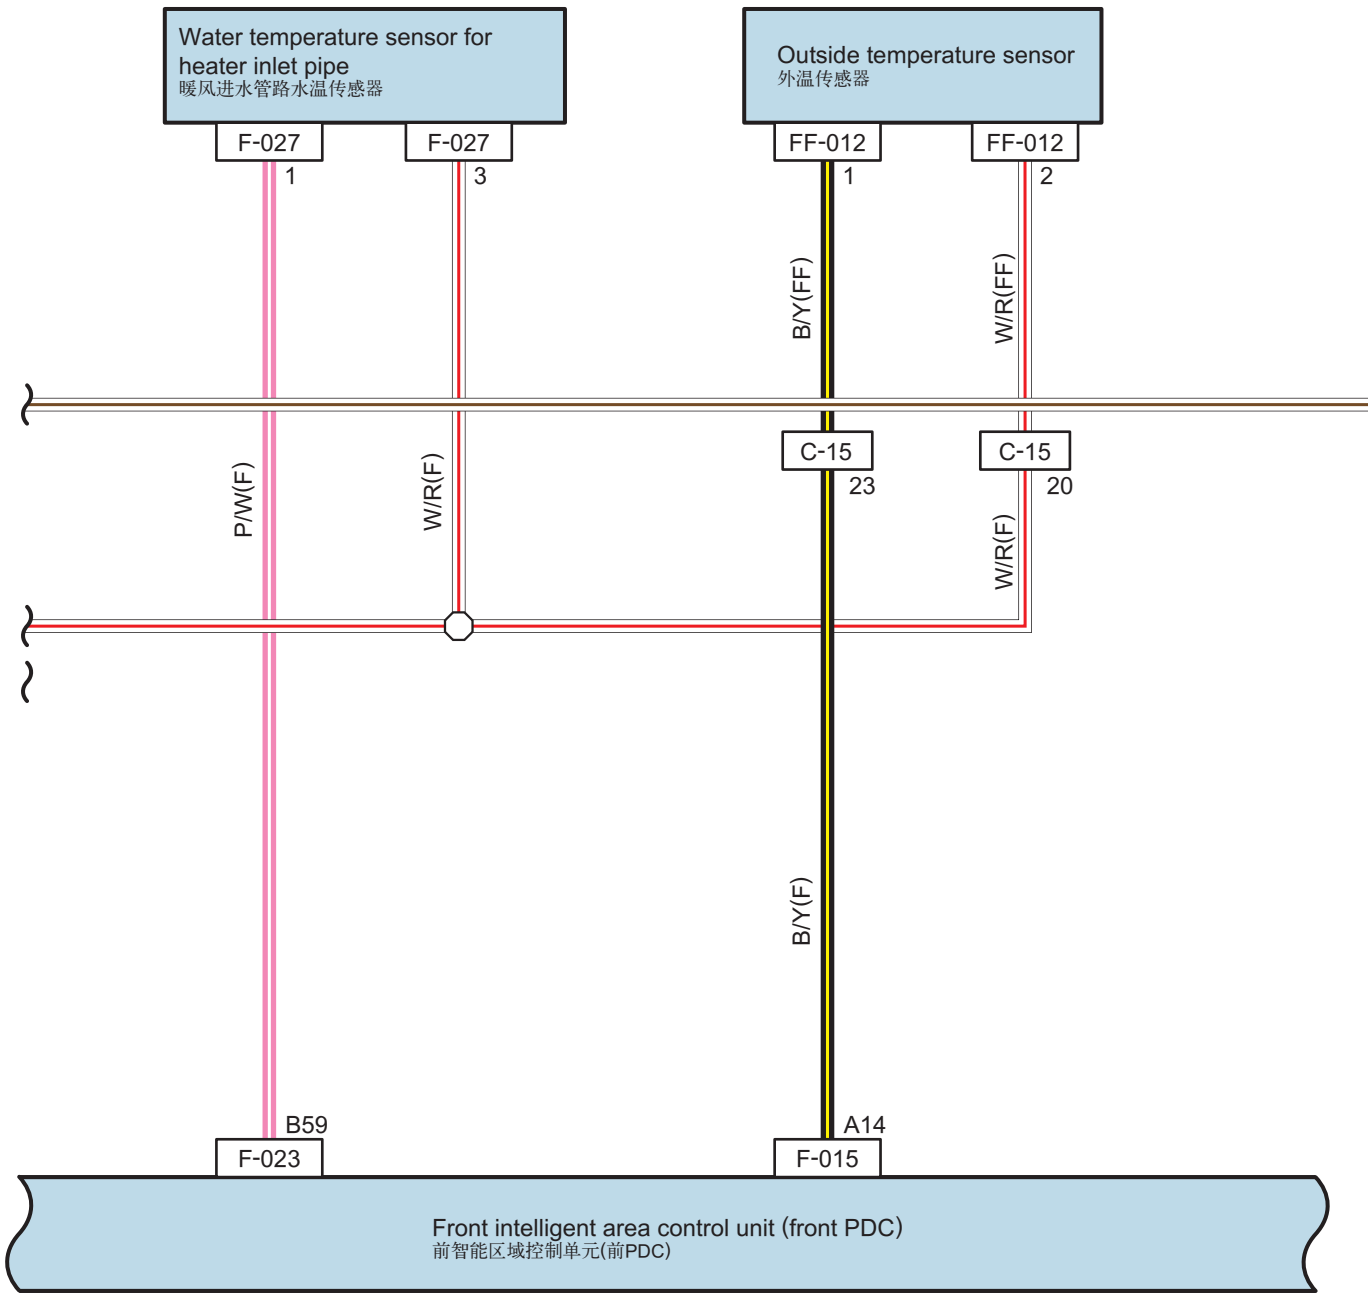

Thermal management module
热管理模块
F-006
11
F-006
32
F-006
27
F-006
28
F-006
3
F-006
4
F-006
5
G/L(F)
BR(F)
L/Y(F)
V(F)
R/W(F)
V/W(F)
W(F)
B53
F-023
B56
F-023
B38
F-023
B39
F-023
B40
F-023
B41
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

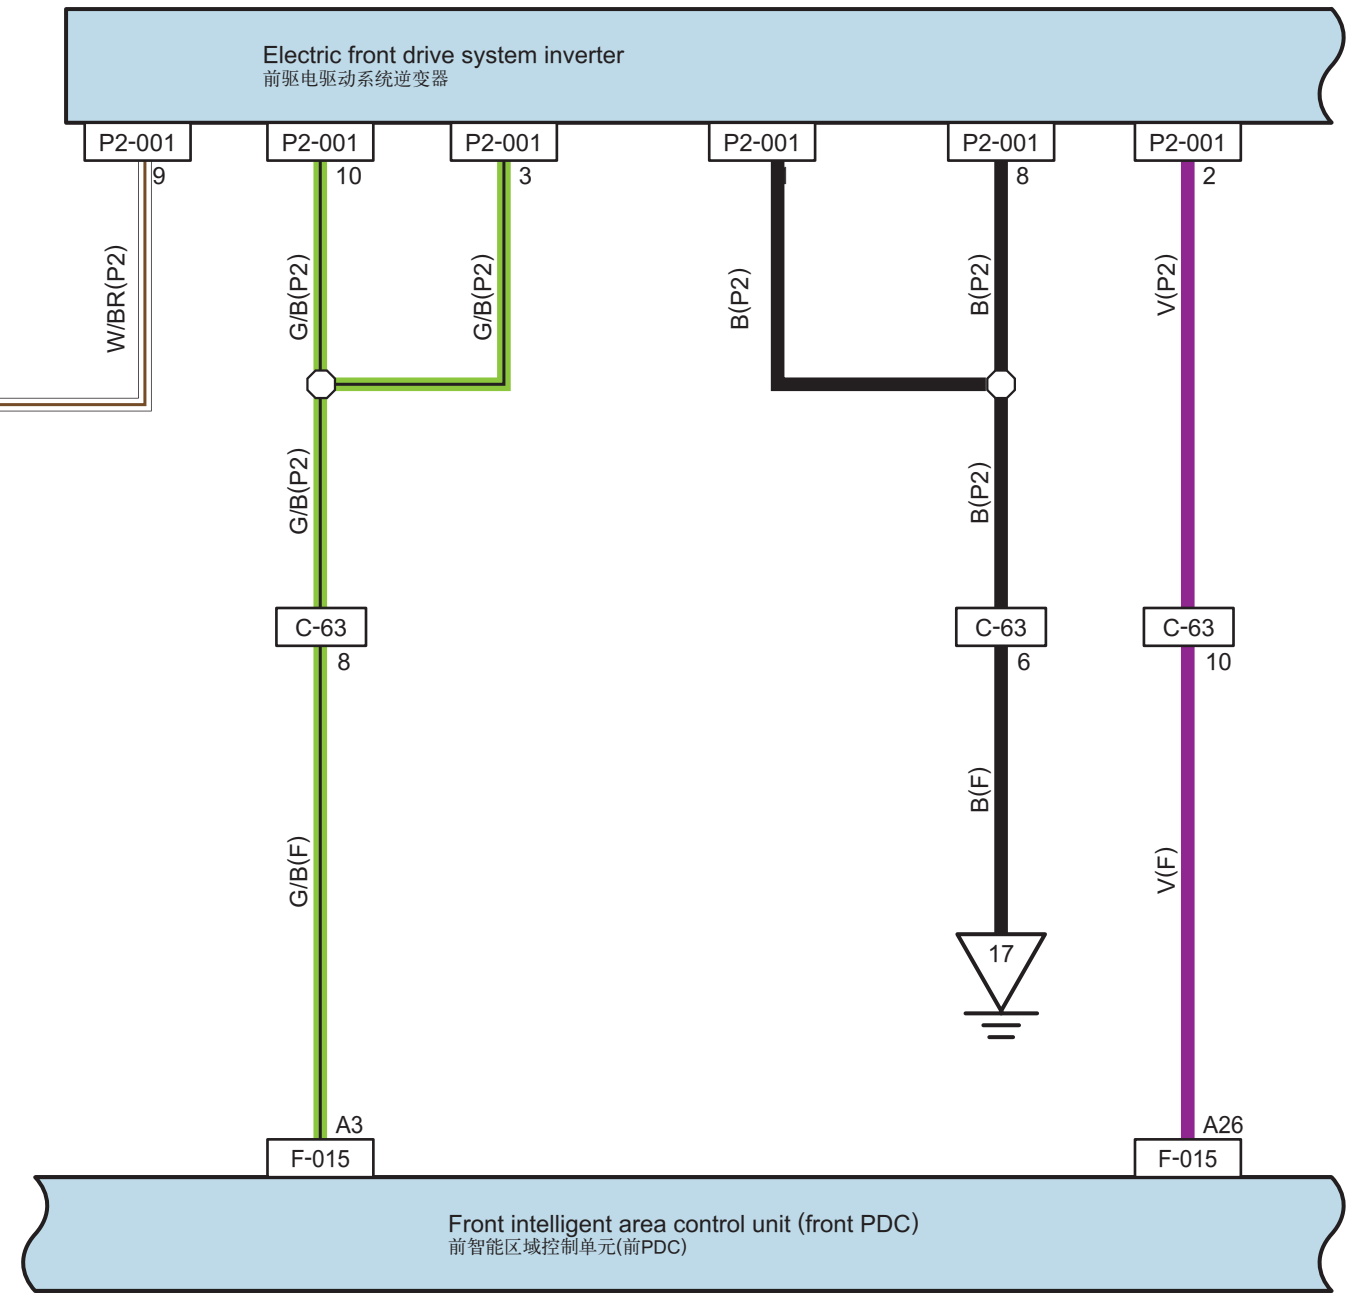

Thermal management module
热管理模块
F-006
6
F-006
8
F-006
16
F-006
17
F-006
18
F-006
19
F-006
1
GR/W(F)
L(F)
GR/L(F)
O(F)
Y/W(F)
L/W(F)
B(F)
14a
B75
F-023
A48
F-015
B12
F-023
B15
F-023
B55
F-023
B61
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

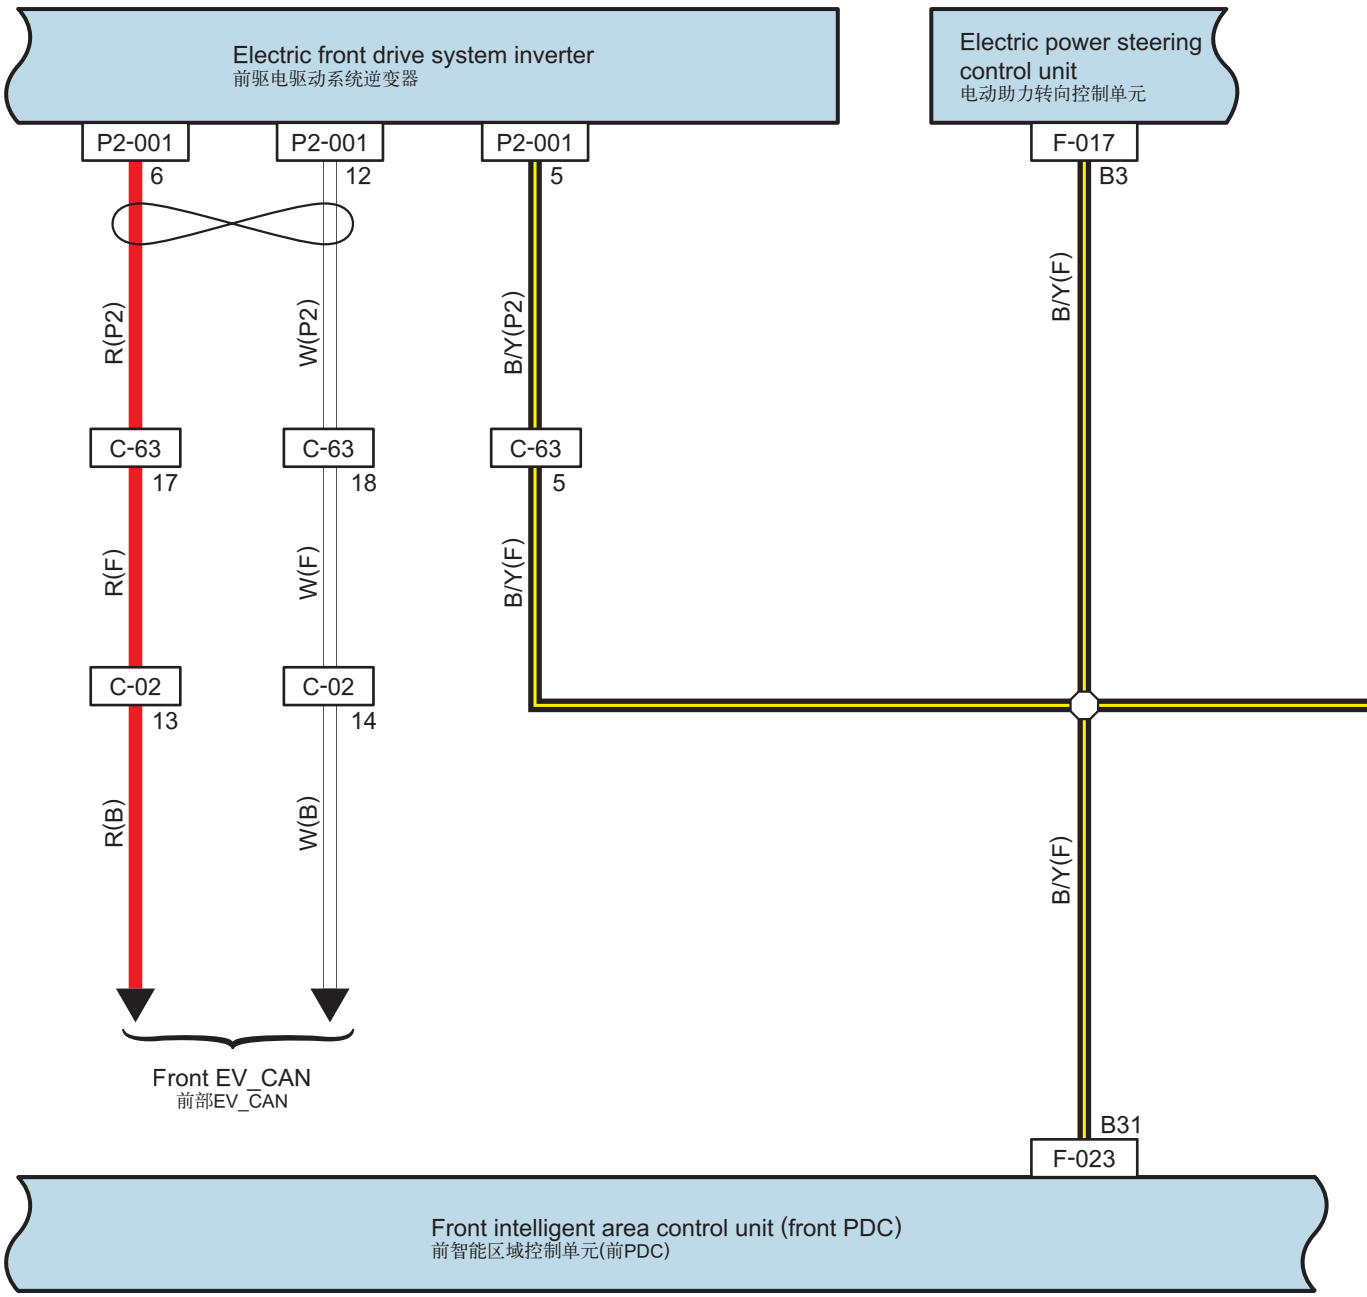

Thermal management module
热管理模块
F-006
21
F-006
22
F-006
23
F-006
24
F-006
30
F-006
31
F-006
36
W(F)
G/R(F)
GR(F)
O/W(F)
W/G(F)
L/G(F)
W/B(F)
A33
F-015
A49
F-015
A6
F-015
A7
F-015
A8
F-015
A9
F-015
A50
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

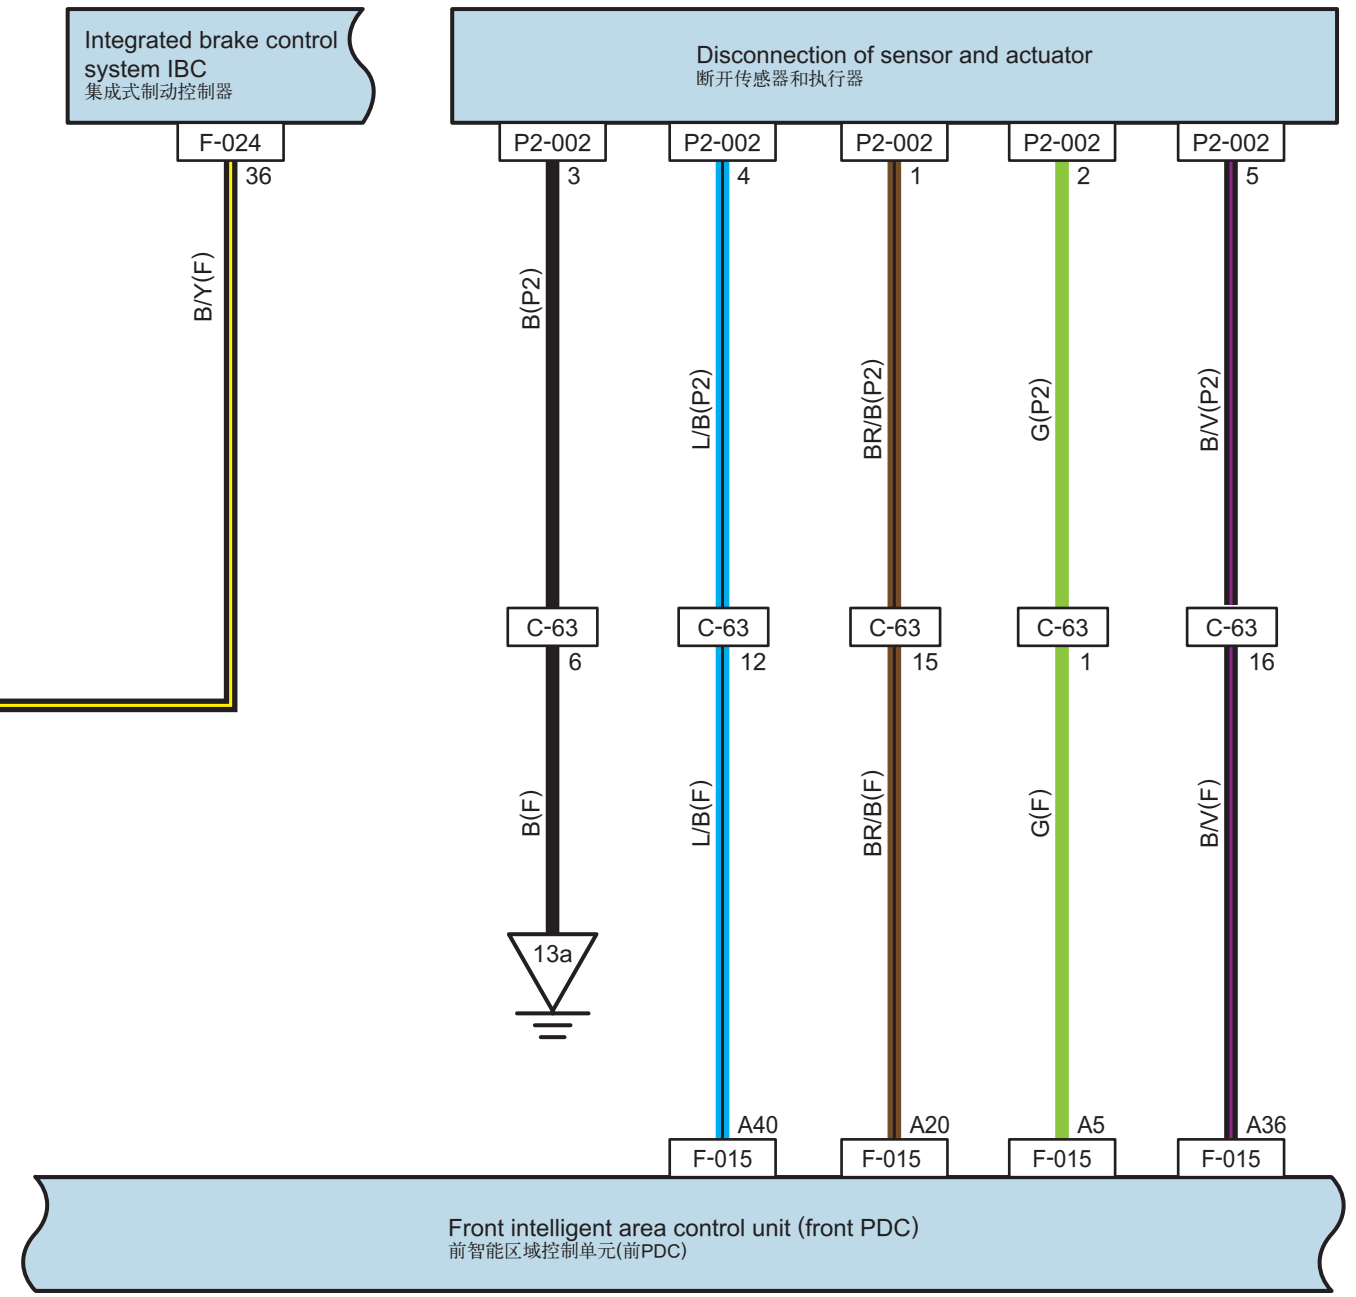

Thermal management module
热管理模块
F-006
10
F-006
9
F-006
25
F-006
26
F-006
15
F-006
12
F-006
2
Y/G(F)
R/L(F)
Y/L(F)
B/R(F)
B(F)
G(F)
W/R(F)
14b
A42
F-015
B54
F-023
B52
F-023
B37
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

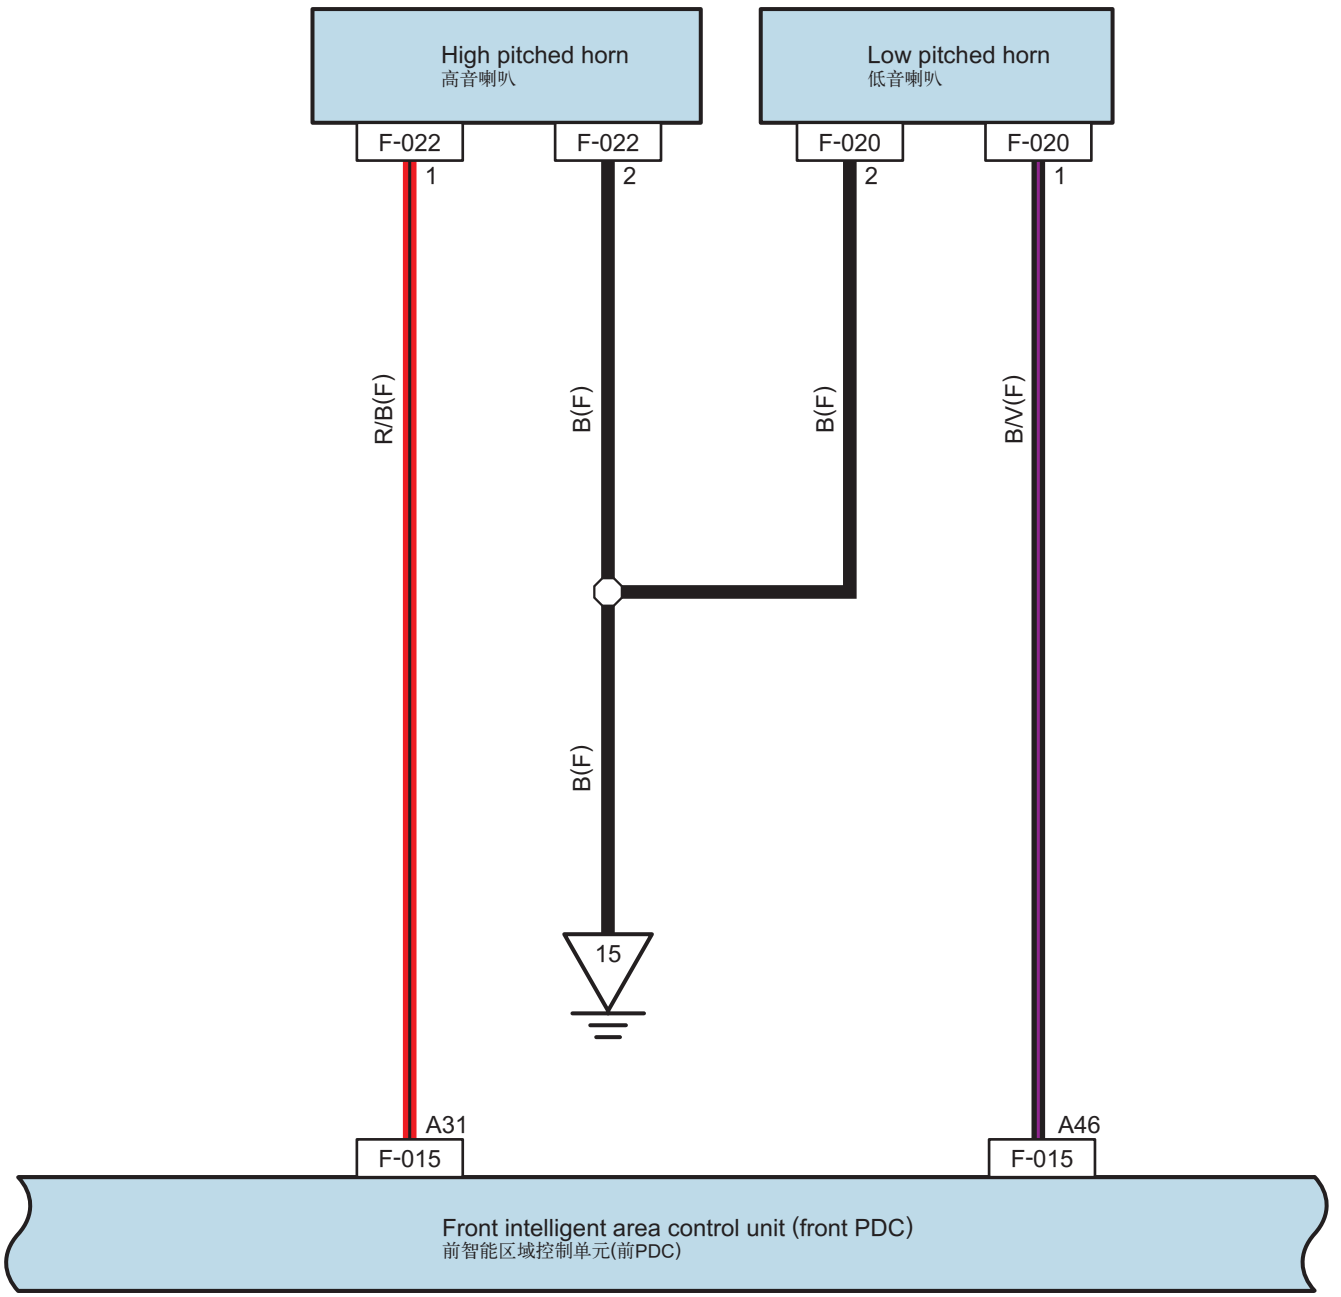

Water heater PTC
水暖PTC
Brake fluid level sensor
制动液位传感器
Refrigerant temp sensor
制冷剂温度传感器
F-007
4
F-007
3
F-007
5
F-004
1
F-005
1
F-005
2
B(F)
R/Y(F)
G(F)
W/R(F)
P/B(F)
W/R(F)
17
G(F)
W/R(F)
B64
F-023
B84
F-023
B36
F-023
A41
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

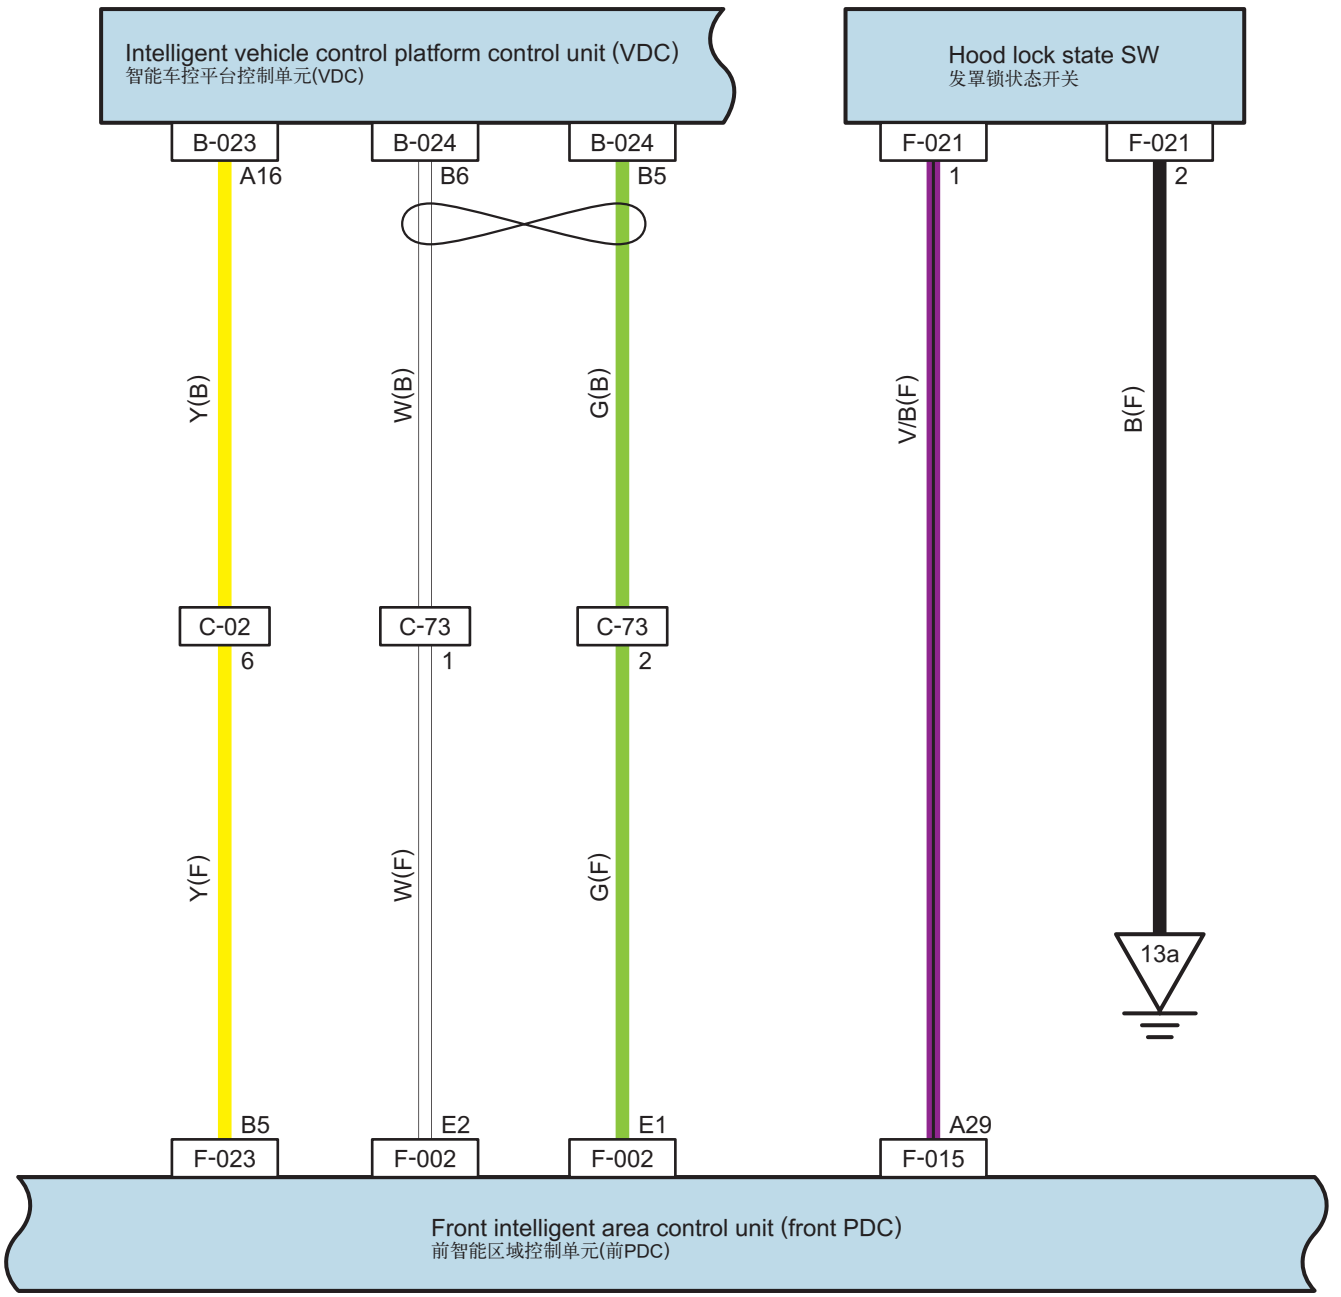

Water temperature sensor for heater inlet pipe
暖风进水管路水温传感器
Outside temperature sensor
外温传感器
F-027
1
F-027
3
FF-012
1
FF-012
2
B/Y(FF)
W/R(FF)
P/W(F)
W/R(F)
C-15
23
C-15
20
W/R(F)
B/Y(F)
B59
F-023
A14
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

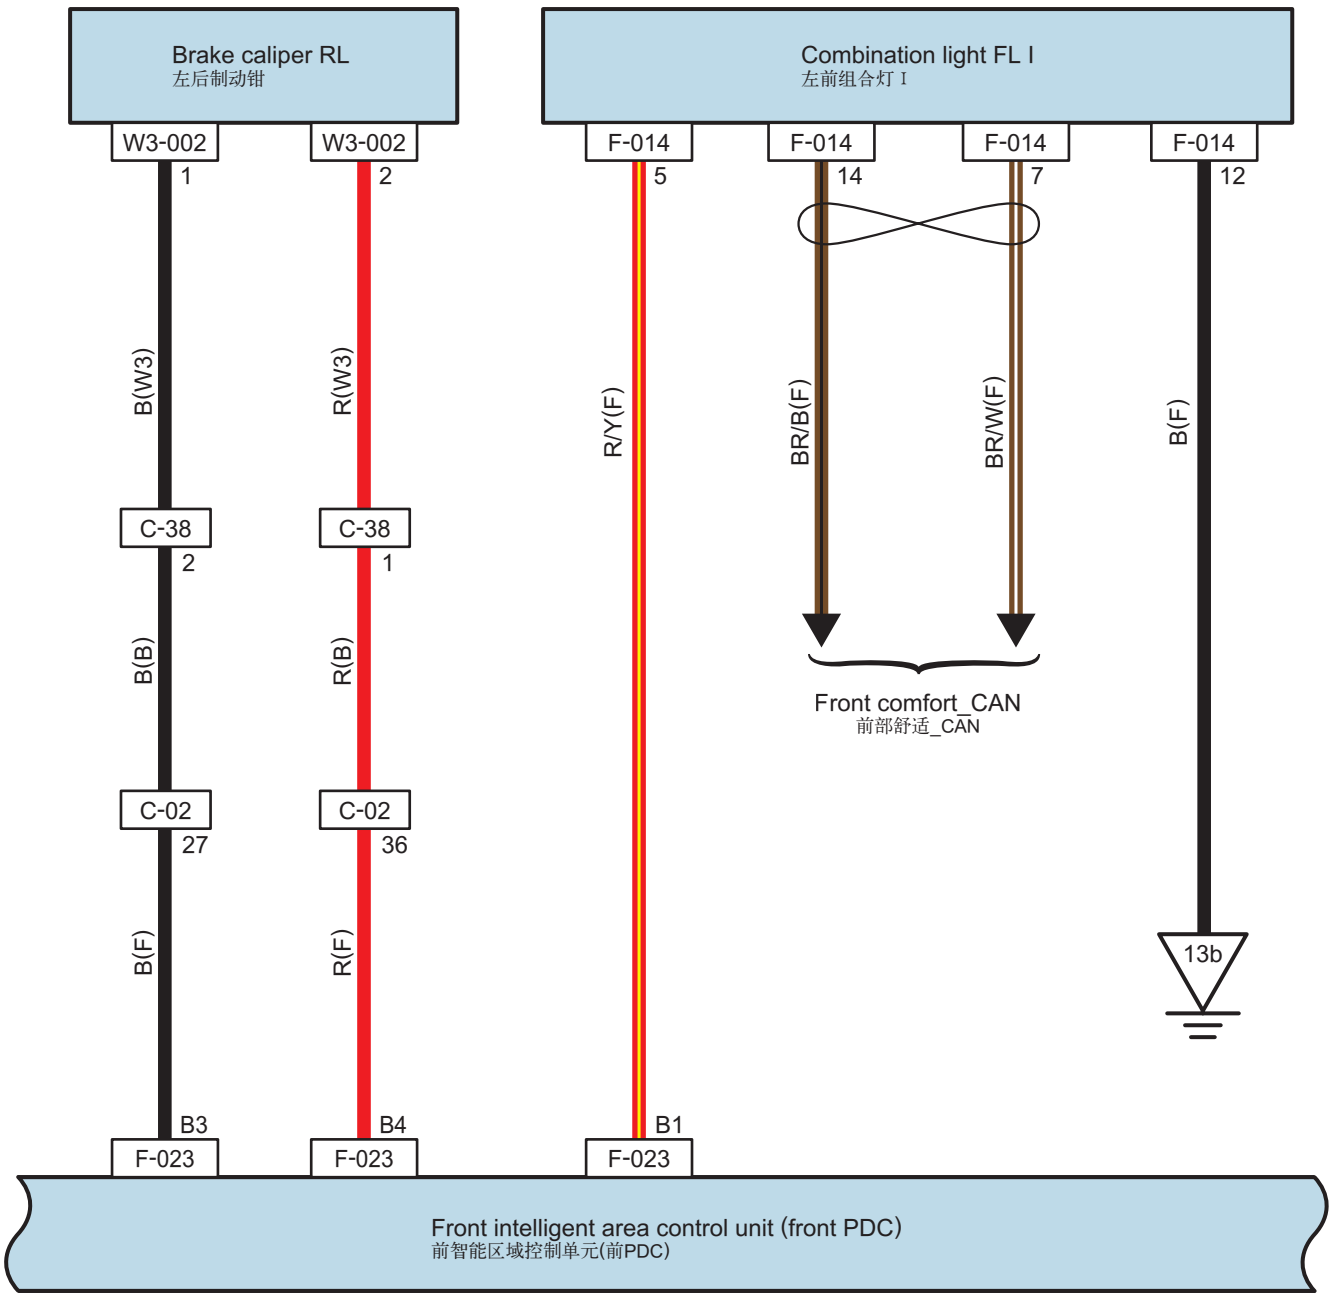

Electric front drive system inverter
前驱电驱动系统逆变器
P2-001
9
W/BR(P2)
P2-001
10
G/B(P2)
G/B(P2)
C-63
8
G/B(F)
A3
F-015
P2-001
3
G/B(P2)
P2-001
B(P2)
P2-001
8
B(P2)
B(P2)
C-63
6
B(F)
17
P2-001
2
V(P2)
C-63
10
V(F)
A26
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

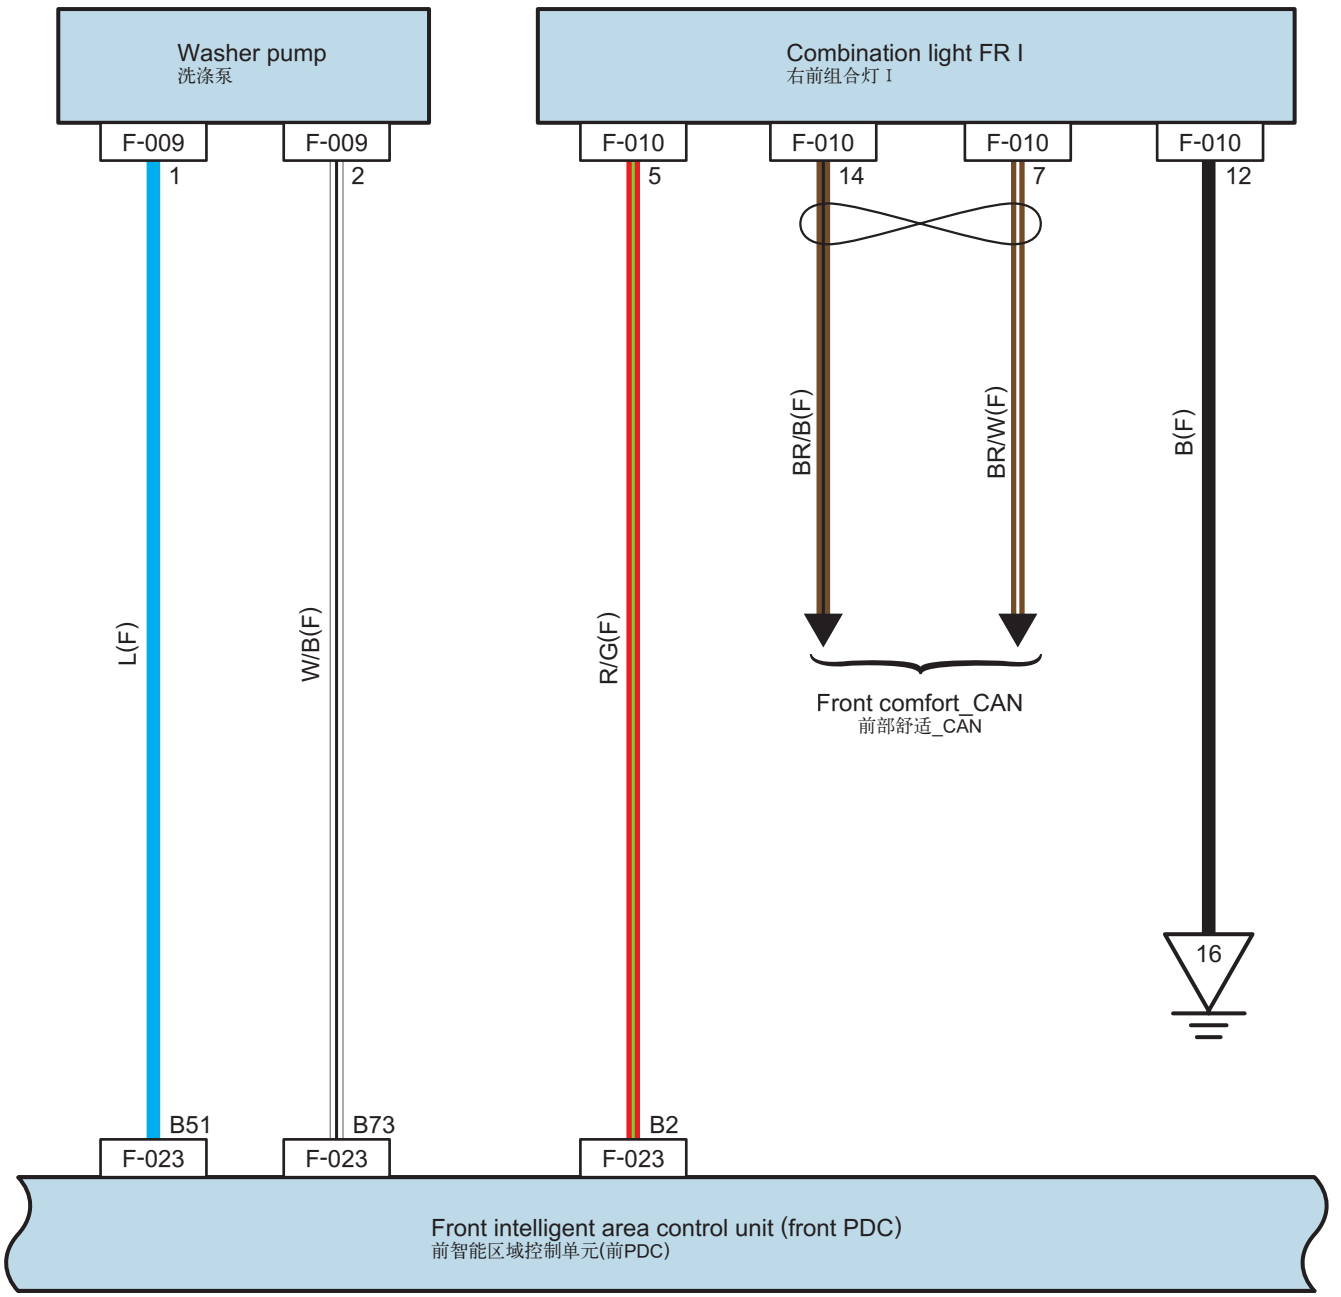

Electric front drive system inverter
前驱电驱动系统逆变器
Electric power steering control unit
电动助力转向控制单元
P2-001
6
P2-001
12
P2-001
5
F-017
B3
R(P2)
W(P2)
B/Y(P2)
B/Y(F)
C-63
17
C-63
18
C-63
5
R(F)
W(F)
B/Y(F)
C-02
13
C-02
14
R(B)
W(B)
B/Y(F)
Front EV_CAN
前部EV_CAN
B31
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

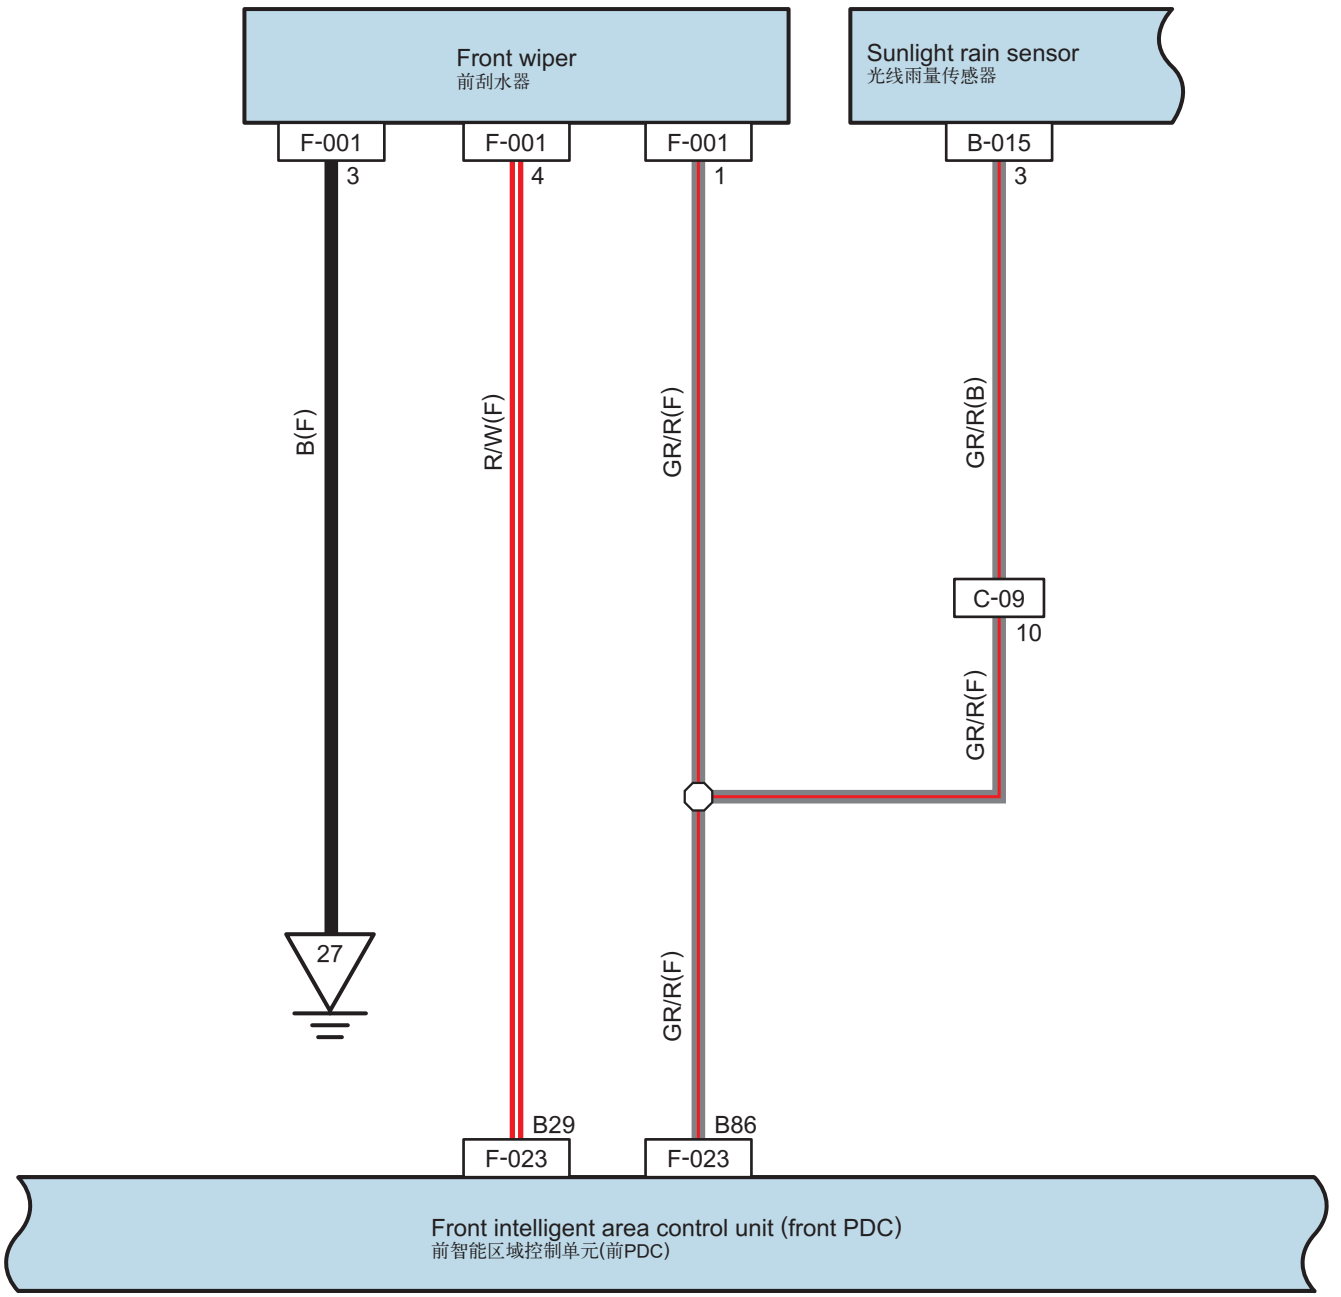

Integrated brake control system IBC
集成式制动控制器
F-024
36
B/Y(F)
Disconnection of sensor and actuator
断开传感器和执行器
P2-002
3
B(P2)
P2-002
4
L/B(P2)
P2-002
1
BR/B(P2)
P2-002
2
G(P2)
P2-002
5
B/V(P2)
C-63
6
B(F)
C-63
12
L/B(F)
C-63
15
BR/B(F)
C-63
1
G(F)
C-63
16
B/V(F)
13a
A40
F-015
A20
F-015
A5
F-015
A36
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

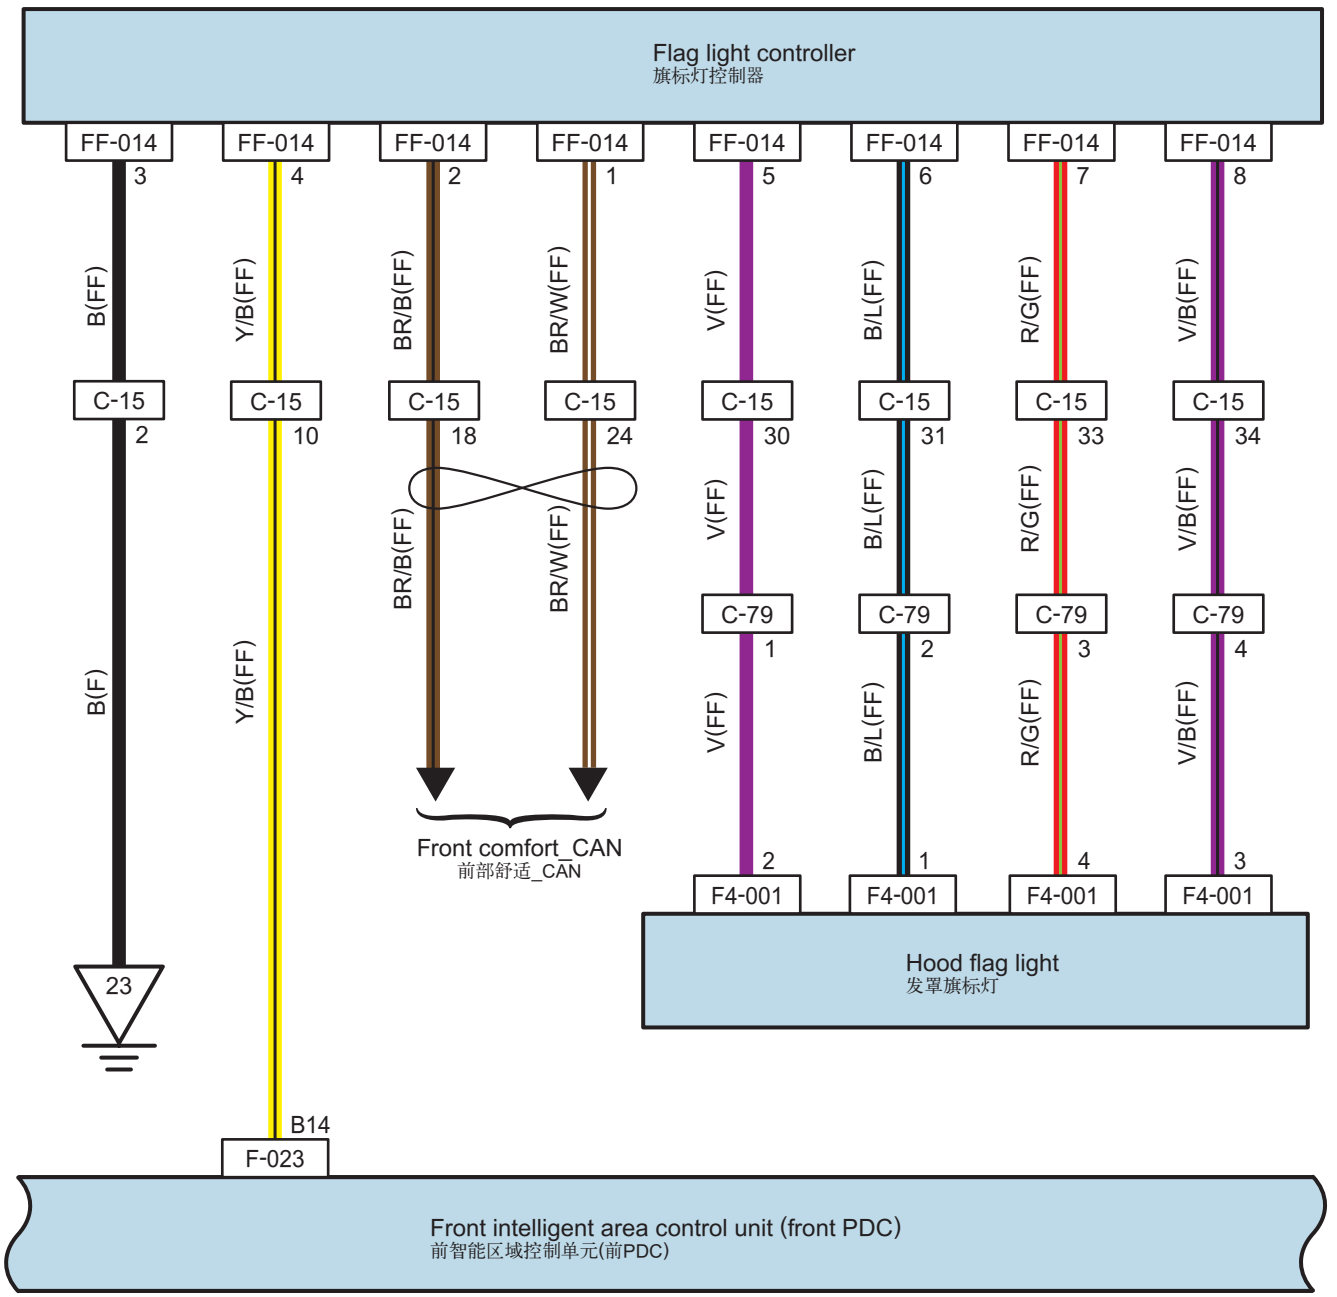

High pitched horn
高音喇叭
Low pitched horn
低音喇叭
F-022
1
F-022
2
F-020
2
F-020
1
R/B(F)
B(F)
B(F)
B(F)
B/V(F)
15
A31
F-015
A46
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

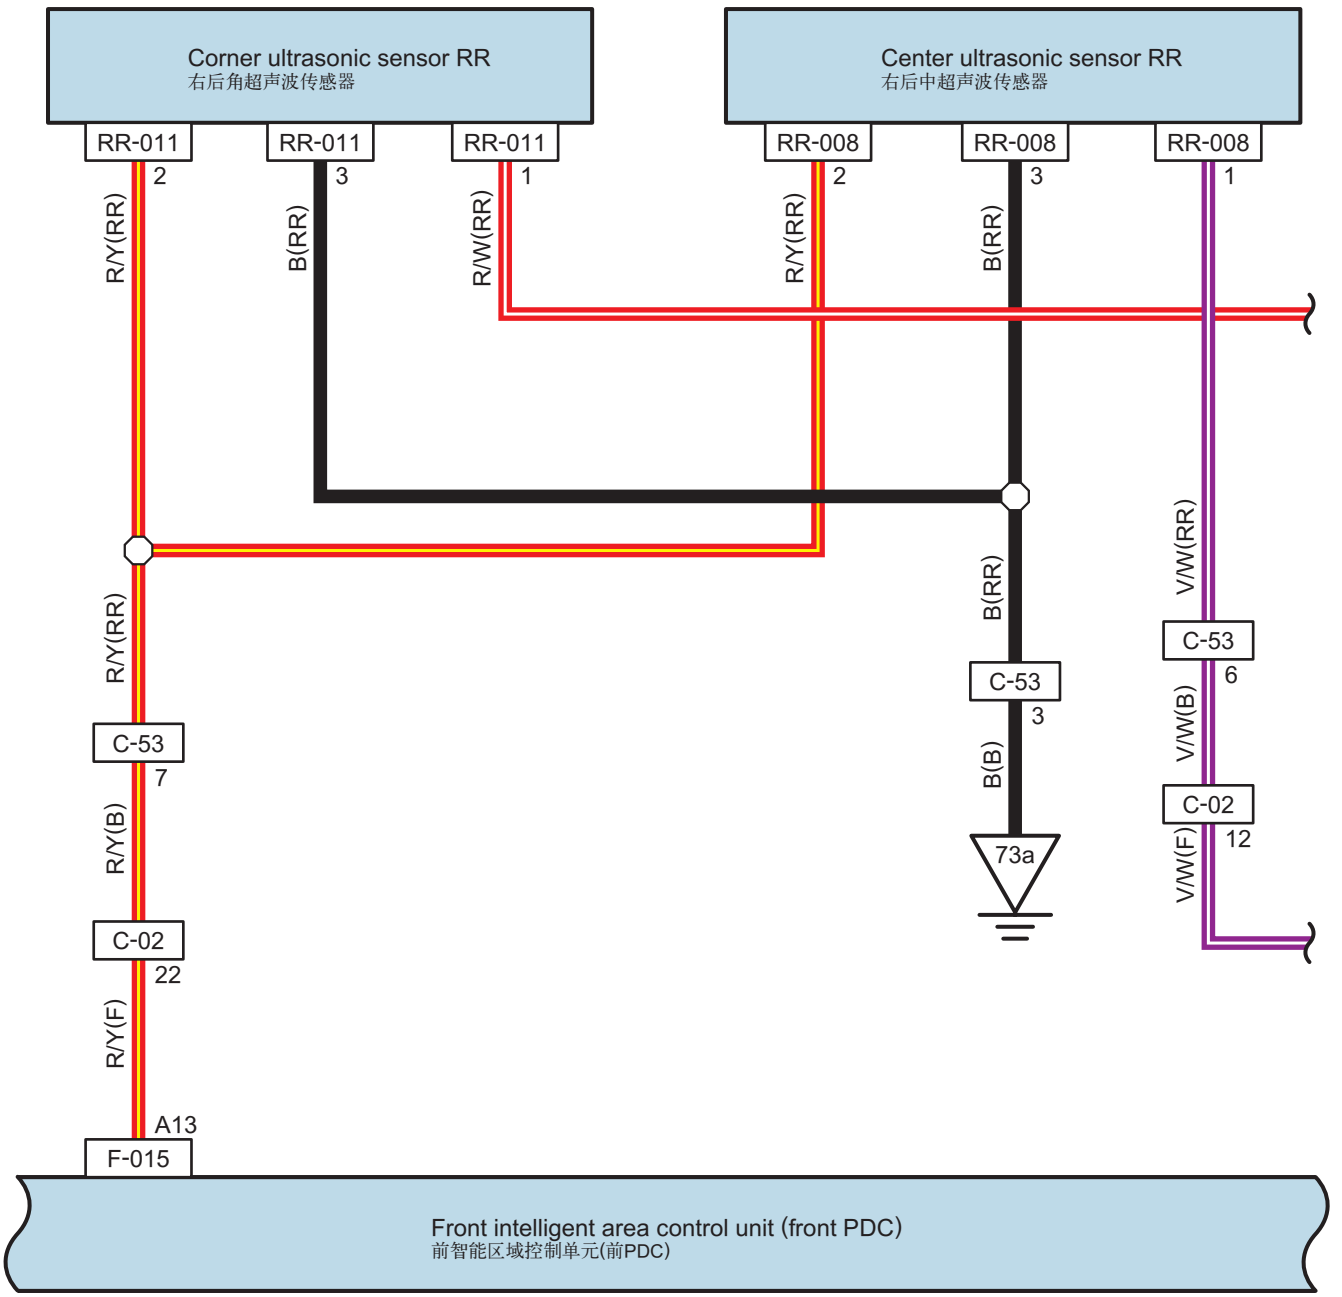

Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
Hood lock state SW
发罩锁状态开关
B-023
A16
B-024
B6
B-024
B5
F-021
1
F-021
2
Y(B)
W(B)
G(B)
V/B(F)
B(F)
C-02
6
C-73
1
C-73
2
Y(F)
W(F)
G(F)
13a
B5
E2
E1
A29
F-023
F-002
F-002
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

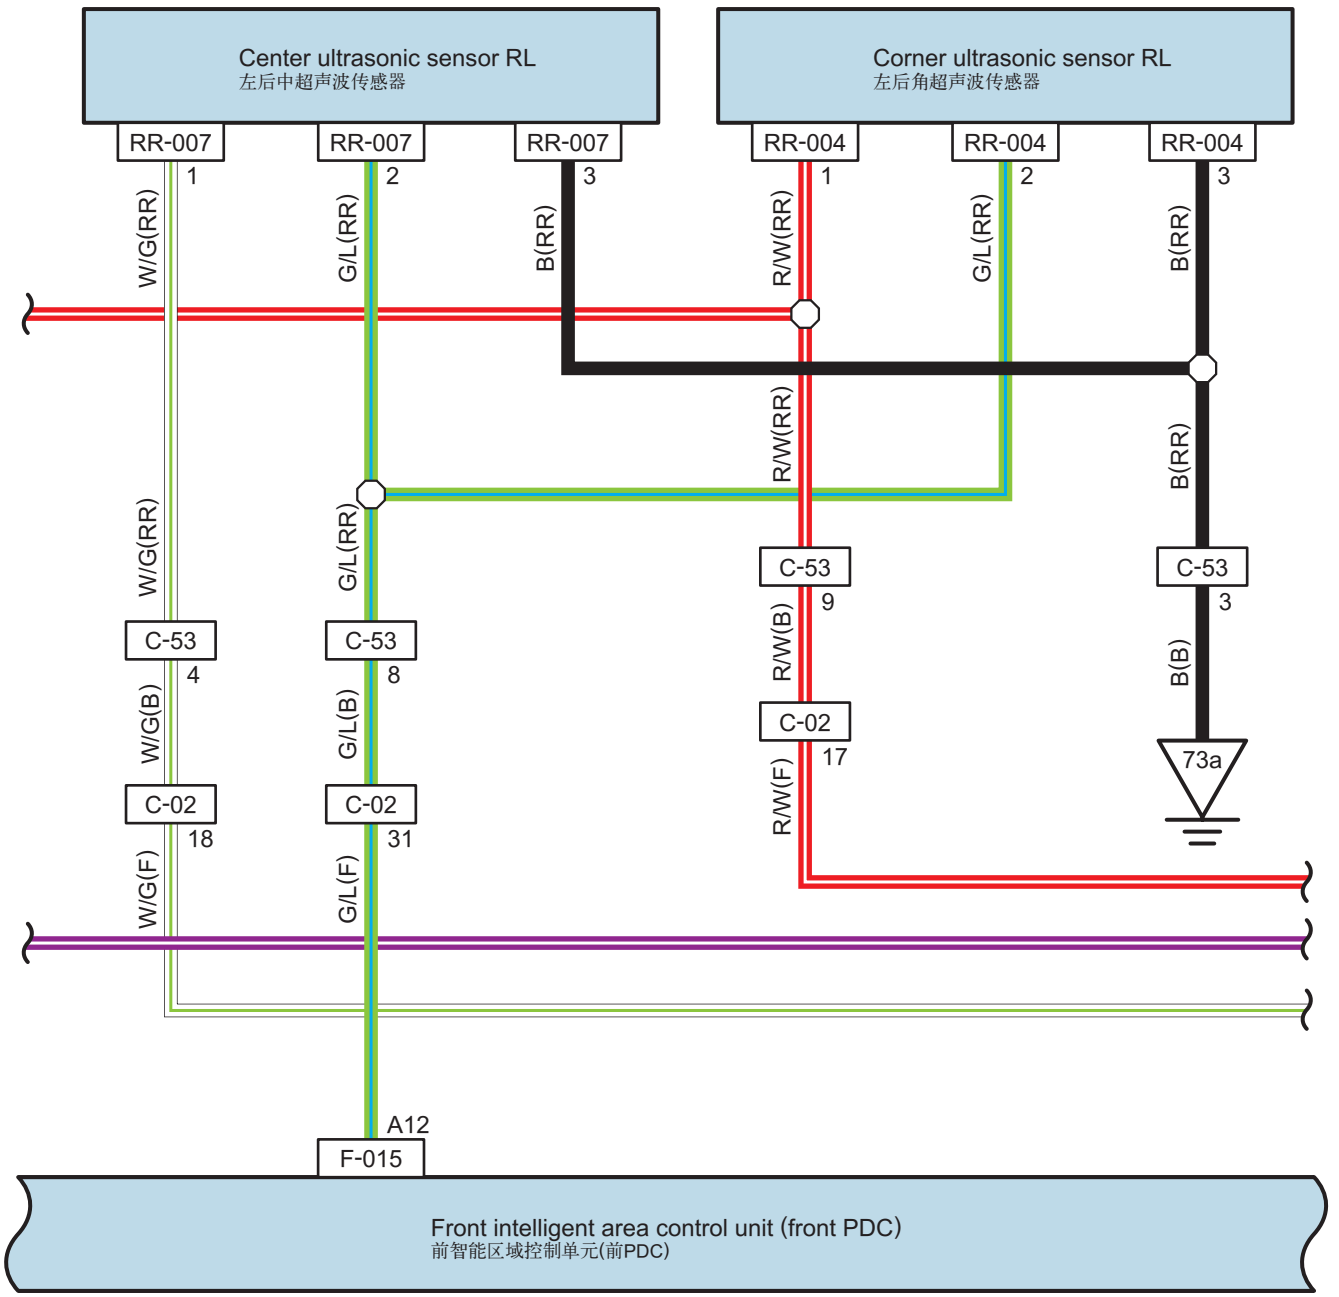

Brake caliper RL
左后制动钳
Combination light FL I
左前组合灯 I
W3-002
1
W3-002
2
F-014
5
F-014
14
F-014
7
F-014
12
B(W3)
R(W3)
R/Y(F)
BR/B(F)
BR/W(F)
B(F)
C-38
2
C-38
1
B(B)
R(B)
C-02
27
C-02
36
B(F)
R(F)
13b
B3
B4
B1
F-023
F-023
F-023
Front comfort_CAN
前部舒适_CAN
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

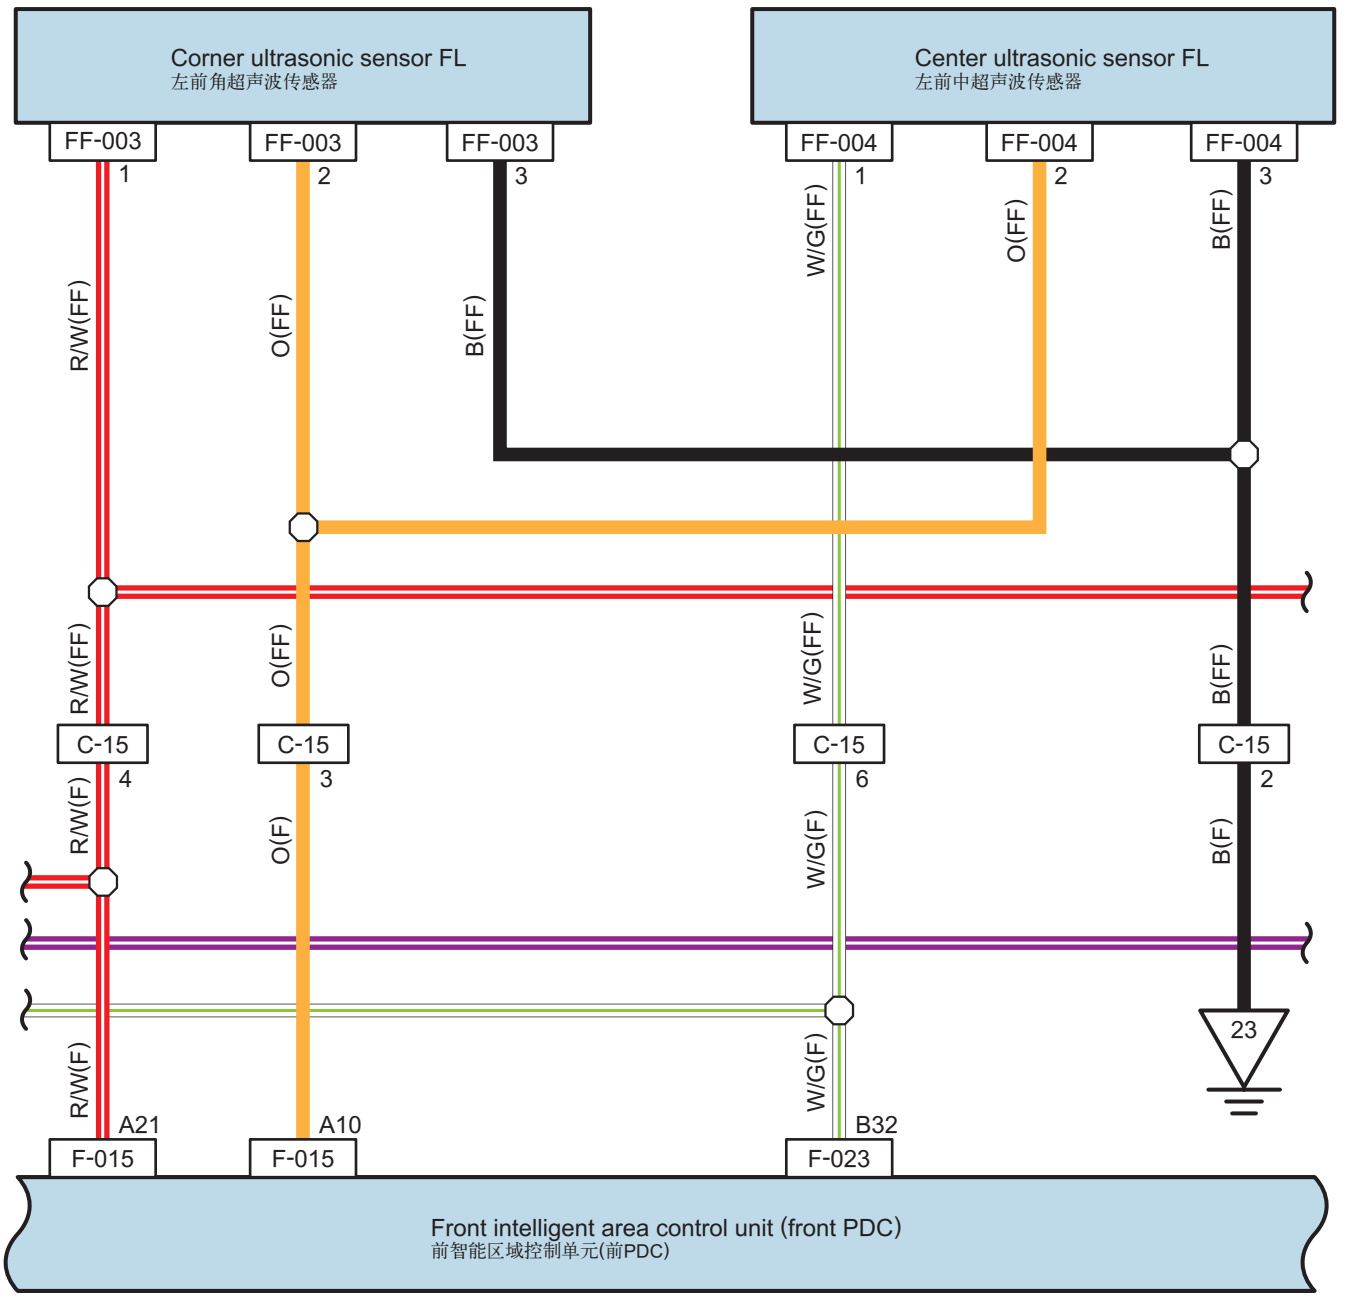

Washer pump
洗涤泵
F-009
1
F-009
2
L(F)
W/B(F)
B51
B73
F-023
F-023
Combination light FR I
右前组合灯 I
F-010
5
F-010
14
F-010
7
F-010
12
R/G(F)
BR/B(F)
BR/W(F)
B(F)
16
Front comfort_CAN
前部舒适_CAN
B2
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

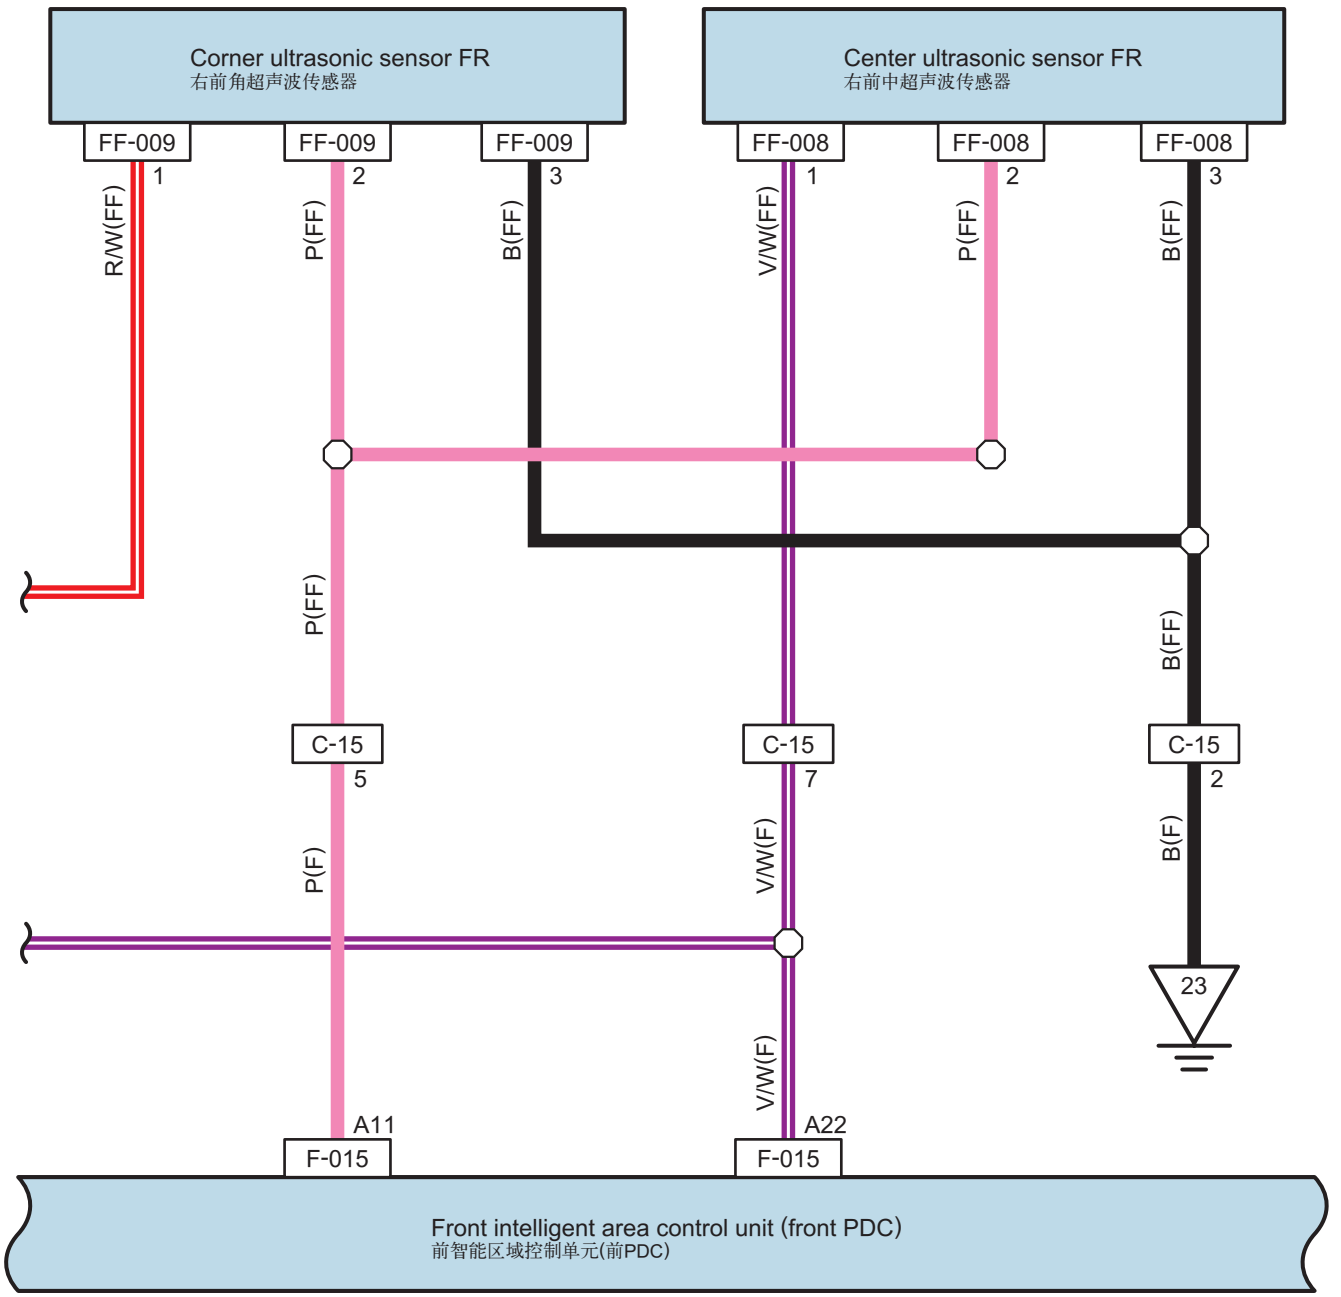

Front wiper
前刮水器
Sunlight rain sensor
光线雨量传感器
F-001
3
F-001
4
F-001
1
B-015
3
B(F)
R/W(F)
GR/R(F)
GR/R(B)
C-09
10
GR/R(F)
27
GR/R(F)
B29
B86
F-023
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

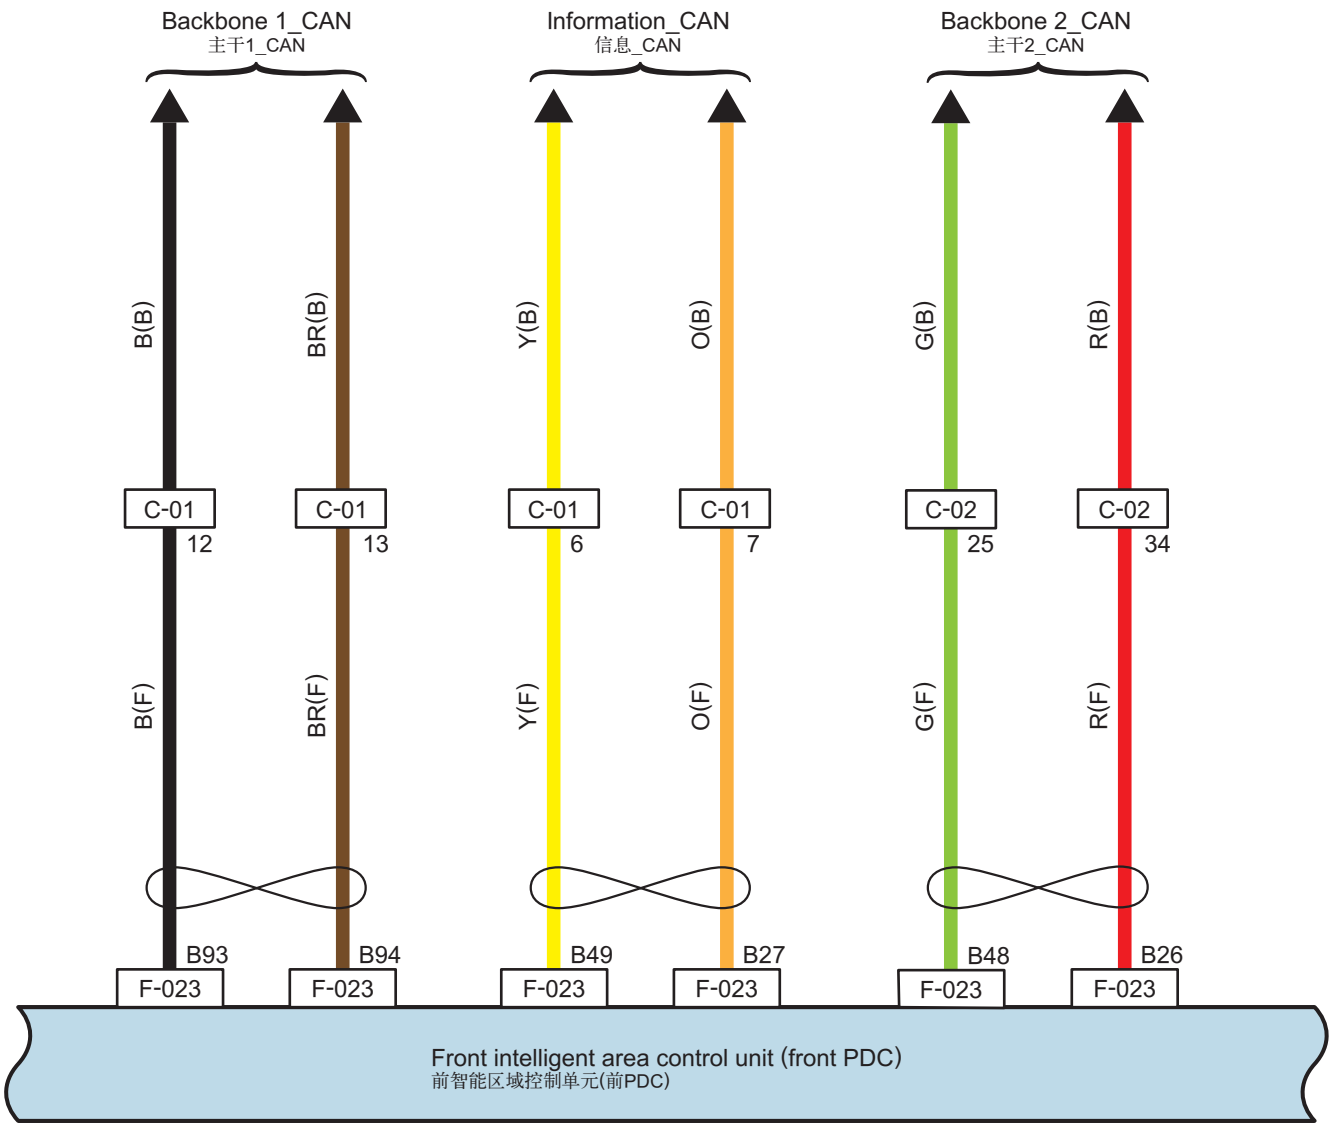

Flag light controller
旗标灯控制器
FF-014
3
4
2
1
5
6
7
8
B(FF)
Y/B(FF)
BR/B(FF)
BR/W(FF)
V(FF)
B/L(FF)
R/G(FF)
V/B(FF)
C-15
2
10
18
24
30
31
33
34
B(F)
Y/B(FF)
BR/B(FF)
BR/W(FF)
V(FF)
B/L(FF)
R/G(FF)
V/B(FF)
C-79
1
2
3
4
23
Front comfort_CAN
前部舒适_CAN
F4-001
Hood flag light
发罩旗标灯
B14
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

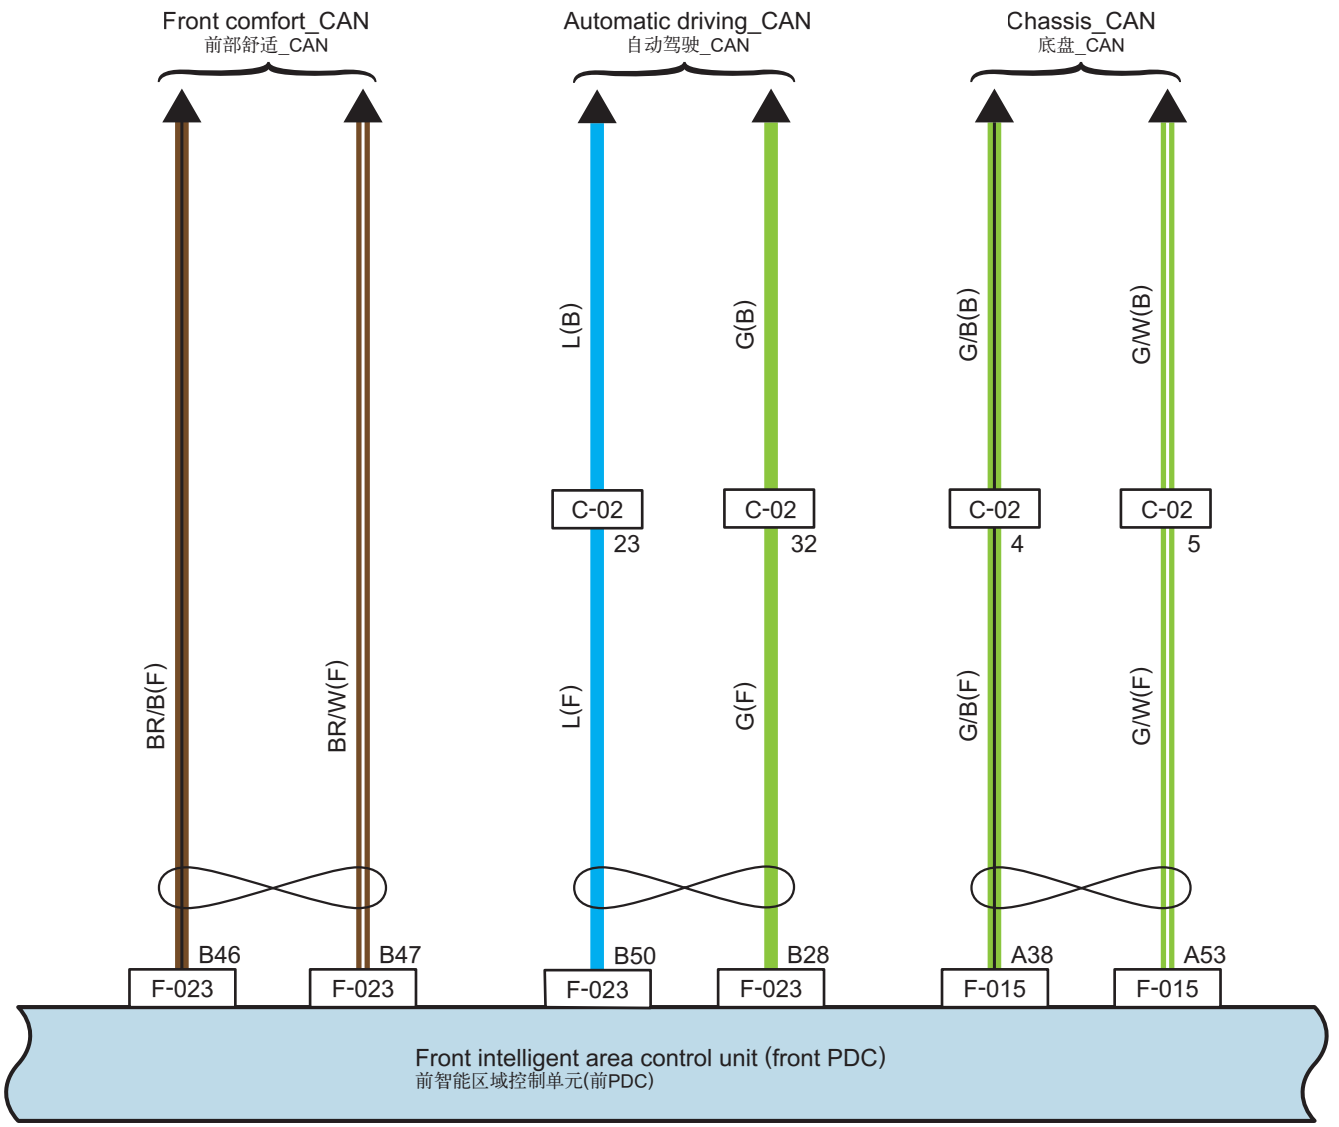

Corner ultrasonic sensor RR
右后角超声波传感器
Center ultrasonic sensor RR
右后中超声波传感器
RR-011
2
RR-011
3
RR-011
1
RR-008
2
RR-008
3
RR-008
1
R/Y(RR)
B(RR)
R/W(RR)
R/Y(RR)
B(RR)
V/W(RR)
R/Y(RR)
B(RR)
C-53
3
C-53
6
C-53
7
B(B)
V/W(B)
R/Y(B)
73a
C-02
12
C-02
22
V/W(F)
R/Y(F)
A13
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

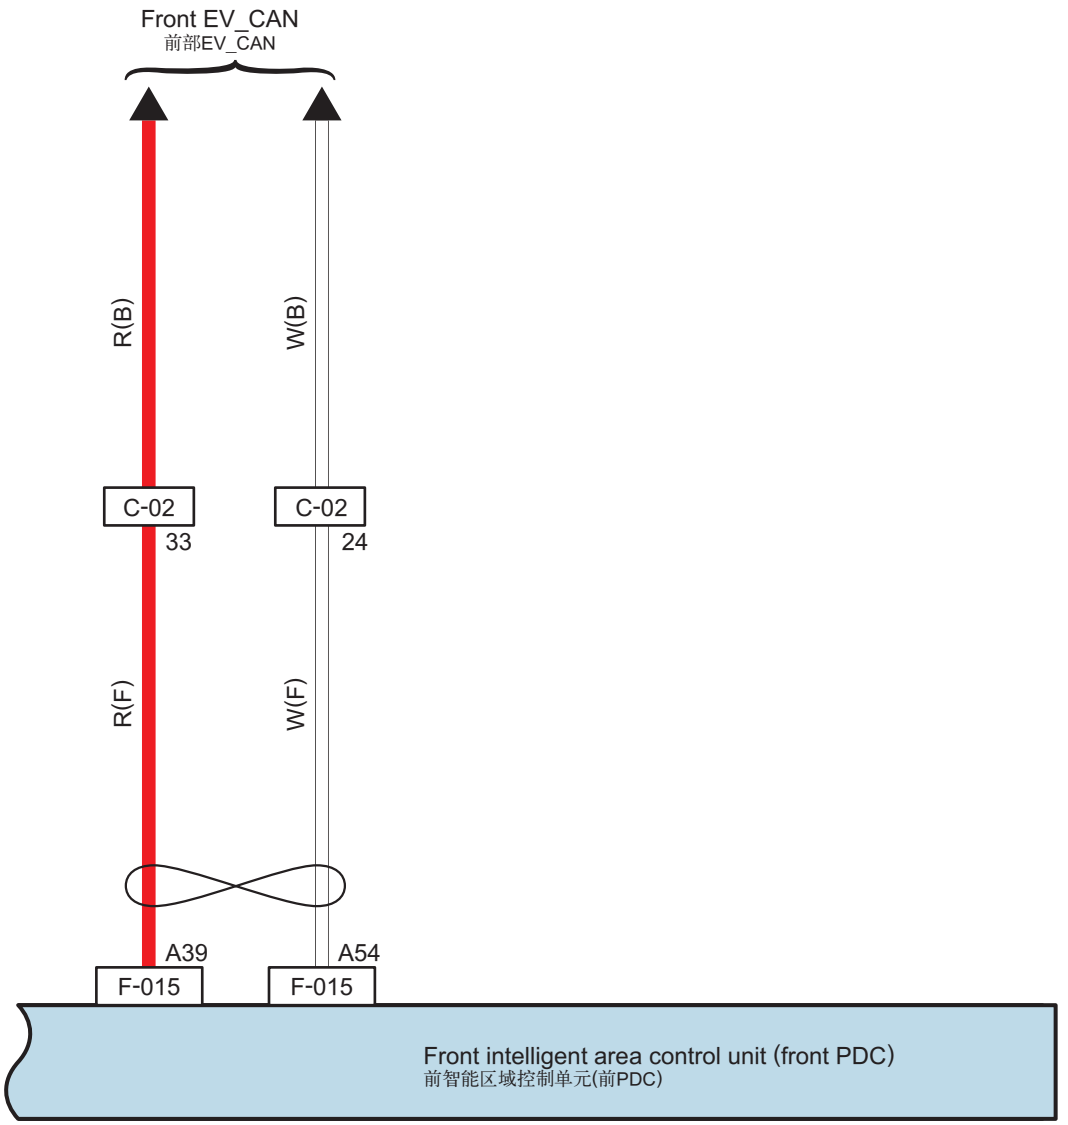

Center ultrasonic sensor RL
左后中超声波传感器
Corner ultrasonic sensor RL
左后角超声波传感器
RR-007
1
RR-007
2
RR-007
3
RR-004
1
RR-004
2
RR-004
3
W/G(RR)
G/L(RR)
B(RR)
R/W(RR)
G/L(RR)
B(RR)
R/W(RR)
B(RR)
G/L(RR)
C-53
4
C-53
8
C-53
9
C-53
3
W/G(B)
G/L(B)
R/W(B)
B(B)
C-02
18
C-02
31
C-02
17
73a
W/G(F)
G/L(F)
R/W(F)
A12
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

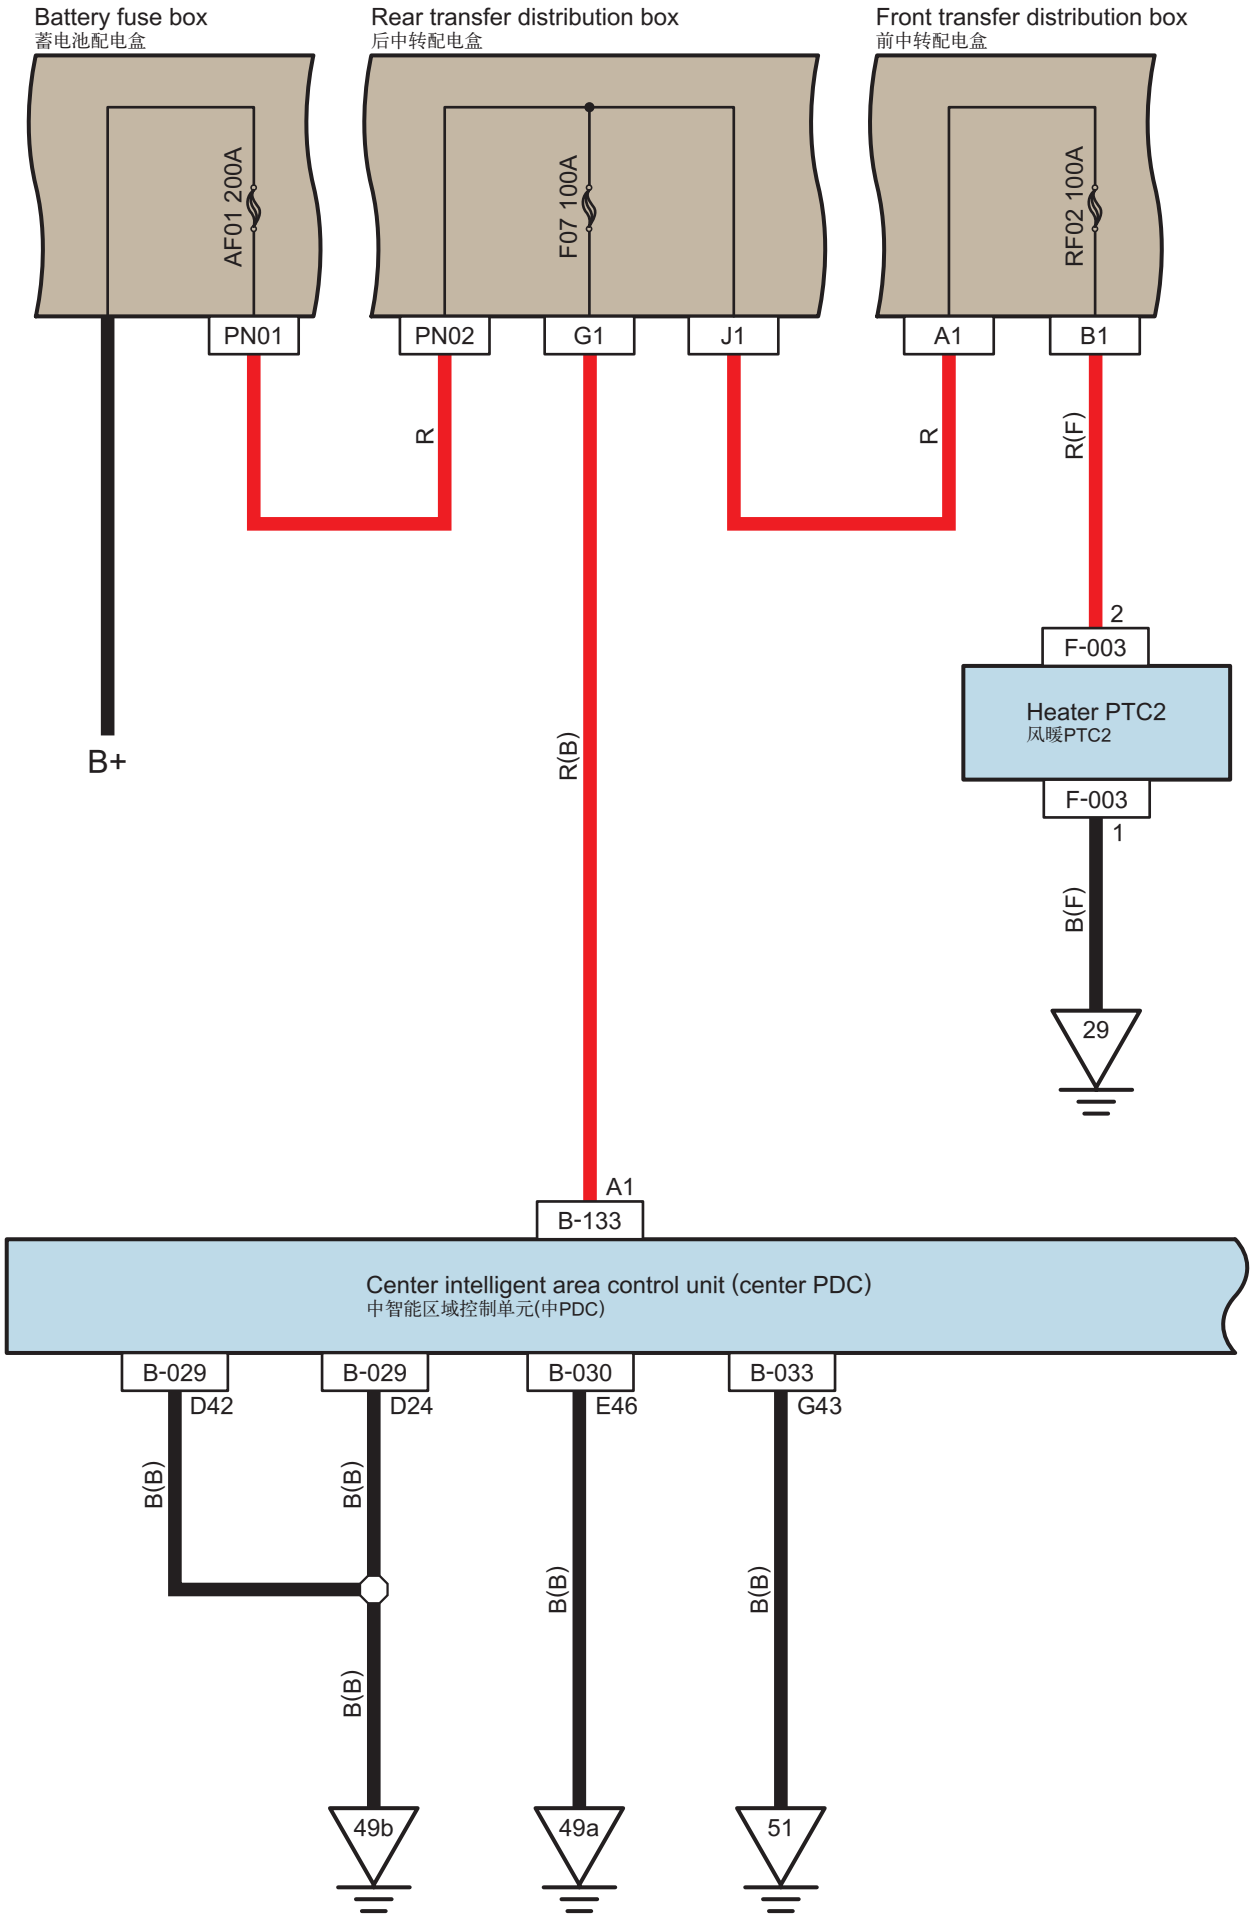

Corner ultrasonic sensor FL
左前角超声波传感器
Center ultrasonic sensor FL
左前中超声波传感器
FF-003
1
FF-003
2
FF-003
3
FF-004
1
FF-004
2
FF-004
3
R/W(FF)
O(FF)
B(FF)
W/G(FF)
O(FF)
B(FF)
C-15
4
C-15
3
C-15
6
C-15
2
R/W(F)
O(F)
W/G(F)
B(F)
23
R/W(F)
W/G(F)
A21
A10
B32
F-015
F-015
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

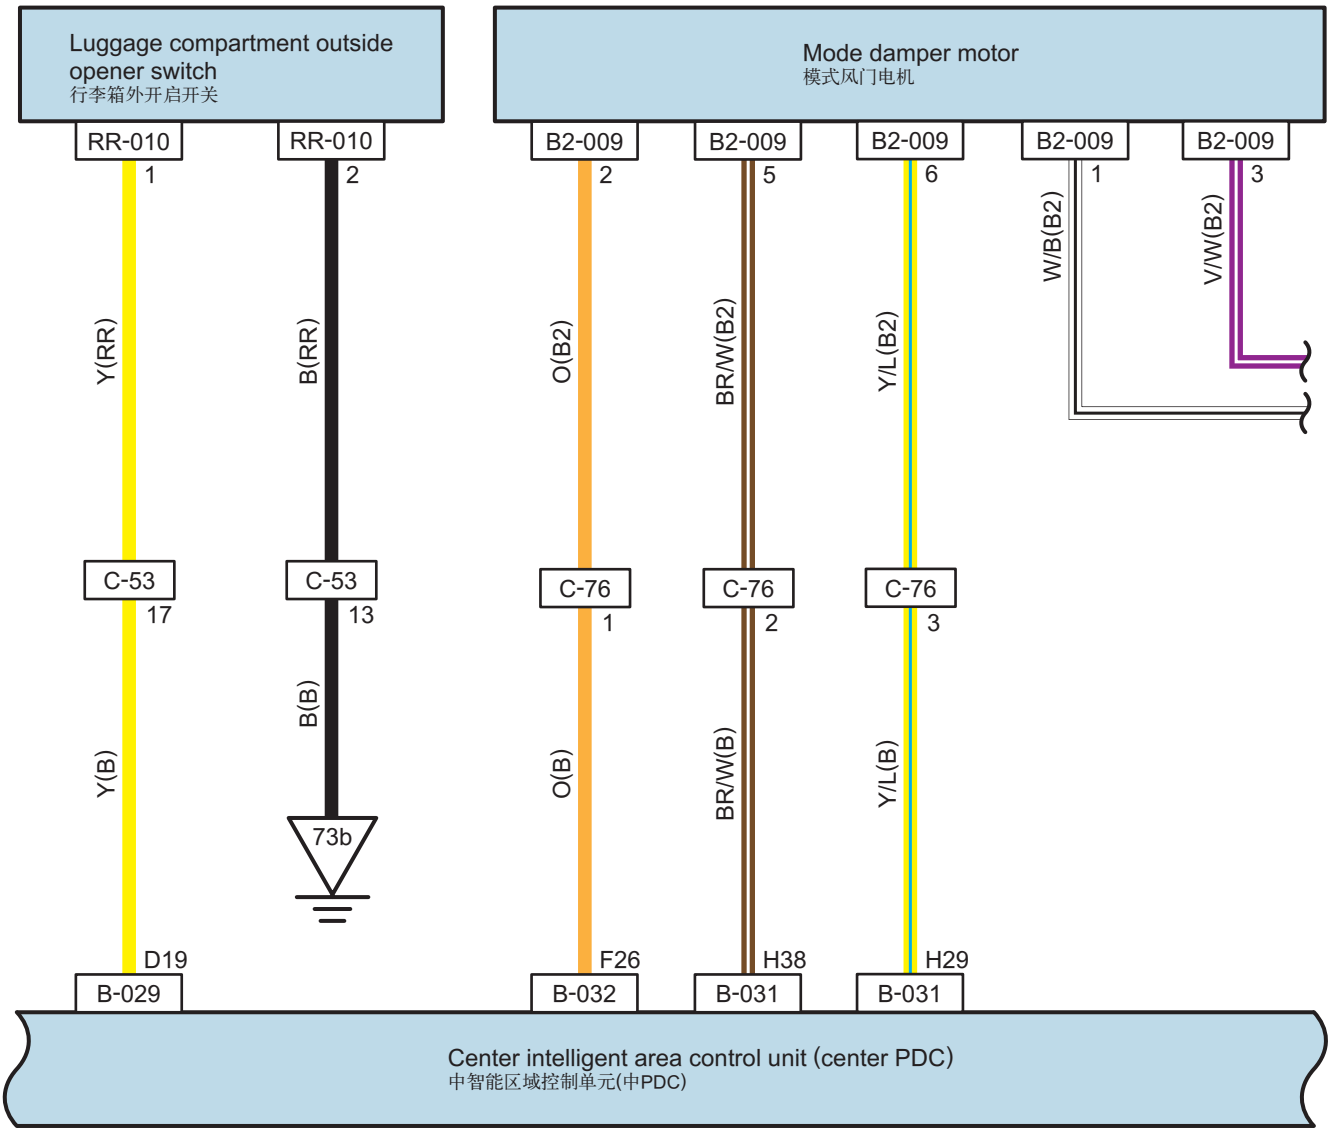

Corner ultrasonic sensor FR
右前角超声波传感器
Center ultrasonic sensor FR
右前中超声波传感器
FF-009
1
FF-009
2
FF-009
3
FF-008
1
FF-008
2
FF-008
3
R/W(FF)
P(FF)
B(FF)
V/W(FF)
P(FF)
B(FF)
P(FF)
B(FF)
C-15
5
C-15
7
C-15
2
P(F)
V/W(F)
B(F)
23
V/W(F)
A11
F-015
A22
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

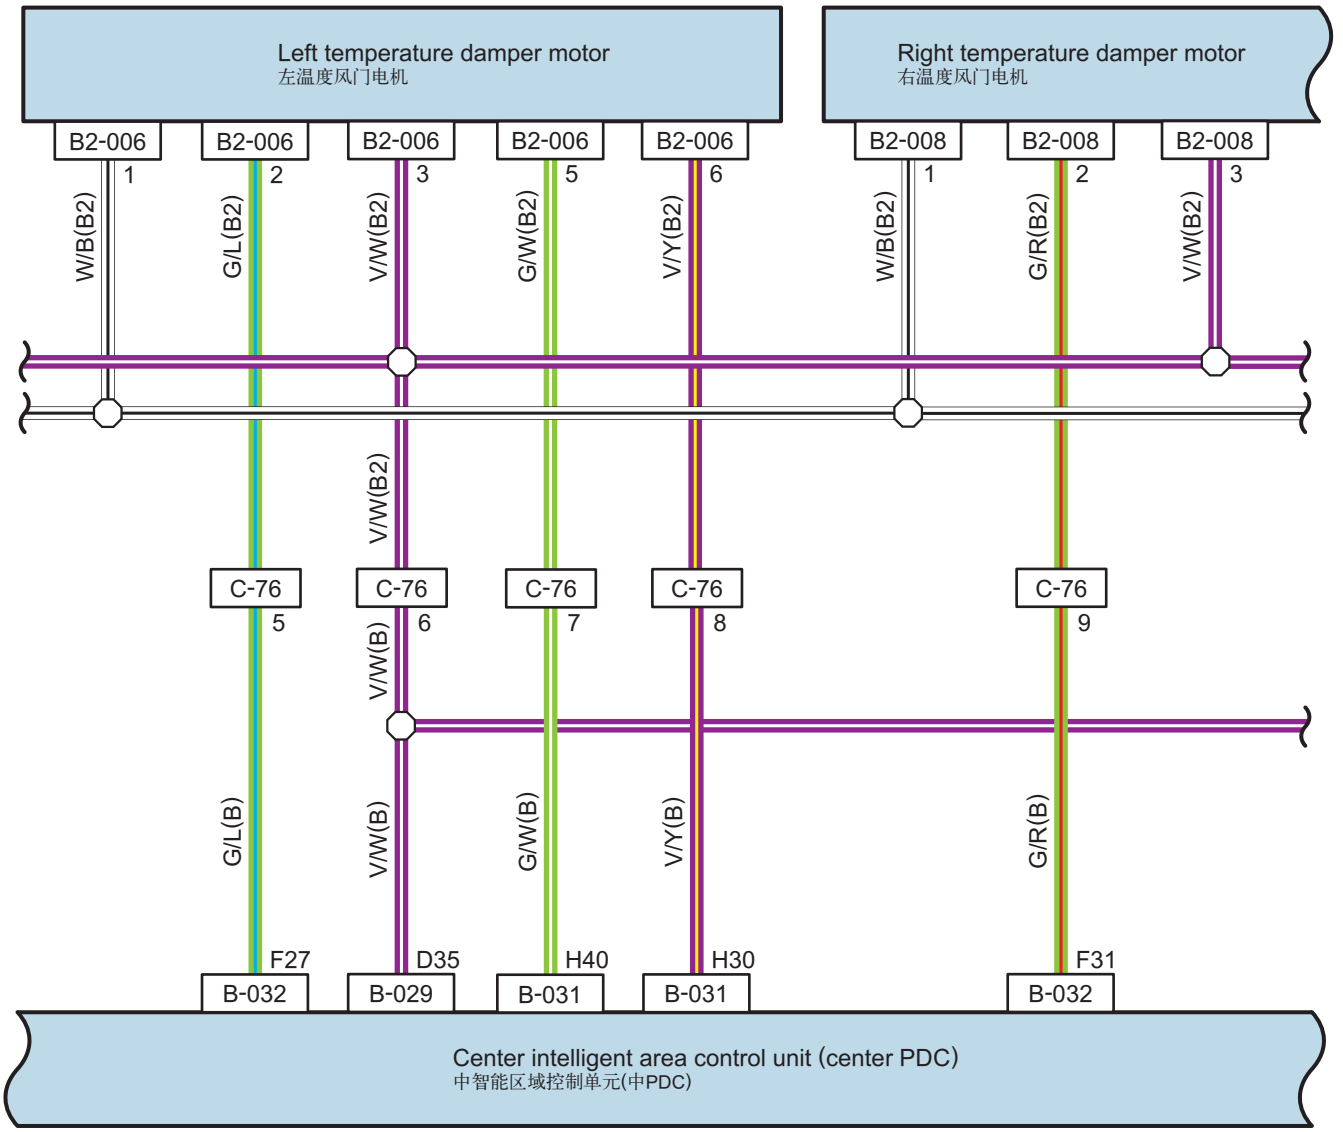

Backbone 1_CAN
主干1_CAN
Information_CAN
信息_CAN
Backbone 2_CAN
主干2_CAN
B(B)
BR(B)
Y(B)
O(B)
G(B)
R(B)
C-01
12
C-01
13
C-01
6
C-01
7
C-02
25
C-02
34
B(F)
BR(F)
Y(F)
O(F)
G(F)
R(F)
B93
B94
B49
B27
B48
B26
F-023
F-023
F-023
F-023
F-023
F-023
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

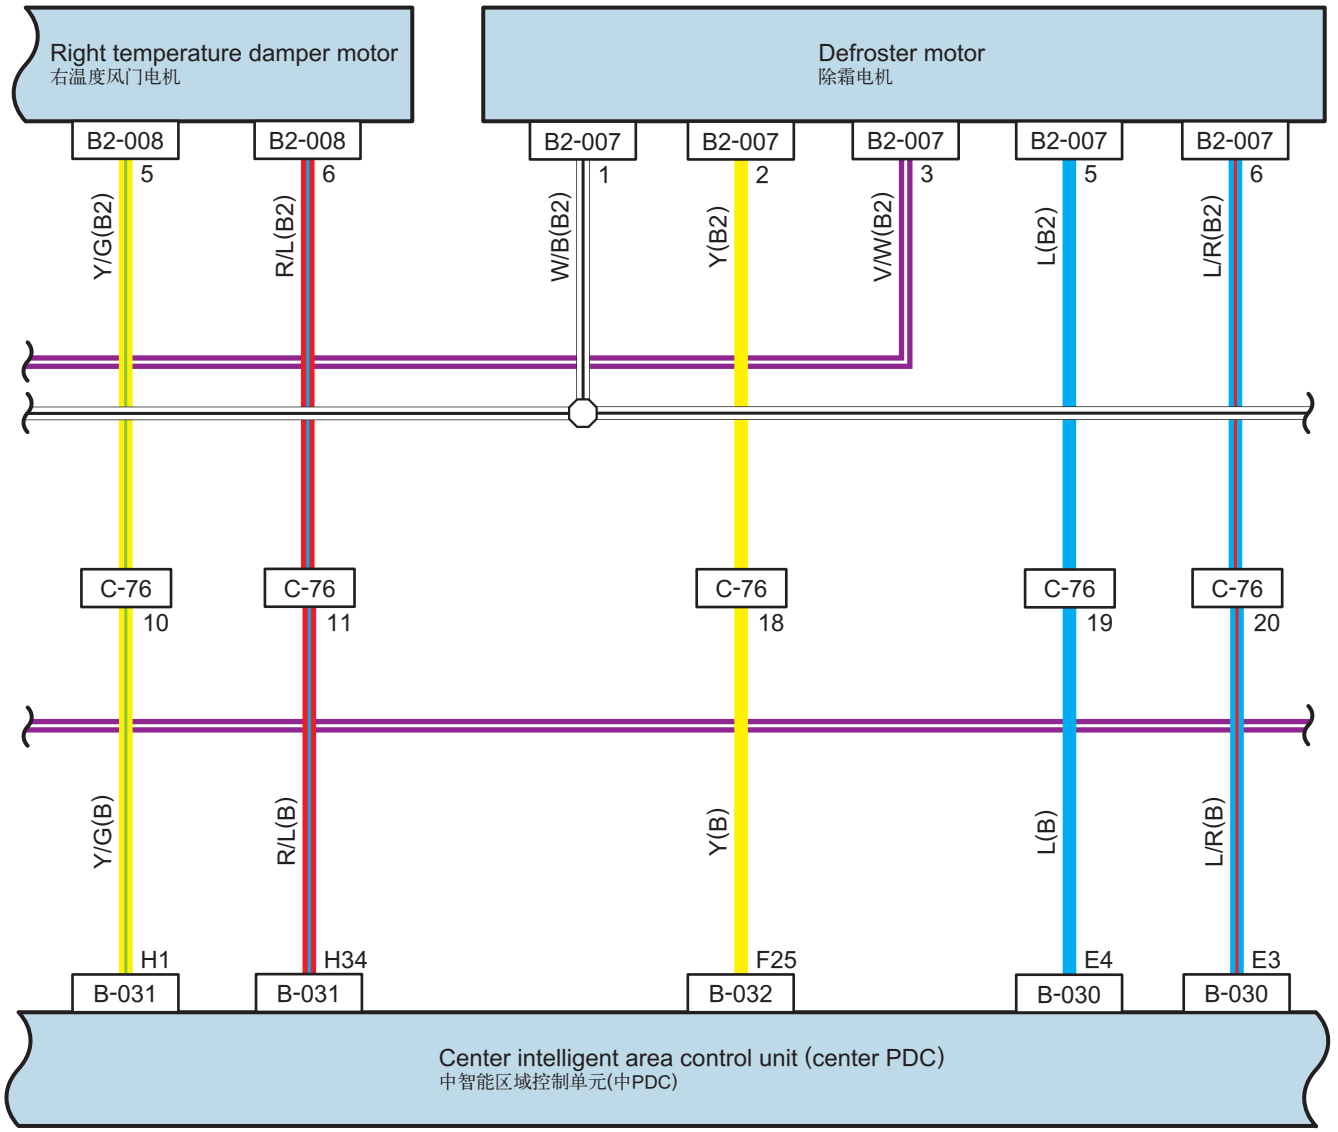

Front comfort_CAN
前部舒适_CAN
Automatic driving_CAN
自动驾驶_CAN
Chassis_CAN
底盘_CAN
BR/B(F)
BR/W(F)
L(B)
G(B)
L(F)
G(F)
G/B(B)
G/W(B)
G/B(F)
G/W(F)
C-02
23
C-02
32
C-02
4
C-02
5
B46
F-023
B47
F-023
B50
F-023
B28
F-023
A38
F-015
A53
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

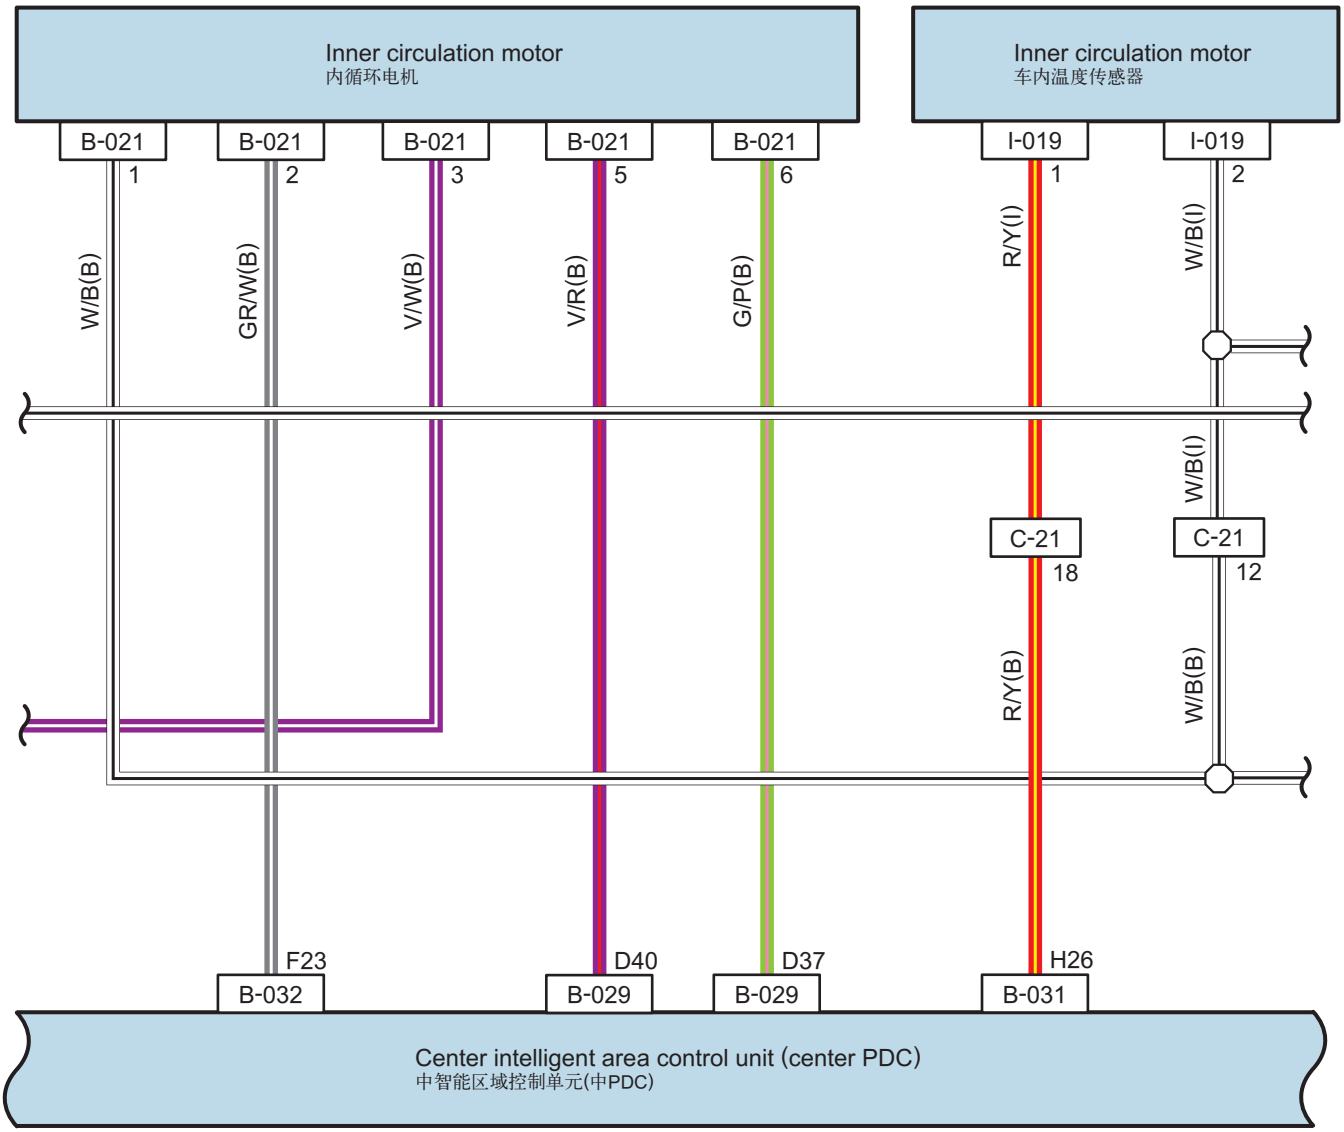

Front EV_CAN
前部EV_CAN
R(B)
W(B)
C-02
33
C-02
24
R(F)
W(F)
A39
A54
F-015
F-015
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

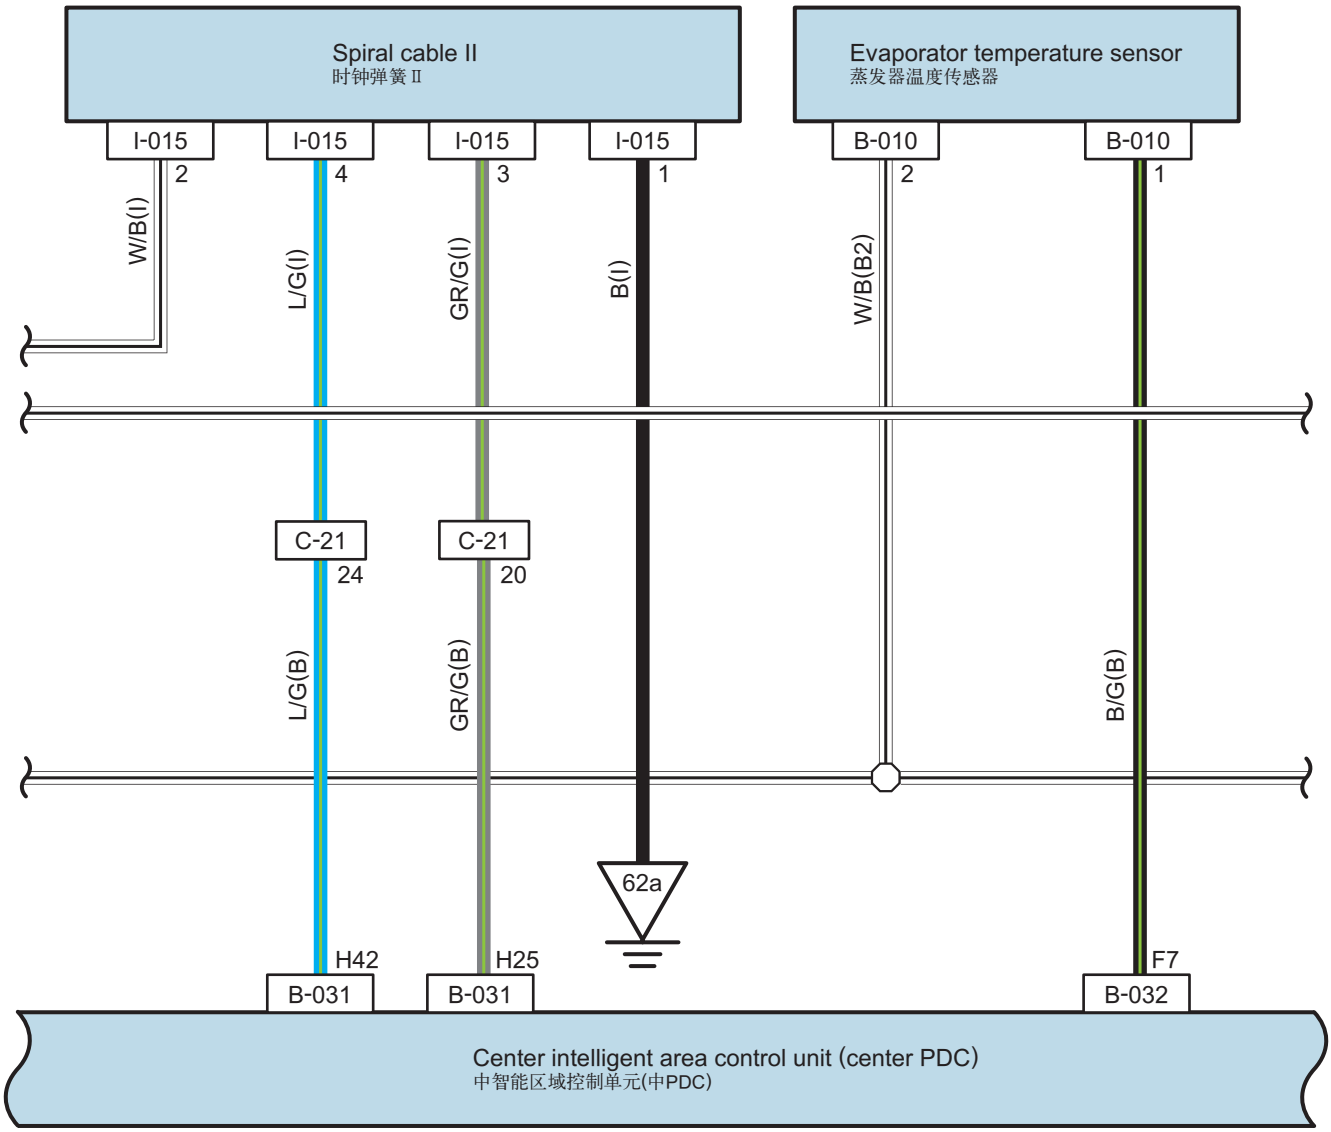

Battery fuse box
蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
AF01 200A
F07 100A
RF02 100A
PN01
PN02
G1
J1
A1
B1
R
R
R(F)
B+
R(B)
2
F-003
Heater PTC2
风暖PTC2
F-003
1
B(F)
29
A1
B-133
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-029
D42
B-029
D24
B-030
E46
B-033
G43
B(B)
B(B)
B(B)
B(B)
B(B)
49b
49a
51

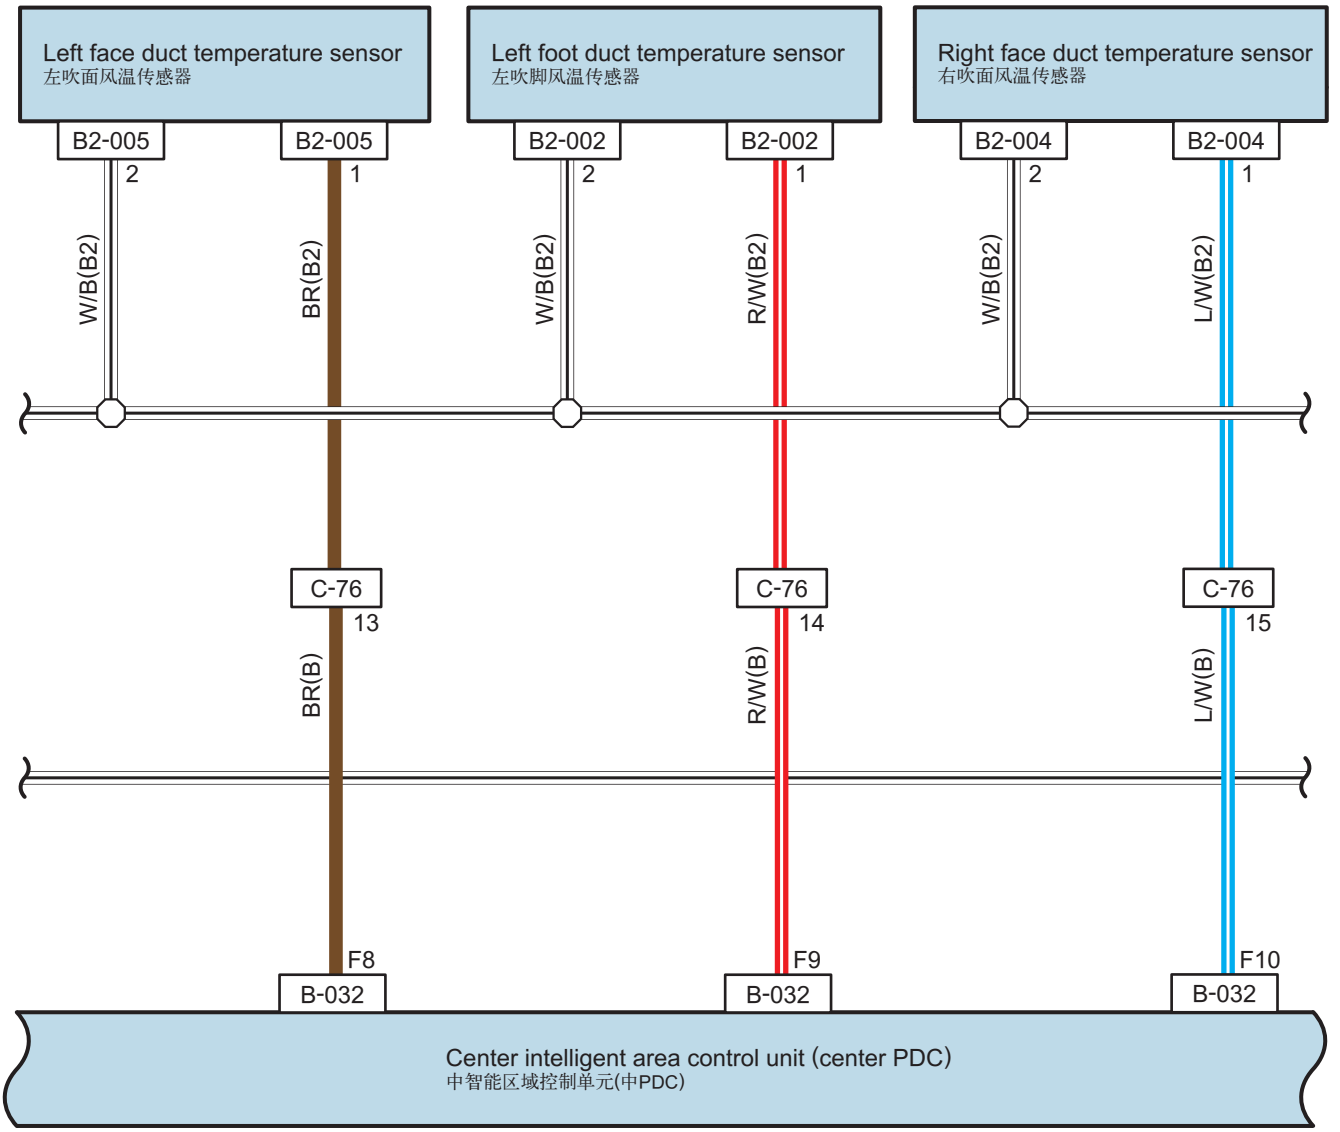

Luggage compartment outside opener switch
行李箱外开启开关
RR-010
1
RR-010
2
Y(RR)
B(RR)
C-53
17
C-53
13
B(B)
Y(B)
73b
D19
B-029
Mode damper motor
模式风门电机
B2-009
2
B2-009
5
B2-009
6
B2-009
1
B2-009
3
O(B2)
BR/W(B2)
Y/L(B2)
W/B(B2)
V/W(B2)
C-76
1
C-76
2
C-76
3
O(B)
BR/W(B)
Y/L(B)
F26
H38
H29
B-032
B-031
B-031
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

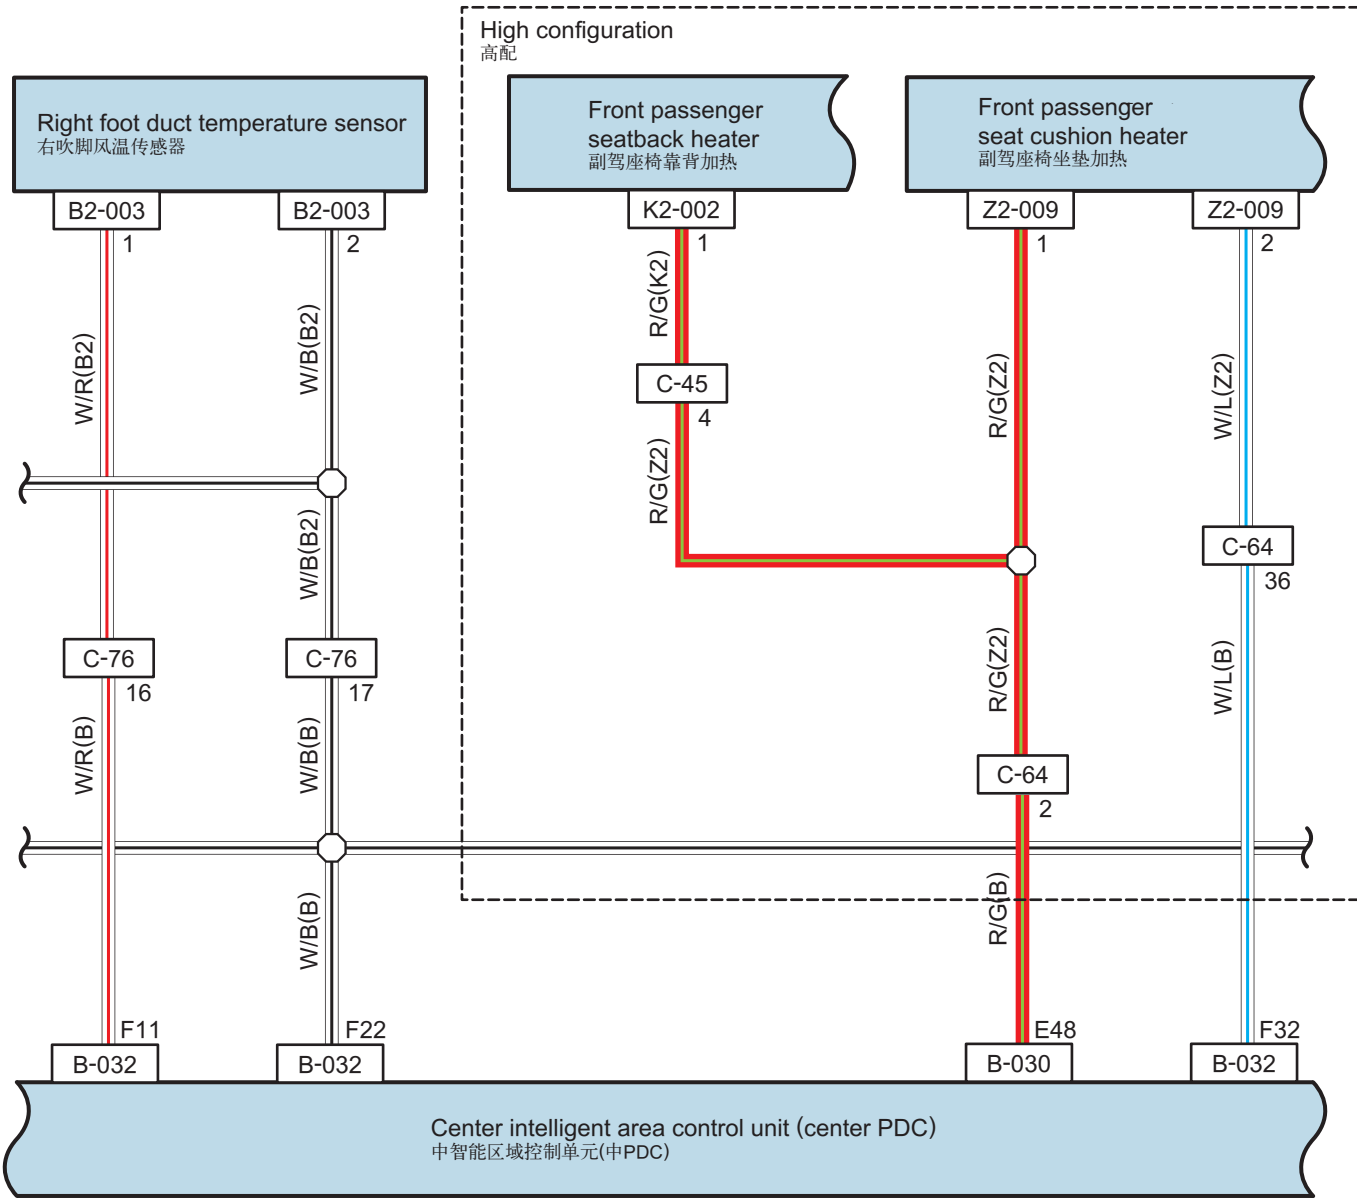

Left temperature damper motor
左温度风门电机
Right temperature damper motor
右温度风门电机
B2-006
1
W/B(B2)
B2-006
2
G/L(B2)
B2-006
3
V/W(B2)
B2-006
5
G/W(B2)
B2-006
6
V/Y(B2)
B2-008
1
W/B(B2)
B2-008
2
G/R(B2)
B2-008
3
V/W(B2)
V/W(B2)
C-76
5
C-76
6
C-76
7
C-76
8
C-76
9
V/W(B)
G/L(B)
V/W(B)
G/W(B)
V/Y(B)
G/R(B)
F27
D35
H40
H30
F31
B-032
B-029
B-031
B-031
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

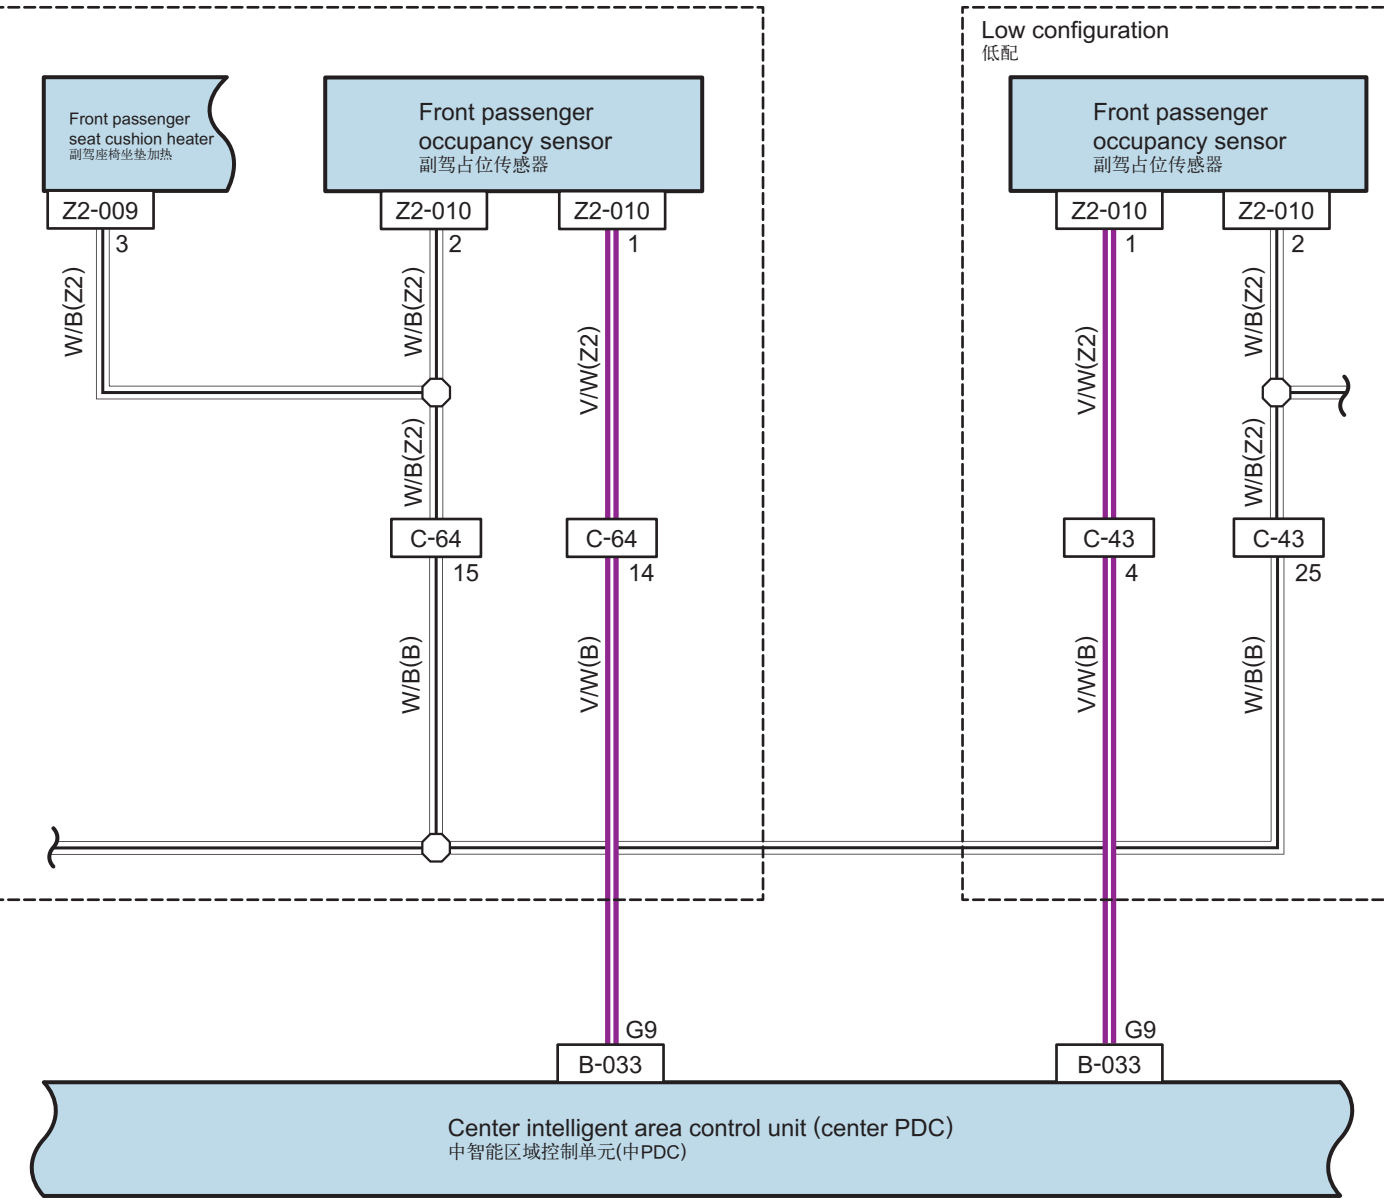

Right temperature damper motor
右温度风门电机
Defroster motor
除霜电机
B2-008
5
Y/G(B2)
B2-008
6
R/L(B2)
B2-007
1
W/B(B2)
B2-007
2
Y(B2)
B2-007
3
V/W(B2)
B2-007
5
L(B2)
B2-007
6
L/R(B2)
C-76
10
C-76
11
C-76
18
C-76
19
C-76
20
Y/G(B)
R/L(B)
Y(B)
L(B)
L/R(B)
H1
H34
F25
E4
E3
B-031
B-031
B-032
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

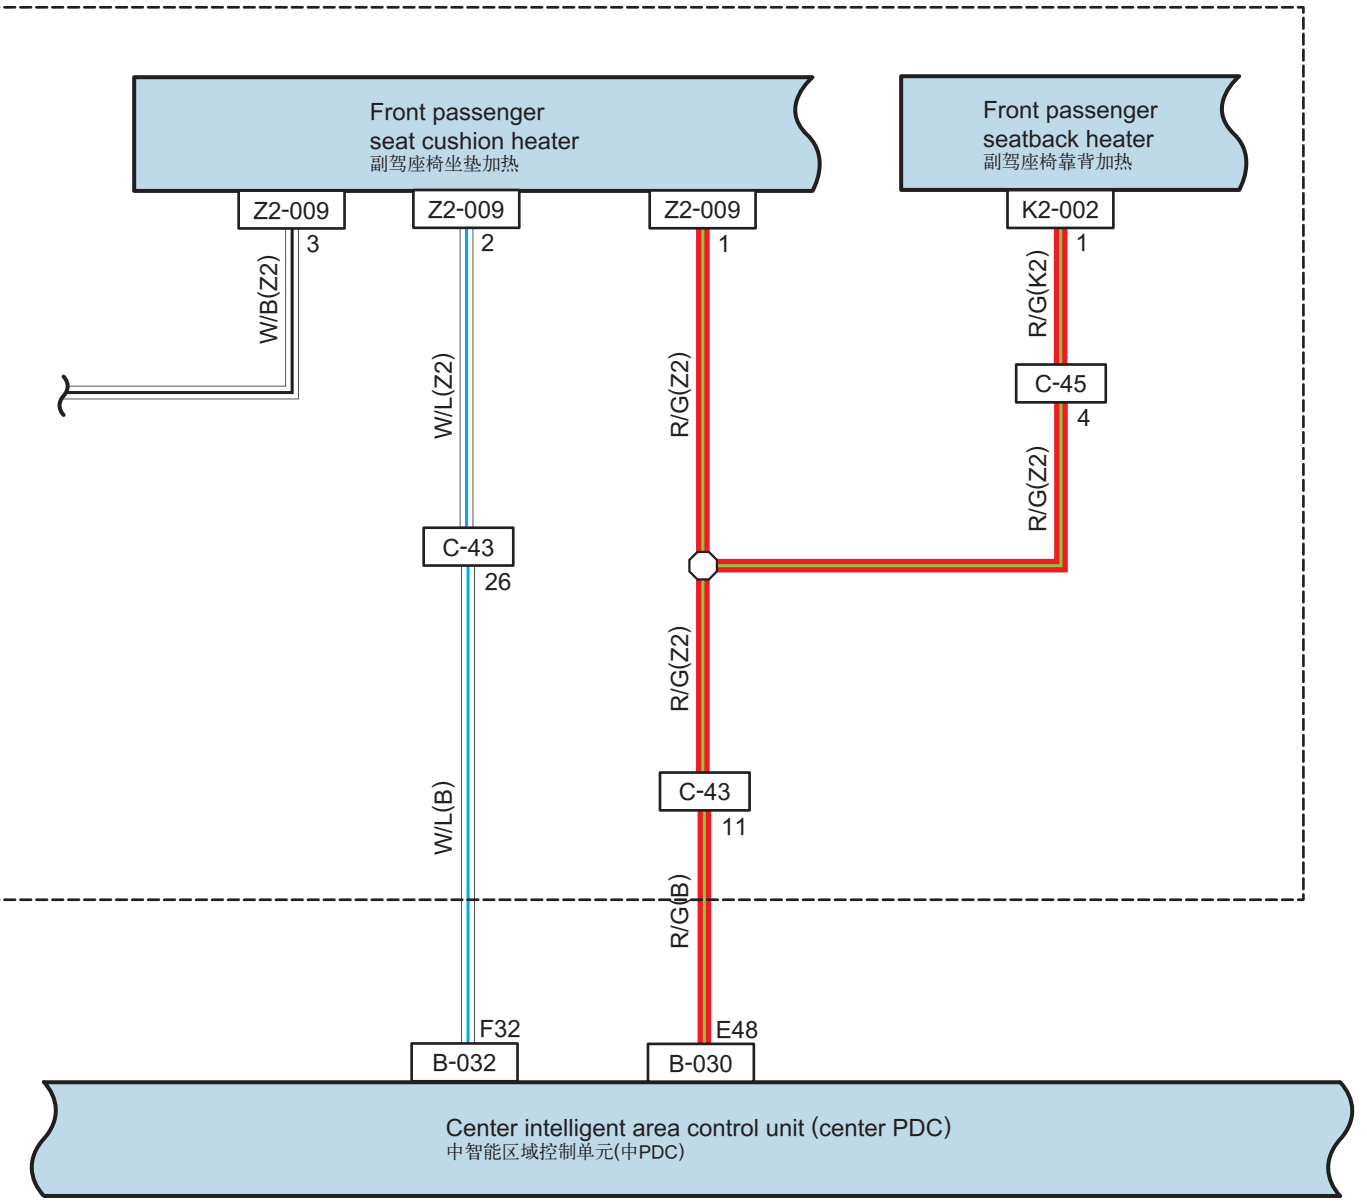

Inner circulation motor
内循环电机
Inner circulation motor
车内温度传感器
B-021
1
B-021
2
B-021
3
B-021
5
B-021
6
I-019
1
I-019
2
W/B(B)
GR/W(B)
V/W(B)
V/R(B)
G/P(B)
R/Y(I)
W/B(I)
W/B(I)
C-21
18
C-21
12
R/Y(B)
W/B(B)
F23
D40
D37
H26
B-032
B-029
B-029
B-031
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

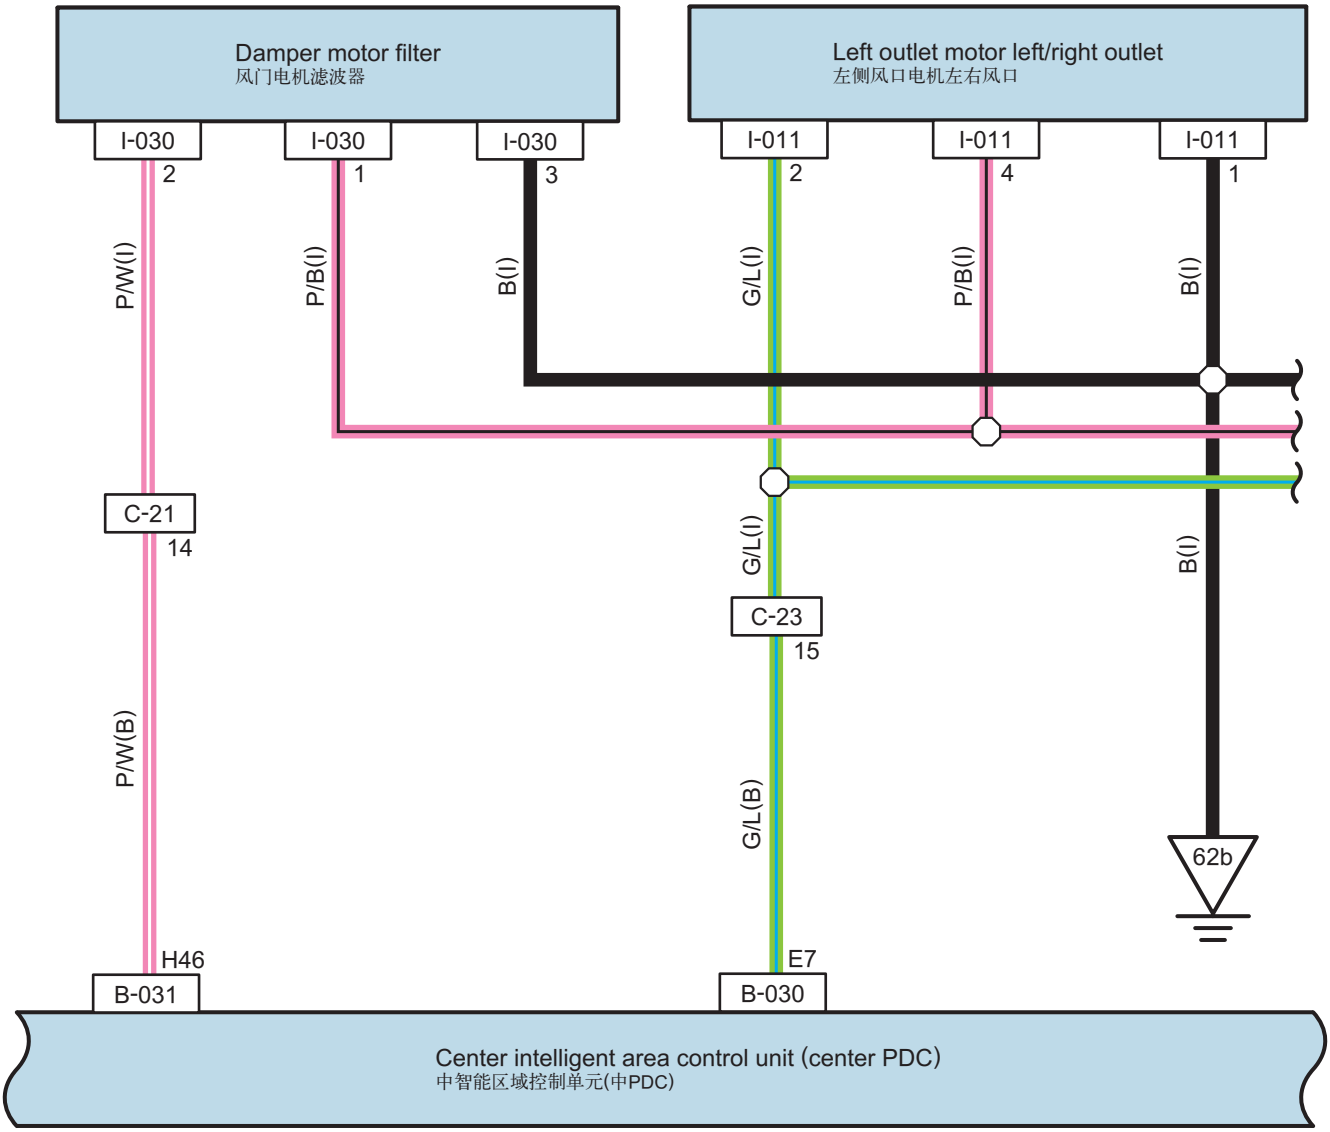

Spiral cable II
时钟弹簧 II
Evaporator temperature sensor
蒸发器温度传感器
I-015
2
I-015
4
I-015
3
I-015
1
B-010
2
B-010
1
W/B(I)
L/G(I)
GR/G(I)
B(I)
W/B(B2)
C-21
24
C-21
20
L/G(B)
GR/G(B)
B/G(B)
62a
H42
H25
F7
B-031
B-031
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

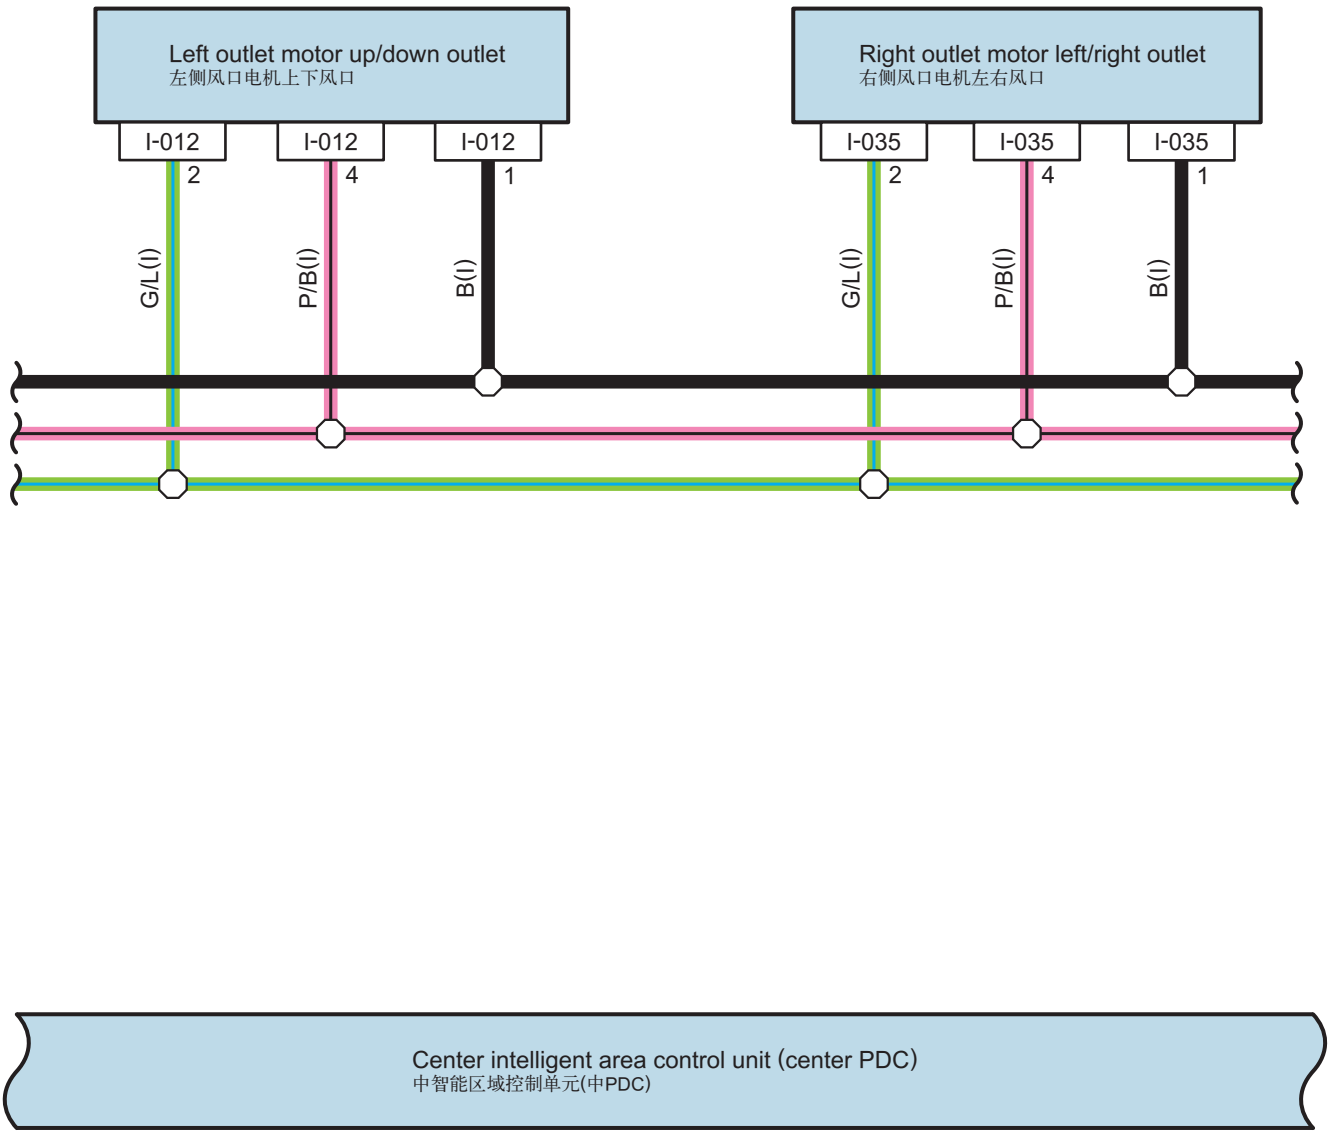

Left face duct temperature sensor
左吹面风温传感器
Left foot duct temperature sensor
左吹脚风温传感器
Right face duct temperature sensor
右吹面风温传感器
B2-005
2
B2-005
1
B2-002
2
B2-002
1
B2-004
2
B2-004
1
W/B(B2)
BR(B2)
W/B(B2)
R/W(B2)
W/B(B2)
L/W(B2)
C-76
13
C-76
14
C-76
15
BR(B)
R/W(B)
L/W(B)
F8
F9
F10
B-032
B-032
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

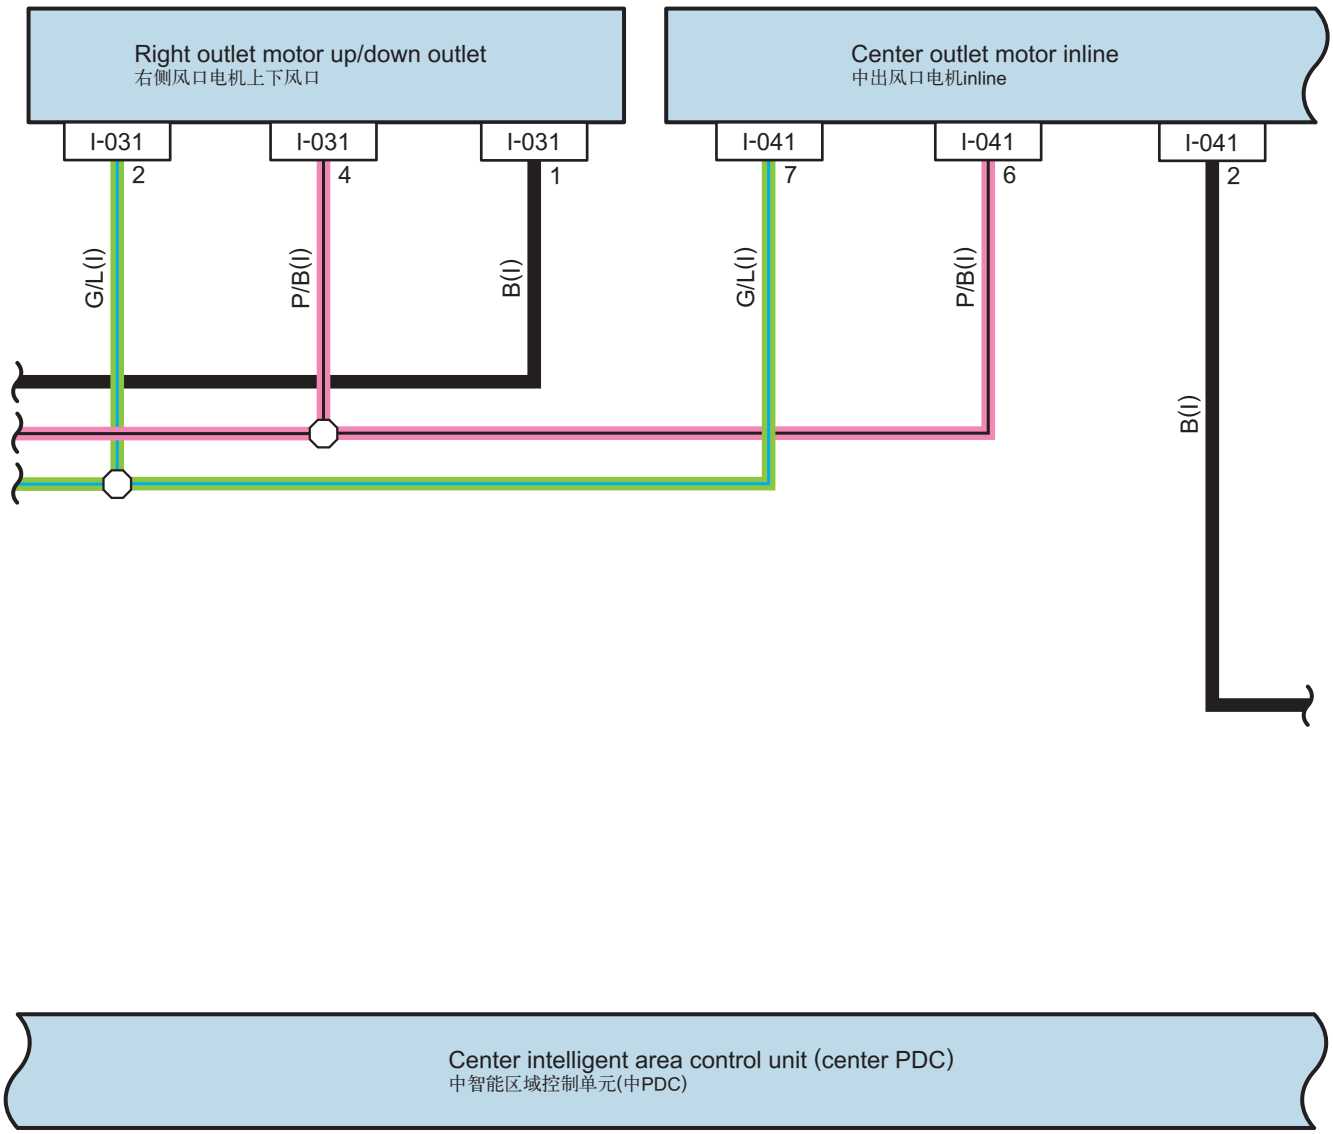

High configuration
高配
Right foot duct temperature sensor
右吹脚风温传感器
Front passenger seatback heater
副驾座椅靠背加热
Front passenger seat cushion heater
副驾座椅坐垫加热
B2-003
1
B2-003
2
K2-002
1
Z2-009
1
Z2-009
2
W/R(B2)
W/B(B2)
R/G(K2)
C-45
4
R/G(Z2)
R/G(Z2)
W/L(Z2)
C-64
36
W/B(B2)
C-76
16
C-76
17
R/G(Z2)
W/L(B)
W/R(B)
W/B(B)
C-64
2
W/B(B)
R/G(B)
F11
F22
E48
F32
B-032
B-032
B-030
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

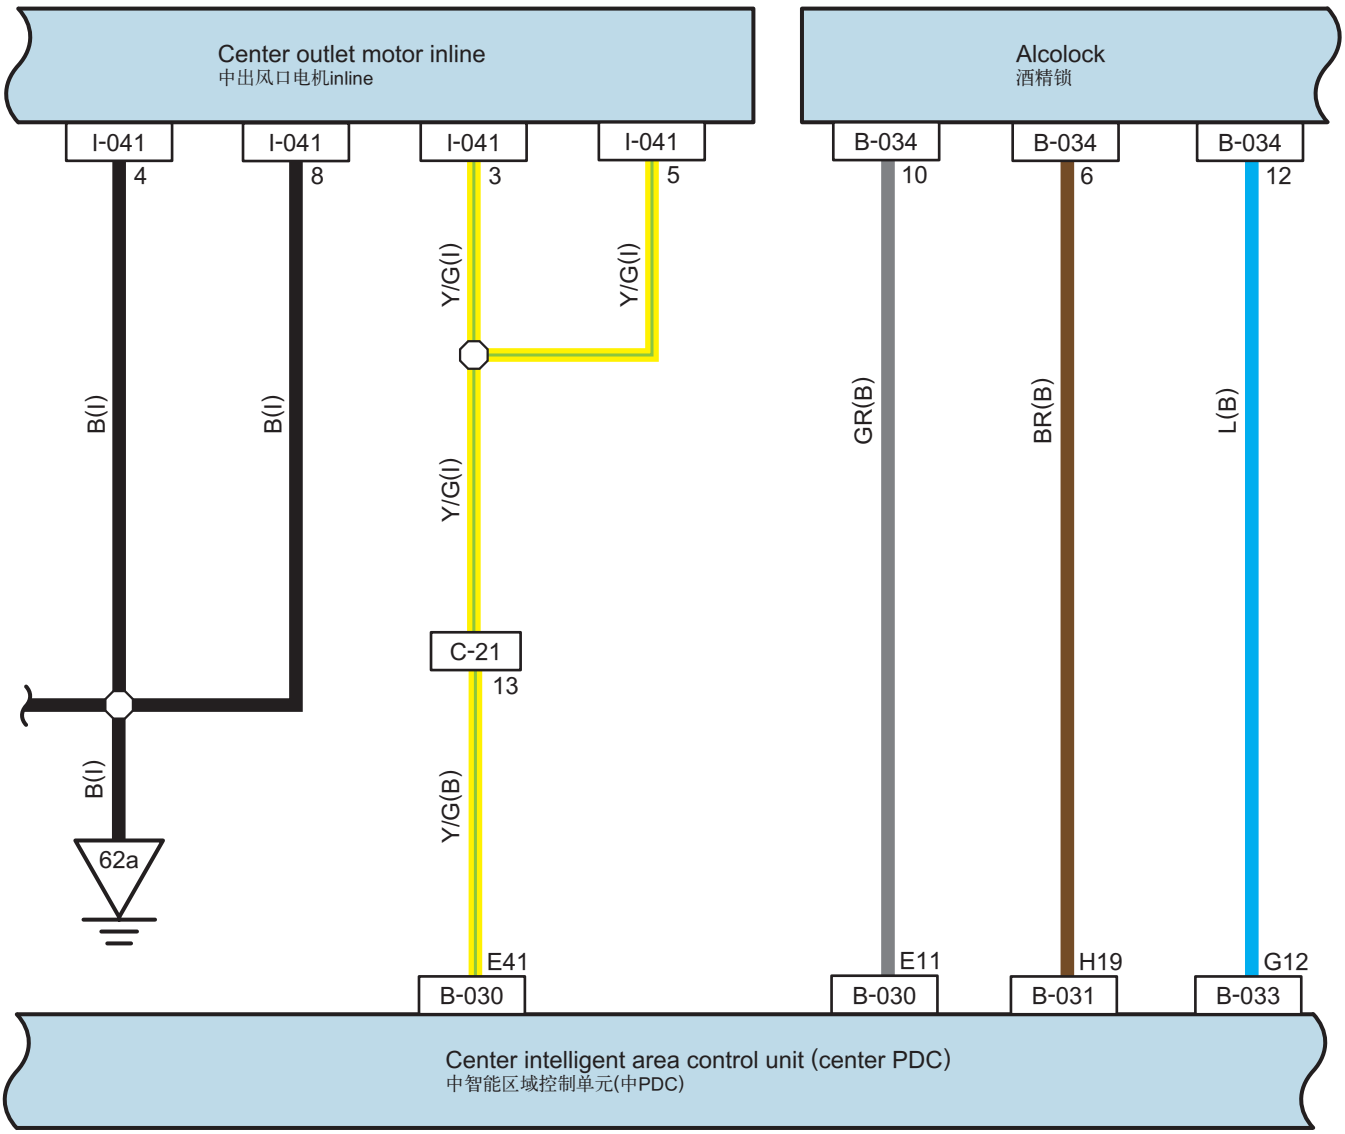

Low configuration
低配
Front passenger seat cushion heater
副驾座椅坐垫加热
Front passenger occupancy sensor
副驾占位传感器
Front passenger occupancy sensor
副驾占位传感器
Z2-009
3
Z2-010
2
Z2-010
1
Z2-010
1
Z2-010
2
W/B(Z2)
W/B(Z2)
V/W(Z2)
V/W(Z2)
W/B(Z2)
W/B(Z2)
C-64
15
C-64
14
C-43
4
C-43
25
W/B(B)
V/W(B)
V/W(B)
W/B(B)
G9
B-033
G9
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

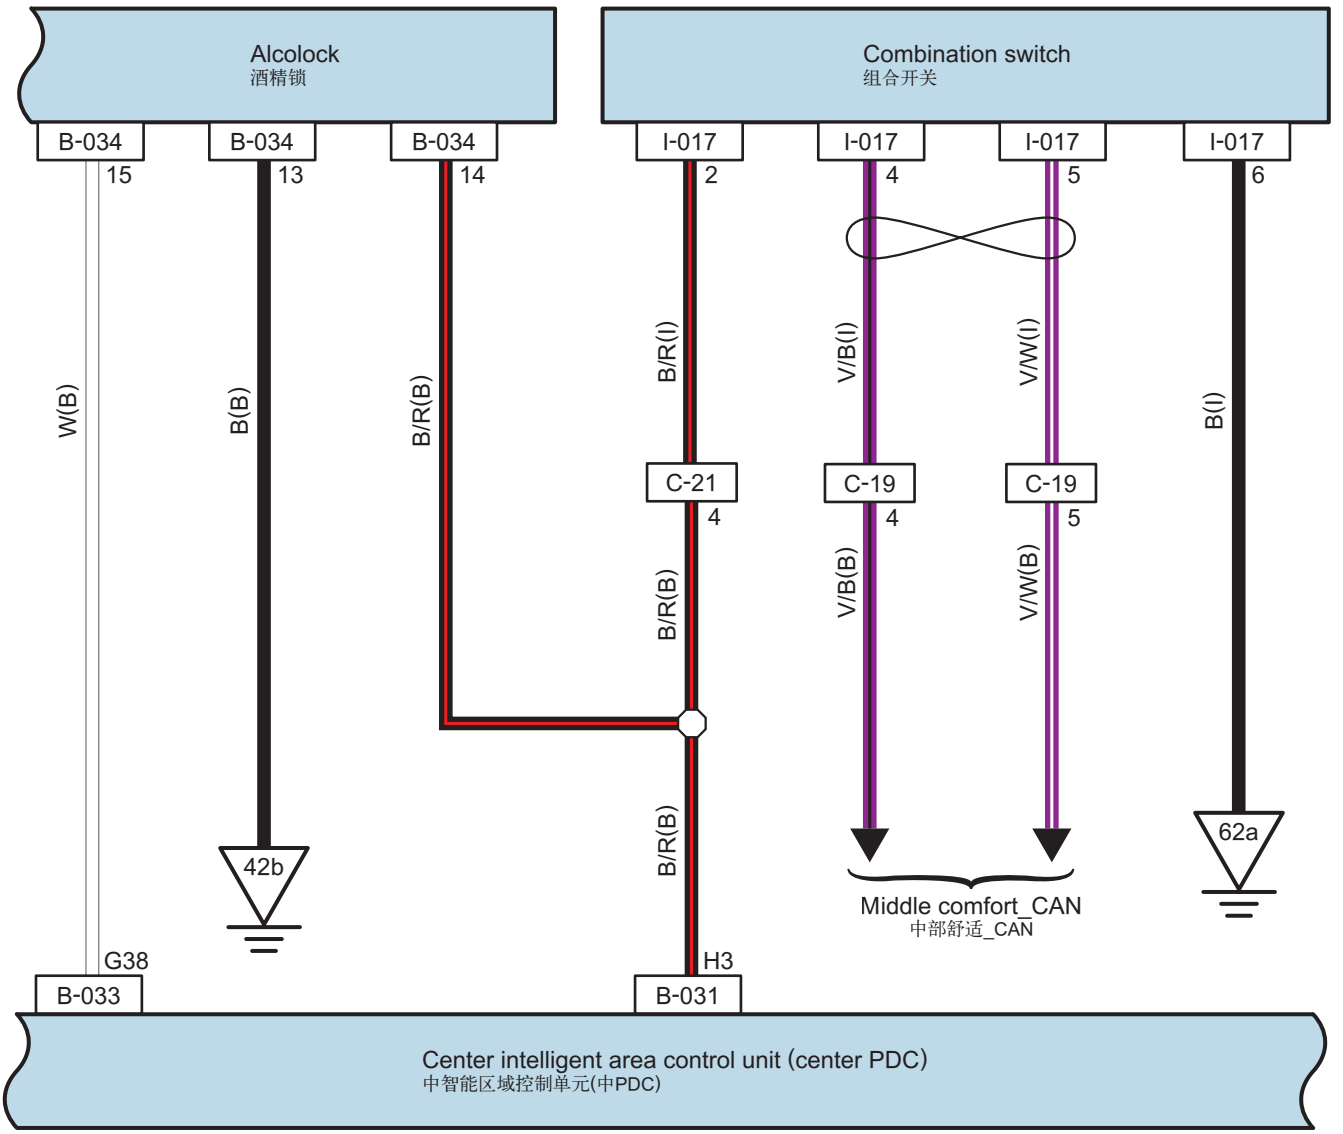

Front passenger
seat cushion heater
副驾座椅坐垫加热
Front passenger
seatback heater
副驾座椅靠背加热
Z2-009
3
Z2-009
2
Z2-009
1
K2-002
1
W/B(Z2)
W/L(Z2)
R/G(Z2)
R/G(K2)
C-45
4
R/G(Z2)
C-43
26
R/G(Z2)
C-43
11
W/L(B)
R/G(B)
F32
E48
B-032
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

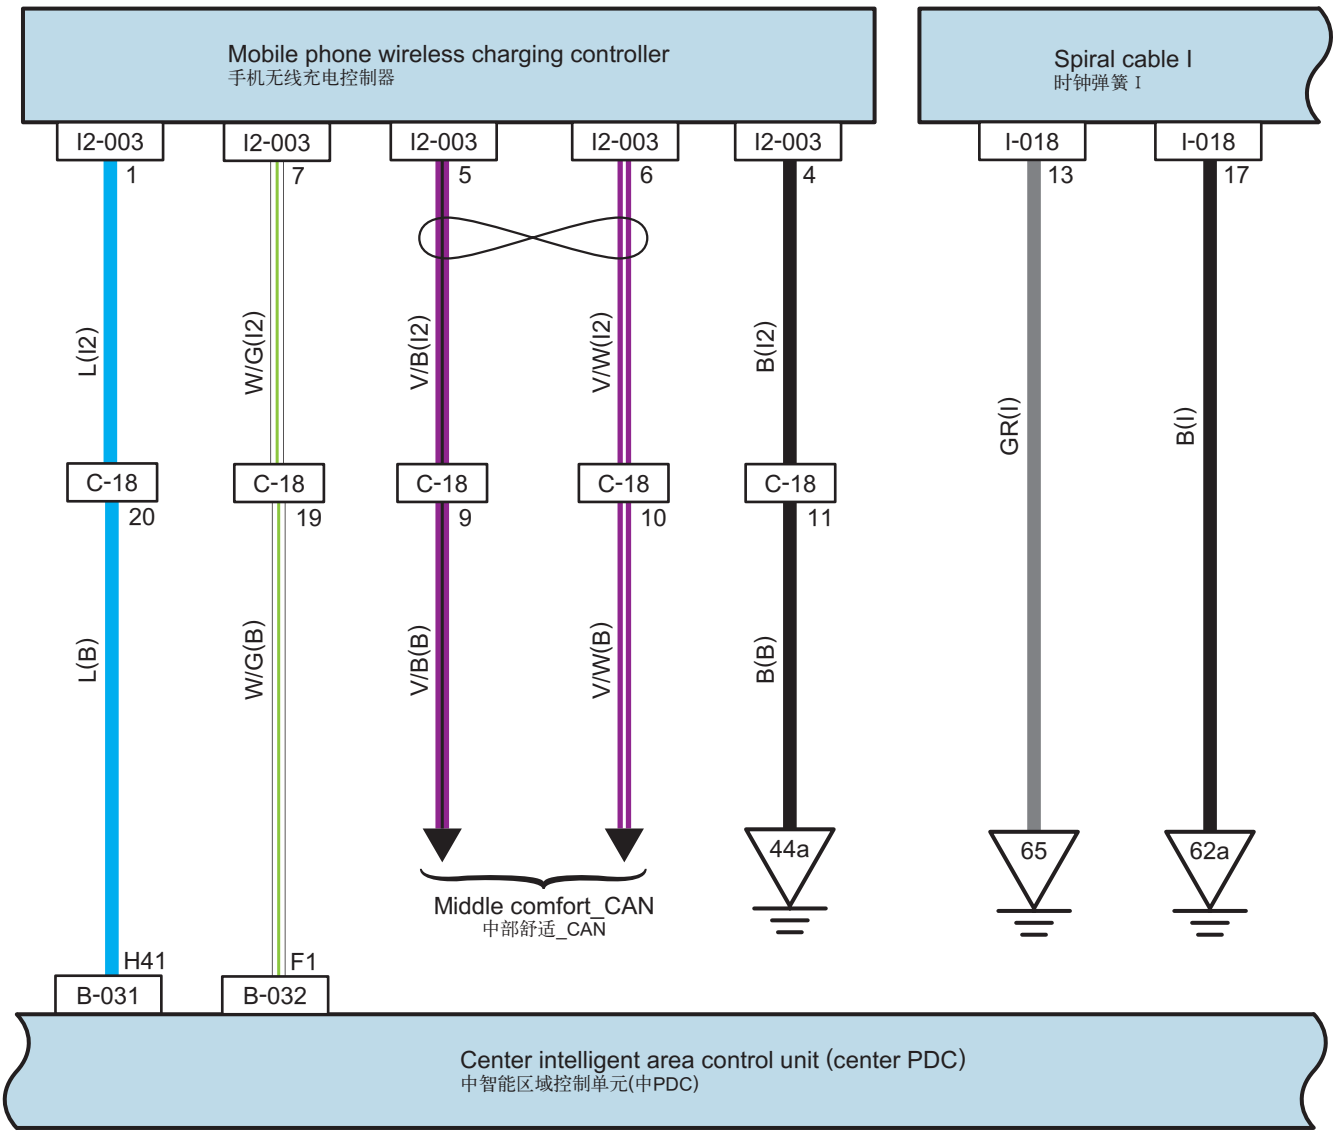

Damper motor filter
风门电机滤波器
Left outlet motor left/right outlet
左侧风口电机左右风口
I-030
2
I-030
1
I-030
3
I-011
2
I-011
4
I-011
1
P/W(I)
P/B(I)
B(I)
G/L(I)
P/B(I)
B(I)
C-21
14
G/L(I)
C-23
15
B(I)
P/W(B)
G/L(B)
62b
H46
B-031
E7
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

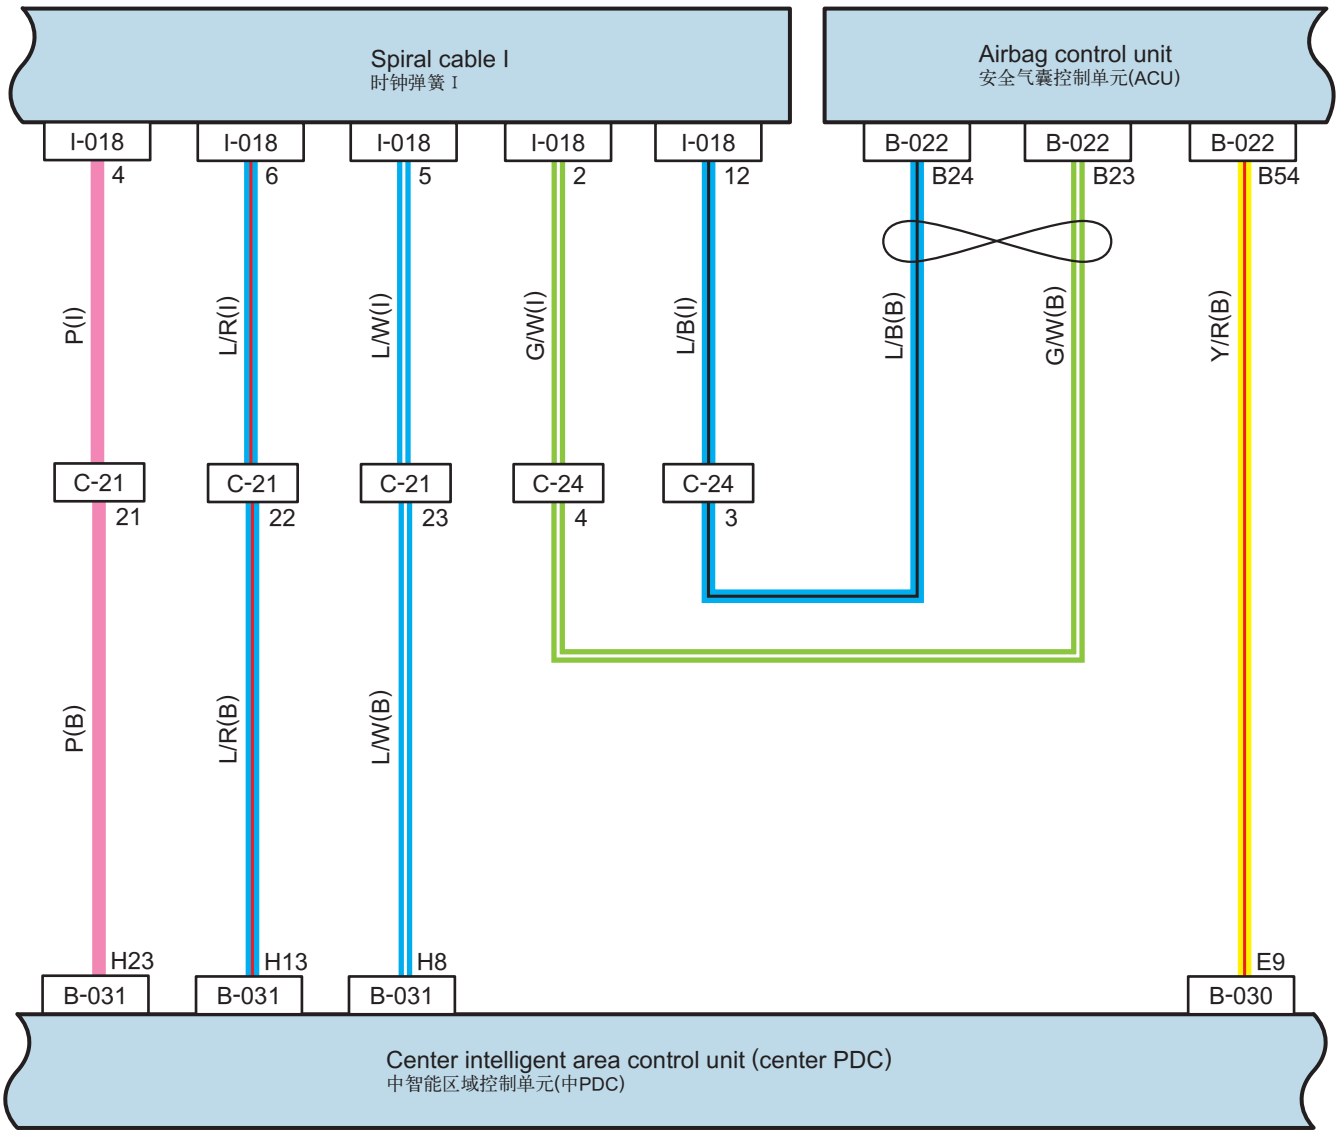

Left outlet motor up/down outlet
左侧风口电机上下风口
I-012
2
I-012
4
I-012
1
G/L(I)
P/B(I)
B(I)
Right outlet motor left/right outlet
右侧风口电机左右风口
I-035
2
I-035
4
I-035
1
G/L(I)
P/B(I)
B(I)
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

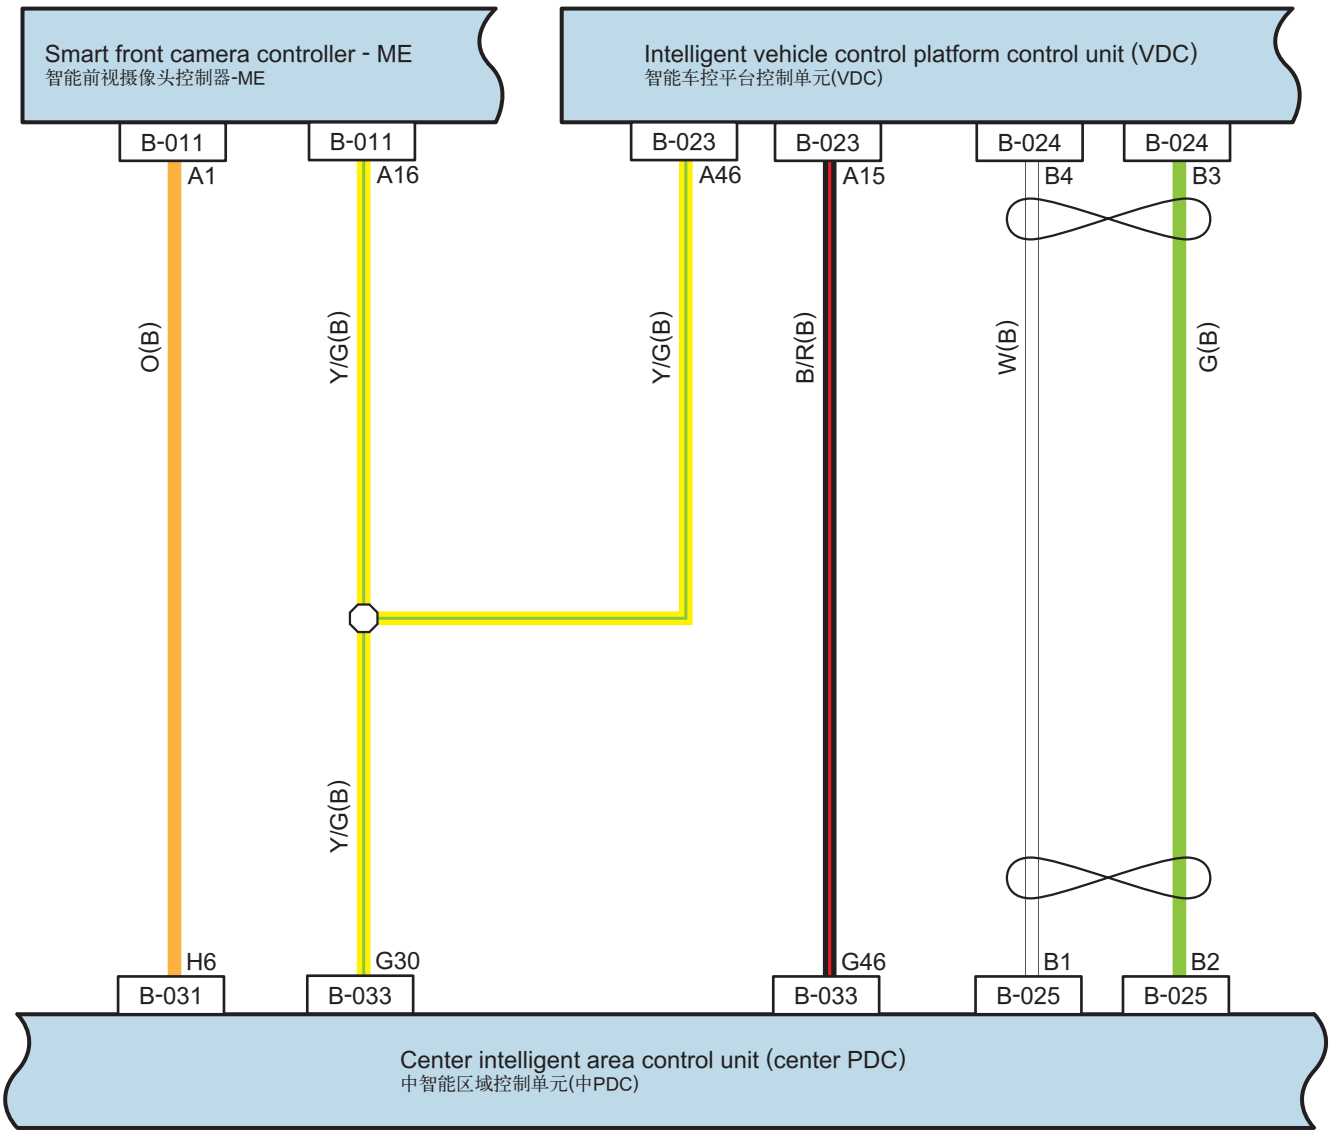

Right outlet motor up/down outlet
右侧风口电机上下风口
I-031
2
I-031
4
I-031
1
G/L(I)
P/B(I)
B(I)
Center outlet motor inline
中出风口电机inline
I-041
7
I-041
6
I-041
2
G/L(I)
P/B(I)
B(I)
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

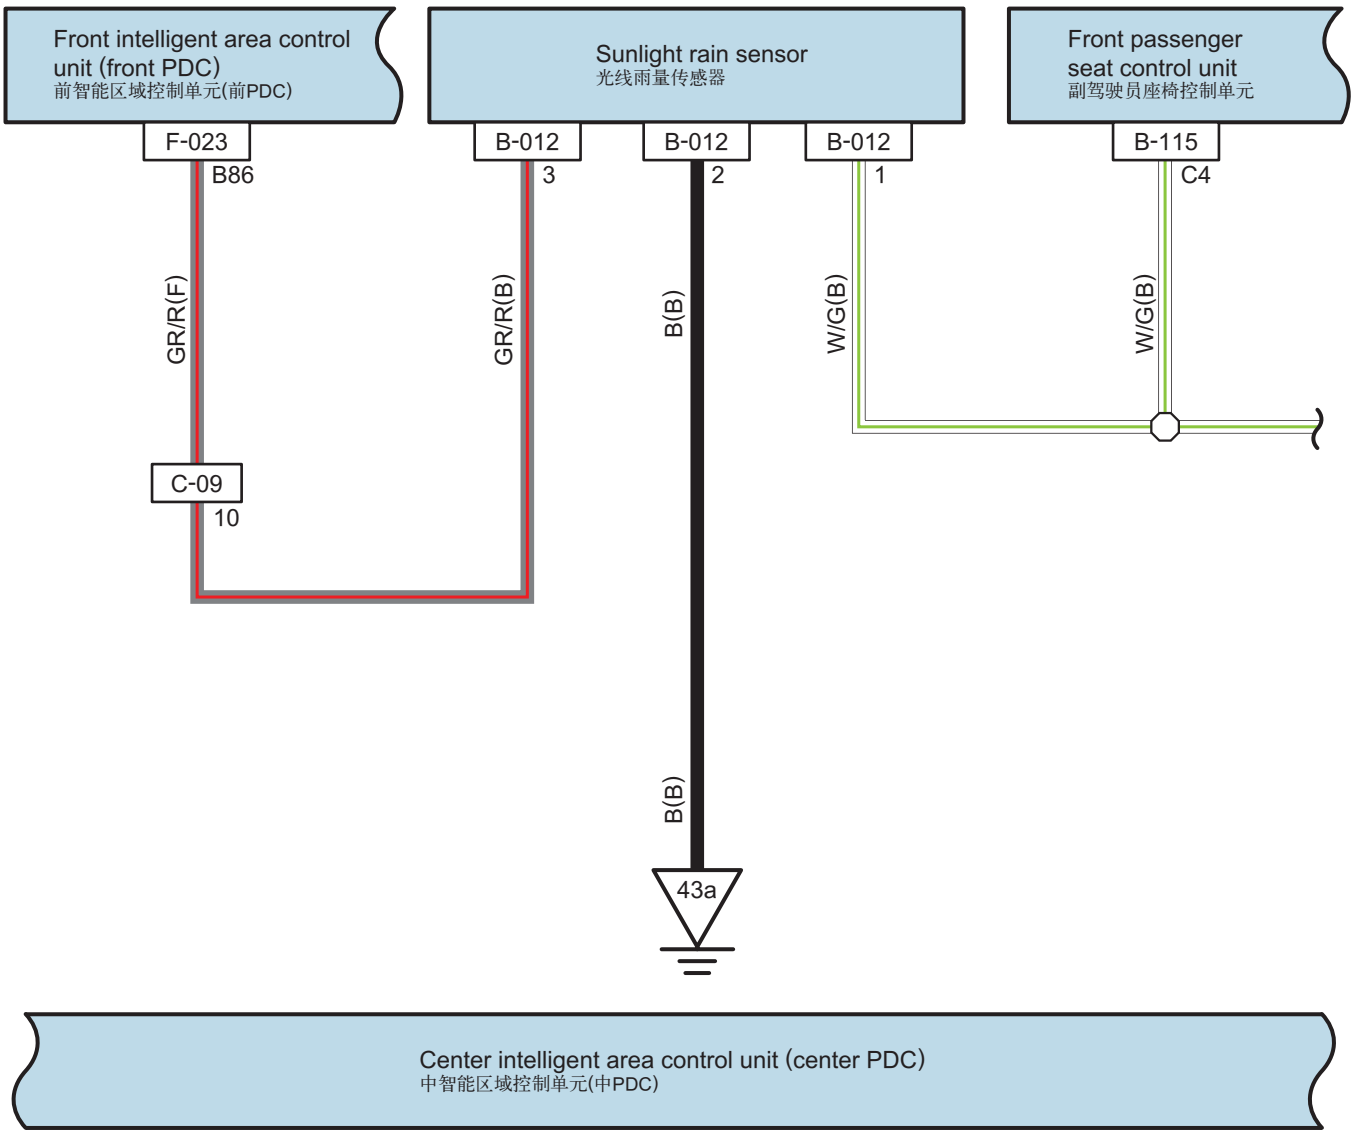

Center outlet motor inline
中出风口电机inline
I-041
4
I-041
8
I-041
3
I-041
5
B(I)
B(I)
Y/G(I)
Y/G(I)
Y/G(I)
C-21
13
B(I)
62a
Y/G(B)
E41
B-030
Alcolock
酒精锁
B-034
10
B-034
6
B-034
12
GR(B)
BR(B)
L(B)
E11
B-030
H19
B-031
G12
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

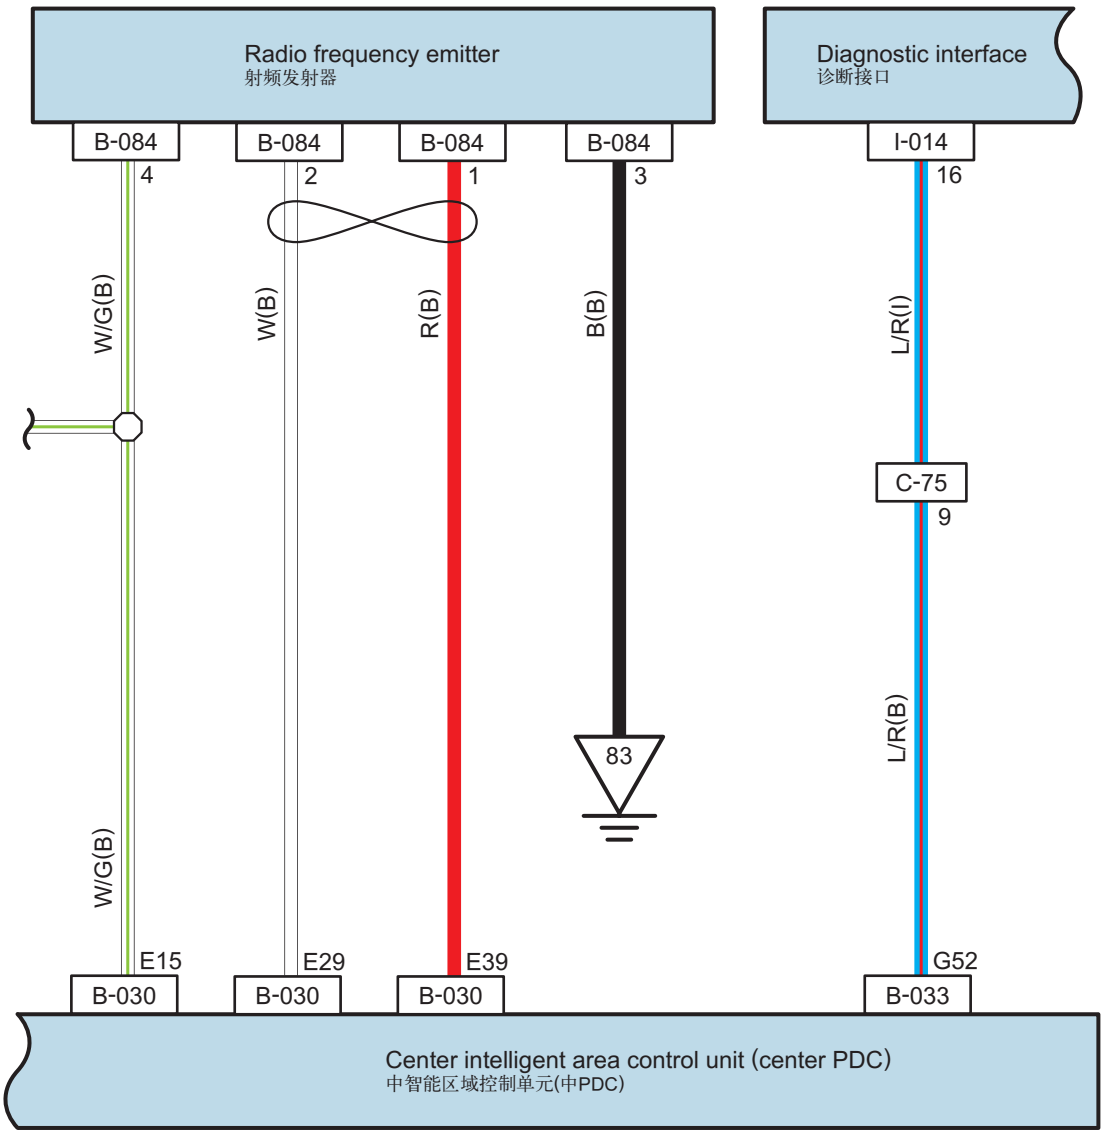

Alcolock
酒精锁
Combination switch
组合开关
B-034
15
B-034
13
B-034
14
I-017
2
I-017
4
I-017
5
I-017
6
W(B)
B(B)
B/R(B)
B/R(I)
V/B(I)
V/W(I)
B(I)
C-21
4
C-19
4
C-19
5
B/R(B)
V/B(B)
V/W(B)
42b
62a
Middle comfort_CAN
中部舒适_CAN
G38
B-033
H3
B-031
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

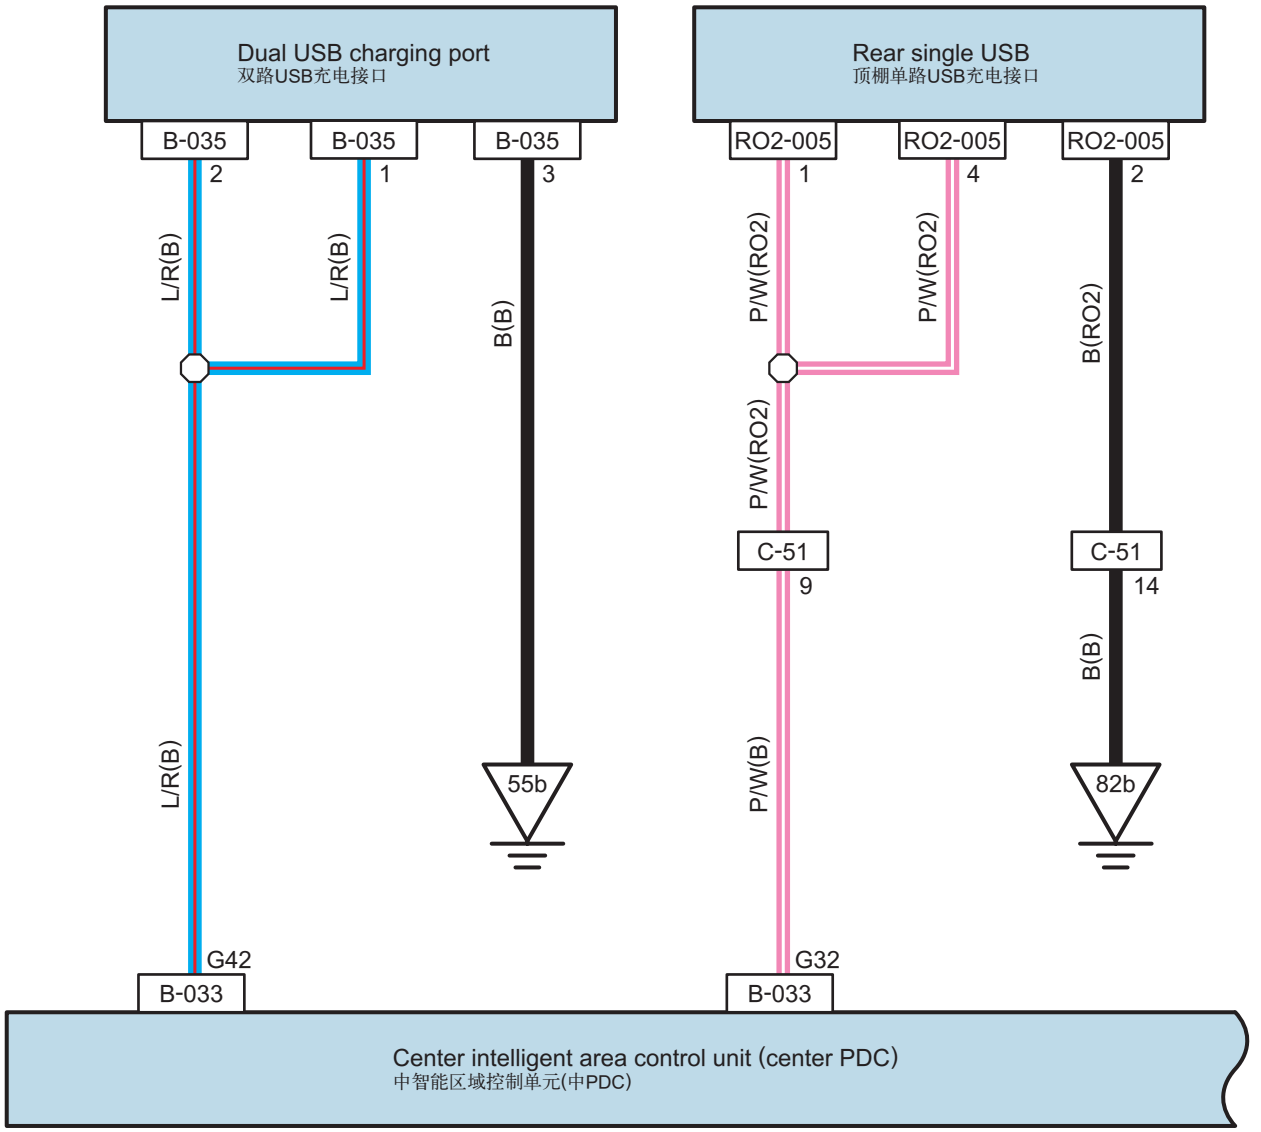

Mobile phone wireless charging controller
手机无线充电控制器
Spiral cable I
时钟弹簧 I
I2-003
1
I2-003
7
I2-003
5
I2-003
6
I2-003
4
I-018
13
I-018
17
L(I2)
W/G(I2)
V/B(I2)
V/W(I2)
B(I2)
GR(I)
B(I)
C-18
20
C-18
19
C-18
9
C-18
10
C-18
11
L(B)
W/G(B)
V/B(B)
V/W(B)
B(B)
44a
65
62a
Middle comfort_CAN
中部舒适_CAN
H41
F1
B-031
B-032
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

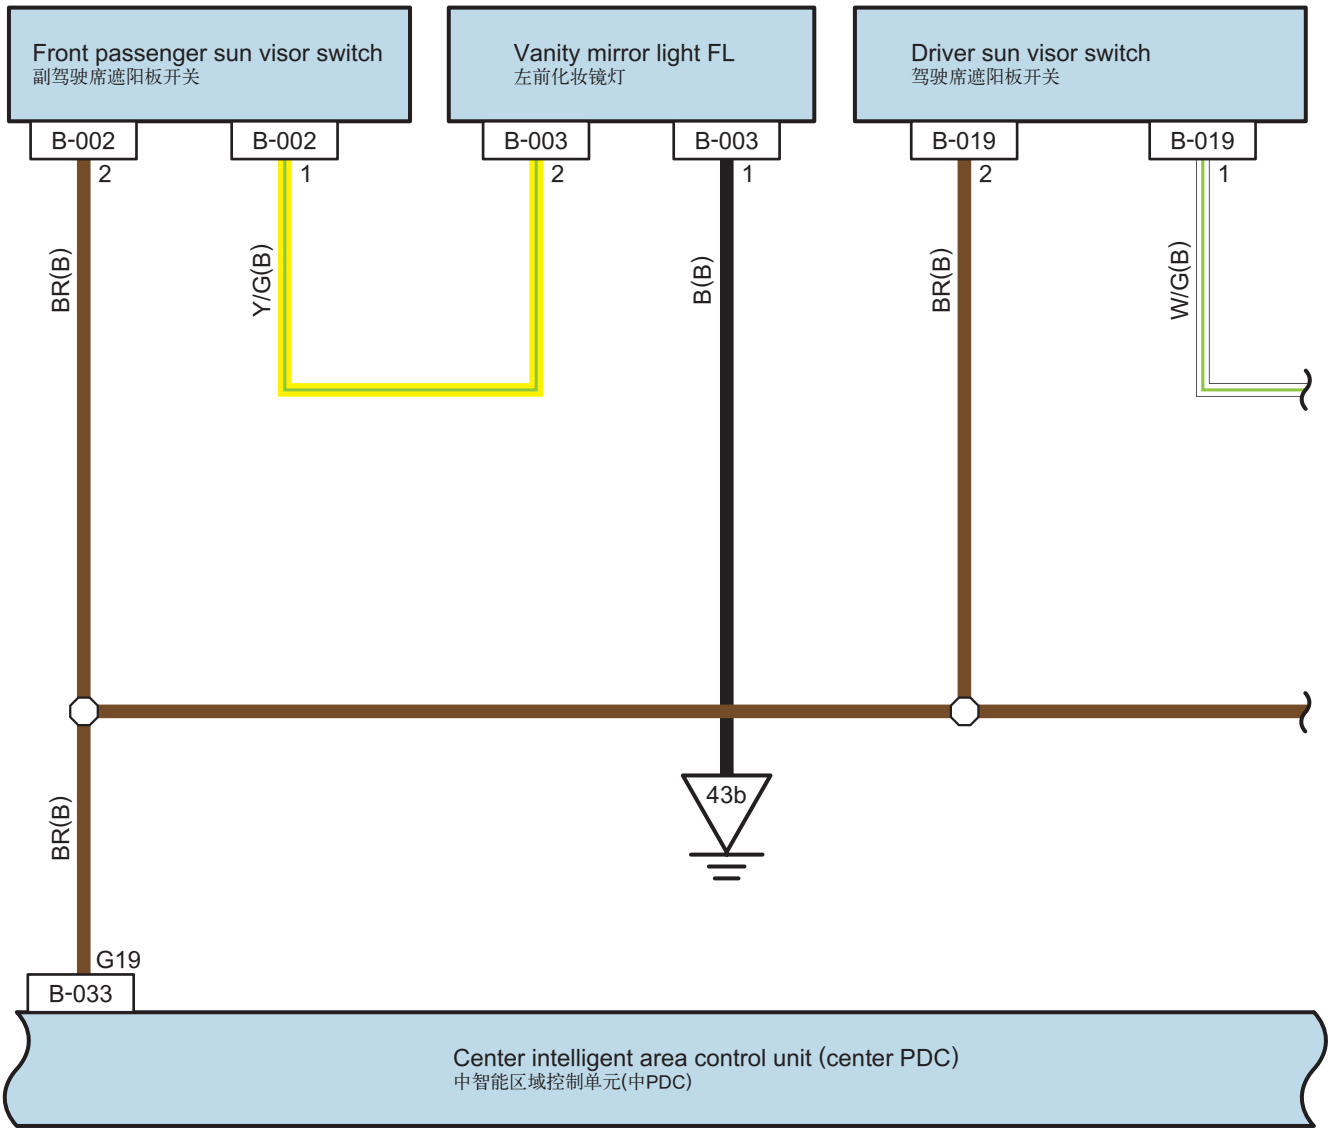

Spiral cable I
时钟弹簧 I
Airbag control unit
安全气囊控制单元(ACU)
I-018
4
I-018
6
I-018
5
I-018
2
I-018
12
B-022
B24
B-022
B23
B-022
B54
P(I)
L/R(I)
L/W(I)
G/W(I)
L/B(I)
L/B(B)
G/W(B)
Y/R(B)
C-21
21
C-21
22
C-21
23
C-24
4
C-24
3
P(B)
L/R(B)
L/W(B)
H23
H13
H8
E9
B-031
B-031
B-031
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

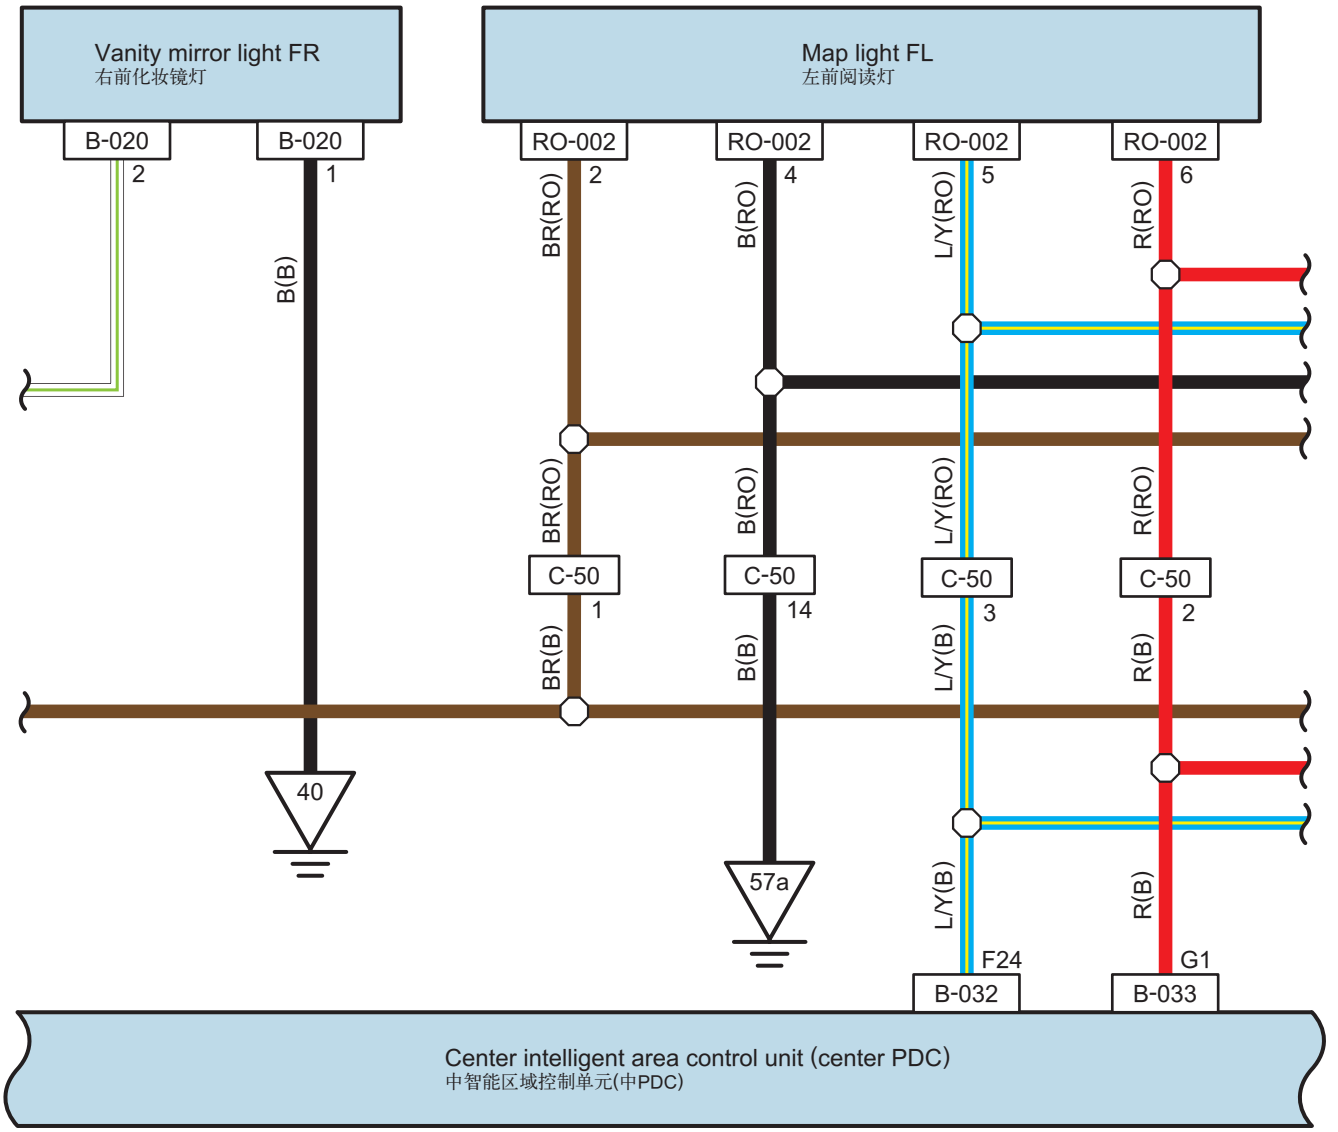

Smart front camera controller - ME
智能前视摄像头控制器-ME
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-011
A1
B-011
A16
B-023
A46
B-023
A15
B-024
B4
B-024
B3
O(B)
Y/G(B)
Y/G(B)
B/R(B)
W(B)
G(B)
Y/G(B)
H6
G30
G46
B1
B2
B-031
B-033
B-033
B-025
B-025
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

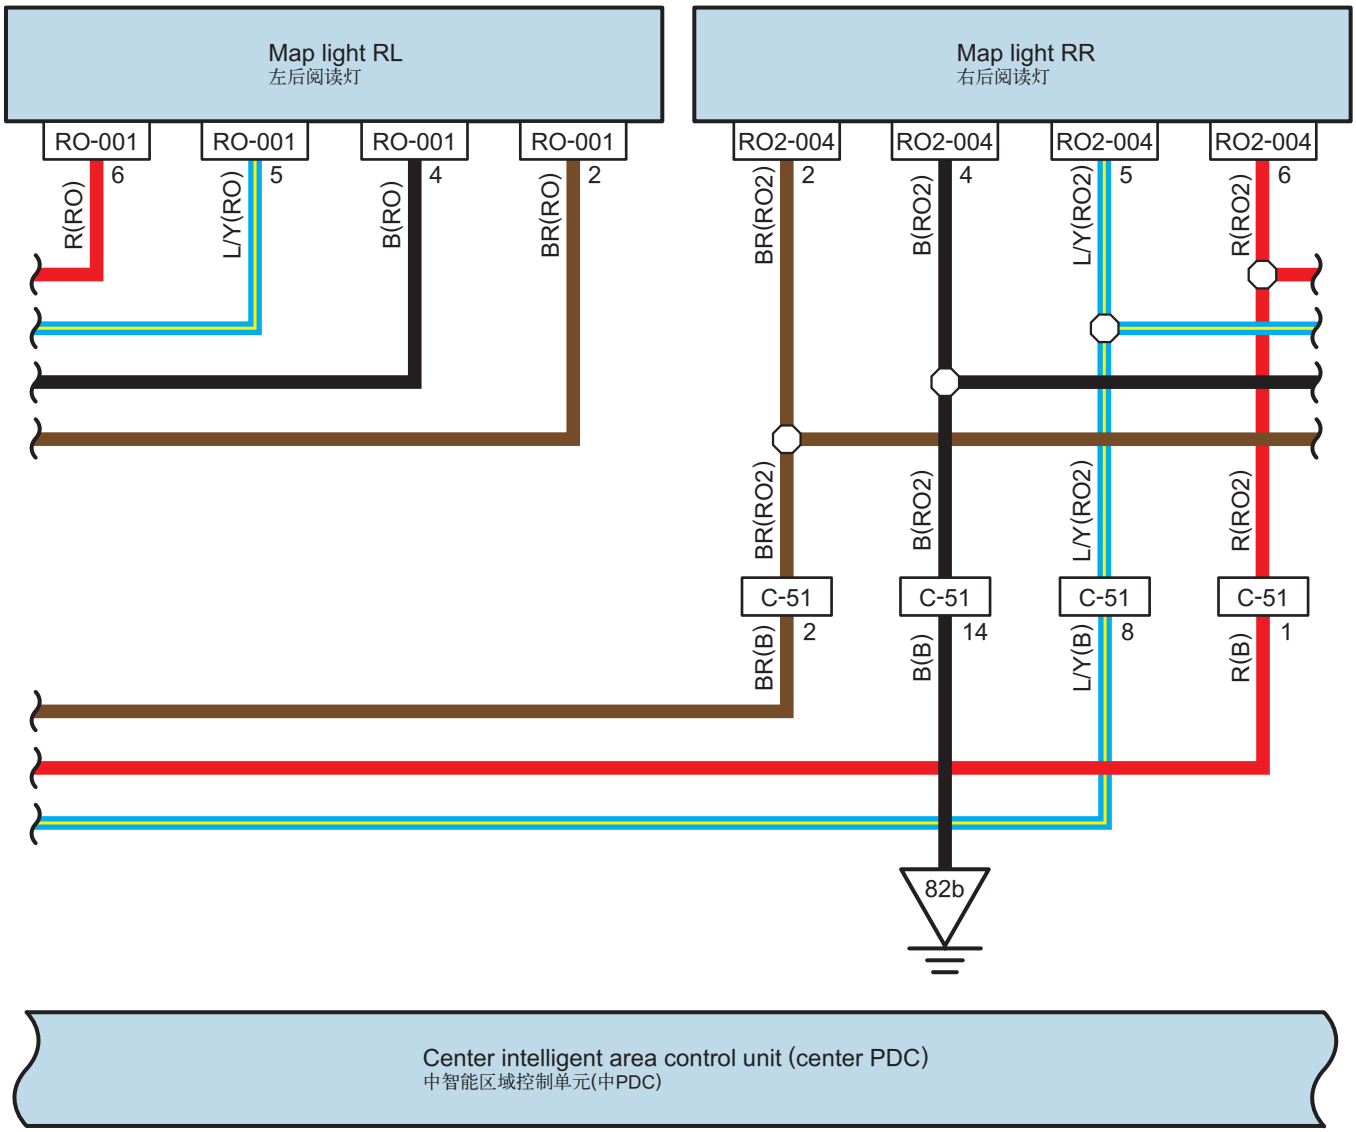

Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
Sunlight rain sensor
光线雨量传感器
Front passenger seat control unit
副驾驶员座椅控制单元
F-023
B86
B-012
3
B-012
2
B-012
1
B-115
C4
GR/R(F)
GR/R(B)
B(B)
W/G(B)
W/G(B)
C-09
10
B(B)
43a
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

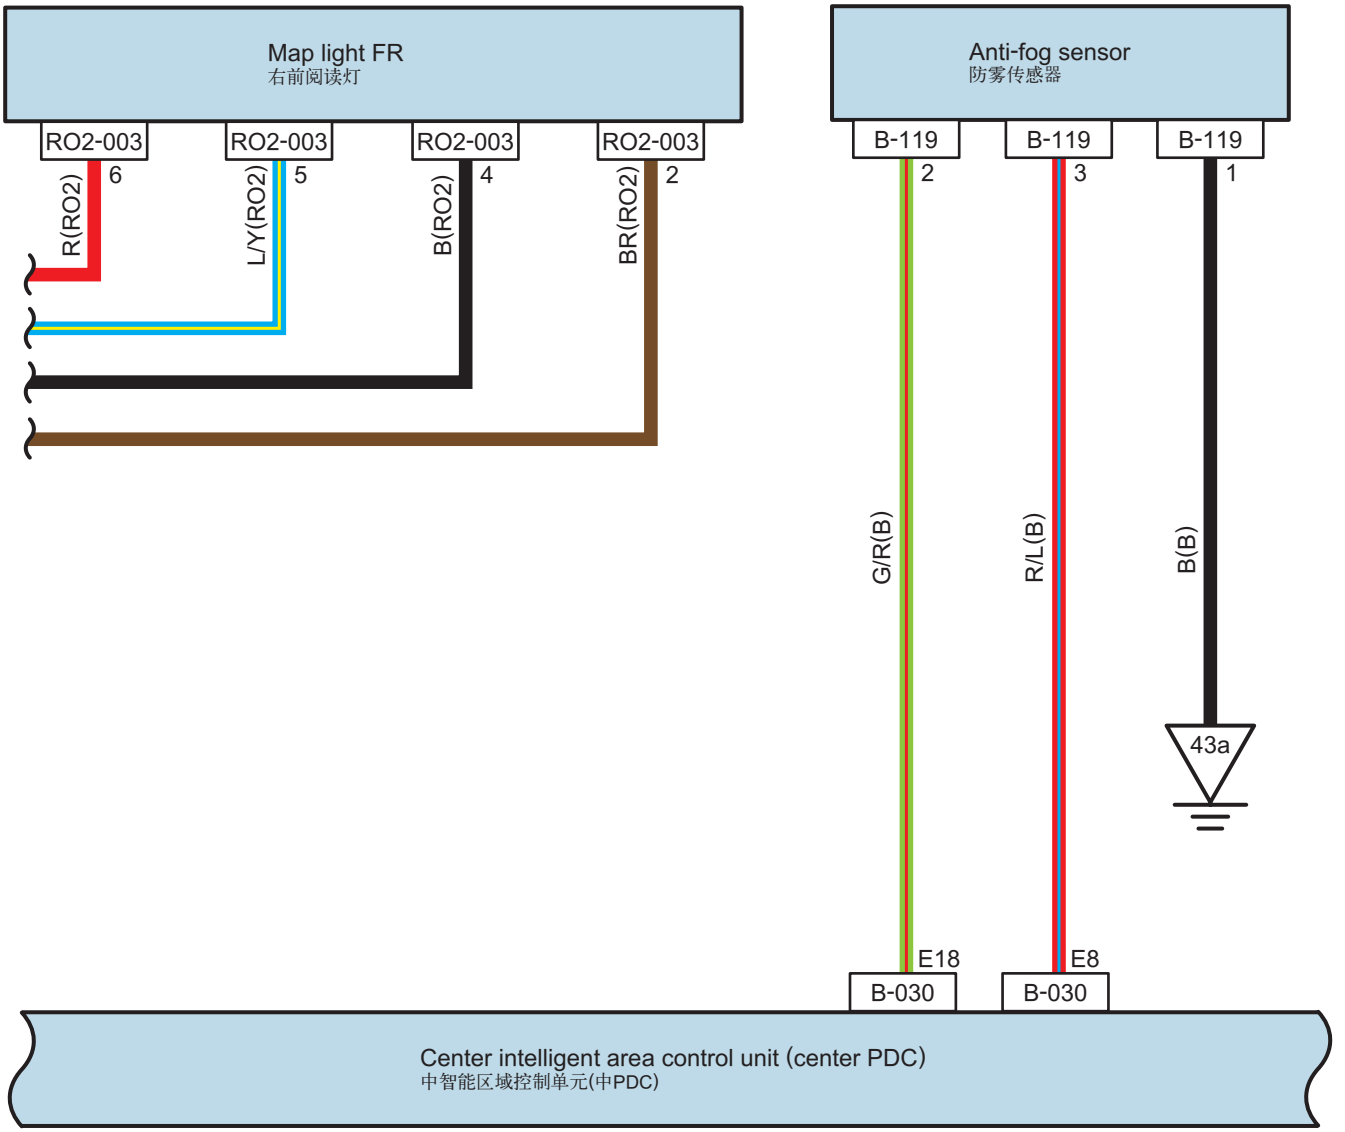

Radio frequency emitter
射频发射器
Diagnostic interface
诊断接口
B-084
4
B-084
2
B-084
1
B-084
3
I-014
16
W/G(B)
W(B)
R(B)
B(B)
L/R(I)
C-75
9
83
W/G(B)
L/R(B)
E15
E29
E39
G52
B-030
B-030
B-030
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

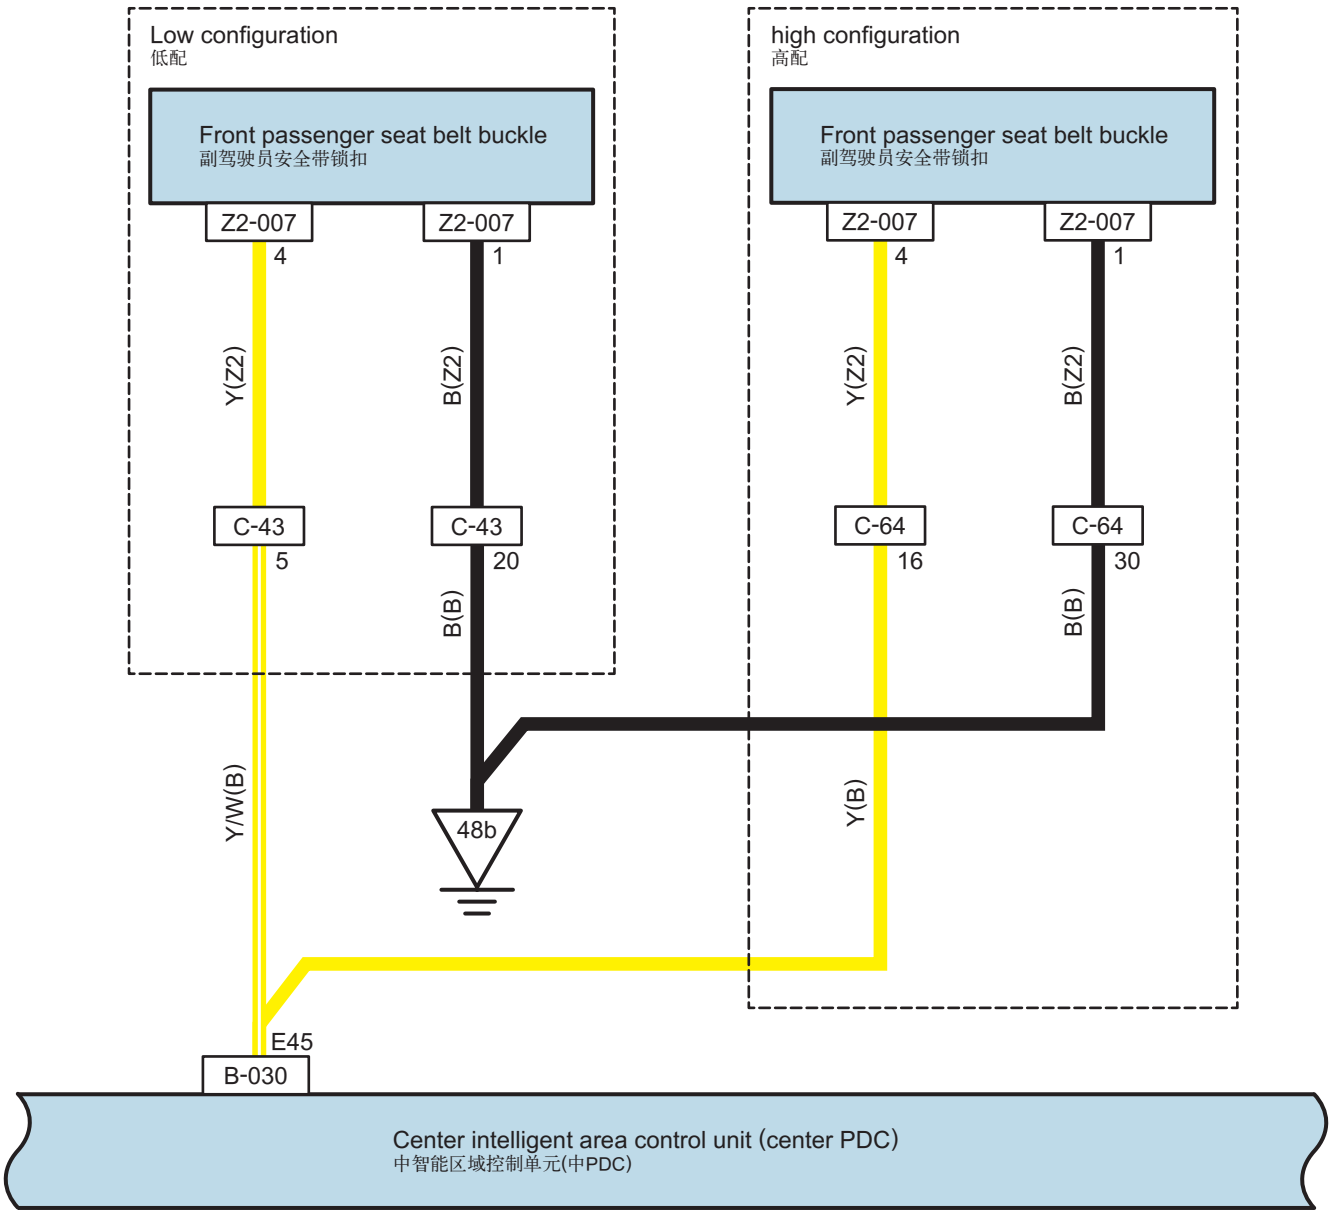

Dual USB charging port
双路USB充电接口
B-035
2
B-035
1
B-035
3
L/R(B)
L/R(B)
B(B)
L/R(B)
55b
G42
B-033
Rear single USB
顶棚单路USB充电接口
RO2-005
1
RO2-005
4
RO2-005
2
P/W(RO2)
P/W(RO2)
B(RO2)
P/W(RO2)
C-51
9
C-51
14
B(B)
P/W(B)
82b
G32
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

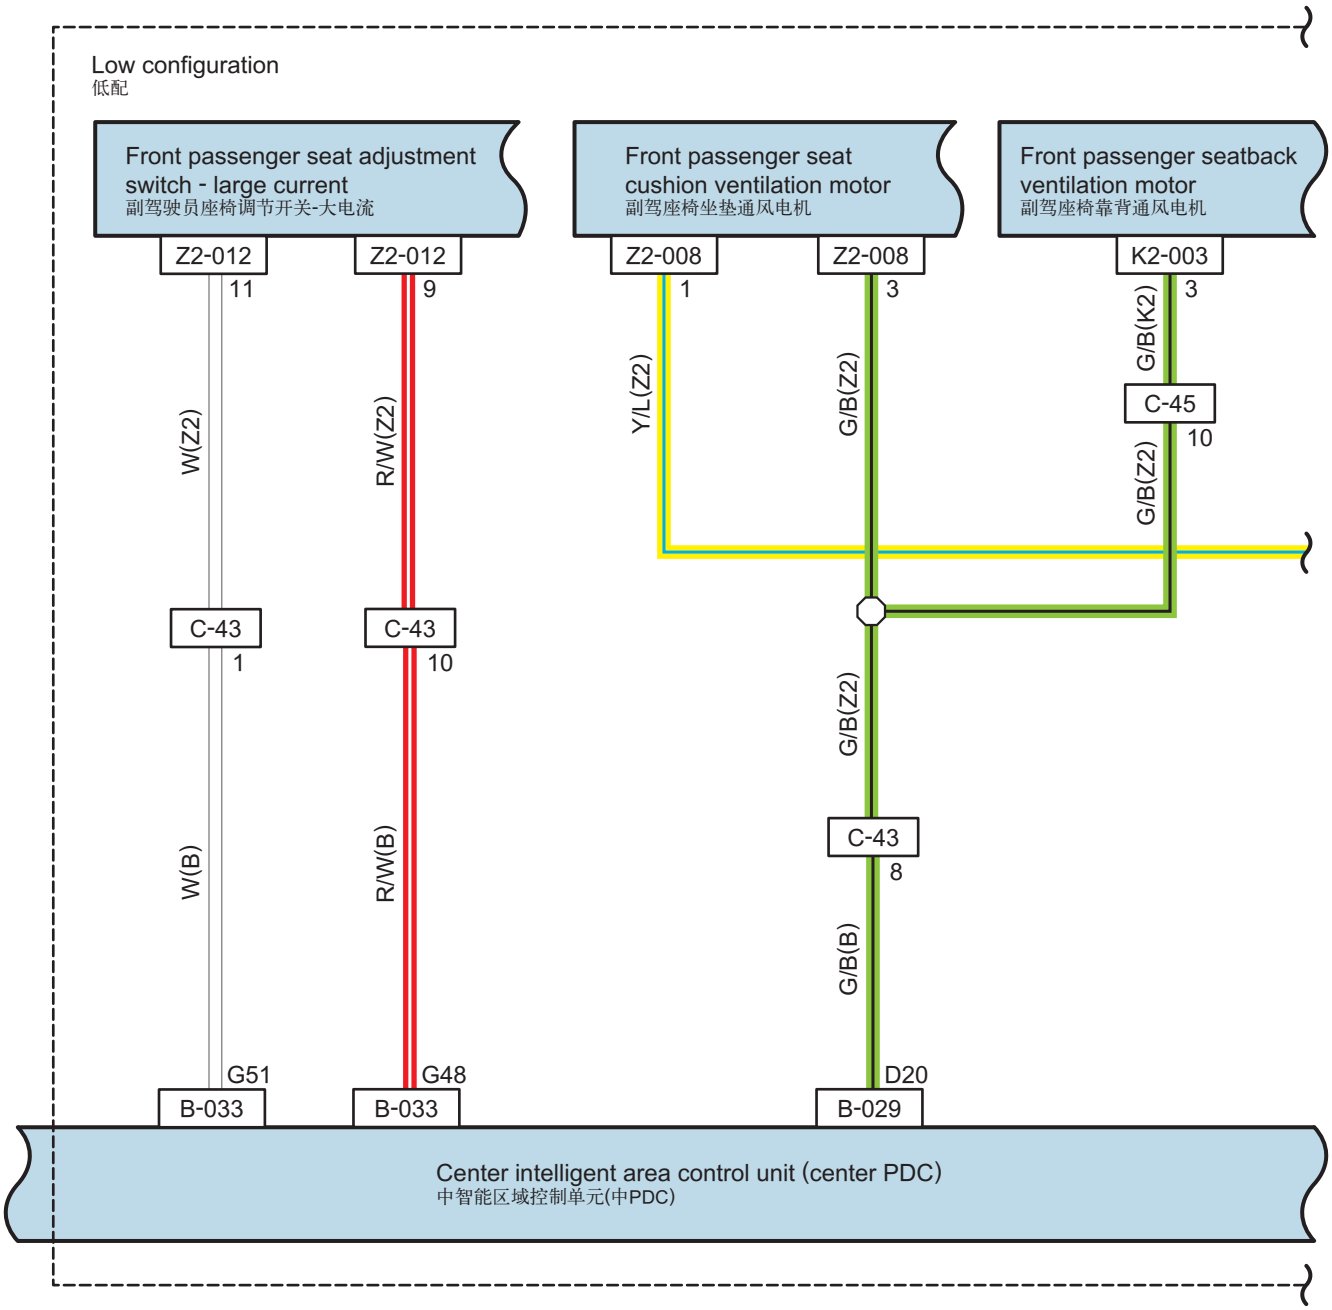

Front passenger sun visor switch
副驾驶席遮阳板开关
Vanity mirror light FL
左前化妆镜灯
Driver sun visor switch
驾驶席遮阳板开关
B-002
2
B-002
1
B-003
2
B-003
1
B-019
2
B-019
1
BR(B)
Y/G(B)
B(B)
BR(B)
W/G(B)
43b
BR(B)
G19
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

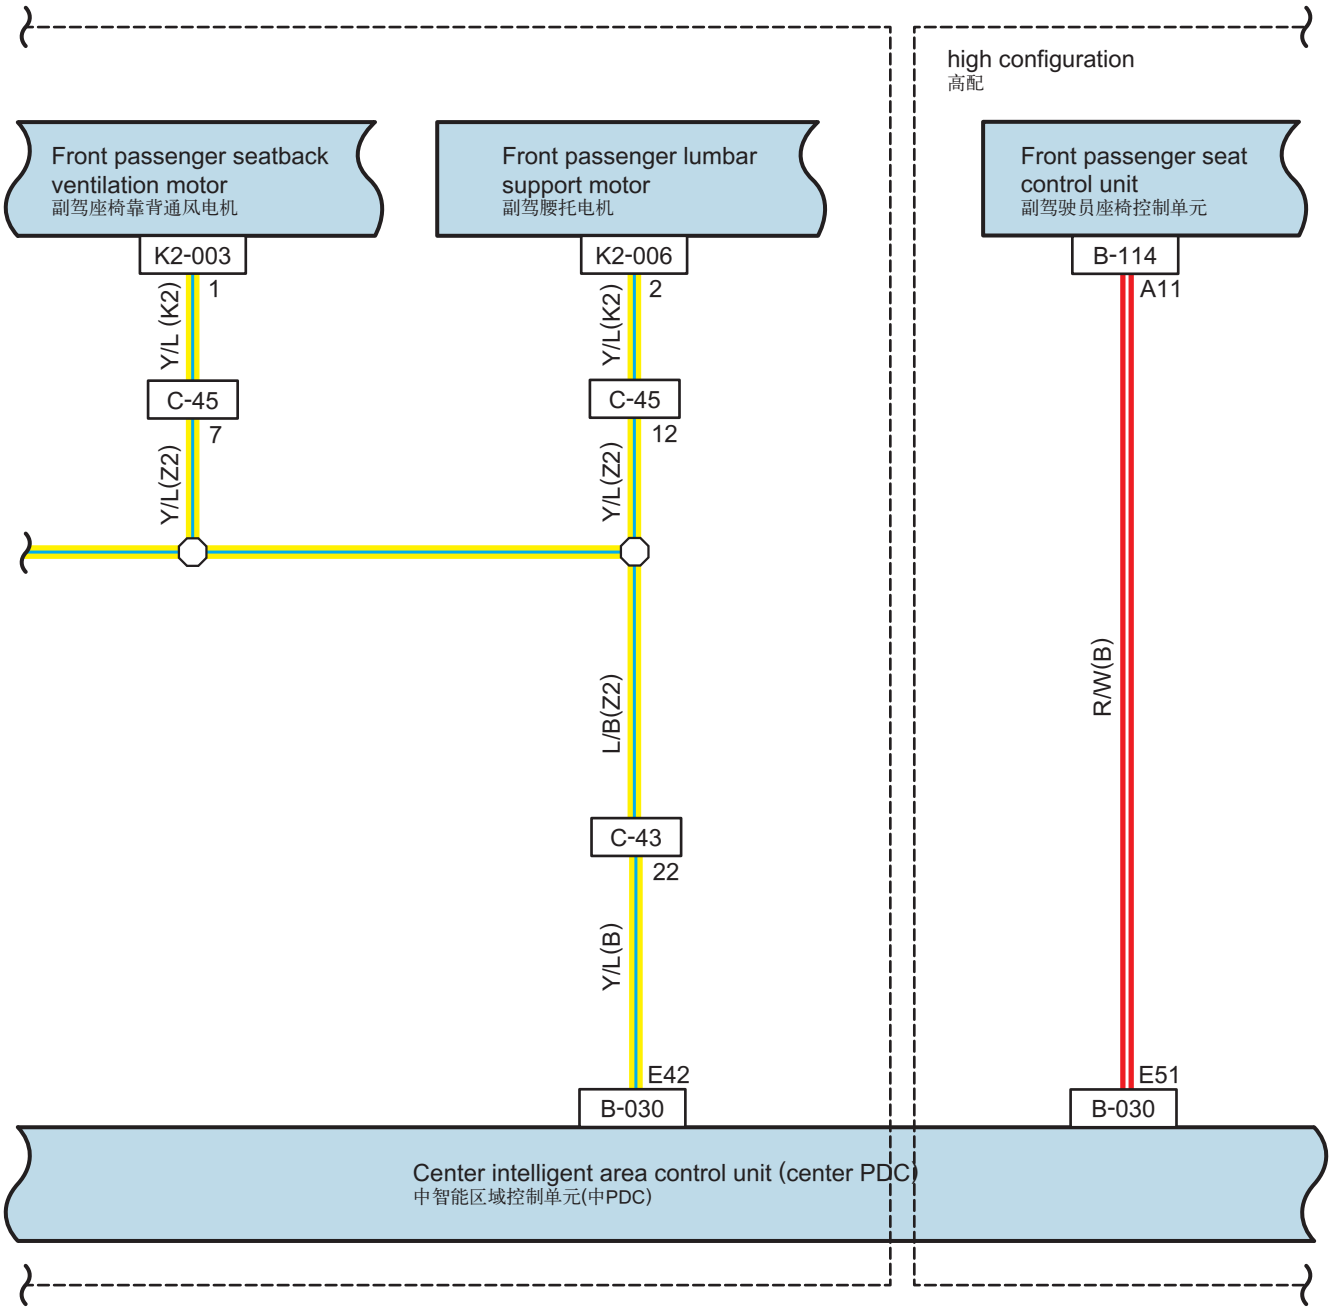

Vanity mirror light FR
右前化妆镜灯
Map light FL
左前阅读灯
B-020
2
B-020
1
B(B)
RO-002
2
RO-002
4
RO-002
5
RO-002
6
BR(RO)
B(RO)
L/Y(RO)
R(RO)
C-50
1
C-50
14
C-50
3
C-50
2
BR(B)
B(B)
L/Y(B)
R(B)
40
57a
F24
G1
B-032
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

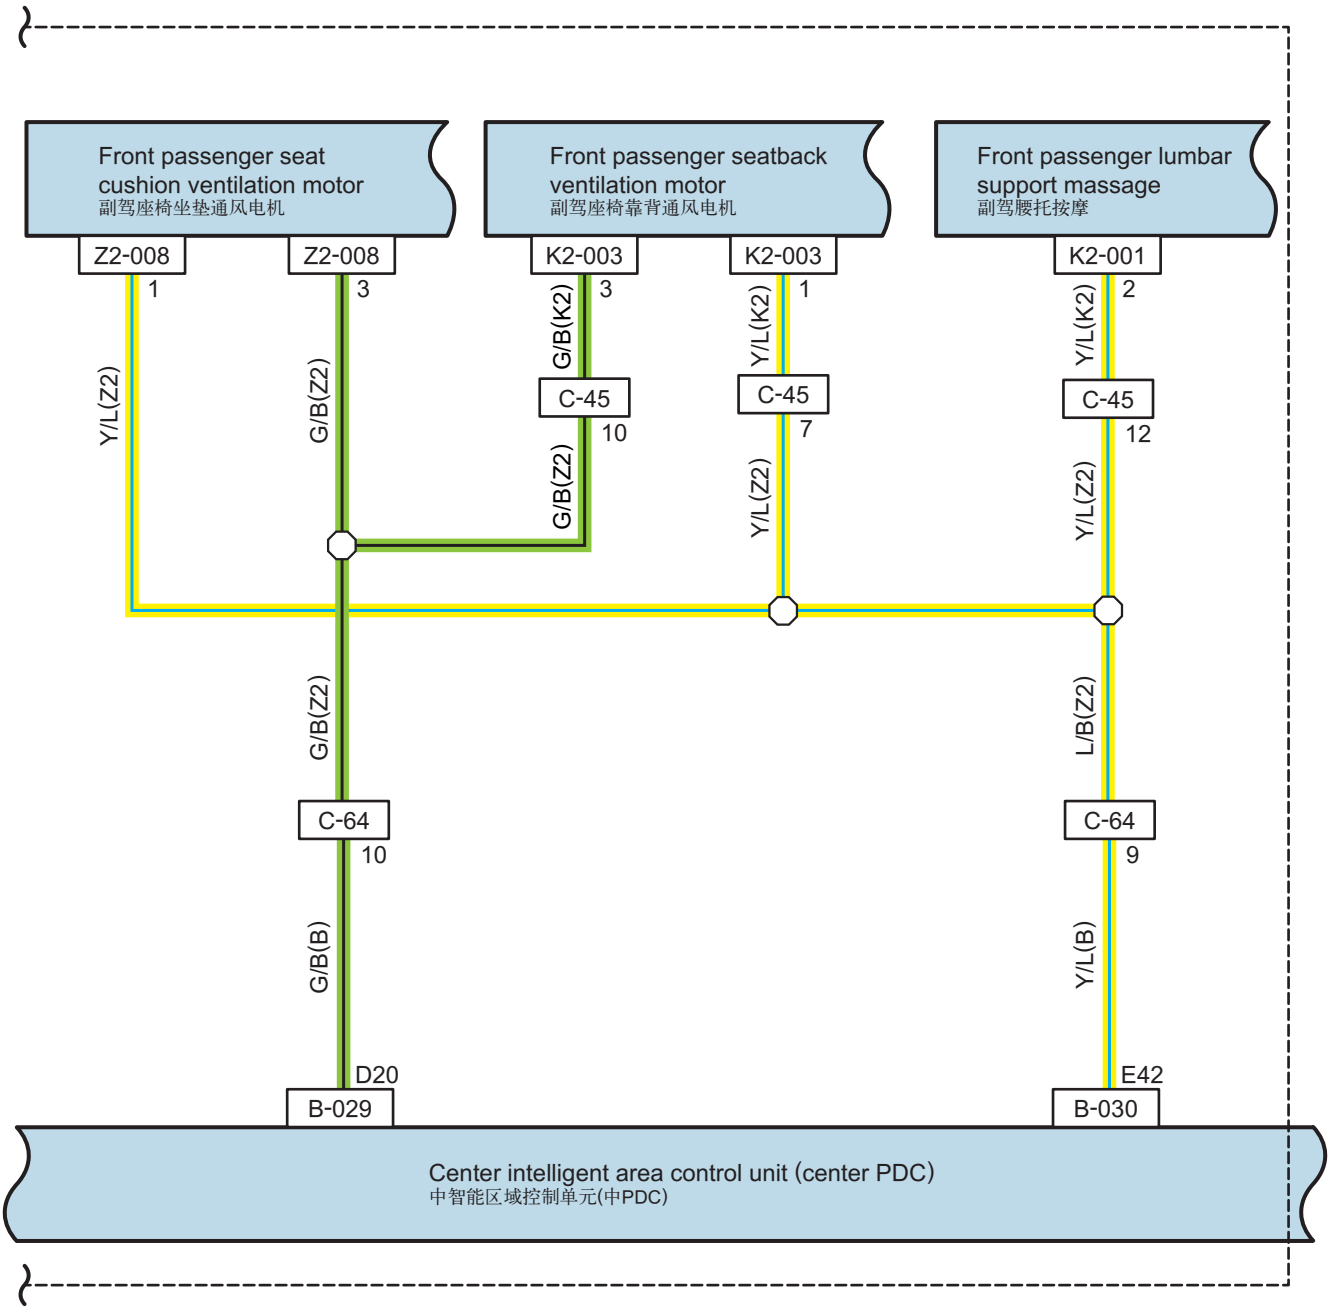

Map light RL
左后阅读灯
Map light RR
右后阅读灯
RO-001
RO-001
RO-001
RO-001
6
5
4
2
R(RO)
L/Y(RO)
B(RO)
BR(RO)
RO2-004
RO2-004
RO2-004
RO2-004
2
4
5
6
BR(RO2)
B(RO2)
L/Y(RO2)
R(RO2)
C-51
C-51
C-51
C-51
2
14
8
1
BR(B)
B(B)
L/Y(B)
R(B)
82b
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

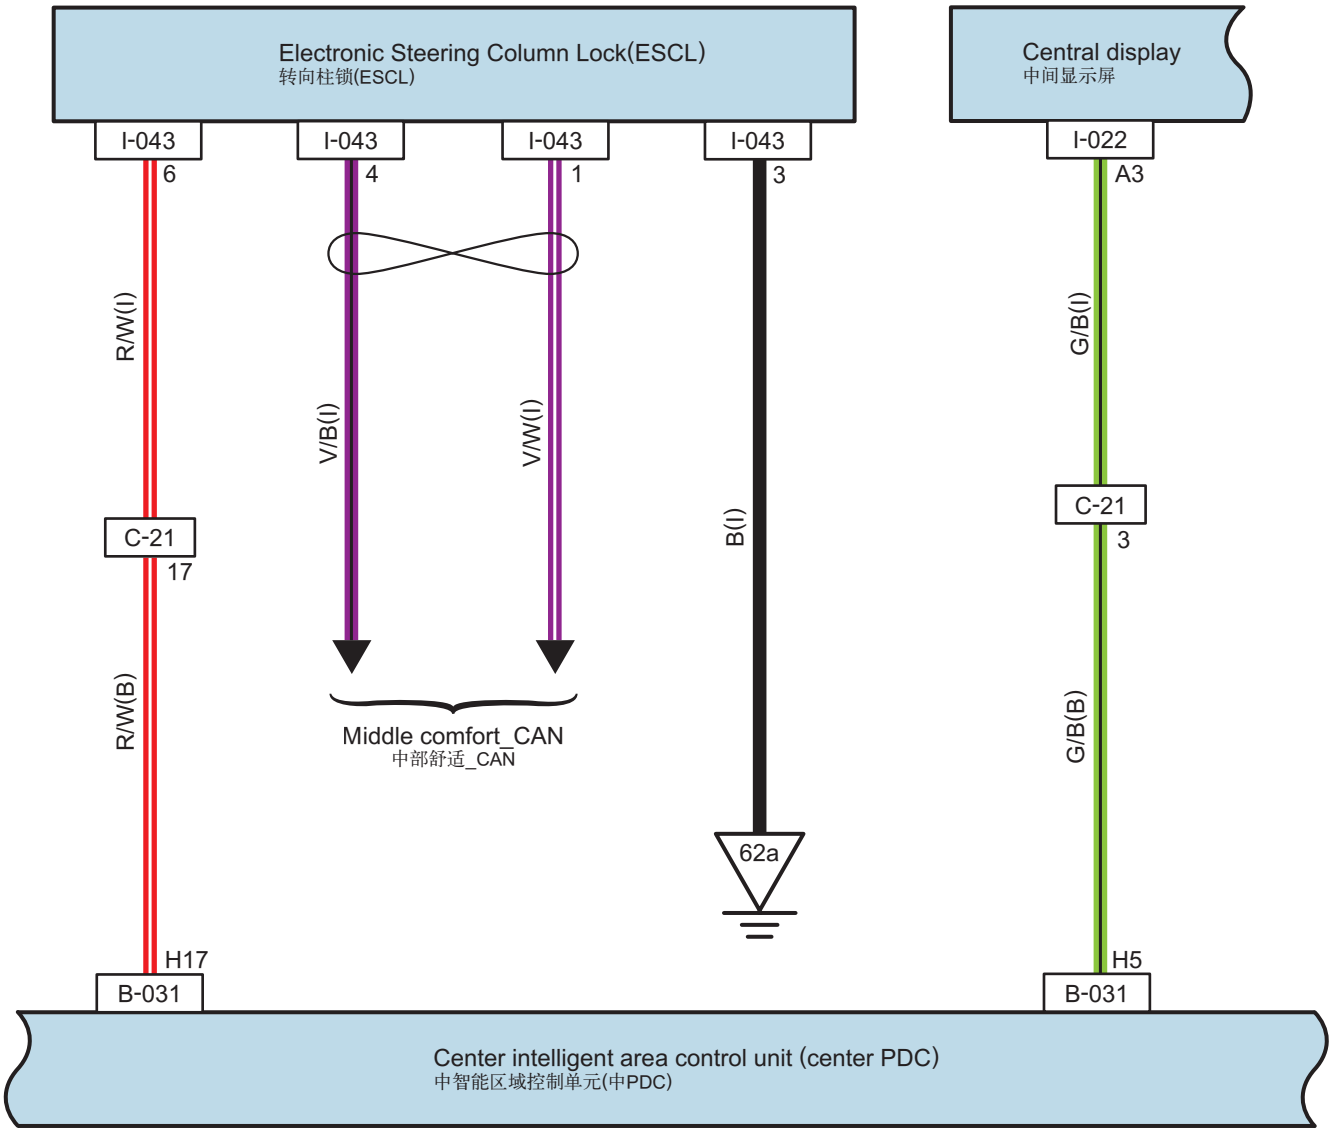

Map light FR
右前阅读灯
RO2-003
RO2-003
RO2-003
RO2-003
6
5
4
2
R(RO2)
L/Y(RO2)
B(RO2)
BR(RO2)
Anti-fog sensor
防雾传感器
B-119
B-119
B-119
2
3
1
G/R(B)
R/L(B)
B(B)
43a
E18
E8
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

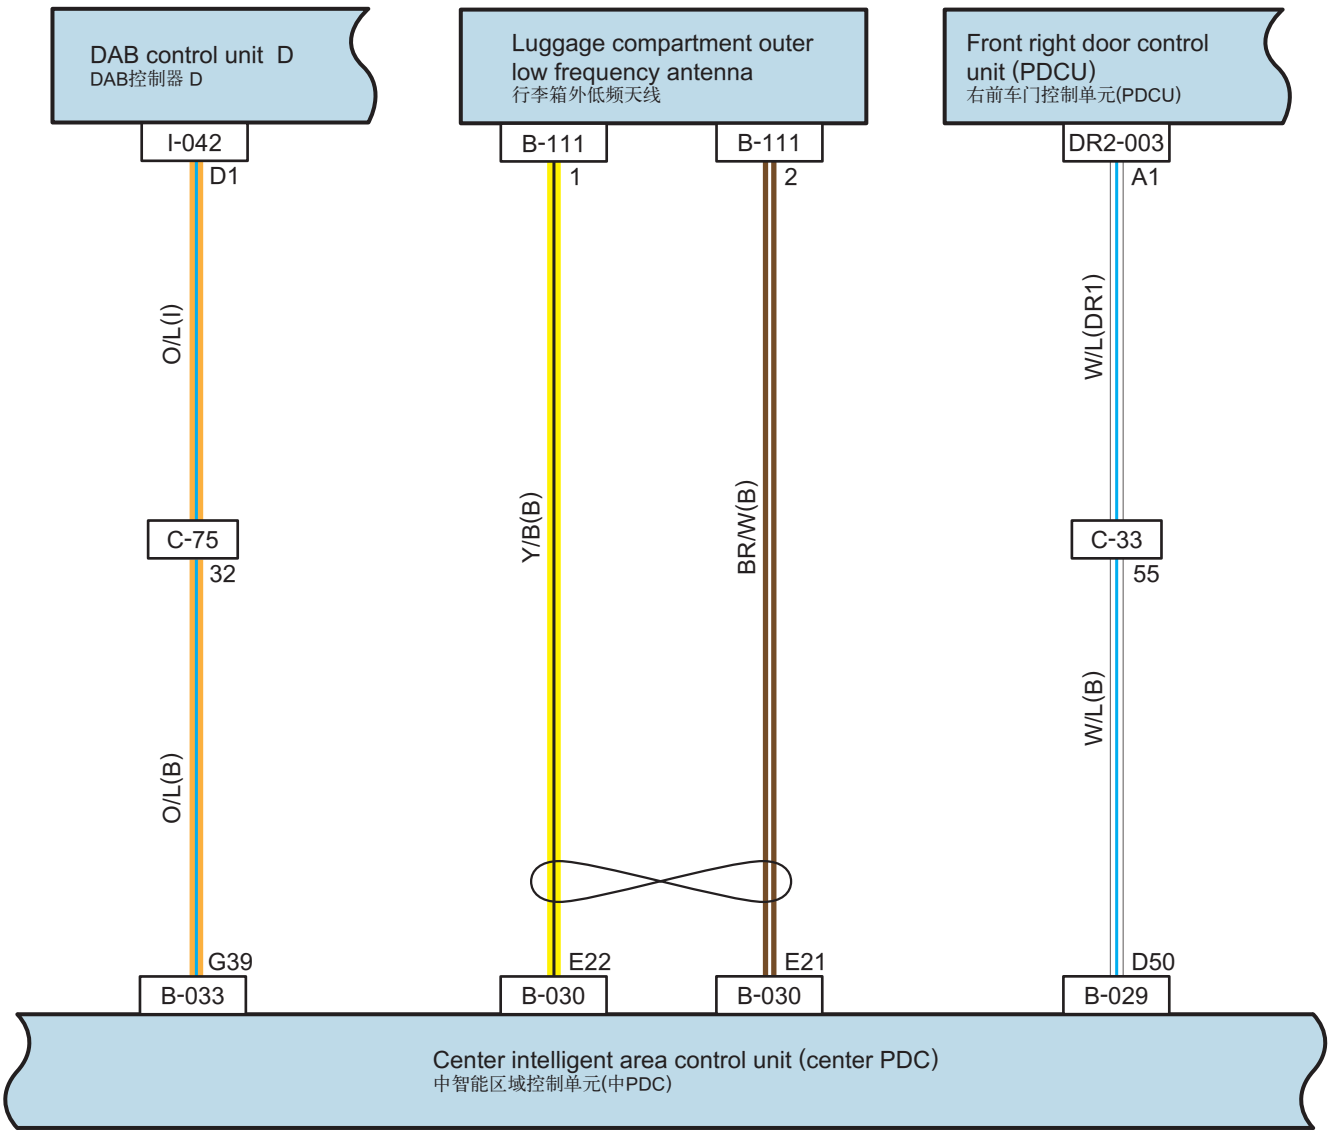

Low configuration
低配
Front passenger seat belt buckle
副驾驶员安全带锁扣
Z2-007
4
Z2-007
1
Y(Z2)
B(Z2)
C-43
5
C-43
20
B(B)
Y/W(B)
48b
high configuration
高配
Front passenger seat belt buckle
副驾驶员安全带锁扣
Z2-007
4
Z2-007
1
Y(Z2)
B(Z2)
C-64
16
C-64
30
B(B)
Y(B)
E45
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

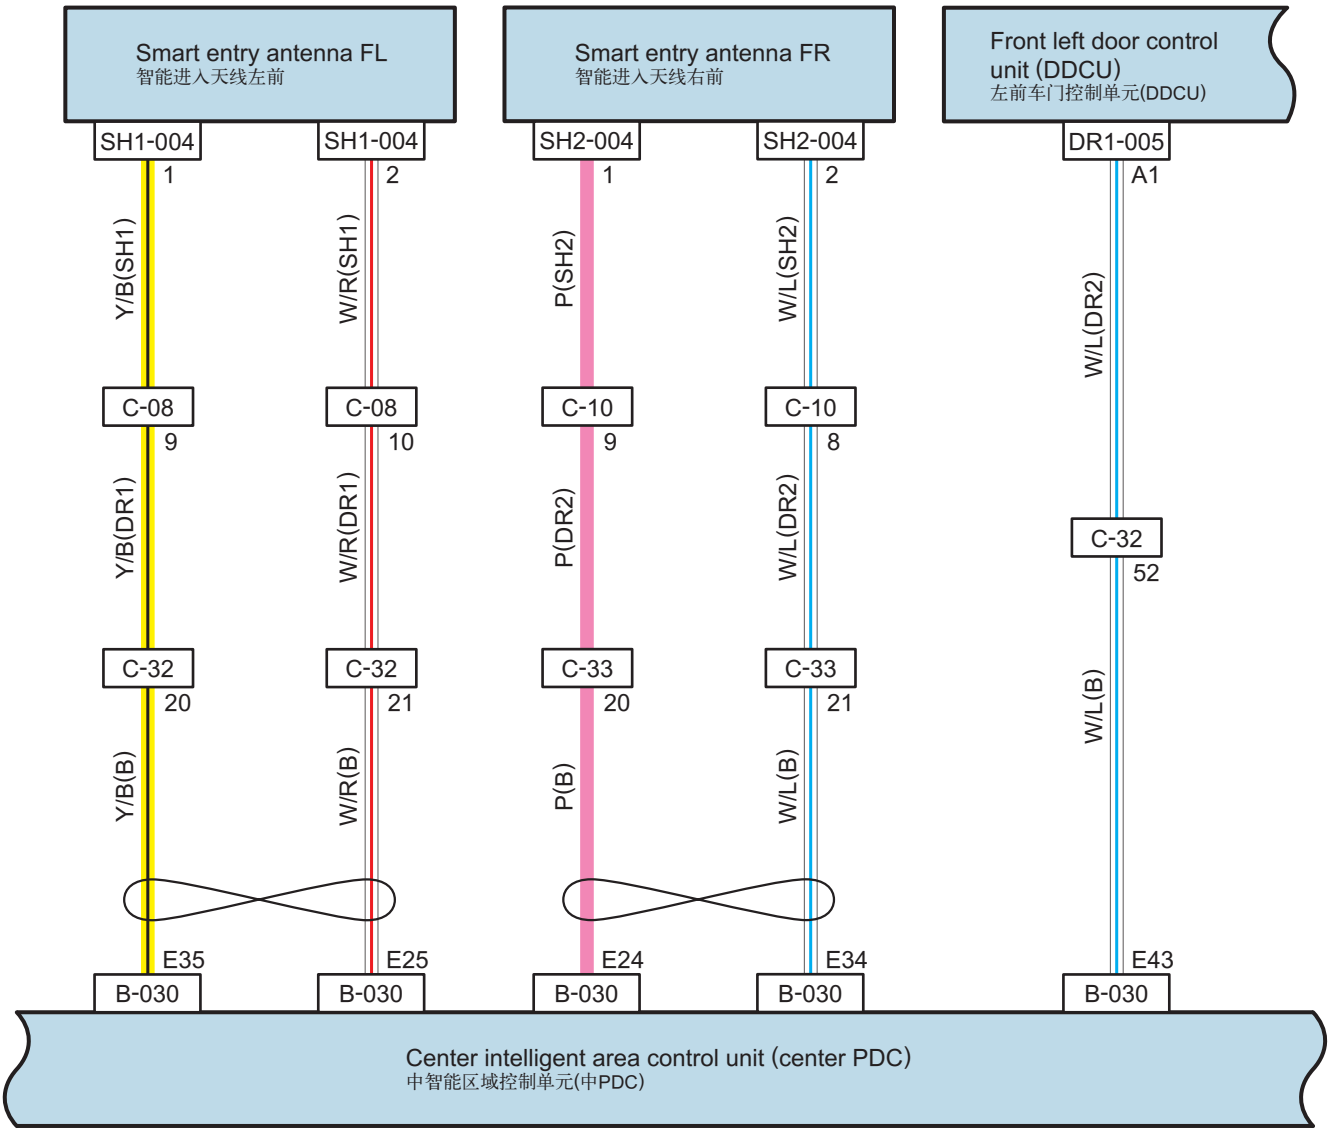

Low configuration
低配
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流
Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Z2-012
11
Z2-012
9
Z2-008
1
Z2-008
3
K2-003
3
W(Z2)
R/W(Z2)
Y/L(Z2)
G/B(Z2)
G/B(K2)
C-45
10
G/B(Z2)
C-43
1
C-43
10
G/B(Z2)
C-43
8
W(B)
R/W(B)
G/B(B)
G51
G48
D20
B-033
B-033
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

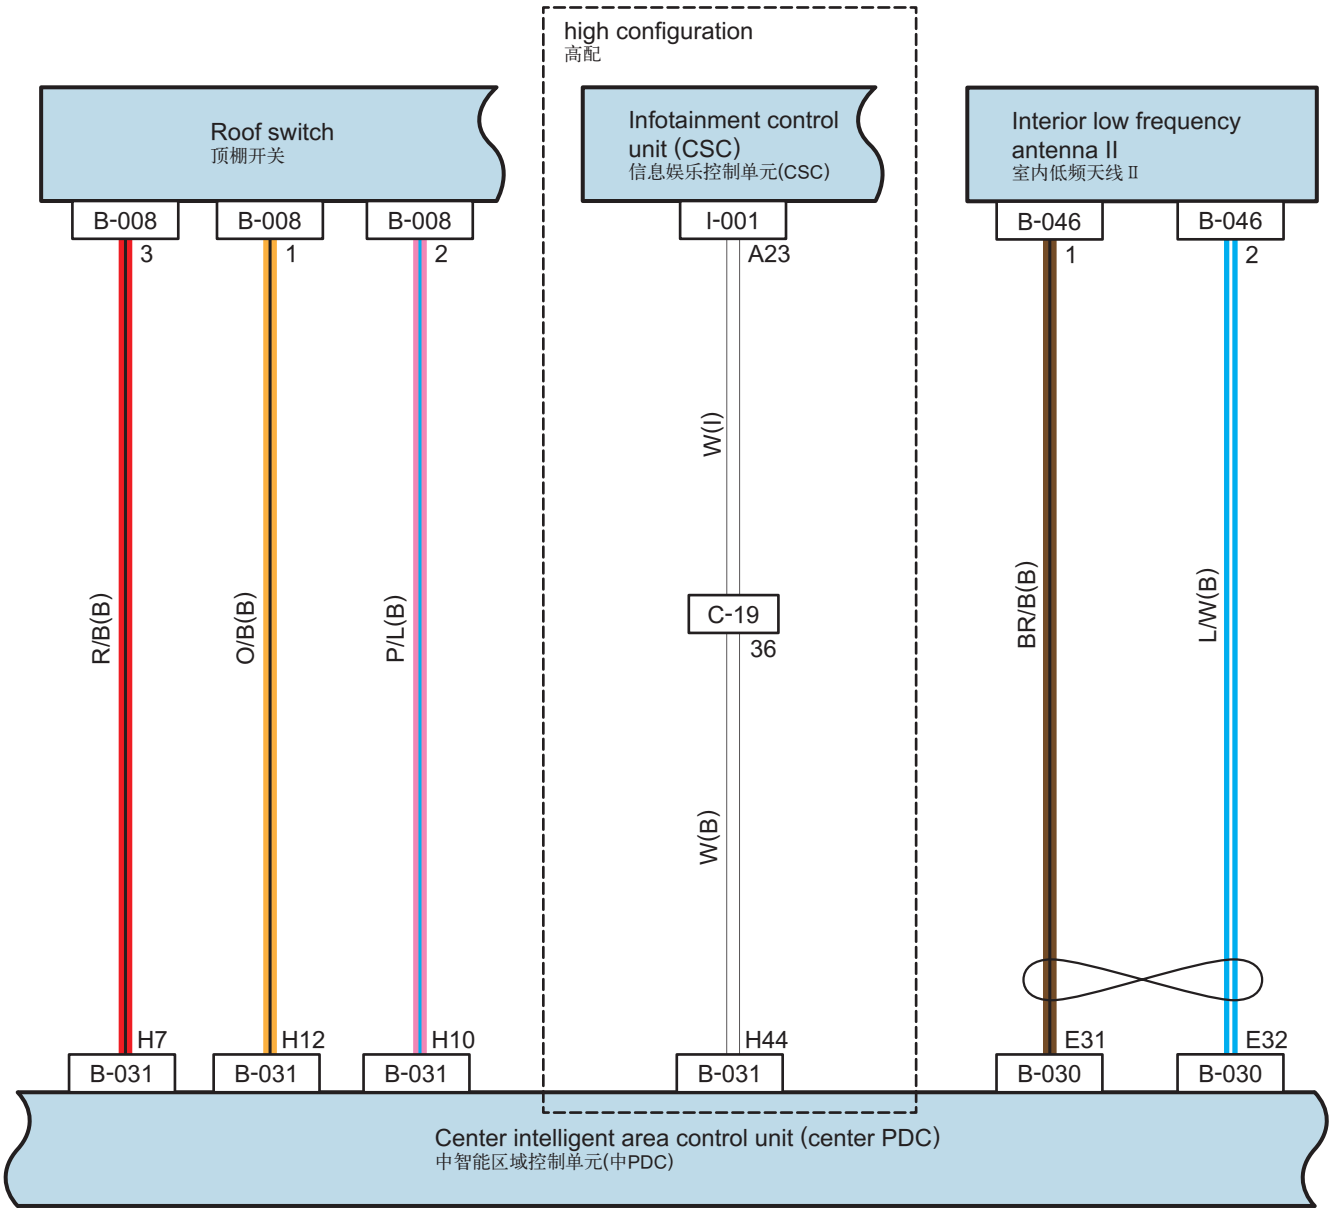

high configuration
高配
Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Front passenger lumbar support motor
副驾腰托电机
Front passenger seat control unit
副驾驶员座椅控制单元
K2-003
1
K2-006
2
B-114
A11
Y/L (K2)
Y/L(K2)
C-45
7
C-45
12
Y/L(Z2)
Y/L(Z2)
R/W(B)
L/B(Z2)
C-43
22
Y/L(B)
E42
E51
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

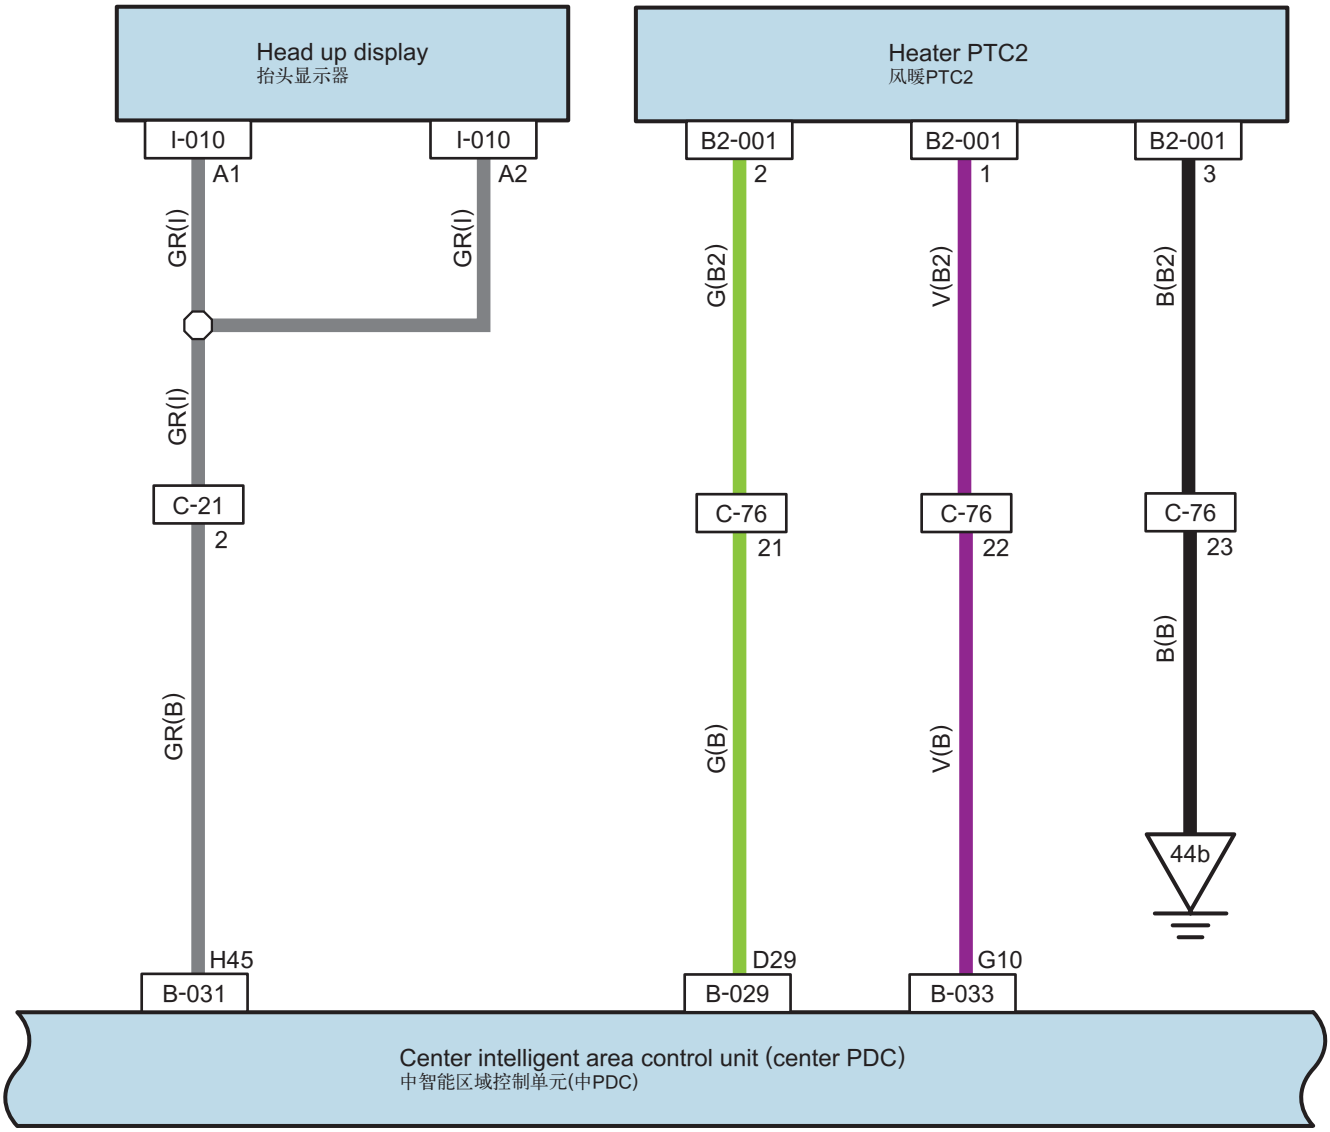

Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Front passenger lumbar support massage
副驾腰托按摩
Z2-008
1
Z2-008
3
K2-003
3
K2-003
1
K2-001
2
Y/L(Z2)
G/B(Z2)
G/B(K2)
Y/L(K2)
Y/L(K2)
C-45
10
C-45
7
C-45
12
G/B(Z2)
Y/L(Z2)
Y/L(Z2)
G/B(Z2)
L/B(Z2)
C-64
10
C-64
9
G/B(B)
Y/L(B)
D20
E42
B-029
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

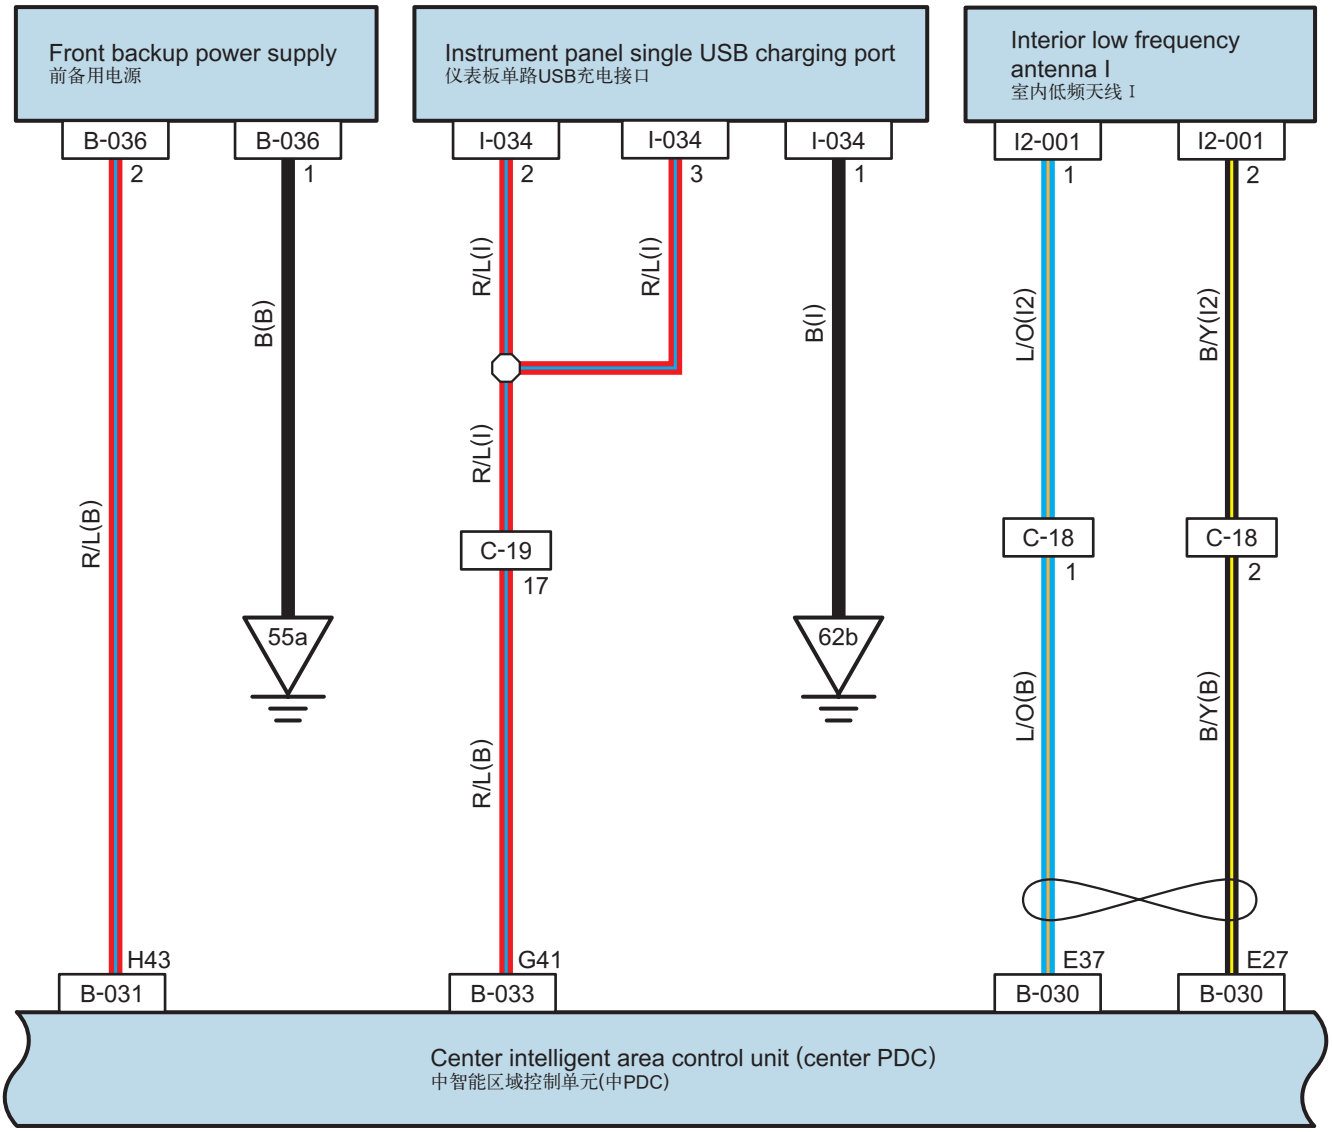

Electronic Steering Column Lock(ESCL)
转向柱锁(ESCL)
Central display
中间显示屏
I-043
6
I-043
4
I-043
1
I-043
3
I-022
A3
R/W(I)
V/B(I)
V/W(I)
B(I)
G/B(I)
C-21
17
C-21
3
R/W(B)
G/B(B)
Middle comfort_CAN
中部舒适_CAN
62a
H17
B-031
H5
B-031
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

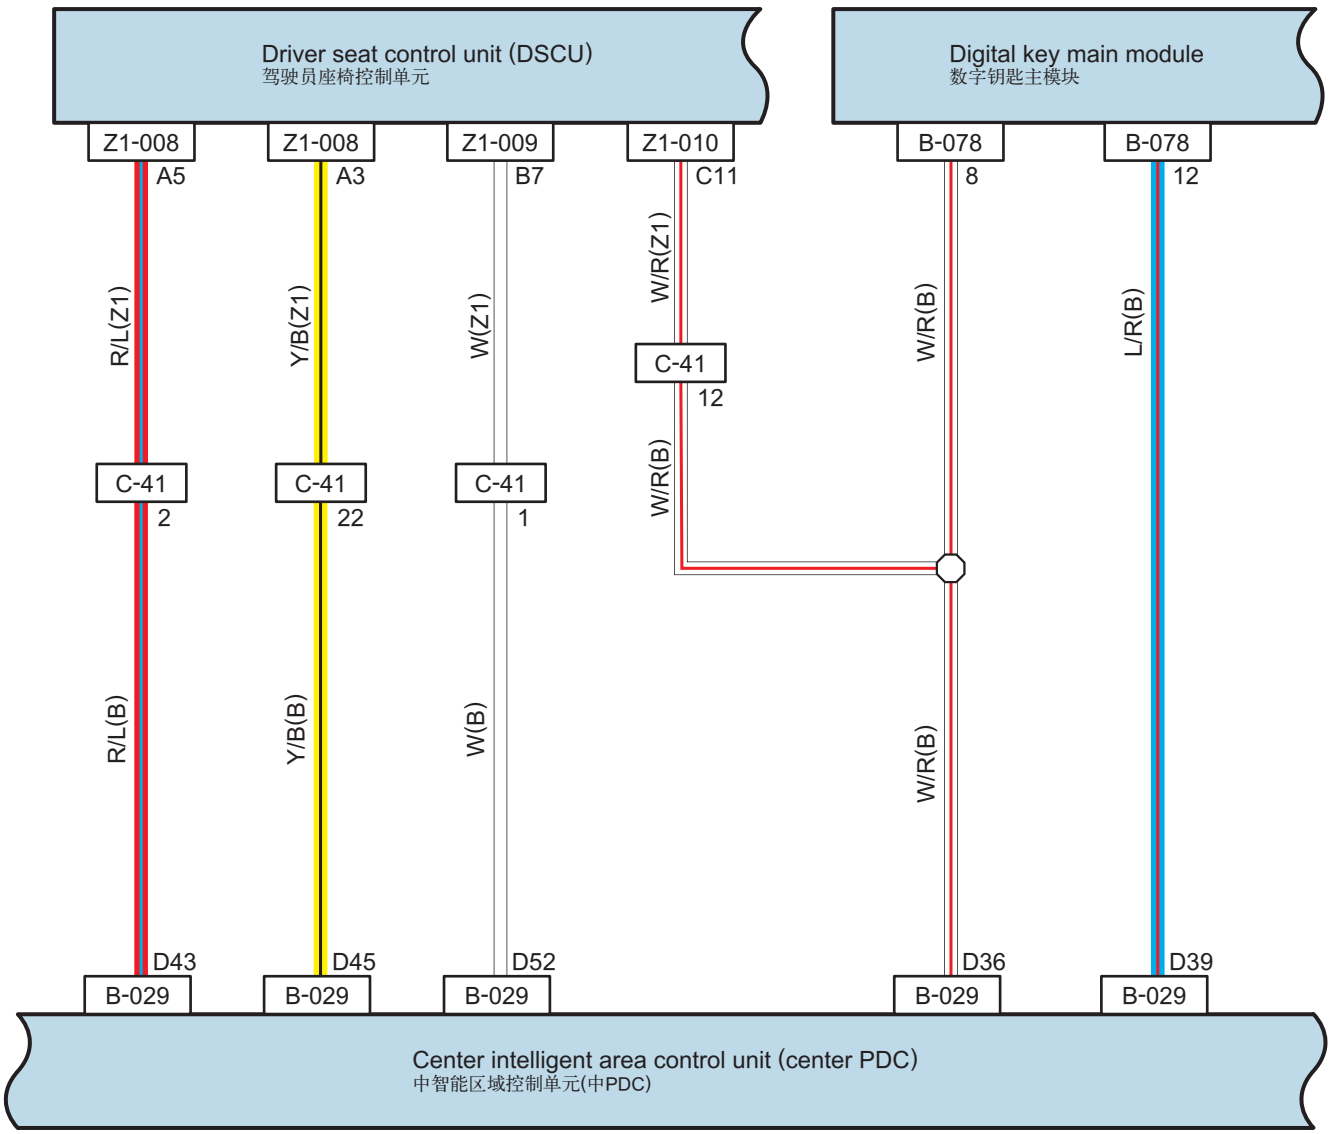

DAB control unit D
DAB控制器 D
I-042
D1
O/L(I)
C-75
32
O/L(B)
G39
B-033
Luggage compartment outer low frequency antenna
行李箱外低频天线
B-111
1
B-111
2
Y/B(B)
BR/W(B)
E22
B-030
E21
B-030
Front right door control unit (PDCU)
右前车门控制单元(PDCU)
DR2-003
A1
W/L(DR1)
C-33
55
W/L(B)
D50
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

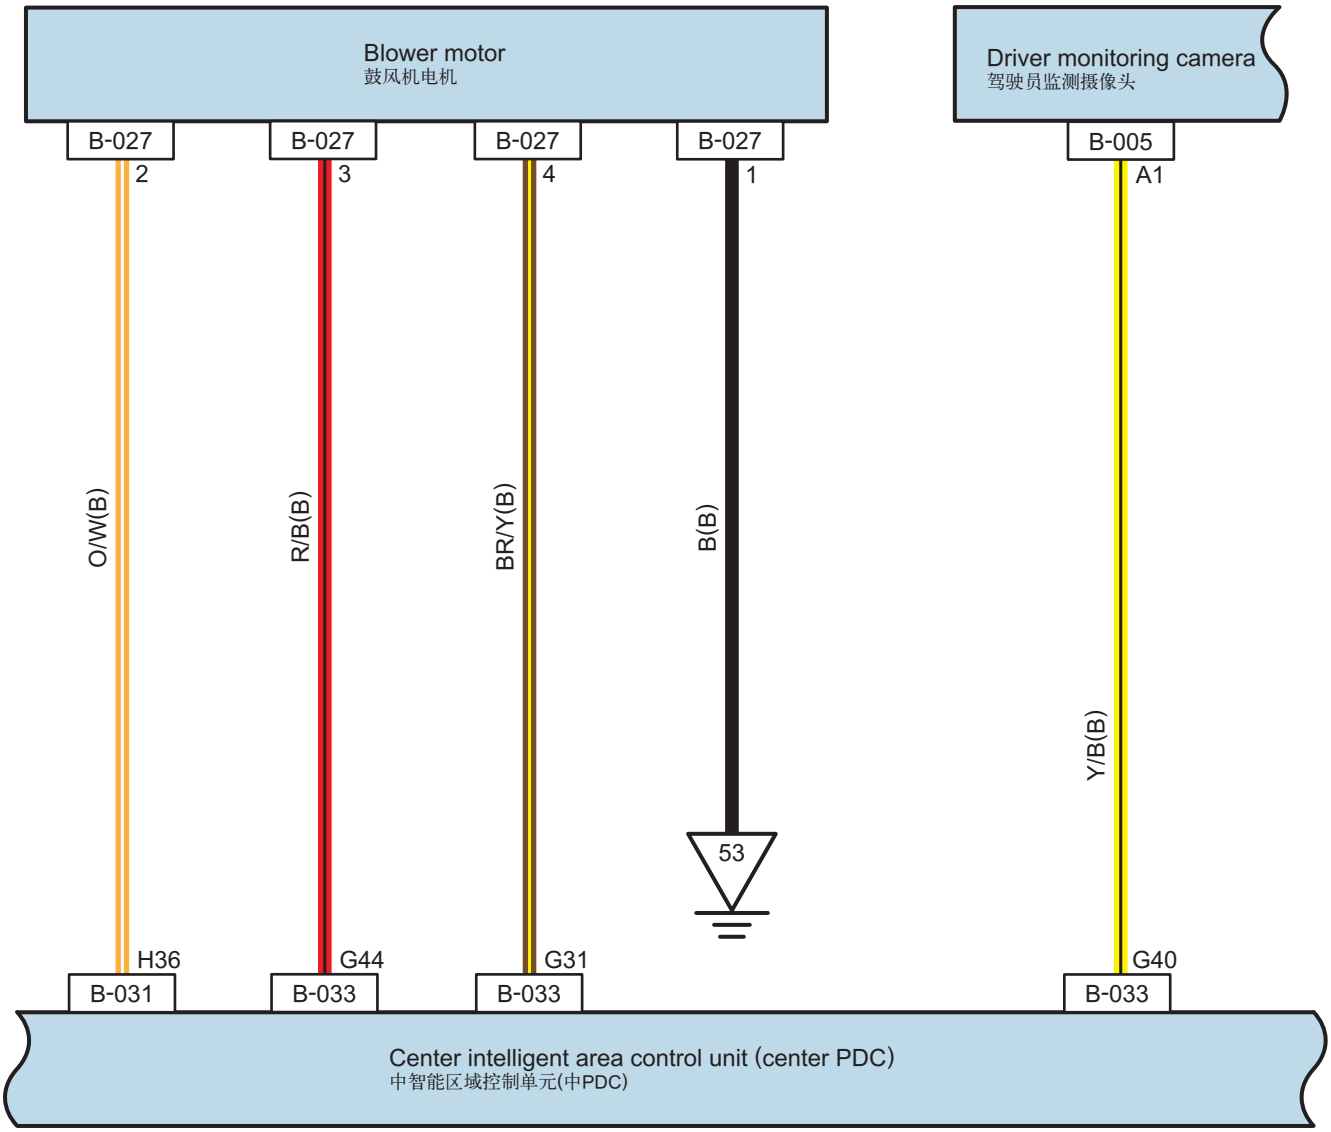

Smart entry antenna FL
智能进入天线左前
Smart entry antenna FR
智能进入天线右前
Front left door control unit (DDCU)
左前车门控制单元(DDCU)
SH1-004
1
SH1-004
2
SH2-004
1
SH2-004
2
DR1-005
A1
Y/B(SH1)
W/R(SH1)
P(SH2)
W/L(SH2)
W/L(DR2)
C-08
9
C-08
10
C-10
9
C-10
8
C-32
52
Y/B(DR1)
W/R(DR1)
P(DR2)
W/L(DR2)
C-32
20
C-32
21
C-33
20
C-33
21
Y/B(B)
W/R(B)
P(B)
W/L(B)
W/L(B)
E35
E25
E24
E34
E43
B-030
B-030
B-030
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

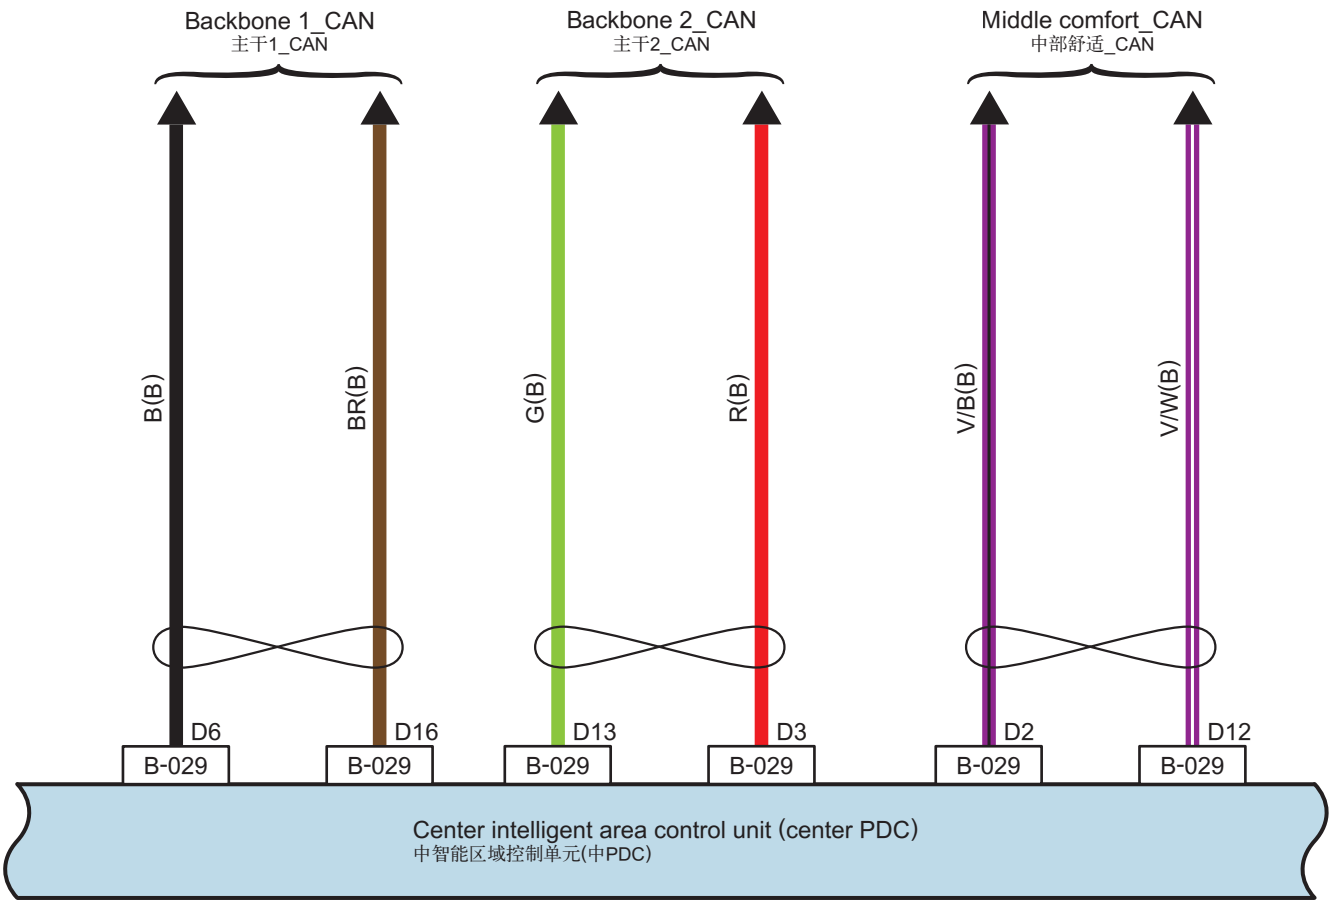

high configuration
高配
Roof switch
顶棚开关
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
Interior low frequency antenna II
室内低频天线 II
B-008
3
B-008
1
B-008
2
I-001
A23
B-046
1
B-046
2
R/B(B)
O/B(B)
P/L(B)
W(I)
C-19
36
W(B)
BR/B(B)
L/W(B)
H7
H12
H10
H44
E31
E32
B-031
B-031
B-031
B-031
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

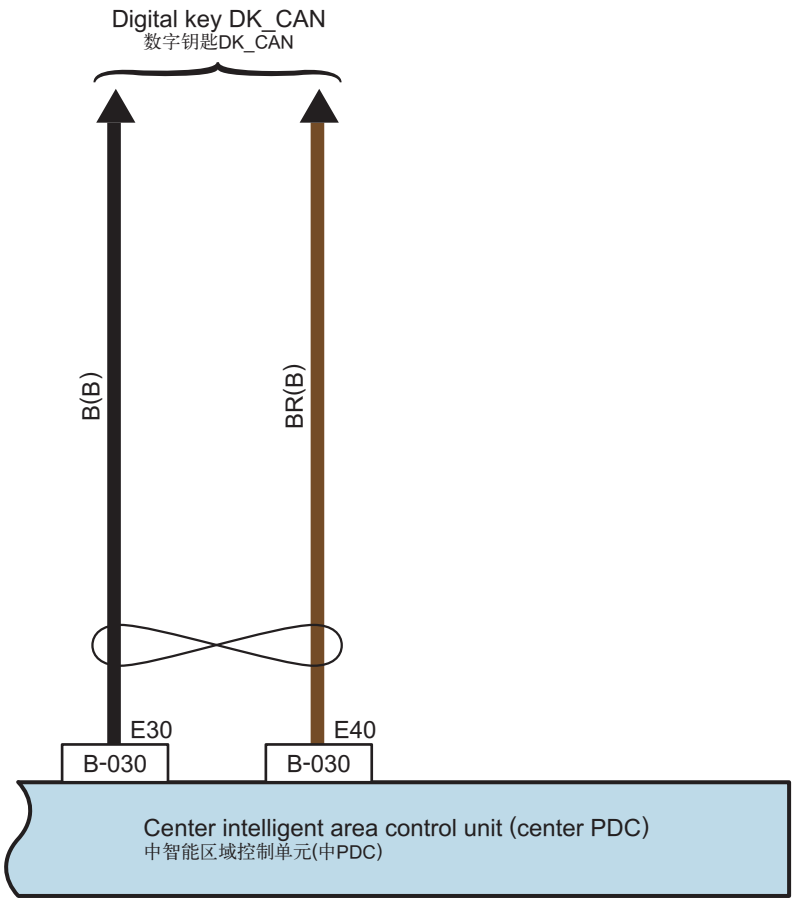

Head up display
抬头显示器
I-010
A1
I-010
A2
GR(I)
GR(I)
GR(I)
C-21
2
GR(B)
H45
B-031
Heater PTC2
风暖PTC2
B2-001
2
B2-001
1
B2-001
3
G(B2)
V(B2)
B(B2)
C-76
21
C-76
22
C-76
23
G(B)
V(B)
B(B)
44b
D29
G10
B-029
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

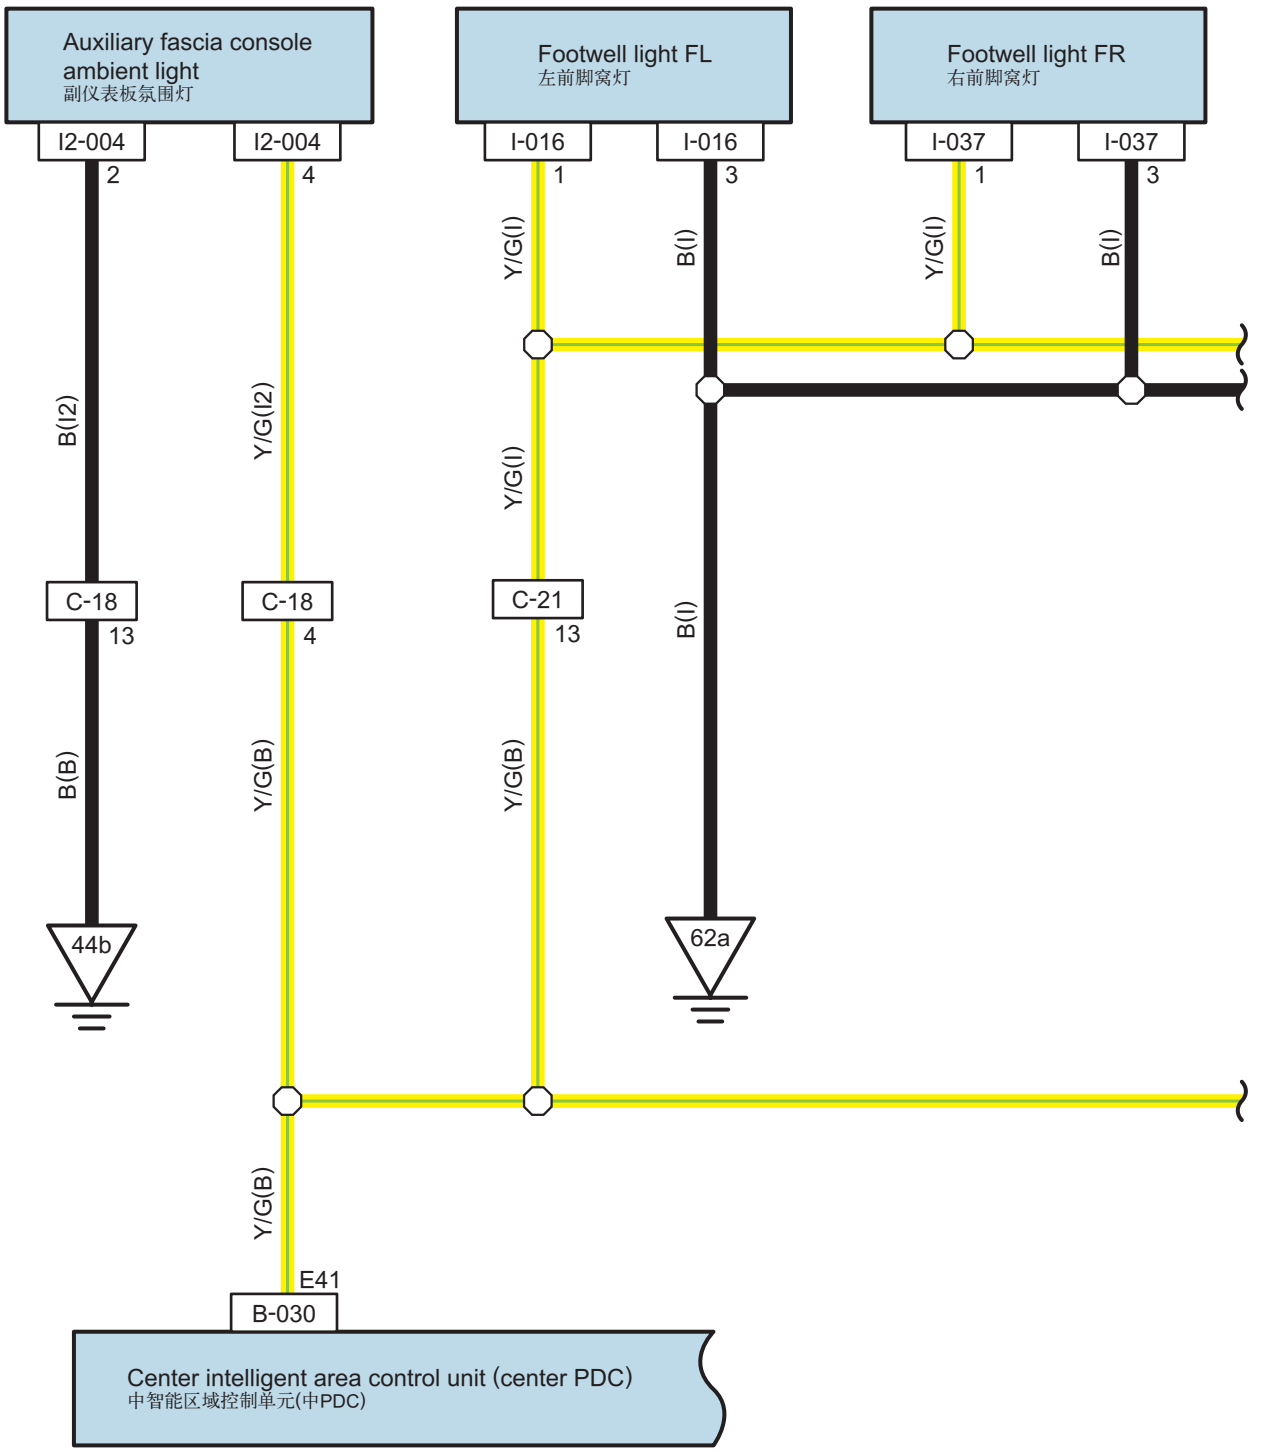

Front backup power supply
前备用电源
Instrument panel single USB charging port
仪表板单路USB充电接口
Interior low frequency antenna I
室内低频天线 I
B-036
2
B-036
1
I-034
2
I-034
3
I-034
1
I2-001
1
I2-001
2
R/L(B)
B(B)
R/L(I)
R/L(I)
R/L(I)
B(I)
L/O(I2)
B/Y(I2)
C-19
17
C-18
1
C-18
2
55a
62b
L/O(B)
B/Y(B)
R/L(B)
H43
G41
E37
E27
B-031
B-033
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

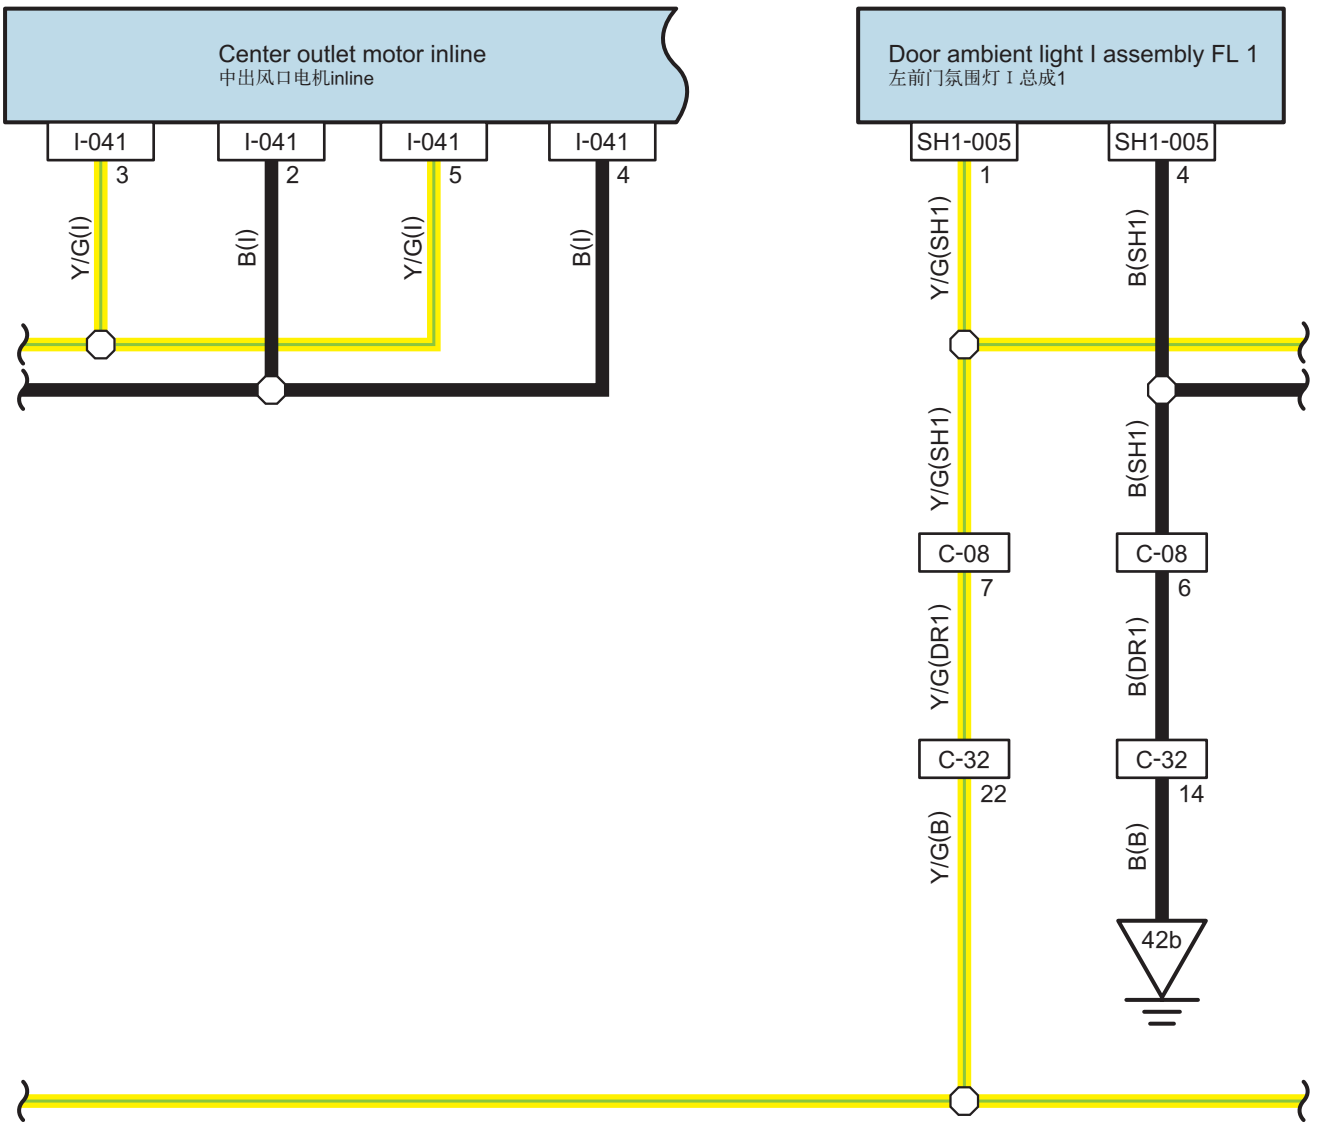

Driver seat control unit (DSCU)
驾驶员座椅控制单元
Digital key main module
数字钥匙主模块
Z1-008
A5
Z1-008
A3
Z1-009
B7
Z1-010
C11
B-078
8
B-078
12
R/L(Z1)
Y/B(Z1)
W(Z1)
W/R(Z1)
W/R(B)
L/R(B)
C-41
12
C-41
2
C-41
22
C-41
1
R/L(B)
Y/B(B)
W(B)
W/R(B)
D43
D45
D52
D36
D39
B-029
B-029
B-029
B-029
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

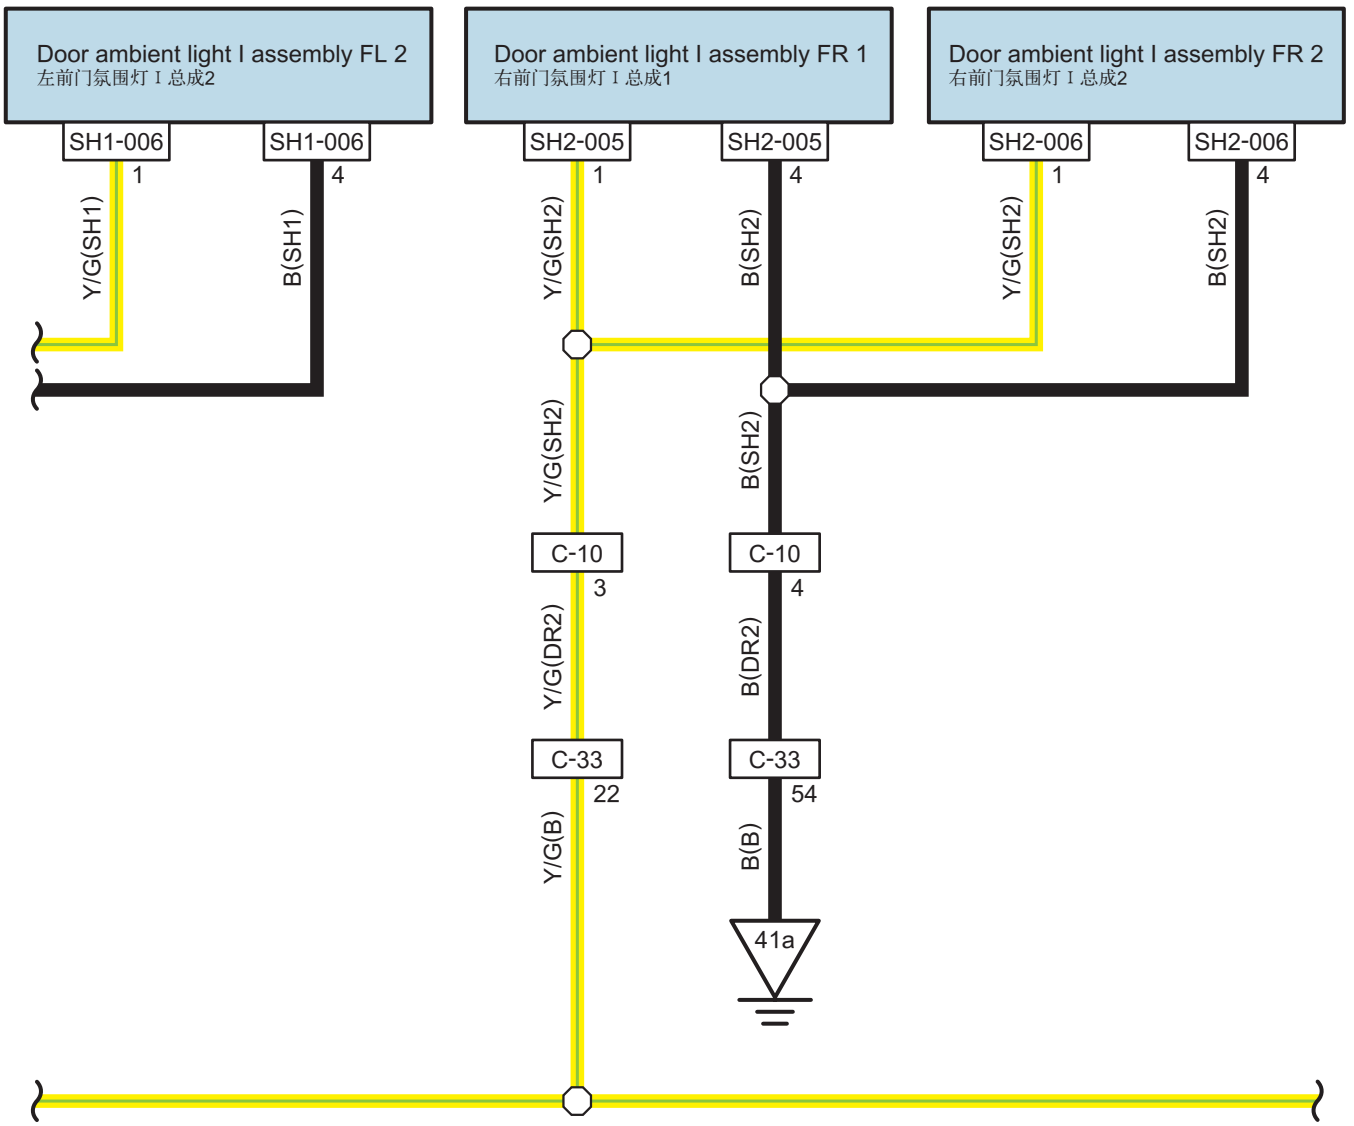

Blower motor
鼓风机电机
Driver monitoring camera
驾驶员监测摄像头
B-027
2
B-027
3
B-027
4
B-027
1
B-005
A1
O/W(B)
R/B(B)
BR/Y(B)
B(B)
Y/B(B)
53
H36
G44
G31
G40
B-031
B-033
B-033
B-033
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

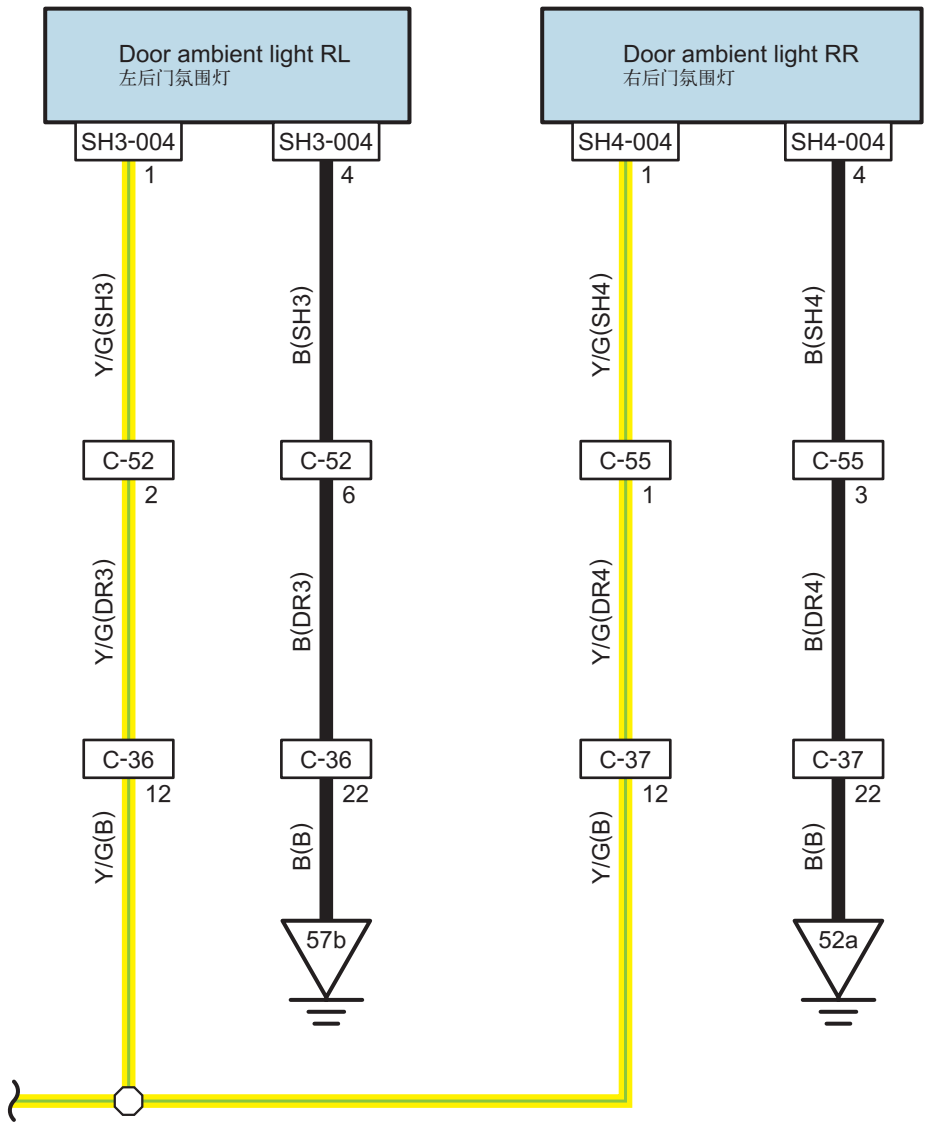

Backbone 1_CAN
主干1_CAN
Backbone 2_CAN
主干2_CAN
Middle comfort_CAN
中部舒适_CAN
B(B)
BR(B)
G(B)
R(B)
V/B(B)
V/W(B)
D6
D16
D13
D3
D2
D12
B-029
B-029
B-029
B-029
B-029
B-029
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

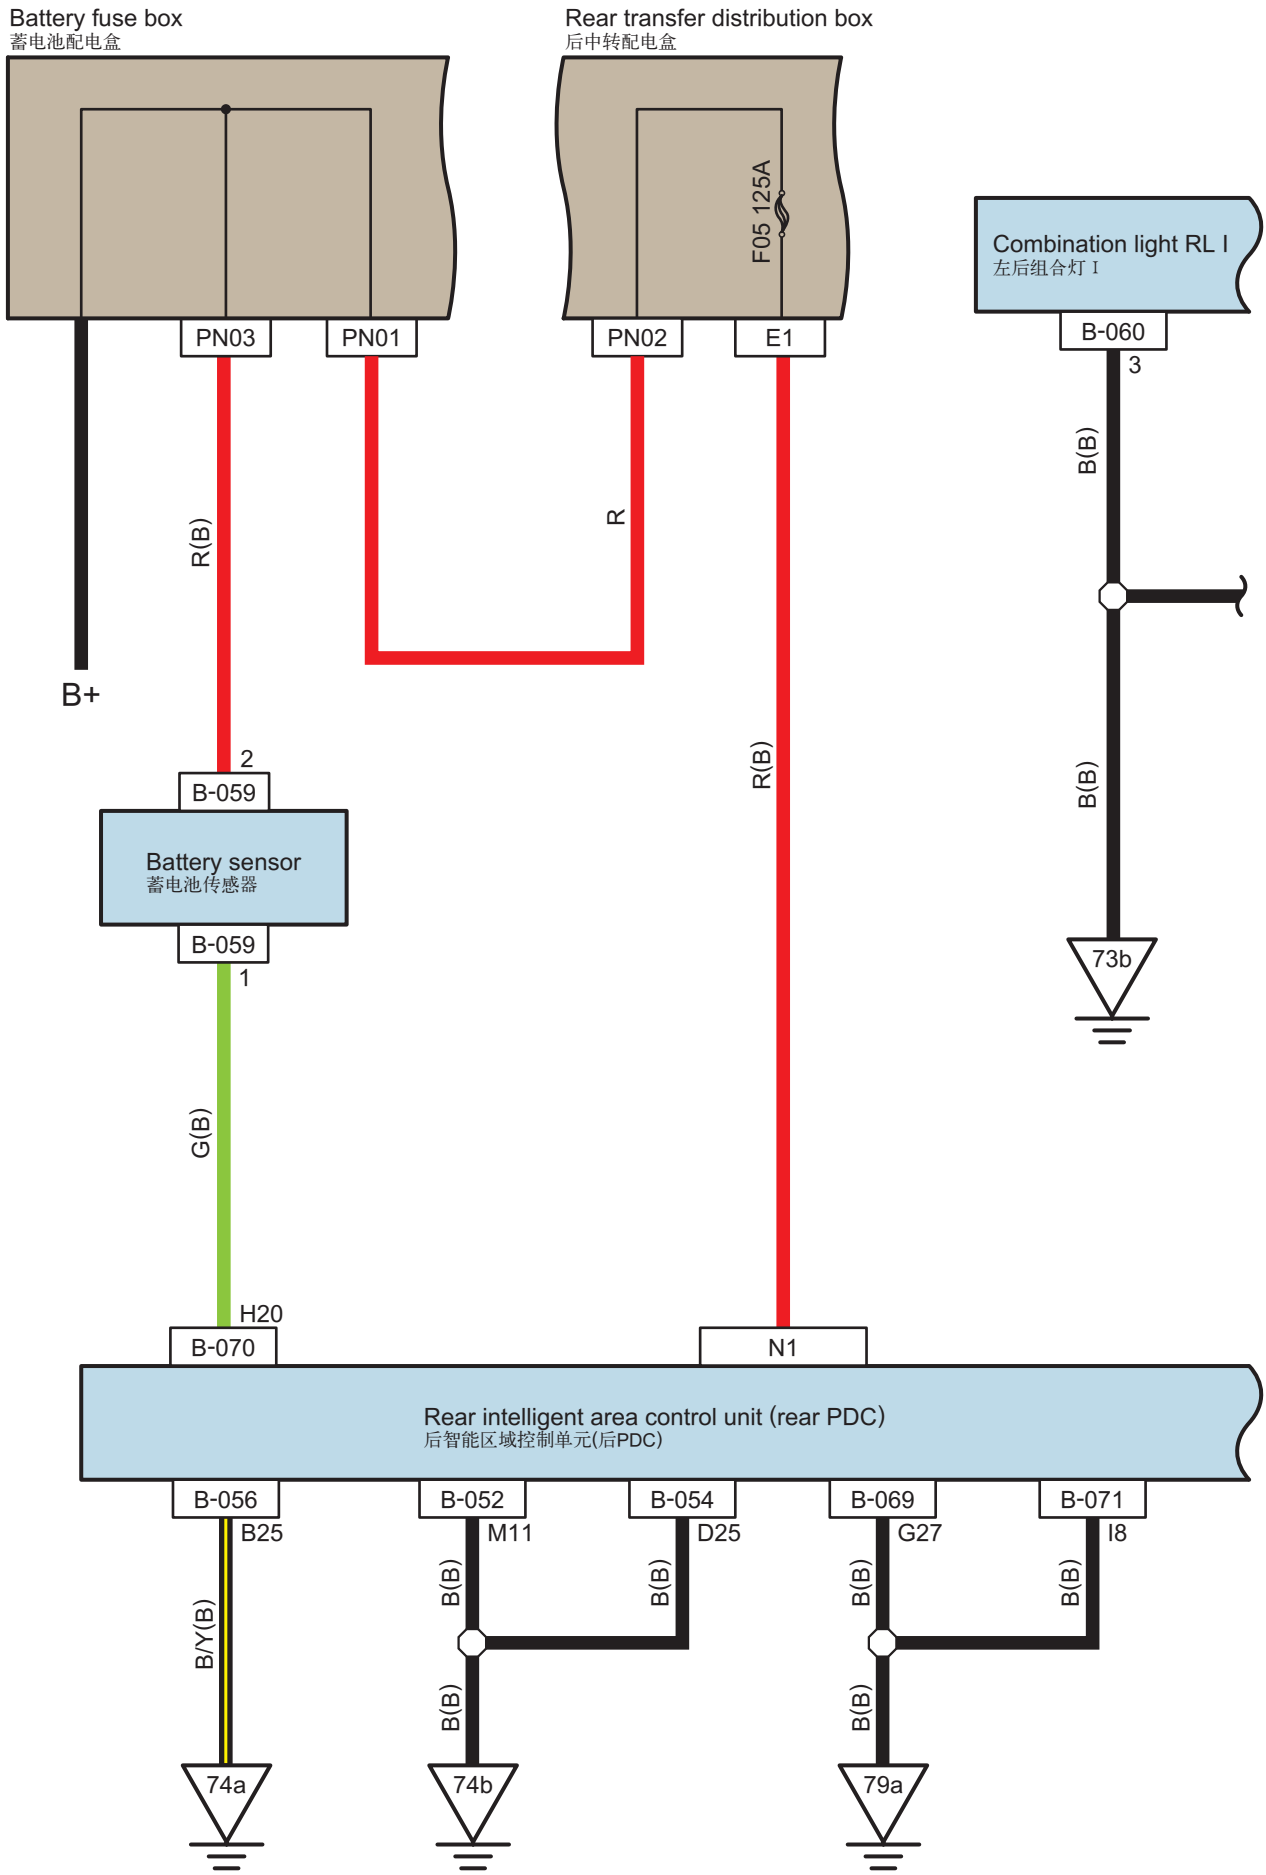

Digital key DK_CAN
数字钥匙DK_CAN
B(B)
BR(B)
E30
E40
B-030
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

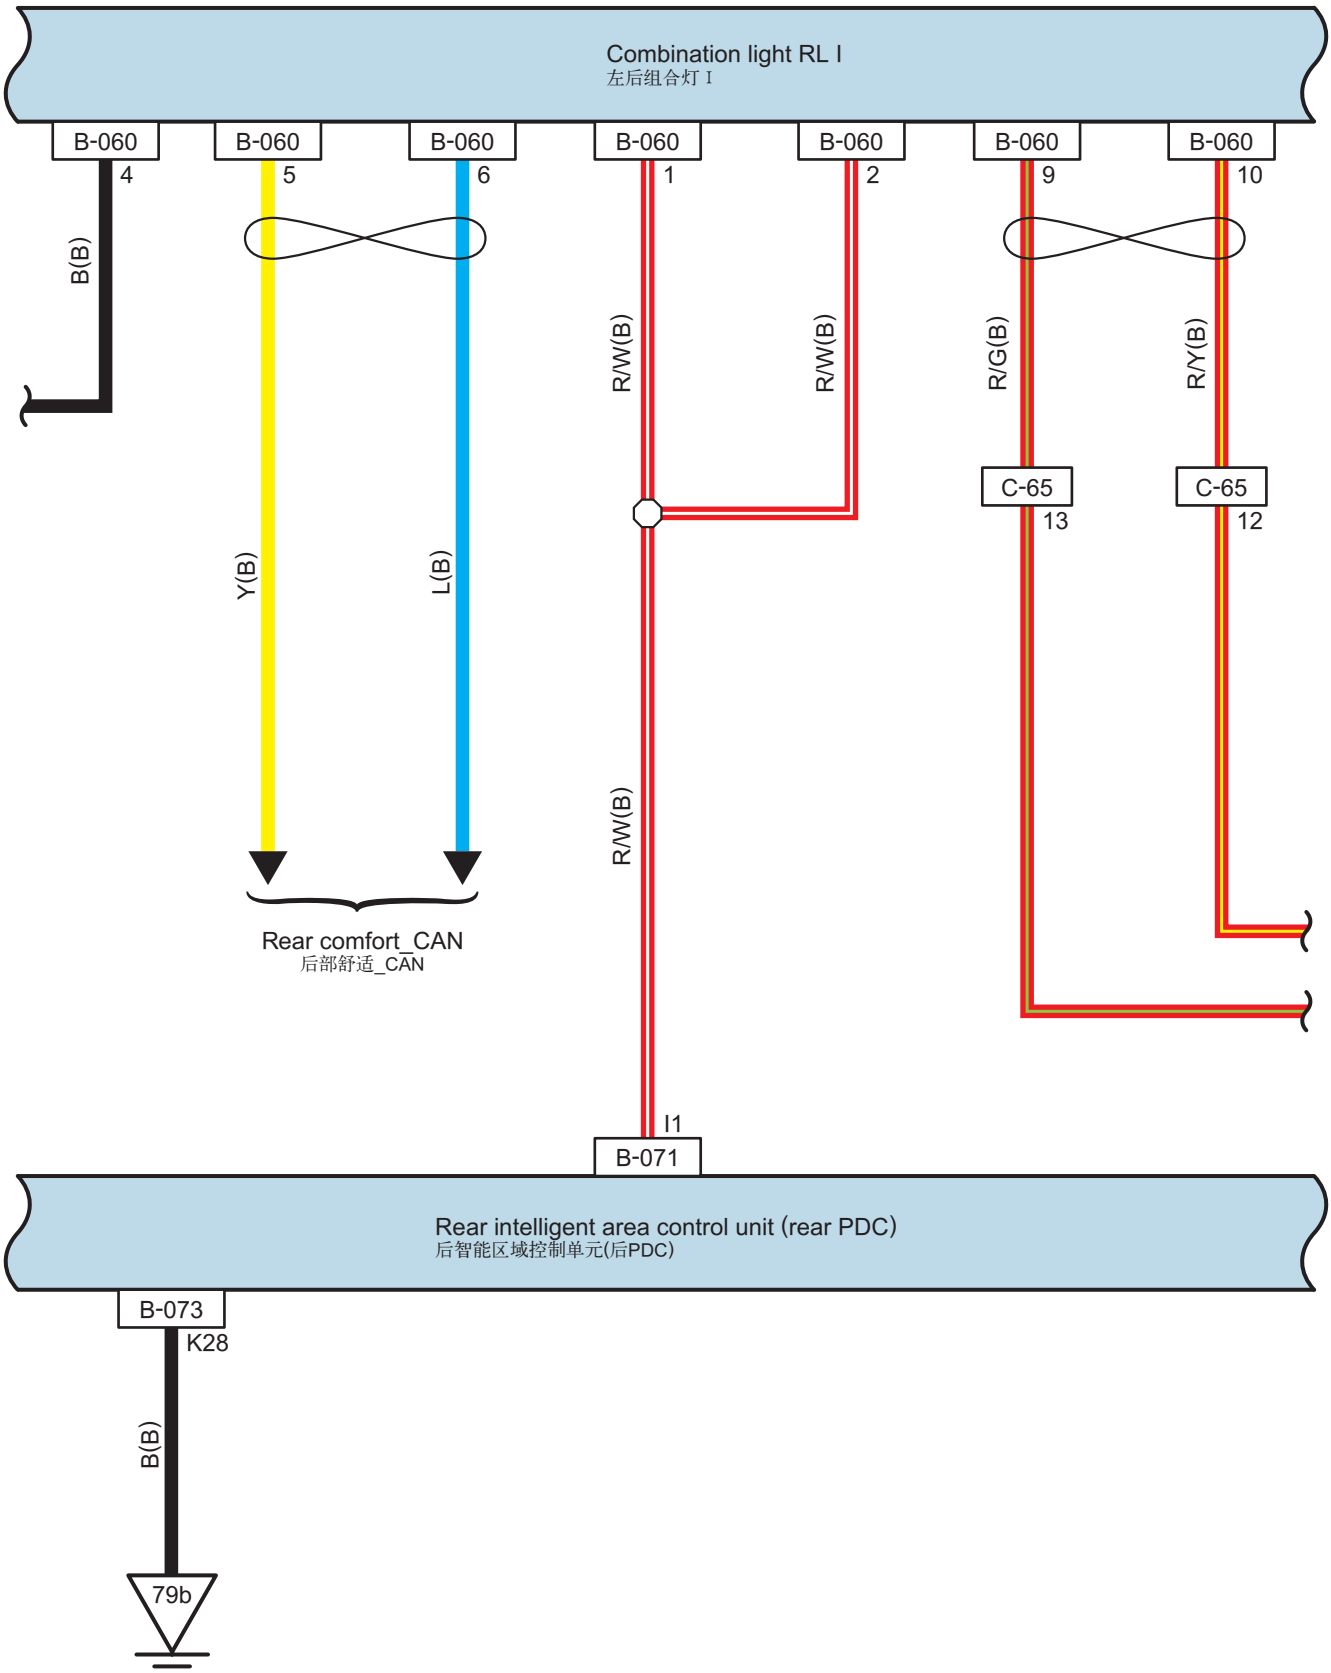

Auxiliary fascia console ambient light
副仪表板氛围灯
I2-004
2
I2-004
4
Footwell light FL
左前脚窝灯
I-016
1
I-016
3
Footwell light FR
右前脚窝灯
I-037
1
I-037
3
Y/G(I)
B(I)
Y/G(I)
B(I)
B(I2)
Y/G(I2)
Y/G(I)
C-18
13
C-18
4
C-21
13
B(I)
B(B)
Y/G(B)
Y/G(B)
44b
62a
Y/G(B)
E41
B-030
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)

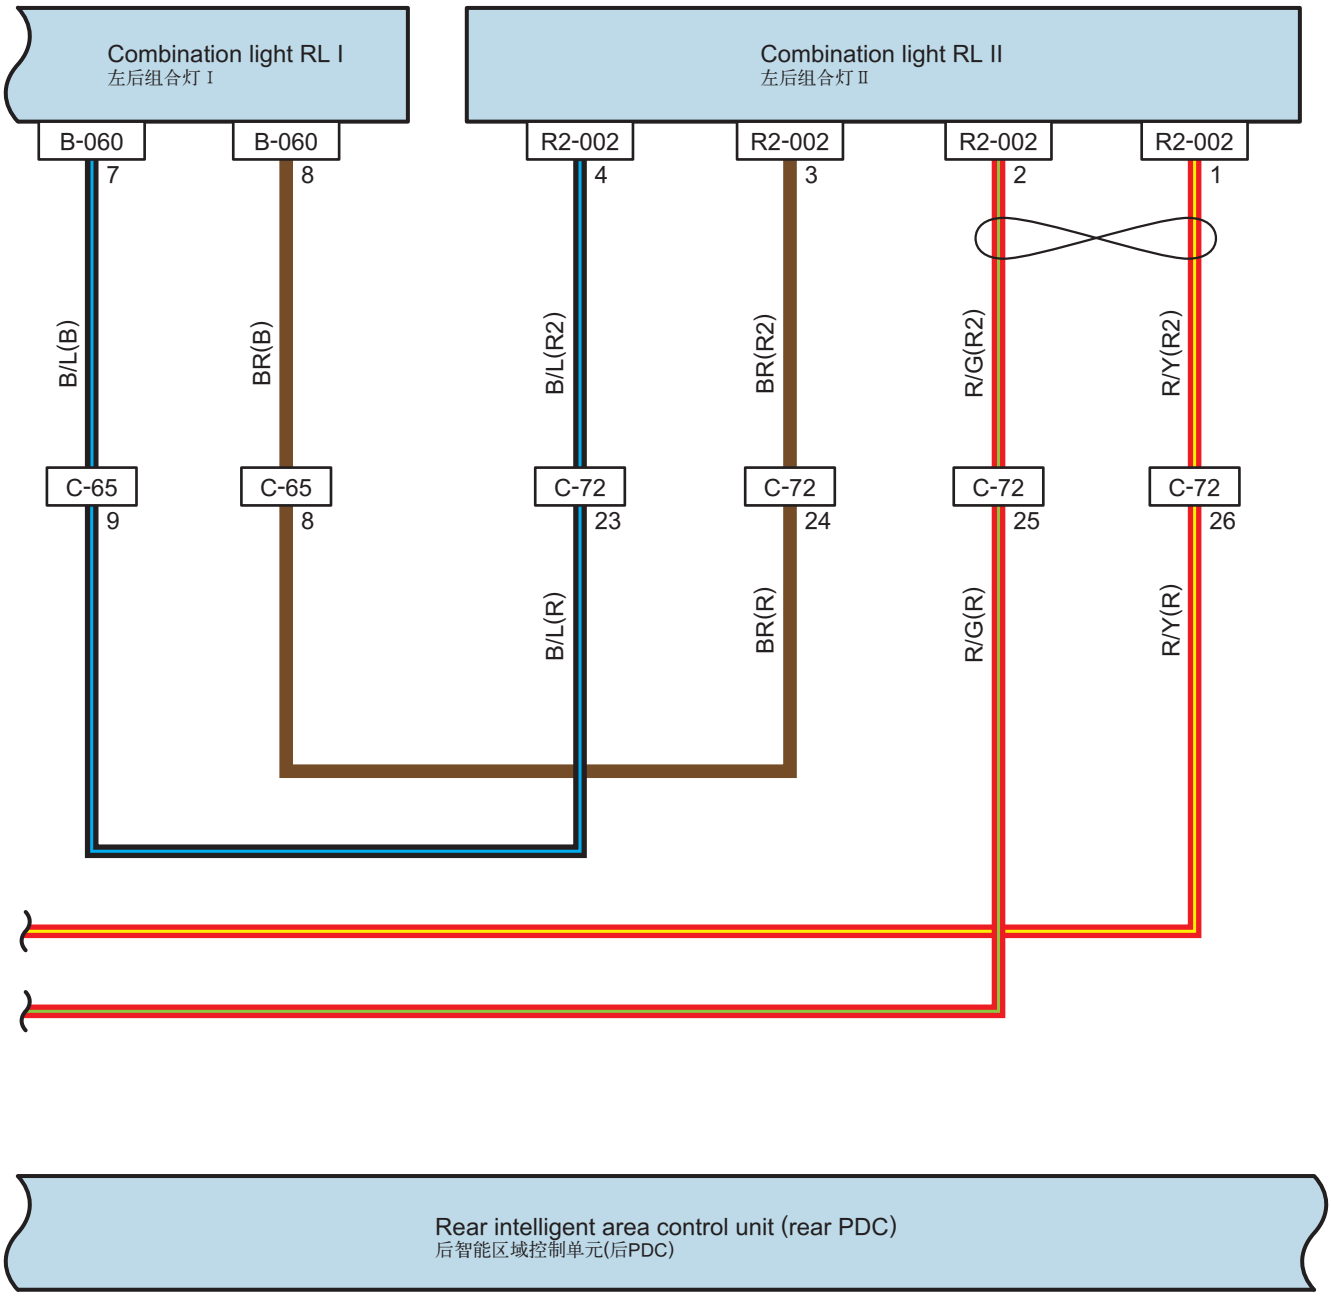

Center outlet motor inline
中出风口电机inline
I-041
3
I-041
2
I-041
5
I-041
4
Y/G(I)
B(I)
Y/G(I)
B(I)
Door ambient light I assembly FL 1
左前门氛围灯 I 总成1
SH1-005
1
SH1-005
4
Y/G(SH1)
B(SH1)
Y/G(SH1)
B(SH1)
C-08
7
C-08
6
Y/G(DR1)
B(DR1)
C-32
22
C-32
14
Y/G(B)
B(B)
42b

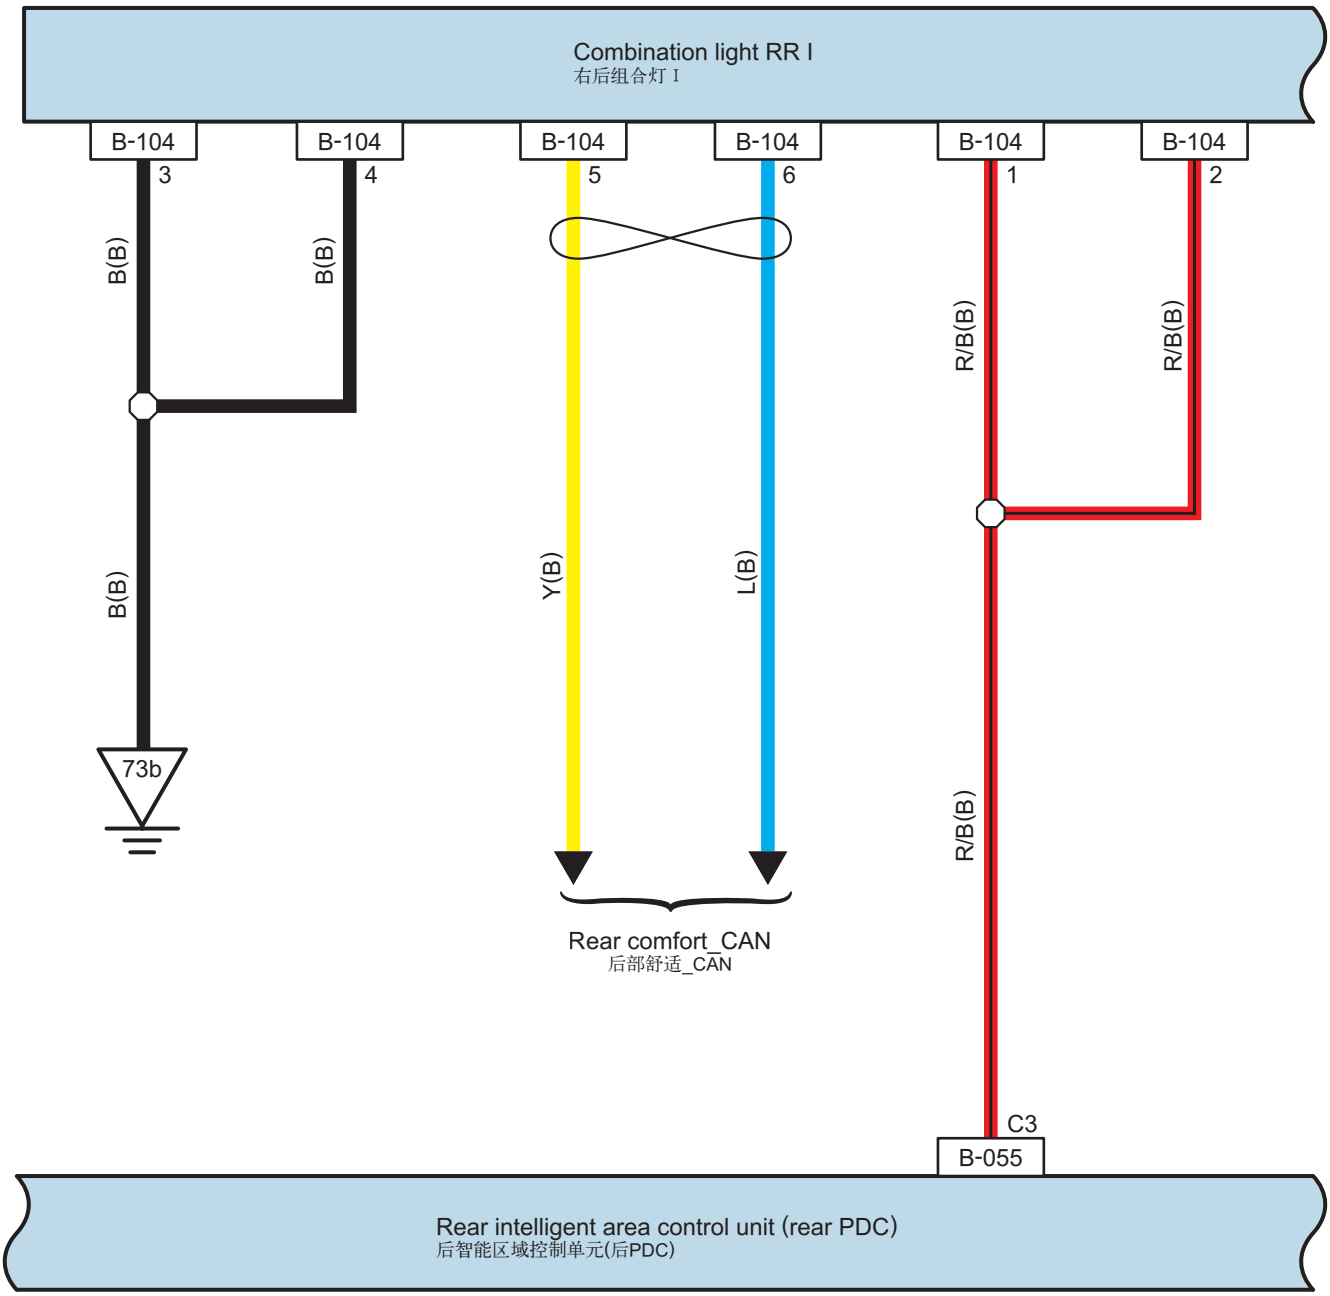

Door ambient light I assembly FL 2
左前门氛围灯 I 总成2
SH1-006
1
Y/G(SH1)
SH1-006
4
B(SH1)
Door ambient light I assembly FR 1
右前门氛围灯 I 总成1
SH2-005
1
Y/G(SH2)
SH2-005
4
B(SH2)
Door ambient light I assembly FR 2
右前门氛围灯 I 总成2
SH2-006
1
Y/G(SH2)
SH2-006
4
B(SH2)
Y/G(SH2)
B(SH2)
C-10
3
Y/G(DR2)
C-10
4
B(DR2)
C-33
22
Y/G(B)
C-33
54
B(B)
41a

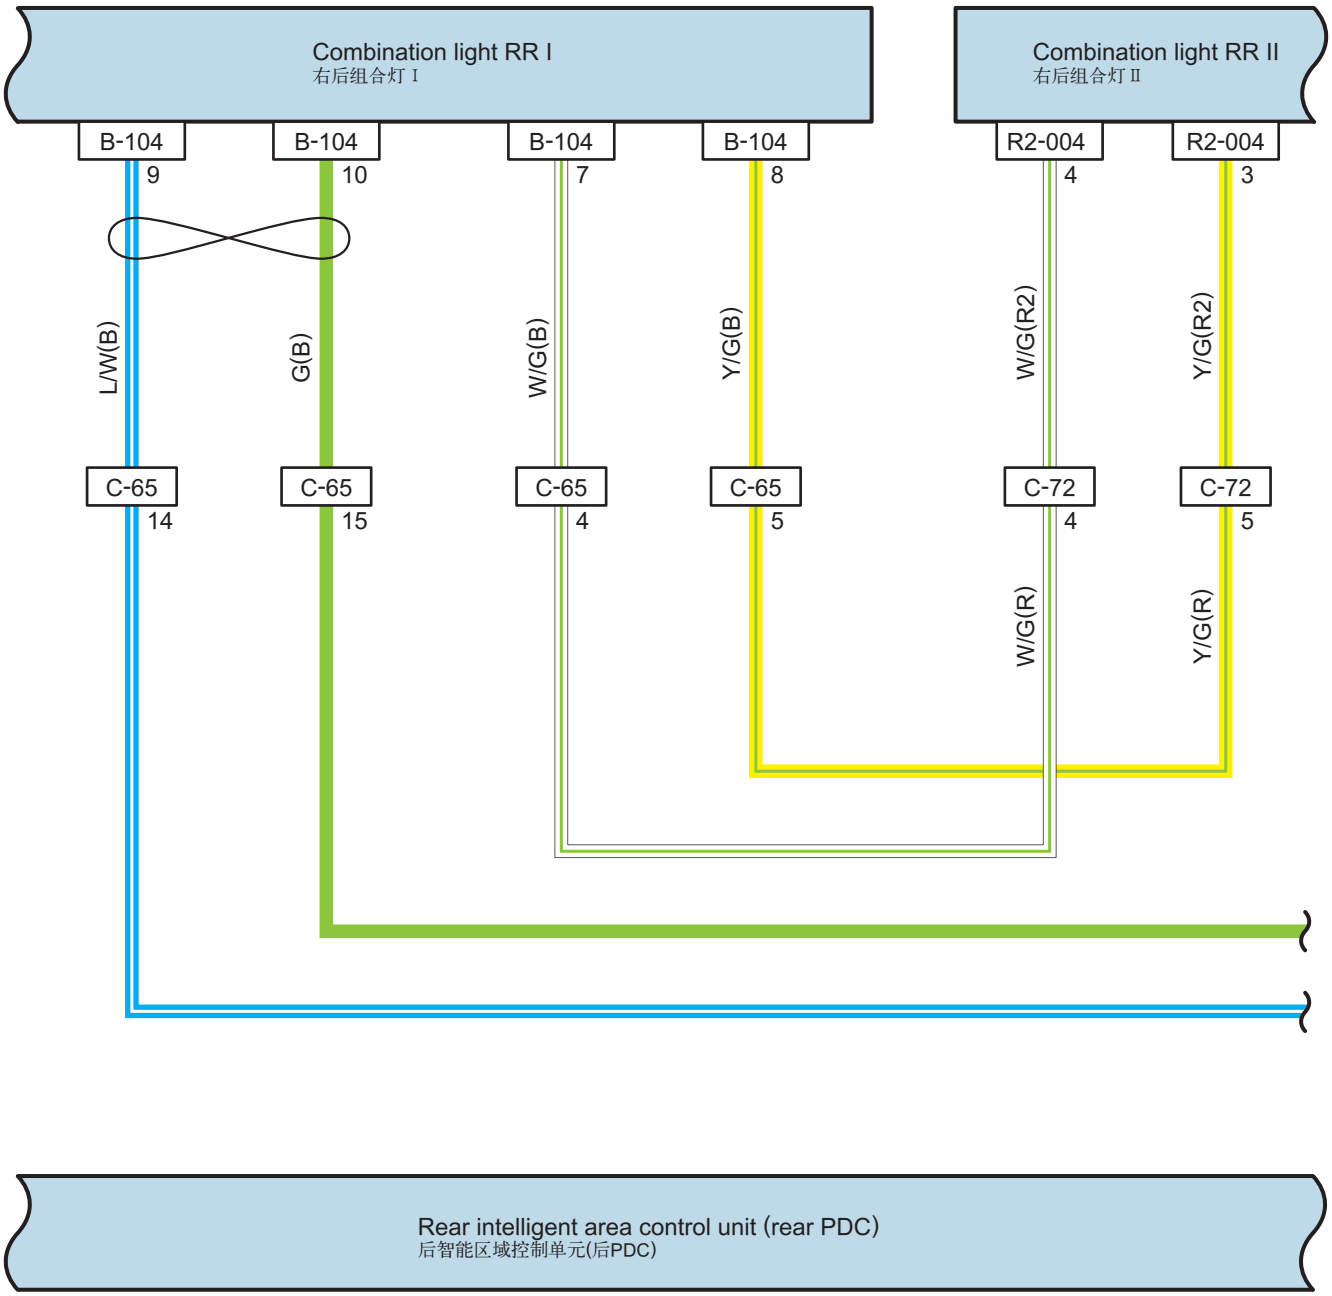

Door ambient light RL
左后门氛围灯
Door ambient light RR
右后门氛围灯
SH3-004
1
SH3-004
4
SH4-004
1
SH4-004
4
Y/G(SH3)
B(SH3)
Y/G(SH4)
B(SH4)
C-52
2
C-52
6
C-55
1
C-55
3
Y/G(DR3)
B(DR3)
Y/G(DR4)
B(DR4)
C-36
12
C-36
22
C-37
12
C-37
22
Y/G(B)
B(B)
Y/G(B)
B(B)
57b
52a

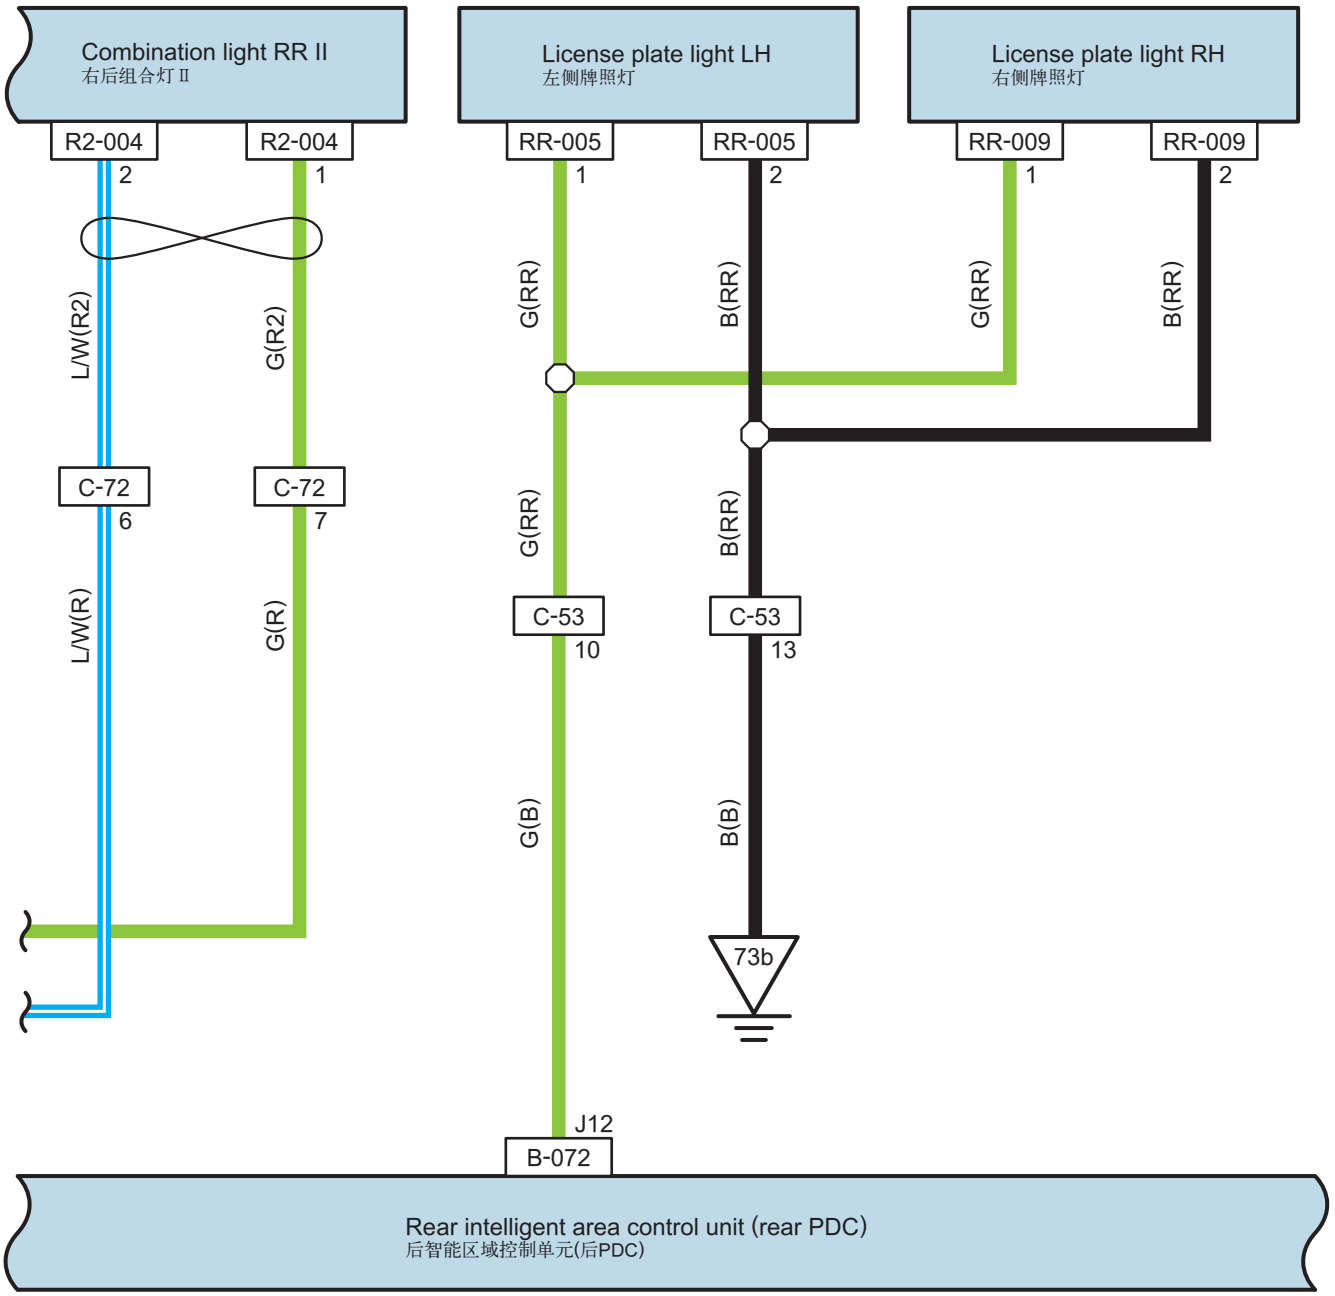

Battery fuse box
蓄电池配电盒
Rear transfer distribution box
后中转配电盒
F05 125A
PN03
PN01
PN02
E1
Combination light RL I
左后组合灯 I
B-060
3
B(B)
B(B)
73b
R(B)
R
B+
2
B-059
Battery sensor
蓄电池传感器
B-059
1
G(B)
R(B)
H20
B-070
N1
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-056
B25
B-052
M11
B-054
D25
B-069
G27
B-071
I8
B/Y(B)
B(B)
B(B)
B(B)
B(B)
B(B)
B(B)
74a
74b
79a

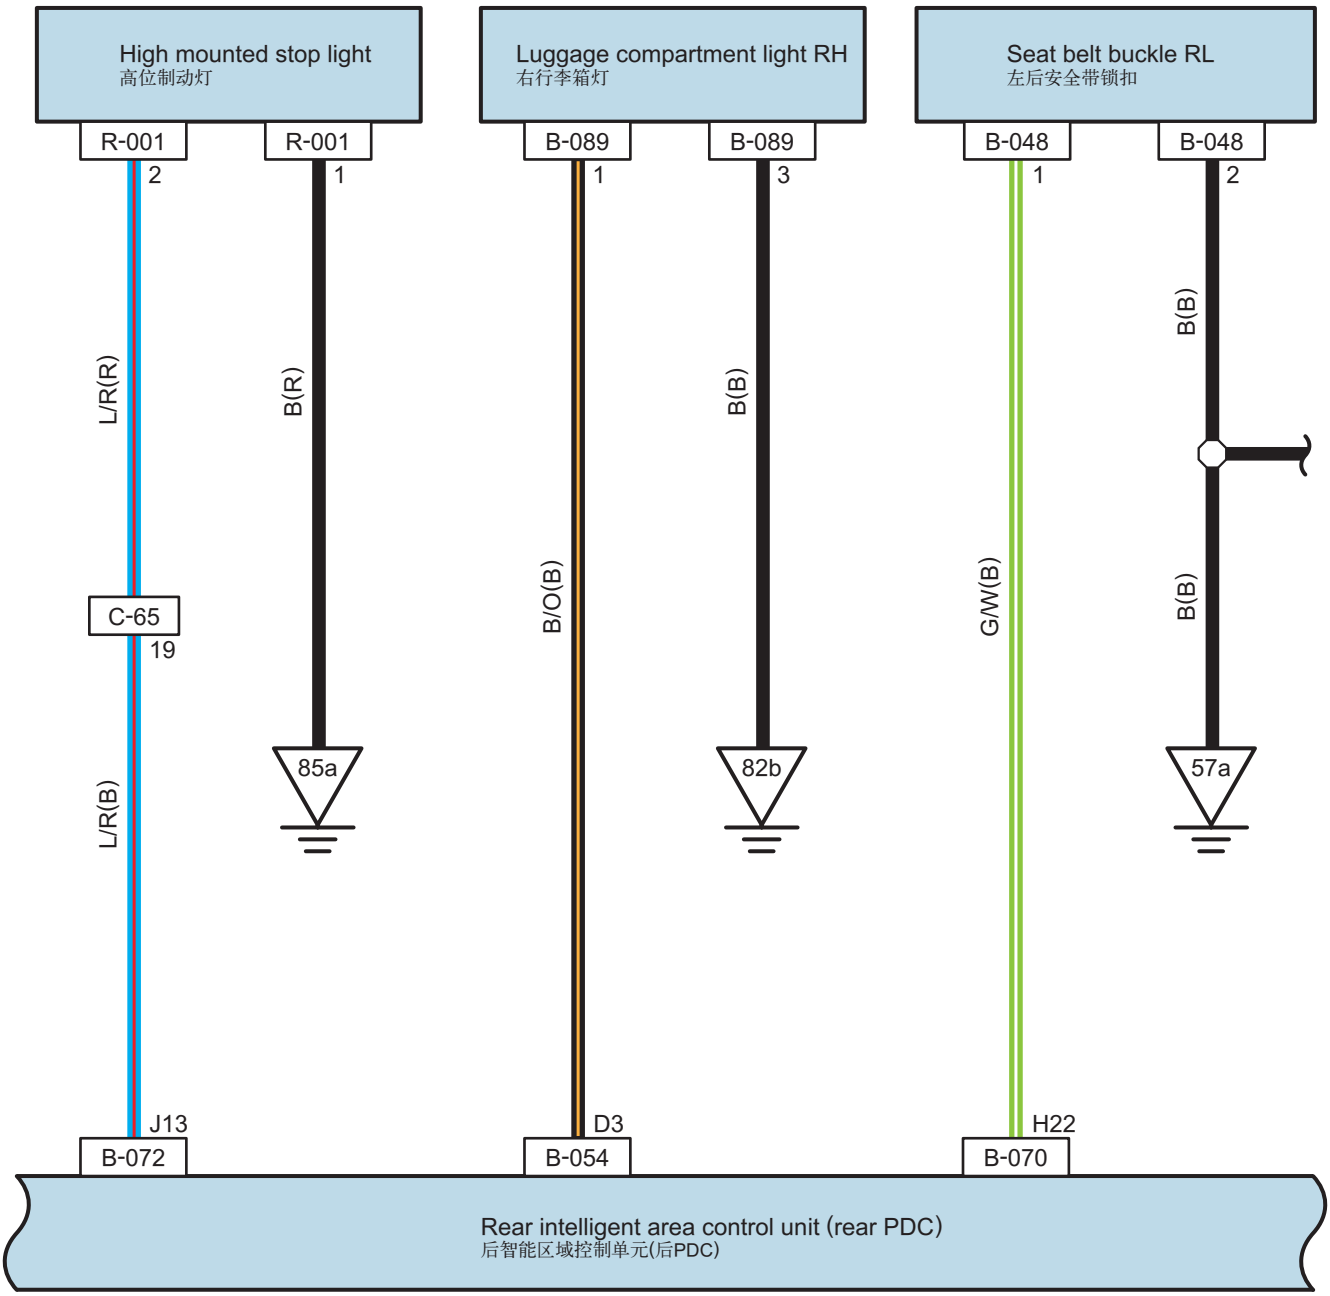

Combination light RL I
左后组合灯 I
B-060
4
B(B)
B-060
5
Y(B)
B-060
6
L(B)
Rear comfort_CAN
后部舒适_CAN
B-060
1
R/W(B)
B-060
2
R/W(B)
R/W(B)
I1
B-071
B-060
9
R/G(B)
C-65
13
B-060
10
R/Y(B)
C-65
12
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-073
K28
B(B)
79b

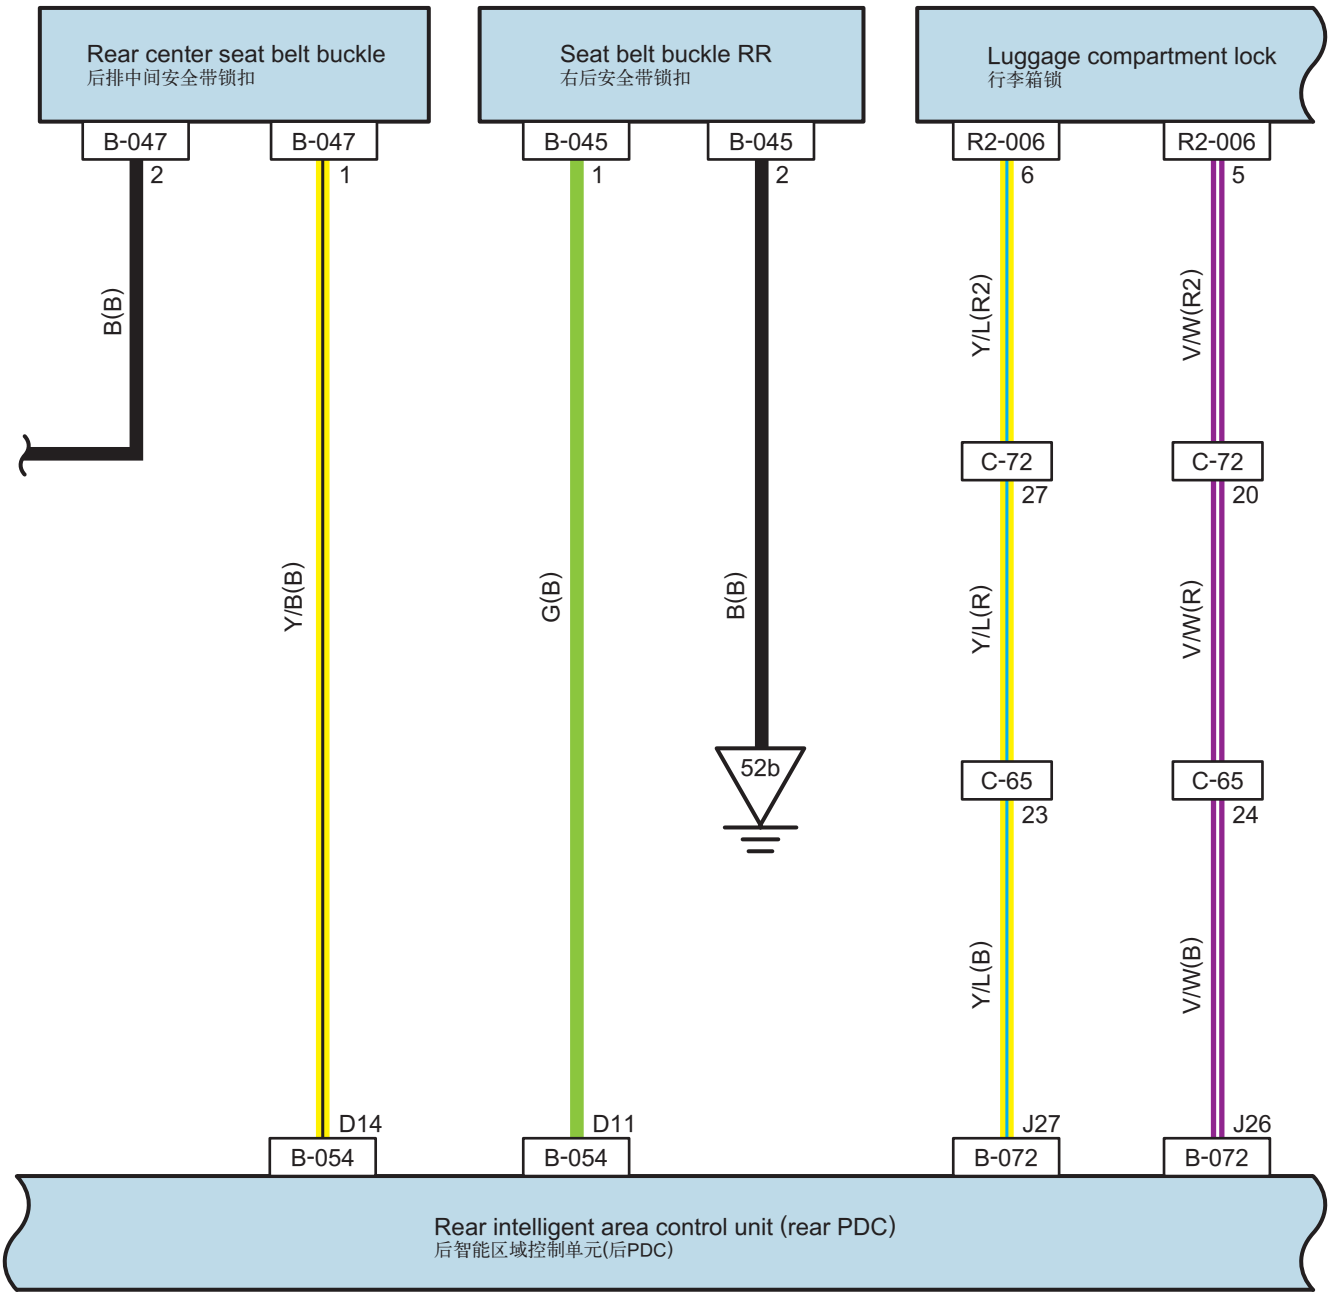

Combination light RL I
左后组合灯 I
Combination light RL II
左后组合灯 II
B-060
7
B-060
8
R2-002
4
R2-002
3
R2-002
2
R2-002
1
B/L(B)
BR(B)
B/L(R2)
BR(R2)
R/G(R2)
R/Y(R2)
C-65
9
C-65
8
C-72
23
C-72
24
C-72
25
C-72
26
B/L(R)
BR(R)
R/G(R)
R/Y(R)
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

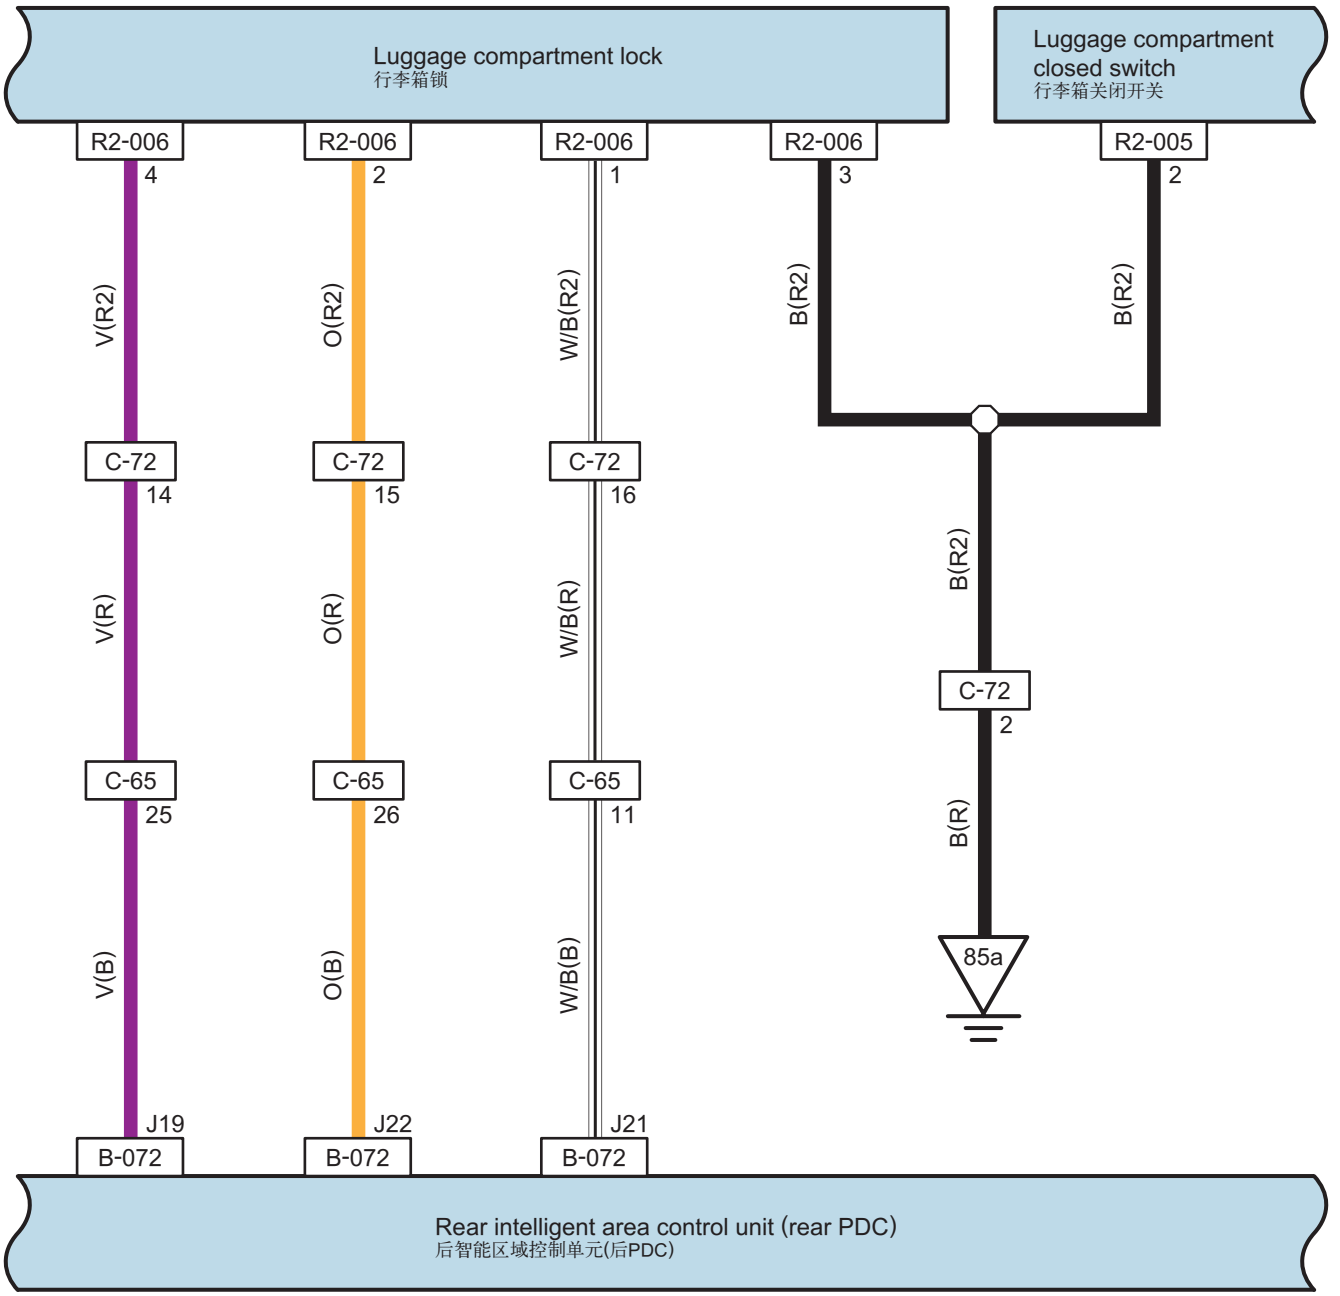

Combination light RR I
右后组合灯 I
B-104
3
B-104
4
B-104
5
B-104
6
B-104
1
B-104
2
B(B)
B(B)
B(B)
73b
Y(B)
L(B)
R/B(B)
R/B(B)
R/B(B)
Rear comfort_CAN
后部舒适_CAN
C3
B-055
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

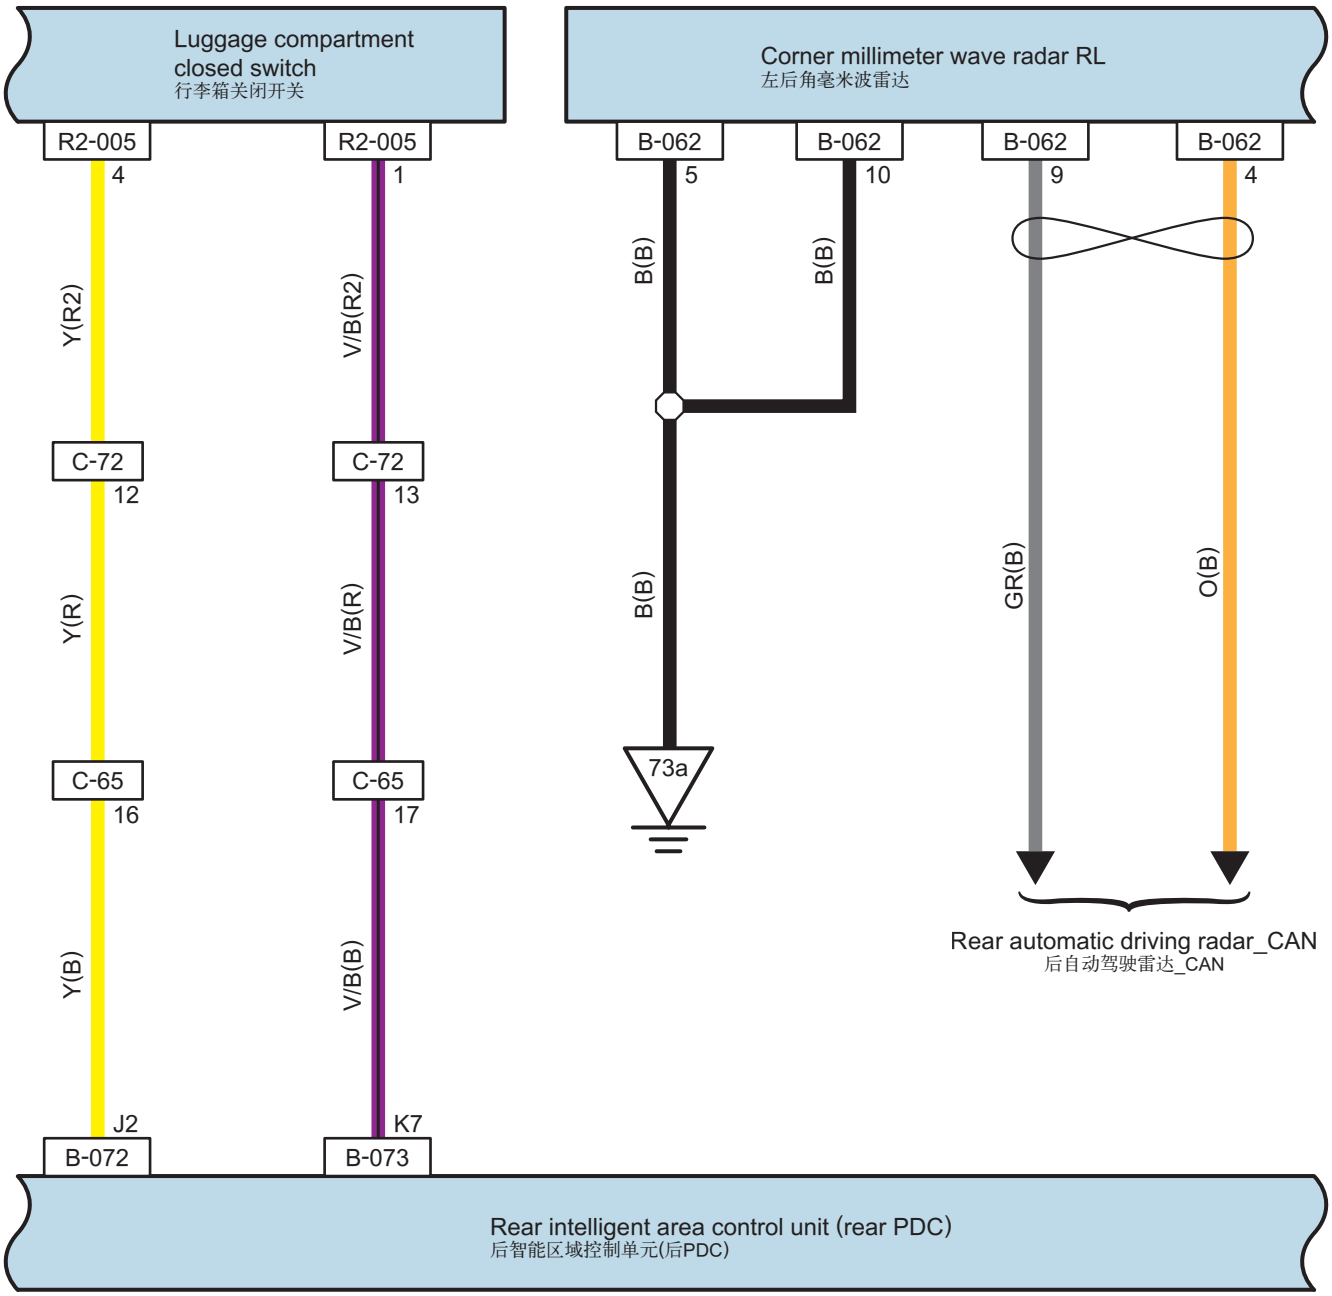

Combination light RR I
右后组合灯 I
Combination light RR II
右后组合灯 II
B-104
9
B-104
10
B-104
7
B-104
8
R2-004
4
R2-004
3
L/W(B)
G(B)
W/G(B)
Y/G(B)
W/G(R2)
Y/G(R2)
C-65
14
C-65
15
C-65
4
C-65
5
C-72
4
C-72
5
W/G(R)
Y/G(R)
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

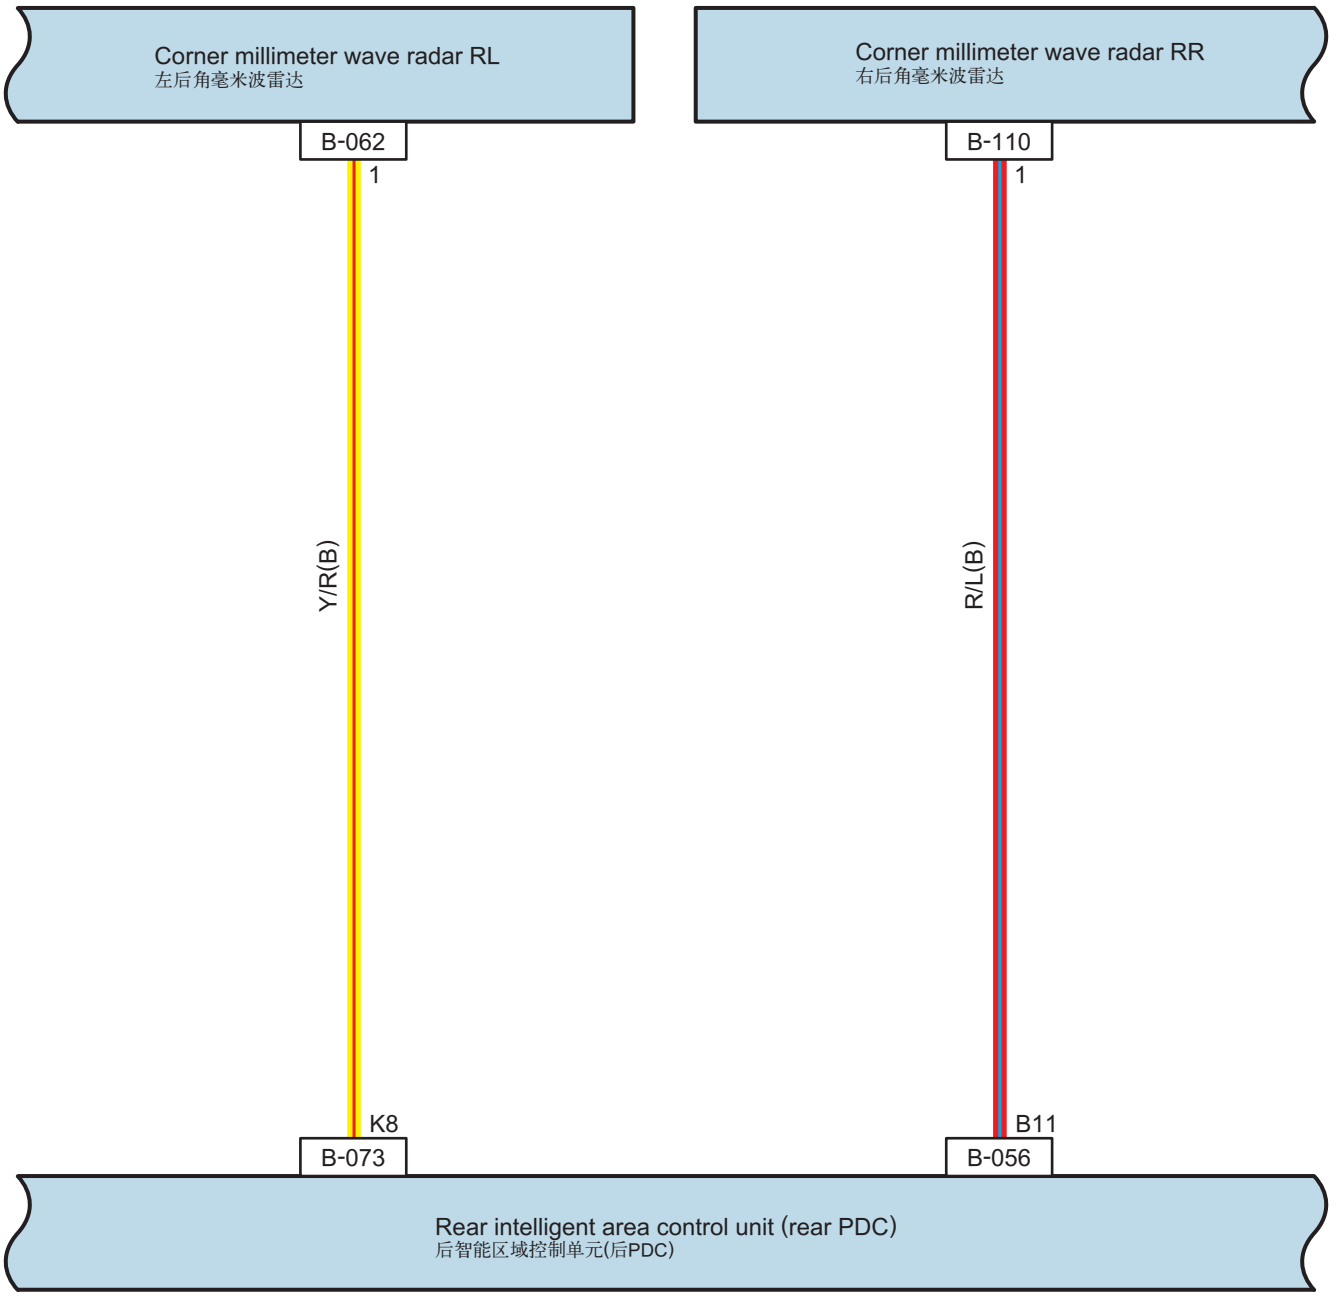

Combination light RR II
右后组合灯 II
R2-004
2
R2-004
1
L/W(R2)
G(R2)
C-72
6
C-72
7
L/W(R)
G(R)
License plate light LH
左侧牌照灯
RR-005
1
RR-005
2
G(RR)
B(RR)
G(RR)
B(RR)
C-53
10
C-53
13
G(B)
B(B)
73b
License plate light RH
右侧牌照灯
RR-009
1
RR-009
2
G(RR)
B(RR)
J12
B-072
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

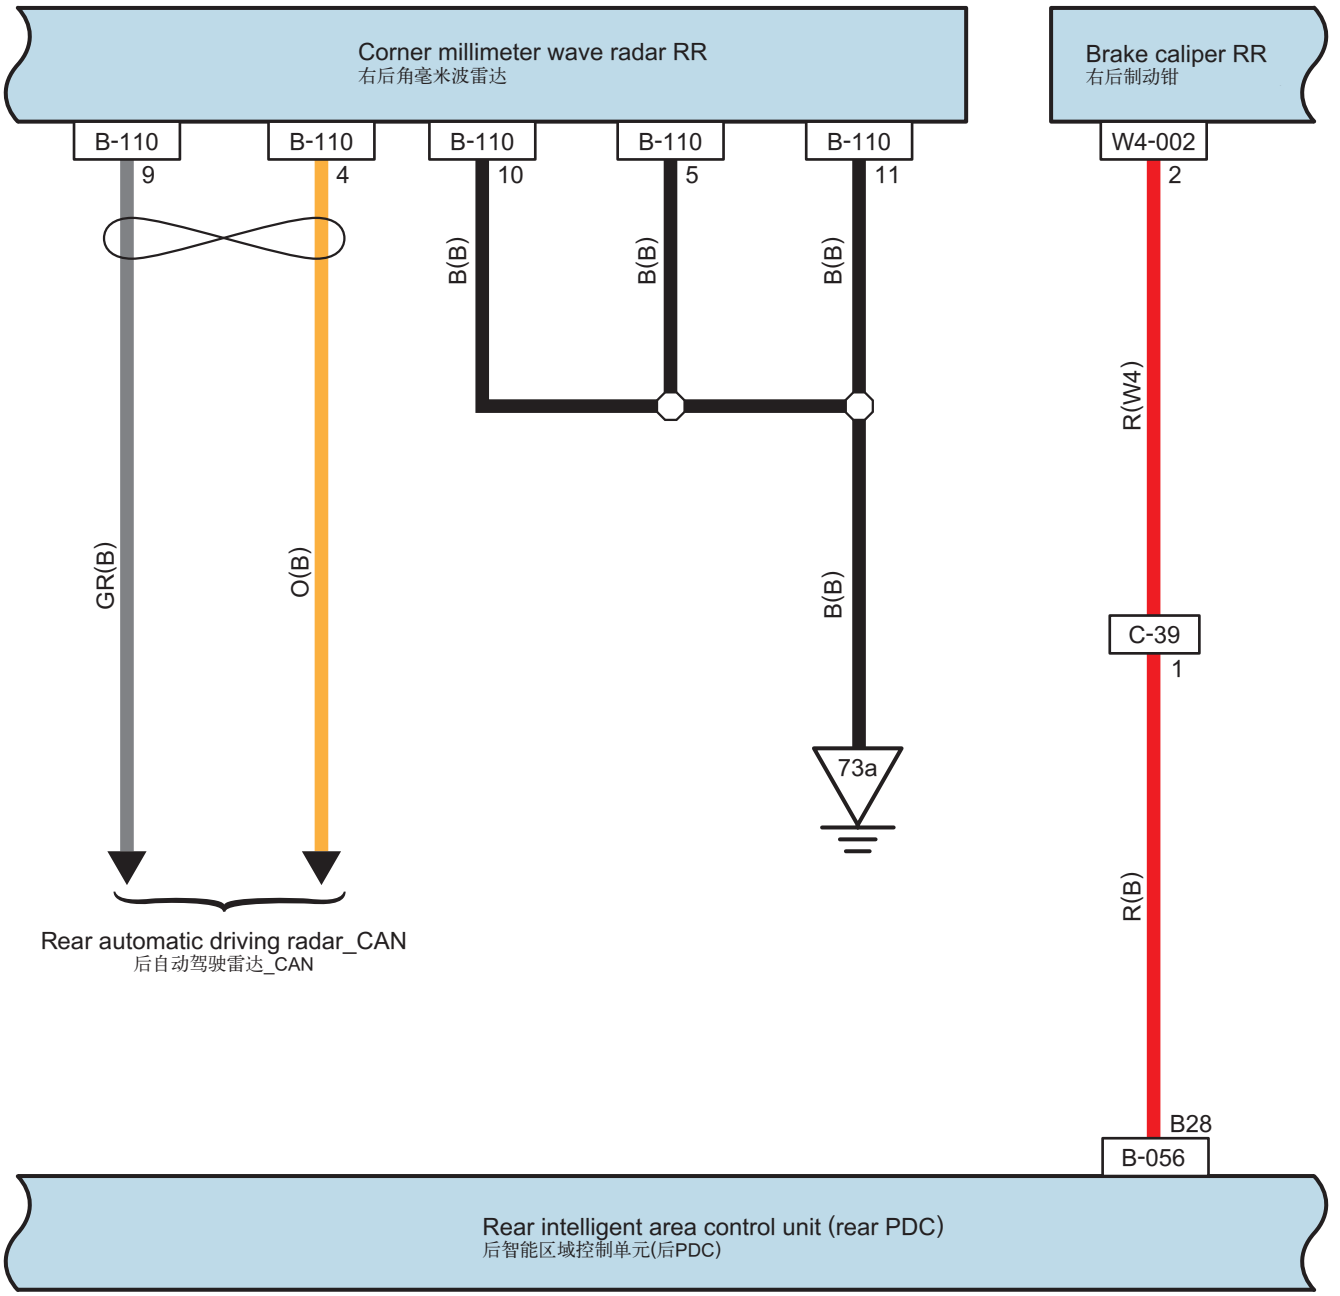

High mounted stop light
高位制动灯
R-001
2
R-001
1
L/R(R)
B(R)
C-65
19
L/R(B)
85a
J13
B-072
Luggage compartment light RH
右行李箱灯
B-089
1
B-089
3
B/O(B)
B(B)
82b
D3
B-054
Seat belt buckle RL
左后安全带锁扣
B-048
1
B-048
2
G/W(B)
B(B)
B(B)
57a
H22
B-070
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

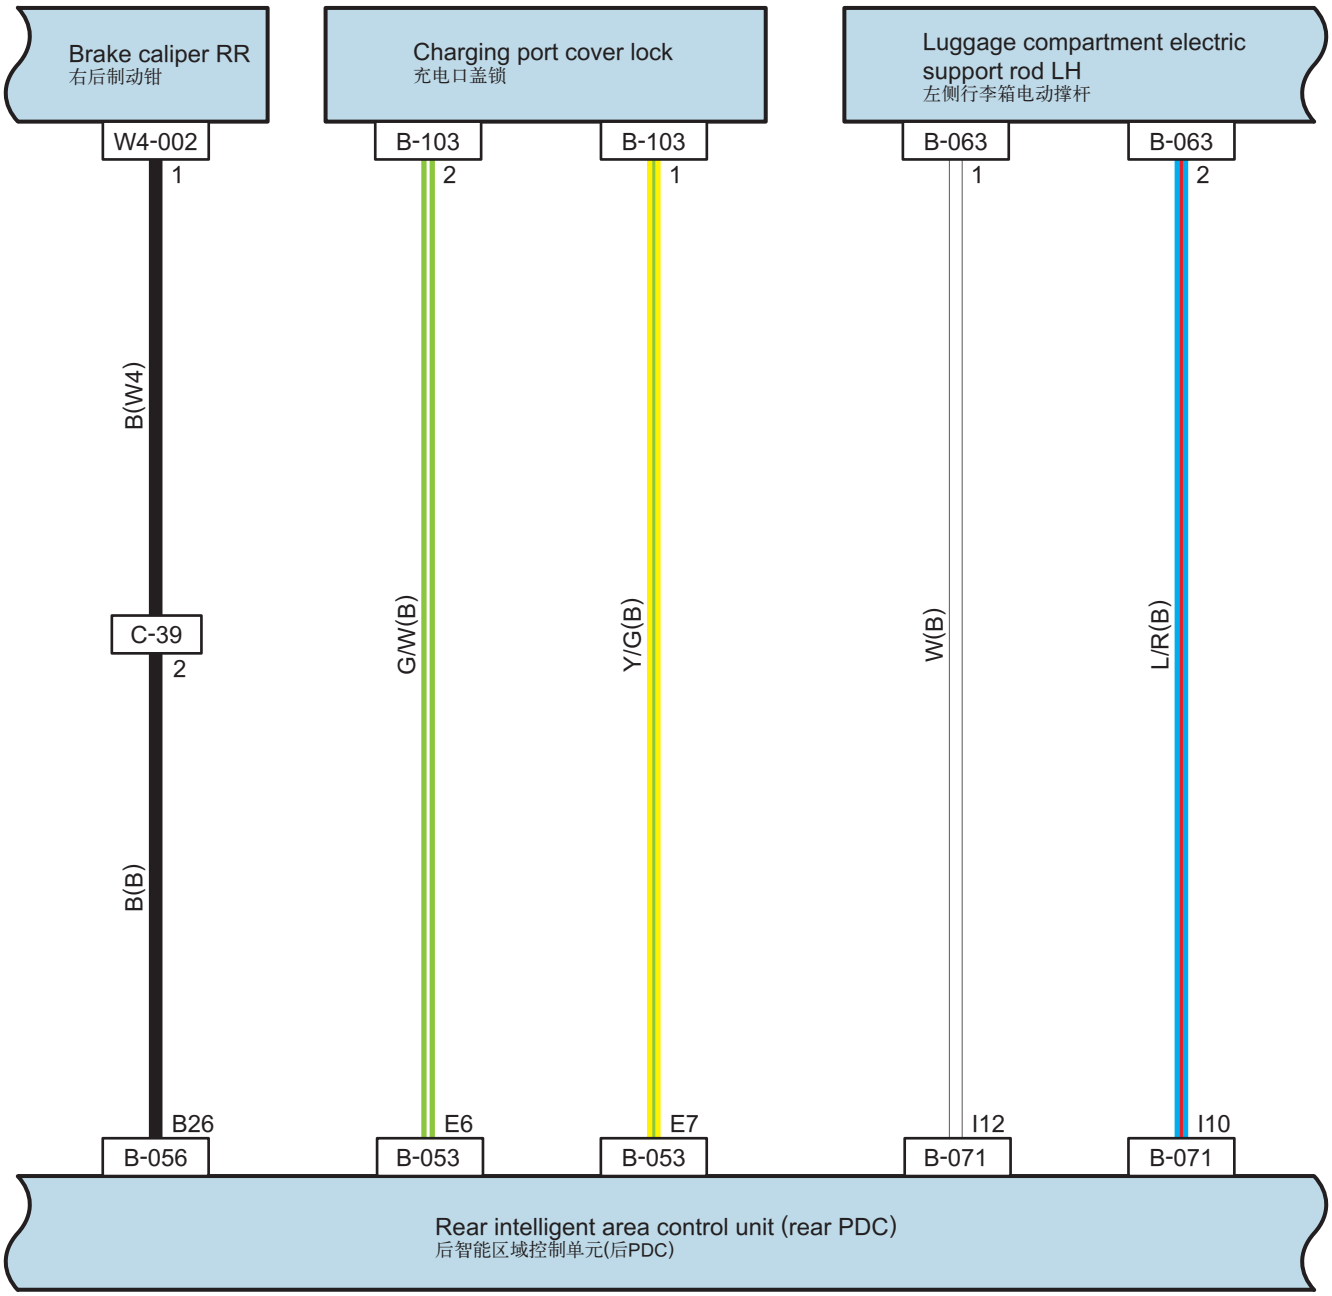

Rear center seat belt buckle
后排中间安全带锁扣
B-047
2
B-047
1
B(B)
Y/B(B)
Seat belt buckle RR
右后安全带锁扣
B-045
1
B-045
2
G(B)
B(B)
52b
Luggage compartment lock
行李箱锁
R2-006
6
R2-006
5
Y/L(R2)
V/W(R2)
C-72
27
C-72
20
Y/L(R)
V/W(R)
C-65
23
C-65
24
Y/L(B)
V/W(B)
D14
B-054
D11
B-054
J27
B-072
J26
B-072
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

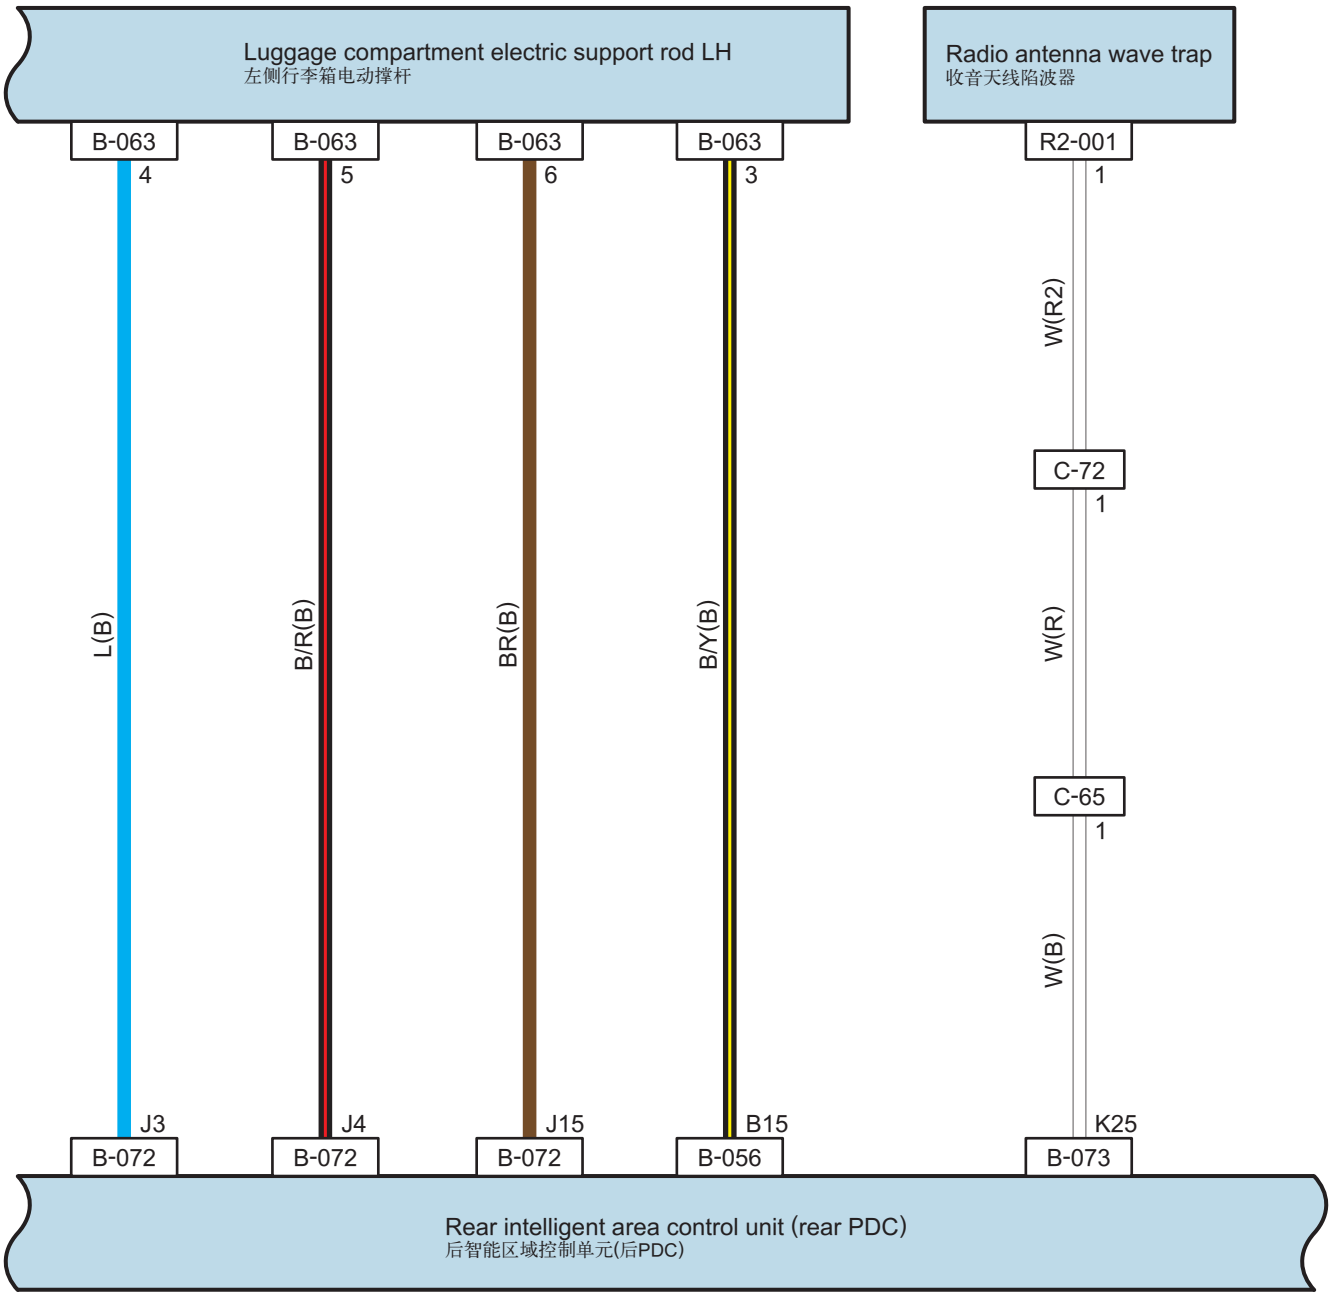

Luggage compartment lock
行李箱锁
Luggage compartment closed switch
行李箱关闭开关
R2-006
4
V(R2)
C-72
14
V(R)
C-65
25
V(B)
J19
B-072
R2-006
2
O(R2)
C-72
15
O(R)
C-65
26
O(B)
J22
B-072
R2-006
1
W/B(R2)
C-72
16
W/B(R)
C-65
11
W/B(B)
J21
B-072
R2-006
3
B(R2)
R2-005
2
B(R2)
B(R2)
C-72
2
B(R)
85a
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

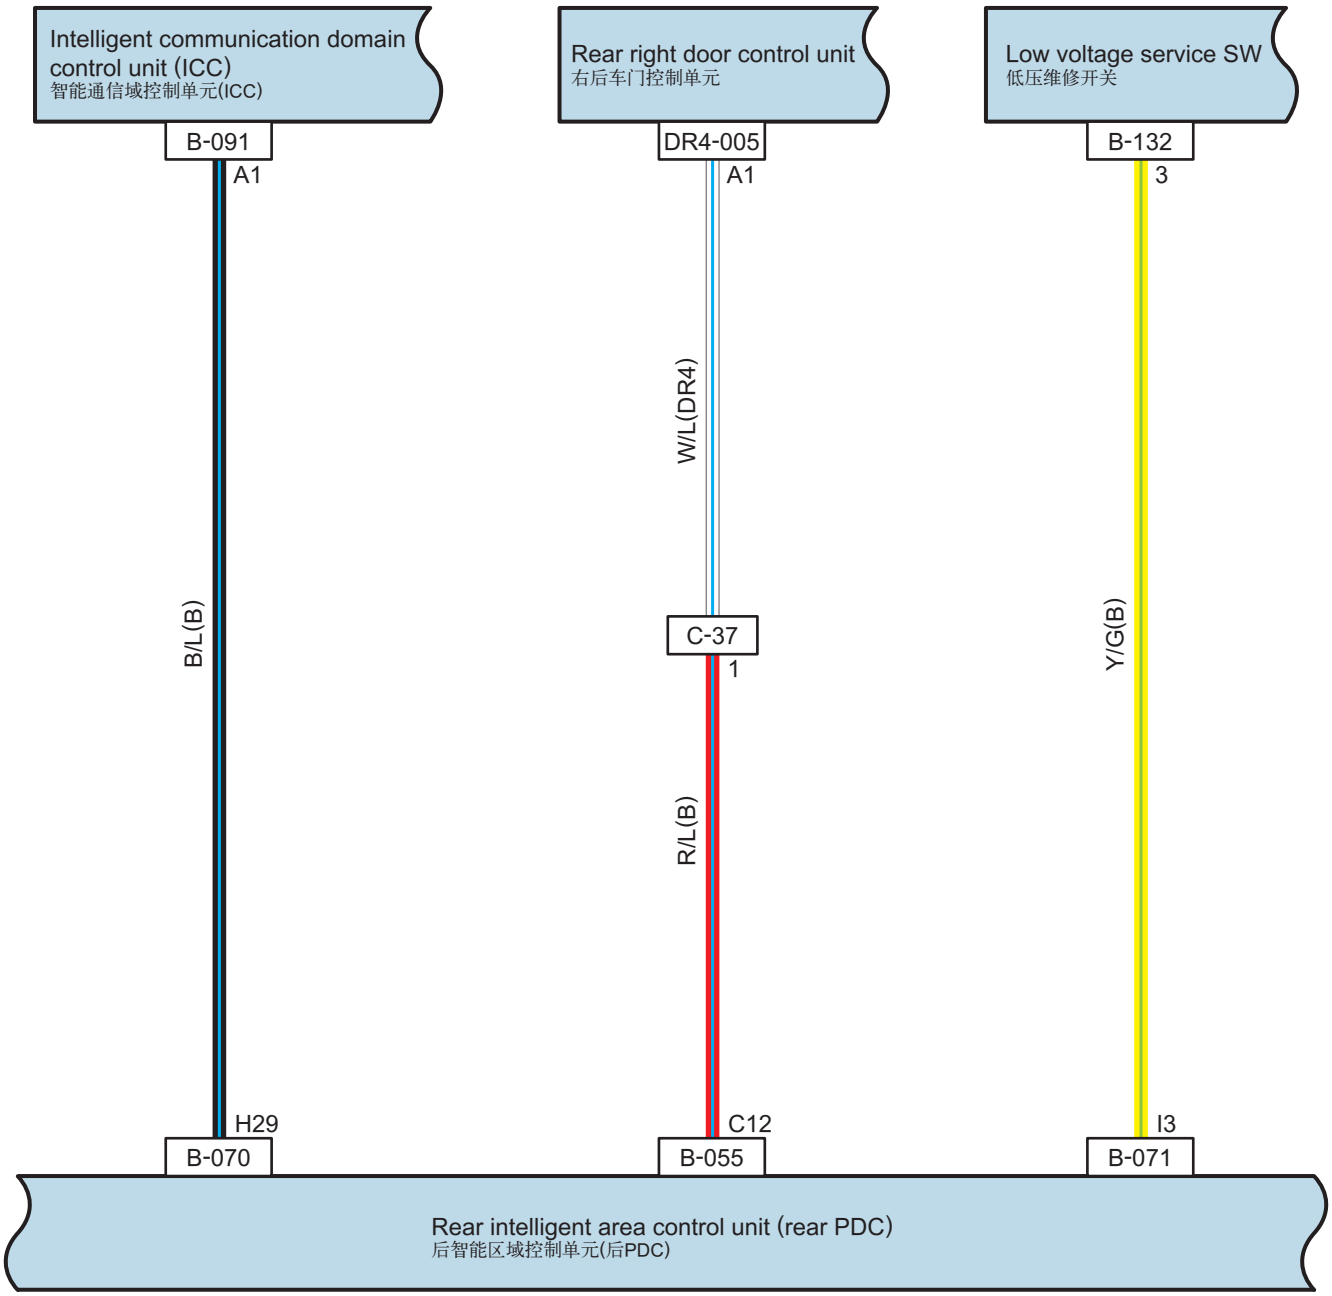

Luggage compartment closed switch
行李箱关闭开关
R2-005
4
R2-005
1
Y(R2)
V/B(R2)
C-72
12
C-72
13
Y(R)
V/B(R)
C-65
16
C-65
17
Y(B)
V/B(B)
J2
K7
B-072
B-073
Corner millimeter wave radar RL
左后角毫米波雷达
B-062
5
B-062
10
B-062
9
B-062
4
B(B)
B(B)
B(B)
73a
GR(B)
O(B)
Rear automatic driving radar_CAN
后自动驾驶雷达_CAN
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

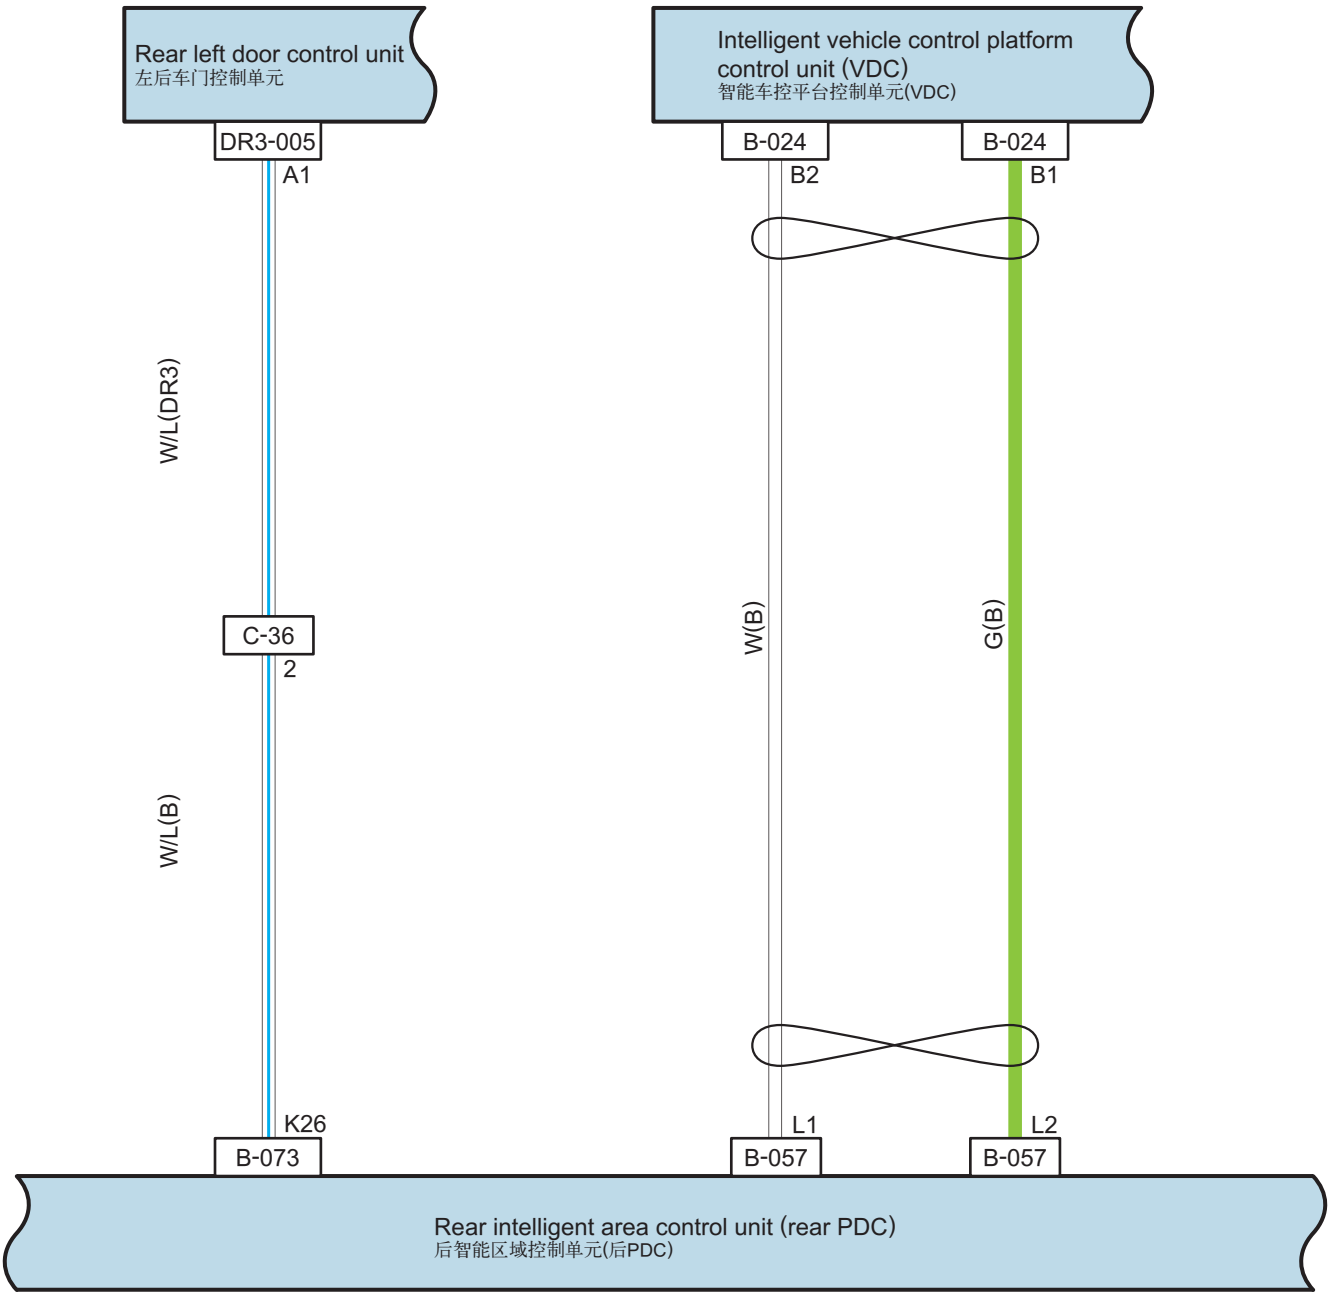

Corner millimeter wave radar RL
左后角毫米波雷达
B-062
1
Y/R(B)
K8
B-073
Corner millimeter wave radar RR
右后角毫米波雷达
B-110
1
R/L(B)
B11
B-056
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

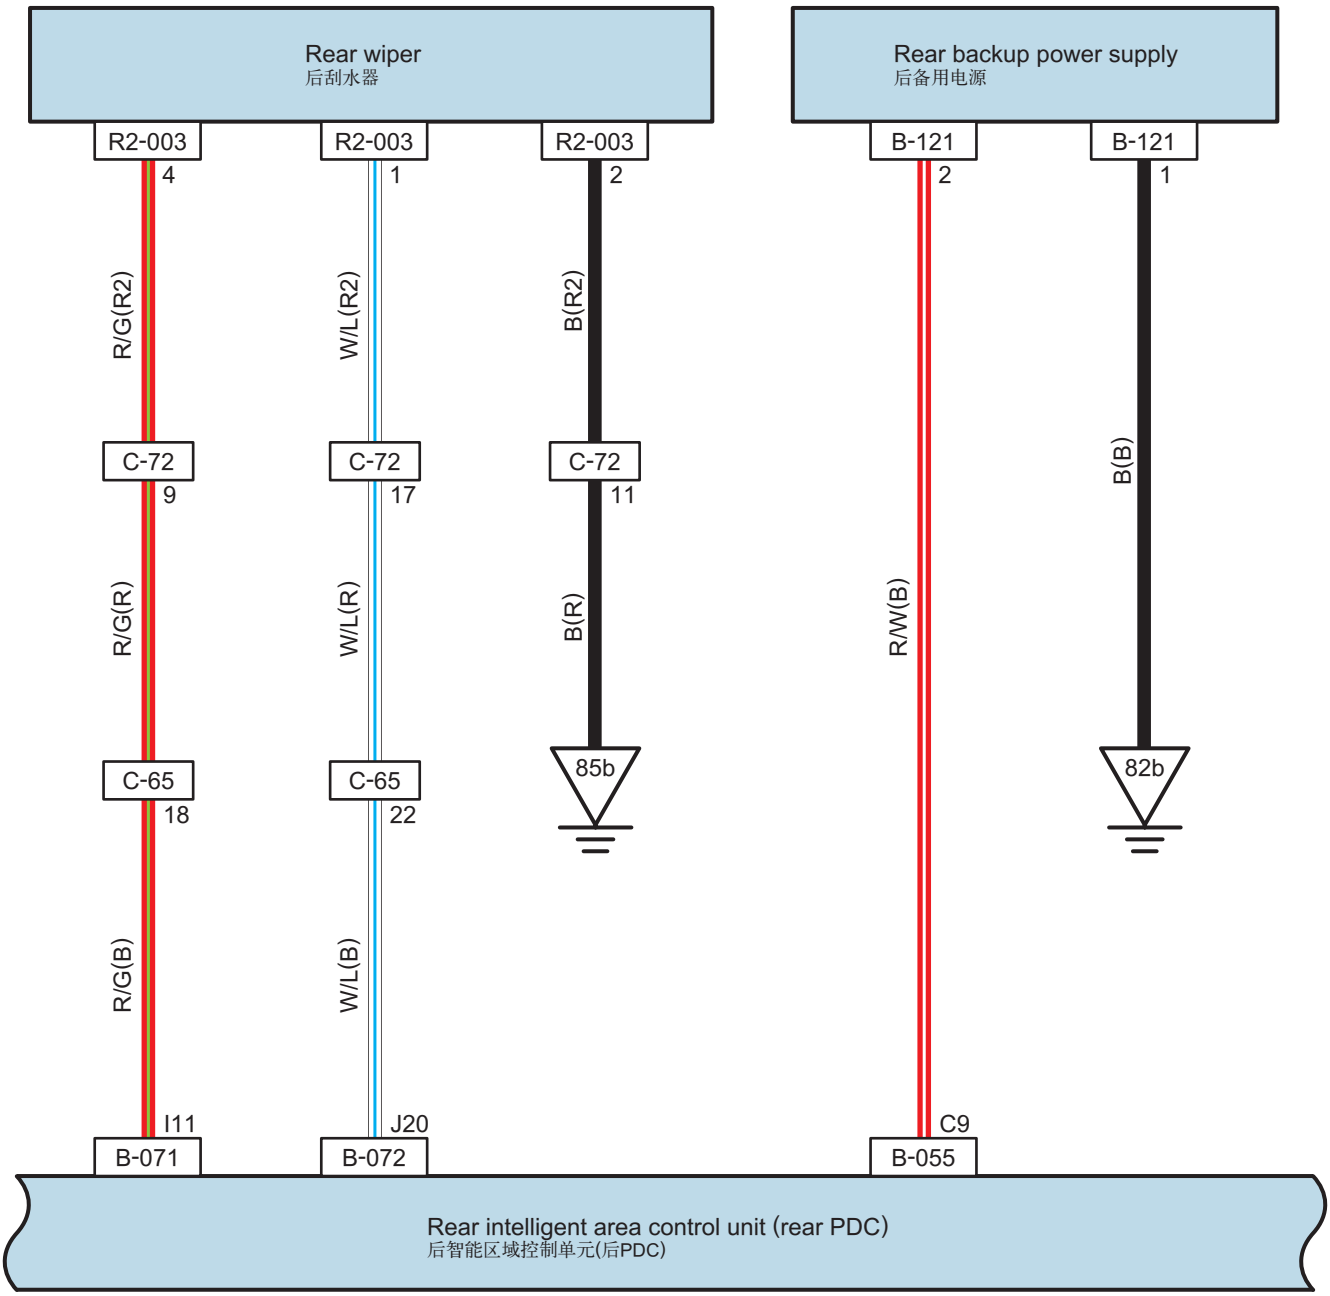

Corner millimeter wave radar RR
右后角毫米波雷达
B-110
9
B-110
4
B-110
10
B-110
5
B-110
11
B(B)
B(B)
B(B)
GR(B)
O(B)
B(B)
73a
Rear automatic driving radar_CAN
后自动驾驶雷达_CAN
Brake caliper RR
右后制动钳
W4-002
2
R(W4)
C-39
1
R(B)
B28
B-056
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

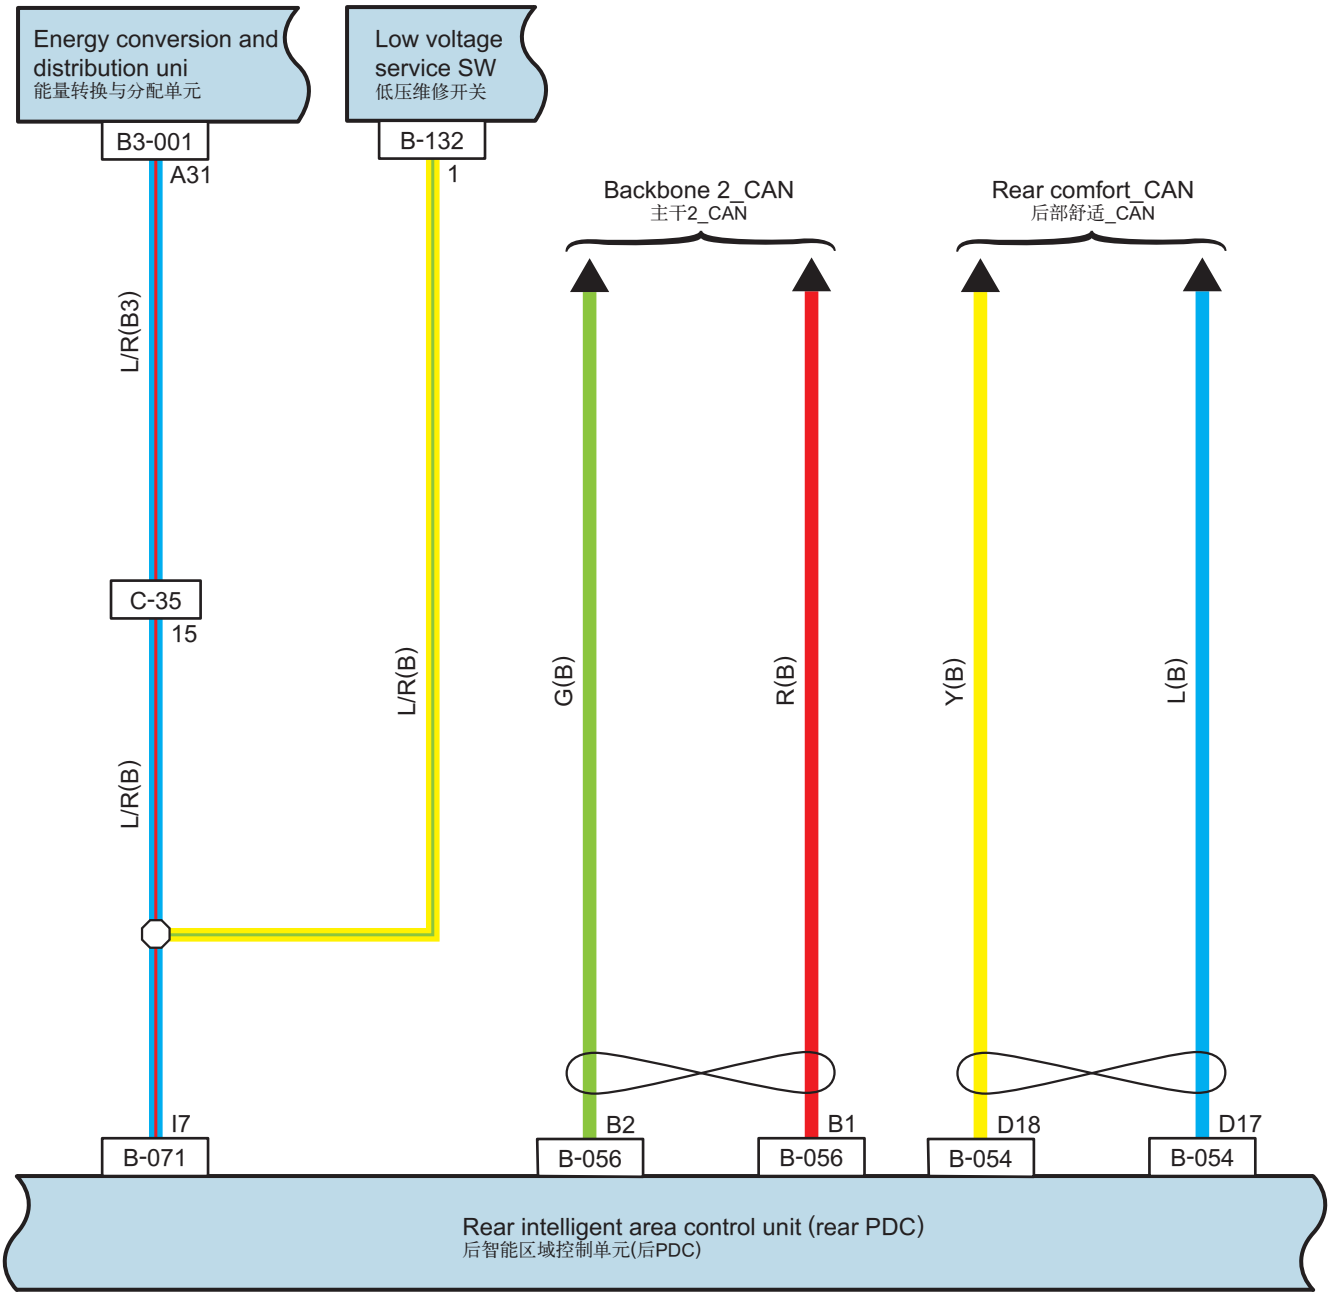

Brake caliper RR
右后制动钳
W4-002
1
B(W4)
C-39
2
B(B)
B26
B-056
Charging port cover lock
充电口盖锁
B-103
2
G/W(B)
E6
B-053
B-103
1
Y/G(B)
E7
B-053
Luggage compartment electric support rod LH
左侧行李箱电动撑杆
B-063
1
W(B)
I12
B-071
B-063
2
L/R(B)
I10
B-071
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

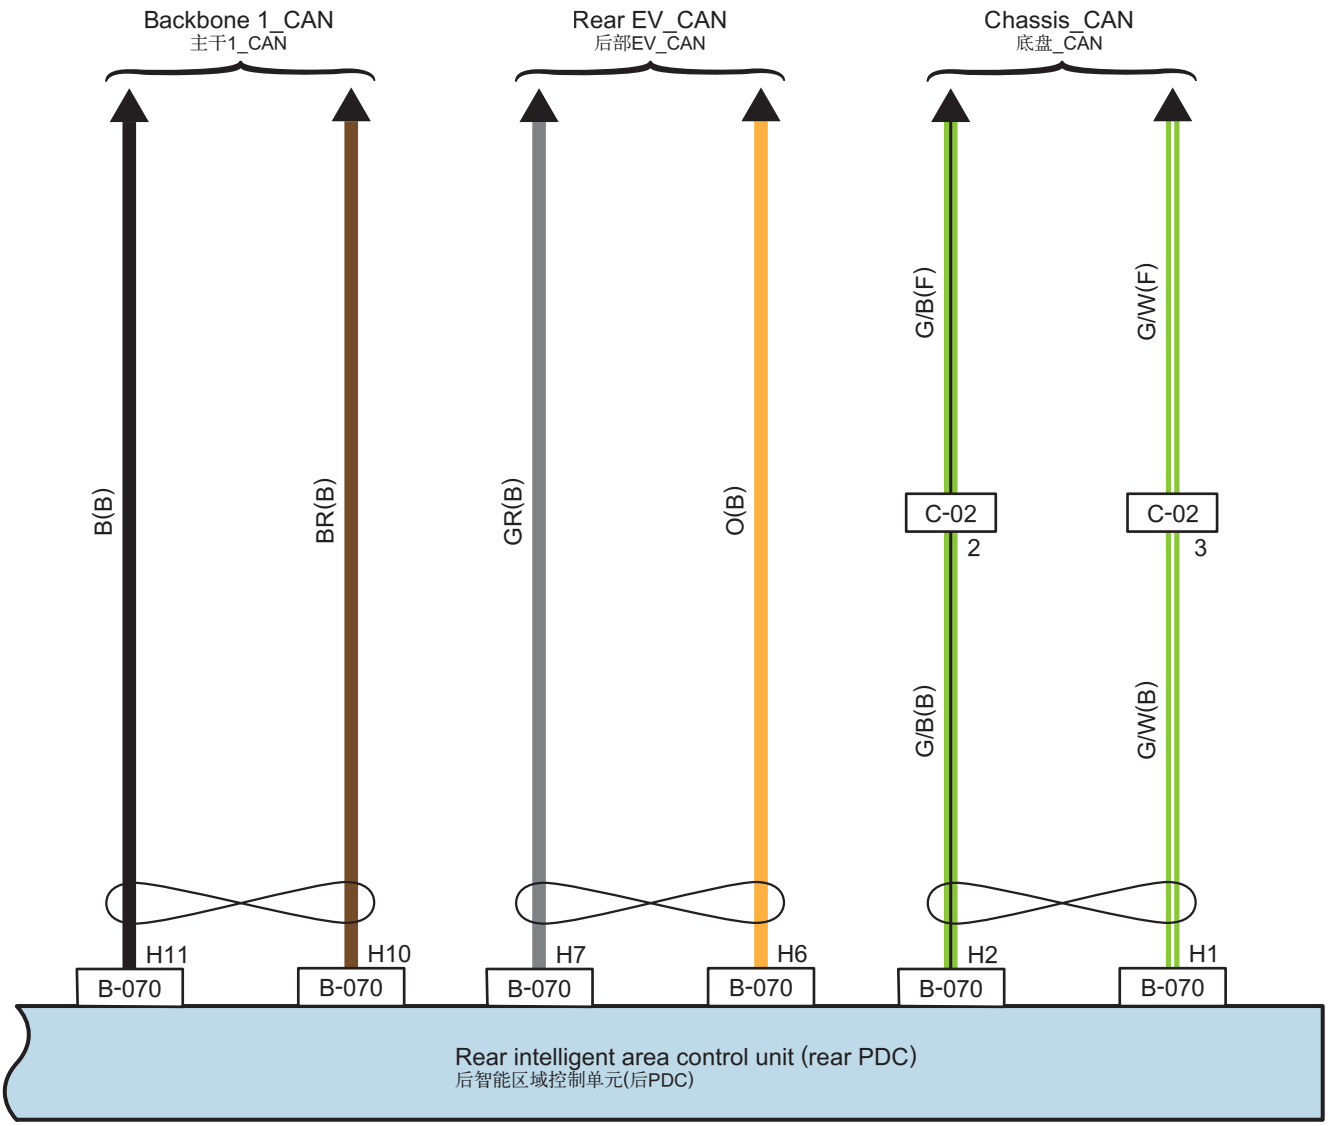

Luggage compartment electric support rod LH
左侧行李箱电动撑杆
Radio antenna wave trap
收音天线陷波器
B-063
4
B-063
5
B-063
6
B-063
3
R2-001
1
L(B)
B/R(B)
BR(B)
B/Y(B)
W(R2)
C-72
1
W(R)
C-65
1
W(B)
J3
J4
J15
B15
K25
B-072
B-072
B-072
B-056
B-073
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

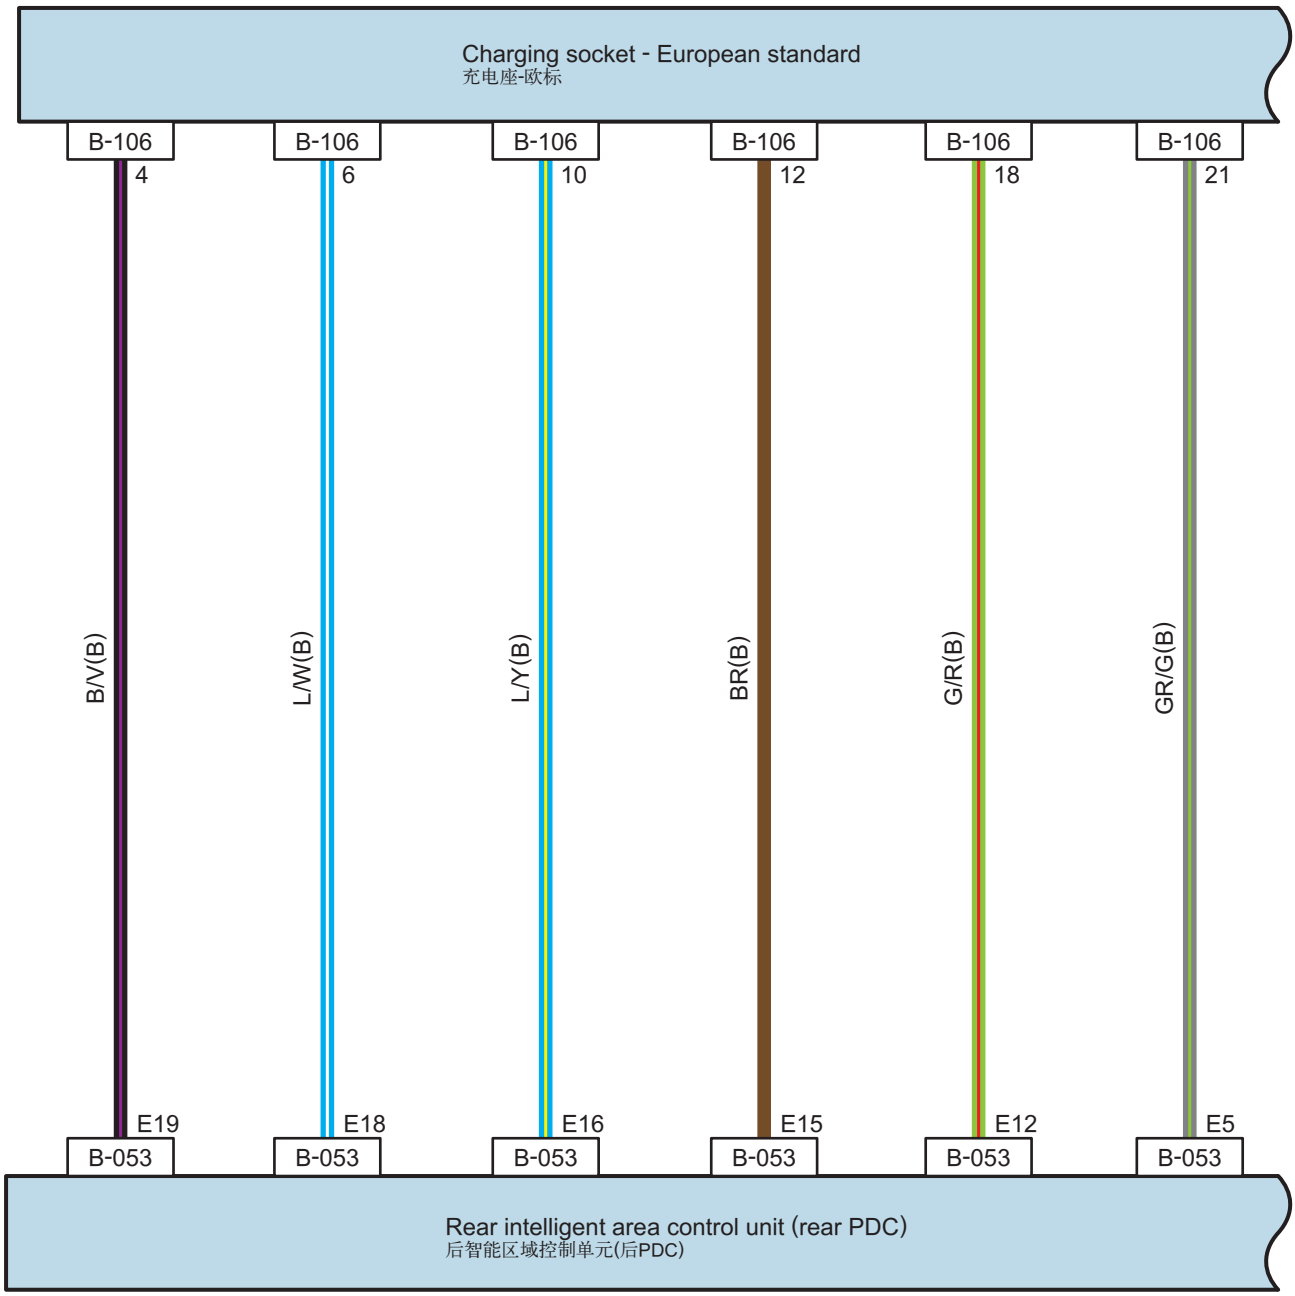

Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
B-091
A1
B/L(B)
H29
B-070
Rear right door control unit
右后车门控制单元
DR4-005
A1
W/L(DR4)
C-37
1
R/L(B)
C12
B-055
Low voltage service SW
低压维修开关
B-132
3
Y/G(B)
I3
B-071
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

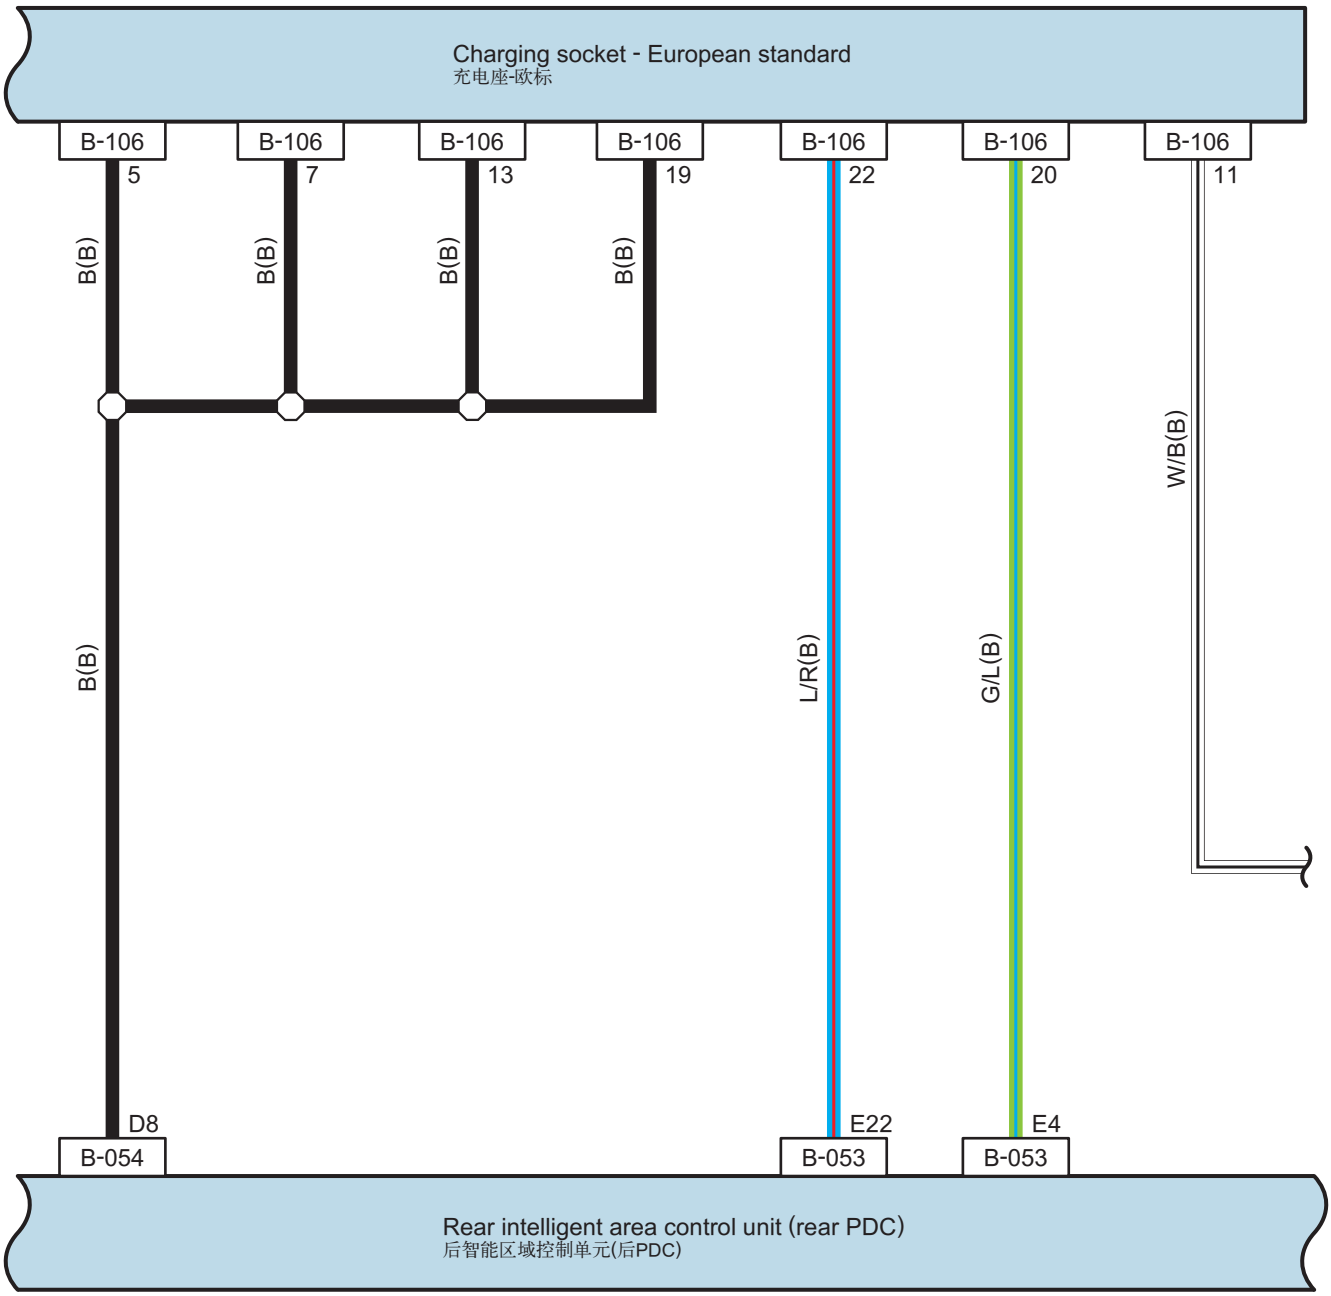

Rear left door control unit
左后车门控制单元
DR3-005
A1
W/L(DR3)
C-36
2
W/L(B)
K26
B-073
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-024
B2
B-024
B1
W(B)
G(B)
L1
B-057
L2
B-057
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

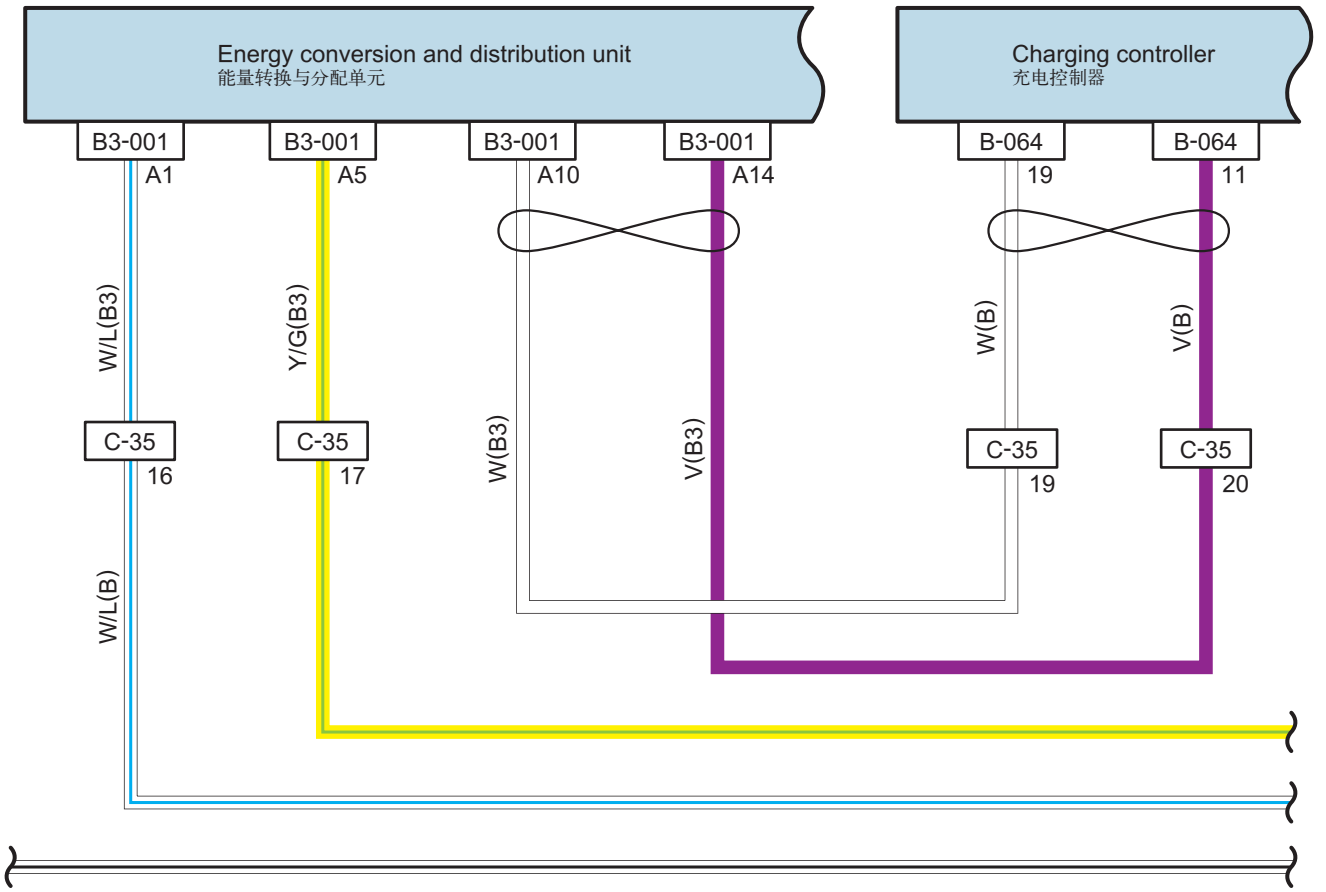

Rear wiper
后刮水器
Rear backup power supply
后备用电源
R2-003
4
R2-003
1
R2-003
2
B-121
2
B-121
1
R/G(R2)
W/L(R2)
B(R2)
R/W(B)
B(B)
C-72
9
C-72
17
C-72
11
R/G(R)
W/L(R)
B(R)
85b
82b
C-65
18
C-65
22
R/G(B)
W/L(B)
I11
J20
C9
B-071
B-072
B-055
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)


Energy conversion and distribution uni
能量转换与分配单元
Low voltage service SW
低压维修开关
B3-001
A31
B-132
1
Backbone 2_CAN
主干2_CAN
Rear comfort_CAN
后部舒适_CAN
L/R(B3)
C-35
15
L/R(B)
L/R(B)
G(B)
R(B)
Y(B)
L(B)
I7
B-071
B2
B-056
B1
B-056
D18
B-054
D17
B-054
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

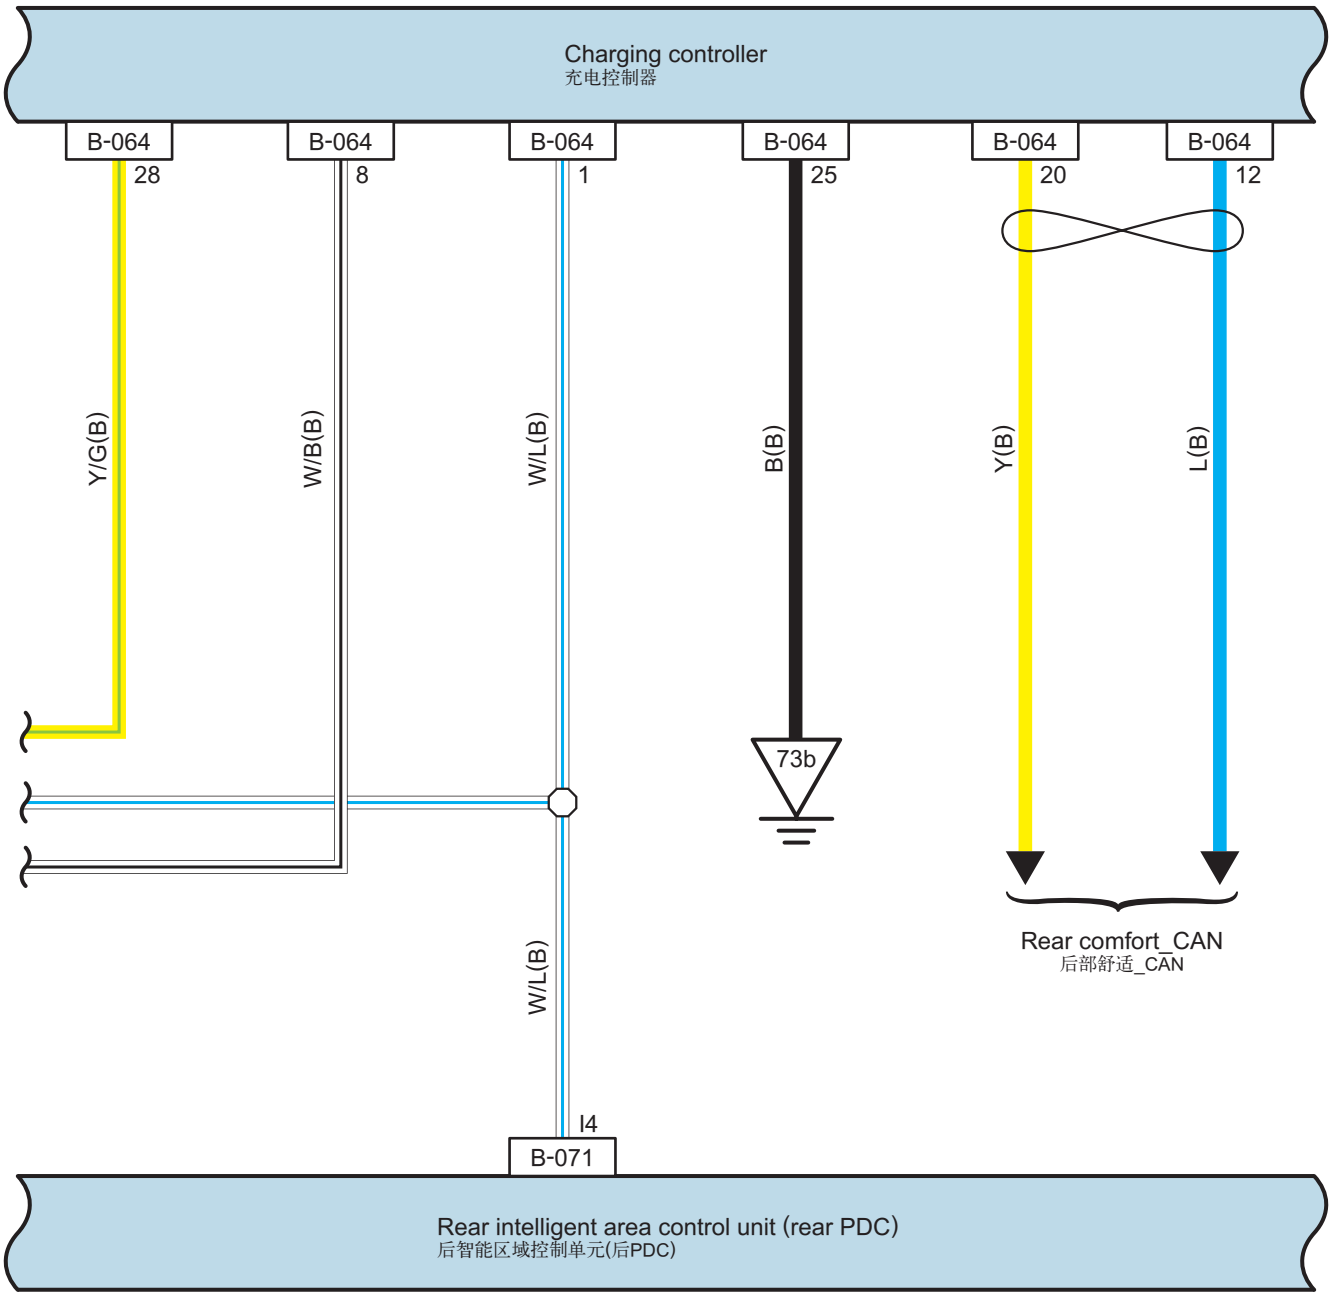

Backbone 1_CAN
主干1_CAN
Rear EV_CAN
后部EV_CAN
Chassis_CAN
底盘_CAN
B(B)
BR(B)
GR(B)
O(B)
G/B(F)
G/W(F)
C-02
2
C-02
3
G/B(B)
G/W(B)
H11
H10
H7
H6
H2
H1
B-070
B-070
B-070
B-070
B-070
B-070
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

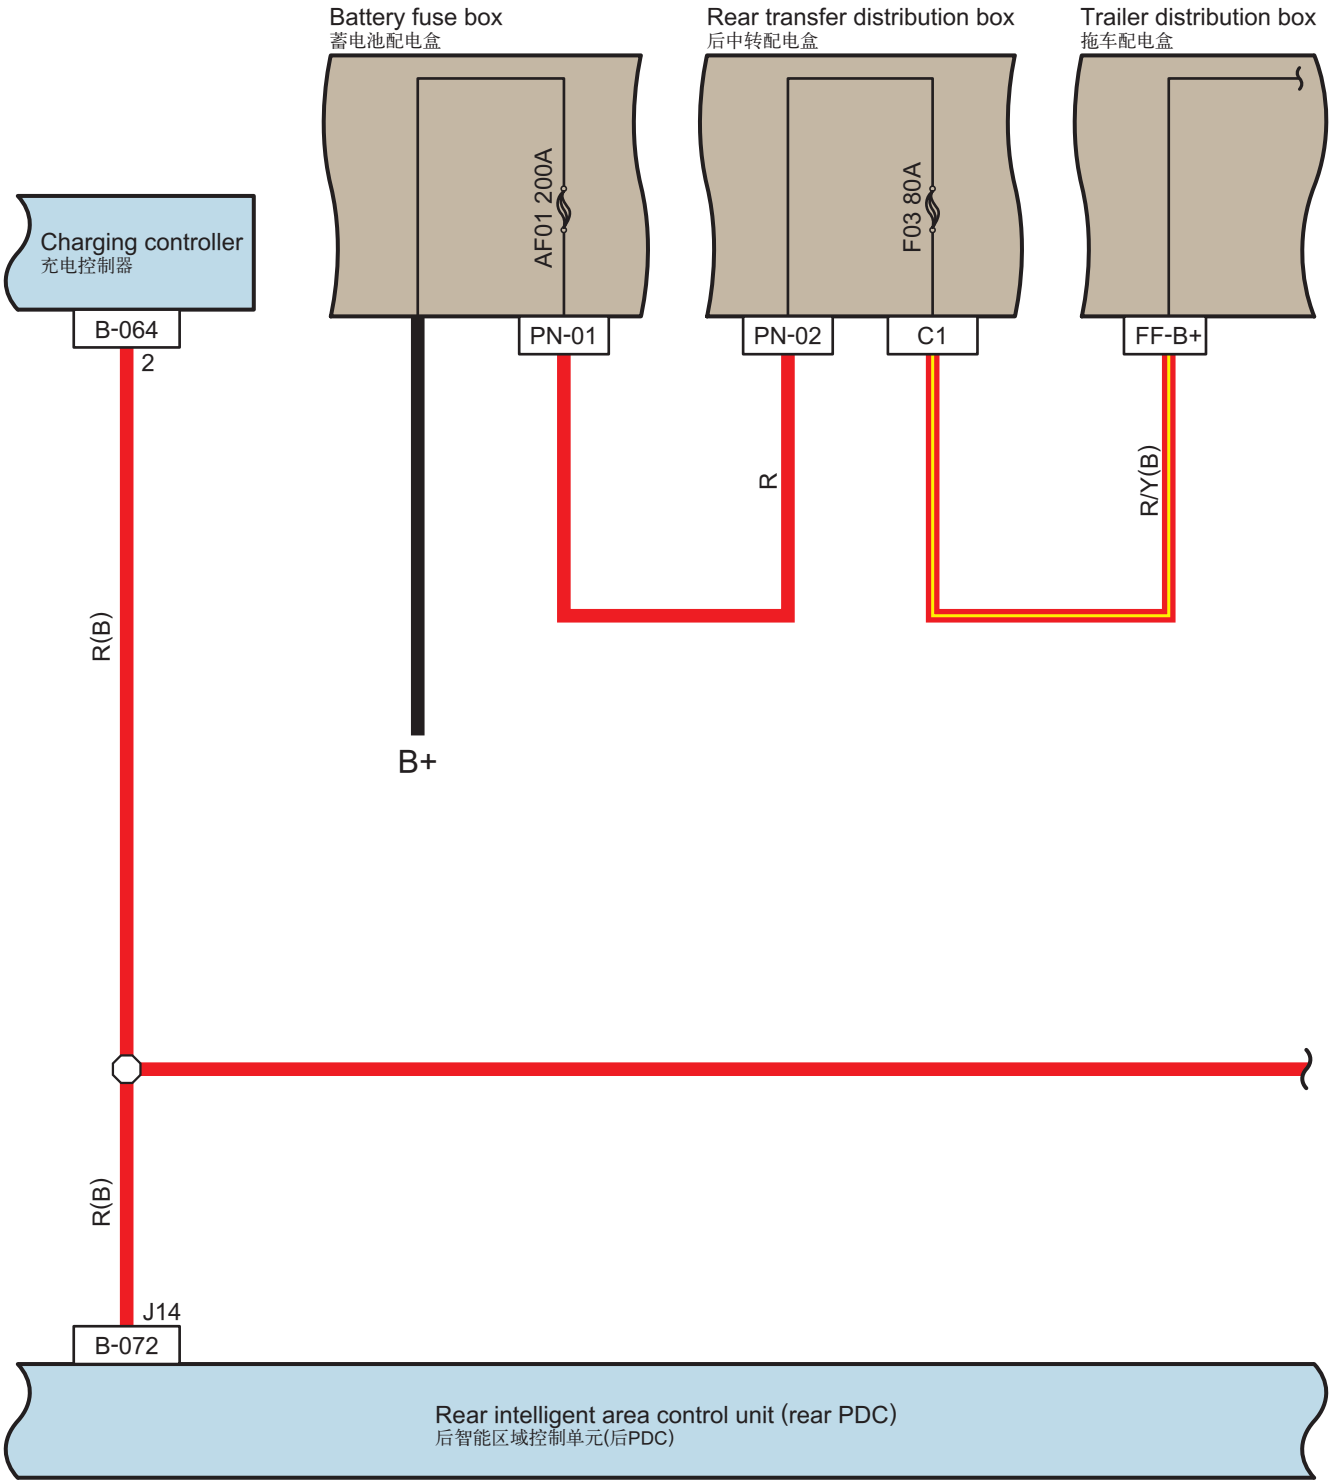

Charging socket - European standard
充电座-欧标
B-106
4
B-106
6
B-106
10
B-106
12
B-106
18
B-106
21
B/V(B)
L/W(B)
L/Y(B)
BR(B)
G/R(B)
GR/G(B)
E19
E18
E16
E15
E12
E5
B-053
B-053
B-053
B-053
B-053
B-053
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

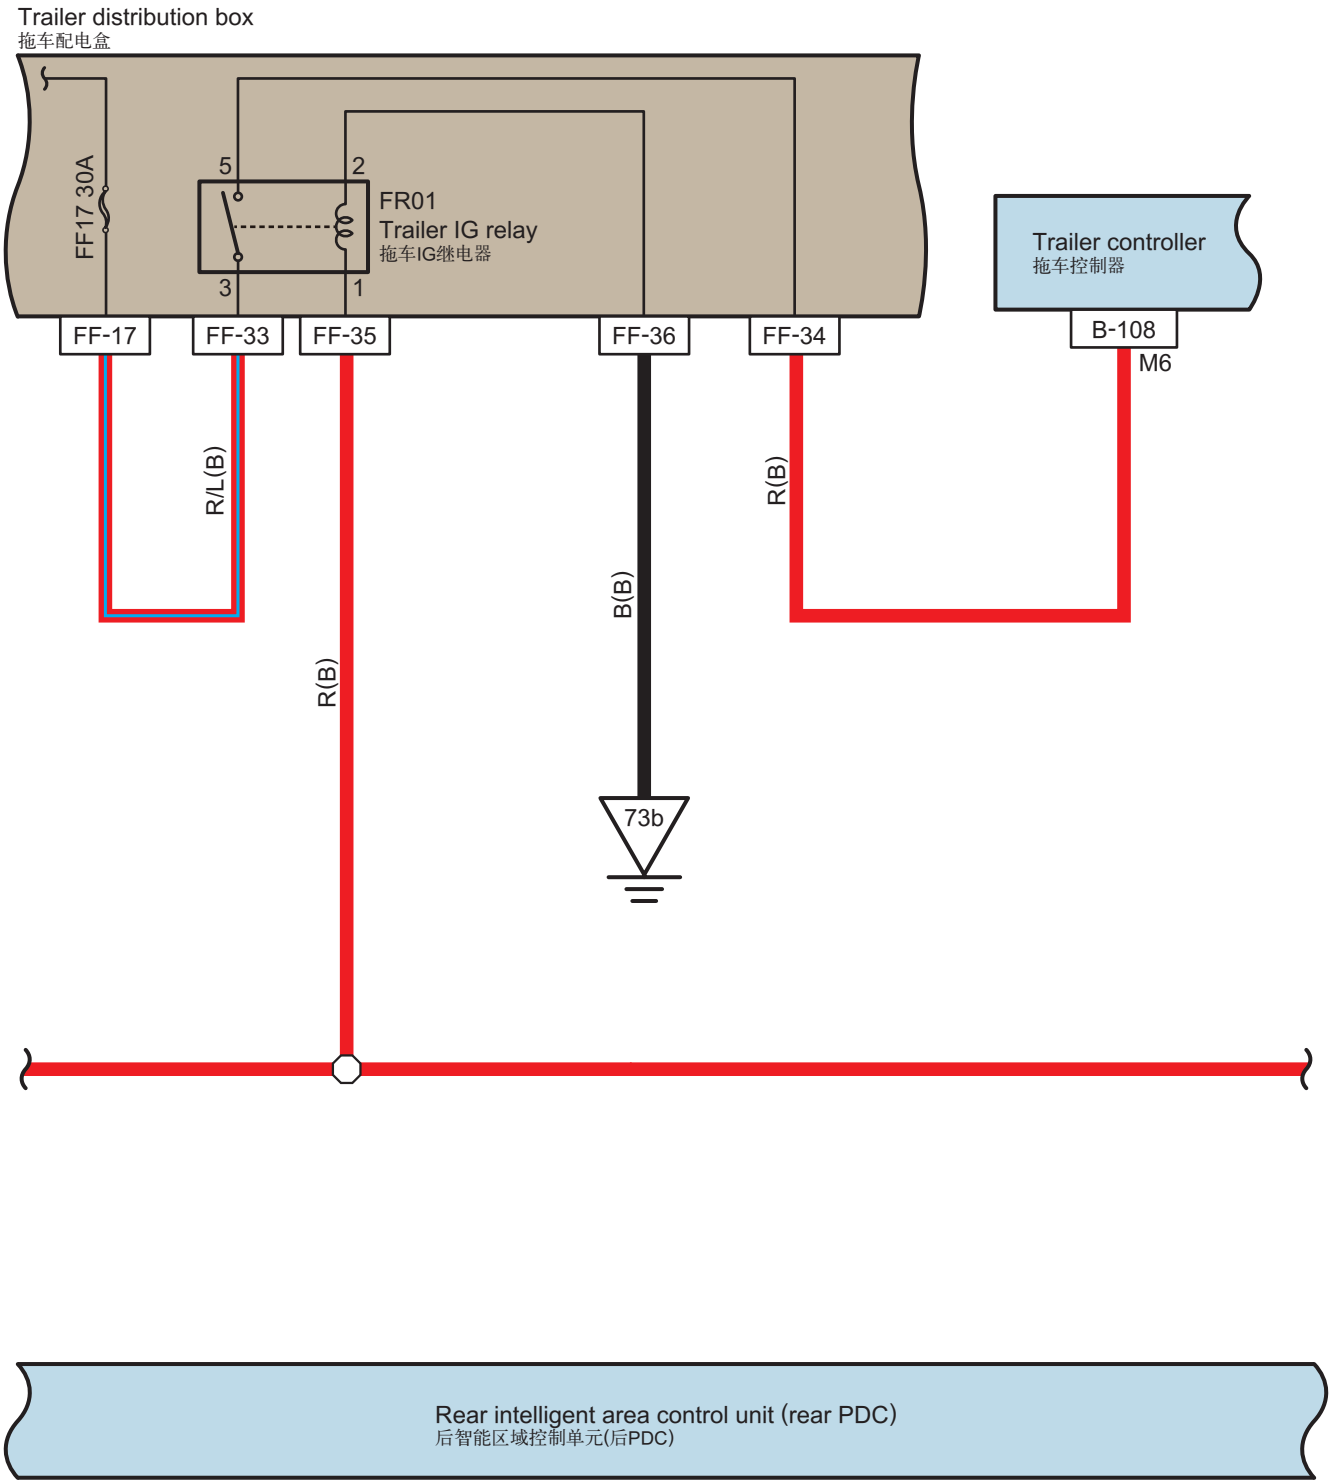

Charging socket - European standard
充电座-欧标
B-106
5
B-106
7
B-106
13
B-106
19
B-106
22
B-106
20
B-106
11
B(B)
B(B)
B(B)
B(B)
B(B)
L/R(B)
G/L(B)
W/B(B)
D8
B-054
E22
B-053
E4
B-053
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

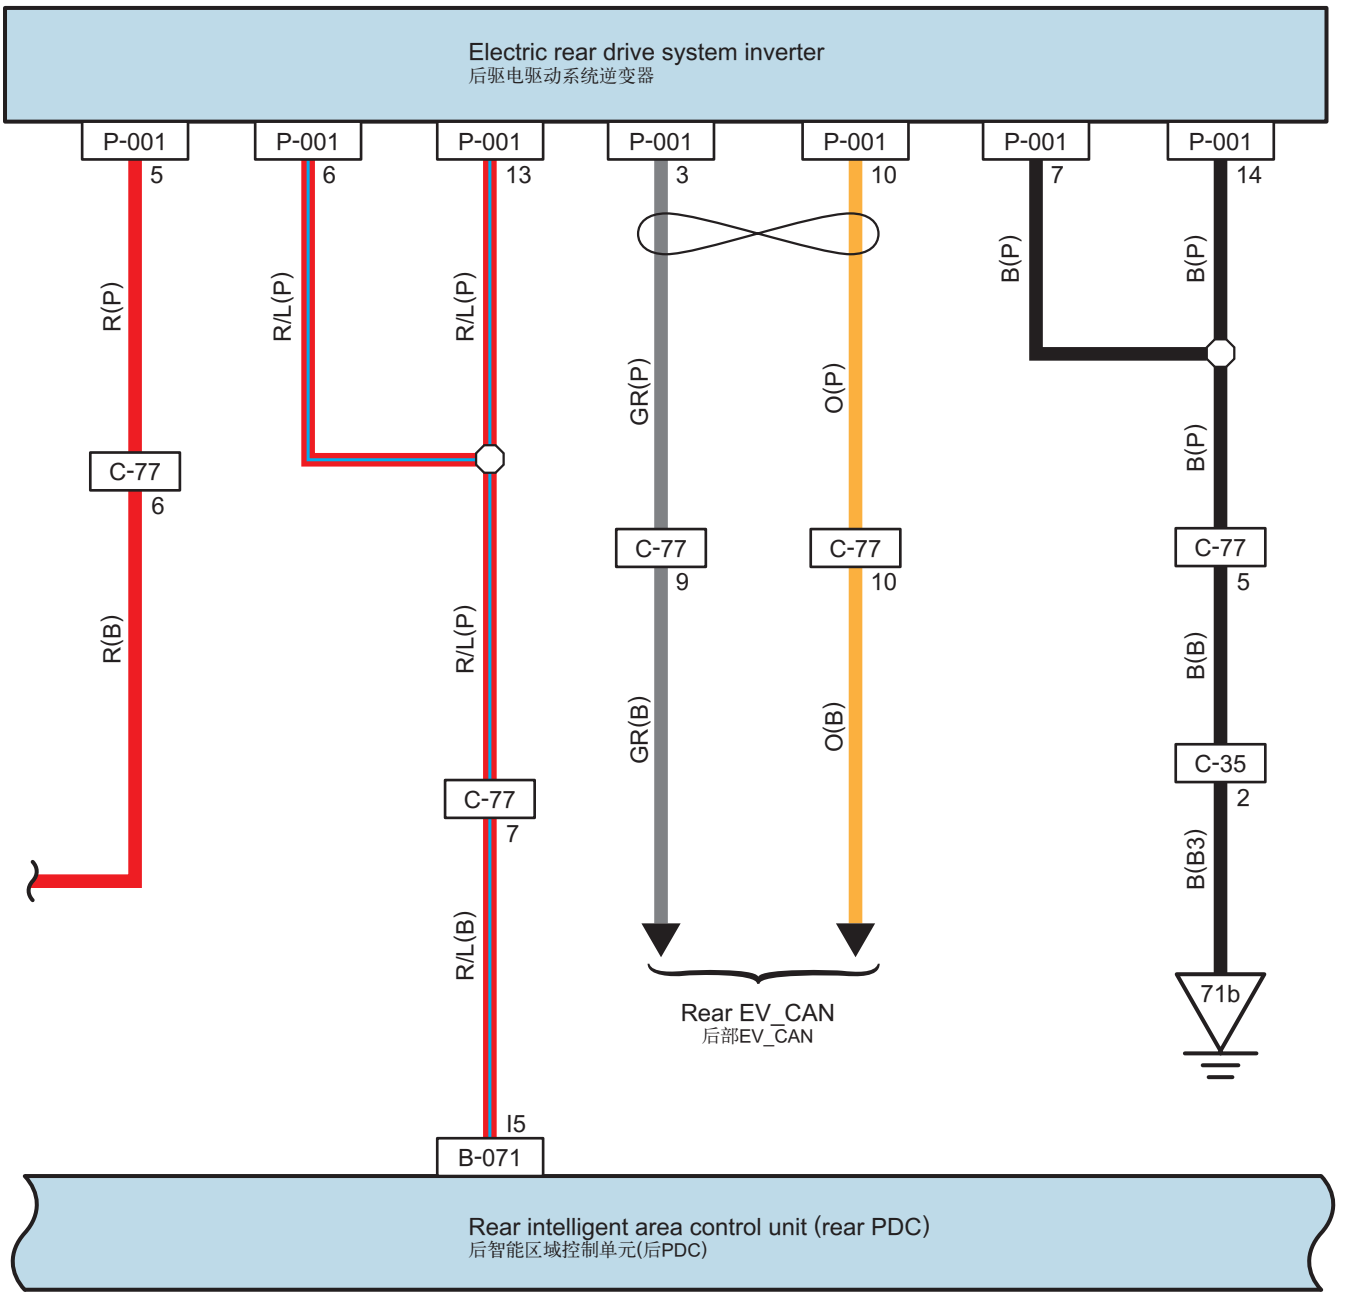


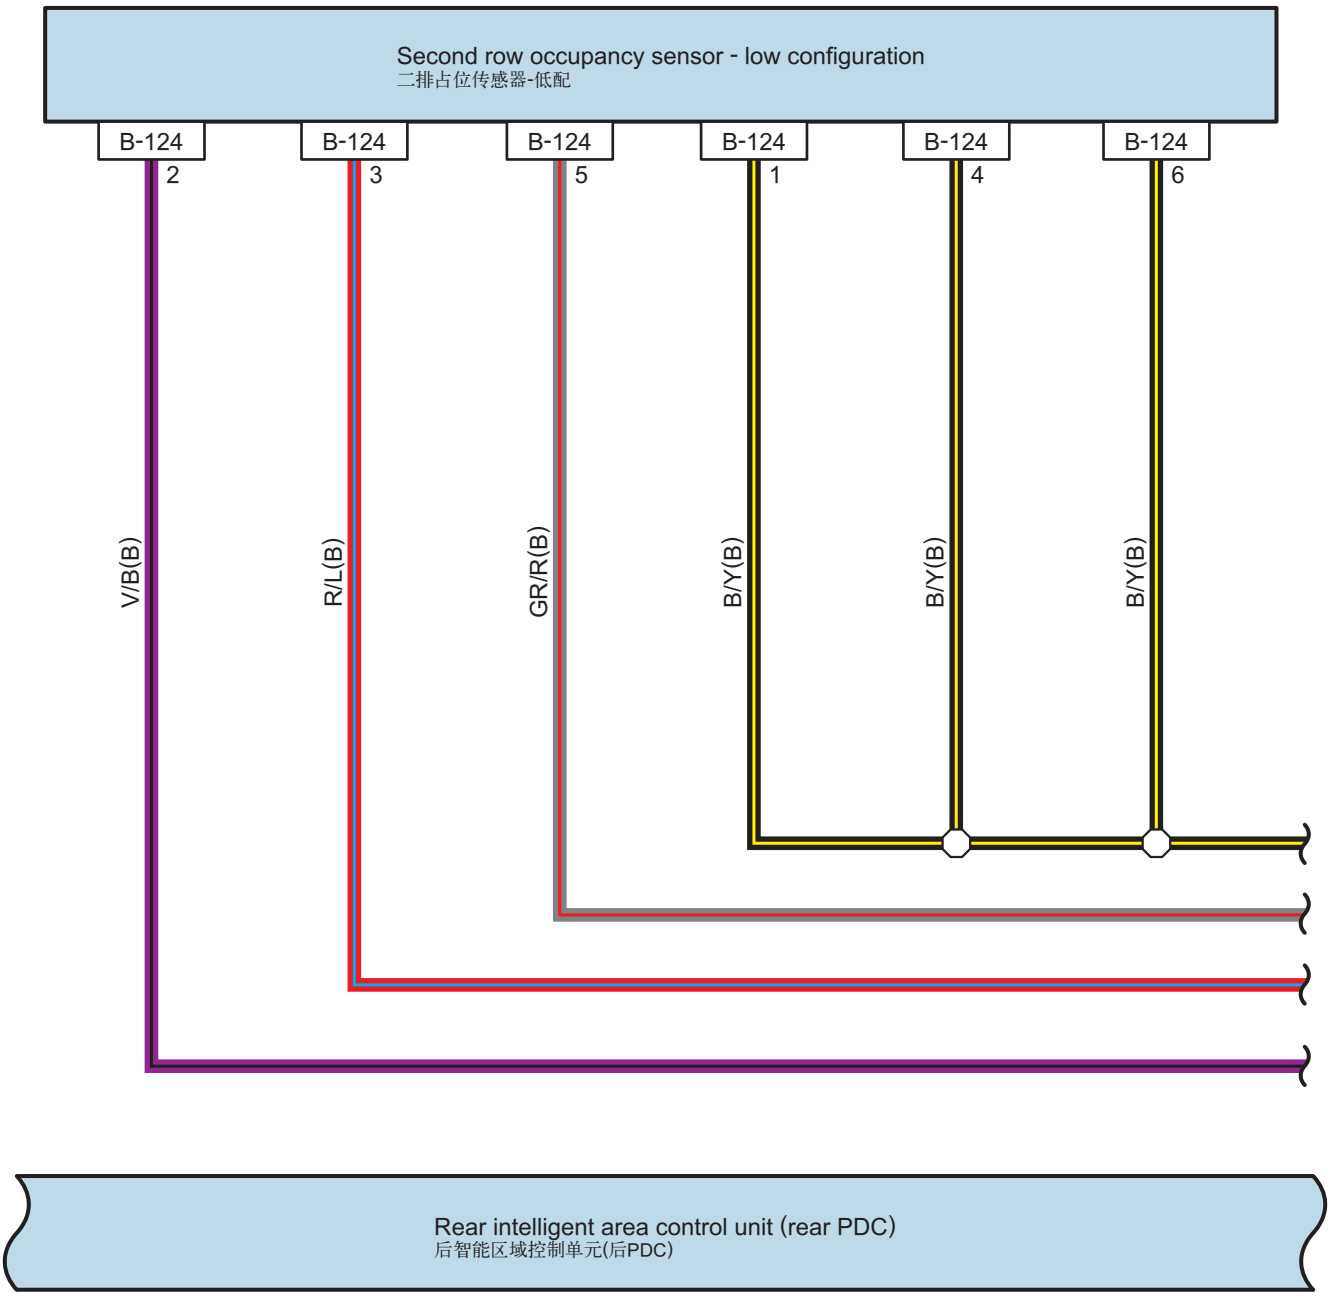
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

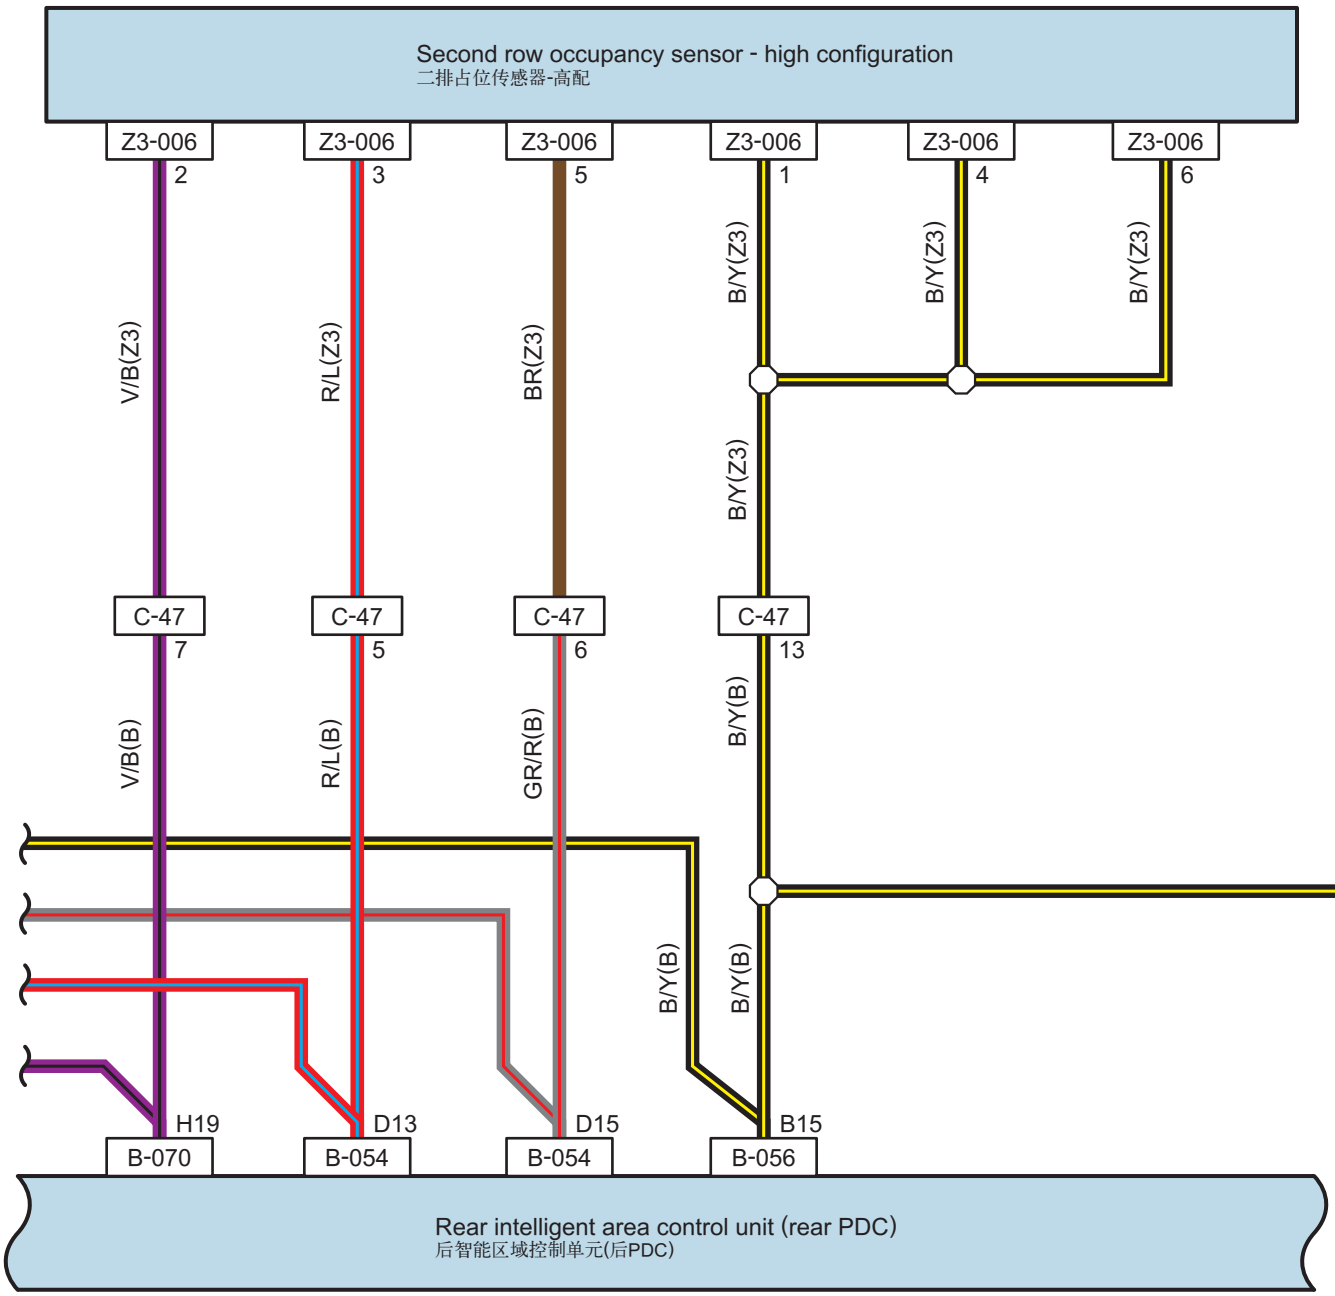

Charging controller
充电控制器
B-064
28
B-064
8
B-064
1
B-064
25
B-064
20
B-064
12
Y/G(B)
W/B(B)
W/L(B)
B(B)
Y(B)
L(B)
73b
Rear comfort_CAN
后部舒适_CAN
W/L(B)
I4
B-071
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

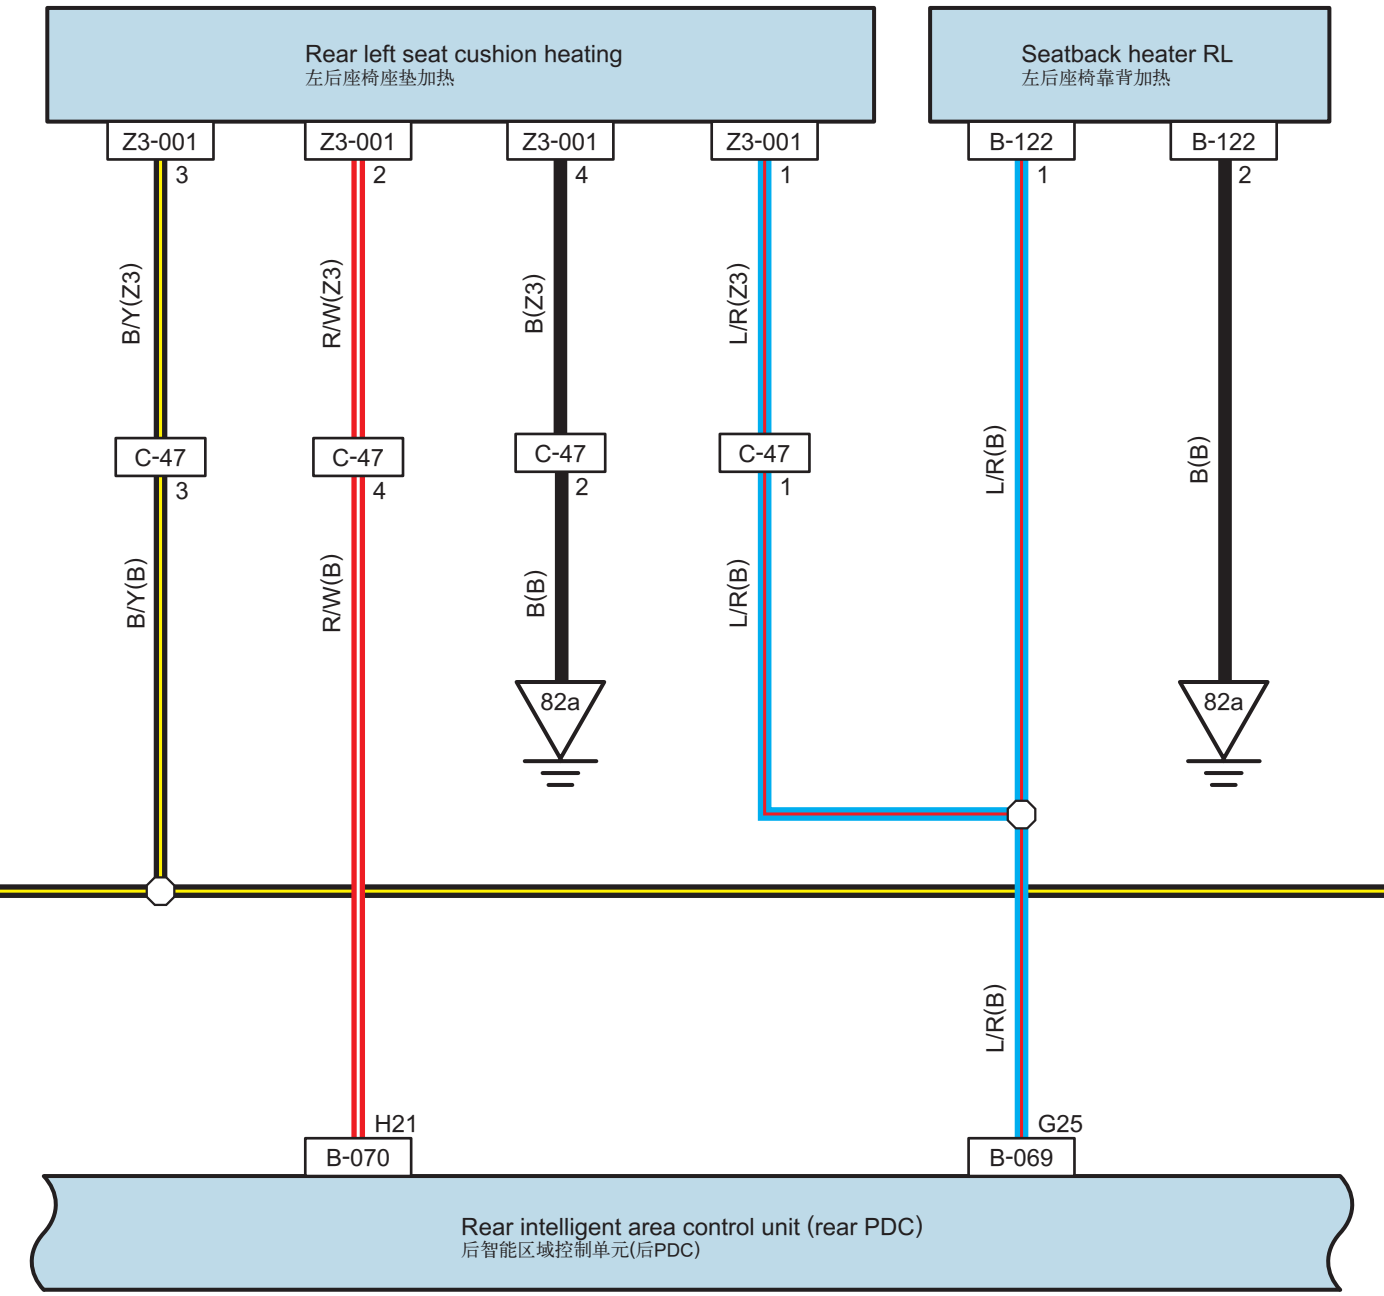

Battery fuse box
蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Trailer distribution box
拖车配电盒
AF01 200A
F03 80A
Charging controller
充电控制器
B-064
2
PN-01
PN-02
C1
FF-B+
R
R/Y(B)
R(B)
B+
R(B)
J14
B-072
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

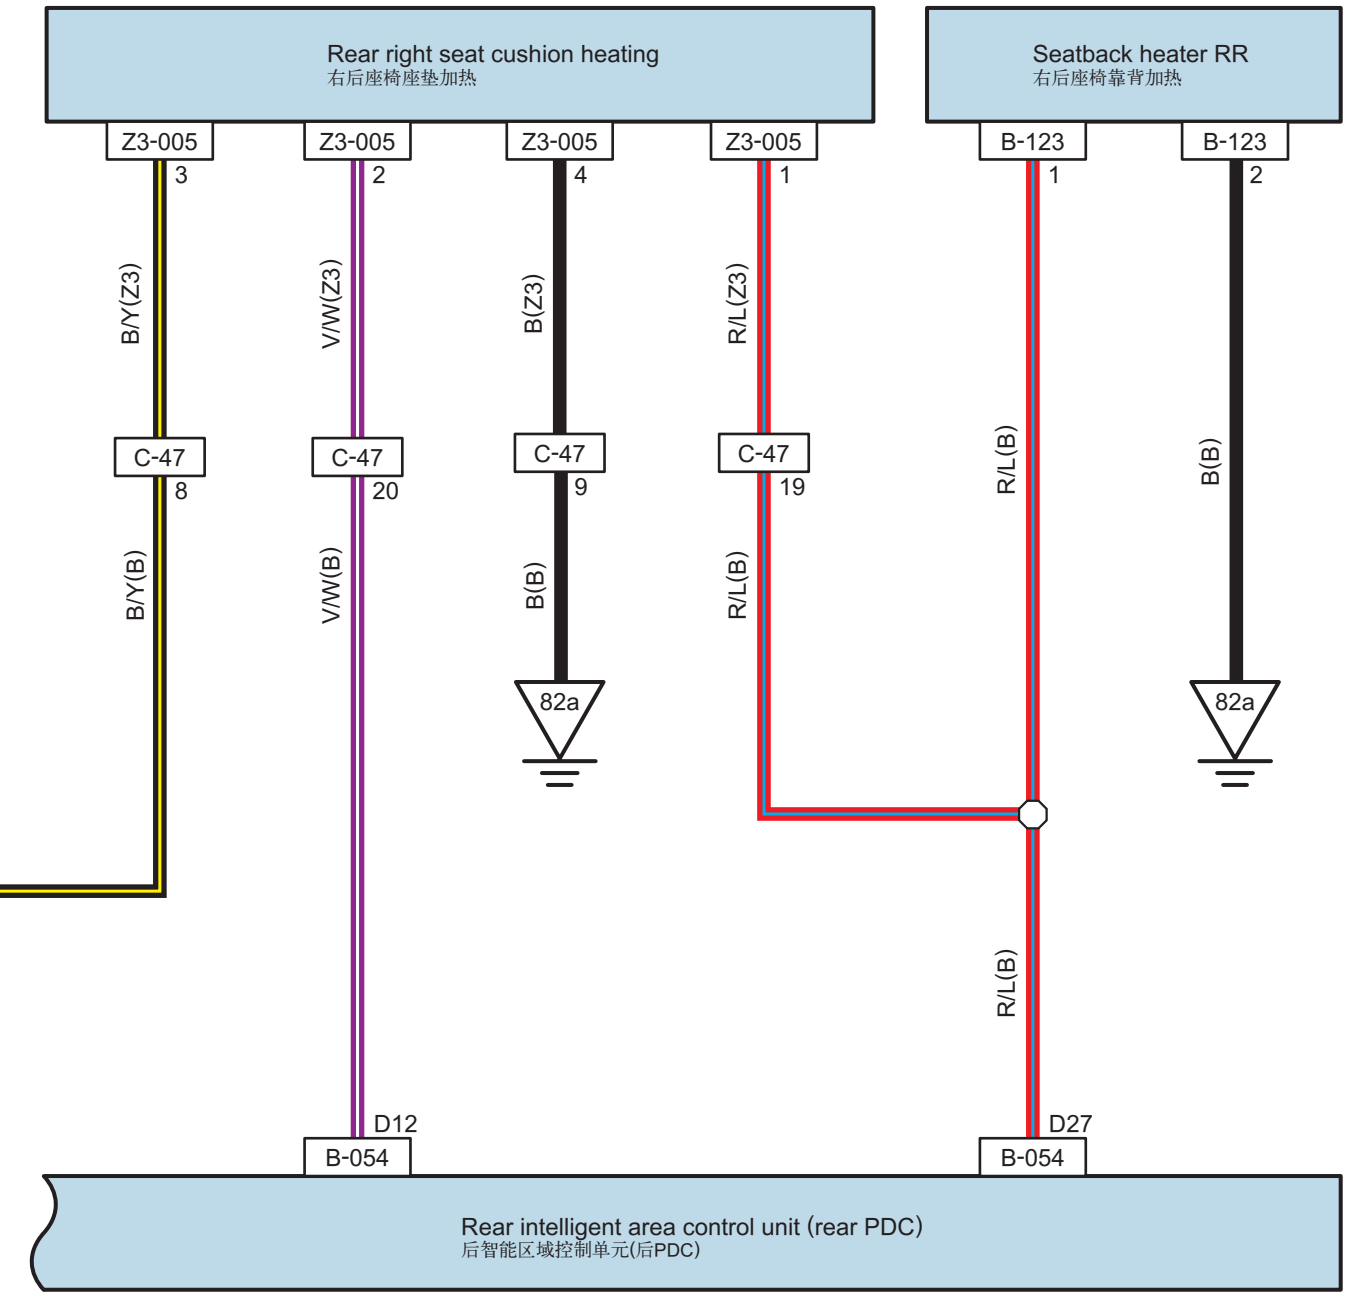

Trailer distribution box
拖车配电盒
FF17 30A
5
2
3
1
FR01
Trailer IG relay
拖车IG继电器
Trailer controller
拖车控制器
B-108
M6
FF-17
FF-33
FF-35
FF-36
FF-34
R/L(B)
R(B)
B(B)
R(B)
73b
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

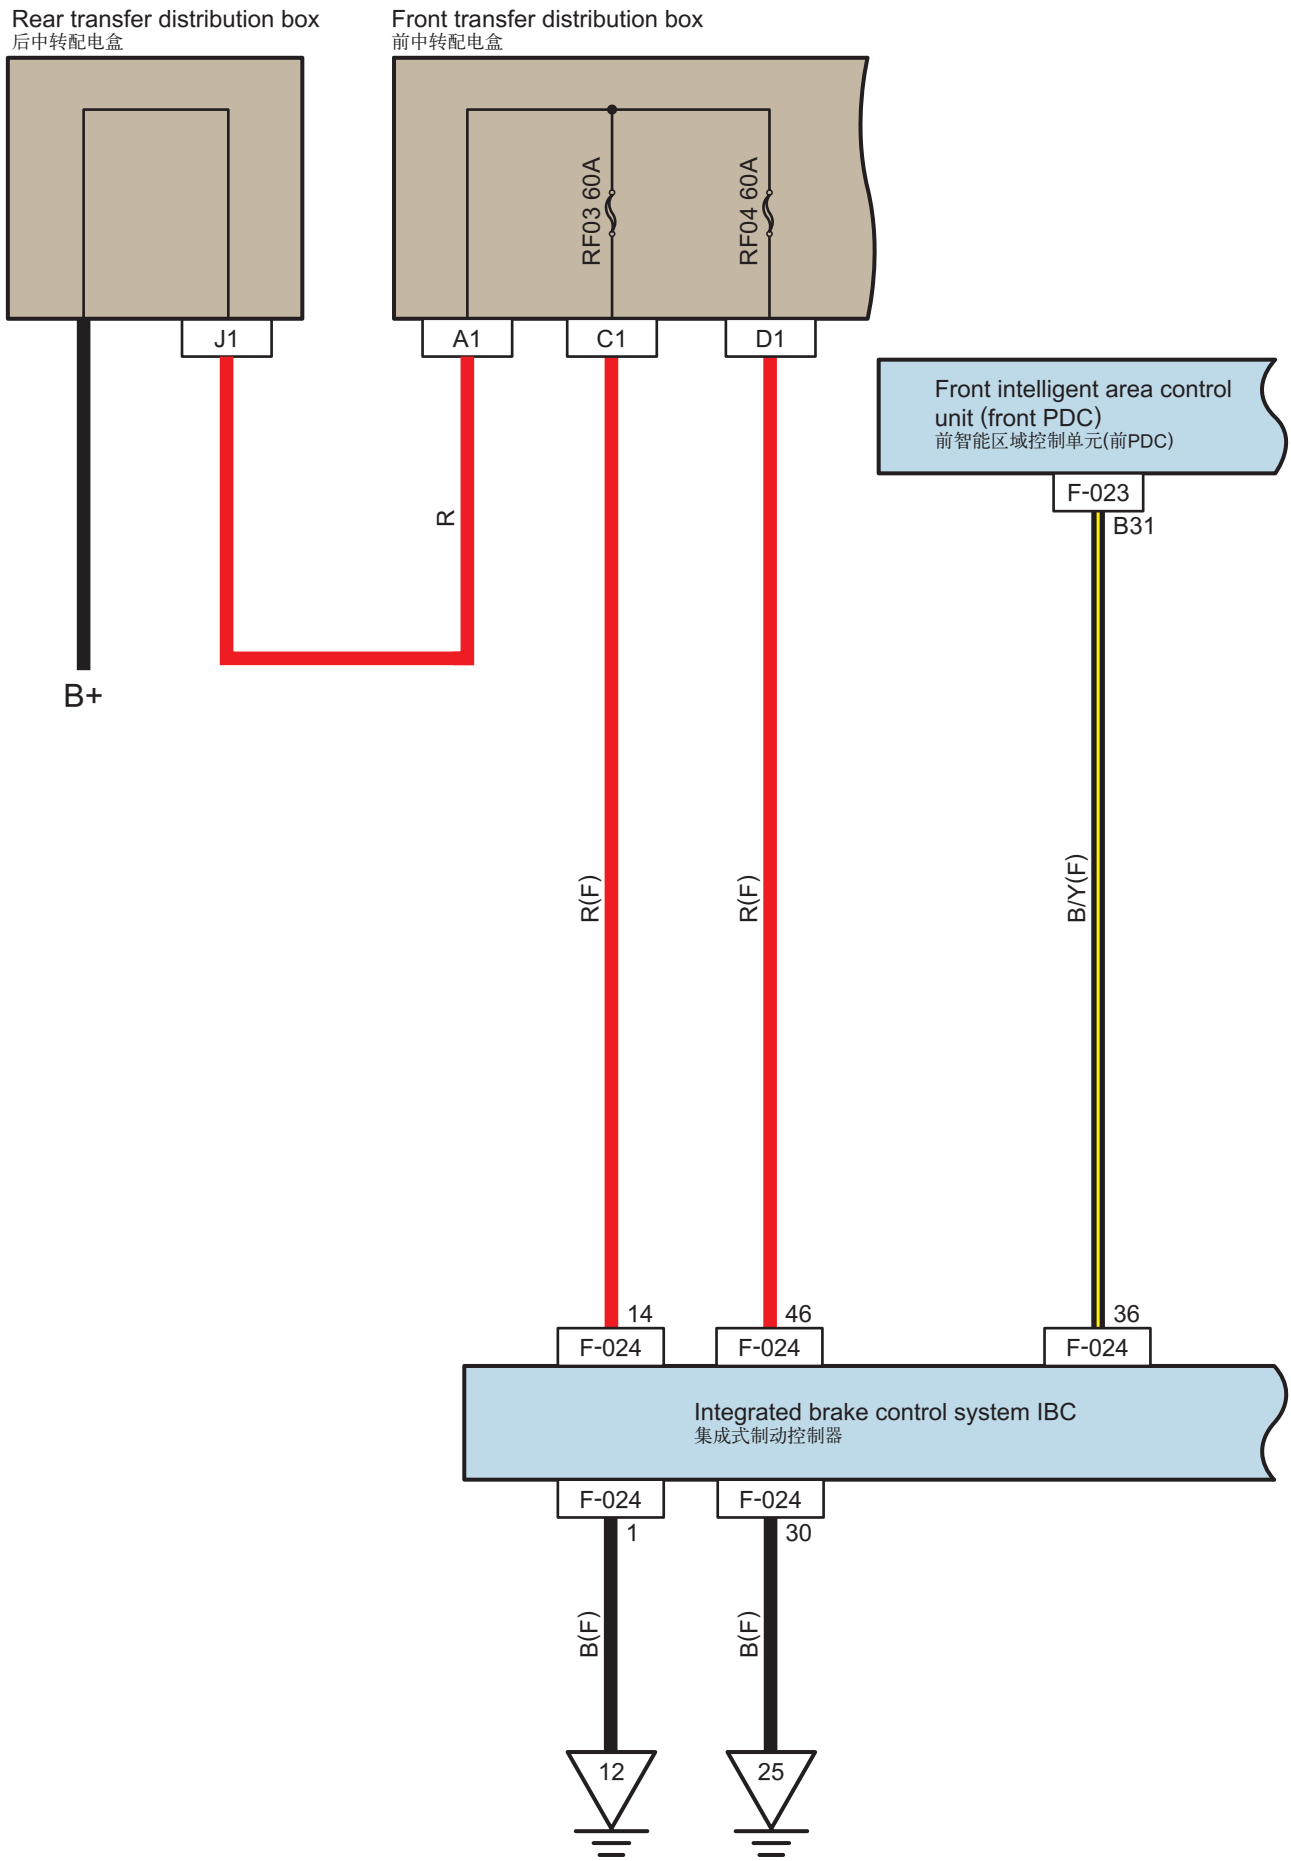

Electric rear drive system inverter
后驱电驱动系统逆变器
P-001
5
R(P)
C-77
6
R(B)
P-001
6
R/L(P)
P-001
13
R/L(P)
R/L(P)
C-77
7
R/L(B)
I5
B-071
P-001
3
GR(P)
C-77
9
GR(B)
P-001
10
O(P)
C-77
10
O(B)
Rear EV_CAN
后部EV_CAN
P-001
7
B(P)
P-001
14
B(P)
B(P)
C-77
5
B(B)
C-35
2
B(B3)
71b
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

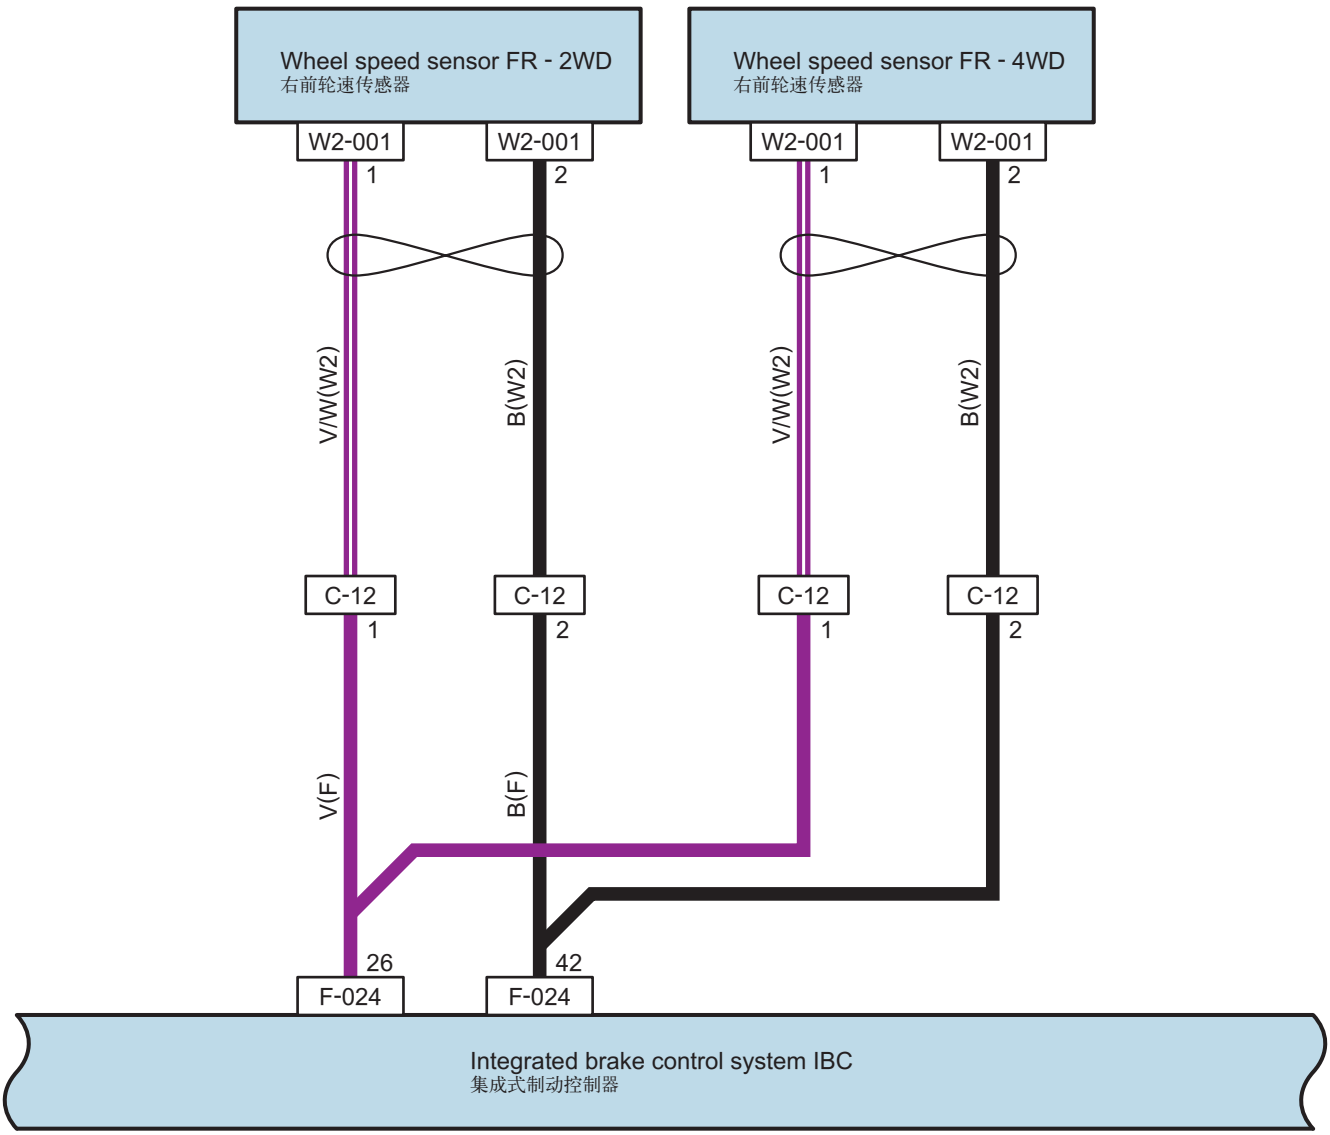

Second row occupancy sensor - low configuration
二排占位传感器-低配
B-124
2
B-124
3
B-124
5
B-124
1
B-124
4
B-124
6
V/B(B)
R/L(B)
GR/R(B)
B/Y(B)
B/Y(B)
B/Y(B)
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

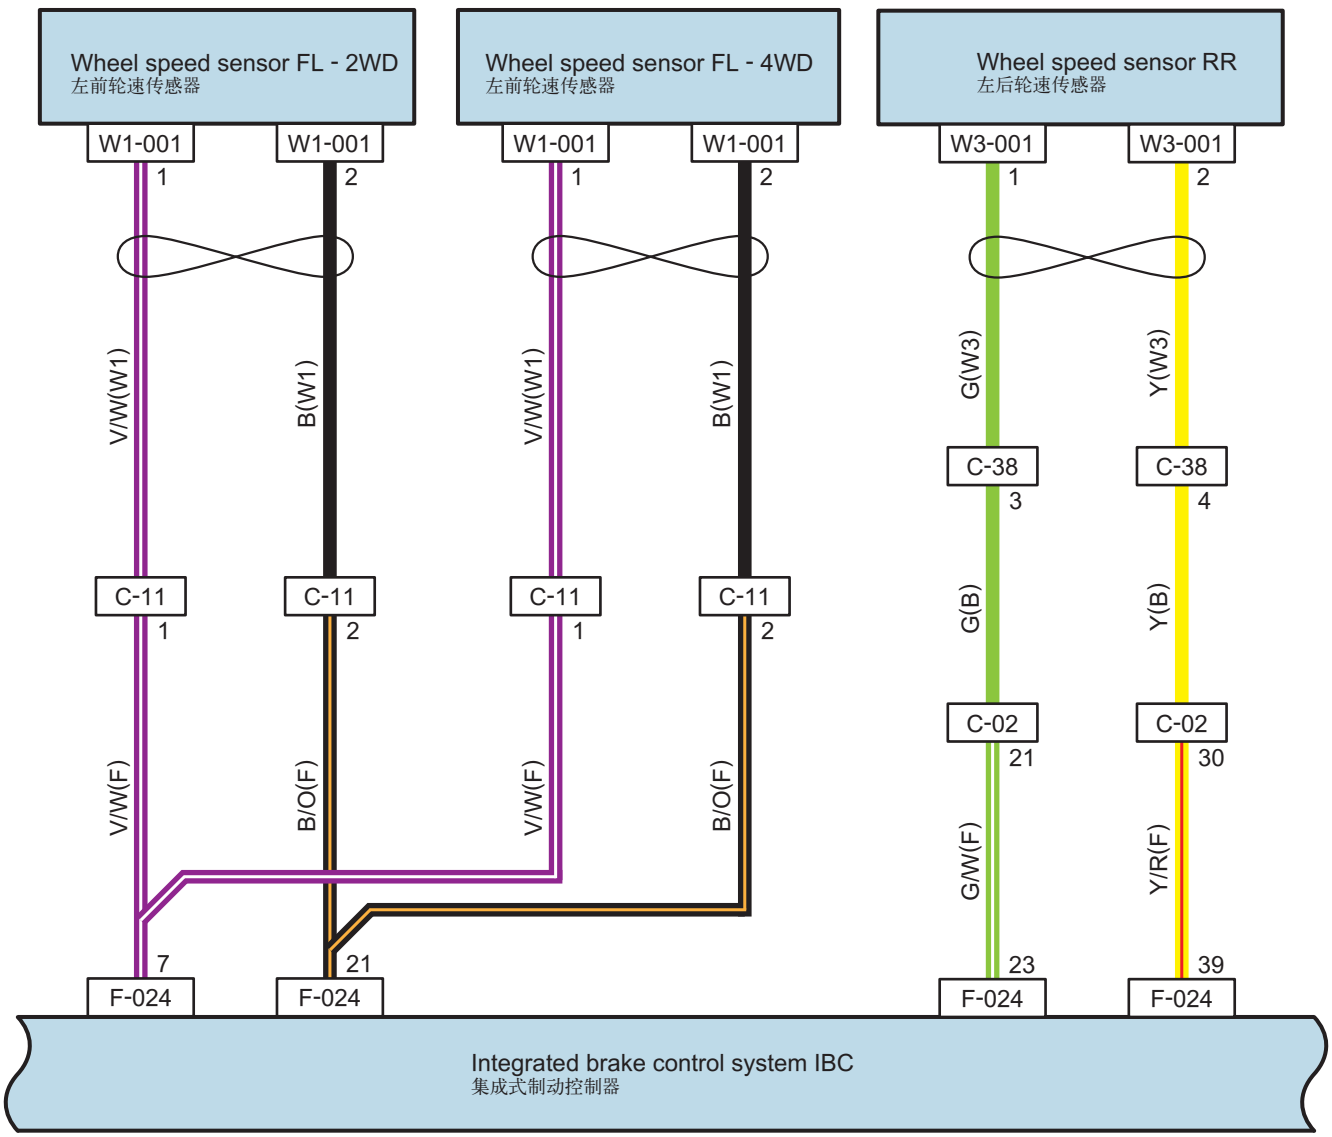

Second row occupancy sensor - high configuration
二排占位传感器-高配
Z3-006
2
Z3-006
3
Z3-006
5
Z3-006
1
Z3-006
4
Z3-006
6
V/B(Z3)
R/L(Z3)
BR(Z3)
B/Y(Z3)
B/Y(Z3)
B/Y(Z3)
B/Y(Z3)
C-47
7
C-47
5
C-47
6
C-47
13
V/B(B)
R/L(B)
GR/R(B)
B/Y(B)
B/Y(B)
B/Y(B)
H19
D13
D15
B15
B-070
B-054
B-054
B-056
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

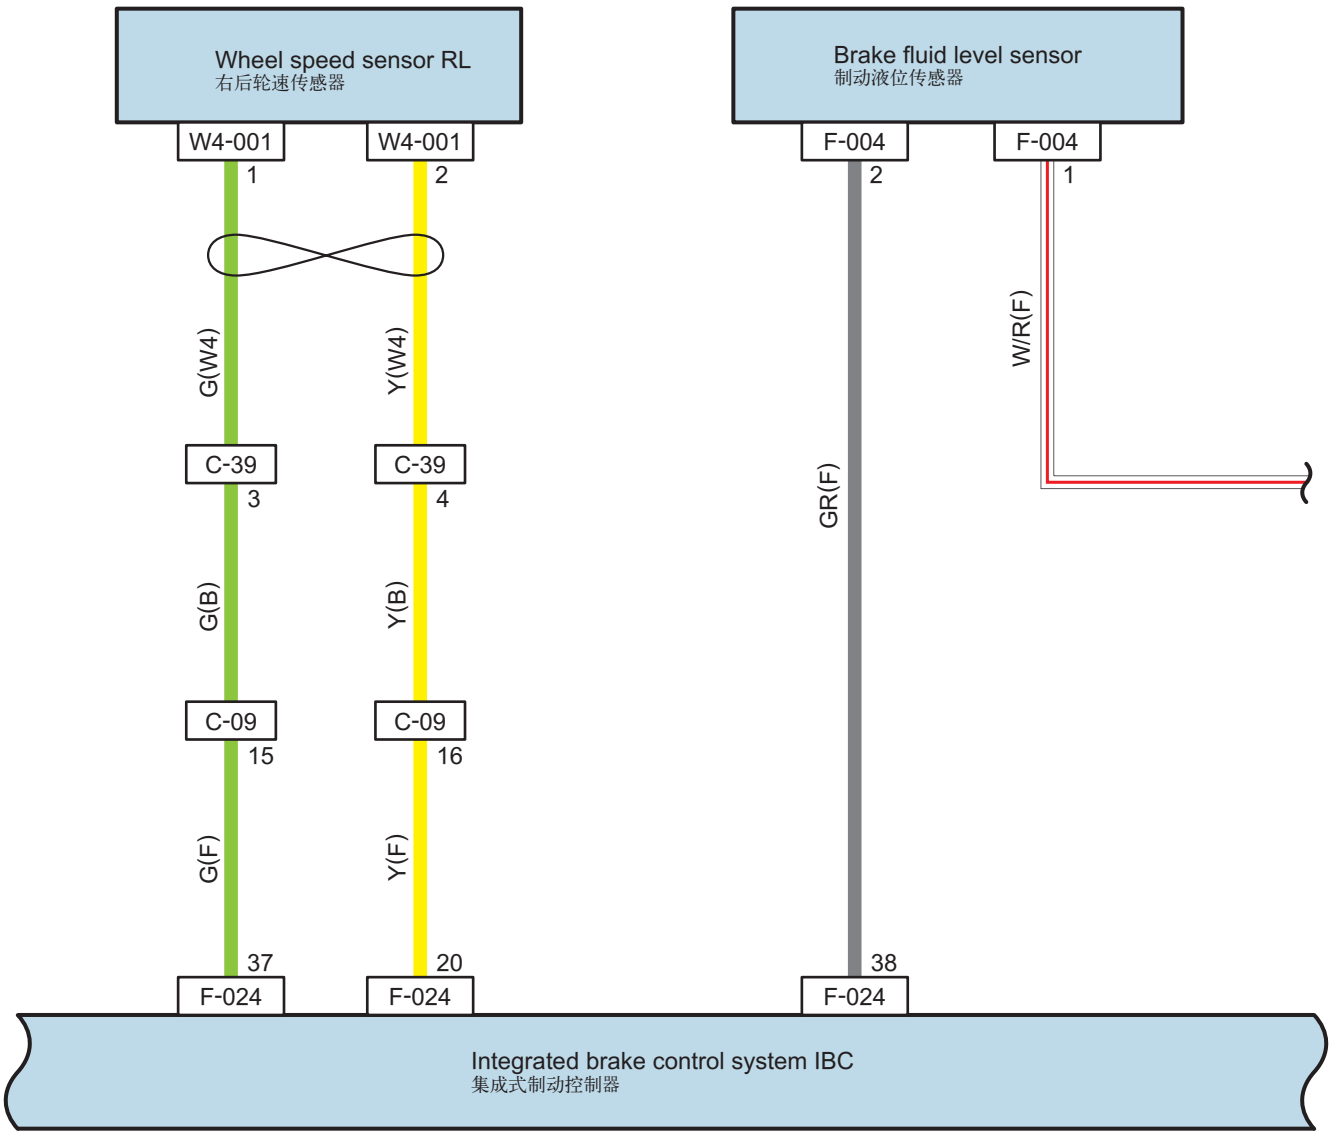

Rear left seat cushion heating
左后座椅座垫加热
Seatback heater RL
左后座椅靠背加热
Z3-001
3
Z3-001
2
Z3-001
4
Z3-001
1
B-122
1
B-122
2
B/Y(Z3)
R/W(Z3)
B(Z3)
L/R(Z3)
L/R(B)
B(B)
C-47
3
C-47
4
C-47
2
C-47
1
B/Y(B)
R/W(B)
B(B)
L/R(B)
82a
82a
L/R(B)
H21
B-070
G25
B-069
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

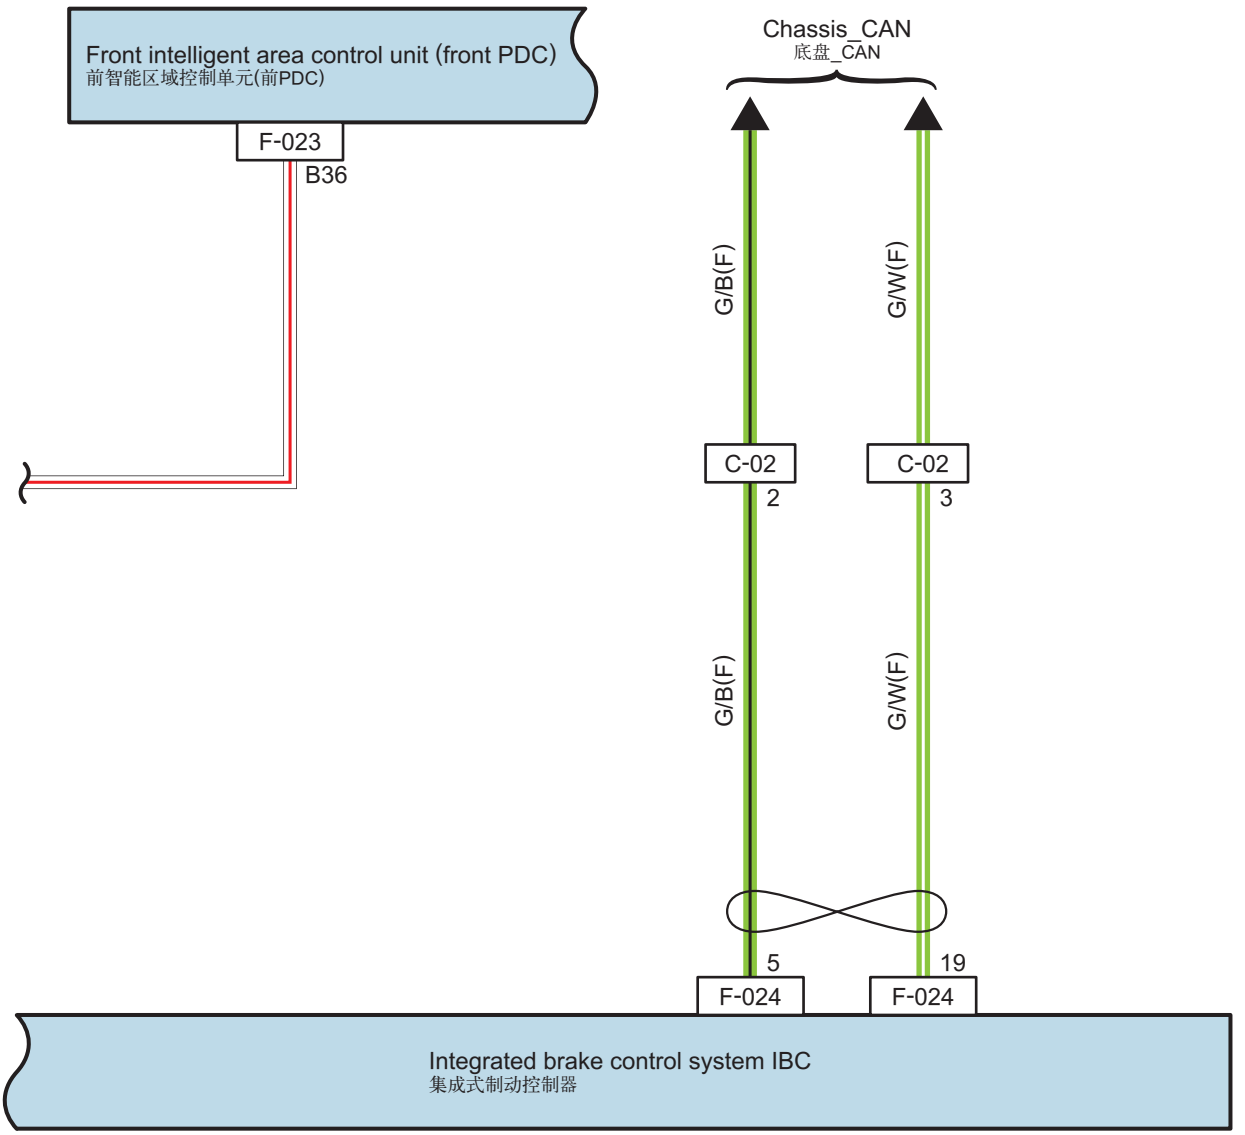

Rear right seat cushion heating
右后座椅座垫加热
Seatback heater RR
右后座椅靠背加热
Z3-005
3
Z3-005
2
Z3-005
4
Z3-005
1
B-123
1
B-123
2
B/Y(Z3)
V/W(Z3)
B(Z3)
R/L(Z3)
R/L(B)
B(B)
C-47
8
C-47
20
C-47
9
C-47
19
B/Y(B)
V/W(B)
B(B)
R/L(B)
82a
82a
R/L(B)
D12
B-054
D27
B-054
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)

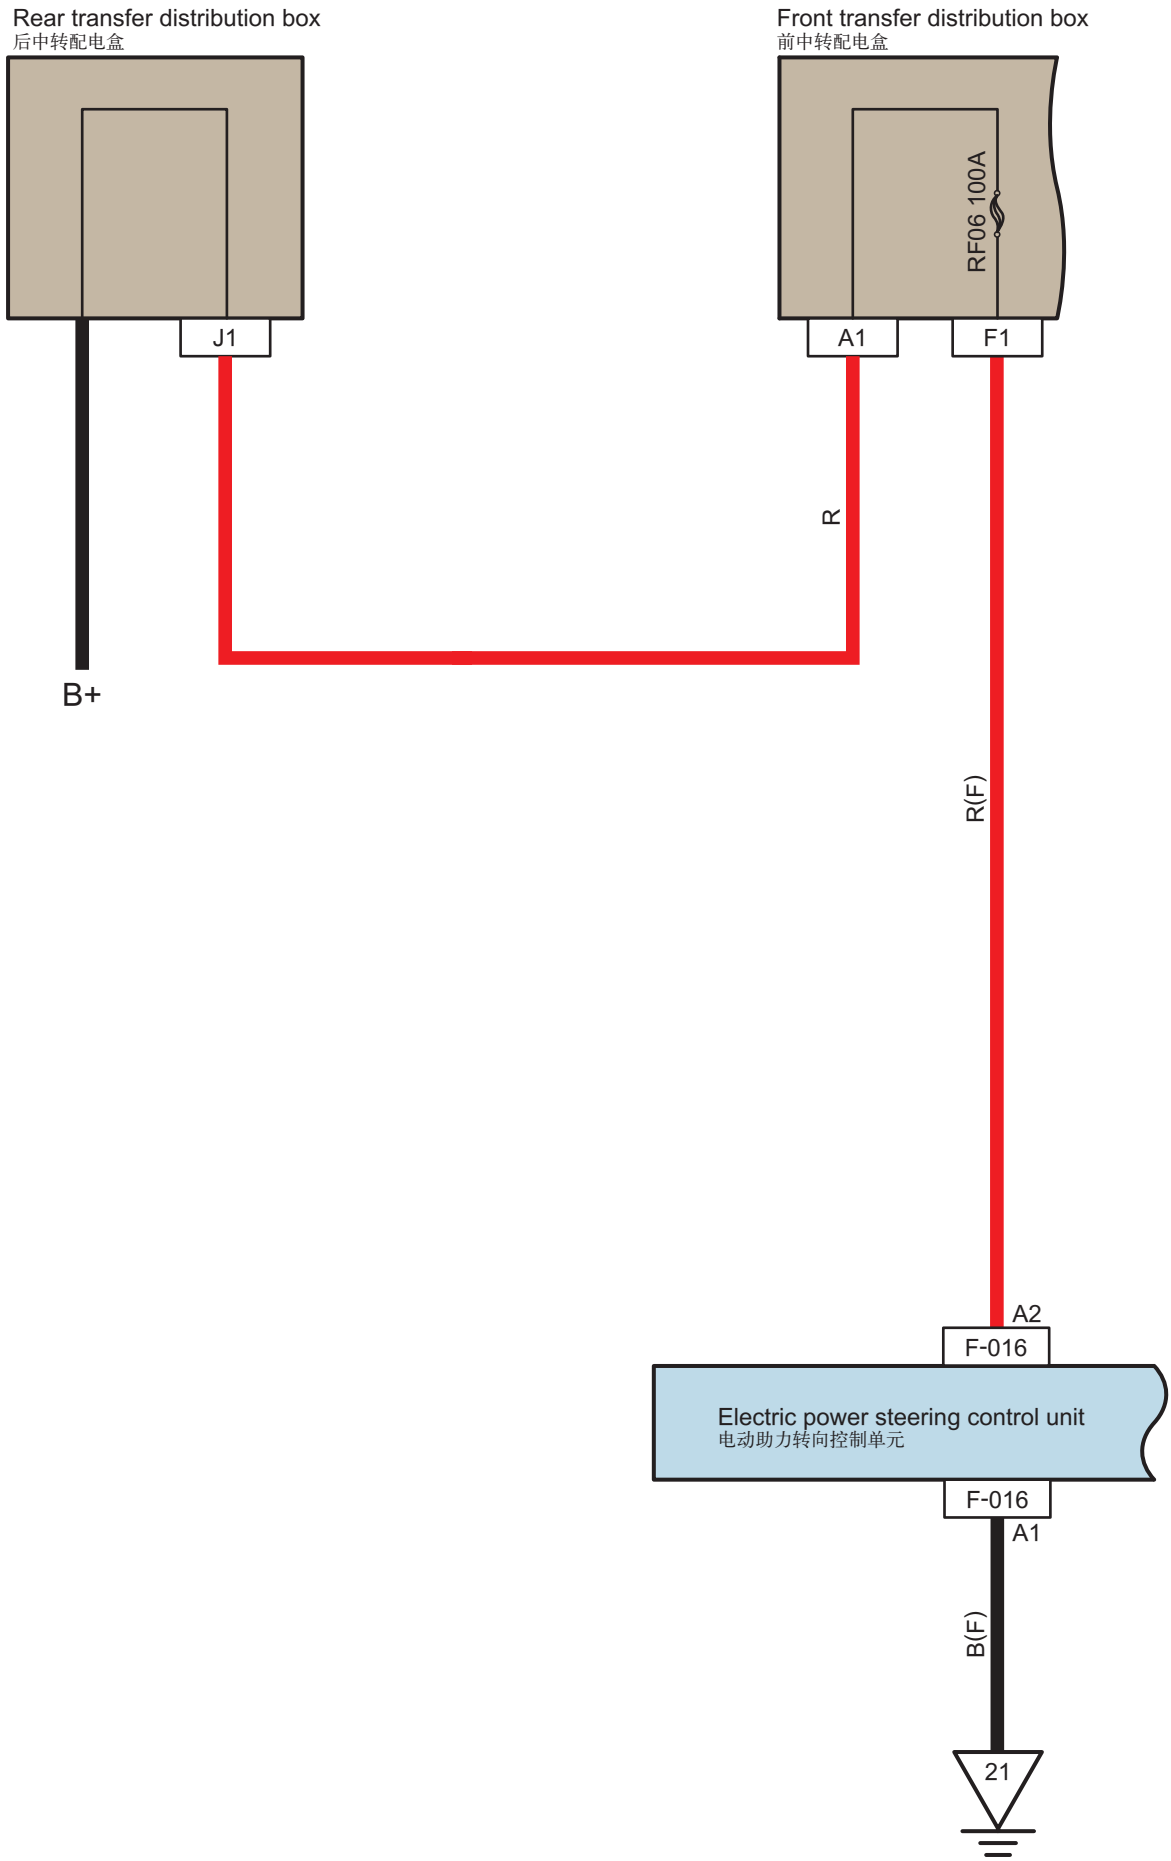

Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
RF03 60A
RF04 60A
J1
A1
C1
D1
R
B+
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
F-023
B31
R(F)
R(F)
B/Y(F)
14
46
36
F-024
F-024
F-024
Integrated brake control system IBC
集成式制动控制器
F-024
F-024
1
30
B(F)
B(F)
12
25

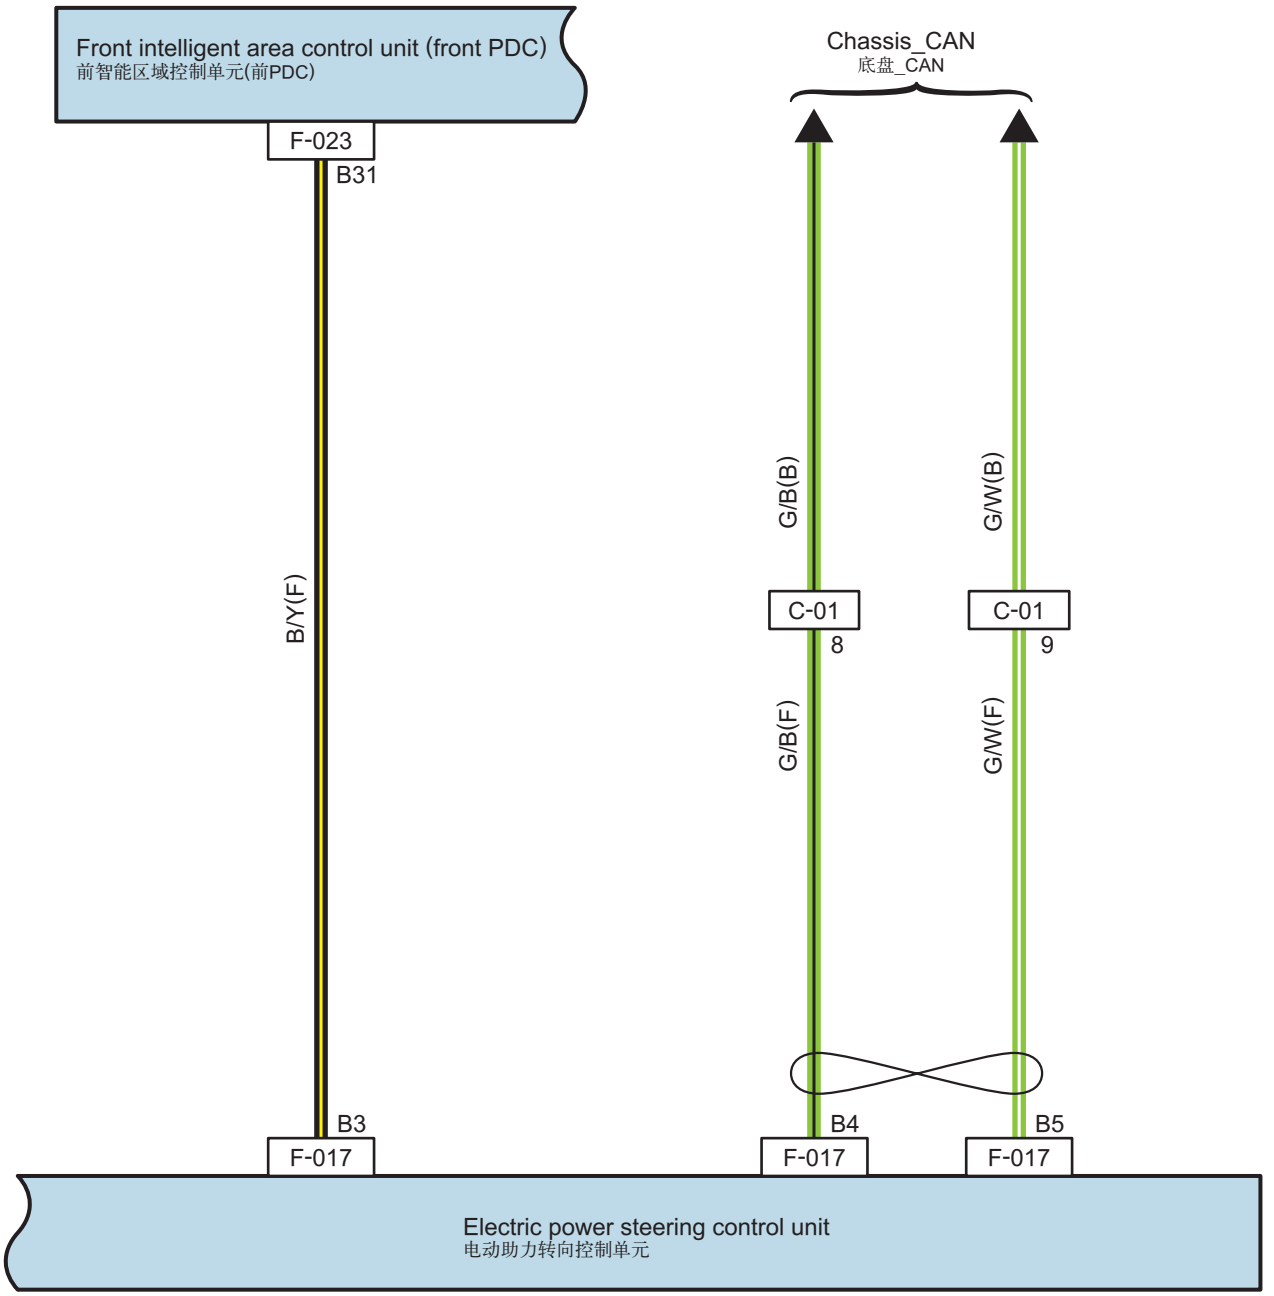

Wheel speed sensor FR - 2WD
右前轮速传感器
Wheel speed sensor FR - 4WD
右前轮速传感器
W2-001
1
W2-001
2
W2-001
1
W2-001
2
V/W(W2)
B(W2)
V/W(W2)
B(W2)
C-12
1
C-12
2
C-12
1
C-12
2
V(F)
B(F)
26
42
F-024
F-024
Integrated brake control system IBC
集成式制动控制器

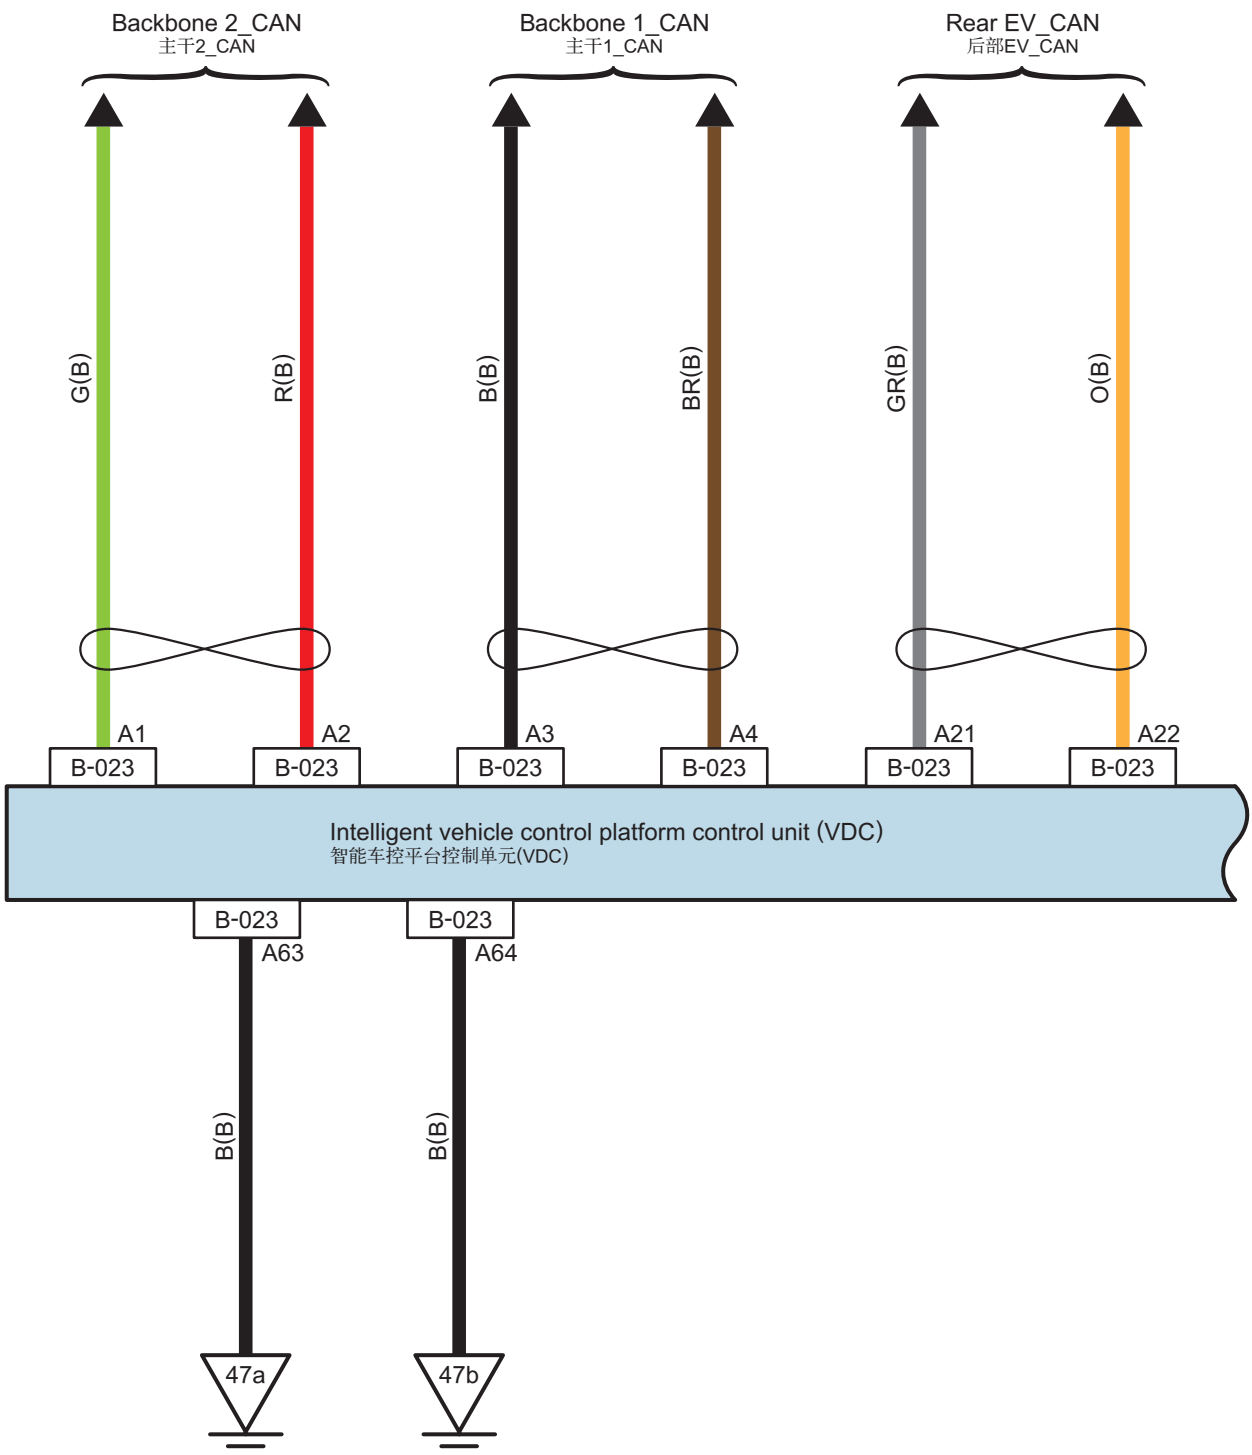

Wheel speed sensor FL - 2WD
左前轮速传感器
Wheel speed sensor FL - 4WD
左前轮速传感器
Wheel speed sensor RR
左后轮速传感器
W1-001
1
W1-001
2
W1-001
1
W1-001
2
W3-001
1
W3-001
2
V/W(W1)
B(W1)
V/W(W1)
B(W1)
G(W3)
Y(W3)
C-38
3
C-38
4
C-11
1
C-11
2
C-11
1
C-11
2
G(B)
Y(B)
C-02
21
C-02
30
V/W(F)
B/O(F)
V/W(F)
B/O(F)
G/W(F)
Y/R(F)
7
21
23
39
F-024
F-024
F-024
F-024
Integrated brake control system IBC
集成式制动控制器

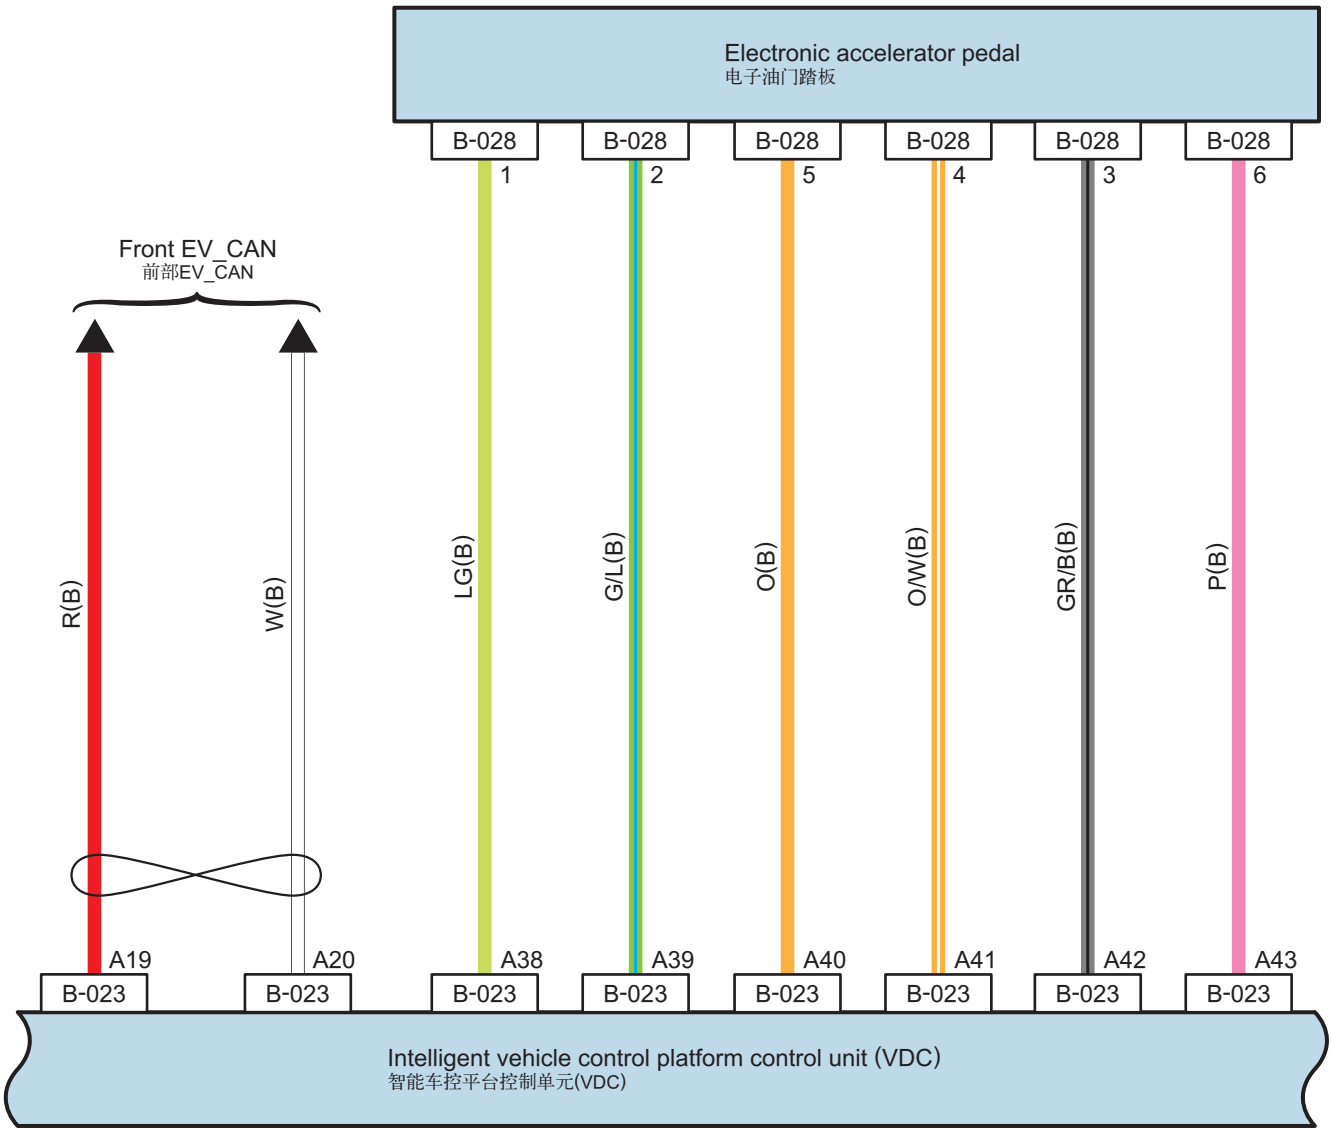

Wheel speed sensor RL
右后轮速传感器
W4-001
1
W4-001
2
G(W4)
Y(W4)
C-39
3
C-39
4
G(B)
Y(B)
C-09
15
C-09
16
G(F)
Y(F)
37
20
F-024
F-024
Brake fluid level sensor
制动液位传感器
F-004
2
F-004
1
W/R(F)
GR(F)
38
F-024
Integrated brake control system IBC
集成式制动控制器

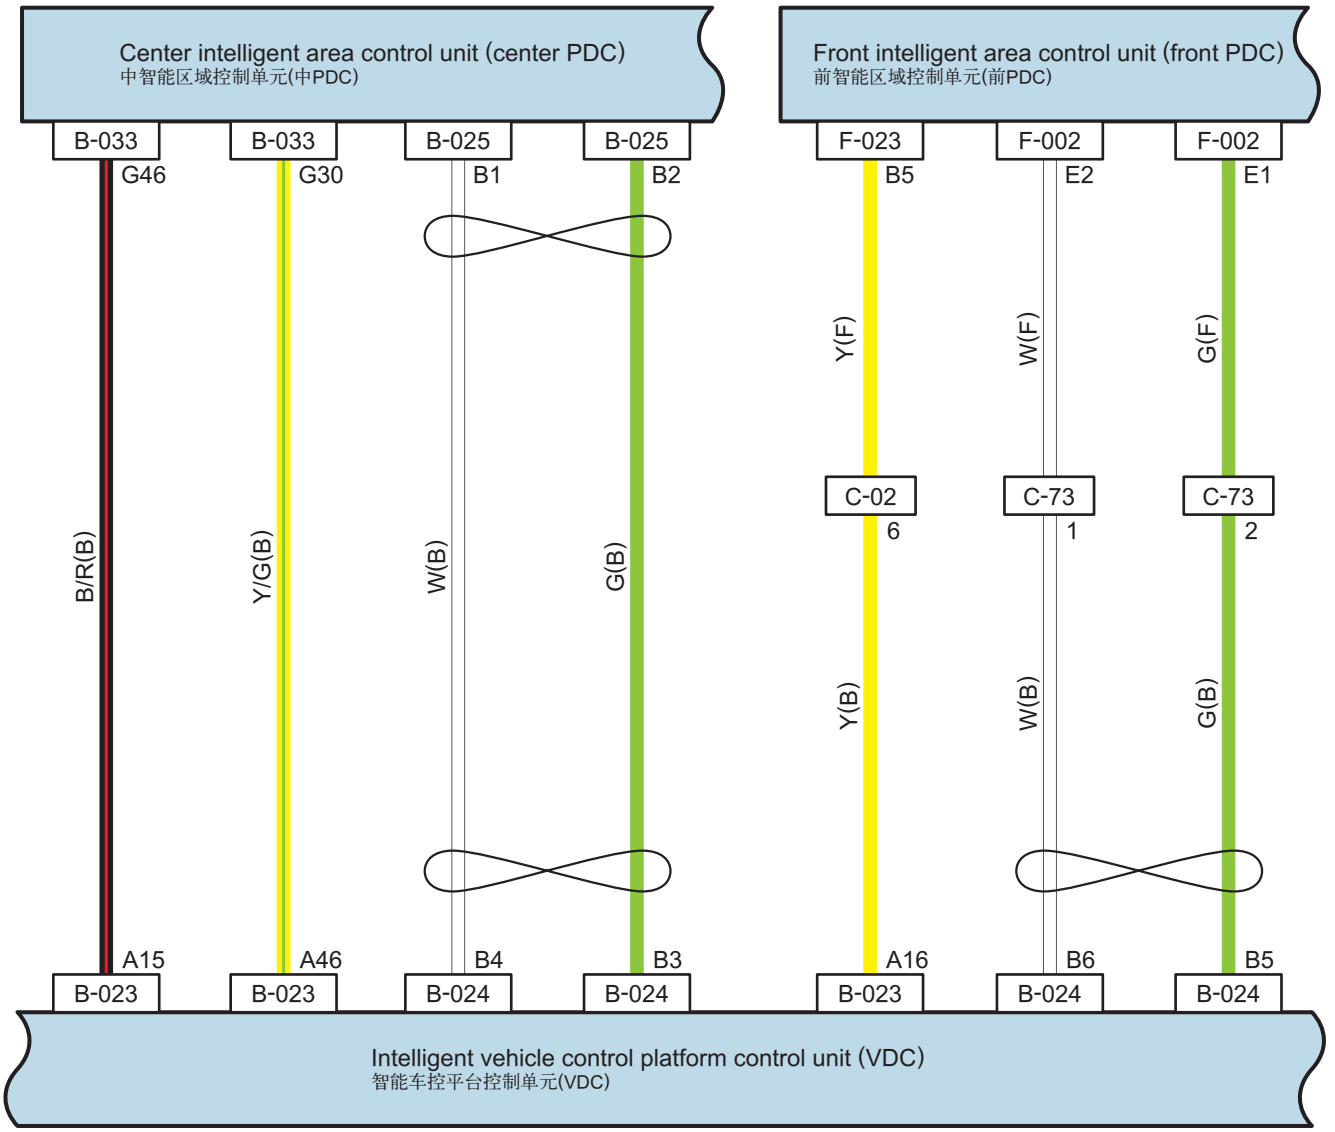

Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
F-023
B36
Chassis_CAN
底盘_CAN
G/B(F)
G/W(F)
C-02
2
C-02
3
G/B(F)
G/W(F)
5
19
F-024
F-024
Integrated brake control system IBC
集成式制动控制器

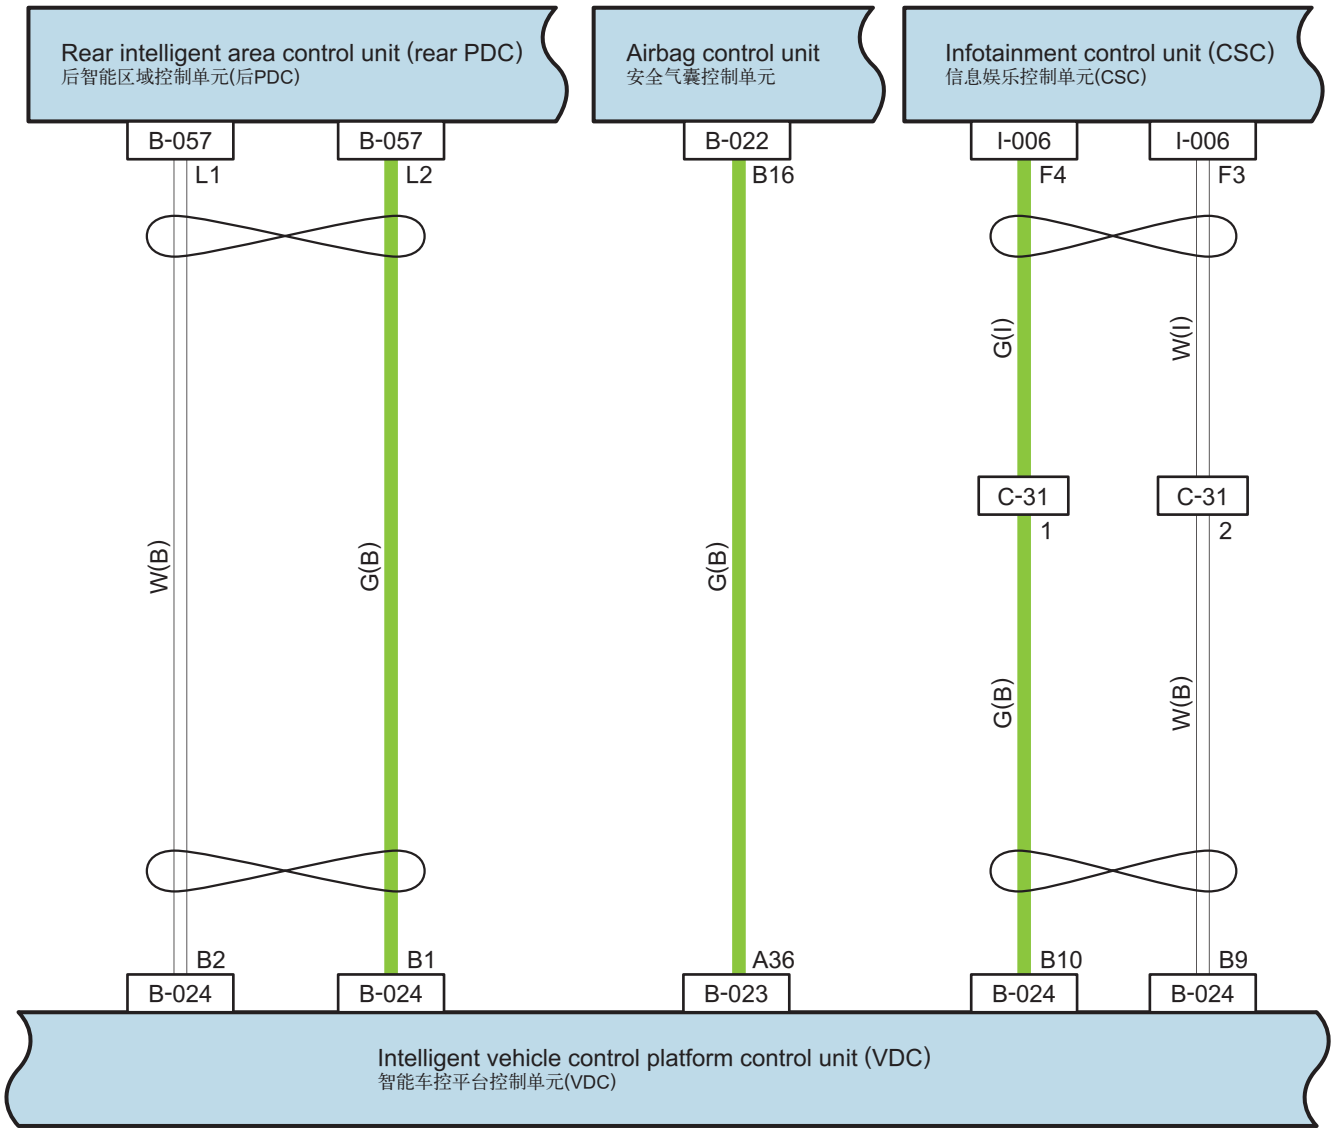

Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
RF06 100A
J1
A1
F1
R
B+
R(F)
A2
F-016
Electric power steering control unit
电动助力转向控制单元
F-016
A1
B(F)
21

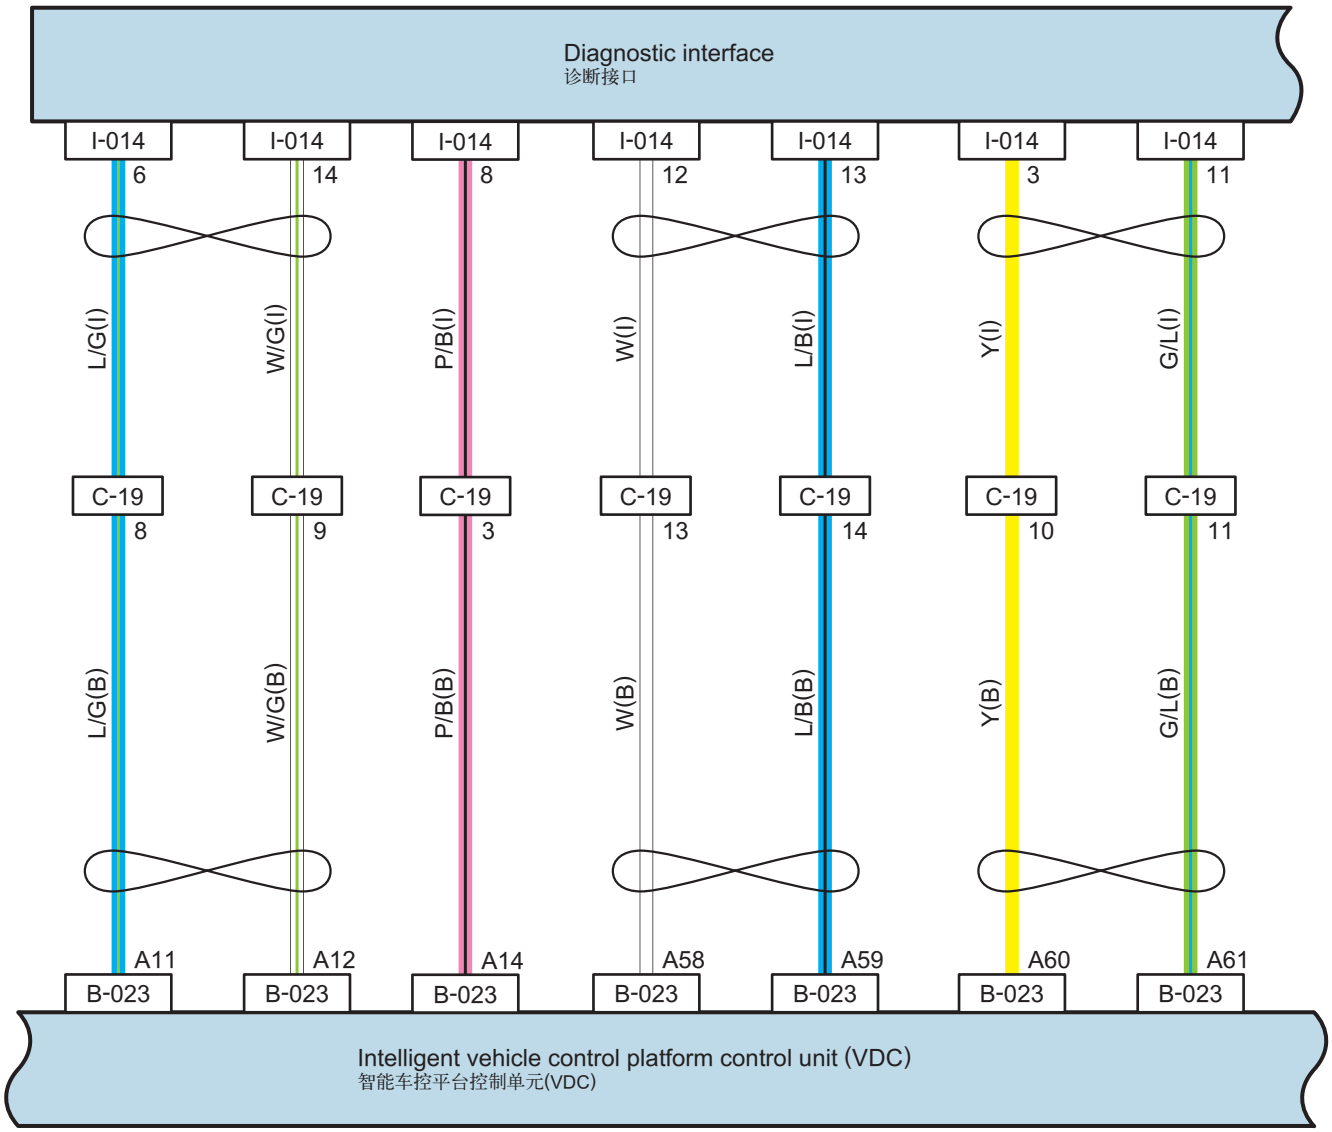

Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
F-023
B31
B/Y(F)
B3
F-017
Chassis_CAN
底盘_CAN
G/B(B)
G/W(B)
C-01
8
C-01
9
G/B(F)
G/W(F)
B4
B5
F-017
F-017
Electric power steering control unit
电动助力转向控制单元

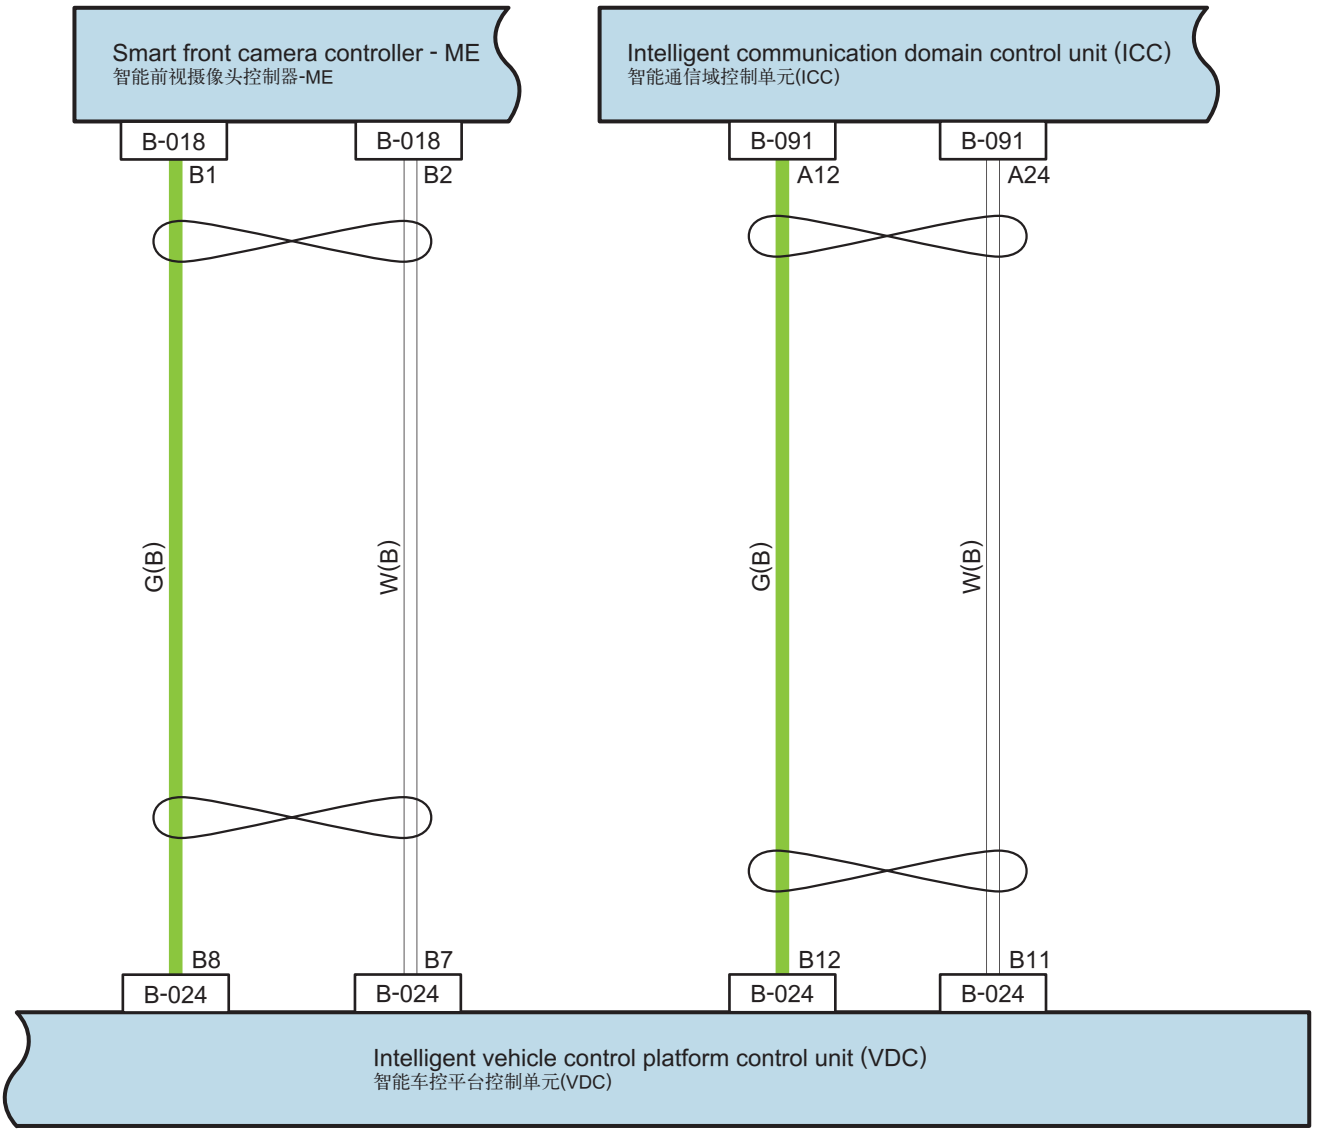

Backbone 2_CAN
主干2_CAN
Backbone 1_CAN
主干1_CAN
Rear EV_CAN
后部EV_CAN
G(B)
R(B)
B(B)
BR(B)
GR(B)
O(B)
A1
A2
A3
A4
A21
A22
B-023
B-023
B-023
B-023
B-023
B-023
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-023
B-023
A63
A64
B(B)
B(B)
47a
47b

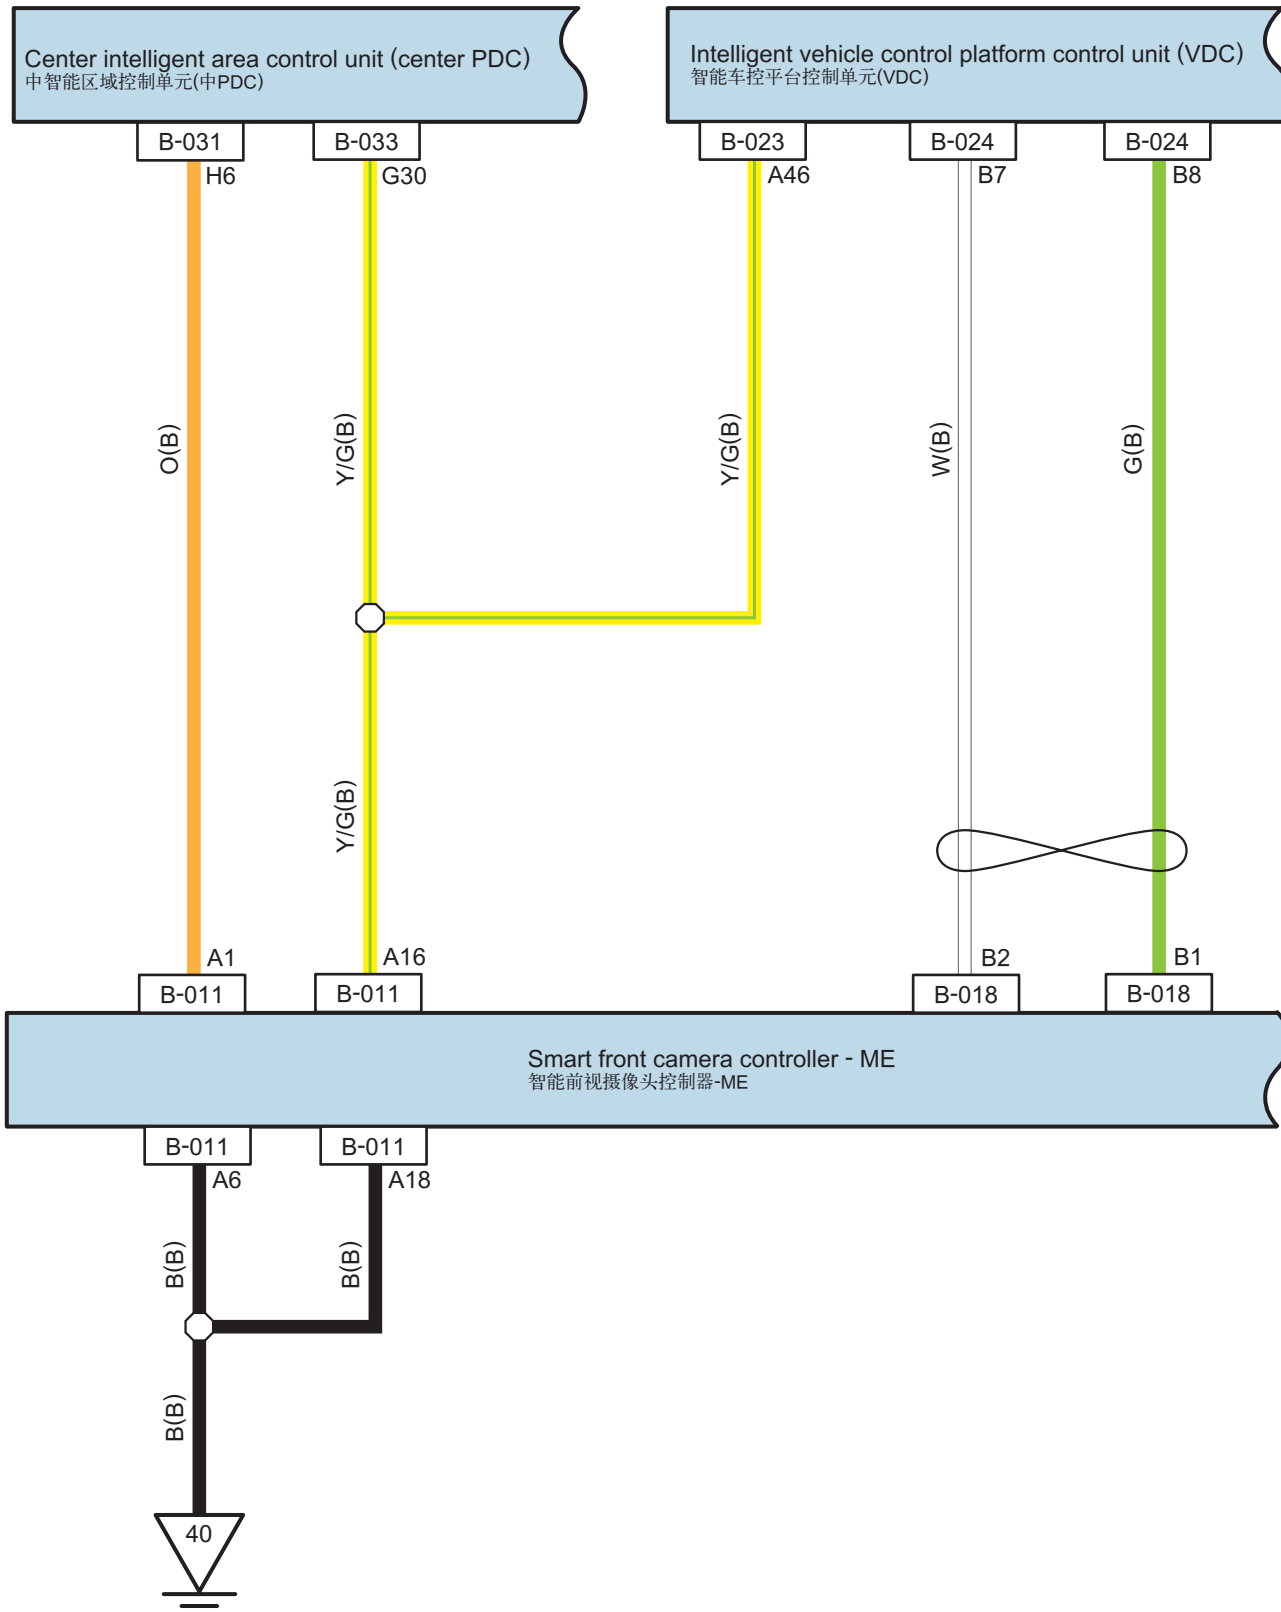

Electronic accelerator pedal
电子油门踏板
B-028
1
B-028
2
B-028
5
B-028
4
B-028
3
B-028
6
Front EV_CAN
前部EV_CAN
R(B)
W(B)
LG(B)
G/L(B)
O(B)
O/W(B)
GR/B(B)
P(B)
A19
A20
A38
A39
A40
A41
A42
A43
B-023
B-023
B-023
B-023
B-023
B-023
B-023
B-023
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

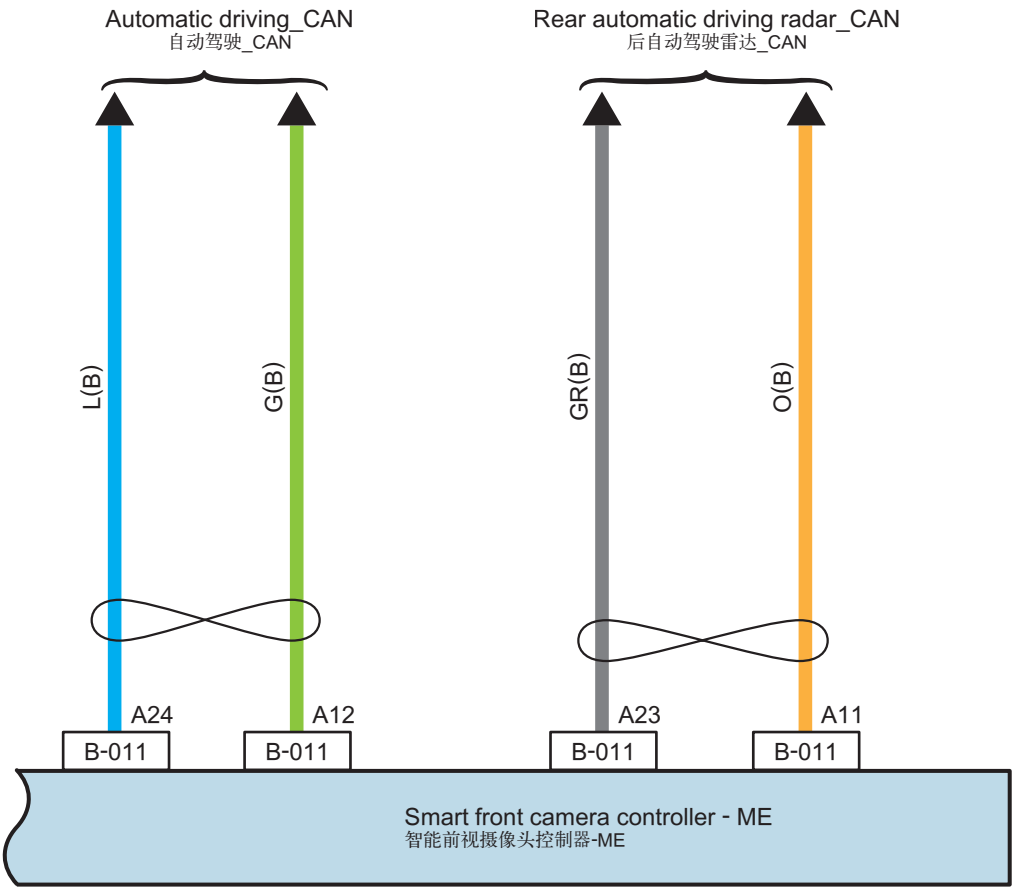

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)
B-033
G46
B-033
G30
B-025
B1
B-025
B2
F-023
B5
F-002
E2
F-002
E1
B/R(B)
Y/G(B)
W(B)
G(B)
Y(F)
W(F)
G(F)
C-02
6
C-73
1
C-73
2
Y(B)
W(B)
G(B)
A15
A46
B4
B3
A16
B6
B5
B-023
B-023
B-024
B-024
B-023
B-024
B-024
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

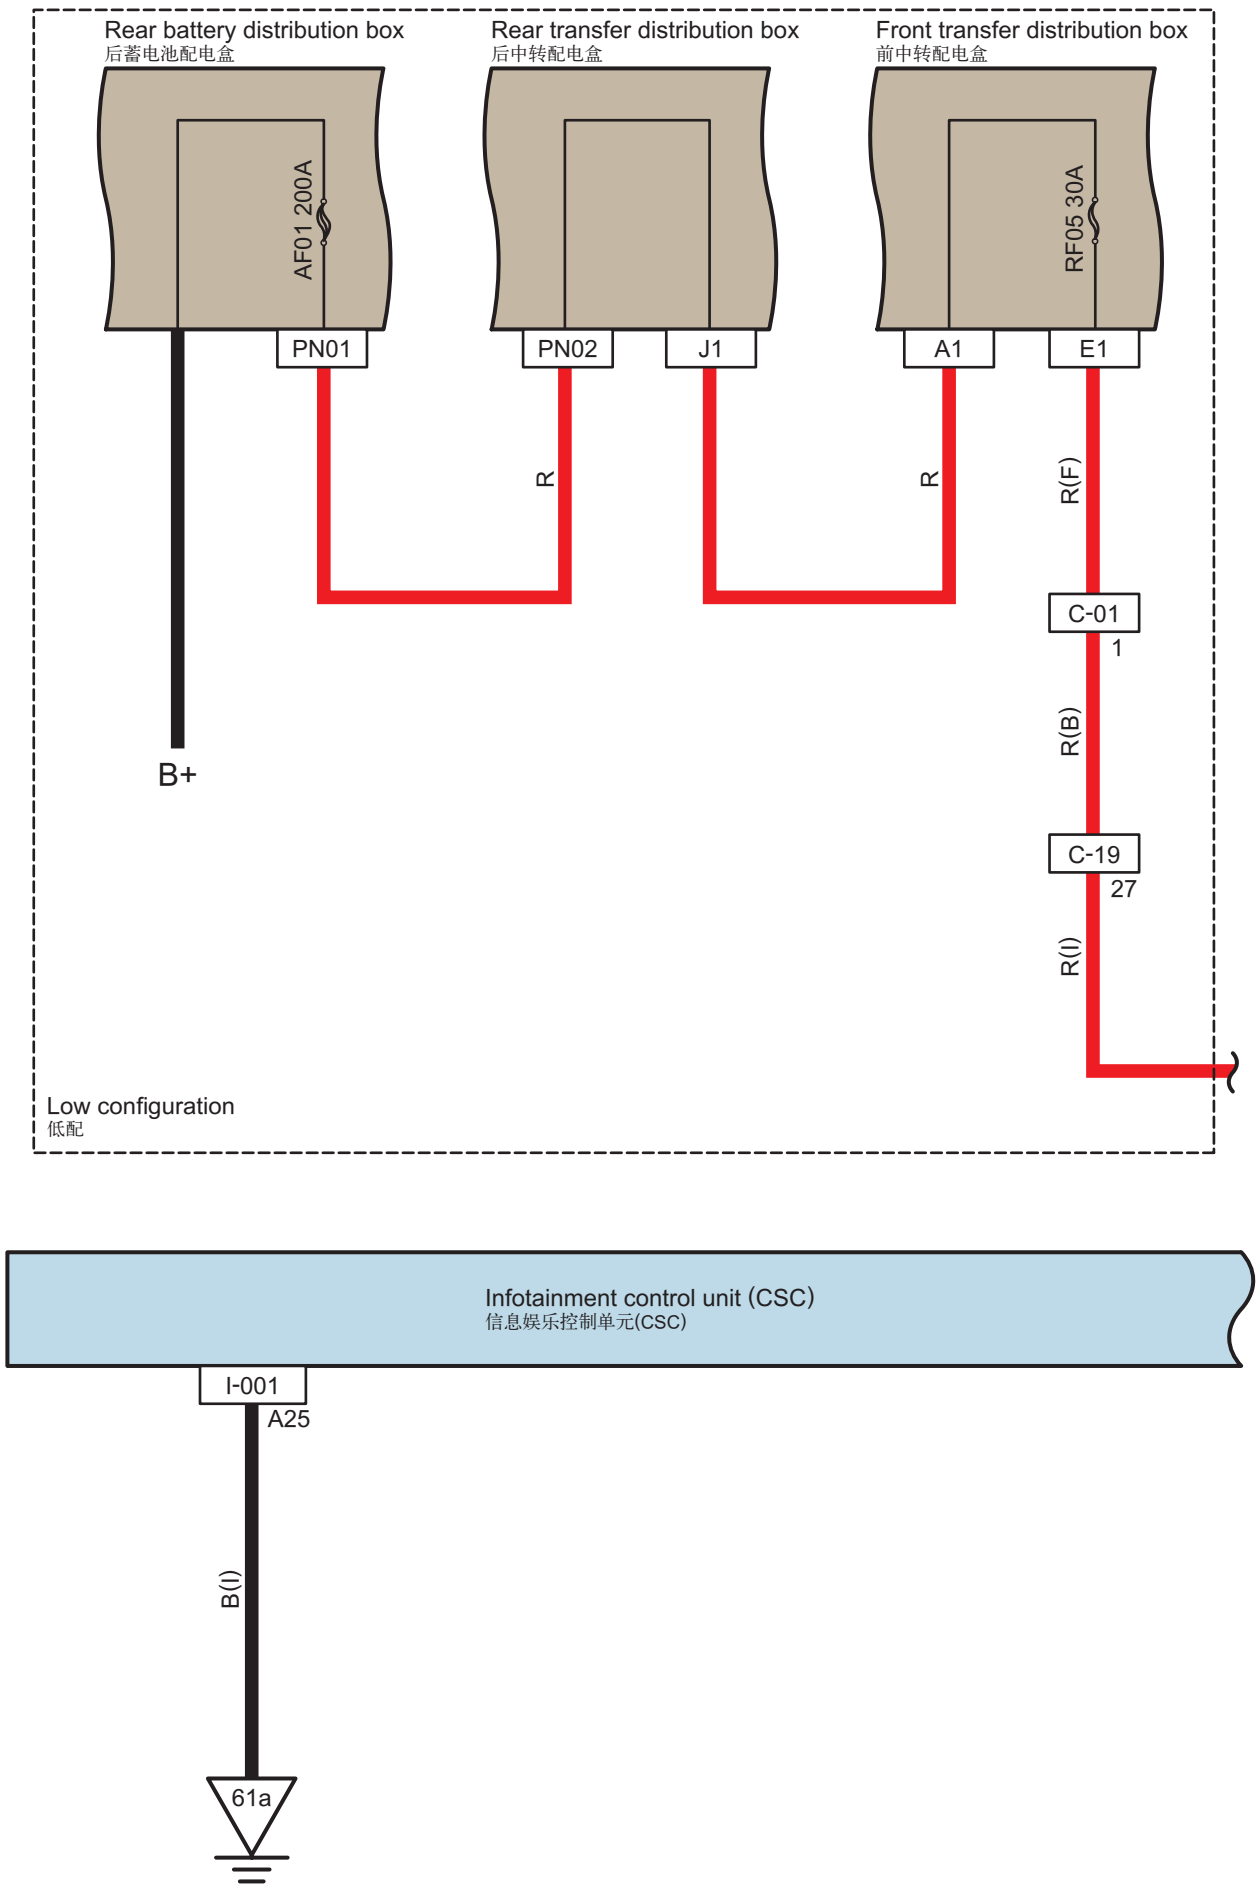

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Airbag control unit
安全气囊控制单元
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
B-057
B-057
B-022
I-006
I-006
L1
L2
B16
F4
F3
G(I)
W(I)
C-31
C-31
1
2
W(B)
G(B)
G(B)
G(B)
W(B)
B2
B1
A36
B10
B9
B-024
B-024
B-023
B-024
B-024
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

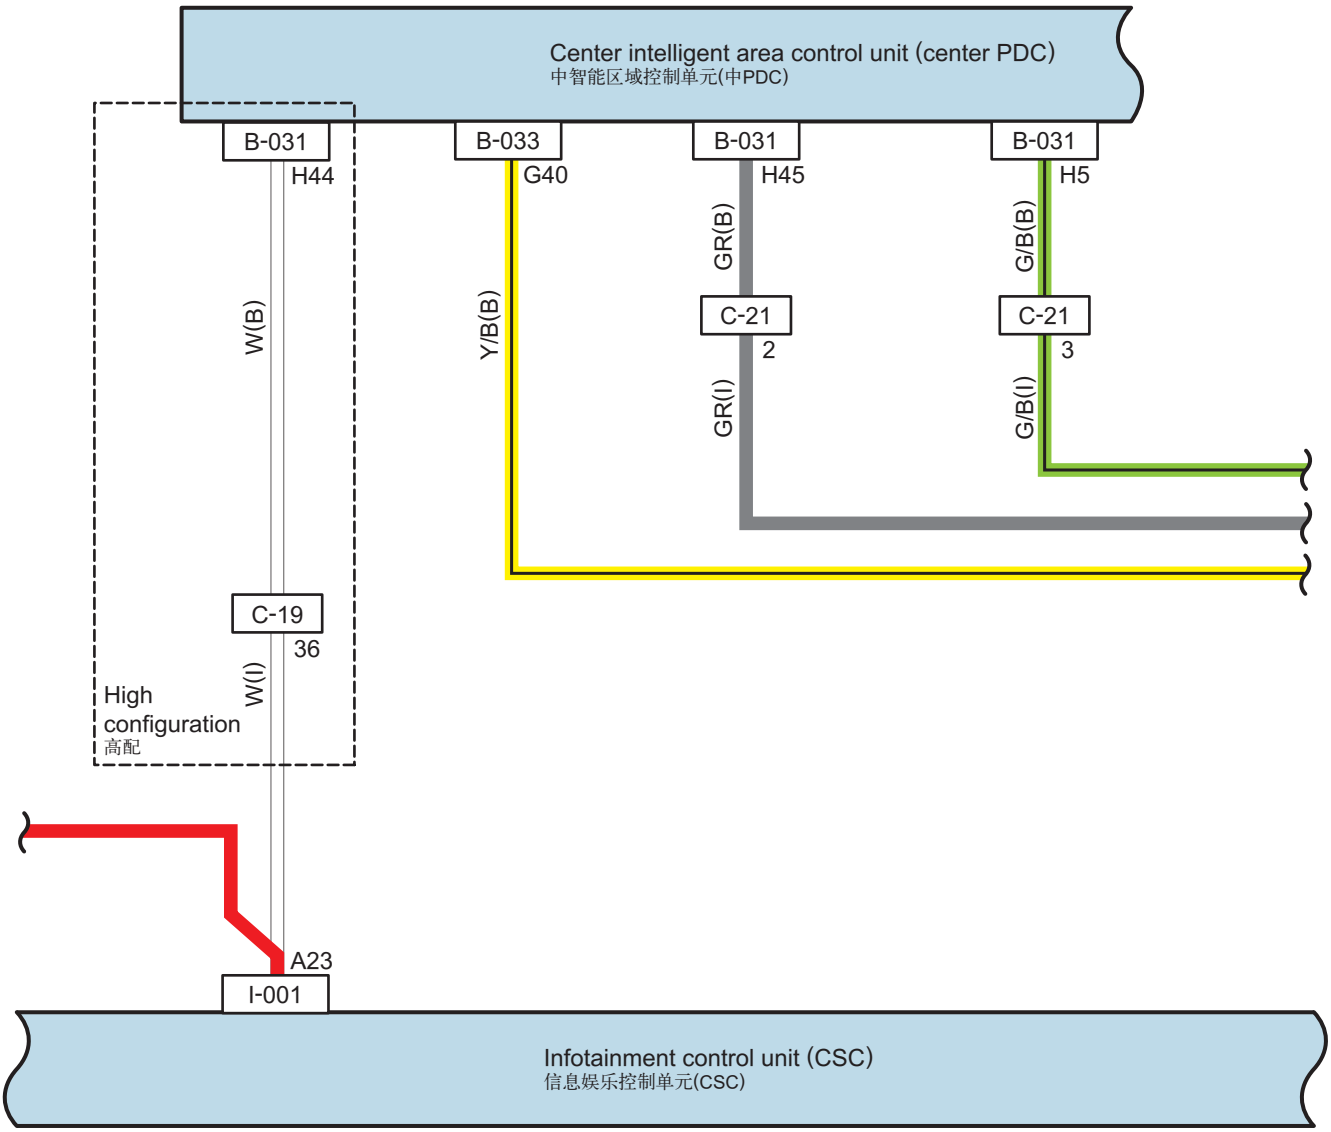

Diagnostic interface
诊断接口
I-014
6
I-014
14
I-014
8
I-014
12
I-014
13
I-014
3
I-014
11
L/G(I)
W/G(I)
P/B(I)
W(I)
L/B(I)
Y(I)
G/L(I)
C-19
8
C-19
9
C-19
3
C-19
13
C-19
14
C-19
10
C-19
11
L/G(B)
W/G(B)
P/B(B)
W(B)
L/B(B)
Y(B)
G/L(B)
A11
A12
A14
A58
A59
A60
A61
B-023
B-023
B-023
B-023
B-023
B-023
B-023
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

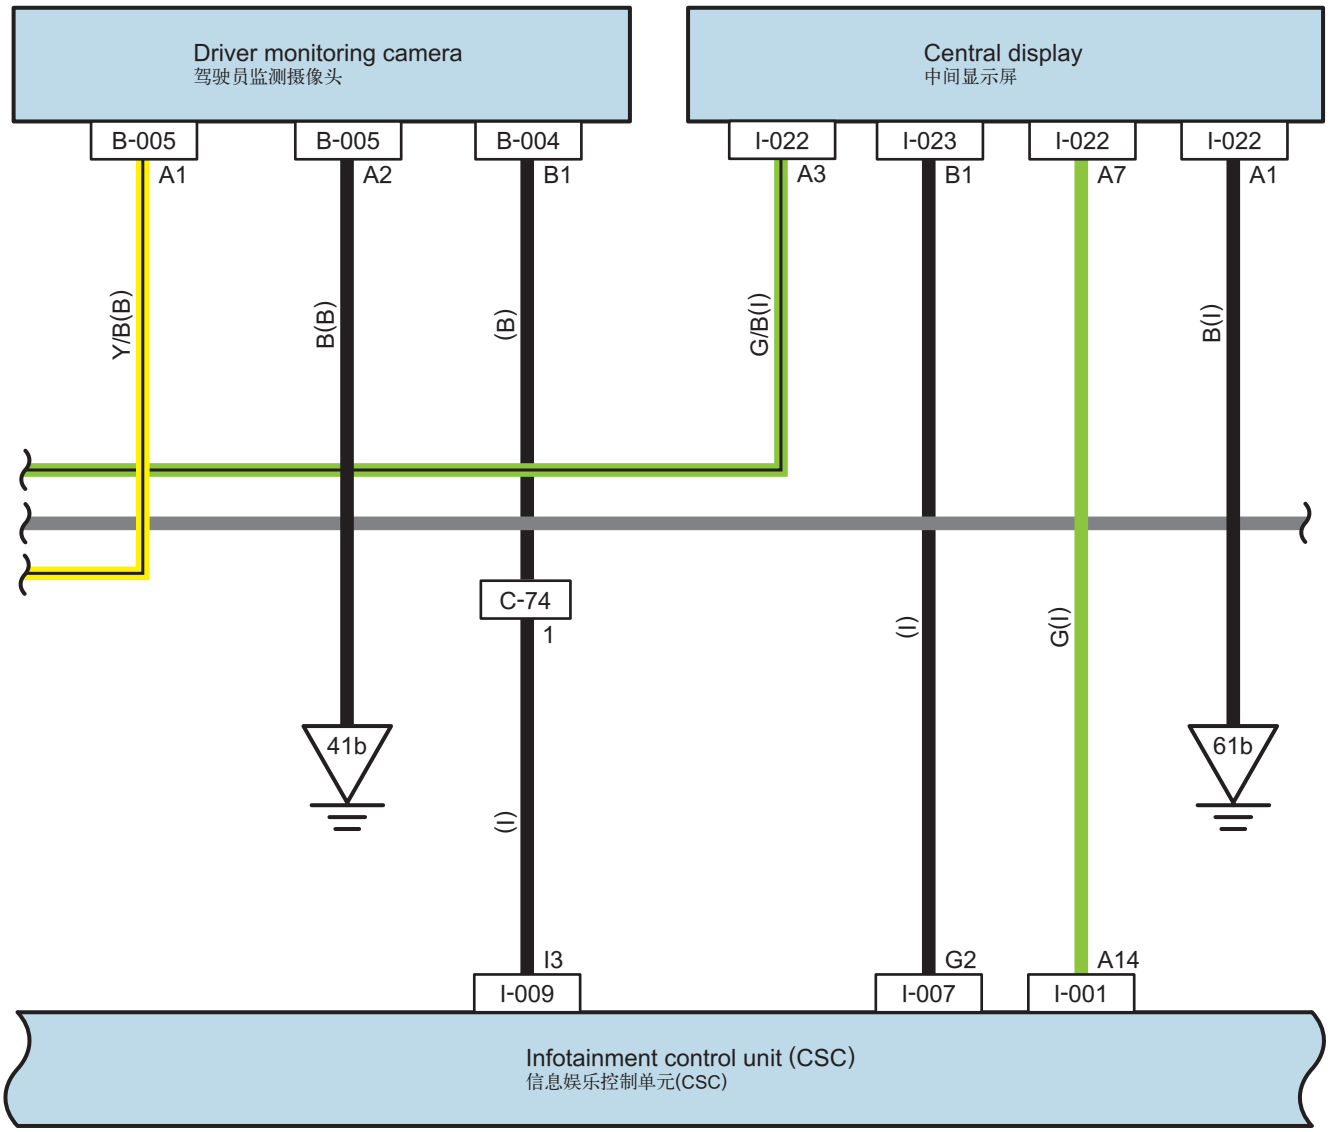

Smart front camera controller - ME
智能前视摄像头控制器-ME
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
B-018
B-018
B1
B2
B-091
B-091
A12
A24
G(B)
W(B)
G(B)
W(B)
B8
B7
B12
B11
B-024
B-024
B-024
B-024
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)

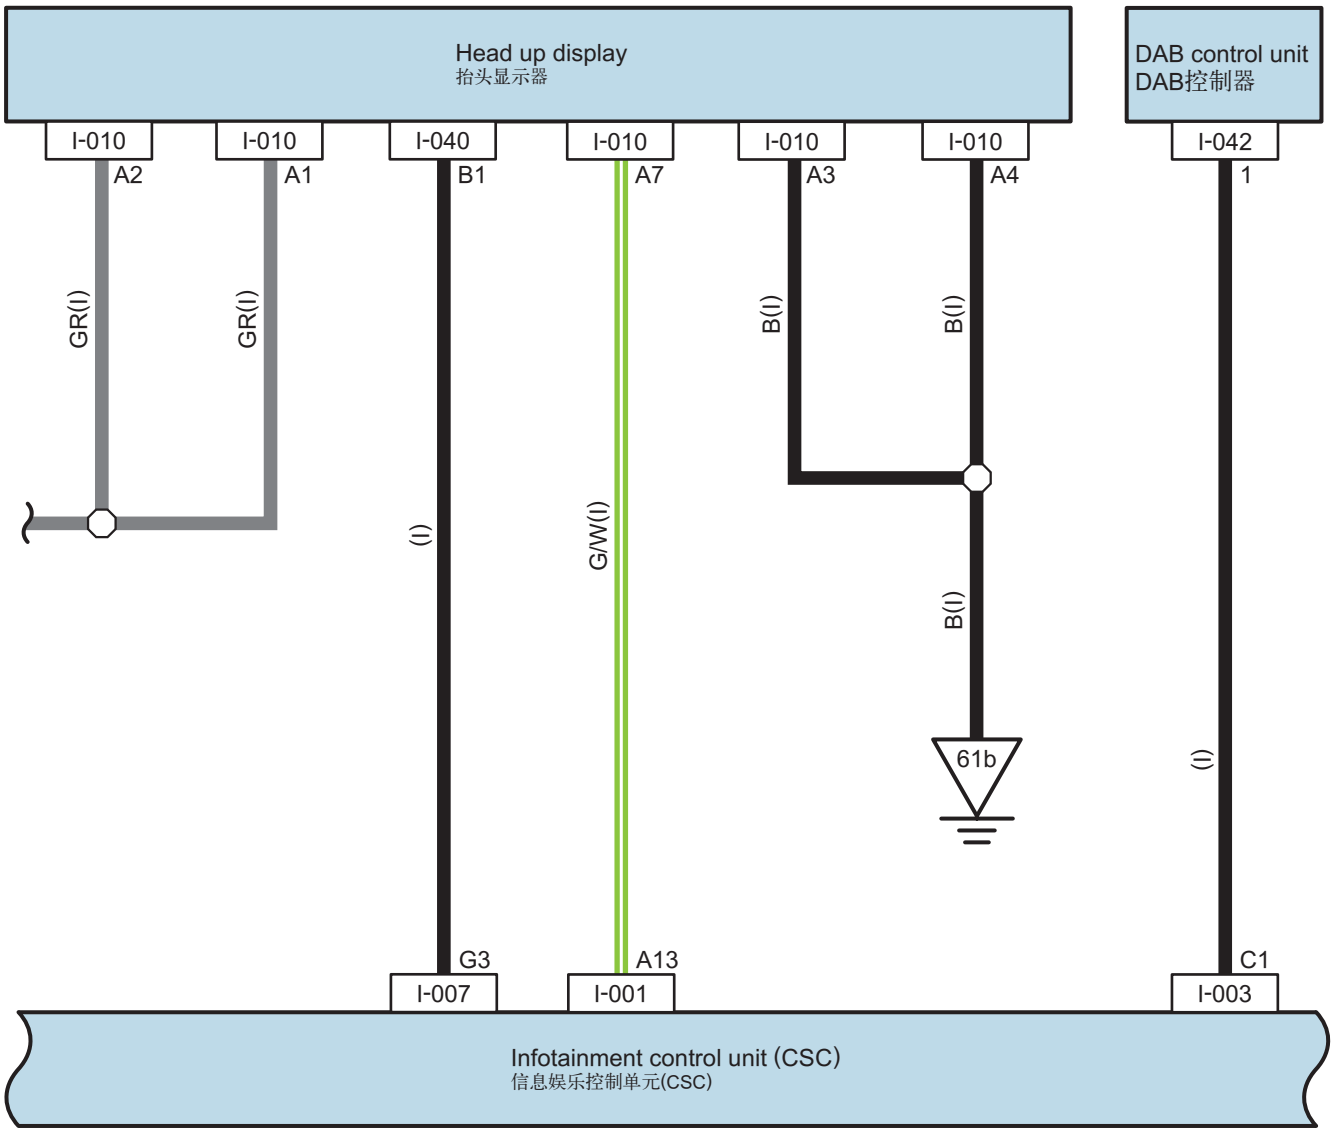

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-031
H6
B-033
G30
B-023
A46
B-024
B7
B-024
B8
O(B)
Y/G(B)
Y/G(B)
W(B)
G(B)
Y/G(B)
A1
A16
B2
B1
B-011
B-011
B-018
B-018
Smart front camera controller - ME
智能前视摄像头控制器-ME
B-011
A6
B-011
A18
B(B)
B(B)
B(B)
40

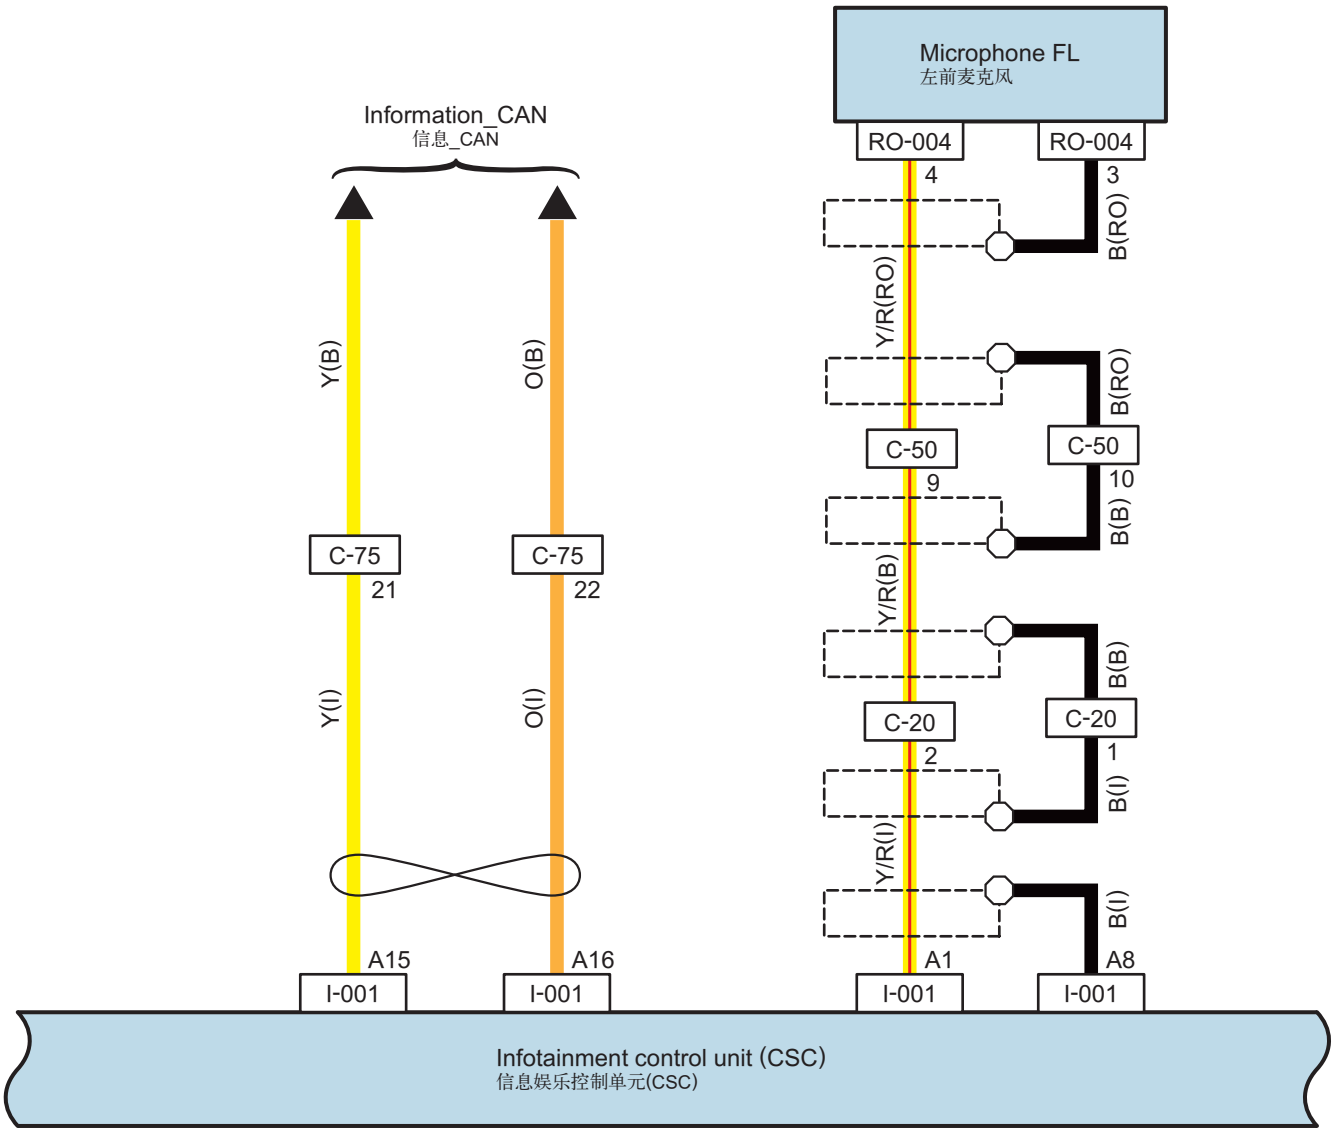

Automatic driving_CAN
自动驾驶_CAN
Rear automatic driving radar_CAN
后自动驾驶雷达_CAN
L(B)
G(B)
GR(B)
O(B)
A24
A12
A23
A11
B-011
B-011
B-011
B-011
Smart front camera controller - ME
智能前视摄像头控制器-ME

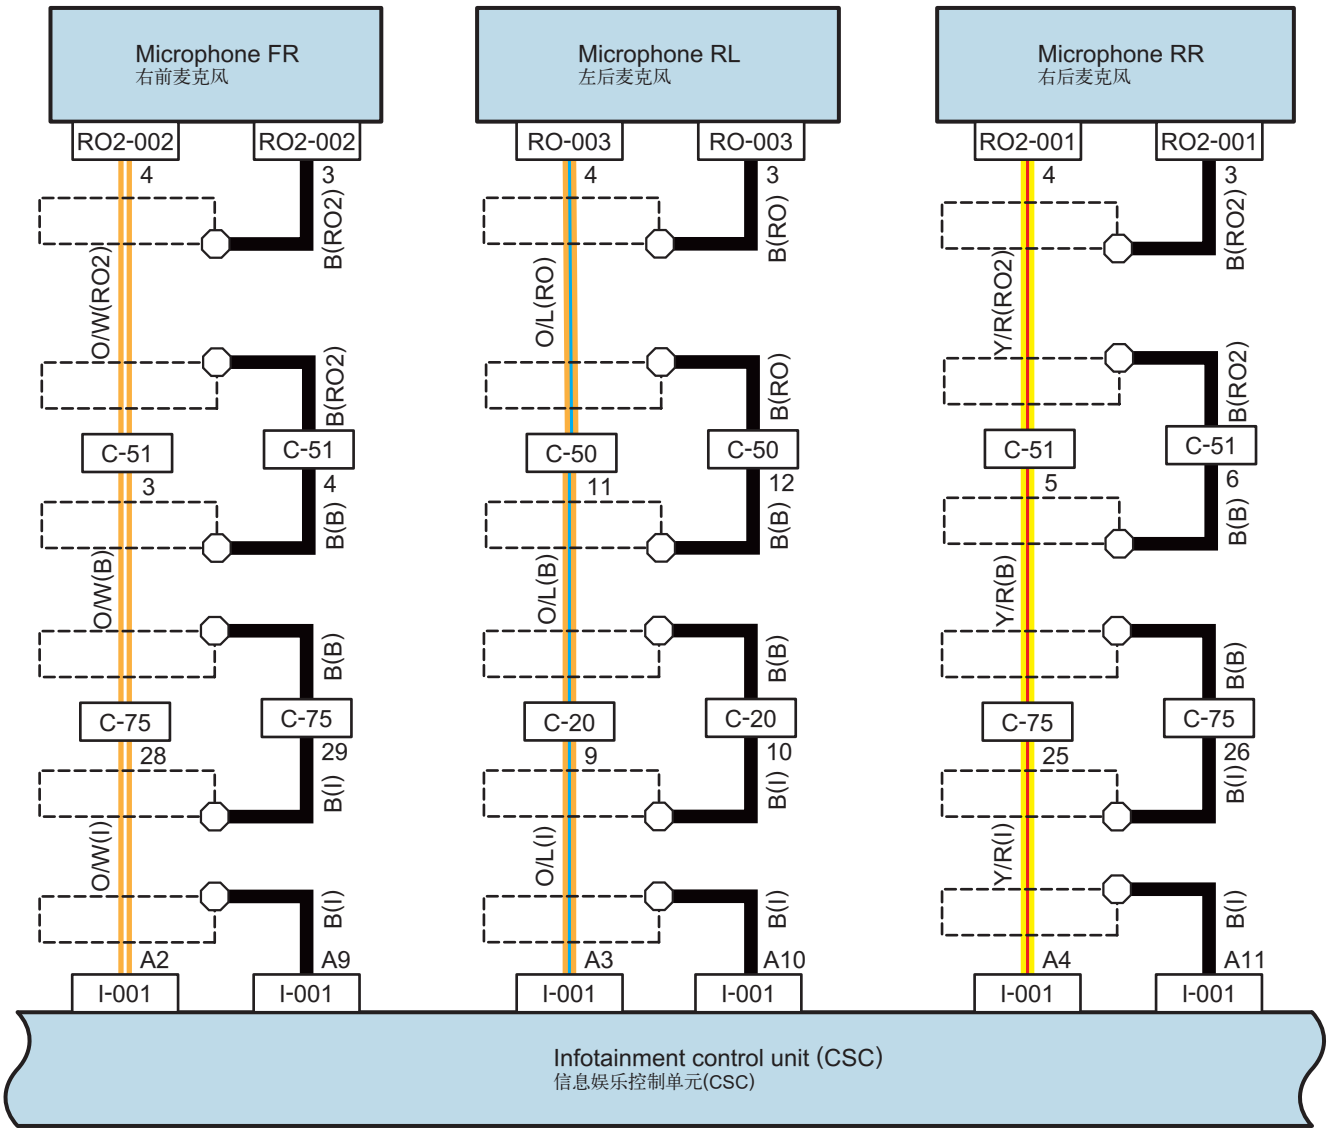

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
AF01 200A
RF05 30A
PN01
PN02
J1
A1
E1
R
R
R(F)
C-01
1
R(B)
C-19
27
R(I)
B+
Low configuration
低配
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
I-001
A25
B(I)
61a

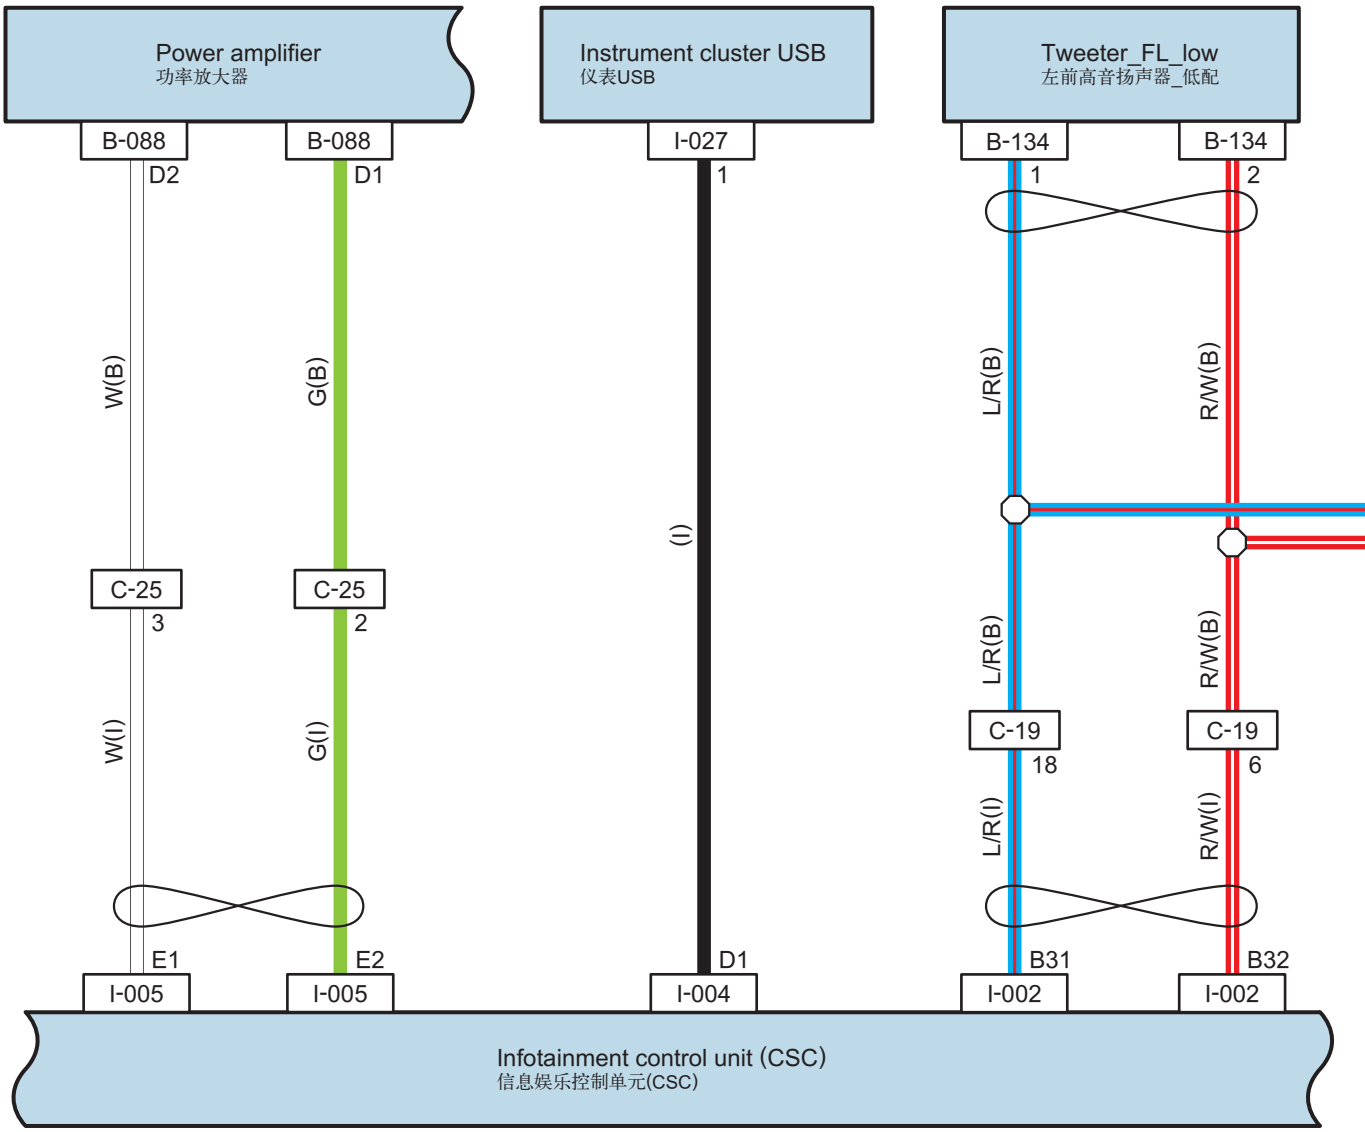

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-031
H44
B-033
G40
B-031
H45
B-031
H5
W(B)
Y/B(B)
GR(B)
G/B(B)
C-21
2
C-21
3
GR(I)
G/B(I)
C-19
36
W(I)
High
configuration
高配
A23
I-001
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

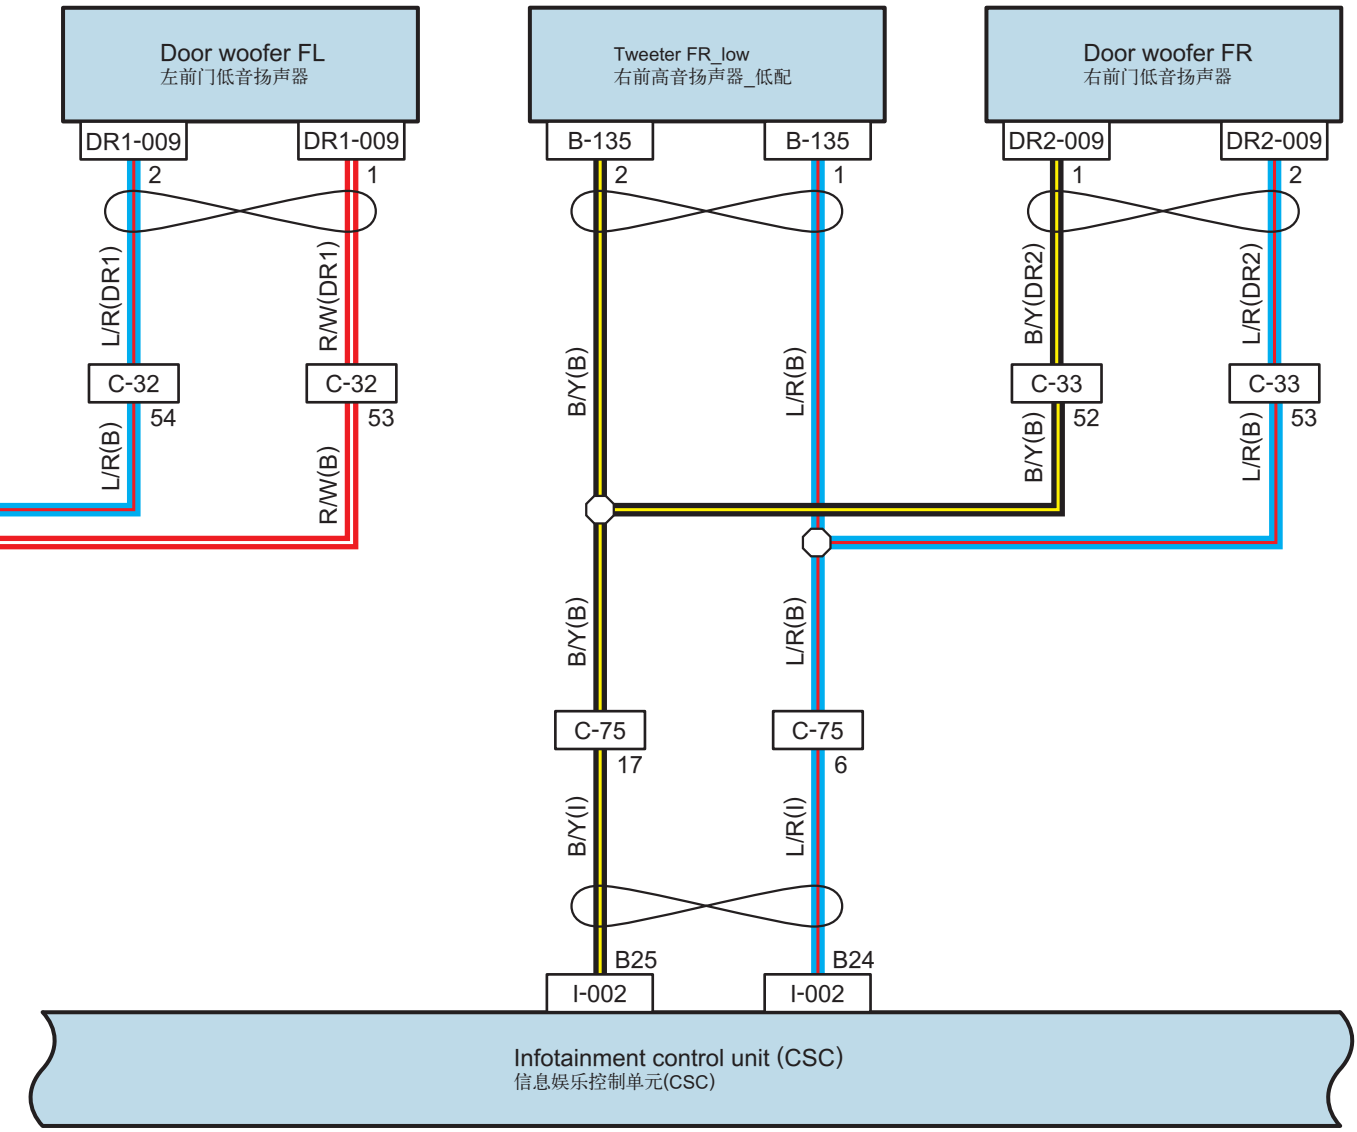

Driver monitoring camera
驾驶员监测摄像头
Central display
中间显示屏
B-005
A1
B-005
A2
B-004
B1
I-022
A3
I-023
B1
I-022
A7
I-022
A1
Y/B(B)
B(B)
(B)
G/B(I)
B(I)
C-74
1
(I)
G(I)
41b
61b
(I)
I3
G2
A14
I-009
I-007
I-001
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

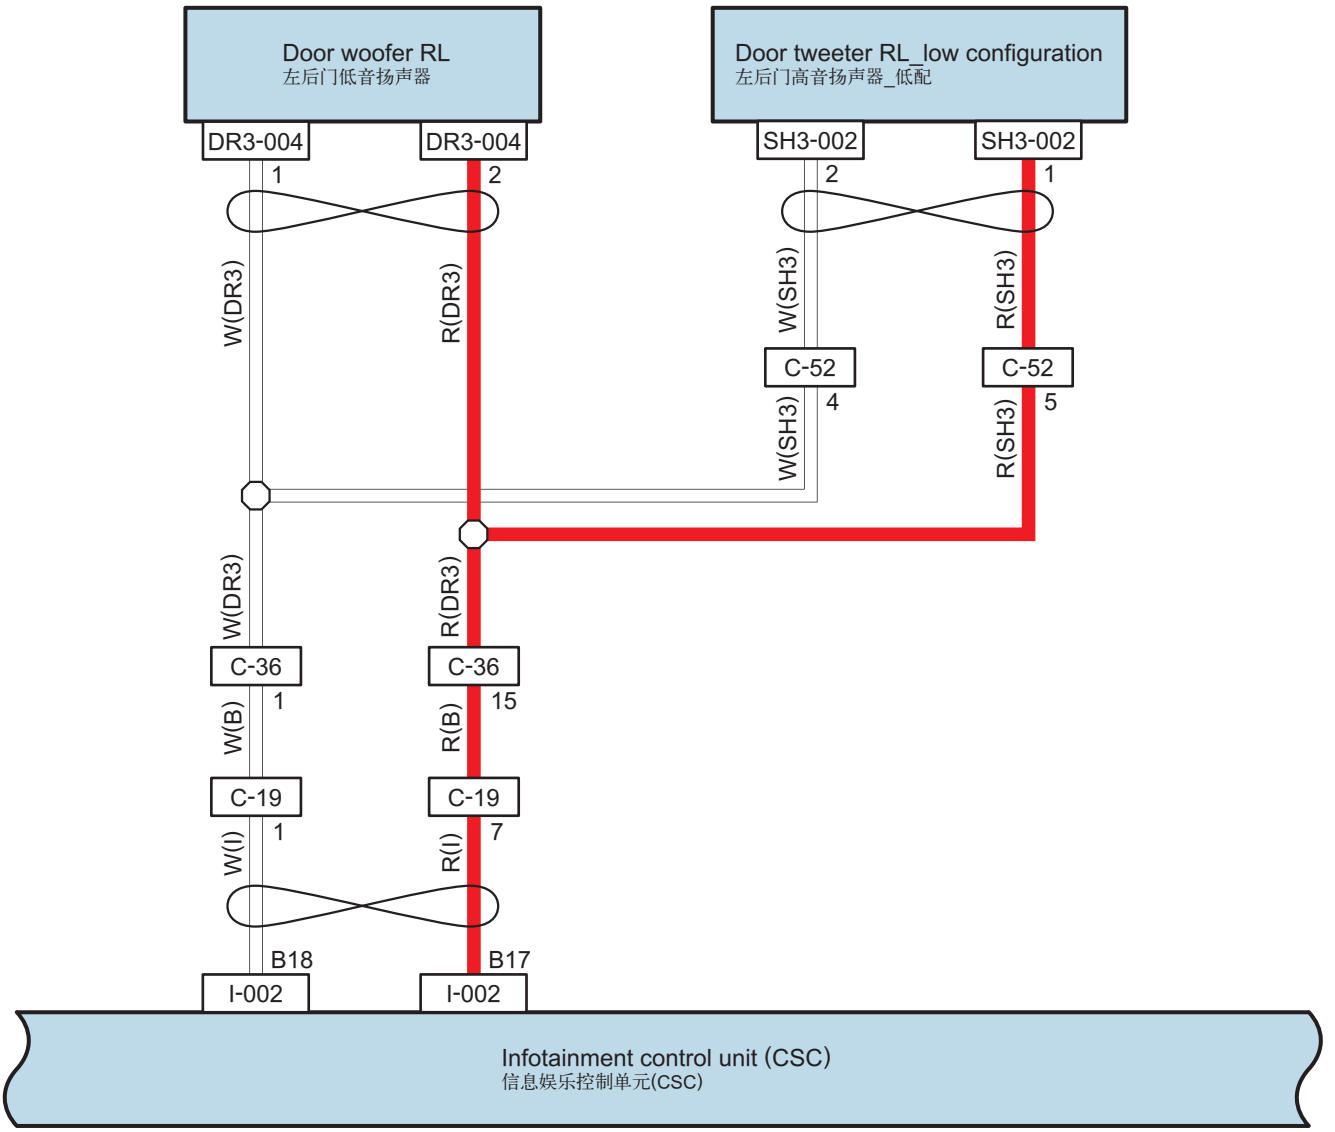

Head up display
抬头显示器
DAB control unit
DAB控制器
I-010
A2
I-010
A1
I-040
B1
I-010
A7
I-010
A3
I-010
A4
I-042
1
GR(I)
GR(I)
(I)
G/W(I)
B(I)
B(I)
B(I)
61b
(I)
G3
A13
C1
I-007
I-001
I-003
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

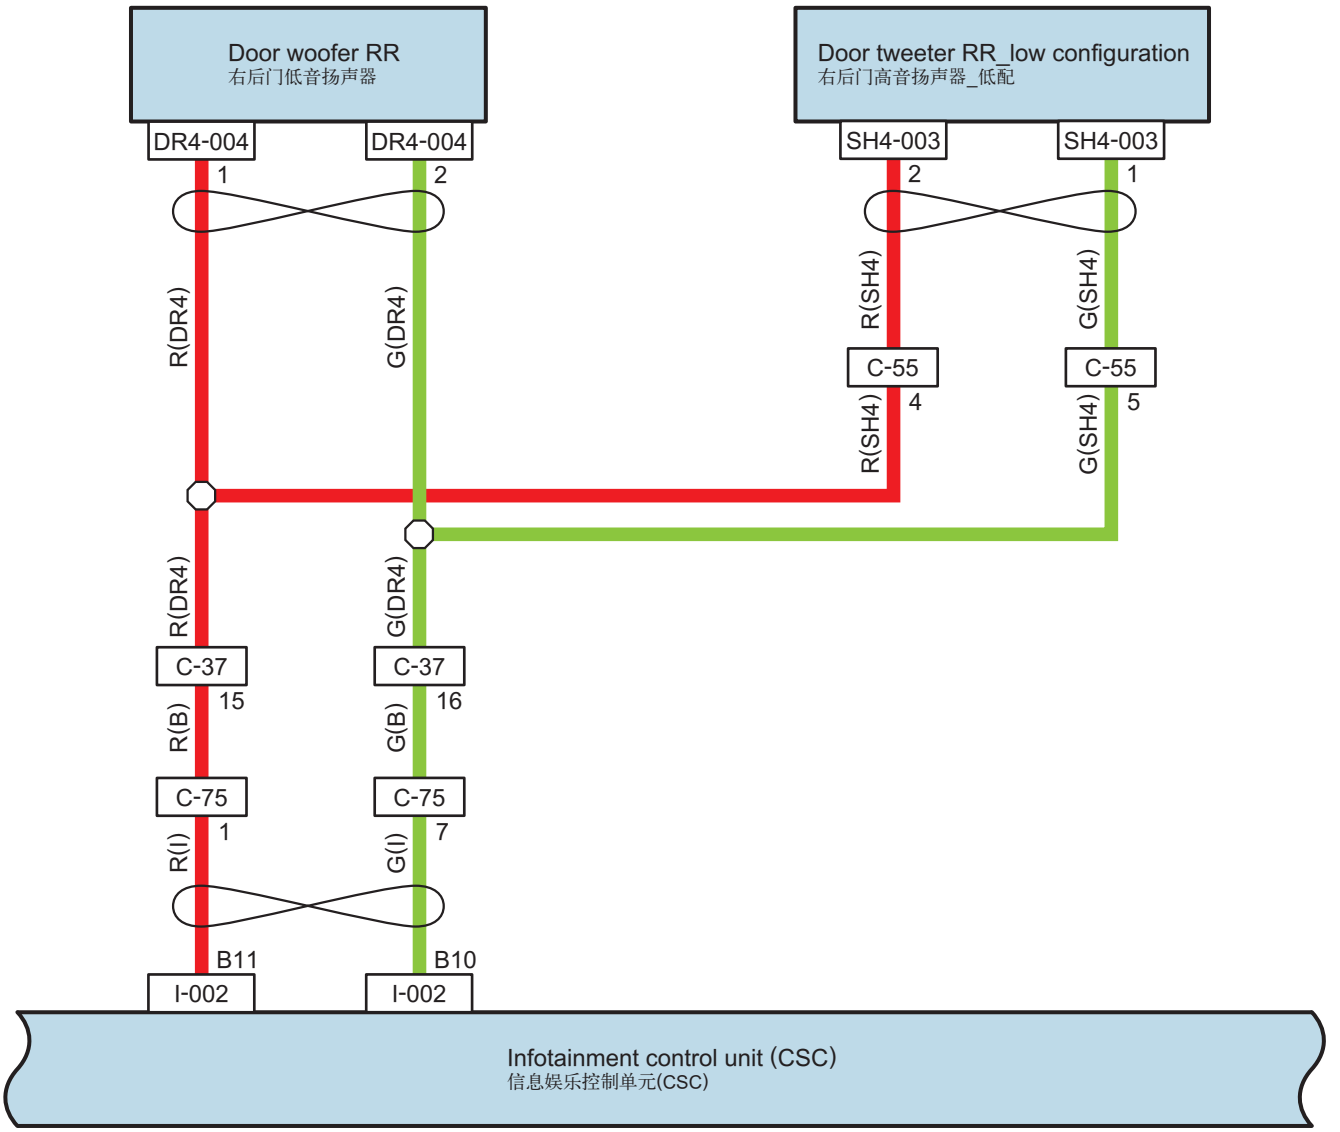

Microphone FL
左前麦克风
RO-004
RO-004
4
3
B(RO)
Y/R(RO)
B(RO)
C-50
C-50
9
10
B(B)
Y/R(B)
B(B)
C-20
C-20
2
1
B(I)
Y/R(I)
B(I)
A1
A8
I-001
I-001
Information_CAN
信息_CAN
Y(B)
O(B)
C-75
C-75
21
22
Y(I)
O(I)
A15
A16
I-001
I-001
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

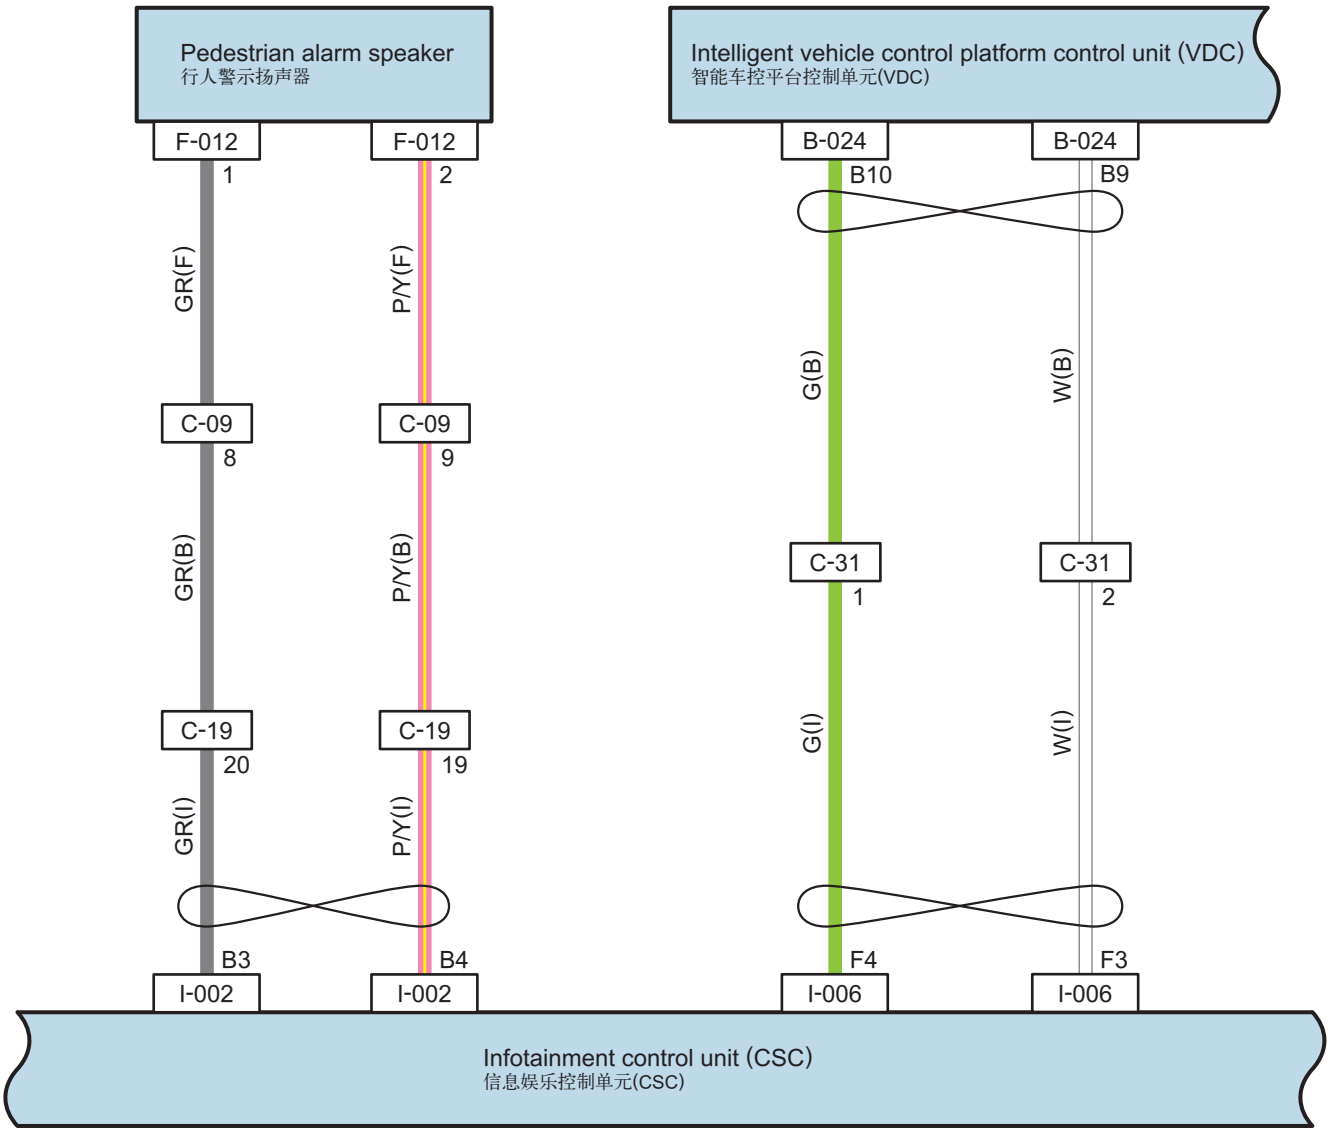

Microphone FR
右前麦克风
RO2-002
RO2-002
4
3
B(RO2)
O/W(RO2)
B(RO2)
C-51
C-51
3
4
B(B)
O/W(B)
B(B)
C-75
C-75
28
29
B(I)
O/W(I)
B(I)
A2
A9
I-001
I-001
Microphone RL
左后麦克风
RO-003
RO-003
4
3
B(RO)
O/L(RO)
B(RO)
C-50
C-50
11
12
B(B)
O/L(B)
B(B)
C-20
C-20
9
10
B(I)
O/L(I)
B(I)
A3
A10
I-001
I-001
Microphone RR
右后麦克风
RO2-001
RO2-001
4
3
B(RO2)
Y/R(RO2)
B(RO2)
C-51
C-51
5
6
B(B)
Y/R(B)
B(B)
C-75
C-75
25
26
B(I)
Y/R(I)
B(I)
A4
A11
I-001
I-001
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

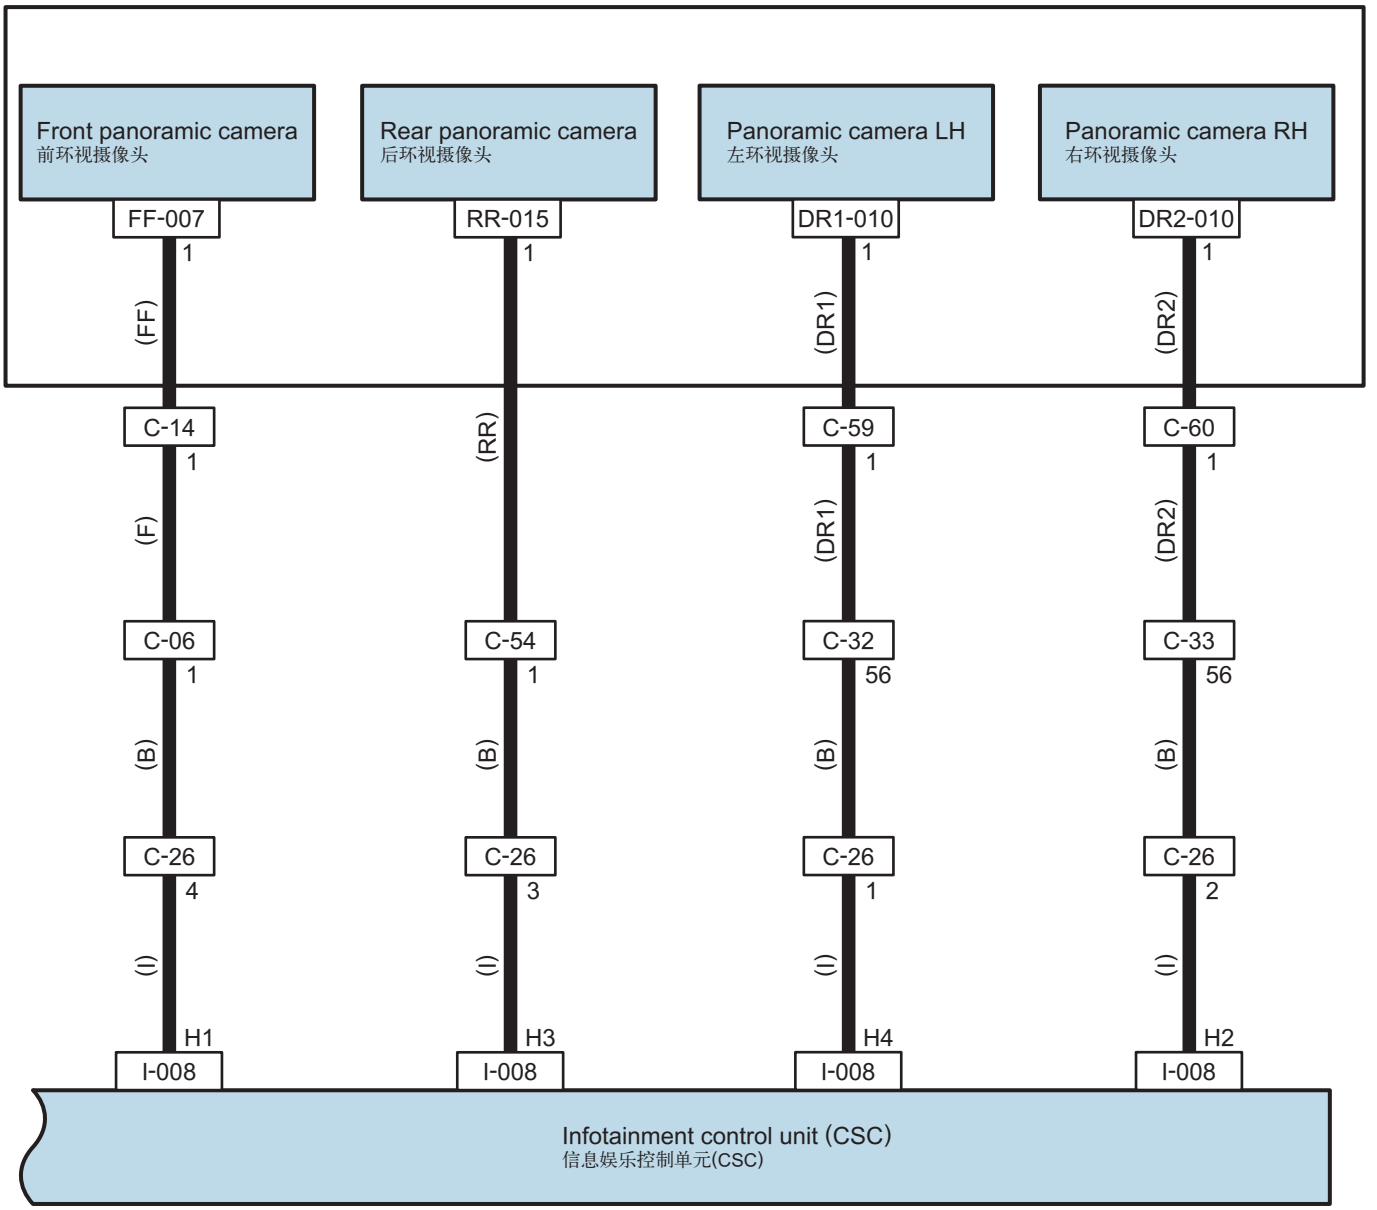

Power amplifier
功率放大器
B-088
D2
B-088
D1
W(B)
G(B)
C-25
3
C-25
2
W(I)
G(I)
E1
E2
I-005
I-005
Instrument cluster USB
仪表USB
I-027
1
(I)
D1
I-004
Tweeter_FL_low
左前高音扬声器_低配
B-134
1
B-134
2
L/R(B)
R/W(B)
L/R(B)
R/W(B)
C-19
18
C-19
6
L/R(I)
R/W(I)
B31
B32
I-002
I-002
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

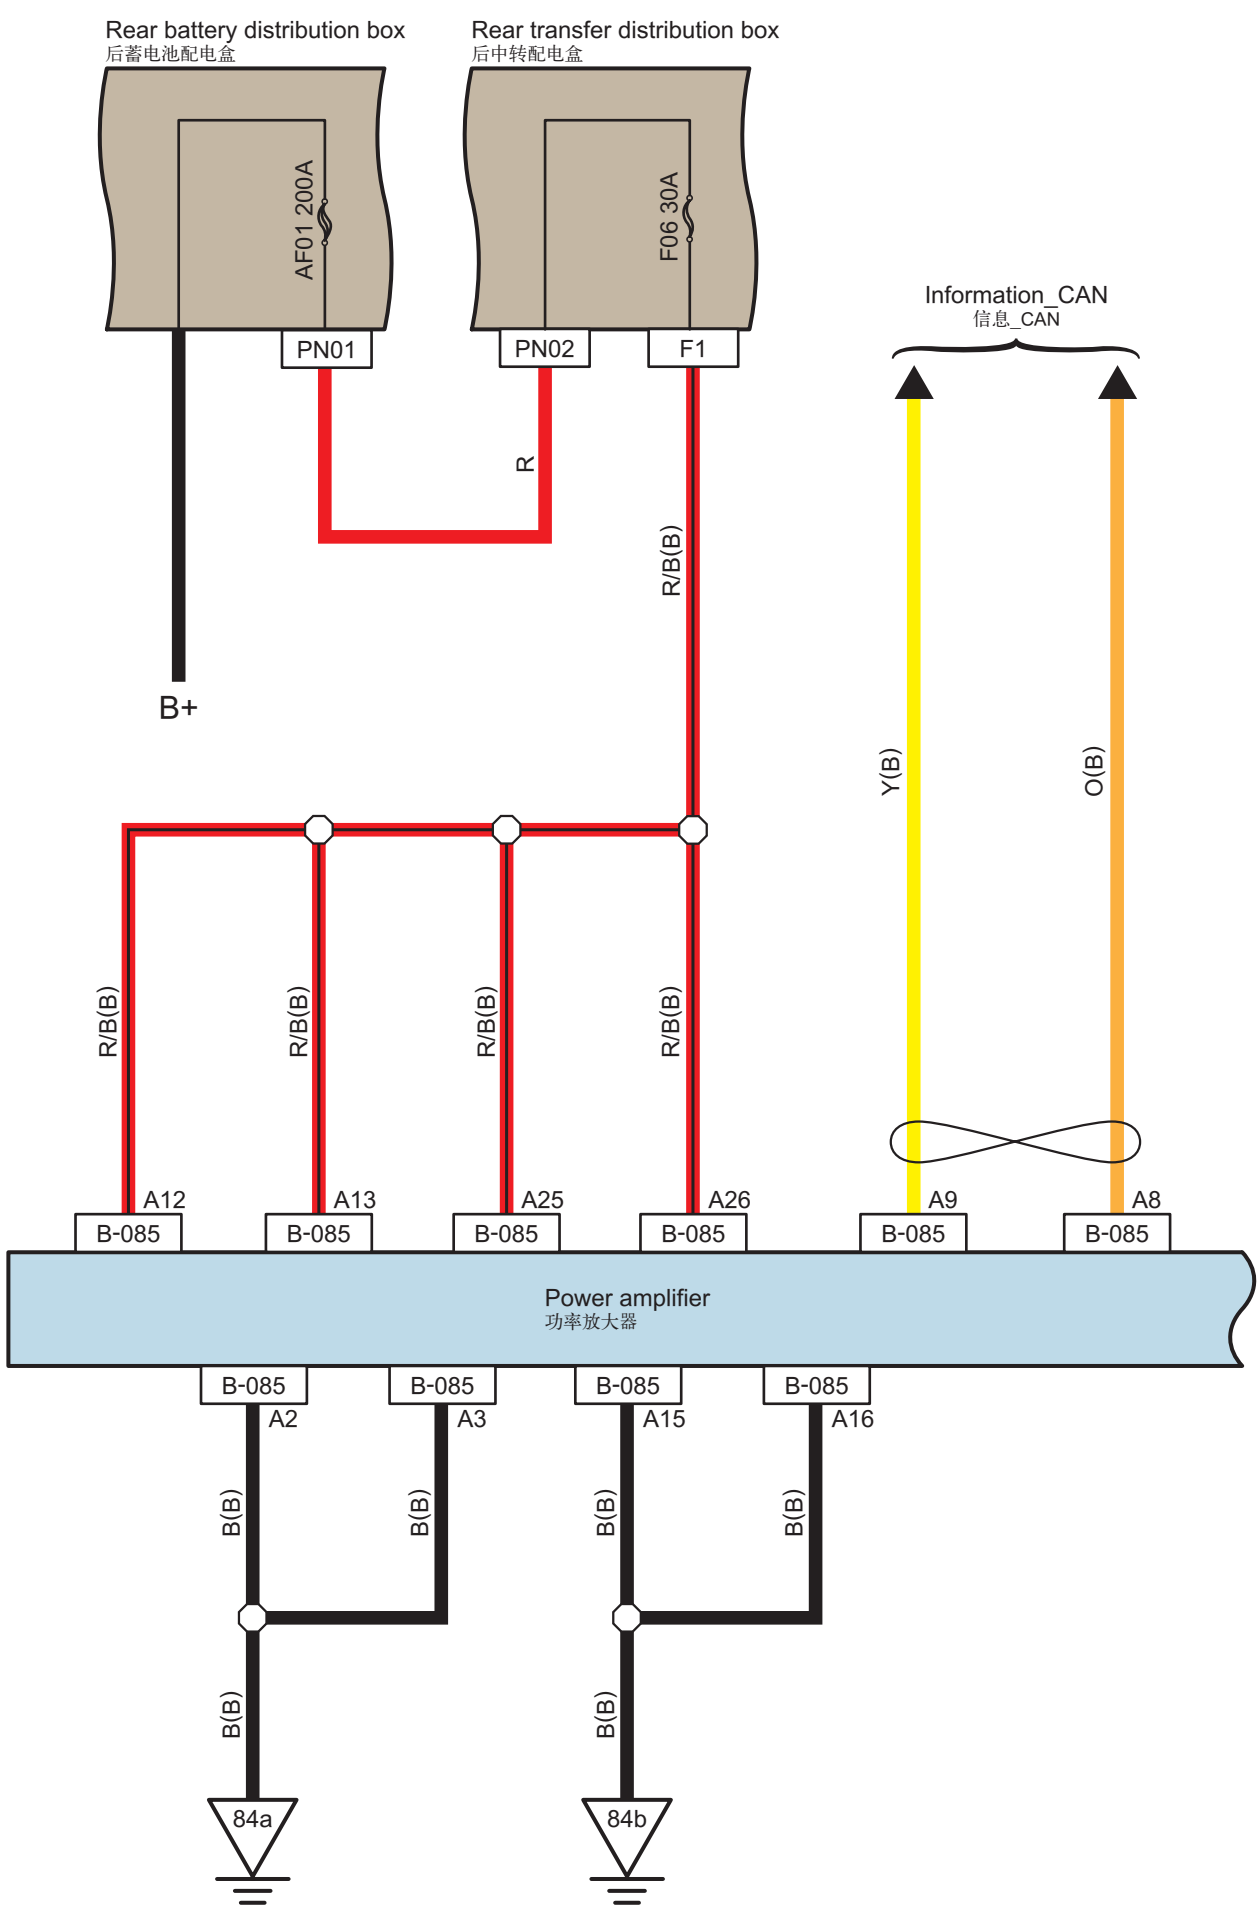

Door woofer FL
左前门低音扬声器
DR1-009
2
DR1-009
1
L/R(DR1)
R/W(DR1)
C-32
54
C-32
53
L/R(B)
R/W(B)
Tweeter FR_low
右前高音扬声器_低配
B-135
2
B-135
1
B/Y(B)
L/R(B)
B/Y(B)
L/R(B)
C-75
17
C-75
6
B/Y(I)
L/R(I)
B25
B24
I-002
I-002
Door woofer FR
右前门低音扬声器
DR2-009
1
DR2-009
2
B/Y(DR2)
L/R(DR2)
C-33
52
C-33
53
B/Y(B)
L/R(B)
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

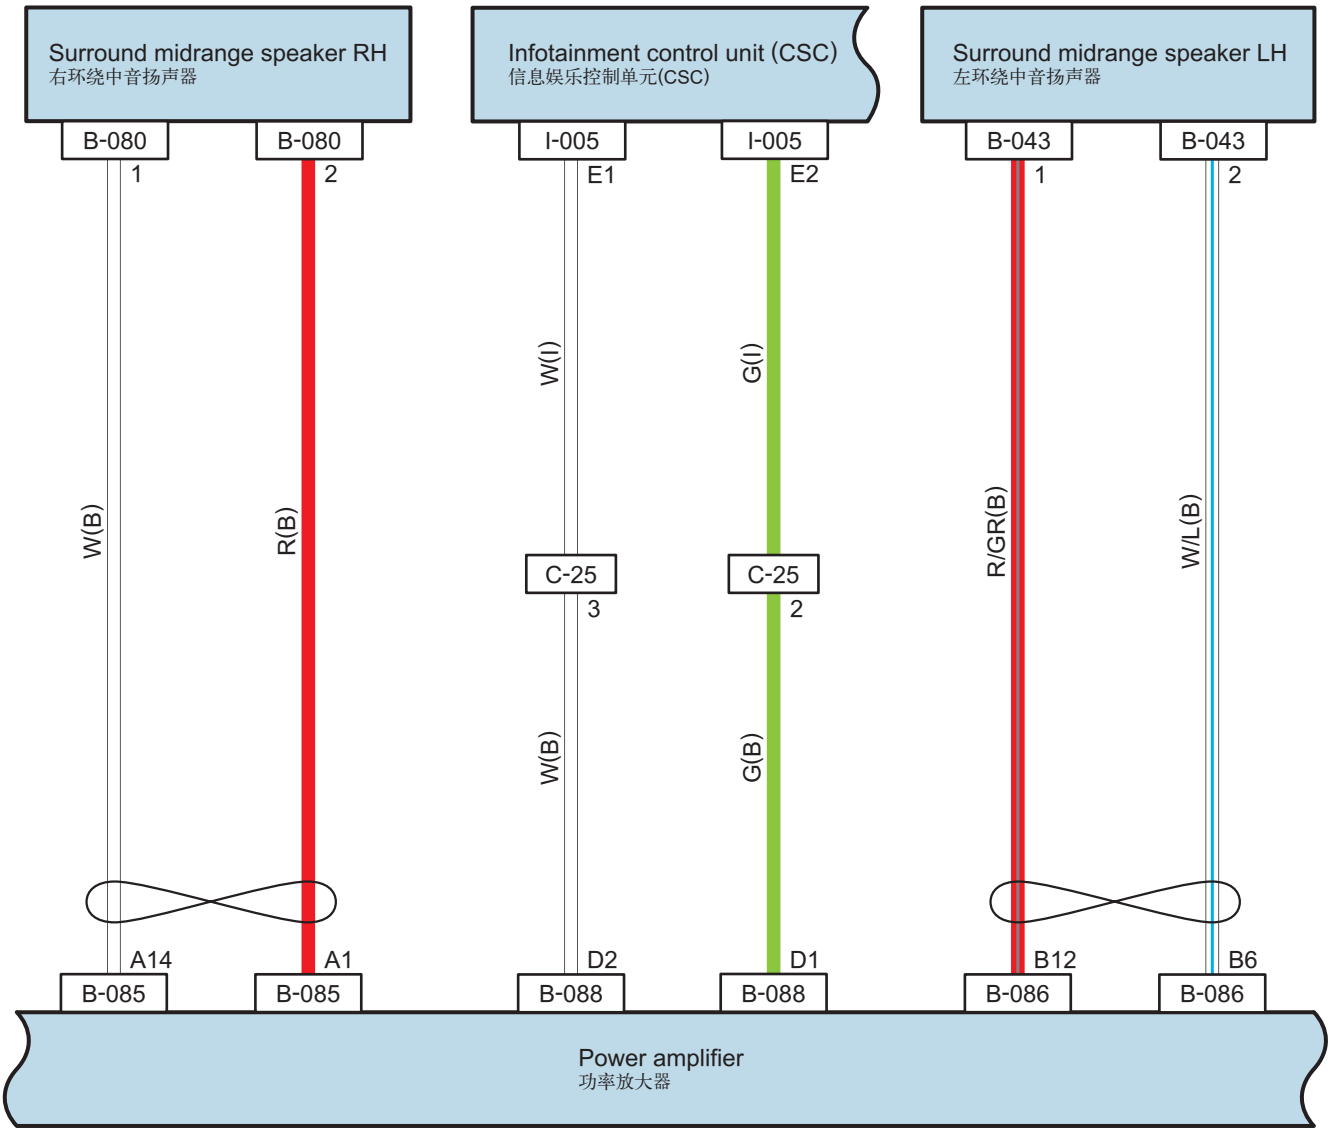

Door woofer RL
左后门低音扬声器
Door tweeter RL_low configuration
左后门高音扬声器_低配
DR3-004
DR3-004
SH3-002
SH3-002
1
2
2
1
W(DR3)
R(DR3)
W(SH3)
R(SH3)
C-52
C-52
4
5
W(SH3)
R(SH3)
W(DR3)
R(DR3)
C-36
C-36
1
15
W(B)
R(B)
C-19
C-19
1
7
W(I)
R(I)
B18
B17
I-002
I-002
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

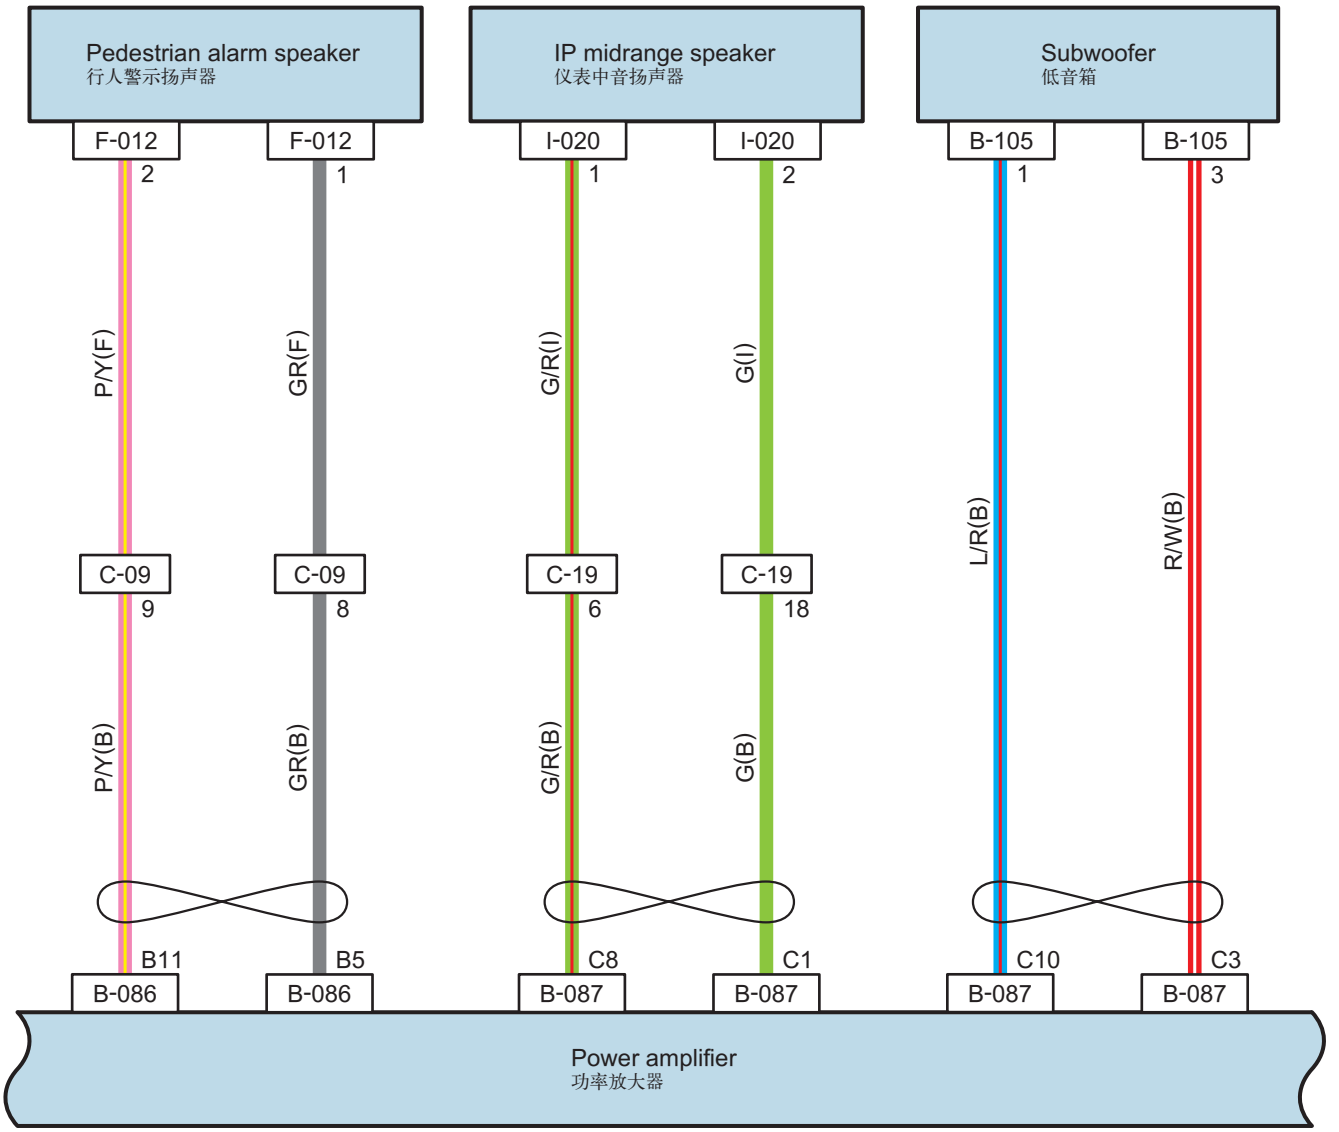

Door woofer RR
右后门低音扬声器
DR4-004
1
DR4-004
2
R(DR4)
G(DR4)
Door tweeter RR_low configuration
右后门高音扬声器_低配
SH4-003
2
SH4-003
1
R(SH4)
G(SH4)
C-55
4
C-55
5
R(SH4)
G(SH4)
R(DR4)
G(DR4)
C-37
15
C-37
16
R(B)
G(B)
C-75
1
C-75
7
R(I)
G(I)
B11
B10
I-002
I-002
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

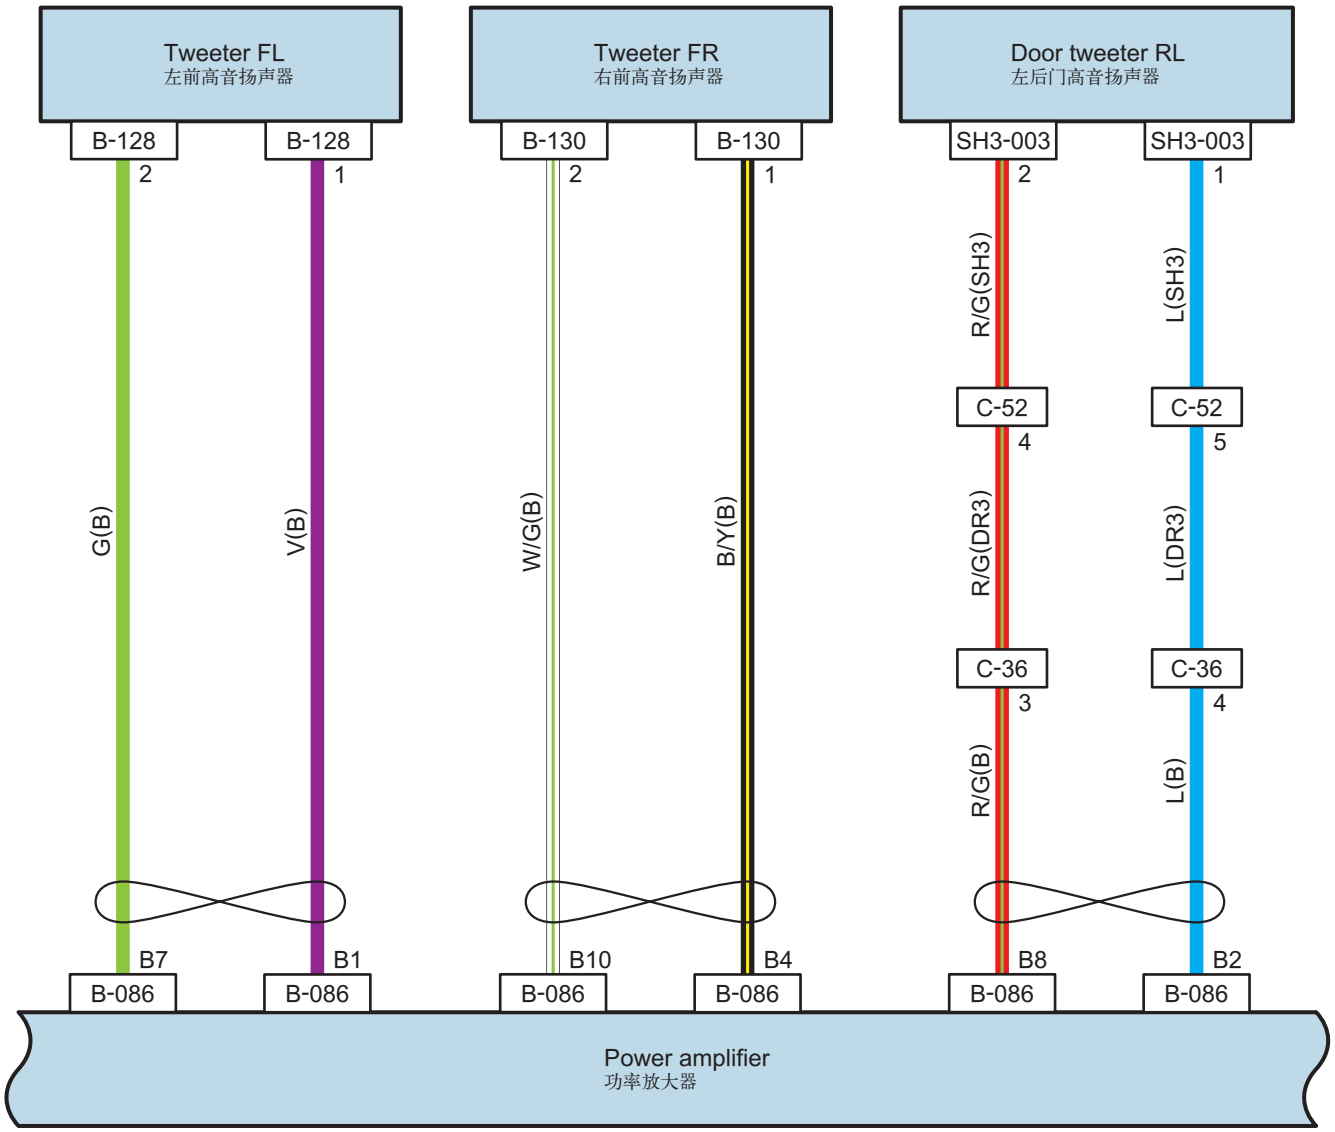

Pedestrian alarm speaker
行人警示扬声器
F-012
1
F-012
2
GR(F)
P/Y(F)
C-09
8
C-09
9
GR(B)
P/Y(B)
C-19
20
C-19
19
GR(I)
P/Y(I)
B3
B4
I-002
I-002
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-024
B10
B-024
B9
G(B)
W(B)
C-31
1
C-31
2
G(I)
W(I)
F4
F3
I-006
I-006
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

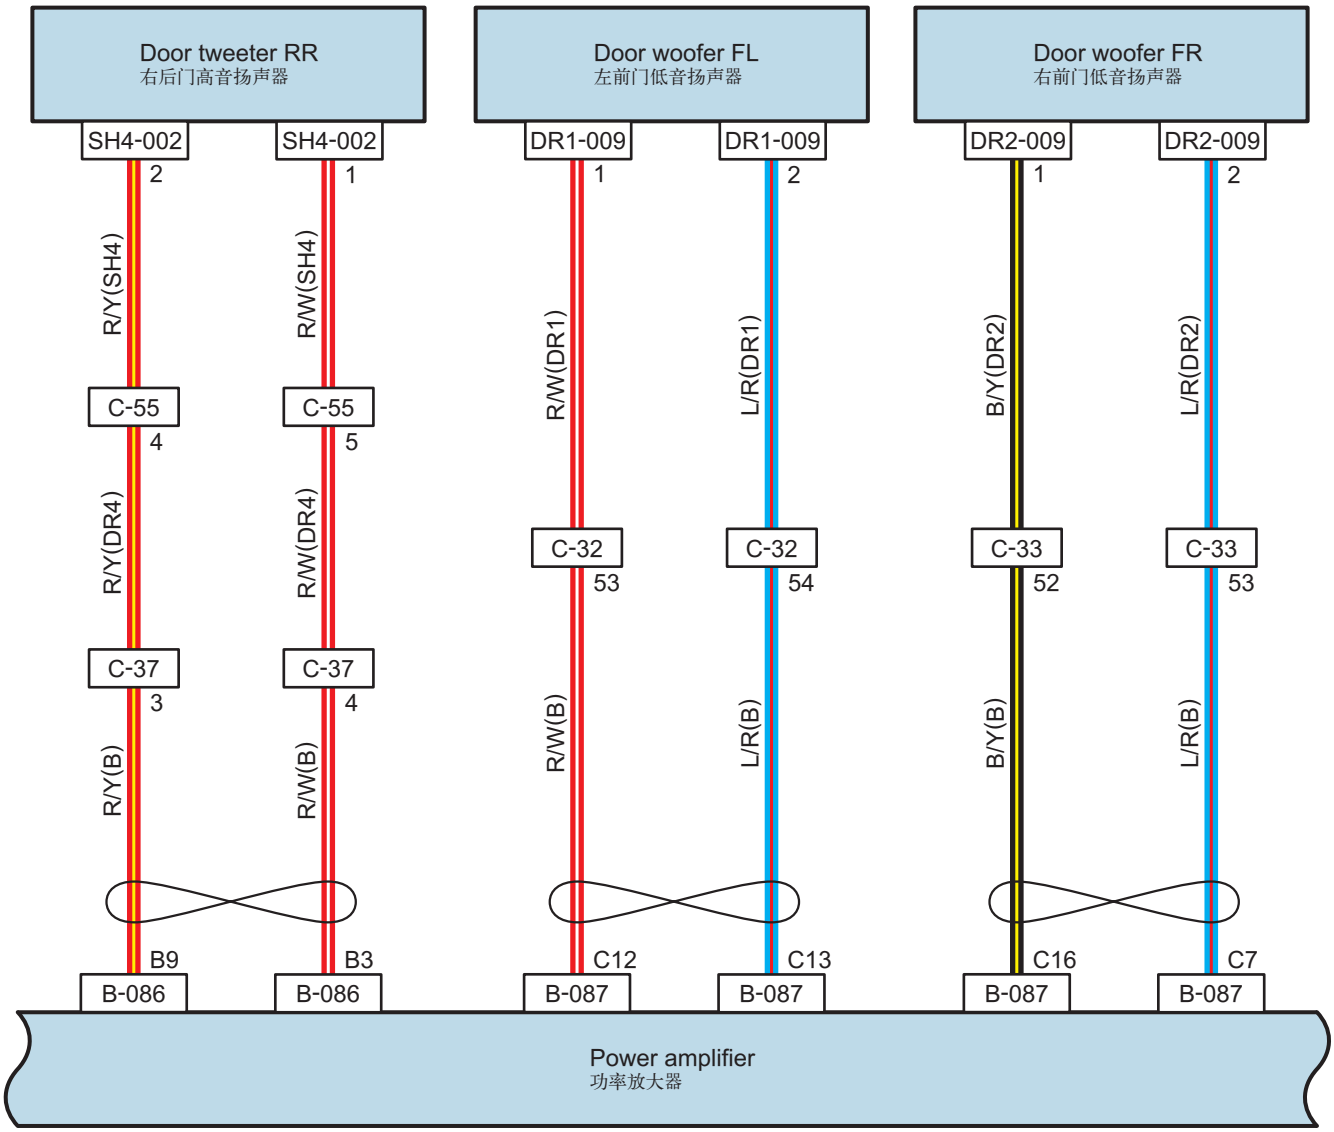

Front panoramic camera
前环视摄像头
Rear panoramic camera
后环视摄像头
Panoramic camera LH
左环视摄像头
Panoramic camera RH
右环视摄像头
FF-007
RR-015
DR1-010
DR2-010
1
(FF)
(RR)
(DR1)
(DR2)
C-14
C-59
C-60
(F)
C-06
C-54
C-32
C-33
56
(B)
C-26
4
3
2
(I)
H1
H3
H4
H2
I-008
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)

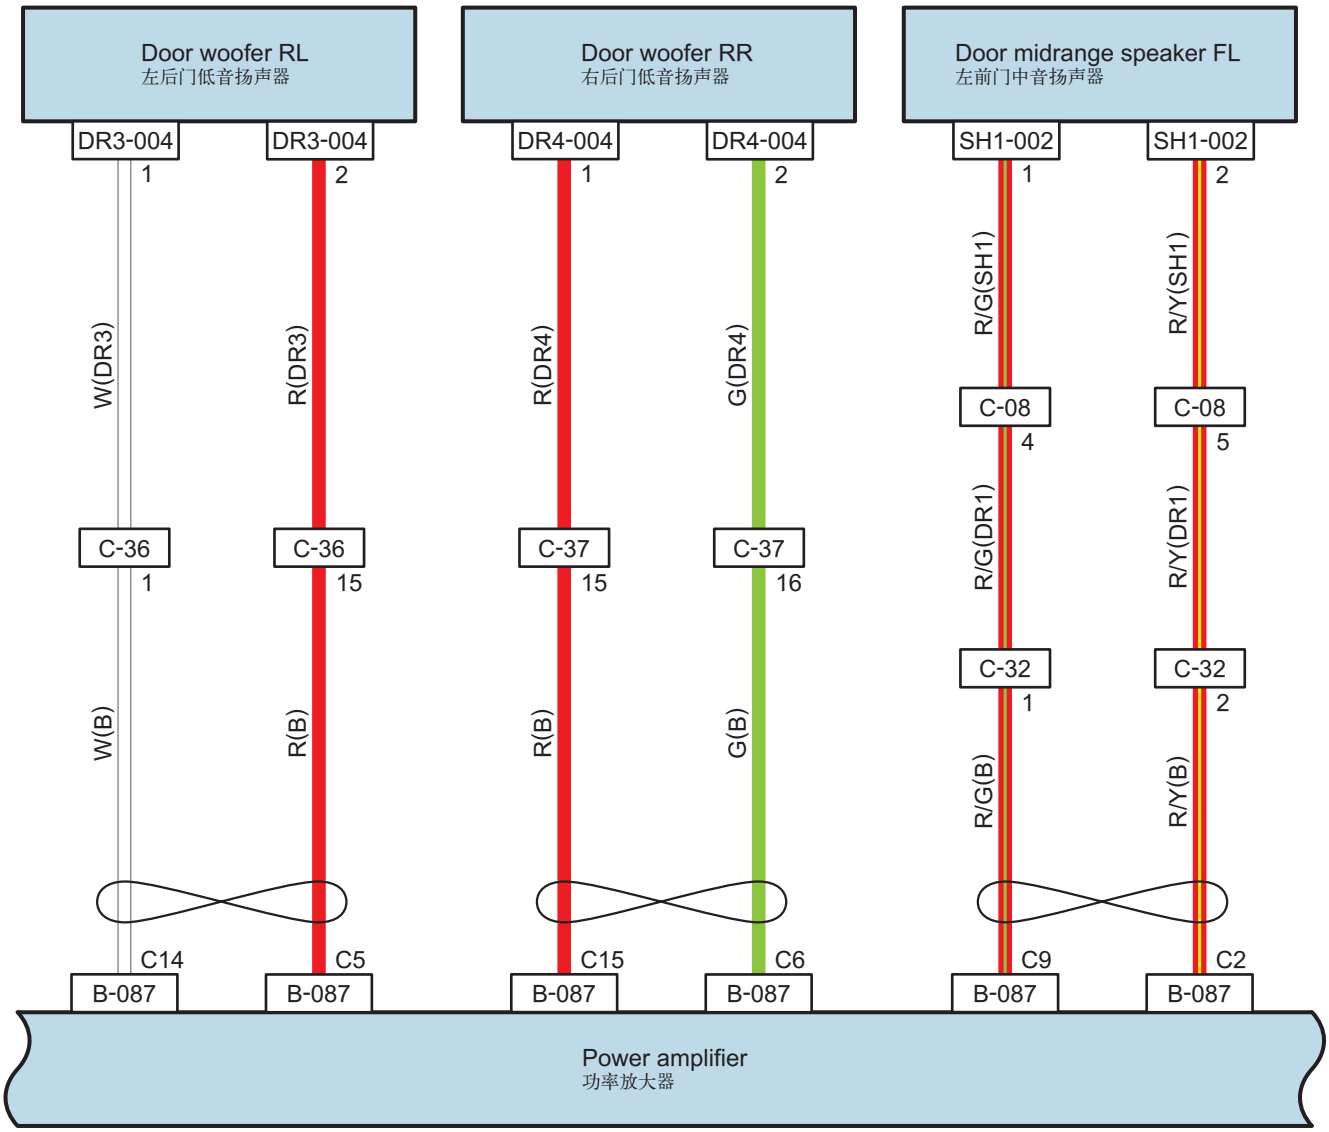

Rear battery distribution box
后蓄电池配电盒
AF01 200A
PN01
Rear transfer distribution box
后中转配电盒
F06 30A
PN02
F1
Information_CAN
信息_CAN
R
R/B(B)
B+
Y(B)
O(B)
R/B(B)
R/B(B)
R/B(B)
R/B(B)
A12
A13
A25
A26
A9
A8
B-085
B-085
B-085
B-085
B-085
B-085
Power amplifier
功率放大器
B-085
B-085
B-085
B-085
A2
A3
A15
A16
B(B)
B(B)
B(B)
B(B)
B(B)
B(B)
84a
84b

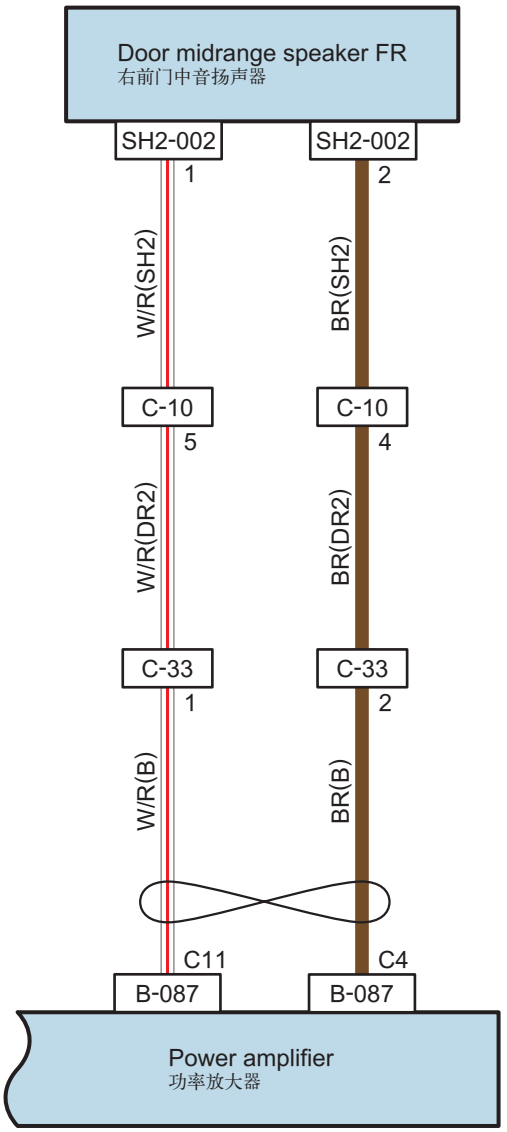

Surround midrange speaker RH
右环绕中音扬声器
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
Surround midrange speaker LH
左环绕中音扬声器
B-080
1
B-080
2
I-005
E1
I-005
E2
B-043
1
B-043
2
W(B)
R(B)
W(I)
G(I)
R/GR(B)
W/L(B)
C-25
3
C-25
2
W(B)
G(B)
A14
A1
D2
D1
B12
B6
B-085
B-085
B-088
B-088
B-086
B-086
Power amplifier
功率放大器

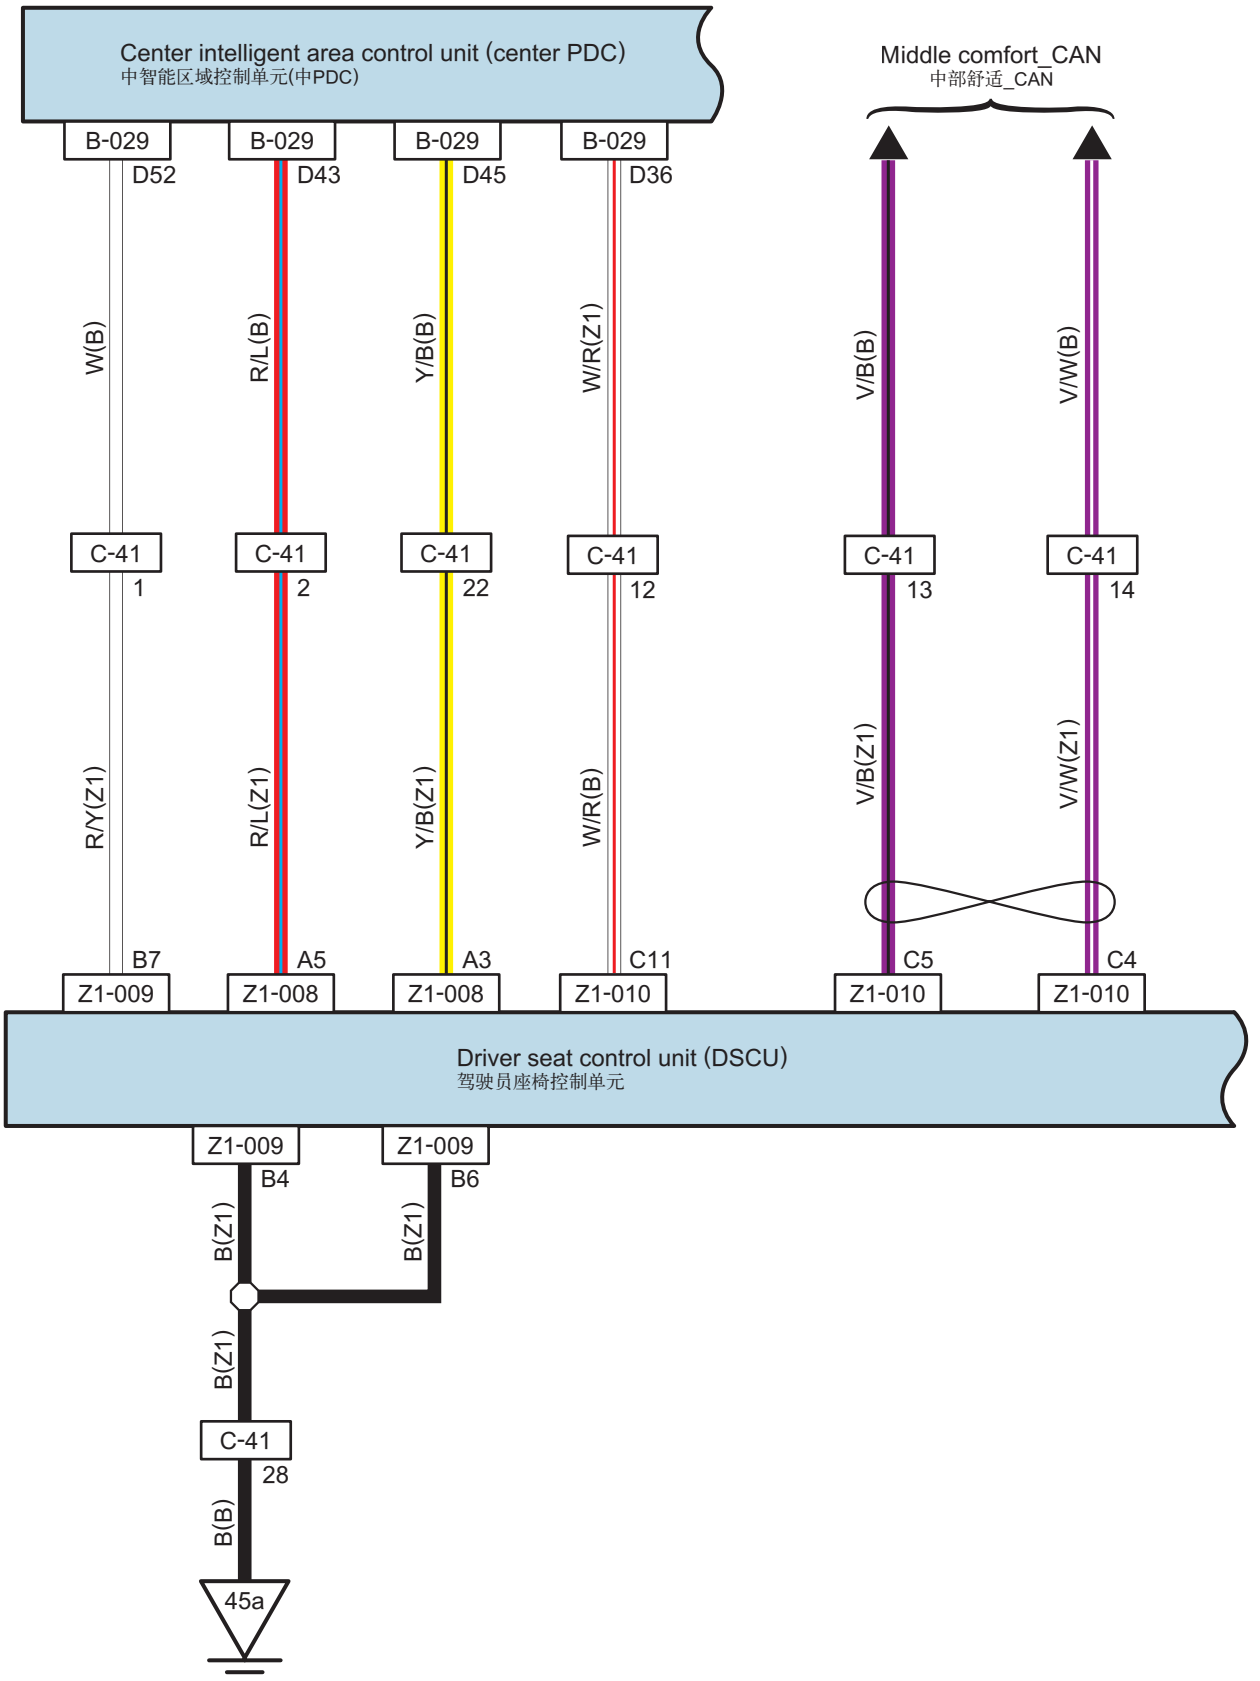

Pedestrian alarm speaker
行人警示扬声器
IP midrange speaker
仪表中音扬声器
Subwoofer
低音箱
F-012
2
F-012
1
I-020
1
I-020
2
B-105
1
B-105
3
P/Y(F)
GR(F)
G/R(I)
G(I)
L/R(B)
R/W(B)
C-09
9
C-09
8
C-19
6
C-19
18
P/Y(B)
GR(B)
G/R(B)
G(B)
B11
B5
C8
C1
C10
C3
B-086
B-086
B-087
B-087
B-087
B-087
Power amplifier
功率放大器

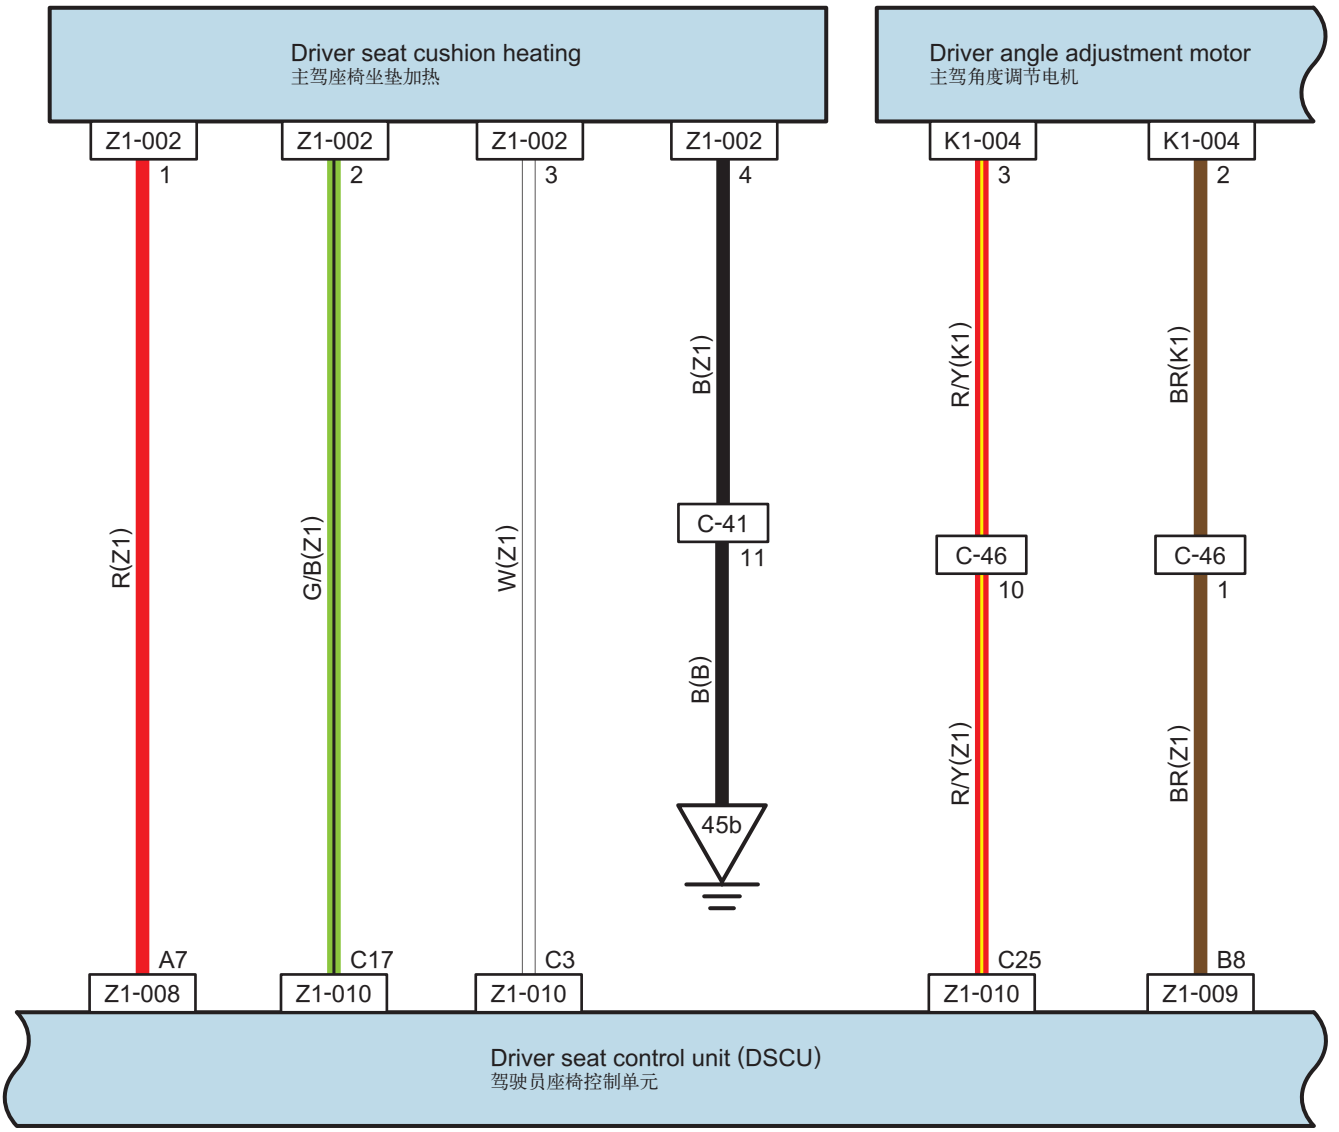

Tweeter FL
左前高音扬声器
B-128
2
B-128
1
G(B)
V(B)
B7
B1
B-086
B-086
Tweeter FR
右前高音扬声器
B-130
2
B-130
1
W/G(B)
B/Y(B)
B10
B4
B-086
B-086
Door tweeter RL
左后门高音扬声器
SH3-003
2
SH3-003
1
R/G(SH3)
L(SH3)
C-52
4
C-52
5
R/G(DR3)
L(DR3)
C-36
3
C-36
4
R/G(B)
L(B)
B8
B2
B-086
B-086
Power amplifier
功率放大器

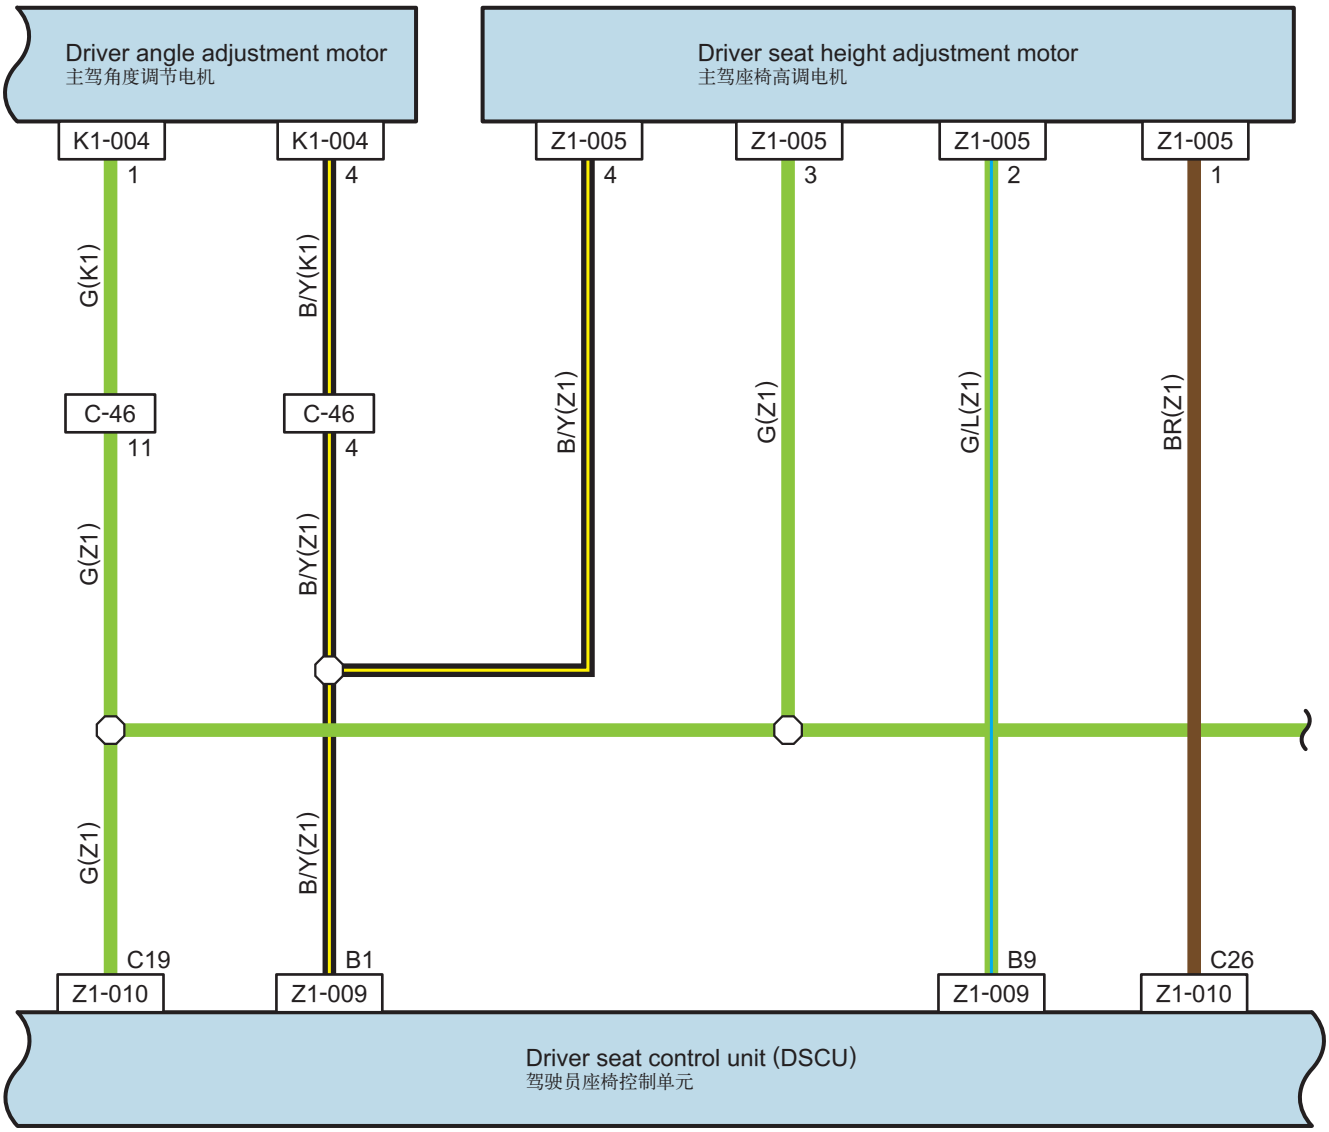

Door tweeter RR
右后门高音扬声器
SH4-002
2
SH4-002
1
R/Y(SH4)
R/W(SH4)
C-55
4
C-55
5
R/Y(DR4)
R/W(DR4)
C-37
3
C-37
4
R/Y(B)
R/W(B)
B9
B3
B-086
B-086
Door woofer FL
左前门低音扬声器
DR1-009
1
DR1-009
2
R/W(DR1)
L/R(DR1)
C-32
53
C-32
54
R/W(B)
L/R(B)
C12
C13
B-087
B-087
Door woofer FR
右前门低音扬声器
DR2-009
1
DR2-009
2
B/Y(DR2)
L/R(DR2)
C-33
52
C-33
53
B/Y(B)
L/R(B)
C16
C7
B-087
B-087
Power amplifier
功率放大器

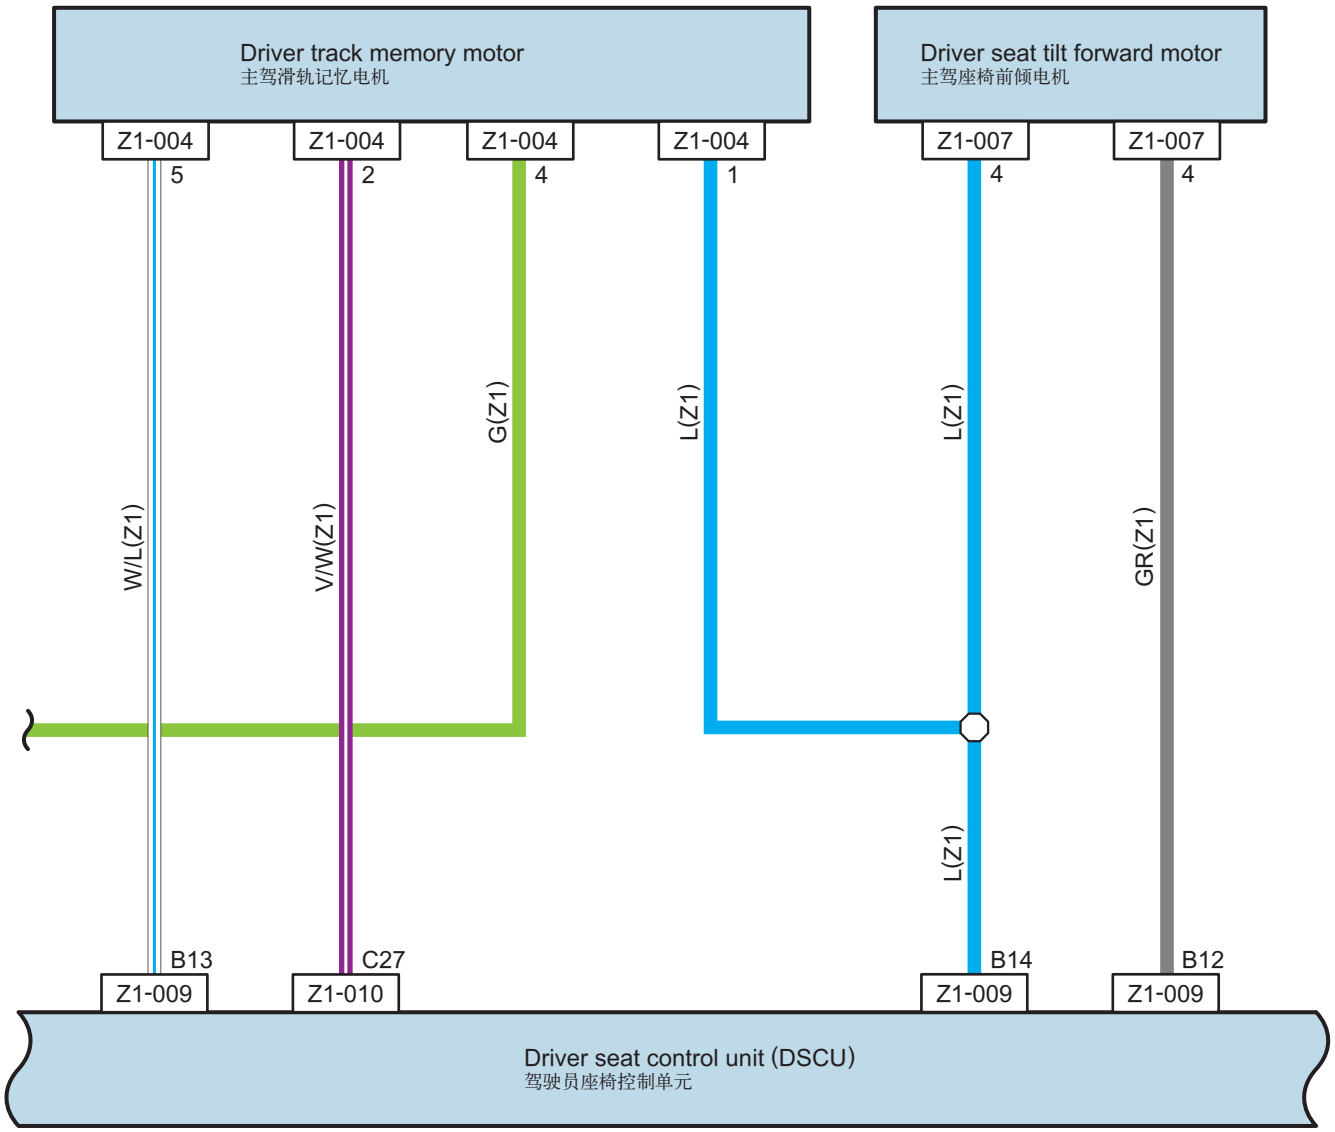

Door woofer RL
左后门低音扬声器
Door woofer RR
右后门低音扬声器
Door midrange speaker FL
左前门中音扬声器
DR3-004
1
DR3-004
2
DR4-004
1
DR4-004
2
SH1-002
1
SH1-002
2
W(DR3)
R(DR3)
R(DR4)
G(DR4)
R/G(SH1)
R/Y(SH1)
C-08
4
C-08
5
R/G(DR1)
R/Y(DR1)
C-36
1
C-36
15
C-37
15
C-37
16
C-32
1
C-32
2
W(B)
R(B)
R(B)
G(B)
R/G(B)
R/Y(B)
C14
C5
C15
C6
C9
C2
B-087
B-087
B-087
B-087
B-087
B-087
Power amplifier
功率放大器

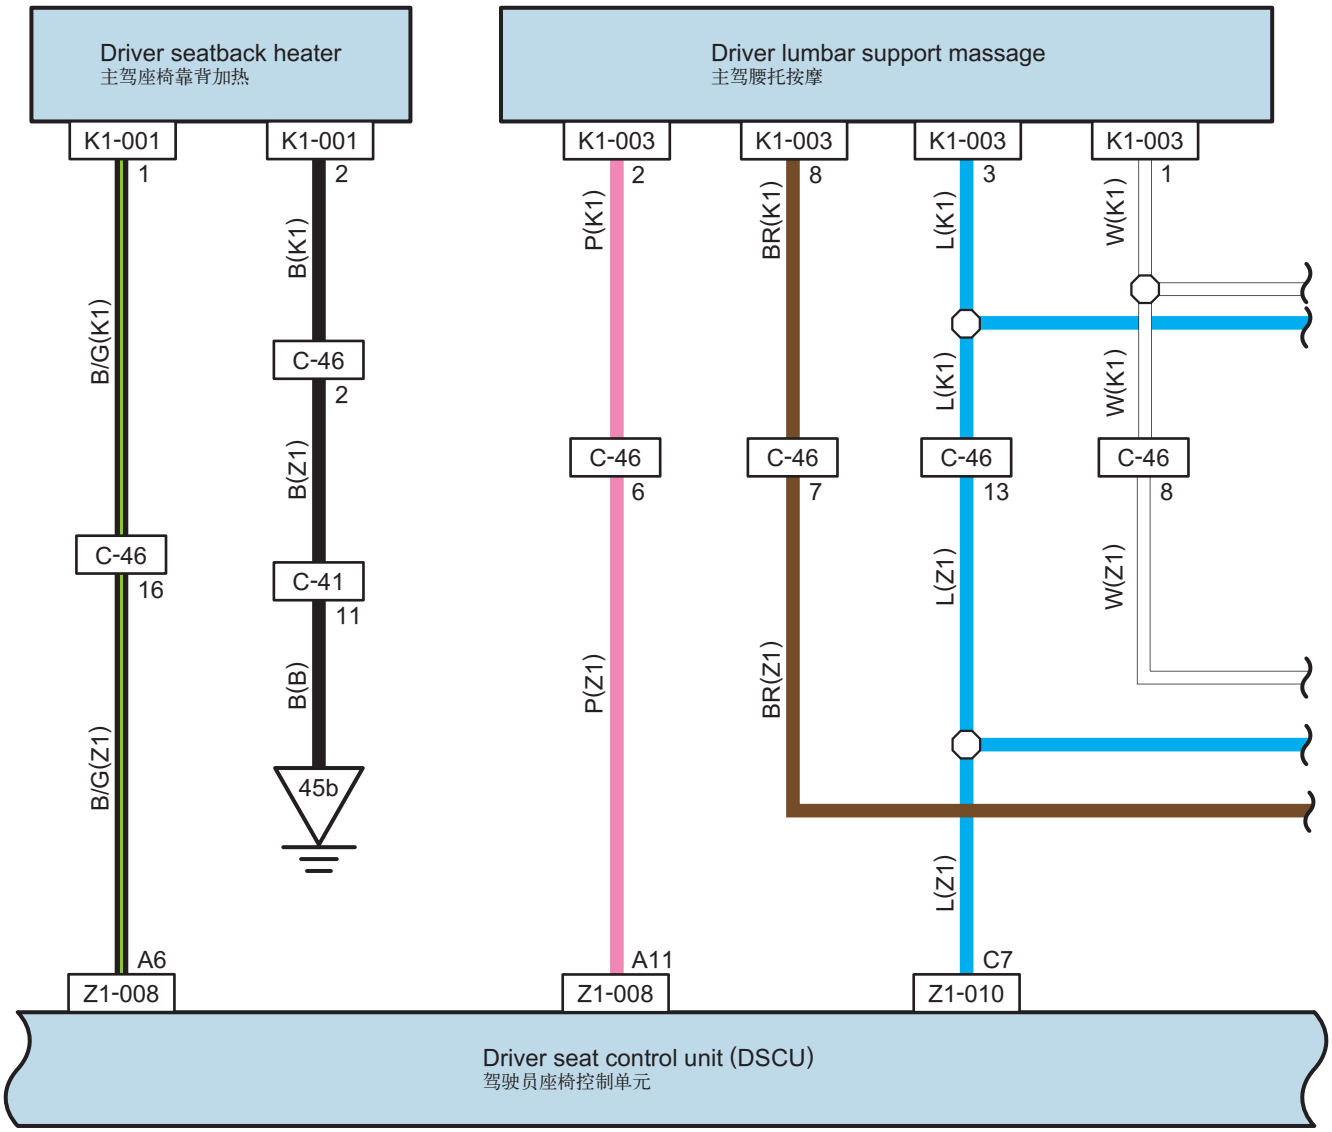

Door midrange speaker FR
右前门中音扬声器
SH2-002
1
SH2-002
2
W/R(SH2)
BR(SH2)
C-10
5
C-10
4
W/R(DR2)
BR(DR2)
C-33
1
C-33
2
W/R(B)
BR(B)
C11
C4
B-087
B-087
Power amplifier
功率放大器

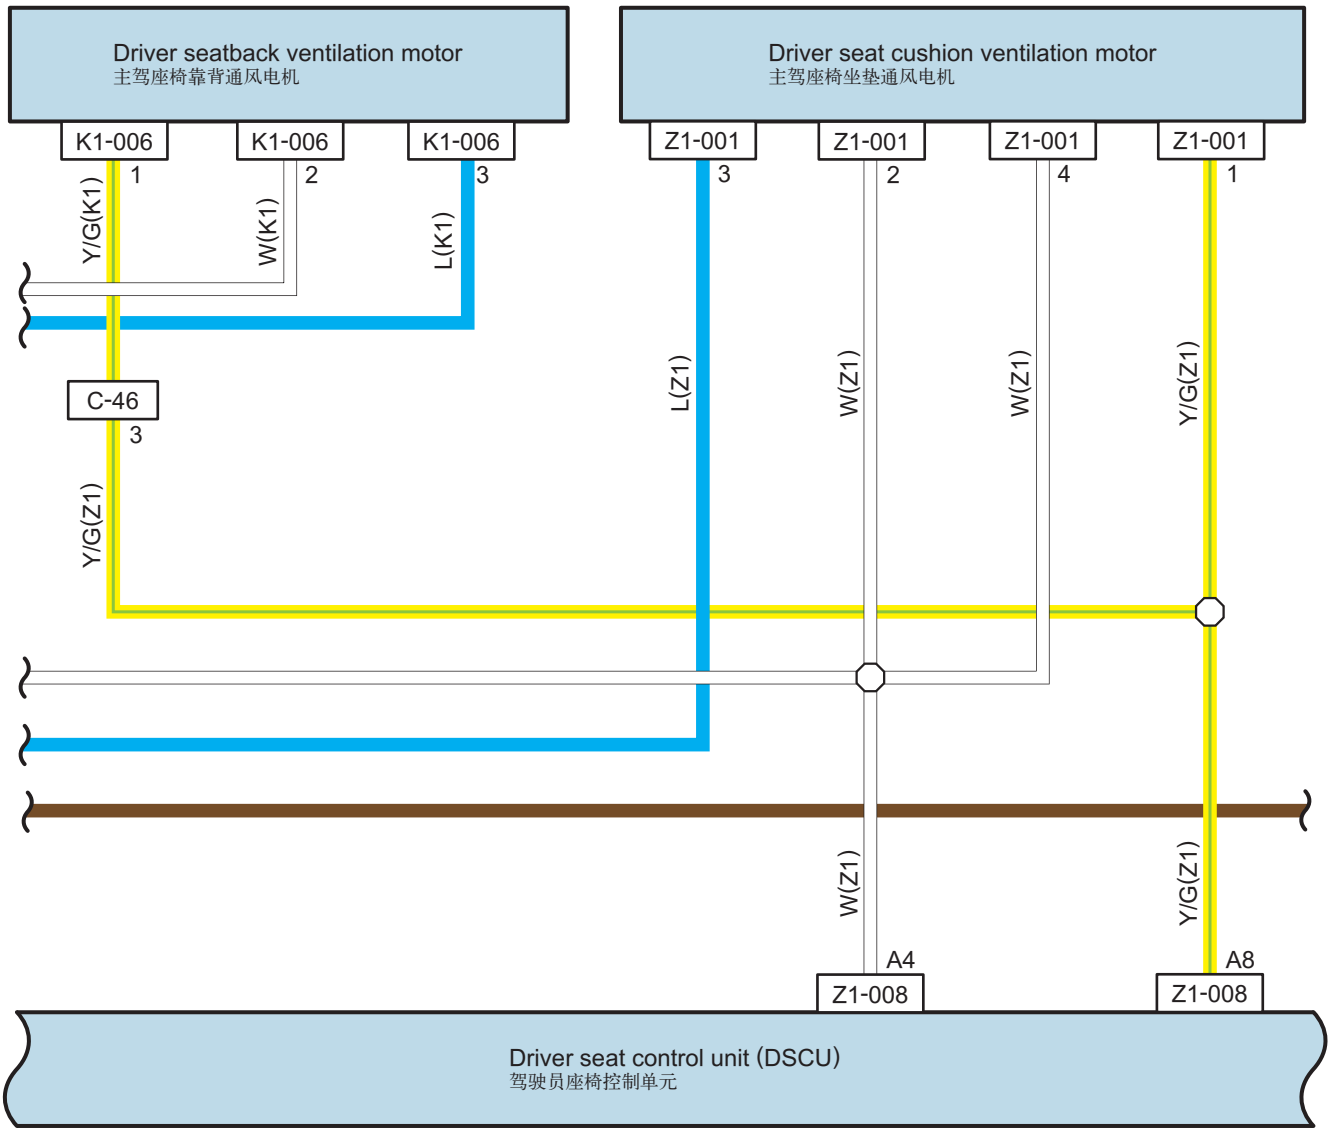

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-029
D52
B-029
D43
B-029
D45
B-029
D36
Middle comfort_CAN
中部舒适_CAN
W(B)
R/L(B)
Y/B(B)
W/R(Z1)
V/B(B)
V/W(B)
C-41
1
C-41
2
C-41
22
C-41
12
C-41
13
C-41
14
R/Y(Z1)
R/L(Z1)
Y/B(Z1)
W/R(B)
V/B(Z1)
V/W(Z1)
B7
A5
A3
C11
C5
C4
Z1-009
Z1-008
Z1-008
Z1-010
Z1-010
Z1-010
Driver seat control unit (DSCU)
驾驶员座椅控制单元
Z1-009
B4
Z1-009
B6
B(Z1)
B(Z1)
B(Z1)
C-41
28
B(B)
45a

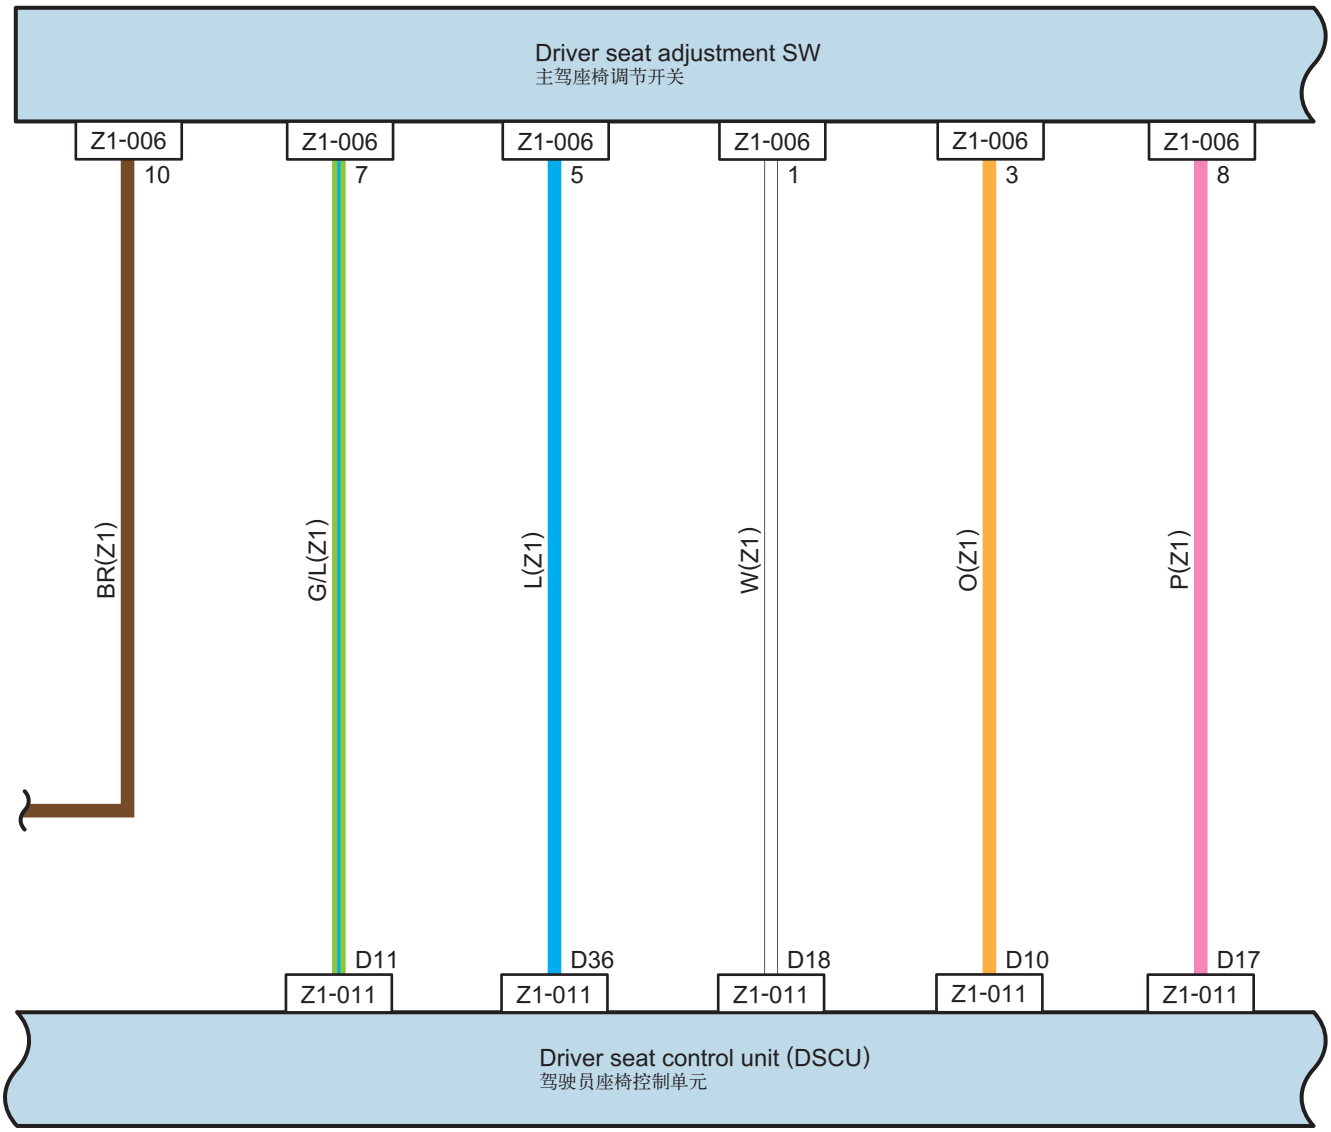

Driver seat cushion heating
主驾座椅坐垫加热
Driver angle adjustment motor
主驾角度调节电机
Z1-002
1
Z1-002
2
Z1-002
3
Z1-002
4
K1-004
3
K1-004
2
R(Z1)
G/B(Z1)
W(Z1)
B(Z1)
R/Y(K1)
BR(K1)
C-41
11
C-46
10
C-46
1
B(B)
R/Y(Z1)
BR(Z1)
45b
A7
C17
C3
C25
B8
Z1-008
Z1-010
Z1-010
Z1-010
Z1-009
Driver seat control unit (DSCU)
驾驶员座椅控制单元

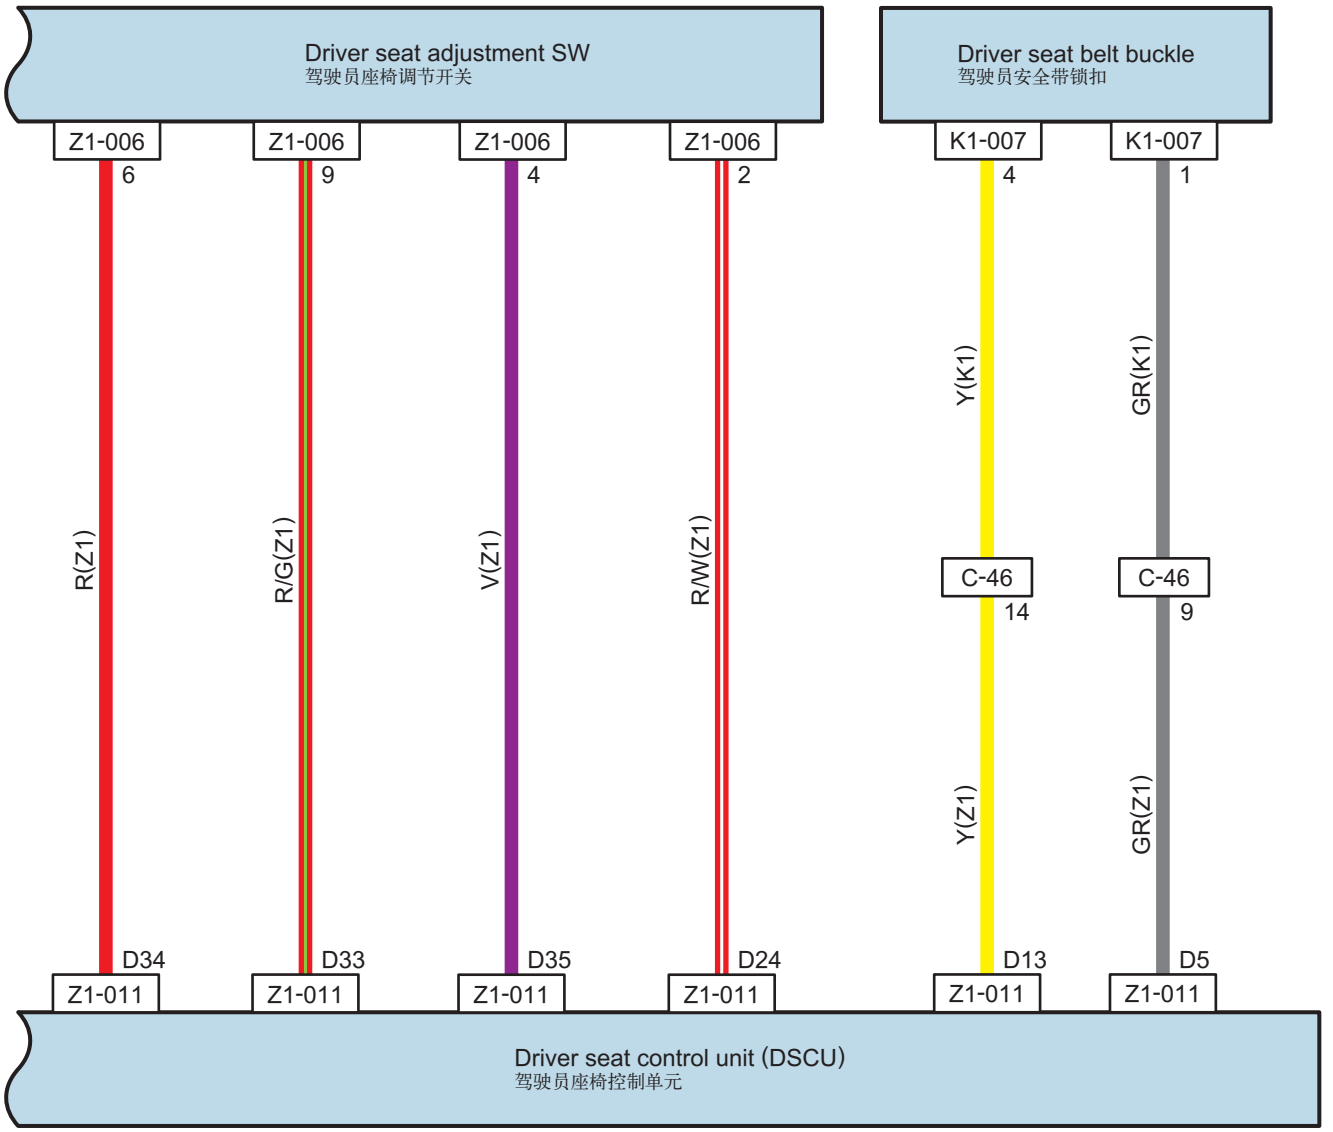

Driver angle adjustment motor
主驾角度调节电机
Driver seat height adjustment motor
主驾座椅高调电机
K1-004
1
K1-004
4
Z1-005
4
Z1-005
3
Z1-005
2
Z1-005
1
G(K1)
B/Y(K1)
B/Y(Z1)
G(Z1)
G/L(Z1)
BR(Z1)
C-46
11
C-46
4
G(Z1)
B/Y(Z1)
G(Z1)
B/Y(Z1)
C19
B1
B9
C26
Z1-010
Z1-009
Z1-009
Z1-010
Driver seat control unit (DSCU)
驾驶员座椅控制单元

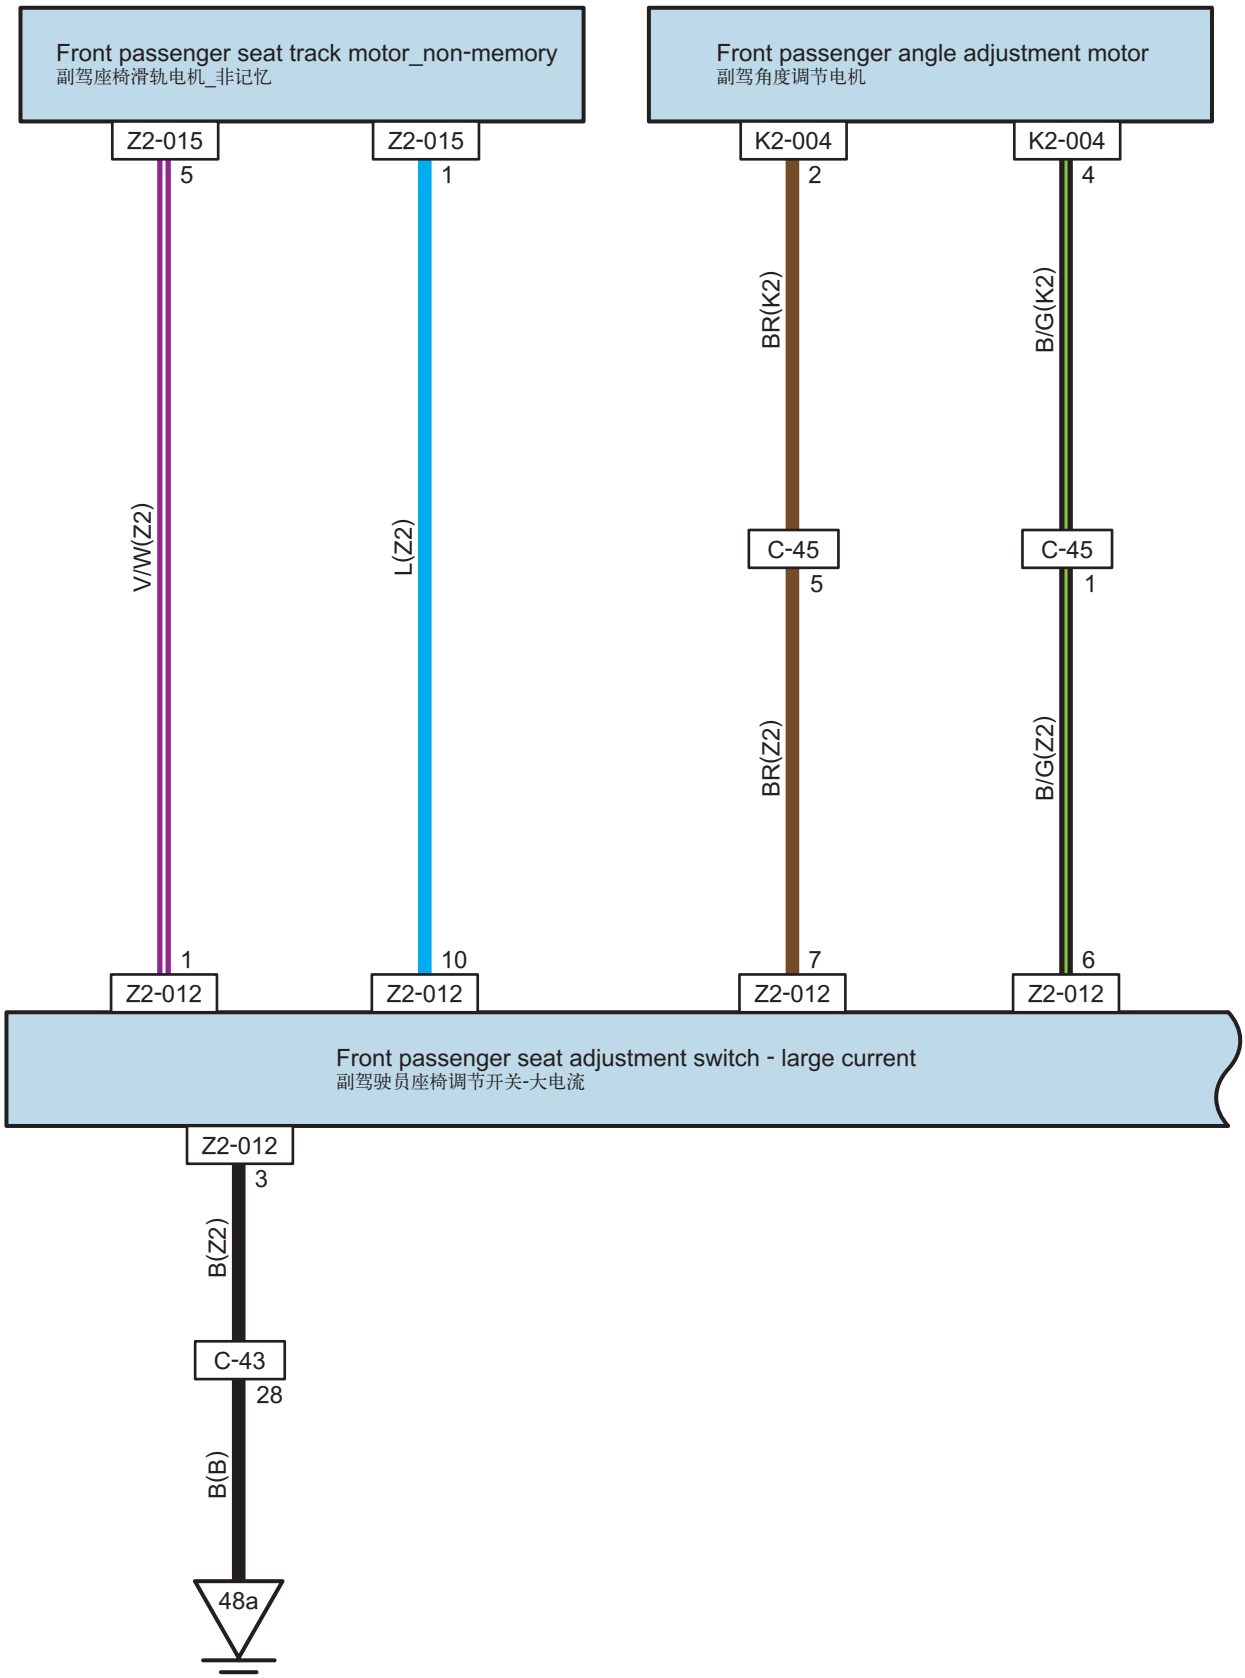

Driver track memory motor
主驾滑轨记忆电机
Driver seat tilt forward motor
主驾座椅前倾电机
Z1-004
5
Z1-004
2
Z1-004
4
Z1-004
1
Z1-007
4
Z1-007
4
W/L(Z1)
V/W(Z1)
G(Z1)
L(Z1)
L(Z1)
GR(Z1)
L(Z1)
B13
C27
B14
B12
Z1-009
Z1-010
Z1-009
Z1-009
Driver seat control unit (DSCU)
驾驶员座椅控制单元

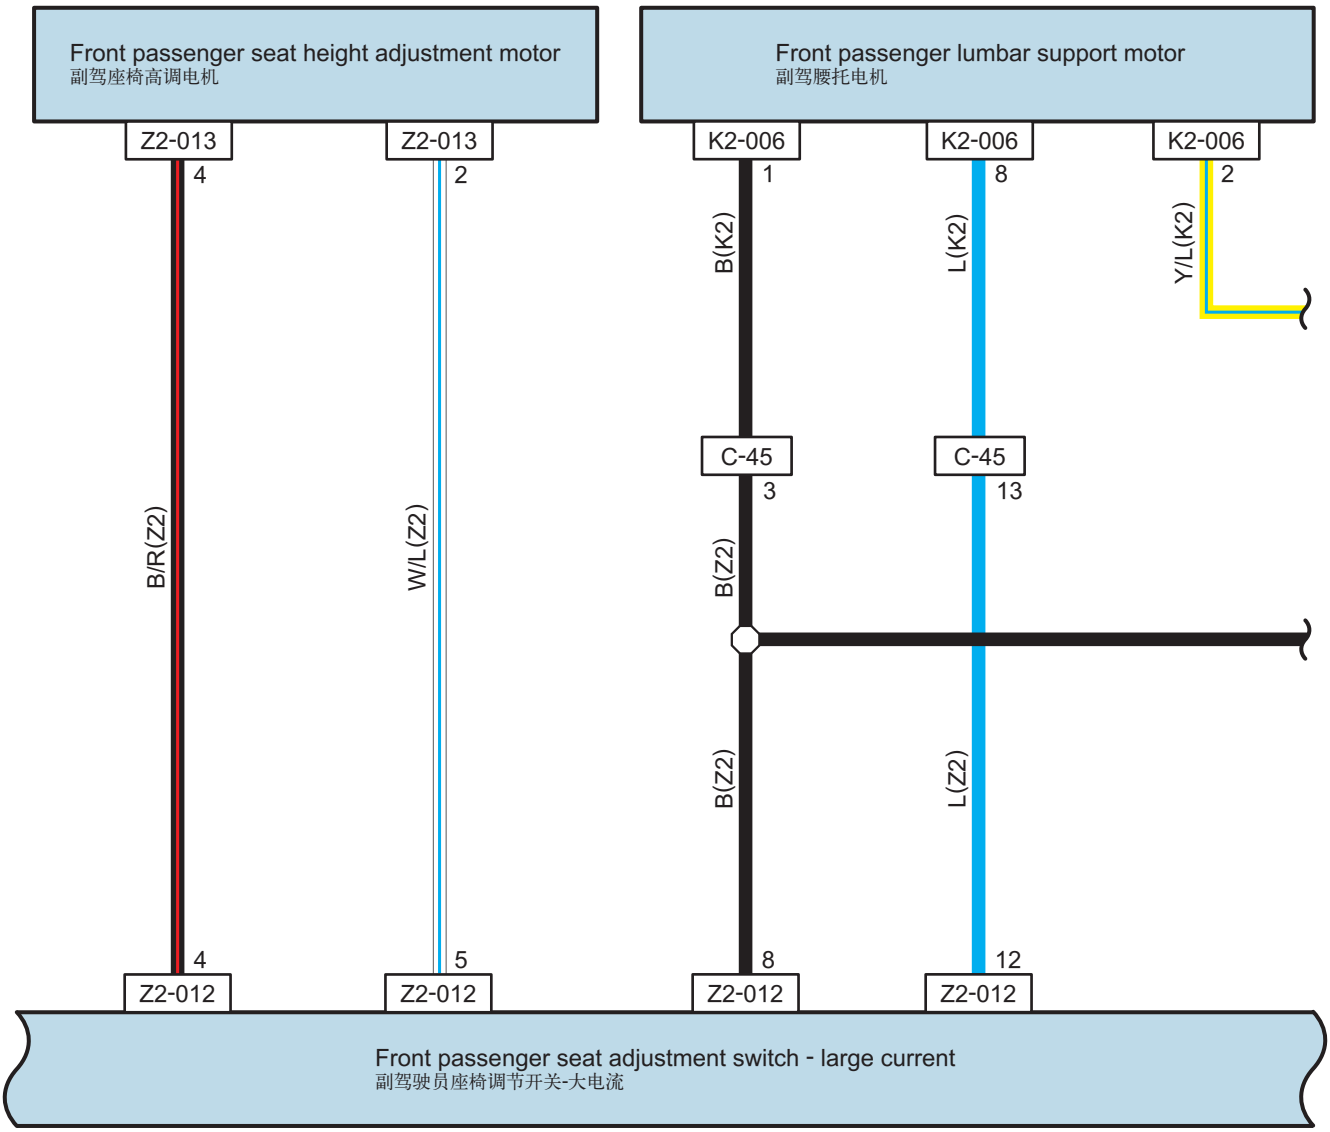

Driver seatback heater
主驾座椅靠背加热
Driver lumbar support massage
主驾腰托按摩
K1-001
1
K1-001
2
K1-003
2
K1-003
8
K1-003
3
K1-003
1
B/G(K1)
B(K1)
P(K1)
BR(K1)
L(K1)
W(K1)
L(K1)
W(K1)
C-46
2
C-46
16
C-41
11
C-46
6
C-46
7
C-46
13
C-46
8
B(Z1)
B(B)
P(Z1)
BR(Z1)
L(Z1)
W(Z1)
L(Z1)
45b
B/G(Z1)
A6
A11
C7
Z1-008
Z1-008
Z1-010
Driver seat control unit (DSCU)
驾驶员座椅控制单元

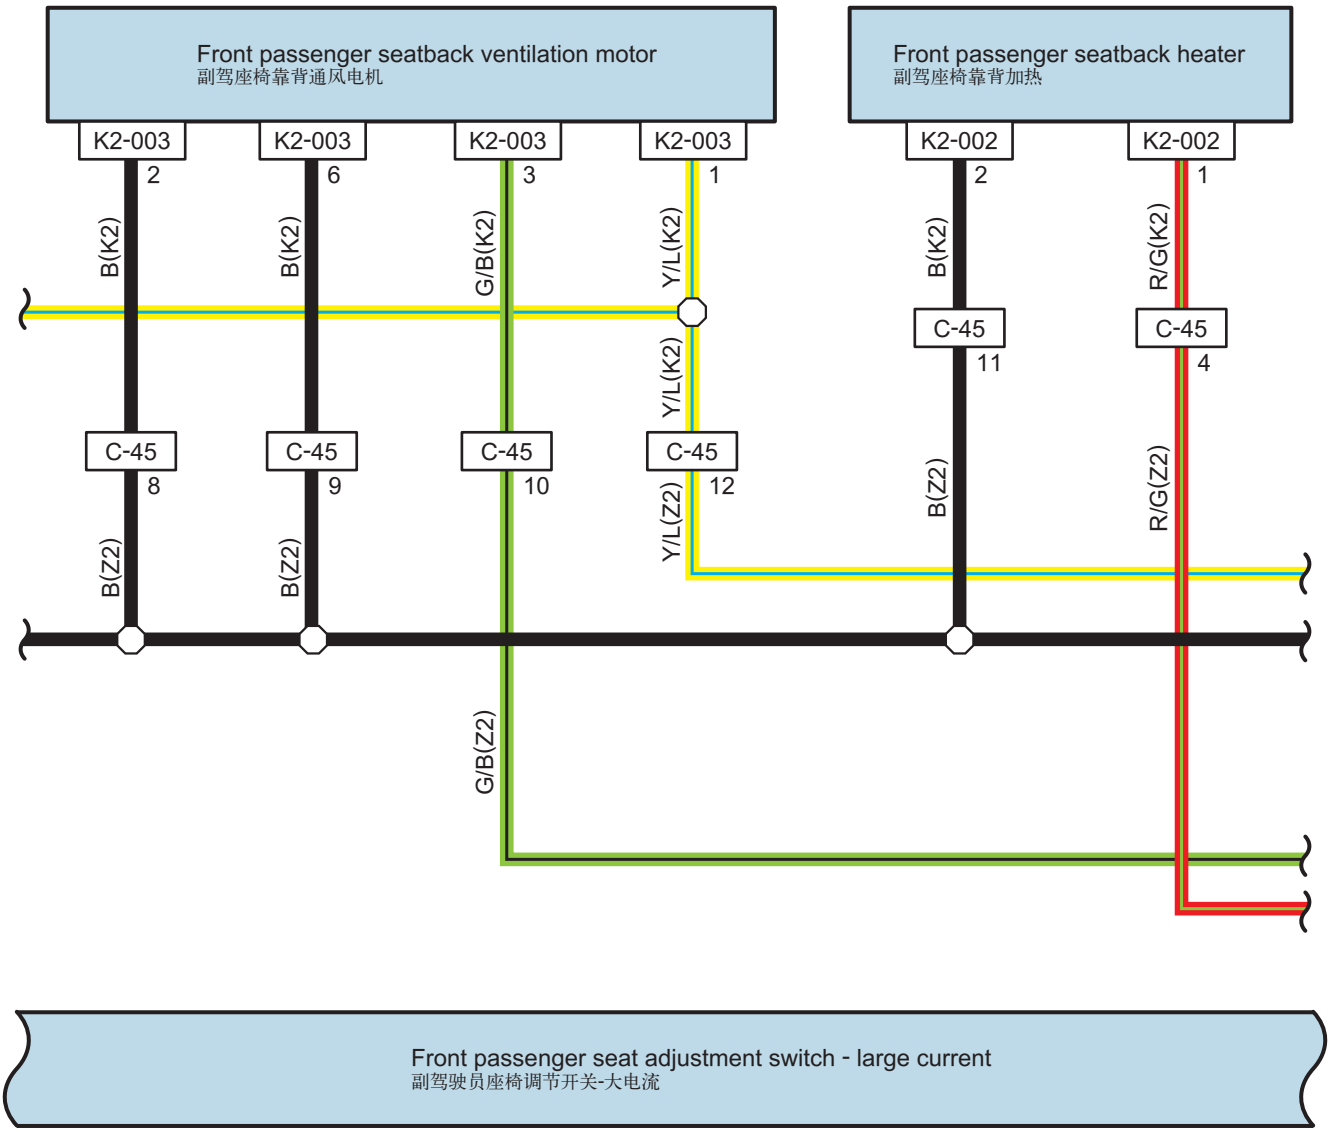

Driver seatback ventilation motor
主驾座椅靠背通风电机
Driver seat cushion ventilation motor
主驾座椅坐垫通风电机
K1-006
1
K1-006
2
K1-006
3
Z1-001
3
Z1-001
2
Z1-001
4
Z1-001
1
Y/G(K1)
W(K1)
L(K1)
L(Z1)
W(Z1)
W(Z1)
Y/G(Z1)
C-46
3
Y/G(Z1)
W(Z1)
Y/G(Z1)
A4
A8
Z1-008
Z1-008
Driver seat control unit (DSCU)
驾驶员座椅控制单元

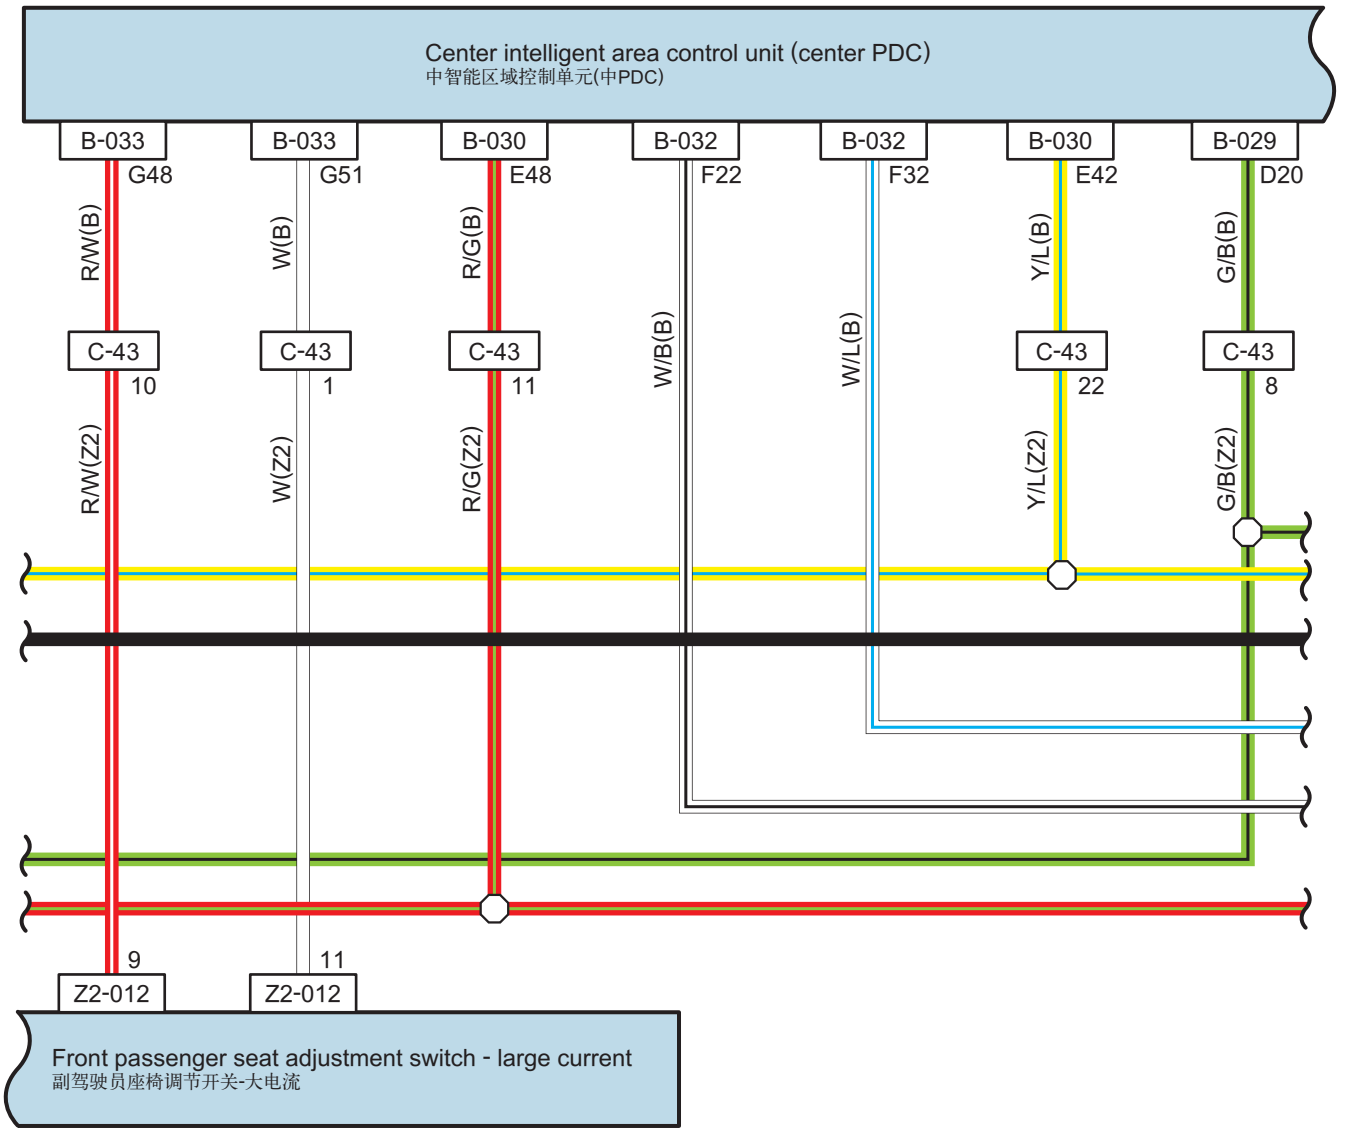

Driver seat adjustment SW
主驾座椅调节开关
Z1-006
10
Z1-006
7
Z1-006
5
Z1-006
1
Z1-006
3
Z1-006
8
BR(Z1)
G/L(Z1)
L(Z1)
W(Z1)
O(Z1)
P(Z1)
D11
D36
D18
D10
D17
Z1-011
Z1-011
Z1-011
Z1-011
Z1-011
Driver seat control unit (DSCU)
驾驶员座椅控制单元

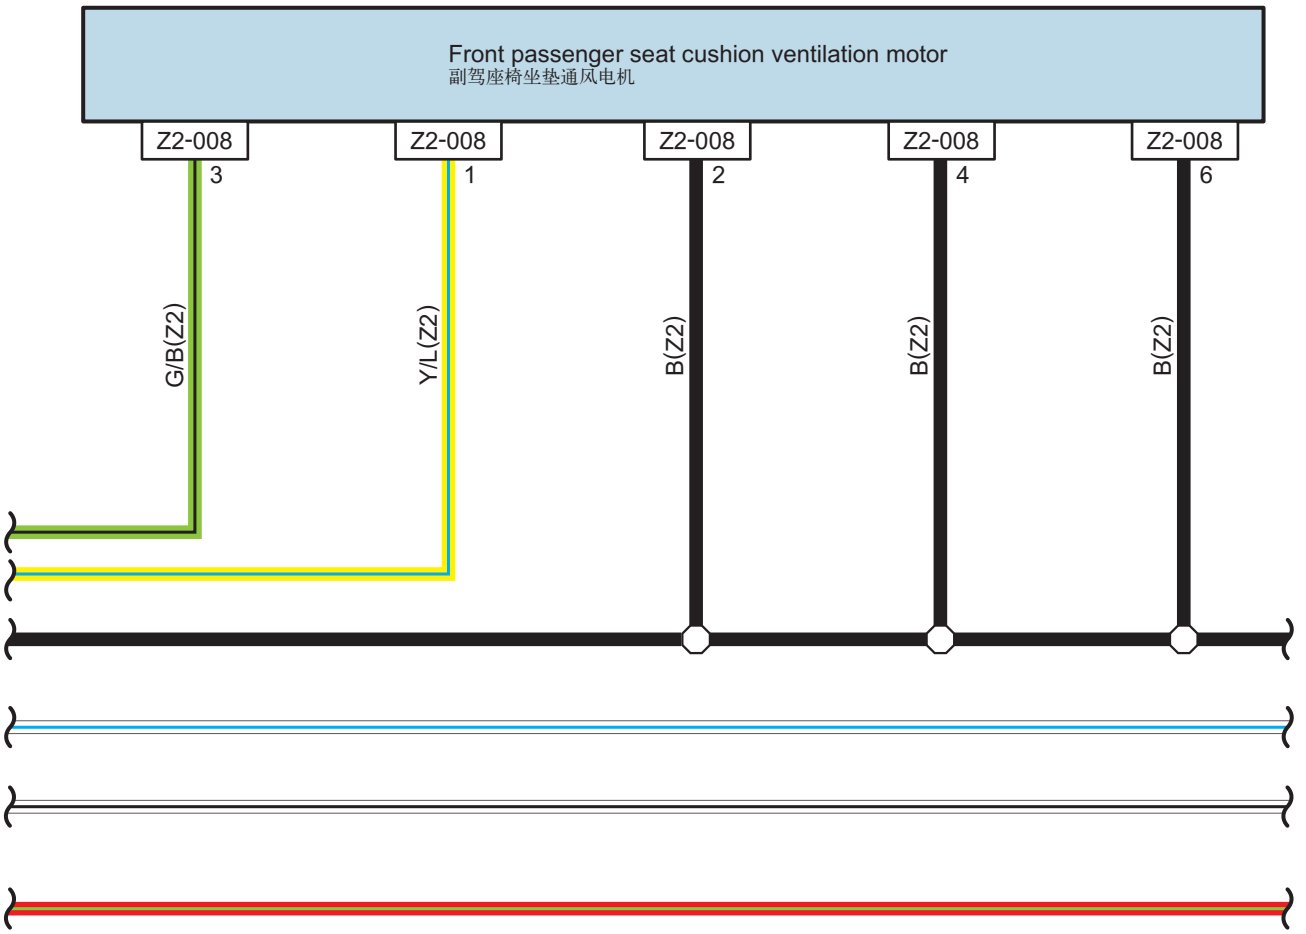

Driver seat adjustment SW
驾驶员座椅调节开关
Driver seat belt buckle
驾驶员安全带锁扣
Z1-006
6
Z1-006
9
Z1-006
4
Z1-006
2
K1-007
4
K1-007
1
R(Z1)
R/G(Z1)
V(Z1)
R/W(Z1)
Y(K1)
GR(K1)
C-46
14
C-46
9
Y(Z1)
GR(Z1)
D34
D33
D35
D24
D13
D5
Z1-011
Z1-011
Z1-011
Z1-011
Z1-011
Z1-011
Driver seat control unit (DSCU)
驾驶员座椅控制单元

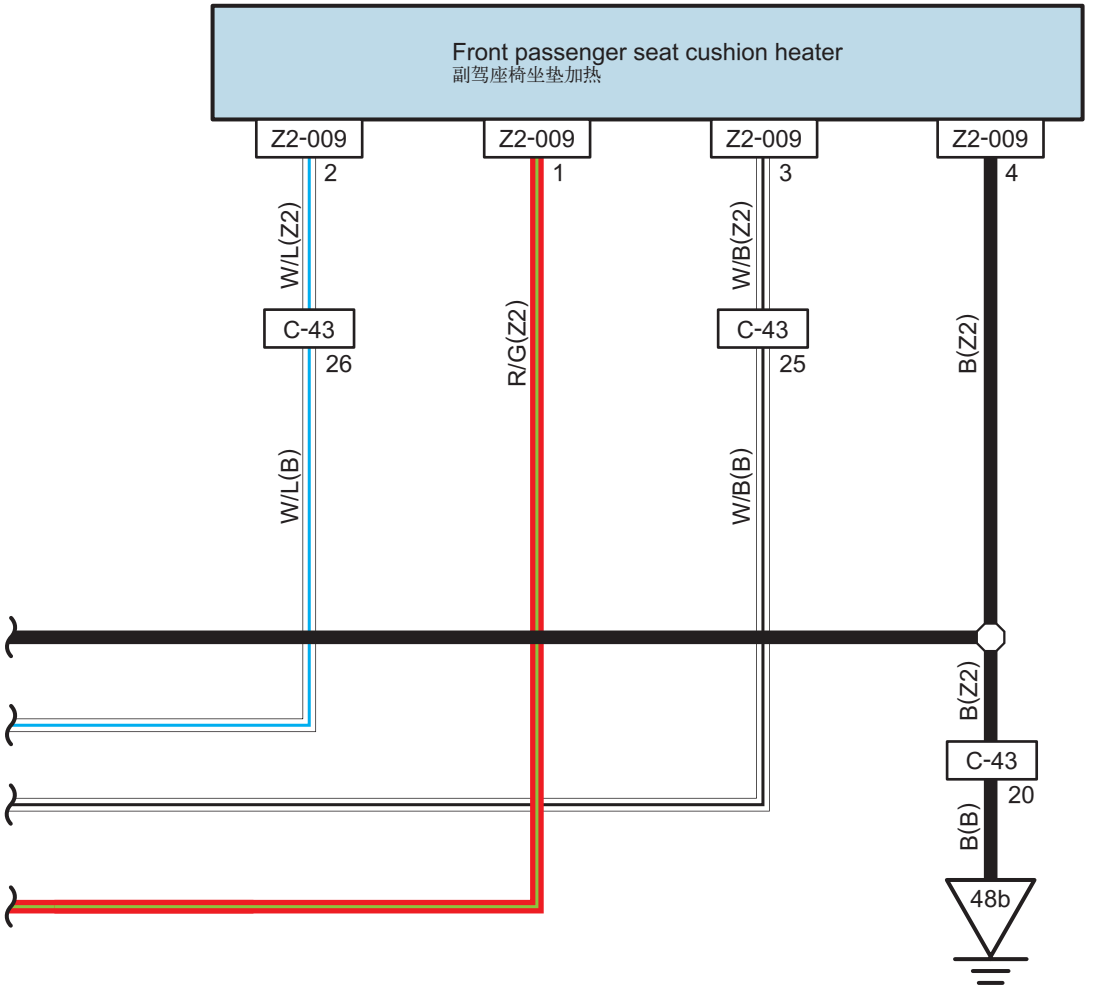

Front passenger seat track motor_non-memory
副驾座椅滑轨电机_非记忆
Z2-015
5
Z2-015
1
V/W(Z2)
L(Z2)
1
10
Z2-012
Z2-012
Front passenger angle adjustment motor
副驾角度调节电机
K2-004
2
K2-004
4
BR(K2)
B/G(K2)
C-45
5
C-45
1
BR(Z2)
B/G(Z2)
7
6
Z2-012
Z2-012
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流
Z2-012
3
B(Z2)
C-43
28
B(B)
48a

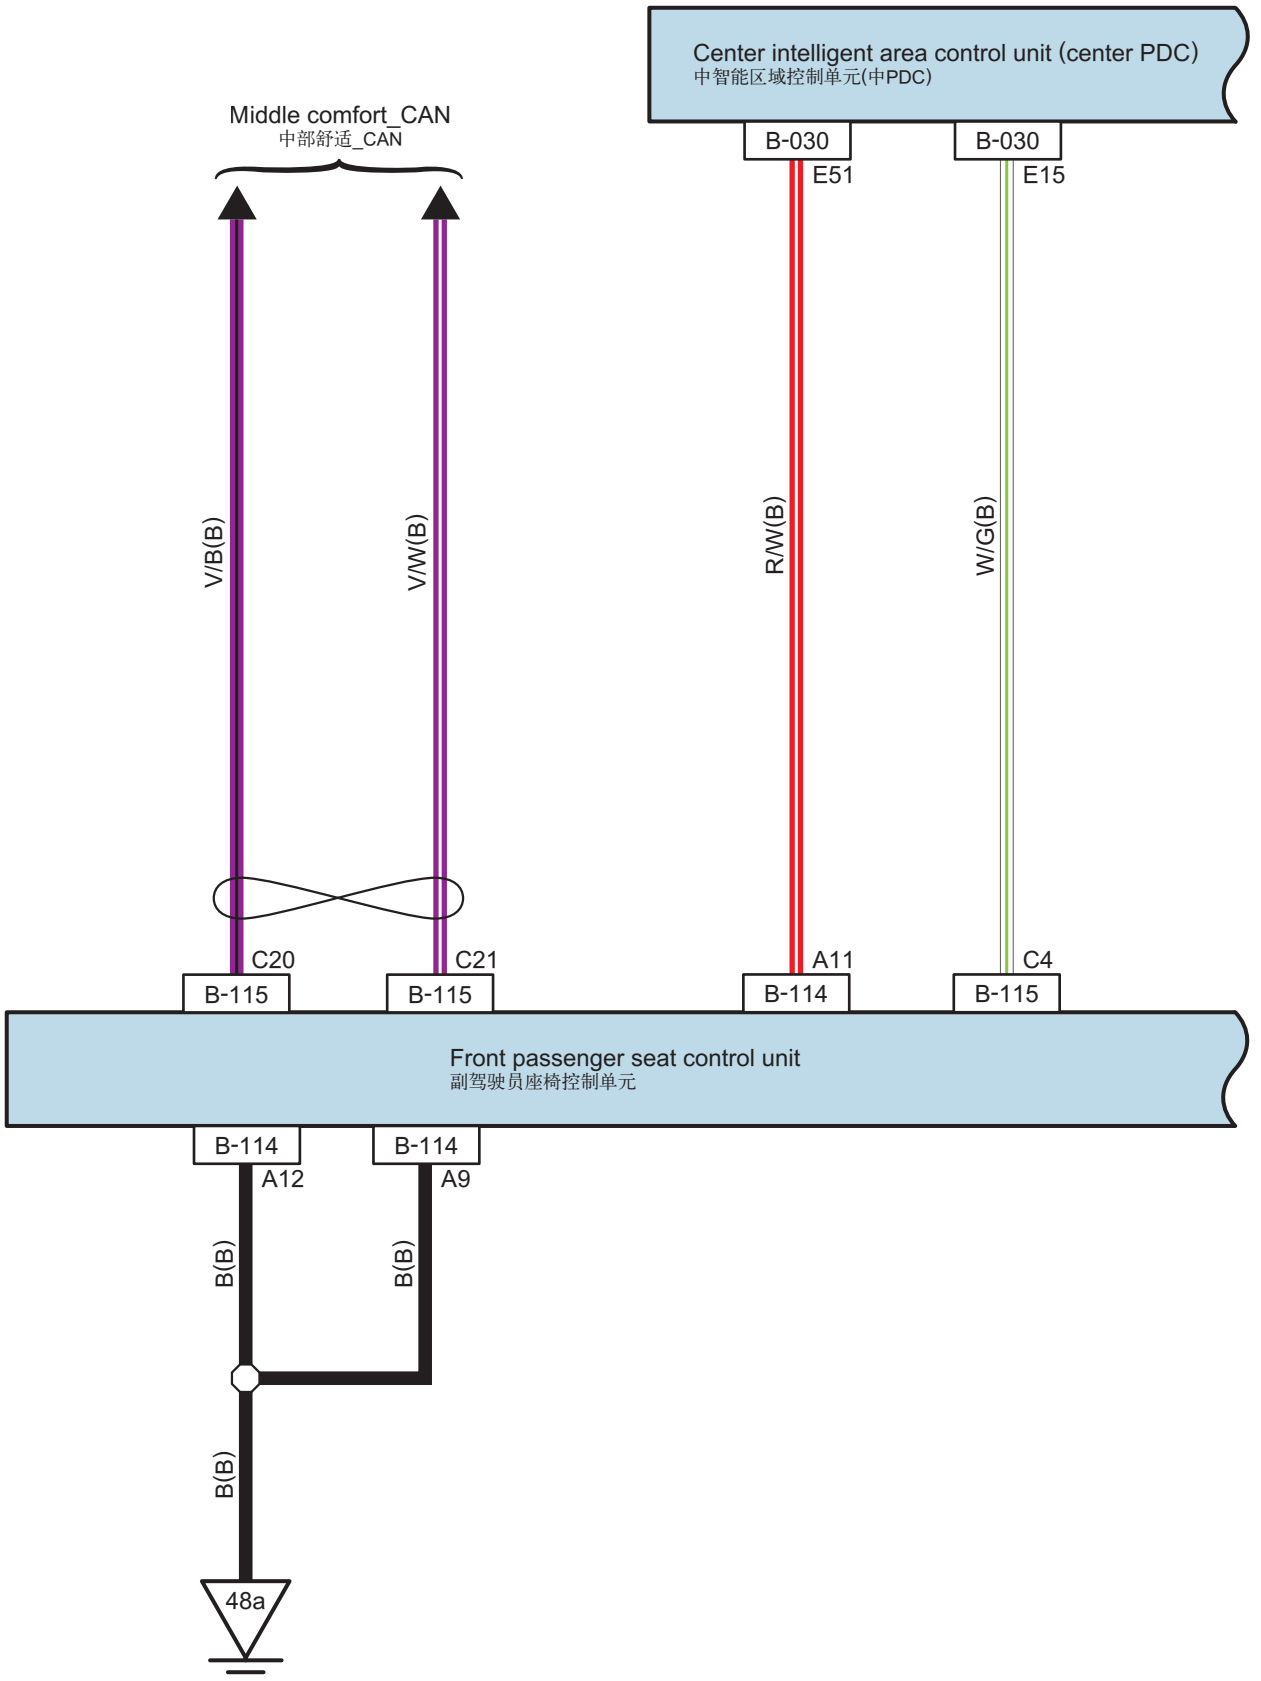

Front passenger seat height adjustment motor
副驾座椅高调电机
Front passenger lumbar support motor
副驾腰托电机
Z2-013
4
Z2-013
2
K2-006
1
K2-006
8
K2-006
2
B(K2)
L(K2)
Y/L(K2)
C-45
3
C-45
13
B/R(Z2)
W/L(Z2)
B(Z2)
B(Z2)
L(Z2)
4
Z2-012
5
Z2-012
8
Z2-012
12
Z2-012
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流

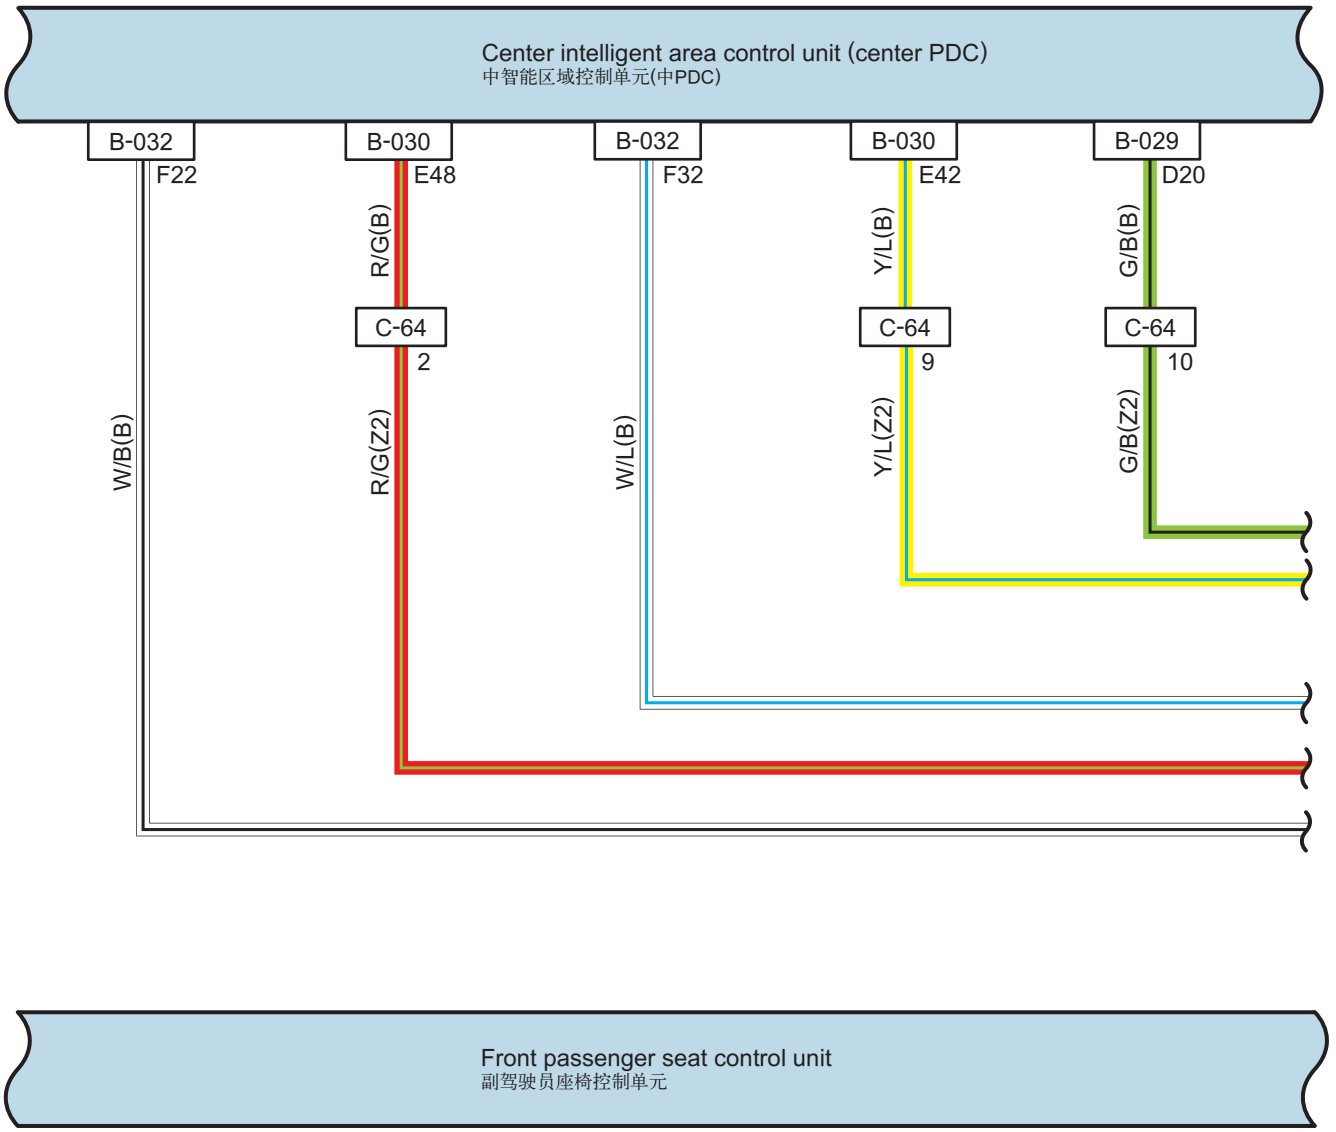

Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Front passenger seatback heater
副驾座椅靠背加热
K2-003
2
K2-003
6
K2-003
3
K2-003
1
K2-002
2
K2-002
1
B(K2)
B(K2)
G/B(K2)
Y/L(K2)
B(K2)
R/G(K2)
C-45
11
C-45
4
Y/L(K2)
C-45
8
C-45
9
C-45
10
C-45
12
B(Z2)
B(Z2)
Y/L(Z2)
B(Z2)
R/G(Z2)
G/B(Z2)
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流

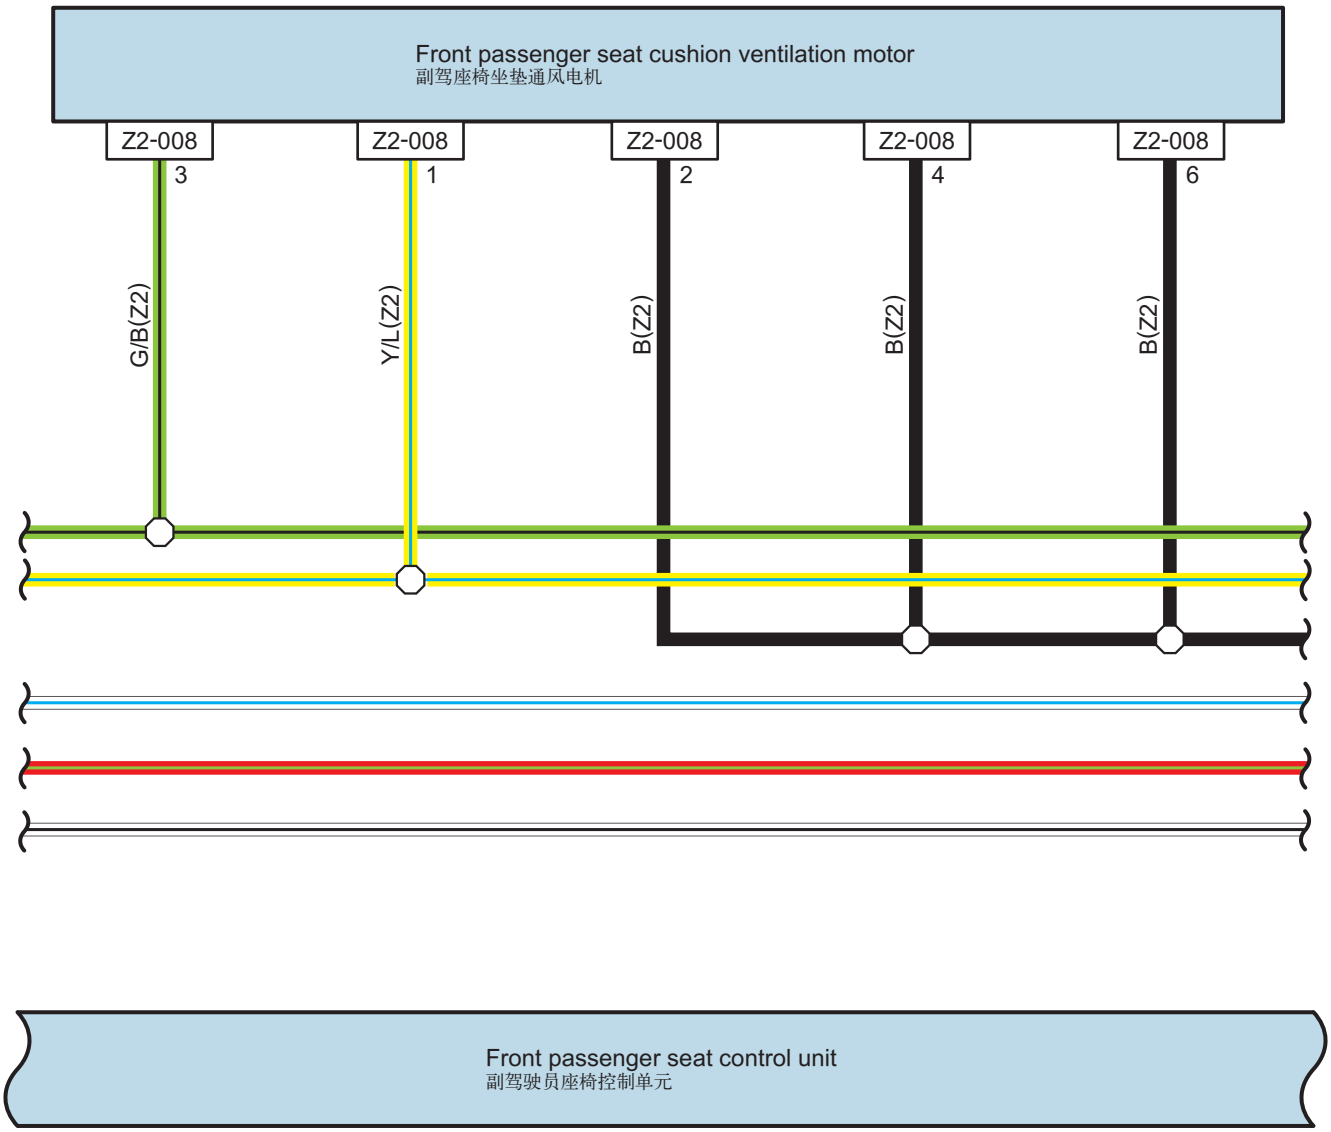

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-033
G48
B-033
G51
B-030
E48
B-032
F22
B-032
F32
B-030
E42
B-029
D20
R/W(B)
W(B)
R/G(B)
W/B(B)
W/L(B)
Y/L(B)
G/B(B)
C-43
10
C-43
1
C-43
11
C-43
22
C-43
8
R/W(Z2)
W(Z2)
R/G(Z2)
Y/L(Z2)
G/B(Z2)
9
11
Z2-012
Z2-012
Front passenger seat adjustment switch - large current
副驾驶员座椅调节开关-大电流

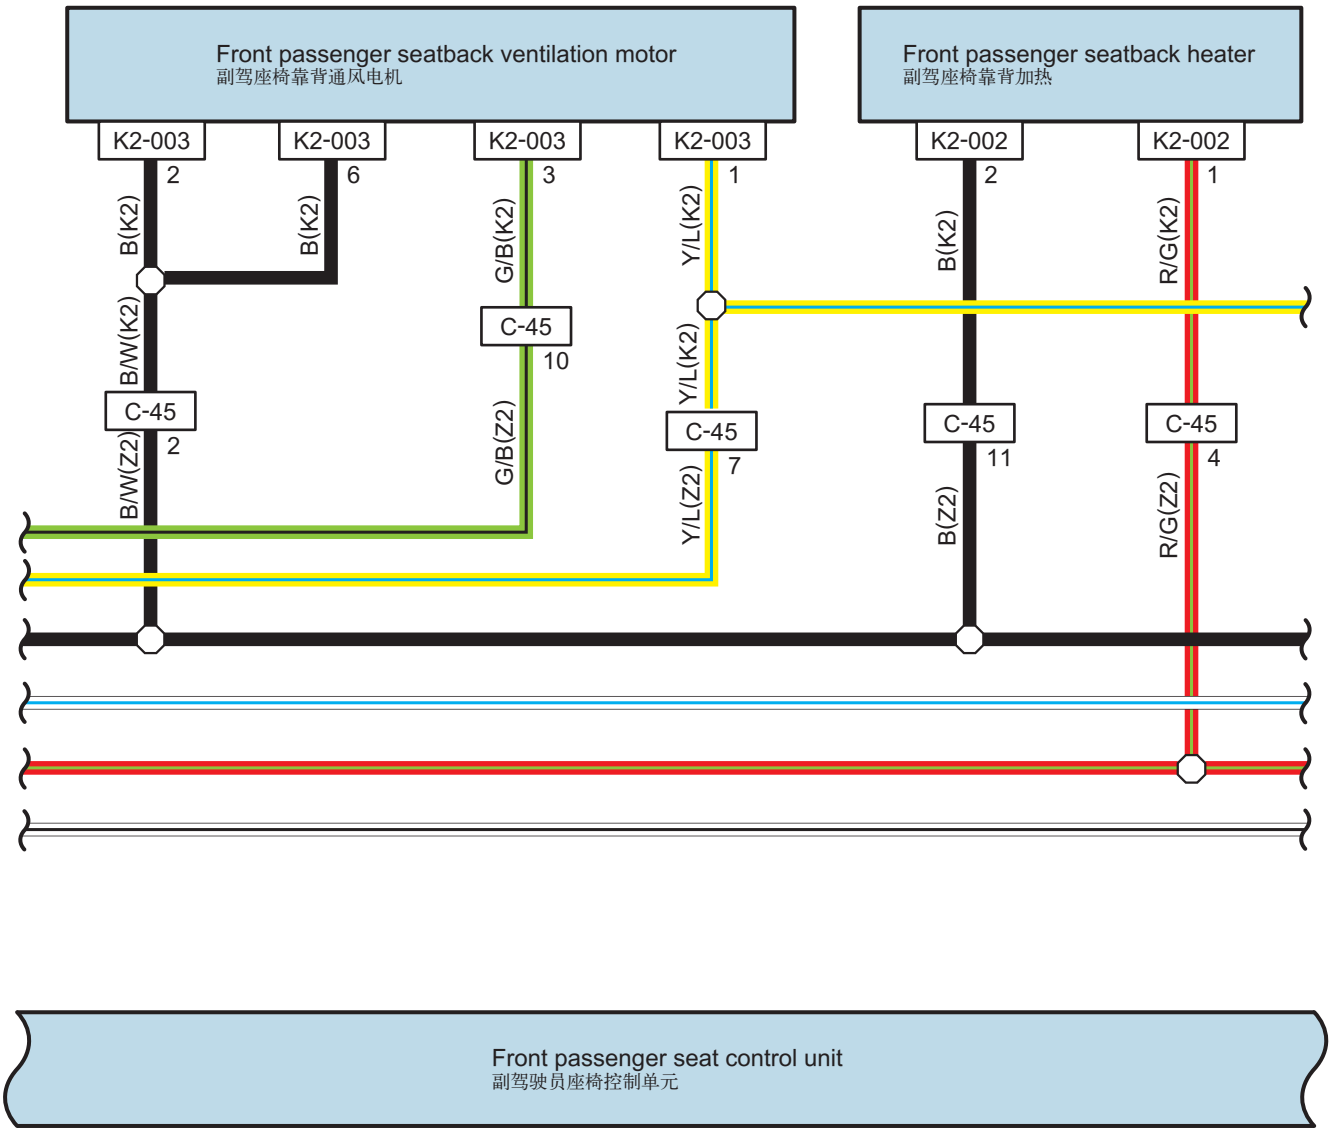

Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Z2-008
3
Z2-008
1
Z2-008
2
Z2-008
4
Z2-008
6
G/B(Z2)
Y/L(Z2)
B(Z2)
B(Z2)
B(Z2)

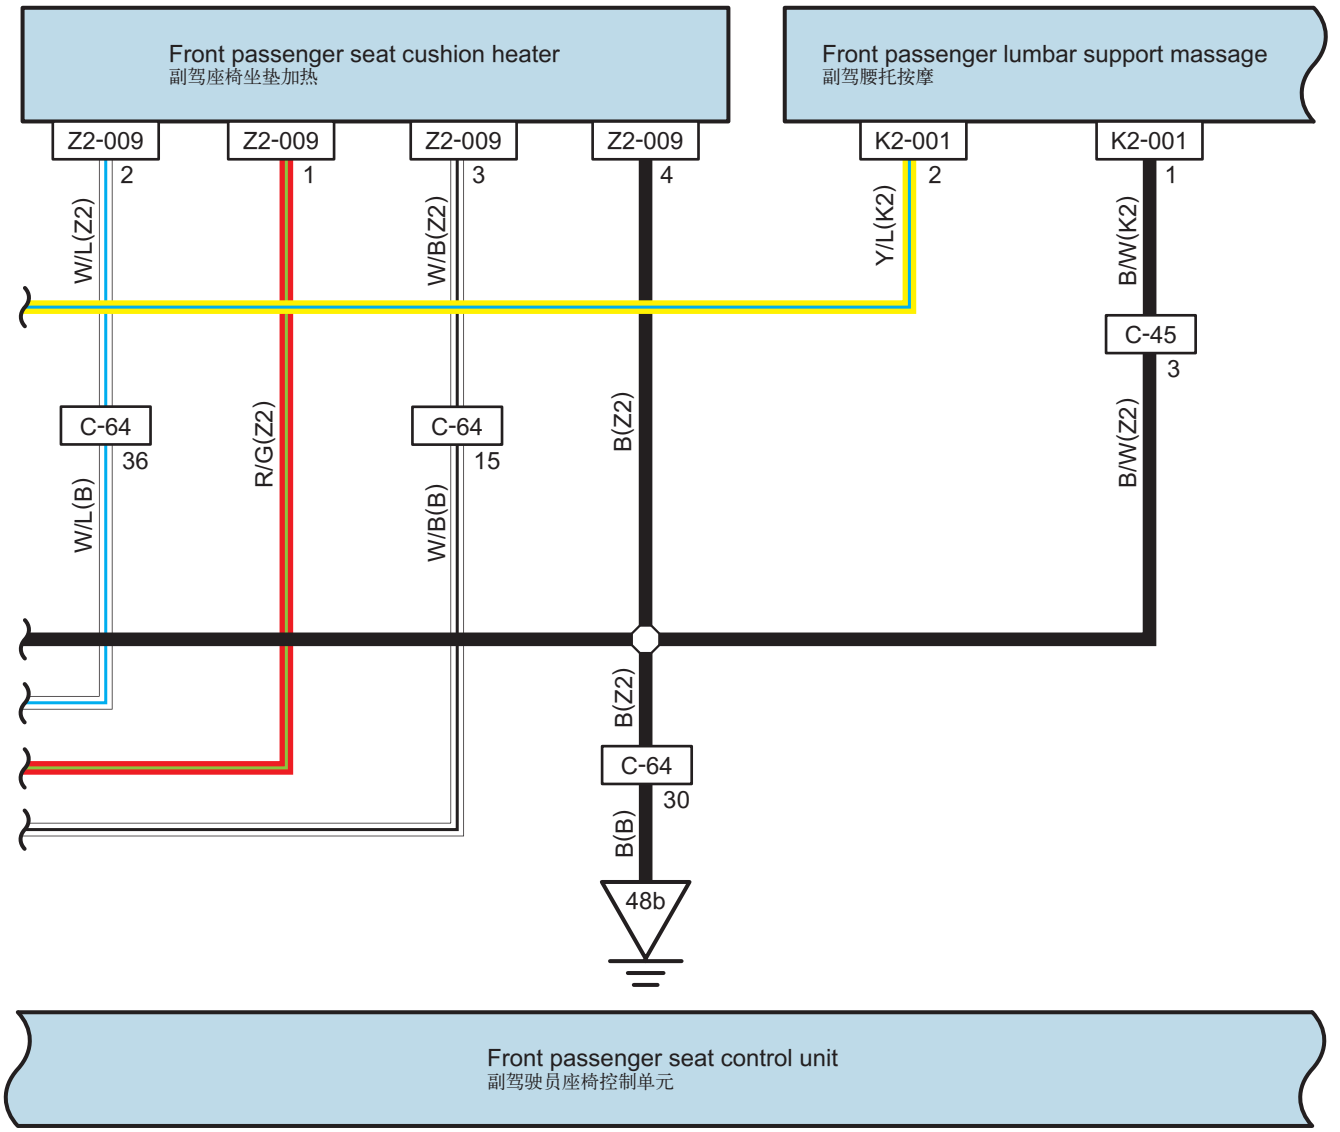

Front passenger seat cushion heater
副驾座椅坐垫加热
Z2-009
2
Z2-009
1
Z2-009
3
Z2-009
4
W/L(Z2)
R/G(Z2)
W/B(Z2)
B(Z2)
C-43
26
C-43
25
W/L(B)
W/B(B)
B(Z2)
C-43
20
B(B)
48b

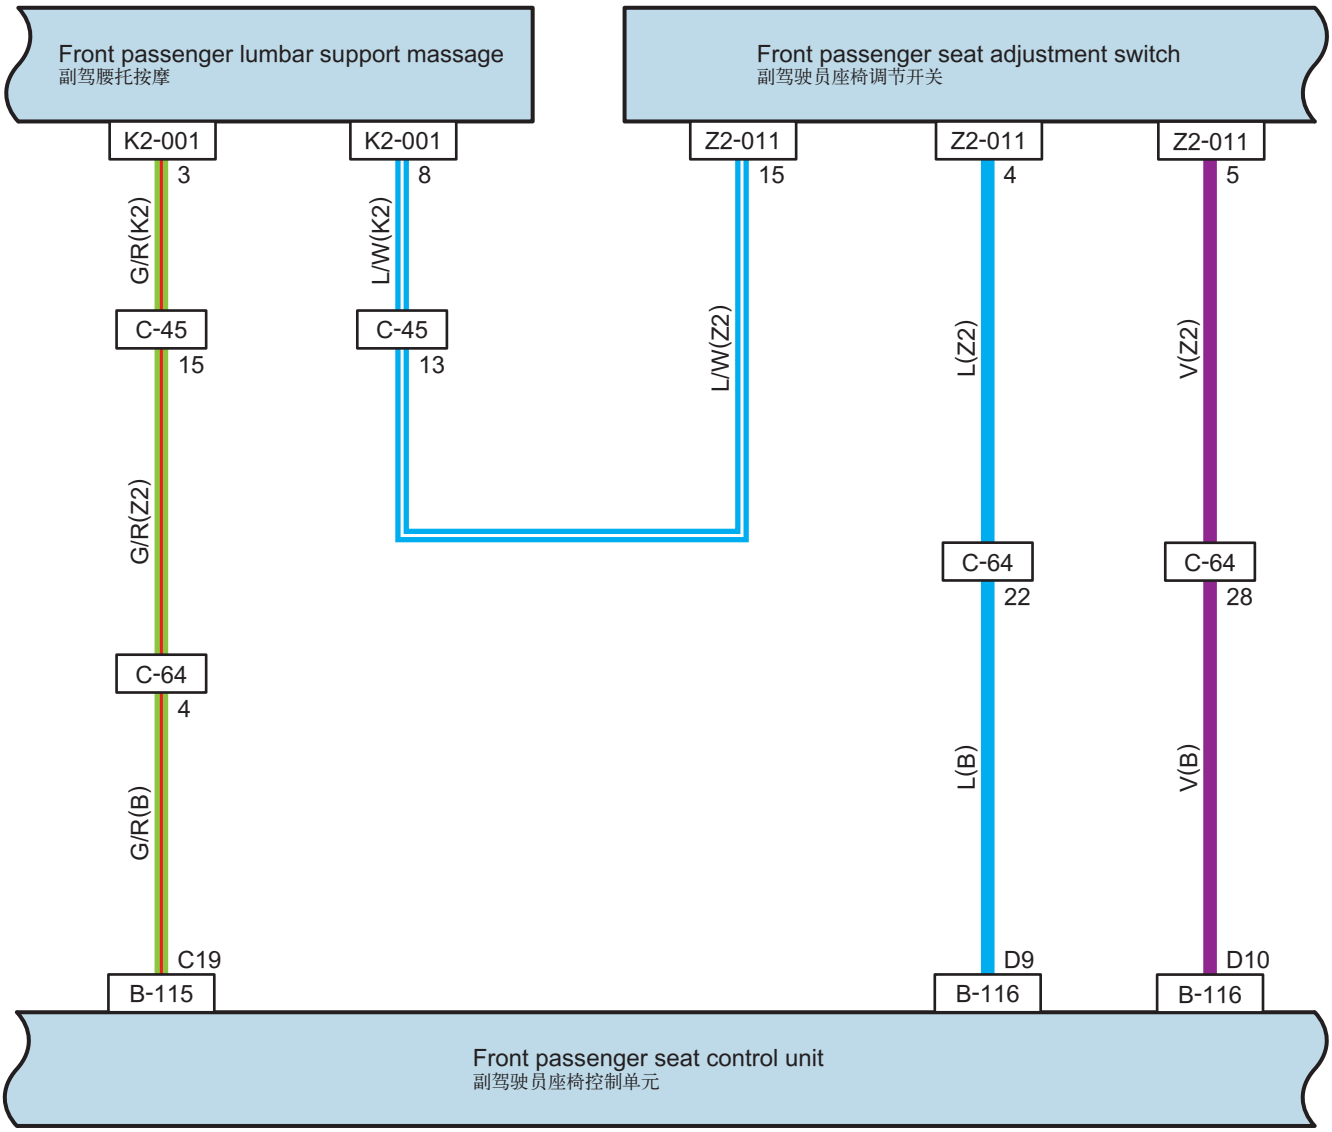

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-030
E51
B-030
E15
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
R/W(B)
W/G(B)
C20
B-115
C21
B-115
A11
B-114
C4
B-115
Front passenger seat control unit
副驾驶员座椅控制单元
B-114
A12
B-114
A9
B(B)
B(B)
B(B)
48a

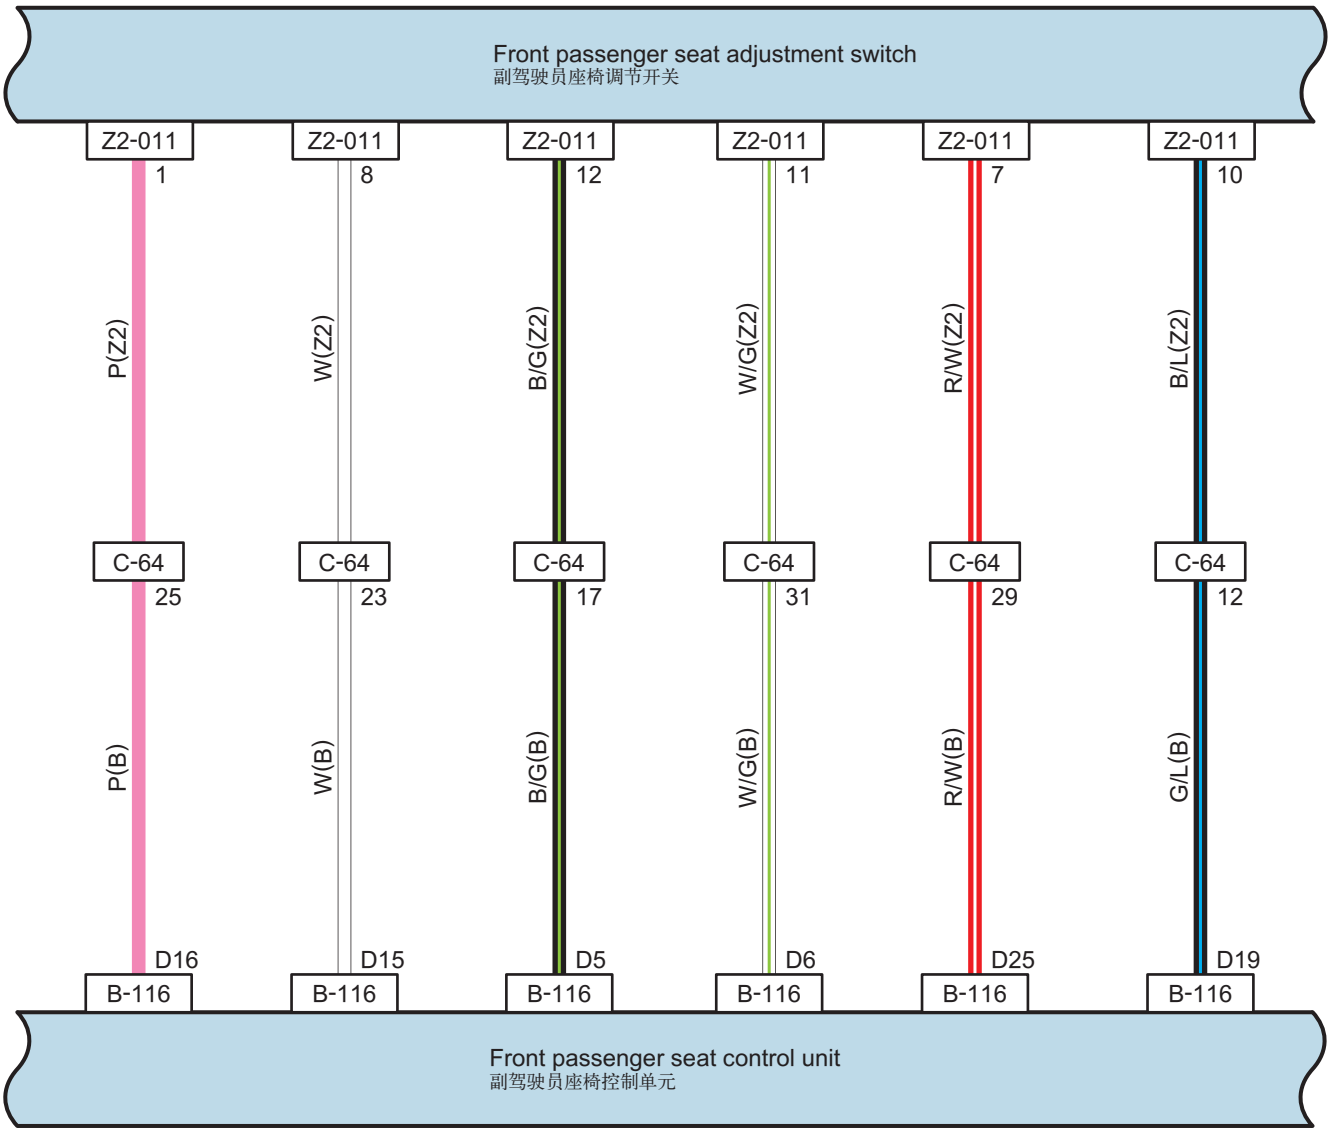

Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-032
F22
B-030
E48
B-032
F32
B-030
E42
B-029
D20
R/G(B)
Y/L(B)
G/B(B)
C-64
2
C-64
9
C-64
10
W/B(B)
R/G(Z2)
W/L(B)
Y/L(Z2)
G/B(Z2)
Front passenger seat control unit
副驾驶员座椅控制单元

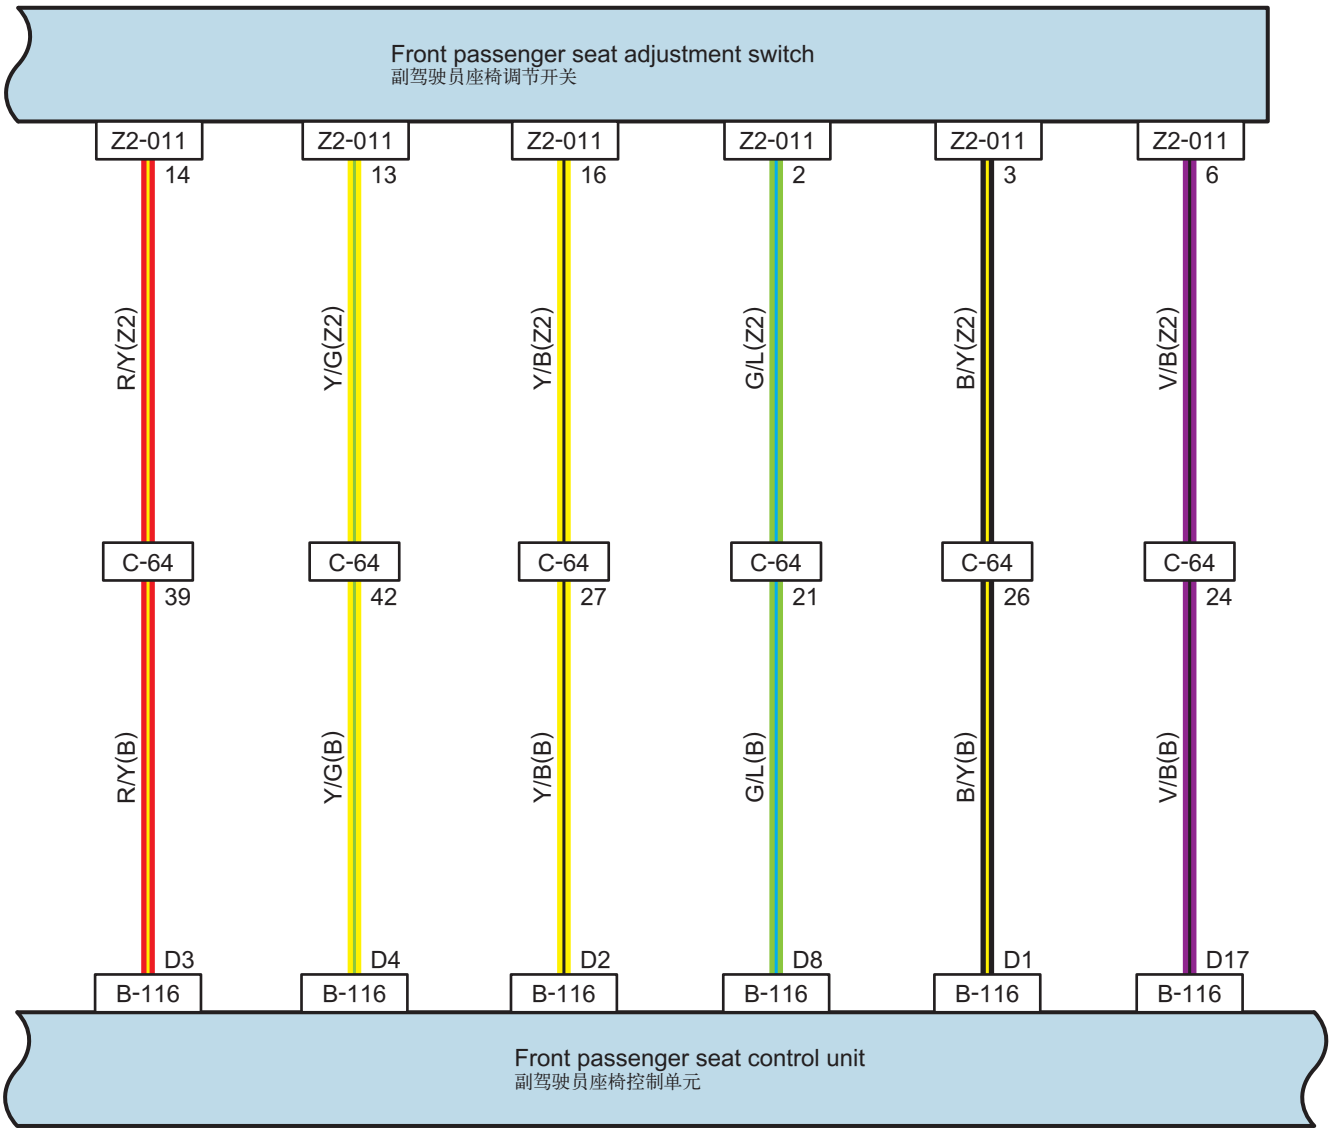

Front passenger seat cushion ventilation motor
副驾座椅坐垫通风电机
Z2-008
3
Z2-008
1
Z2-008
2
Z2-008
4
Z2-008
6
G/B(Z2)
Y/L(Z2)
B(Z2)
B(Z2)
B(Z2)
Front passenger seat control unit
副驾驶员座椅控制单元

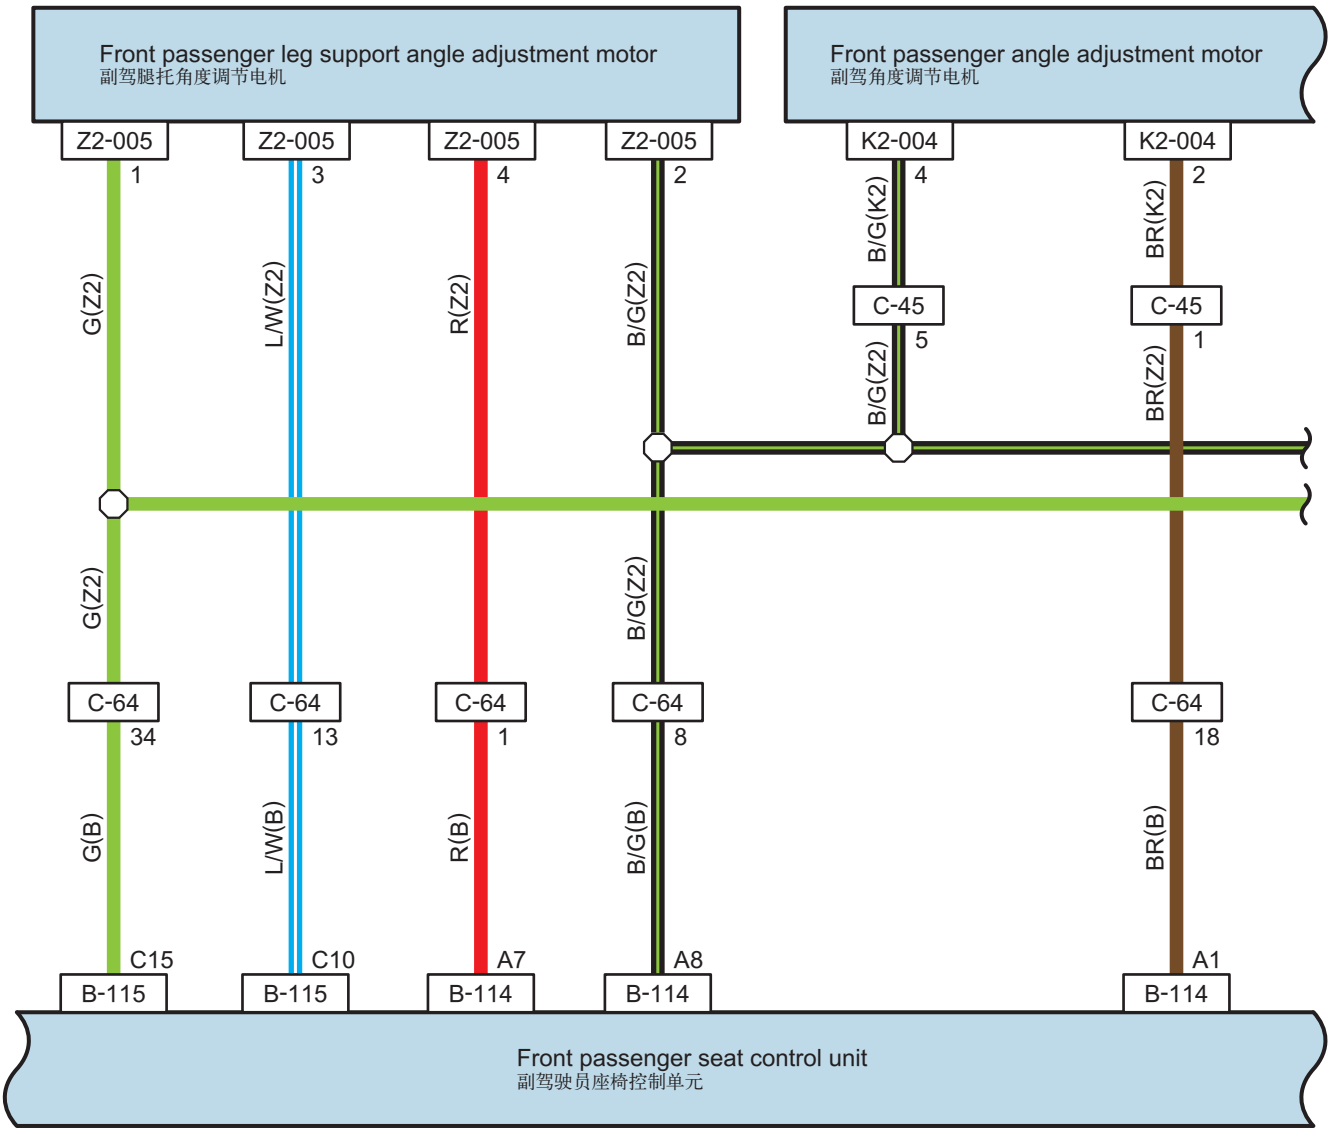

Front passenger seatback ventilation motor
副驾座椅靠背通风电机
Front passenger seatback heater
副驾座椅靠背加热
K2-003
2
K2-003
6
K2-003
3
K2-003
1
K2-002
2
K2-002
1
B(K2)
B(K2)
G/B(K2)
Y/L(K2)
B(K2)
R/G(K2)
B/W(K2)
C-45
10
Y/L(K2)
C-45
2
C-45
7
C-45
11
C-45
4
B/W(Z2)
G/B(Z2)
Y/L(Z2)
B(Z2)
R/G(Z2)
Front passenger seat control unit
副驾驶员座椅控制单元

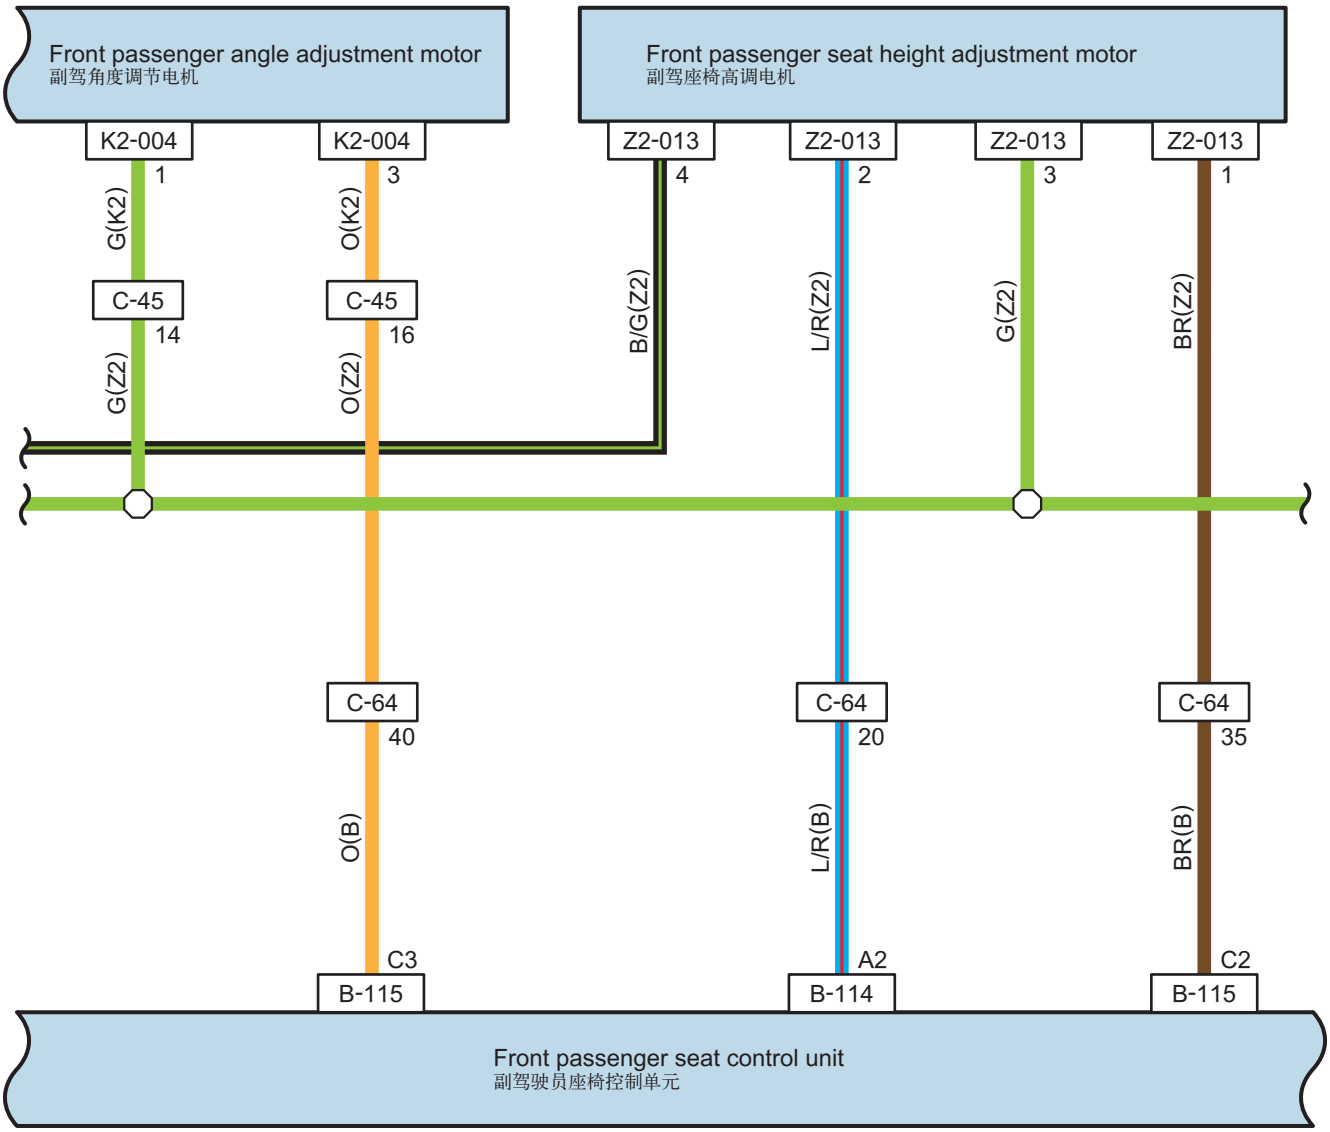

Front passenger seat cushion heater
副驾座椅坐垫加热
Front passenger lumbar support massage
副驾腰托按摩
Z2-009
2
Z2-009
1
Z2-009
3
Z2-009
4
K2-001
2
K2-001
1
W/L(Z2)
R/G(Z2)
W/B(Z2)
B(Z2)
Y/L(K2)
B/W(K2)
C-45
3
B/W(Z2)
C-64
36
C-64
15
W/L(B)
W/B(B)
B(Z2)
C-64
30
B(B)
48b
Front passenger seat control unit
副驾驶员座椅控制单元

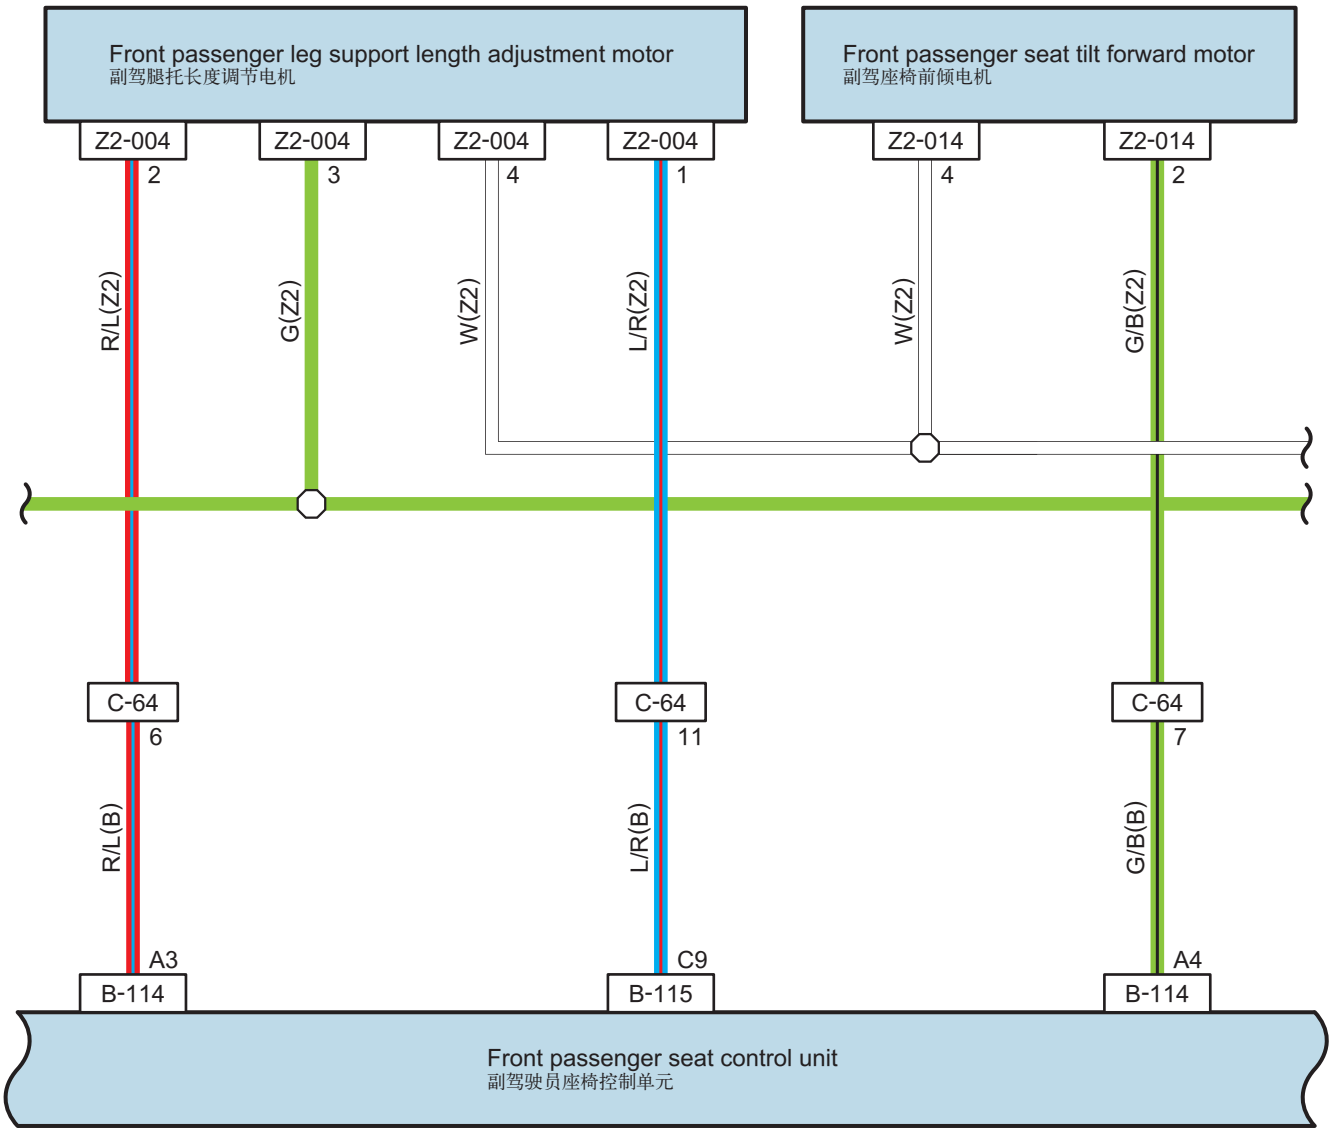

Front passenger lumbar support massage
副驾腰托按摩
Front passenger seat adjustment switch
副驾驶员座椅调节开关
K2-001
3
K2-001
8
Z2-011
15
Z2-011
4
Z2-011
5
G/R(K2)
L/W(K2)
L/W(Z2)
L(Z2)
V(Z2)
C-45
15
C-45
13
G/R(Z2)
C-64
22
C-64
28
C-64
4
G/R(B)
L(B)
V(B)
C19
D9
D10
B-115
B-116
B-116
Front passenger seat control unit
副驾驶员座椅控制单元

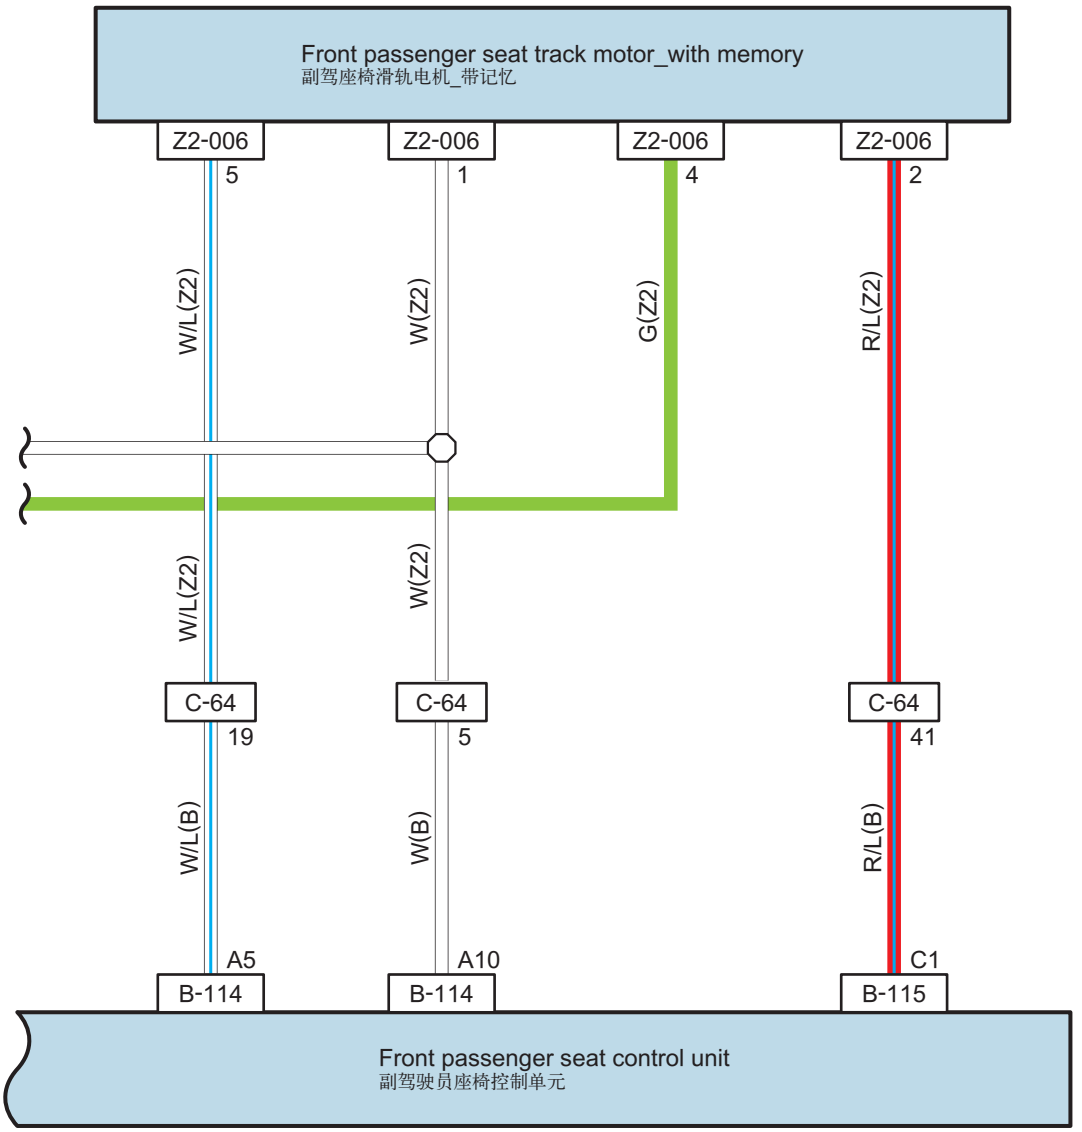

Front passenger seat adjustment switch
副驾驶员座椅调节开关
Z2-011
1
P(Z2)
C-64
25
P(B)
D16
B-116
Z2-011
8
W(Z2)
C-64
23
W(B)
D15
B-116
Z2-011
12
B/G(Z2)
C-64
17
B/G(B)
D5
B-116
Z2-011
11
W/G(Z2)
C-64
31
W/G(B)
D6
B-116
Z2-011
7
R/W(Z2)
C-64
29
R/W(B)
D25
B-116
Z2-011
10
B/L(Z2)
C-64
12
G/L(B)
D19
B-116
Front passenger seat control unit
副驾驶员座椅控制单元

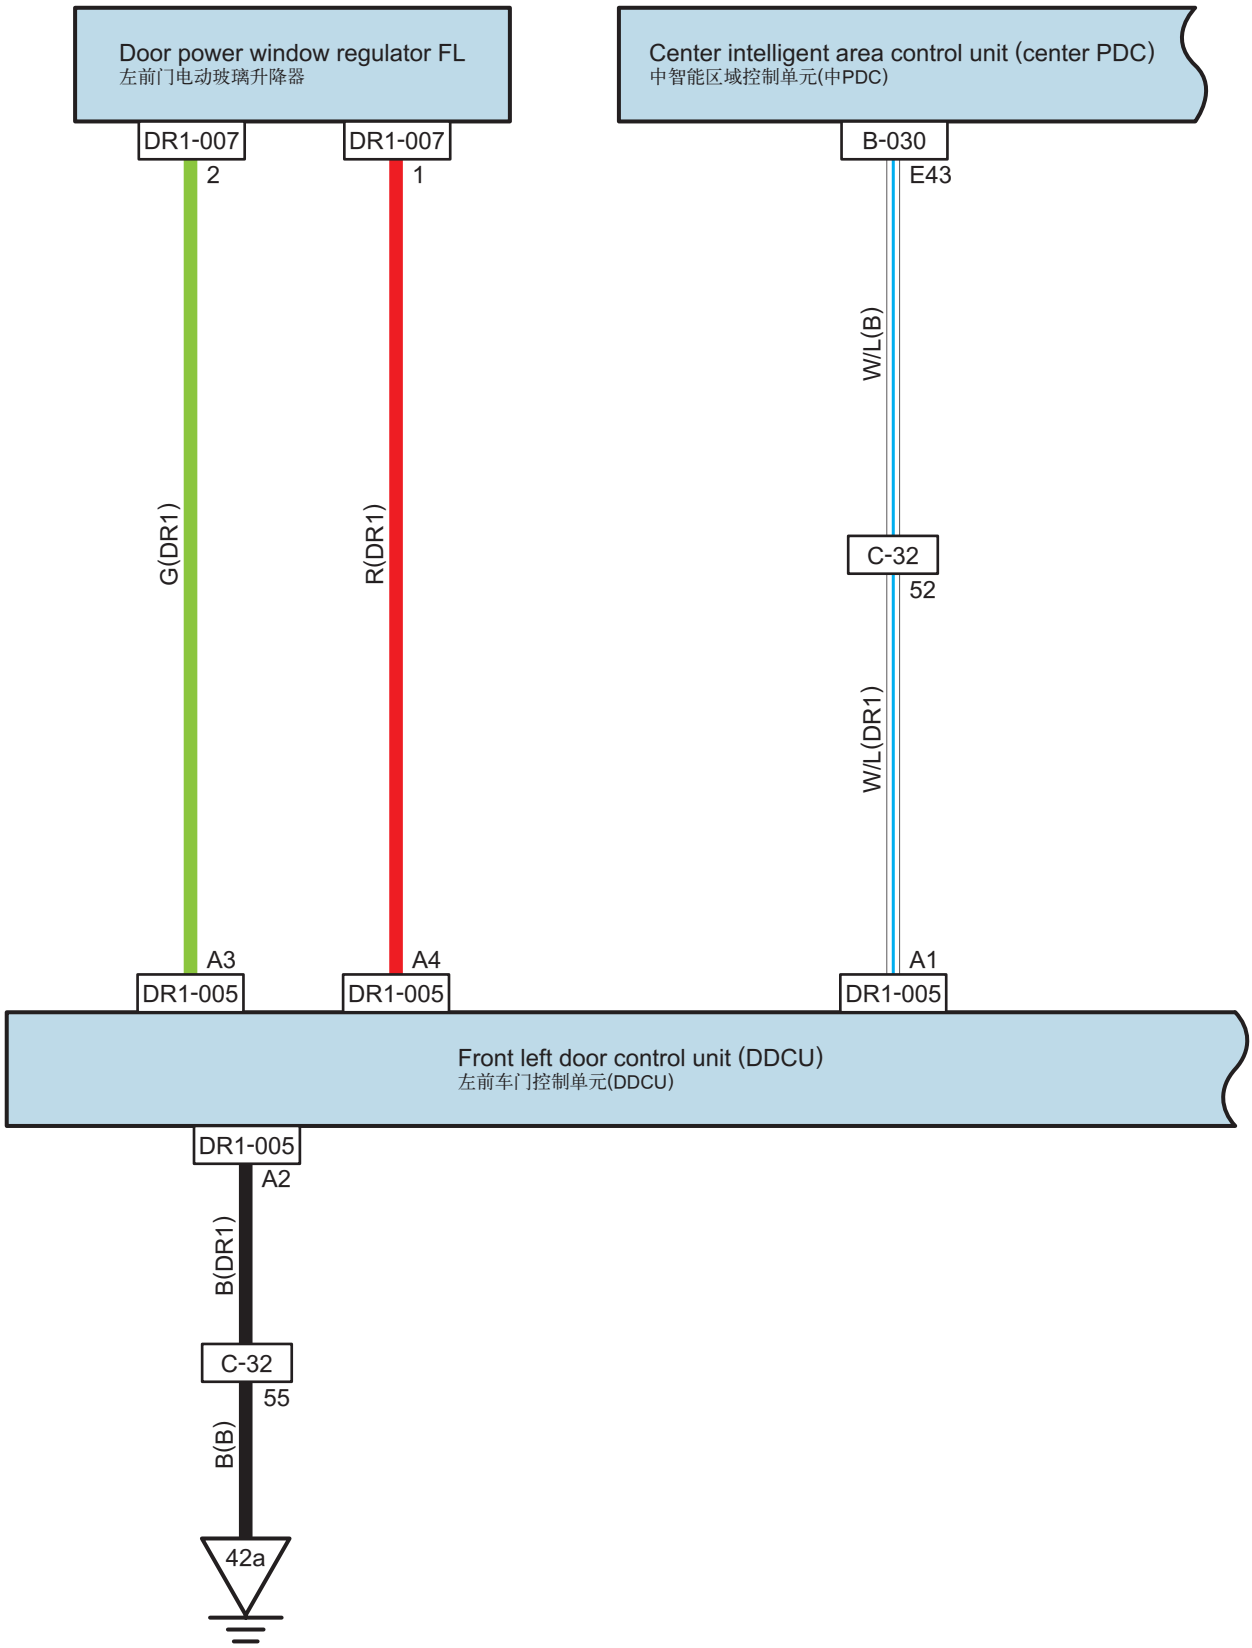

Front passenger seat adjustment switch
副驾驶员座椅调节开关
Z2-011
14
R/Y(Z2)
C-64
39
R/Y(B)
D3
B-116
Z2-011
13
Y/G(Z2)
C-64
42
Y/G(B)
D4
B-116
Z2-011
16
Y/B(Z2)
C-64
27
Y/B(B)
D2
B-116
Z2-011
2
G/L(Z2)
C-64
21
G/L(B)
D8
B-116
Z2-011
3
B/Y(Z2)
C-64
26
B/Y(B)
D1
B-116
Z2-011
6
V/B(Z2)
C-64
24
V/B(B)
D17
B-116
Front passenger seat control unit
副驾驶员座椅控制单元

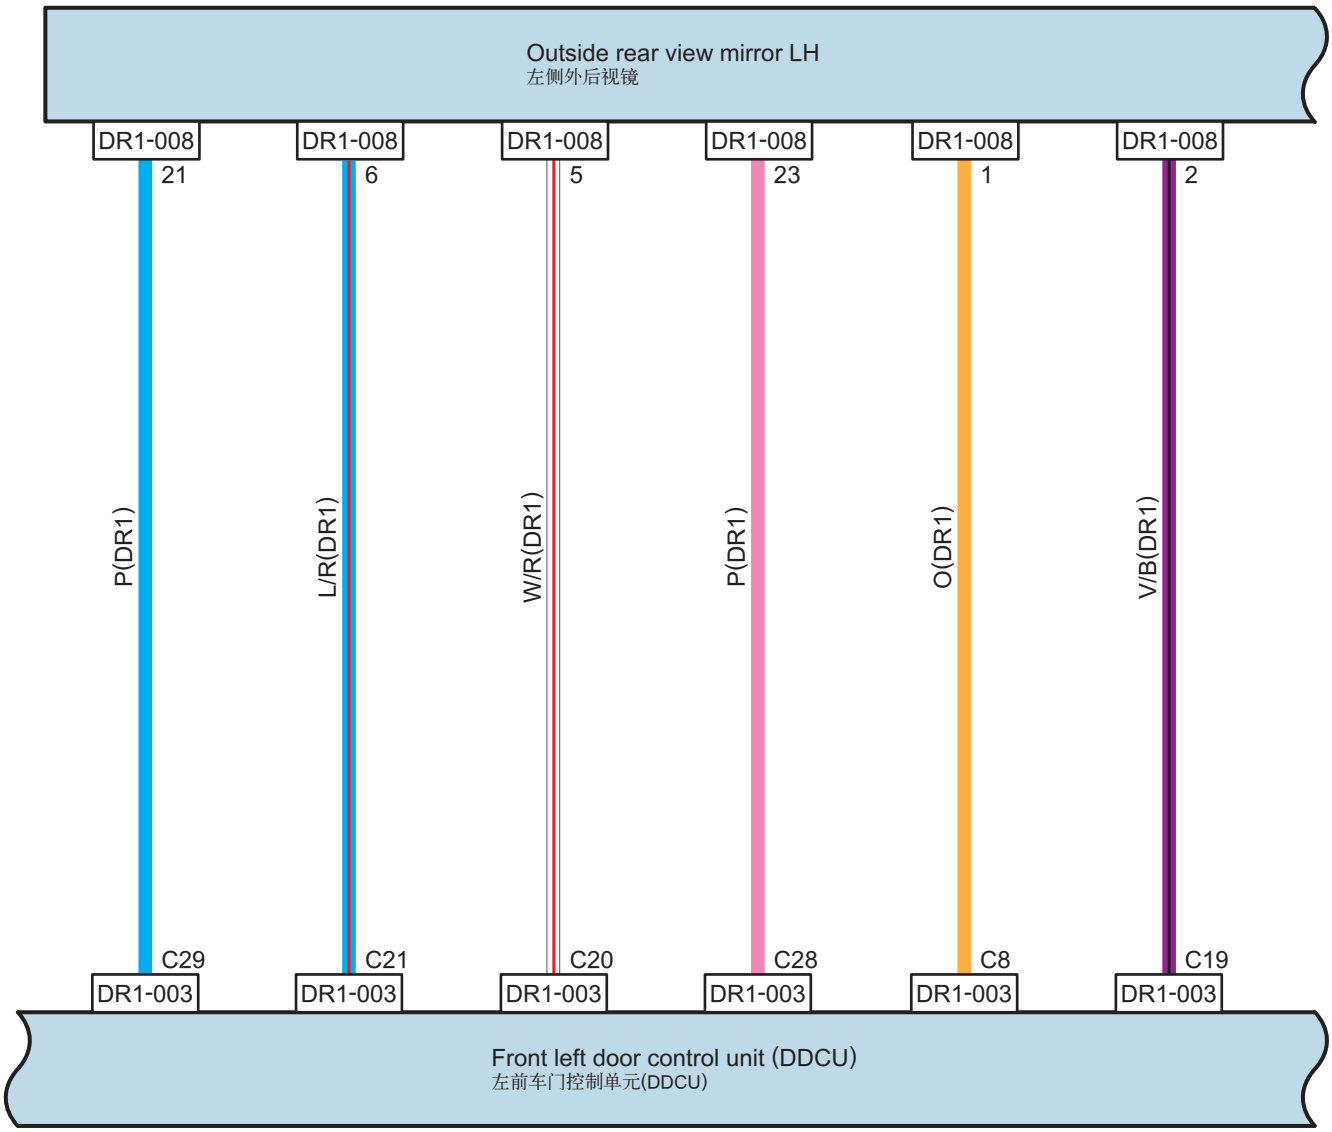

Front passenger leg support angle adjustment motor
副驾腿托角度调节电机
Front passenger angle adjustment motor
副驾角度调节电机
Z2-005
1
Z2-005
3
Z2-005
4
Z2-005
2
K2-004
4
K2-004
2
G(Z2)
L/W(Z2)
R(Z2)
B/G(Z2)
B/G(K2)
BR(K2)
C-45
5
C-45
1
B/G(Z2)
BR(Z2)
G(Z2)
B/G(Z2)
C-64
34
C-64
13
C-64
1
C-64
8
C-64
18
G(B)
L/W(B)
R(B)
B/G(B)
BR(B)
C15
C10
A7
A8
A1
B-115
B-115
B-114
B-114
B-114
Front passenger seat control unit
副驾驶员座椅控制单元

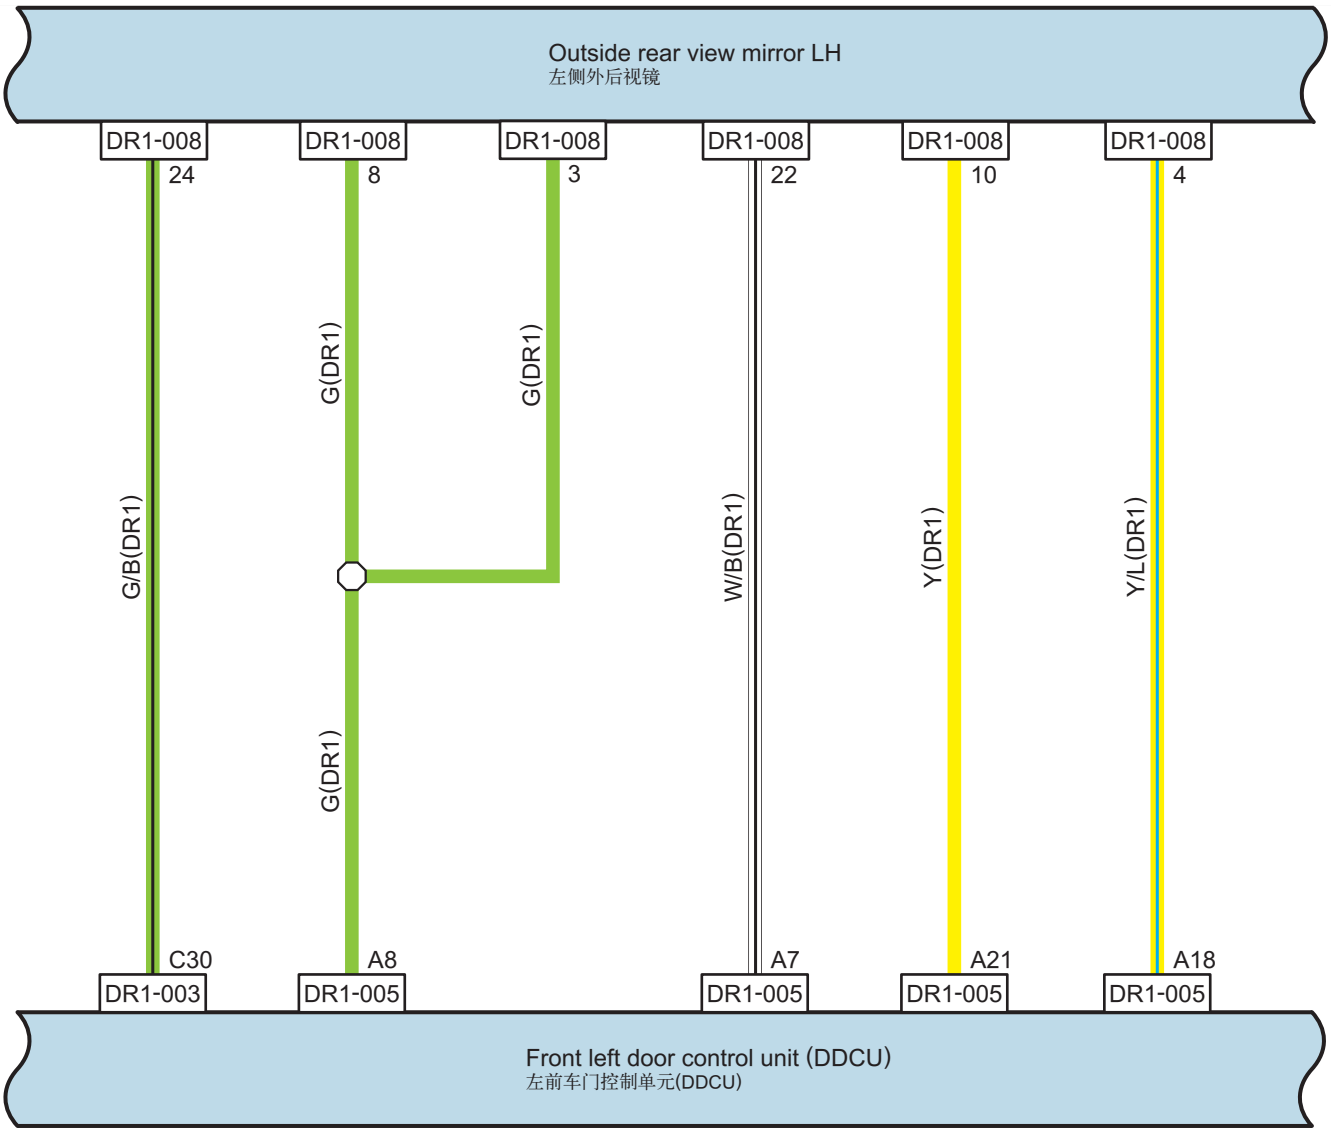

Front passenger angle adjustment motor
副驾角度调节电机
Front passenger seat height adjustment motor
副驾座椅高调电机
K2-004
1
K2-004
3
Z2-013
4
Z2-013
2
Z2-013
3
Z2-013
1
G(K2)
O(K2)
B/G(Z2)
L/R(Z2)
G(Z2)
BR(Z2)
C-45
14
C-45
16
G(Z2)
O(Z2)
C-64
40
C-64
20
C-64
35
O(B)
L/R(B)
BR(B)
C3
A2
C2
B-115
B-114
B-115
Front passenger seat control unit
副驾驶员座椅控制单元

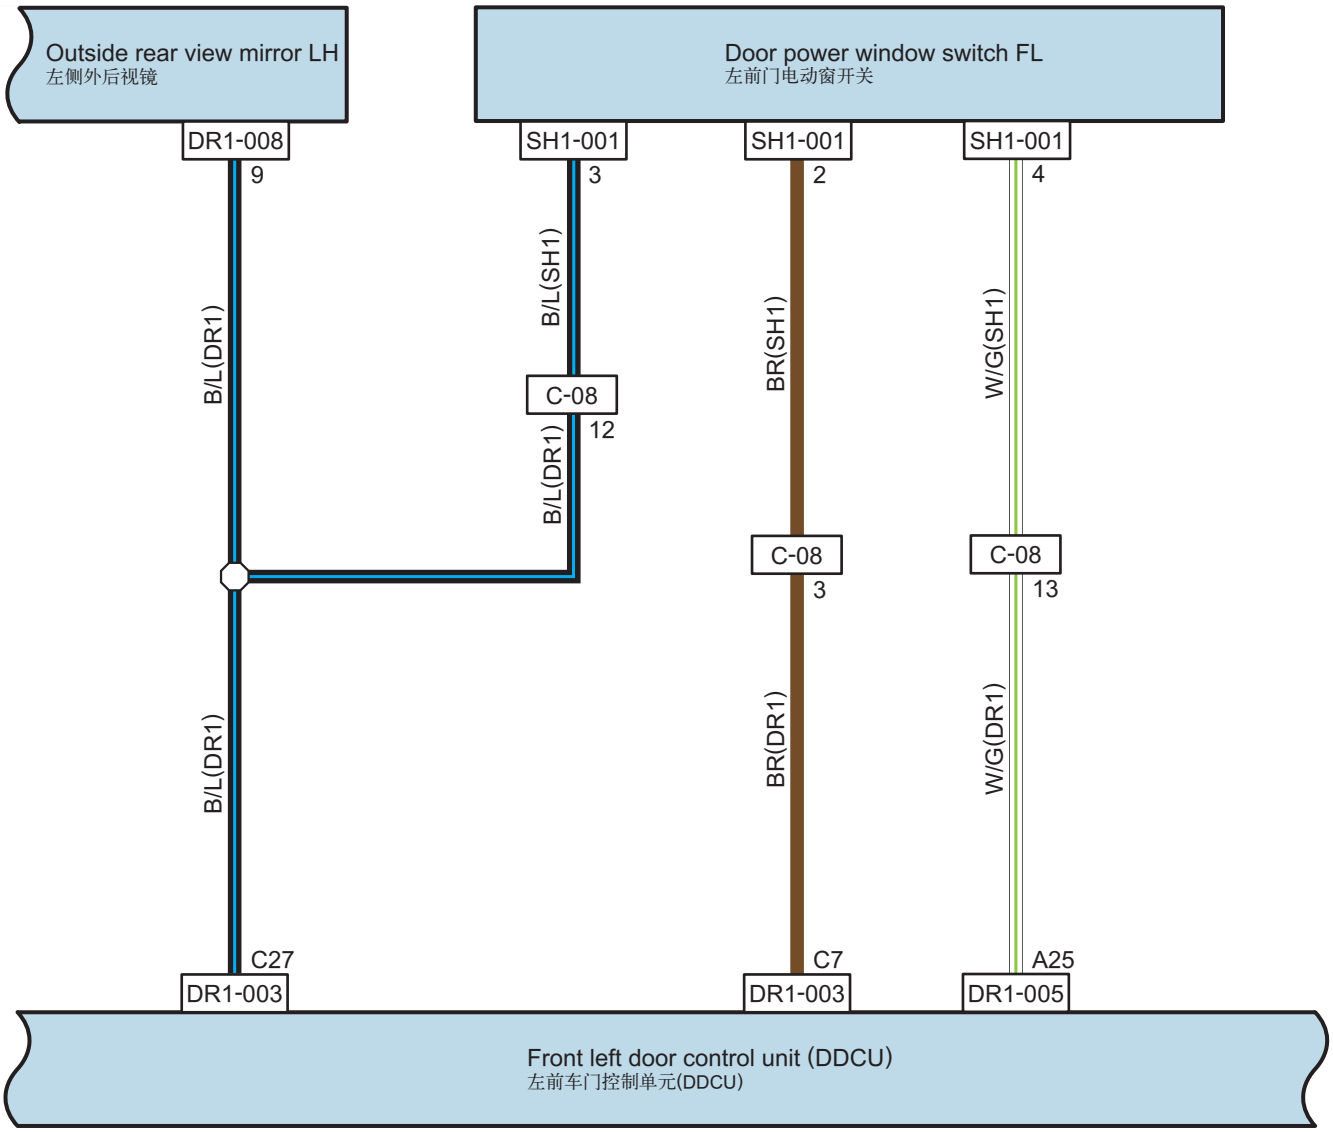

Front passenger leg support length adjustment motor
副驾腿托长度调节电机
Front passenger seat tilt forward motor
副驾座椅前倾电机
Z2-004
2
Z2-004
3
Z2-004
4
Z2-004
1
Z2-014
4
Z2-014
2
R/L(Z2)
G(Z2)
W(Z2)
L/R(Z2)
W(Z2)
G/B(Z2)
C-64
6
C-64
11
C-64
7
R/L(B)
L/R(B)
G/B(B)
A3
C9
A4
B-114
B-115
B-114
Front passenger seat control unit
副驾驶员座椅控制单元

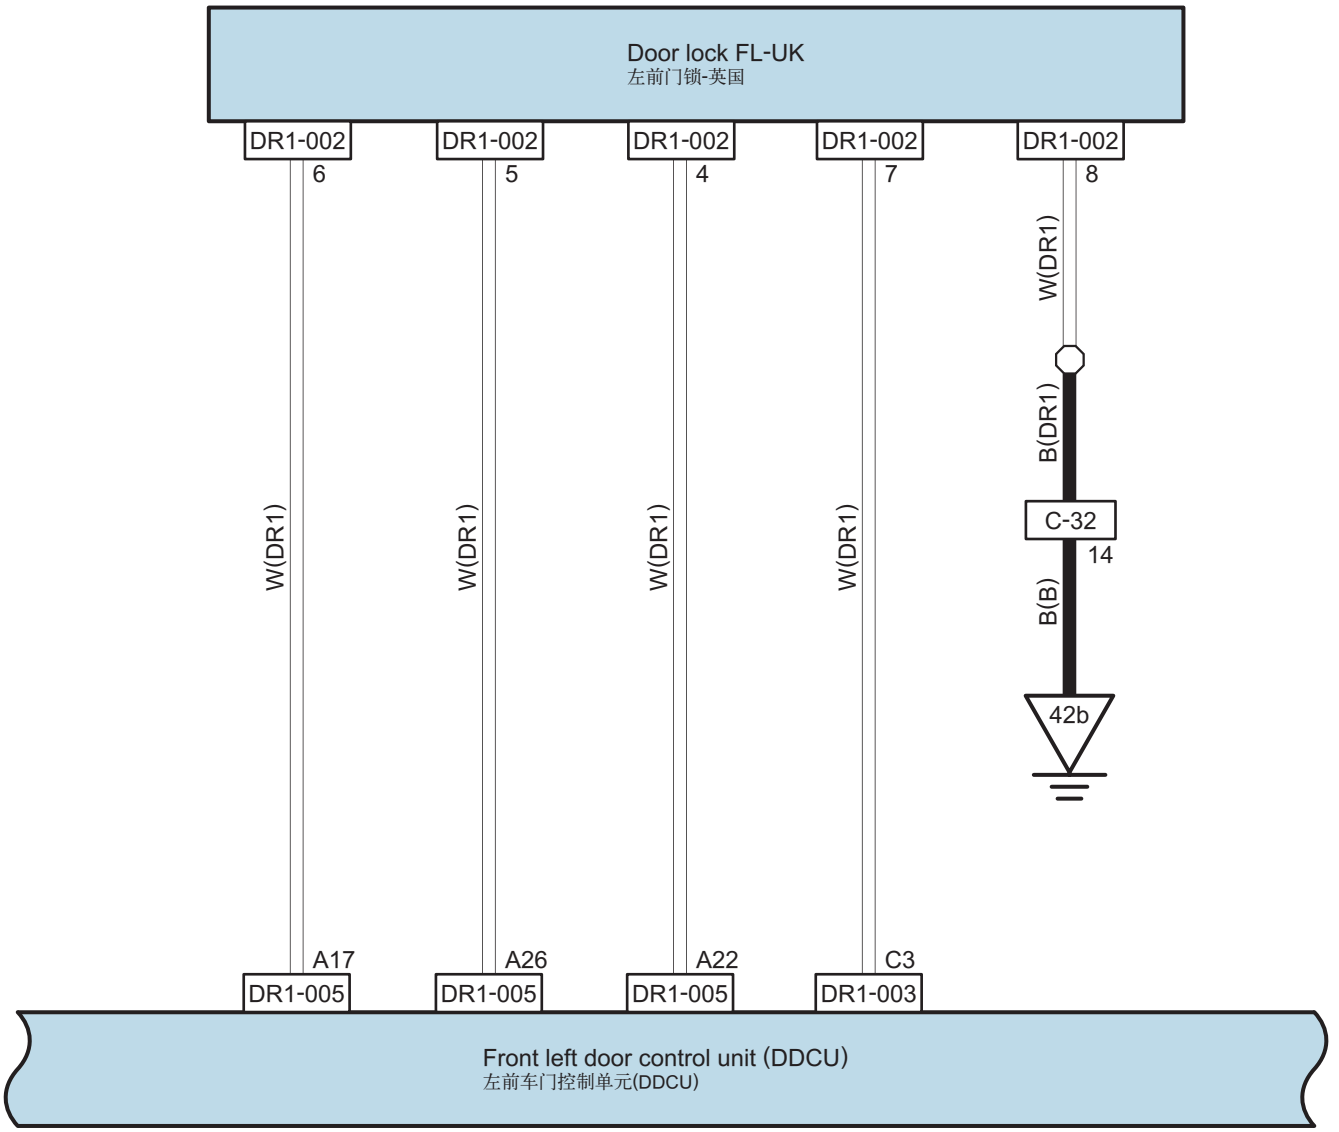

Front passenger seat track motor_with memory
副驾座椅滑轨电机_带记忆
Z2-006
5
Z2-006
1
Z2-006
4
Z2-006
2
W/L(Z2)
W(Z2)
G(Z2)
R/L(Z2)
W/L(Z2)
W(Z2)
C-64
19
C-64
5
C-64
41
W/L(B)
W(B)
R/L(B)
A5
A10
C1
B-114
B-114
B-115
Front passenger seat control unit
副驾驶员座椅控制单元

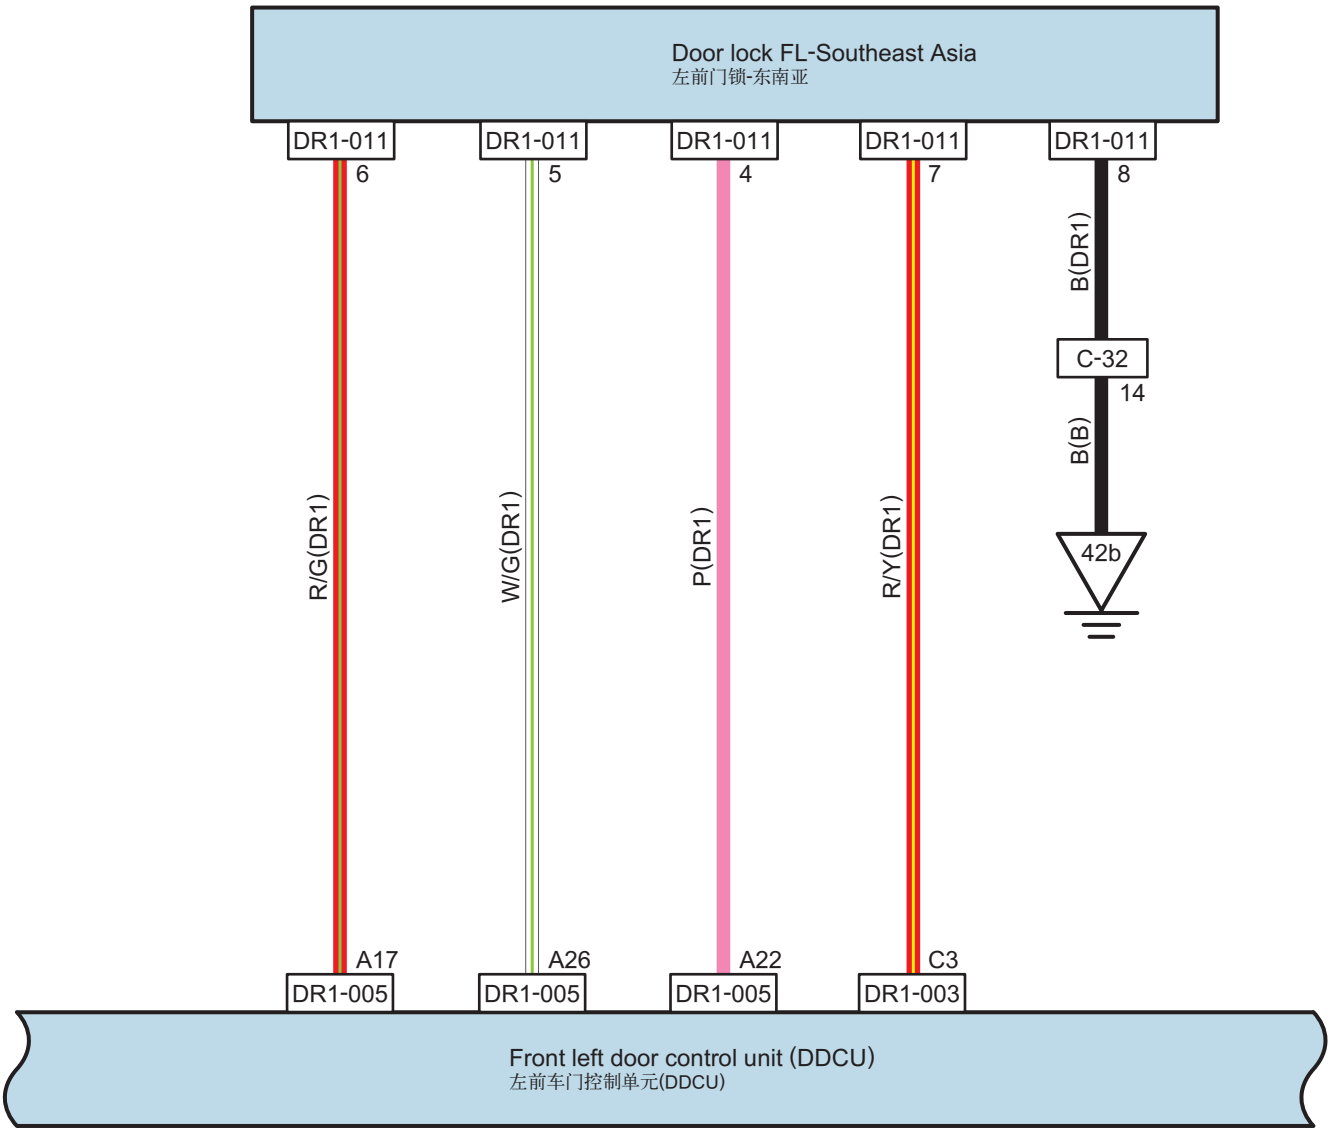

Door power window regulator FL
左前门电动玻璃升降器
DR1-007
2
DR1-007
1
G(DR1)
R(DR1)
A3
DR1-005
A4
DR1-005
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-030
E43
W/L(B)
C-32
52
W/L(DR1)
A1
DR1-005
Front left door control unit (DDCU)
左前车门控制单元(DDCU)
DR1-005
A2
B(DR1)
C-32
55
B(B)
42a

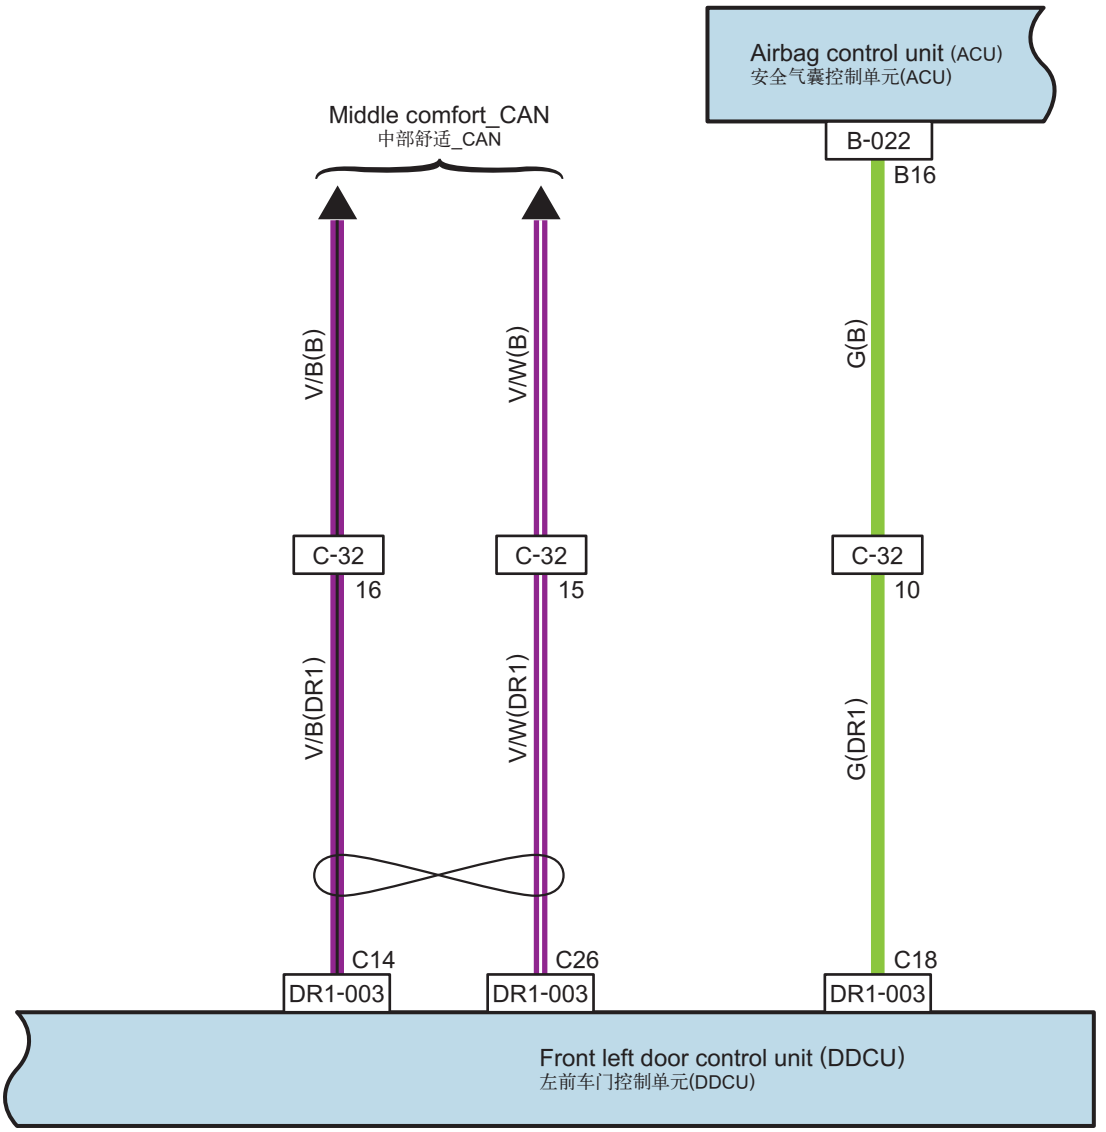

Outside rear view mirror LH
左侧外后视镜
DR1-008
21
DR1-008
6
DR1-008
5
DR1-008
23
DR1-008
1
DR1-008
2
P(DR1)
L/R(DR1)
W/R(DR1)
P(DR1)
O(DR1)
V/B(DR1)
C29
C21
C20
C28
C8
C19
DR1-003
DR1-003
DR1-003
DR1-003
DR1-003
DR1-003
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

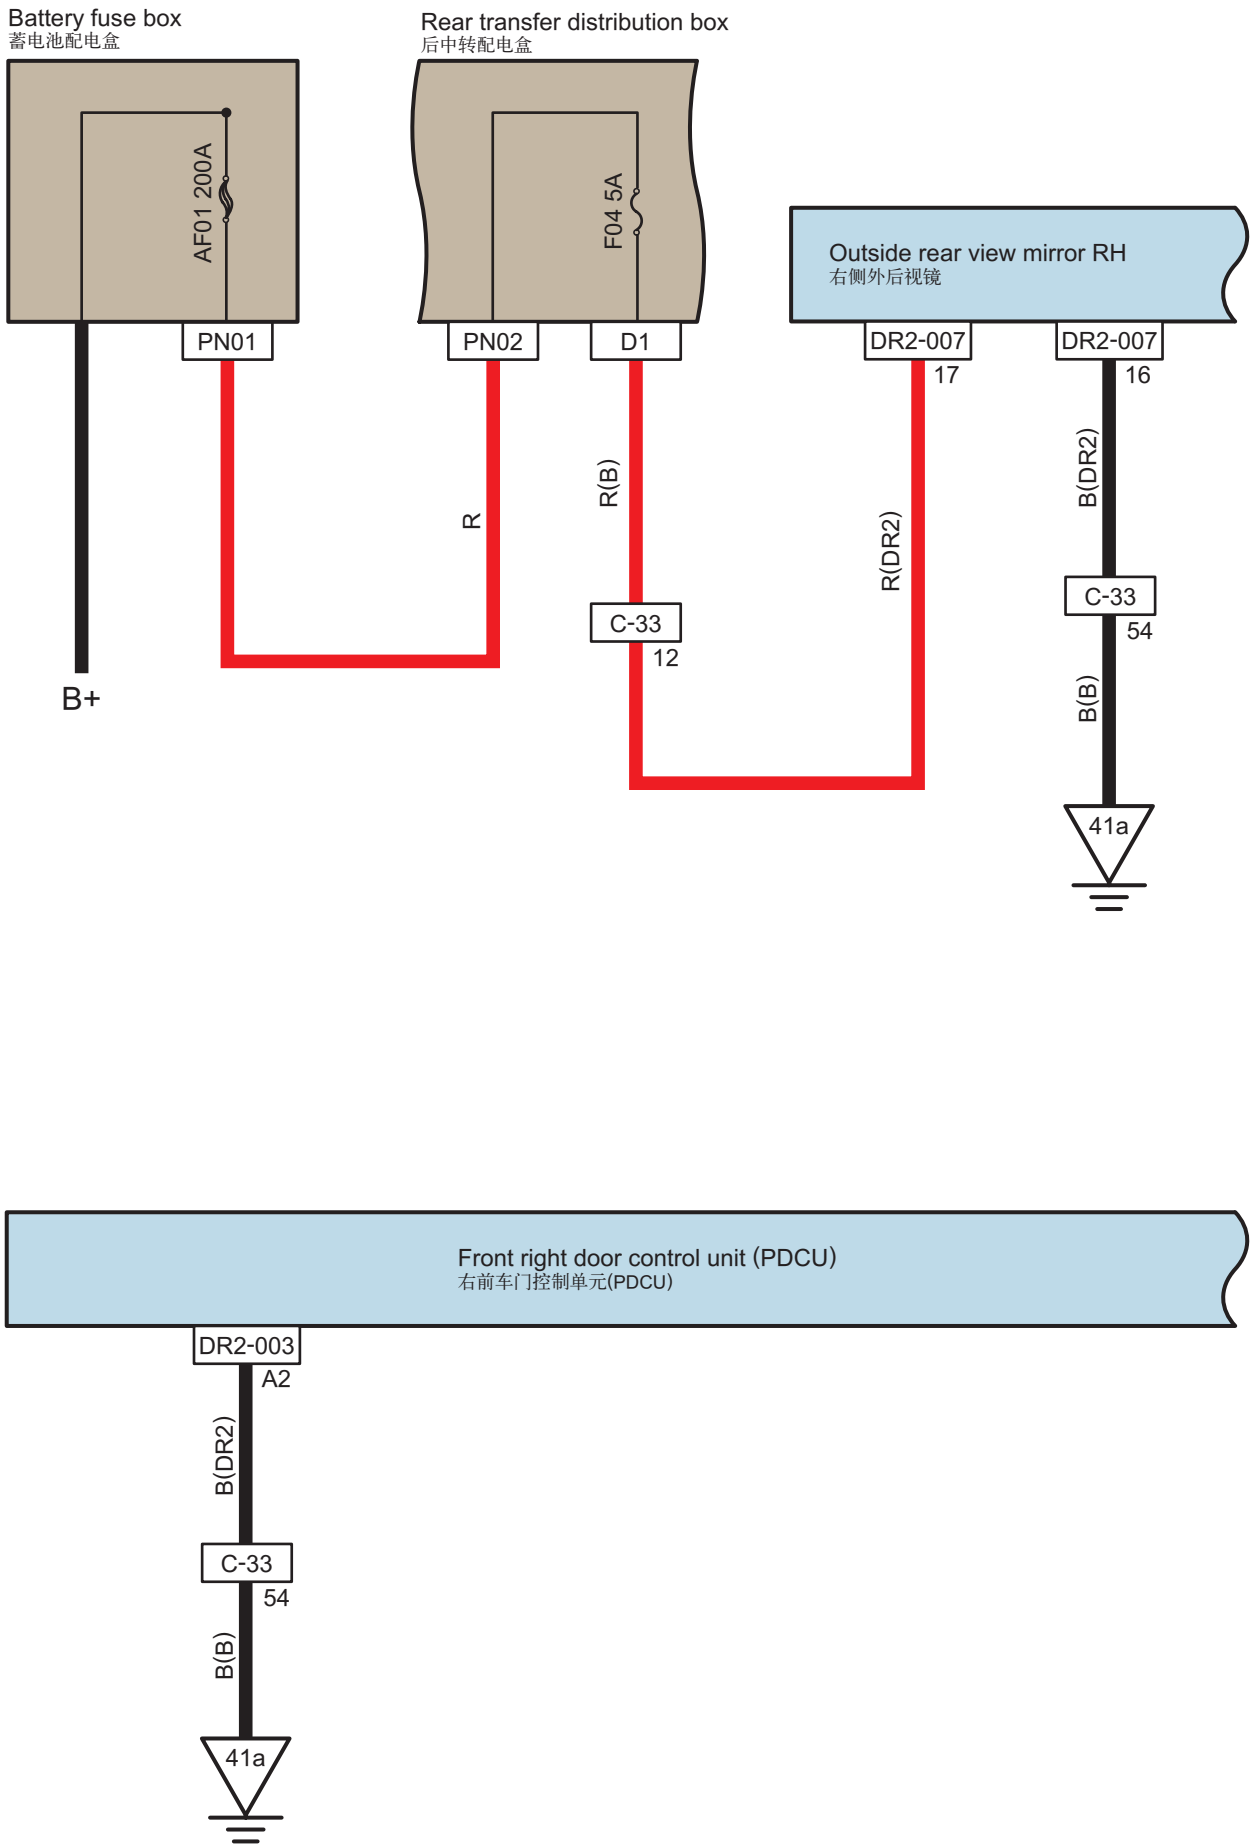

Outside rear view mirror LH
左侧外后视镜
DR1-008
24
DR1-008
8
DR1-008
3
DR1-008
22
DR1-008
10
DR1-008
4
G/B(DR1)
G(DR1)
G(DR1)
G(DR1)
W/B(DR1)
Y(DR1)
Y/L(DR1)
C30
DR1-003
A8
DR1-005
A7
DR1-005
A21
DR1-005
A18
DR1-005
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

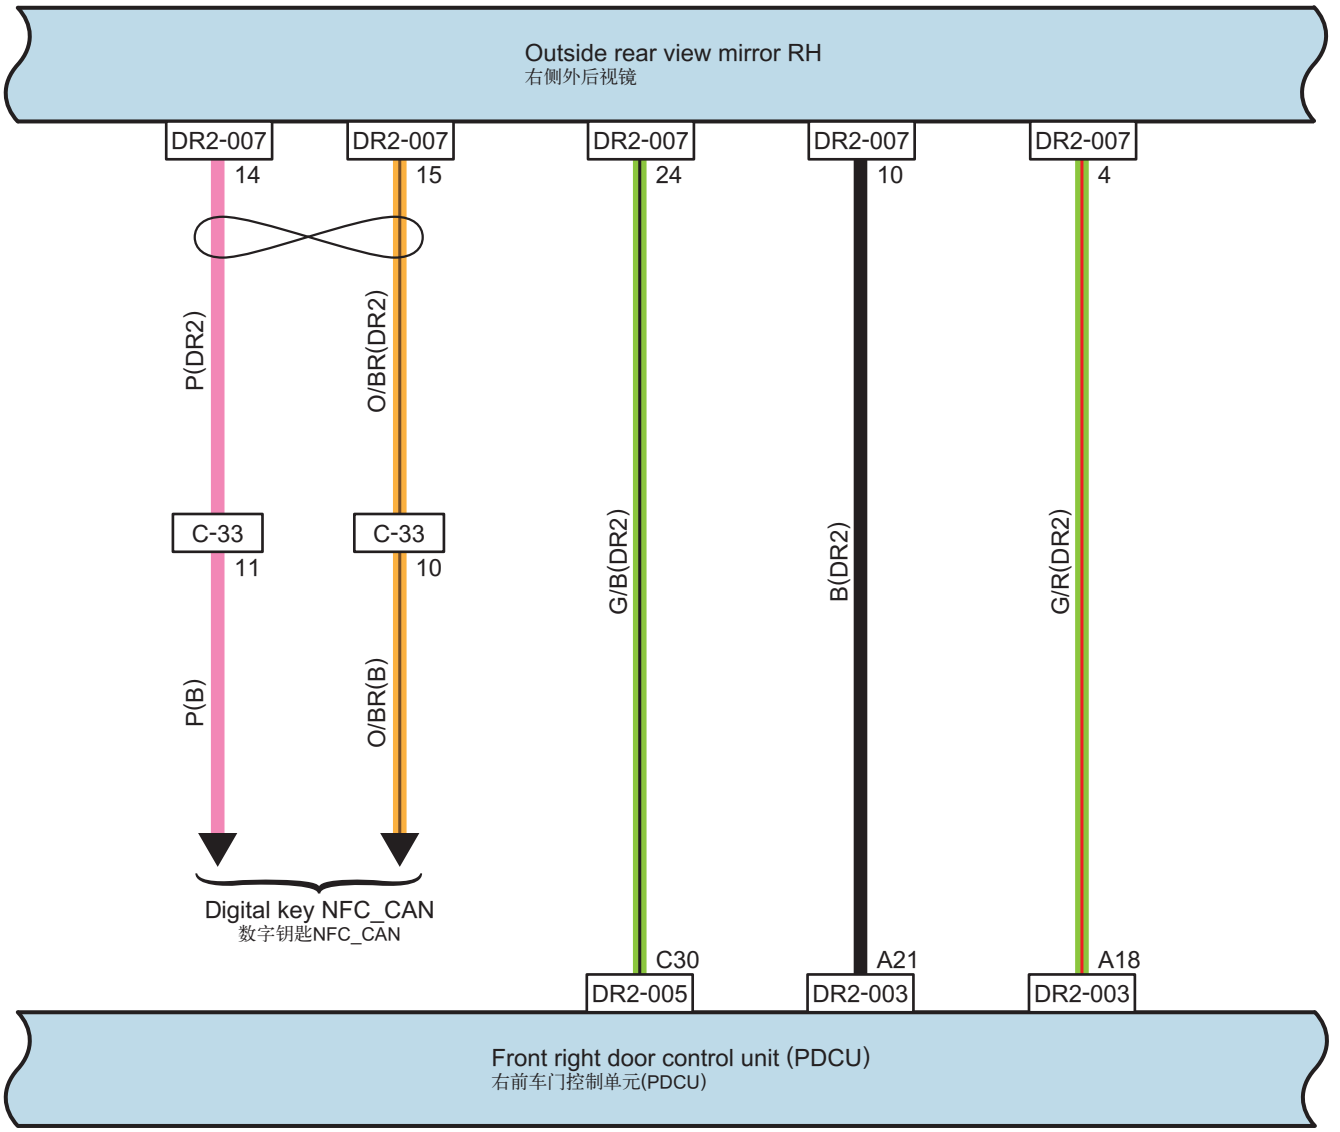

Outside rear view mirror LH
左侧外后视镜
Door power window switch FL
左前门电动窗开关
DR1-008
9
SH1-001
3
SH1-001
2
SH1-001
4
B/L(DR1)
B/L(SH1)
BR(SH1)
W/G(SH1)
C-08
12
B/L(DR1)
C-08
3
C-08
13
B/L(DR1)
BR(DR1)
W/G(DR1)
C27
C7
A25
DR1-003
DR1-003
DR1-005
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

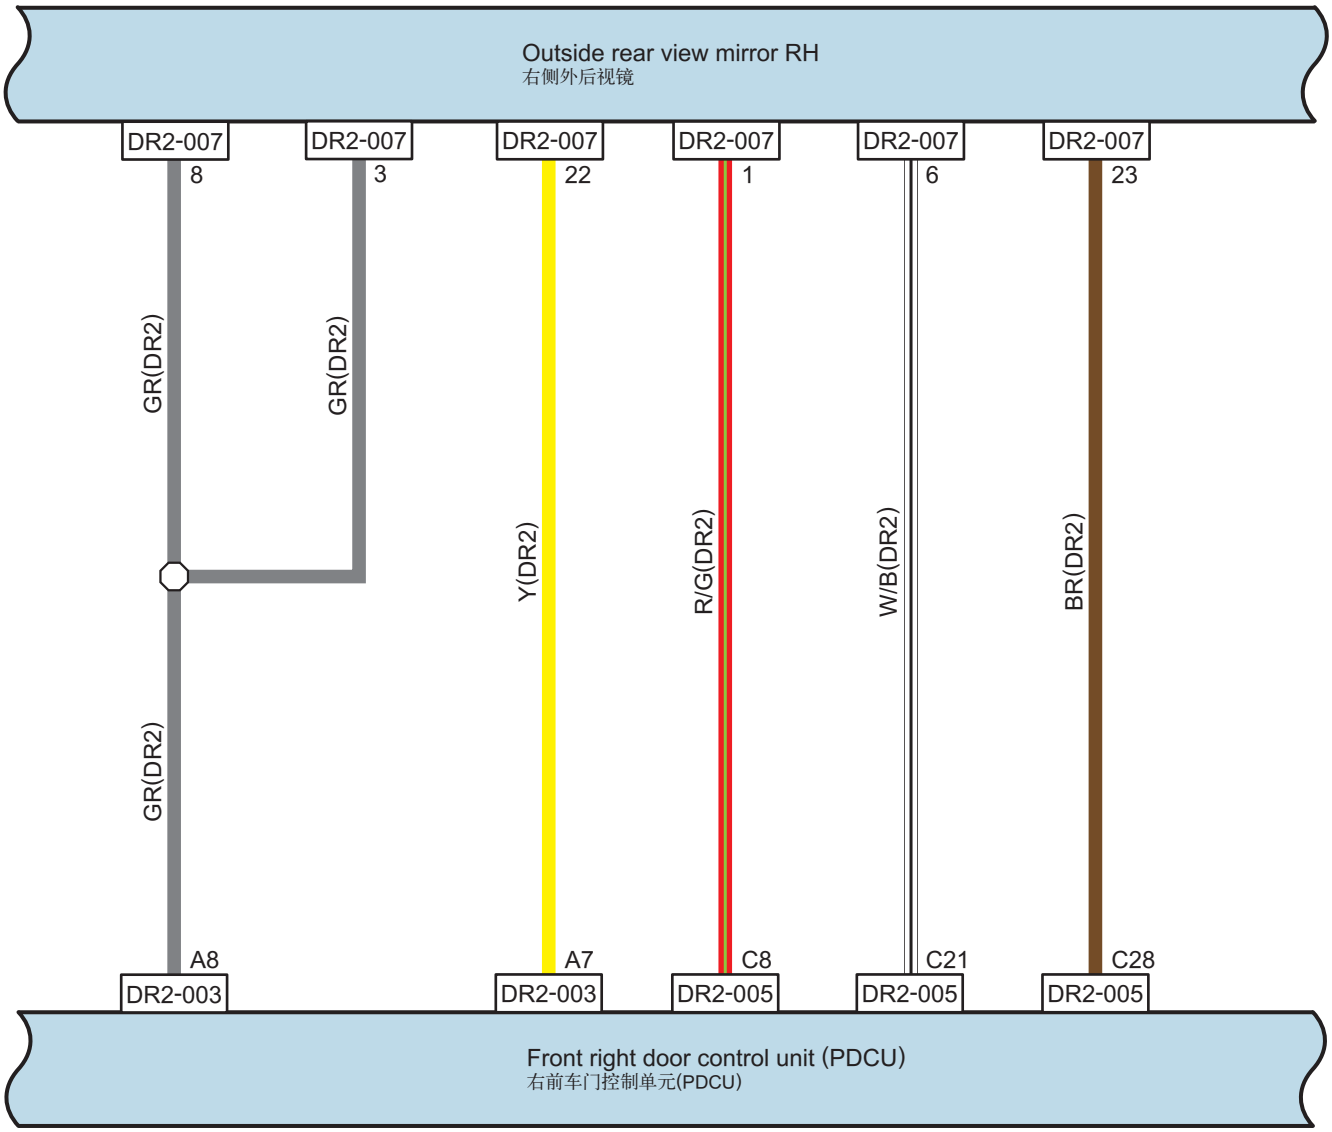

Door lock FL-UK
左前门锁-英国
DR1-002
6
DR1-002
5
DR1-002
4
DR1-002
7
DR1-002
8
W(DR1)
W(DR1)
W(DR1)
W(DR1)
W(DR1)
B(DR1)
C-32
14
B(B)
42b
A17
A26
A22
C3
DR1-005
DR1-005
DR1-005
DR1-003
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

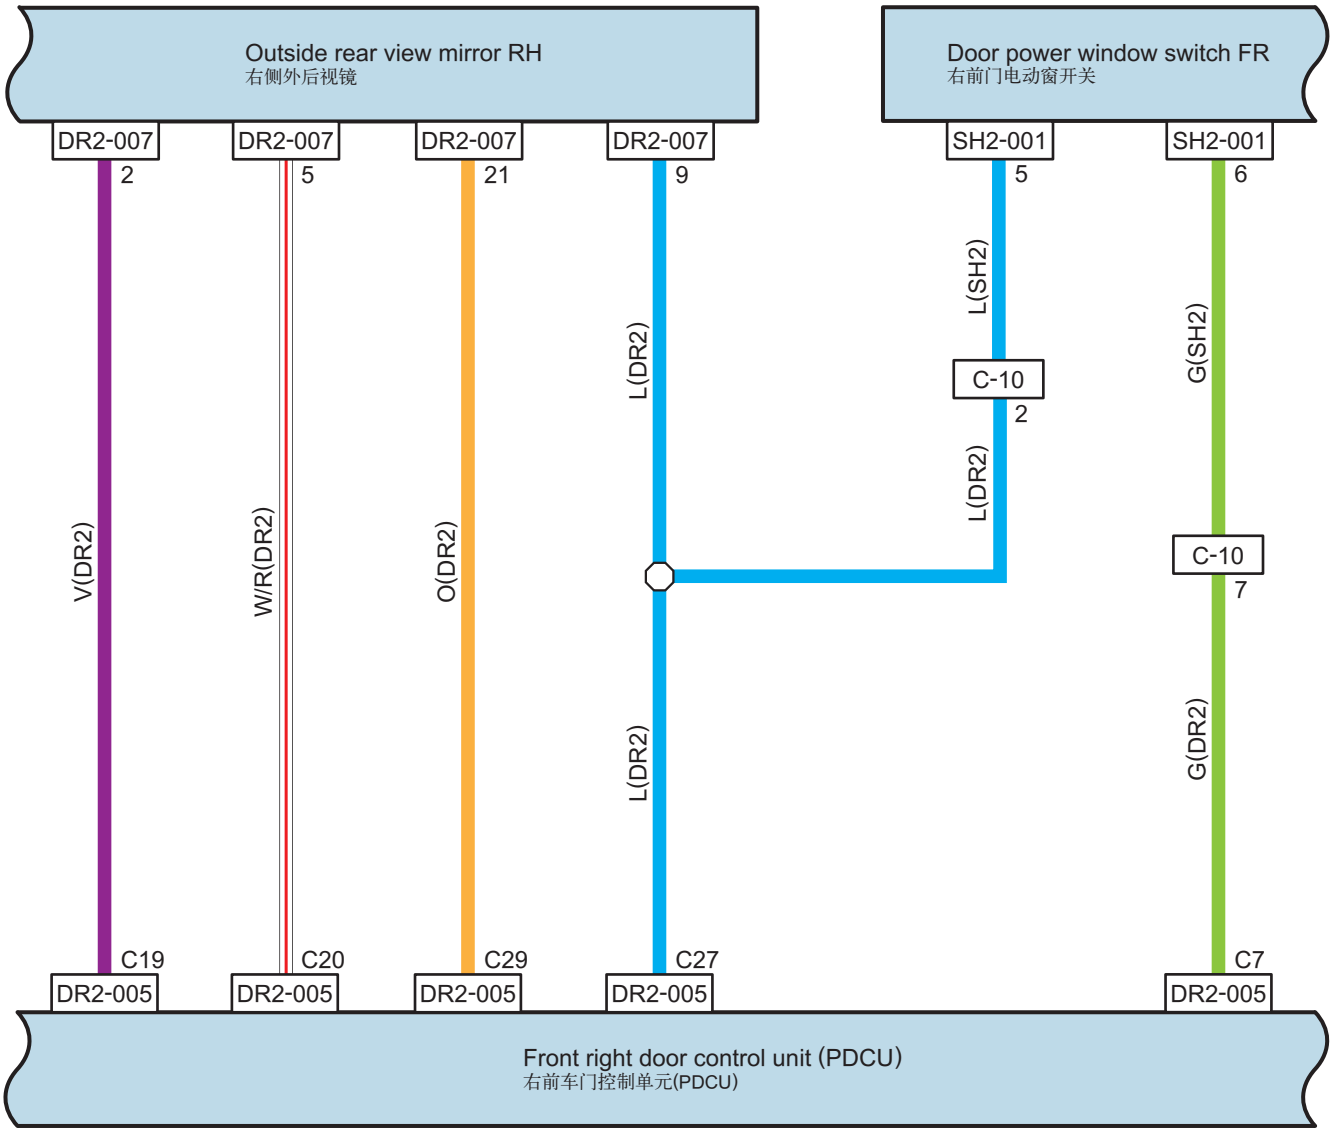

Door lock FL-Southeast Asia
左前门锁-东南亚
DR1-011
6
DR1-011
5
DR1-011
4
DR1-011
7
DR1-011
8
B(DR1)
C-32
14
B(B)
42b
R/G(DR1)
W/G(DR1)
P(DR1)
R/Y(DR1)
A17
A26
A22
C3
DR1-005
DR1-005
DR1-005
DR1-003
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

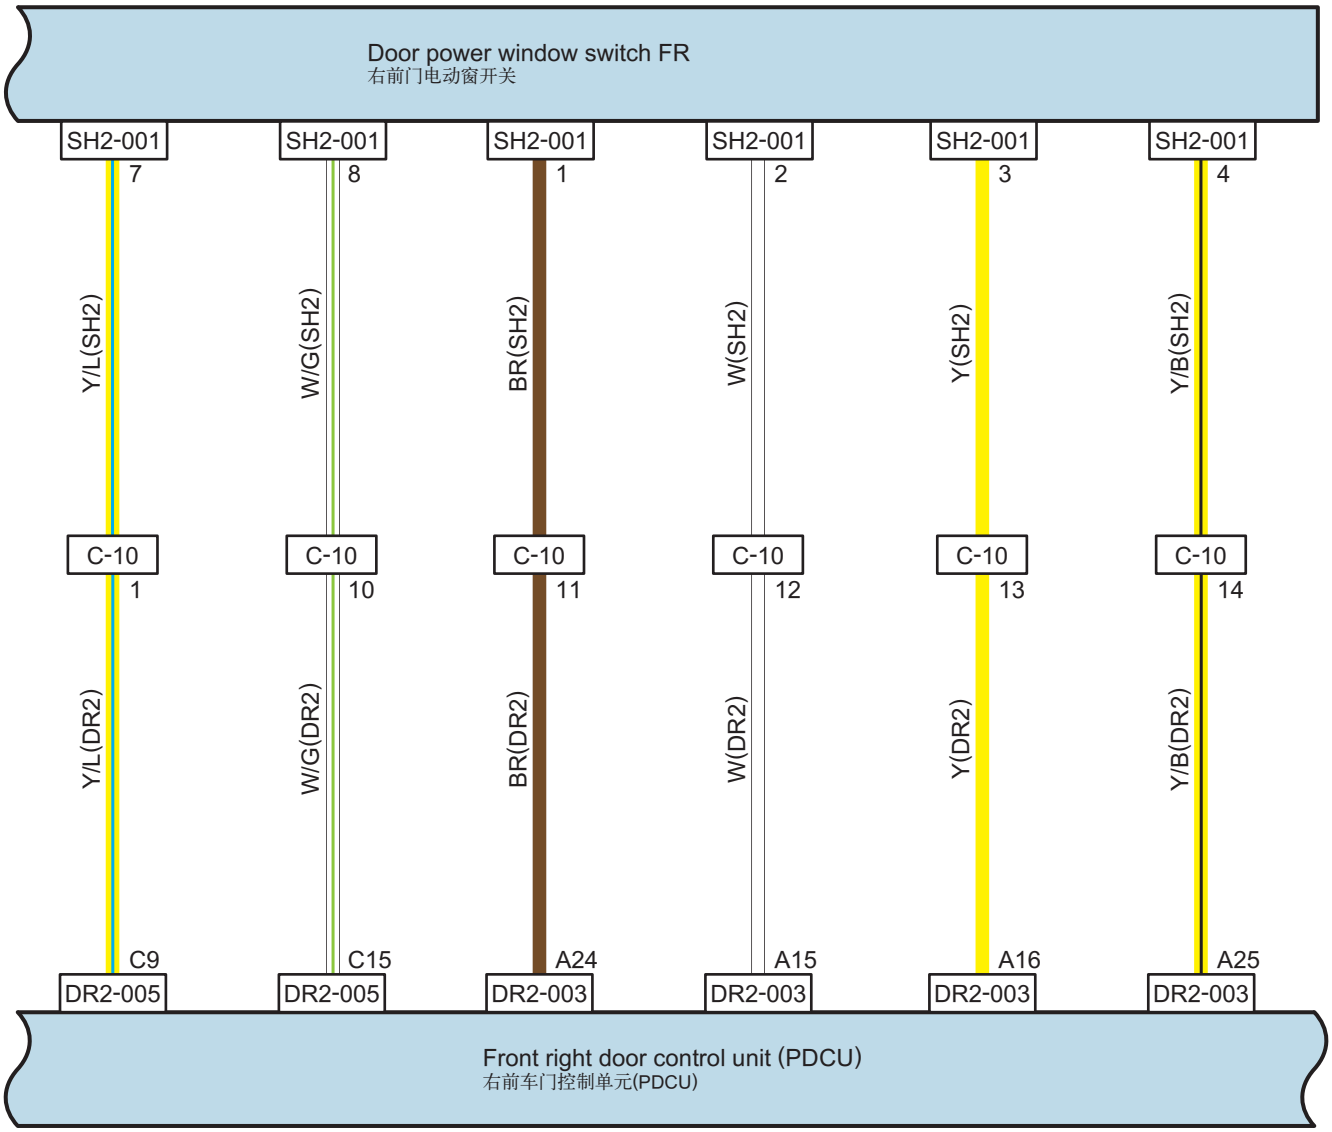

Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B16
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
G(B)
C-32
16
C-32
15
C-32
10
V/B(DR1)
V/W(DR1)
G(DR1)
C14
C26
C18
DR1-003
DR1-003
DR1-003
Front left door control unit (DDCU)
左前车门控制单元(DDCU)

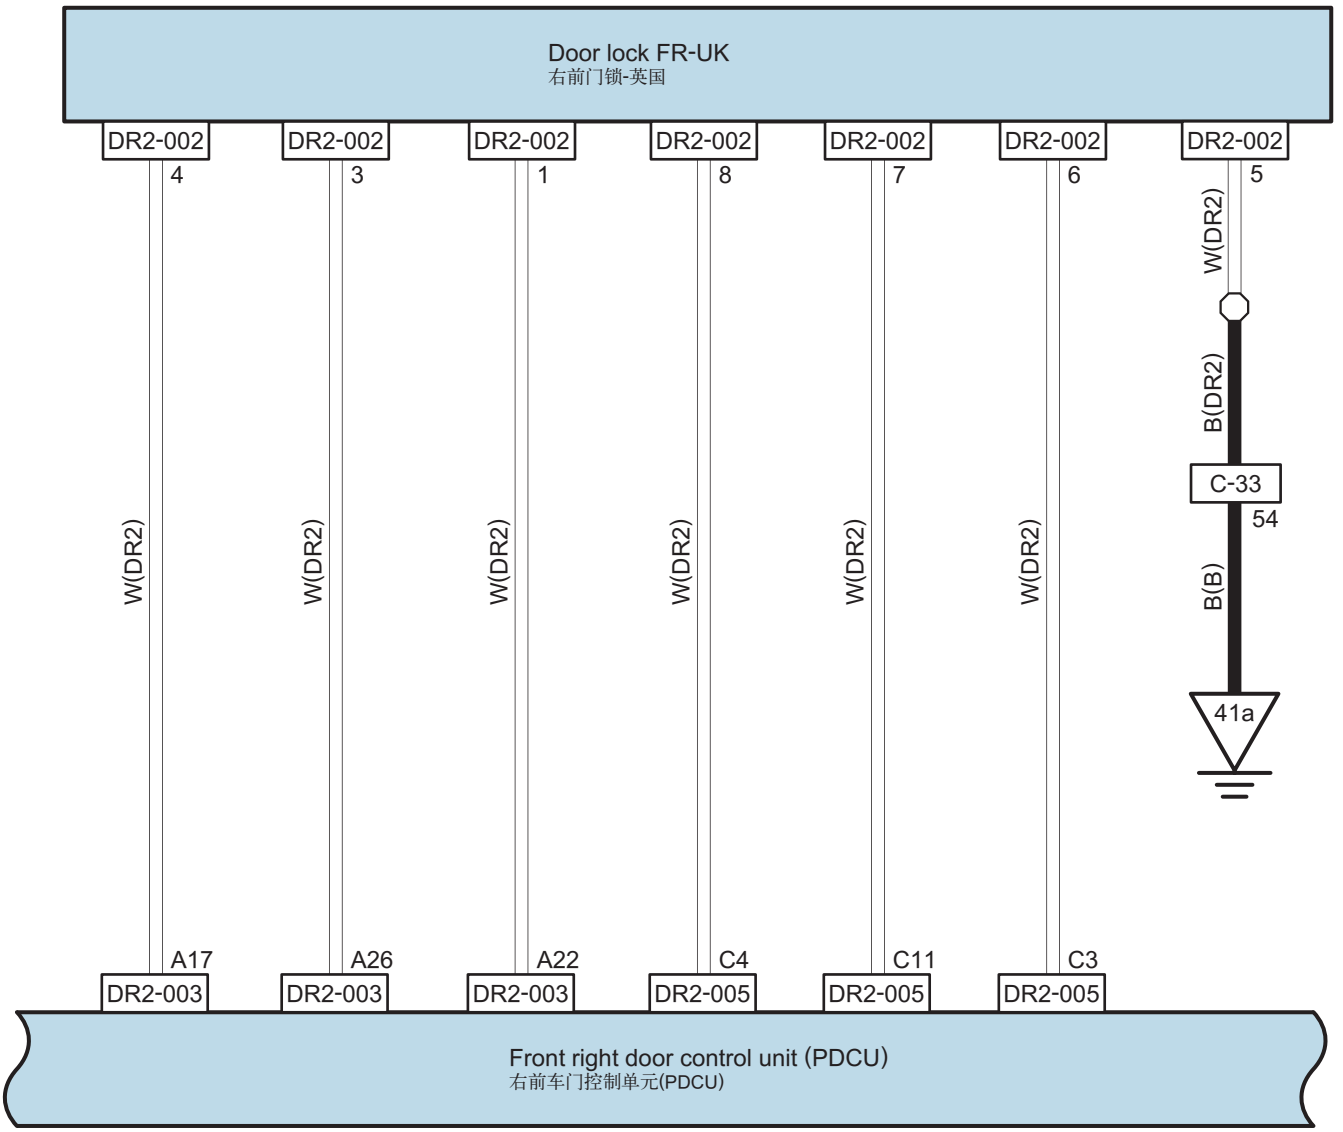

Battery fuse box
蓄电池配电盒
AF01 200A
PN01
B+
Rear transfer distribution box
后中转配电盒
F04 5A
PN02
D1
R
R(B)
C-33
12
Outside rear view mirror RH
右侧外后视镜
DR2-007
17
DR2-007
16
R(DR2)
B(DR2)
C-33
54
B(B)
41a
Front right door control unit (PDCU)
右前车门控制单元(PDCU)
DR2-003
A2
B(DR2)
C-33
54
B(B)
41a

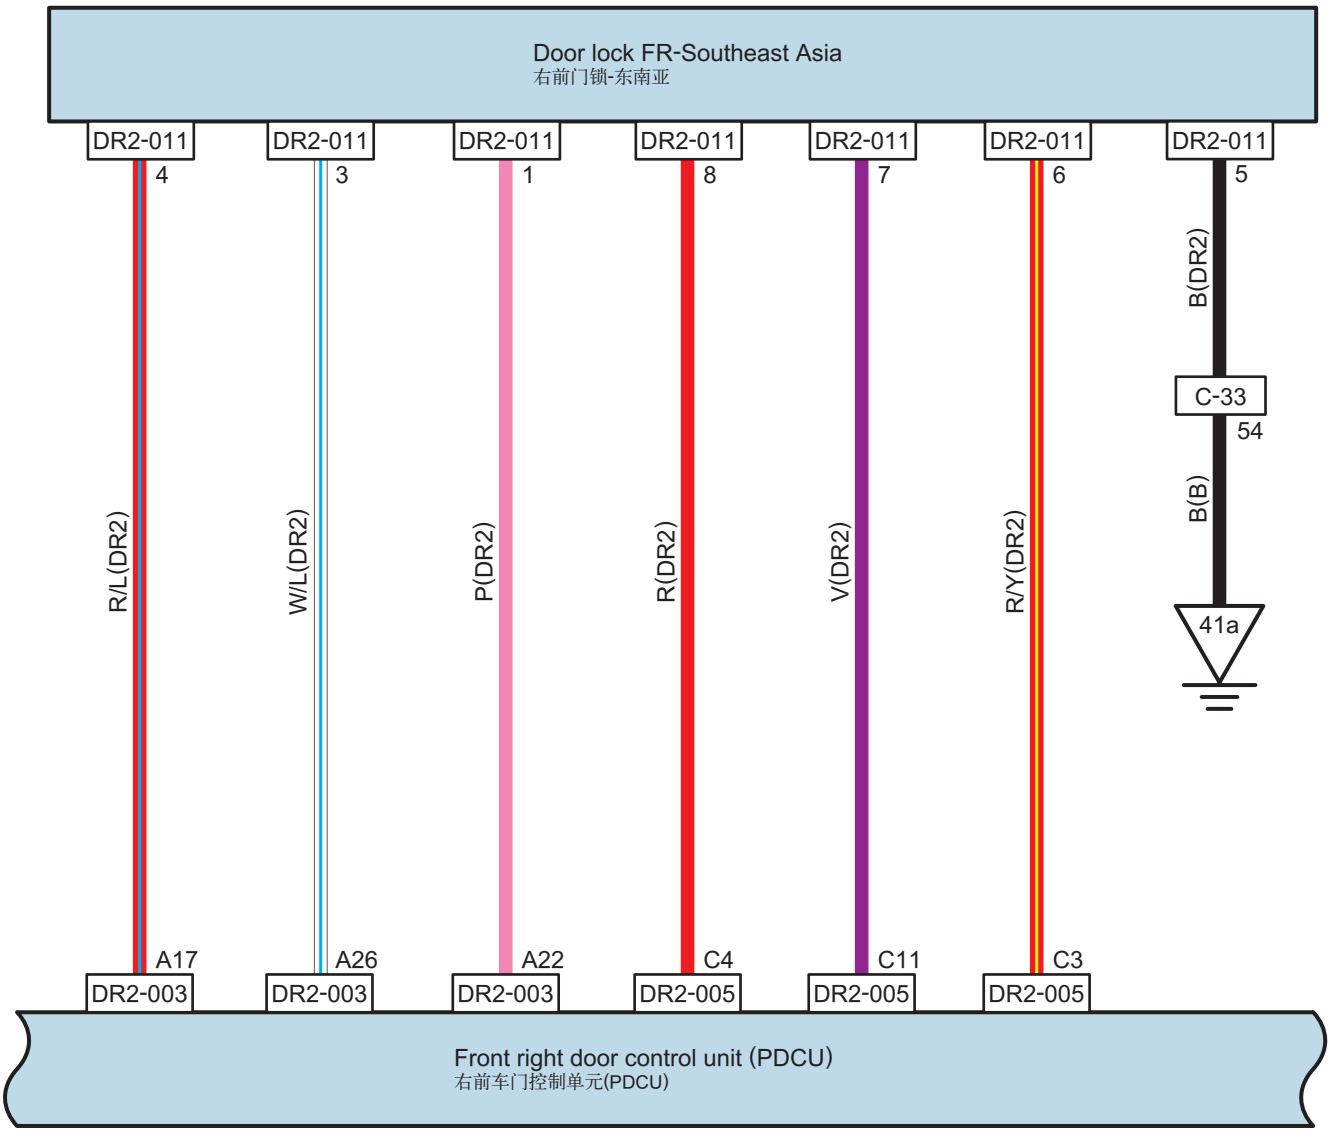

Outside rear view mirror RH
右侧外后视镜
DR2-007
14
DR2-007
15
DR2-007
24
DR2-007
10
DR2-007
4
P(DR2)
O/BR(DR2)
G/B(DR2)
B(DR2)
G/R(DR2)
C-33
11
C-33
10
P(B)
O/BR(B)
Digital key NFC_CAN
数字钥匙NFC_CAN
C30
A21
A18
DR2-005
DR2-003
DR2-003
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

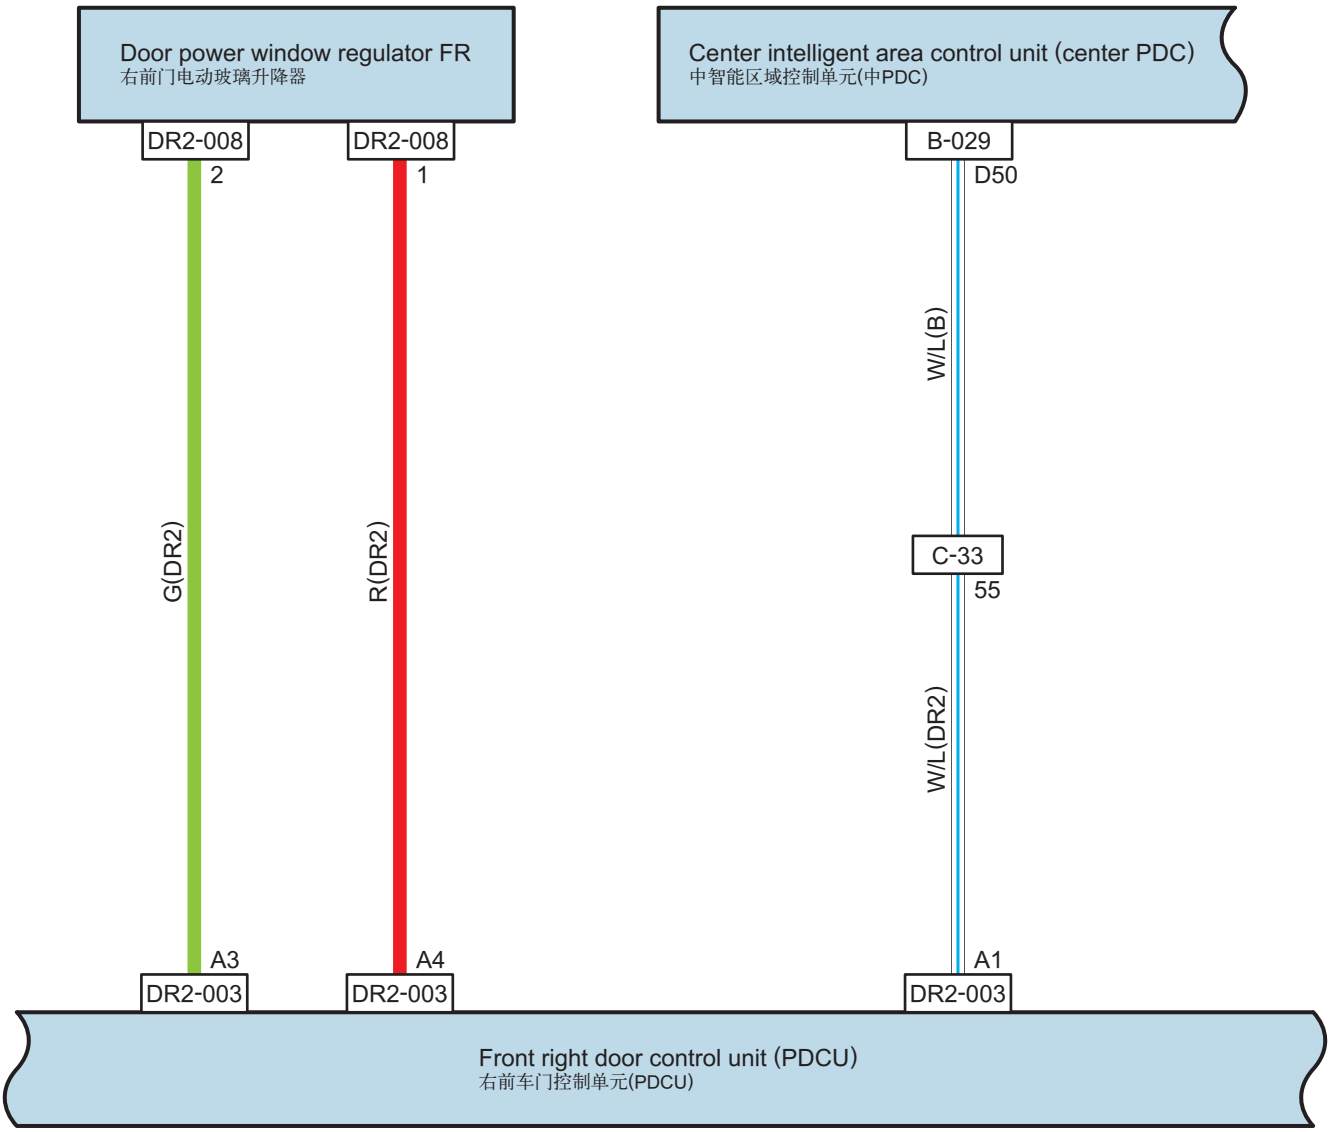

Outside rear view mirror RH
右侧外后视镜
DR2-007
8
DR2-007
3
DR2-007
22
DR2-007
1
DR2-007
6
DR2-007
23
GR(DR2)
GR(DR2)
GR(DR2)
Y(DR2)
R/G(DR2)
W/B(DR2)
BR(DR2)
A8
DR2-003
A7
DR2-003
C8
DR2-005
C21
DR2-005
C28
DR2-005
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

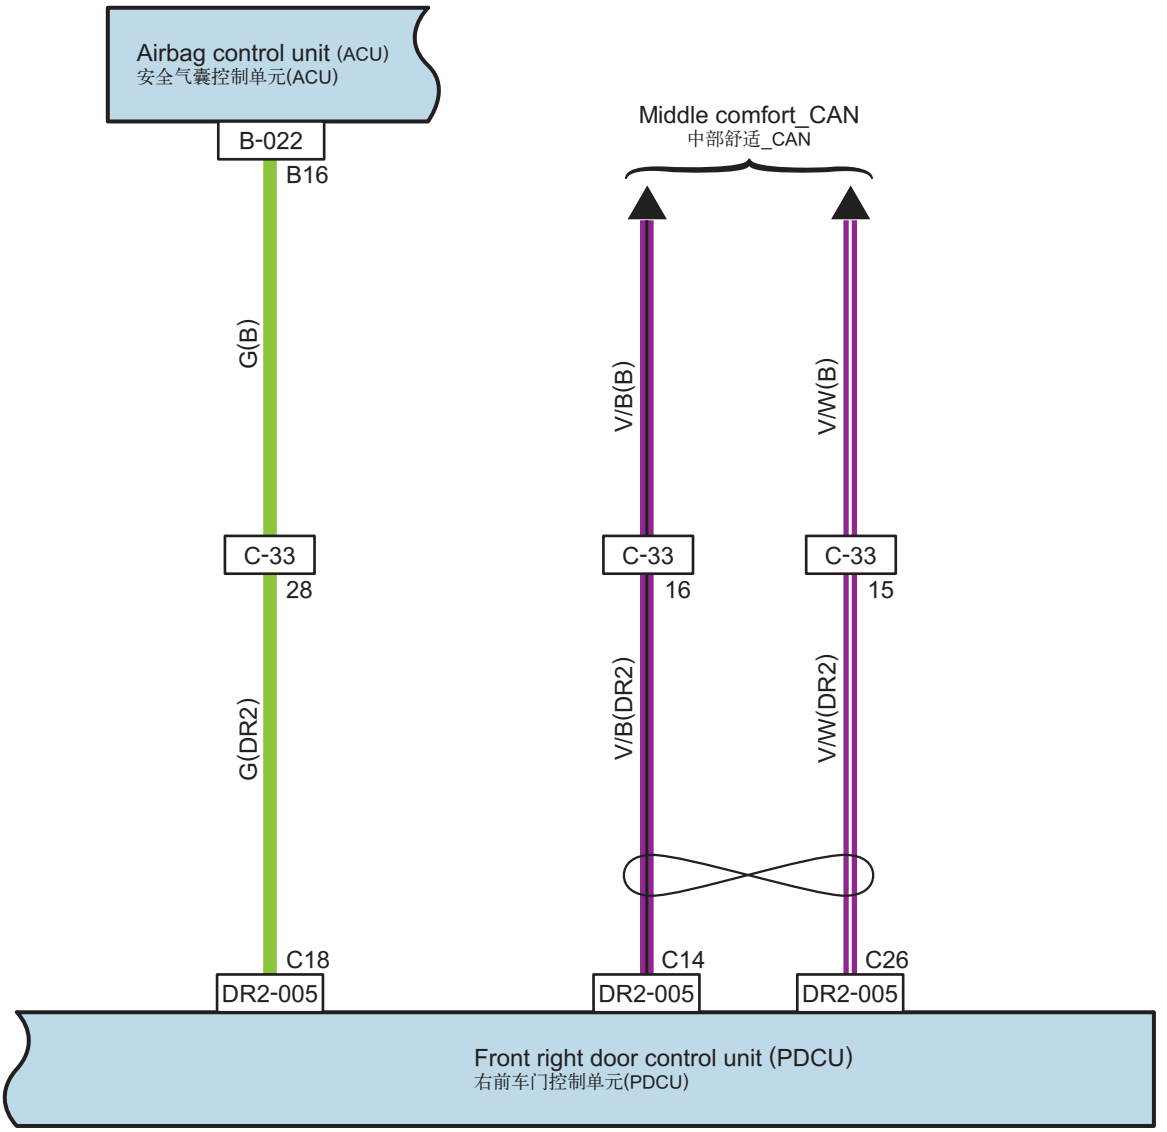

Outside rear view mirror RH
右侧外后视镜
Door power window switch FR
右前门电动窗开关
DR2-007
2
DR2-007
5
DR2-007
21
DR2-007
9
SH2-001
5
SH2-001
6
V(DR2)
W/R(DR2)
O(DR2)
L(DR2)
L(SH2)
C-10
2
L(DR2)
G(SH2)
C-10
7
L(DR2)
G(DR2)
C19
C20
C29
C27
C7
DR2-005
DR2-005
DR2-005
DR2-005
DR2-005
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

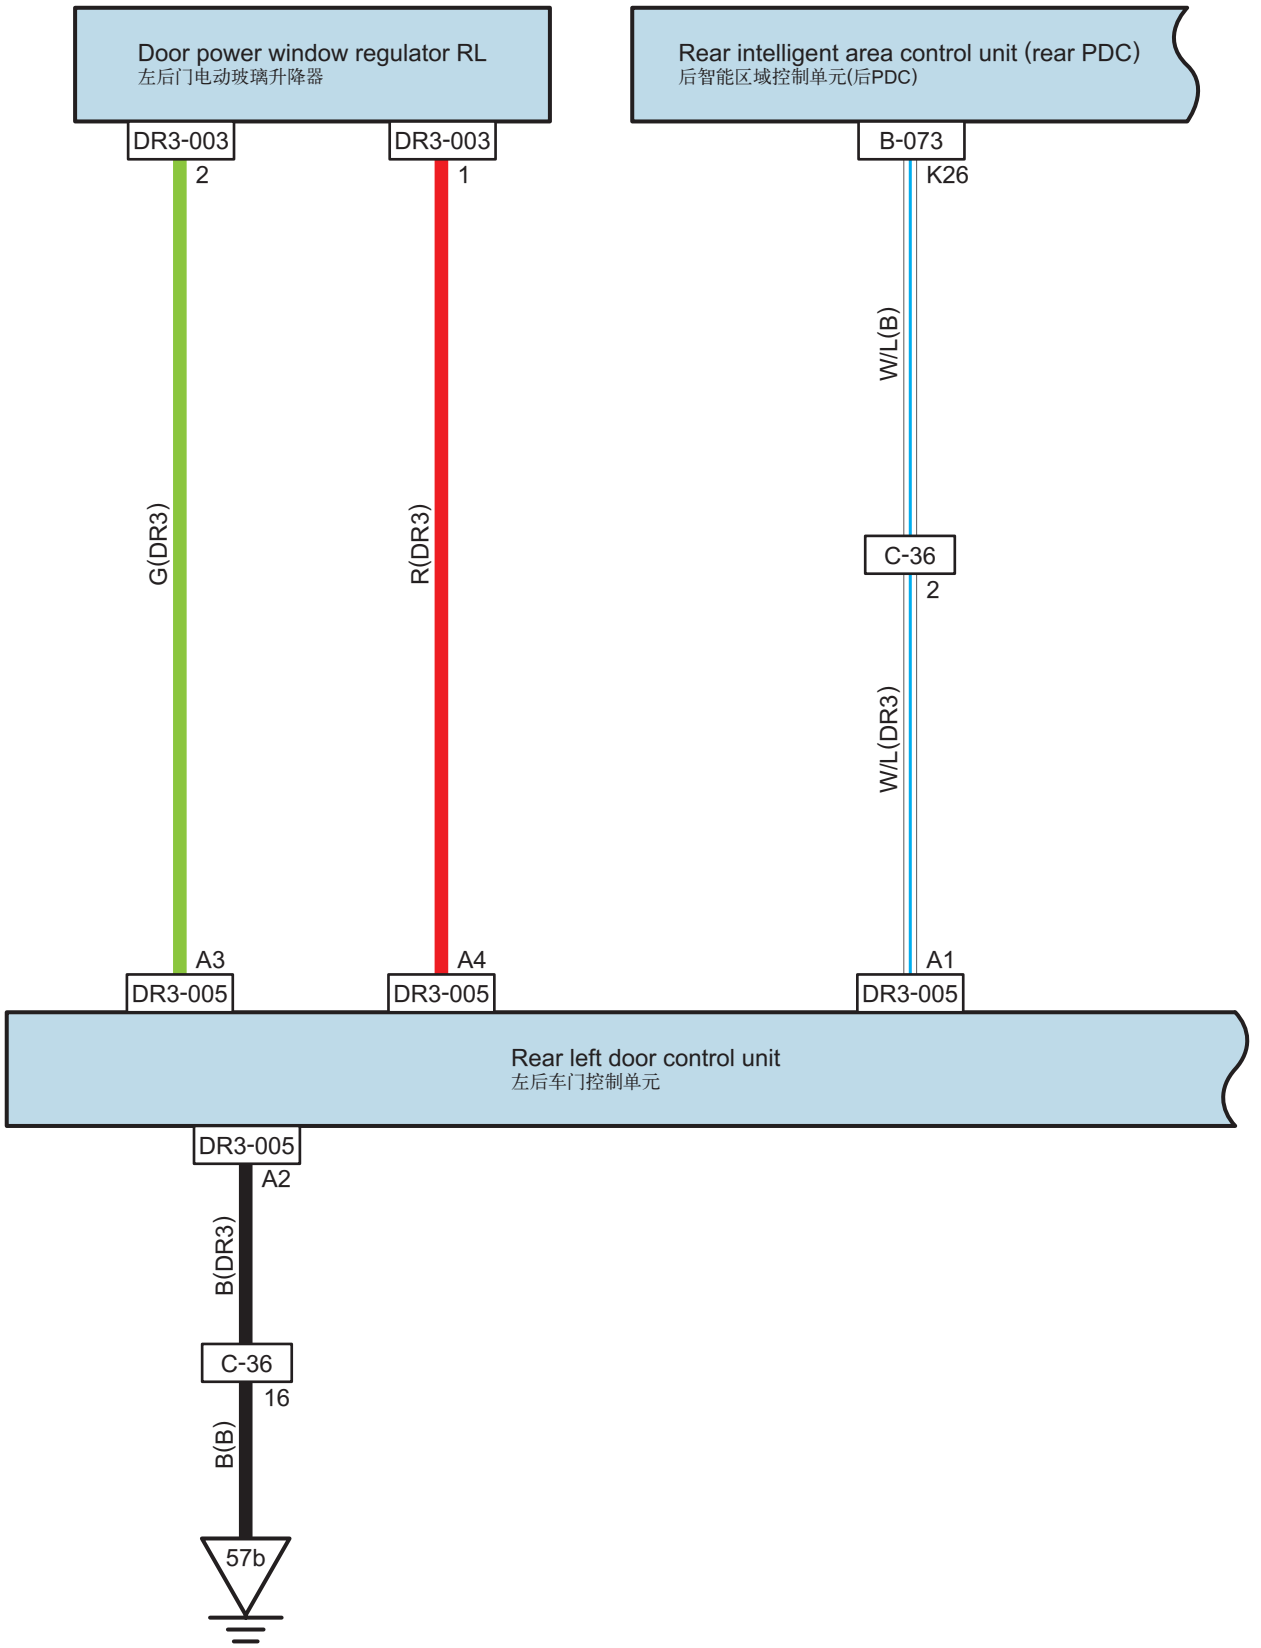

Door power window switch FR
右前门电动窗开关
SH2-001
7
Y/L(SH2)
C-10
1
Y/L(DR2)
C9
DR2-005
SH2-001
8
W/G(SH2)
C-10
10
W/G(DR2)
C15
DR2-005
SH2-001
1
BR(SH2)
C-10
11
BR(DR2)
A24
DR2-003
SH2-001
2
W(SH2)
C-10
12
W(DR2)
A15
DR2-003
SH2-001
3
Y(SH2)
C-10
13
Y(DR2)
A16
DR2-003
SH2-001
4
Y/B(SH2)
C-10
14
Y/B(DR2)
A25
DR2-003
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

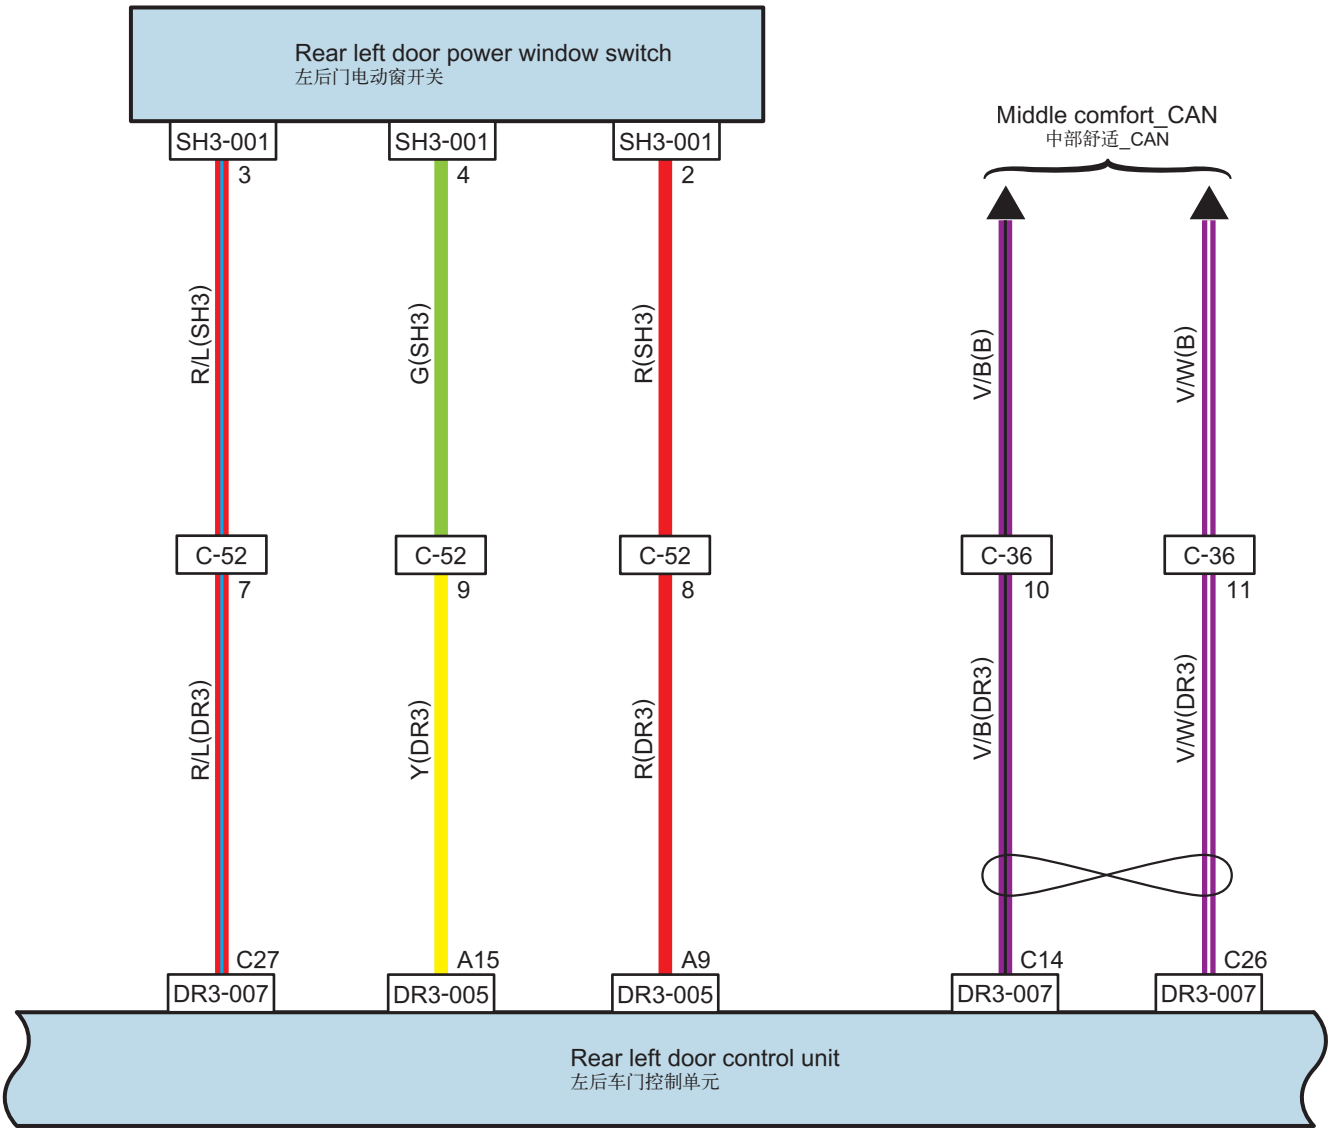

Door lock FR-UK
右前门锁-英国
DR2-002
4
3
1
8
7
6
5
W(DR2)
B(DR2)
C-33
54
B(B)
41a
A17
A26
A22
C4
C11
C3
DR2-003
DR2-005
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

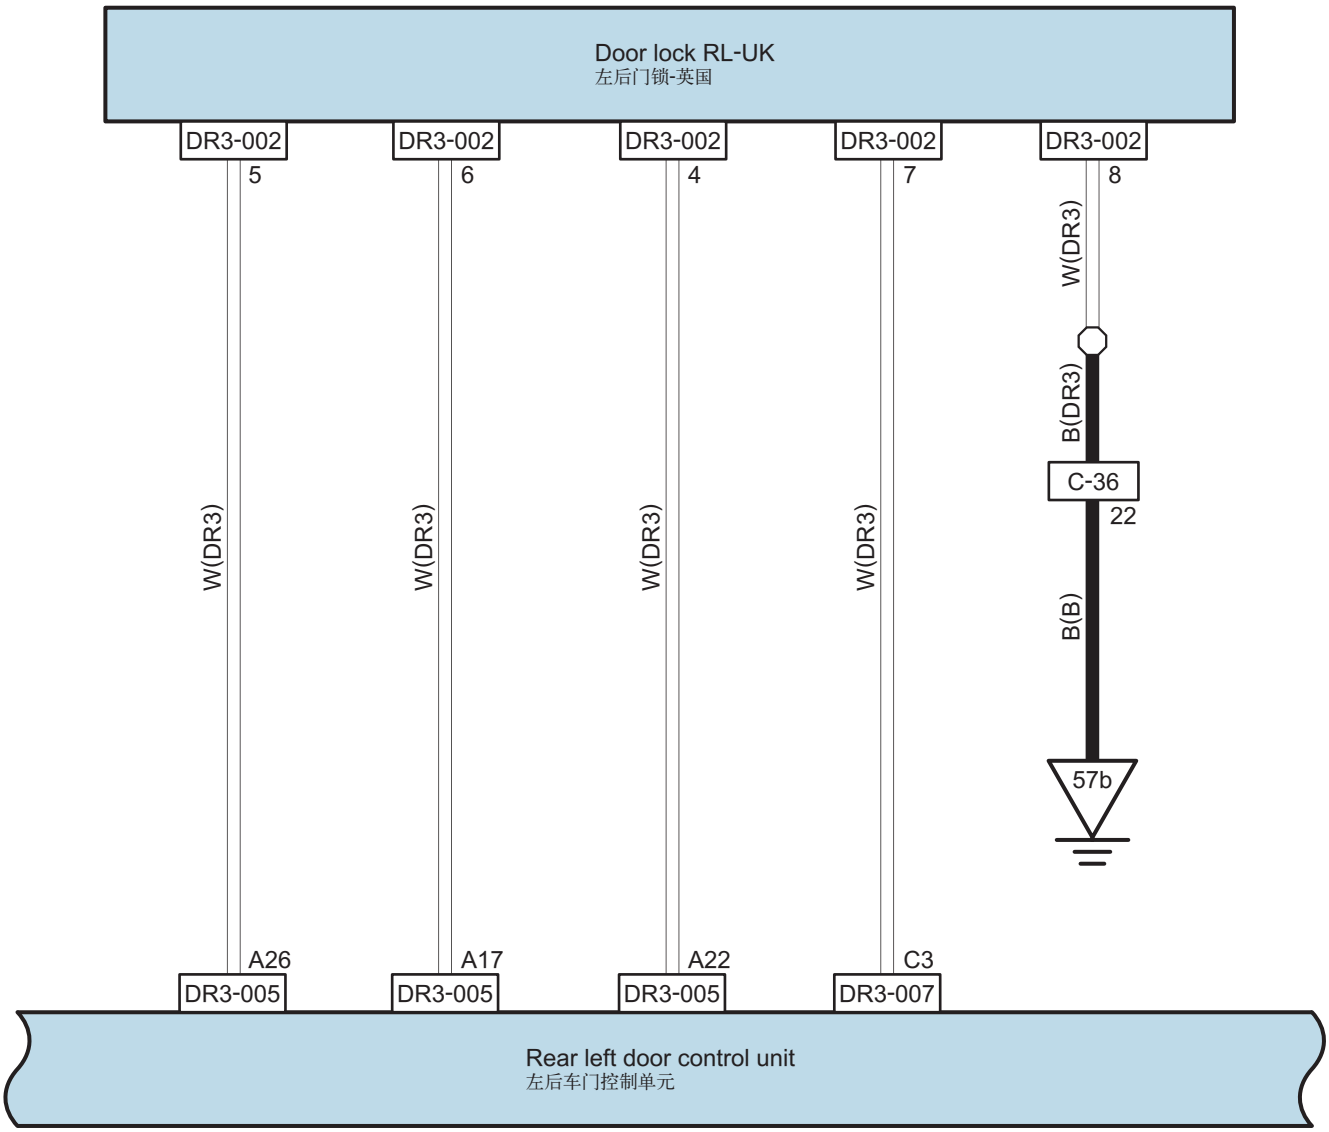

Door lock FR-Southeast Asia
右前门锁-东南亚
DR2-011
4
3
1
8
7
6
5
R/L(DR2)
W/L(DR2)
P(DR2)
R(DR2)
V(DR2)
R/Y(DR2)
B(DR2)
C-33
54
B(B)
41a
A17
A26
A22
C4
C11
C3
DR2-003
DR2-003
DR2-003
DR2-005
DR2-005
DR2-005
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

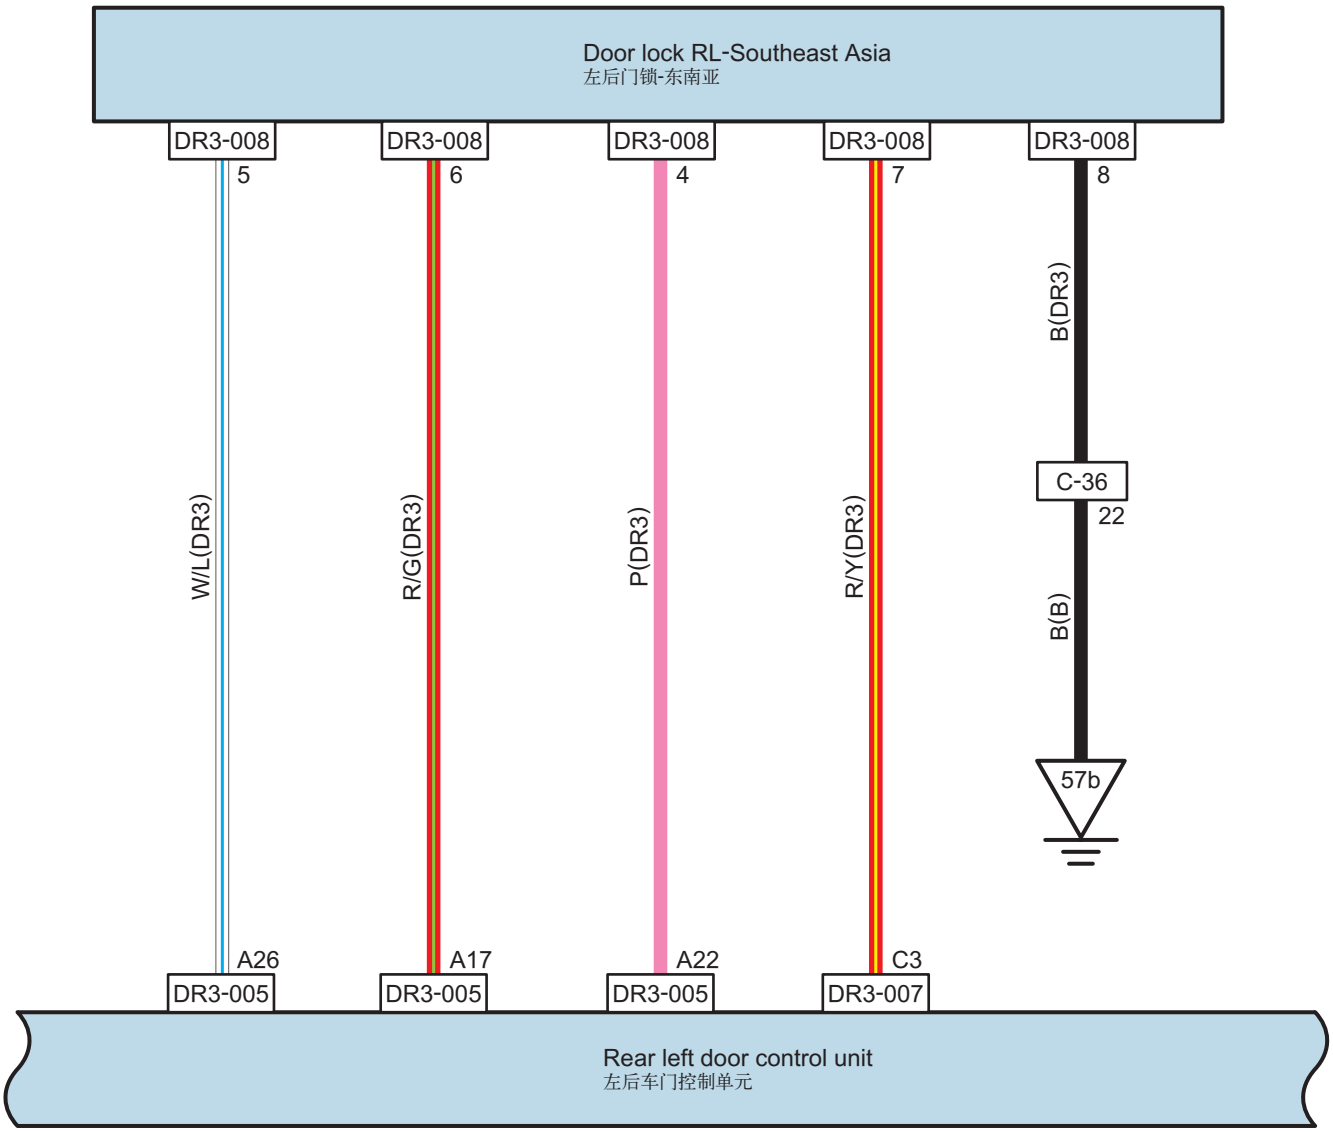

Door power window regulator FR
右前门电动玻璃升降器
DR2-008
2
DR2-008
1
G(DR2)
R(DR2)
A3
DR2-003
A4
DR2-003
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-029
D50
W/L(B)
C-33
55
W/L(DR2)
A1
DR2-003
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

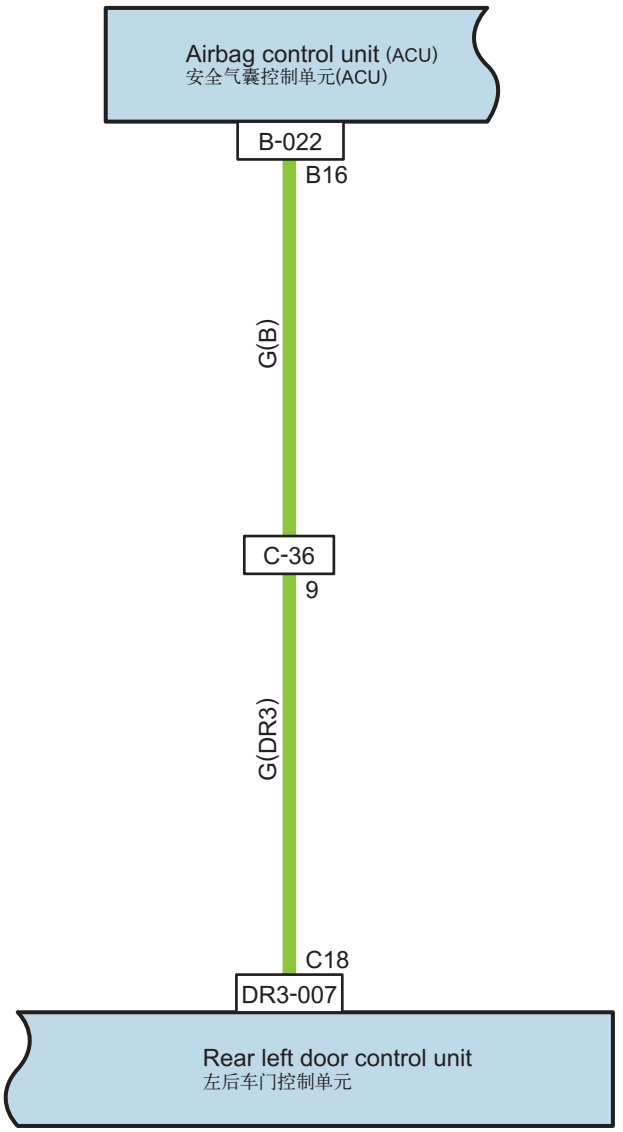

Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B16
G(B)
C-33
28
G(DR2)
C18
DR2-005
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
C-33
16
C-33
15
V/B(DR2)
V/W(DR2)
C14
DR2-005
C26
DR2-005
Front right door control unit (PDCU)
右前车门控制单元(PDCU)

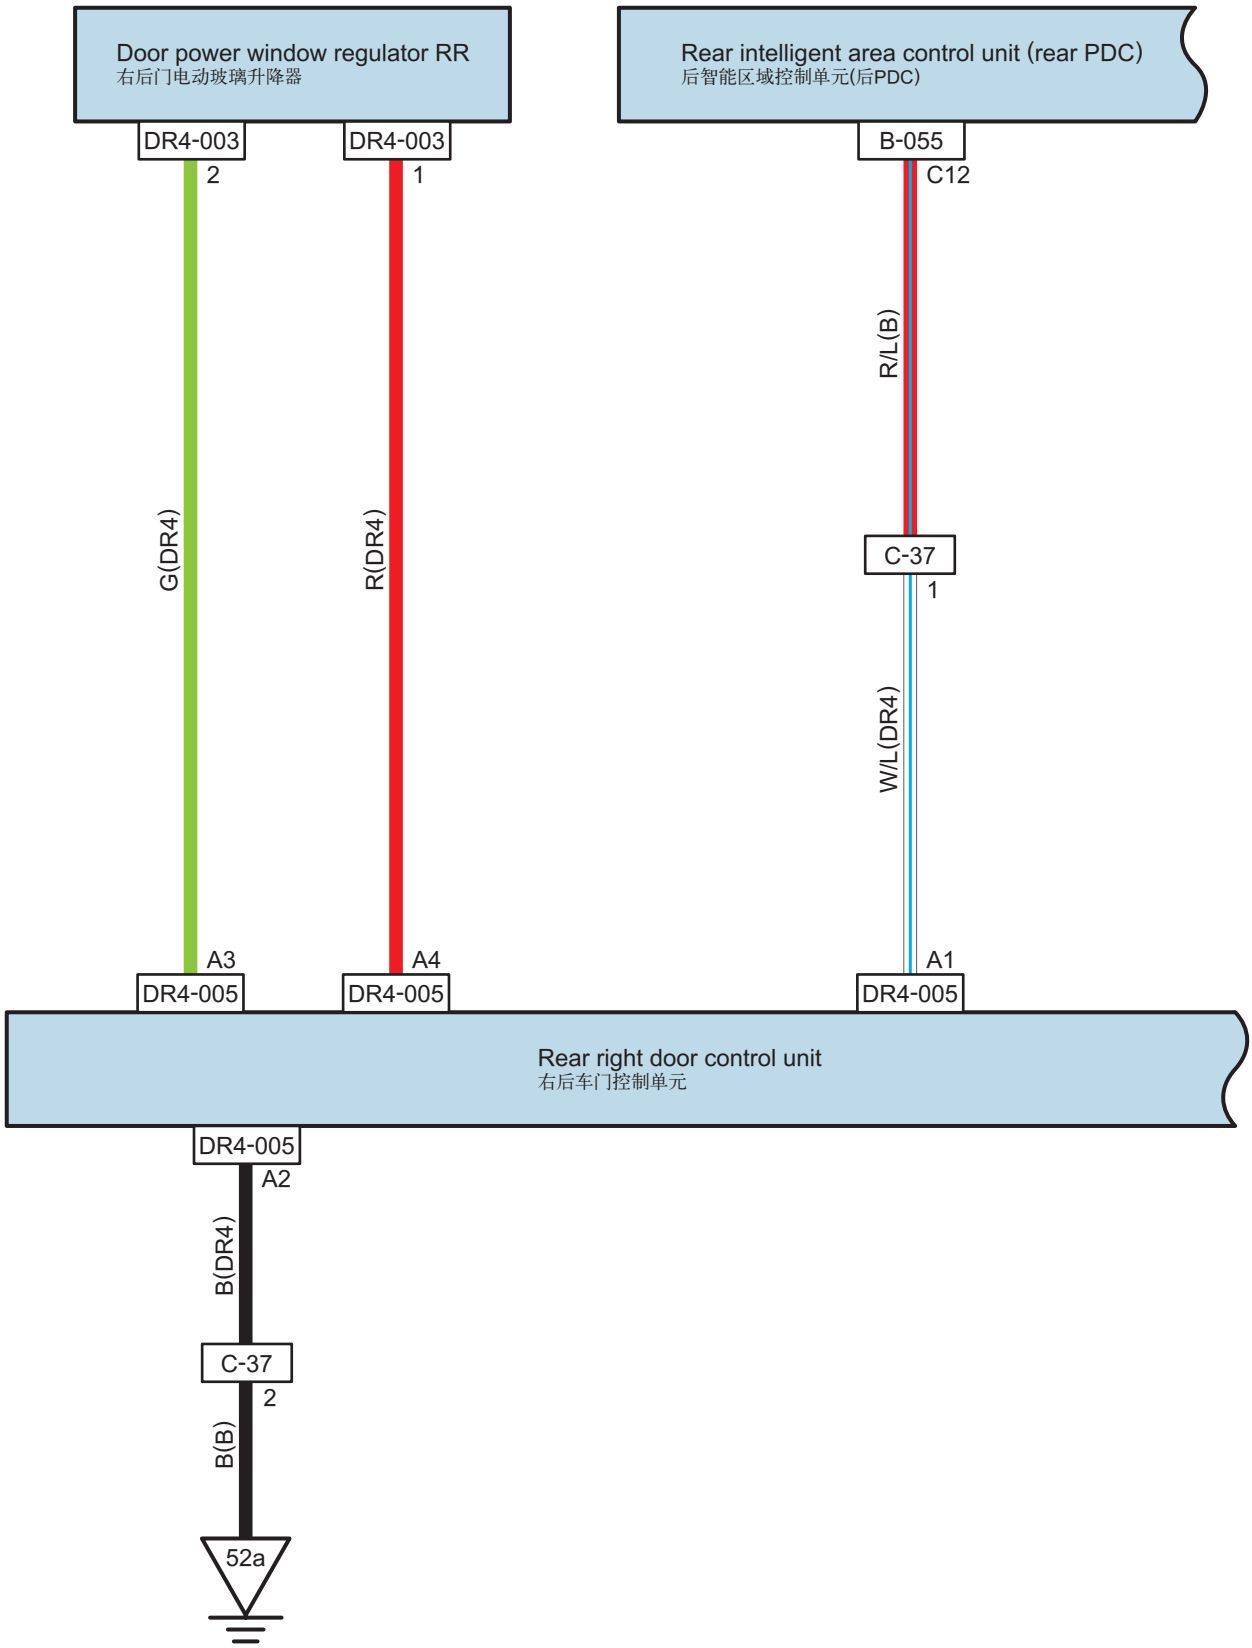

Door power window regulator RL
左后门电动玻璃升降器
DR3-003
2
DR3-003
1
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-073
K26
W/L(B)
G(DR3)
R(DR3)
C-36
2
W/L(DR3)
A3
A4
A1
DR3-005
DR3-005
DR3-005
Rear left door control unit
左后车门控制单元
DR3-005
A2
B(DR3)
C-36
16
B(B)
57b

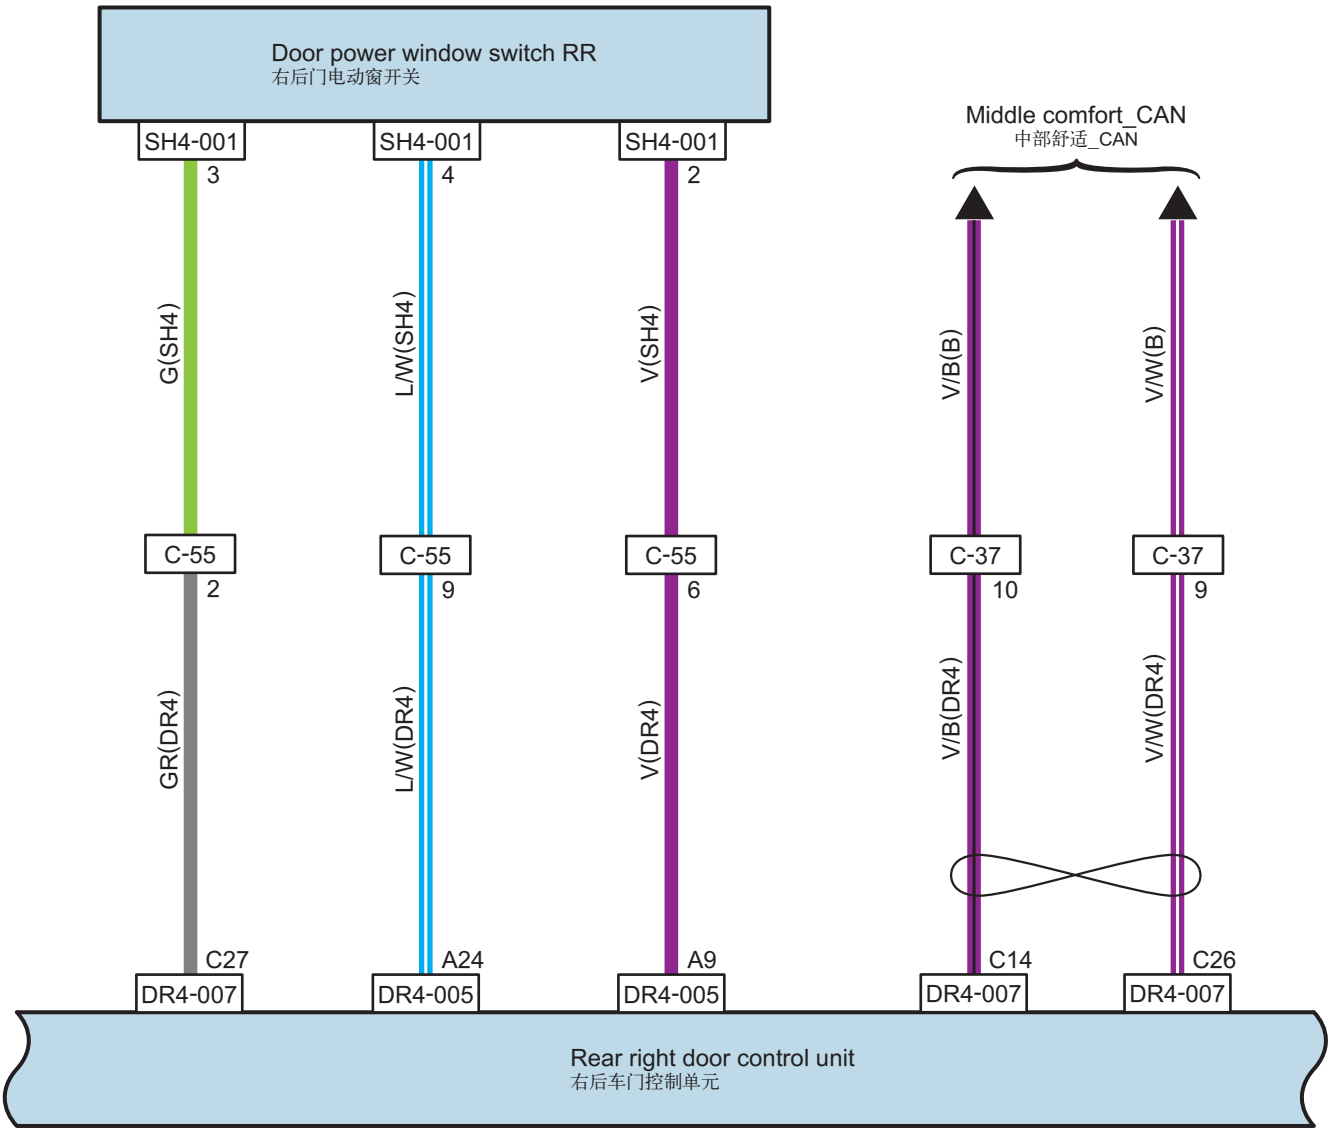

Rear left door power window switch
左后门电动窗开关
SH3-001
3
SH3-001
4
SH3-001
2
R/L(SH3)
G(SH3)
R(SH3)
C-52
7
C-52
9
C-52
8
R/L(DR3)
Y(DR3)
R(DR3)
C27
A15
A9
DR3-007
DR3-005
DR3-005
Middle comfort_CAN
中部舒适_CAN
V/B(B)
V/W(B)
C-36
10
C-36
11
V/B(DR3)
V/W(DR3)
C14
C26
DR3-007
DR3-007
Rear left door control unit
左后车门控制单元

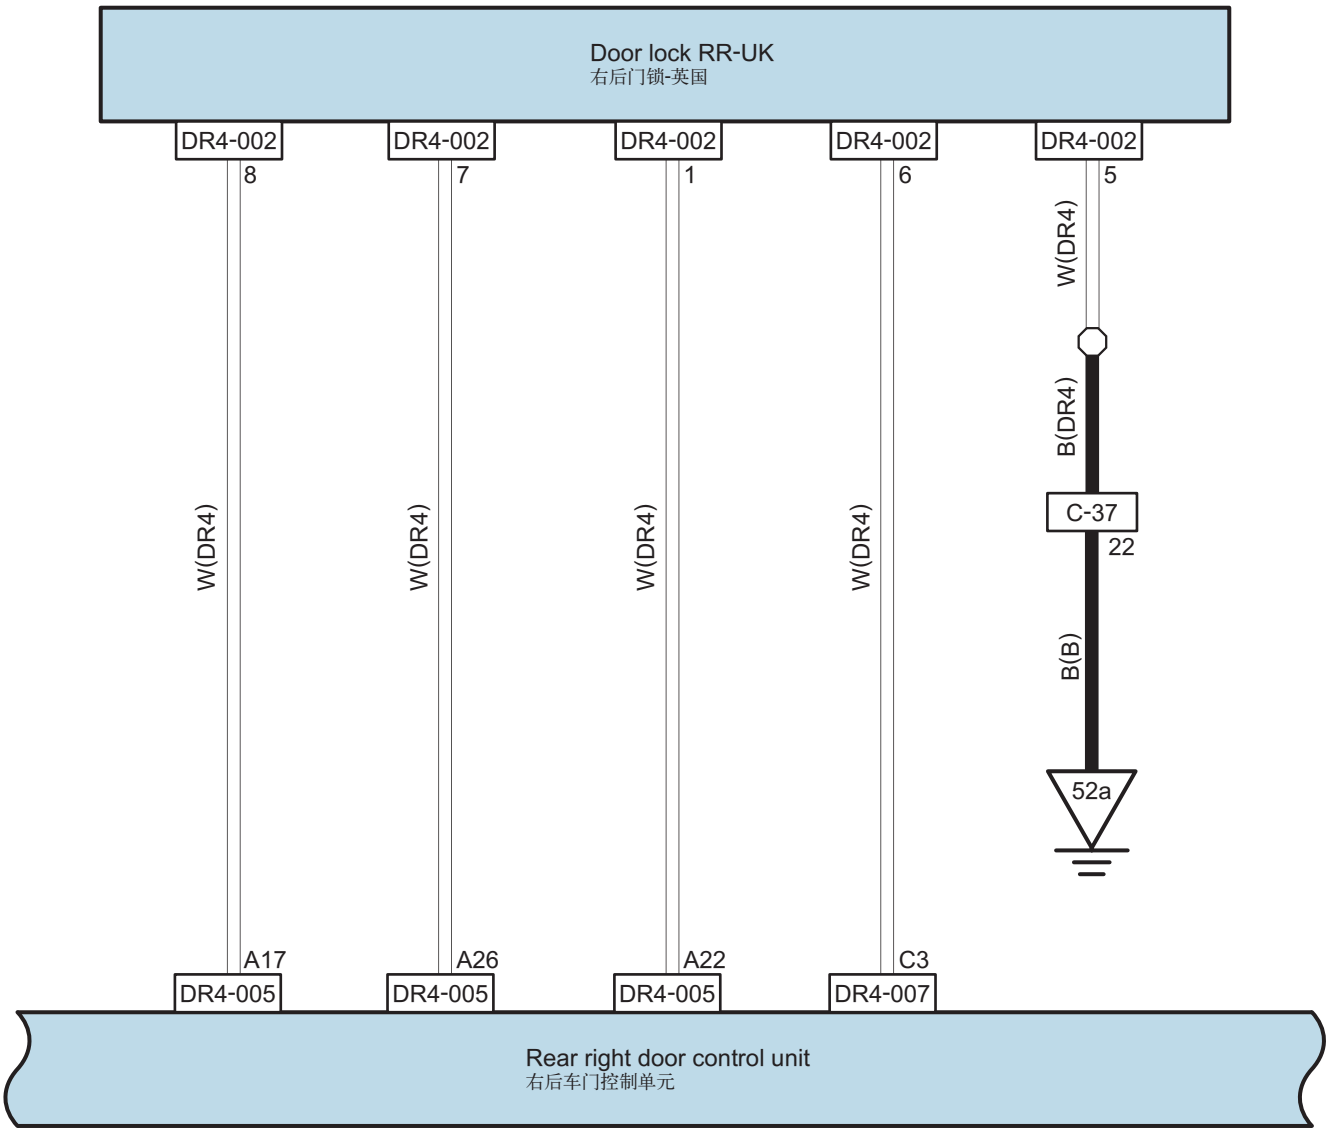

Door lock RL-UK
左后门锁-英国
DR3-002
5
DR3-002
6
DR3-002
4
DR3-002
7
DR3-002
8
W(DR3)
B(DR3)
C-36
22
B(B)
57b
W(DR3)
W(DR3)
W(DR3)
W(DR3)
A26
A17
A22
C3
DR3-005
DR3-005
DR3-005
DR3-007
Rear left door control unit
左后车门控制单元

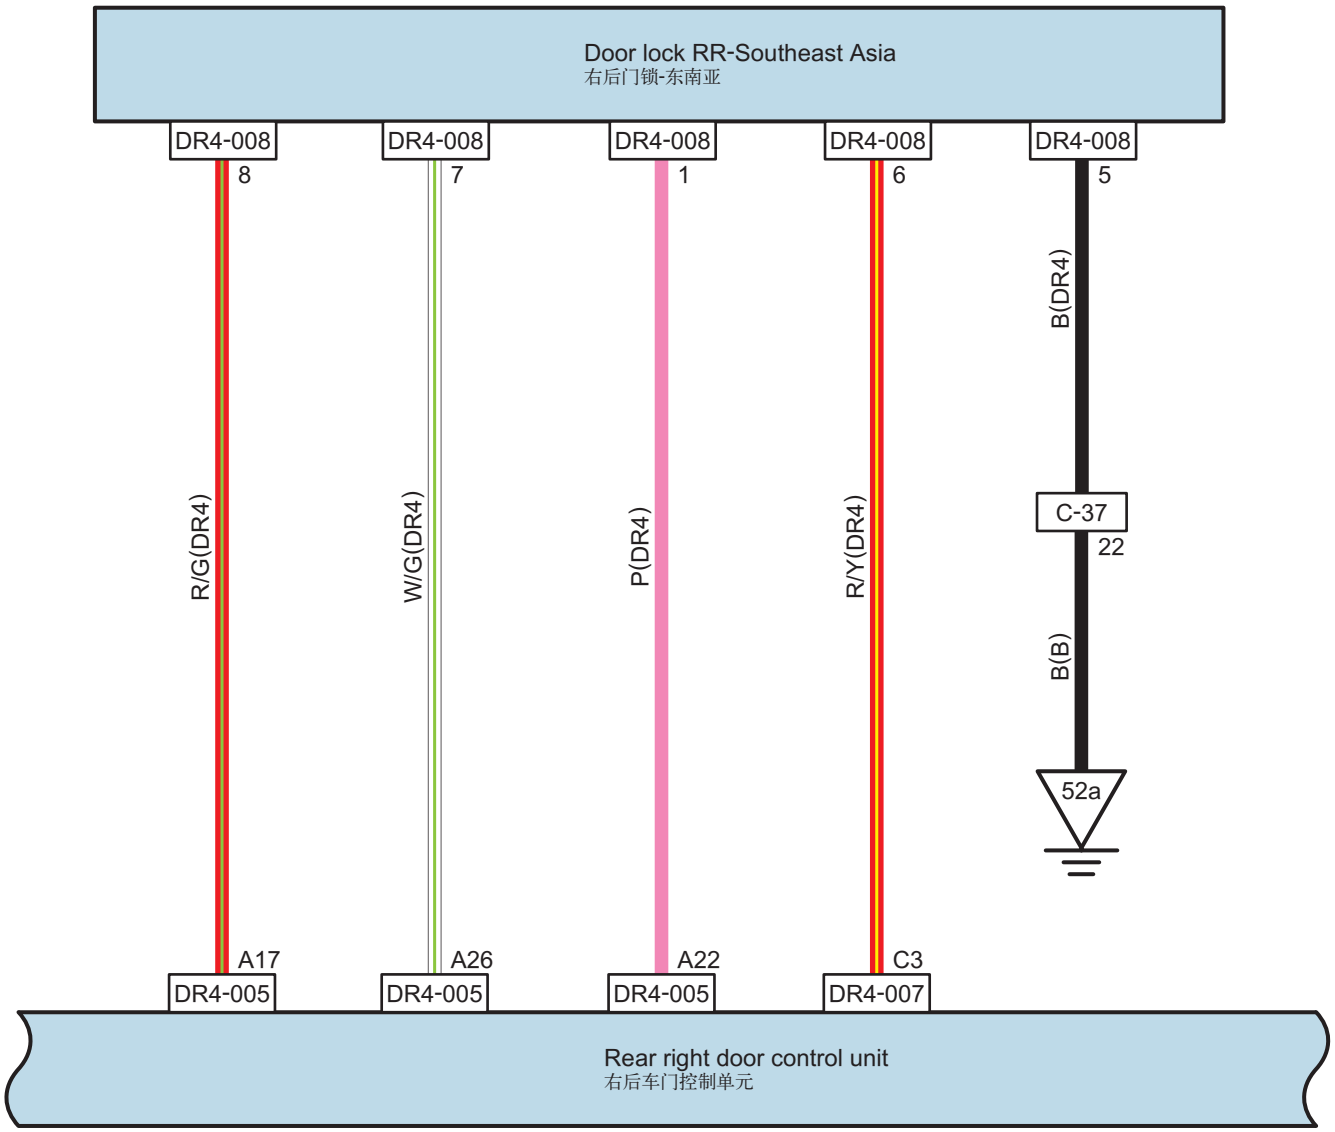

Door lock RL-Southeast Asia
左后门锁-东南亚
DR3-008
5
DR3-008
6
DR3-008
4
DR3-008
7
DR3-008
8
W/L(DR3)
R/G(DR3)
P(DR3)
R/Y(DR3)
B(DR3)
C-36
22
B(B)
57b
A26
A17
A22
C3
DR3-005
DR3-005
DR3-005
DR3-007
Rear left door control unit
左后车门控制单元

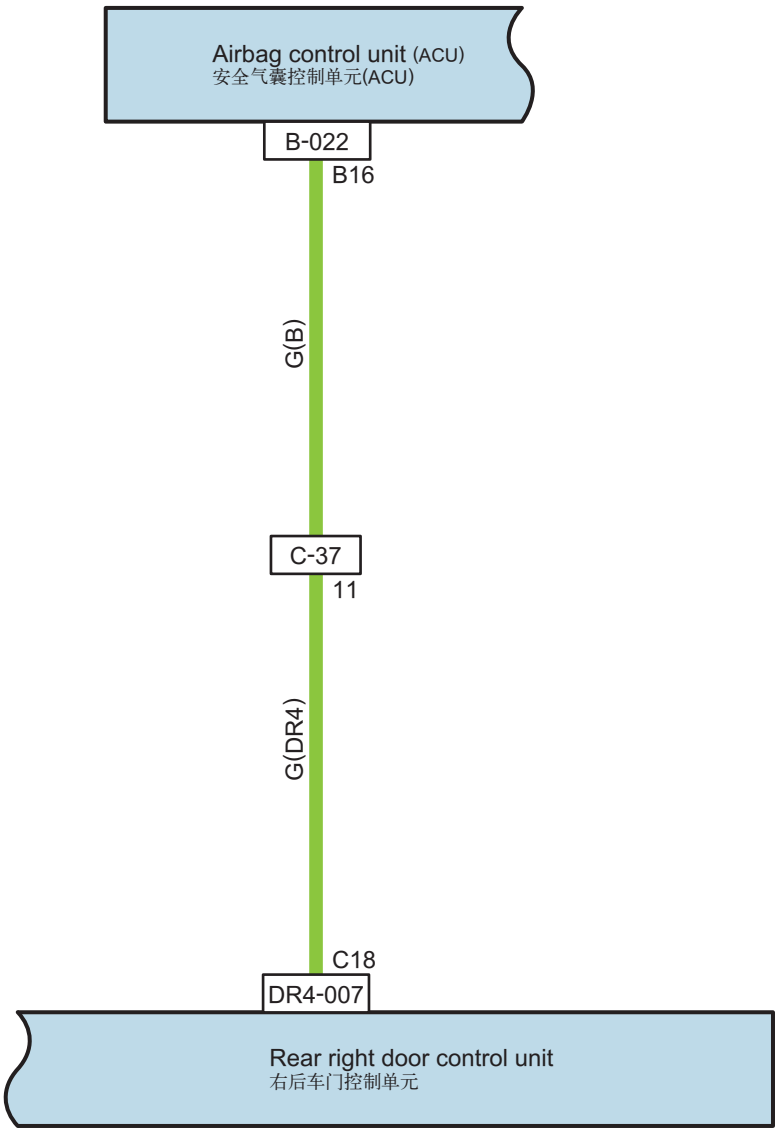

Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B16
G(B)
C-36
9
G(DR3)
C18
DR3-007
Rear left door control unit
左后车门控制单元

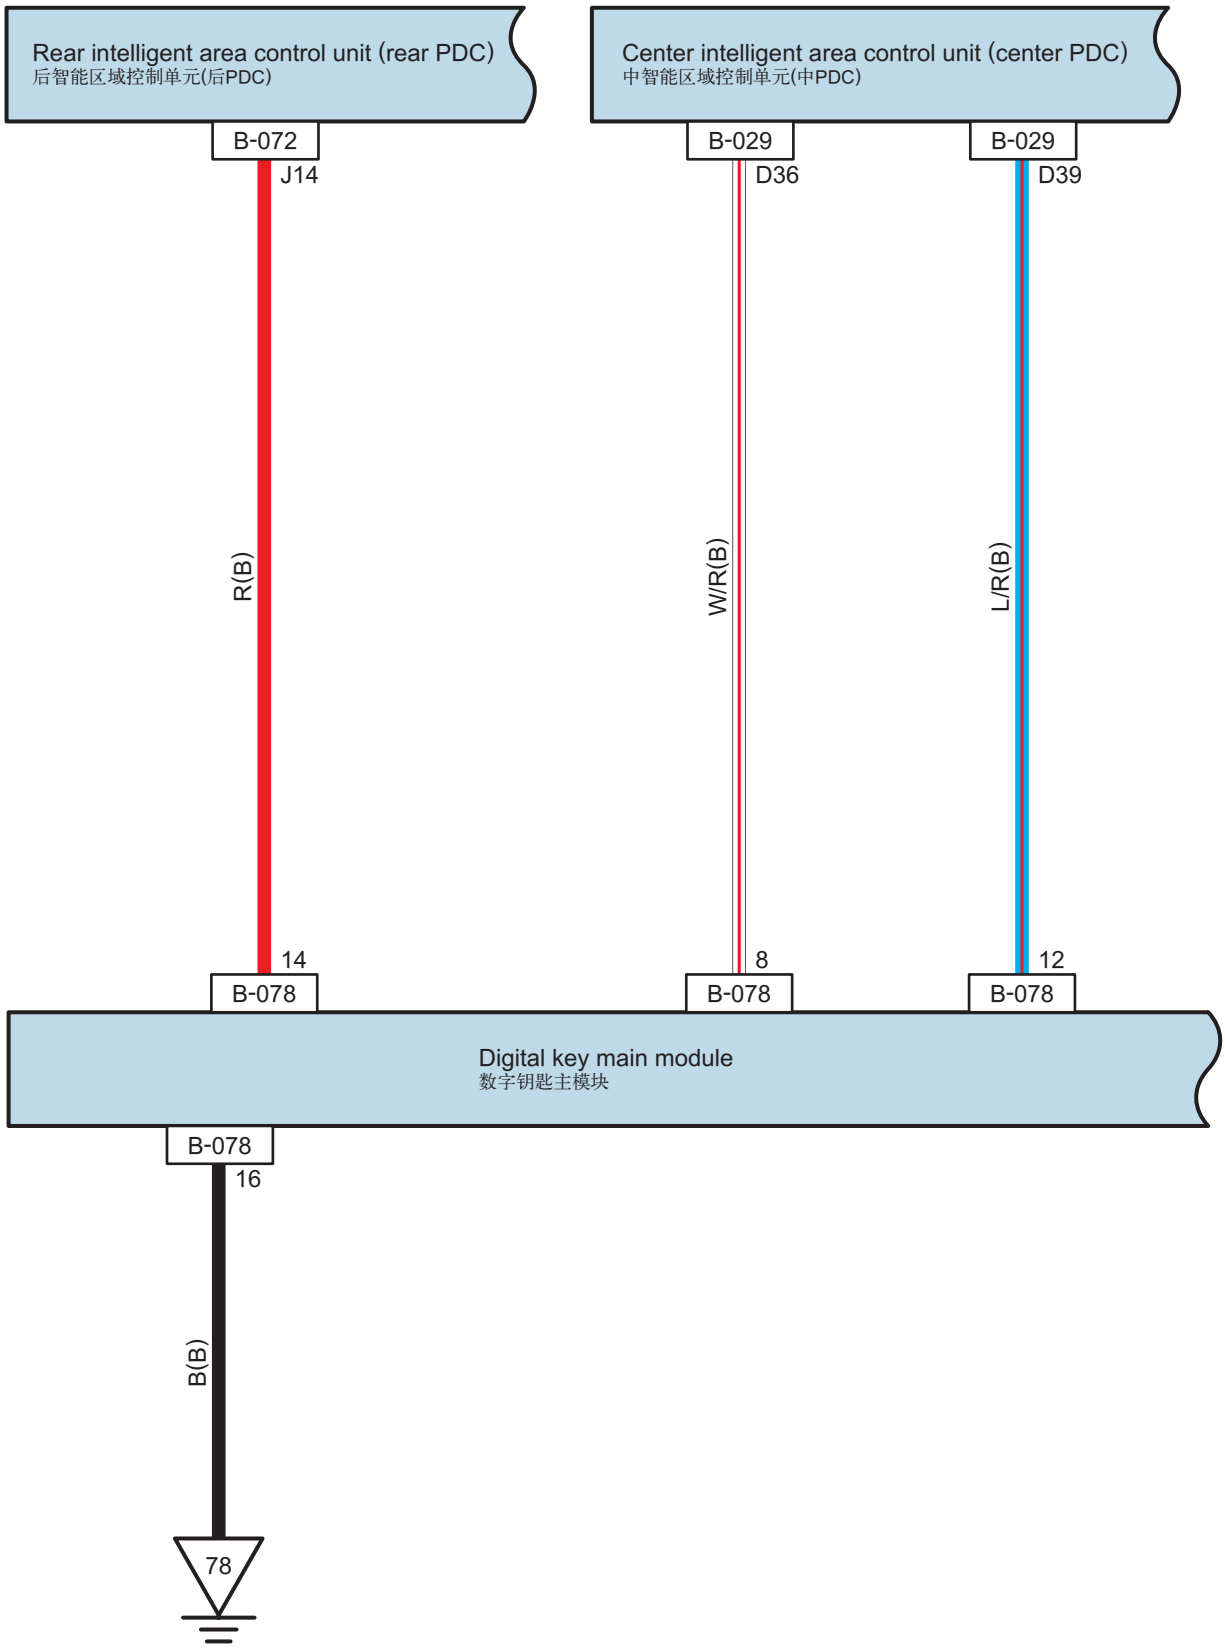

Door power window regulator RR
右后门电动玻璃升降器
DR4-003
2
DR4-003
1
G(DR4)
R(DR4)
A3
DR4-005
A4
DR4-005
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-055
C12
R/L(B)
C-37
1
W/L(DR4)
A1
DR4-005
Rear right door control unit
右后车门控制单元
DR4-005
A2
B(DR4)
C-37
2
B(B)
52a

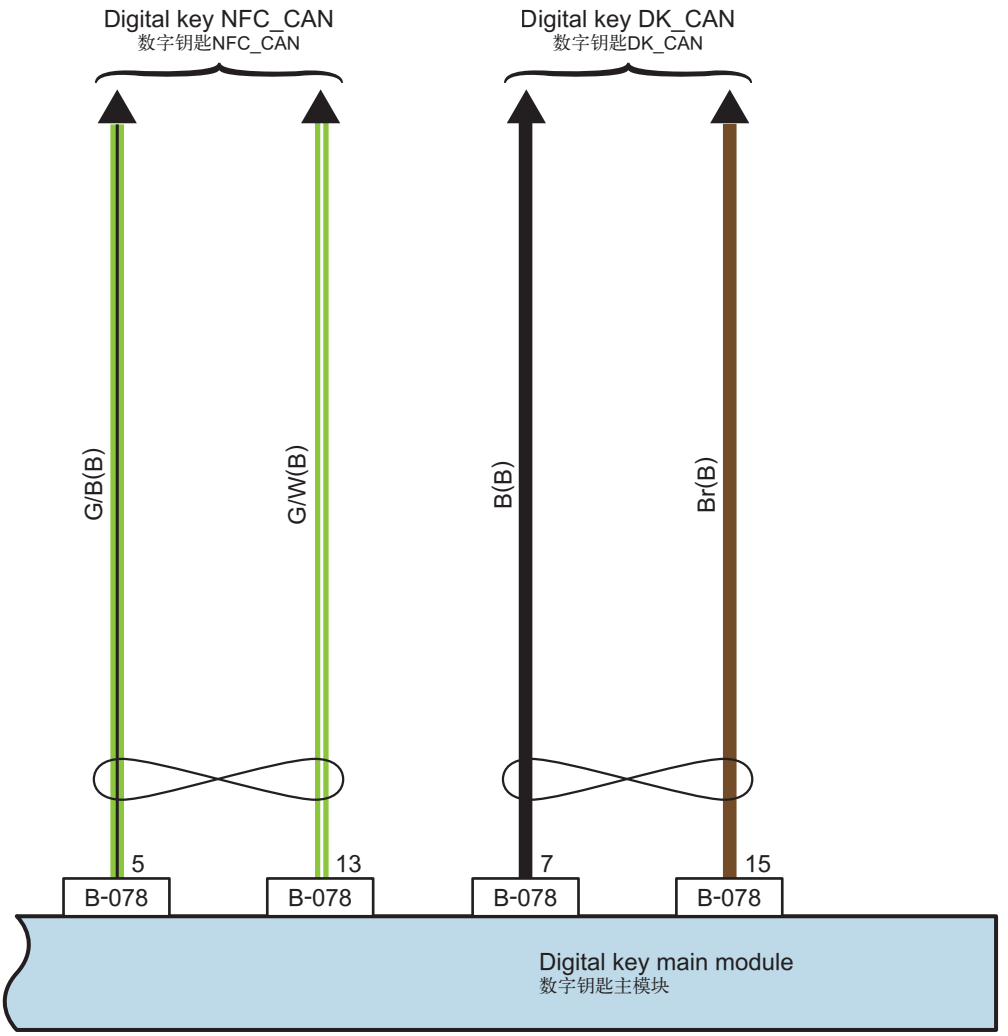

Door power window switch RR
右后门电动窗开关
SH4-001
3
SH4-001
4
SH4-001
2
Middle comfort_CAN
中部舒适_CAN
G(SH4)
L/W(SH4)
V(SH4)
V/B(B)
V/W(B)
C-55
2
C-55
9
C-55
6
C-37
10
C-37
9
GR(DR4)
L/W(DR4)
V(DR4)
V/B(DR4)
V/W(DR4)
C27
DR4-007
A24
DR4-005
A9
DR4-005
C14
DR4-007
C26
DR4-007
Rear right door control unit
右后车门控制单元

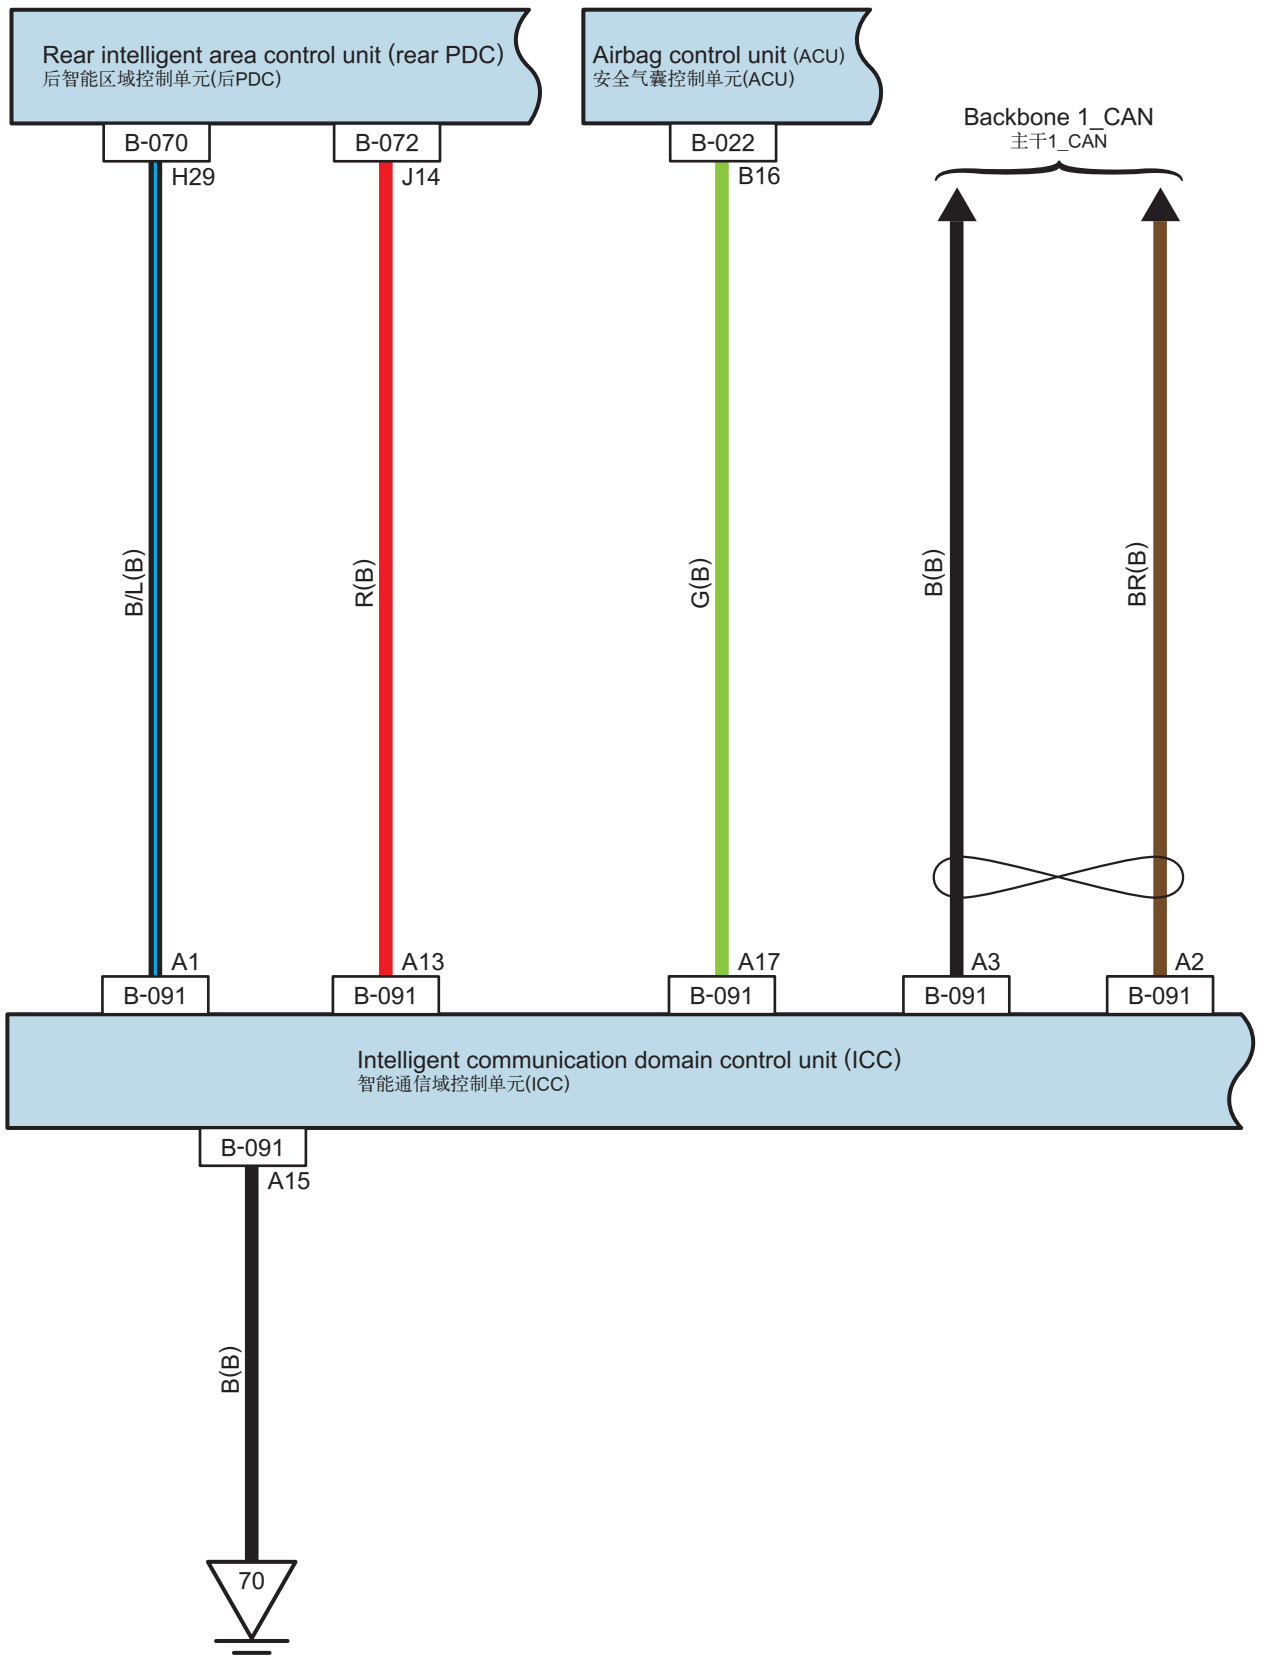

Door lock RR-UK
右后门锁-英国
DR4-002
8
DR4-002
7
DR4-002
1
DR4-002
6
DR4-002
5
W(DR4)
W(DR4)
W(DR4)
W(DR4)
W(DR4)
B(DR4)
C-37
22
B(B)
52a
A17
A26
A22
C3
DR4-005
DR4-005
DR4-005
DR4-007
Rear right door control unit
右后车门控制单元

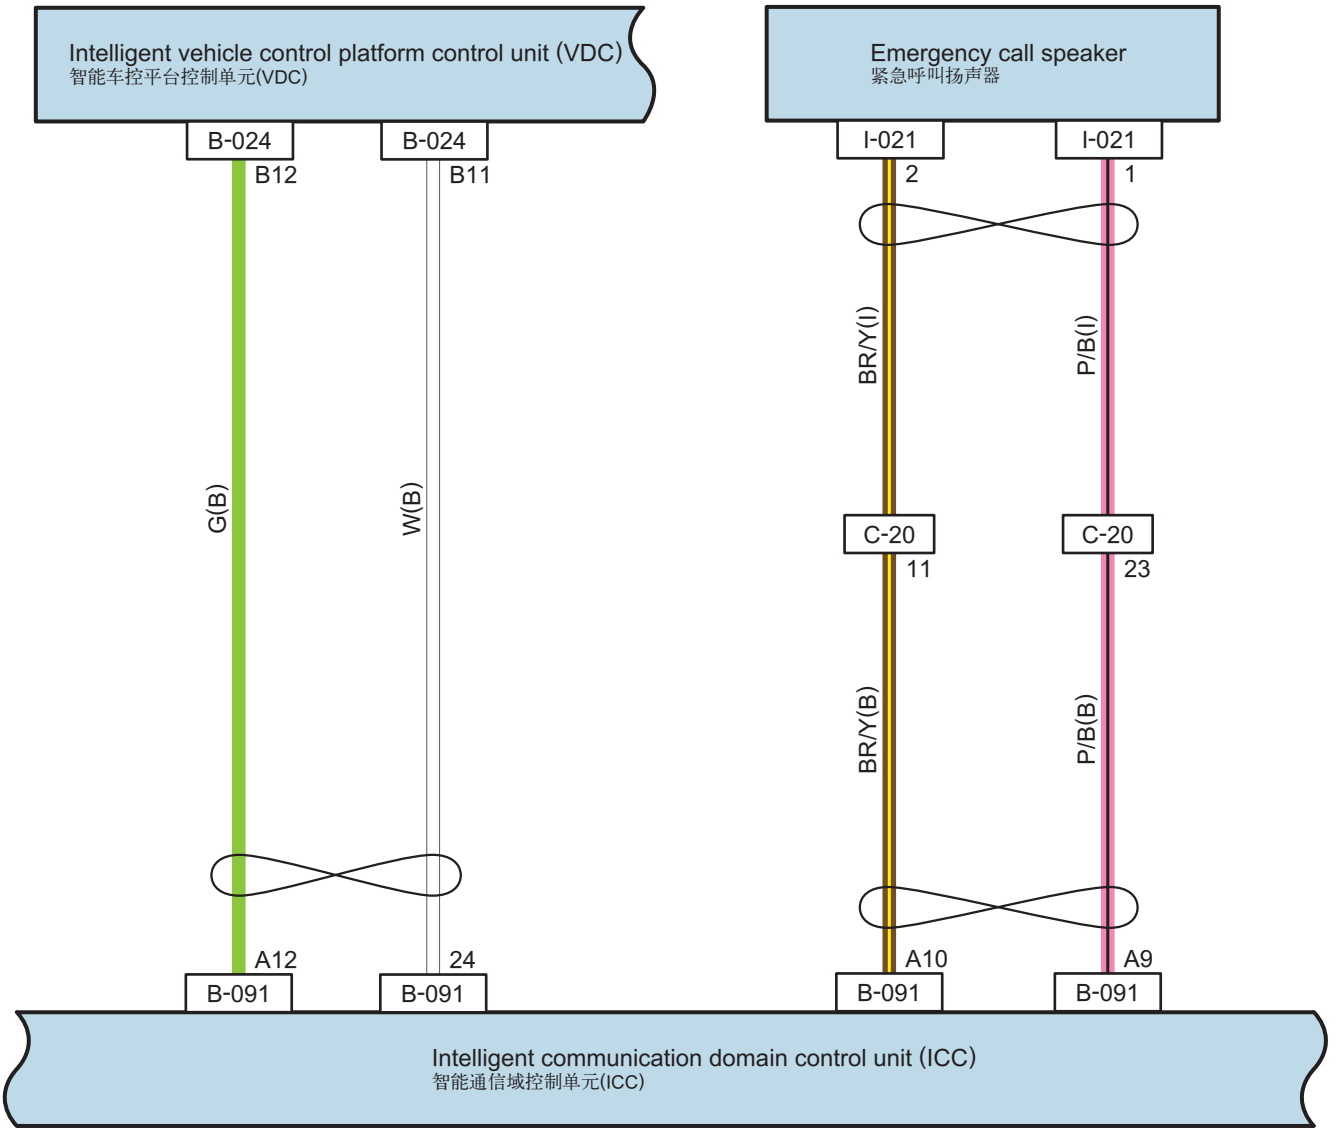

Door lock RR-Southeast Asia
右后门锁-东南亚
DR4-008
8
DR4-008
7
DR4-008
1
DR4-008
6
DR4-008
5
R/G(DR4)
W/G(DR4)
P(DR4)
R/Y(DR4)
B(DR4)
C-37
22
B(B)
52a
A17
A26
A22
C3
DR4-005
DR4-005
DR4-005
DR4-007
Rear right door control unit
右后车门控制单元

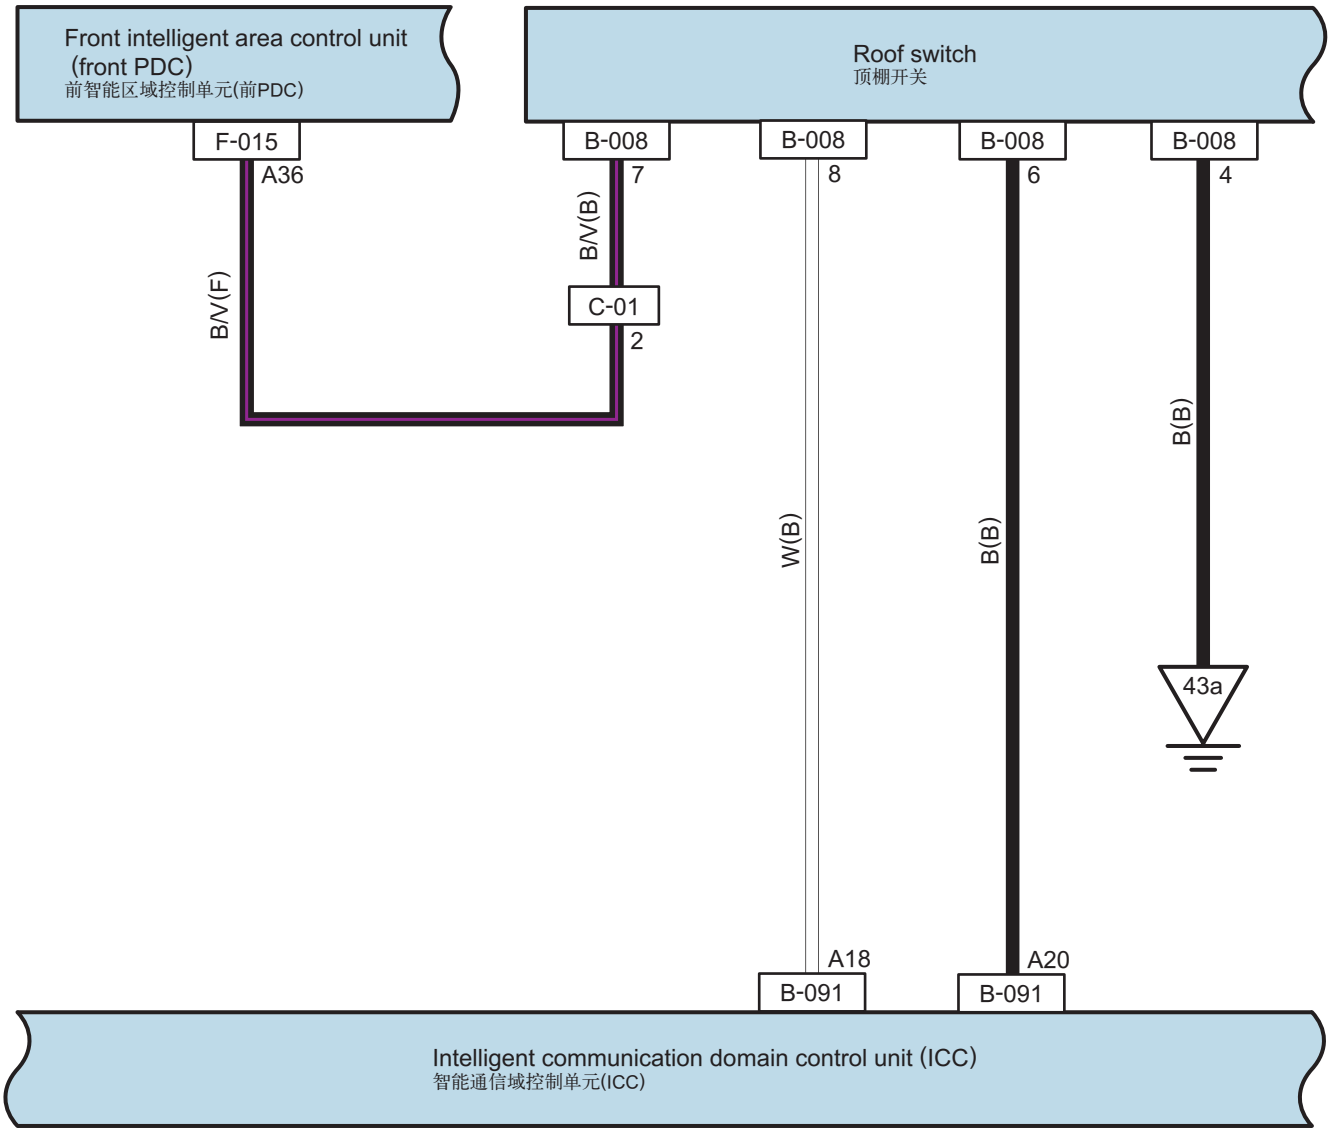

Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B16
G(B)
C-37
11
G(DR4)
C18
DR4-007
Rear right door control unit
右后车门控制单元

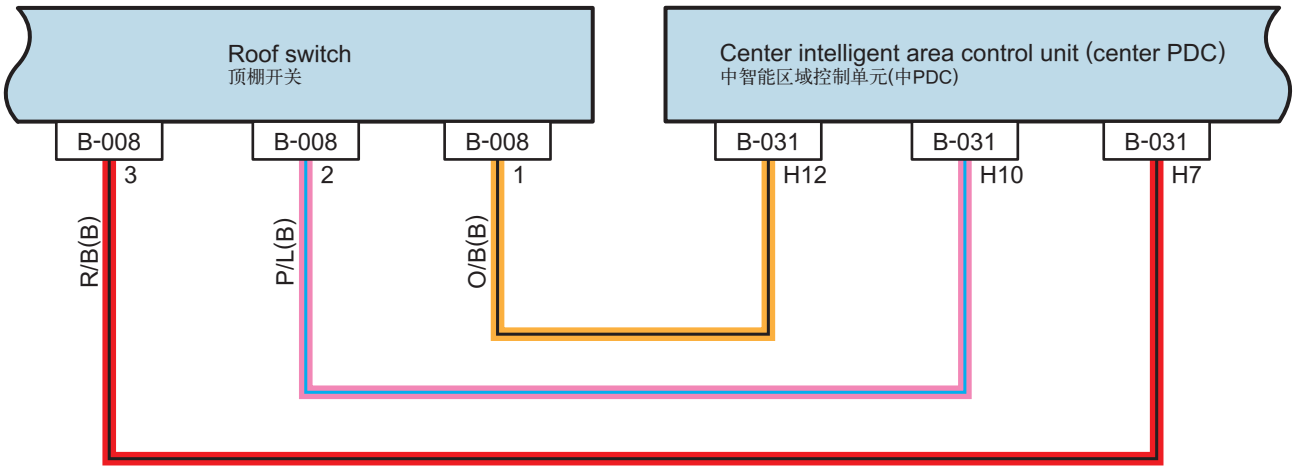

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-072
J14
B-029
D36
B-029
D39
R(B)
W/R(B)
L/R(B)
14
8
12
B-078
B-078
B-078
Digital key main module
数字钥匙主模块
B-078
16
B(B)
78


Digital key NFC_CAN
数字钥匙NFC_CAN
Digital key DK_CAN
数字钥匙DK_CAN
G/B(B)
G/W(B)
B(B)
Br(B)
5
13
7
15
B-078
B-078
B-078
B-078
Digital key main module
数字钥匙主模块

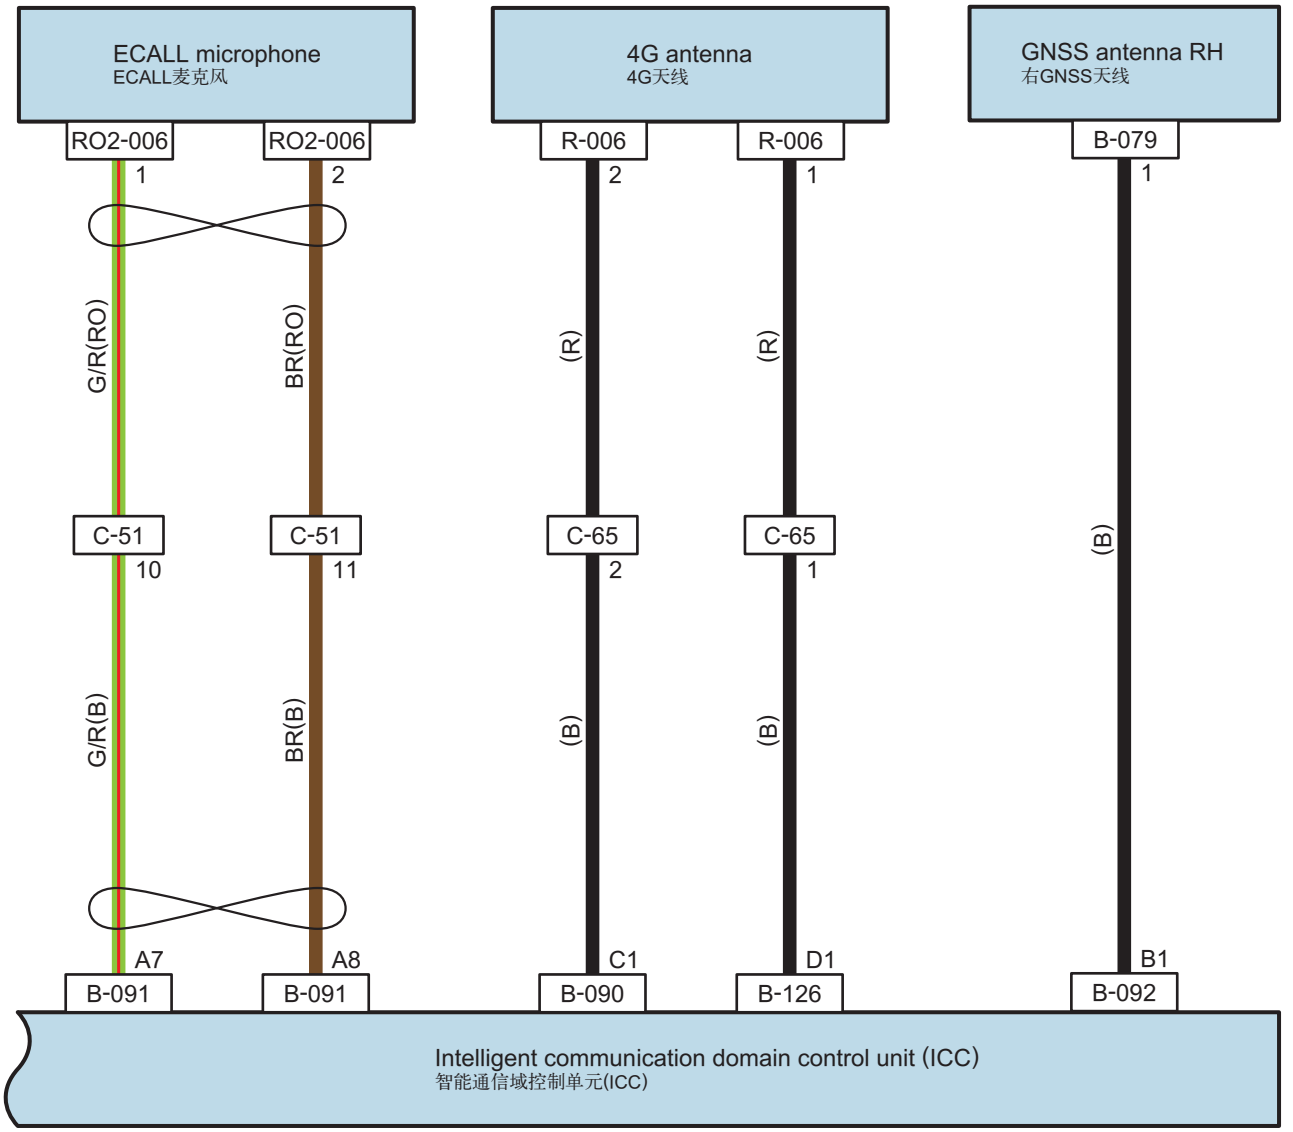

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Airbag control unit (ACU)
安全气囊控制单元(ACU)
Backbone 1_CAN
主干1_CAN
B-070
H29
B-072
J14
B-022
B16
B/L(B)
R(B)
G(B)
B(B)
BR(B)
A1
A13
A17
A3
A2
B-091
B-091
B-091
B-091
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
B-091
A15
B(B)
70

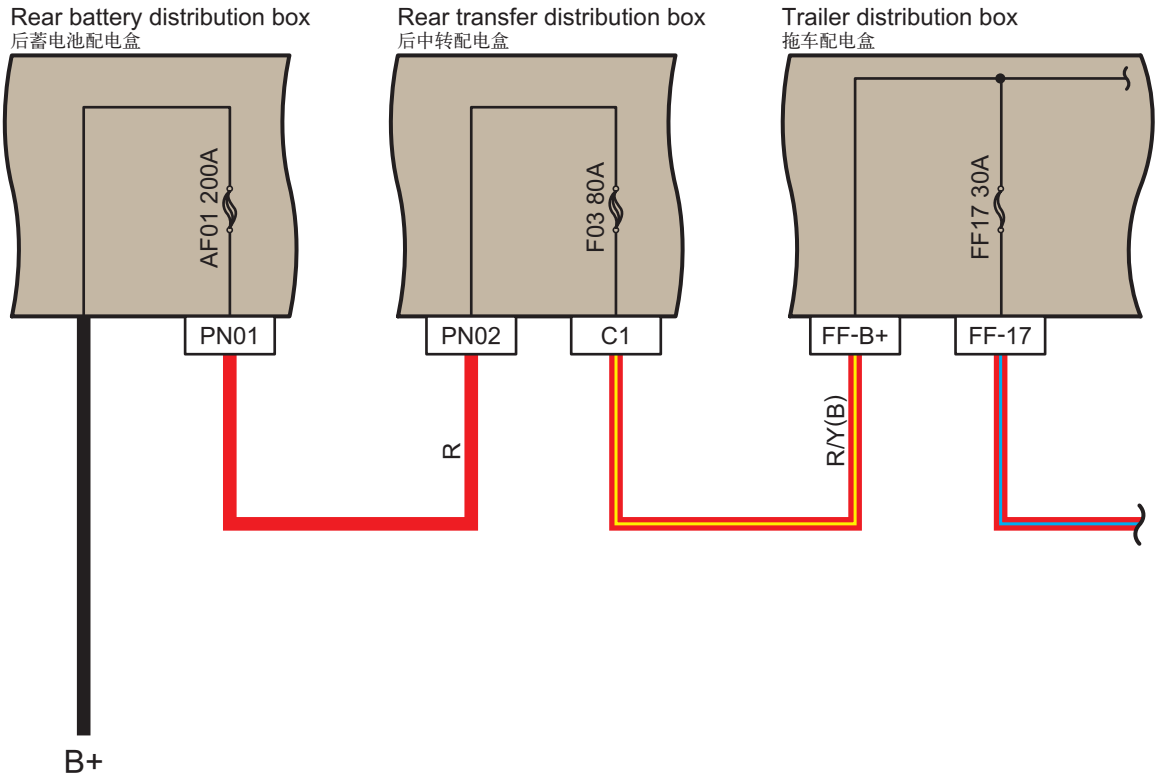

Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-024
B12
B-024
B11
G(B)
W(B)
A12
24
B-091
B-091
Emergency call speaker
紧急呼叫扬声器
I-021
2
I-021
1
BR/Y(I)
P/B(I)
C-20
11
C-20
23
BR/Y(B)
P/B(B)
A10
A9
B-091
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

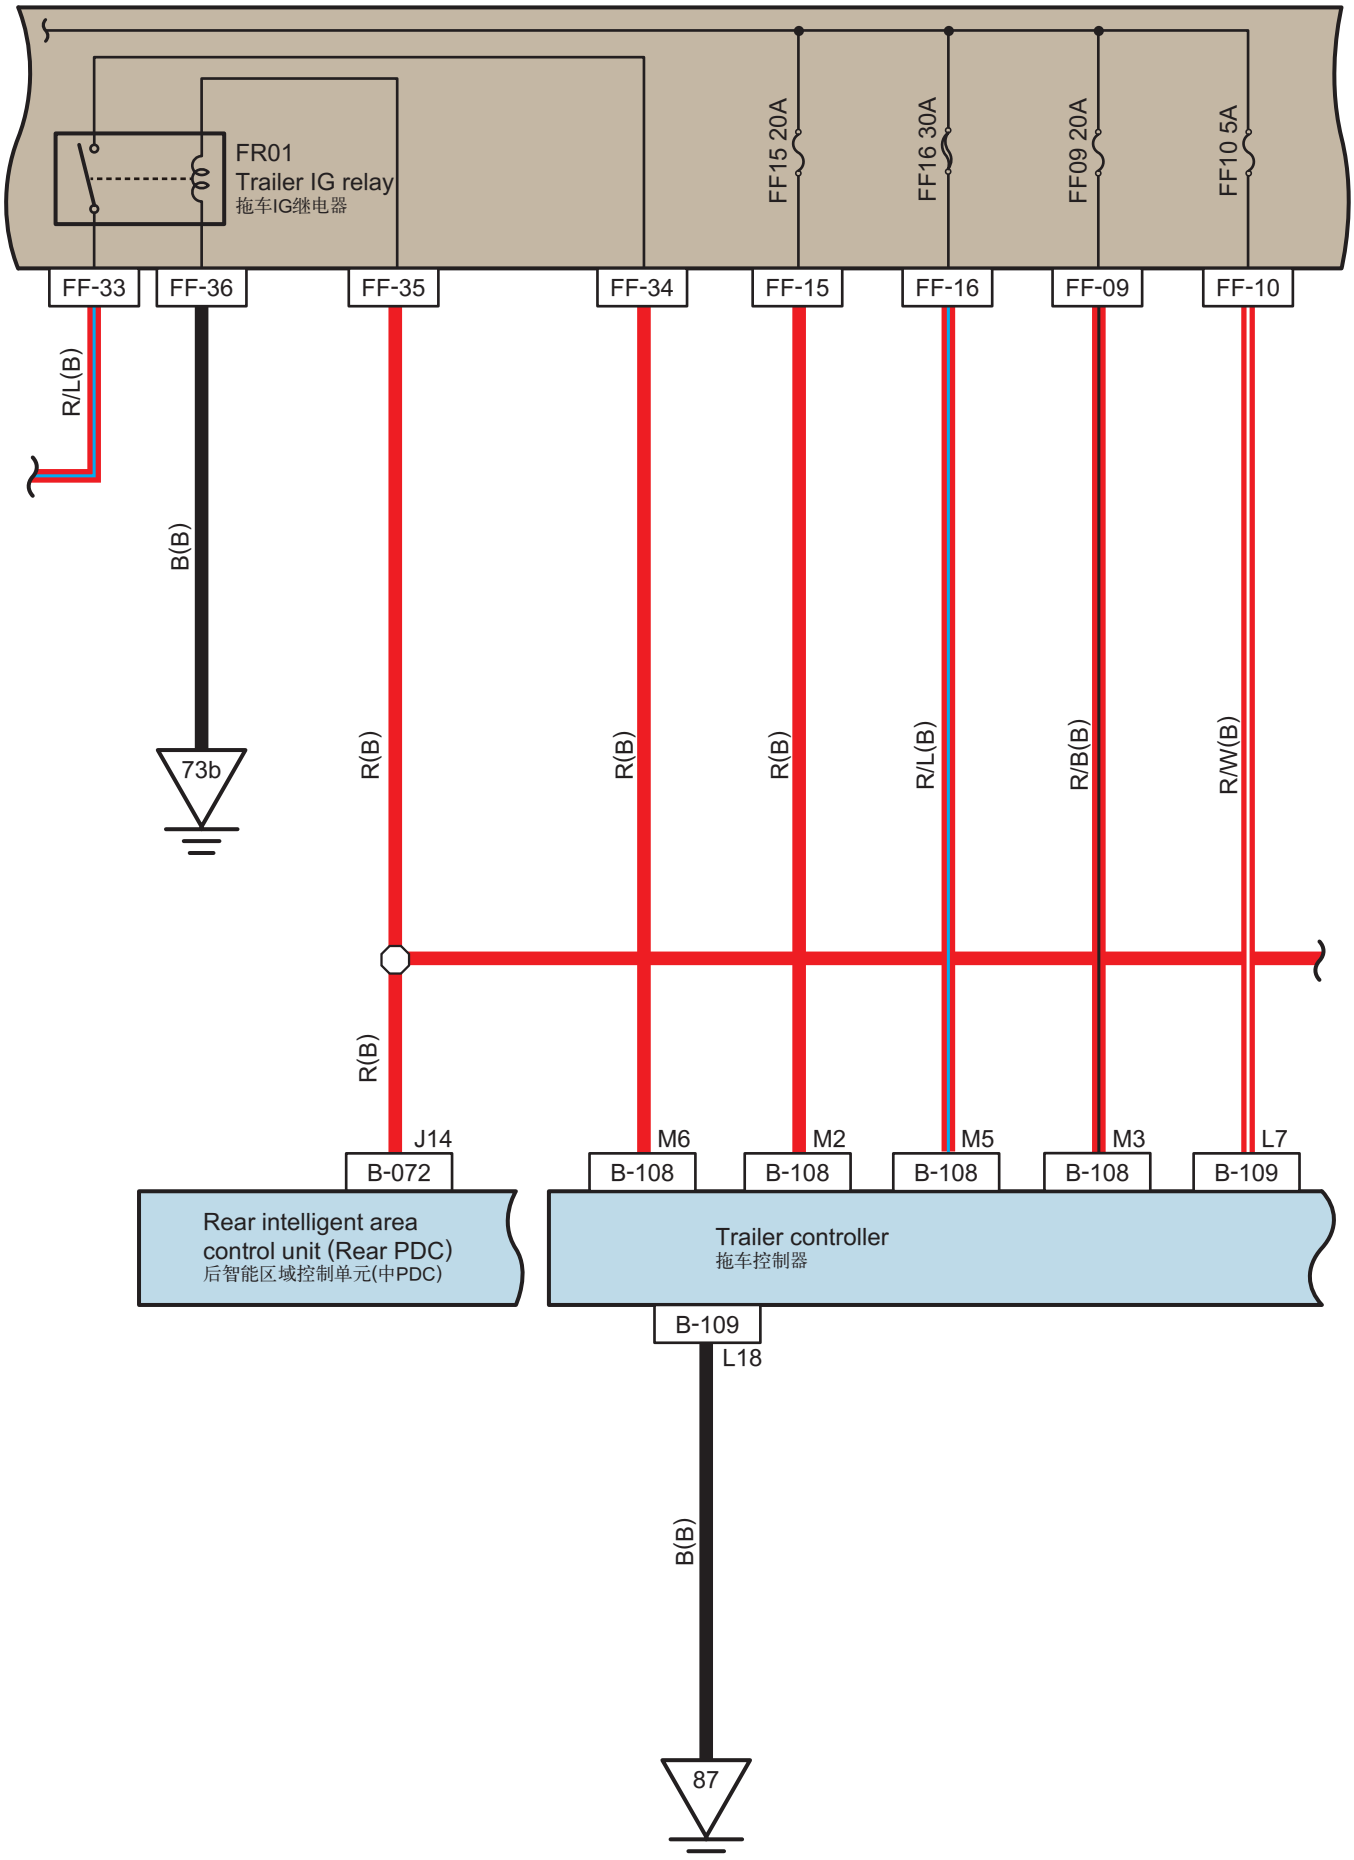

Front intelligent area control unit
(front PDC)
前智能区域控制单元(前PDC)
F-015
A36
B/V(F)
B/V(B)
C-01
2
Roof switch
顶棚开关
B-008
7
B-008
8
B-008
6
B-008
4
W(B)
B(B)
B(B)
43a
A18
B-091
A20
B-091
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

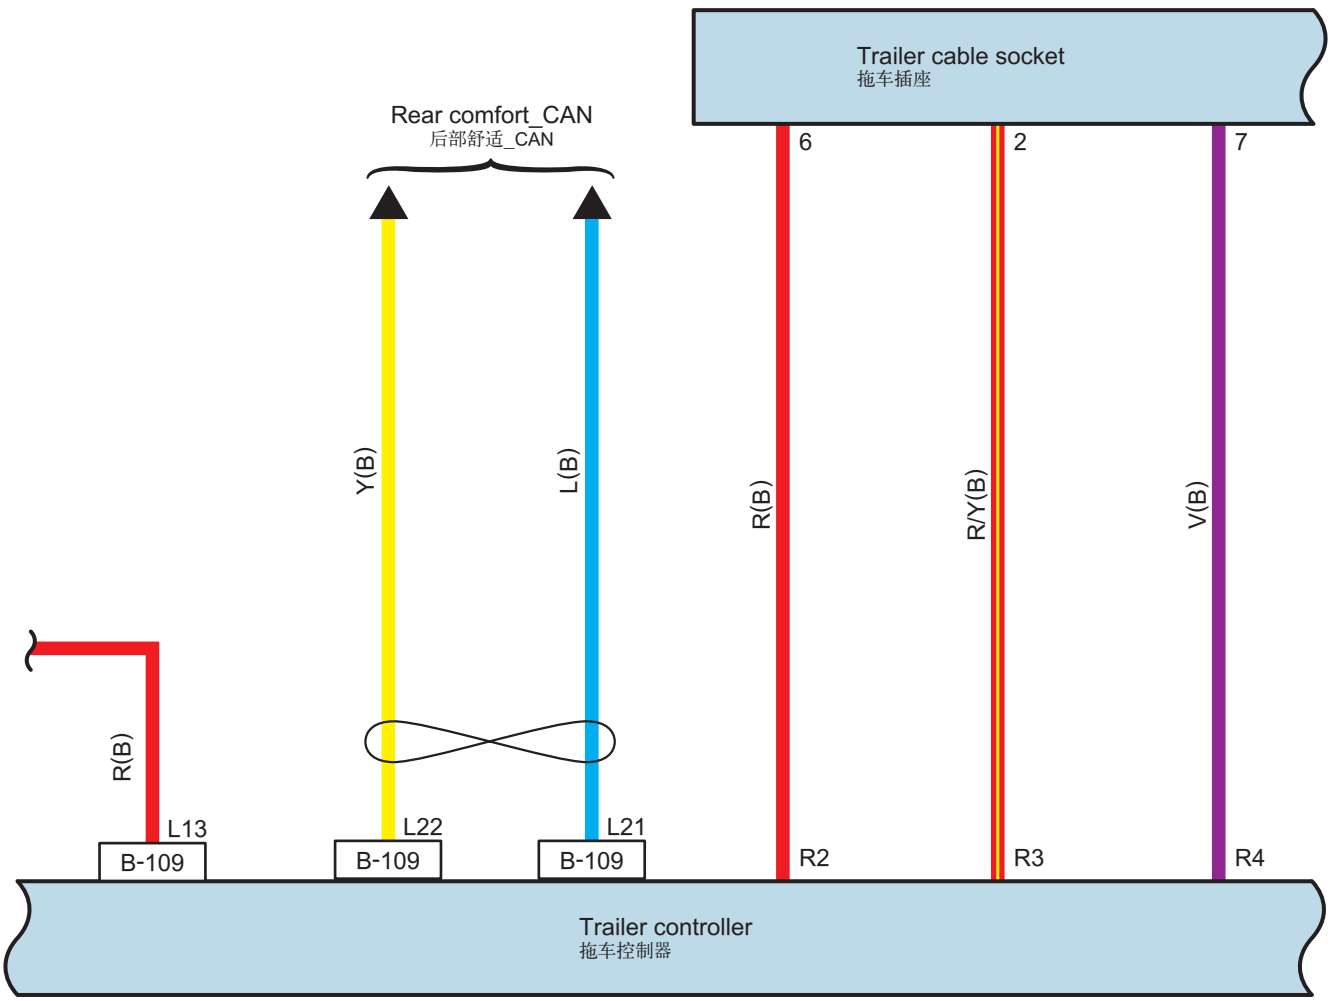


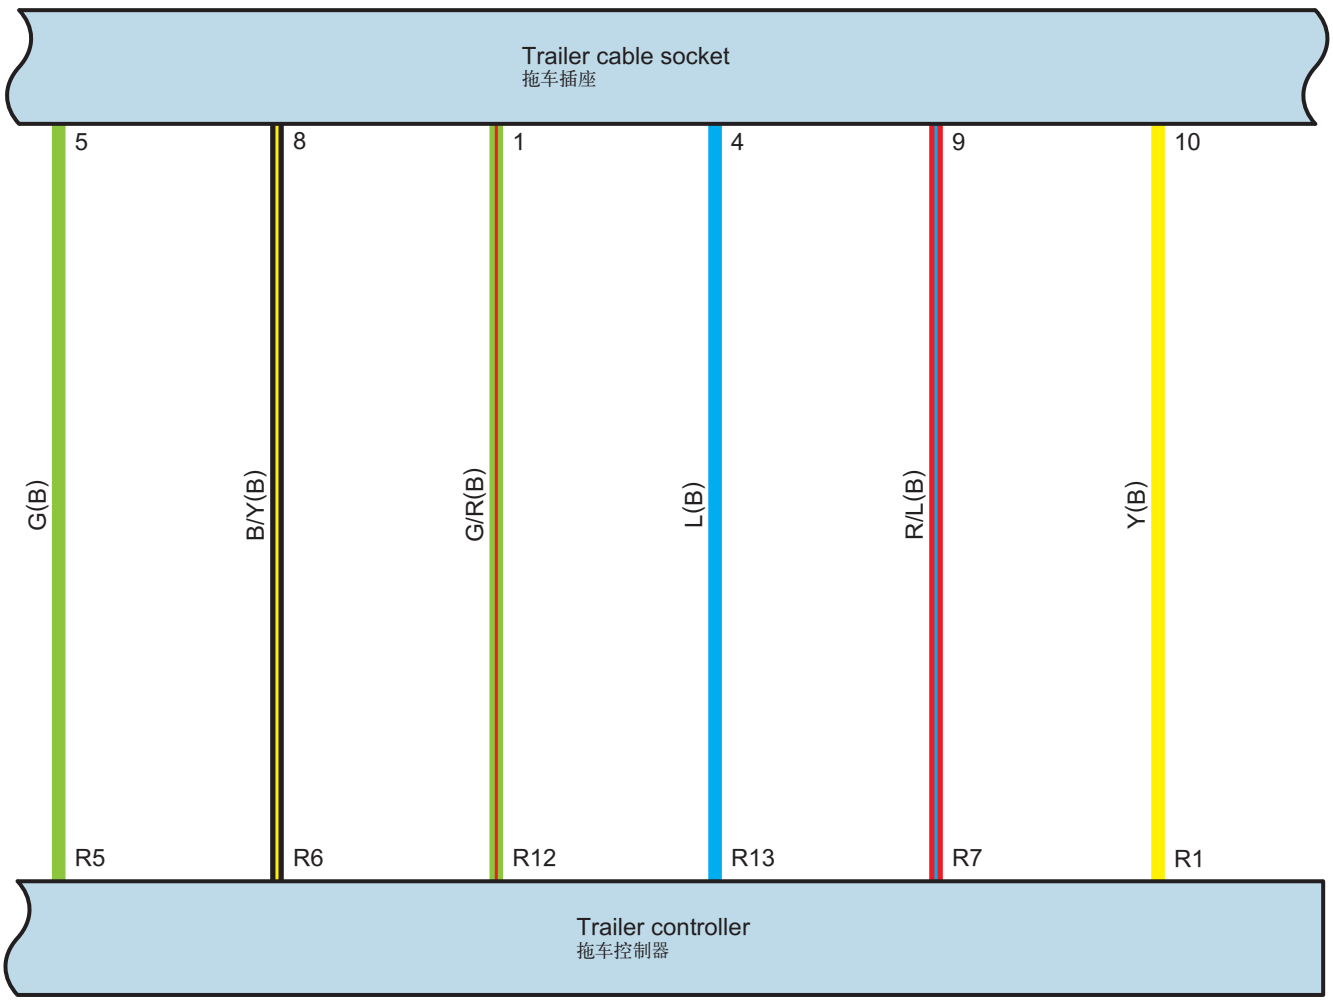
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

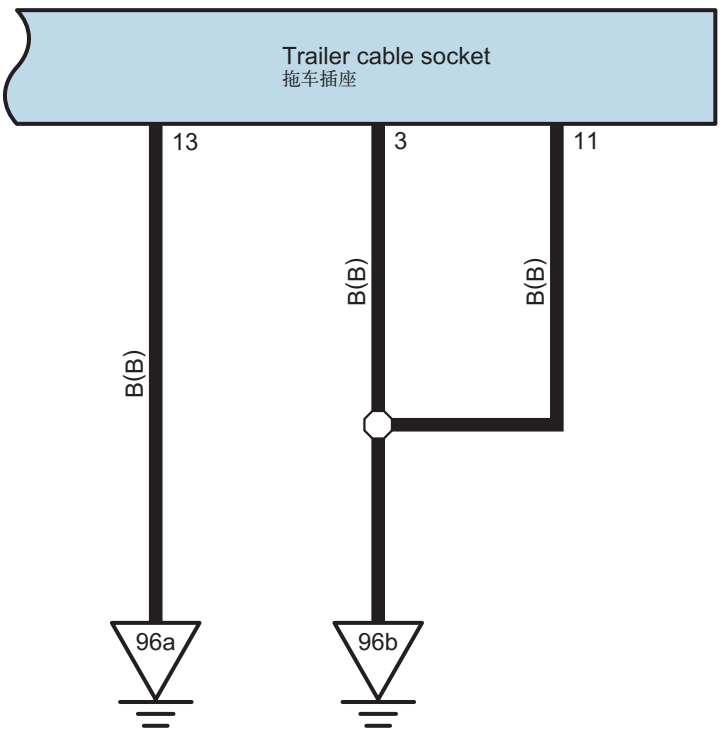

ECALL microphone
ECALL麦克风
4G antenna
4G天线
GNSS antenna RH
右GNSS天线
RO2-006
1
RO2-006
2
R-006
2
R-006
1
B-079
1
G/R(RO)
BR(RO)
(R)
(R)
(B)
C-51
10
C-51
11
C-65
2
C-65
1
G/R(B)
BR(B)
(B)
(B)
A7
A8
C1
D1
B1
B-091
B-091
B-090
B-126
B-092
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)

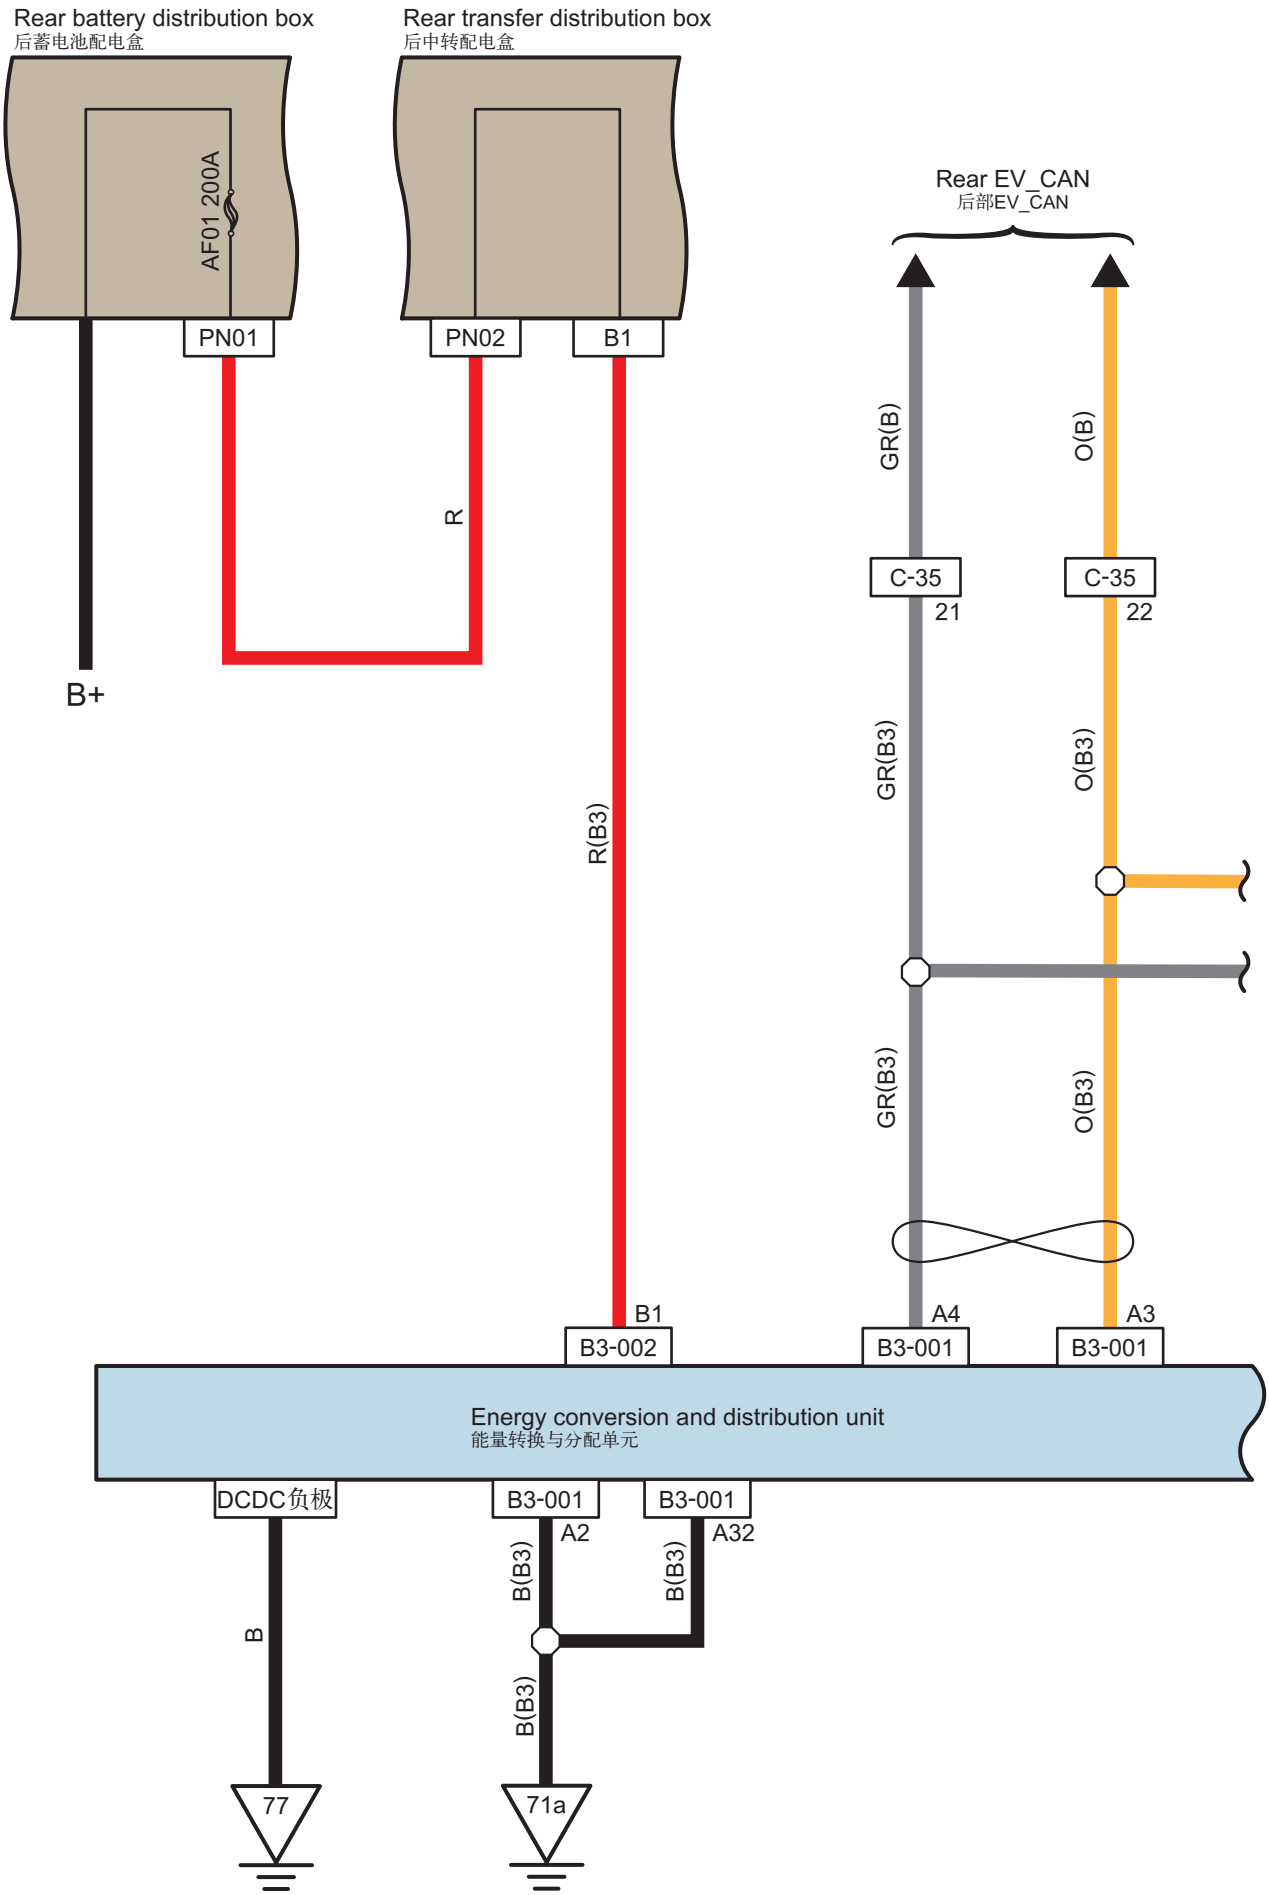

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
Trailer distribution box
拖车配电盒
AF01 200A
F03 80A
FF17 30A
PN01
PN02
C1
FF-B+
FF-17
R
R/Y(B)
B+

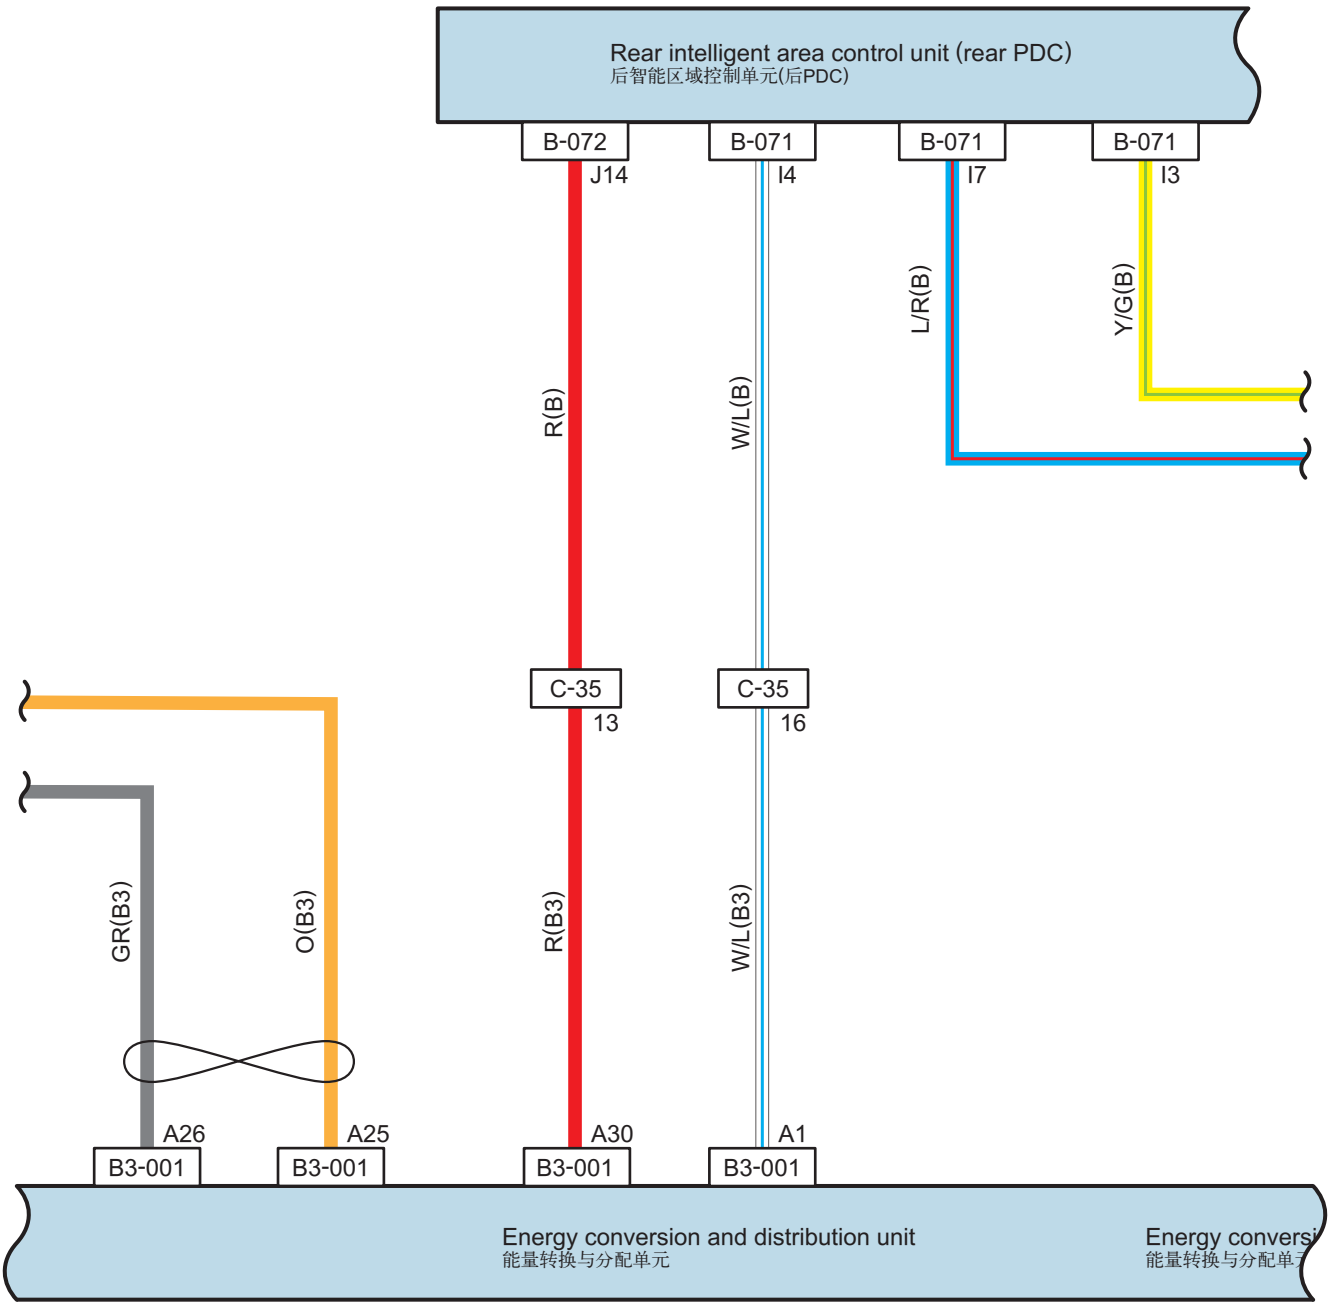

FR01
Trailer IG relay
拖车IG继电器
FF15 20A
FF16 30A
FF09 20A
FF10 5A
FF-33
FF-36
FF-35
FF-34
FF-15
FF-16
FF-09
FF-10
R/L(B)
B(B)
73b
R(B)
R(B)
R(B)
R/L(B)
R/B(B)
R/W(B)
R(B)
J14
B-072
M6
B-108
M2
B-108
M5
B-108
M3
B-108
L7
B-109
Rear intelligent area
control unit (Rear PDC)
后智能区域控制单元(中PDC)
Trailer controller
拖车控制器
B-109
L18
B(B)
87

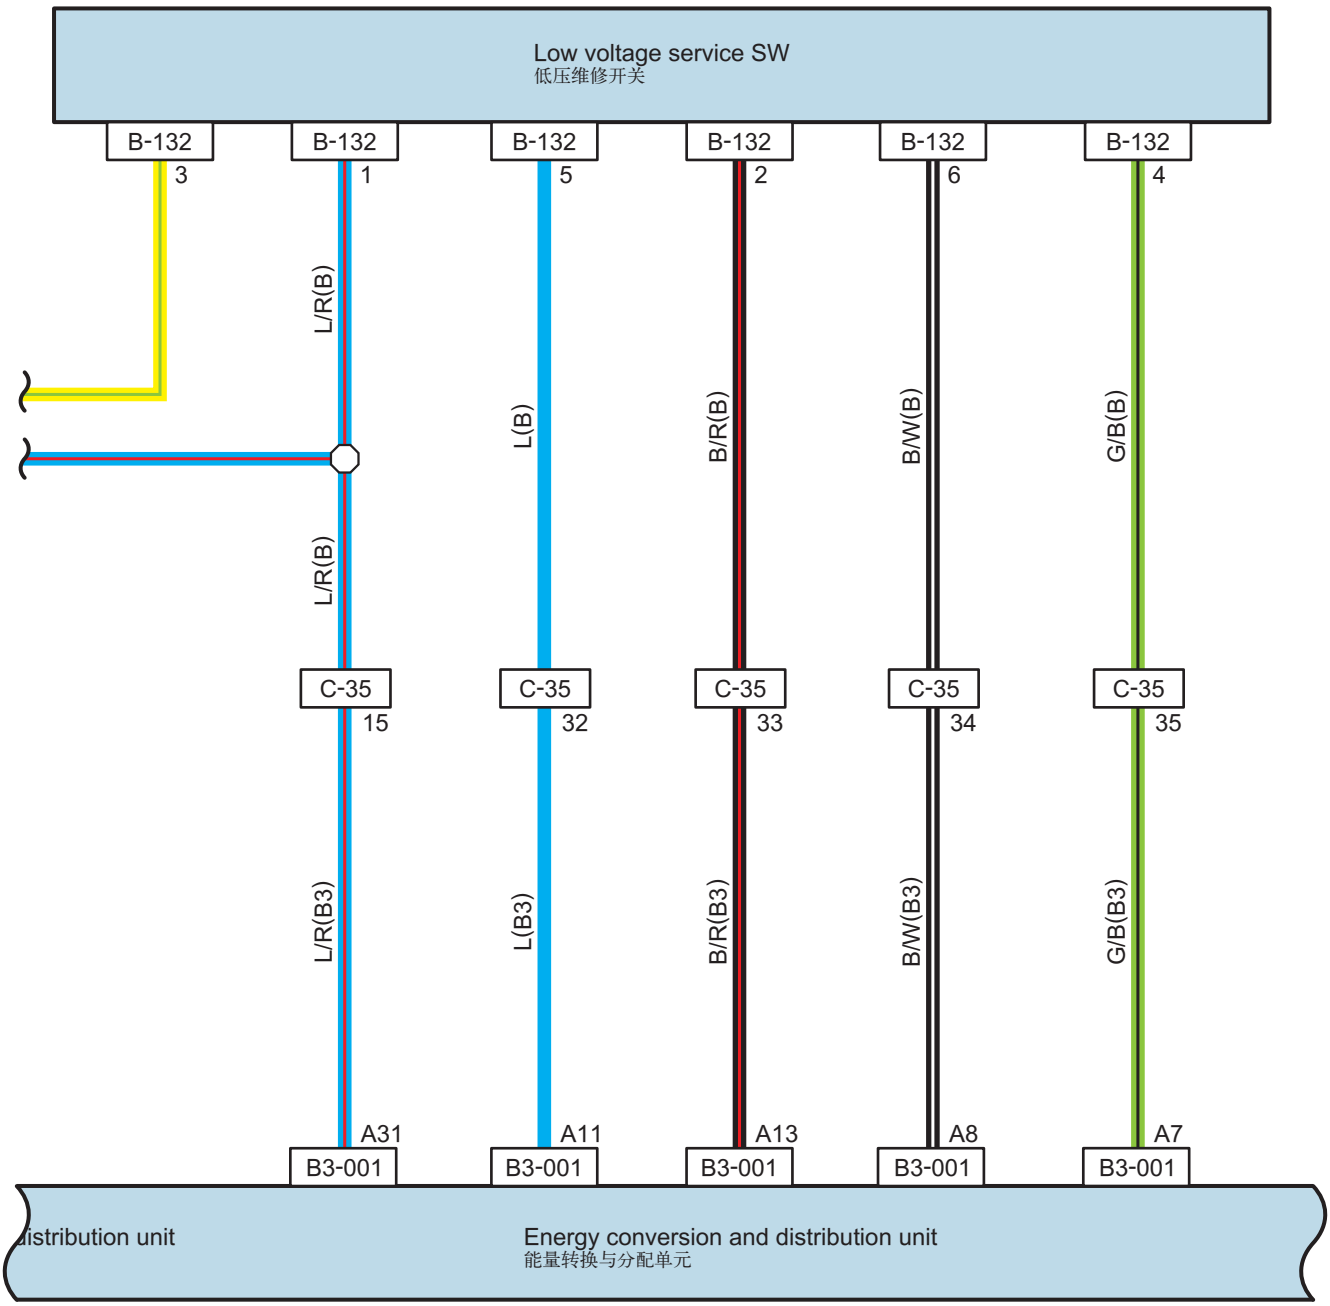

Trailer cable socket
拖车插座
Rear comfort_CAN
后部舒适_CAN
6
2
7
Y(B)
L(B)
R(B)
R/Y(B)
V(B)
R(B)
L13
L22
L21
B-109
B-109
B-109
R2
R3
R4
Trailer controller
拖车控制器

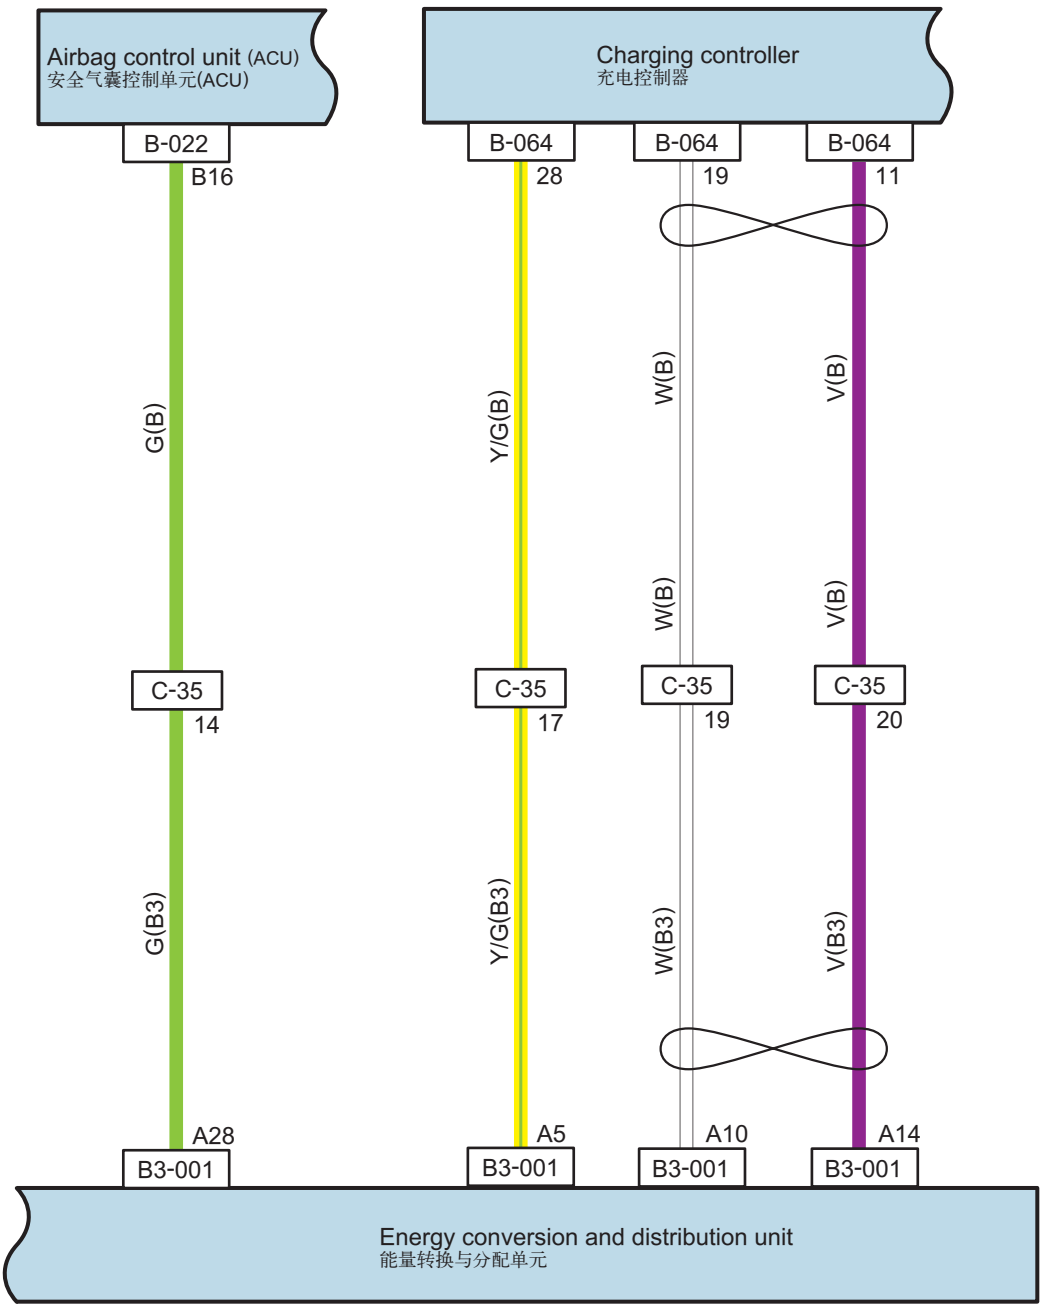

Trailer cable socket
拖车插座
5
8
1
4
9
10
G(B)
B/Y(B)
G/R(B)
L(B)
R/L(B)
Y(B)
R5
R6
R12
R13
R7
R1
Trailer controller
拖车控制器

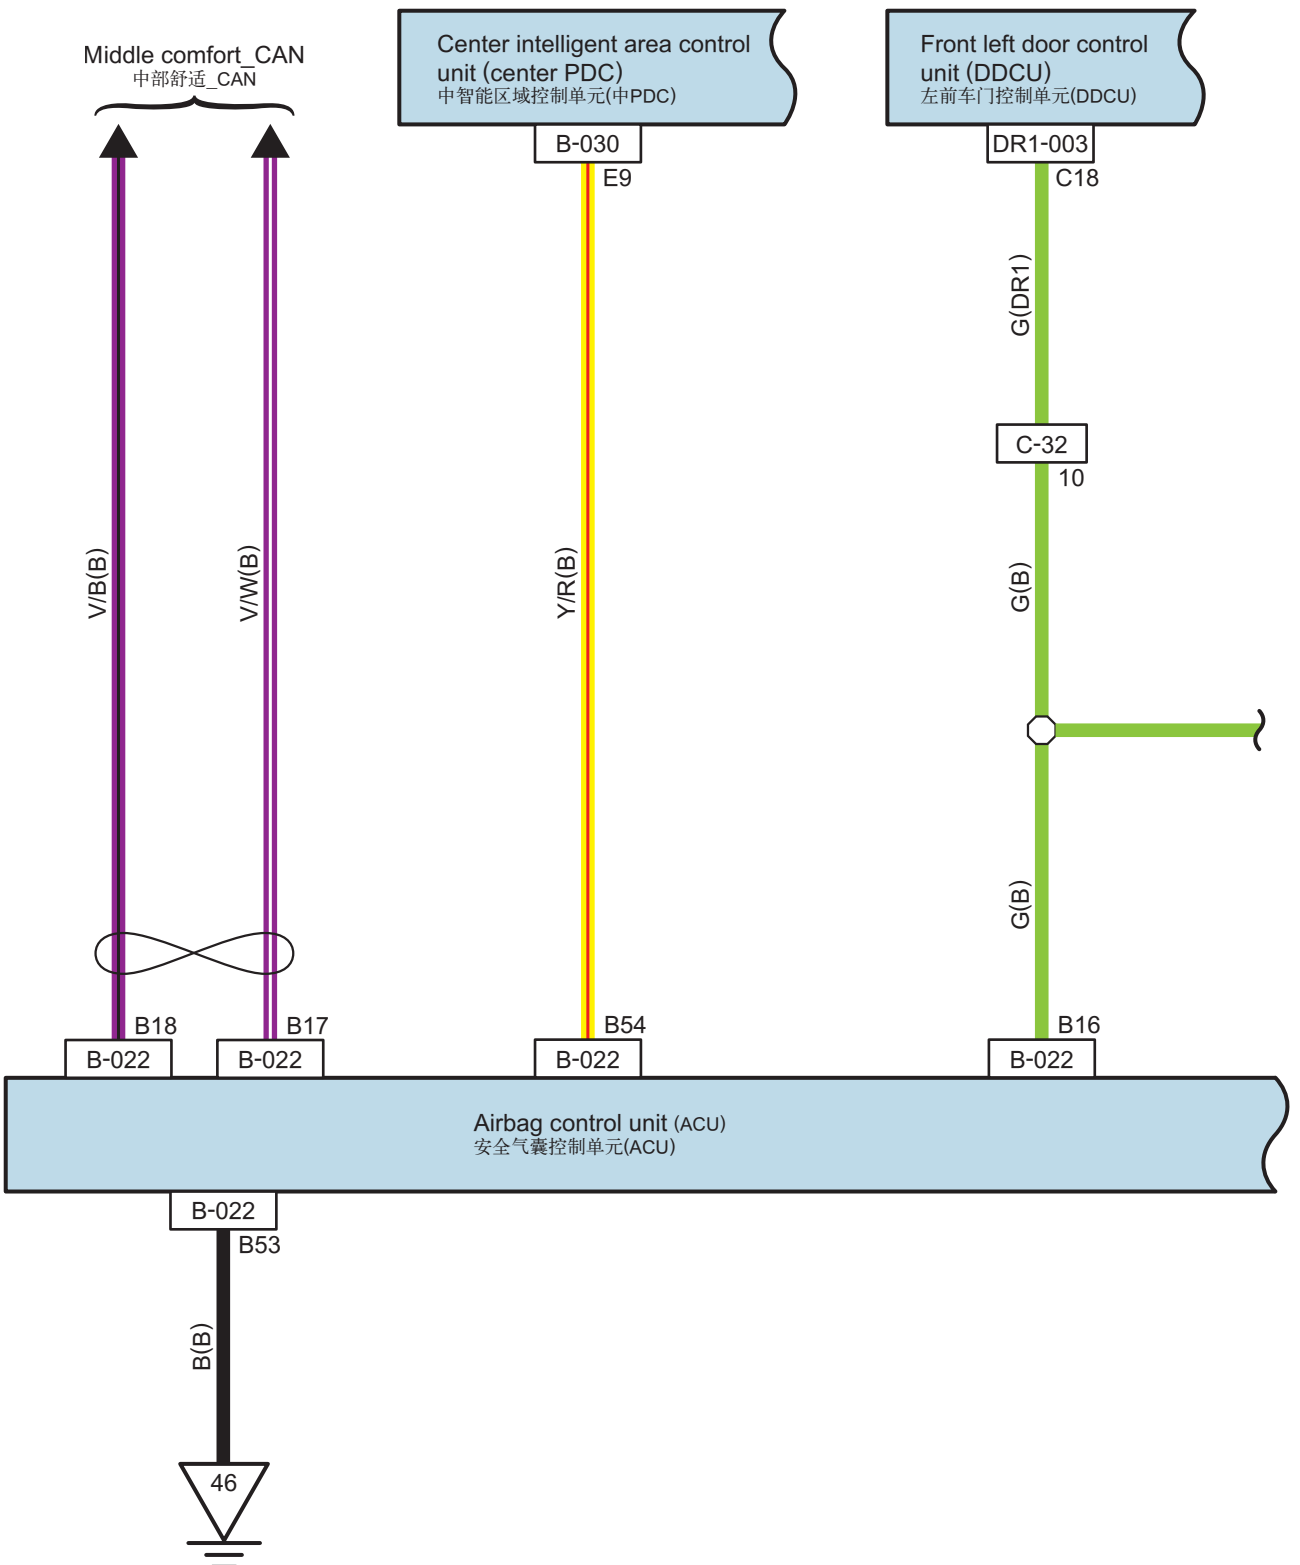

Trailer cable socket
拖车插座
13
3
11
B(B)
B(B)
B(B)
96a
96b

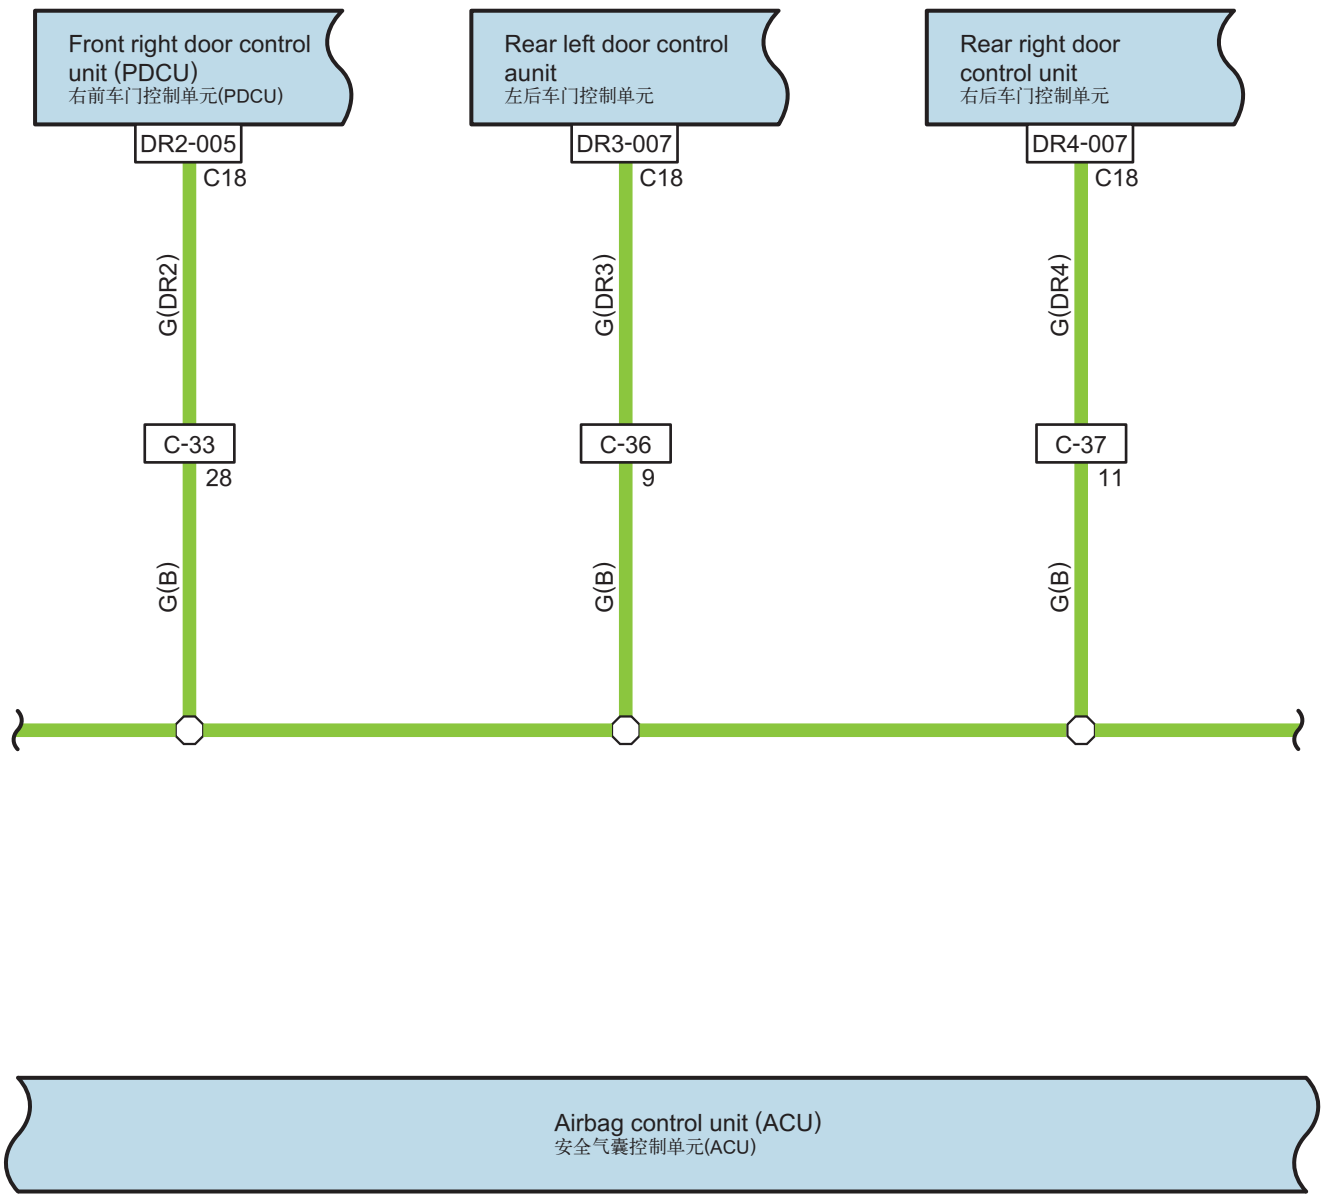

Rear battery distribution box
后蓄电池配电盒
Rear transfer distribution box
后中转配电盒
AF01 200A
PN01
PN02
B1
R
B+
R(B3)
Rear EV_CAN
后部EV_CAN
GR(B)
O(B)
C-35
21
C-35
22
GR(B3)
O(B3)
GR(B3)
O(B3)
B1
B3-002
A4
B3-001
A3
B3-001
Energy conversion and distribution unit
能量转换与分配单元
DCDC负极
B3-001
A2
B3-001
A32
B
B(B3)
B(B3)
B(B3)
77
71a

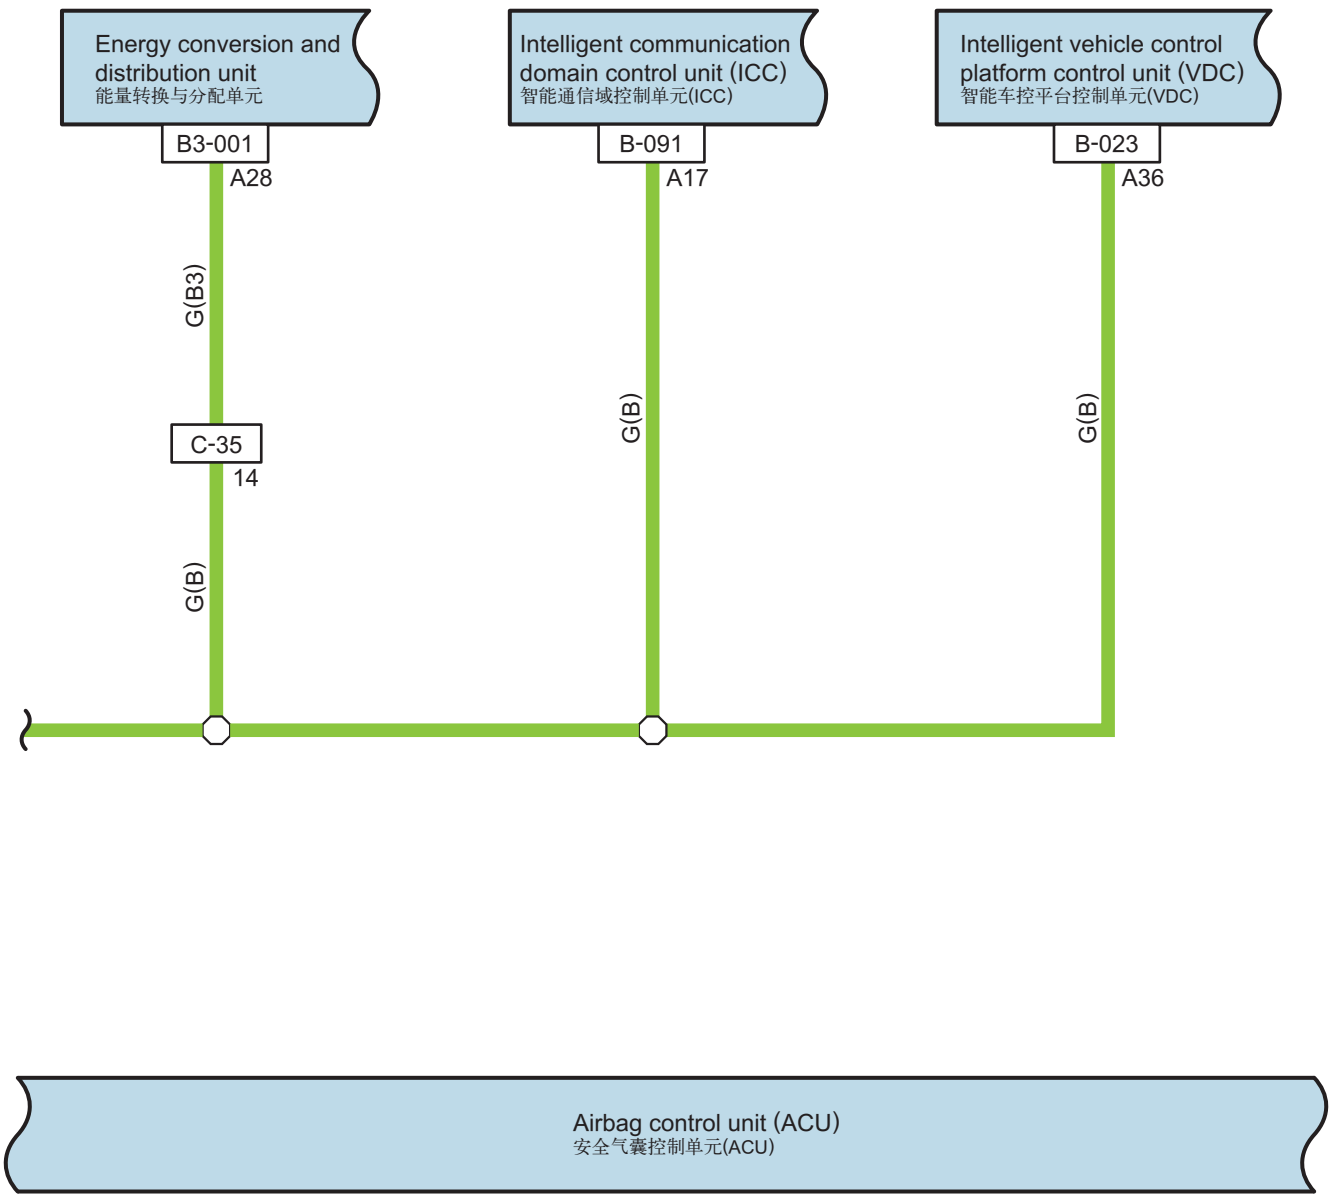

Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
B-072
J14
B-071
I4
B-071
I7
B-071
I3
R(B)
W/L(B)
L/R(B)
Y/G(B)
C-35
13
C-35
16
GR(B3)
O(B3)
R(B3)
W/L(B3)
A26
A25
A30
A1
B3-001
B3-001
B3-001
B3-001
Energy conversion and distribution unit
能量转换与分配单元
Energy conversi
能量转换与分配单元

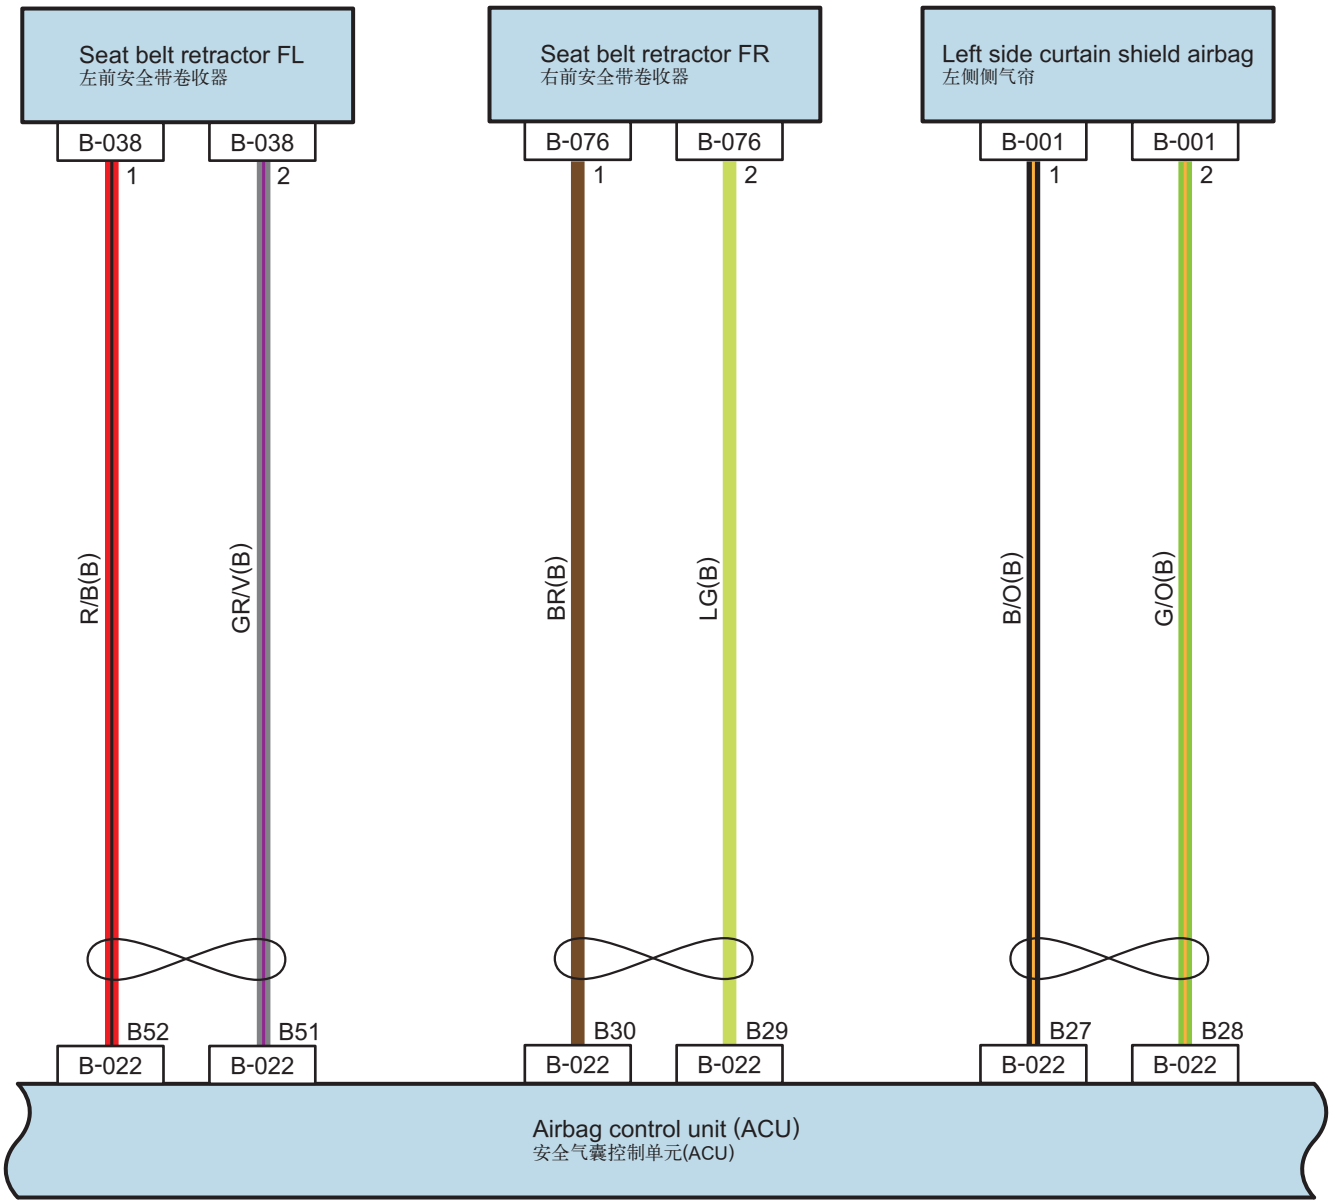

Low voltage service SW
低压维修开关
B-132
3
B-132
1
B-132
5
B-132
2
B-132
6
B-132
4
L/R(B)
L/R(B)
L(B)
B/R(B)
B/W(B)
G/B(B)
C-35
15
C-35
32
C-35
33
C-35
34
C-35
35
L/R(B3)
L(B3)
B/R(B3)
B/W(B3)
G/B(B3)
A31
A11
A13
A8
A7
B3-001
B3-001
B3-001
B3-001
B3-001
istribution unit
Energy conversion and distribution unit
能量转换与分配单元

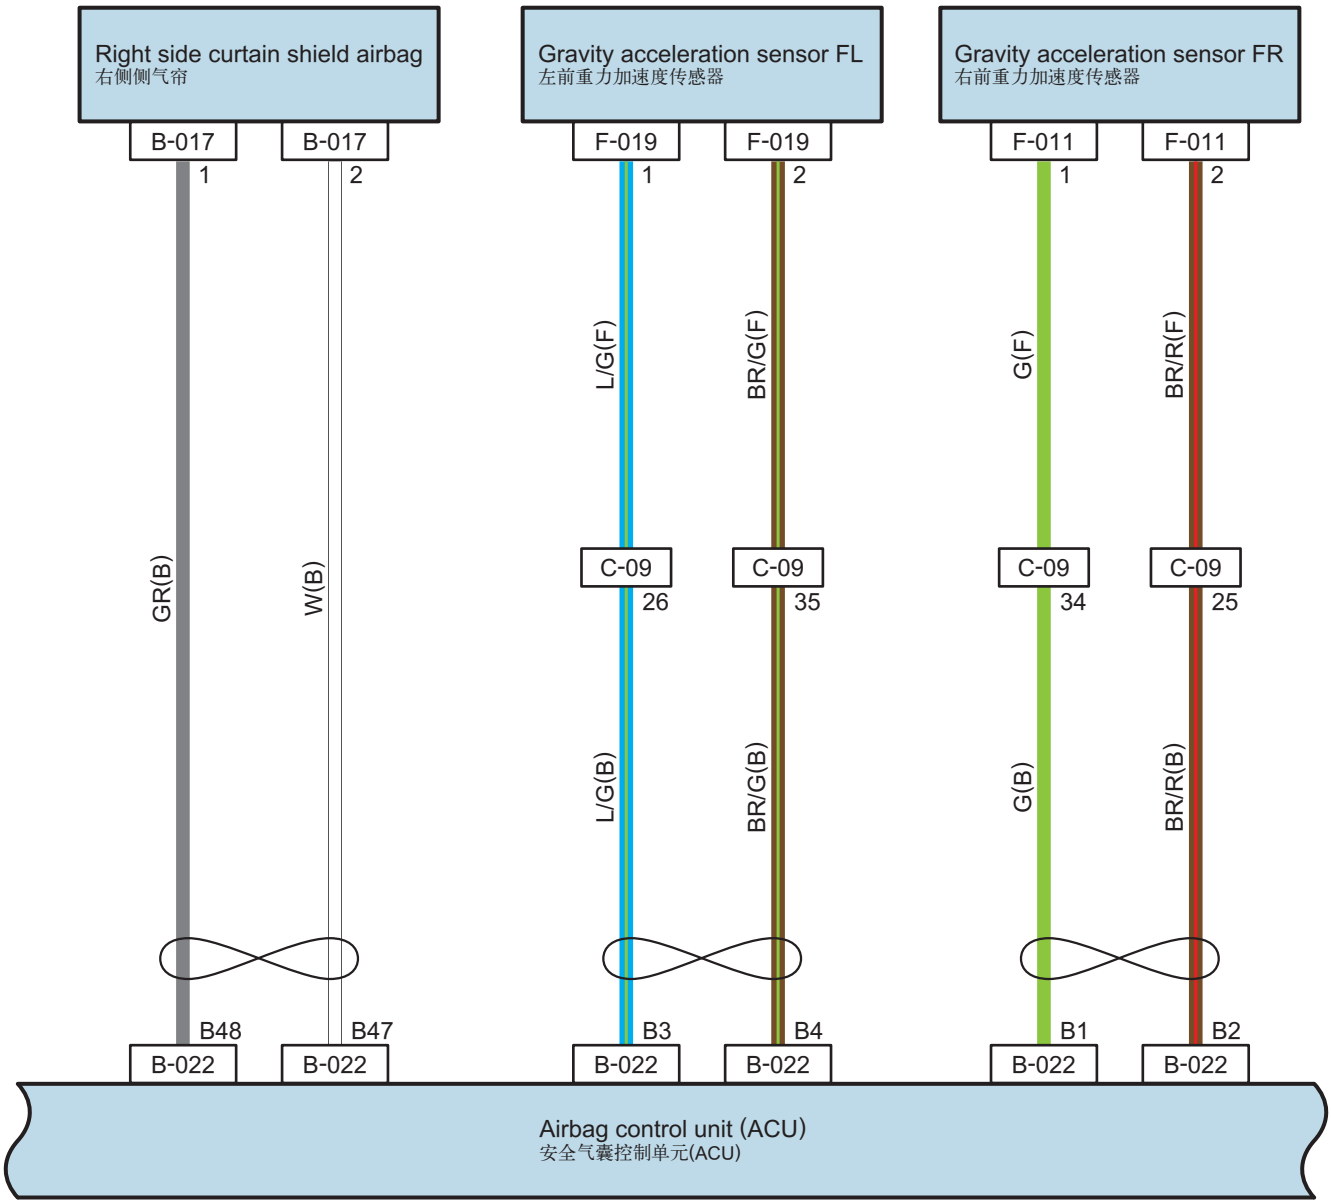

Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B16
G(B)
C-35
14
G(B3)
A28
B3-001
Charging controller
充电控制器
B-064
28
Y/G(B)
C-35
17
Y/G(B3)
A5
B3-001
B-064
19
W(B)
W(B)
C-35
19
W(B3)
A10
B3-001
B-064
11
V(B)
V(B)
C-35
20
V(B3)
A14
B3-001
Energy conversion and distribution unit
能量转换与分配单元

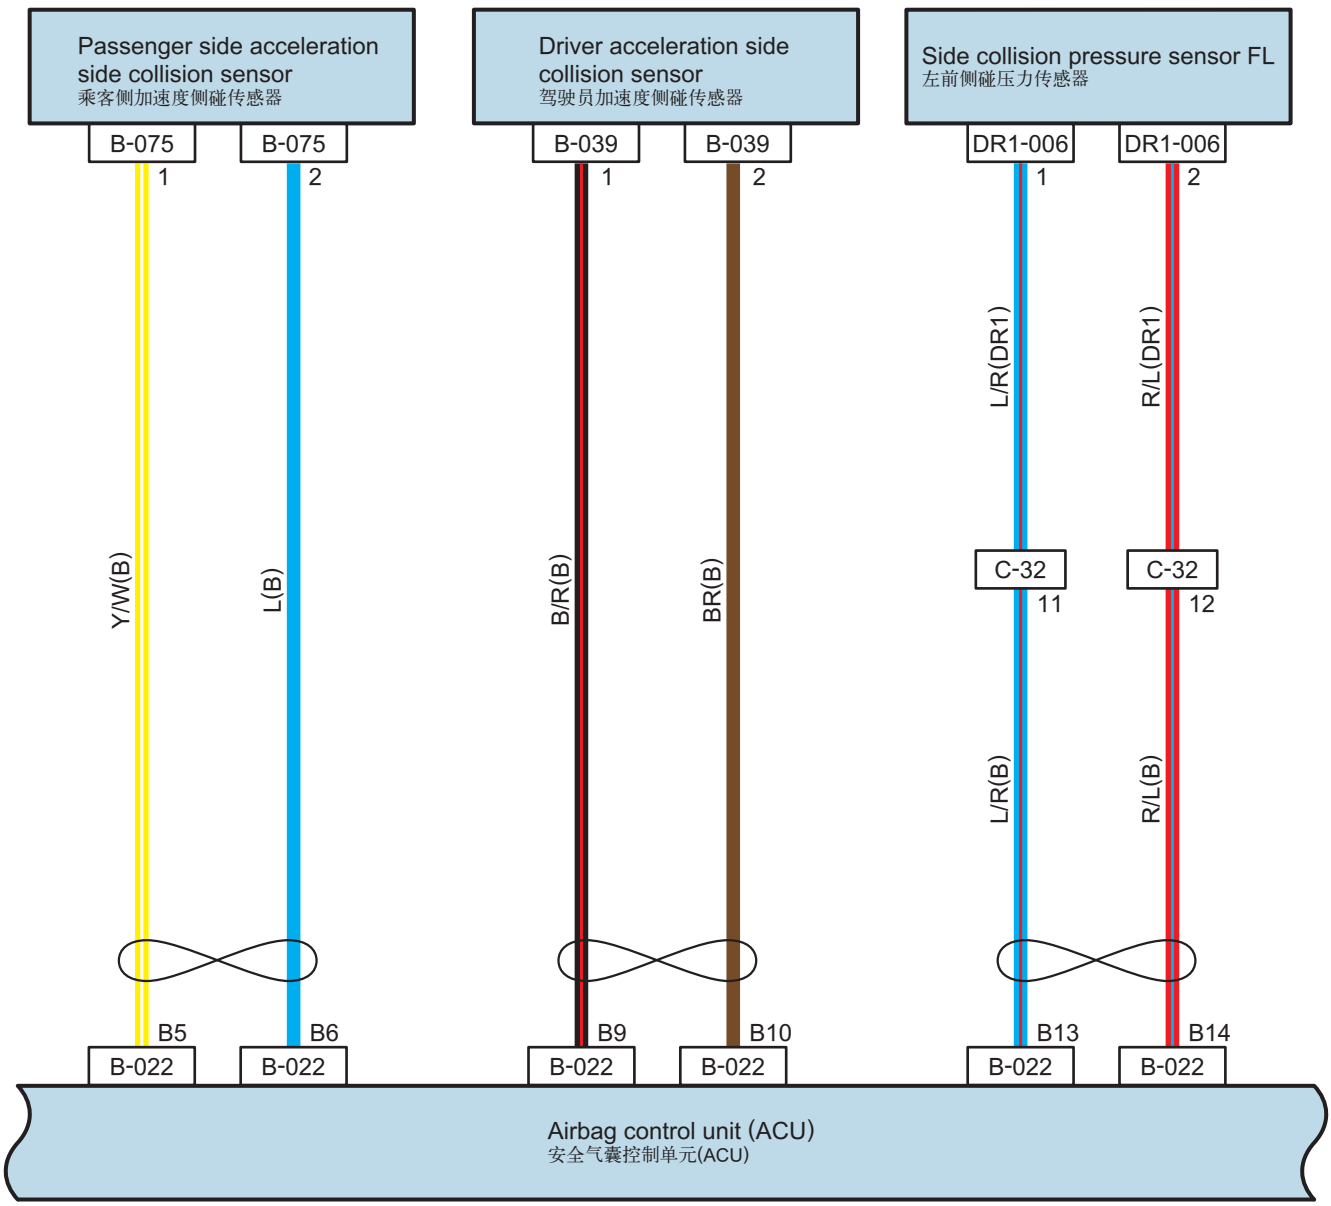

Middle comfort_CAN
中部舒适_CAN
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
Front left door control unit (DDCU)
左前车门控制单元(DDCU)
B-030
E9
DR1-003
C18
G(DR1)
C-32
10
G(B)
V/B(B)
V/W(B)
Y/R(B)
G(B)
B18
B17
B54
B16
B-022
B-022
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)
B-022
B53
B(B)
46

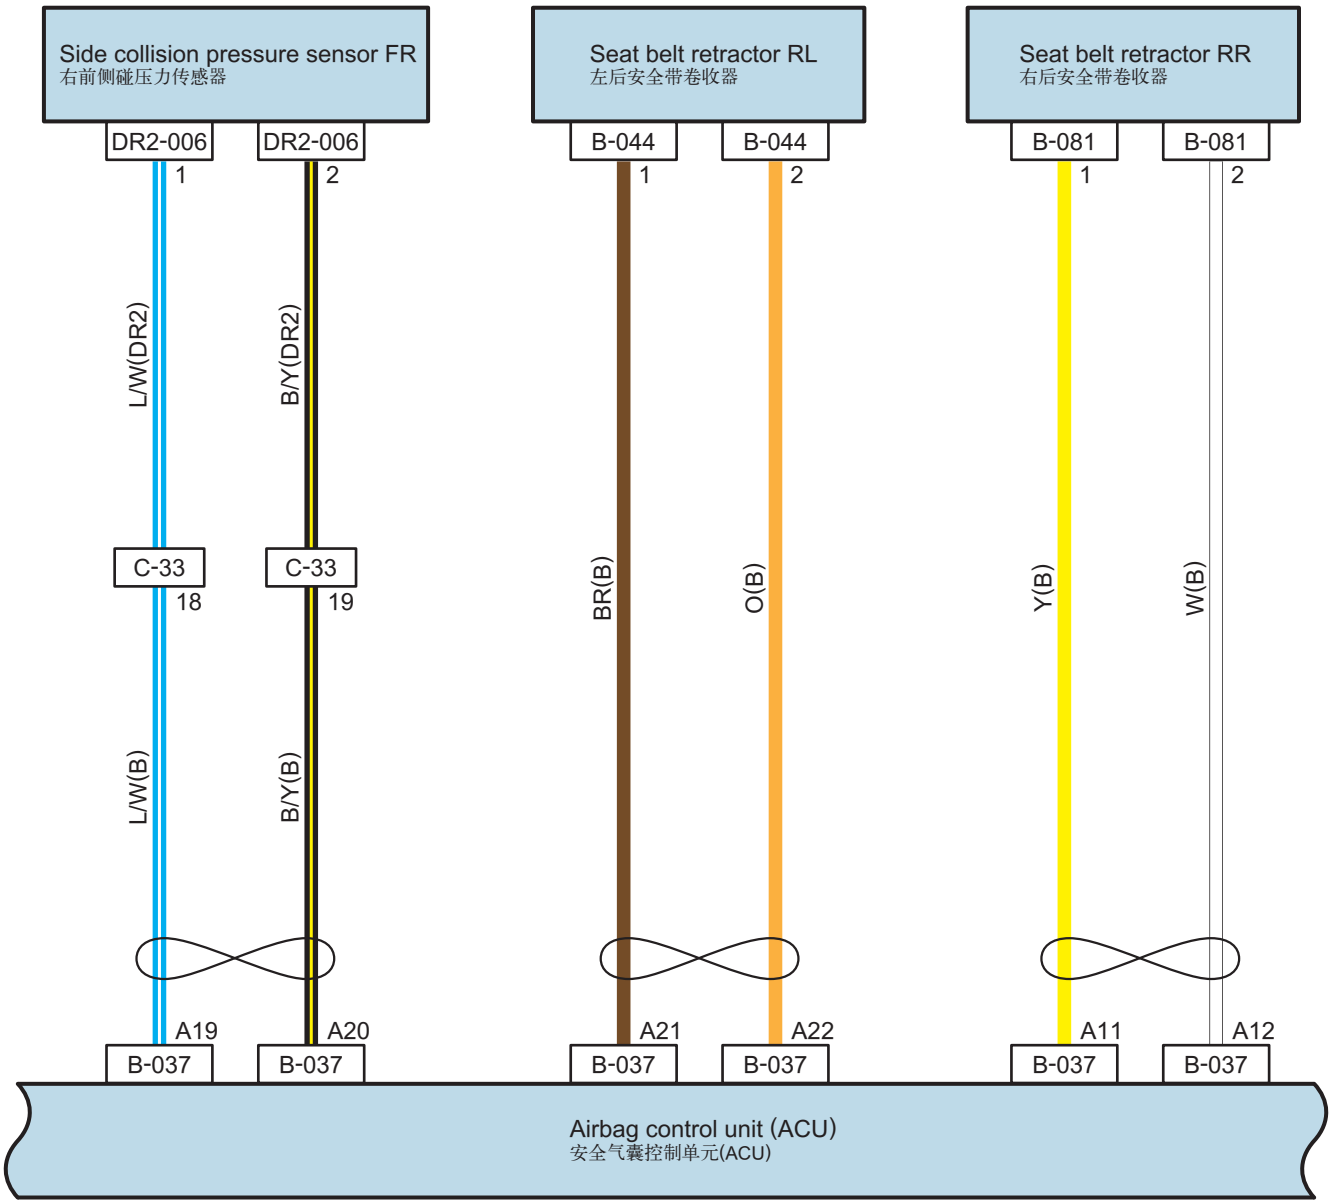

Front right door control unit (PDCU)
右前车门控制单元(PDCU)
DR2-005
C18
G(DR2)
C-33
28
G(B)
Rear left door control aunit
左后车门控制单元
DR3-007
C18
G(DR3)
C-36
9
G(B)
Rear right door control unit
右后车门控制单元
DR4-007
C18
G(DR4)
C-37
11
G(B)
Airbag control unit (ACU)
安全气囊控制单元(ACU)

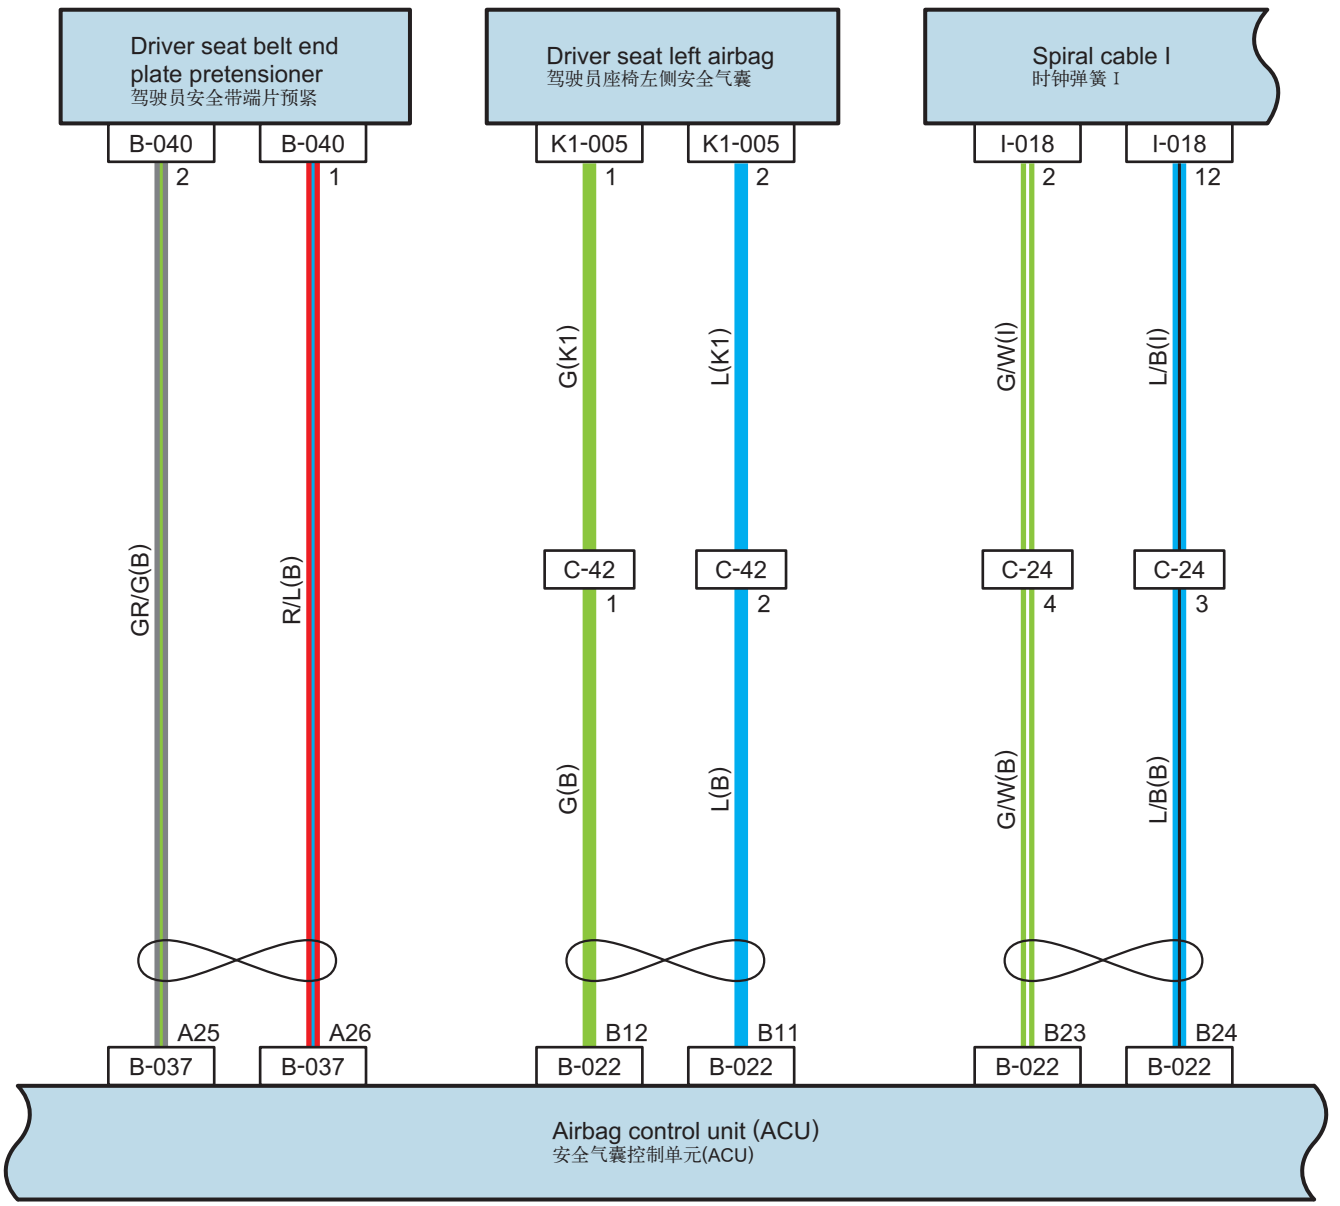

Energy conversion and distribution unit
能量转换与分配单元
B3-001
A28
G(B3)
C-35
14
G(B)
Intelligent communication domain control unit (ICC)
智能通信域控制单元(ICC)
B-091
A17
G(B)
Intelligent vehicle control platform control unit (VDC)
智能车控平台控制单元(VDC)
B-023
A36
G(B)
Airbag control unit (ACU)
安全气囊控制单元(ACU)

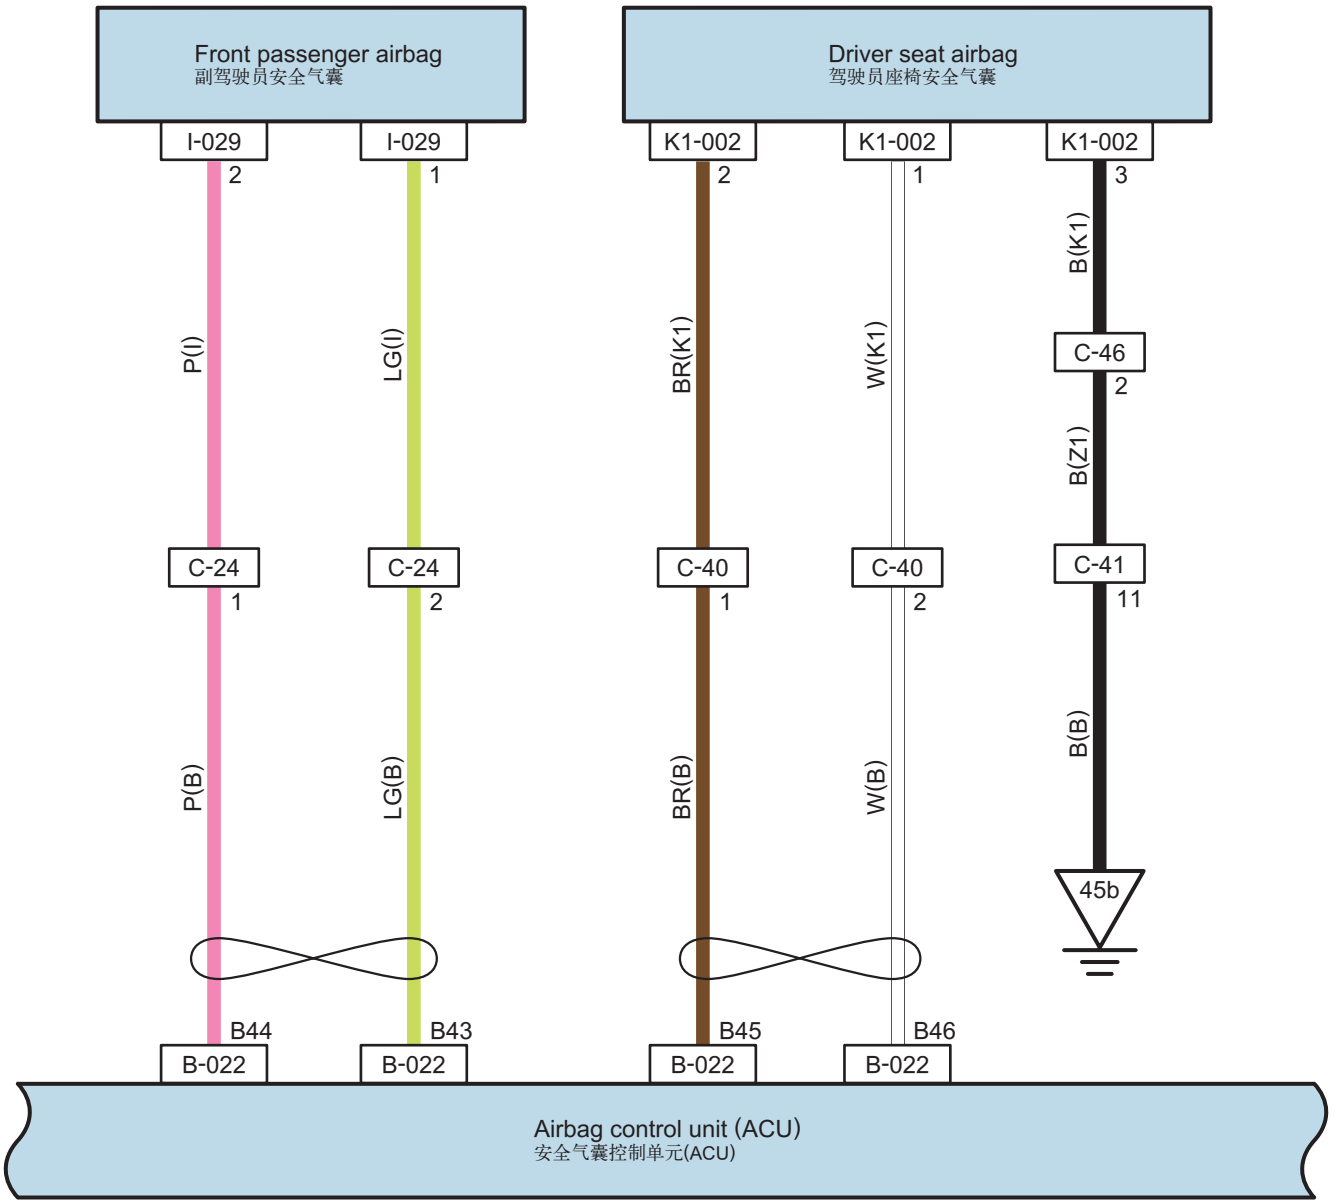

Seat belt retractor FL
左前安全带卷收器
B-038
B-038
1
2
R/B(B)
GR/V(B)
B52
B51
B-022
B-022
Seat belt retractor FR
右前安全带卷收器
B-076
B-076
1
2
BR(B)
LG(B)
B30
B29
B-022
B-022
Left side curtain shield airbag
左侧侧气帘
B-001
B-001
1
2
B/O(B)
G/O(B)
B27
B28
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

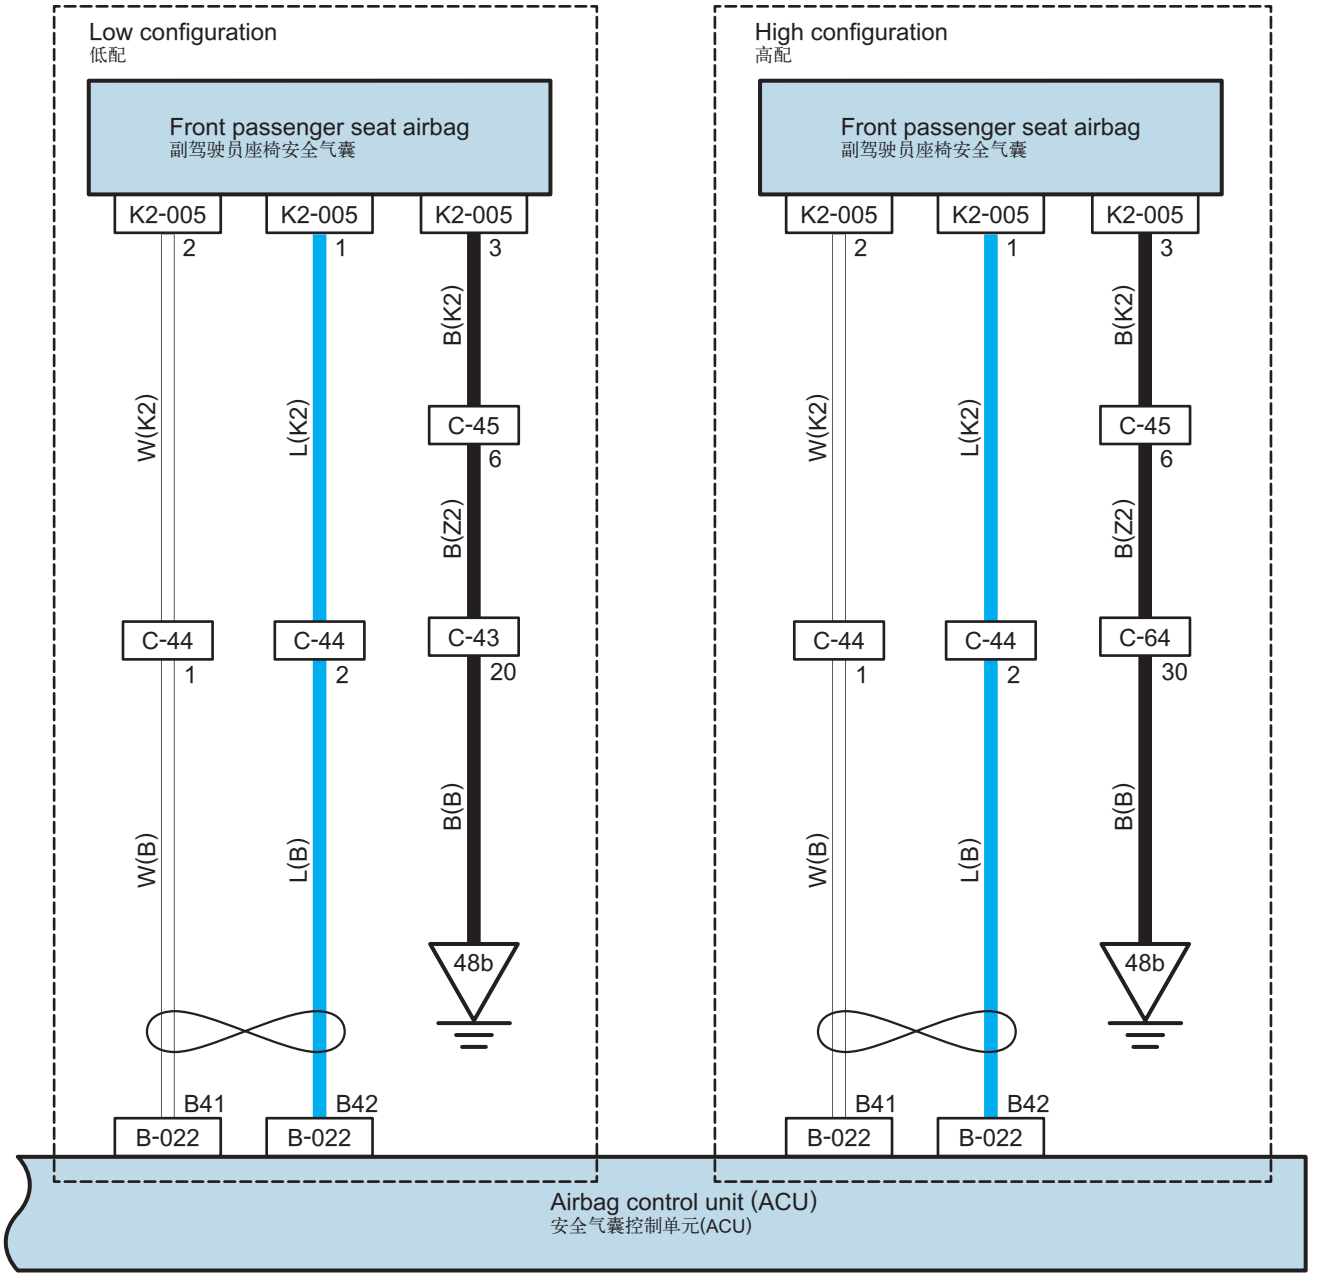

Right side curtain shield airbag
右侧侧气帘
B-017
1
B-017
2
GR(B)
W(B)
B48
B47
B-022
B-022
Gravity acceleration sensor FL
左前重力加速度传感器
F-019
1
F-019
2
L/G(F)
BR/G(F)
C-09
26
C-09
35
L/G(B)
BR/G(B)
B3
B4
B-022
B-022
Gravity acceleration sensor FR
右前重力加速度传感器
F-011
1
F-011
2
G(F)
BR/R(F)
C-09
34
C-09
25
G(B)
BR/R(B)
B1
B2
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

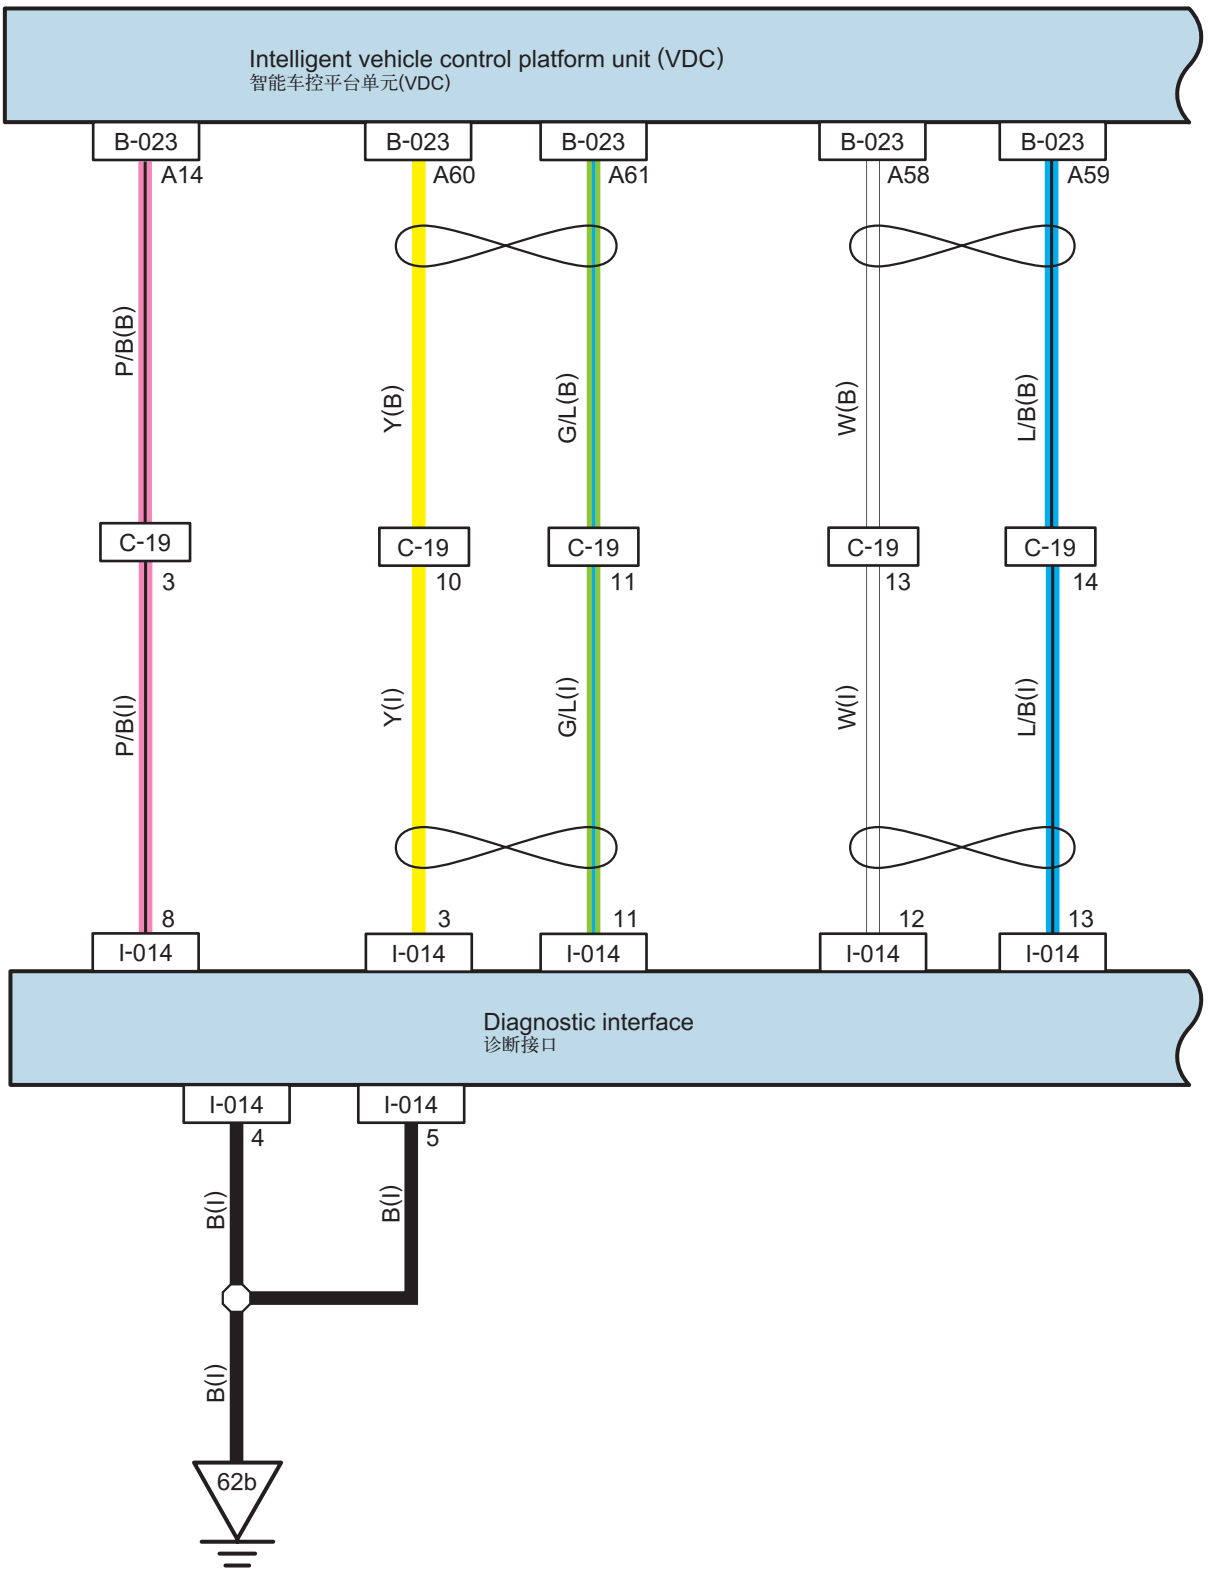

Passenger side acceleration side collision sensor
乘客侧加速度侧碰传感器
B-075
1
B-075
2
Y/W(B)
L(B)
B5
B6
B-022
B-022
Driver acceleration side collision sensor
驾驶员加速度侧碰传感器
B-039
1
B-039
2
B/R(B)
BR(B)
B9
B10
B-022
B-022
Side collision pressure sensor FL
左前侧碰压力传感器
DR1-006
1
DR1-006
2
L/R(DR1)
R/L(DR1)
C-32
11
C-32
12
L/R(B)
R/L(B)
B13
B14
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

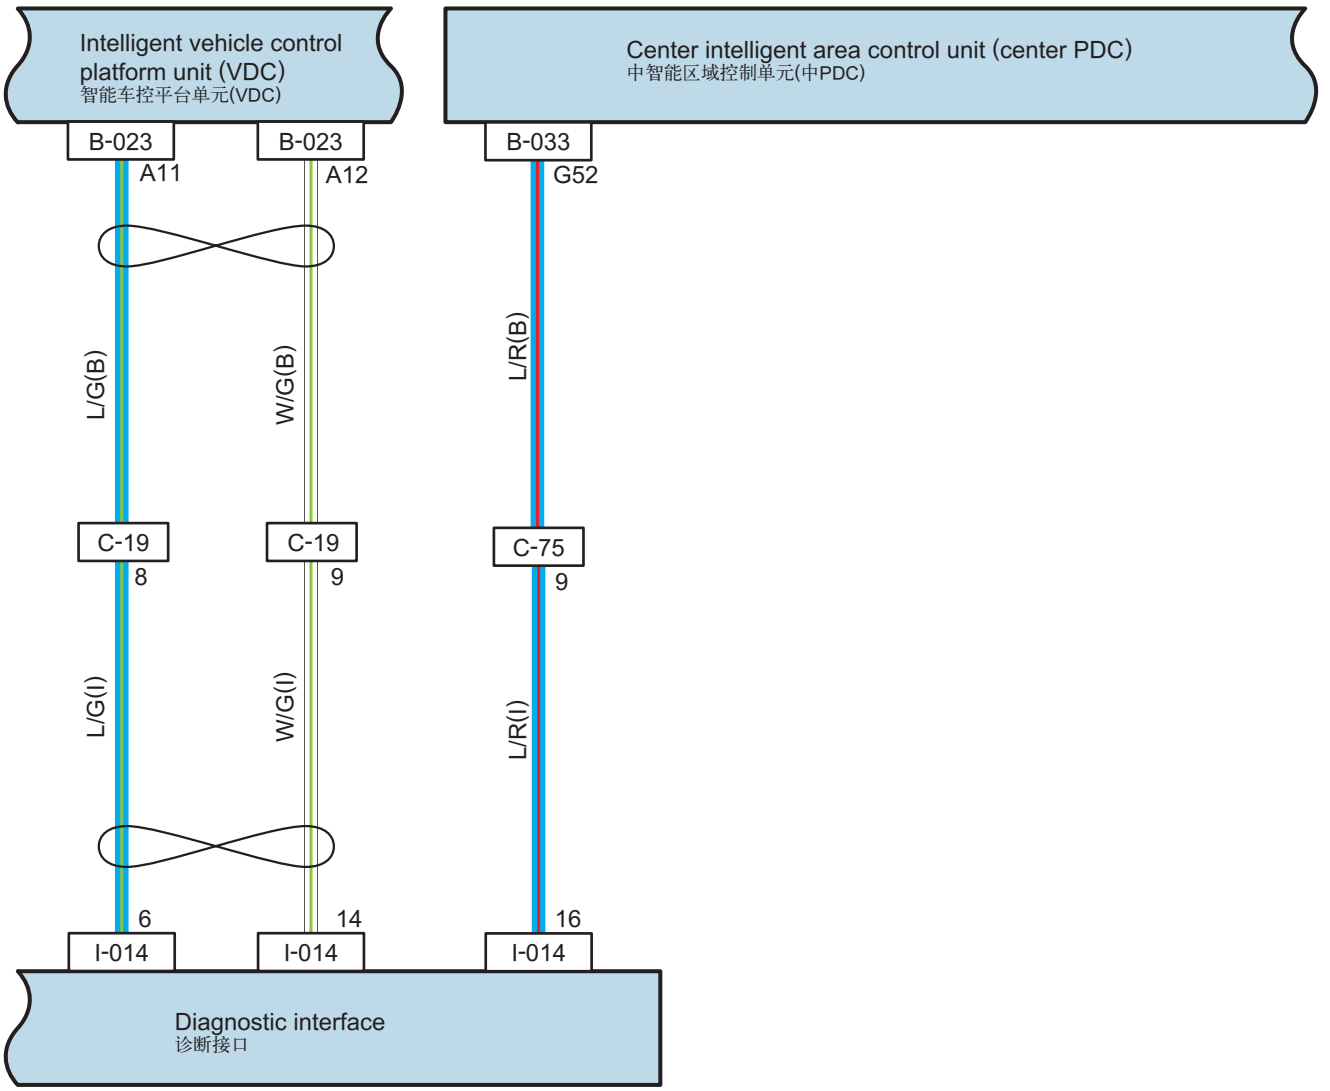

Side collision pressure sensor FR
右前侧碰压力传感器
DR2-006
1
DR2-006
2
L/W(DR2)
B/Y(DR2)
C-33
18
C-33
19
L/W(B)
B/Y(B)
A19
A20
B-037
B-037
Seat belt retractor RL
左后安全带卷收器
B-044
1
B-044
2
BR(B)
O(B)
A21
A22
B-037
B-037
Seat belt retractor RR
右后安全带卷收器
B-081
1
B-081
2
Y(B)
W(B)
A11
A12
B-037
B-037
Airbag control unit (ACU)
安全气囊控制单元(ACU)

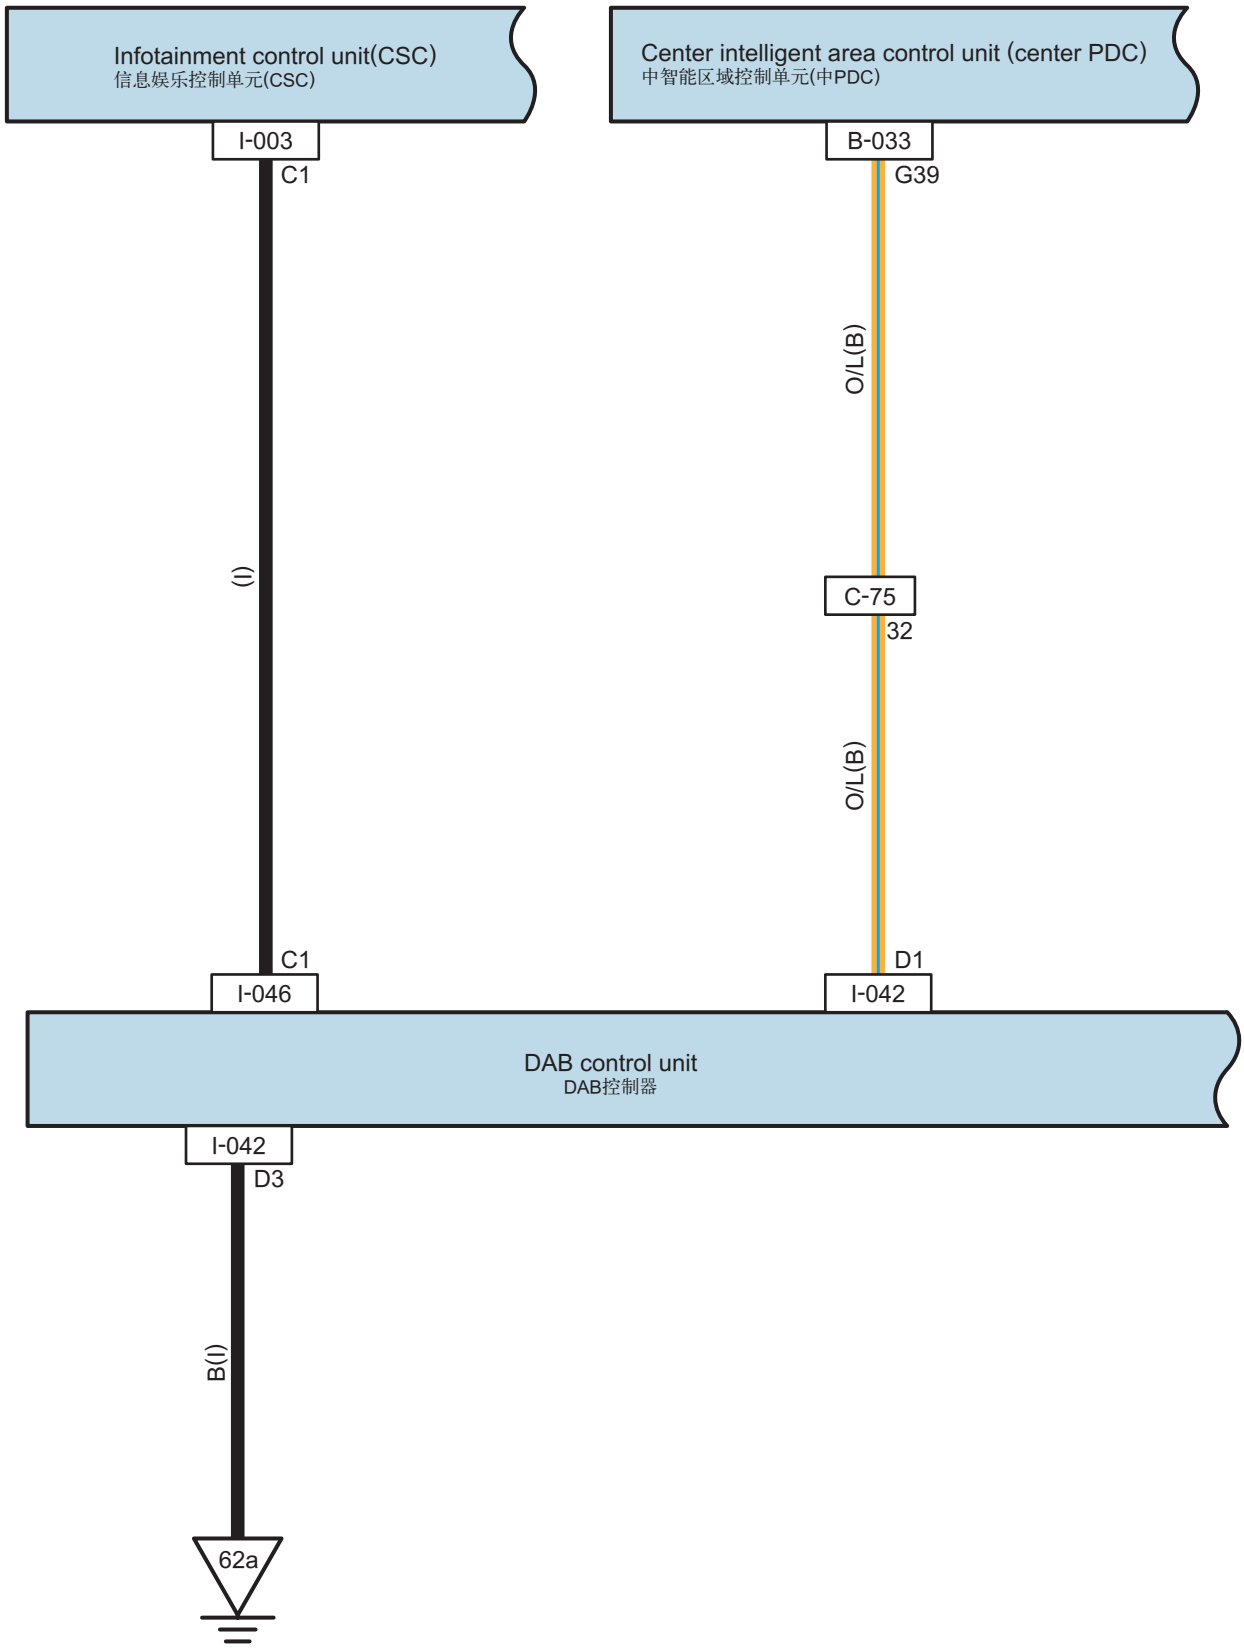

Driver seat belt end plate pretensioner
驾驶员安全带端片预紧
B-040
2
B-040
1
GR/G(B)
R/L(B)
A25
A26
B-037
B-037
Driver seat left airbag
驾驶员座椅左侧安全气囊
K1-005
1
K1-005
2
G(K1)
L(K1)
C-42
1
C-42
2
G(B)
L(B)
B12
B11
B-022
B-022
Spiral cable I
时钟弹簧 I
I-018
2
I-018
12
G/W(I)
L/B(I)
C-24
4
C-24
3
G/W(B)
L/B(B)
B23
B24
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

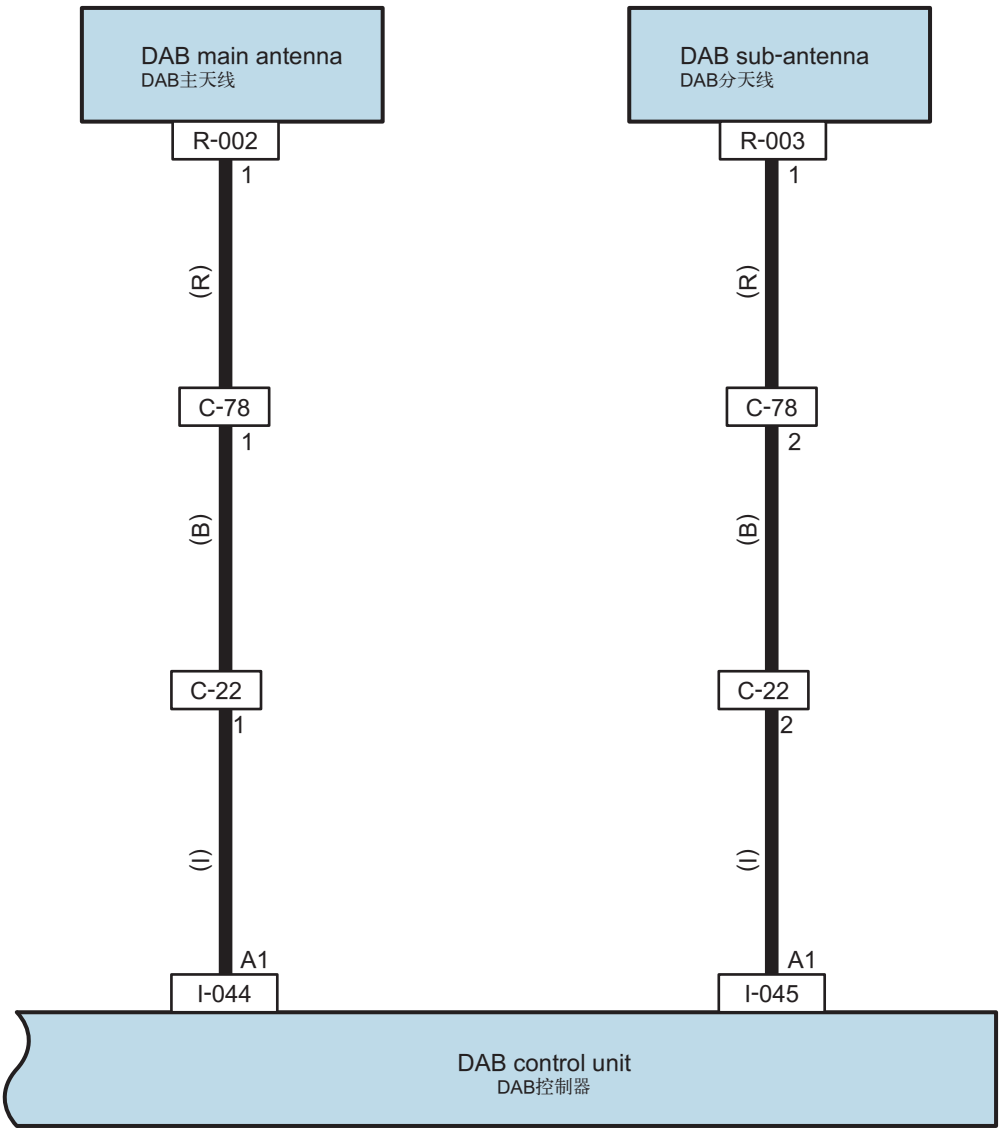

Front passenger airbag
副驾驶员安全气囊
Driver seat airbag
驾驶员座椅安全气囊
I-029
2
I-029
1
K1-002
2
K1-002
1
K1-002
3
P(I)
LG(I)
BR(K1)
W(K1)
B(K1)
C-46
2
B(Z1)
C-24
1
C-24
2
C-40
1
C-40
2
C-41
11
P(B)
LG(B)
BR(B)
W(B)
B(B)
45b
B44
B43
B45
B46
B-022
B-022
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)


Low configuration
低配
Front passenger seat airbag
副驾驶员座椅安全气囊
K2-005
2
K2-005
1
K2-005
3
W(K2)
L(K2)
B(K2)
C-45
6
B(Z2)
C-44
1
C-44
2
C-43
20
W(B)
L(B)
B(B)
48b
B41
B42
B-022
B-022
High configuration
高配
Front passenger seat airbag
副驾驶员座椅安全气囊
K2-005
2
K2-005
1
K2-005
3
W(K2)
L(K2)
B(K2)
C-45
6
B(Z2)
C-44
1
C-44
2
C-64
30
W(B)
L(B)
B(B)
48b
B41
B42
B-022
B-022
Airbag control unit (ACU)
安全气囊控制单元(ACU)

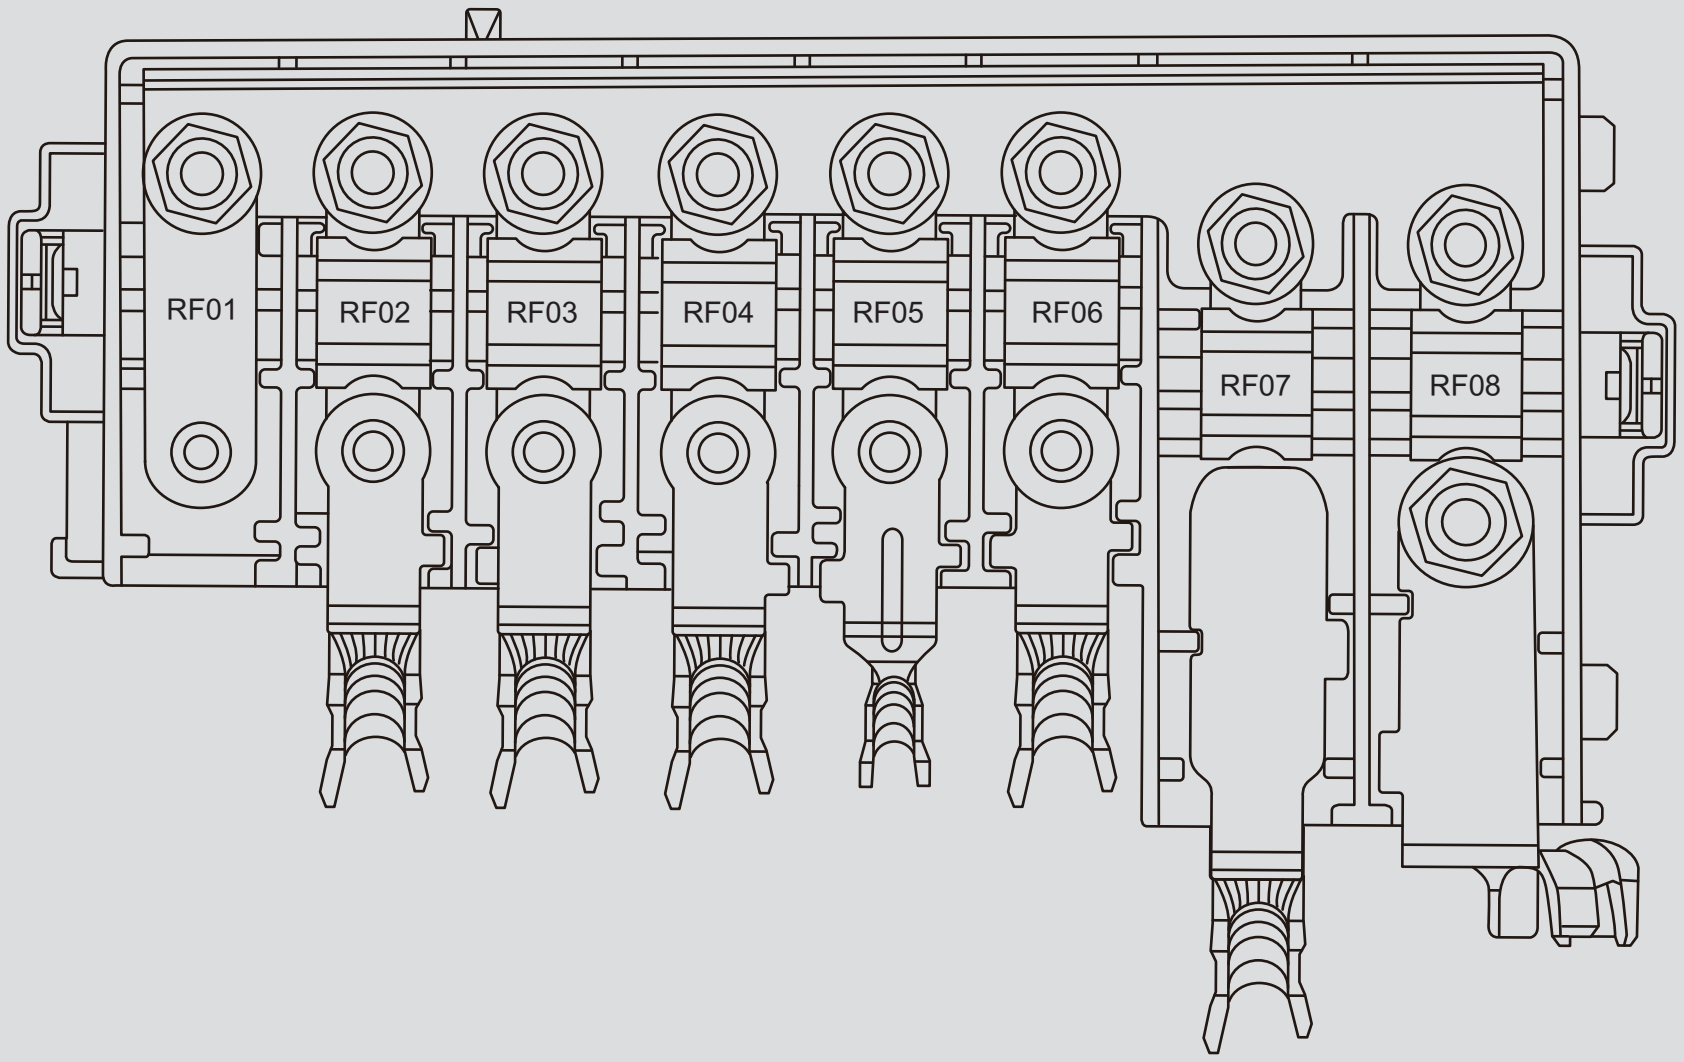

Intelligent vehicle control platform unit (VDC)
智能车控平台单元(VDC)
B-023
A14
B-023
A60
B-023
A61
B-023
A58
B-023
A59
P/B(B)
Y(B)
G/L(B)
W(B)
L/B(B)
C-19
3
C-19
10
C-19
11
C-19
13
C-19
14
P/B(I)
Y(I)
G/L(I)
W(I)
L/B(I)
8
3
11
12
13
I-014
I-014
I-014
I-014
I-014
Diagnostic interface
诊断接口
I-014
4
I-014
5
B(I)
B(I)
B(I)
62b


Intelligent vehicle control platform unit (VDC)
智能车控平台单元(VDC)
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-023
A11
B-023
A12
B-033
G52
L/G(B)
W/G(B)
L/R(B)
C-19
8
C-19
9
C-75
9
L/G(I)
W/G(I)
L/R(I)
6
14
16
I-014
I-014
I-014
Diagnostic interface
诊断接口


Infotainment control unit(CSC)
信息娱乐控制单元(CSC)
I-003
C1
(I)
C1
I-046
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
B-033
G39
O/L(B)
C-75
32
O/L(B)
D1
I-042
DAB control unit
DAB控制器
I-042
D3
B(I)
62a


DAB main antenna
DAB主天线
DAB sub-antenna
DAB分天线
R-002
1
R-003
1
(R)
(R)
C-78
1
C-78
2
(B)
(B)
C-22
1
C-22
2
(I)
(I)
A1
A1
I-044
I-045
DAB control unit
DAB控制器

Front transfer distribution box
前中转配电盒

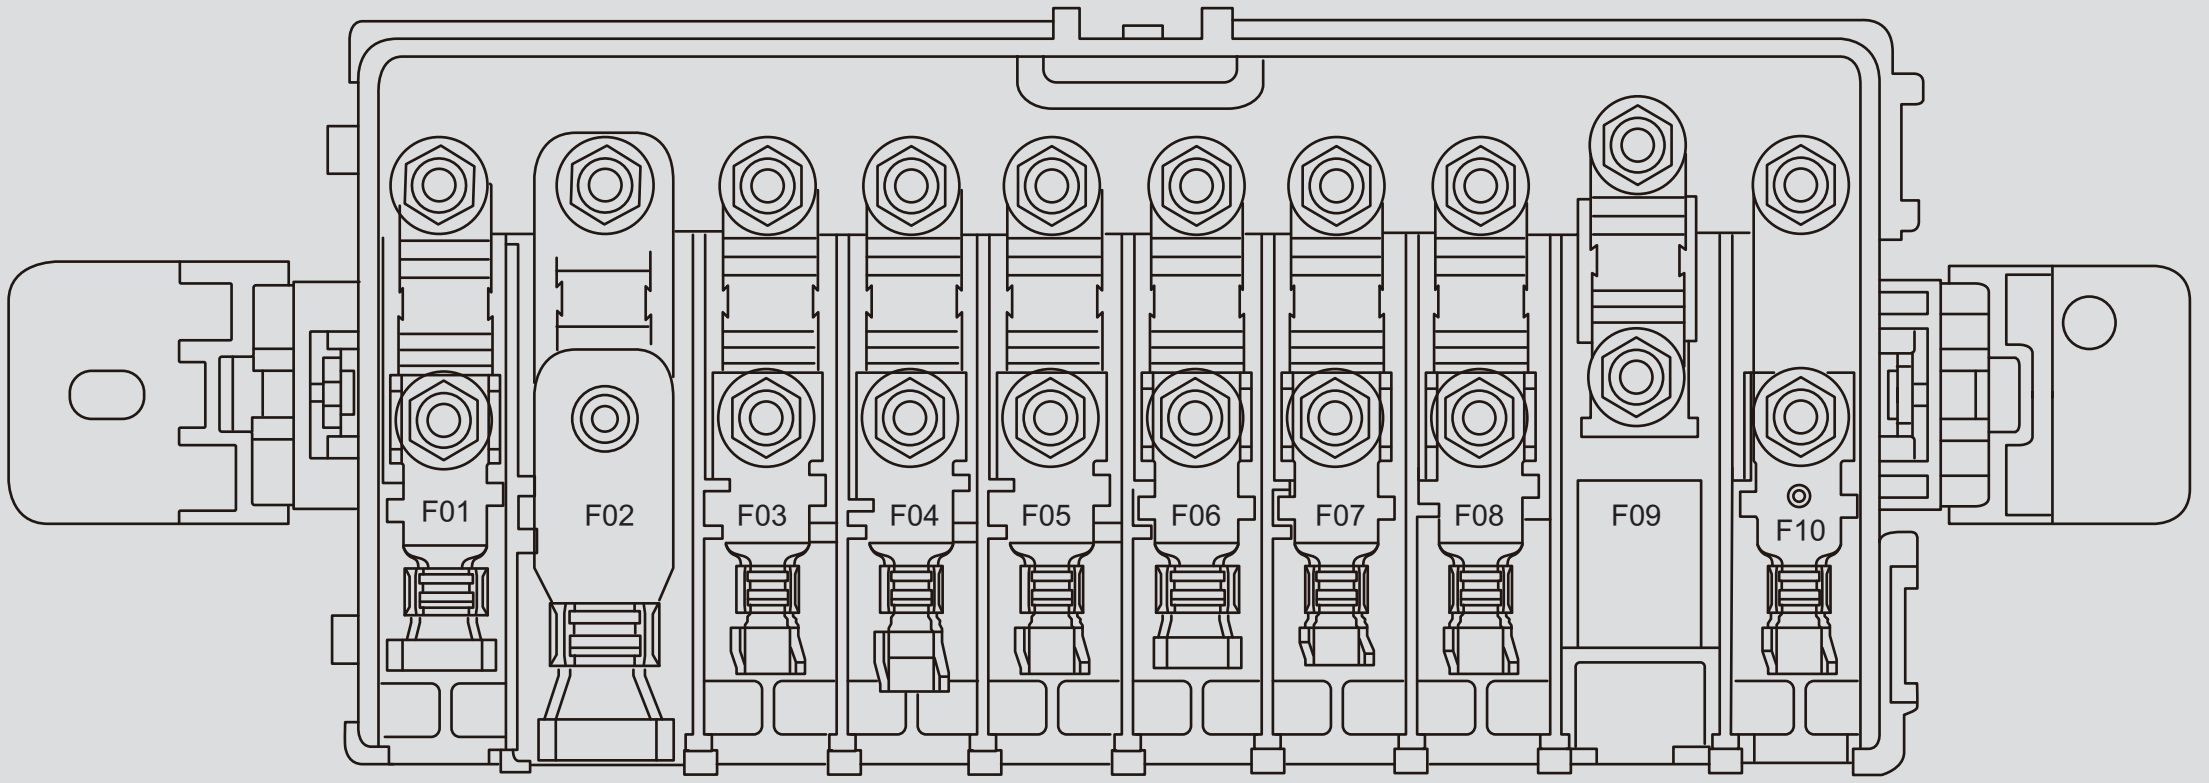


Number 编号	Name 名称	Ampere 安
RF01	Rear transfer box 后中转盒	—
RF02	Heater PTC 风暖PTC	100A
RF03	IBC1	60A
RF04	IBC2	60A
RF05	CSC low configuration CSC低配	30A
RF06	EPS	100A
RF07	Cooling fan 冷却风扇	60A
RF08	Front PDC 前PDC	80A

Power supply and ground information
电源及接地信息

Front transfer distribution box power supply layout
前中转配电盒电源分布

Front transfer distribution box
后中转配电盒

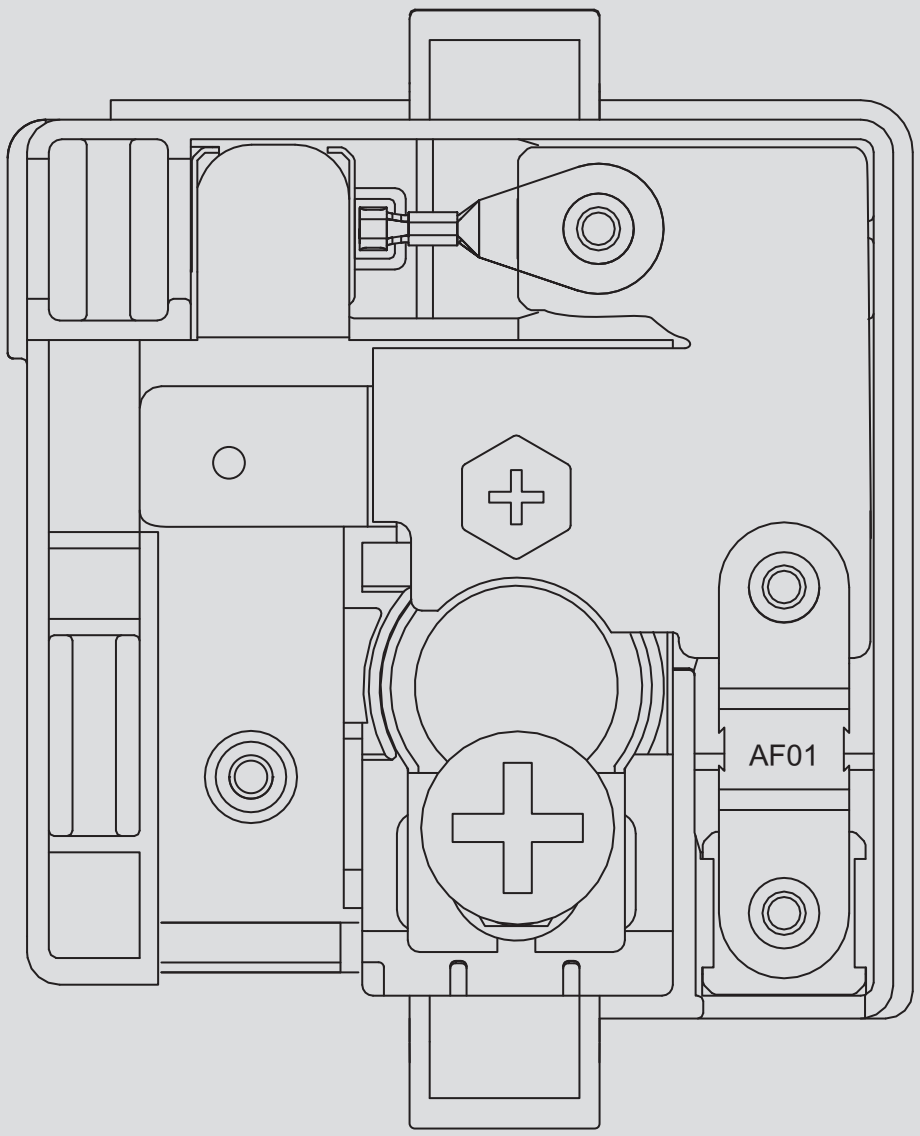


Number 编号	Name 名称	Ampere 安
F01	Battery distribution box 蓄电池配电盒	—
F02	DCDC DCDC	—
F03	Trailer distribution box 拖车配电盒	80A
F04	NFC NFC	5A
F05	Reserved 后PDC	125A
F06	Amplifier 功放	30A
F07	Center PDC 中PDC	100A
F08	Reserved 预留	—
F09	Front transfer distribution box 前中转配电盒	—
F10	Reserved 预留	—

Power supply and ground information
电源及接地信息

Rear transfer distribution box power supply layout
后中转配电盒电源分布

Rear battery distribution box
后蓄电池配电盒

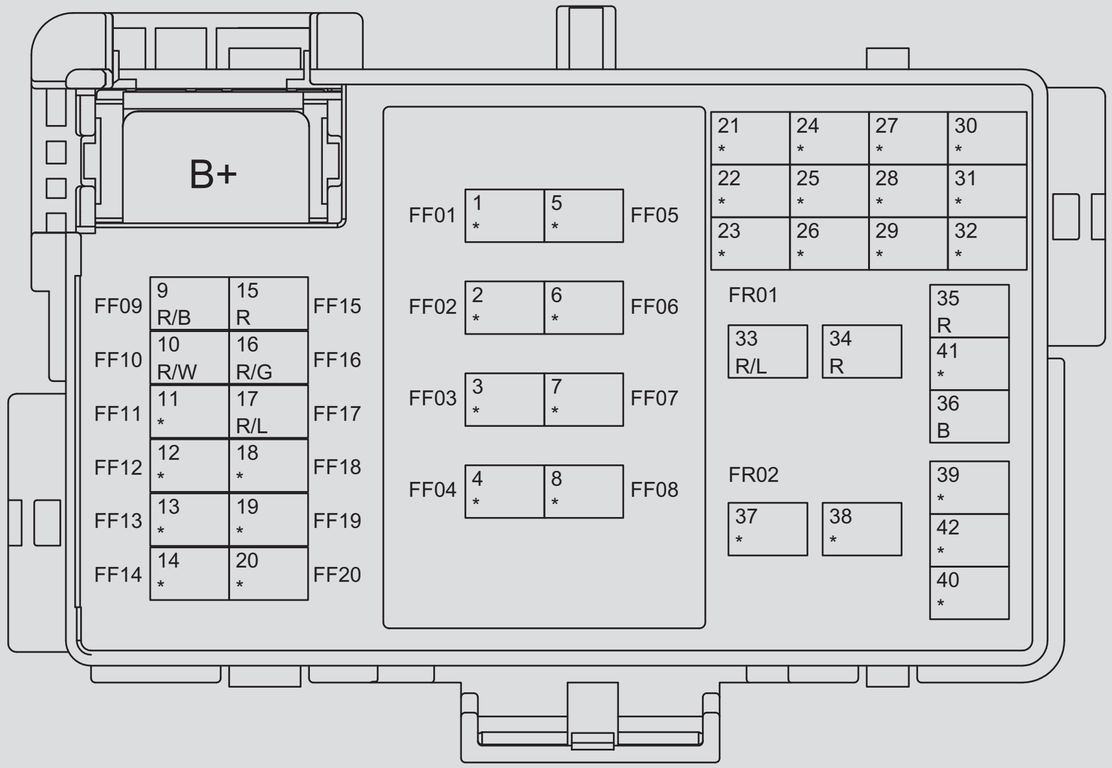


Number 编号	Name 名称	Ampere 安
AF01	Rear transfer box 后中转盒	200A

Power supply and ground information
电源及接地信息

Rear battery distribution box power supply layout
后蓄电池配电盒电源分布

Trailer distribution box
拖车配电盒

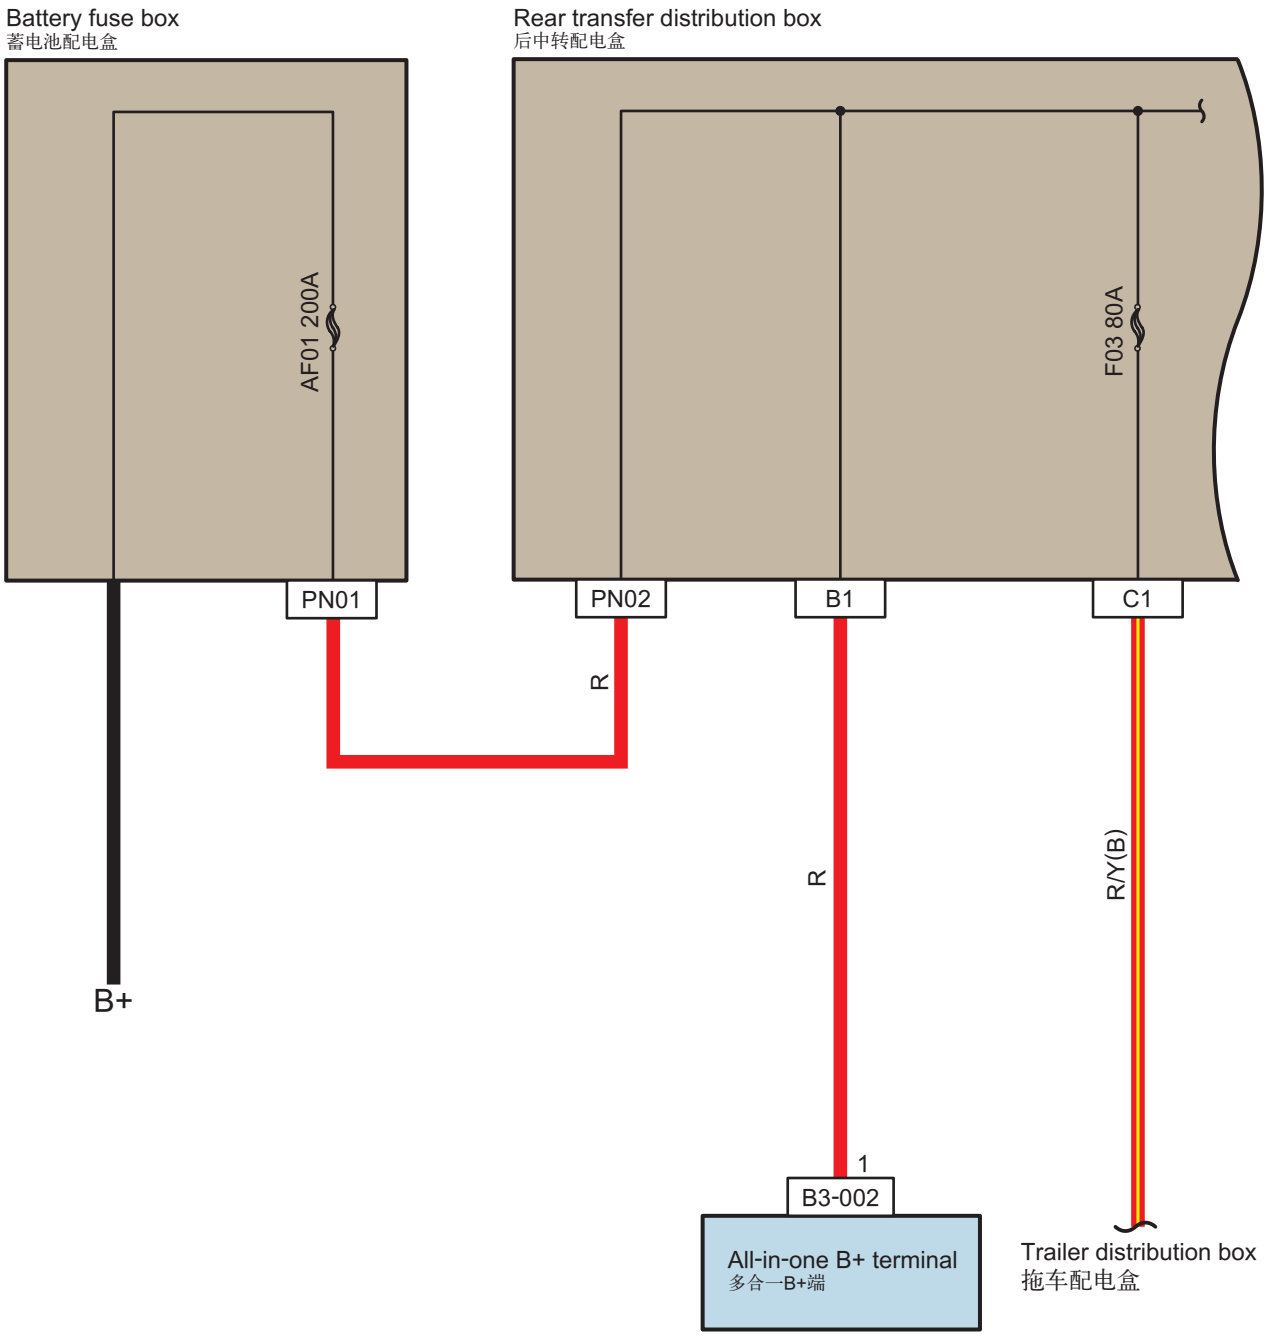


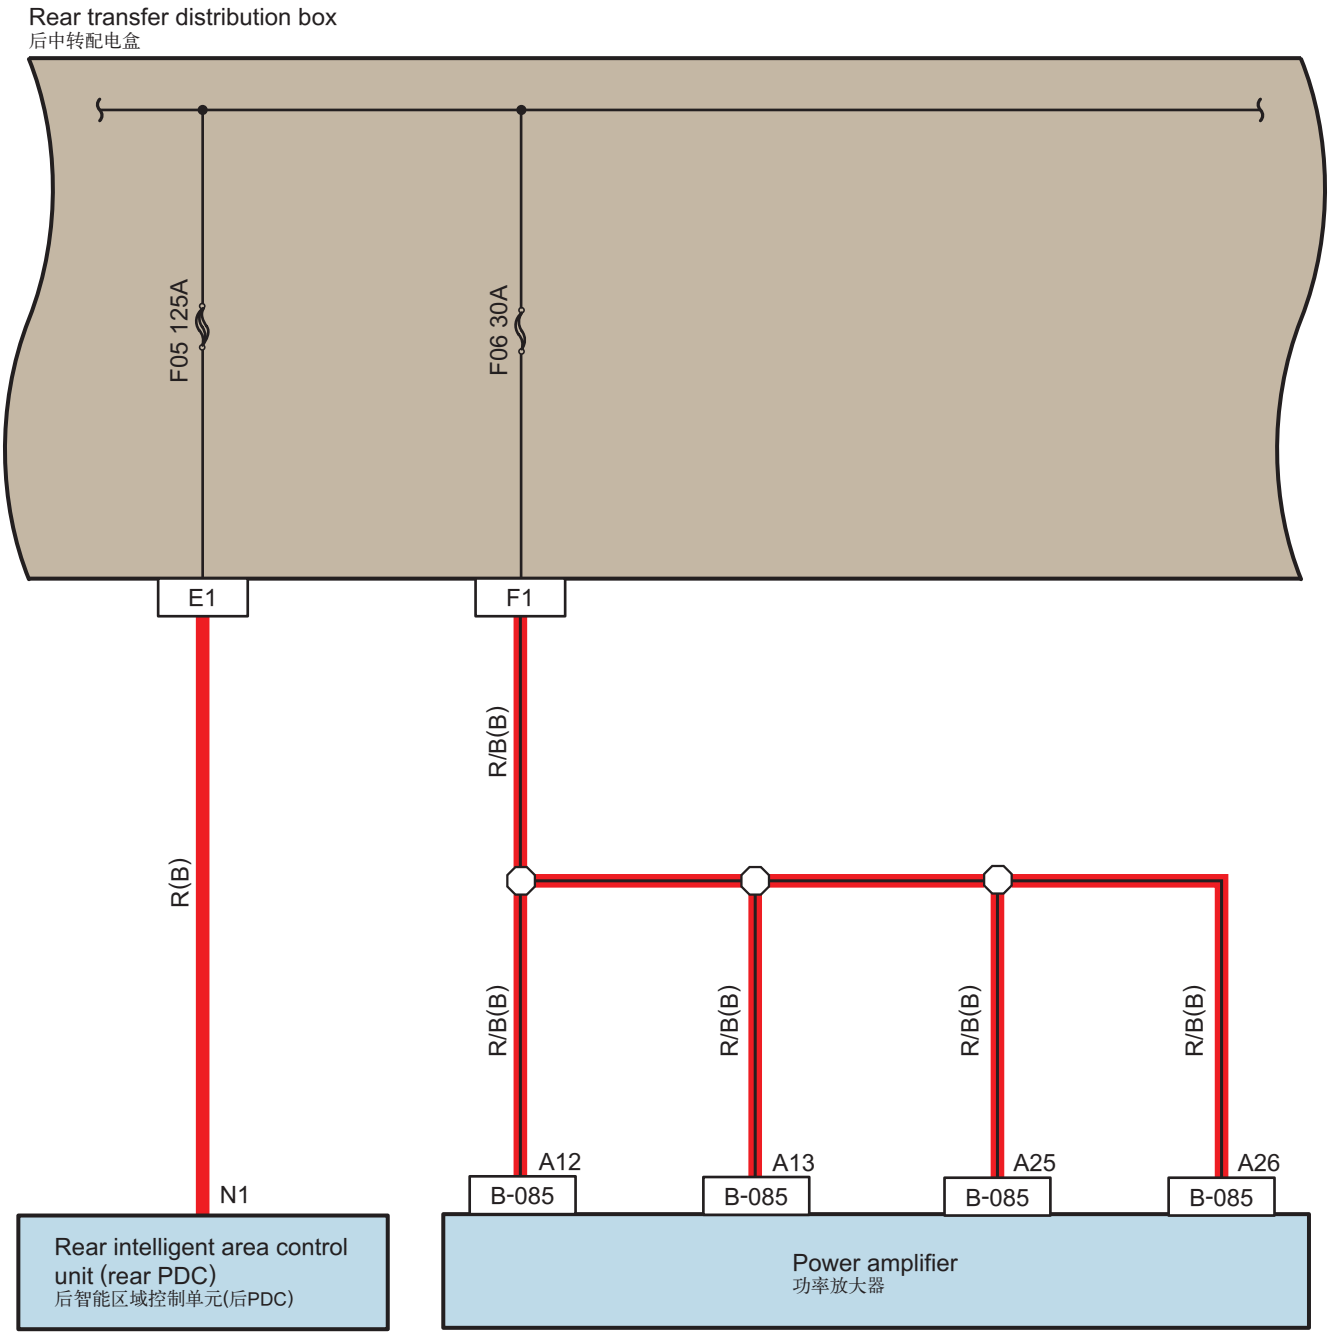
Number 编号	Name 名称	Ampere 安
FF06	Reserved 预留	—
FF07	Reserved 预留	—
FF08	Reserved 预留	—
FF09	Light power supply input 2 灯具电源输入2	20A
FF10	Trailer controller B+ 拖车控制器B+	5A
FF11	Reserved 预留	—
FF12	Reserved 预留	—
FF13	Reserved 预留	—
FF14	Reserved 预留	—
FF15	Light power supply input 1 灯具电源输入1	20A
FF16	Trailer B+ 拖车B+	30A
FF17	Trailer IG 拖车IG	30A
FF18	Reserved 预留	—
FF19	Reserved 预留	—
FF20	Reserved 预留	—
FR01	Trailer IG relay 拖车IG继电器	—
FR02	Reserved 预留	—

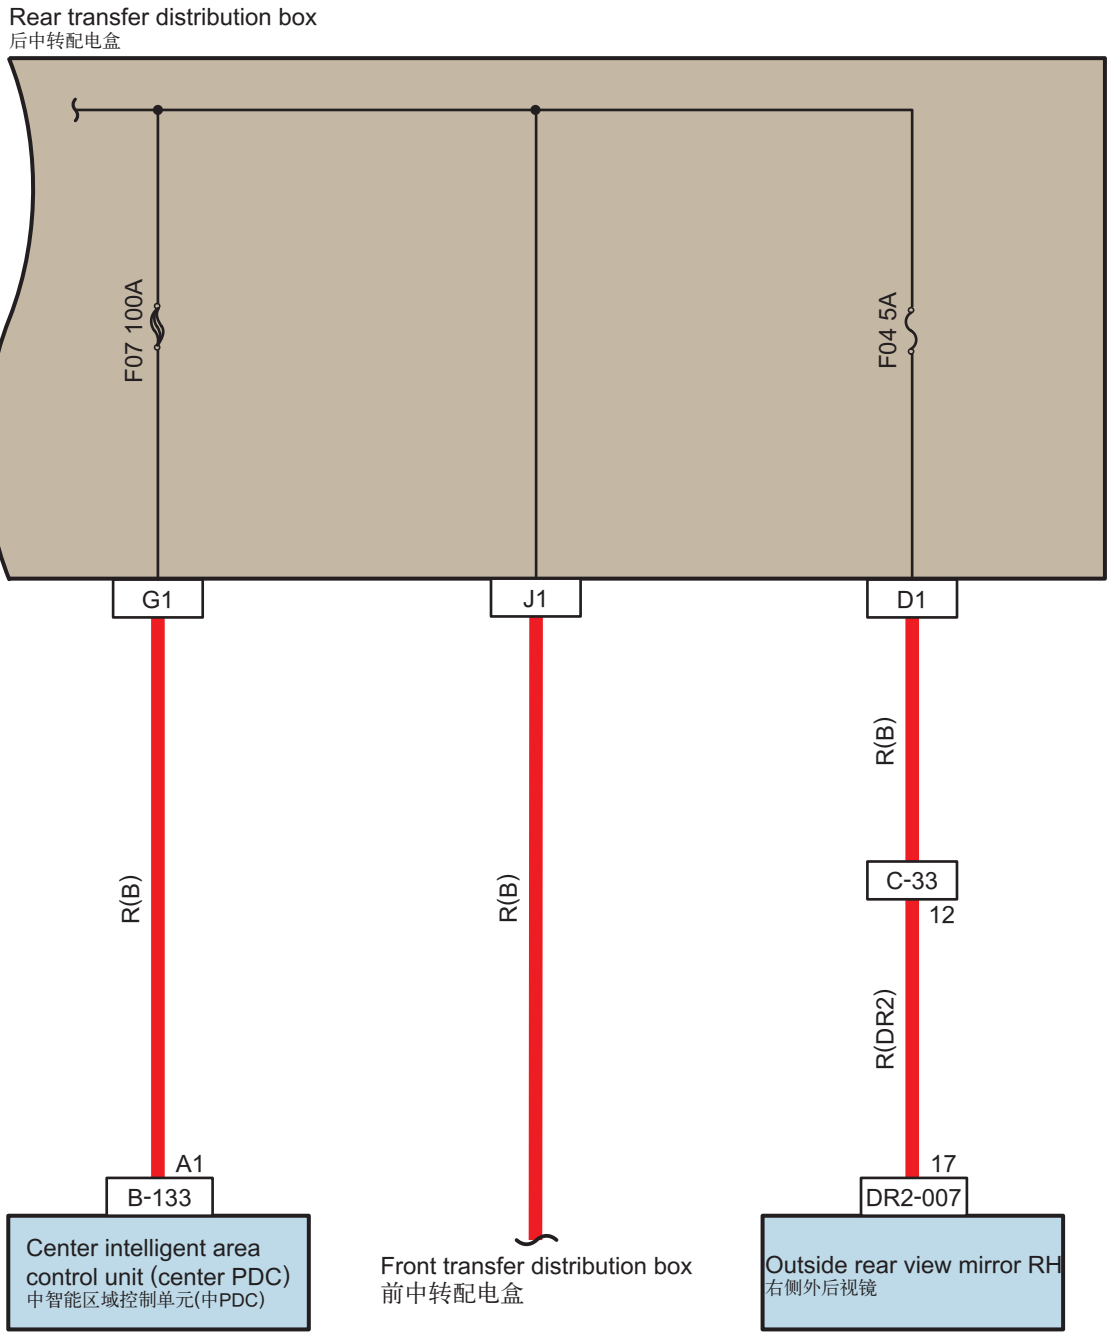
Number 编号	Name 名称	Ampere 安
FF01	Reserved 预留	—
FF02	Reserved 预留	—
FF03	Reserved 预留	—
FF04	Reserved 预留	—
FF05	Reserved 预留	—

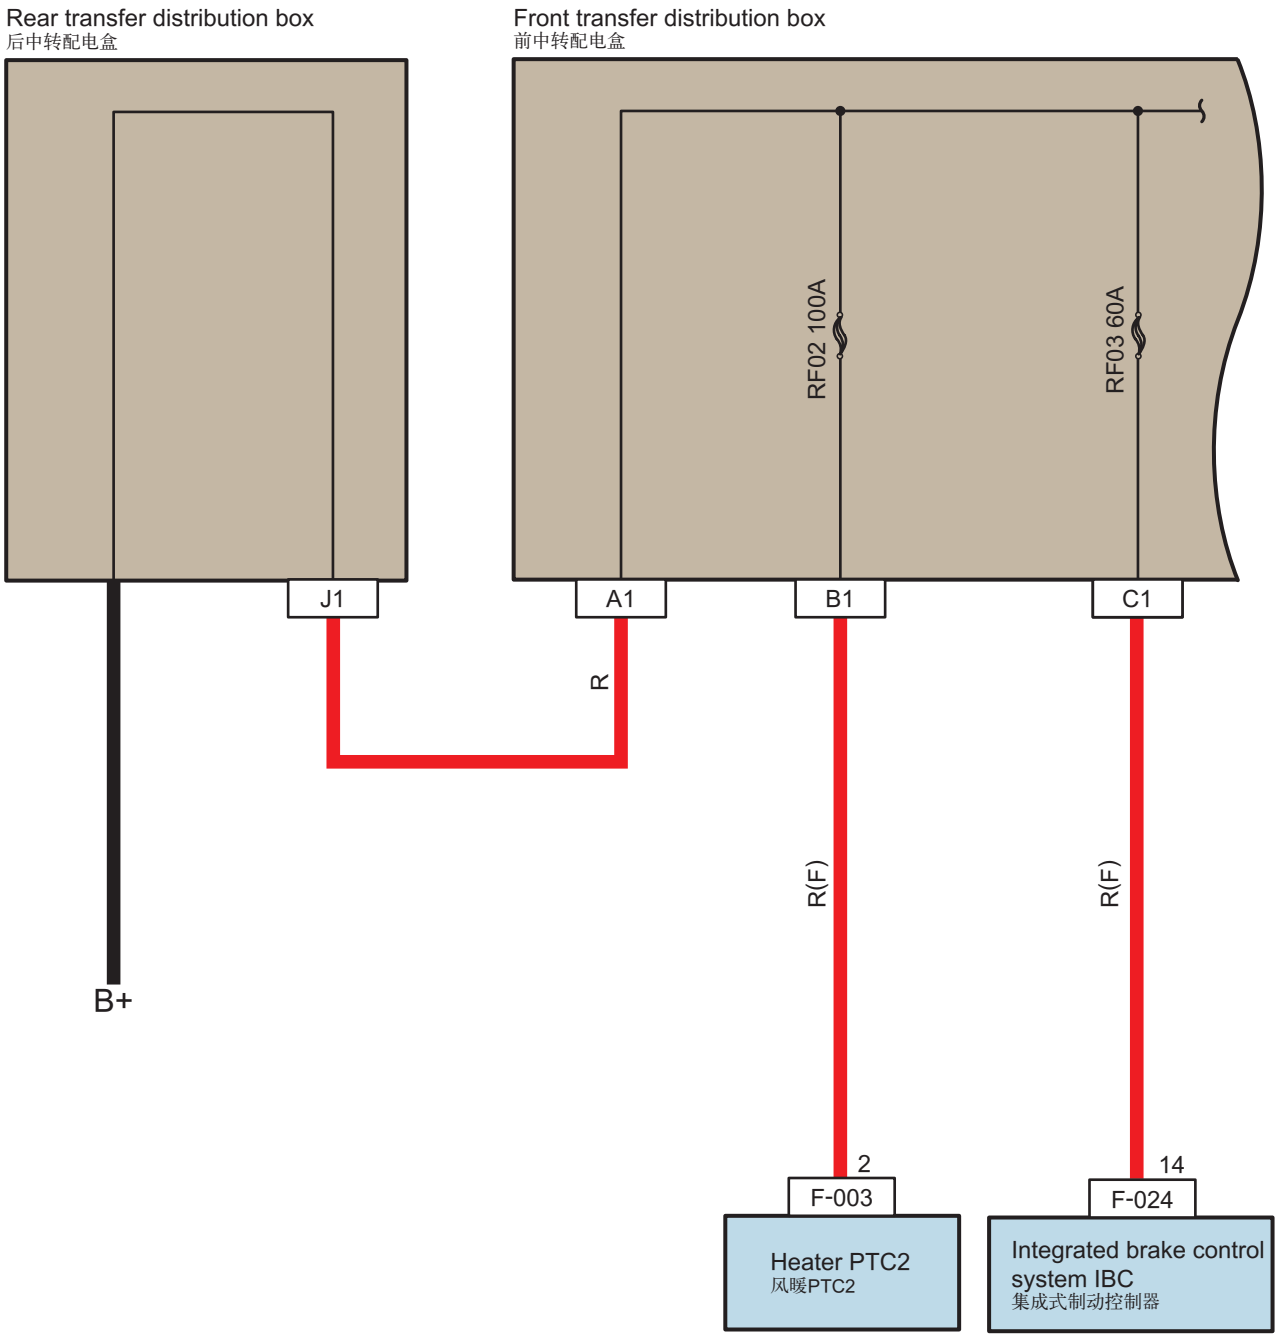
Power supply and ground information
电源及接地信息

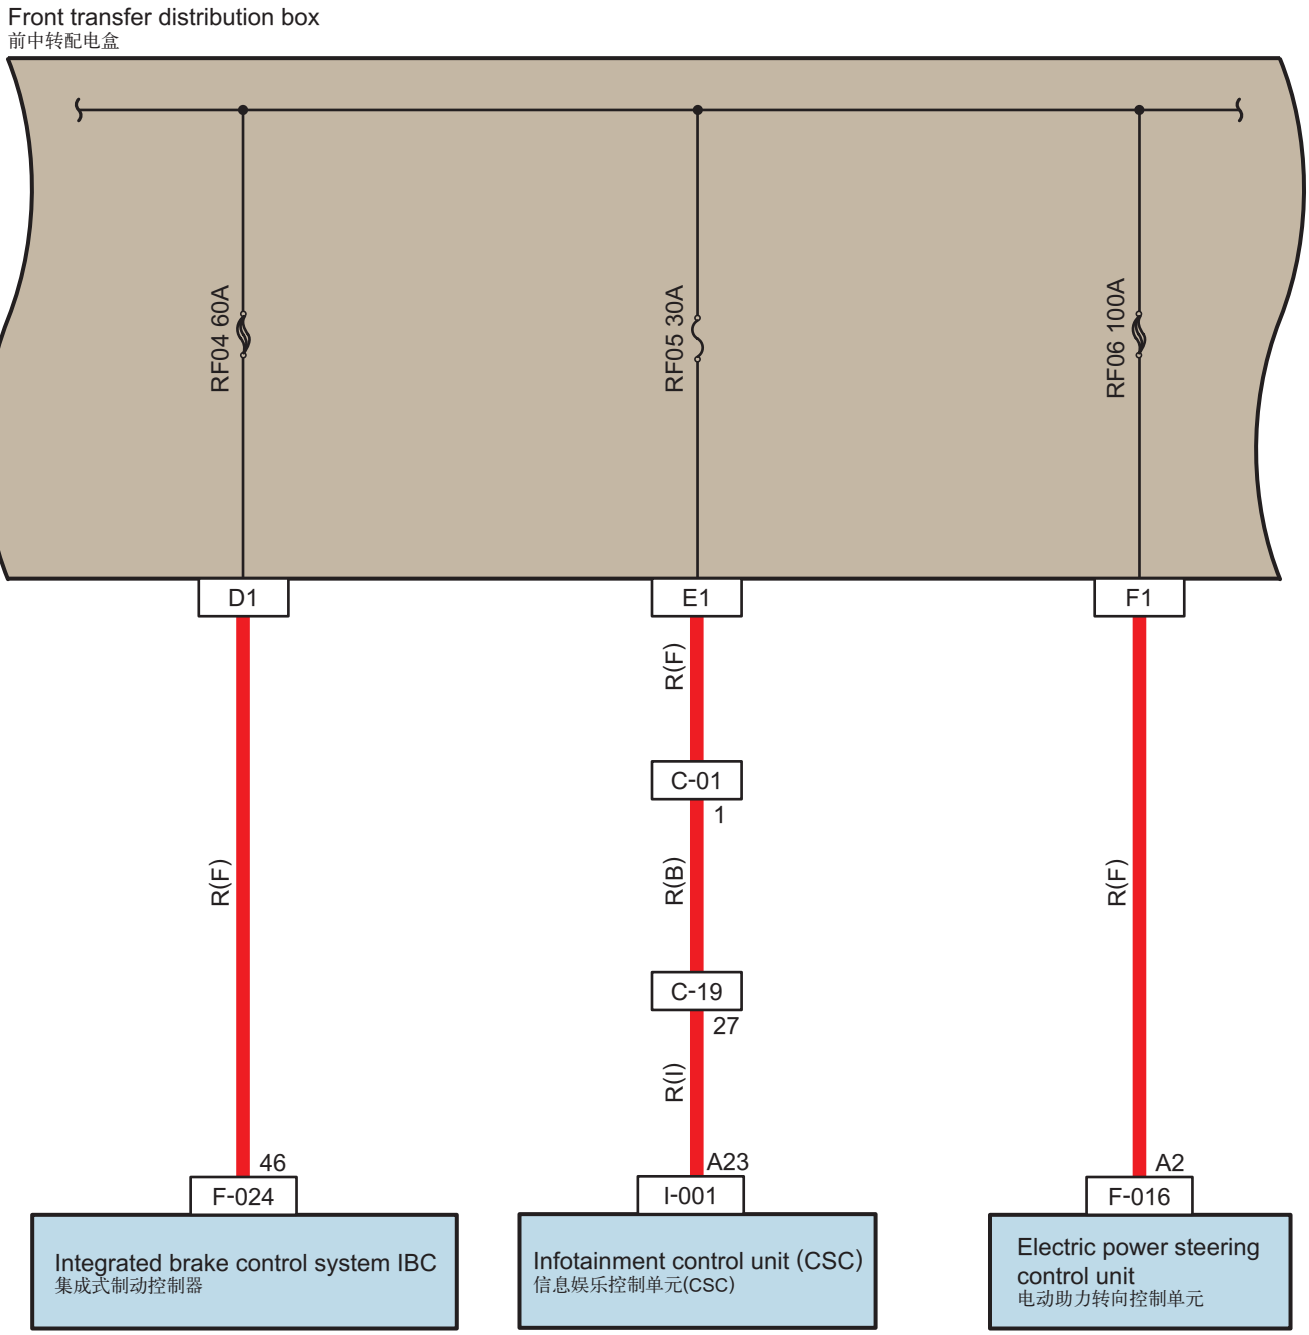
Trailer distribution box power supply layout
拖车配电盒电源分布

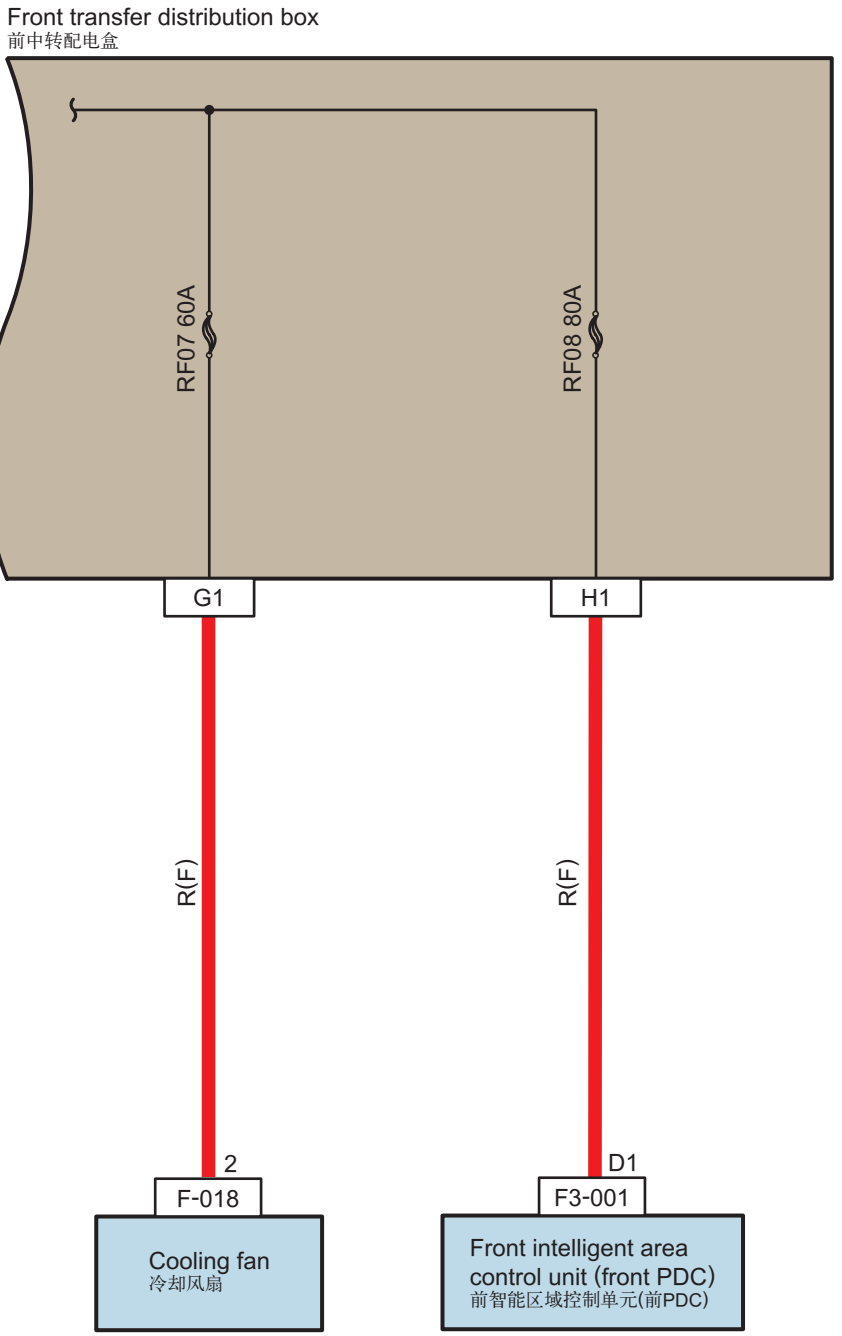

Battery fuse box
蓄电池配电盒
Rear transfer distribution box
后中转配电盒
AF01 200A
F03 80A
PN01
PN02
B1
C1
R
R
R/Y(B)
B+
1
B3-002
All-in-one B+ terminal
多合一B+端
Trailer distribution box
拖车配电盒

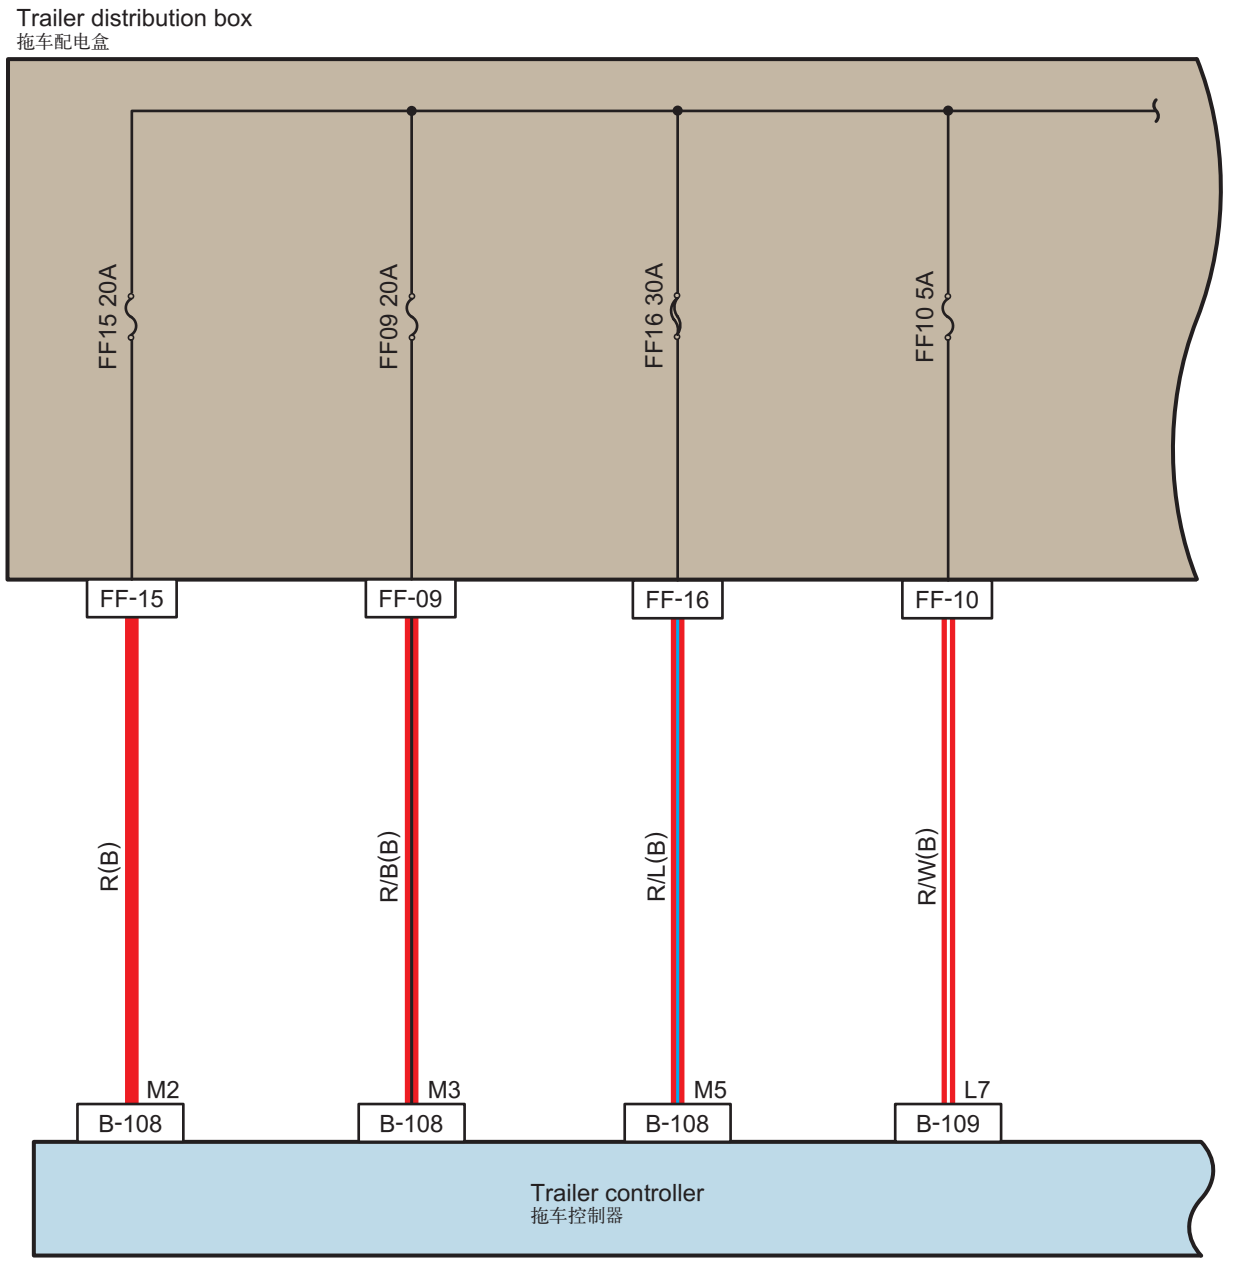

Rear transfer distribution box
后中转配电盒
F05 125A
F06 30A
E1
F1
R(B)
R/B(B)
R/B(B)
R/B(B)
R/B(B)
R/B(B)
A12
A13
A25
A26
B-085
B-085
B-085
B-085
N1
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Power amplifier
功率放大器

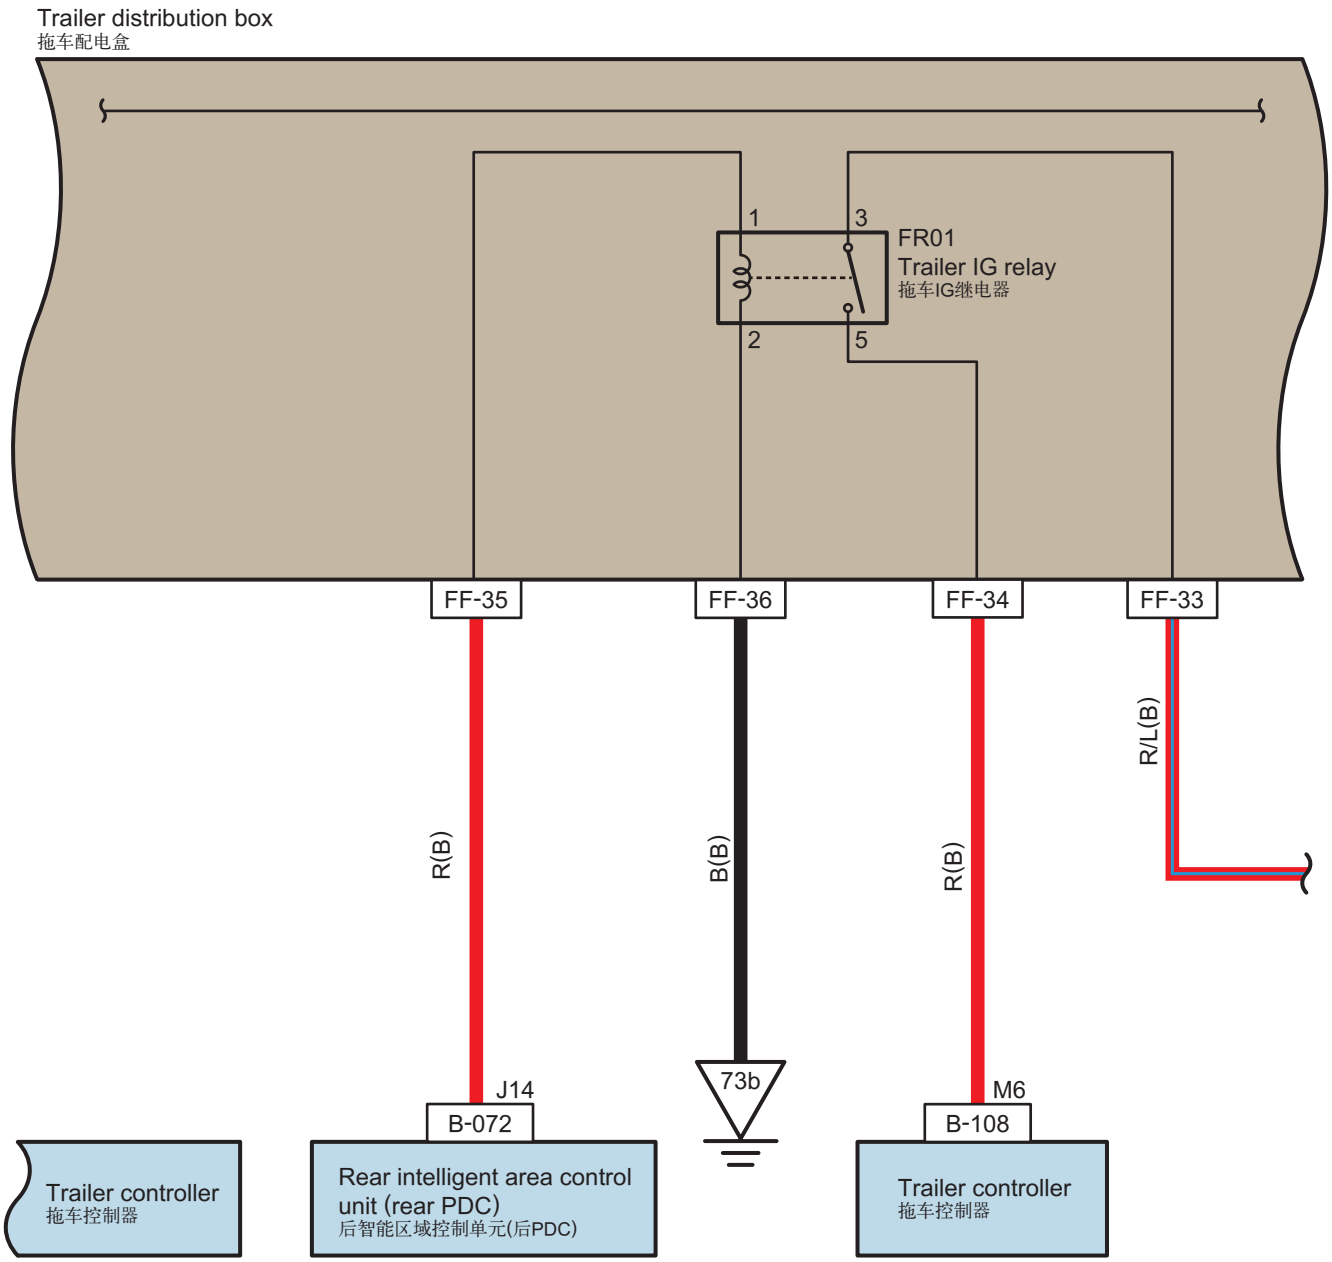

Rear transfer distribution box
后中转配电盒
F07 100A
F04 5A
G1
J1
D1
R(B)
R(B)
R(B)
C-33
12
R(DR2)
A1
17
B-133
DR2-007
Center intelligent area control unit (center PDC)
中智能区域控制单元(中PDC)
Front transfer distribution box
前中转配电盒
Outside rear view mirror RH
右侧外后视镜

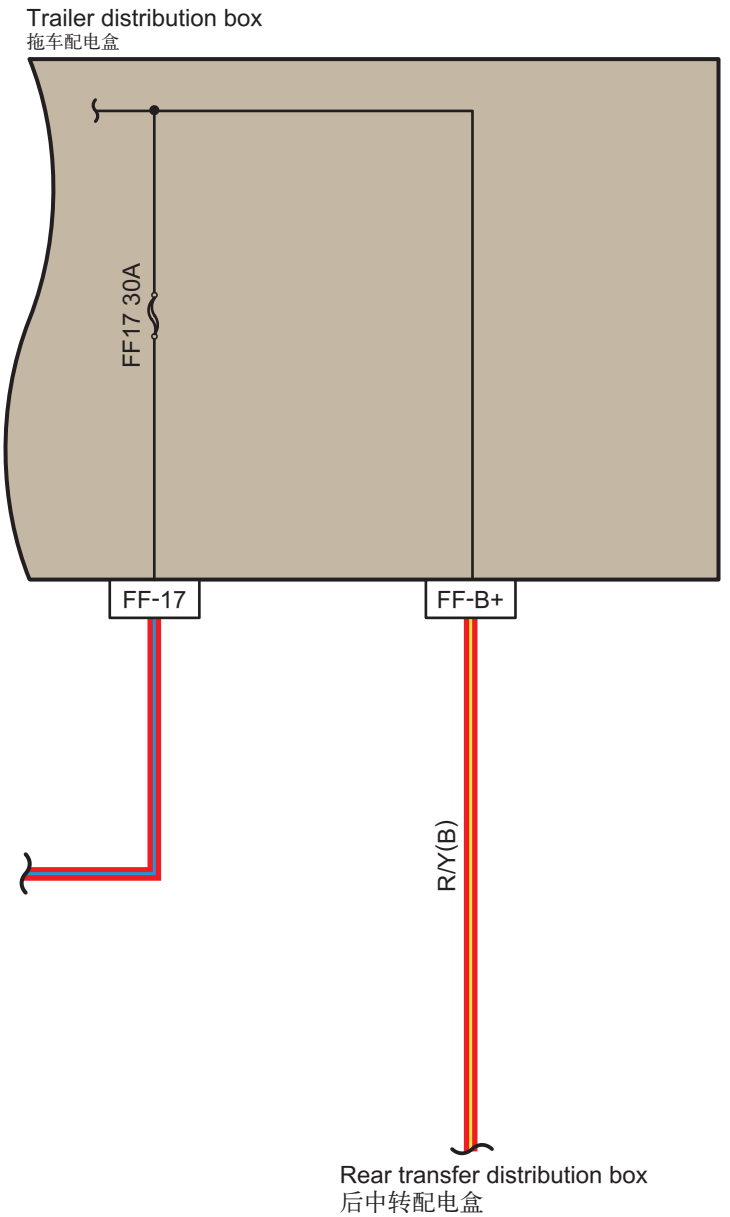

Rear transfer distribution box
后中转配电盒
Front transfer distribution box
前中转配电盒
RF02 100A
RF03 60A
J1
A1
B1
C1
R
R(F)
R(F)
B+
2
14
F-003
F-024
Heater PTC2
风暖PTC2
Integrated brake control system IBC
集成式制动控制器

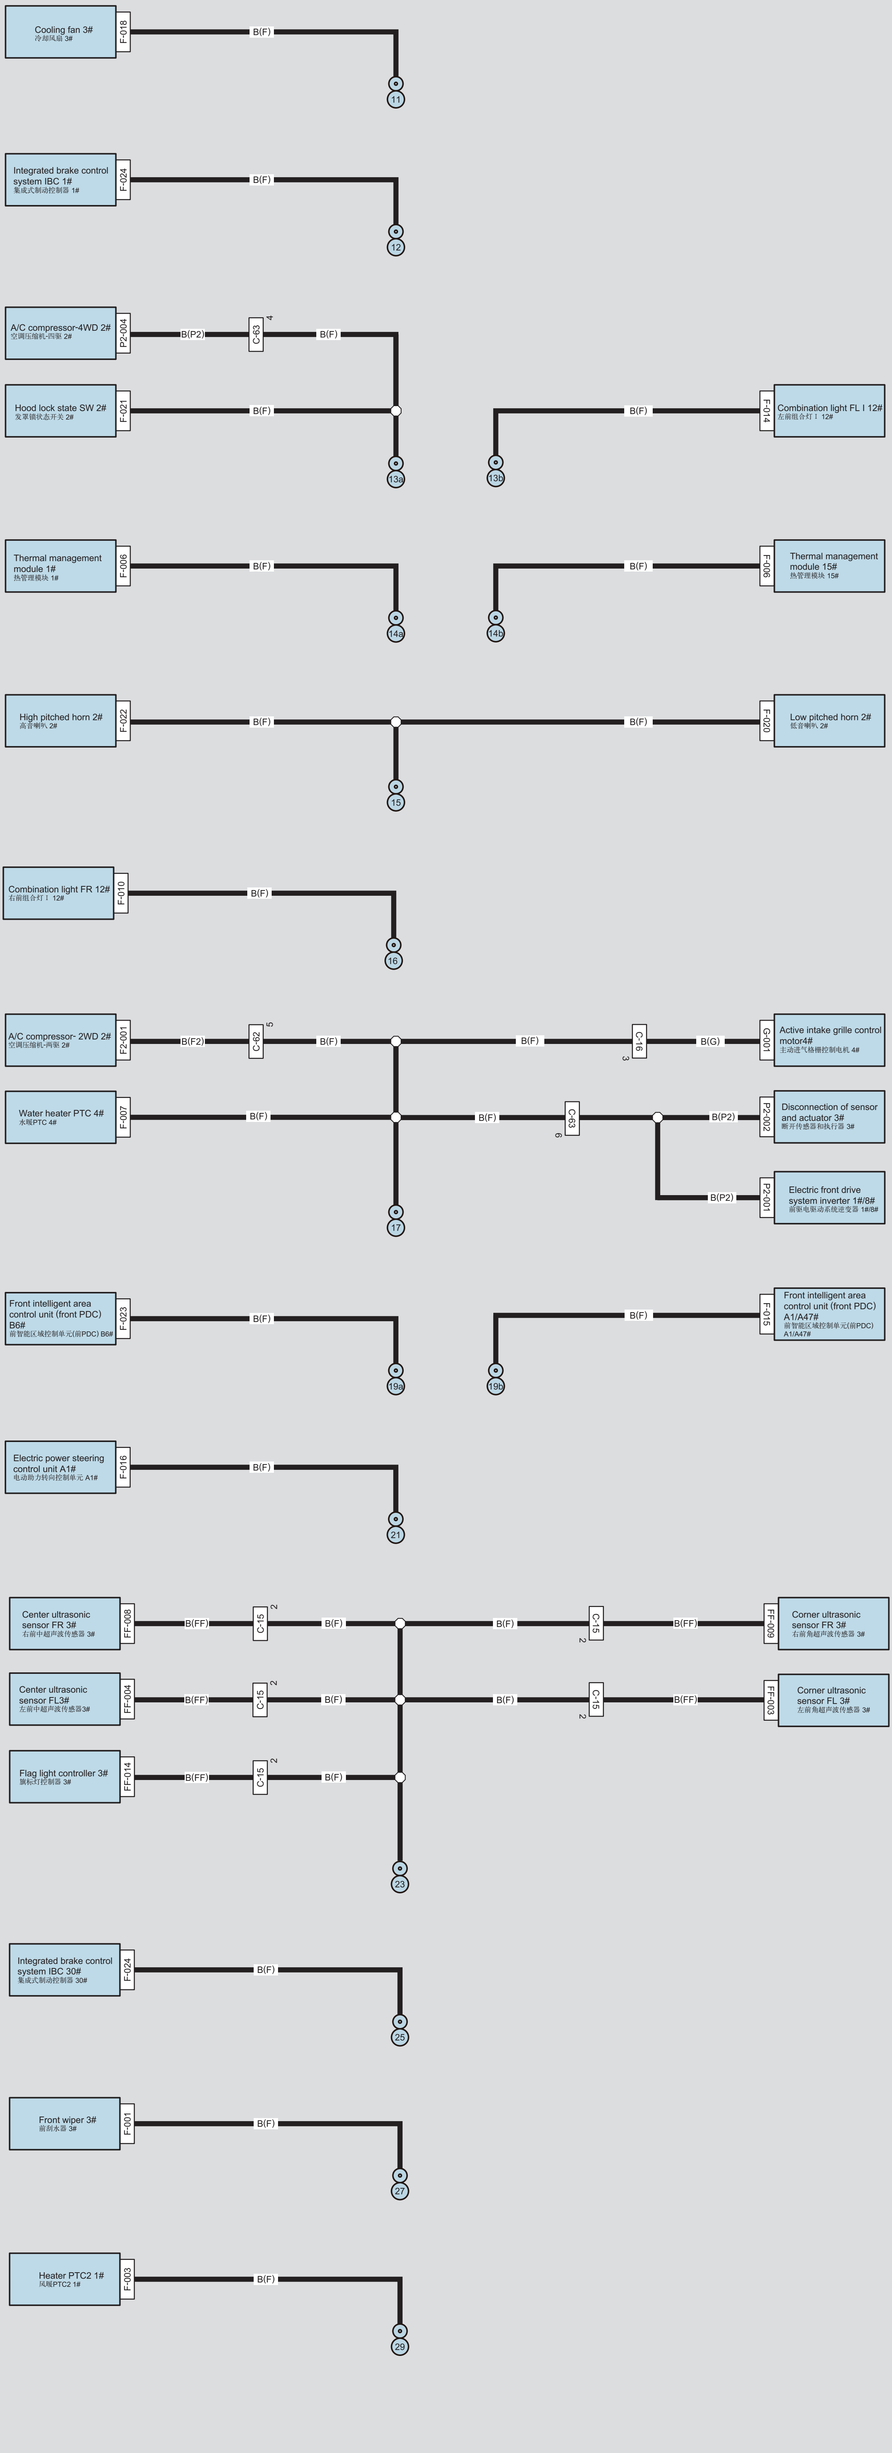

Front transfer distribution box
前中转配电盒
RF04 60A
RF05 30A
RF06 100A
D1
E1
F1
R(F)
C-01
1
R(B)
C-19
27
R(I)
R(F)
46
A23
A2
F-024
I-001
F-016
Integrated brake control system IBC
集成式制动控制器
Infotainment control unit (CSC)
信息娱乐控制单元(CSC)
Electric power steering control unit
电动助力转向控制单元

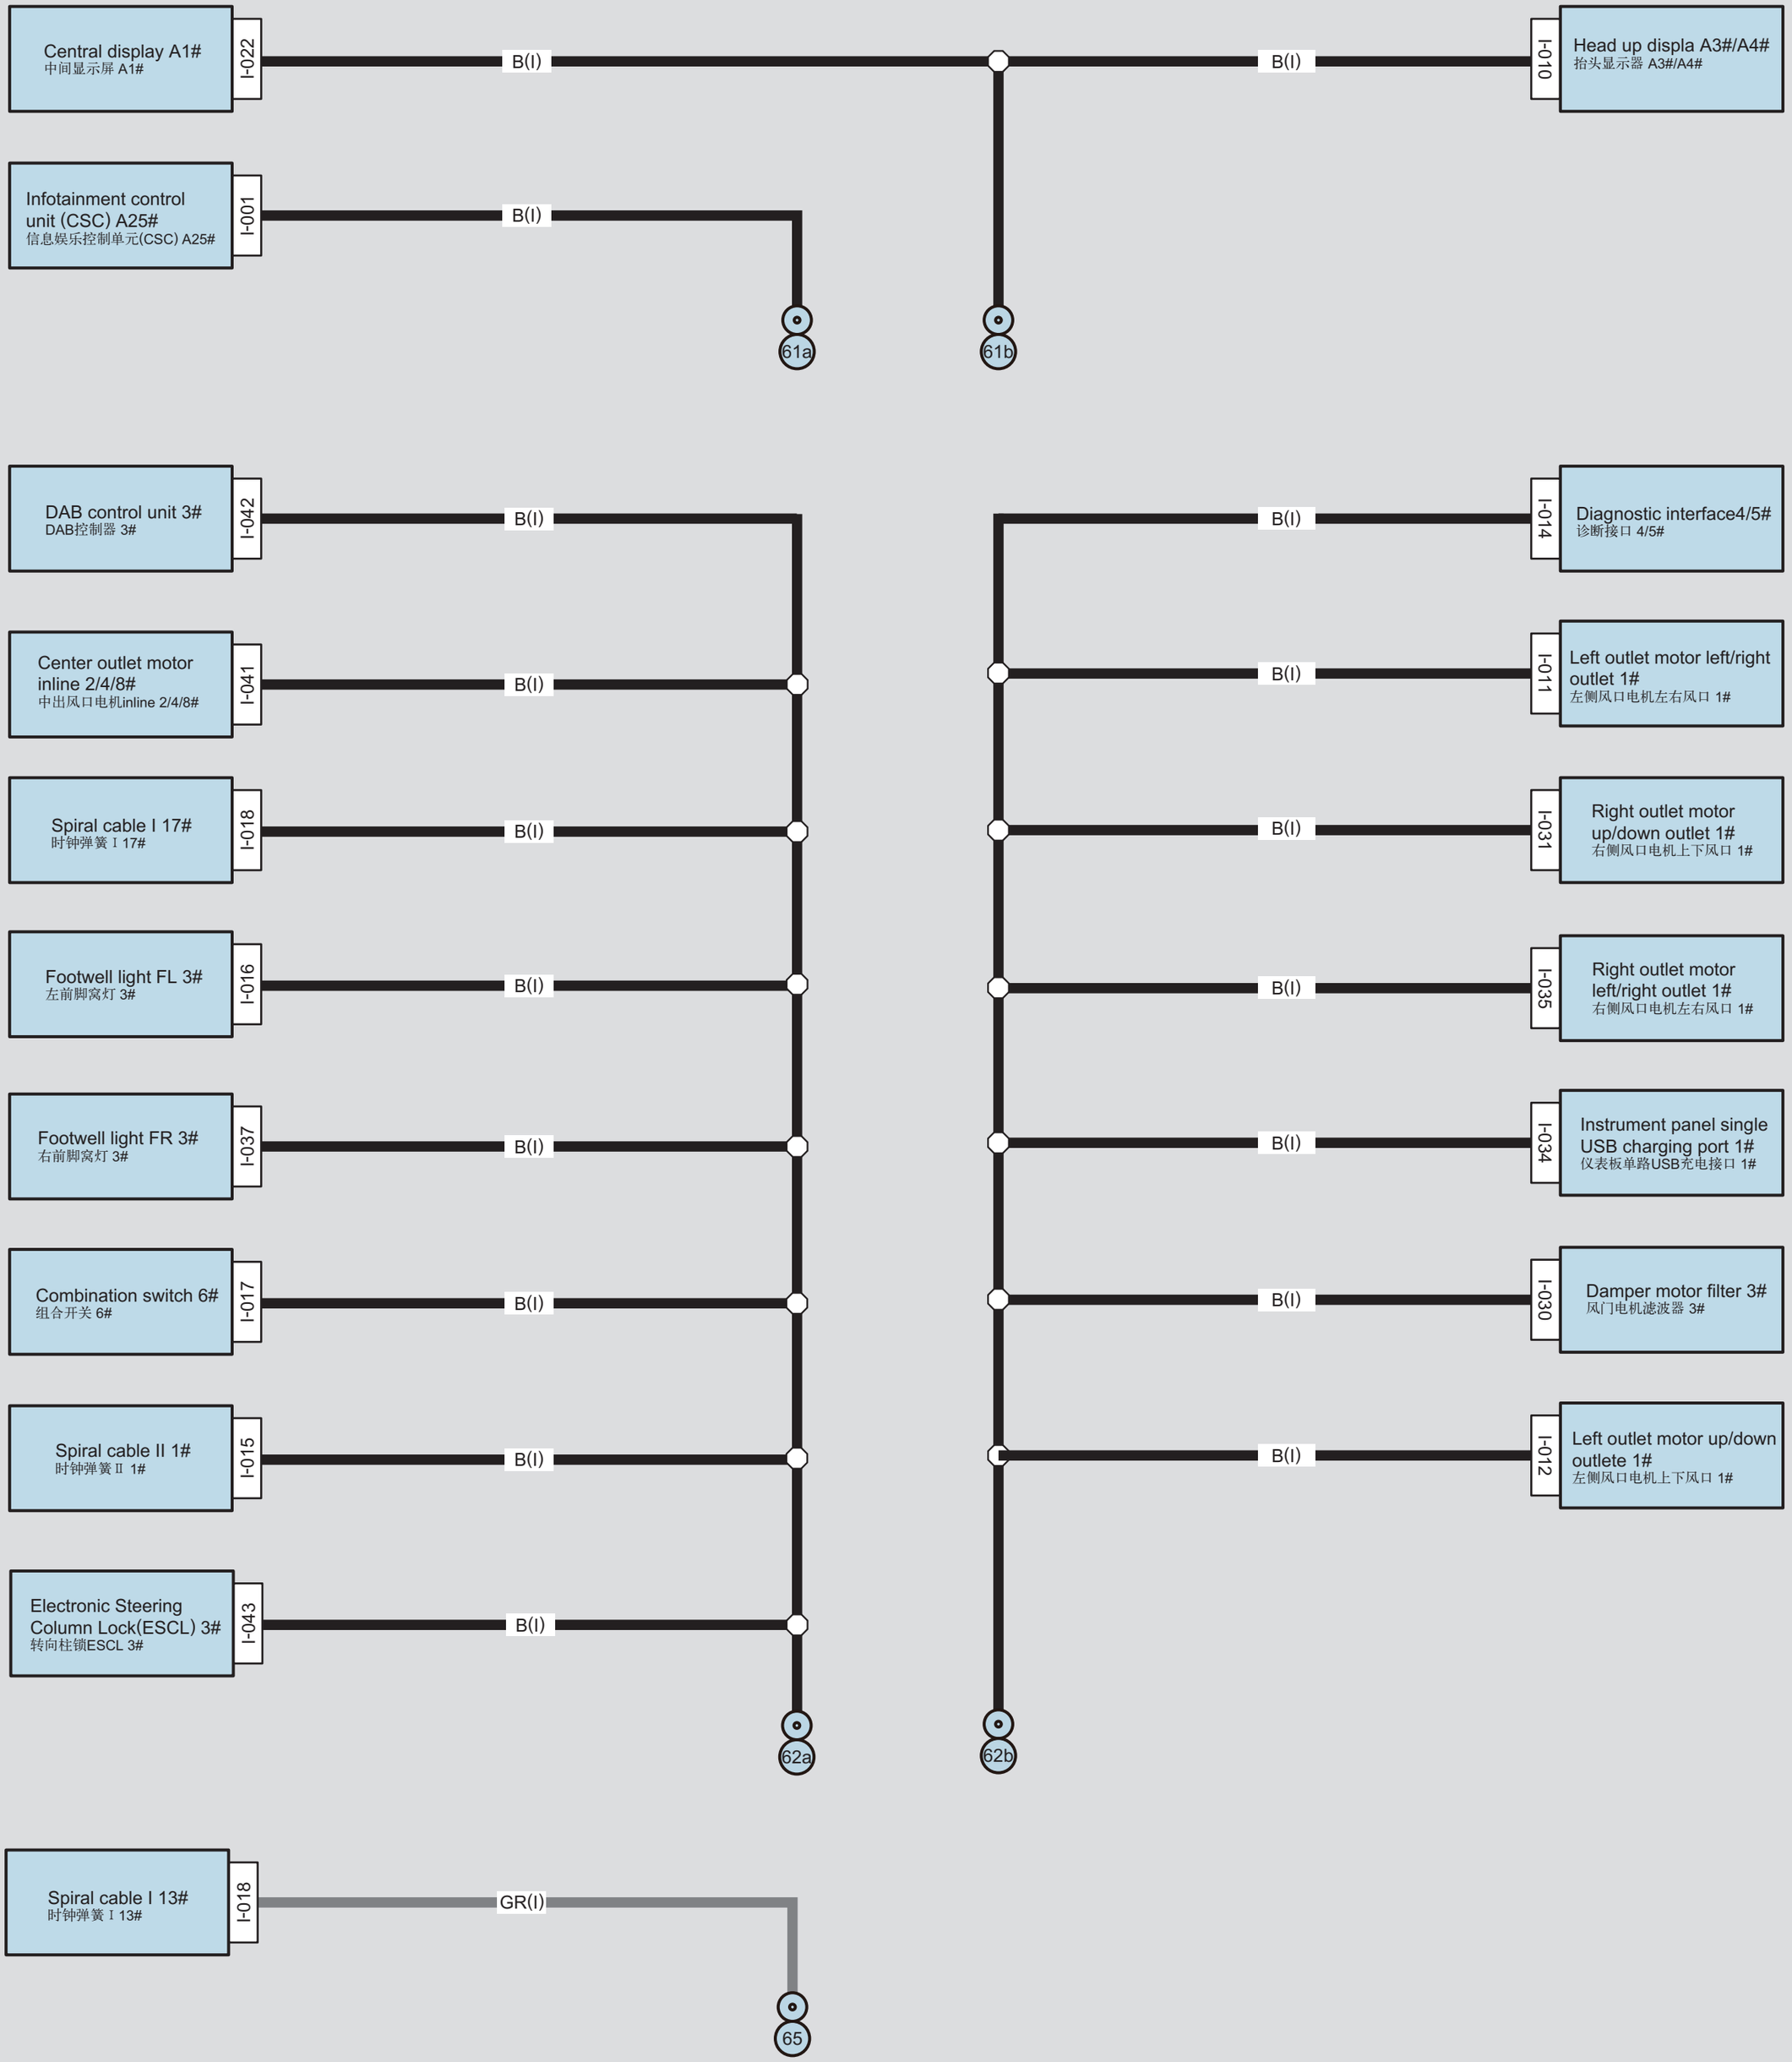

Front transfer distribution box
前中转配电盒
RF07 60A
RF08 80A
G1
H1
R(F)
R(F)
2
D1
F-018
F3-001
Cooling fan
冷却风扇
Front intelligent area control unit (front PDC)
前智能区域控制单元(前PDC)

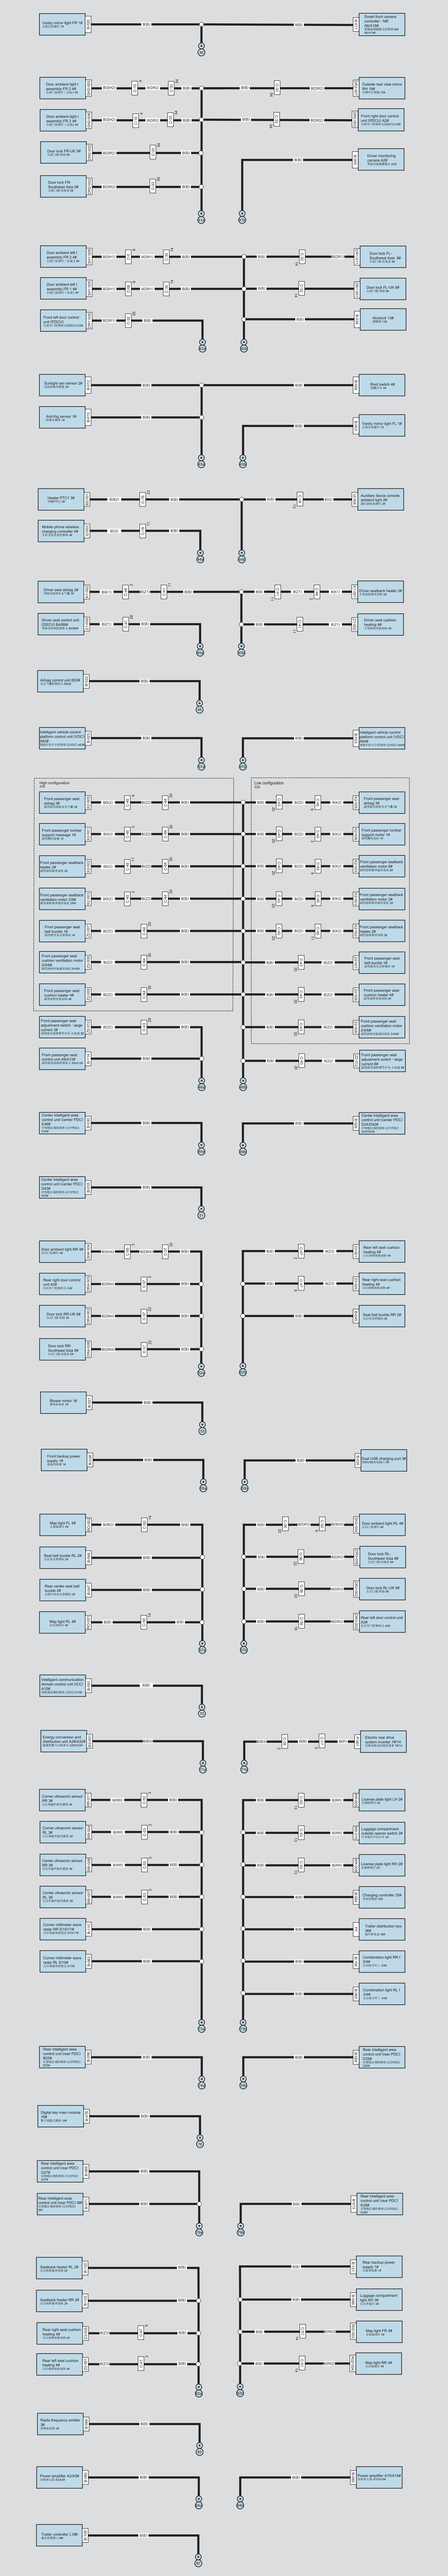

Trailer distribution box
拖车配电盒
FF15 20A
FF09 20A
FF16 30A
FF10 5A
FF-15
FF-09
FF-16
FF-10
R(B)
R/B(B)
R/L(B)
R/W(B)
M2
M3
M5
L7
B-108
B-108
B-108
B-109
Trailer controller
拖车控制器

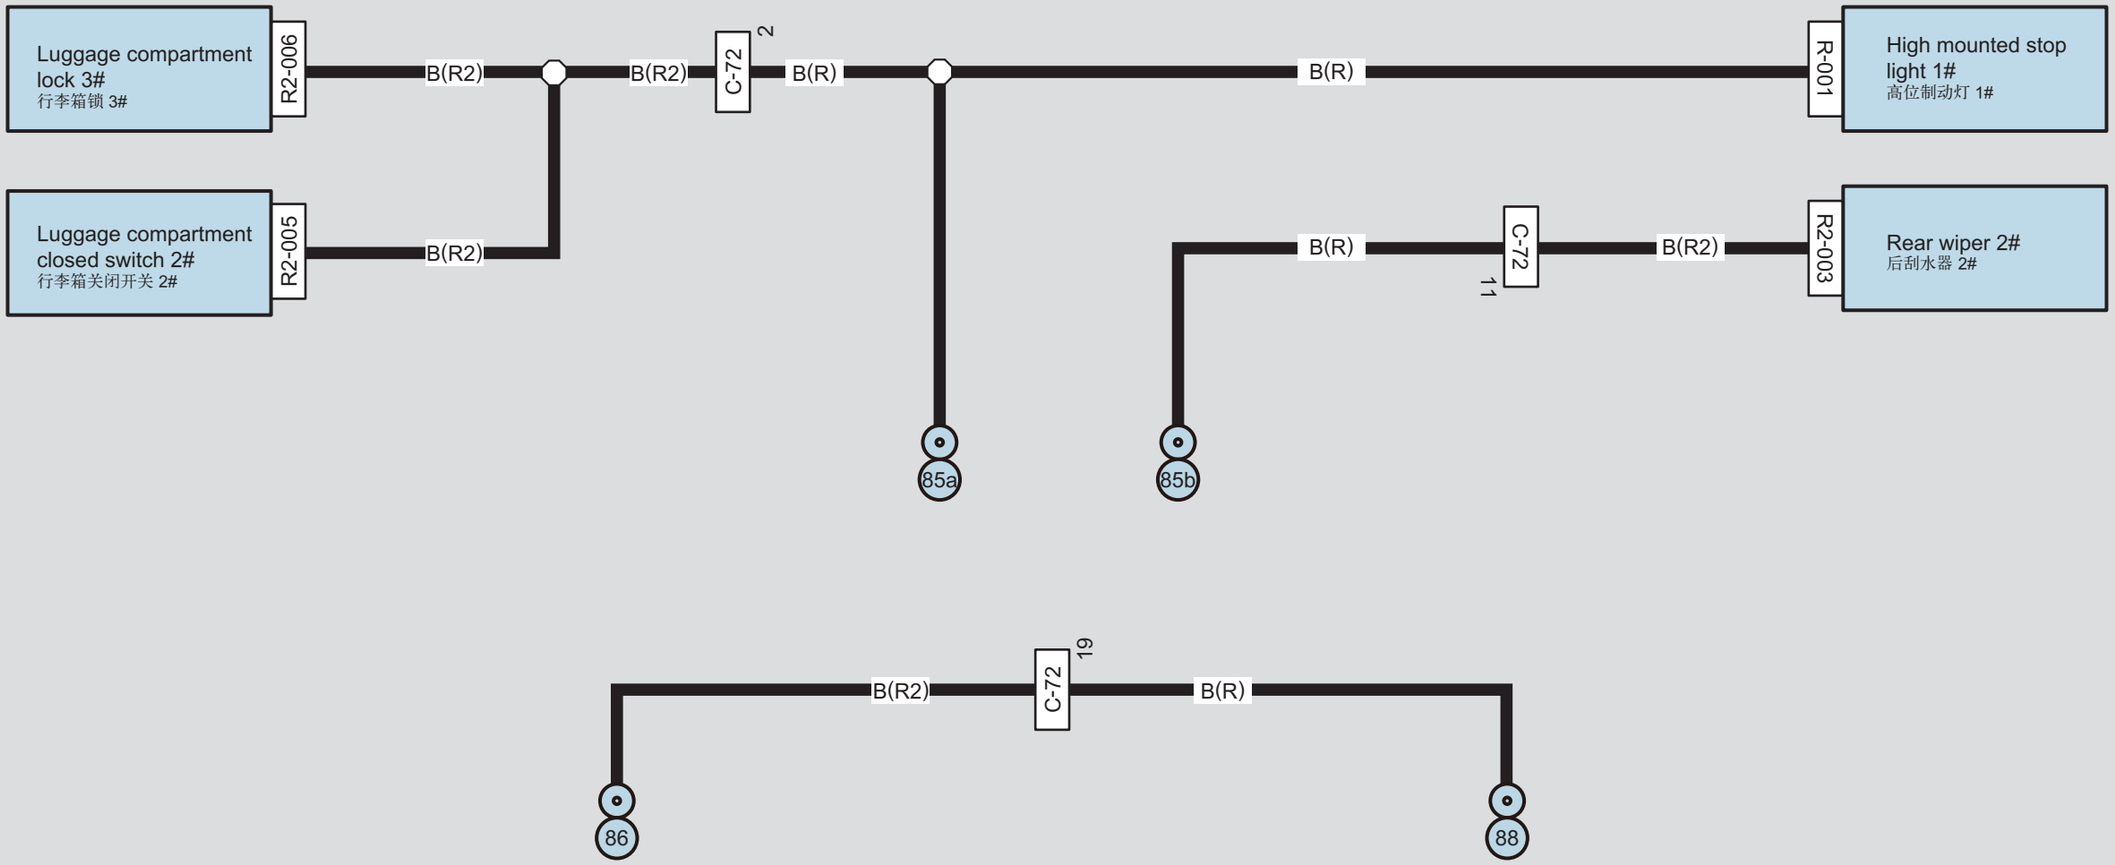

Trailer distribution box
拖车配电盒
1
3
FR01
Trailer IG relay
拖车IG继电器
2
5
FF-35
FF-36
FF-34
FF-33
R(B)
B(B)
R(B)
R/L(B)
J14
B-072
73b
M6
B-108
Trailer controller
拖车控制器
Rear intelligent area control unit (rear PDC)
后智能区域控制单元(后PDC)
Trailer controller
拖车控制器


Trailer distribution box
拖车配电盒
FF17 30A
FF-17
FF-B+
R/Y(B)
Rear transfer distribution box
后中转配电盒


Cooling fan 3#
冷却风扇 3#
F-018
B(F)
11
Integrated brake control system IBC 1#
集成式制动控制器 1#
F-024
B(F)
12
A/C compressor-4WD 2#
空调压缩机-四驱 2#
P2-004
B(P2)
C-03
4
B(F)
Hood lock state SW 2#
发罩锁状态开关 2#
F-021
B(F)
13a
13b
B(F)
F-014
Combination light FL I 12#
左前组合灯 I 12#
Thermal management module 1#
热管理模块 1#
F-006
B(F)
14a
14b
B(F)
F-006
Thermal management module 15#
热管理模块 15#
High pitched horn 2#
高音喇叭 2#
F-022
B(F)
15
B(F)
F-020
Low pitched horn 2#
低音喇叭 2#
Combination light FR 12#
右前组合灯 I 12#
F-010
B(F)
16
A/C compressor- 2WD 2#
空调压缩机-两驱 2#
P2-001
B(F2)
C-02
5
B(F)
B(F)
C-16
3
B(G)
G-001
Active intake grille control motor4#
主动进气格栅控制电机 4#
Water heater PTC 4#
水暖PTC 4#
F-007
B(F)
B(F)
C-03
6
B(P2)
P2-002
Disconnection of sensor and actuator 3#
断开传感器和执行器 3#
B(P2)
P2-001
Electric front drive system inverter 1#/8#
前驱电驱动系统逆变器 1#/8#
17
Front intelligent area control unit (front PDC) B6#
前智能区域控制单元(前PDC) B6#
F-023
B(F)
19a
19b
B(F)
F-015
Front intelligent area control unit (front PDC) A1/A47#
前智能区域控制单元(前PDC) A1/A47#
Electric power steering control unit A1#
电动助力转向控制单元 A1#
F-016
B(F)
21
Center ultrasonic sensor FR 3#
右前中超声波传感器 3#
FF-008
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-009
Corner ultrasonic sensor FR 3#
右前角超声波传感器 3#
Center ultrasonic sensor FL3#
左前中超声波传感器3#
FF-004
B(FF)
C-15
2
B(F)
B(F)
C-15
2
B(FF)
FF-003
Corner ultrasonic sensor FL 3#
左前角超声波传感器 3#
Flag light controller 3#
旗标灯控制器 3#
FF-014
B(FF)
C-15
2
B(F)
23
Integrated brake control system IBC 30#
集成式制动控制器 30#
F-024
B(F)
25
Front wiper 3#
前刮水器 3#
F-001
B(F)
27
Heater PTC2 1#
风暖PTC2 1#
F-003
B(F)
29


Central display A1#
中间显示屏 A1#
I-022
B(I)
Head up displa A3#/A4#
抬头显示器 A3#/A4#
I-010
B(I)
Infotainment control unit (CSC) A25#
信息娱乐控制单元(CSC) A25#
I-001
B(I)
61a
61b
DAB control unit 3#
DAB控制器 3#
I-042
B(I)
Diagnostic interface4/5#
诊断接口 4/5#
I-014
B(I)
Center outlet motor inline 2/4/8#
中出风口电机inline 2/4/8#
I-041
B(I)
Left outlet motor left/right outlet 1#
左侧风口电机左右风口 1#
I-011
B(I)
Spiral cable I 17#
时钟弹簧 I 17#
I-018
B(I)
Right outlet motor up/down outlet 1#
右侧风口电机上下风口 1#
I-031
B(I)
Footwell light FL 3#
左前脚窝灯 3#
I-016
B(I)
Right outlet motor left/right outlet 1#
右侧风口电机左右风口 1#
I-035
B(I)
Footwell light FR 3#
右前脚窝灯 3#
I-037
B(I)
Instrument panel single USB charging port 1#
仪表板单路USB充电接口 1#
I-034
B(I)
Combination switch 6#
组合开关 6#
I-017
B(I)
Damper motor filter 3#
风门电机滤波器 3#
I-030
B(I)
Spiral cable II 1#
时钟弹簧 II 1#
I-015
B(I)
Left outlet motor up/down outlete 1#
左侧风口电机上下风口 1#
I-012
B(I)
Electronic Steering Column Lock(ESCL) 3#
转向柱锁ESCL 3#
I-043
B(I)
62a
62b
Spiral cable I 13#
时钟弹簧 I 13#
I-018
GR(I)
65


Vanity mirror light FR 1#
Smart front camera assembly / ME-A2418
Door ambient light / projection FR 1 set
Outside rear view mirror assembly RH
Door ambient light / projection FR 2 set
Front right door control unit (TCU)A2A
Door lock FR-LH 5#
Driver monitoring camera / DMS/OMS A 1set
Door lock FR-RH 6#
Door lock PL-LH 5#
Door lock PL-RH 6#
Door ambient left / projection FR 1 set
Door lock PL-LH 5#
Door ambient left / projection FR 2 set
Door lock PL-RH 6#
Front left door control unit (DCU)
Alcolock 13#
Sunlight rain sensor 2#
Roof switch 4#
Anti-fog sensor 1#
Vanity mirror light PL 1#
Heater PTC1 3#
Auxiliary fascia console ambient light 2#
Mobile phone wireless charging assembly 4#
Driver seat airbag 3#
Driver seatback heater 2#
Driver seat control unit (SCU)
Driver seat cushion heater 1#
Airbag control unit 80/34
Intelligent vehicle control platform control unit (VDC)
Intelligent vehicle control platform control unit (VDC)
High configuration
Low configuration
Front passenger seat ventilation motor 2#
Front passenger seat ventilation motor 2#
Front passenger lumbar adjustment motor 1#
Front passenger lumbar adjustment motor 1#
Front passenger seatback ventilation motor 2#
Front passenger seatback ventilation motor 2#
Front passenger seat ventilation motor 2#
Front passenger seat ventilation motor 2#
Front passenger seatback heater 2#
Front passenger seatback heater 2#
Front passenger seat ventilation motor 2#
Front passenger seat ventilation motor 2#
Front passenger seat cushion heater 4#
Front passenger seat cushion heater 4#
Front passenger seat adjustment switch - large
Front passenger seat adjustment switch - large
Front passenger seat control unit ASA12#
Front passenger seat control unit ASA12#
Center intelligent area control unit (center PDC) E40#
Center intelligent area control unit (center PDC) G24D4CR
Center intelligent area control unit (center PDC) G24#
Door ambient light RR 4#
Rear left seat cushion heating 3#
Rear right door control unit A2#
Rear right seat cushion heating 3#
Door lock RR-LH 5#
Seat belt buckle RR 3#
Door lock RR-RH 6#
Blower motor 1#
Front backup power supply 3#
Dual USB charging port 3#
Map light FL 4#
Door ambient light RL 4#
Seat belt buckle RL 2#
Door lock RL-Southeast 6#
Rear center seat belt buckle 3#
Door lock RL-LH 5#
Map light RL 4#
Rear left door control unit A2#
Intelligent communication domain control unit (ICC)
Energy conversion and charging control unit
Electric rear drive assembly / EDU-A2
Corner ultrasonic sensor RF 3#
License plate light LH 2#
Corner ultrasonic sensor RL 3#
Luggage compartment ultrasonic sensor 2#
Corner ultrasonic sensor RR 3#
License plate light RH 2#
Corner ultrasonic sensor RF 3#
Charging controller 25#
Corner millimeter wave radar RR 3(10)1#
Trailer distribution box 1set
Corner millimeter wave radar RL 3(10)1#
Combination light RH 1 2.5W
Combination light RL 1 2.5W
Rear intelligent area control unit (rear PDC) D27#
Rear intelligent area control unit (rear PDC) E40#
Digital key main module
Rear intelligent area control unit (rear PDC) D27#
Rear intelligent area control unit (rear PDC) G24D4CR
Seatback heater RL 2#
Rear backup power supply 3#
Seatback heater RR 2#
Luggage compartment light RH 3#
Rear right seat cushion heating 3#
Map light FR 4#
Rear left seat cushion heating 3#
Map light RR 4#
Radio frequency emitter 1#
Power amplifier A2H3#
Power amplifier A7E5/10#
Trailer controller L 15#


Luggage compartment lock 3#
行李箱锁 3#
R2-006
B(R2)
B(R2)
C-72
2
B(R)
B(R)
R-001
High mounted stop light 1#
高位制动灯 1#
Luggage compartment closed switch 2#
行李箱关闭开关 2#
R2-005
B(R2)
B(R)
C-72
11
B(R2)
R2-003
Rear wiper 2#
后刮水器 2#
85a
85b
C-72
19
B(R2)
B(R)
86
88